55-1520-210-23P-1

TM 55-1520-210-23P-1

TECHNICAL MANUAL

AVIATION UNIT AND INTERMEDIATE MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS) FOR HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

This copy is a reprint which includes current pages from Changes 1 through 17.

This manual, together with TM 55-1520-210-23P-2 and TM 55-1520-210-23P-3, 27 February 1981, supersedes TM 55-1520-210-23P-1, TM 55-1520-210-23P-2, and TM 55-1520-210-23P-3, 1 March 1977, including all changes.

HEADQUARTERS, DEPARTMENT OF THE ARMY
27 FEBRUARY 1981

READEX FICHE best copy available

D 101. 11:

URGENT

TM 55-1520-210-23P-1
C 17

CHANGE }
NO. 17 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 5 July 1989

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools) For

HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-1, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature hand.

Remove pages	Insert pages
665 and 666	665 and 666
667/668	667/668

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

WILLIAM J. MEEHAN II
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for All UH-1 series Aircraft and EH-1H Helicopter, Electronic Countermeasure.

URGENT

CHANGE
NO. 16

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 26 June 1989

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)

For

HELICOPTER, UTILITY - TACTICAL TRANSPORT
UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-00-043-4949 (UH-1V)

TM 55-1520-210-23P-1, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
127 and 128	127 and 128
135 and 136	135 and 136
145/146	145/146
153 through 157/158	153 through 157/158
167 and 168	167 and 168
208.1 and 208.2	208.1 and 208.2
211 and 212	211 and 212
223 and 224	223 and 224
247 and 248	247 and 248
255 through 257/258	255 through 257/258
265 and 266	265 and 266
327/328	327/328
335 and 336	335 and 336
339 and 340	339 and 340
363 and 364	363 and 364
389/390	389/390
393 and 394	393 and 394
397 and 398	397 and 398
419 and 420	419 and 420
441 through 443/444	441 through 443/444
445 and 446	445 and 446
453 through 456	453 through 456
483 through 486	483 through 486
497 and 498	497 and 498
501 and 502	501 and 502
505 and 506	505 and 506

Remove pages	Insert pages
513 through 522	513 and 522
529 through 532	529 through 532
545 and 546	545 and 546
-----	546.1/546.2 through 546.6
573 and 574	573 and 574
583 through 586	583 through 586
603 and 604	603 and 604
619 and 620	619 and 620
623 through 642	623 through 642
643 and 644	643/644
645 and 646	645/646
647 and 648	647 and 648
659 and 660	659 and 660
669 and 670	669 and 670
681 and 682	681 and 682
685/686	685/686
693 through 702	693 through 702
707 and 708	707 and 708
711 and 712	711 and 712
715/716 through 718	715/716 through 718
725 through 730	725 through 730
737/738	737/738
743 through 747/748	743 through 747/748
753 and 754	753 and 754
771 and 772	771 and 772
775 and 776	775 and 776
789 through 796	789 through 796
803 and 804	803 and 804

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

WILLIAM J. MEEHAN II
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for All UH-1 Series Aircraft and EH-1H Helicopter, Electronic Countermeasure.

CHANGE
NO. 15

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 18 August 1988

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)

For

HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-00-043-4949 (UH-1V)

TM 55-1520-210-23P-1, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature hand.

Remove pages	Insert pages
139 through 144	139 through 144
619 and 620	619 and 620
623 and 624	623 and 624
655 through 660	655 through 660
665 through 667/668	665 through 667/668
669 and 670	669 and 670
753 and 754	753 and 754
795 and 796	795 and 796

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM requirements for UH-1B/C/H/M/V Helicopter, Utility and EH-1H Helicopter, Electric Countermeasure.

This is a reprint of change 15.

CHANGE }
NO. 14 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 8 December 1987

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools) For

HELICOPTER, UTILITY – TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H, (BELL), UH-1V

NSN 1520-00-713-9912	(UH-1B)
1520-00-997-8862	(UH-1C)
1520-00-087-7637	(UH-1H)
1520-00-809-2631	(UH-1M)
1520-00-368-8442	(EH-1H)
1520-00-043-4949	(UH-1V)

TM 55-1520-210-23P-1, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove	Insert
23 and 24	23 and 24
---	24.1 through 24.4
89 through 96	89 through 96
101 through 103/104	101 through 103/104
105 and 106	105 and 106
109 and 110	109 and 110
---	110.1 through 110.8
139 through 142	139 through 142
177 through 183/184	177 through 183/184
185 and 186	185 and 186
205/206	205/206
207 and 208	207 and 208
---	208.1 and 208.2
211 through 214	211 through 214
219 and 220	219 and 220
221/222	221 and 222
223 and 224	223 and 224
249/250	249/250
251 and 252	251 and 252
255 and 256	255 and 256
257/258	257/258
257/258	257/258
259 and 260	259 and 260
335 through 345/346	335 through 345/346
347 and 348	347 and 348
373 through 380	373 through 380
381/382	381 and 382
383 through 389/390	383 through 389/390

Remove	Insert
391 through 396	391 through 396
---	396.1 and 396.2
---	396.4
397 through 399/400	397 through 399/400
401 and 402	401 and 402
471 through 481/482	471 through 481/482
483 and 484	483 and 484
511 through 522	511 through 522
599 through 601/602	599 through 601/602
603 and 604	603 and 604

2. Retain these sheets in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM requirements for All UH-1H Series Aircraft.

CHANGE
NO. 13

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 22 April 1987

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)

For

HELICOPTER, UTILITY - TACTICAL TRANSPORT
UH-1B, UH-1C, UH-1H, UH-1M, EH-1H, (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-00-043-4949 (UH-1V)

TM 55-1520-210-23P-1, 27 February 1981, is Changed as Follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
i through xi/xii	i through xi/xii
1 and 2	1 and 2
11 and 12	11 and 12
25 through 33/34	25 through 33/34
35 through 38	35 through 38
47 and 48	47 and 48
95 and 96	95 and 96
99 and 100	99 and 100
113 through 116	113 through 116
133 and 134	133 and 134
151/152	151/152
155 through 157/158	155 through 157/158
159 and 160	159 and 160
167 and 168	167 and 168
177 and 178	177 and 178
191 through 193/194	191 through 193/194
195 and 196	195 and 196
199 and 200	199 and 200
207 and 208	207 and 208
215 and 216	215 and 216
253/254	253/254
255 through 257/258	255 through 257/258
259 and 260	259 and 260
327/328	327/328
329 and 330	329 and 330
345/346	345/346
373 through 376	373 through 376
381/382	381/382
383 through 386	383 through 386

Remove pages	Insert pages
389/390	389/390
393 and 394	393 and 394
411 and 412	411 and 412
415 and 416	415 and 416
431 through 438	431 through 438
447/448	447/448
449 and 450	449 and 450
479 through 481/482	479 through 481/482
483 through 488	483 through 488
511 and 512	511 and 512
517 through 523/524	517 through 523/524
575/576	575/576
599 and 600	599 and 600
603 and 604	603 and 604
617 through 624	617 through 624
627 and 628	627 and 628
629/630	629/630
631 and 632	631 and 632
637 and 638	637 and 638
639/640	639/640
641 and 642	641 and 642
645 through 648	645 through 648
657 and 658	657 and 658
667/668	667/668
669 and 670	669 and 670
675/676	675/676
677 and 678	677 and 678
683 and 684	683 and 684
687 and 688	687 and 688
691 through 694	691 through 694
709 and 710	709 and 710
713 and 714	713 and 714
769 and 770	769 and 770
781 and 782	781 and 782
787 through 796	787 through 796

2. Retain these sheets in front of manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM Requirements for All UH-1H Series Aircraft.

URGENT

CHANGE
NO. 12

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 8 October 1986

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools)
For
HELICOPTER, UTILITY - TACTICAL TRANSPORT
UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-00-043-4949 (UH-1V)

TM 55-1520-210-23P-1, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
625 and 626	625 and 626
633 and 634	633 and 634

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM Requirements for UH-1B/C/H/M/V Helicopter, Utility and EH-1H Helicopter, Electronic Countermeasure.

URGENT

URGENT

TM 55-1520-210-23P-1
C 11

CHANGE }
NO. 11 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 29 April 1986

Aviation Unit and Intermediate Maintenance
Repair Parts and Special Tools List
(Including Depot Maintenance Repair Parts
and Special Tools) for

HELICOPTER, UTILITY - TACTICAL TRANSPORT
UH-1B, UH-1C, UH-1H, UH-1M, EH-1H(BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-1, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
693 and 694	693 and 694
743 and 744	743 and 744

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVIM and AVUM Maintenance requirements for UH-1 B/C/H/M/V Helicopter, Utility and EH-1H Helicopter, Electronic Countermeasure.

URGENT

URGENT

CHANGE
NO. 10

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 11 April 1986

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools) for HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-00-043-4949 (UH-1V)

TM 55-1520-210-23P-1, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
515 and 516	515 and 516
629/630	629/630
683 and 684	683 and 684
691 and 692	691 and 692
695 and 696	695 and 696
743 and 744	743 and 744

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM Requirements for UH-1B/C/H/M/V Helicopter, Utility and EH-1H Helicopter, Electronic Countermeasure.

URGENT

CHANGE
NO. 9

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 6 February 1986

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools) for HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-00-043-4949 (UH-1V)

TM 55-1520-210-23P-1, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
143 and 144	143 and 144
219 and 220	219 and 220
221/222	221/222
452 through 456	453 through 456
515 and 516	515 and 516
529 through 532	529 through 532
583 and 584	583 and 584
627 through 629/630	627 through 629/630
684 through 685/686	684 through 685/686
691 through 696	691 through 696
715/716	715/716
743 and 744	743 and 744

2. Retain these sheets in front of manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

Official:

MILDRED E. HEDBERG
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, AVUM and AVIM Maintenance requirements for UH-1B/C/H/M Helicopter, Utility, EH-1H Helicopter, Electronic Countermeasure and UH-1V Helicopter, Utility.

CHANGE

No. 8

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 8 April 1985

Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools List (Including Depot Maintenance Repair Parts and Special Tools) for

HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-01-043-4949 (UH-1V)

TM 55-1520-210-23P-1, 27 February 1981, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
488.7 and 488.8	488.7 and 488.8
489 thru 494	489 thru 493/494
495 thru 524	495 thru 523/524
526	525 and 526
527 and 528	527/528
530	529 and 530
531 thru 536	531 thru 536
538	537 and 538
539 thru 542	539 thru 542
543	543/544
------	545 and 546
548	547/548
549 and 550	549 and 550
552	551/552
553 and 554	553 and 554
556	555/556
557 and 558	557 and 558
560	559/560
561 and 562	561 and 562
562.1 thru 562.4	------
564	563/564
565 and 566	565 and 566
568	567/568
569 and 570	569 and 570
572	571/572
573 and 574	573 and 574

Remove pages	Insert pages
576	575/576
577 and 578	577 and 578
580	579/580
581 and 582	581 and 582
584	583 and 584
585 thru 588	585 thru 587/588
589 and 590	589 and 590
592	591/592
593 and 594	593 and 594
596	595/596
597 and 598	597 and 598
600	599 and 600
601 and 602	601/602
603 and 604	603 and 604
606	605/606
607 and 608	607 and 608
609 and 610	609/610
611 and 612	611 and 612
614	613 and 614
615 thru 630	615 thru 629/630
632	631 and 632
633 and 634	633 and 634
636	635/636
637 and 638	637 and 638
640	639/640
641 thru 648	641 thru 648
650	649 and 650
651 thru 664	651 thru 663/664
665 and 666	665 and 666
668	667/668
669 and 670	669 and 670
672	671/672
673 and 674	673 and 674
676	675/676
677 and 678	677 and 678
680	679/680
681 and 682	681 and 682
684	683 and 684
685 and 686	685/686
687 and 688	687 and 688
690	689 and 690
691 thru 696	691 thru 696
698	697/698
699 thru 708	699 thru 708
710	709 and 710
711 thru 716	711 thru 715/716
717 and 718	717 and 718
720	719 and 720
721 and 722	721 and 722
724	723/724
725 thru 730	725 thru 730
732	731 and 732
733 thru 738	733 thru 737/738

Remove pages	Insert pages
740	739 and 740
741 and 742	741/742
743 thru 748	743 thru 747/748
749 thru 758	749 thru 758
760	759/760
761 thru 764	761 thru 763/764
766	765 and 766
767 and 768	767/768
770	769 and 770
771 and 772	771 and 772
774	773 and 774
775 thru 780	775 thru 779/780
781 thru 784	781 thru 784
786	785 and 786
787 thru 798	787 thru 797/798
799 thru 802	799 thru 802
804	803 and 804
805 and 806	805/806
807 and 808	807
810 thru 812	------

2. Retain these sheets in front of manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

Official:

DONALD J. DELANDRO
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, Organizational, DS and GS Maintenance Requirements for UH-1B, UH-1C/M, UH-1D/H/V/EH-1H aircraft.

TECHNICAL MANUAL

No. 55-1520-210-23P-1

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C.,

AVIATION UNIT AND INTERMEDIATE MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

FOR

HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V

NSN 1520-00-713-9912 (UH-1B)
1520-00-997-8862 (UH-1C)
1520-00-087-7637 (UH-1H)
1520-00-809-2631 (UH-1M)
1520-00-368-8442 (EH-1H)
1520-00-043-4949 (UH)1V)

Current as of 14 November 1980

NOTE:
This manual is printed in three volumes as follows:
TM 55-1520-210-23P-1, consisting of Table of Contents, Section I, and Section II (Functional Groups 02 thru 06).
TM 55-1520-210-23P-2, consisting of Section II (Functional Groups 07 thru 14).
TM 55-1520-210-23P-3, consisting of Section II (Functional Groups 16 thru 60), Section III, and Section IV.
The Table of Contents, Sections I, and IV are applicable to the -1, -2, and 3.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Aviation Systems Command, ATTN: AMSAV-MPSD,4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

Table of Contents

SECTION I. INTRODUCTION

	Listing Page	Illus Figure
Exploded view of UH-1B helicopter	9	1
Exploded view of UH-1C, UH-1M helicopter	10	2
Exploded view of UH-1H helicopter	11	3

II. REPAIR PARTS LIST

FUNCTIONAL GROUP 02 AIRFRAME

	Listing Page	Illus Figure
Section assembly, forward	12	4
Section assembly, forward	16	5

	Listing Page	Illus Figure
Quick fix 1B helicopter, AN/ARQ-33A	22	5A
Section assembly, helicopter forward	24	6
Section assembly, helicopter forward	36	7
Section assembly, helicopter aft	46	8
Boom assembly, tail	50	9
Tail boom assembly	56	10
Tail boom and assembly	68	11
Fin installation	72	12
Fin installation	76	13
Tail boom assembly, 48 ft. system	80	15
Tail boom, installation	84	16
Tail boom quick fix 1A	96	16A
Antenna group, OE-202/ARQ-33	100	16B
Antenna support assembly	102	16C
Antenna cradle installation	106	16D
Antenna installation AFT APR-39	108	16E
Door installation, access, tail, rotor shaft	110	17
Door installation, access, tail rotor shaft	114	18
Fuselage assembly, helicopter forward	116	19
Fuselage assembly, helicopter forward	126	20
Door installation, nose	138	21
Nose installation, cabin	140	22
Nose assembly, cabin	144	23
Cutter installation	148	23A
Windshield installation, cabin	154	24
Door assembly, crew	156	25
Latch installation, crew door	160	26
Latch assembly, crew door	164	27
Door assembly, crew	166	28
Panel installation	168	29
Roof installation, cabin	172	30
Roof installation, cabin	178	31
Seat installation	186	32
Seat installation	190	33
Seat installation	196	34
Seat assembly aircraft	200	35
Seat assembly	204	36
Armor seat installation	208	37
Seat installation, passenger	214	38
Seat installation, passenger	216	39
Seat installation, passenger	220	40
Seat installation, passenger	224	42
Crew seat installation	226	42A
Seat assembly	228	42B
Head rest assembly	232	42C
Armrest assembly	234	42D
Controls installation, seat	236	42E
Bottom assembly, seat	240	42F
Blanket installation, soundproofing	244	43
Blanket installation, soundproofing	248	44
Door assembly, cargo	252	45
Door assembly, cargo	256	46
Latch installation, cargo door	260	47

	Listing Page	Illus Figure
Latch installation, cargo door	264	48
Fuselage assembly, structure aft	266	49
Fuselage assembly, structure aft	270	50
Fuselage assembly, structure aft	274	51
Fuselage assembly, structure aft	280	52
Fuselage assembly, structure aft	284	53
Beam assembly	292	54
Fuselage assembly, structure aft	298	55
Fuselage assembly, structure aft	306	56
Fuselage assembly, structure aft	310	57
Fuselage assembly, structure aft	314	58
Fuselage assembly, structure	318	59
Fuselage assembly, structure	320	60
Fuselage assembly, structure aft	326	61
Bulkhead installation	330	62
Door assembly equipment	334	63
Fuselage assembly, lower left hand	336	64
Fuselage assembly, lower center	340	65
Fuselage assembly, lower right hand	348	66
Fuselage assembly, structure AFT section	352	67
Antenna installation	368	67A
Fuselage assembly, structure AFT section	372	68
Fuselage assembly, structure	384	69
Floor installation	392	70
Beam assembly	396	71
Door installation	402	72
Cowl installation, forward	406	73
Cowl installation, forward	410	74
Cowl installation, forward	412	75
Cowl installation	416	76
Cowl installation	420	77
Cowl assembly	424	78
Cowl installation, forward left-hand	428	79
Cowl installation, forward right-hand	434	80
Baffle assembly, engine air induction	438	81
Baffle assembly, engine air induction	440	82
Baffle assembly, engine induction	442	83
Cowl assembly, engine	446	84
Cowl installation	450	85
Fireshield installation, tail rotor driveshaft	454	86
Mount installation, engine	456	87
Loose equipment installation, installed	460	88
Loose equipment installation	464	89
Loose equipment installation, installed and packaged	472	90
Pylon mount installation	478	91

FUNCTIONAL GROUP 03 ALIGHTING GEAR

Landing gear assembly skid	484	92
Skid installation, aft fuselage	488	93
Float gear installation	488.2	94
Landing gear isolation kit	488.6	94A

FUNCTIONAL GROUP 04 POWER PLANT INSTALLATION

	Listing Page	Illus Figure
Power plant installation	488.8	95
Power plant installation	496	96
Engine assembly	502	97
Engine assembly	512	98
Cowl Installation	522	99
Engine filter installation	526	100
Firewall assembly, forward	530	101
Firewall assembly, power plant	534	102
Firewall assembly	536	103
Firewall assembly, aft	538	104
Firewall assembly,upper aft	540	105
Particle separator	542	107
Actuator, linear	546	108
Actuator, linear	550	109
Actuator, linear	554	110
Actuator, Electromechanical, linear	558	110A
Control installation	562	111
Control installation, power	566	112
Control installation	570	113
Control installation	574	114
Compensator installation	578	115
Compensator installation	582	116
Compensator installation	584	117
Oil system installation	586	118
Oil system installation	590	119
Oil system installation	594	120
Oil system installation	598	121
Oil system installation	600	122
Oil system installation	604	123
Oil system installation	608	124
Oil system installation	612	125
Modification Kit, Oil system	614	125A
Turbine fan, engine	616	126
Turbine fan, engine	618	127

FUNCTIONAL GROUP 05 ROTORS

	Listing Page	Illus Figure
Pylon installation	620	128
Pylon installation	624	130
Pylon assembly	628	131
Pylon assembly	632	132
Stabilizer bar assembly	634	133
Stabilizer, rotary	638	134
Hub and blade assembly	642	135
Hub and blade assembly	648	136
Hub, main rotor	652	137
Hub assembly, main rotor	656	138
Hub assembly, main rotor	660	139
Hub assembly, main rotor, inboard section	666	140
Scissors and sleeve assembly	670	141
Scissors and sleeve assembly	674	142
Swashplate control assembly	678	143
Swashplate and support assembly	682	144

	Listing Page	Illus Figure
Tail rotor installation	684	145
Damper assembly, stabilizer bar	688	146
Hub and blade assembly, tail rotor	690	147
Hub assembly, tail rotor	692	148
Control assembly, quill	694	149

FUNCTIONAL GROUP 06 DRIVE TRAIN

Transmission and mast assembly	696	150
Transmission assembly	700	151
Transmission assembly	706	152
Transmission assembly	708	153
Transmission assembly	714	154
Transmission assembly	718	155
Transmission assembly	722	156
Planetary assembly	726	157
Lower planetary assembly	728	158
Transmission assembly	730	159
Quill assembly	732	160
Quill assembly, offset accessory and tail rotor drive	734	161
Case assembly, transmission	736	162
Case assembly, transmission	740	163
Drive and sump assembly	744	164
Quill assembly, tail rotor	750	165
Quill assembly, transmission	752	166
Quill assembly, generator	754	167
Quill assembly, transmission	756	168
Quill assembly, accessory drive	762	169
Quill assembly, transmission	766	170
Quill assembly, tail rotor	770	171
Pump, rotary	772	172
Drive shaft installation, engine to transmission	774	173
Drive shaft installation	776	173A
Transmission oil cooler installation	778	174
Transmission oil cooler installation	782	175
Filter assembly	786	176
Manifold assembly	788	177
Shaft installation, tail rotor drive	790	178
Shaft installation, tail rotor drive	792	179
Hanger assembly, driveshaft	794	180
Gear box assembly, 42 degree	796	181
Quill assembly, gear box, 42 degree	800	182
Quill assembly, tail	802	183
Gear box assembly, 90 degree	804	184

FUNCTIONAL GROUP 07 HYDRAULIC AND PNEUMATIC SYSTEM

Cylinder assembly, cyclic flight control hydraulic	810	185
Servo cylinder, hydraulic	814	186
Servo cylinder assembly, hydraulic	818	187

	Listing Page	Illus Figure
Hydraulic installation, dual system, module section	822	193
Modular hydraulic unit assembly	826	194
Hydraulic installation, dual system, reservoir section	830	195
Hydraulic flight controls reservoir assembly	834	196
Hydraulic installation, dual system, lines section	836	198
Hydraulic installation, dual system, lines section	840	199
Hydraulic installation, dual system, lines section	846	200
Hydraulic installation, forward inboard section	852	201
Hydraulic installation, pump section	856	202
Hydraulic installation, center section	860	203
Valve assembly, irreversible flight control	864	204
Hydraulic installation, aft section	868	205
Hydraulic installation, aft section	872	206
Tank, hydraulic fluid	876	207
Servo cylinder, hydraulic	878	208
Servo cylinder, hydraulic	880	208A
Hydraulic installation, armament	882	210
Hydraulic installation, armament	886	211

FUNCTIONAL GROUP 08 INSTRUMENT SYSTEMS

	Listing Page	Illus Figure
Panel and pedestal installation, instrument	890	212
Glare shield assembly	894	213
Panel assembly, instrument (left hand section)	896	216
Panel assembly, instrument (center section)	902	217
Panel assembly, instrument	906	218
Piping installation, pitot	912	222
Piping installation, instrument	914	223
Piping installation, instrument static system	918	224

FUNCTIONAL GROUP 09 ELECTRICAL SYSTEMS

	Listing Page	Illus Figure
Electrical installation, forward section	920	225
Electrical installation, forward section	946	226
Crew light installation	976	226A
Electrical installation, rescue hoist and door gunners foot mike switch	978	227
Electrical installation, rescue hoist and discrete signal discriminator	982	228
Electrical installation, smoke generator	986	229
Decca navigation sub-system installation	988	230
Panel assembly, master caution	992	231
Panel assembly-word caution control	998	233
Panel assembly, master caution	1004	234
Panel assembly-word caution control	1010	236
Panel, fault-function indicator	1014	237
Panel, fault-function indicator	1020	238
Box, RPM warning control	1024	240
Circuit, card assembly	1026	240A
Equipment installation, nose compartment electrical	1030	241
Equipment installation, nose compartment, electrical	1036	242

	Listing Page	Illus Figure
Equipment installation, nose compartment, electrical	1040	243
Light, landing	1044	244
Console installation, electrical overhead	1050	245
Console installation, electrical overhead	1058	246
Console installation, overhead	1074	246A
Flare chaff/installation	1076	246C
AC power installation	1082	246D
Panel assembly, electrical overhead console, left-hand forward section	1096	247
Panel installation, circuit breakers, external stores	1104	248
Control assembly, heating	1106	249
Control assembly, heating	1108	250
Panel assembly, heating control	1110	251
Panel assembly, heating control	1112	252
Panel assembly, right-hand, forward section	1114	253
Panel assembly, aft dome light control	1120	254
Control panel assembly, AC and DC power	1122	255
Panel assembly, hydraulic boost control	1126	256
Control panel assembly, external fuel	1130	257
Panel assembly, engine	1132	258
Panel assembly, engine control	1136	259
Panel assembly, engine control	1138	260
Panel assembly, force trim, hydraulic control and chip detector	1142	261
Control panel assembly, hoist, force trim and hydraulic control	1146	262
Panel assembly, control, engine	1150	263
Inverter installation, main and spare	1154	264
Inverter installation, main and spare	1158	265
Battery installation	1160	266
Shelf assembly, battery, aft compartment	1162	268
Battery installation, aft compartment	1166	269
Electrical equipment installation, radio compartment	1170	270
Equipment installation, electrical compartment	1176	271
Equipment installation, upper radio	1178	272
Equipment installation, electrical	1182	273
Equipment installation, aft electrical compartment	1186	274
Electrical installation, pylon	1192	275
Electrical installation, pylon	1194	276
Generator, direct current	1196	277
Generator, direct current	1200	278
Electrical installation, power plant	1204	281
Electrical installation, upper tailpipe fairing	1208	282
Electrical installation, aft section	1210	284
Electrical installation, aft section	1212	285
Starter installation	1216	286
Starter installation	1220	288
Electrical installation glidescope/marker beacon radio receiver, R-1963/ARN	1222	290A
Lighting installation, 5 volts	1228	290C
Installation, altimeter set electronic, AN/APN-209(V)	1232	290D

	Listing Page	Illus Figure
Electrical installation, auxiliary fuel system	1238	291
Avionics electrical installation	1240	292
Avionics electrical installation	1242	293
Avionics electrical installation	1244	294
Electrical installation, armament kit XM16	1246	297
Electrical installation, XM3 armament	1248	299
Electrical installation, XM6E3	1252	300
Armament installation, XM21	1256	301
Armament installation, electrical	1260	302
Armament installation, electrical	1264	303

FUNCTIONAL GROUP 10 FUEL SYSTEMS

Fuel system installation, lower section	1338	312
Fuel system installation, upper center section	1342	317
Modification kit, fuel system	1346	317A
Fuel system installation, upper section	1348	320
Filter, fluid, pressure assembly	1352	321
Fuel system installation, tank section	1354	326
Fuel system installation, upper tank section	1360	328
Receiver - refueling	1364	329
Fuel system installation, left hand tank section	1368	331
Pump, submerged, aircraft	1372	332
Pump, submerged, aircraft	1376	333
Fuel system installation, right hand tank	1378	335
Lines installation, auxiliary fuel tank	1382	336
Lines installation, fuel and air external auxiliary tanks	1386	337
Lines installation, auxiliary fuel tanks	1390	338
Lines installation kit	1394	338A
External fuel tank installation	1396	342
Auxiliary fuel system	1400	343

FUNCTIONAL GROUP 11 FLIGHT CONTROL SYSTEMS

Control installation, collective pitch, forward section	1404	345
Control installation, collective pitch, AFT section	1408	346
Control installation, collective pitch, AFT section	1412	347
Jackshaft installation, collective pitch control	1416	348
Stick assembly, flight control grip and housing assembly	1420	349
Control assembly collective	1426	350
Drive assembly, throttle	1428	351
Control installation, dual removable	1430	352
Grip assembly, control	1434	355
Support and lever assembly	1436	356

	Listing Page	Illus Figure
Stick assembly	1438	357
Control installation, fore and aft and lateral cyclic	1440	358
Cyclic installation, fore and aft and lateral center section	1444	359
Lever assembly	1448	360
Control installation, lateral cyclic aft section	1450	361
Control installation, fore and aft and lateral cyclic	1454	362
Control installation, fore and aft and lateral cyclic	1458	363
Control installation, tail rotor forward section	1462	364
Magnetic brake assembly	1466	365
Magnetic brake	1470	365A
Control section	1474	366
Control installation, tail rotor forward aft section	1478	367
Cylinder and support assembly, anti-torque	1482	368
Adjuster assembly	1486	369
Cable installation, tail rotor control aft	1490	371
Cable installation, tail rotor control	1494	372
Cable installation, tail rotor control aft	1496	373
Control installation, synchronized elevator forward	1500	375
Control installation, synchronized elevator forward	1504	376
Control installation, synchronized elevator aft	1508	377
Control installation, synchronized elevator aft	1512	378
Elevator installation, synchronized	1514	379

FUNCTIONAL GROUP 12 UTILITY SYSTEMS

	Listing Page	Illus Figure
Mirror installation	1518	380
Wiper installation, windshield	1520	381
Motor assembly	1524	382
Converter assembly	1526	383
Detection system installation and valve installation, engine bleed air	1528	384
Detection system installation and valve installation, engine bleed air	1532	385
Valve assembly	1536	386
Switch assembly	1540	387

FUNCTIONAL GROUP 13 ENVIRONMENTAL CONTROL SYSTEM

	Listing Page	Illus Figure
Distribution installation, hot air left-hand section	1578	388
Distribution system installation, forward section	1582	389
Distribution installation, hot air aft right-hand section	1586	390
Distribution system installation, aft section	1588	391
Distribution system installation, aft section	1592	392
Distribution installation, hot air forward section	1598	393
Heater installation winterization auxiliary equipment	1602	394
Installation kit, heater, winterization	1606	395
Heater kit, auxiliary	1610	396
Valve, mixing	1616	398
Blower unit	1620	398A
Heater installation, winterization auxiliary	1622	399
Box installation, heater fuel system	1626	400
Distribution installation, hot air left-hand section	1630	401

	Listing Page	Illus Figure
Valve, air distribution	1634	403
Distribution installation, hot air	1636	404
Distribution installation, hot air right hand section	1638	405
Distribution installation, hot air forward section	1644	406
Valve assembly, heating selector	1648	407
Sensor, air distribution	1650	408
Valve assembly, heating air bleed	1652	409
Heater assembly	1654	410
Blower assembly	1656	411
Blower assembly	1658	412

FUNCTIONAL GROUP 14 HOIST AND WINCHES

	Listing Page	Illus Figure
Suspension installation, cargo	1660	414
Suspension assembly	1664	416
Hook, external cargo	1668	416A
Release assembly, cargo	1672	417
Case and cover assembly	1676	418
Internal rescue hoist installation	1678	419
Actuator, assembly	1682	420
Motor, direct current	1686	421
Winch, aircraft mounting	1688	422
Winch, aircraft mounting	1694	423
Rescue hoist assembly	1696	423A
Boomhead assembly	1698	423B
Winch assembly	1704	432C
Cable hook assembly	1710	423D
Reaction arm assembly	1712	423E
Limit switch assembly	1718	423F
Power side cover installation	1722	423G
Transistor assembly	1728	423H
Heat sink assembly	1730	423I
Blower assembly	1732	423J
Pendant control assembly	1734	423M

FUNCTIONAL GROUP 16 MISSION EQUIPMENT

	Listing Page	Illus Figure
Smoke generator seat, lines and tank tie down installation	1736	424
Curtain installation, blackout	1740	425
Curtain installation, blackout	1742	426
Cable installation, paratroop static line	1744	427
Support Assembly, external stores	1746	428
Installation kit auxiliary equipment	1750	429
Cabin cargo, area, miscellaneous items installation	1754	429A
Heat suppression installation	1760	430
Armament installation, XM6E3	1764	432
Armament installation, M6	1768	433
Armament installation, M5 grenade launcher	1772	434
Rack, bomb, aircraft	1780	435
Armament installation	1788	436
Armament installation, M56	1794	437
M23 Mount Assembly	1794.4	437A
Kit installation, DME	1794.6	437B

		Listing Page	Illus Figure
	FUNCTIONAL GROUP 17 EMERGENCY EQUIPMENT		
	Fire extinguisher and first aid kit installation	1796	438
	Loose equipment installation	1798	439
	Cable installation, striker ejection	1800	440
	Control installation, jettison emergency	1802	441
	Control installation, jettison emergency	1806	442
	FUNCTIONAL GROUP 50 REPAIR KITS	1809	
	FUNCTIONAL GROUP 60 BULK MATERIALS	1823	
Section III.	FUNCTIONAL GROUP 80 SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT		
	Airframe Tools	1928	A1
	Flyaway Items	1957	F1
	Ground Support Items	1970.3	G2
Section IV.	National Stock Number and Part Number Index		
	Numerical stock number and supplementary listings	1979	
	Alphamerical part number and supplementary listings	2156	

Section I. INTRODUCTION

1. Scope.

This manual lists repair parts; special tools; test, measurement, and diagnostic equipment (TMDE); and other support equipment required for operation and performance of Aviation Unit Maintenance (AVUM), Aviation Intermediate Maintenance (AVIM), and depot maintenance of the Helicopter, Utility - Tactical Transport, UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (Bell), UH-1V. It authorized the requisitioning and issue of requistioning spares and repair parts as indicated by the source and maintenance codes. NOTE: For detailed explanation of the three levels of maintenance concept, see Appendix A to this section.

2. General.

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. This section is arranged by functional group, usually in disassembly order, and listed in figure and item sequence. Items are indented when required to indicate the relationship to the next higher assembly. The illustrations in this section will appear immediately preceding each figure of text. Items which are not assigned SMR codes appear for informational purposes only and are not to be requisitioned.

b. Section III. Special Tools List. A list of special tools, TMDE, and support equipment authorized for the performance of maintenance. This section, which is arranged in figure and item number sequence, contains Airframe Tools (figure numbers prefixed A), Flyaway Equipment (figure numbers prefixed F) and Ground Support Items (figure numbers prefixed G). The illustrations will appear immediately following the text portion of each group.

c. Section IV. National Stock Number and Part Number Index. A list, in ascending National Item Identification Number (NIIN) sequence, of all National stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock number and part numbers are cross-referenced to each illustration figure and item number appearance. This edition contains a Supplementary National Stock Number and Part Number index.

3. Explanation of Columns.

The following provides an explanation of columns found in the tabular listings:

a. Illustration. This column is divided as follows:

(1) Figure Number. Indicates the figure number of the illustration in which the item is shown. An alpha designator in this column indicates a specific functional group as follows:

KITS - Functional Group 50.

BULK - Functional Group 60.

(2) Item Number. The number used to identify each item called out in the illustration.

b. Source, Maintenance, and Recoverability Codes (SMR).

(1) Source Code. Source codes are assigned to support items to indicate the manner of acquiring support items for maintenace, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.

Code	Definition
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specific maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which, because of probable discontinuance or shutdown of production facilities, would prove uneconomical to reproduce at a later time.
KD	An item of a depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at Aviation Unit Maintenance (AVUM) or Aviation Intermediate Maintenance (AVIM) level.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO	Item to be manufactured or fabricated at Aviation Unit Maintenance (AVUM) level.
MF	Item to be manufactured or fabricated at Aviation Intermediate Maintenance (AVIM) level.
MD	Item to be manufactured or fabricated at the depot maintenance level.
AO	Item to be assembled at Aviation Unit Maintenance (AVUM) level.
AF	Item to be assembled at Aviation Intermediate Maintenance (AVIM) level.
AD	Item to be assembled at depot maintenance level.
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	Item is not procured or stocked. If not available through salvage, requisition.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.
XC	Installation drawing, diagram, instruction sheet, field source drawing, that is identified by manufacturers part number.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA, XD, and aircraft support items as restricted by AR 700-42.

*(2) **Maintenance code.*** Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	Support item is removed, replaced, used at the Aviation Unit Maintenance (AVUM) level.
F	Support item is removed, replaced, used at the Aviation Intermediate Maintenance (AVIM) level.
D	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

b. The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
O	The lowest maintenance level capable of complete repair of the support item is the Aviation Unit Maintenance (AVUM) level.
F	The lowest maintenance level capable of complete repair of the support item is the Aviation Intermediate Maintenance (AVIM) level.
D	The lowest maintenance level capable of complete repair of the support item is the depot level, performed by depot, mobile depot or specialized repair activity.
L	Repair restricted to designated specialized repair activity.
Z	Nonreparable. No repair is authorized.
B	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

*(3) **Recoverability Code.*** Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Code	Definition
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
O	Reparable item. When uneconomically reparable, condemn and dispose at Aviation Unit Maintenance (AVUM) level.
F	Reparable item. When uneconomically reparable, condemn and dispose at Aviation Intermediate Maintenance (AVIM) level.
D	Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L	Reparable item. Repair, Condemnation, and disposal not authorized below depot/specialized repair activity level.

Code	Application/Explanation
A	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements, to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and any additional description required to identify the item. This column will also contain the Basis of Issue (BOI) for Special Tools, Ground Support, and Flyaway Equipment.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., EA, IN, PR, etc.). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item required for one assembly only, including instances when similar assemblies are broken down together. A "V" appearing in this column in lieu of a quantity indicates that no specific quantity is applicable. (e.g., shims, spacers, etc.). When parts are shown as attaching two or more items, the quantity of these parts are those necessary to attach only one of the items.

4. Special Information.

a. Usable on codes are shown in the description column. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are:

Code	Used On
UHB	UH-1B
UHC	UH-1C
UHH	UH-1H
UHM	UH-1M
UHE	EH-1H
UHV	UH-1V

b. Detailed manufacturing instructions for items source coded to be manufactured or fabricated (MO, MF, MD) are found in the applicable maintenance manuals. Bulk materials required to manufacture items are listed in the Bulk Materiel Group on this manual. Manufacture of repair parts assigned source codes other than MO, MF or MD, is prohibited.

c. Action change codes indicated in the left-hand margin of the listing page denote the following:

N	Indicates an added item
C	Indicates a change in data
R	Indicates a change in NSN only

d. The following publications pertain to UH-1B, UH-1C, UH-1H, UH-1M, EH-1H, UH-1V and their components:

Publication and Short Title

TM 11-1520-207-20P. Organizational Maintenance Repair Parts and Special Tools Lists: Installation Items for Electronic Equipment in UH-1A, UH-1B Helicopters.

TM 11-1520-210-20. Organizational Maintenance Manual: Electronic Equipment Configurations, Army Model UH-1H Helicopter.

TM 11-1520-210-20-1. Organizational Maintenance Manual: Electronic Equipment Configurations, Army Model UH-1H Helicopter (with Standard Lightweight Avionics Equipment).

TM 11-1520-210-20P. Organizational Repair Parts and Special Tools Lists: Electronic Equipment Configuration, Army Model UH-1H Helicopter.

TM 11-1520-210-34-1. Direct Support and General Support Maintenance Manual: Electronic Configuration, Army Model UH-1H Helicopter, Army Model UH-1H Helicopter (with Standard Lighweight Avionics Equipment).

TM 11-1520-210-34P. Direct Support and General Support Maintenance Repair Parts and Special Tools Lists (including Depot Maintenance Repair Parts and Special Tools): Electronics Equipment Configuration, Army Model UH-1H Helicopter.

TM 11-1520-210-35. DS, GS and Depot Maintenance Manual: Electronic Configuration, Army Model UH-1H Helicopter.

TM 11-1520-211-20. Organizational Maintenance Manual: Electronic Equipment Configurations, Army Model UH-1B, and UH-1C/M Helicopters.

TM 11-1520-211-35. Direct Support, General Support, and Depot Maintenance Manual: Electronic Equipment Configurations, Army Models UH-1B and UH-1C Helicopters.

TM 55-1520-210-23. AVUM/AVIM Maintenance Manual: Army Model UH-1H/V & EH-1H Helicopters.

TM 55-1520-219-20. Organizational Maintenance Manual: Army Model UH-1B Helicopter.

TM 55-1520-219-34. Direct Support and General Support Maintenance Manual: Army Model UH-1B Helicopter.

TM 55-1520-220-23. AVUM/AVIM Maintenance Manual: Army Model UH-1C/M Helicopter.

TM 55-2840-229-23P. Aviation Unit and Intermediate Maintenance Repair Parts and Special Tools Lists (Including Depot Maintenance Repair Parts and Special Tools): Engine, Aircraft, Turbine (Lycoming) (T-53-L-9A, -11, -11A, -11B, -11C, -11D, -13, -13A, -13B.

TM 55-2840-229-23. AVUM/AVIM Engine, Shaft Turbine, Model No. T53-L-9A, -11, -11 Ser. No. Suff A, -11A, -11A Ser No. Suff A, -11B, -11C, -11D, -13A, -13B.

e. Oversize and undersize parts, such as studs, bushings, etc., are listed immediately after the standard size part and in the same indent. The degree of oversize or undersize is stated in the description. These parts will not have a required quantity shown.

f. When an item has been replaced, issue will continue to be made until existing stocks become exhausted except in the case when replacement is limited to one-way use. To insure complete exhaustion of stock on hand and if it is acceptable to use a replaced item, the replaced item should be requisitioned. To denote one- or two- way replacement, mnemonic codes will be used in the description as follows: The replaced item(s) will always contain the mnemonic code RPL-BY. The replacing item, if it is a two-way replacement, will contain the mnemonic code RPLS. If it is a one-way replacement, no code will be used. Additional mnemonic codes (para 6), are used to reflect the status and relationship of items similar or related items used in the end article. (e.g., OBS-BY, ASSYFR, OBS-AFT-CMPL-W).

g. When details of an assembly are shown on another text page, the description of that assembly is followed by a notation stating where these details can be located. Example: "204-200-009-3, Pylon Assembly. See figure 165 for breakdown." The parts that make up the pylon assembly will be found on the text listing for figure 165.

h. When a Source Control Number is requisitioned, several vendor items can be under this number; allowing the most economical item on hand to be shipped.

i. When an item has limited effectively within a model, the limitation may be indicated by an entry following the item description or footnote reference (e.g., Code A, Code B).

j. Directional references left and right are determined by standing at the rear of the aircraft or engine and looking forward.

k. Flyaway items are delivered with the aircraft from the contractor and will not be removed when the aircraft is transferred. These items are identified in the text by a double asterisk (**) immediately following the item name. The listing of "Flyaway Items" in the manual does not constitute a mandatory requirement for these items as inventoried property, unless such items are listed in Appendix C, Aircraft Inventory Master Guide, TM 55-1520-210-23, TM 55-1520-219-20, and/or TM 55-1520-220-23.

5. How to Locate Repair Parts.

a. When National Stock Number or Part Number is Unknown:

(1) First. Using the table of contents, determine the assembly group within which the repair part belongs. this is necessary since illustrations are prepared for assembly groups, and listings are divided into the same groups.

(2) Second. Find the illustration covering the assembly group to which the repair part belongs.

(3) Third. Identify the repair part on the illustration and note the illustration figure and item number of the repair part.

(4) Fourth. Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National Stock Number or Part Number is Known:

(1) First. Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in ascending National Item Identification Number (NIIN) sequence followed by a list of part numbers in ascending alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) Second. After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations. (Mnemonic Codes)

Abbreviations	Explanation
AN	Air Force-Navy
ANPT	Aeronautical national taper pipe thread
APLTO	Applicable to
AWG	American wire gage
BE	Bale
BKDN	Breakdown
BRKDWN	breakdown into
BT	Bottle
BTU	British thermal unit(s)

BX	Box
CC	Cubic centimeter(s)
CFM	Cubic feet per minute
CFX	Cubic feet per second
CI	Cubic inch
CN	Can
CNSWTH	Consolidated with
C/O	Consists of (component of)
CP	Candle power
CRES	Corrosion resistant steel
CW	Continuous wave(s)
DEG	Degree(s)
DR	Drum
FMC	Federal manufacturer's code
GL	Gallon
GPH	Gallons per hour
INTRCH	Interchangeable with
KC	Kilocycle(s)
KT	Kit
KW	Kilowatt(s)
LH	Left-hand
MIN	Minimum
MSUP	Maintenance supplies
MWO	Modification work order
NAS	National Aircraft standard
NC	American national coarse thread
NEF	American national extra fine thread
NF	American national fine thread
NHA	Next higher assembly
NS	American national special thread
O/A	Over-all
OBS-AFT-CMPL-W	Obsolete after compliance with
OBS-BY	Obsoleted by
OBSLTS	Obsoletes
PC	Piece
PG	Package
PK	Pack
PORM	Plus or minus
PT	Pint
RH	Right-hand
RMKS	Remarks
RO	Roll
RPL-BY	Replaced by
RPLS	Replaces
SE	Set
SF	Square foot
SI	Square inch
SL	Spool
SPEC	Specification(s)
SX	Stick

TRNSTO	Transfer to
TU	Tube
U/O	Used on
USBL EFF	Usable effectivity
USE-AFT-CMPL-W	Usable after compliance with
U/W	Used with
W	Watt(s)
W	Wide, width
W/	With
WHEN EXHTD RQTN NHA	When exhausted requisition next higher assembly
W/O	Without

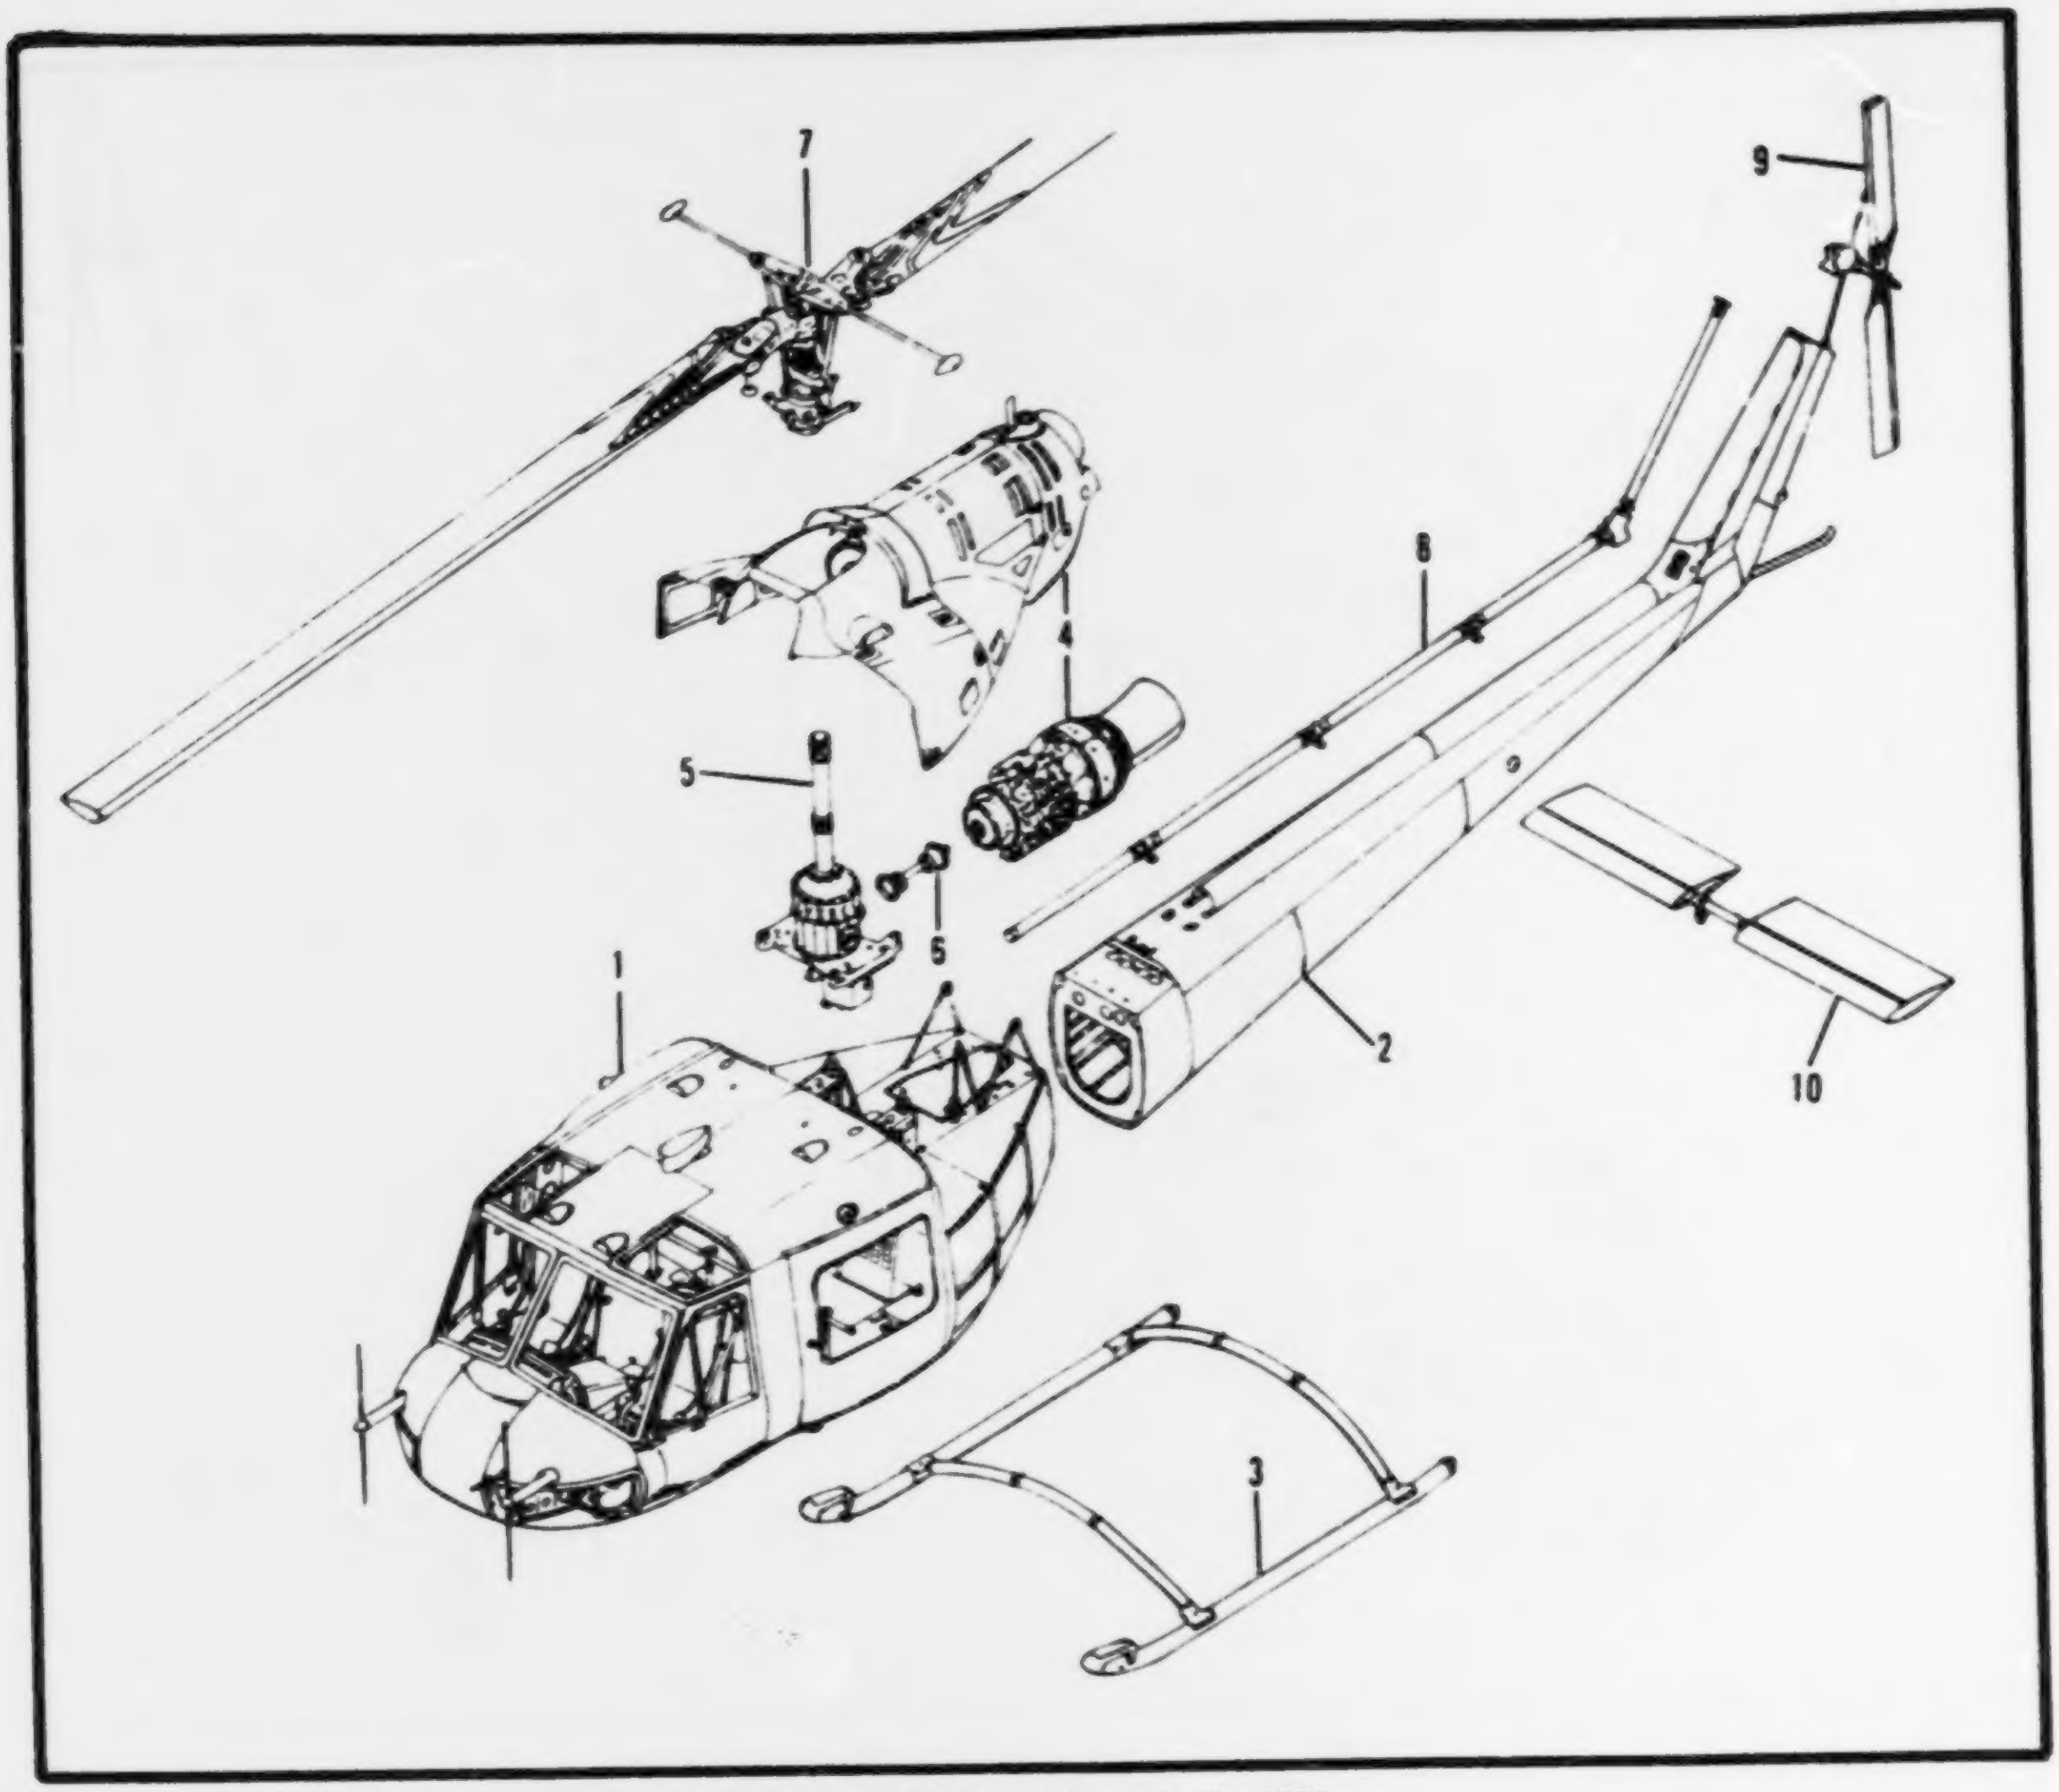

FIGURE 1. EXPLODED VIEW OF UH-1B HELICOPTER

INDEX NUMBER	FIGURE TITLE	FIGURE NUMBER
1	SECTION ASSEMBLY, HELICOPTER FORWARD	6
2	SECTION ASSEMBLY, HELICOPTER AFT	6
3	LANDING GEAR ASSEMBLY, SKID	92
4	POWER PLANT INSTALLATION	95
5	TRANSMISSION AND MAST ASSEMBLY	150
6	DRIVE SHAFT INSTALLATION, ENGINE TO TRANSMISSION	173
7	PYLON INSTALLATION, LOWER SECTION	128
8	SHAFT INSTALLATION, TAIL ROTOR DRIVE	178
9	HUB AND BLADE ASSEMBLY, TAIL ROTOR	147
10	ELEVATOR INSTALLATION, SYNCHRONIZED	379

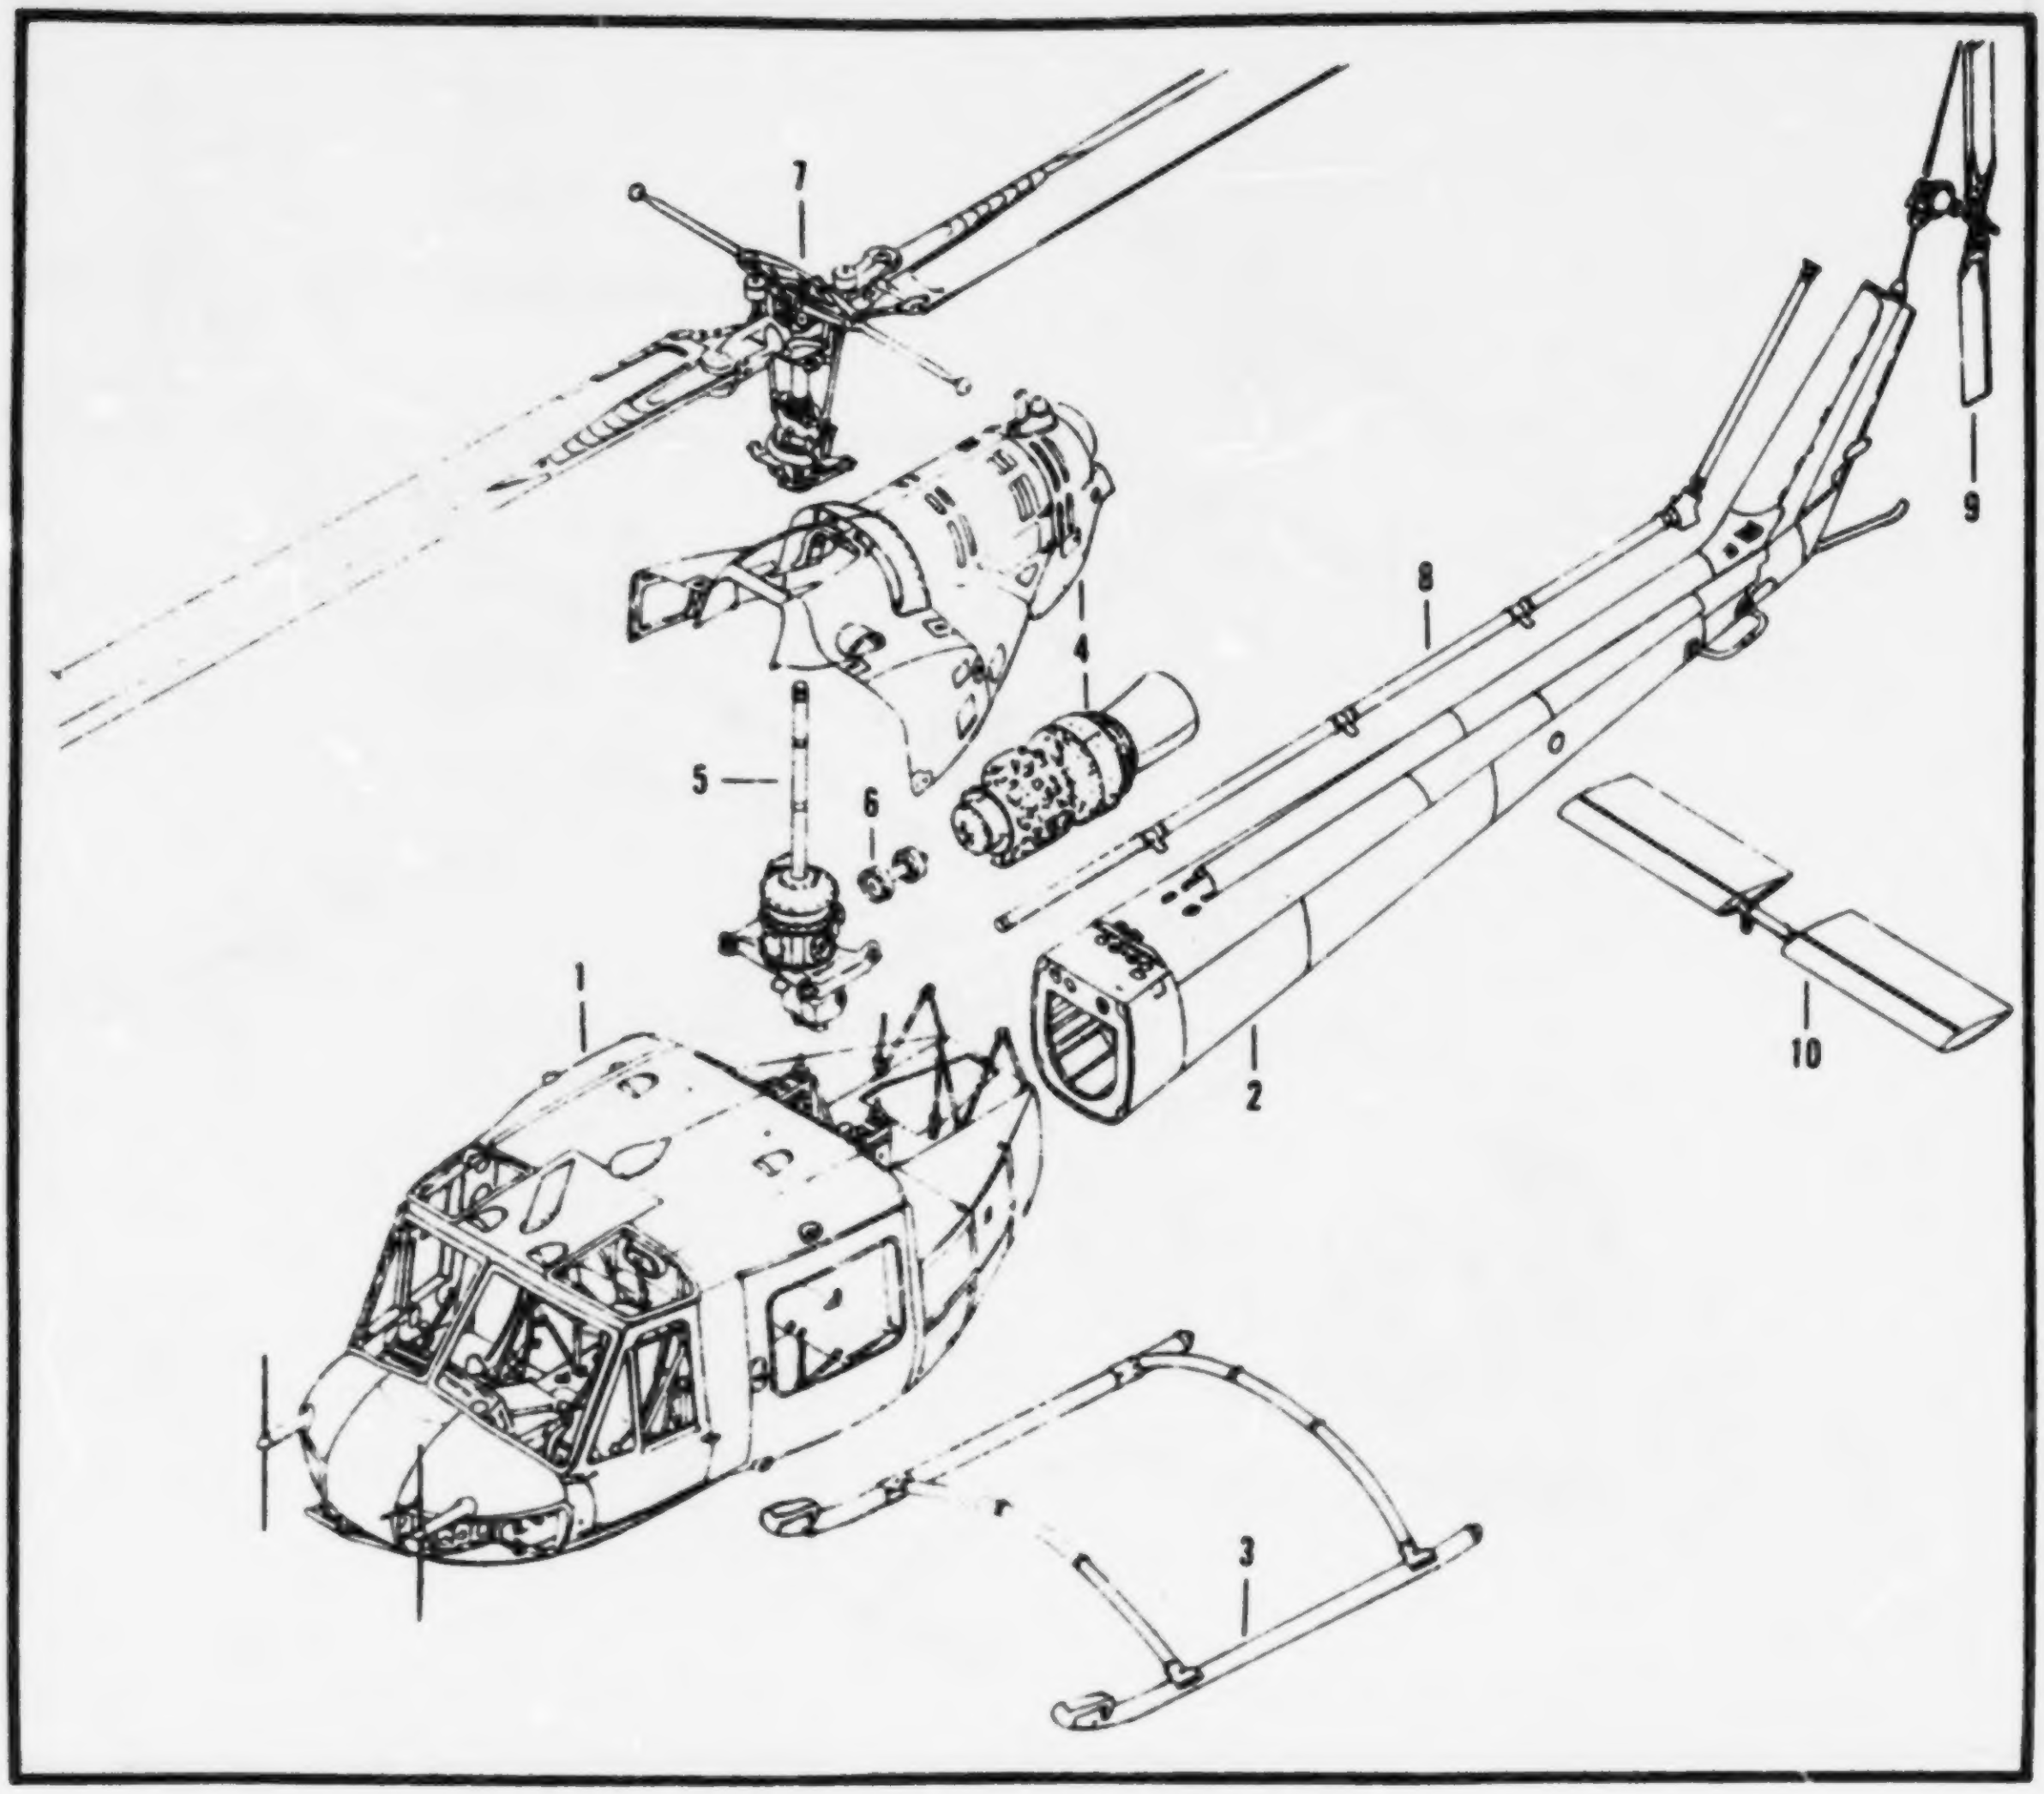

FIGURE 2. EXPLODED VIEW OF UH-1C, UH-1M HELICOPTER

INDEX NUMBER	FIGURE TITLE	FIGURE NUMBER
1	SECTION ASSEMBLY, HELICOPTER FORWARD	6
2	SECTION ASSEMBLY, HELICOPTER AFT	8
3	LANDING GEAR ASSEMBLY, SKID	92
4	POWER PLANT INSTALLATION	95
5	TRANSMISSION AND MAST ASSEMBLY	150
6	DRIVE SHAFT INSTALLATION, ENGINE TO TRANSMISSION	173
7	PYLON INSTALLATION, LOWER SECTION	128
8	SHAFT INSTALLATION, TAIL ROTOR DRIVE	178
9	HUB AND BLADE ASSEMBLY, TAIL ROTOR	147
10	ELEVATOR INSTALLATION, SYNCHRONIZED	379

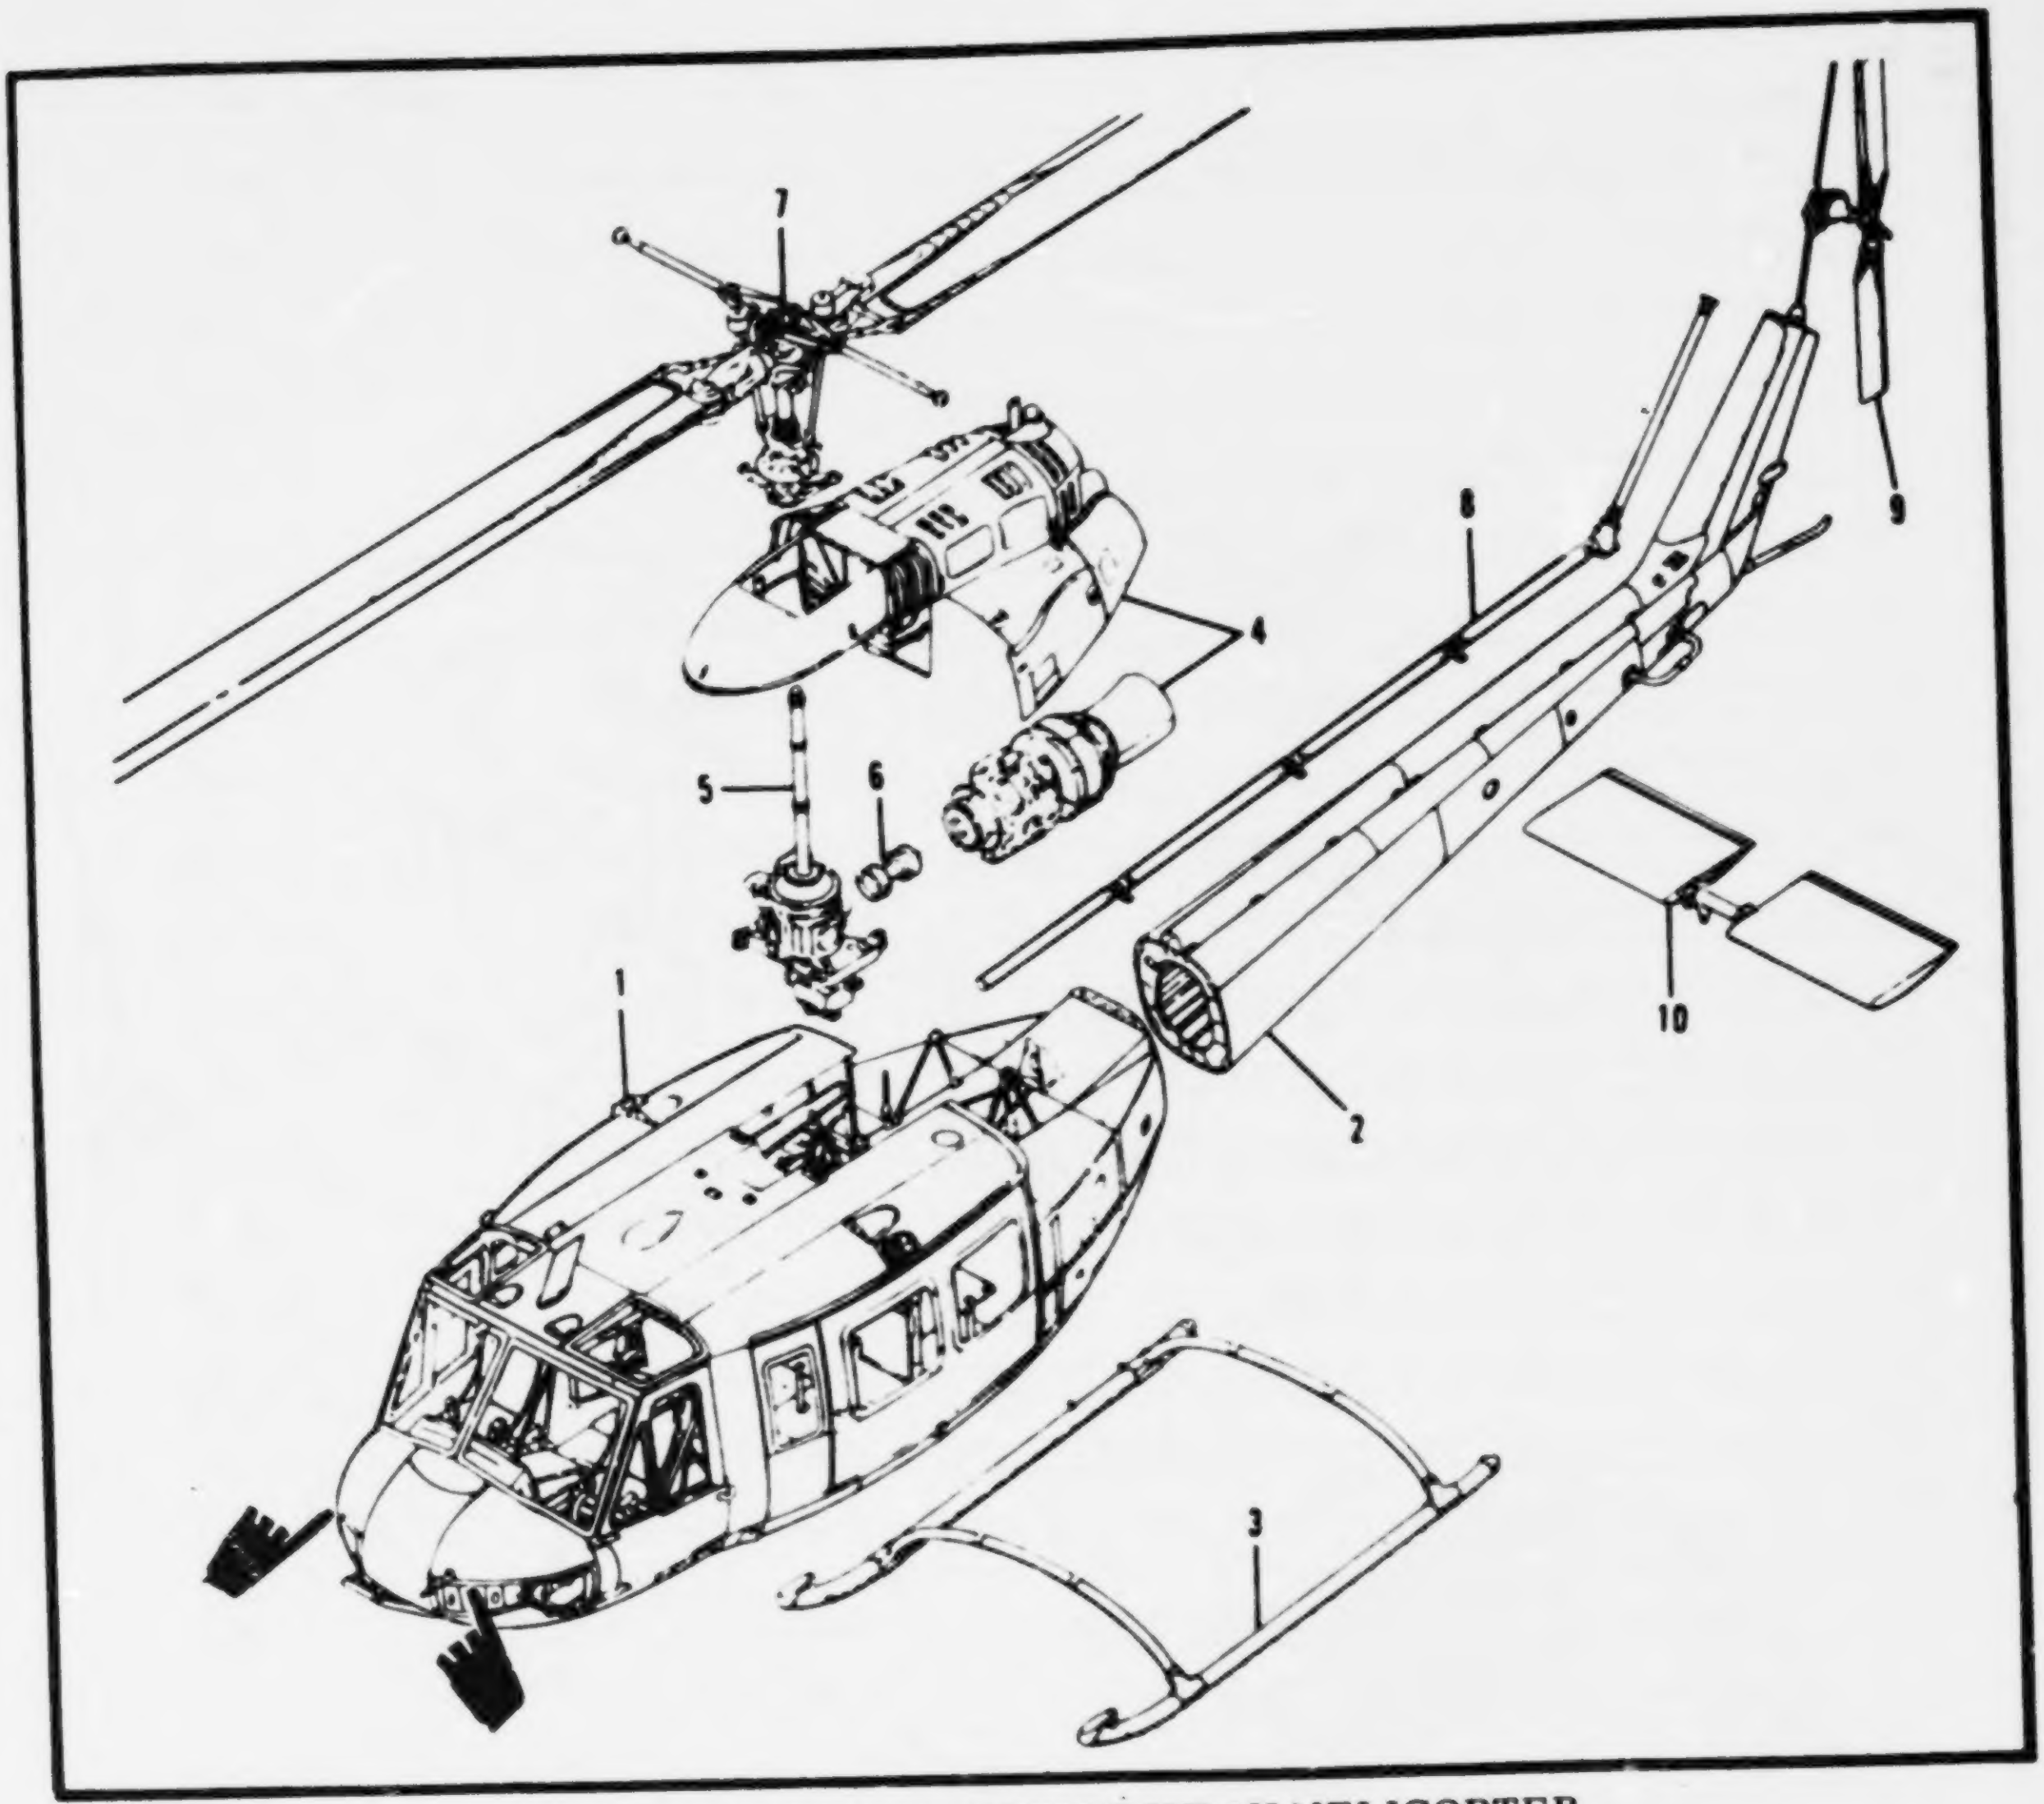

Figure 3. EXPLODED VIEW OF UH-1H HELICOPTER

INDEX NUMBER	FIGURE TITLE	FIGURE NUMBER
1	SECTION ASSEMBLY, HELICOPTER FORWARD	7
2	SECTION ASSEMBLY, HELICOPTER AFT	8
3	LANDING GEAR ASSEMBLY, SKID	92
4	POWER PLANT INSTALLATION	95
5	TRANSMISSION AND MAST ASSEMBLY	150
6	DRIVE SHAFT INSTALLATION, ENGINE TO TRANSMISSION	173
7	PYLON INSTALLATION	128
8	SHAFT INSTALLATION, TAIL ROTOR DRIVE	178
9	HUB AND BLADE ASSEMBLY, TAIL ROTOR	147
10	ELEVATOR INSTALLATION, SYNCHRONIZED	379

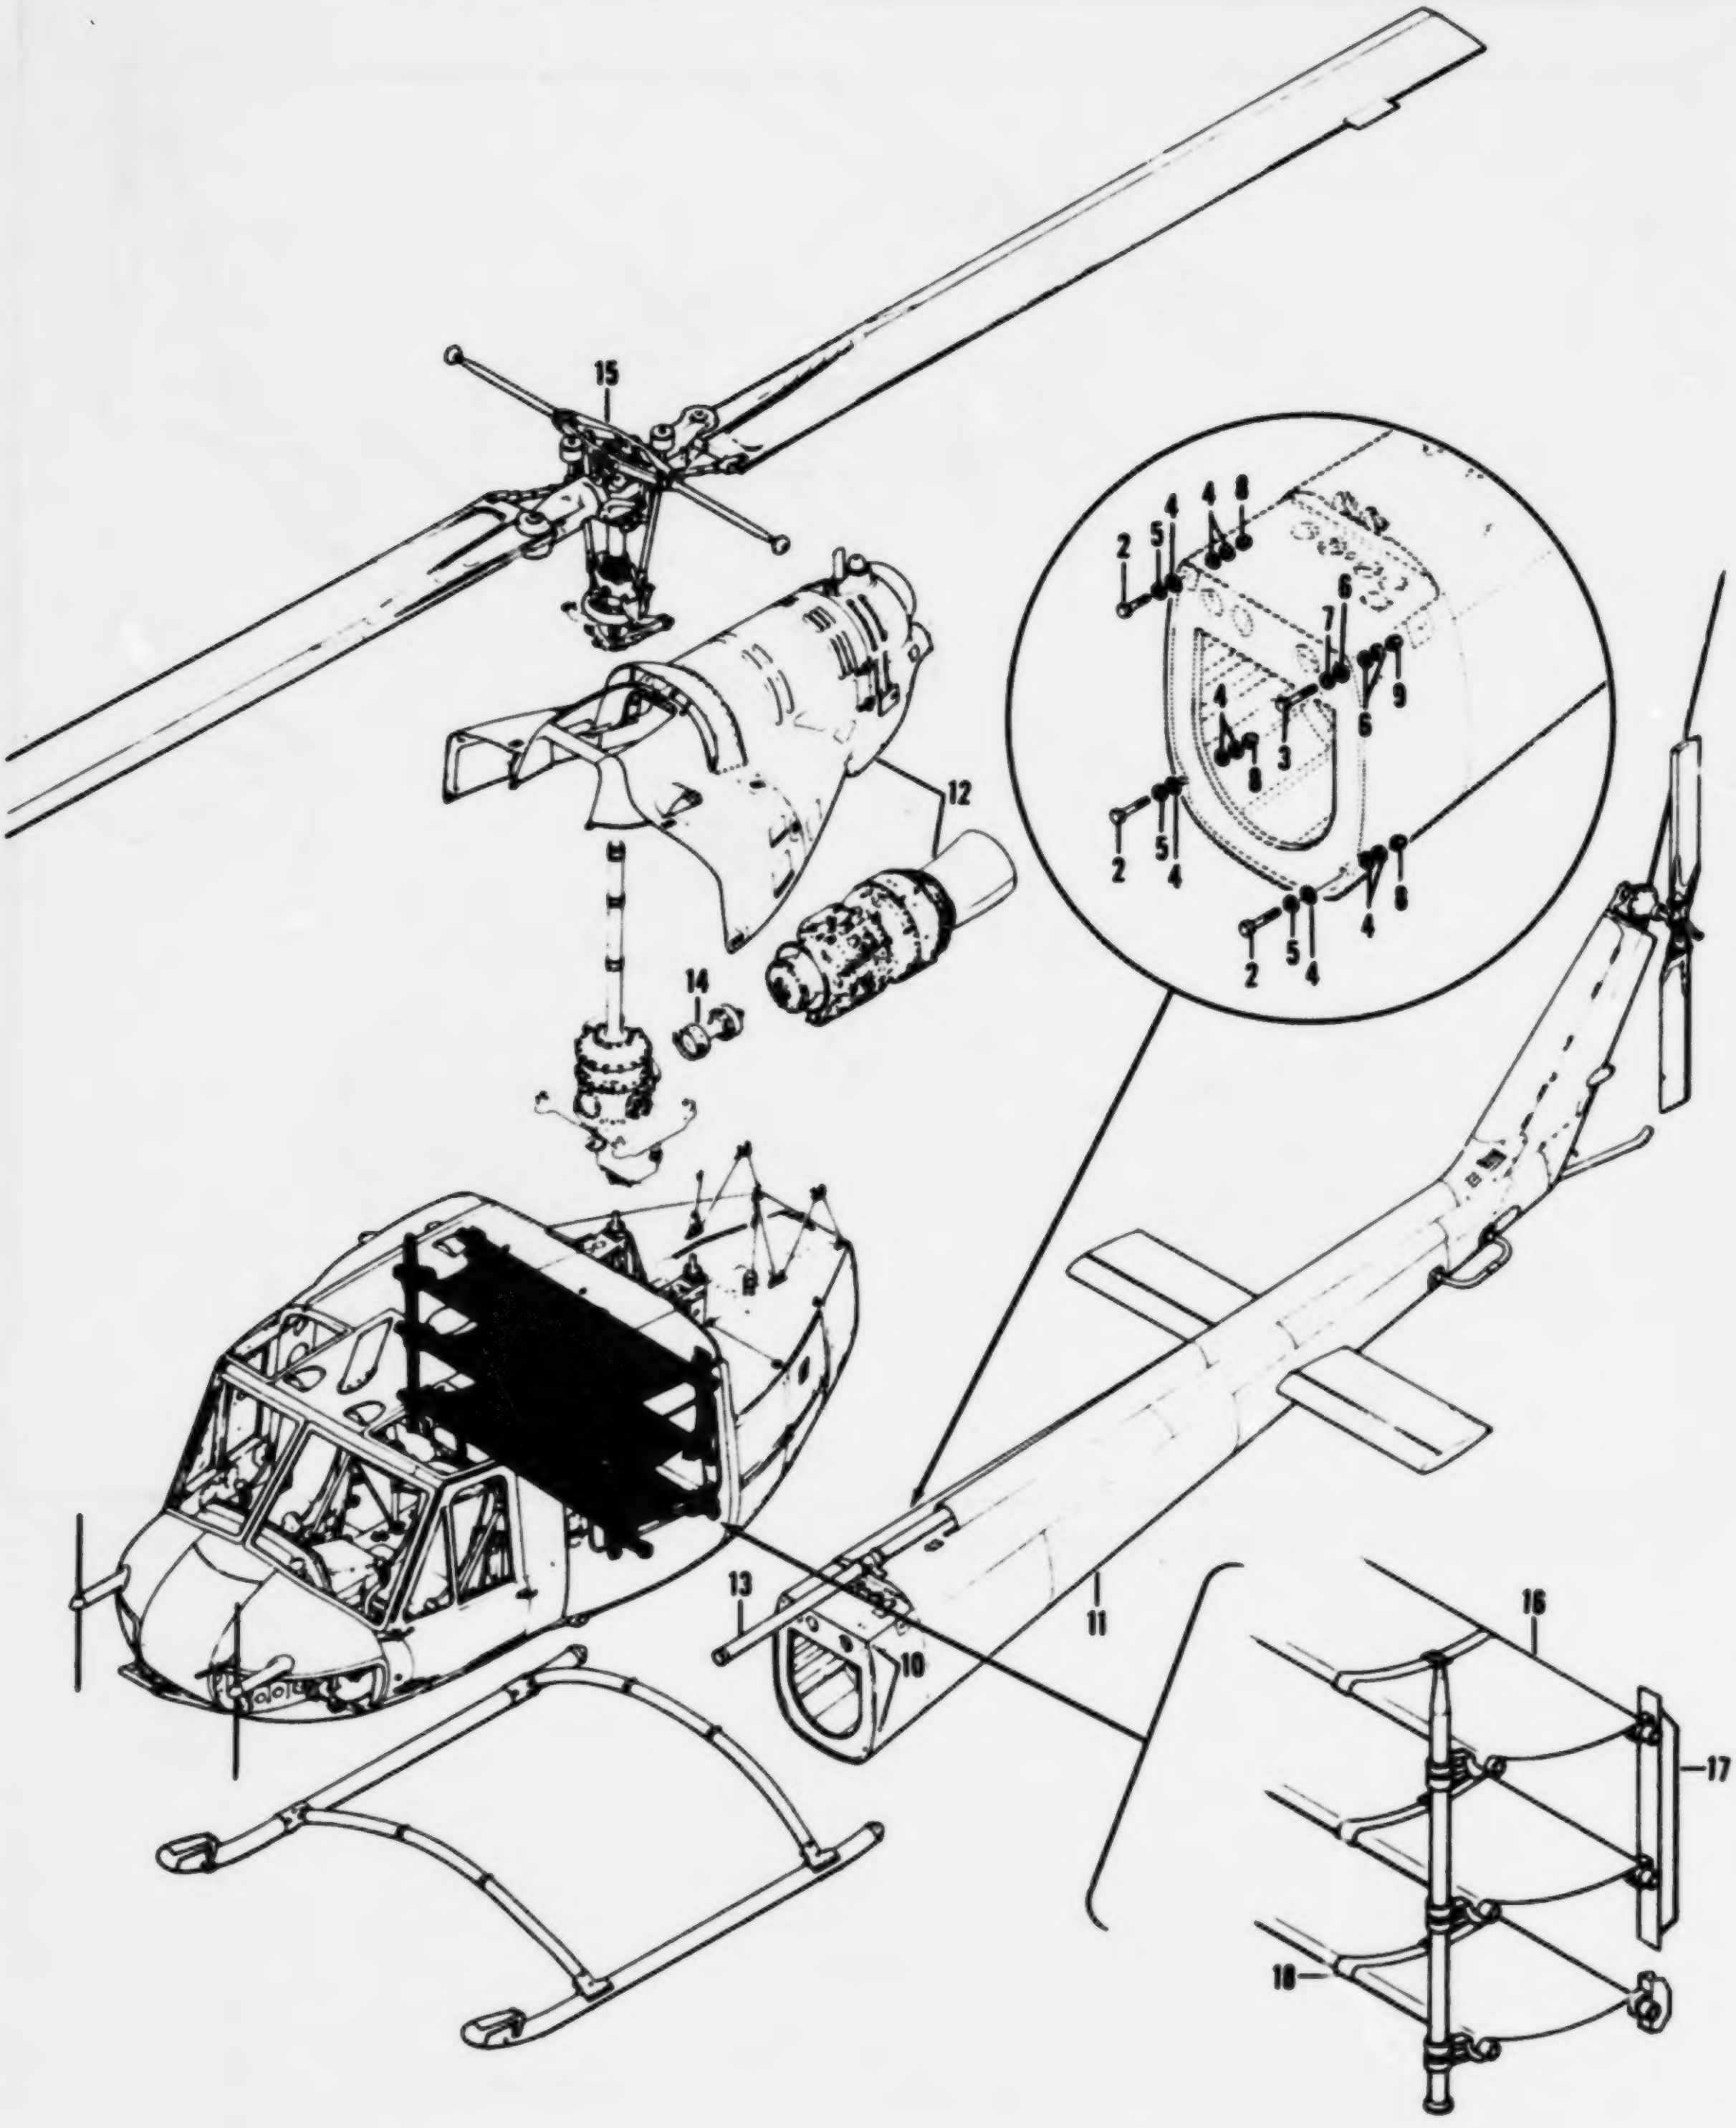
15
2
5
4
4
8
6
7
9
4
3
8
6
12
2
5
4
2
5
4
4
8
14
13
11
10
16
17
18

Figure 4. Section Assembly Forward

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
4		XCFZZ		97499	204-200-010-1	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-3 & -19 USBL EFF 60-3546 THRU 60-3590 SEE FIG.6 FOR BREAKDOWN..........UHB	EA	1
4		XCFZZ		97499	204-200-010-3	SECTION ASSY,ACFT ASSEMBLY USBL-EFF 67-18414 THRU 68-18461 E FIG.6 FOR BREAKDOWN.....................................UHB	EA	1
4		XCFZZ		97499	204-200-010-5	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-11 USBL EFF 61-686 THRU 61-719 SEE FIG.6 FOR BREAKDOWN....................UHB	EA	1
4		XCFZZ		97499	204-200-010-7	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-15 & -43 USBL EFF 61-736 THRU 61-753 SEE FIG.6 FOR BREAKDOWN............UHB	EA	1
4		XCFZZ		97499	204-200-010-13	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-35 USBL EFF 61-720 THRU 61-723 SEE FIG.6 FOR BREAKDOWN....................UHB	EA	1
4		XCFZZ		97499	204-200-010-17	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-39 USBL EFF 61-724 THRU 61-735 SEE FIG.6 FOR BREAKDOWN....................UHB	EA	1
4		XCFZZ		97499	204-200-010-15	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-31 USBL EFF 61-754 THRU 61-803 SEE FIG.6 FOR BREAKDOWN....................UHB	EA	1
4		XCFZZ		97499	204-200-010-11	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-27 USBL EFF 62-1872 THRU 62-1996 SEE FIG.6 FOR BREAKDOWN................UHB	EA	1
4		XCFZZ		97499	204-200-010-19	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-47 USBL EFF 62-1997 THRU 62-12555 SEE FIG.6 FOR BREAKDOWN...............UHB	EA	1
4		XCFZZ		97499	204-200-010-23	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-51 USBL EFF 63-8500 THRU 62-8658 SEE FIG.6 FOR BREAKDOWN................UHB	EA	1
4		XCFZZ		97499	204-200-010-29	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-63 USBL EFF 63-8659 THRU 63-12952 SEE FIG.6 FOR BREAKDOWN...............UHB	EA	1
4		XCFZZ		97499	204-200-010-35	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-75 USBL EFF 64-13902 THRU 64-14100 SEE FIG.6 FOR BREAKDOWN..............UHB	EA	1
4		XCFZZ		97499	204-200-010-39	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-83 USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR BREAKDOWN..........UHC,UHM	EA	1
4		XCFZZ		97499	204-200-010-41	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-87 USBL EFF 65-9416 THRU 65-12772 SEE FIG.6 FOR BREAKDOWN...........UHC,UHM	EA	1
4		XCFZZ		97499	204-200-010-47	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-99 USBL EFF 66-492 THRU 66-601 SEE FIG.6 FOR BREAKDOWN...............UHC,UHM	EA	1
4		XCFZZ		97499	204-200-010-49	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-103 USBL EFF 66-602 THRU 66-15022 SEE FIG.6 FOR BREAKDOWN..........UHC,UHM	EA	1
4		XCFZZ		97499	204-200-010-51	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-107 USBL EFF 66-15023 THRU 66-15105 SEE FIG.6 FOR BREAKDOWN........UHC,UHM	EA	1
4		XCFZZ		97499	204-200-010-61	SECTION ASSY,ACFT FORWARD U/O PN 204-900-002-127 USBL EFF 66-15106 & SUBSEQUENT SEE FIG.6 FOR BREAKDOWN.........UHC,UHM	EA	1
4		XCFZZ		97499	204-070-004-19	.LOOSE EQUIP INSTL INSTALLED U/O PN 204-900-002-3,-7,-11, -15,-19,-31,& -43 USBL EFF 60-3546 THRU 61-719,& 61-736 THRU 61-803 SEE FIG.88 FOR BREAKDOWN...........................UHB	EA	1
4		XCFZZ		97499	204-070-004-33	.LOOSE EQUIP INSTL INSTALLED U/O PN 204-900-002-35 & -39 USBL EFF 61-720 THRU 61-735 SEE FIG.88 FOR BREAKDOWN......UHB	EA	1
4		XCFZZ		97499	204-070-004-29	.LOOSE EQUIP INSTL INSTALLED U/O PN 204-900-002-27 USBL EFF 62-1872 THRU 62-1921 SEE FIG.88 FOR BREAKDOWN.............UHB	EA	1
4		XCFZZ		97499	204-070-004-55	.LOOSE EQUIP INSTL INSTALLED U/O PN 204-900-002-27 USBL EFF 62-1922 THRU 62-1996 SEE FIG.88 FOR BREAKDOWN.............UHB	EA	1
4		XCFZZ		97499	204-070-004-67	.LOOSE EQUIP INSTL INSTALLED U/O PN 204-900-002-47 USBL EFF 62-1997 THRU 62-12555 SEE FIG.88 FOR BREAKDOWN............UHB	EA	1
4		XCFZZ		97499	204-070-004-45	.LOOSE EQUIP INSTL INSTALLED U/O PN 204-900-002-51 USBL EFF 63-8500 THRU 63-8658 SEE FIG.88 FOR BREAKDOWN.............UHB	EA	1
4		XCFZZ		97499	204-070-004-85	.LOOSE EQUIP INSTL INSTALLED U/O PN 204-900-002-63,-75,& -83 USBL EFF 63-8659 THRU 64-14191 SEE FIG.88 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
4		XCFZZ		97499	204-070-004-103	.LOOSE EQUIP INSTL INSTALLED U/O PN 204-900-002-87,-99, -103,-107,& -127 USBL EFF 65-9416 & SUBSEQUENT SEE FIG.88 FOR BREAKDOWN...UHC,UHM	EA	1
4	2	PAOZZ	5306-00-816-3223	80205	NAS626-20	.BOLT,SHEAR...................................UHB,UHC,UHM	EA	3
4	3	PAOZZ	5306-00-687-7707	80205	NAS627-20	.BOLT,SHEAR...................................UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
4	4	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT....................................UHB,UHC,UHM	EA	V
4	5	PAOZZ	5310-00-149-9146	96906	MS20002C6	.WASHER,RECESSED................................UHB,UHC,UHM	EA	3
4	6	PAOZZ	5310-00-167-0822	88044	AN960-716	.WASHER,FLAT....................................UHB,UHC,UHM	EA	3
4	7	PAOZZ	5310-00-595-7079	96906	MS20002C7	.WASHER,RECESSED................................UHB,UHC,UHM	EA	1
4	8	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON.......UHB,UHC,UHM	EA	3
4	9	PAOZZ	5310-00-449-2379	96906	MS21245L7	.NUT,SELF-LOCKING, HEXAGON.......................UHB,UHC,UHM	EA	1
4	10	PAOZZ	5340-00-051-9769	83058	MS50726K2220	.BUTTON,PLUG....................................UHB,UHC,UHM	EA	1
4	11	XCFZZ		97499	204-200-011-1	.SECTION ASSEMBLY,HE AFT U/O PN 204-900-002-3, -7,-11,-19,& -35 USBL EFF 60-3546 THRU 61-723 SEE FIG.8 FOR BREAKDOWN ....UHB	EA	1
4	11	XCFZZ		97499	204-200-011-5	.SECTION ASSEMBLY,HE AFT U/O PN 204-900-002-15,-39,& -43 USBL EFF 61-724 THRU 61-753 SEE FIG.8 FOR BREAKDOWN.......UHB	EA	1
4	11	XCFZZ		97499	204-200-011-11	.SECTION ASSY,ACFT AFT U/O PN 204-900-002-3, -7,-11,-19,& -35 USBL EFF 60-3546 THRU 61-723 SEE FIG.8 FOR BREAKDOWN ....UHB	EA	1
4	11	XCFZZ		97499	204-200-011-9	.SECTION ASSY,ACFT AFT U/O PN 204-900-002-15,-39,& -43 USBL EFF 61-724 THRU 61-753 SEE FIG.8 FOR BREAKDOWN............UHB	EA	1
4	11	XCFZZ		97499	204-200-011-13	.SECTION ASSY,ACFT AFT U/O PN 204-900-002-47 USBL EFF 62-1997 THRU 62-12555 SEE FIG.8 FOR BREAKDOWN.................UHB	EA	1
4	11	XCFZZ		97499	204-200-011-15	.SECTION ASSY,ACFT AFT U/O PN 204-900-002-51 USBL EFF 63-8500 THRU 63-8658 SEE FIG.8 FOR BREAKDOWN..................UHB	EA	1
4	11	XCFZZ		97499	204-200-011-25	.SECTION ASSY,ACFT AFT U/O PN 204-900-002-63 USBL EFF 63-8659 THRU 63-8738 SEE FIG.8 FOR BREAKDOWN..................UHB	EA	1
4	11	XCFZZ		97499	204-200-011-29	.SECTION ASSY,ACFT AFT U/O PN 204-900-002-75 USBL EFF 64-13902 THRU 64-14100 SEE FIG.8 FOR BREAKDOWN................UHB	EA	1
4	11	XCFZZ		97499	204-200-011-31	.SECTION ASSY,ACFT AFT U/O PN 204-900-002-83 USBL EFF 64-14101 THRU 64-14191 SEE FIG.8 FOR BREAKDOWN...........UHC,UHM	EA	1
4	11	XCFZZ		97499	204-200-011-37	.SECTION ASSY,ACFT AFT U/O PN 204-900-002-87 USBL EFF 65-9416 THRU 65-12772 SEE FIG.8 FOR BREAKDOWN............UHC,UHM	EA	1
4	11	XCFZZ		97499	204-200-011-43	.SECTION ASSY,ACFT AFT U/O PN 204-900-002-99 USBL EFF 66-492 THRU 66-601 SEE FIG.8 FOR BREAKDOWN.................UHC,UHM	EA	1
4	11	XCFZZ		97499	204-200-011-45	.SECTION ASSY,ACFT AFT U/O PN 204-900-002-103,-107,& -127 USBL EFF 66-602 & SUBSEQUENT SEE FIG.8 FOR BREAKDOWN ....UHC,UHM	EA	1
4	12	XCFZZ		97499	204-200-012-1	.POWER PLANT INSTL U/O PN 204-900-002-3,-7,& -19 SEE FIG.95 FOR BREAKDOWN..UHB	EA	1
4	12	XCFZZ		97499	204-200-012-3	.POWER PLANT INSTL U/O PN 204-900-002-11,-15, -35,& -39 USBL EFF 61-686 THRU 61-740 SEE FIG.95 FOR BREAKDOWN...........UHB	EA	1
4	12	XCFZZ		97499	204-200-012-5	.POWER PLANT INSTL U/O PN 204-900-002-31 & -43 USBL EFF 61-741 THRU 61-803 SEE FIG.95 FOR BREAKDOWN...................UHB	EA	1
4	12	XCFZZ		97499	204-200-012-7	.POWER PLANT INSTL U/O PN 204-900-002-27 USBL EFF 62-1872 THRU 62-1915 SEE FIG.95 FOR BREAKDOWN......................UHB	EA	1
4	12	XCFZZ		97499	204-200-012-15	.POWER PLANT INSTL U/O PN 204-900-002-27 & -47 USBL EFF 62-1916 THRU 62-12555 SEE FIG.95 FOR BREAKDOWN................UHB	EA	1
4	12	XCFZZ		97499	204-200-012-17	.POWER PLANT INSTL U/O PN 204-900-002-51 & -63 SEE FIG.95 FOR BREAKDOWN...UHB	EA	1
4	12	XCFZZ		97499	204-200-012-31	.POWER PLANT INSTL U/O PN 204-900-002-75 SEE FIG.95 FOR BREAKDOWN...UHB	EA	1
4	12	XCFZZ		97499	204-200-012-41	.POWER PLANT INSTL U/O PN 204-900-002-83 SEE FIG.95 FOR BREAKDOWN..UHC,UHM	EA	1
4	12	XCFZZ		97499	204-200-012-47	.POWER PLANT INSTL U/O PN 204-900-002-87 SEE FIG.95 FOR BREAKDOWN..UHC,UHM	EA	1
4	12	XCFZZ		97499	204-200-012-53	.POWER PLANT INSTL U/O PN 204-900-002-99, -103,-107,& -127 SEE FIG.95 FOR BREAKDOWN................................UHC,UHM	EA	1
4	13	XCFZZ		97499	204-040-011-3	.DRIVESHAFT INSTL U/O PN 204-900-002-3,-7, -11,-15,-19,-31,-	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						35,-39,& -43 SEE FIG.178 FOR BREAKDOWN....................UHB		
4	13	XCFZZ		97499	204-040-011-7	.DRIVESHAFT INSTL U/O PN 204-900-002-27,-47, -51,-63,-75,-83,-87,-99, -103,-107,& -127 SEE FIG.178 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
4	14	XCFZZ		97499	204-040-010-1	.DRIVESHAFT INSTL U/O PN 204-900-002-3 SEE FIG.173 FOR BREAKDOWN..UHB	EA	1
4	14	XCFZZ		97499	204-040-010-5	.DRIVESHAFT INSTL U/O PN 204-900-002-7,-11, -15,-19,-27,-31, -35,-39, -43,-47,-51,-63,-75,-83,& -87 SEE FIG.173 FOR BREAKDOWN.......................................UHB,UHC,UHM	EA	1
4	14	XCFZZ		97499	204-040-010-13	.DRIVESHAFT INSTL U/O PN 204-900-002-99, -103,-107,& -127 SEE FIG.173 FOR BREAKDOWN.........................UHB,UHC,UHM	EA	1
4	15	XCFZZ		97499	204-200-009-5	.PYLON INSTL U/O PN 204-900-002-3 SEE FIG.128 FOP BREAKDOWN ....UHB	EA	1
4	15	XCFZZ		97499	204-200-009-17	.PYLON INSTL U/O PN 204-900-002-7 & -19 SEE FIG.128 FOR BREAKDOWN..UHB	EA	1
4	15	XCFZZ		97499	204-200-009-9	.PYLON INSTL U/O PN 204-900-002-11 & -35 SEE FIG.128 FOR BREAKDOWN..UHB	EA	1
4	15	XCFZZ		97499	204-200-009-13	.PYLON INSTL U/O PN 204-900-002-15,-31,-39, & -43 SEE FIG. 128 FOR BREAKDOWN..UHB	EA	1
4	15	XCFZZ		97499	204-200-009-21	.PYLON INSTL U/O PN 204-900-002-27 SEE FIG.128 FOR BREAKDOWN ....UHB	EA	1
4	15	XCFZZ		97499	204-200-009-29	.PYLON INSTL U/O PN 204-900-002-47 SEE FIG.128 FOR BREAKDOWN ....UHB	EA	1
4	15	XCFZZ		97499	204-200-009-37	.PYLON INSTL U/O PN 204-900-002-51 SEE FIG.128 FOR BREAKDOWN ....UHB	EA	1
4	15	XCFZZ		97499	204-200-009-53	.PYLON INSTL U/O PN 204-900-002-63 & -75 SEE FIG.128 FOR BREAKDOWN..UHB	EA	1
4	15	XCFZZ		97499	540-200-002-13	.PYLON INSTL U/O PN 204-900-002-99,-103, -107,& -127 SEE FIG.130 FOR BREAKDOWN...................................UHC,UHM	EA	1
4		XCFZZ		97499	204-706-001-9	.CONTROL INSTL,DUAL REMOVABLE U/O PN 204-900-002-3 & -19 SEE FIG.352 FOR BREAKDOWN..UHB	EA	1
4		XCFZZ		97499	204-706-001-11	.CONTROL INSTL,DUAL REMOVABLE U/O PN 204-900-002-7,-11,-15, -31,& -43 SEE FIG.352 FOR BREAKDOWN.........................UHB	EA	1
4		XCFZZ		97499	204-706-001-13	.CONTROL INSTL,DUAL REMOVABLE U/O PN 204-900-002-35 & -39 SEE FIG.352 FOR BREAKDOWN.......................................UHB	EA	1
4		XCFZZ		97499	204-706-001-15	.CONTROL INSTL,DUAL REMOVABLE U/O PN 204-900-002-27 SEE FIG. 352 FOR BREAKDOWN..UHB	EA	1
4		XCFZZ		97499	204-706-001-21	.CONTROL INSTL,DUAL REMOVABLE U/O PN 204-900-002-47,-51,-63, -75,-83,-87,-99,-103,-107, & -127 SEE FIG.352 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
4	16	PBOOO	1680-00-919-1853	97499	204-706-088-1	.LITTER KIT,THREE MAN SUSPENDED USBL EFF 65-9416 & SUBSEQUENT.......................................UHB,UHC,UHM	EA	1
4	17	PAOOO	1680-00-788-1526	97499	204-070-090-1	..LITTER INSTALLATION SEE FIG.89 FOR BREAKDOWN.......UHC,UHM	EA	1
4	18	PAOZZ	1680-00-787-4299	97499	204-070-032-3	..BELT,SAFETY LAP REPLACED BY P/N X64F1877-3 ....UHC,UHM	EA	2
4	18	PAOZZ	1680-01-054-6531	81996	X64F1877-3	..BELT,SAFETY LAP REPLACES P/N 204-070-032-3...UHC,UHM	EA	2

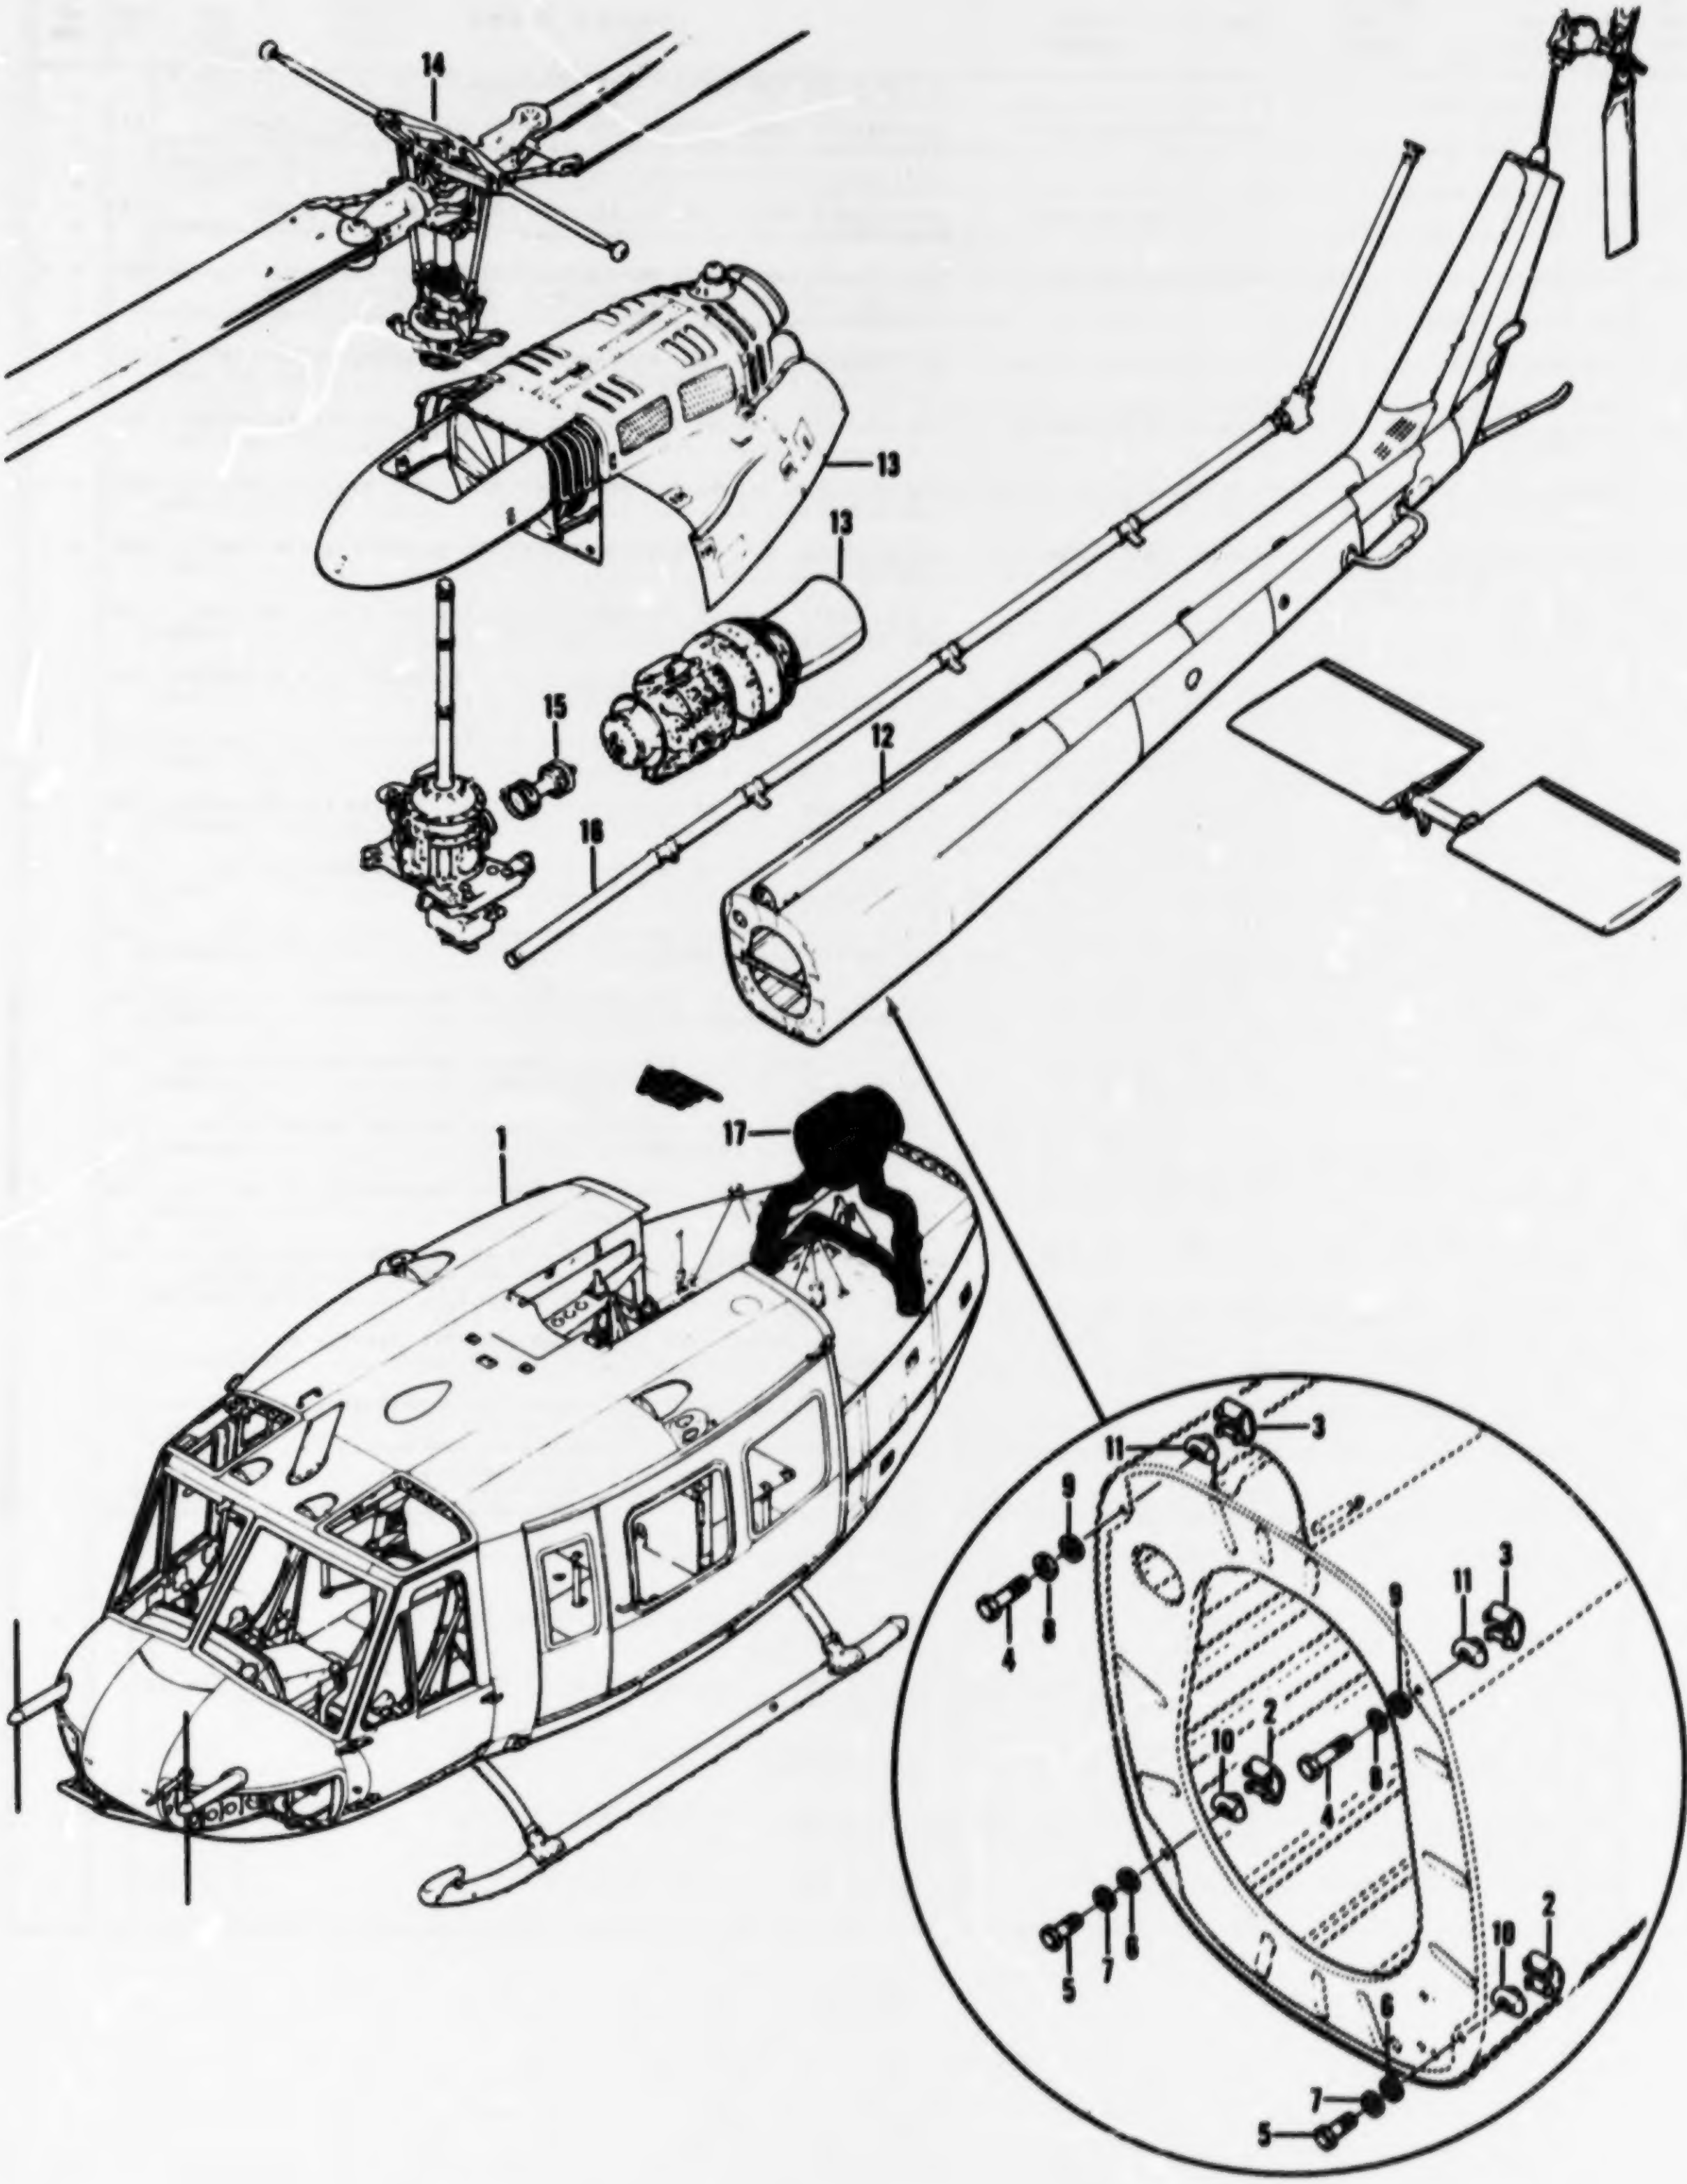
14
13
13
15
12
18
17
1
3
11
9
8
4
3
11
9
2
10
8
4
5
7
6
10
2
6
7
5

Figure 5. Section Assembly Forward

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
5	1	XCFZZ		97499	205-200-005-1	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-3,-7,& -11 USBL EFF 62-2106 THRU 62-2113 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-3	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-15 USBL EFF 62-12351 THRU 62-12372 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-5	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-19 USBL EFF 63-8739 THRU 63-8803 SEE FIG.7 FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-7	SECTION ASSY,ACFT STOWAGE EE FIG.7 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-9	SECTION ASSY,ACFT PLATE SEE FIG.7 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-11	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-31 USBL EFF 64-13492 THRU 64-13661 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-13	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-35 USBL EFF 64-13662 THRU 64-13901 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-15	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-39 USBL EFF 65-9565 THRU 65-9810 SEE FIG.7 FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-21	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-47 USBL EFF 65-9811 THRU 65-12895 SEE FIG.7 FOR BREAKDOWN....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-19	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-43 USBL EFF 66-746 THRU 66-16033 SEE FIG.7 FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-23	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-51 USBL EFF 66-16034 THRU 66-16867 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-29	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-59 USBL EFF 66-16868 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.7 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-35	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-63 USBL EFF 67-17145 THRU 67-17312 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-37	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-67 USBL EFF 67-17313 THRU 67-17777 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-41	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-75 USBL EFF 67-17778 THRU 67-19537 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-43	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-71 USBL EFF 68-15214 THRU 68-15324 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-47	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-79 USBL EFF 68-15325 THRU 68-15489 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-53	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-83 USBL EFF 68-15490 THRU 68-15778 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-55	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-87 USBL EFF 68-16050 THRU 68-16342 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-61	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-95 USBL EFF 68-16343 THRU 68-16625 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-57	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-91 USBL EFF 69-15000 THRU 69-15291 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-63	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-99 USBL EFF 69-15292 THRU 70-15932 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-67	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-103 USBL EFF 70-16200 THRU 70-16518 SEE FIG.7 FOR BREAKDOWN	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHE,UHH,UHV,UHX		
5		XCFZZ		97499	205-200-005-69	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-107 USBL EFF 71-20000 THRU 71-20339 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-71	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-111 USBL EFF 72-21465 THRU 74-22542 SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-200-005-73	SECTION ASSY,ACFT FORWARD U/O PN 205-900-002-123 USBL EFF 74-22543 & SUBSEQUENT SEE FIG.7 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-070-001-3	.LOOSE EQUIP INSTL INSTALLED U/O PN 205-900-002-3,-7,-11&-15 SEE FIG.90 FOR BREAKDOWN.......................UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-070-001-5	.LOOSE EQUIP INSTL INSTALLED U/O PN 205-900-002-19,-23&-27 SEE FIG.90 FOR BREAKDOWN.......................UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-070-001-15	.LOOSE EQUIP INSTL INSTALLED U/O PN 205-900-002-31,-35,-39,-43,-47,51,-59,-63,-67,-71,-75,-79,-83,-87,-91,-95,-99,-103&-107 SEE FIG.90 FOR BREAKDOWN..................UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-070-001-7	.LOOSE EQUIP INSTL PACKAGED U/O PN 205-900-002-3,-7,-11&-15 SEE FIG.90 FOR BREAKDOWN.......................UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-070-001-9	.LOOSE EQUIP INSTL PACKAGED U/O 205-900-002-19&-23 SEE FIG. 90 FOR BREAKDOWN...............................UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-070-001-11	.LOOSE EQUIP INSTL PACKAGED U/O PN 205-900-002-27 SEE FIG.90 FOR BREAKDOWN...............................UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-070-001-13	.LOOSE EQUIP INSTL PACKAGED U/O PN 205-900-002-31&-35 SEE FIG.90 FOR BREAKDOWN...........................UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-070-001-17	.LOOSE EQUIP INSTL PACKAGED U/O PN 205-900-002-39&-47 SEE FIG.90 FOR BREAK DOWN..........................UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-070-001-25	.LOOSE EQUIP INSTL PACKAGED U/O PN 205-900-002-43,-51&-59 SEE FIG.90 FOR BREAKDOWN.......................UHE,UHH,UHV,UHX	EA	1
5		XCFZZ		97499	205-070-001-27	.LOOSE EQUIP INSTL PACKAGED U/O PN 205-900-002-63,-67,-71, 75,-79,-83,-87,-91,-9599,-103&-107 SEE FIG.90 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5	2	PAOZZ	5340-00-893-6728	80205	NAS578-6A	.RETAINER,NUT AND BOLT........................UHE,UHH,UHV,UHX	EA	2
5	3	PAOZZ	5340-00-809-4388	80205	NAS578-8A	.RETAINER,NUT AND BOLT........................UHE,UHH,UHV,UHX	EA	2
5	4	PAOZZ	5306-00-805-3573	80205	NAS628-20	.BOLT,SHEAR...................................UHE,UHH,UHV,UHX	EA	2
5	5	XDOZZ	5306-00-816-3222	80205	NAS626-18	.BOLT,SHEAR...................................UHE,UHH,UHV,UHX	EA	2
5	6	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	V
5	7	PAOZZ	5310-00-149-9146	96906	MS20002C6	.WASHER,RECESSED..............................UHE,UHH,UHV,UHX	EA	2
5	8	PAOZZ	5310-00-149-9116	96906	MS20002C8	.WASHER,RECESSED..............................UHE,UHH,UHV,UHX	EA	2
5	9	PAOZZ	5310-00-167-0823	88044	AN960-816	.WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	V
5	10	PAOZZ	5310-00-820-1560	80205	NAS577-6A	.NUT,SELF-LOCKING, BARREL.....................UHE,UHH,UHV,UHX	EA	2
5	11	PAOZZ	5310-00-802-1268	80205	NAS577-8A	.NUT,SELF-LOCKING, BARREL.....................UHE,UHH,UHV,UHX	EA	2
5	12	XCFZZ		97499	205-200-006-1	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-3,-7,& -11 SEE FIG.8 FOR BREAKDOWN.........................UHE,UHH,UHV,UHX	EA	1
5	12	XCFZZ		97499	205-200-006-3	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-15 SEE FIG.8 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
5	12	XCFZZ		97499	205-200-006-5	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-19 SEE FIG.8 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
5	12	XCFZZ		97499	205-200-006-7	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-23 SEE FIG.8 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
5	12	XCFZZ		97499	205-200-006-9	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-27 SEE FIG.8 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
5	12	XCOZZ		97499	205-200-006-11	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-31 & -35 SEE FIG.8 FOR BREAKDOWN.............................UHE,UHH,UHV,UHX	EA	1
5	12	XCFZZ		97499	205-200-006-13	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-39 & -47 SEE FIG.8	EA	1

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						FOR BREAKDOWN..............................UHE,UHH,UHV,UHX		
5	12	XCFZZ		97499	205-200-006-15	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-43,-51,& -59 SEE FIG.8 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	12	XCFZZ		97499	205-200-006-19	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-63,-67,& -75 SEE FIG.8 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	12	XCFZZ		97499	205-200-006-27	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-71,-79,& -83 SEE FIG.8 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	12	XCFZZ		97499	205-200-006-33	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-87 SEE FIG.8 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	12	XCFZZ		97499	205-200-006-35	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-91,-95,& -99 SEE FIG.8 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	12	XCFZZ		97499	205-200-006-39	.SECTION ASSY,ACFT AFT U/O PN 205-900-002-103 & -107 SEE FIG.8 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	12	XCFZZ		97499	205-200-006-45	.SECTION ASSY,ACFT AFT U/O PN 205-900-115 & -119 ....UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-7	.POWER PLANT INSTL U/O PN 205-900-002-3,-7,& -11 SEE FIG.96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-9	.POWER PLANT INSTL U/O PN 205-900-002-15 SEE FIG.96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-11	.POWER PLANT INSTL U/O PN 205-900-002-19,-23, & -27 SEE FIG. 96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-13	.POWER PLANT INSTL U/O PN 205-900-002-31 & -35 SEE FIG.96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-15	.POWER PLANT INSTL U/O PN 205-900-002-39 & -47 SEE FIG.96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-17	.POWER PLANT INSTL U/O PN 205-900-002-43 & -51 SEE FIG.96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-27	.POWER PLANT INSTL U/O PN 205-900-002-59 SEE FIG.96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-29	.POWER PLANT INSTL U/O PN 205-900-002-63,-67, & -75 SEE FIG. 96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-33	.POWER PLANT INSTL U/O PN 205-900-002-71,-79, & -83 SEE FIG. 96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-39	.POWER PLANT INSTL U/O PN 205-900-002-87 & -95 SEE FIG.96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-43	.POWER PLANT INSTL U/O PN 205-900-002-91 SEE FIG.96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-41	.POWER PLANT INSTL U/O PN 205-900-002-99, -103,&-107 SEE FIG.96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-49	.POWER PLANT INSTL U/O PN 205-900-002-107 SEE FIG.96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	13	XCFZZ		97499	205-200-004-51	.POWER PLANT INSTL U/O PN 205-900-002-111 SEE FIG.96 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	14	XCFZZ		97499	205-200-003-5	.PYLON INSTALLATION U/O PN 205-900-002-3,-7,11,& -15 SEE FIG.128 FOR BREAKDOWN SEE FIG.163 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5	14	XCFZZ		97499	205-200-003-9	.PYLON INSTALLATION U/O PN 205-900-002-19 SEE FIG.128 FOR BREAKDOWN SEE FIG.163 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5	14	XCFZZ		97499	205-200-003-13	.PYLON INSTALLATION U/O PN 205-900-002-23 SEE FIG.128 FOR BREAKDOWN SEE FIG.163 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5	14	XCFZZ		97499	205-200-003-17	.PYLON INSTALLATION U/O PN 205-900-002-27,-31,-35,-39,-43,-47,-51,-59,-63,-67,-71-75,-79,-83,-87,-91,-95,-99,-103,& -107 SEE FIG.128 FOR BREAKDOWN SEE FIG.163 FOR BALANCE OF BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
5	14	XCFZZ		97499	205-200-003-55	.PYLON INSTALLATION U/O PN 205-900-002-107 & -111 SEE FIG. 128 FOR BREAKDOWN SEE FIG 163 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
5		XCFZZ		97499	205-070-936-11	.STOWAGE INSTL SEE FIG.90 FOR BREAKDOWN......UHE,UHH,UHV,UHX	EA	1
5	15	XCFZZ		97499	204-040-010-5	.DRIVESHAFT INSTL U/O PN 205-900-002-3,-7, -11,-15,-19,-23,-27,-31, -35,-39,& -47 SEE FIG.173 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5	15	XCFZZ		97499	204-040-010-13	.DRIVESHAFT INSTL U/O PN 205-900-002-43,-51, & -59 SEE FIG. 173 FOR BREAKDOWN............................UHE,UHH,UHV,UHX	EA	1
5	15	XCFZZ		97499	205-040-004-5	.DRIVESHAFT INSTL U/O PN 205-900-002-63,-67, -71,-75,-79,-83,-87,-91, -95,-99,-103,&-107 SEE FIG.173 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
5	16	XCFZZ		97499	205-040-003-3	.DRIVESHAFT INSTL U/O PN 205-900-002-111,-115,-119,-123,-127 -131,-135 SEE FIG. 179 FOR BREAKDOWN.........UHE,UHH,UHV,UHX	EA	1
5	17	PAOFF	1660-00-484-8719	97499	205-706-029-11	.HEATER PACKAGE,ACFT USBL EFF 64-16868 & SUB SEE FIG.396 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1

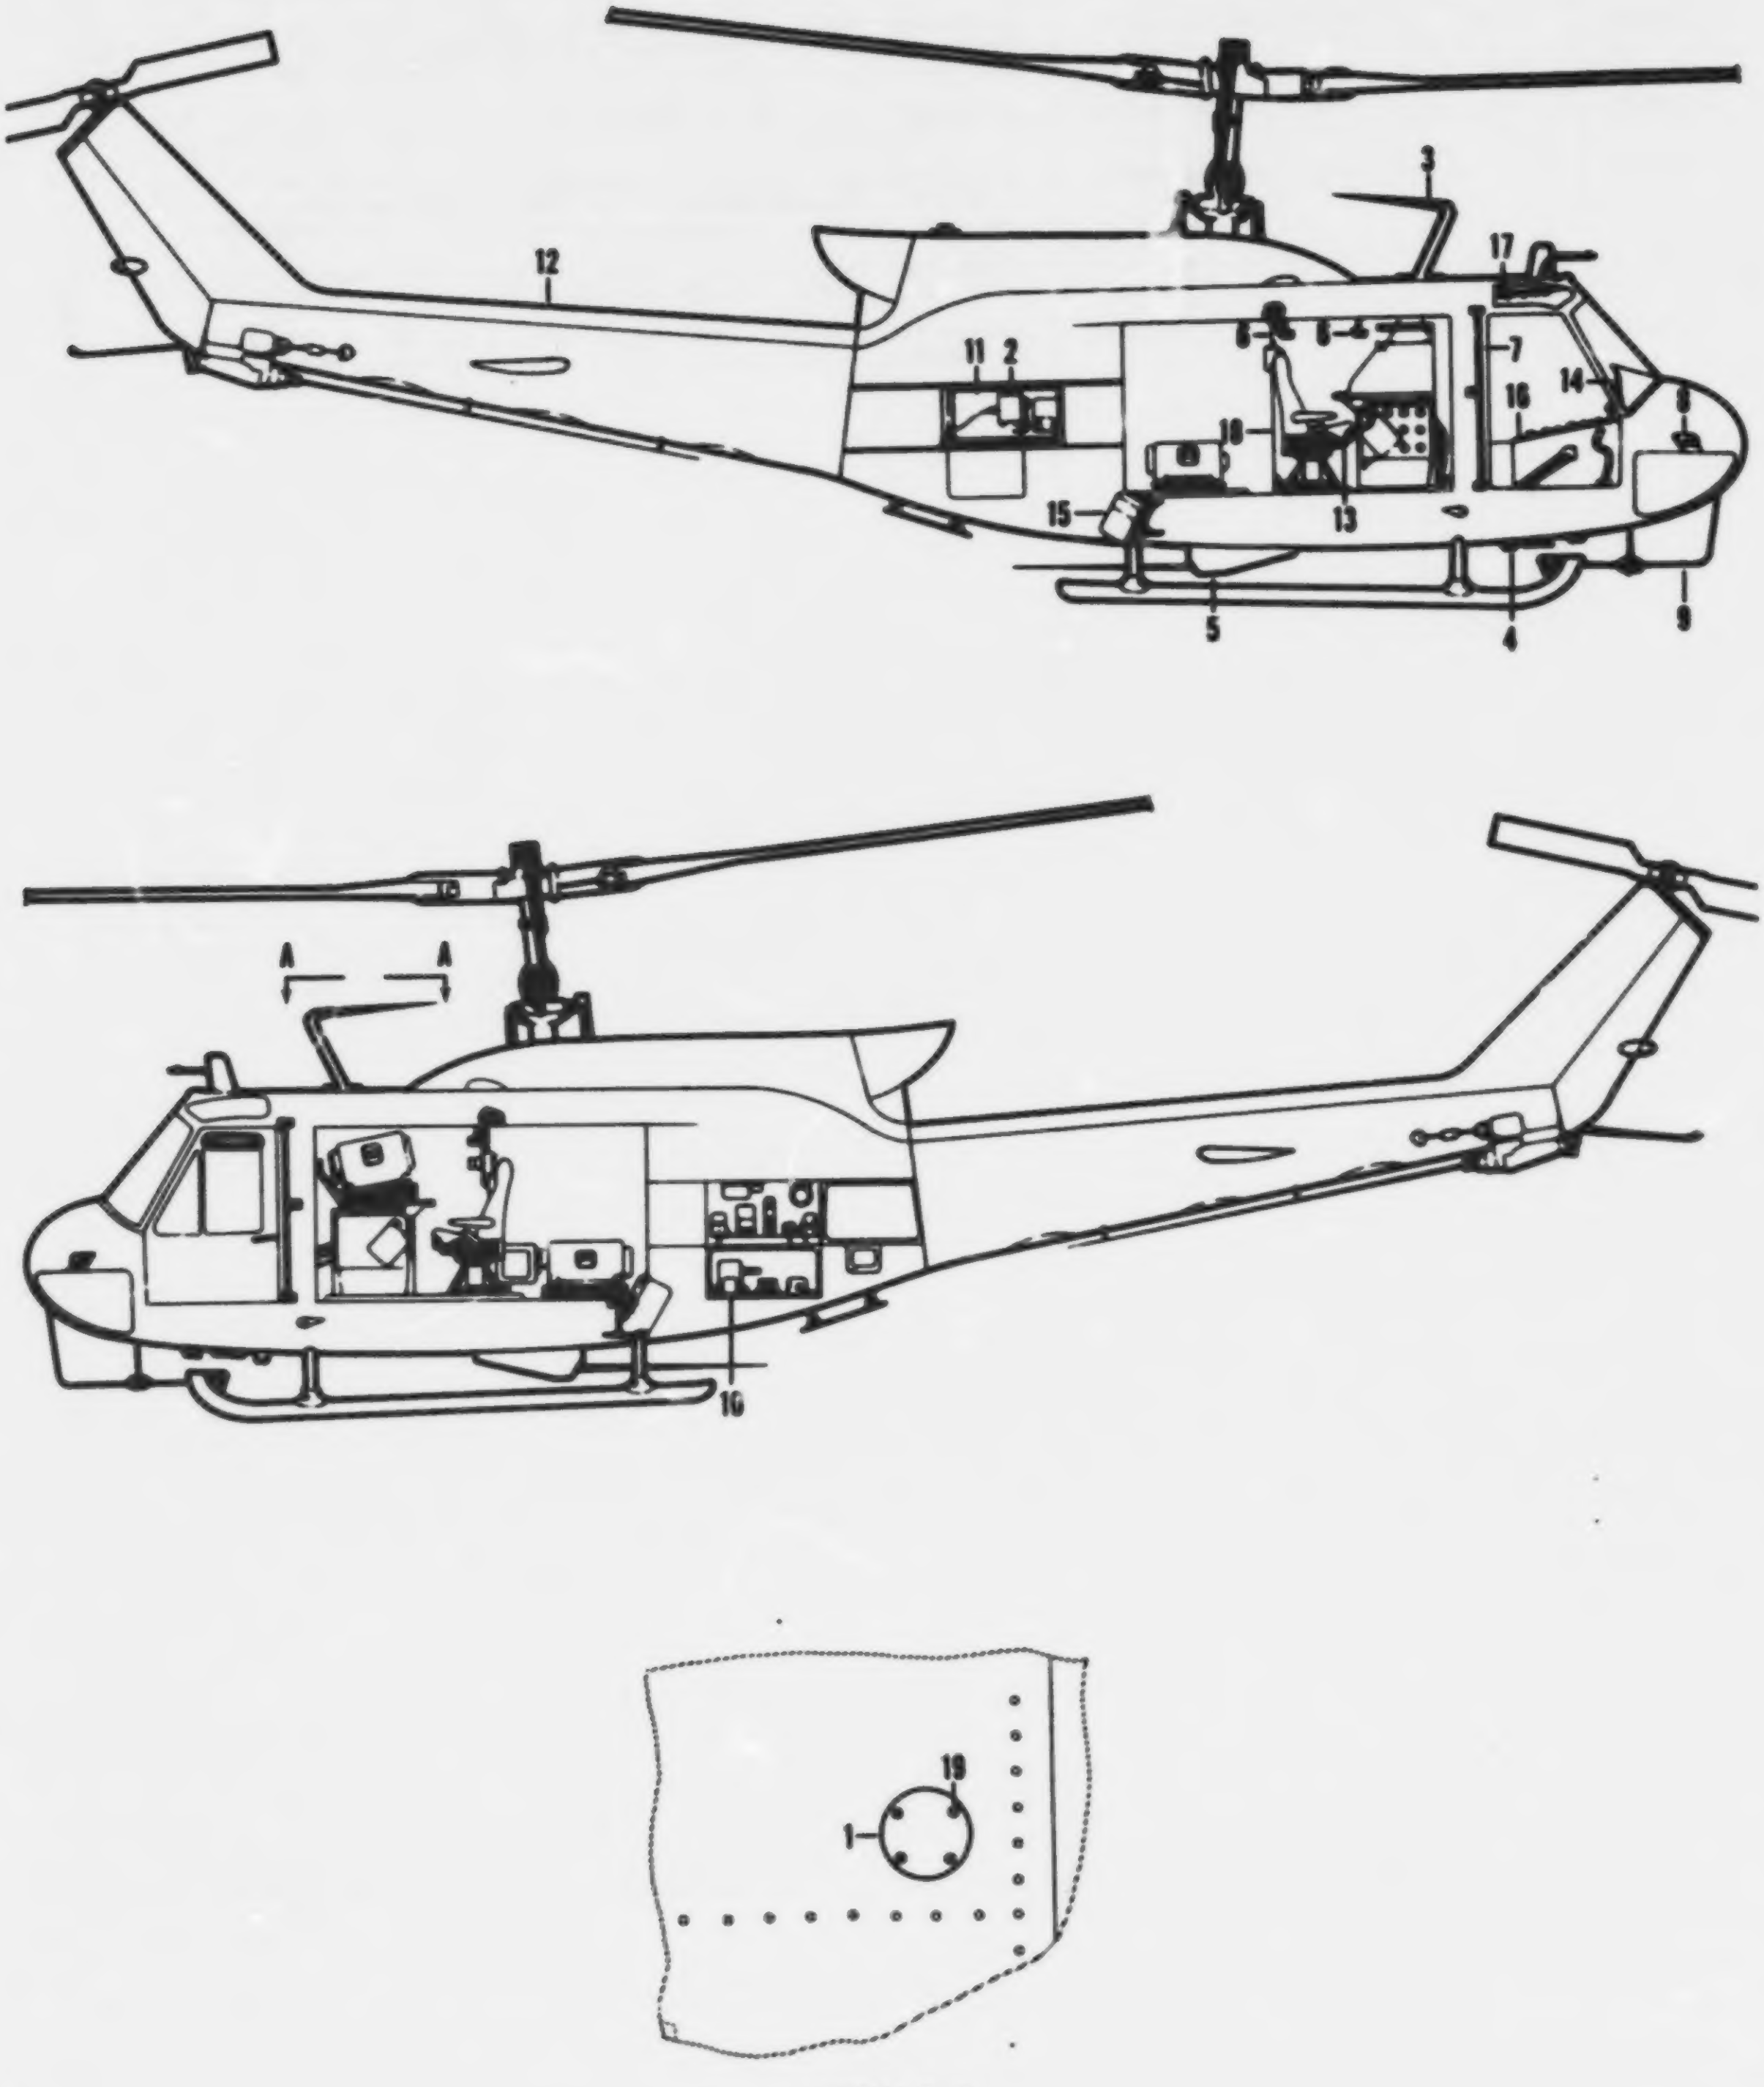
3
17
12
11
2
6
6
7
14
16
8
10
15
13
5
4
9
A
A
18
19
1

VIEW A-A

Figure 5A. Quick Fix 1B Helicopter, AN/ARQ-33A

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
5A		XCFZZ		20309	ES-F-271100-1	HELICOPTER,QUICK FIX,AN/ARQ-33A............UHE	EA	1
5A	1	MFOZZ		20309	ES-B-213075	.COVER,AS-1922/ARC ANTENNA REPLACEMENT SEE FIG.31 FOR BREAKDOWN............UHE	EA	1
5A	2	XCFZZ		20309	ES-F-212922	.INVERTER SHELF SEE FIG.67 FOR BREAKDOWN............UHE	EA	1
5A	3	XCFZZ		20309	ES-F-212986	.ANTENNA INSTALLATIO VHF FM SEE FIG.31 FOR BREAKDOWN....UHE	EA	1
5A	4	XCFZZ		20309	ES-D-220111	.ANTENNA INSTALLATIO AS-2890/APR-39V SEE FIG.64 FOR BREAKDOWN............UHE	EA	1
5A	5	XCFZZ		20309	ES-F-220144	.ANTENNA GROUP,OE-21 ARQ-33 INSTL SEE FIG.65 FOR BREAKDOWN ....UHE	EA	1
5A	6	XCFZZ		20309	ES-F-220165	.CREW LIGHT INSTL SEE FIG.226A FOR BREAKDOWN............UHE	EA	1
5A	7	XCFZZ		20309	ES-F-220227-1	.ANTENNA INSTALLATI AN/ARC-131 HOMING SEE FIG.67 FOR BREAKDOWN............UHE	EA	1
5A	8	XCFZZ		20309	ES-F-220294	.ANTENNA AND RECEIVE INSTL,APR-39 SEE FIG.67A FOR BREAKDOWN ....UHE	EA	1
5A	9	XCFZZ		20309	ES-F-220377	.ANTENNA INSTALLATIO FM10-242 SEE FIG.67A FOR BREAKDOWN ....UHE	EA	1
5A	10	XCFZZ		20309	ES-F-220379	.RADIO SHELF AND EQUIPMENT INSTL SEE FIG.68 FOR BREAKDOWN ....UHE	EA	1
5A	11	XCFZZ		20309	ES-F-221368	.RADIO COMPARTMENT EQUIPMENT INSTL SEE FIG.67 FOR BREAKDOWN ....UHE	EA	1
5A	12	XCFZZ		20309	ES-F-220395	.TAILBOOM INSTL SEE FIG.16A FOR BREAKDOWN............UHE	EA	1
5A	13	XCFZZ		20309	ES-F-220442	.CREW SEAT INSTALLAT SEE FIG.42A FOR BREAKDOWN............UHE	EA	1
5A	14	XCFZZ		20309	ES-F-220443	.INSTRUMENT PANEL INSTL SEE FIG.218 FOR BREAKDOWN.......UHE	EA	1
5A		XCFZZ		20309	ES-F-221400	.ELECTRICAL INSTALLA AC POWER SEE FIG.246D FOR BREAKDOWN ....UHE	EA	1
5A	15	XCFZZ		20309	ES-F-221169-1	.XM-130 CHAFF/FLARE INSTL SEE FIG.246C FOR BREAKDOWN....UHE	EA	1
5A	16	MOOZZ		20309	ES-F-221395	.PANEL,MASTER CAUTIO SEE FIG.233 FOR BREAKDOWN............UHE	EA	1
5A	17	XCFZZ		20309	ES-F-221240	.CONSOLE,OVERHEAD INSTL SEE FIG.246B FOR BREAKDOWN......UHE	EA	1
5A	18	XCFZZ		20309	ES-F-221241	.CABIN AREA MISCELLA ITEMS INSTL SEE FIG.429A FOR BREAKDOWN ....UHE	EA	1
5A	19	PAOZZ	5305-00-957-7811	96906	MS24693S272	.SCREW,MACHINE............UHE	EA	8

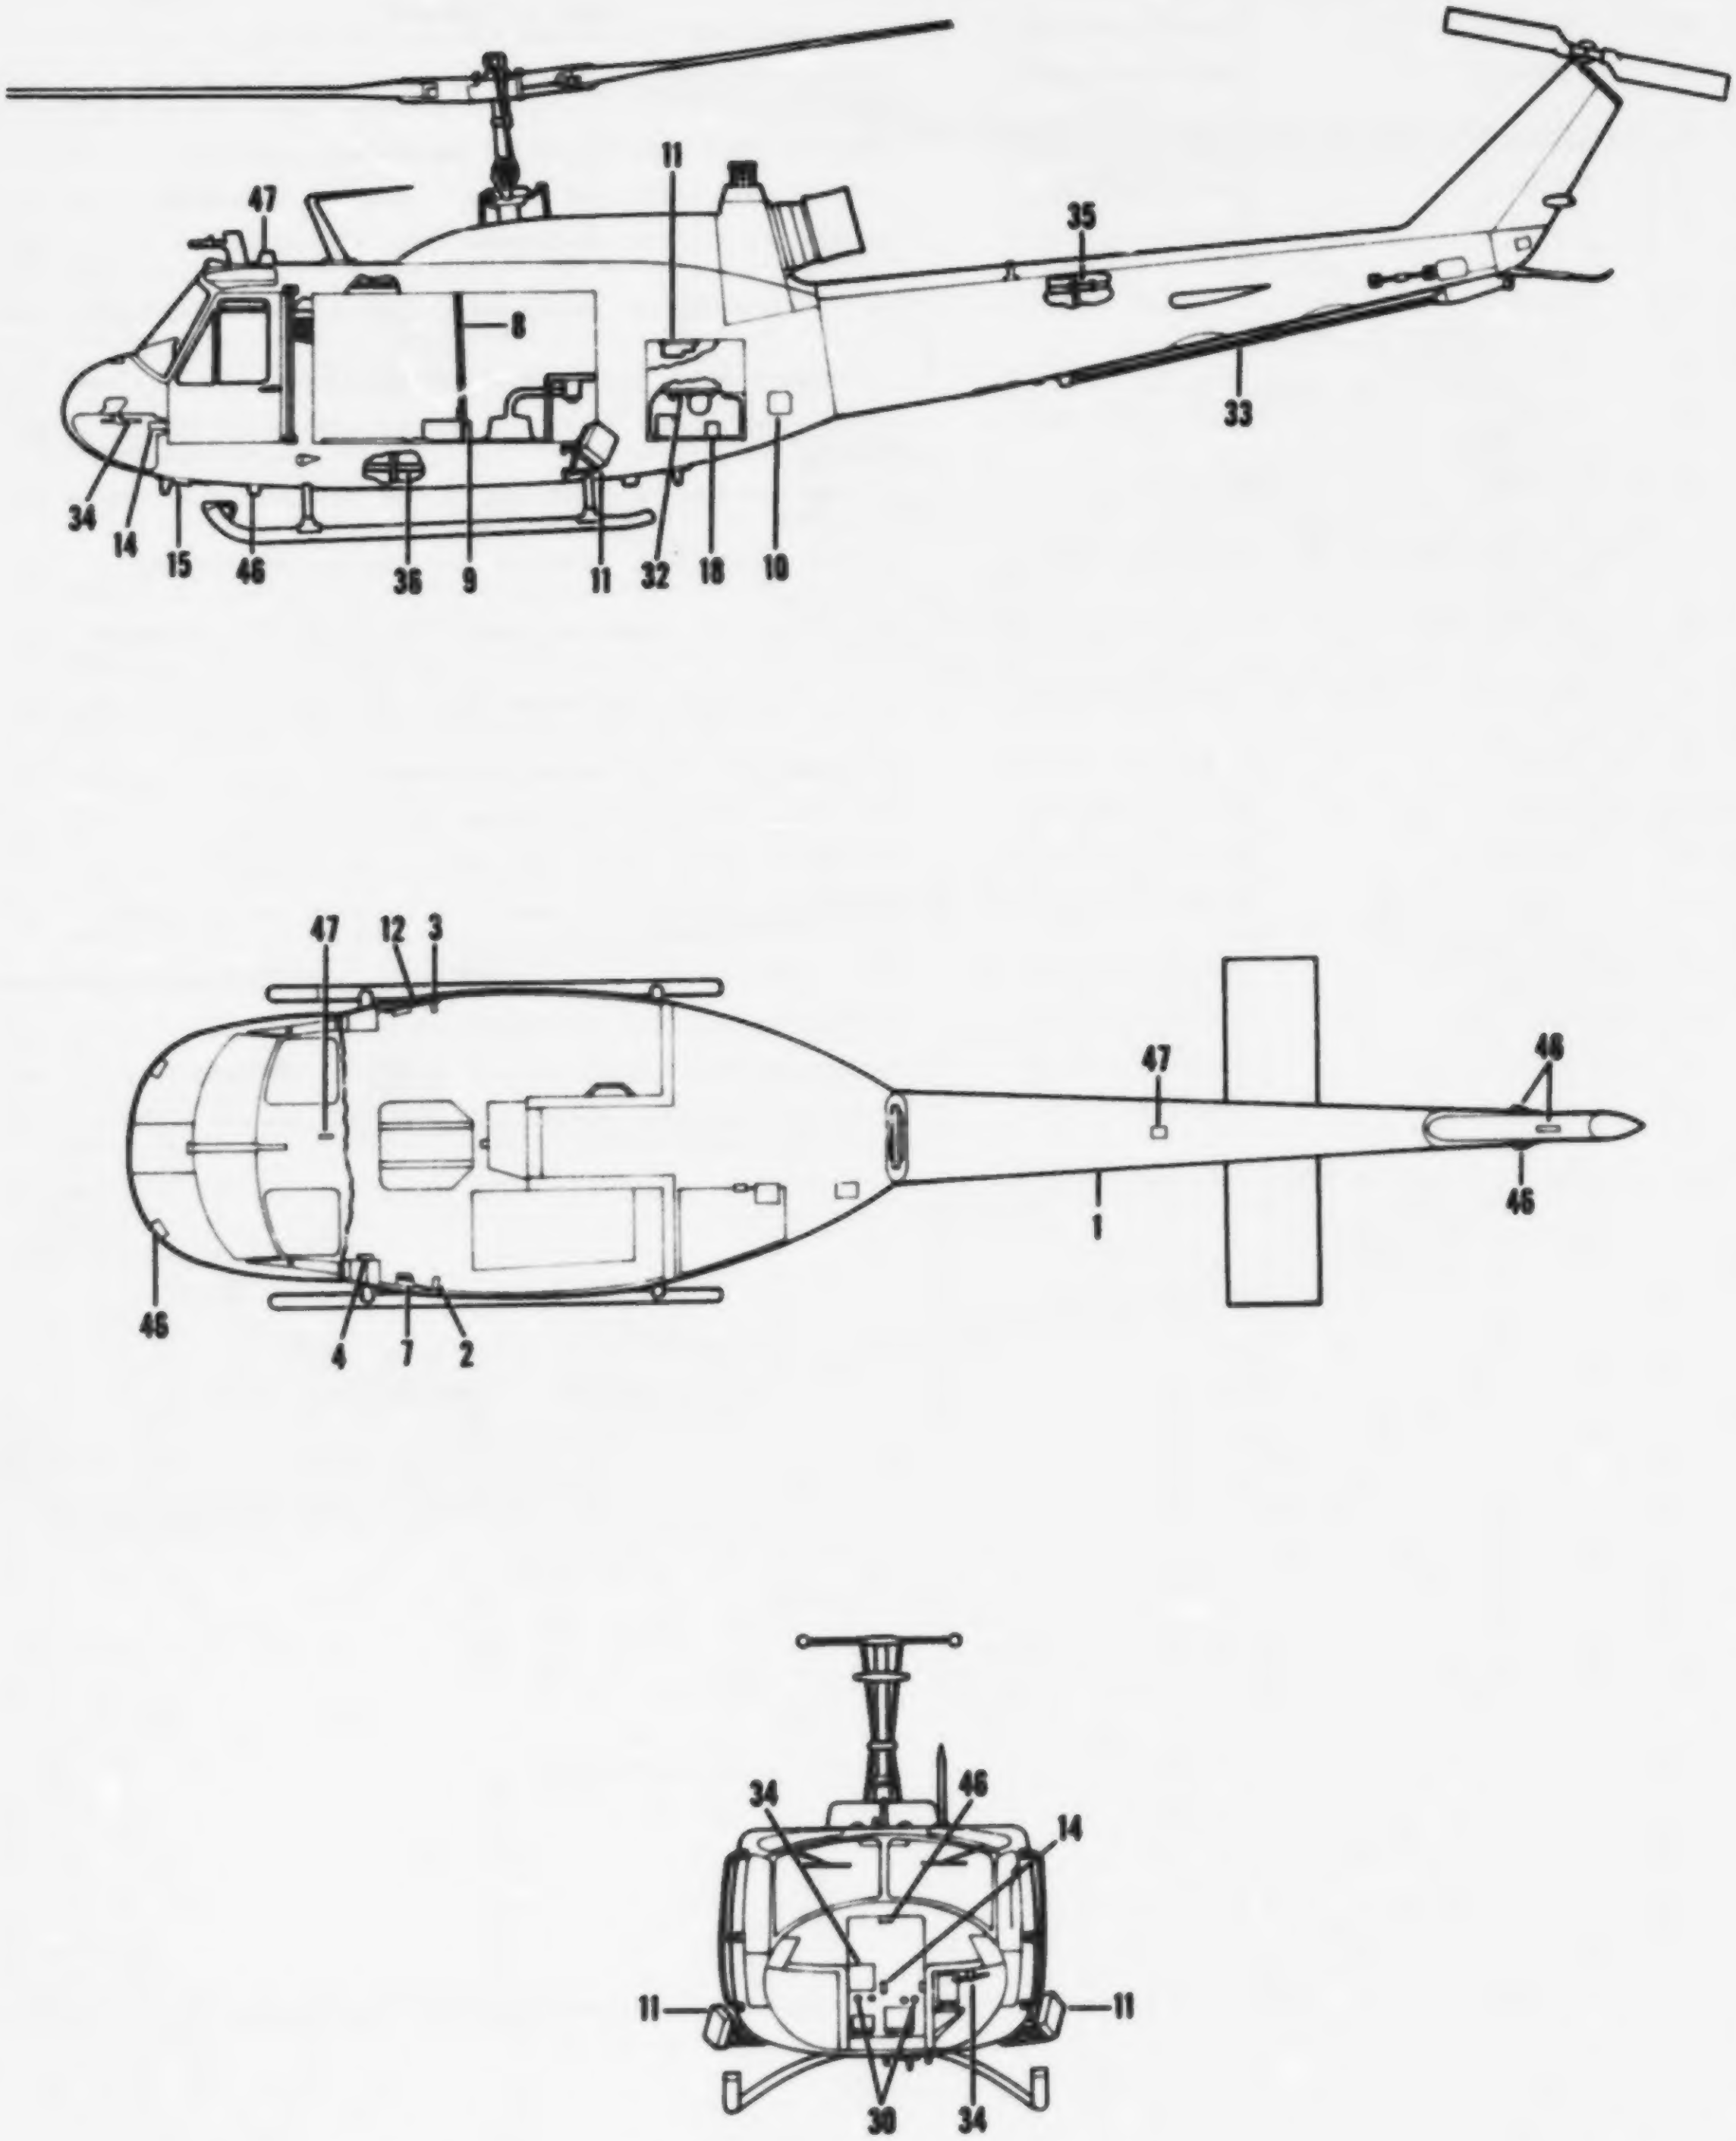
11
47
8
35
33
34
14
15
46
36
9
11
32
18
10
47
12
3
47
46
46
1
46
4
7
2
34
46
14
11
11
30
34

Figure 5B. Quick Fix EH-1X Helicopter (Sheet 1 of 2)

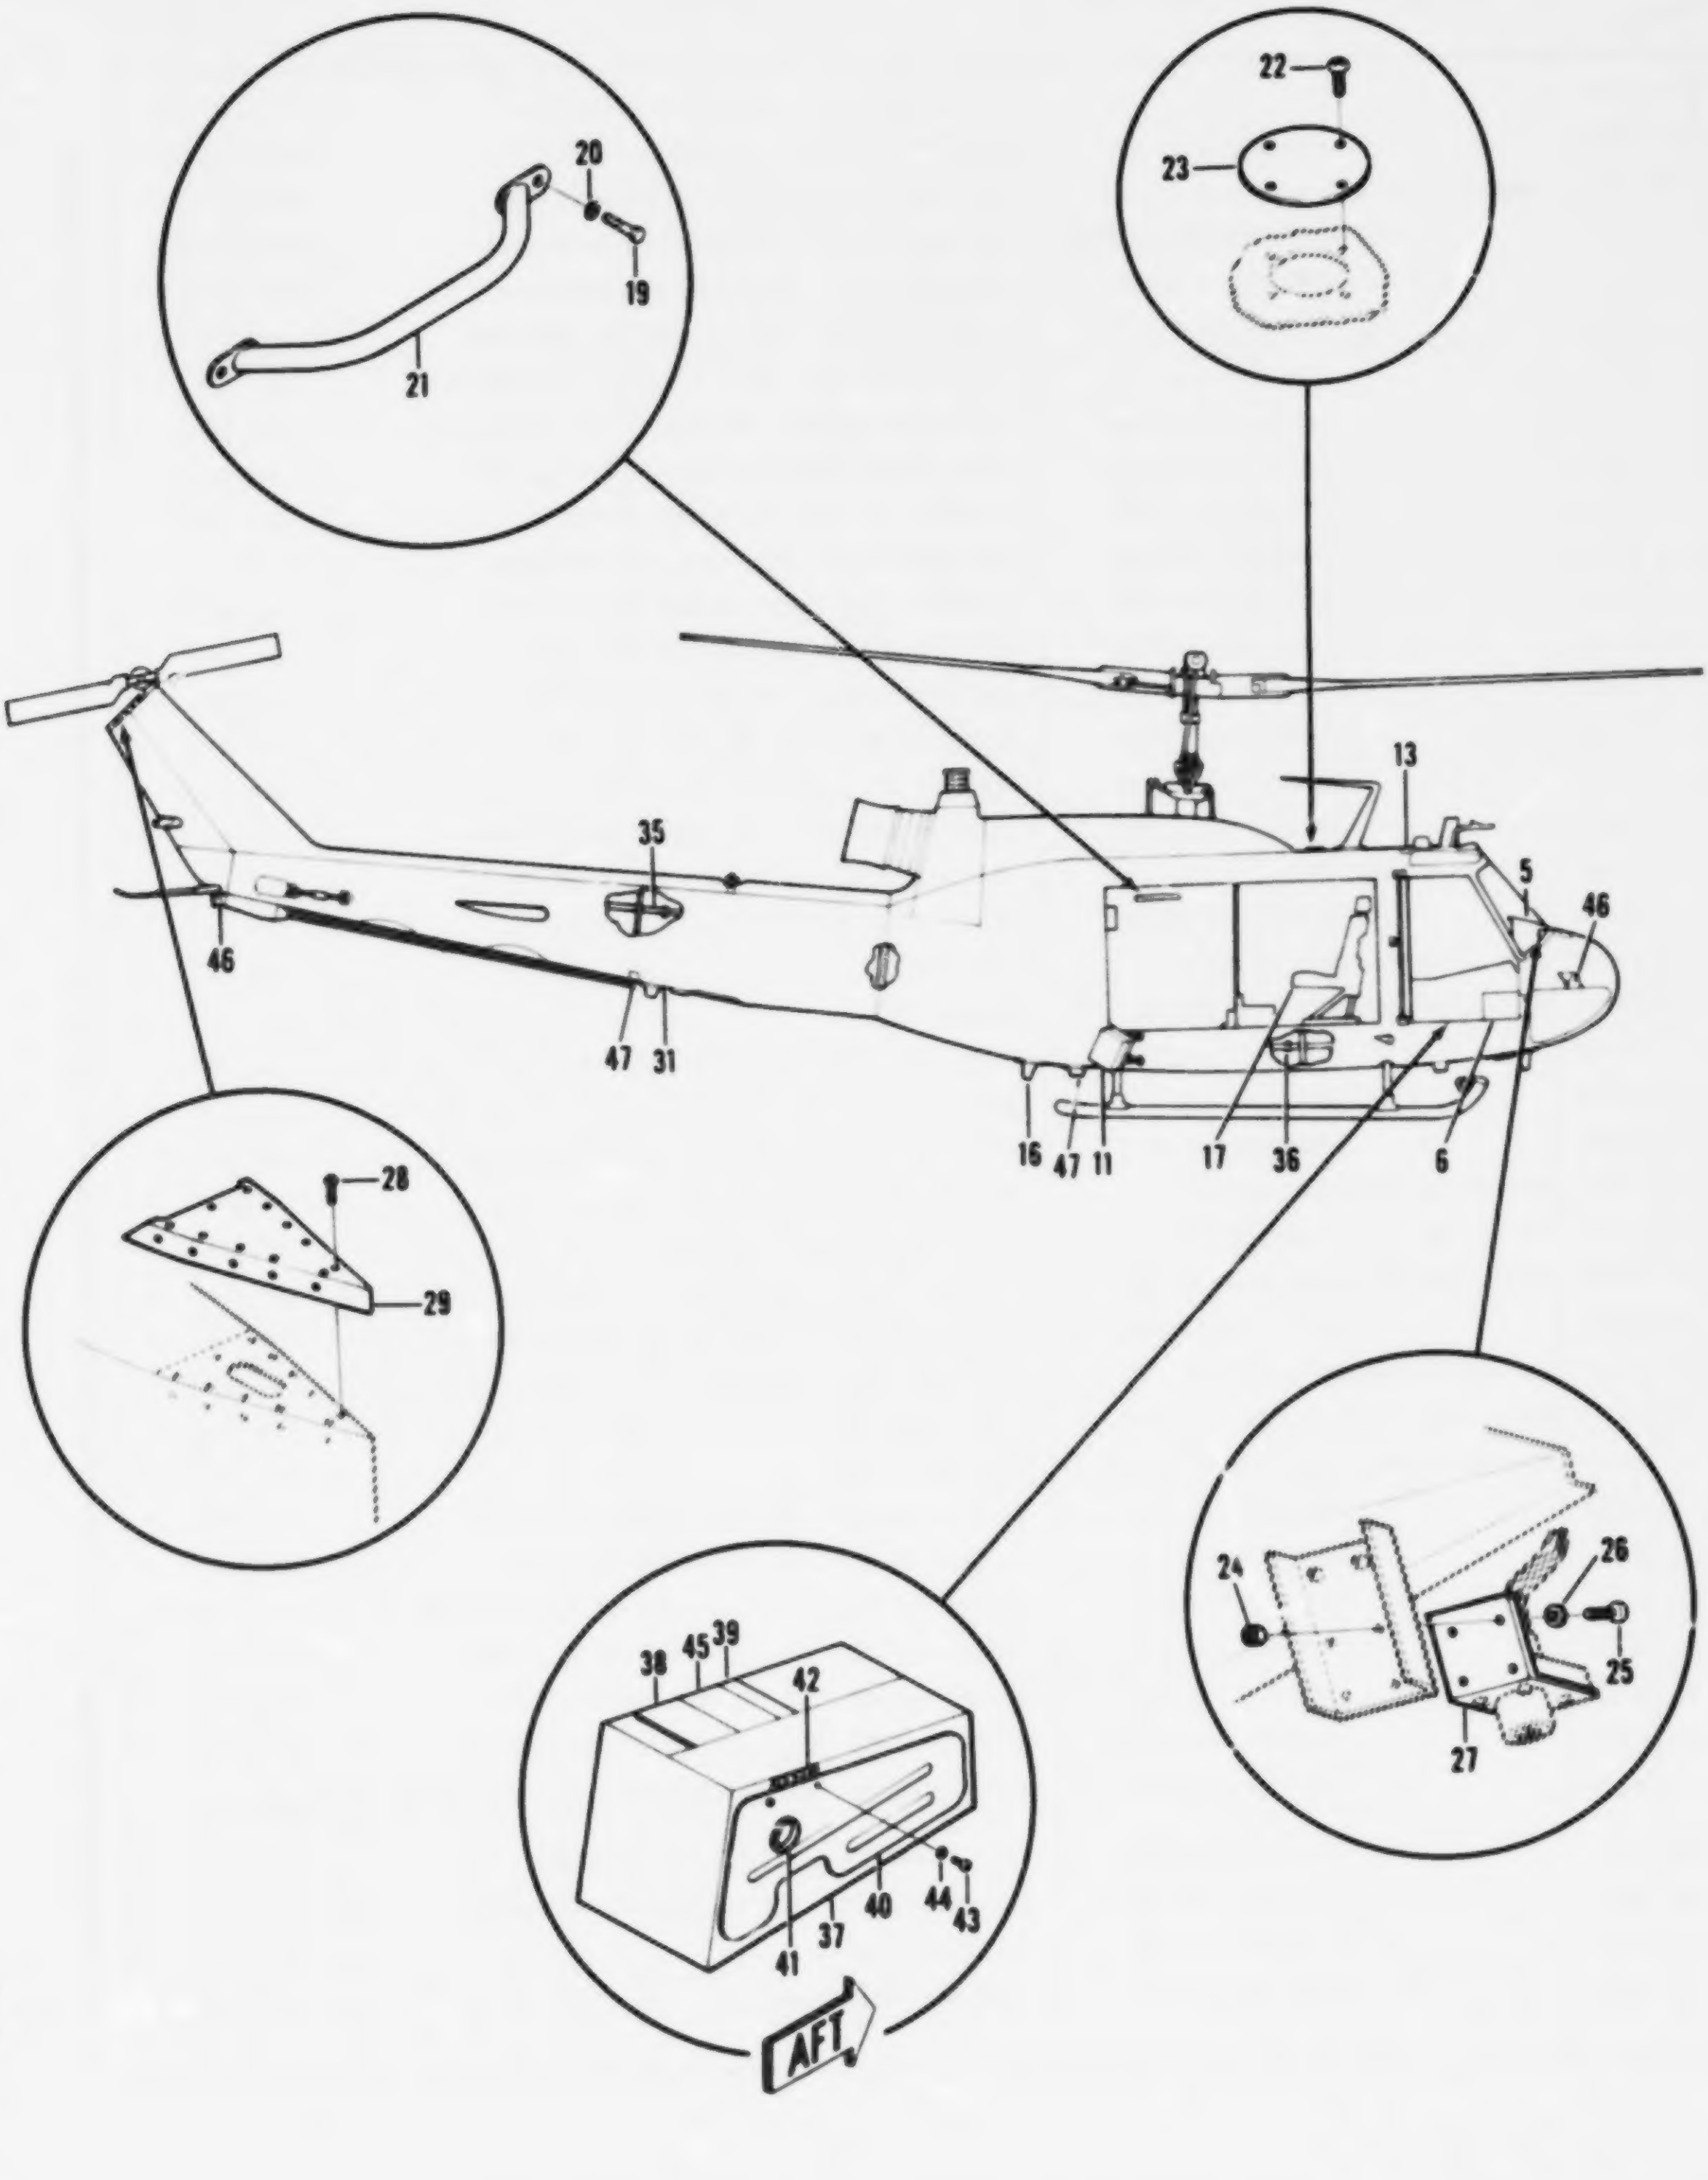
20
19
21
22
23
13
35
5
46
46
47
31
16
47
11
17
36
6
28
29
24
26
25
27
38
45
39
42
44
43
40
37
41
AFT

Figure 5B. Quick Fix EH-1X Helicopter (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
5B		XCFZZ		20309	ES-F-221300	HELICOPTER ASSY	UHX	EA	1
5B	1	PAODD	1560-01-150-1486	20309	ES-F-221549	.TAILBOOM ASSY SEE FIG.16F FOR BREAKDOWN	UHX	EA	1
5B	2	XCFZZ		20309	ES-D-221776-101	.AUX DOOR HANDLE SEE FIG.46 FOR BREAKDOWN	UHX	EA	1
5B	3	XCFZZ		20309	ES-D-221776-102	.AUXILIARY DOOR SEE FIG.46 FOR BREAKDOWN	UHX	EA	1
5B	4	XCFZZ		20309	ES-F-221710	.FLARE AND CHAFF SEE FIG.429B FOR BREAKDOWN	UHX	EA	1
5B	5	XCFZZ		20308	ES-J-221282	.INSTR PANEL ASSY SEE FIG.216-218 FOR BREAKDOWN	UHX	EA	1
5B	6	XCFZZ		20309	ES-F-221681	.AC CURCUIT BREAKER SEE FIG.226 FOR BREAKDOWN	UHX	EA	1
5B	7	XCFZZ		20309	ES-F-221717	.FIRE EXTINGUISHER SEE FIG.438 FOR BREAKDOWN	UHX	EA	1
5B	8	MFOZZ		20309	ES-F-221752	.BLANKET ASSY SEE FIG.44 FOR BREAKDOWN	UHX	EA	1
5B	9	XCFZZ		20309	ES-F-221664	.CONNECTOR PANEL SEE FIG.69 FOR BREAKDOWN	UHX	EA	1
5B	10	XCFZZ		20309	ES-F-221400	.AC POWER INSTL SEE FIG.246D FOR BREAKDOWN	UHX	EA	1
5B	12	XCFZZ		20309	ES-F-221716	.RACK,RIFLE M16 SEE FIG.429B FOR BREAKDOWN	UHX	EA	1
5B	13	XCFZZ		20309	ES-F-221506	.OVERHEAD CONSOLE SEE FIG.246A FOR BREAKDOWN	UHX	EA	1
5B	14	XCFZZ		20309	ES-D-221534	.5 VOLT POWER INSTL SEE FIG.290E FOR BREAKDOWN	UHX	EA	1
5B	15	XCFZZ		20309	ES-D-221674	.COMM ANT MTG INSLT SEE FIG.64 FOR BREAKDOWN	UHX	EA	1
5B	16	XCFZZ		20309	ES-D-221675	.COMM ANT MTG INSTL SEE FIG.65 FOR BREAKDOWN	UHX	EA	1
5B	17	PAOOO	1680-01-166-9682	09986	AL-1021-8	.SEAT,AIRCRAFT SEE FIG.36A FOR BREAKDOWN	UHX	EA	1
5B	18	XCFZZ		20309	ES-F-221292	.RADIO,INSTL SEE FIG.36A FOR BREAKDOWN	UHX	EA	1
5B	19	PAOZZ	5306-00-150-9104	88044	AN5-5A	.BOLT,MACHINE	UHX	EA	2
5B	20	PAOZZ	5310-00-167-0803	88044	AN960C516	.WASHER,FLAT	UHX	EA	2
5B	21	XDOZZ		20309	ES-C-221642	.HANDLE,BOW SEE FIG.71 FOR BREAKDOWN	UHX	EA	1
5B	22	PAOZZ		96906	MS24693-272	.SCREW,MACHINE	UHX	EA	8
5B	23	MFOZZ		20309	ES-B-213075	.COVER,AS-1922/ARC SEE FIG.31 FOR BREAKDOWN	UHE	EA	1
5B	24	PAOZZ	5310-00-982-4999	96906	MS21044C04	.NUT,SELF-LOCKING,HE	UHX	EA	4
5B	25	PAOZZ	5305-00-057-0512	96906	MS51958-15	.SCREW,MACHINE	UHX	EA	4
5B	26	PAOZZ	5310-00-595-6211	96906	MS15795-803	.WASHER,FLAT	UHX	EA	4
5B	27	MFOZZ		20309	ES-C-221709	.SUPPORT,CONNECTOR SEE FIG.22 FOR BREAKDOWN	UHX	EA	1
5B	28	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	.SCREW,MACHINE	UHX	EA	11
5B	29	PBOZZ	1560-01-074-5348	20309	ES-D-213078	.COVER,REPLACEMENT,A	UHX	EA	1
5B	30	PAOZZ	5325-00-276-4931	96906	MS27980-18N	.STUD,SNAP FASTEN	UHX	EA	4
5B	31	XCFZZ		20309	ES-F-221671	.BITE ANTENNA MTG SEE FIG.16F FOR BREAKDOWN	UHX	EA	1
5B	32	XCFZZ		20309	ES-D-221640	.CIRCUIT BREAKER SEE FIG.68 FOR BREAKDOWN	UHX	EA	1
5B	33	XCFZZ		20309	ES-D-221551	.AN/TLQ-17A INSTL. SEE FIG.16A,16B FOR BREAKDOWN	UHX	EA	1
5B	34	XCFZZ		20309	ES-D-221531	.AN/ARN-123 INSTL SEE FIG.290A FOR BREAKDOWN	UHX	EA	1
5B	35	XCFZZ		20309	ES-F-221291	.WIRING HARNESS SEE FIG.290F FOR BREAKDOWN	UHX	EA	1
5B	36	XCFZZ		20309	ES-F-221290	.WIRING HARNESS SEE FIG.226B FOR BREAKDOWN	UHX	EA	1
5B	37	XCFZZ		20309	ES-F-221281	.PEDESTAL INSTL, PILOT AND COPILOT SEE FIG.212 FOR BREAKDOWN	UHX	EA	1
5B	38	MFOZZ		20309	ES-C-221540	.PANEL,MASTER SEE FIG.234 FOR BREAKDOWN	UHX	EA	1
5B	39	XDOOO		20309	ES-D-221176	.CONTROL BOX ASSY SEE FIG.246C FOR BREAKDOWN	UHX	EA	1
5B	40	PBOOO		20309	ES-F-221663	..BRACKET,ASSEMBLY	UHX	EA	1
5B	41	PAOZZ		96906	MS21266-1N	...GROMMET,NONMETALLIC	UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
5B	42	MFOZZ		20309	ES-B-221566	..SPACER..........UHX	EA	1
5B	43	PAOZZ		96906	MS51958-66	..SCREW,MACHINE..........UHX	EA	2
5B	44	PAOZZ		96906	MS27183-8	..WASHER,FLAT..........UHX	EA	2
5B	45	AOOOO		20309	ES-C-221542	.PANEL ASSEMBLY SEE FIG.263 FOR BREAKDOWN..........UHX	EA	1
5B	46	XCFZZ		20309	ES-F-221280	.RADAR WARNING SET INSTL, AN/APR-39(V) SEE FIG.67A FOR BREAKDOWN..........UHX	EA	1
5B	47	XCFZZ		20309	ES-F-213930	.AN/ASN-86 AN/ARN103 SEE FIG.224A FOR BREAKDOWN..........UHX	EA	1

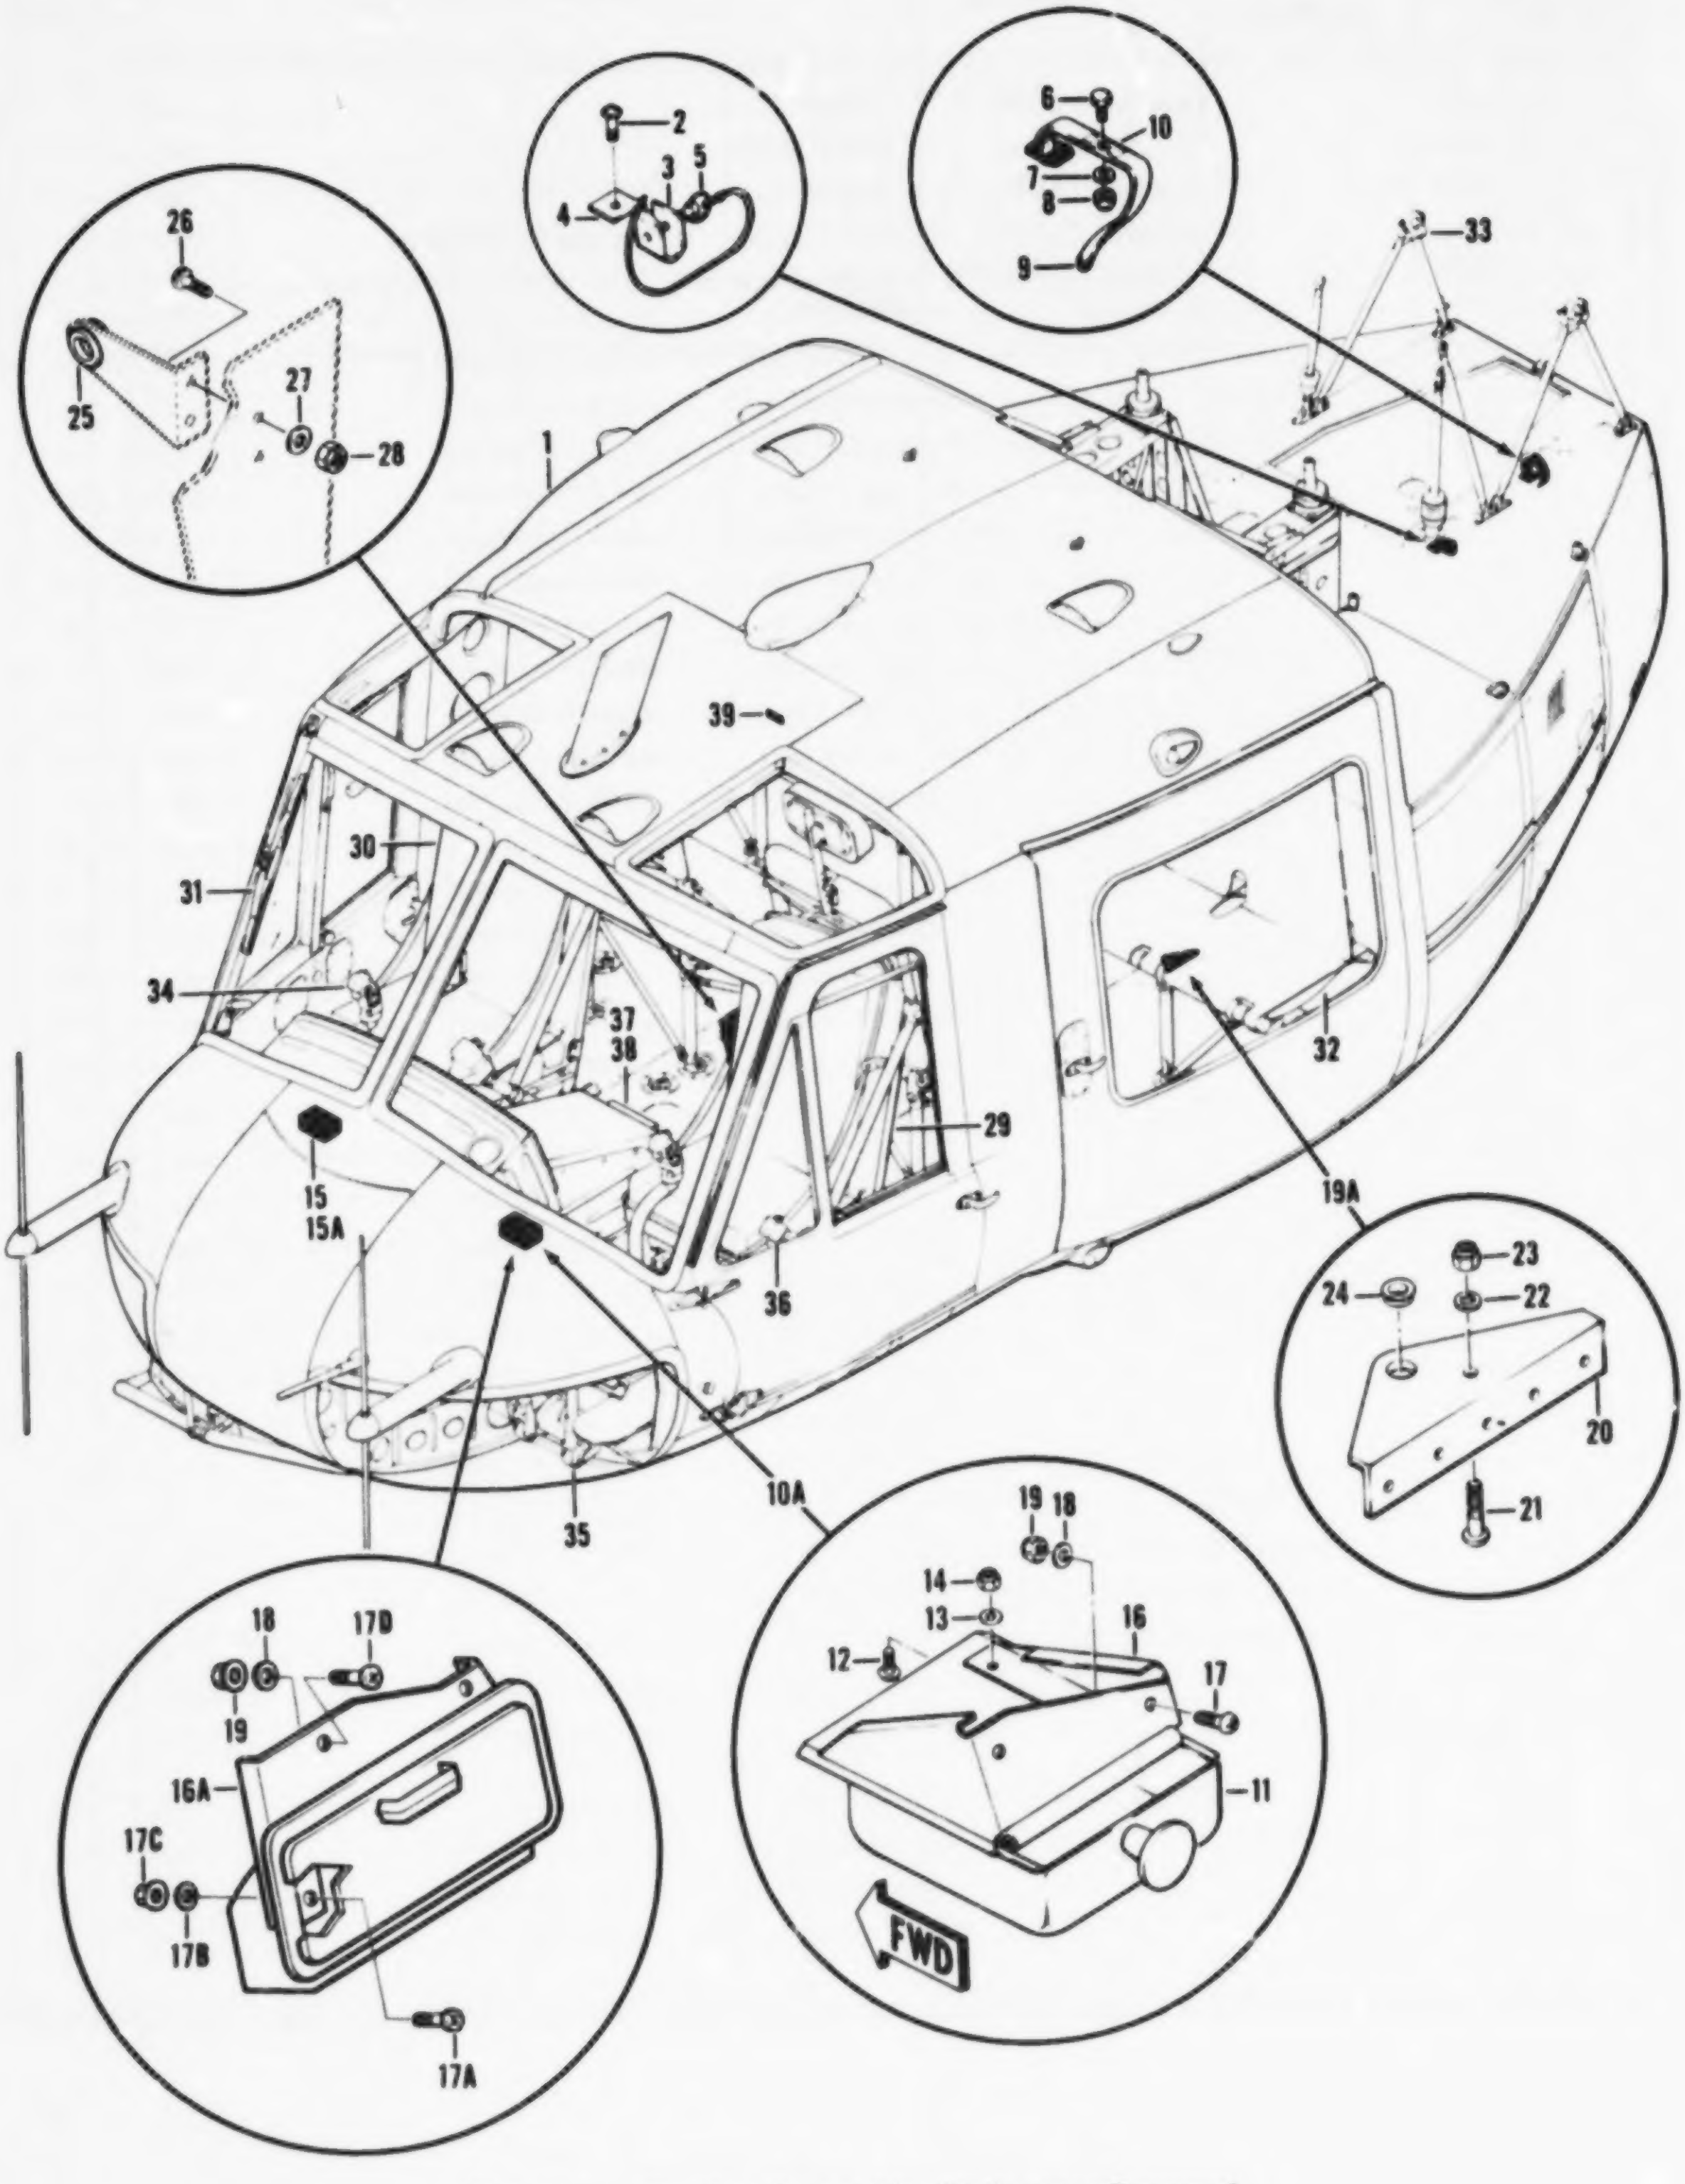
26
25
27
28
2
3
5
4
6
10
7
8
9
33
1
39
30
31
34
37
38
29
32
15
15A
19A
36
23
24
22
20
21
10A
35
19
18
14
13
16
12
17
11
FWD
18
17D
19
16A
17C
17B
17A

Figure 6. Section Assembly, Helicopter Forward
(Sheet 1 of 2)

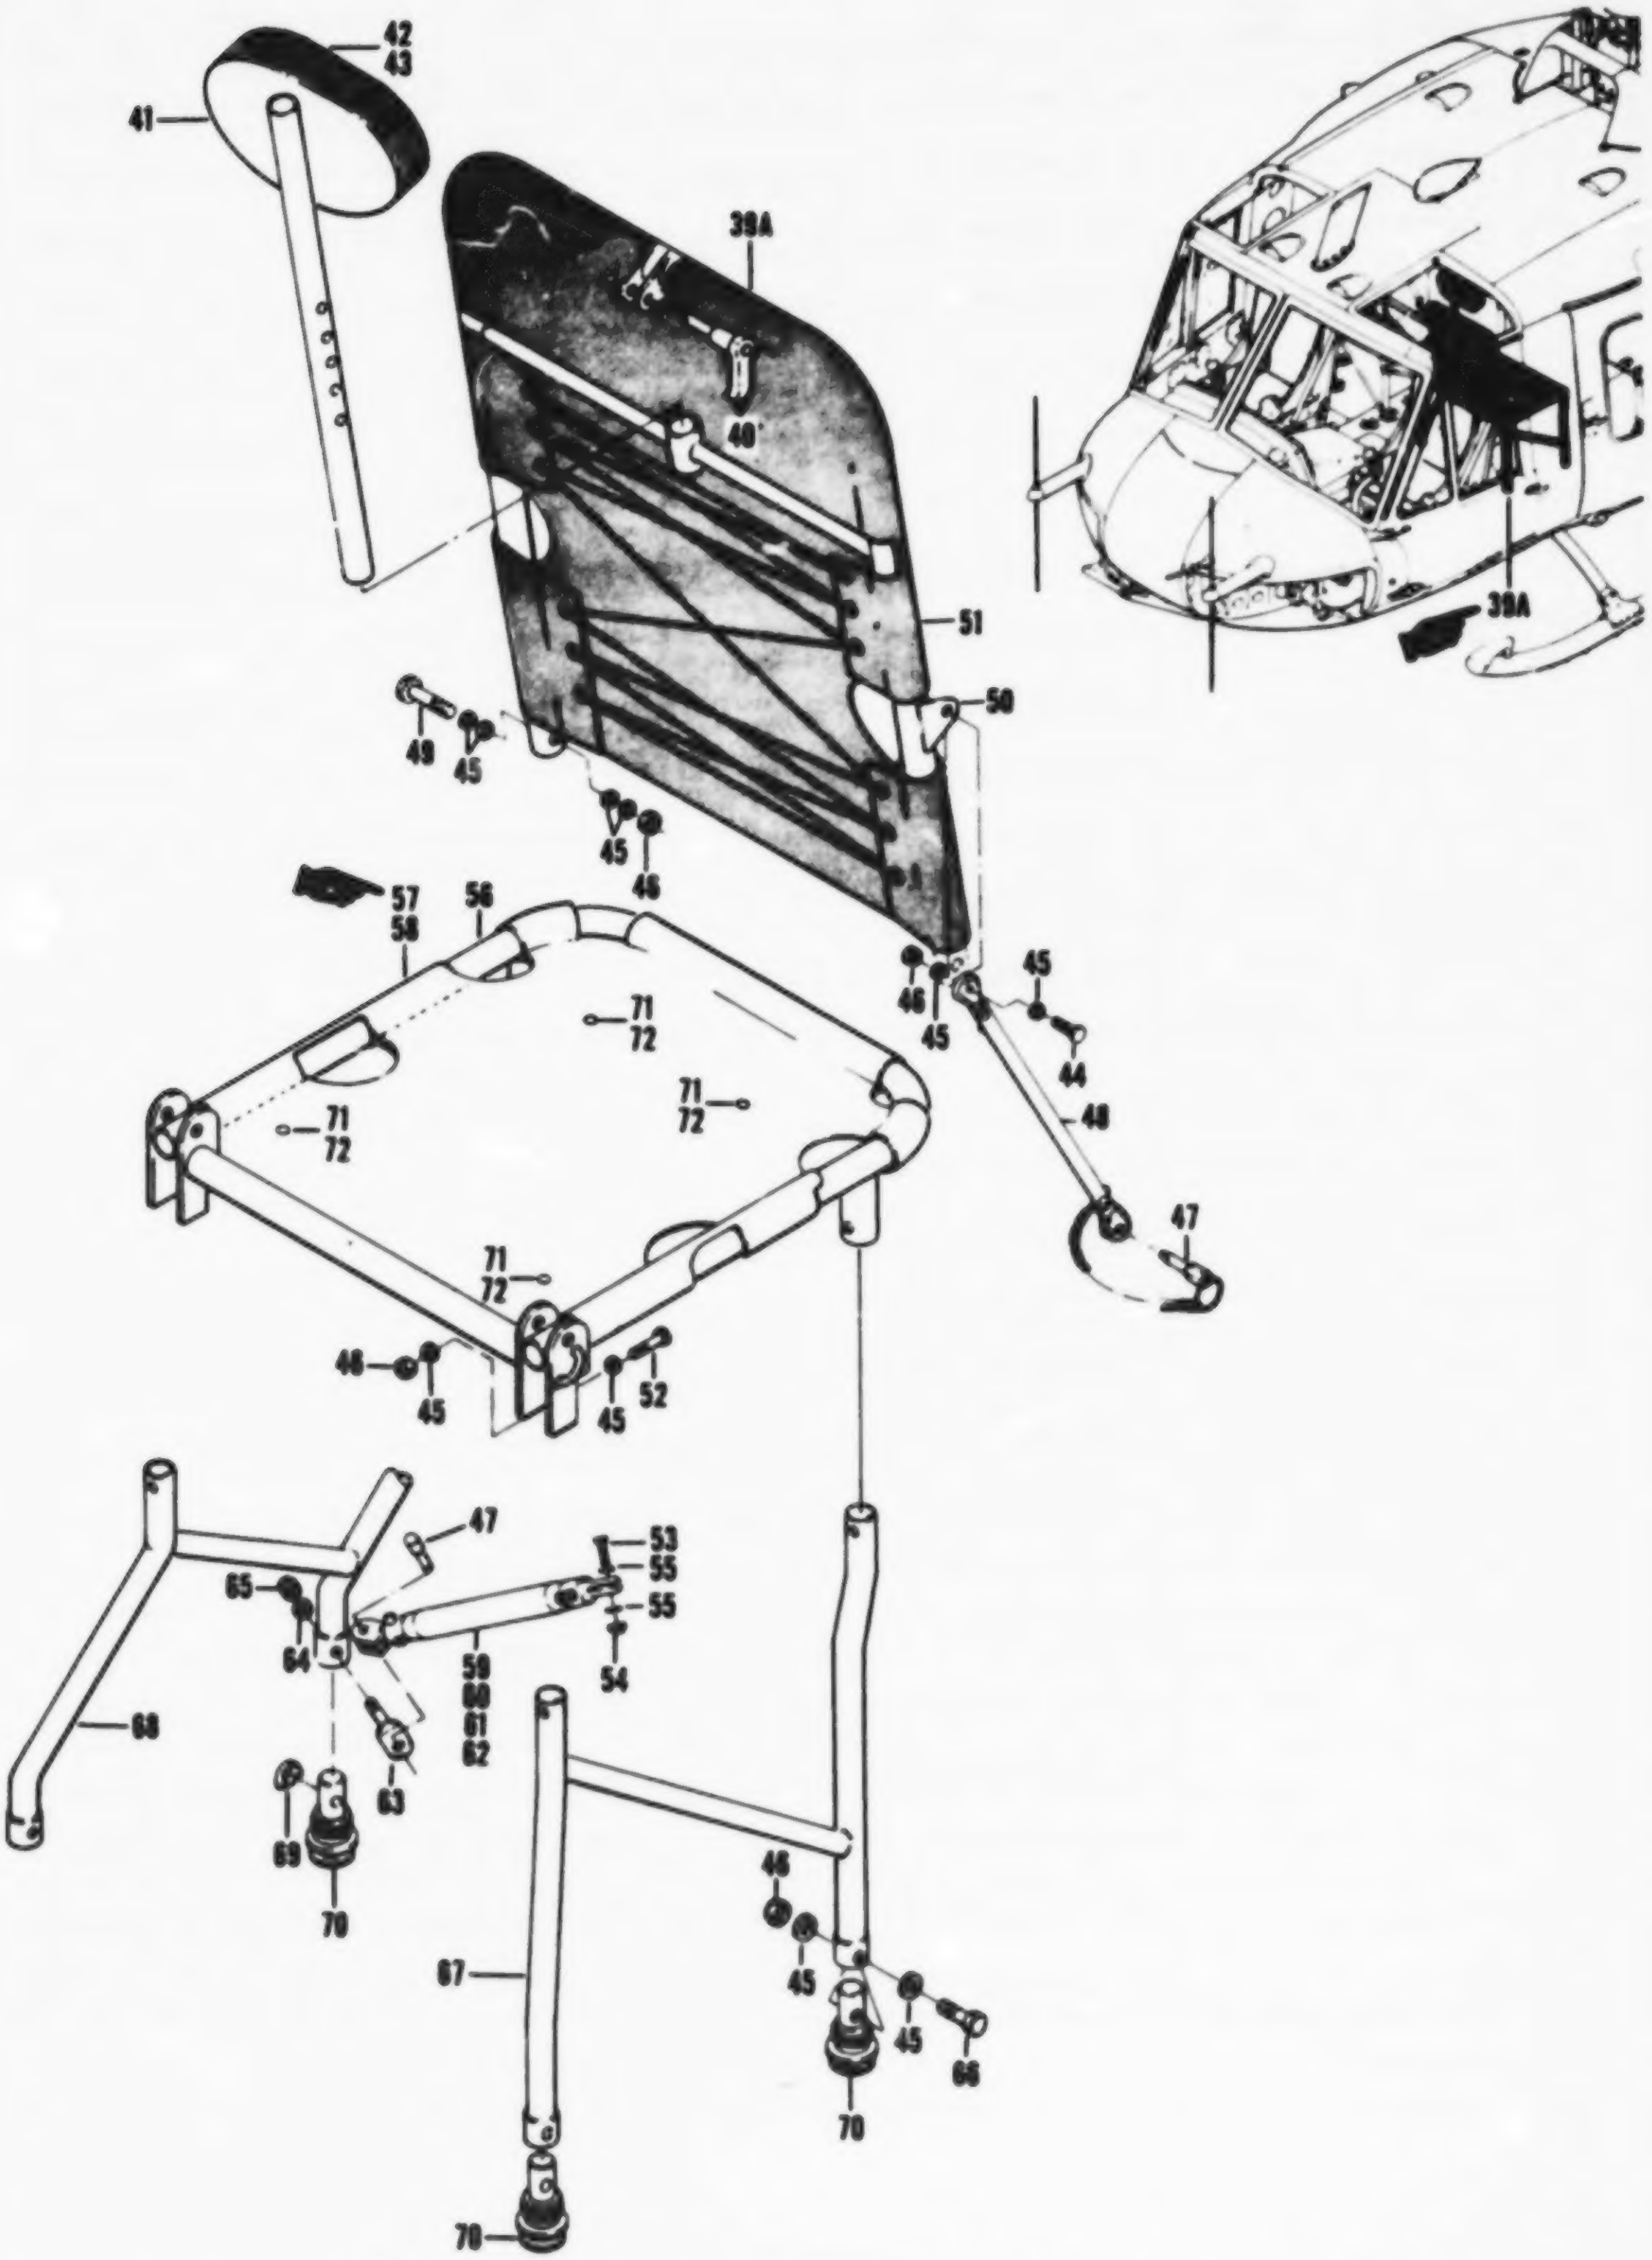
42
43
41
39A
40
51
50
49
45
45
46
57
58
56
71
72
71
72
71
72
46
45
45
44
48
47
71
72
46
45
45
52
47
53
55
55
65
64
59
60
61
62
54
68
63
69
70
46
45
67
45
66
70
70
39A

Figure 6. Section Assembly, Helicopter Forward (Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG NO	(1) (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
6		XCFZZ		97499	204-200-010-1	SECTION ASSY,ACFT FORWARD USBL EFF 60-3546 THRU 60-3590 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-3	SECTION ASSY,ACFT FORWARD USBL EFF 60-3591 THRU 60-3619 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-5	SECTION ASSY,ACFT FORWARD USBL EFF 61-686 THRU 61-719 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-7	SECTION ASSY,ACFT FORWARD USBL EFF 61-736 THRU 61-753 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-13	SECTION ASSY,ACFT FORWARD USBL EFF 61-720 THRU 61-723 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-17	SECTION ASSEMBLY,HE FORWARD USBL EFF 61-724 THRU 61-735 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-15	SECTION ASSY,ACFT FORWARD USBL EFF 61-754 THRU 61-803 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-11	SECTION ASSY,ACFT FORWARD USBL EFF 62-1972 THRU 62-1996 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-19	SECTION ASSY,ACFT FORWARD USBL EFF 62-1997 THRU 62-12555 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-23	SECTION ASSY,ACFT FORWARD USBL EFF 63-8500 THRU 63-8658 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-29	SECTION ASSY,ACFT FORWARD USBL EFF 63-8659 THRU 63-12952 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-35	SECTION ASSY,ACFT FORWARD USBL EFF 64-13902 THRU 64-14100 SEE FIG.4 FOR NHA..........	EA	1
6		XCFZZ		97499	204-200-010-39	SECTION ASSY,ACFT FORWARD USBL EFF 64-14101 THRU 64-14191 SEE FIG.4 FOR NHA.......... UHM	EA	1
6		XCFZZ		97499	204-200-010-41	SECTION ASSY,ACFT FORWARD USBL EFF 65-9416 THRU 65-12772 SEE FIG.4 FOR NHA.......... UHM	EA	1
6		XCFZZ		97499	204-200-010-47	SECTION ASSEMBLY,HE FORWARD USBL EFF 66-492 THRU 66-601 SEE FIG.4 FOR NHA.......... UHM	EA	1
6		XCFZZ		97499	204-200-010-49	SECTION ASSY,ACFT FORWARD USBL EFF 66-602 THRU 66-15022 SEE FIG.4 FOR NHA.......... UHM	EA	1
6		XCFZZ		97499	204-200-010-51	SECTION ASSY,ACFT FORWARD USBL EFF 66-15023 THRU 66-15105 SEE FIG.4 FOR NHA.......... UHM	EA	1
6		XCFZZ		97499	204-200-010-61	SECTION ASSY,ACFT FORWARD USBL EFF 66-15106 & SUBSEQUENT SEE FIG.4 FOR NHA.......... UHM	EA	1
6	1	XCFZZ		97499	204-030-008-15	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-1 SEE FIG.19 FOR BREAKDOWN..........	EA	1
6	1	XCFZZ		97499	204-030-008-21	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-3 SEE FIG.19 FOR BREAKDOWN..........	EA	1
6	1	XCFZZ		97499	204-030-008-23	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-5 & -13 SEE FIG.19 FOR BREAKDOWN..........	EA	1
6	1	XCFZZ		97499	204-030-008-27	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-7 & -17 SEE FIG.19 FOR BREAKDOWN..........	EA	1
6	1	XCFZZ		97499	204-030-008-35	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-15 SEE FIG.19 FOR BREAKDOWN..........	EA	1
6	1	XCFZZ		97499	204-030-008-29	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-11 SEE FIG.19 FOR BREAKDOWN..........	EA	1
6	1	XCFZZ		97499	204-030-008-41	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-19 SEE FIG.19 FOR BREAKDOWN..........	EA	1
6	1	XCFZZ		97499	204-031-003-1	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-23 SEE FIG.19 FOR BREAKDOWN..........	EA	1
6	1	XCFZZ		97499	204-031-003-7	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-29 SEE FIG.19 FOR BREAKDOWN..........	EA	1
6	1	XCFZZ		97499	204-031-003-19	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-35 SEE FIG.19 FOR BREAKDOWN..........	EA	1
6	1	XCFZZ		97499	204-031-003-35	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-39 SEE FIG.19	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
						FOR BREAKDOWN.......................................	UHM		
6	1	XCFZZ		97499	204-032-003-1	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-41 SEE FIG.19 FOR BREAKDOWN.......................................	UHM	EA	1
6	1	XCFZZ		97499	204-032-003-9	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-47 SEE FIG.19 FOR BREAKDOWN.......................................	UHM	EA	1
6	1	XCFZZ		97499	204-032-003-11	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-49 SEE FIG.19 FOR BREAKDOWN.......................................	UHM	EA	1
6	1	XCFZZ		97499	204-032-003-17	.FUSELAGE ASSY,ACFT FORWARD U/O PN 204-200-010-51 & -61 SEE FIG.19 FOR BREAKDOWN..................................	UHM	EA	1
6	2	PAOZZ	5306-00-282-4312	88044	AN3H4	..BOLT,MACHINE..	UHM	EA	1
6	3	XDOOO		97499	204-072-084-1	..BRACKET ASSEMBLY......................................	UHM	EA	1
6	4	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING, PLATE..............................	UHM	EA	1
6	5	XDOZZ		80205	NAS1353C0575090	...PIN,QUICK RELEASE....................................	UHM	EA	1
6	6	PAOZZ	5306-00-182-2057	88044	AN3H4A	..BOLT,MACHINE..	UHM	EA	1
6	7	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT...	UHM	EA	1
6	8	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON......	UHM	EA	1
6	9	XBOZZ		97499	9122KBT1-14-0	..STRAP,WEBBING...	UHM	EA	1
6	10	PAOZZ	5325-00-641-0429	72794	GAS-375	..EYELET,TURNLOCK FASTENER..............................	UHM	EA	1
6	10A	XCFZZ		97499	204-070-140-11	..ASH TRAY INSTL U/O PN 204-200-010-1,-3,-5, -7,-11,-13,-15, -17,-19, -23,-29,-35,-39,-41-47, -49,-51,& -61....	UHM	EA	1
6	10A	XCFZZ		97499	212-070-060-3	..ASH TRAY INSTL..	UHM	EA	1
6	11	PAOZZ	1680-00-709-3035	97499	47-739-220-1	...ASH RECEIVER,TOBACC U/O P/N 204-070-140-11 R/B PN 205-070-559-3................................... R/B P/N 10-013-1,212-070-061-2, 212-070-062-1	UHM	EA	2
6	11	PAOZZ	1680-01-033-8123	97499	205-070-559-3	...ASH RECEIVER,TOBACC U/O P/N 204-070-140-11... R/B P/N 10-013-1,212-070-061-2, 212-070-062-1	UHM	EA	2
6	11	PAOZZ	1680-01-054-7307	97499	10-013-1	...ASH RECEIVER,TOBACC U/O P/N 212-070-060-3.....	UHM	EA	2
6	11	PAOZZ	1680-01-054-7307	72882	S-23-AR-BT-PS	...ASH RECEIVER,TOBACC VENDOR P/N FOR 10-013-1...	UHM	EA	2
6	12	PAOZZ	5305-00-944-8271	96906	MS27039-0806	...SCREW,MACHINE..	UHM	EA	1
6	13	PAOZZ	5310-00-184-8966	88044	AN960PD8	...WASHER,FLAT U/O P/N 204-070-140-11............	UHM	EA	4
6	14	PAOZZ	5310-00-807-1473	96906	MS21042L08	...NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON.....	UHM	EA	4
6	15	PAOZZ	1560-00-908-6464	97499	204-070-140-13	...BRACKET,ASSEMBLY U/O P/N 204-070-140-11........ U/W P/N's 47-739-220-1, 205-070-559-3	UHM	EA	1
6	15A	PAOZZ	1560-01-056-8823	97499	212-070-062-1	...BRACKET,SUPPORT U/O P/N 212-070-060-3.......... U/W P/N's 47-739-220-1, 205-070-559-3	UHM	EA	1
6	16	PAOZZ	1560-00-956-9923	97499	204-070-140-9	...BRACKET,ASSEMBLY U/O P/N 204-070-140-11....... U/W P/N's 47-739-220-1, 205-070-559-3	UHM	EA	1
6	16A	PAOZZ	1560-01-056-8824	97499	212-070-061-2	...BRACKET,SUPPORT U/O P/N 212-070-060-3......... U/W P/N's 47-739-220-1, 205-070-559-3	UHM	EA	1
6	17	PAOZZ	5305-00-989-7434	96906	MS35207-263	...SCREW,MACHINE..	UHM	EA	4
6	17A	PAOZZ	5305-00-944-8271	96906	MS27039-0806	...SCREW,MACHINE U/O P/N 212-070-060-3............	UHM	EA	4
6	17B	PAOZZ	5310-00-184-8966	88044	AN960PD8	...WASHER,FLAT U/O P/N 212-070-060-3..............	UHM	EA	4
6	17C	PAOZZ	5310-00-807-1473	96906	MS21042L08	...NUT,SELF-LOCKING U/O P/N 212-070-060-3.........	UHM	EA	4
6	17D	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	...SCREW,MACHINE U/O P/N 212-070-060-3............	UHM	EA	4
6	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..	UHM	EA	4
6	19	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON.....	UHM	EA	4
6	19A	XCFZZ		97499	204-030-015-1	.SUPPORT INSTL U/O PN 205-200-010-13 & -17...............		EA	1
6	20	XBOOO		97499	204-030-015-13	..SUPPORT ASSEMBLY, EXTERNAL.............................		EA	1
6	21	PAOZZ	5305-00-993-1848	96906	MS35207-265	...SCREW,MACHINE...		EA	1
6	22	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT...		EA	1
6	23	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON............		EA	1
6	24	XDOZZ		97499	22-006-15-12-20	...BUSHING,SLEEVE..		EA	1
6	25	PAOZZ	5325-00-630-9442	97820	S11154-3ATS	..GROMMET,NONMETALLIC.....................................		EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
6	26	PAOZZ	5305-00-558-8934	88044	AN525D10R8	. SCREW,MACHINE		EA	2
6	27	PAOZZ	531 -00-183-4406	88044	AN960PD10	..WASHER,FLAT		EA	2
6	28	PAOZZ	531 -00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON		EA	2
6	29	XCFZZ		97499	204-070-700-11	.SEAT INSTL,CO-PILOT U/O PN 204-200-010-1,-3, -5,-7,& -15 SEE FIG.32 FOR BREAKDOWN		EA	1
6	29	XCFZZ		97499	204-070-700-13	.SEAT INSTL,CO-PILOT U/O PN 204-200-010-13 &-17 SEE FIG.32 FOR BREAKDOWN		EA	1
6	29	XCFZZ		97499	204-070-468-1	.SEAT INSTL,CO-PILOT U/O PN 204-200-010-11		EA	1
6	29	AOOOO		97499	204-070-468-3	..SEAT ASSEMBLY U/O PN 204-070-468-1 SEE FIG.32 FOR BREAKDOWN		EA	1
6	29	XCFZZ		97499	204-070-468-11	.SEAT INSTL,CO-PILOT U/O PN 204-200-010-19		EA	1
6	29	AOOOO		97499	204-070-468-13	..SEAT ASSEMBLY U/O PN 204-070-468-11 SEE FIG.32 FOR BREAKDOWN		EA	1
6	29	XCFZZ		97499	204-070-576-3	.SEAT INSTL,CO-PILOT U/O PN 204-200-010-23 SEE FIG.33 FOR BREAKDOWN		EA	1
6	29	XCFZZ		96906	MS27039-1-08	.SCREW,MACHINE U/O PN 204-200-010-29, -35,&-39 SEE FIG.33 FOR BREAKDOWN	UHM	EA	1
6	29	XCFZZ		97499	204-072-722-11	.SEAT INSTL,CO-PILOT U/O PN 204-200-010-41,-47, &-49 SEE FIG.33 FOR BREAKDOWN	UHM	EA	1
6	29	XCFZZ		97499	204-072-366-3	.SEAT INSTL,CO-PILOT U/O PN 204-200-010-51 & -61 SEE FIG.33 FOR BREAKDOWN	UHM	EA	1
6	30	XCFZZ		97499	204-070-700-12	.SEAT INSTL,PILOT U/O PN 204-200-010-1,-3, -5,-7,-13,-15,& -17 SEE FIG.32 FOR BREAKDOWN		EA	1
6	30	XCFZZ		97499	204-070-468-2	.SEAT INSTL,PILOT U/O PN 204-200-010-11 & -19		EA	1
6	30	AOOOO		97499	204-070-468-3	..SEAT ASSEMBLY U/O PN 204-070-468-2 SEE FIG.32 FOR BREAKDOWN		EA	1
6	30	XCFZZ		97499	204-070-576-1	.SEAT INSTL,PILOT U/O PN 204-200-010-23, -29,-35,&-39 SEE FIG.33 FOR BREAKDOWN	UHM	EA	1
6	30	XCFZZ		97499	204-072-722-9	.SEAT INSTL,PILOT U/O PN 204-200-010-41,-47, &-49 SEE FIG.33 FOR BREAKDOWN	UHM	EA	1
6	30	XCFZZ		97499	204-072-366-1	.SEAT INSTL,PILOT U/O PN 204-200-010-51 & -61 SEE FIG.33 FOR BREAKDOWN	UHM	EA	1
6	31	XCFZZ		97499	204-070-905-3	.WIPER INSTL WINDSHIELD SEE FIG.391 FOR BREAKDOWN	UHM	EA	1
6	31	XCFZZ		97499	204-070-905-7	.WIPER INSTL WINDSHIELD SEE FIG.391 FOR BREAKDOWN	UHM	EA	1
6		XCFZZ		97499	204-070-901-11	.CURTAIN INSTL BLACKOUT SEE FIG.425 FOR BREAKDOWN	UHM	EA	1
6		XCFZZ		97499	204-070-254-1	.CASE INSTL MAP & DATA U/O (UH-1B) PN 204-200-010-1,-3,-5,-7,-13,-15 &-17SEE FIG.439 FOR BREAKDOWN		EA	1
6		XCFZZ		97499	204-070-254-3	.CASE INSTL MAP & DATA U/O PN 204-200-010-11,-19,-23 &-29 SEE FIG 439 FORBREAKDOWN		EA	1
6		XCFZZ		97499	204-070-254-5	.CASE INSTL MAP & DATA U/O(UH-1B)PN 204-200-010-35 SEE FIG 439 FOR BREAK DOWN	UHM	EA	1
6		XCFZZ		97499	204-070-523-1	.BLANKET INSTL SOUNDPROOFING U/O PN 204-200-010-1 & -3 SEE FIG.43 FOR BREAKDOWN		EA	1
6		XCFZZ		97499	204-070-523-3	.BLANKET INSTL SOUNDPROOFING U/O PN 204-200-010-5,-7,-13, -17 SEE FIG.43 FOR BREAKDOWN		EA	1
6		XCFZZ		97499	204-070-523-5	.BLANKET INSTL SOUNDPROOFING U/O PN 204-200-010-15 SEE FIG. 43 FOR BREAKDOWN		EA	1
6		XCFZZ		97499	204-070-523-9	.BLANKET INSTL SOUNDPROOFING U/O PN 204-200-010-11 SEE FIG. 43 FOR BREAKDOWN		EA	1
6		XCFZZ		97499	204-070-523-15	.BLANKET INSTL SOUNDPROOFING U/O PN 204-200-010-19 SEE FIG. 43 FOR BREAKDOWN		EA	1
6		XCFZZ		97499	204-070-523-13	.BLANKET INSTL SOUNDPROOFING U/O PN 204-200-010-23 SEE FIG.		EA	1

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						43 FOR BREAKDOWN..........		
6		XCFZZ		97499	204-070-523-29	.BLANKET INSTL SOUNDPROOFING U/O PN 204-200-010-29 & -35 SEE FIG.43 FOR BREAKDOWN..........	EA	1
6		XCFZZ		97499	204-070-523-35	.BLANKET INSTL SOUNDPROOFING U/O PN 204-200-010-39 SEE FIG. 43 FOR BREAKDOWN.......... UHM	EA	1
6		XCFZZ		97499	204-070-523-37	.BLANKET INSTL SOUNDPROOFING U/O PN 204-200-010-41,-47,& -49 SEE FIG.43 FOR BREAKDOWN.......... UHM	EA	1
6		XCFZZ		97499	204-070-523-41	.BLANKET INSTL SOUNDPROOFING U/O PN 204-200-010-51 & -61 SEE FIG.43 FOR BREAKDOWN.......... UHM	EA	1
6	32	XCFZZ		97499	204-070-022-1	.SEAT INSTL,PASSENGR U/O PN 204-200-010-1 & -3 SEE FIG.38 FOR BREAKDOWN..........	EA	1
6	32	XCFZZ		97499	204-070-022-3	.SEAT INSTL,PASSENGR U/O PN 204-200-010-5,-7, -11,-13,-15,-17,-19,-23, -29,-35,& -39 SEE FIG.38 FOR BREAKDOWN .... UHM	EA	1
6	32	XCFZZ		97499	204-070-022-7	.SEAT INSTL,PASSENGR U/O PN 204-200-010-41 USBL EFF 65-9416 THRU 65-9421 SEE FIG.38 FOR BREAKDOWN.......... UHM	EA	1
6	32	XCFZZ		97499	204-070-022-9	.SEAT INSTL,PASSENGR U/O PN 204-200-010-41 USBL EFF 65-9422 THRU 65-12772 SEE FIG.38 FOR BREAKDOWN.......... UHM	EA	1
6	32	XCFZZ		97499	204-072-038-1	.SEAT INSTL,PASSENGR U/O PN 204-200-010-47,-49, -51,& -61 SEE FIG.38 FOR BREAKDOWN.......... UHM	EA	1
6	33	XCFZZ		97499	204-060-160-1	.ENGINE MOUNT INSTL U/O PN 204-200-010-1 & -3 SEE FIG.87 FOR BREAKDOWN..........	EA	1
6	33	XCFZZ		97499	204-060-160-3	.ENGINE MOUNT INSTL U/O PN 204-200-010-5,-7, -13,-15,& -17 SEE FIG.87 FOR BREAKDOWN..........	EA	1
6	33	XCFZZ		97499	204-060-160-5	.ENGINE MOUNT INSTL U/O PN 204-200-010-11,-19, -23,-29,-35,& -39 SEE FIG.87 FOR BREAKDOWN.......... UHM	EA	1
6	33	XCFZZ		97499	204-060-160-7	.ENGINE MOUNT INSTL U/O PN 204-200-010-41,-47, -49,-51,& -61 SEE FIG.87 FOR BREAKDOWN.......... UHM	EA	1
6	34	XCFZZ		97499	204-001-062-1	.CONTROL INSTL FORE &AFT & LATERAL CYCLIC U/O PN 204-200-010-1 & -3 SEE FIG.358,359,361 & 362 FOR BREAKDOWN..........	EA	1
6	34	XCFZZ		97499	204-001-062-3	.CONTROL INSTL FORE &AFT & LATERAL CYCLIC U/O PN 204-200-010-5,-7,& -15 SEE FIG.358,359,361 & 362 FOR BREAKDOWN...	EA	1
6	34	XCFZZ		97499	204-001-062-5	.CONTROL INSTL FORE &AFT & LATERAL CYCLIC U/O PN 204-200-010-13 & -17 SEE FIG.358,359,361 & 362 FORBREAKDOWN..........	EA	1
6	34	XCFZZ		97499	204-001-062-9	.CONTROL INSTL FORE &AFT & LATERAL CYCLIC U/O PN 204-200-010-11 SEE FIG.358,359,361 & 362 FOR BREAKDOWN..........	EA	1
6	34	XCFZZ		97499	204-001-062-11	.CONTROL INSTL FORE &AFT & LATERAL CYCLIC U/O PN 204-200-010-19 SEE FIG.358,359,361 & 362 FOR BREAKDOWN..........	EA	1
6	34	XCFZZ		97499	204-001-062-15	.CONTROL INSTL FORE &AFT & LATERAL CYCLIC U/O PN 204-200-010-23,-29, & -35 SEE FIG.358,359,361 & 362 FOR BREAKDOWN	EA	1
6	34	XCFZZ		97499	204-001-077-1	.CONTROL INSTL FORE &AFT & LATERAL CYCLIC U/O PN 204-200-010-39 & -41 SEE FIG.358,359,361 & 363 FOR BREAKDOWN .... UHM	EA	1
6	34	XCFZZ		97499	204-001-077-5	.CONTROL INSTL FORE &AFT & LATERAL CYCLIC U/O PN 204-200-010-47,-49, -51,& -61 SEE FIG.358,359,361 & 363 FOR BREAKDOWN .... UHM	EA	1
6	35	XCFZZ		97499	204-001-059-1	.CONTROL INSTL TAIL ROTOR FWD SECT U/O PN 204-200-010-1 SEE FIG.364 & 366 FOR BREAKDOWN..........	EA	1
6	35	XCFZZ		97499	204-001-059-3	.CONTROL INSTL TAIL ROTOR FWD SECT U/O PN 204-200-010-5,-7,& -15 SEE FIG.364 & 366 FOR BREAKDOWN..........	EA	1
6	35	XCFZZ		97499	204-001-059-5	.CONTROL INSTL TAIL ROTOR FWD SECT U/O PN 204-200-010-3 SEE FIG. 364 & 366 FOR BREAKDOWN..........	EA	1
6	35	XCFZZ		97499	204-001-059-7	.CONTROL INSTL TAIL ROTOR FWD SECT U/O PN 204-200-010-13 & -17 SEE FIG.364 & 366 FOR BREAKDOWN..........	EA	1
6	35	XCFZZ		97499	204-001-059-9	.CONTROL INSTL TAIL ROTOR FWD SECT U/O PN 204-200-010-11 SEE FIG.364 & 366 FOR BREAKDOWN..........	EA	1
6	35	XCFZZ		97499	204-001-059-13	.CONTROL INSTL TAIL ROTOR FWD SECT U/O PN 204-200-010-23,-	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						29,& -35 SEE FIG.364 & 366 FOR BREAKDOWN................		
6	35	XCFZZ		97499	204-001-059-15	.CONTROL INSTL TAIL ROTOR FWD SECT U/O PN 204-200-010-19 SEE FIG.364 & 366 FOR BREAKDOWN........................	EA	1
6	35	XCFZZ		97499	204-001-059-17	.CONTROL INSTL TAIL ROTOR FWD SECT SEE FIG.364 & 366 .... UHM	EA	1
6	36	XCFZZ		97499	204-001-061-1	.CONTROL INSTL COLLECTIVE PITCH U/O PN 204-200-010-1 SEE FIG. 345 & 346 FOR BREAKDOWN........................	EA	1
6	36	XCFZZ		97499	204-001-061-3	.CONTROL INSTL COLLECTIVE PITCH U/O PN 204-200-010-3,-5,-7,& -15 SEE FIG.345 & 346 FOR BREAKDOWN........................	EA	1
6	36	XCFZZ		97499	204-001-061-5	.CONTROL INSTL COLLECTIVE PITCH U/O PN 204-200-010-13 & -17 SEE FIG.345 & 346 FOR BREAKDOWN........................	EA	1
6	36	XCFZZ		97499	204-001-061-7	.CONTROL INSTL COLLECTIVE PITCH U/O PN 204-200-010-11 SEE FIG.345 & 346 FOR BREAKDOWN........................	EA	1
6	36	XCFZZ		97499	204-001-061-9	.CONTROL INSTL COLLECTIVE PITCH U/O PN 204-200-010-23 & -29 SEE FIG.345 & 346 FOR BREAKDOWN........................	EA	1
6	36	XCFZZ		97499	204-001-061-11	.CONTROL INSTL COLLECTIVE PITCH U/O PN 204-200-010-19 SEE FIG.345 & 346 FOR BREAKDOWN........................	EA	1
6	36	XCFZZ		97499	204-001-061-19	.CONTROL INSTL COLLECTIVE PITCH U/O PN 204-200-010-35 SEE FIG.345 & 346 FOR BREAKDOWN........................	EA	1
6	36	XCFZZ		97499	204-001-078-1	.CONTROL INSTL COLLECTIVE PITCH U/O PN 204-200-010-39 SEE FIG.345 & 347 FOR BREAKDOWN........................ UHM	EA	1
6	36	XCFZZ		97499	204-001-078-7	.CONTROL INSTL COLLECTIVE PITCH U/O PN 204-200-010-41 SEE FIG.345 & 347 FOR BREAKDOWN........................ UHM	EA	1
6	36	XCFZZ		97499	204-001-078-11	.CONTROL INSTL COLLECTIVE PITCH U/O PN 204-200-010-47,-49,-51, & -61 SEE FIG-345 & 347 FOR BREAKDOWN............ UHM	EA	1
6		XCFZZ		97499	204-001-060-1	.CONTROL INSTL SYNCHRONIZED ELEVATOR FORWARD U/O PN 204-200-010-1,-3,-5,-7, -11,-13,-15,-17,-19,-23, -29 & -35 SEE FIG. 374 FOR BREAKDOWN........................	EA	1
6		XCFZZ		97499	204-001-076-1	.CONTROL INSTL SYNCHRONIZED ELEVATOR FORWARD U/O PN 204-200-010-39,-41,-47, -49,-51,& -61 SEE FIG. 375 FOR BREAKDOWN .... UHM	EA	1
6		XCFZZ		97499	204-060-551-1	.OIL SYST INSTL U/O PN 204-200-010-1,-3, -5,& -13 SEE FIG. 118,120,123 & 124 FOR BREAKDOWN........................	EA	1
6		XCFZZ		97499	204-060-551-3	.OIL SYST INSTL U/O PN 204-200-010-7,-15,& -17 SEE FIG.118, 120,123 & 124 FOR BREAKDOWN........................	EA	1
6		XCFZZ		97499	204-060-551-7	.OIL SYST INSTL U/O PN 204-200-010-11 SEE FIG.118,120,123 & 124 FOR BREAKDOWN........................	EA	1
6		XCFZZ		97499	204-060-551-11	.OIL SYST INSTL U/O PN 204-200-010-11 & -19 SEE FIG.118,120, 123 & 124 FOR BREAKDOWN........................	EA	1
6		XCFZZ		97499	204-060-551-15	.OIL SYST INSTL U/O PN 204-200-010-23,-29, & -35 SEE FIG. 118,120,123 & 124 FOR BREAKDOWN........................	EA	1
6		XCFZZ		97499	204-060-551-23	.OIL SYST INSTL U/O PN 204-200-010-39 SEE FIG.118,120,123 & 124 FOR BREAKDOWN........................ UHM	EA	1
6		XCFZZ		97499	204-060-551-25	.OIL SYST INSTL U/O PN 204-200-010-41,-47, -49,-51,& -61 SEE FIG.118,120,123 & 124 FOR BREAKDOWN................ UHM	EA	1
6		XCFZZ		97499	204-040-740-1	.COOLER INSTL TRANSMISSION OIL SEE FIG.174 FOR BREAKDOWN	EA	1
6		XCFZZ		97499	204-040-740-3	.COOLER INSTL TRANSMISSION OIL SEE FIG.174 FOR BREAKDOWN .... UHM	EA	1
6		XCFZZ		97499	204-060-630-9	.LINES INSTL AUXILIARY FUEL TANK U/O PN 204-200-010-1,-3,-5, -7, -11,-13,-15,-17,-19,-23,& -29 SEE FIG.336 FOR BREAKDOWN	EA	1
6		XCFZZ		97499	204-060-630-13	.LINES INSTL AUXILIARY FUEL TANK U/O PN 204-200-010-35 SEE FIG.336 FOR BREAKDOWN........................	EA	1
6		XCFZZ		97499	204-060-689-1	.LINES INSTL FUEL & AIR EXTERNAL AUXILARY TANKS U/O PN 204-200-010-11,-19,-23 &-29 SEE FIG.337 FOR BREAKDOWN........	EA	1
6		XCFZZ		97499	204-060-689-3	.LINES INSTL FUEL & AIR EXTERNAL AUXILIARY TANKS U/O PN 204-200-010-35 SEE FIG.337 FOR BREAKDOWN........................	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
6		XCFZZ		97499	204-060-689-5	.LINES INSTL FUEL & AIR EXTERNAL AUXILIARY TANKS U/O PN 204-200-010-39 &-41 SEE FIG.337 FOR BREAKDOWN............ UHM	EA	1
6		XCFZZ		97499	204-060-689-7	.LINES INSTL FUEL & AIR EXTERNAL AUXILIARY TANKS U/O PN 204-200-010-47,-49,-51 &-61 SEE FIG.337 FOR BREAKDOWN.... UHM	EA	1
6		XCFZZ		97499	204-060-701-1	.CONTROL INSTL POWER LEVER U/O PN 204-200 010- SEE FIG.111 & 113 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-060-701-3	.CONTROL INSTL POWER LEVER U/O PN 204-200-010-3 SEE FIG.111 & 113 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-060-701-5	.CONTROL INSTL POWER LEVER U/O (UH-1B) PN 204-200-010-5,-7,-11,-13,-15,-17,-19,-23,-29 &-35 SEE FIG.111 & 113 FOR BREAKDOWN.. UHC,UHM	EA	1
6		XCFZZ		97499	204-061-700-1	.COMPENSATOR INSTL DROOP U/O PN 204-200-010-1&-3 SEE FIG.115 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-061-700-3	.COMPENSATOR INSTL DROOP U/O PN 204-200-010-5,-7,-13,-15&-17 SEE FIG.115 FOR BREAKDOWN...................................	EA	1
6		XCFZZ		97499	204-061-700-5	.COMPENSATOR INSTL DROOP U/O PN 204-200-010-11,-19,-23&-29 SEE FIG.115 FOR BREAKDOWN...................................	EA	1
6		XCFZZ		97499	204-061-700-7	.COMPENSATOR INSTL DROOP U/O PN 204-204-200-010-35 SEE FIG. 115 FOR BREAKDOWN...	EA	1
6		XCFZZ		97499	204-061-700-9	.COMPENSATOR INSTL DROOP U/O PN 204-200-010-39&-41 SEE FIG. 115 FOR BREAKDOWN...................................... UHM	EA	1
6		XCFZZ		97499	204-061-700-11	.COMPENSATOR INSTL DROOP U/O PN 204-200-010-47,-49,-51,&-61 SEE FIG.116 FOR BREAKDOWN............................... UHM	EA	1
6		XCFZZ		97499	204-070-012-1	.PIPING INSTL U/O PN 204-200-010-1,-3,-5,-7, -11,-13,-15,-17,& -19 SEE FIG.222 & 224 FOR BREAKDOWN.................	EA	1
6		XCFZZ		97499	204-070-012-3	.PIPING INSTL U/O PN 204-200-010-23,-29,& -35 SEE FIG.222 & 224 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-072-197-1	.PIPING INSTL U/O PN 204-200-010-39,-41,-47 SEE FIG.223 FOR BREAKDOWN WN................................... UHM	EA	1
6		XCFZZ		97499	204-072-197-5	.PIPING INSTL U/O PN 204-200-010-49,-51,-61 SEE FIG.223 FOR BREAKDOWN WN................................... UHM	EA	1
6		XCFZZ		97499	204-070-169-1	.HEATER INSTL U/O PN 204-200-010-1 & -3 SEE FIG.388,390 & 393 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-070-169-3	.HEATER INSTL U/O PN 204-200-010-5,-7, -13,-15,& -17 SEE FIG.388,390 & 393 FOR BREAKDOWN........................	EA	1
6		XCFZZ		97499	204-070-169-5	.HEATER INSTL U/O PN 204-200-010-11 SEE FIG.388,390 & 393 FOR BREAKDOWN...	EA	1
6		XCFZZ		97499	204-070-169-7	.HEATER INSTL U/O PN 204-200-010-23 SEE FIG.388,390 & 393 FOR BREAKDOWN...	EA	1
6		XCFZZ		97499	204-070-169-9	.HEATER INSTL U/O PN 204-200-010-19 SEE FIG.388,390 & 393 FOR BREAKDOWN...	EA	1
6		XCFZZ		97499	204-070-169-15	.HEATER INSTL U/O PN 204-200-010-35 SEE FIG.388,390 & 393 FOR BREAKDOWN...	EA	1
6		XCFZZ		97499	204-070-169-25	.HEATER INSTL U/O PN 204-200-010-29 SEE FIG.388,390 & 393 FOR BREAKDOWN...	EA	1
6		XCFZZ		97499	204-070-169-29	.HEATER INSTL U/O PN 204-200-010-39 SEE FIG.388,390 & 393 FOR BREAKDOWN... UHM	EA	1
6		XCFZZ		97499	204-072-417-1	.HEATER INSTL U/O PN 204-200-010-41,-47,-49,-51 & -61 SEE FIG.389 & 391 FOR BREAKDOWN........................... UHM	EA	1
6		XCFZZ		97499	204-070-949-5	.SUSPENSION INSTL U/O PN 204-200-010-1 &-3 SEE FIG.414 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-070-529-1	.SUSPENSION INSTL U/O PN 204-200-010-5,-7, -13,-15,& -17 SEE FIG.414 FOR BREAKDOWN.....................................	EA	1
6		XCFZZ		97499	204-070-529-3	.SUSPENSION INSTL U/O PN 204-200-010-11 & -19 SEE FIG.414 FOR BREAKDOWN...	EA	1
6		XCFZZ		97499	204-070-529-7	.SUSPENSION INSTL U/O PN 204-200-010-23,-29,-35 &-39 SEE FIG.414 FOR BREAKDOWN............................ UHM	EA	1

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
6		XCFZZ		97499	204-070-529-11	.SUSPENSION INST U/O PN 204-200-010-41 USBL EFF 65-9416 THRU 65-9421 SEE FIG 414 FOR BREAKDOWN...................... UHM	EA	1
6		XCFZZ		97499	204-070-529-13	.SUSPENSION INSTL U/O PN 204-200-010-41,-47, -49,-51,& -61 USBL EFF 65-9422 & SUBSEQUENT SEE FIG.414 FOR BREAKDOWN .... UHM	EA	1
6		XCFZZ		97499	204-070-702-15	.SEAT INSTL MEDICAL ATTENDANT U/O PN 204-200-010-1,-3,-5,-7, -13,-15 &-17...	EA	1
6		XCFZZ		97499	204-070-704-1	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-1&-3 SEE FIG.212 FOR BREAKDOWN......................................	EA	1
6		XCFZZ		97499	204-070-704-3	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-5 SEE FIG.212 FOR BREAKDOWN......................................	EA	1
6		XCFZZ		97499	204-070-704-5	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-11 SEE FIG.212 FOR BREAKDOWN......................................	EA	1
6		XCFZZ		97499	204-070-704-9	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-13&-17 SEE FIG.212 FOR BREAKDOWN..................................	EA	1
6		XCFZZ		97499	204-070-704-11	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-7&-15 SEE FIG.212 FOR BREAKDOWN..................................	EA	1
6		XCFZZ		97499	204-070-704-19	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-19 SEE FIG.212 FOR BREAKDOWN......................................	EA	1
6		XCFZZ		97499	204-070-704-21	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-23&-29 SEE FIG.212 FOR BREAKDOWN..................................	EA	1
6		XCFZZ		97499	204-070-704-35	.PEDESTAL INSTL INSTRUMENTS PANEL U/O PN 204-200-010-35 SEE FIG.212 FOR BREAKDOWN......................................	EA	1
6		XCFZZ		97499	204-070-704-45	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-39 SEE FIG.212 FOR BREAKDOWN.................................. UHM	EA	1
6		XCFZZ		97499	204-070-704-41	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-41 SEE FIG.212 FOR BREAKDOWN.................................. UHM	EA	1
6		XCFZZ		97499	204-070-704-55	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-47 SEE FIG.212 FOR BREAKDOWN.................................. UHM	EA	1
6		XCFZZ		97499	205-070-112-3	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-49&-51 SEE FIG.212 FOR BREAKDOWN.............................. UHM	EA	1
6		XCFZZ		97499	205-070-112-11	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 204-200-010-61 SEE FIG.212 FOR BREAKDOWN.................................. UHM	EA	1
6		XCFZZ		97499	204-075-017-1	.ELECTRICAL INSTL U/O PN 204-200-010-1 & -3 SEE FIG.225 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-075-017-3	.ELECTRICAL INSTL U/O PN 204-200-010-5,-7, -13,-15,& -17 SEE FIG.225 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-075-017-5	.ELECTRICAL INSTL U/O PN 204-200-010-11 SEE FIG.225 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-075-043-1	.ELECTRICAL INSTL U/O PN 204-200-010-19 SEE FIG.225 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-075-044-1	.ELECTRICAL INSTL U/O PN 204-200-010-23 SEE FIG.225 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-075-044-3	.ELECTRICAL INSTL U/O PN 204-200-010-29 SEE FIG.225 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-075-063-1	.ELECTRICAL INSTL U/O PN 204-200-010-35 SEE FIG.225 FOR BREAKDOWN..	EA	1
6		XCFZZ		97499	204-075-063-3	.ELECTRICAL INSTL U/O PN 204-200-010-39 SEE FIG.225 FOR BREAKDOWN.. UHM	EA	1
6		XCFZZ		97499	204-075-075-1	.ELECTRICAL INSTL U/O PN 204-200-010-41 SEE FIG.225 FOR BREAKDOWN.. UHM	EA	1
6		XCFZZ		97499	204-075-083-1	.ELECTRICAL INSTL U/O PN 204-200-010-47 SEE FIG.225 FOR BREAKDOWN.. UHM	EA	1
6		XCFZZ		97499	204-075-083-3	.ELECTRICAL INSTL U/O PN 204-200-010-49 SEE FIG.225 FOR BREAKDOWN.. UHM	EA	1
6		XCFZZ		97499	204-075-083-5	.ELECTRICAL INSTL U/O PN 204-200-010-51 USBL EFF 66-15023 THRU 66-15105 SEE FIG.225 FOR BREAKDOWN............... UHM	EA	1

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
6		XCFZZ		97499	204-075-083-9	.ELECTRICAL INSTL U/O PN 204-200-010-61 USBL EFF 66-15106 THRU 66-15147 SEE FIG.225 FOR BREAKDOWN...............	UHM	EA	1
6		XCFZZ		97499	204-075-083-7	.ELECTRICAL INSTL U/O PN 204-200-010-61 USBL EFF 66-15149 & SUBSEQUENT SEE FIG.225 FOR BREAKDOWN..................	UHM	EA	1
6		XCFZZ		97499	204-076-020-5	.HYDRAULIC INSTL U/O PN 204-200-010-1 & -3 SEE FIG.188,189, 190 & 191 FOR BREAKDOWN....................................		EA	1
6		XCFZZ		97499	204-076-027-1	.HYDRAULIC INSTL U/O PN 204-200-010-5,-7,-13, -15,& -17 SEE FIG-188,189,190 & 191 FOR BREAKDOWN.......................		EA	1
6		XCFZZ		97499	204-076-027-3	.HYDRAULIC INSTL U/O PN 204-200-010-11 SEE FIG.188,189,190 & 191 FOR BREAKDOWN...		EA	1
6		XCFZZ		97499	204-076-030-1	.HYDRAULIC INSTL U/O PN 204-200-010-19 & -23 SEE FIG.188, 189,190 & 191 FOR BREAKDOWN................................		EA	1
6		XCFZZ		97499	204-076-030-5	.HYDRAULIC INSTL U/O PN 204-200-010-29 SEE FIG-188,189,190 & 191 FOR BREAKDOWN...		EA	1
6		XCFZZ		97499	204-076-066-1	.HYDRAULIC INSTL U/O PN 204-200-010-35 SEE FIG.188,189,190 & 191 FOR BREAKDOWN...		EA	1
6		XCFZZ		97499	204-076-002-3	.HYDRAULIC INSTL U/O PN 204-200-010-39 & -41. SEE FIG.-193 & -195 FOR BREAKDOWN.......................................	UHM	EA	1
6		XCFZZ		97499	204-076-002-7	.HYDRAULIC INSTL U/O PN 204-200-010-47,-49,-51, & -61 SEE FIG.193,195,198,199 & 200 FOR BREAKDOWN..............	UHM	EA	1
6		XCFZZ		97499	205-070-108-1	.BOX INSTL CHECKLIST U/O PN 204-200-010-23,-29-35.......		EA	1
6		XCFZZ		97499	205-070-110-1	.BOX INSTL CHECKLIST....................................	UHM	EA	1
6	37	PAOZZ	1680-00-872-7871	97499	205-070-109-1	..BOX,CHECK LIST.....................................	UHM	EA	1
6		XCFZZ		97499	204-071-539-5	.CONTROL INSTL JETTISON EMERGENCY U/O PN 204-200-010-11 SEE FIG.441 FOR BREAKDOWN..................................		EA	1
6		XCFZZ		97499	204-071-539-11	.CONTROL INSTL JETTISON EMERGENCY U/O PN 204-200-010-19,-23, -29, -35,-39,& -41 SEE FIG. 441 FOR BREAKDOWN.....	UHM	EA	1
6		XCFZZ		97499	204-071-539-13	.CONTROL INSTL JETTISON EMERGENCY U/O PN 204-200-010-47,-49, -51, & -61 SEE FIG.441 FOR BREAKDOWN..................	UHM	EA	1
6	38	PAOZZ	1560-00-773-2397	00781	19039	.BRACKET ASSEMBLY..................................	UHM	EA	6
6	39	XDOZZ		97499	204-070-781-1	.DECAL,METAL-TRANSMI OIL LEVEL LIGHT-SWITCH......	UHM	EA	1
6		XCFZZ		97499	204-070-702-15	SEAT INSTL MEDICAL ATTENDANT USBL EFF 60-3546 THRU 61-803 NMA...		EA	1
6	39A	PBOOO	1680-00-769-2359	97499	204-070-606-7	.SEAT,AIRCRAFT BREAKDOWN FOR PN 204-070-606-7 <AL1001-7>		EA	1
6	40	PAOZZ	1680-00-987-5111	84256	BLS4LA115	..PIN,HANDLE...		EA	1
6	41	PAOOO	1680-00-788-1272	09986	AL1001-12-001	..HEADREST ASSY,SEAT....................................		EA	1
6	42	PAOZZ	1680-00-788-1271	09986	AL1001-12-005	...CUSHION...		EA	1
6	43	PAOZZ	1680-00-788-1273	09986	AL1001-14-001	..COVER,MEDIC SEAT......................................		EA	1
6	44	PAOZZ	5306-00-182-2017	88044	AN4H6A	..BOLT,MACHINE...		EA	2
6	45	PAOZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT..		EA	4
6	46	PAOZZ	5310-00-857-5557	96906	MS21045L4	..NUT,SELF-LOCKING, HEXAGON............................		EA	2
6	47	XDOZZ		96906	MS17990-410	..PIN,QUICK RELEASE......................................		EA	1
6	48	PAOZZ	1560-00-788-1249	09986	AL1001-9-001	..BRACE ASSEMBLY,MEDI...................................		EA	2
6	49	PAOZZ	5306-00-182-1963	88044	AN4H15A	..BOLT,MACHINE...		EA	2
6	50	PAOZZ	1680-00-788-1274	09986	AL1001-3-001	..BACK ASSEMBLY,SEAT....................................		EA	1
6	51	PAOZZ	1680-00-788-1275	09986	AL1001-15-001	..COVER ASSEMBLY...		EA	1
6	52	PAOZZ	5306-00-182-1531	88044	AN4H13	..BOLT,MACHINE...		EA	4
6	53	PAOZZ	5306-00-182-2058	88044	AN3H5A	..BOLT,MACHINE...		EA	1
6	54	PAOZZ	5310-00-263-2862	96906	MS21045C3	..NUT,SELF-LOCKING,HE...................................		EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
6	55	PAOZZ	5310-00-167-0820	88044	AN960-516	..WASHER,FLAT	EA	2
6	56	PAOZZ	1560-00-H24-6455	97499	204-070-758-13	..TUBE	EA	1
6	57	XCOZZ		97499	204-070-758-9	.SEAT PAN ASSY USE UNTIL EXHAUSTED NO REPLACEMENT	EA	1
6	58	PAOZZ	1680-00-788-1276	09986	AL1001-5-001	.PAN ASSEMBLY,SEAT	EA	1
6	59	PAOZZ	1560-00-788-1248	09986	AL1001-10-001	..BRACE ASSEMBLY,MEDI	EA	1
6	60	PAOZZ	5305-00-182-1367	88044	AN525-416R14	..SCREW,MACHINE	EA	1
6	61	PAOZZ	5310-00-903-8282	96906	MS21083N4	..NUT,SELF-LOCKING,HE	EA	1
6	62	PAOZZ	5310-00-187-2356	88044	AN960PD416	..WASHER,FLAT	EA	2
6	63	XBOZZ		88044	AN44-13A	..BOLT,EYE	EA	1
6	64	PAOZZ	5310-00-184-9980	88044	AN960PD516L	..WASHER,FLAT	EA	1
6	65	PAOZZ	5310-00-857-5559	96906	MS21045L5	..NUT,SELF-LOCKING, HEXAGON	EA	1
6	66	PAOZZ	5306-00-182-1960	88044	AN4H12A	..BOLT,MACHINE	EA	3
6	67	PAOZZ	1680-00-788-1277	09986	AL1001-8-001	..LEG ASSEMBLY	EA	1
6	68	PAOOO	1680-00-788-1279	09986	AL1001-7-001	..LEG ASSEMBLY	EA	1
6	69	XDOZZ		09986	AL1001-7-007	...SPACER	EA	1
6	70	PAOZZ	1680-00-078-5544	00624	32335	..FITTING,SEAT MOUNTI	EA	1
6	71	PAOZZ	5325-00-296-7552	88044	AN227-578	..POST,SNAP FASTENER	EA	4
6	72	PAOZZ	5325-00-276-5677	88044	AN227-56	..STUD,SNAP FASTENER	EA	1

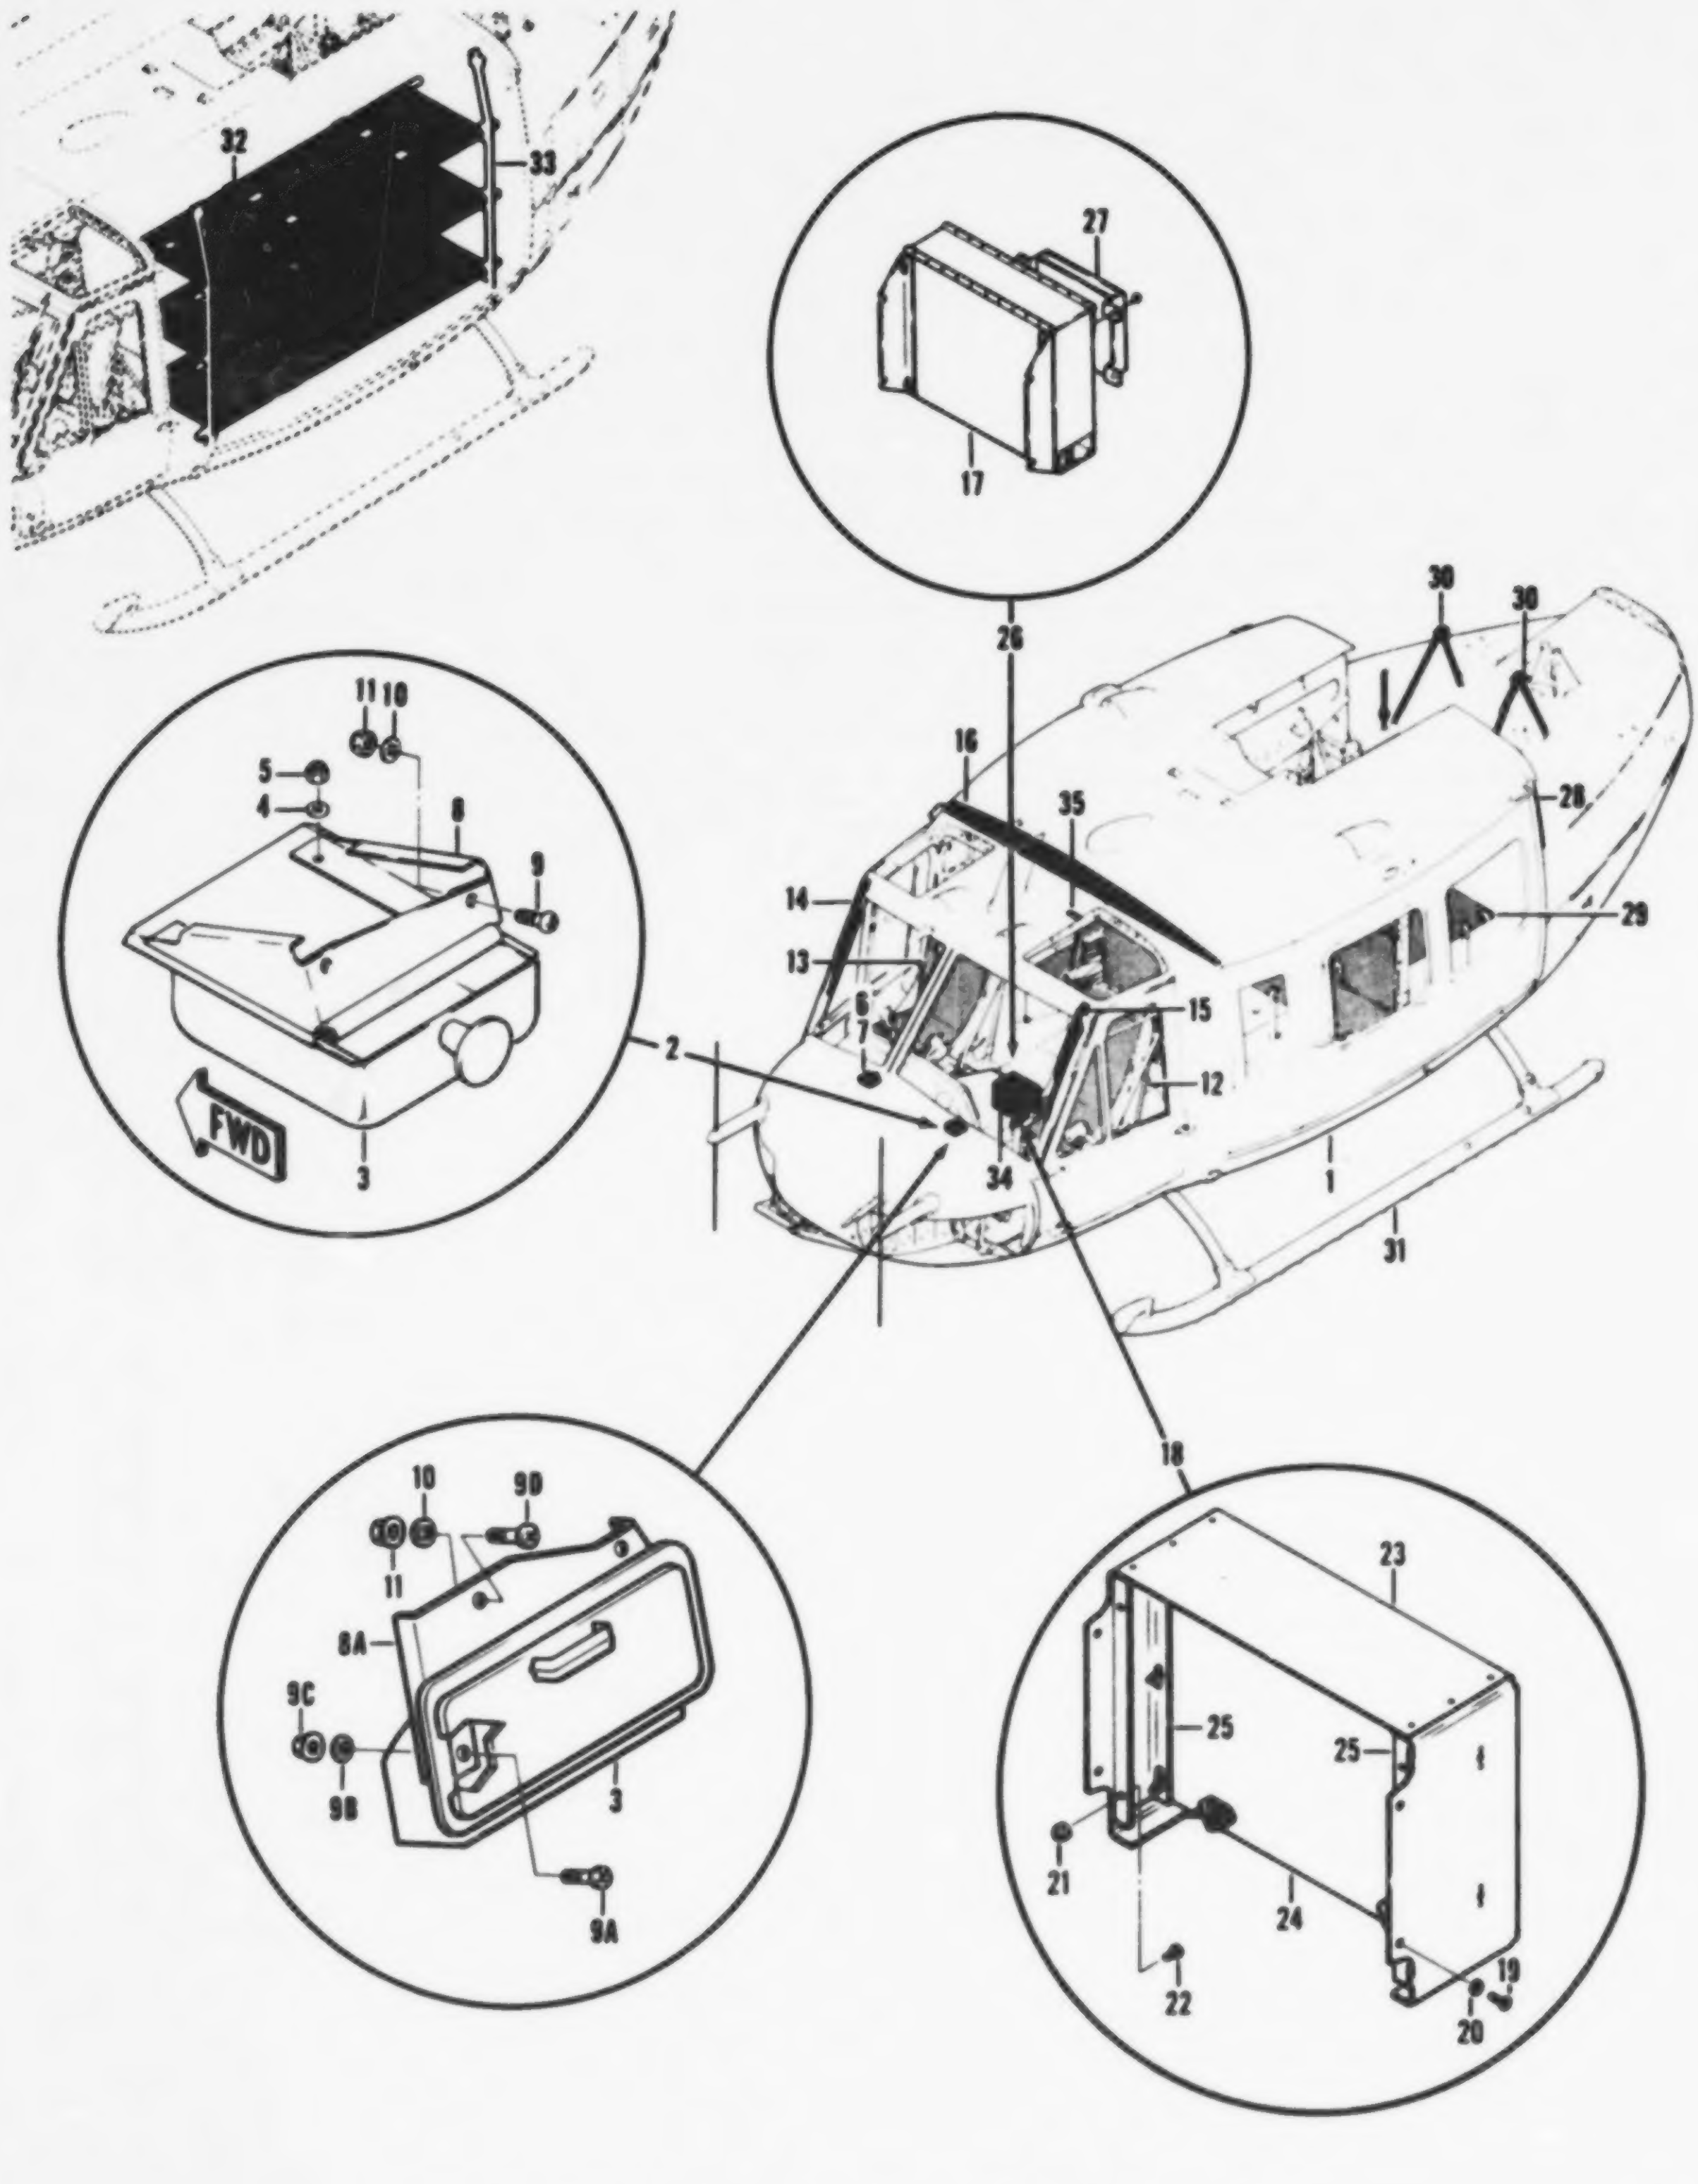
32
33
27
17
26
30
30
16
35
28
29
14
13
6
7
15
12
2
1
34
31
11
10
5
4
8
9
FWD
3
18
10
9D
11
8A
9C
9B
3
9A
23
25
25
21
24
22
19
20

Figure 7. Section Assembly, Helicopter Forward

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
7		XCFZZ		97499	205-200-005-1	SECTION ASSY,ACFT FORWARD USBL EFF 62-2106 THRU 62-2113 SEE FIG.5 FOR NHA.................................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-3	SECTION ASSY,ACFT FORWARD USBL EFF 62-12351 THRU 62-12372 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-5	SECTION ASSY,ACFT FORWARD USBL EFF 63-8739 THRU 63-9803 SEE FIG.5 FOR NHA.................................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-7	SECTION ASSY,ACFT FORWARD USBL EFF 63-8804 THRU 63-8859 SEE FIG.5 FOR NHA.................................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-9	SECTION ASSY,ACFT FORWARD USBL EFF 63-12956 THRU 63-13002 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-11	SECTION ASSY,ACFT FORWARD USBL EFF 64-13492 THRU 64-13661 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-13	SECTION ASSY,ACFT FORWARD USBL EFF 64-13662 THRU 64-13901 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-15	SECTION ASSY,ACFT FORWARD USBL EFF 65-9565 THRU 65-9810 SEE FIG.5 FOR NHA.................................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-21	SECTION ASSY,ACFT FORWARD USBL EFF 65-9811 THRU 65-12895 SEE FIG.5 FOR NHA.................................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-19	SECTION ASSY,ACFT FORWARD USBL EFF 66-746 THRU 66-16033 SEE FIG.5 FOR NHA.................................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-23	SECTION ASSY,ACFT FORWARD USBL EFF 66-16034 THRU 66-16867 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-29	SECTION ASSY,ACFT FORWARD USBL EFF 66-16869 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.5 FOR NHA........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-35	SECTION ASSY,ACFT FORWARD USBL EFF 67-17145 THRU 67-17312 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-37	SECTION ASSY,ACFT FORWARD USBL EFF 67-17313 THRU 67-17777 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-41	SECTION ASSY,ACFT FORWARD USBL EFF 67-17778 THRU 67-1957 SEE FIG.5 FOR NHA.................................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-43	SECTION ASSY,ACFT FORWARD USBL EFF 68-15214 THRU 68-15324 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-47	SECTION ASSY,ACFT FORWARD USBL EFF 68-15325 THRU 68-15489 SEE FIG.5 FOR NHA... ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-53	SECTION ASSY,ACFT FORWARD USBL EFF 68-15490 THRU 68-15778 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-55	SECTION ASSY,ACFT FORWARD USBL EFF 68-16050 THRU 68-16342 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-61	SECTION ASSY,ACFT FORWARD USBL EFF 68-16343 THRU 68-16625 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-57	SECTION ASSY,ACFT FORWARD USBL EFF 69-15000 THRU 69-15291 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-63	SECTION ASSY,ACFT FORWARD USBL EFF 69-15292 THRU 70-15932 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-67	SECTION ASSY,ACFT FORWARD USBL EFF 70-16200 THRU 70-16518 SEE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-69	SECTION ASSY,ACFT FORWARD USBL EFF 71-20000 THRU 71-20339 SFE FIG.5 FOR NHA.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-71	SECTION ASSY,ACFT HELICOPTER FORWARD USBL EFF 72-21465 THRU 74-22542 SEE FIG.5 FOR NHA.....................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-200-005-73	SECTION ASSEMBLY.................................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-3	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-1 SEE FIG.20 FOR BREAKDOWN.............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-5	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-3 SEE FIG.20 FOR BAEAKDOWN.............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-7	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-5 SEE FIG.20	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						FOR BREAKDOWN..............................UHE,UHH,UHV,UHX		
7		XCFZZ		97499	205-030-008-9	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-7 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-15	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-9 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-13	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-11 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-009-17	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-13 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-19	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-15 & -21 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-21	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-19 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-23	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-23 & -29 SEE FIG-20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-33	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-35 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-35	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-37 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-39	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-41 & -43 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-45	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-47 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-49	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-53 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-51	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-55 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-57	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-61 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-53	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-57 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-59	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-63 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-61	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-67 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	1	XCFZZ		97499	205-030-008-65	.FUSELAGE ASSY,ACFT FORWARD U/O PN 205-200-005-69 SEE FIG.20 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7	2	XCFZZ		97499	204-070-140-11	.ASH TRAY INSTL..............................UHE,UHH,UHV,UHX	EA	1
7	2	XCFZZ		97499	212-070-060-3	.ASH TRAY..............................UHE,UHH,UHV,UHX	EA	1
7	3	PAOZZ	1680-00-709-3035	97499	47-739-220-1	..ASH RECEIVER,TOBACC U/O P/N 204-070-140-11 R/B P/N 205-070-559-3..............................UHE,UHH,UHV,UHX R/B P/N's 10-031-1, 212-070-061-2, 212-070-062-2	EA	2
7	3	PAOZZ	1680-01-033-8123	97499	205-070-559-3	..ASH RECIVER TOBACC U/O 204-070-140-11......UHE,UHH,UHV,UHX R/B P/N's 10-031-1, 212-070-061-2, 212-070-062-2	EA	2
7	3	PAOZZ	1680-01-056-7307	97499	10-013-1	..ASH RECEIVER U/O P/N 212-070-060-3.........UHE,UHH,UHV,UHX	EA	2
7	3	PAOZZ	1680-01-056-7307	72882	S-23-AP-BT-PS	..ASH RECEIVER,TOBACC VENDOR P/N FOR 10-013-1 ....UHE,UHH,UHV,UHX	EA	REF
7	4	PAOZZ	5310-00-184-8966	88044	AN960PD8	..WASHER,FLAT U/O P/N 204-070-140-11.........UHE,UHH,UHV,UHX	EA	8
7	5	PAOZZ	5310-00-734-1885	96906	MS21071-4	..NUT,SELF-LOCKING, PLATE....................UHE,UHH,UHV,UHX	EA	8
7	6	PAOZZ	1560-00-908-6464	97499	204-070-140-13	..BRACKET ASSEMBLY U/O P/N 204-070-140-11....UHE,UHH,UHV,UHX	EA	1
7	7	PAOZZ	1560-01-056-8823	97499	212-070-062-1	..BRACKET,SUPPORT U/O P/N 212-070-060-3......UHE,UHH,UHV,UHX	EA	1
7	8	PAOZZ	1560-00-956-9923	97499	204-070-140-9	..BRACKET ASSEMBLY U/O P/N 204-070-140-11....UHE,UHH,UHV,UHX	EA	1
7	8A	PAOZZ	1560-01-056-8824	97499	212-070-061-2	..BRACKET,SUPPORT U/O P/N 212-070-060-3......UHE,UHH,UHV,UHX	EA	1
7	9	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	4
7	9A	PAOZZ	5305-00-944-8271	96906	MS27039-0806	..SCREW,MACHINE U/O P/N 212-070-060-3........UHE,UHH,UHV,UHX	EA	4

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
7	9B	PAOZZ	5310-00-184-8966	88044	AN960PD8	..WASHER,FLAT U/O P/N 212-070-060-3..........UHE,UHH,UHV,UHX	EA	4
7	9C	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING U/O P/N 212-070-060-3.....UHE,UHH,UHV,UHX	EA	4
7	9D	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	..SCREW,MACHINE U/O P/N 212-070-060-3........UHE,UHH,UHV,UHX	EA	4
7	10	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT.................................UHE,UHH,UHV,UHX	EA	4
7	11	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	4
7	12	XCFZZ		97499	205-070-747-3	.SEAT INSTL,CO-PILOT U/O PN 205-200-005-1,-3, -5,-7,& -9 SEE FIG.34 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7	12	XCFZZ		97499	205-070-747-15	.SEAT INSTL,CO-PILOT U/O PN 205-200-005-11 & -13 SEE FIG.34 FOR BREAKDOWN.................................UHE,UHH,UHV,UHX	EA	1
7	12	XCFZZ		97499	205-070-747-19	.SEAT INSTL,CO-PILOT U/O PN 205-200-005-15,-19, & -21 SEE FIG.34 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7	12	XCFZZ		97499	205-072-286-3	.SEAT INSTL,PILOT U/O PN 205-200-005-23,-29, -35,-37,-41,-43,-47,-53, -55,-57,-61,-63,-67,&-69 SEE FIG.34 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7	13	XCFZZ		97499	205-070-747-1	.SEAT INSTL,PILOT U/O PN 205-200-005-1,-3, -5,-7,& -9 SEE FIG.34 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7	13	XCFZZ		97499	205-070-747-13	.SEAT INSTL,PILOT U/O PN 205-200-005-11 & -13 SEE FIG.34 FOR BREAKDOWN.................................UHE,UHH,UHV,UHX	EA	1
7	13	XCFZZ		97499	205-070-747-17	.SEAT INSTL,PILOT U/O PN 205-200-005-15,-19, & -21 SEE FIG. 34 FOR BREAKDOWN...........................UHE,UHH,UHV,UHX	EA	1
7	13	XCFZZ		97499	205-072-286-1	.SEAT INSTL,PILOT U/O PN 205-200-005-23,-29, -35,-37,-41,-43,-47,-53, -55,-57,-61,-63,-67,&-69 SEE FIG.34 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7	14	XCFZZ		97499	204-070-905-3	.WIPER INSTL WINDSHIELD-PILOT SEE FIG.381 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7	15	XCFZZ		97499	204-070-905-7	.WIPER INSTL WINDSHIELD-CO-PILOT SEE FIG.381 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7	16	XCFZZ		97499	205-070-650-1	.CURTAIN INSTL BLACKOUT U/O PN 205-200-005-1,-3,-5,-7 & -9 SEE FIG.426 FOR BREAKDOWN......................UHE,UHH,UHV,UHX	EA	1
7	17	XCFZZ		97499	204-070-254-1	.CASE INSTL,MAP & DATA SEE FIG 90 FOR BREAKDOWN KDOWN.....................................UHE,UHH,UHV,UHX	EA	1
7	17	XCFZZ		97499	204-070-254-5	.CASE INSTL MAP & DATA U/O PN 205-200-005-11,-13,-15,-19,-21,-23,-29,-35,-37 &-41 SEE FIG.90 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7	17	XCFZZ		97499	204-070-254-7	.CASE INSTL MAP & DATA U/O PN 205-200-005-43 SEE FIG.90 FOR BREAKDOWN.................................UHE,UHH,UHV,UHX	EA	1
7	17	XCFZZ		97499	204-070-254-9	.CASE INSTL MAP & DATA U/O PN 205-200-005-47,-53,-55,-57,-61,-63,-67 &-69 SEE FIG.90 FOR BREAKDOWN......UHE,UHH,UHV,UHX	EA	1
7	18	XCFZZ		97499	205-070-888-1	.DISCRIMINATOR INSTL DISCRETE USBL EFF 68-15325 THRU 69-15291.....................................UHE,UHH,UHV,UHX	EA	1
7	18	XCFZZ		97499	205-070-888-3	.DISCRIMINATOR INSTL DISCRETE USBL EFF 69-15292 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
7	18	XCFZZ		97499	205-070-888-5	.DISCRIMINATOR INSTL DISCRETE...............UHE,UHH,UHV,UHX	EA	1
7	19	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	4
7	20	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT.................................UHE,UHH,UHV,UHX	EA	4
7	21	PAOZZ	5310-00-877-5797	96906	MS21044N3	..NUT,SELF-LOCKING, HEXAGON...................UHE,UHH,UHV,UHX	EA	6
7	22	PAOZZ	5305-00-990-6444	96906	MS35207-261	..SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	12
7	23	PAOZZ	1560-00-246-4827	97499	205-070-888-9	..COVER,ACCESS U/O PN 205-070-888-1..........UHE,UHH,UHV,UHX	EA	1
7	23	PBOZZ	1560-00-133-7120	97499	205-070-888-29	..COVER ASSY,AIRCRAFT U/O PN 205-070-888-3 ....UHE,UHH,UHV,UHX	EA	1
7	24	PBOZZ	1560-00-247-0463	97499	205-070-888-11	..PANEL,DISCRIMINATOR U/O PN 205-070-888-1 ....UHE,UHH,UHV,UHX	EA	1
7	24	XDOZZ	15[illegible]-00-485-0665	97499	205-070-888-31	..PLATE,DISCRIMINATOR U/O PN 205-070-888-5 RPLS--1560-00-	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						133-1212..UHE,UHH,UHV,UHX		
7	25	PBOZZ	1560-00-246-4821	97499	205-070-888-13	..BRACKET ASSEMBLY.............................UHE,UHH,UHV,UHX	EA	2
7	26	XCFZZ		97499	205-070-108-1	.BOX INSTL,CHECKLIST U/O PN 205-200-005-1,-3, -5,-7,-9,& -11 ....UHE,UHH,UHV,UHX	EA	1
7	26	XCFZZ		97499	205-070-110-1	.BOX INSTL,CHECKLIST U/O PN 205-200-005-13,-15, -19,-21,-23, -29,-35,-37, & -41..............................UHE,UHH,UHV,UHX	EA	1
7	27	PAOZZ	1680-00-872-7871	97499	205-070-109-1	..BOX,CHECK LIST U/O PN 205-070-108-1 & 205-070-110-1 ....UHE,UHH,UHV,UHX	EA	1
7	28	XCFZZ		97499	205-070-610-1	.BLANKET INSTL SOUNDPROOFING U/O PN 205-200-005-1 & -3 SEE FIG.44 FOR BREAKDOWWN..........................UHE,UHH,UHV,UHX	EA	1
7	28	XCFZZ		97499	205-070-610-3	.BLANKET INSTL SOUNDPROOFING U/O PN 205-200-005-5 & -7 SEE FIG.44 FOR BREAKDOWN............................UHE,UHH,UHV,UHX	EA	1
7	28	XCFZZ		97499	205-070-610-7	.BLANKET INSTL SOUNDPROOFING U/O PN 205-200-005-9 SEE FIG. 44 FOR BREAKDOWN...............................UHE,UHH,UHV,UHX	EA	1
7	28	XCFZZ		97499	205-070-610-5	.BLANKET INSTL SOUNDPROOFING U/O PN 205-200-005-11 & -13 SEE FIG.44 FOR BREAKDOWN............................UHE,UHH,UHV,UHX	EA	1
7	28	XCFZZ		97499	205-070-610-9	.BLANKET INSTL SOUNDPROOFING U/O PN 205-200-005-15,-19,& -21 SEE FIG.44 FOR BREAKDOWN........................UHE,UHH,UHV,UHX	EA	1
7	28	XCFZZ		97499	205-070-610-11	.BLANKET INSTL SOUNDPROOFING U/O PN 205-200-005-23,-29,-35, -37,-41,-43,-47,-53,-55, -57,-61,-63,-67,&-69 SEE FIG.44 FOR BREAKDOWN.................................UHE,UHH,UHV,UHX	EA	1
7	29	XCFZZ		97499	205-070-732-3	.SEAT INSTL,PASSENGR SEE FIG.39,40,& 42 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7	30	XCFZZ		97499	205-060-100-3	.ENGINE MOUNT INSTL U/O PN 205-200-005-1,3,-5, -7,-9,-11,& -13 SEE FIG. 87 FOR BREAKDOWN...................UHE,UHH,UHV,UHX	EA	1
7	30	XCFZZ		97499	205-060-100-5	.ENGINE MOUNT INSTL U/O PN 205-200-005-15,-19, -21,-23,-29,-35,-37,-41, -43,-47,-53,-55,-57,-61, -63,-67,&-69 SEE FIG.87 FOR BREAKDOWN.................................UHE,UHH,UHV,UHX	EA	1
7	31	AOOOO	1620-00-403-0593	97499	205-050-152-57	.LANDING GEAR ASSEMB U/O PN 205-030-008-3,-5,-7,-9,-13,-15,-17,-19,-21,23,-33,-35,-39,-45,-49,-51,-53,-57,-59,-61 & -65 SEE FIG.92 FOR BREAK- DOWN......................UHE,UHH,UHV,UHX	EA	1
7	32	XCFZZ		97499	205-070-730-3	.BELT INSTALLATION-P U/O PN 205-200-005-11,-13,-15, -19,-21, -23,-29,-35,-37, -41,-43,-47,-53,-55,-57, -61,-63,-67,&-69 ....UHH,UHV	EA	1
7		XCFZZ		97499	205-060-700-3	.CONTROL INSTL POWER LEVER U/O PN 205-200-005-1,-3,-5,-7,-9, -11,-13,-15 &-21 SEE FIG.112 & 114 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-060-700-5	.CONTROL INSTL POWER LEVER U/O PN 205-200-005-19,-21,-23,-29,-35,-37,-41,-43 &-47 SEE FIG.112 & 114 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-060-700-7	.CONTROL INSTL POWER LEVER U/O PN 205-200-005-53,-55,-57,-61,-63,-67 &-69 SEE FIG.112 & 114 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-060-701-3	.COMPENSATOR INSTL DROOP U/O PN 205-200-005-1,-3,-5,-7, & -9 SEE FIG.117 FOR BREAKDOWN.......................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-060-701-5	.COMPENSATOR INSTL DROOP U/O PN 205-200-005-11,-13,-15, -19, -21,-23,-29,-35,-37, -41,-43,-47,-53,-55,-57, -61,-63,-67,&-69 SEE FIG.117 FOR BREAKDOWN..................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-060-500-5	.OIL SYST INSTL U/O PN 205-200-005-1 & -3 SEE FIG.119,121, 122 & 125 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-060-500-7	.OIL SYST INSTL U/O PN 205-200-005-5,-7, & -9 SEE FIG.119, 121,122 & 125 FOR BREAKDOWN.....................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-060-500-9	.OIL SYST INSTL U/O PN 205-200-005-11 & -13 SEE FIG.119,121, 122 & 125 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-060-500-11	.OIL SYST INSTL U/O PN 205-200-005-15 & -21 SEE FIG.119,121, 122 & 125 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-060-500-13	.OIL SYST INSTL U/O PN 205-200-005-19, -23,-29,-35,-37,-41,-43, -47,-53,& -55 SEE FIG.119,121,122 & 125 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-060-500-17	.OIL SYST INSTL U/O PN 205-200-005-61 SEE FIG.119,121,122 &	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						125 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX		
7		XCFZZ		97499	205-060-500-19	.OIL SYST INSTL U/O PN 205-200-005-57,63, -67,&-69 SEE FIG. 119,121,122 & 125 FOR BREAKDOWN...............UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-060-500-23	.OIL SYST INSTL U/O PN 205-200-005-71 SEE FIG.119,121,122 & 125 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-004-3	.CONTROL INSTL FORE & AFT &LATERAL CYCLIC U/O PN 205-200-005-1 & -3 SEE FIG.358,359,361 & 362 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-004-5	.CONTROL INSTL FORE & AFT &LATERAL CYCLIC U/O PN 205-200-005-5 & -7 SEE FIG.358,359,361 & 362 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-004-7	.CONTROL INSTL FORE & AFT &LATERAL CYCLIC U/O PN 205-200-005-9,-11, - &13 SEE FIG.358,359,361 & 362 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-004-9	.CONTROL INSTL FORE & AFT &LATERAL CYCLIC U/O PN 205-200-005-15 & -21 SEE FIG.358,359,361 & 362 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-004-11	.CONTROL INSTL FORE & AFT &LATERAL CYCLIC U/O PN 205-200-005-19,-23, -29,-35,-37,& -41 SEE FIG.358,359,361 & 362 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-004-19	.CONTROL INSTL FORE & AFT &LATERAL CYLIC U/O PN 205-200-005-43 SEE FIG.358,359,361 & 362 FOR BREAKDOWN....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-004-15	.CONTROL INSTL FORE & AFT &LATERAL CYLIC U/O PN 205-200-005-47,-53, -55,-57,-61,-63,-67,&-69 SEE FIG.358,359,361 & 362 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	204-070-012-1	.PIPING INSTL U/O PN 205-200-005-1,-3,-5,-7, & -9 SEE FIG. 222 & 224 FOR BREAKDOWN.....................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	204-070-012-3	.PIPING INSTL U/O PN 205-200-005-11 & -13 SEE FIG.222 & 224 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	204-070-012-7	.PIPING INSTL U/O PN 205-200-005-15 & -21 SEE FIG.222 & 224 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	204-072-197-5	.PIPING INSTL U/O PN 205-200-005-19,-23,-29,-35,-37,-41,-43, -47,-53,-55,-57-61,-63,-67,-69 SEE FIG.223 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-002-3	.CONTROL INSTL ANTI-TORQUE U/O PN 205-200-005-1 & -3 SEE FIG.345 & 346 FOR BREAKDOWN.....................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-002-5	.CONTROL INSTL ANTI-TORQUE U/O PN 205-200-005-5,-7,& -9 SEE FIG.345 & 346 FOR BREAKDOWN.....................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-002-7	.CONTROL INSTL ANTI-TORQUE U/O PN 205-200-005-11 & -13 SEE FIG.345 & 346 FOR BREAKDOWN.....................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-002-11	.CONTROL INSTL ANTI-TORQUE U/O PN 205-200-005-15 & -21 SEE FIG.345 & 346 FOR BREAKDOWN.....................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-002-13	.CONTROL INSTL ANTI-TORQUE U/O PN 205-200-005-19,-23,& -29 SEE FIG.345 & 346 FOR BREAKDOWN...............UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-002-15	.CONTROL INSTL ANTI-TORQUE U/O PN 205-200-005-35 & -37 SEE FIG.345 & 346 FOR BREAKDOWN.....................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-002-19	.CONTROL INSTL ANTI-TORQUE U/O PN 205-200-005-41,-43,-47, -53,-55,-57,-61,-63,-67, &-69 SEE FIG.345 & 346 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-003-3	.CONTROL INSTL ROTOR FORWARD SECTION U/O PN 205-200-005-1 SEE FIG. 364 & 367 FOR BREAKDOWN...............UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-003-5	.CONTROL INSTL ROTOR FORWARD SECTION U/O PN 205-200-005-3 SEE FIG.364 & 367 FOR BREAKDOWN...............UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-003-7	.CONTROL INSTL ROTOR FORWARD SECTION U/O PN 205-200-005-5 & -7 SEE FIG.364 & 367 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-003-9	.CONTROL INSTL ROTOR FORWARD SECTION U/O PN 205-200-005-9,-11,& -13 SEE FIG.364 & 367 FOR BREAKDOWN......UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-003-11	.CONTROL INSTL ROTOR FORWARD SECTION U/O PN 205-200-005-15,-19,-21, -23,-29,-35,-37,-41,-43, -47,-53,-55,-57,-61,-63 -67, &-69 SEE FIG.364 & 367 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION * USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
7		XCFZZ		97499	205-001-006-3	.CONTROL INSTL REMOVABLE U/O PN 205-200-005-1,-3,-5,& -7 SEE FIG.352 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-006-5	.CONTROL INSTL REMOVABLE U/O PN 205-200-005-9,-11,-13, -15,-19,-21,-23,-29,-35, -37,& -41 SEE FIG.352 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-006-9	.CONTROL INSTL REMOVABLE U/O PN 205-200-005-43,-47,-53, -55, &-61 SEE FIG.392 FOR BREAKDOWN.................UHF,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-006-11	.CONTROL INSTL REMOVABLE U/O PN 205-200-005-57,-63,-67, &-69 SEE FIG.352 FOR BREAKDOWN......................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-010-1	.CONTROL INSTL FORWARD U/O PN 205-200-005-1,-3,-5, -7,-9,-11,-13,-15,-19,-21 -23,-29,-35,-37,-41,& -43 SEE FIG.376 FOR BREAKDOWN...UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-001-010-9	.CONTROL INSTL FORWARD U/O PN 205-200-005-47,-53,-55, -57,-61,-63,-67,&-69 SEE FIG.376 FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-040-201-3	.COOLER INSTL TRANSMISSION OIL U/O PN 205-200-005-1,-3,-5,-7, -9,-11,-13,-15,-19,-21, -23,-29,-35,-37,-41,-43, -47,-53,-55,& -61 SEE FIG.175 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-040-201-5	.COOLER INSTL TRANSMISSION OIL U/O PN 205-200-005-57,-63,-67, &-69 SEE FIG.175 FOR BKDN..................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-061-620-1	.LINES INSTL,FUEL U/O PN 205-200-005-1,-3,-5,-7, & -9 SEE FIG.338 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-061-620-3	.LINES INSTL,FUEL U/O PN 205-200-005-11,-13,-15, -19,-21,& -23 SEE FIG.338 FOR BREAKDOWN..................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-061-620-5	.LINES INSTL,FUEL U/O PN 205-200-005-29,-35,-37, -41,-43,-47,-53,-55,-57, & -61 SEE FIG.338 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-061-620-9	.LINES INSTL,FUEL U/O PN 205-200-005-63,-67,& -69 SEE FIG. 338 FOR BREAKDOWN.............................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-063-600-9	.FUEL SYST INSTL U/O PN 205-200-005-63,-67,-69,&-71 SEE FIG. 312,320,328,331 & 335 FOR BREAKDOWN...........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-100-3	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-1&-3 SEE FIG.212 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-100-5	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-5&-7 SEE FIG.212 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-100-7	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-11 SEE FIG.212 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-100-9	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-9 SEE FIG.212 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-100-11	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-15 SEE FIG.212 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-100-13	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-13 SEE FIG.212 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-100-15	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-21 SEE FIG.212 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-117-1	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-19&-23 SEE FIG.212 FOR BREAKDOWN.....................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-112-7	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-29,-35&-37 SEE FIG.212 FOR BREAKDOWN..................UHF,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-112-21	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-41&43 SEE FIG.212 FOR BREAKDOWN......................UHF,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-112-27	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-47,-53,-55,&-61 SEE FIG.212 FOR BREAKDOWN.............UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-112-35	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-57 SEE FIG.212 FOR BREAKDOWN..........................UHF,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-112-37	.PEDESTAL INSTL INSTRUMENT PANEL U/O PN 205-200-005-63,-67 &-69 SEE FIG.212 FOR BREAKDOWN.................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-480-1	.AIR DISTR INSTL U/O PN 205-200-005-1 & -3 SEE FIG.401,404, 405 & 406 FOR BREAKDOWN.........................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
7		XCFZZ		97499	205-070-480-3	.AIR DISTR INSTL U/O PN 205-200-005-5 SEE FIG.401,404,405 & 406 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-480-5	.AIR DISTR INSTL U/O PN 205-200-005-11 SEE FIG.401,404,405 & 406 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-480-7	.AIR DISTR INSTL U/O PN 205-200-005-7,-9 SEE FIG.401,404,405 & 406 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-480-9	.AIR DISTR INSTL U/O PN 205-200-005-13 SEE FIG.401,404,405 & 406 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-072-400-1	.AIR DISTR INSTL U/O PN 205-200-005-15 & -21 SEE FIG.389 & 392 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-072-400-3	.AIR DISTR INSTL U/O PN 205-200-005-19 SEE FIG.389 & 392 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-072-400-7	.AIR DISTR INSTL U/O PN 205-200-005-23 SEE FIG.389 & 392 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-072-400-5	.AIR DISTR INSTL U/O PN 205-200-005-29,-35, -37,-41,-43,-47, -53,-55, -57,-61,-63,-67,-&-69 SEE FIG.389 & 392 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-508-1	.CONTROL INSTL EMERGENCY JETTISON U/O PN 205-200-005-1 & -3 SEE FIG.442 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-508-3	.CONTROL INSTL EMERGENCY JETTISON U/O PN 205-200-005-5,-7,-9, -11,-13,-15,-19,-21,& -23 SEE FIG.442 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-705-3	.LITTER INSTL U/O PN 205-200-005-1 & -3 SEE FIG.90 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-705-5	.LITTER INSTL U/O PN 205-200-005-7 & -9 SEE FIG.90 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-705-7	.LITTER INSTL U/O PN 205-200-005-5 SEE FIG.90 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7	33	PAOOO	1680-00-788-8667	97499	205-070-705-11	.INSTALLATION KIT,LI U/O PN 205-200-005-11,-13,-15,-19 & -21 SEE FIG.90 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-900-3	.SUSPENSION INSTL CARGO U/O PN 205-200-005-1 & -3 SEE FIG. 414 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-900-5	.SUSPENSION INSTL CARGO U/O PN 205-200-005-5,-7,-9, -11,& -13 SEE FIG.414 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-900-7	.SUSPENSION INSTL CARGO U/O PN 205-200-005-15,-19,-21, -23,-29,-35,-37,& -41 SEE FIG.414 FOR BREAKDOWN....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-070-900-19	.SUSPENSION INSTL CARGO U/O PN 205-200-005-43,-47,-53, -55,-57,-61,-63,-67,& -69 SEE FIG.414 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-006-1	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-1 & -3 SEE FIG.226 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-008-1	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-5 SEE FIG. 226 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-008-3	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-7 SEE FIG. 226 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-008-5	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-9 SEE FIG. 226 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-013-1	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-11 SEE FIG.226 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-013-3	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-13 SEE FIG.226 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-018-1	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-15 SEE FIG.226 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-018-3	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-21 SEE FIG.226 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-032-1	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-19 SEE FIG.226 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-032-3	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-23 USBL	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						EFF 66-16034 THRU 66-16306 SEE FIG.226 FOR BREAKDOWN ....UHE,UHH,UHV,UHX		
7		XCFZZ		97499	205-075-032-15	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-23 USBL EFF 66-15307 THRU 66-16448 SEE FIG.226 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-032-13	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-23 USBL EFF 66-16449 THRU 66-16867 SEE FIG.226 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-032-9	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-29 SEE FIG.226 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-036-1	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-35 SEE FIG.226 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-036-3	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-37 SEE FIG.226 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-036-7	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-41 SEE FIG.226 FOR BREAKDOWN..........................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-036-9	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-43,-47, -53, -55,-57 & -61 SEE FIG.226 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-036-11	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-63,-67, &-69 SEE FIG.226 FOR BREAKDOWN.................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-075-036-15	.ELECTRICAL INSTL FORWARD SECTION U/O PN 205-200-005-69 &-71 SEE FIG.226 FOR BREAKDOWN......................UHE,UHH,UHV,UHX	EA	1
7		XCDZZ		97499	205-075-036-17	.ELECTRICAL INSTL USBL EFF 73-2177,73-21840,73-22068 & SUBSEQUENT SEE FIG.226 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-076-012-3	.HYDRAULIC INSTL U/O PN 205-200-005-1,-3, -5,& -7 SEE FIG. 201,202,203 & 205 FOR BREAKDOWN...............UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-076-012-5	.HYDRAULIC INSTL U/O PN 205-200-005-9 SEE FIG.201,202,203 & 205.....................................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-076-012-7	.HYDRAULIC INSTL U/O PN 205-200-005-11 & -13 SEE FIG.201, 202,203 & 205 FOR BREAKDOWN....................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-076-012-9	.HYDRAULIC INSTL U/O PN 205-200-005-15 & -21 SEE FIG.201, 202,203,205 & 206 FOR BREAKDOWN...............UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-076-023-1	.HYDRAULIC INSTL U/O PN 205-200-005-19 USBL EFF 66-746 THRU 66-1146 SEE FIG.201,202,203,205 & 206 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-076-023-5	.HYDRAULIC INSTL U/O PN 205-200-005-19,-23, -29,-35,-37,-41, -43,-47, &-53 USBL EFF 66-1147 THRU 68-15778 SEE FIG.201,202, 203,205 & 206 FOR BEAKDOWN.....................UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-076-023-7	.HYDRAULIC INSTL U/O PN 205-200-005-55,-57, & -61 SEE FIG. 201,202,203,205 & 206 FOR BREAKDOWN...........UHE,UHH,UHV,UHX	EA	1
7		XCFZZ		97499	205-076-023-11	.HYDRAULIC INSTL U/O PN 205-200-005-63,-67 & -69 SEE FIG. 201,202,203,205 & 206 FOR BREAKDOWN...........UHE,UHH,UHV,UHX	EA	1
7	34	PAOZZ	1560-00-773-2357	00781	19039	.BRACKET ASSEMBLY..............................UHE,UHH,UHV,UHX	EA	6
7	35	PAOZZ	9905-00-675-1214	97499	204-070-781-1	.DECAL,METAL-TRANSMI OIL LEVEL LIGHT-SWITCH ....UHE,UHH,UHV,UHX	EA	1

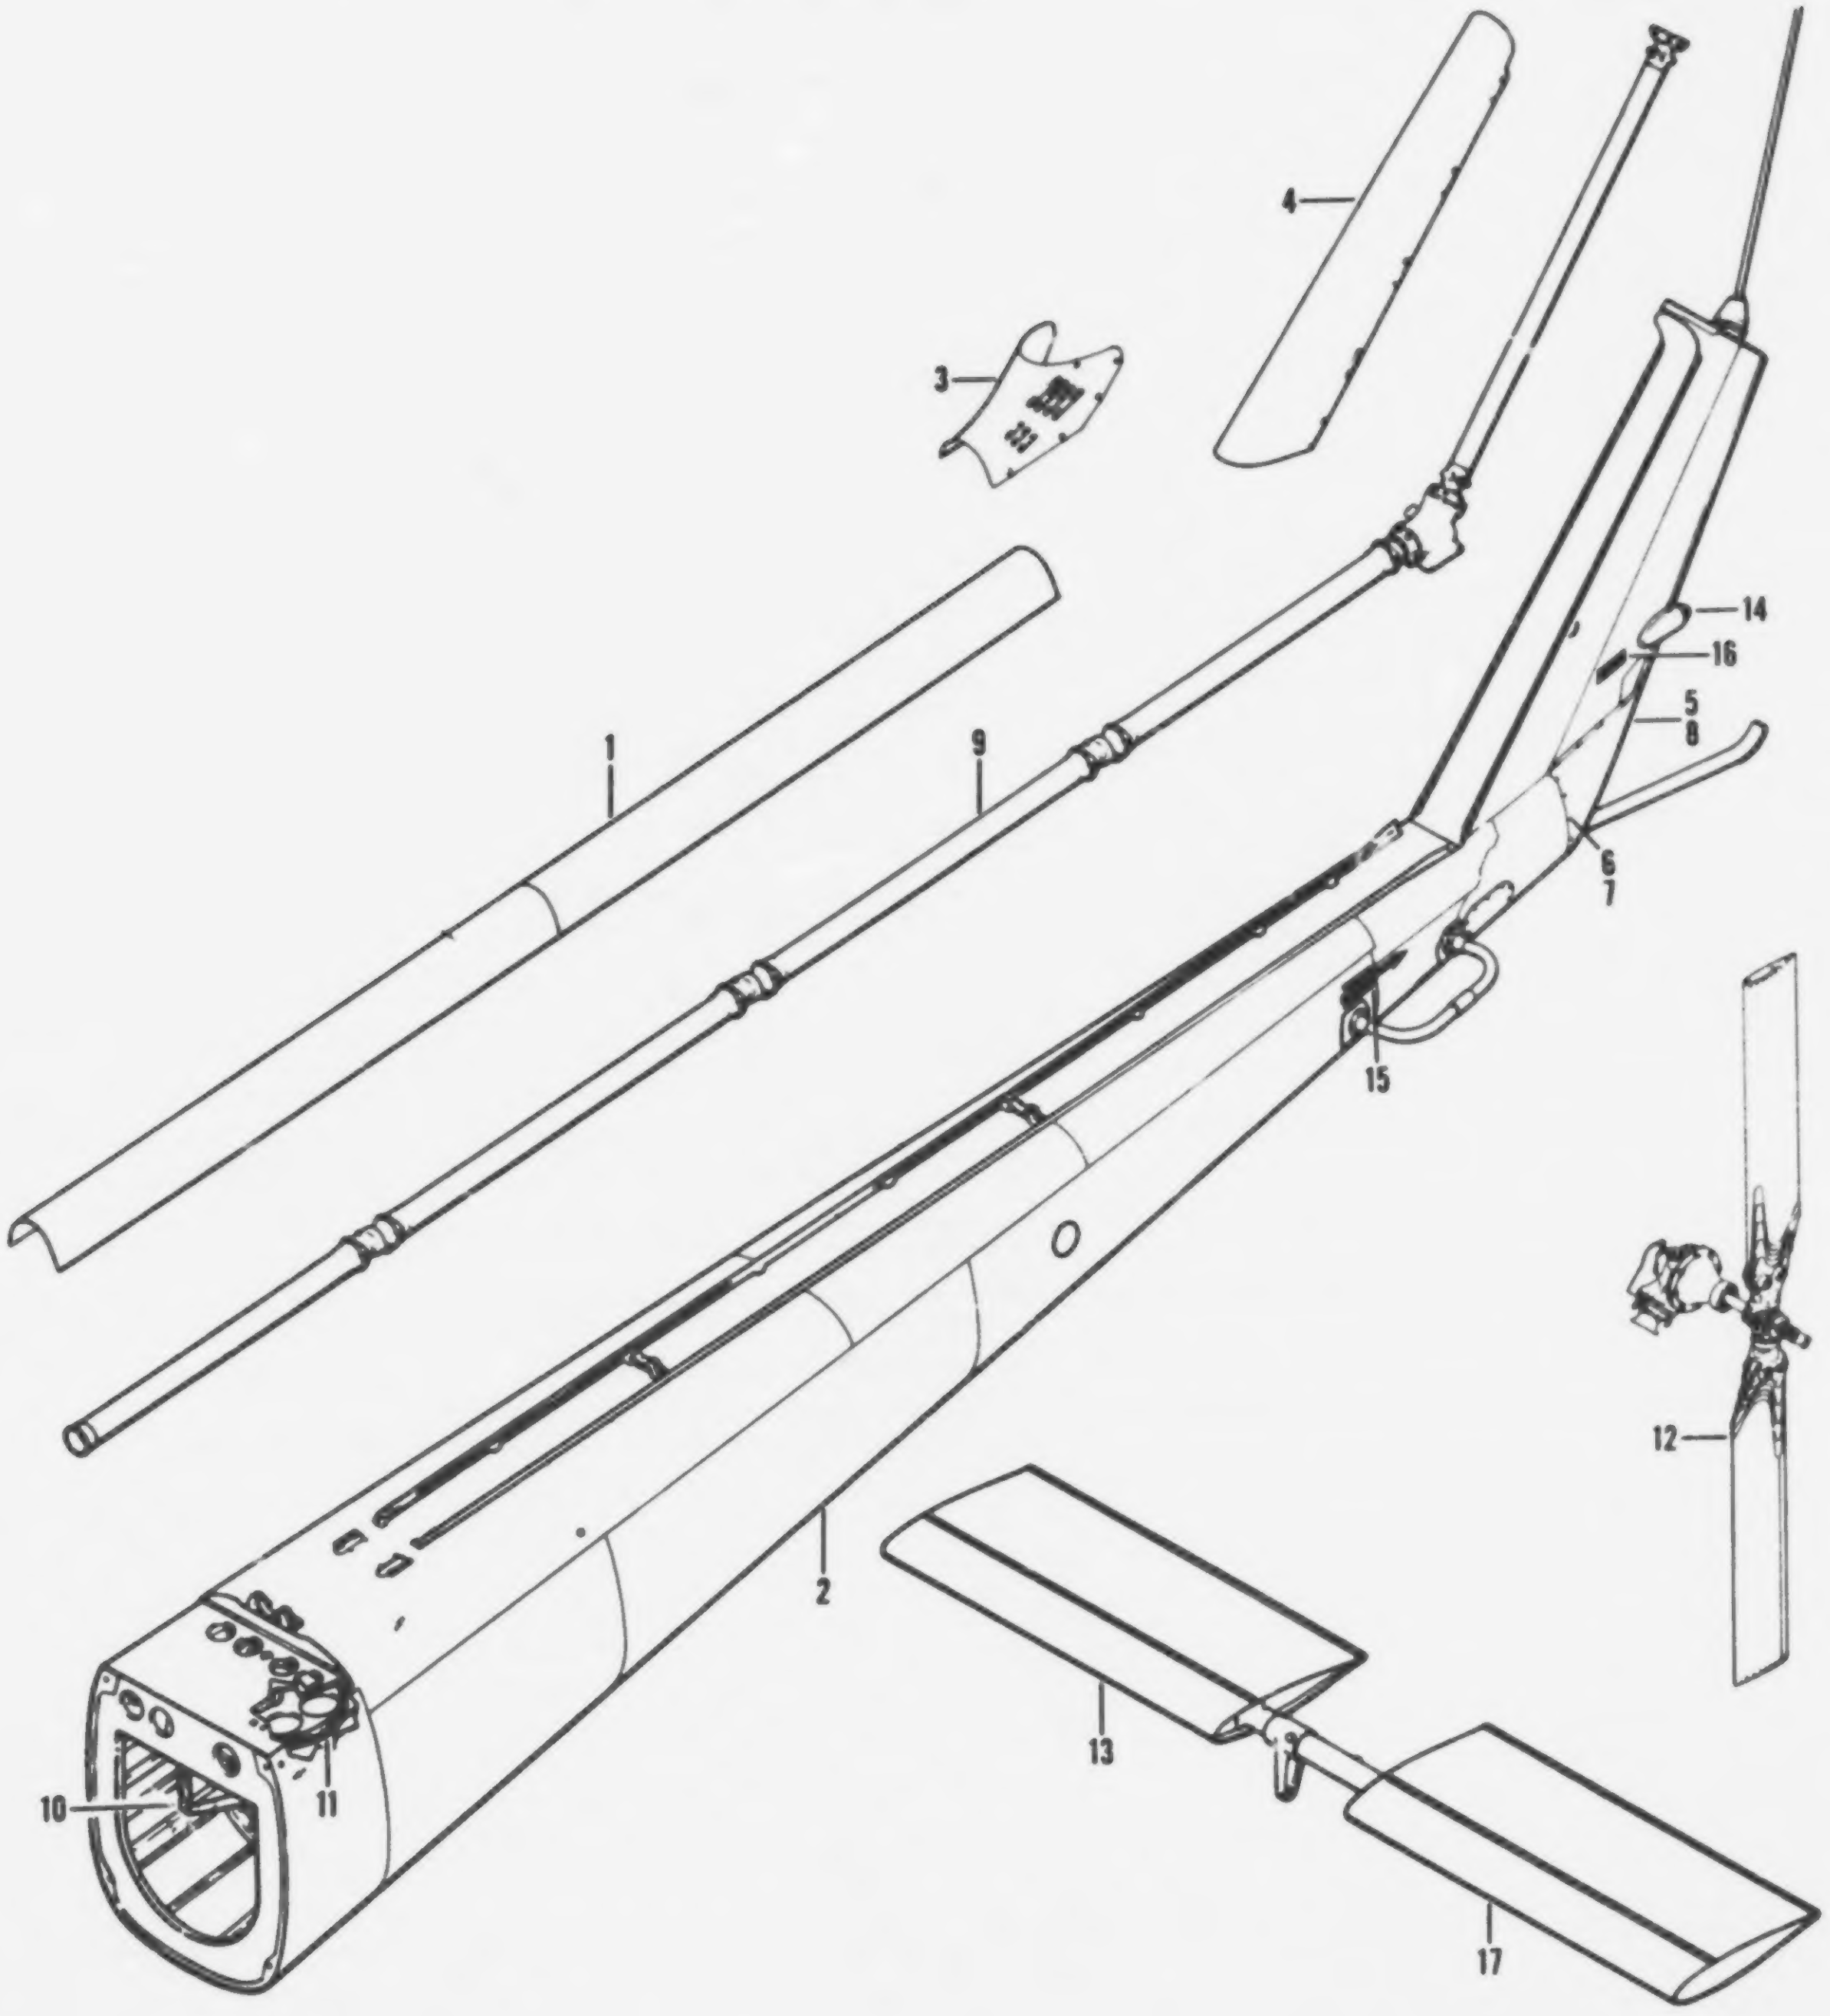
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

Figure 8. Section Assembly, Helicopter Aft

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
8		XCFZZ		97499	204-200-011-1	SECTION ASSY,ACFT AFT USBL EFF 60-3546 THRU 61-723 SEE FIG.4 FOR NHA..	EA	1
8		XCFZZ		97499	204-200-011-5	SECTION ASSY,ACFT AFT USBL EFF 61-724 THRU 61-753 SEE FIG.4 FOR NHA..	EA	1
8		XCFZZ		97499	204-200-011-11	SECTION ASSY,ACFT AFT USBL EFF 61-754 THRU 61-803 SEE FIG.4 FOR NHA..	EA	1
8		XCFZZ		97499	204-200-011-9	SECTION ASSY,ACFT AFT USBL EFF 62-1872 THRU 62-1996 SEE FIG. 4 FOR NHA..	EA	1
8		XCFZZ		97499	204-200-011-13	SECTION ASSY,ACFT AFT USBL EFF 62-1997 THRU 62-12555 SEE FIG.4 FOR NHA..	EA	1
8		XCFZZ		97499	204-200-011-15	SECTION ASSY,ACFT AFT USBL EFF 63-8500 THRU 63-8658 SEE FIG. 4 FOR NHA..	EA	1
8		XCFZZ		97499	204-200-011-25	SECTION ASSY,ACFT AFT USBL EFF 63-8659 THRU 63-12952 SEE FIG.4 FOR NHA..	EA	1
8		XCFZZ		97499	204-200-011-29	SECTION ASSY,ACFT AFT USBL EFF 64-13902 THRU 64-14100 SEE FIG.4 FOR NHA..	EA	1
8		XCFZZ		97499	204-200-011-31	SECTION ASSY,ACFT AFT USBL EFF 64-14101 THRU 64-14191 SEE FIG.4 FOR NHA.. UHM	EA	1
8		XCFZZ		97499	204-200-011-37	SECTION ASSY,ACFT AFT USBL EFF 65-9416 THRU 65-12772 SEE FIG.4 FOR NHA.. UHM	EA	1
8		XCFZZ		97499	204-200-011-43	SECTION ASSY,ACFT AFT USBL EFF 66-492 THRU 66-601 SEE FIG.4 FOR NHA.. UHM	EA	1
8		XCFZZ		97499	204-200-011-45	SECTION ASSY,ACFT AFT USBL EFF 66-602 & SUBSEQUENT SEE FIG.4 FOR NHA.. UHM	EA	1
8		XCFZZ		97499	205-200-006-1	SECTION ASSY,ACFT AFT USBL EFF 62-2106 THRU 62-2113 SEE FIG. 5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-3	SECTION ASSY,ACFT AFT USBL EFF 62-12351 THRU 62-12372 SEE FIG.5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-5	SECTION ASSY,ACFT AFT USBL EFF 63-8739 THRU 63-8803 SEE FIG. 5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-7	SECTION ASSY,ACFT AFT USBL EFF 63-8804 THRU 63-8859 SEE FIG. 5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-9	SECTION ASSY,ACFT AFT USBL EFF 63-12956 THRU 63-13002 SEE FIG.5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-11	SECTION ASSY,ACFT AFT USBL EFF 64-13492 THRU 64-13901 SEE FIG.5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-13	SECTION ASSY,ACFT AFT USBL EFF 65-9565 THRU 65-12895 SEE FIG.5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-15	SECTION ASSY ACFT AFT USBL EFF 66-746 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.5 FOR NHA...........UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-19	SECTION ASSY,ACFT AFT USBL EFF 67-17145 THRU 67-19537 SEE FIG.5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-27	SECTION ASSY,ACFT AFT USBL EFF 68-15214 THRU 68-15778 SEE FIG.5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-33	SECTION ASSY,ACFT AFT USBL EFF 68-16050 THRU 68-16342 SEE FIG.5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-35	SECTION ASSY,ACFT AFT USBL EFF 68-16343 THRU 70-15932 SEE FIG.5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
8		XCFZZ		97499	205-200-006-39	SECTION ASSY,ACFT AFT USBL EFF 70-16200 THRU 72-21649 SEE FIG.5 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
9	1	XCFZZ		97499	205-031-813-1	.DOOR INSTL,ACCESS TAIL ROTOR SHAFT SEE FIG.18 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
8	2	PAODD	1560-00-073-8702	97499	204-030-800-491	.BOOM,ROTARY RUDDER SEE FIGURES 9,10 & 11 FOR BREAKDOWN .... UHM	EA	1
8	2	PAODD	1560-00-463-1273	97499	205-032-800-71	.BOOM,ROTARY RUDDER SEE FIGURE 15 & 16 FOR BREAKDOWN	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						....................UHH,UHV		
8	3	PAODD	1560-00-765-7834	97499	204-030-834-21	.COVER,ACCESS SEE FIG.17 & 18 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
8	4	XCFZZ		97499	204-030-829-33	.DOOR INSTL VERTICAL FIN SEE FIG 17 & 18 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
8	5	XCFZZ		97499	204-030-768-1	.FAIRING INSTL LOWER FIN U/O (UH-1B) PN 204-200-011-1 THRU -29....................UHB,UHE,UHH,UHV,UHX	EA	1
8	5	XCFZZ		97499	204-031-096-1	.FAIRING INSTL LOWER FIN....................UHB,UHC,UHM	EA	1
8	6	PAOZZ	5305-00-944-8271	96906	MS27039-0806	..SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	18
8	7	PAOZZ	5305-00-281-8527	88044	AN525-832R8	..SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
8	8	PAOZZ	1560-00-701-5657	97499	204-030-768-3	..FAIRING ASSEMBLY,LO VERTICAL FIN U/O PN 204-030-768-1 U/W (UH-1B) PN 204-030-800-13,-249,-289,-297,-311,-369,-395,-399, -433,-435,-441,-465 & -469....................UHB,UHE,UHH,UHV,UHX	EA	1
8	8	PAOZZ	1560-00-872-7847	97499	204-031-096-3	..FAIRING ASSEMBLY,LO U/O PN 204-031-096-1 U/W PN 204-030-800-447,-451, -471,& -473....................UHB,UHC,UHM	EA	1
8	9	XCFZZ		97499	204-040-011-1	.SHAFT INSTL TAIL ROTOR U/O PN 204-200-011-1,-5 &-11 SEE FIG.178 FOR BREAKDOWN....................UHB	EA	1
8	9	XCFZZ		97499	204-040-011-5	.SHAFT INSTL TAIL ROTOR U/O (UH-1B) PN 204-200-011-9,-13,-15,-25,& -29 SEE FIG.178 FOR BREAKDOWN....................UHB,UHC,UHM	EA	1
8	9	XCFZZ		97499	205-040-003-1	.SHAFT INSTL TAIL ROTOR SEE FIG.179 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
8	10	XCFZZ		97499	204-001-060-3	.CONTROL INSTL SYNCHRONIZED ELEVATOR AFT U/O PN 204-200-011-1 & -5 SEE FIG.377 FOR BREAKDOWN....................UHB	EA	1
8	10	XCFZZ		97499	204-001-060-5	.CONTROL INSTL SYNCHRONIZED ELEVATOR AFT U/O PN 204-200-011-11 SEE FIG.377 FOR BREAKDOWN....................UHB	EA	1
8	10	XCFZZ		97499	204-001-060-7	.CONTROL INSTL SYNCHRONIZED ELEVATOR AFT U/O PN 204-200-011-9,-13, -15,-25,& -29 SEE FIG.377 FOR BREAKDOWN....................UHB	EA	1
8	10	XCFZZ		97499	204-001-076-3	.CONTROL INSTL SYNCHRONIZED ELEVATOR AFT SEE FIG.377 FOR BREAKDOWN....................UHC,UHM	EA	1
8	10	XCFZZ		97499	205-001-010-5	.CONTROL INSTL SYNCHRONIZED ELEVATOR AFT U/O PN 205-200-006-1 SEE FIG.378 FOR BREAKDOWN....................UHE,UHH,UHV,UHX	EA	1
8	10	XCFZZ		97499	205-001-010-7	.CONTROL INSTL SYNCHRONIZED ELEVATOR AFT U/O PN 205-200-006-3,-5,& -7 SEE FIG.378 FOR BREAKDOWN....................UHE,UHH,UHV,UHX	EA	1
8	10	XCFZZ		97499	205-001-009-1	.CONTROL INSTL SYNCHRONIZED ELEVATOR AFT U/O PN 205-200-006-9,-11, -13,& -15SEE FIG.378 FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
8	10	XCFZZ		97499	205-001-009-3	.CONTROL INSTL SYNCHRONIZED ELEVATOR AFT U/O PN205-200-006-19,-27, -33,& -35 SEE FIG.378 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
8	11	XCFZZ		97499	204-001-049-1	.CABLE INSTL ROTOR CONTROL AFT U/O PN 204-200-011-1,& -5 SEE FIG.371 & 373 FOR BREAKDOWN....................UHB	EA	1
8	11	XCFZZ		97499	204-001-049-3	.CABLE INSTL ROTOR CONTROL AFT U/O PN 204-200-011-11 SEE FIG.371 & 373 FORBREAKDOWN....................UHB	EA	1
8	11	XCFZZ		97499	204-001-049-9	.CABLE INSTL ROTOR CONTROL AFT U/O PN 204-200-011-9 SEE FIG. 371 & 373 FOR BREAKDOWN....................UHB	EA	1
8	11	XCFZZ		97499	204-001-049-17	.CABLE INSTL ROTOR CONTROL AFT U/O (UH-1B) PN 204-200-011, 13, -15,-25,& -29 SEE FIG.371 & 373 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
8	11	XCFZZ		97499	205-001-005-3	.CABLE INSTL ROTOR CONTROL AFT U/O PN 205-200-006-1 & -3 SEE FIG.372 & 373 FOR BREAKDOWN....................UHE,UHH,UHV,UHX	EA	1
8	11	XCFZZ		97499	205-001-005-5	.CABLE INSTL ROTOR CONTROL AFT U/O PN 205-200-006-5,-7,-9,& -11 SEE FIG.372 & 373....................UHE,UHH,UHV,UHX	EA	1
8	11	XCFZZ		97499	205-001-005-7	.CABLE INSTL ROTOR CONTROL AFT U/O PN205-200-006-13,-15,-19, -27,-33,&-35 SEE FIG.372 & 373 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
8	12	XCFZZ		97499	204-011-700-25	.TAIL ROTOR INSTL SEE FIG.145 FOR BREAKDOWN....................UHB	EA	1
8	12	XCFZZ		97499	204-011-700-17	.TAIL ROTOR INSTL SEE FIG.145 FOR BREAKDOWN....................UHC,UHM	EA	1
8	12	XCFZZ		97499	205-010-700-5	.TAIL ROTOR INSTL U/O PN 205-200-006-1 &-3	EA	1

(1) ILLUSTRATION (a) FIG. NO	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						............UHE,UHH,UHV,UHX		
8	12	XCFZZ		97499	205-010-700-7	.TAIL ROTOR INSTL U/O PN 205-200-006-5 & -7 ....UHE,UHH,UHV,UHX	EA	1
8	12	XCFZZ		97499	204-011-700-13	.TAIL ROTOR INSTL U/O PN 205-200-006-9 & -11 ....UHE,UHH,UHV,UHX	EA	1
8	12	XCFZZ		97499	204-011-700-15	.TAIL ROIOR INSTL U/O PN 205-200-006-13,-15,&-19 ....UHE,UHH,UHV,UHX	EA	1
8	12	XCFZZ		97499	204-011-700-21	.TAIL ROTOR INSTL J/O PN 205-200-006-27,-33, & -35 SEE FIG. 145 FOR BREAKDOWN............UHE,UHH,UHV,UHX	FA	1
8	12	XCFZZ		97499	204-011-700-25	.TAIL ROTOR INSTL USBL EFF 73-21661 & SUB SEE FIG.145 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
8	13	XCFZZ		97499	204-030-858-45	.ELFVATOR INSTL SYNCHRONIZED U/O PN 204-200-011-1,-5,& -11 SEE FIG.379 FOR BREAKDOWN............UHB	EA	1
8	13	XCFZZ		97499	204-030-858-49	.ELEVATOR INSTL SYNCHRONIZED U/O PN 204-200-011-9,-13,-15, -25,& -29 SEE FIG.379 FOR BREAKDOWN............UHB	EA	1
8	13	XCFZZ		97499	205-030-890-9	.ELEVATOR INSTL SYNCHRONIZED U/O PN 204-200-011-31 & -37 SEE FIG.379 FOR BREAKDOWN............UHC,UHM	EA	1
8	13	XCFZZ		97499	205-030-890-15	.ELEVATOR INSTL SYNCHRONIZED U/O PN 204-200-011-43 &-45 SEE FIG.379 FOR BREAKDOWN............UHC,UHM	EA	1
8	13	XCFZZ		97499	205-030-890-3	.ELEVATOR INSTALLATI SYNCHRONIZED SEE FIG 379 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
8	14	XCFZZ		97499	204-075-021-1	.ELECTRICAL INSTL AFT SECTION U/O PN 204-200-011-1,-5,-9, -11,& -13 SEE FIG.283 FOR BREAKDOWN............UHB	EA	1
8	14	XCFZZ		97499	204-075-047-1	.ELECTRICAL INSTL AFT SECTION U/O PN 204-200-011-15 & -25 SEE FIG.283 FOR BREAKDOWN............UHB	EA	1
8	14	XCFZZ		97499	204-075-062-1	.ELECTRICAL INS'L AFT SECTION U/O PN 204-200-011-29 SEE FIG. 283 FOR BREAKDOWN............UHB	EA	1
8	14	XCFZZ		97499	204-075-062-5	.ELECTRICAL INSTL AFT SECTION U/O PN 204-200-011-31 SEE FIG. 284 FOR BREAKDOWN............UHC,UHM	EA	1
8	14	XCFZZ		97499	204-075-077-1	.ELECTRICAL INSTL AFT SECTION U/O PN 204-200-011-37,-43,& -45 SEE FIG.284 FOR BREAKDOWN............UHC,UHM	EA	1
8	14	XCFZZ		97499	205-075-005-1	.ELECTRICAL INSTL AFT SECTION U/O PN 205-200-006-1,-3,-5,& -7 SEE FIG.285 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
8	14	XCFZZ		97499	205-075-029-1	.ELECTRICAL INSTL AFT SECTION U/O PN 205-200-006-9 SEE FIG. 285 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
8	14	XCFZZ		97499	205-075-015-1	.ELECTRICAL INSTL AFT SECTION U/O PN 205-200-006-11 SEE FIG. 285 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
8	14	XCFZZ		97499	205-075-020-1	.ELECTRICAL INSTL AFT SECTION U/O PN 205-200-006-13 & -15 SEE FIG.285 FOR BREAKDOWN............UHF,UHH,UHV,UHX	EA	1
8	14	XCFZZ		97499	205-075-020-13	.ELECTRICAL INSTL AFT SECTION U/O PN205-200-006-19,-27,-33, & -35 SEE FIG.285 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
8	15	MFOZZ	1560-00-779-0730	97499	204-070-818-3	.STENCIL,LH DANGER KEEP AWAY.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
8	15	MFOZZ	7690-00-778-7604	97499	204-070-818-1	.STENCIL,RH DANGER KEEP AWAY.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
8	16	MFOZZ	7520-00-904-4616	97499	205-070-853-3	.STENCIL,LH DANGER TAIL ROTOR U/O (UH-1B) PN 204-200-011-9,-13,-15,-25 &-29 SEE............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
8	16	MFOZZ	7520-00-904-4617	97499	205-070-853-1	.STENCIL,RH DANGER............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
8	17	MFOZZ	1560-00-981-3080	97499	204-070-798-1	.STENCIL,NO PUSH............UHE,UHH,UHV,UHX	EA	10

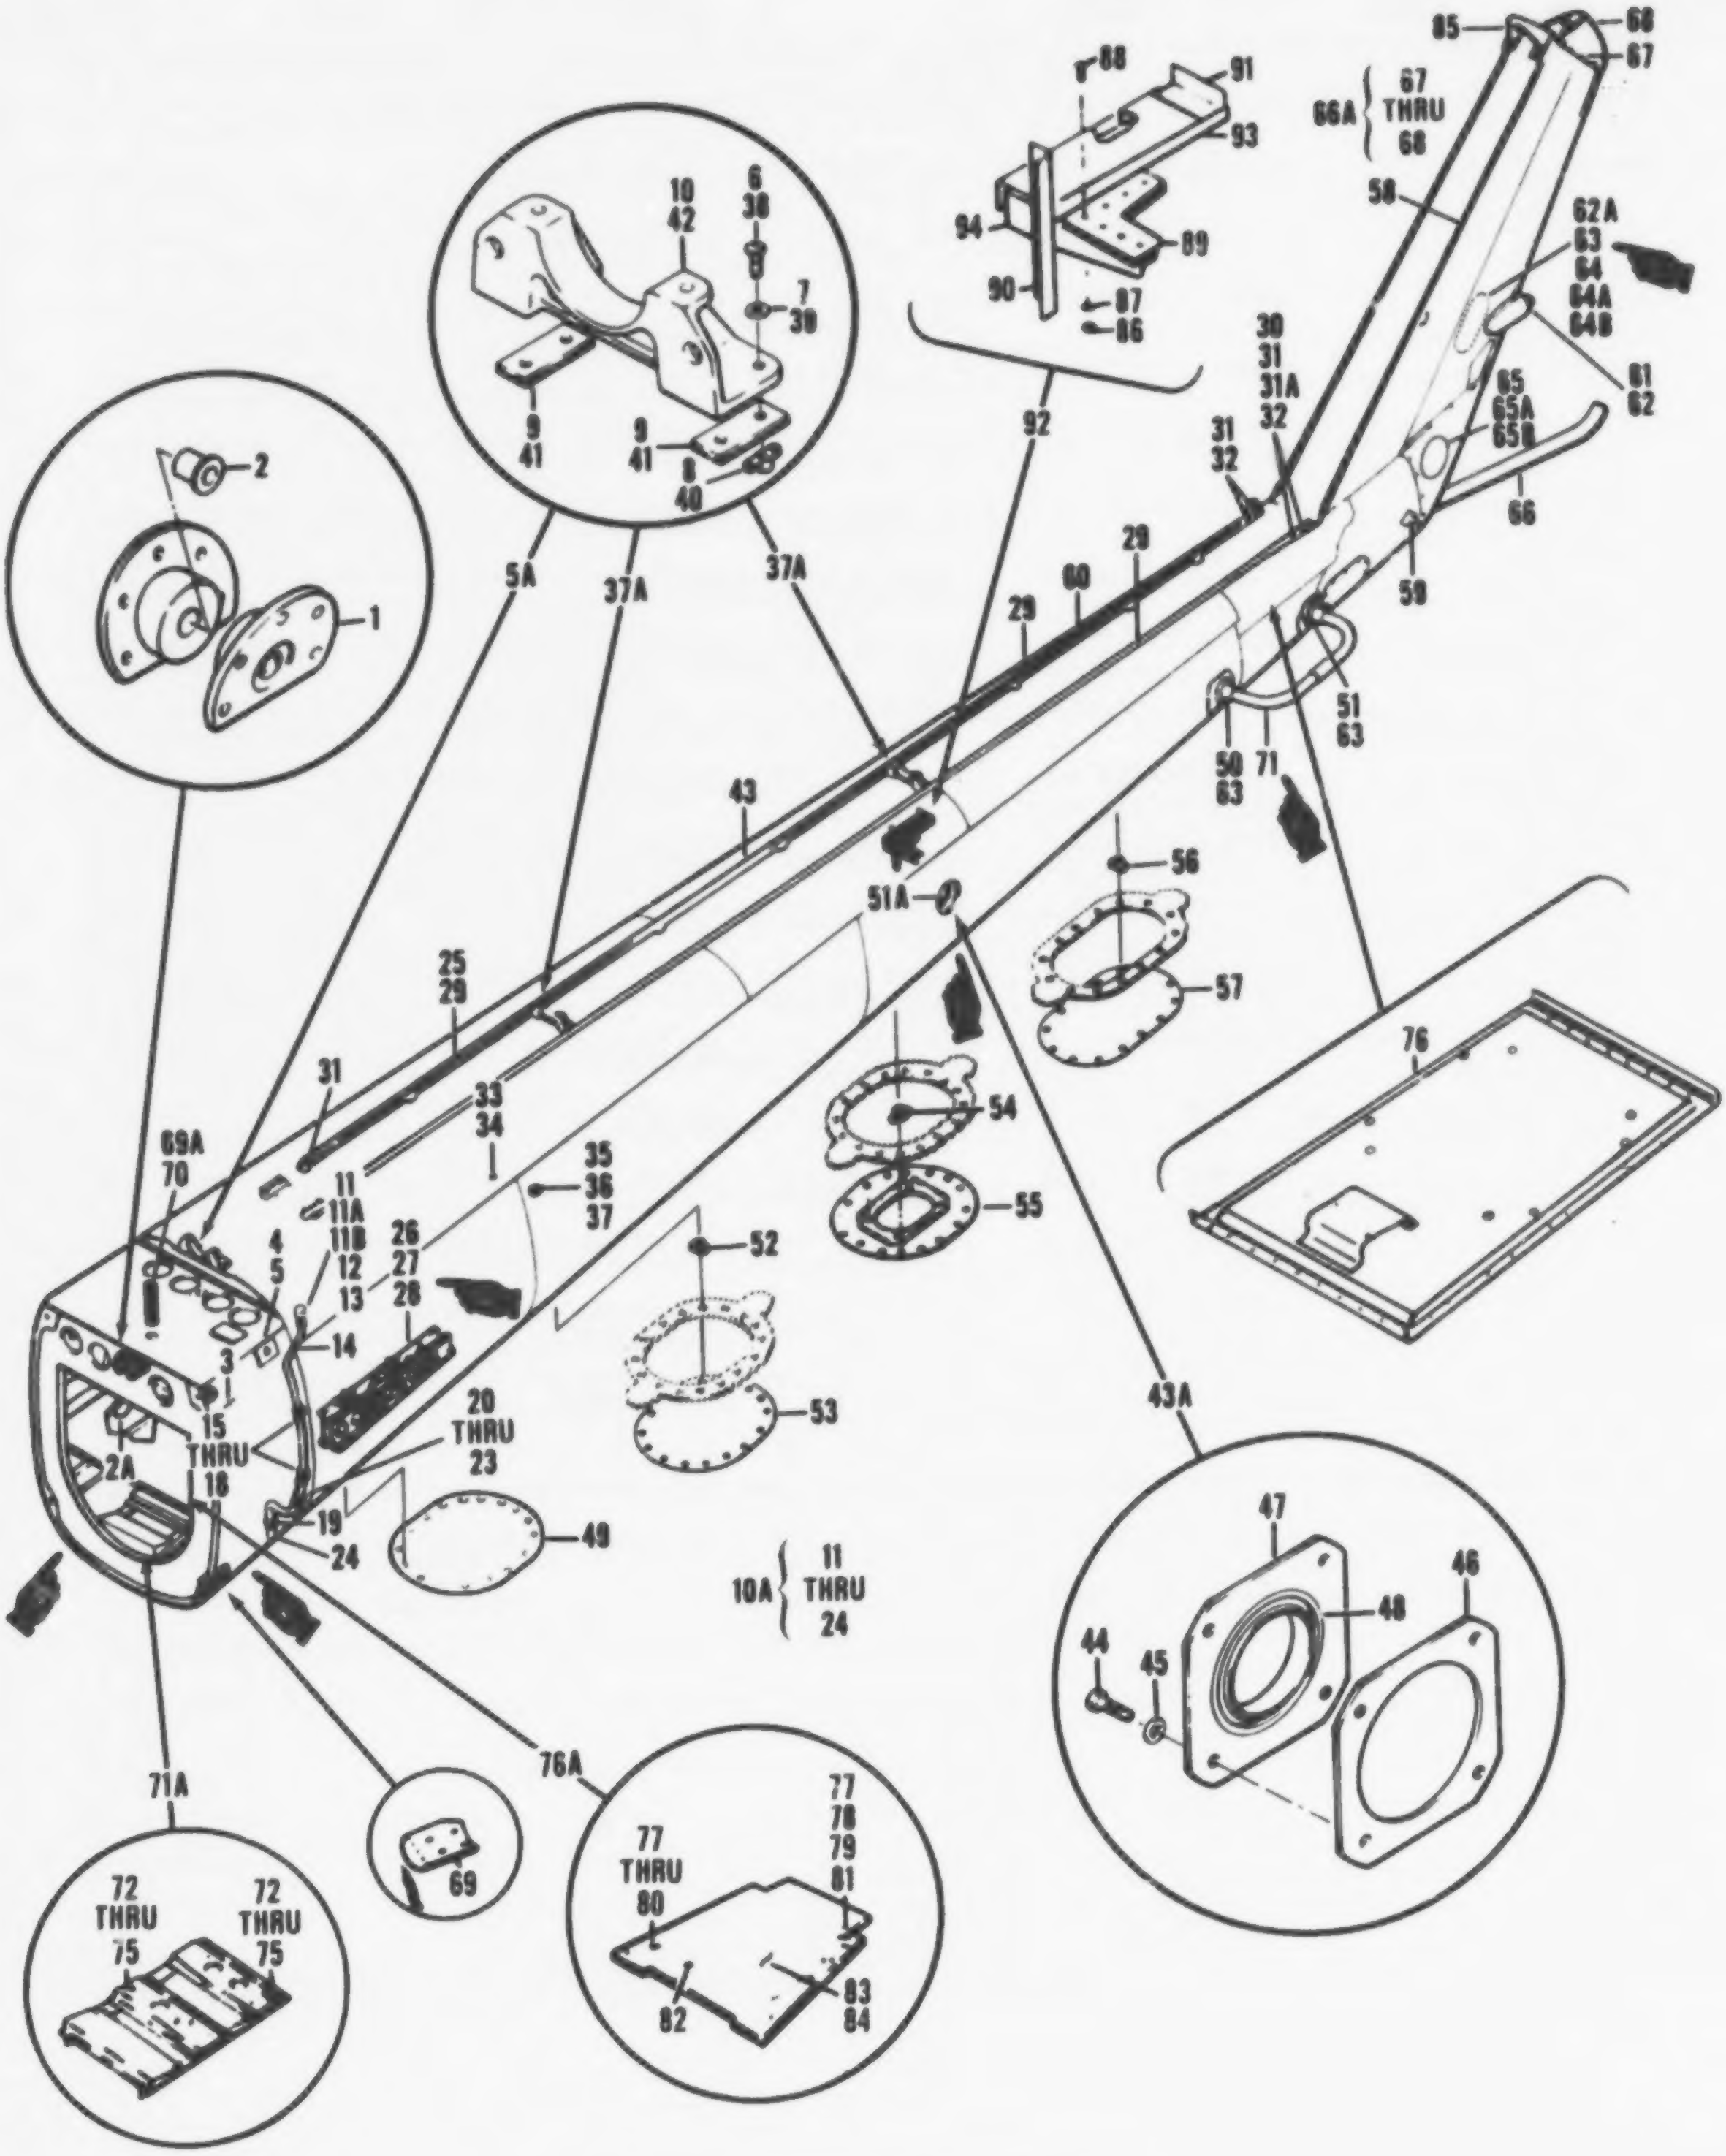
85
68
67
66A
67
THRU
68
88
91
93
94
89
90
87
86
92
58
62A
63
64
64A
64B
61
62
30
31
31A
32
65
65A
65B
66
31
32
29
60
29
59
51
63
50
63
71
10
42
6
38
7
39
9
41
9
41
8
40
2
1
5A
37A
37A
43
56
51A
57
25
29
76
31
33
34
69A
70
54
35
36
37
55
11
11A
11B
12
13
4
5
26
27
28
52
14
3
15
THRU
18
2A
20
THRU
23
53
43A
19
24
49
10A
11
THRU
24
47
48
46
44
45
71A
76A
69
72
THRU
75
72
THRU
75
77
78
79
81
77
THRU
80
82
83
84

Figure 9. Boom Assembly, Tail

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
9		PAODD	1560-00-073-8702	97499	204-030-800-491	BOOM ASSEMBLY,TAIL RPLS 204-030-800-469 SEE FIG 8 FOR NHA ....UHB,UHC,UHM	EA	1
9		XCFZZ		97499	204-030-894-1	.SUPPORT INSTL..........UHB,UHC,UHM	EA	1
9	1	PAFFF	1560-00-915-5902	97499	204-030-899-1	..SUPPORT ASSEMBLY,EL..........UHB,UHC,UHM	EA	2
9	2	PAFZZ	3120-00-684-2042	97499	20-007-19-23-18	...BUSHING,SLEEVE..........UHB,UHC,UHM	EA	1
9	2A	MFOZZ	1560-00-909-3816	97499	204-030-800-443	.COVER,TAIL BOOM ASSY..........UHB,UHC,UHM	EA	1
9	3	PAODD	5325-00-432-9810	72794	RF5	.RECEPTACLE,TURNLOCK TURNLOCK FASTENER..........UHB,UHC,UHM	EA	4
9	3	PAOZZ	5325-00-432-9964	72794	RF5-5	..EYELET,TURNLOCK..........UHB,UHC,UHM	EA	1
9	3	PAOZZ	5340-00-964-8412	61864	SS48151K2215	.BUTTON,PLUG..........UHB,UHC,UHM	EA	2
9	4	PAODD	1560-00-906-1248	97499	204-030-800-3255	.DOUBLER,TAIL BOOM..........UHB,UHC,UHM	EA	1
9	5	PAODD	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER..........UHB,UHC,UHM	EA	1
9	5	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK..........UHB,UHC,UHM	EA	1
9	5A	XCFZZ		97499	204-030-818-9	.FITTING INSTL HANGER SUPPORT..........UHB,UHC,UHM	EA	1
9	6	PAFZZ	5305-00-180-3326	88044	AN525-10R16	..SCREW,MACHINE..........UHB,UHC,UHM	EA	4
9	7	PAFZZ	5310-00-183-4606	88044	AN960PD10	..WASHER,FLAT..........UHB,UHC,UHM	EA	4
9	8	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING, PLATE..........UHB,UHC,UHM	EA	4
9	9	PAFZZ	5365-00-584-2079	97499	120-059-1	..SHIM..........UHB,UHC,UHM	EA	2
9	10	PAFZZ	1560-00-674-4185	97499	204-030-818-7	..FITTING,TAIL BOOM..........UHB,UHC,UHM	EA	1
9	10A	XCFZZ		97499	204-030-875-5	.TUBE INSTL DRAIN..........UHB,UHC,UHM	EA	1
9	11	PAODO	4730-00-773-2616	00624	375201-4	..COUPLING..........UHB,UHC,UHM	EA	1
9	11A	PCOZZ	5330-00-248-3848	96906	MS29513-018	...PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
9	11B	PAOZZ	5330-00-248-3837	96906	MS29513-110	...PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
9	12	PAOZZ	5310-00-292-7823	96906	MS2440004	..NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1
9	13	PAOZZ	5310-00-184-8985	88044	AN960PD716L	..WASHER,FLAT..........UHB,UHC,UHM	EA	1
9	14	MFOZZ	4710-00-735-6559	97499	204-031-239-1	..TUBE ASSEMBLY,METAL..........UHB,UHC,UHM	EA	1
9	15	PAOZZ	5340-00-151-5997	96906	MS21922-4	..CLAMP,LOOP..........UHB,UHC,UHM	EA	2
9	16	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	..SCREW,MACHINE..........UHB,UHC,UHM	EA	2
9	17	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHB,UHC,UHM	EA	2
9	18	PAOZZ	5310-00-263-2862	96906	MS21045C3	..NUT,SELF-LOCKING, HEXAGON..........UHB,UHC,UHM	EA	2
9	19	PAOZZ	5325-00-291-9366	96906	MS35489-11	..GROMMET,NONMETALLIC..........UHB,UHC,UHM	EA	1
9	20	PAOZZ	5310-00-263-2862	96906	MS21045C3	..NUT,SELF-LOCKING, HEXAGON..........UHB,UHC,UHM	EA	1
9	21	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHB,UHC,UHM	EA	1
9	22	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	..SCREW,MACHINE..........UHB,UHC,UHM	EA	1
9	23	PAOZZ	5340-00-993-6245	81996	EAP70005	..CLAMP,LOOP..........UHB,UHC,UHM	EA	1
9	24	PAOZZ	1660-00-857-0588	97499	204-030-875-9	..TUBE,DRAIN,TAIL PIPE..........UHB,UHC,UHM	EA	1
9	25	MFFZZ	5340-00-933-6182	97499	204-030-813-215	.LEAF,BUTT HINGE..........UHB,UHC,UHM	EA	1
9	26	XCFZZ		97499	204-030-879-1	.SUPPORT INSTL U/O PN 204-030-800-13,-249, -289,-297,-311,-369, -395,-399,-433,-435,-441, -451,-465,& -469..........UHB	EA	1
9	26	XCFZZ		97499	204-030-879-45	.SUPPORT INSTL U/O PN 204-030-800-447,-451, -471,-473,& -491 ....UHB,UHC,UHM	EA	1
9	27	PAFFF	1560-00-765-6252	97499	204-030-879-75	..PLATE,STRUCTURAL,AI 2 EACH U/O P/N 204-030-879-1, 1 EACH U/O P/N 204-030-879-45..........UHB,UHC,UHM	EA	2
9	27	XDFFF	1560-00-921-8563	97499	204-030-879-475	..PLATE,STRUCTURAL,AI U/O PN 204-030-879-45......UHB,UHC,UHM	EA	1
9	28	PAFZZ	3120-00-528-5726	97499	22-006-15-11-16	...BUSHING,SLEEVE..........UHB,UHC,UHM	EA	1
9	29	XCFZZ		97499	204-030-862-21	.ANGLE INSTL U/O PN 204-030-800-13,-249, -297,-289,& -311	EA	1

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						......................UHB		
9	29	XCFZZ		97499	204-030-862-19	.ANGLE INSTL U/O PN 204-030-800-13,-249, -297,-299,& -311 ....UHB	EA	1
9	29	XCFZZ		97499	204-030-862-31	.ANGLE INSTL U/O PN 204-030-800-369,-395, -399,433,-435,441, -447, -451,-471,-473,& -491......................UHB,UHC,UHM	EA	1
9	29	XCFZZ		97499	204-030-862-33	.ANGLE INSTL U/O PN 204-030-800-369,-395, -399,-433,-435,-441,-447, -451,-471, -473,& -491......................UHB,UHC,UHM	EA	1
9	30	PAOZZ	5365-00-765-6256	97499	120-060-1	..SHIM......................UHB,UHC,UHM	EA	1
9	31	PAOOO	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER......................UHB,UHC,UHM	EA	11
9	31	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK......................UHB,UHC,UHM	EA	2
9	31A	PAOZZ	5340-01-054-1588	70655	4237	..BUMPER,RUBBER......................UHB,UHC,UHM	EA	22
9	32	PAOZZ	5310-00-734-1885	96906	MS21071-4	..NUT,SELF-LOCKING,PL PLATE......................UHB,UHC,UHM	EA	2
9	33	PAOZZ	5310-00-950-5009	96906	MS15795-704	.WASHER,FLAT......................UHB,UHC,UHM	EA	2
9	34	PAOZZ	5340-00-075-1903	97499	204-060-975-1	.BUMPER,RUBBER......................UHB,UHC,UHM	EA	1
9	35	PAOZZ	5325-00-276-5867	88044	AN227-22B	.STUD,SNAP FASTEN......................UHB,UHC,UHM	EA	2
9	36	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT......................UHB,UHC,UHM	EA	2
9	37	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON......UHB,UHC,UHM	EA	2
9	37A	XCFZZ		97499	204-030-818-11	.FITTING INSTL BEARING HANGER SUPPORT............UHB,UHC,UHM	EA	1
9	38	XDOZZ	5305-00-286-1766	88044	AN525-10R20	..SCREW,MACHINE......................UHB,UHC,UHM	EA	8
9	39	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT......................UHB,UHC,UHM	EA	8
9	40	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING, PLATE......................UHB,UHC,UHM	EA	8
9	41	PAOZZ	5365-00-584-2079	97499	120-059-1	..SHIM......................UHB,UHC,UHM	EA	4
9	42	PAOZZ	1560-00-674-4185	97499	204-030-818-7	..FITTING,TAIL BOOM......................UHB,UHC,UHM	EA	2
9	43	MFFZZ	1560-00-H24-5353	97499	204-030-840-15	.HINGE,HALF......................UHB,UHC,UHM	EA	1
9	43A	XCFZZ		97499	204-030-819-13	.SUPPORT INSTL ELEVATOR BEARING......................UHB	EA	1
9	44	PAOZZ	5306-00-182-1926	88044	AN4H5	..BOLT,MACHINE......................UHB	EA	4
9	45	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT......................UHB	EA	4
9	46	PAOZZ	5365-00-670-7869	97499	204-030-868-1	..SHIM......................UHB	EA	1
9	47	PAOFF	1560-00-522-7056	97499	204-030-819-15	..FITTING ASSEMBLY......................UHB	EA	1
9	48	PBFZZ	3110-00-042-0930	96906	MS27642-47	...BUMPER INSTL......................UHB	EA	1
9	49	XCFZZ		97499	204-030-814-73	.DOOR INSTL VENT SEE FIG.17 FOR BREAKDOWN........UHB,UHC,UHM	EA	1
9		XCFZZ		97499	204-030-957-1	.SUPPORT INSTL-LH U/O PN 204-030-800-13, -249,& -297.....UHB	EA	1
9		XCFZZ		97499	204-030-957-2	.SUPPORT INSTL-RH U/O PN 204-030-800-5,-7, -11,-13,-237,-239,-249, & -297......................UHB	EA	1
9		XCFZZ		97499	204-030-957-3	.SUPPORT INSTL-LH U/O PN 204-030-800-311, -369,-289,-395,-433, -435,441,-447,-451,-471, -473,& -491.........UHB,UHC,UHM	EA	1
9		XCFZZ		97499	204-030-957-4	.SUPPORT INSTL-RH U/O PN 204-030-800-311, -369,-289,-395,-433, -435,-441,-447,-451,-471, -473,& -491........UHB,UHC,UHM	EA	1
9	50	PAFZZ	1560-00-733-8296	97499	204-030-958-1S	..SUPPORT,TAIL BOOM A U/O PN 204-030-957-1 & -3 ....UHB,UHC,UHM	EA	1
9	50	PAFZZ	1560-00-716-8575	97499	204-030-958-2S	..SUPPORT,TAIL BOOM U/O PN 204-030-957-2 &-4.....UHB,UHC,UHM	EA	1
9	51	PAFZZ	1560-00-075-3383	97499	204-030-959-3S	..SUPPORT,TAIL BOOM LH......................UHB,UHC,UHM	EA	1
9	51	PAFZZ	1560-00-075-3387	97499	204-030-959-4S	..SUPPORT,TAIL BOOM RH......................UHB,UHC,UHM	EA	1
9		XCFZZ		97499	204-030-865-19	.SUPPORT INSTL-LH......................UHB	EA	1
9		XCFZZ		97499	204-030-865-23	.SUPPORT INSTL-LH......................UHB	EA	1
9		XCFZZ		97499	204-030-865-20	.SUPPORT INSTL-RH......................UHB	EA	1
9		XCFZZ		97499	204-030-865-24	.SUPPORT INSTL-RH......................UHB	EA	1

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
9	51A	PBFZZ	1560-00-909-4184	97499	204-030-865-215	..RETAINER,TAIL BOOM U/O PN 204-030-865-19 & -23..........UHB	EA	1
9	51A	PBFZZ	1560-00-909-4183	97499	204-030-865-225	..RETAINER,TAIL BOOM U/O PN 204-030-865-20 & -24..........UHB	EA	1
9		XCFZZ		97499	204-030-814-47	.DOUBLER INSTL..................................UHB,UHC,UHM	EA	1
9	52	PAFZZ	5310-00-772-3720	96906	MS21075L3	..NUT,SELF-LOCKING, PLATE........................UHB,UHC,UHM	EA	18
9	53	XCFZZ		97499	204-030-814-29	.DOOR INSTL ACCESS-FORWARD SEE FIG.17 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
9		XCFZZ		97499	204-030-814-49	.DOUBLER INSTL..................................UHB,UHC,UHM	EA	1
9	54	PAFZZ	5310-00-772-3720	96906	MS21075L3	..NUT,SELF-LOCKING,PL.............................UHB,UHC,UHM	EA	18
9	55	XCFZZ		97499	204-030-814-79	.DOCR INSTL ACCESS-CENTER SEE FIG.17 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
9		XCFZZ		97499	204-030-814-51	.DOUBLER INSTL..................................UHB,UHC,UHM	EA	1
9	56	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL PLATE......................UHB,UHC,UHM	EA	16
9	57	XCFZZ		97499	204-030-814-33	.DOOR INSTL ACCESS-AFT SEE FIG.17 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
9	58	PAFZZ	5340-00-663-2996	97499	90-009-1	.LOOP,STRAP FASTE...............................UHB,UHC,UHM	EA	1
9	59	PAFZZ	1560-00-772-6414	97499	2151-10-16	.FILLER,BLOCK...................................UHB,UHC,UHM	EA	1
9	60	MFFZZ		97499	204-030-813-255	.LEAF,BUTT HINGE................................UHB,UHC,UHM	EA	1
9		XCFZZ		97499	204-030-859-15	.BRACKET INSTL U/O (UH-1B) PN 204-030-800-13, -249,-289,-297,-311,-369, -395,-433,& -435..............................UHB	EA	1
9		XCFZZ		97499	204-030-038-1	.BRACKET INSTL U/O (UH-1D) PN 204-030-800-399,-441, -465,& -469..UHB,UHC,UHM	EA	1
9	61	PAFZF	1560-00-986-9931	97499	204-030-859-17	..BRACKET ASSEMBLY,TA U/O PN 204-030-859-15..............UHB	EA	1
9	61	PAFZZ	1560-00-133-6994	97499	204-030-039-11	..FAIRING ASSEMBLY U/O PN 204-030-038-1..........UHB,UHC,UHM	EA	1
9	62	PAFZZ	5310-00-655-5865	80205	NAS697A04	..NUT,SELF-LOCKING,PL.............................UHB,UHC,UHM	EA	2
9	62A	PADZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..................................UHB,UHC,UHM	EA	9
9	63	PAFZZ	5310-00-734-1850	96906	MS21071L3	.NUT,SELF-LOCKING,PL..............................UHB,UHC,UHM	EA	2
9	63	PAFZZ	5310-00-728-7716	96906	MS21069L3	.NUT,SELF-LOCKING,PL..............................UHB,UHC,UHM	EA	7
9	64	MFDZZ	1560-00-H05-5964	97499	204-030-800-1915	.DOOR...UHB,UHC,UHM	EA	1
9	64A	MFFZZ	1560-00-H05-5835	97499	204-030-800-195	.FILLER...UHB,UHC,UHM	EA	1
9	64B	PAFZZ	5310-00-728-7715	96906	MS21069L08	.NUT,SELF-LOCKING,PL..............................UHB,UHC,UHM	EA	8
9	65	PADZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..................................UHB,UHC,UHM	EA	6
9	65A	PAFZZ	5310-00-728-7716	96906	MS21069L3	.NUT,SELF-LOCKING,PL..............................UHB,UHC,UHM	EA	6
9	65B	MFDZZ	1560-00-H05-5965	97499	204-030-800-177	.DOOR...UHB,UHC,UHM	EA	1
9	66	XCFZZ		97499	204-030-947-1	.SKID INSTL TAIL U/O (UH-1B) PN 204-030-800-13,-249,-289,-297,-311,-369,-395,-395,-435 &-441 SEE FIG.93 FOR BREAKDOWN ....UHB	EA	1
9	66A	XCFZZ		97499	205-031-835-1	.MOUNT INSTL ANTENNA USBL EFF 64-13902 THRU 64-14100.....UHB	EA	1
9	67	PADZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE.................................UHB	EA	11
9	68	PADFF	1560-00-879-0850	97499	205-031-835-27	..MOUNT ASSEMBLY,ANTE.............................UHB	EA	1
9		XCFZZ		97499	204-031-090-1	.FIN INSTL U/O PN 204-030-800-447,-451,-471,-473,&-491 SEE FIG 12&13 FORBREAKDOWN............................UHB,UHC,UHM	EA	1
9	69	PADZZ	1560-00-907-0871	97499	204-030-820-1	.FITTING,TAIL BOOM...............................UHB,UHC,UHM	EA	1
9	69	PBDZZ	1560-00-907-0866	97499	204-030-820-2	.FITTING,TAIL BOOM...............................UHB,UHC,UHM	EA	1
9	69A	XCFZZ		97499	204-031-075-1	.BUMPER INSTL...................................UHB,UHC,UHM	EA	1
9	70	PADZZ	5330-00-868-2771	97499	204-031-075-3	..RUBBER STRIP..................................UHB,UHC,UHM	EA	1
9	71	PADZZ	1560-00-738-5953	97499	204-075-541-13	.SUPPORT ASSEMBLY, ANTENNA.......................UHB,UHC,UHM	EA	2
9	71	PADZZ	5921-00-933-4561	97499	204-075-541-15	.SUPPORT ASSEMBLY, ANTENNA.......................UHB,UHC,UHM	EA	2

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
9	71A	XCFZZ		97499	204-030-054-1	.SHELF INSTL USBL EFF 62-1872 THRU 64-14191......UHB,UHC,UHM	EA	1
9	71A	PBFZZ	1680-01-166-9659	97499	204-031-143-1	.SHELF ASSEMBLY,AIRC USBL EFF 65-9416 & SUBSEQUENT ....UHC,UHM	EA	1
9	72	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE..................................UHB,UHC,UHM	EA	2
9	73	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT......................................UHB,UHC,UHM	EA	2
9	74	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.............UHB,UHC,UHM	EA	2
9	75	PAOZZ	6150-00-231-8055	97499	120-055-1-4	..BUS,CONDUCTOR....................................UHB,UHC,UHM	EA	2
9	76		1560-00-915-5922	97499	204-030-054-3	..SHELF ASSEMBLY,AIRC U/O PN 204-030-054-1.......UHB,UHC,UHM	EA	1
9	76A	XCFZZ		97499	204-030-055-43	.SHELF INSTL USBL EFF 62-1872 THRU 64-14191......UHB,UHC,UHM	EA	1
9	76A	XCFZZ		97499	204-030-055-59	.SHELF INSTL USBL EFF 65-9416 & SUBSEQUENT...........UHC,UHM	EA	1
9	77	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE..................................UHB,UHC,UHM	EA	2
9	78	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT......................................UHB,UHC,UHM	EA	2
9	79	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.............UHB,UHC,UHM	EA	2
9	80	PAOZZ	6150-00-231-8055	97499	120-055-1-4	..BUS,CONDUCTOR....................................UHB,UHC,UHM	EA	2
9	81	PAOZZ	6150-00-928-6244	97499	120-050-10	..LEAD,ELECTRICAL..................................UHB,UHC,UHM	EA	1
9	82	PAOZZ	5325-00-263-6632	96906	MS35489-6	..GROMMET,NONMETALLIC..............................UHB,UHC,UHM	EA	1
9	83	PBOZZ	1560-00-425-0932	97499	204-030-055-615	..PANEL,SHELF,BOOM.................................UHB,UHC,UHM	EA	1
9	84	PAOZZ	5340-00-659-5254	82831	S101015-08	..SPACER...UHB,UHC,UHM	EA	15
9	85	PAOZZ	1560-00-990-3734	97499	204-030-828-9	.FITTING ASSEMBLY..................................UHB,UHC,UHM	EA	1
9	86	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..................UHC,UHM	EA	7
9	87	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT...UHC,UHM	EA	7
9	88	PAOZZ	5305-00-925-9682	96906	MS27039-1-11	.SCREW,MACHINE...UHC,UHM	EA	7
9	89	PBOZZ	1560-00-169-5091	97499	204-031-318-15	.STOP,ELEVATOR.....................................UHB,UHC,UHM	EA	1
9	90	PBFZZ	1560-00-169-5100	97499	204-031-318-17	.STIFFENER,ELEVATOR................................UHB,UHC,UHM	EA	1
9	91	MOFZZ	1560-00-405-6455	97499	205-031-013-175	.CLIP..UHB,UHC,UHM	EA	1
9	92	PBFFF	1560-00-169-0463	97499	204-031-318-3	.SUPPORT,STRUCTURAL................................UHB,UHC,UHM	EA	1
9	93	PBFZZ	1560-00-169-5096	97499	204-031-318-13	..RESTRICTOR,ELEVATOR..............................UHB,UHC,UHM	EA	1
9	94	PBFZZ	5340-00-485-0655	97499	204-031-318-11	..BRACKET,ANGLE....................................UHB,UHC,UHM	EA	1

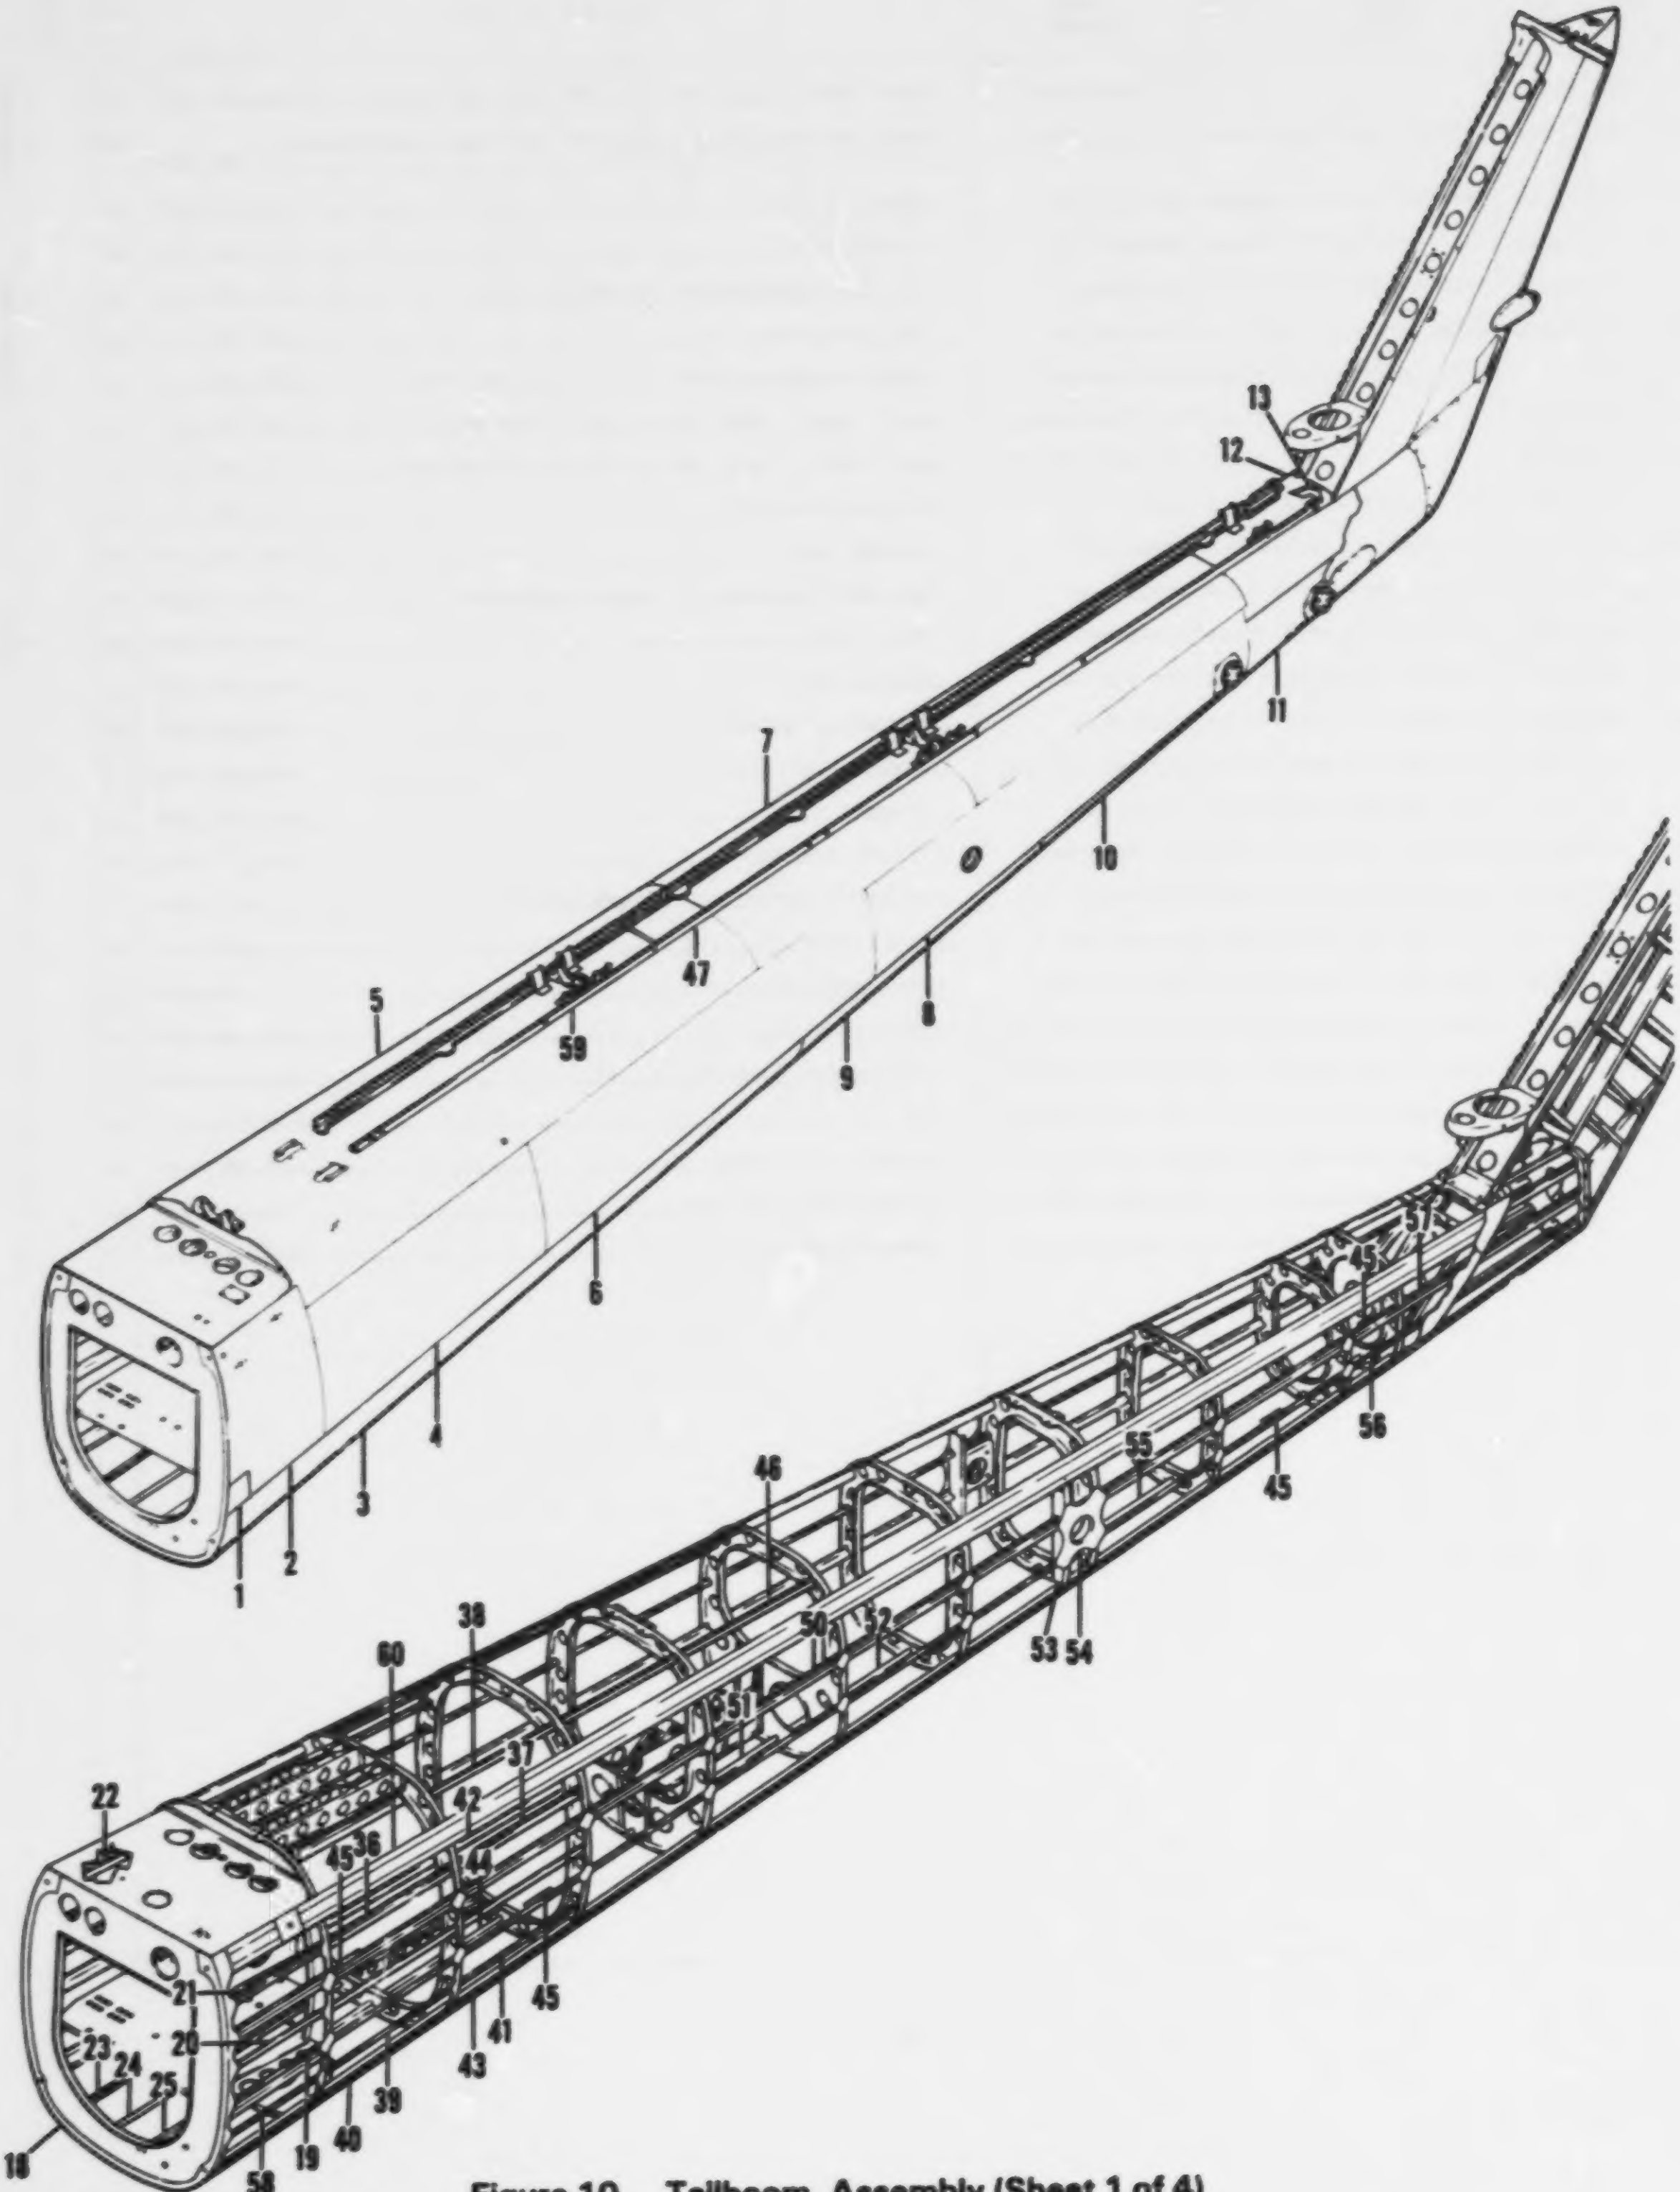
13
12
11
7
10
47
5
59
8
9
6
4
3
2
1
57
45
56
55
45
46
53
54
50
52
38
60
51
37
42
22
45
36
44
21
20
45
41
43
23
24
25
39
40
19
58
18

Figure 10. Tailboom Assembly (Sheet 1 of 4)

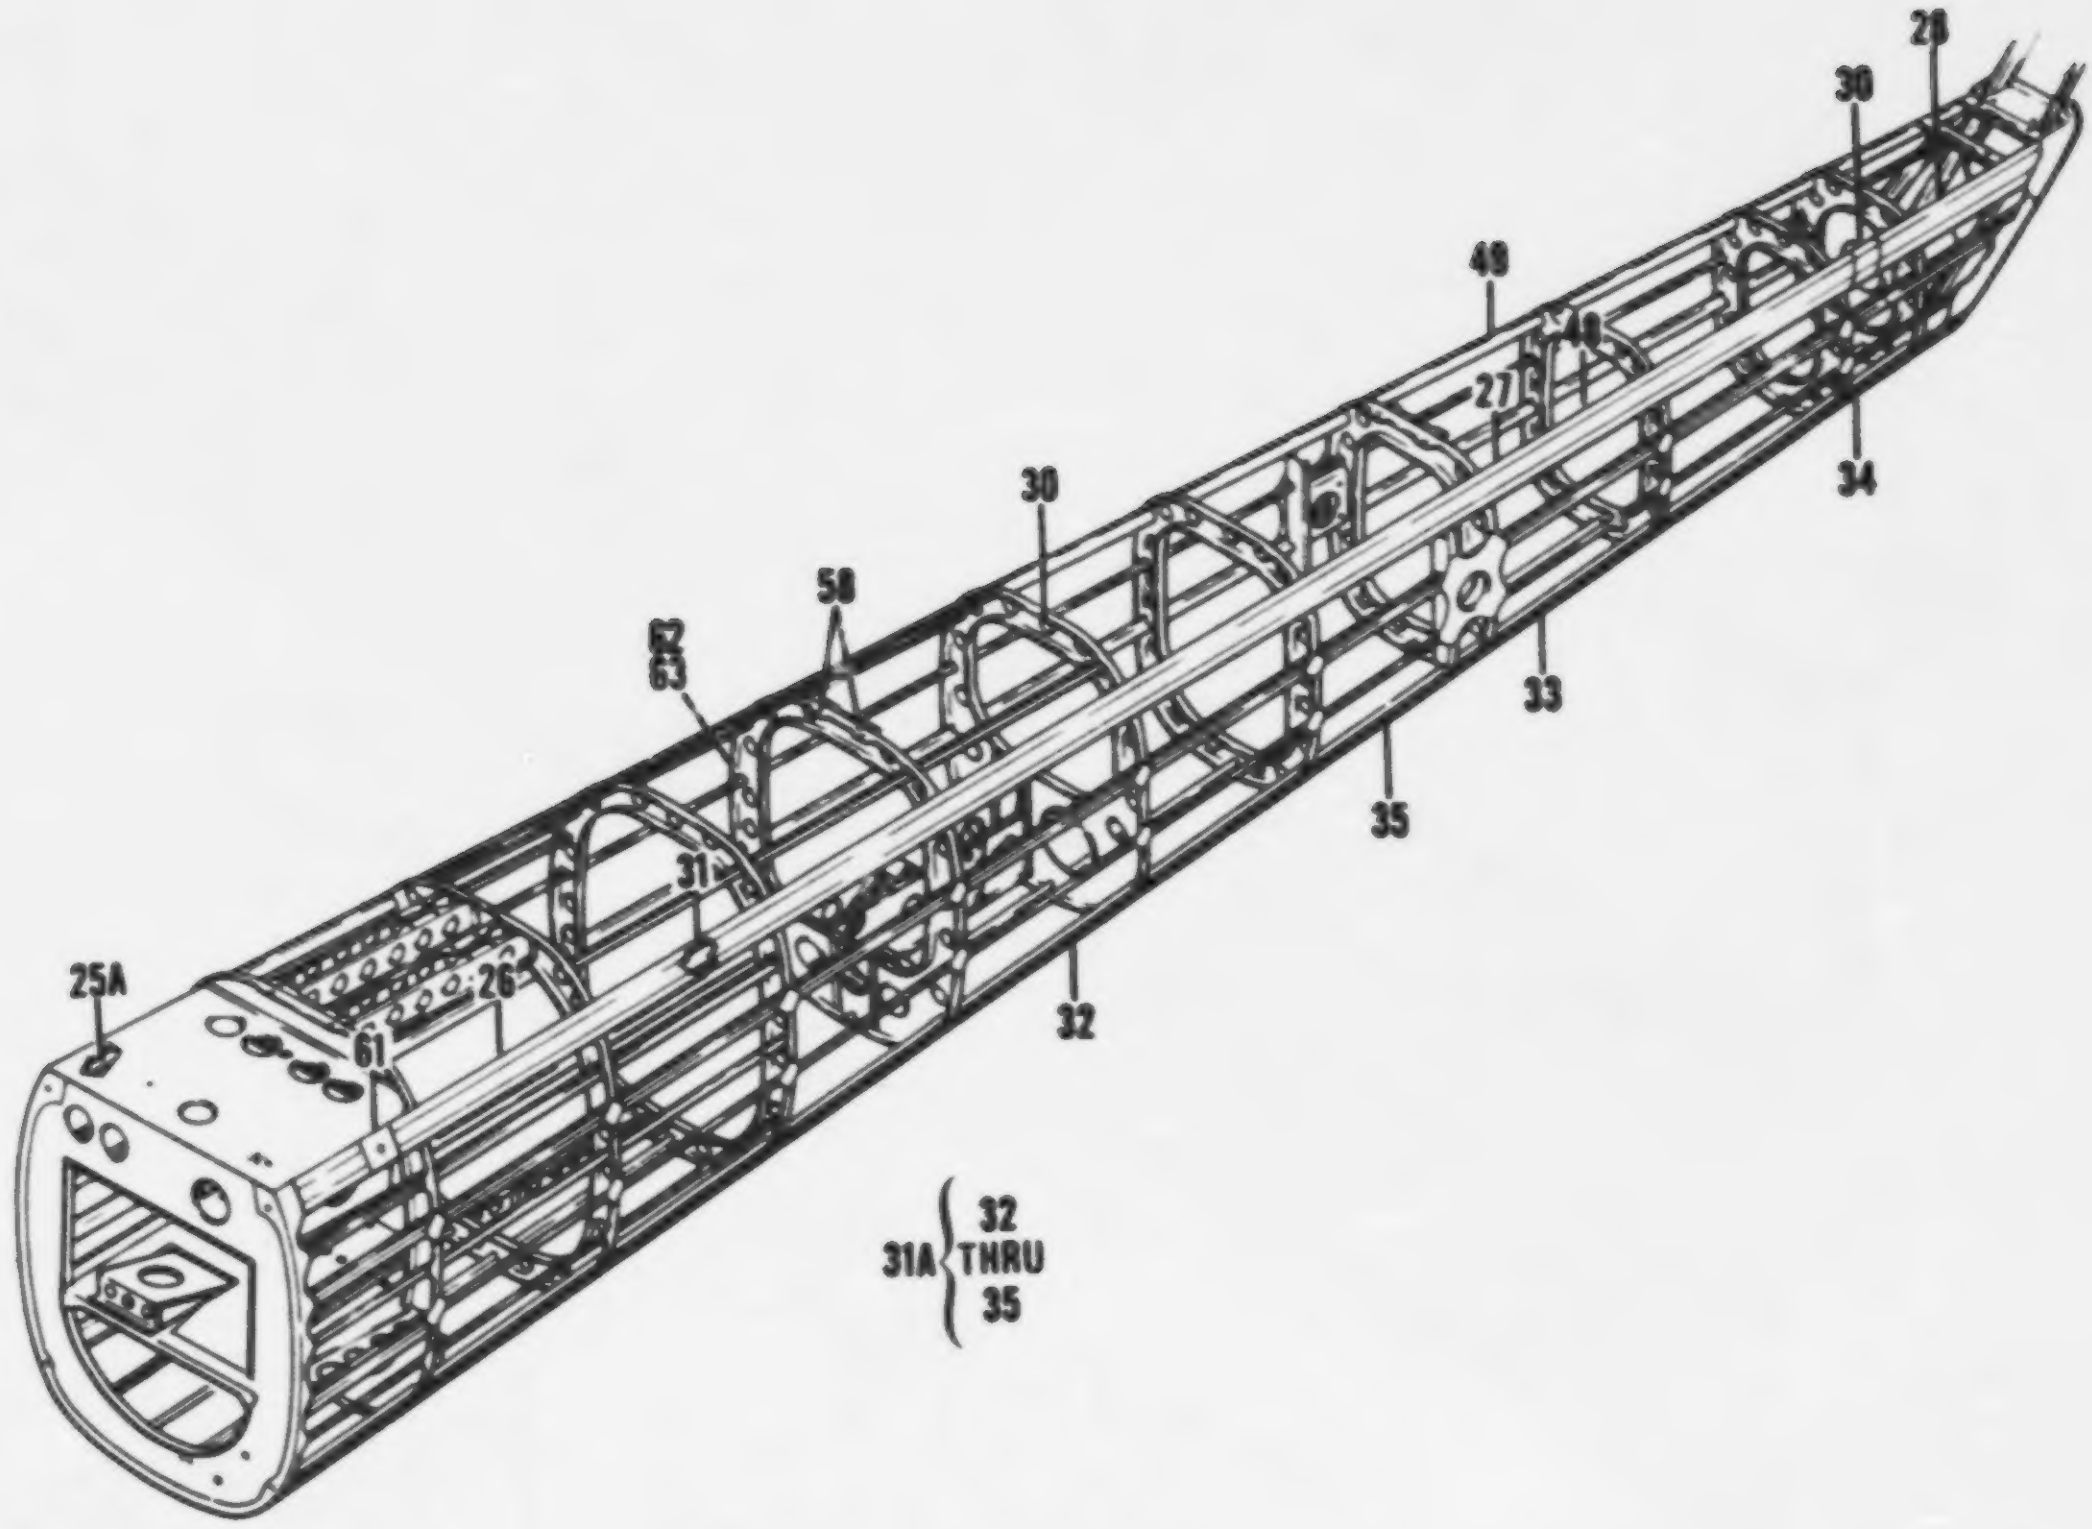
28
30
49
48
27
34
30
58
62
63
33
35
31
25A
26
61
32
31A
32
THRU
35

Figure 10. Tailboom Assembly (Sheet 2 of 4)

best copy available

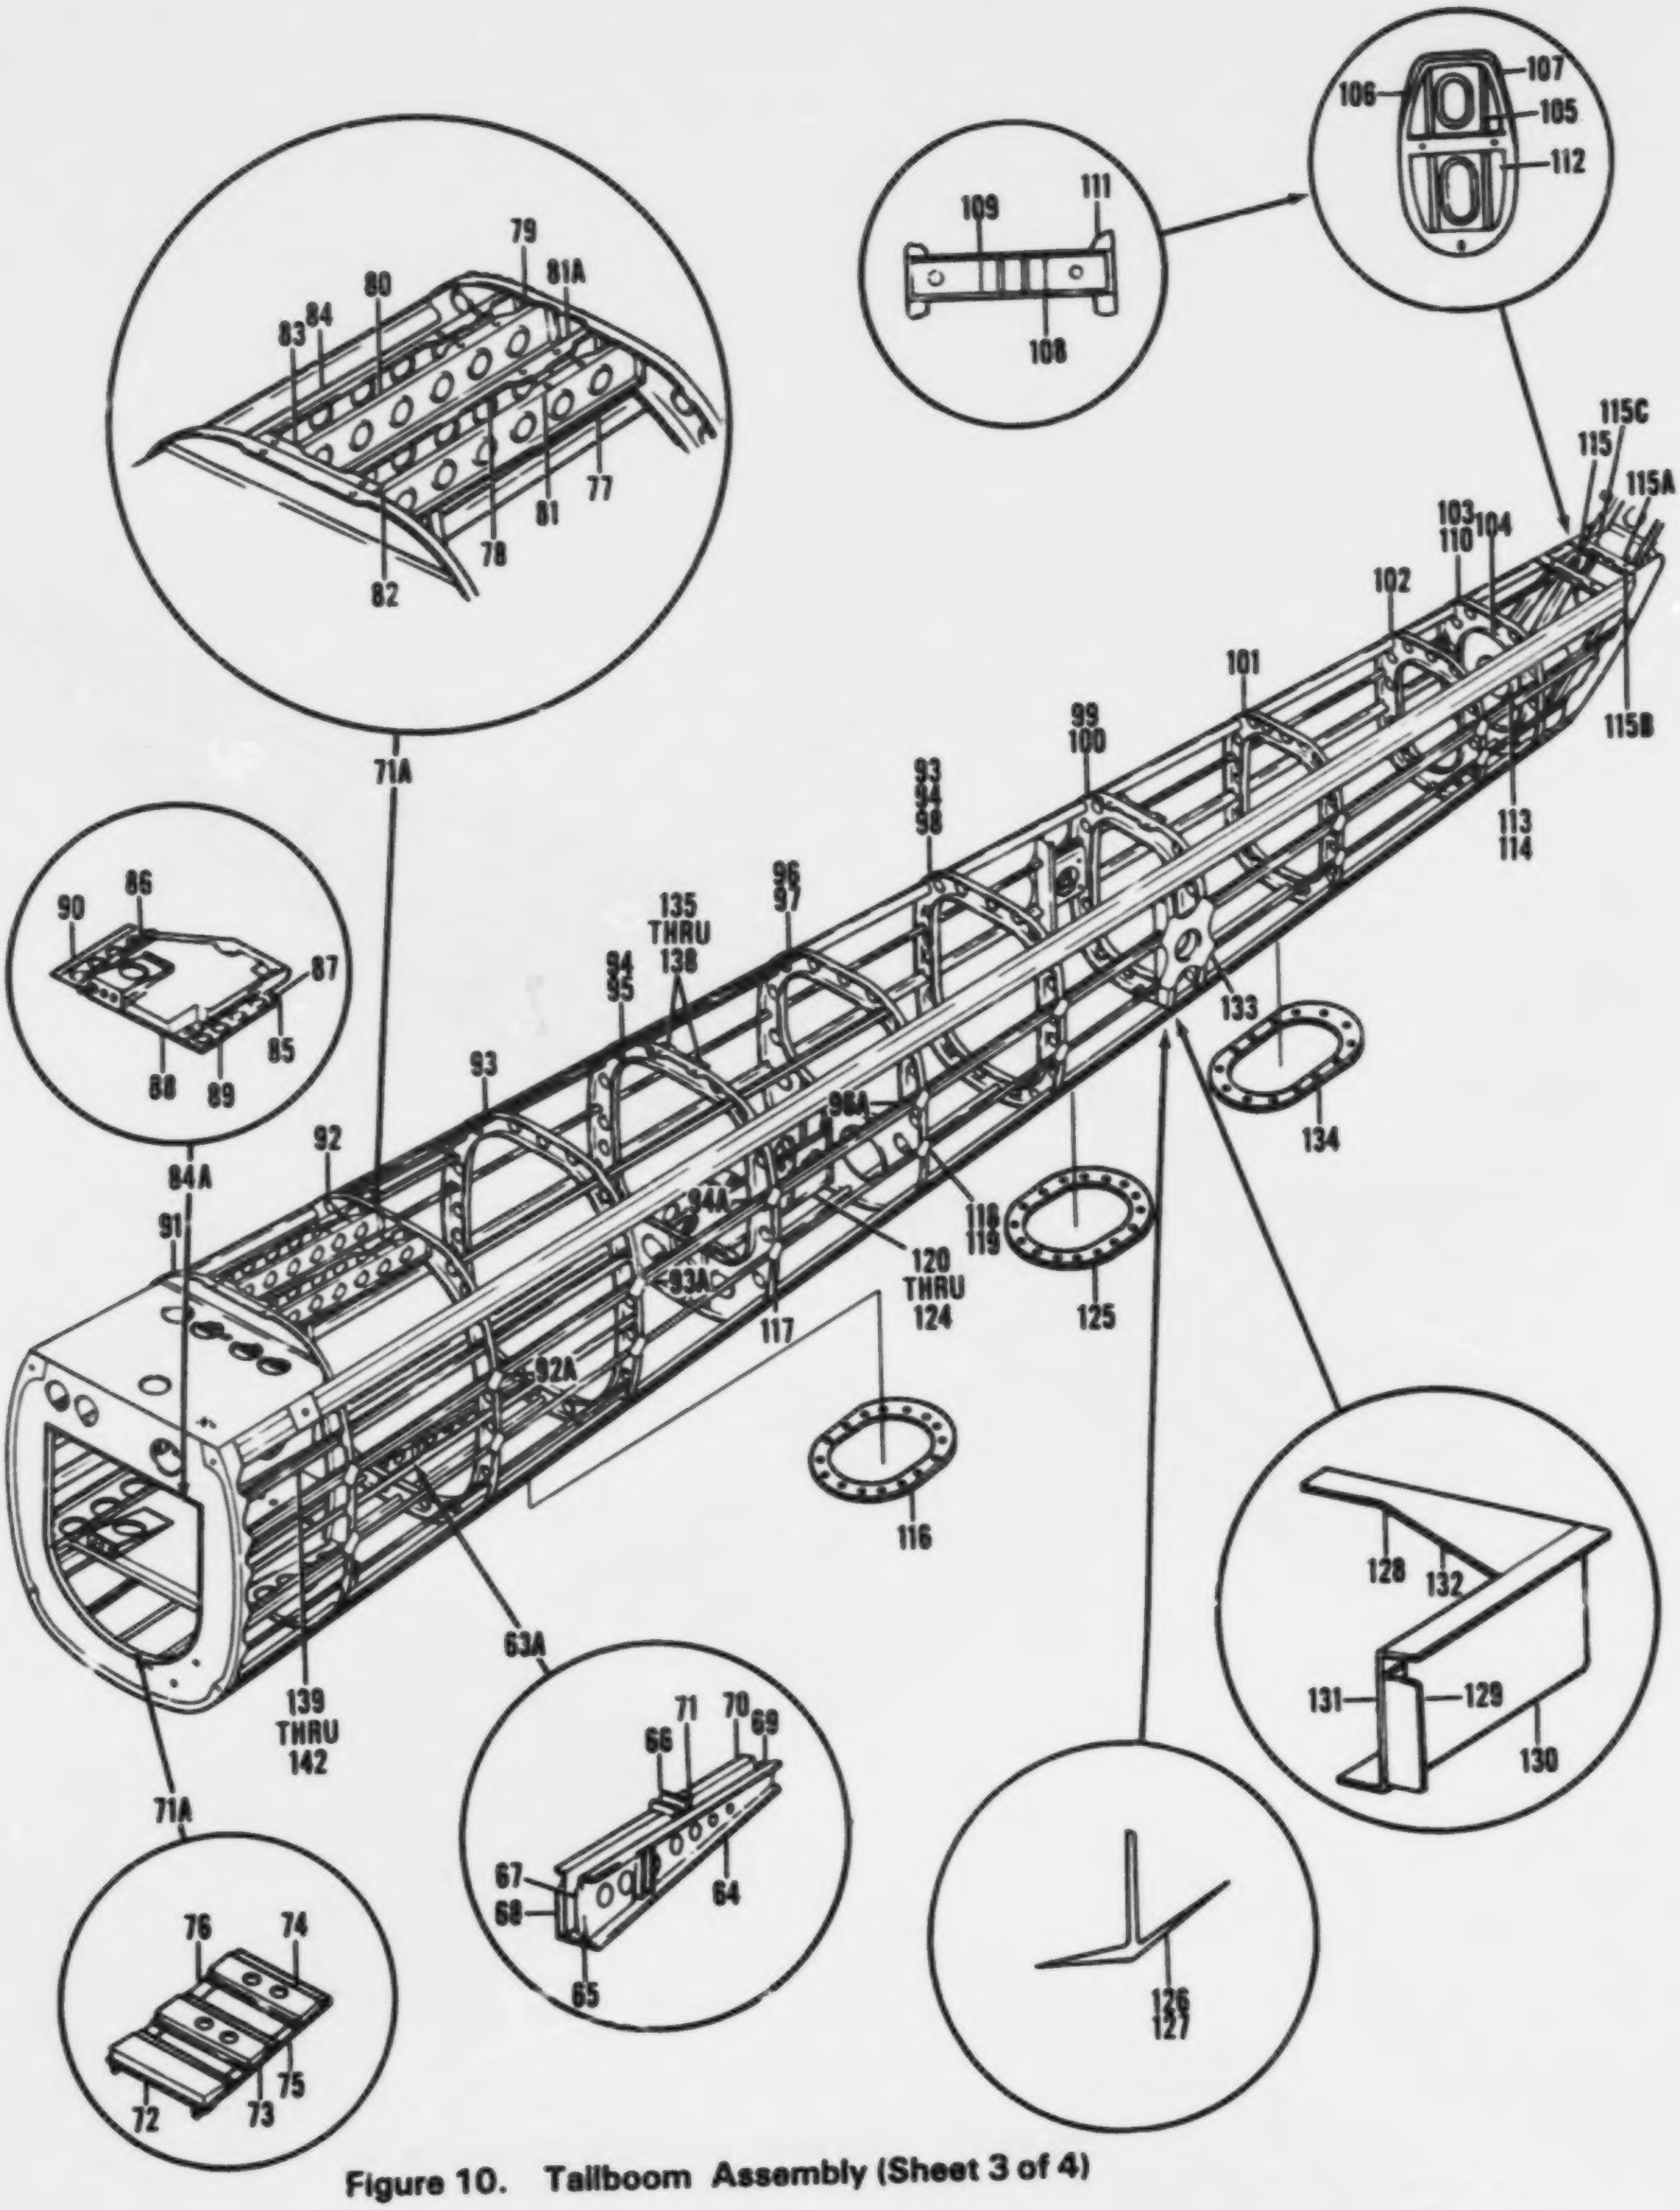
106
107
105
112
109
111
108
79
81A
80
83
84
77
81
78
82
115C
115
115A
103
110
104
102
101
115B
99
100
71A
93
94
98
113
114
96
97
135
THRU
138
90
86
87
85
88
89
94
95
133
134
93
96A
84A
92
94A
118
119
91
93A
120
THRU
124
125
117
92A
116
128
132
131
129
130
63A
139
THRU
142
71
70
69
66
67
68
64
65
71A
76
74
72
73
75
126
127

Figure 10. Tailboom Assembly (Sheet 3 of 4)

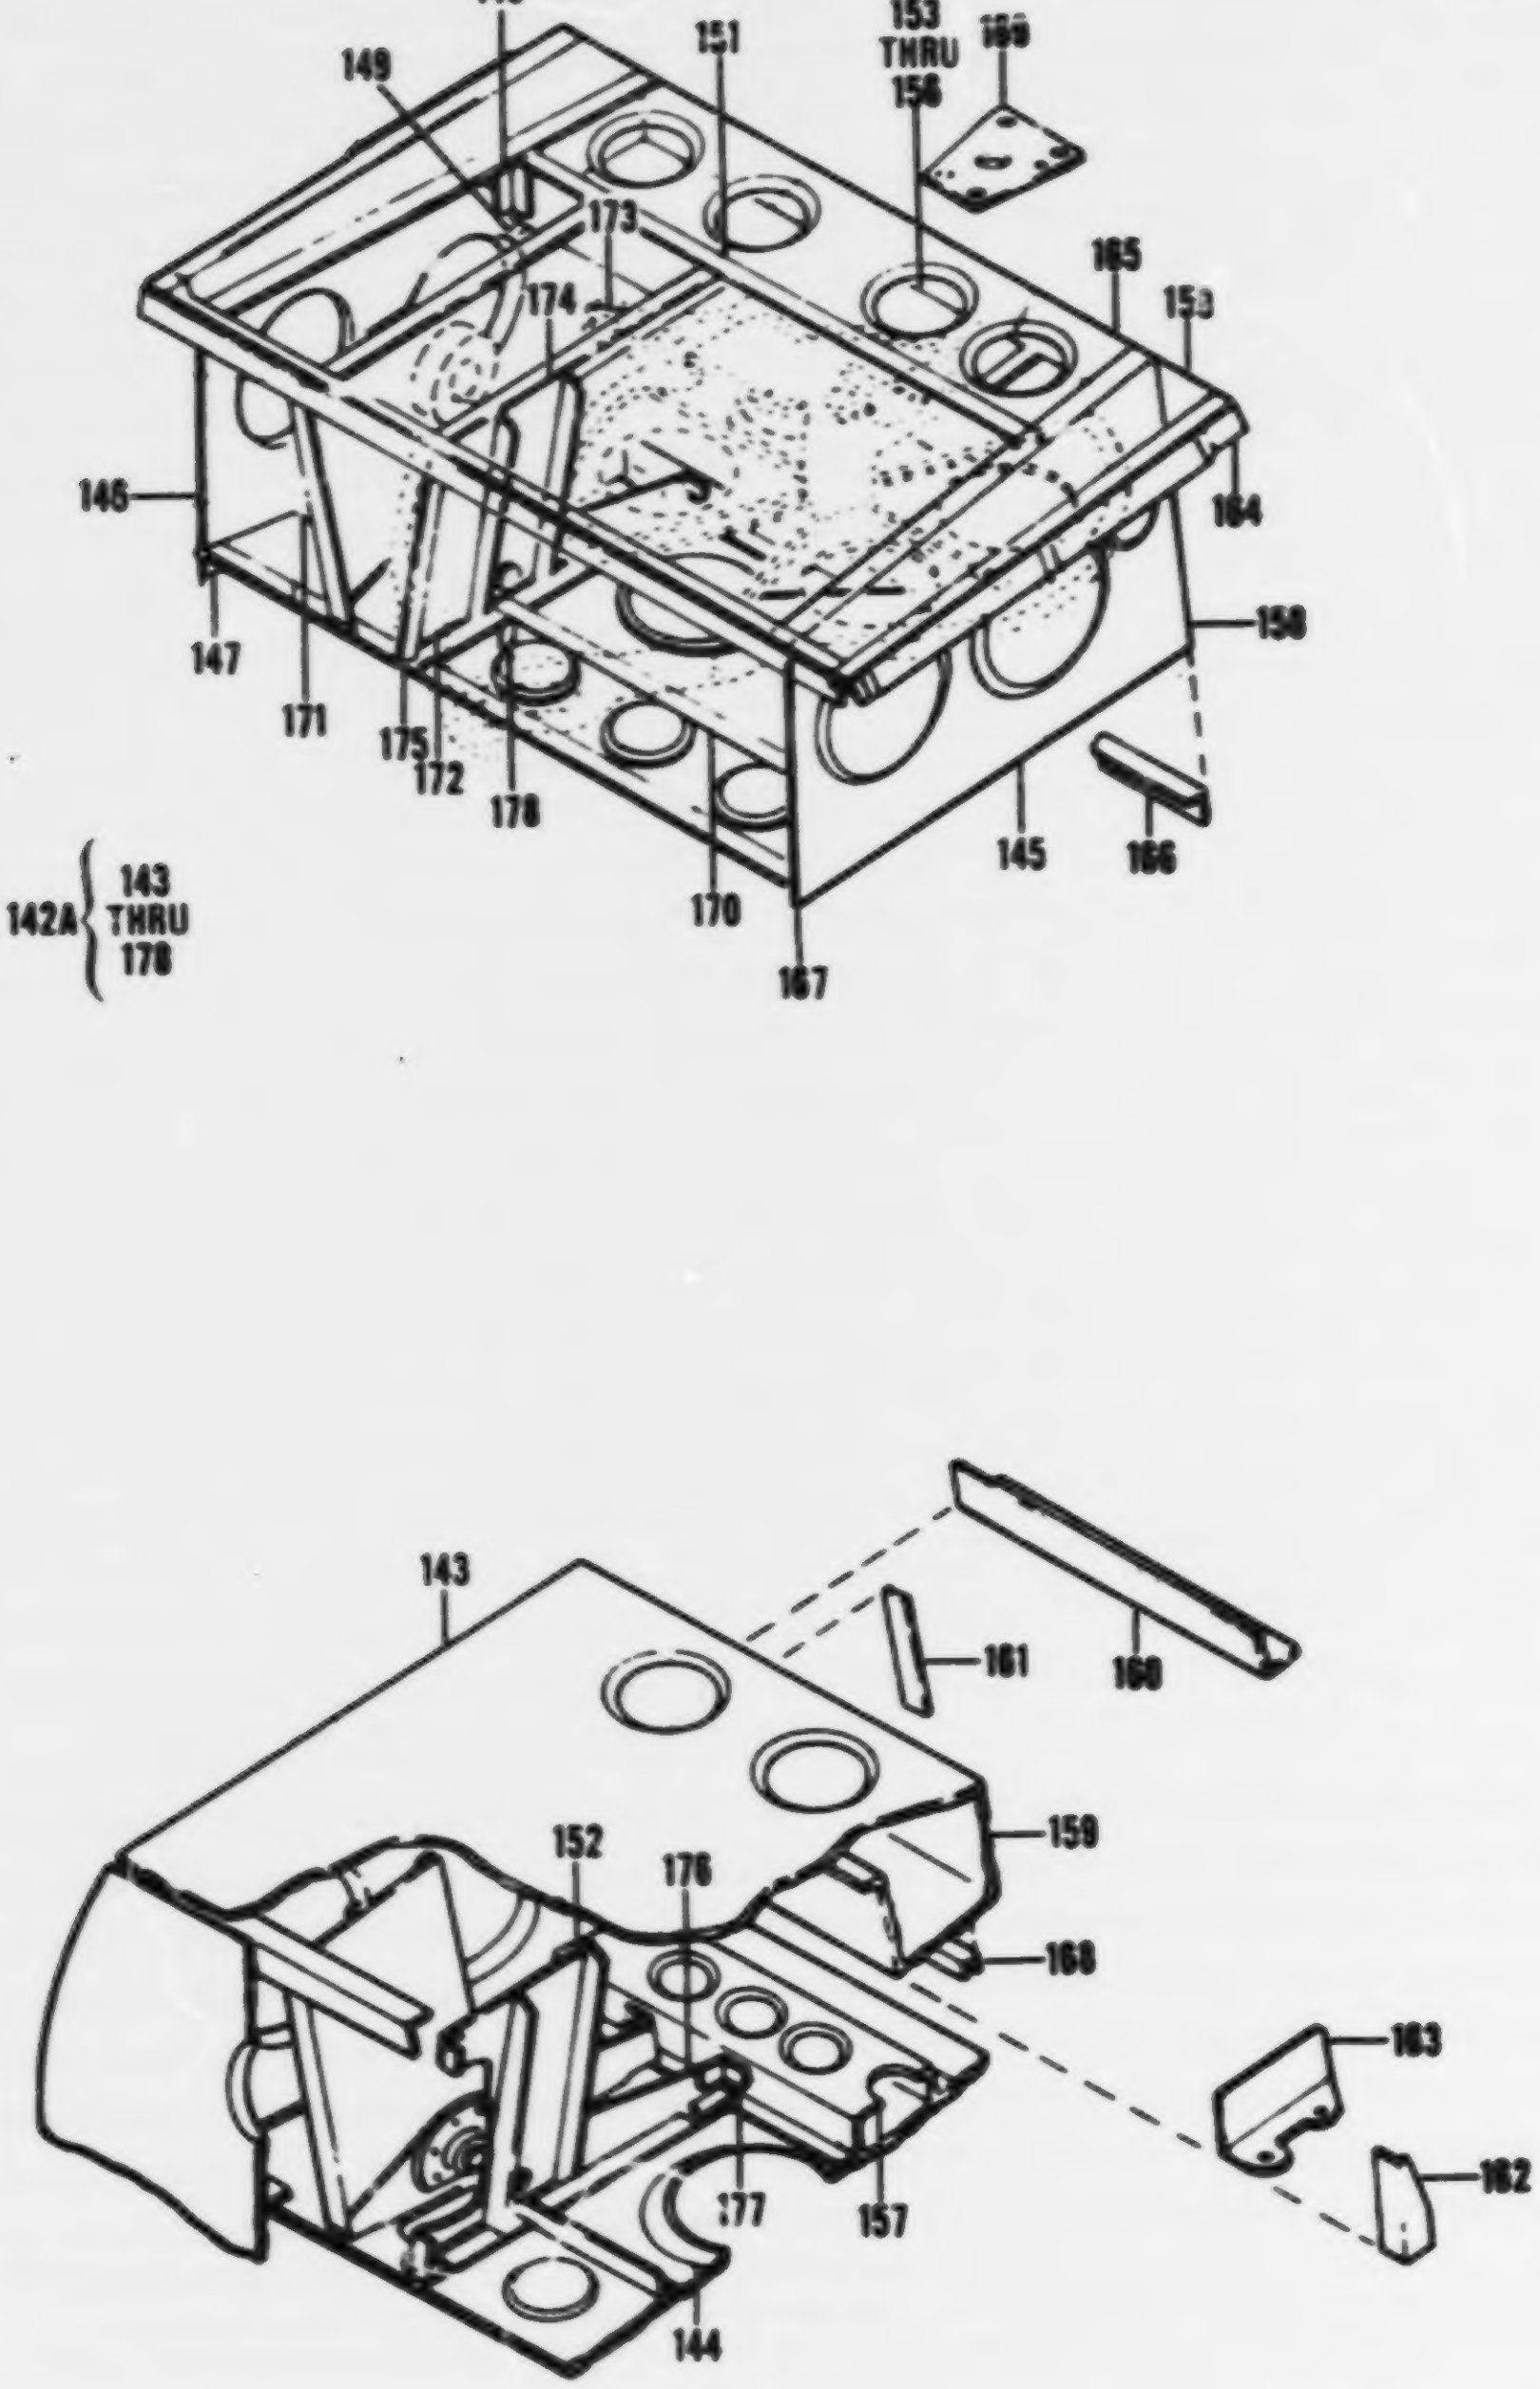
148
149
151
153
THRU
156
169
173
174
165
150
146
164
158
147
171
175
172
178
145
166
170
167
142A
143
THRU
178
143
161
160
152
176
159
168
163
162
177
157
144

Figure 10. Tailboom Assembly (Sheet 4 of 4)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
10		PADDD	1560-00-073-8702	97499	204-030-800-491	BOOM ASSEMBLY,TAIL SEE FIG.8 FOR NHA............UHB,UHC,UHM	EA	1
10	1	MDOZZ	1560-00-H05-5812	97499	204-030-800-479S	.SKIN-LH..............................UHB,UHC,UHM	EA	1
10	1	MDOZZ	1560-00-H05-6076	97499	204-030-800-481S	.SKIN-RH..............................UHB,UHC,UHM	EA	1
10	2	MDOZZ	1560-00-H04-6181	97499	204-030-800-445S	.SKIN.................................UHB,UHC,UHM	EA	1
10	3	PADZZ	1560-00-405-9956	97499	204-030-800-495S	.SKIN,AIRCRAFT........................UHB,UHC,UHM	EA	1
10	4	MDOZZ	1560-00-H05-5819	97499	204-030-800-413S	.SKIN-LH..............................UHB,UHC,UHM	EA	1
10	4	MDOZZ	1560-00-H05-5818	97499	204-030-800-415S	.SKIN-RH..............................UHB,UHC,UHM	EA	1
10	5	PADZZ	1560-00-405-4685	97499	204-030-800-403S	.SKIN,AIRCRAFT........................UHB,UHC,UHM	EA	1
10	6	MDOZZ	1560-00-H05-5817	97499	204-030-800-417S	.SKIN-LH..............................UHB,UHC,UHM	EA	1
10	6	MDOZZ	1560-00-H05-5816	97499	204-030-800-419S	.SKIN,RH..............................UHB,UHC,UHM	EA	1
10	7	PADZZ	1560-00-405-4686	97499	204-030-800-405S	.SKIN,AIRCRAFT........................UHB,UHC,UHM	EA	1
10	8	MDOZZ	1560-00-H05-5815	97499	204-030-800-421S	.SKIN-LH..............................UHB	EA	1
10	8	MDOZZ	1560-00-H05-5814	97499	204-030-800-453S	.SKIN-LH..............................UHB,UHC,UHM	EA	1
10	8	MDOZZ	1560-00-H05-5813	97499	204-030-800-463S	.SKIN-RH..............................UHB,UHC,UHM	EA	1
10	9	XDOZZ	1560-00-405-9939	97499	204-030-800-409S	.SKIN,AIRCRAFT........................UHB,UHC,UHM	EA	1
10	10	XDOZZ	1560-00-405-9944	97499	204-030-800-411S	.SKIN,AIRCRAFT........................UHB,UHC,UHM	EA	1
10	11	XDOZZ	1560-00-423-2354	97499	204-030-800-293S	.SKIN,AIRCRAFT........................UHB,UHC,UHM	EA	1
10	12	XDOZZ	1560-00-405-4684	97499	204-030-800-379S	.SKIN,AIRCRAFT........................UHB,UHC,UHM	EA	1
10	13	PADZZ	1560-00-423-2336	97499	204-030-800-371	.DOUBLER,BOOM.........................UHB,UHC,UHM	EA	1
10	18	PADZZ	1560-00-405-9910	97499	204-030-808-171S	.BULKHEAD,BOOM........................UHB,UHC,UHM	EA	1
10	19	XDOZZ	1560-00-405-9895	97499	204-030-800-75S	.STRINGER,BOOM LH.....................UHB,UHC,UHM	EA	1
10	19	PBDZZ	1560-00-405-9928	97499	204-030-800-76S	.STRINGER,BOOM RH.....................UHB,UHC,UHM	EA	1
10	20	XDOZZ	1560-00-405-9897	97499	204-030-800-73S	.STRINGER,BOOM LH.....................UHB,UHC,UHM	EA	1
10	20	PADZZ	1560-00-405-9896	97499	204-030-800-74S	.STRINGER,BOOM RH.....................UHB,UHC,UHM	EA	1
10	21	PADZZ	1560-00-405-9871	97499	204-030-800-101S	.STRINGER,BOOM LH.....................UHB,UHC,UHM	EA	1
10	22	XDOZZ	1560-00-405-9877	97499	204-030-800-117S	.STRINGER,BOOM -RH....................UHB,UHC,UHM	EA	1
10	23	PADZZ	1560-00-405-9893	97499	204-030-800-79S	.STRINGER,BOOM -LH....................UHB,UHC,UHM	EA	1
10	23	XDOZZ	1560-00-405-9892	97499	204-030-800-80S	.STRINGER,BOOM -RH....................UHB,UHC,UHM	EA	1
10	24	XDOZZ	1560-00-405-9885	97499	204-030-800-81S	.STRINGER,BOOM -LH....................UHB,UHC,UHM	EA	1
10	24	XDOZZ	1560-00-405-9884	97499	204-030-800-82S	.STRINGER,BOOM -RH....................UHB,UHC,UHM	EA	1
10	25	XDOZZ	1560-00-423-2352	97499	204-030-800-231S	.STRINGER,BOOM........................UHB,UHC,UHM	EA	1
10		XCFZZ		97499	204-030-806-129	.LONGERON INSTL-LH....................UHB,UHC,UHM	EA	1
10		XCFZZ		97499	204-030-806-131	.LONGERON INSTL-RH UPPER U/O PN 204-030-800-491 ....UHB,UHC,UHM	EA	1
10	25A	PBDZZ	1560-00-936-2373	97499	204-030-851-2	..FITTING,FUSELAGE....................UHB,UHC,UHM	EA	1
10	26	PADZZ	1560-00-451-0434	97499	204-031-808-15	..LONGERON-RH,UPPER AFT...............UHB,UHC,UHM	EA	1
10	26	XDOZZ	1560-00-423-2439	97499	204-030-806-137S	..LONGERON -LH U/O PN 204-030-806-129............UHB,UHC,UHM	EA	1
10	26	PADZZ	1560-00-423-2445	97499	204-030-806-139S	..LONGERON -RH U/O PN 204-030-806-131............UHB,UHC,UHM	EA	1
10	27	PADZZ	1560-00-426-1536	97499	204-030-806-71S	..LONGERON -LH U/O PN 204-030-806-129............UHB,UHC,UHM	EA	1
10	27	PADZZ	1560-00-426-1537	97499	204-030-806-72S	..LONGERON -RH U/O PN 204-030-806-131............UHB,UHC,UHM	EA	1
10	28	PADZZ	1560-00-431-8502	97499	204-030-806-73S	..LONGERON............................UHB,UHC,UHM	EA	1
10	30	PADZZ	1560-00-431-8501	97499	204-030-806-29S	..SUPPORT,STRUCTURAL -LH U/O PN 204-030-806-129 ....UHB,UHC,UHM	EA	2
10	30	PBDZZ	1560-00-435-4912	97499	204-030-806-30S	..SUPPORT,STRUCTURAL -RH U/O PN 204-030-806-131	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHB,UHC,UHM		
10	31A	XCFZZ		97499	204-030-806-125	.LONGERON INSTL-LH..................................UHB,UHC,UHM	EA	1
10	31A	XCFZZ		97499	204-030-806-127	.LONGERON INSTL-RH..................................UHB,UHC,UHM	EA	1
10	32	XDDZZ	1560-00-423-2355	97499	204-030-806-133S	..LONGERON -LH U/O PN 204-030-806-125...........UHB,UHC,UHM	EA	1
10	32	PADZZ	1560-00-423-2421	97499	204-030-806-135S	..LONGERON -RH U/O PN 204-030-806-127...........UHB,UHC,UHM	EA	1
10	33	PADZZ	1560-00-431-8505	97499	204-030-806-75S	..LONGERON -LH U/O PN 204-030-806-125...........UHB,UHC,UHM	EA	1
10	33	PADZZ	1560-00-764-8911	97499	204-030-806-77S	..LONGERON -RH U/O PN 204-030-806-127...........UHB,UHC,UHM	EA	1
10	34	PADZZ	1560-00-431-8506	97499	204-030-806-79S	..LONGERON -LH U/O PN 204-030-806-125...........UHB,UHC,UHM	EA	1
10	34	PADZZ	1560-00-431-8503	97499	204-030-806-81S	..LONGERON -RH U/O PN 204-030-806-127...........UHB,UHC,UHM	EA	1
10	35	XDDZZ	1560-00-423-2349	97499	204-030-806-25S	..SUPPORT,STRUCTURAL U/O PN 204-030-806-125......UHB,UHC,UHM	EA	1
10	35	XDDZZ	1560-00-423-2350	97499	204-030-806-26S	..SUPPORT,STRUCTURAL U/O PN 204-030-806-127......UHB,UHC,UHM	EA	1
10	36	XDDZZ	1560-00-405-4677	97499	204-030-800-320S	.STRINGER,BOOM -LH..................................UHB,UHC,UHM	EA	2
10	36	XDDZZ	1560-00-405-4682	97499	204-030-800-319S	.STRINGER,BOOM -RH..................................UHB,UHC,UHM	EA	1
10	37	MDDZZ	1560-00-H05-5847	97499	204-030-800-100S	.STRINGER-LH..................................UHB,UHC,UHM	EA	2
10	37	MDDZZ	1560-00-H05-5848	97499	204-030-800-99S	.STRINGER-RH..................................UHB,UHC,UHM	EA	1
10	38	MDDZZ	1560-00-H05-5850	97499	204-030-800-97S	.STRINGER-LH..................................UHB,UHC,UHM	EA	1
10	38	MDDZZ	1560-00-H05-5849	97499	204-030-800-98S	.STRINGER-RH..................................UHB,UHC,UHM	EA	1
10	39	XDDZZ	1560-00-405-9915	97499	204-030-800-85S	.STRINGER,BOOM -LH..................................UHB,UHC,UHM	EA	1
10	39	XDDZZ	1560-00-405-9913	97499	204-030-800-86S	.STRINGER,BOOM -RH..................................UHB,UHC,UHM	EA	1
10	40	PADZZ	1560-00-405-9912	97499	204-030-800-97S	.STRINGER,BOOM -LH..................................UHB,UHC,UHM	EA	1
10	40	XDDZZ	1560-00-405-9873	97499	204-030-800-88S	.STRINGER,BOOM -RH..................................UHB,UHC,UHM	EA	1
10	41	MDDZZ	1560-00-H05-5811	97499	204-030-800-322S	.STRINGER-LH..................................UHB,UHC,UHM	EA	1
10	41	MDDZZ	1560-00-H05-5824	97499	204-030-800-321S	.STRINGER-RH..................................UHB,UHC,UHM	FA	1
10	42	XDDZZ	1560-00-405-9882	97499	204-030-800-109S	.STRINGER,BOOM -LH..................................UHB,UHC,UHM	EA	1
10	42	XDDZZ	1560-00-405-9881	97499	204-030-800-110S	.STRINGER,BOOM -RH..................................UHB,UHC,UHM	EA	1
10	43	MDDZZ	1560-00-H05-5845	97499	204-030-800-111S	.STRINGER..................................UHB,UHC,UHM	EA	1
10	44	MDDZZ	1560-00-H05-5828	97499	204-030-800-233S	.STRINGER..................................UHB,UHC,UHM	EA	1
10	45	PBDZZ	5340-00-435-4811	97499	204-030-800-103S	.BRACKET,ANGLE..................................UHB,UHC,UHM	EA	4
10	46	PADZZ	1560-00-405-4679	97499	204-030-800-303S	.STRINGER,BOOM -LH..................................UHB,UHC,UHM	EA	1
10	46	XDDZZ	1560-00-405-4678	97499	204-030-800-304S	.STRINGER,BOOM -RH..................................UHB,UHC,UHM	EA	1
10		XCFZZ		97499	204-030-862-31	.ANGLE INSTL-LH..................................UHB,UHC,UHM	EA	1
10		XCFZZ		97499	204-030-862-33	.ANGLE INSTL-RH..................................UHB,UHC,UHM	EA	1
10	47	PBDZZ	1560-00-427-8208	97499	204-030-862-5S	..ANGLE,BOOM -LH U/O PN 204-030-862-31...........UHB,UHC,UHM	EA	1
10	47	PBDZZ	1560-00-427-8162	97499	204-030-862-35S	..ANGLE,BOOM -LH U/O PN 204-030-862-31...........UHB,UHC,UHM	EA	1
10	47	PADZZ	1560-00-425-0929	97499	204-030-862-17S	..ANGLE,BOOM -RH U/O PN 204-030-862-33...........UHB,UHC,UHM	EA	1
10	47	PADZZ	1560-00-427-8202	97499	204-030-862-37S	..ANGLE,BOOM -RH U/O PN 204-030-862-33...........UHB,UHC,UHM	EA	1
10	48	PAFZZ	9330-00-109-4605	97499	120-069-1	..PLASTIC STRIP U/O PN 204-030-862-31...........UHB,UHC,UHM	EA	5
10	49	MDDZZ	1560-00-H05-5876	97499	204-030-862-13S	..SPLICE,TAIL BOOM,LH..................................UHB,UHC,UHM	EA	1
10	49	MDDZZ	1560-00-H05-5877	97499	204-030-862-15S	..SPLICE,TAIL BOOM,RH..................................UHB,UHC,UHM	EA	1
10	50	PADZZ	1560-00-764-8912	97499	204-030-800-95S	.STRINGER,BOOM -LH..................................UHB,UHC,UHM	EA	1
10	50	XDDZZ	1560-00-405-9872	97499	204-030-800-96S	.STRINGER,BOOM -RH..................................UHB,UHC,UHM	EA	1
10	51	MDDZZ	1560-00-H05-5852	97499	204-030-800-91S	.STRINGER..................................UHB,UHC,UHM	EA	1
10	52	MDDZZ	1560-00-H05-5820	97499	204-030-800-391S	.STRINGER..................................UHB,UHC,UHM	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
10		XCFZZ		97499	204-030-865-27	.SUPPORT INSTL-LH..........UHB,UHC,UHM	EA	1
10		XCFZZ		97499	204-030-865-33	.SUPPORT INSTL-RH..........UHB,UHC,UHM	EA	1
10	53	PADZZ	1560-00-431-8509	97499	204-030-865-25S	..FRAME,SUPPORT,BOOM -RH,U/O PN 204-030-865-27 ....UHB,UHC,UHM	EA	1
10	53	PADZZ	1560-00-426-1233	97499	204-030-865-35S	..FRAME,BOOM -RH U/O PN 204-030-865-33..........UHB,UHC,UHM	EA	1
10	54	XDDZZ	1560-00-426-1238	97499	204-030-865-31S	..DOUBLER,BOOM -LH U/O PN 204-030-865-27..........UHB,UHC,UHM	EA	1
10	54	PADZZ	1560-00-423-2378	97499	204-030-865-32S	..DOUBLER,BOOM -RH U/O PN 204-030-865-33..........UHB,UHC,UHM	EA	1
10	54	PADZZ	1560-00-428-6606	97499	204-030-865-29S	..RETAINER,TAIL BOOM -LH U/O PN 204-030-865-27 ....UHB,UHC,UHM	EA	1
10	54	PADZZ	1560-00-428-6611	97499	204-030-865-30S	..RETAINER,TAIL BOOM -RH U/O PN 204-030-865-33 ....UHB,UHC,UHM	EA	1
10	55	MDDZZ	1560-00-H05-5851	97499	204-030-800-93S	.STRINGER..........UHB,UHC,UHM	EA	1
10	56	XDDZZ	1560-00-405-4683	97499	204-030-800-211S	.STRINGER,BOOM -LH..........UHB,UHC,UHM	EA	1
10	56	XDDZZ	1560-00-405-4680	97499	204-030-800-212S	.STRINGER,BOOM -RH..........UHB,UHC,UHM	EA	1
10	57	PADZZ	1560-00-405-9876	97499	204-030-800-25S	.STRINGER,BOOM -LH..........UHB,UHC,UHM	EA	1
10	57	XDDZZ	1560-00-405-9894	97499	204-030-800-26S	.STRINGER,BOOM -RH..........UHB,UHC,UHM	EA	1
10	58	MDDZZ	1560-00-H05-5630	97499	204-030-800-221S	.CHANNEL..........UHB,UHC,UHM	EA	2
10	59	MDDZZ	1560-00-H01-6635	97499	204-030-800-235S	.STIFFENER..........UHB,UHC,UHM	EA	5
10	60	MDDZZ	1560-00-H05-5823	97499	204-030-800-345S	.DOUBLER..........UHB,UHC,UHM	EA	1
10	61	MDDZZ	1560-00-H05-5822	97499	204-030-800-349S	.DOUBLER..........UHB,UHC,UHM	EA	1
10	62	MDDZZ	1560-00-H01-6638	97499	204-030-800-425S	.SUPPORT-LH..........UHB,UHC,UHM	EA	1
10	62	MDDZZ	1560-00-H01-6639	97499	204-030-800-426S	.SUPPORT-RH..........UHB,UHC,UHM	EA	1
10	63	XDDZZ	1560-00-405-9931	97499	204-030-800-77S	.STRINGER,BOOM -LH..........UHB,UHC,UHM	EA	1
10	63	XDDZZ	1560-00-405-9932	97499	204-030-800-78S	.STRINGER,BOOM -RH..........UHB,UHC,UHM	EA	1
10	63A	XCFZZ		97499	204-030-879-45	.SUPPORT INSTL..........UHB,UHC,UHM	EA	1
10	64	XDDZZ	1560-00-431-8494	97499	204-030-879-3S	..SUPPORT,STRUCTURAL..........UHB,UHC,UHM	EA	1
10	65	PADZZ	1560-00-423-2323	97499	204-030-879-5S	..SUPPORT,STRUCTURAL..........UHB,UHC,UHM	EA	1
10	66	MDDZZ	1560-00-H05-5939	97499	204-030-879-19S	..STIFFENER..........UHB,UHC,UHM	EA	2
10	67	MDDZZ	1560-00-H05-5942	97499	204-030-879-21S	..STIFFENER..........UHB,UHC,UHM	EA	1
10	68	MDDZZ	1560-00-H05-5943	97499	204-030-879-23S	..STIFFENER..........UHB,UHC,UHM	EA	1
10	69	MDDZZ	1560-00-H05-5941	97499	204-030-879-25S	..STIFFENER..........UHB,UHC,UHM	EA	1
10	70	MDDZZ	1560-00-H05-5940	97499	204-030-879-27S	..STIFFENER..........UHB,UHC,UHM	EA	1
10	71	MDDZZ	1560-00-H05-5961	97499	204-030-879-29	..PAD..........UHB,UHC,UHM	EA	1
10	71A	PBFZZ	1680-01-166-9659	97499	204-031-143-1	.SHELF ASSEMBLY,AIRC..........UHB,UHC,UHM	EA	1
10	72	MDDZZ	1560-00-H05-6437	97499	204-031-143-3S	..BRACKET,SHELF..........UHB,UHC,UHM	EA	1
10	73	PADZZ	1560-00-426-1506	97499	204-031-143-19S	..BRACKET,SHELF..........UHB,UHC,UHM	EA	1
10	74	PADZZ	1560-00-428-7115	97499	204-031-143-17S	..BRACKET,SHELF..........UHB,UHC,UHM	EA	1
10	75	MDDZZ	1560-00-H05-6077	97499	204-031-143-21S	..STIFFENER..........UHB,UHC,UHM	EA	1
10	76	MDDZZ	1560-00-H05-6078	97499	204-031-143-22S	..STIFFENER..........UHB,UHC,UHM	EA	1
10	77	XDDZZ	1560-00-423-2536	97499	204-030-822-13S	..BRACKET,SUPPORT..........UHB,UHC,UHM	EA	1
10	78	XDDZZ	1560-00-425-1071	97499	204-030-822-4S	..BRACKET,SUPPORT..........UHB,UHC,UHM	EA	1
10	79	PADZZ	1560-00-423-2537	97499	204-030-822-3S	..BRACKET,SUPPORT..........UHB,UHC,UHM	EA	1
10	80	PADZZ	1560-00-425-1075	97499	204-030-822-14S	..BRACKET,SUPPORT..........UHB,UHC,UHM	EA	1
10	81	XDDZZ	1560-00-423-2532	97499	204-030-822-15S	..BRACKET,SUPPORT..........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
10	81A	MDOZZ	1560-00-H05-5871	97499	204-030-822-9S	..ANGLE..UHB,UHC,UHM	EA	1
10	82	PADZZ	1560-00-425-1049	97499	204-030-822-7S	..BRACKET,SUPPORT........................UHB,UHC,UHM	EA	1
10	83	XDOZZ	1560-00-423-2530	97499	204-030-822-8S	..BRACKET,SUPPORT........................UHB,UHC,UHM	EA	2
10	84	XDOZZ	5365-00-158-0310	97499	204-030-869-3	..SPACER,PLATE...............................UHB,UHC,UHM	EA	2
10	84	XDOZZ	5365-00-158-0311	97499	204-030-869-5	..SPACER,PLATE...............................UHB,UHC,UHM	EA	2
10	84A	XCFZZ		97499	204-030-055-59	.SHELF INSTL...................................UHB,UHC,UHM	EA	1
10	85	PADZZ	1560-00-425-1039	97499	204-030-055-18S	..BRACKET,SHELF,BOOM..................UHB,UHC,UHM	EA	1
10	86	PADZZ	1560-00-425-1048	97499	204-030-055-17S	..BRACKET,SHELF,BOOM..................UHB,UHC,UHM	EA	1
10	87	MDOZZ	1560-00-H04-6299	97499	204-030-055-25S	..CLIP..UHB,UHC,UHM	EA	1
10	88	MDOZZ	1560-00-H05-5810	97499	204-030-055-19S	..SUPPORT...UHB	EA	1
10	89	PBDZZ	1560-00-423-2522	97499	204-030-055-21S	..INTERCOSTAL,BOOM......................UHB,UHC,UHM	EA	1
10	90	PADZZ	1560-00-423-2523	97499	204-030-055-41S	..INTERCOSTAL,BOOM......................UHB,UHC,UHM	EA	1
10	91	PAOZZ	1560-00-405-9909	97499	204-030-808-135S	.BULKHEAD,BOOM.............................UHB,UHC,UHM	EA	1
10	91	XBOZZ	1560-00-H01-6652	97499	204-030-808-91	..WEB..UHB	EA	1
10	91	PADZZ	1560-00-426-1338	97499	204-030-808-50S	..GUSSET,BULKHEAD -LH.................UHB,UHC,UHM	EA	1
10	91	XDOZZ	1560-00-426-1339	97499	204-030-808-49S	..GUSSET,BULKHEAD -RH.................UHB,UHC,UHM	EA	1
10	91	XDOZZ	1560-00-428-6578	97499	204-030-808-42S	..GUSSET,BULKHEAD -LH.................UHB,UHC,UHM	EA	1
10	91	PADZZ	1560-00-426-1324	97499	204-030-808-41S	..GUSSET,BULKHEAD -RH.................UHB,UHC,UHM	EA	2
10	91	PADZZ	1560-00-426-1327	97499	204-030-808-19S	..GUSSET,BULKHEAD..........................UHB,UHC,UHM	EA	1
10	91	PADZZ	1560-00-426-1330	97499	204-030-808-141S	..GUSSET,BULKHEAD -LH.................UHB,UHC,UHM	EA	1
10	91	PADZZ	1560-00-426-1328	97499	204-030-808-142S	..GUSSET,BULKHEAD -RH.................UHB,UHC,UHM	EA	1
10	92	PBDZZ	1560-00-405-9903	97499	204-030-809-63S	.BULKHEAD,BOOM.............................UHB,UHC,UHM	EA	4
10	92A	MDOZZ	1560-00-H01-6641	97499	204-030-805-1	.GUSSET,BULKHEAD...........................UHB,UHC,UHM	EA	1
10	93	PBDZZ	1560-00-405-9901	97499	204-030-809-61S	.BULKHEAD,BOOM.............................UHB,UHC,UHM	EA	4
10	93A	MDOZZ	1560-00-H01-6790	97499	205-030-805-5S	.GUSSET,BULKHEAD...........................UHB,UHC,UHM	EA	1
10	94	XDOZZ	1560-00-428-6793	97499	204-030-902-25S	.BULKHEAD,BOOM.............................UHB,UHC,UHM	EA	4
10	94A	MDOZZ	1560-00-H05-8308	97499	205-030-805-9S	.GUSSET,BULKHEAD...........................UHB,UHC,UHM	EA	1
10	95	MDOZZ	5340-00-H05-5934	97499	204-030-902-21	.BUMPER...UHB,UHC,UHM	EA	1
10	96	PADZZ	1560-00-428-6815	97499	204-030-903-17S	.BULKHEAD,BOOM.............................UHB,UHC,UHM	EA	4
10	96A	MDOZZ	1560-00-H01-6790	97499	205-030-805-5S	.GUSSET,BULKHEAD...........................UHB,UHC,UHM	EA	4
10	97	MDOZZ	1560-00-H05-8308	97499	205-030-805-9S	.GUSSET,BULKHEAD...........................UHB,UHC,UHM	EA	1
10	98	PADZZ	1560-00-428-6787	97499	204-030-811-19S	.BULKHEAD,BOOM.............................UHB,UHC,UHM	EA	1
10	99	PADZZ	1560-00-405-9917	97499	204-030-810-3[illegible]S	.BULKHEAD,BOOM.............................UHB,UHC,UHM	EA	4
10	100	PADZZ	1560-00-428-6583	97499	204-030-810-29S	.STRAP,BULKHEAD.............................UHB,UHC,UHM	EA	1
10	101	PADZZ	1560-00-427-8247	97499	204-030-809-49S	.BULKHEAD,BOOM.............................UHB,UHC,UHM	EA	1
10	102	PADZZ	1560-00-427-8245	97499	204-030-809-51S	.BULKHEAD,BOOM.............................UHB,UHC,UHM	EA	1
10	103	PADZZ	1560-00-427-8140	97499	205-030-816-7S	.BULKHEAD,BOOM.............................UHB,UHC,UHM	EA	1
10	104	PADZZ	1560-00-427-8082	97499	204-030-812-19S	.PANEL,BULKHEAD.............................UHB,UHC,UHM	EA	1
10	105	XDOZZ	1560-00-431-8514	97499	204-030-812-27S	.DOUBLER,BULKHEAD.........................UHB,UHC,UHM	EA	1
10	106	XDOZZ	1560-00-431-8513	97499	204-030-812-31	.DOUBLER,BULKHEAD.........................UHB,UHC,UHM	EA	1
10	107	XDOZZ	1560-00-431-8512	97499	204-030-812-32	.DOUBLER,BULKHEAD.........................UHB,UHC,UHM	EA	1
10	108	MDOZZ	1560-00-H05-5929	97499	204-030-812-65S	.BRACE...UHB,UHC,UHM	EA	1
10	109	MDOZZ	1560-00-H05-5930	97499	204-030-812-67S	.BRACE...UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
10	110	PADZZ	1560-00-427-8087	97499	204-030-812-77	.BULKHEAD,BOOM......UHB,UHC,UHM	EA	1
10	111	PADZZ	1560-00-405-9921	97499	204-030-812-81S	.FRAMF,BOOM......UHB,UHC,UHM	EA	1
10	112	PADZZ	1560-00-431-8515	97499	204-030-812-85S	.BULKHEAD,BOOM......UHB,UHC,UHM	EA	1
10	113	PBDZZ	5340-00-178-6100	97499	204-030-948-1	.FITTING,BOOM TAIL S......UHB,UHC,UHM	FA	1
10	114	PBDZZ	5340-00-179-1560	97499	204-030-948-2	.BRACKET SUPPURT......UHB,UHC,UHM	EA	1
10	115	MDDZZ	1560-00-H05-6438	97499	204-031-866-5S	.STIFFENER......UHB,UHC,UHM	EA	1
10	115A	PADZZ	1560-00-428-7340	97499	204-031-867-1S	.SUPPORT,PULLEYS......UHB,UHC,UHM	EA	1
10	115B	PADZZ	1560-00-990-3747	97499	205-031-831-3S	.SUPPORT,GEAR BOX......UHB,UHC,UHM	EA	1
10	115C	PADZZ	1560-00-990-3748	97499	205-031-832-3S	.SUPPORT,GEAR BOX......UHB,UHC,UHM	EA	1
10	116	PADZZ	1560-00-423-2519	97499	204-030-814-91S	.DOUBLER,BOOM......UHB,UHC,UHM	EA	1
10	117	PADZZ	1560-00-427-8210	97499	204-030-842-7S	.BRACKET,BOOM......UHB,UHC,UHM	EA	1
10	118	PADZZ	1560-00-427-8235	97499	204-030-997-7S	.BRACKET,VALVE,BOOM......UHB,UHC,UHM	EA	1
10	118	PADZZ	1560-00-427-8236	97499	204-030-997-8S	.BRACKET,VALVE,BOOM......UHB,UHC,UHM	EA	1
10	119	PADZZ	1560-00-427-8242	97499	204-030-997-9S	.BRACKET,VALVE,BOOM......UHB,UHC,UHM	EA	1
10	120	PBDZZ	1560-00-432-2584	97499	204-030-900-3S	.SUPPORT,ELEVATOR BO......UHB,UHC,UHM	EA	1
10	121	PADZZ	1560-00-432-2585	97499	204-030-900-5S	.SUPPORT,ELEVATOR......UHB,UHC,UHM	EA	1
10	122	MDDZZ	1560-00-H05-5932	97499	204-030-900-7S	.STOP......UHB,UHC,UHM	EA	1
10	123	MDDZZ	1560-00-H05-5933	97499	204-030-900-21S	.STIFFENER......UHB,UHC,UHM	EA	1
10	124	MDDZZ	1560-00-H05-5935	97499	204-030-900-23S	.STIFFENER......UHB,UHC,UHM	EA	1
10	125	PADZZ	1560-00-435-4906	97499	204-030-814-55S	.DOUBLER,DOOR ACCESS......UHB,UHC,UHM	EA	1
10	126	MDFZZ	1560-00-H05-5874	97499	204-030-857-1S	.FITTING......UHB,UHC,UHM	EA	1
10	127	MDFZZ	1560-00-H05-5875	97499	204-030-857-3S	.FITTING......UHB,UHC,UHM	EA	1
10	128	MDDZZ	1560-00-H05-6454	97499	205-031-013-15S	.CLIP......UHB,UHC,UHM	EA	1
10	129	MDDZZ	1560-00-H05-6455	97499	205-031-013-17S	.CLIP......UHB,UHC,UHM	EA	1
10	130	MDDZZ		97499	205-031-013-21S	.DOUBLER......UHB,UHC,UHM	EA	1
10	131	MDDZZ	1560-00-H05-6457	97499	205-031-013-23S	.SUPPORT......UHB,UHC,UHM	EA	1
10	132	MDDZZ	1560-00-H05-6459	97499	205-031-013-25S	.STOP......UHB	EA	1
10	133	XDDZZ	1560-00-445-6266	97499	204-001-789-3	.GUARD,CABLE......UHB,UHC,UHM	EA	1
10	134	PADZZ	1560-00-435-4805	97499	204-030-814-59S	.DOUBLER,DOOR ACCESS......UHB,UHC,UHM	EA	1
10	134	PBDZZ	1560-00-435-4807	97499	204-030-814-71	.DOUBLER,DOOR ACCESS......UHB,UHC,UHM	EA	1
10	135	MDDZZ	1560-00-H04-6292	97499	204-001-790-1	.SUPPORT......UHB,UHC,UHM	EA	1
10	135A	MDDZZ	5365-00-H04-6293	97499	204-001-791-5S	.SHIM......UHB,UHC,UHM	EA	1
10	136	MDDZZ	5365-00-H04-6294	97499	204-001-791-7S	.SHIM......UHB,UHC,UHM	EA	1
10	137	MDDZZ	1560-00-H04-6295	97499	204-001-849-1	.SUPPORT......UHB,UHC,UHM	EA	1
10	138	MDDZZ	1560-00-H04-6296	97499	204-001-849-2	.SUPPORT......UHB,UHC,UHM	EA	1
10	139	PBDZZ	1560-00-428-6830	97499	204-030-031-5S	.CHANNEL,BRACKET......UHB,UHC,UHM	EA	1
10	140	MDDZZ	1560-00-H04-6297	97499	204-030-031-7S	.CLIP......UHB,UHC,UHM	EA	1
10	141	MDDZZ	1560-00-H04-6298	97499	204-030-031-9S	.CLIP......UHB,UHC,UHM	EA	1
10	142	MDDZZ	1560-00-H05-5963	97499	204-030-030-3	.PAD.... ......UHB,UHC,UHM	EA	1
10	142A	XCFZZ		97499	204-030-894-1	.SUPPORT INSTL SYNCHRONIZED ELEVATOR......UHB,UHC,UHM	EA	1
10	143	PADZZ	1560-00-427-9111	97499	204-030-894-17S	..DECK,SUPPORT ASSY......UHB,UHC,UHM	EA	1
10	144	PADZZ	1560-00-423-2316	97499	204-030-894-11S	..WEB,SUPPORT,BEAM......UHB,UHC,UHM	EA	1
10	145	PADZZ	1560-00-423-2509	97499	204-030-817-41S	..BEAM,SUPPORT,CONTRO......UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
10	146	PADZZ	1560-00-431-8530	97499	204-030-894-33S	..BEAM,SUPPORT,BOOM........UHB,UHC,UHM	EA	1
10	147	MDDZZ	1560-00-H05-5858	97499	204-030-817-15S	..ANGLE-LH........UHB,UHC,UHM	EA	1
10	147	MDDZZ	1560-00-H05-5859	97499	204-030-817-16S	..ANGLE-RH........UHB,UHC,UHM	EA	1
10	148	MDDZZ	1560-00-H05-5864	97499	204-030-817-45S	..CLIP-LH........UHB,UHC,UHM	EA	1
10	148	MDDZZ	1560-00-H05-6471	97499	204-030-894-45S	..CLIP-RH........UHB,UHC,UHM	EA	1
10	149	MDDZZ	1560-00-H05-5862	97499	204-030-817-43S	..CLIP-LH........UHB,UHC,UHM	EA	1
10	149	MDDZZ	1560-00-H05-5863	97499	204-030-817-44S	..CLIP-RH........UHB,UHC,UHM	EA	1
10	150	MDDZZ	1560-00-H05-5865	97499	204-030-817-47S	..ANGLE-LH........UHB,UHC,UHM	EA	1
10	150	MDDZZ	1560-00-H05-5866	97499	204-030-817-48S	..ANGLE-RH........UHB,UHC,UHM	EA	1
10	151	XDDZZ	1560-00-431-8532	97499	204-030-894-35S	..ANGLE,SUPPORT,BEAM........UHB,UHC,UHM	EA	1
10	152	MDDZZ	1560-00-H05-5860	97499	204-030-817-39S	..CLIP-LH........UHB,UHC,UHM	EA	1
10	152	MDDZZ	1560-00-H05-5861	97499	204-030-817-40S	..CLIP-RH........UHB,UHC,UHM	EA	1
10	153	MDDZZ	1560-00-H05-5950	97499	204-030-817-51S	..ANGLE-LH........UHB,UHC,UHM	EA	1
10	154	MDDZZ	1560-00-H05-5958	97499	204-030-817-52S	..ANGLE-RH........UHB,UHC,UHM	EA	1
10	155	PADZZ	1560-00-425-0876	97499	204-030-817-65S	..SUPPORT,STRUCTURAL, LH........UHB,UHC,UHM	EA	1
10	156	PADZZ	1560-00-425-0888	97499	204-030-817-66S	..SUPPORT,STRUCTURAL, RH........UHB,UHC,UHM	EA	1
10	157	PADZZ	1560-00-431-8531	97499	204-030-894-29S	..HAT,SUPPORT,BEAM........UHB,UHC,UHM	EA	1
10	158	MDDZZ	1560-00-H05-5957	97499	204-030-817-37S	..CLIP-LH........UHB,UHC,UHM	EA	1
10	158	MDDZZ	1560-00-H05-5945	97499	204-030-817-38S	..CLIP-RH........UHB,UHC,UHM	EA	1
10	159	XDDZZ	1560-00-431-8529	97499	204-030-894-31S	..PAN,SUPPORT,BEAM........UHB,UHC,UHM	EA	1
10	160	MDDZZ	1560-00-H05-5867	97499	204-030-817-53S	..ANGLE........UHB,UHC,UHM	EA	1
10	161	MDDZZ	1560-00-H05-5946	97499	204-030-894-39S	..STIFFENER-LH........UHB,UHC,UHM	EA	1
10	161	MDDZZ	1560-00-H05-6467	97499	204-030-894-40S	..STIFFENER-RH........UHB,UHC,UHM	EA	1
10	162	MDDZZ	1560-00-H05-6468	97499	204-030-894-41S	..CLIP-LH........UHB,UHC,UHM	EA	1
10	162	MDDZZ	1560-00-H05-5936	97499	204-030-894-42S	..CLIP -RH........UHB,UHC,UHM	FA	1
10	163	MDDZZ	1560-00-H05-5944	97499	204-030-894-37S	..BULKHEAD-LH........UHB,UHC,UHM	EA	1
10	163	MDDZZ	1560-00-H05-6403	97499	204-030-894-38S	..BULKHEAD-RH........UHB,UHC,UHM	EA	1
10	163	MDDZZ	1560-00-H05-6469	97499	204-030-894-43S	..SUPPORT -LH........UHB,UHC,UHM	EA	1
10	163	MDDZZ	1560-00-H05-6470	97499	204-030-894-44S	..SUPPORT-RH........UHB,UHC,UHM	EA	1
10	164	MDDZZ	1560-00-H05-5869	97499	204-030-817-57S	..ANGLE-LH........UHB,UHC,UHM	FA	1
10	164	MDDZZ	1560-00-H05-5870	97499	204-030-817-58S	..ANGLE-RH........UHB,UHC,UHM	EA	1
10	165	PADZZ	1560-00-425-0885	97499	204-030-817-67S	..SUPPORT,STRUCTURAL -LH........UHB,UHC,UHM	EA	1
10	165	PADZZ	1560-00-425-0896	97499	204-030-817-68S	..SUPPORT,STRUCTURAL -RH........UHB,UHC,UHM	EA	1
10	166	MDDZZ	1560-00-H05-5953	97499	204-030-817-49S	.ANGLE........UHB,UHC,UHM	EA	1
10	167	PADZZ	1560-00-425-0984	97499	204-030-894-51S	..ANGLE,SUPPORT,BEAM -LH........UHB,UHC,UHM	EA	1
10	167	PADZZ	1560-00-425-0992	97499	204-030-894-52S	..ANGLE,SUPPORT,BEAM -RH........UHB,UHC,UHM	EA	1
10	168	MDDZZ	1560-00-H05-5954	97499	204-030-817-7S	..CHANNEL-LH........UHB,UHC,UHM	EA	1
10	168	MDDZZ	1560-00-H05-5955	97499	204-030-817-8S	..CHANNEL-RH........UHB,UHC,UHM	EA	1
10	168A	MDDZZ	1560-00-H05-5951	97499	204-030-817-9S	..CLIP-LH........UHB,UHC,UHM	EA	2
10	168A	MDDZZ	1560-00-H05-5952	97499	204-030-817-10S	..CLIP-RH........UHB,UHC,UHM	EA	2
10	169	MDDZZ	1560-00-H05-5956	97499	204-030-817-61S	..DOUBLER........UHB,UHC,UHM	EA	1
10	170	MDDZZ	1560-00-H05-5938	97499	204-030-894-13S	..STIFFENER........UHB,UHC,UHM	EA	1
10	171	MDDZZ	1560-00-H05-5879	97499	204-030-894-15S	..STIFFENER........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
10	172	MDDZZ	1560-00-H05-5884	97499	204-030-894-23S	..WEB-LH.......................................UHB,UHC,UHM	EA	1
10	172	MDDZZ	1560-00-H05-5885	97499	204-030-894-24S	..WEB-RH.......................................UHB,UHC,UHM	EA	1
10	173	PADZZ	1560-00-425-1038	97499	204-030-894-25S	..BRACKET,SUPPORT,BEA -LH........................UHB,UHC,UHM	EA	1
10	173	PBDZZ	1560-00-425-1021	97499	204-030-894-26S	..BRACKET,SUPPORT,BEA -RH........................UHB,UHC,UHM	EA	1
10	174	MDDZZ	1560-00-H05-5882	97499	204-030-894-21S	..SUPPORT-LH.....................................UHB,UHC,UHM	EA	1
10	174	MDDZZ	1560-00-H05-5883	97499	204-030-894-22S	..SUPPORT-RH.....................................UHB,UHC,UHM	EA	1
10	175	PADZZ	1560-00-425-1011	97499	204-030-894-47S	..BRACKET,SUPPORT,BEA -LH........................UHB,UHC,UHM	EA	1
10	175	PADZZ	1560-00-425-1010	97499	204-030-894-48S	..BRACKET,SUPPORT,BEA -RH........................UHB,UHC,UHM	EA	1
10	176	MDDZZ	1560-00-H05-5880	97499	204-030-894-19S	..CLIP-LH..UHB,UHC,UHM	EA	1
10	176	MDDZZ	1560-00-H05-5881	97499	204-030-894-20S	..CLIP-RH..UHB,UHC,UHM	EA	1
10	177	MDDZZ	1560-00-H05-5937	97499	204-030-894-27S	..CLIP-LH..UHB,UHC,UHM	EA	1
10	177	MDDZZ	1560-00-H05-6402	97499	204-030-894-28S	..CLIP,RH..UHB,UHC,UHM	EA	1
10	178	MDDZZ	1560-00-H05-6472	97499	204-030-894-49S	..CLIP...UHB,UHC,UHM	EA	1

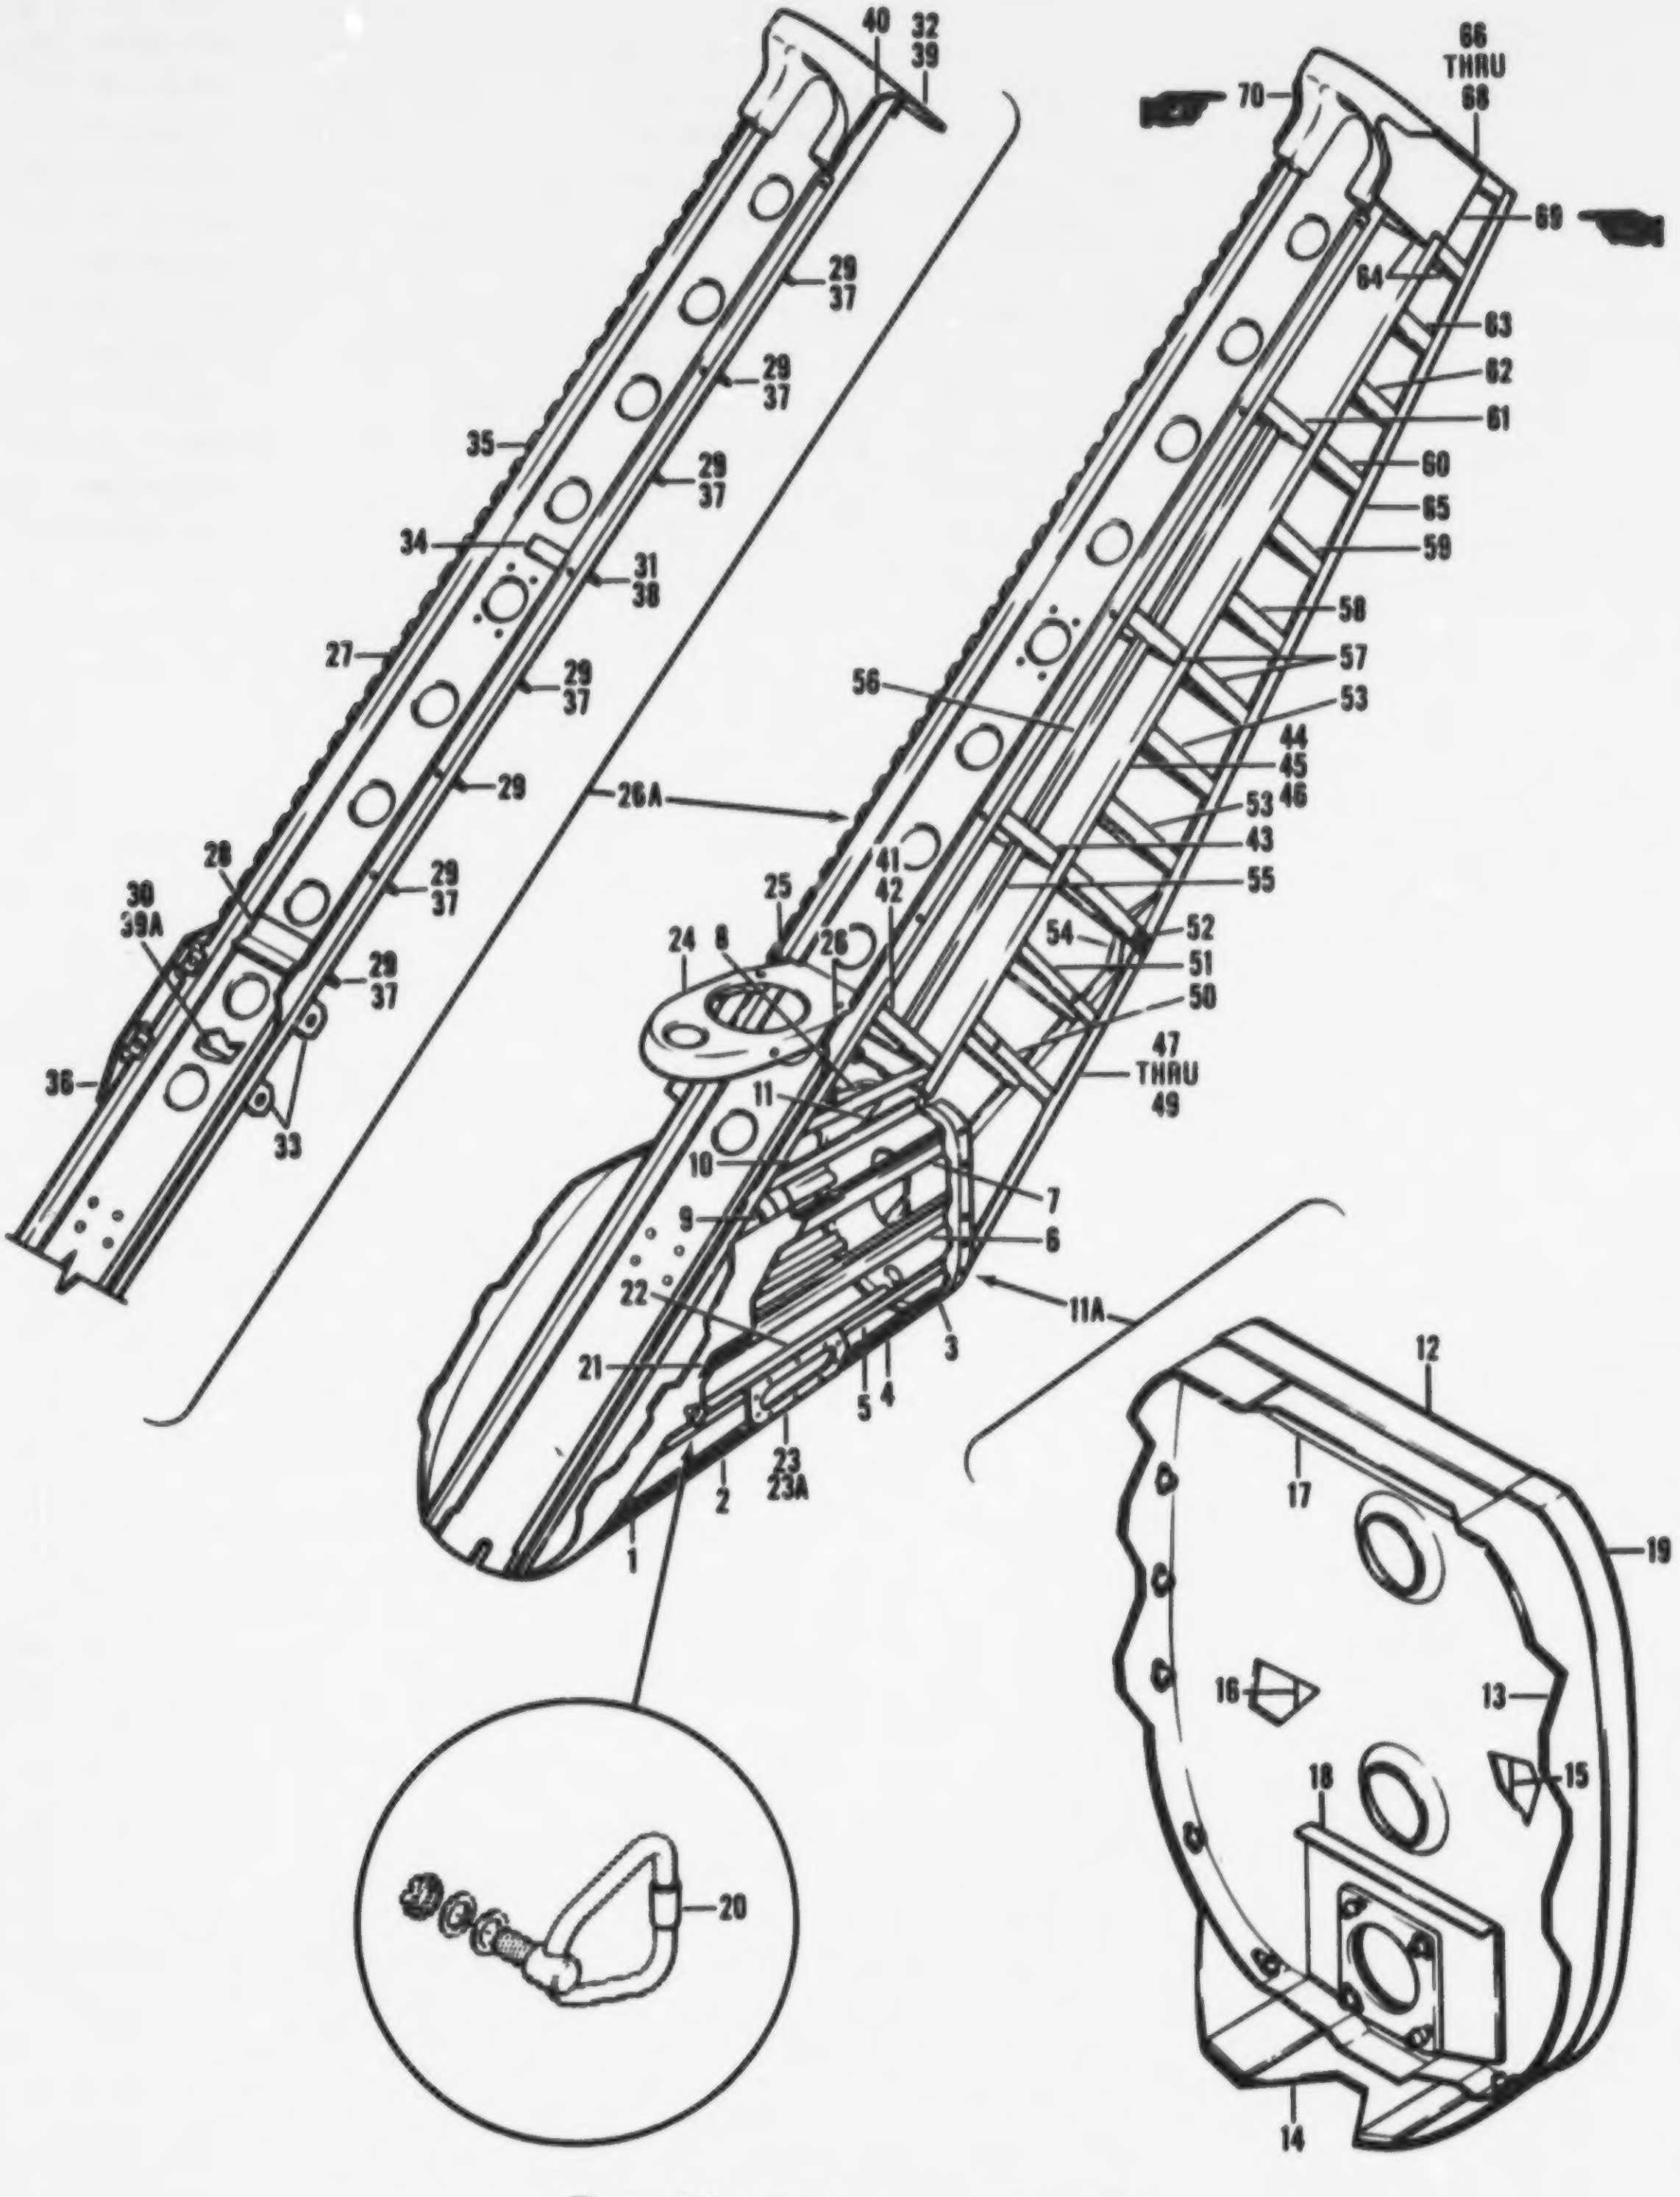
40
32
39
29
37
29
37
35
29
37
34
31
38
27
29
37
29
26A
28
30
39A
29
37
29
37
36
33
66
THRU
68
70
69
64
63
62
61
60
65
59
58
57
56
53
44
45
46
53
43
55
25
41
42
24
8
26
54
52
51
50
47
THRU
49
11
10
7
9
6
11A
22
3
21
5
4
23
23A
2
1
12
17
19
16
13
18
15
14
20

Figure 11. Tailboom and Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
11		XCOZZ	1560-00-908-1643	97499	204-030-800-469	BOOM ASSEMBLY,TAIL RPL-BY 1560-00-073-8702 SEE FIG.8 FOR NHA 204-030-800-469 WAS REMOVED FROM FIG.8 (NHA) AND BKON LEFT INFIG 11..........UHB	EA	1
11	1	XDDZZ	1560-00-425-0980	97499	204-030-800-185S	.BRACKET,TAILBOOM -LH..........UHB	EA	1
11	1	XDDZZ	1560-00-425-0973	97499	204-030-800-199S	.BRACKET,TAILBOOM -RH..........UHB	EA	1
11	2	XDDZZ	1560-00-425-0858	97499	204-030-800-181S	.CHANNEL,BOOM -LH..........UHB	EA	1
11	2	XODZZ	1560-00-423-2324	97499	204-030-800-183S	.CHANNEL,BOOM -RH..........UHB	EA	2
11	3	MDDZZ	5365-00-H04-6171	97499	204-030-800-187S	.SHIM..........UHB	EA	1
11	4	XDDZZ	1560-00-423-2344	97499	204-030-800-225S	.STRINGER,BOOM -LH..........UHB	EA	1
11	4	XDDZZ	1560-00-423-2345	97499	204-030-800-226S	.STRINGER,BOOM -RH..........UHB	EA	1
11	5	XDDZZ	1560-00-423-2351	97499	204-030-800-223S	.STRINGER,BOOM -LH..........UHB	EA	1
11	5	XDUZZ	1560-00-423-2343	97499	204-030-800-224S	.STRINGER,BOOM -RH..........UHB	EA	1
11	6	PADZZ	1560-00-405-9883	97499	204-030-800-17S	.STRINGER,BOOM -LH..........UHB	EA	1
11	6	XDDZZ	1560-00-405-9878	97499	204-030-800-18S	.STRINGER,BOOM -RH..........UHB	EA	1
11	7	XDDZZ	1560-00-405-9874	97499	204-030-800-15S	.STRINGER,BOOM -LH..........UHB	EA	1
11	7	XDDZZ	1560-00-405-9879	97499	204-030-800-16S	.STRINGER,BOOM -RH..........UHB	EA	1
11	8	MDDZZ	1560-00-H05-5846	97499	204-030-800-113S	.STIFFENER-LH..........UHB	EA	1
11	8	MDDZZ	1560-00-H05-5844	97499	204-030-800-114S	.STIFFENER-RH..........UHB	EA	1
11	9	MDDZZ	1560-00-H05-5843	97499	204-030-800-115S	.CLIP-LH..........UHB	EA	1
11	9	MDDZZ	1560-00-H05-5842	97499	204-030-800-116S	.CLIP-RH..........UHB	EA	1
11	10	ADDZZ	1560-00-H05-5840	97499	204-030-800-155S	.ANGLE -LH..........UHB	EA	1
11	10	MDDZZ	1560-00-H05-5839	97499	204-030-900-156S	.ANGLE-RH..........UHB	EA	1
11	11	PADZZ	1560-00-428-6771	97499	204-030-403-1S	.FITTING,FIN,BOOM..........UHB	EA	1
11	11A	XCFZZ		97499	204-030-812-39	.BULKHEAD INSTL FIN..........UHB	EA	1
11	12	XDDZZ	1560-00-405-9916	97499	204-030-812-41S	..BULKHEAD,BOOM..........UHB	EA	1
11	13	PADZZ	1560-00-431-3639	97499	204-030-812-43	..FRAME,BOOM..........UHB	EA	1
11	14	PADZZ	1560-00-431-3638	97499	204-030-812-45	..FRAME,BOOM..........UHB	EA	1
11	15	MDDZZ	1560-00-H05-5855	97499	204-030-812-47S	..ANGLE..........UHB	EA	1
11	16	MDDZZ	1560-00-H05-5856	97499	204-030-812-49S	..ANGLE RH..........UHB	EA	1
11	17	MDDZZ	1560-00-H05-8309	97499	204-030-812-51S	..ANGLE..........UHB	EA	1
11	18	MDDZZ	1560-00-H05-5857	97499	204-030-812-53	..DOUBLER..........UHB	EA	1
11	19	MDDZ7	1560-00-H05-5962	97499	204-030-812-55	..STRIP..........UHB	EA	2
11	20	MDDZZ	1560-00-H05-5826	97499	204-030-800-291S	.SPACER..........UHB	EA	2
11	21	MDDZZ	1560-00-H05-5825	97499	204-030-800-301	.FILLER..........UHB	EA	1
11	21	MDDZZ	1560-00-H05-8938	97499	204-031-807-11	.FILLER U/O PN 204-030-800-1 THRU -469..........UHB	EA	1
11	22	PADZZ	1560-00-405-9875	97499	204-030-800-23S	.STRINGER,BOOM..........UHB	EA	1
11	23	MDDZZ	1560-00-H05-5832	97499	204-030-800-219S	.DOUBLER-LH..........UHB	EA	1
11	23	MDD7Z	1560-00-H05-5831	97499	204-030-800-220S	.DOUBLER-RH..........UHB	EA	1
11	23A	MDDZZ	9999-00-H01-6629	97499	204-030-800-217S	.DOOR-LH..........UHB	EA	1
11	23A	MDDZZ	9999-00-H01-6630	97499	204-030-800-218S	.DOOR-RH..........UHB	EA	1
11	24	PADZZ	1560-00-928-3923	97499	204-030-833-23S	.RIB,VERTICAL STABIL..........UHB	EA	1
11	25	MDDZZ	5365-00-H05-5872	97499	204-030-833-13	.SHIM..........UHB	EA	1
11	26	MDDZZ	5365-00-H05-5873	97499	204-030-833-15	.SHIM..........UHB	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
11	26A	XCFZZ		97499	205-030-846-9	.SPAR INSTL FIN..........UHB	EA	1
11	27	PADZZ	1560-00-428-6814	97499	205-030-846-11S	..SPAR,FIN,BOOM..........UHB	EA	1
11	28	MDOZZ	1560-00-H05-6476	97499	205-030-846-17S	..STIFFENER..........UHB	EA	1
11	29	MDOZZ	1560-00-H05-6478	97499	205-030-846-19S	..STIFFENER..........UHB	EA	1
11	30	PADZZ	1560-00-431-8496	97499	205-030-846-21S	..STIFFENER,SPAR,FIN..........UHB	EA	1
11	31	MDOZZ	1560-00-H05-5886	97499	205-030-846-25S	..STIFFENER..........UHB	EA	1
11	32	MDOZZ	1560-00-H05-6479	97499	205-030-846-27S	..STIFFENER..........UHB	EA	1
11	33	MDOZZ	1560-00-H05-6480	97499	205-030-846-29S	..BRACKET..........UHB	EA	1
11	34	MDOZZ	1560-00-H05-6441	97499	205-030-846-31	..FILLER..........UHB	EA	1
11	35	MFFZZ	5340-00-H05-6442	97499	205-030-846-33S	..HINGE..........UHB	EA	1
11	36	MDOZZ	1560-00-H05-6443	97499	205-030-846-45S	..DOUBLER..........UHB	EA	1
11	37	MDOZZ	1560-00-H05-8303	97499	205-030-846-63S	..STIFFENER..........UHB	EA	6
11	38	MDOZZ	1560-00-H04-6180	97499	205-030-846-69S	..STIFFENER..........UHB	EA	1
11	39	MDOZZ	1560-00-H05-5959	97499	205-030-846-71S	..STIFFENER..........UHB	EA	1
11	39A	XDOZZ	1560-00-428-6809	97499	205-030-846-65S	.STIFFENER,BOOM..........UHB	EA	1
11	40	PADZZ	1560-00-898-8932	97499	204-030-867-1	..SHIM,SUPPORT,TAIL..........UHB	EA	1
11	41	PADZZ	1560-00-431-8544	97499	204-030-827-53S	.RIB,FIN..........UHB	EA	1
11	42	PADZZ	1560-00-431-8548	97499	204-030-827-13S	.CLIP,RIB,FIN..........UHB	EA	1
11	43	PADZZ	1560-00-431-8549	97499	204-030-827-15S	.RIB,FIN -LH..........UHB	EA	1
11	43	PADZZ	1560-00-431-8546	97499	204-030-827-43S	.RIB,FIN -RH..........UHB	EA	1
11	44	PADZZ	1560-00-432-2588	97499	204-031-826-21	.SPAR,FIN..........UHB	EA	1
11	45	MDOZZ	1560-00-H03-6079	97499	204-031-826-5S	.STIFFENER..........UHB	EA	1
11	46	MDOZZ	1560-00-H05-6080	97499	204-031-826-7	.FILLER..........UHB	EA	1
11	47	PADZZ	1560-00-428-6624	97499	204-030-769-5S	.BULKHEAD,BOOM..........UHB	EA	1
11	48	PBDZZ	1560-00-426-1248	97499	204-030-769-7	.FILLER,BULKHEAD..........UHB	EA	1
11	49	PBDZZ	1560-00-426-1251	97499	204-030-769-8	.FILLER,BULKHEAD..........UHB	EA	1
11	50	PADZZ	1560-00-405-9887	97499	204-030-800-161S	.STIFFENER,BOOM -LH..........UHB	EA	1
11	50	PADZZ	1560-00-405-9888	97499	204-030-800-163S	.STIFFENER,BOOM -RH..........UHB	EA	1
11	51	PBDZZ	1560-00-405-9889	97499	204-030-800-165S	.STIFFENER,BOOM -LH..........UHB	EA	1
11	51	PADZZ	1560-00-423-2325	97499	204-030-800-167S	.STIFFENER,BOOM -RH..........UHB	EA	1
11	52	PADZZ	1560-00-405-9890	97499	204-030-800-139S	.WEB,BOOM..........UHB	EA	1
11	53	PADZZ	1560-00-431-8526	97499	204-030-863-37S	.RIB,FIN,BOOM..........UHB	EA	1
11	54	MDOZZ	1560-00-H05-5836	97499	204-030-800-189S	.GUSSET..........UHB	EA	2
11	54	MDOZZ		97499	204-030-800-190	.GUSSET..........UHB	EA	1
11	55	MDOZZ	1560-00-H01-6640	97499	204-030-800-47S	.STIFFENER-LH..........UHB	EA	1
11	55	MDOZZ	1560-00-H05-5853	97499	204-030-800-48S	.STIFFENER-RH..........UHB	EA	1
11	56	MDOZZ	1560-00-H01-6636	97499	204-030-800-29S	.STIFFENER-LH..........UHB	EA	2
11	56	MDOZZ	1560-00-H05-5854	97499	204-030-800-30S	.STIFFENER-RH..........UHB	EA	2
11	57	PADZZ	1560-00-431-8543	97499	204-030-827-19S	.RIB,FIN -LH..........UHB	EA	1
11	57	PADZZ	1560-00-431-8540	97499	204-030-827-45S	.RIB,FIN -RH..........UHB	EA	1
11	58	PADZZ	1560-00-431-8524	97499	204-030-863-41S	.RIB,FIN,BOOM..........UHB	EA	1
11	59	PADZZ	1560-00-431-8523	97499	204-030-863-43S	.RIB,FIN,BOOM..........UHB	EA	1
11	60	PADZZ	1560-00-431-8541	97499	204-030-827-23S	.RIB,FIN..........UHB	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
11	61	PADZZ	1560-00-431-8547	97499	204-030-827-27S	.RIB,FIN.	UHB	EA	1
11	62	PADZZ	1560-00-431-8522	97499	204-030-863-45S	.RIB,FIN,BOOM.	UHB	EA	1
11	63	PADZZ	1560-00-431-8521	97499	204-030-863-47S	.RIB,FIN,BOOM.	UHB	EA	1
11	64	PADZZ	1560-00-431-8547	97499	204-030-827-27S	.RIB,FIN.	UHB	EA	1
11	65	MDDZZ	1560-00-H01-6628	97499	204-030-800-141S	.CHANNEL	UHB	EA	1
11	66	PADZZ	1560-00-432-2578	97499	205-031-837-3S	.RIB,FIN.	UHB	EA	1
11	67	PADZZ	1560-00-451-1144	97499	205-031-837-5	.CHANNEL,RIB,FIN.	UHB	EA	1
11	68	PBDZZ	1560-00-428-6834	97499	205-031-837-9S	.BRACKET,RIB,FIN.	UHB	EA	1
11	69	MDDZZ	1560-00-H05-5838	97499	204-030-800-169S	.DOUBLER-LH.	UHB	EA	1
11	70	MDDZZ	1560-00-H05-5821	97499	204-030-800-393S	.DOUBLER-RH.	UHB	EA	1

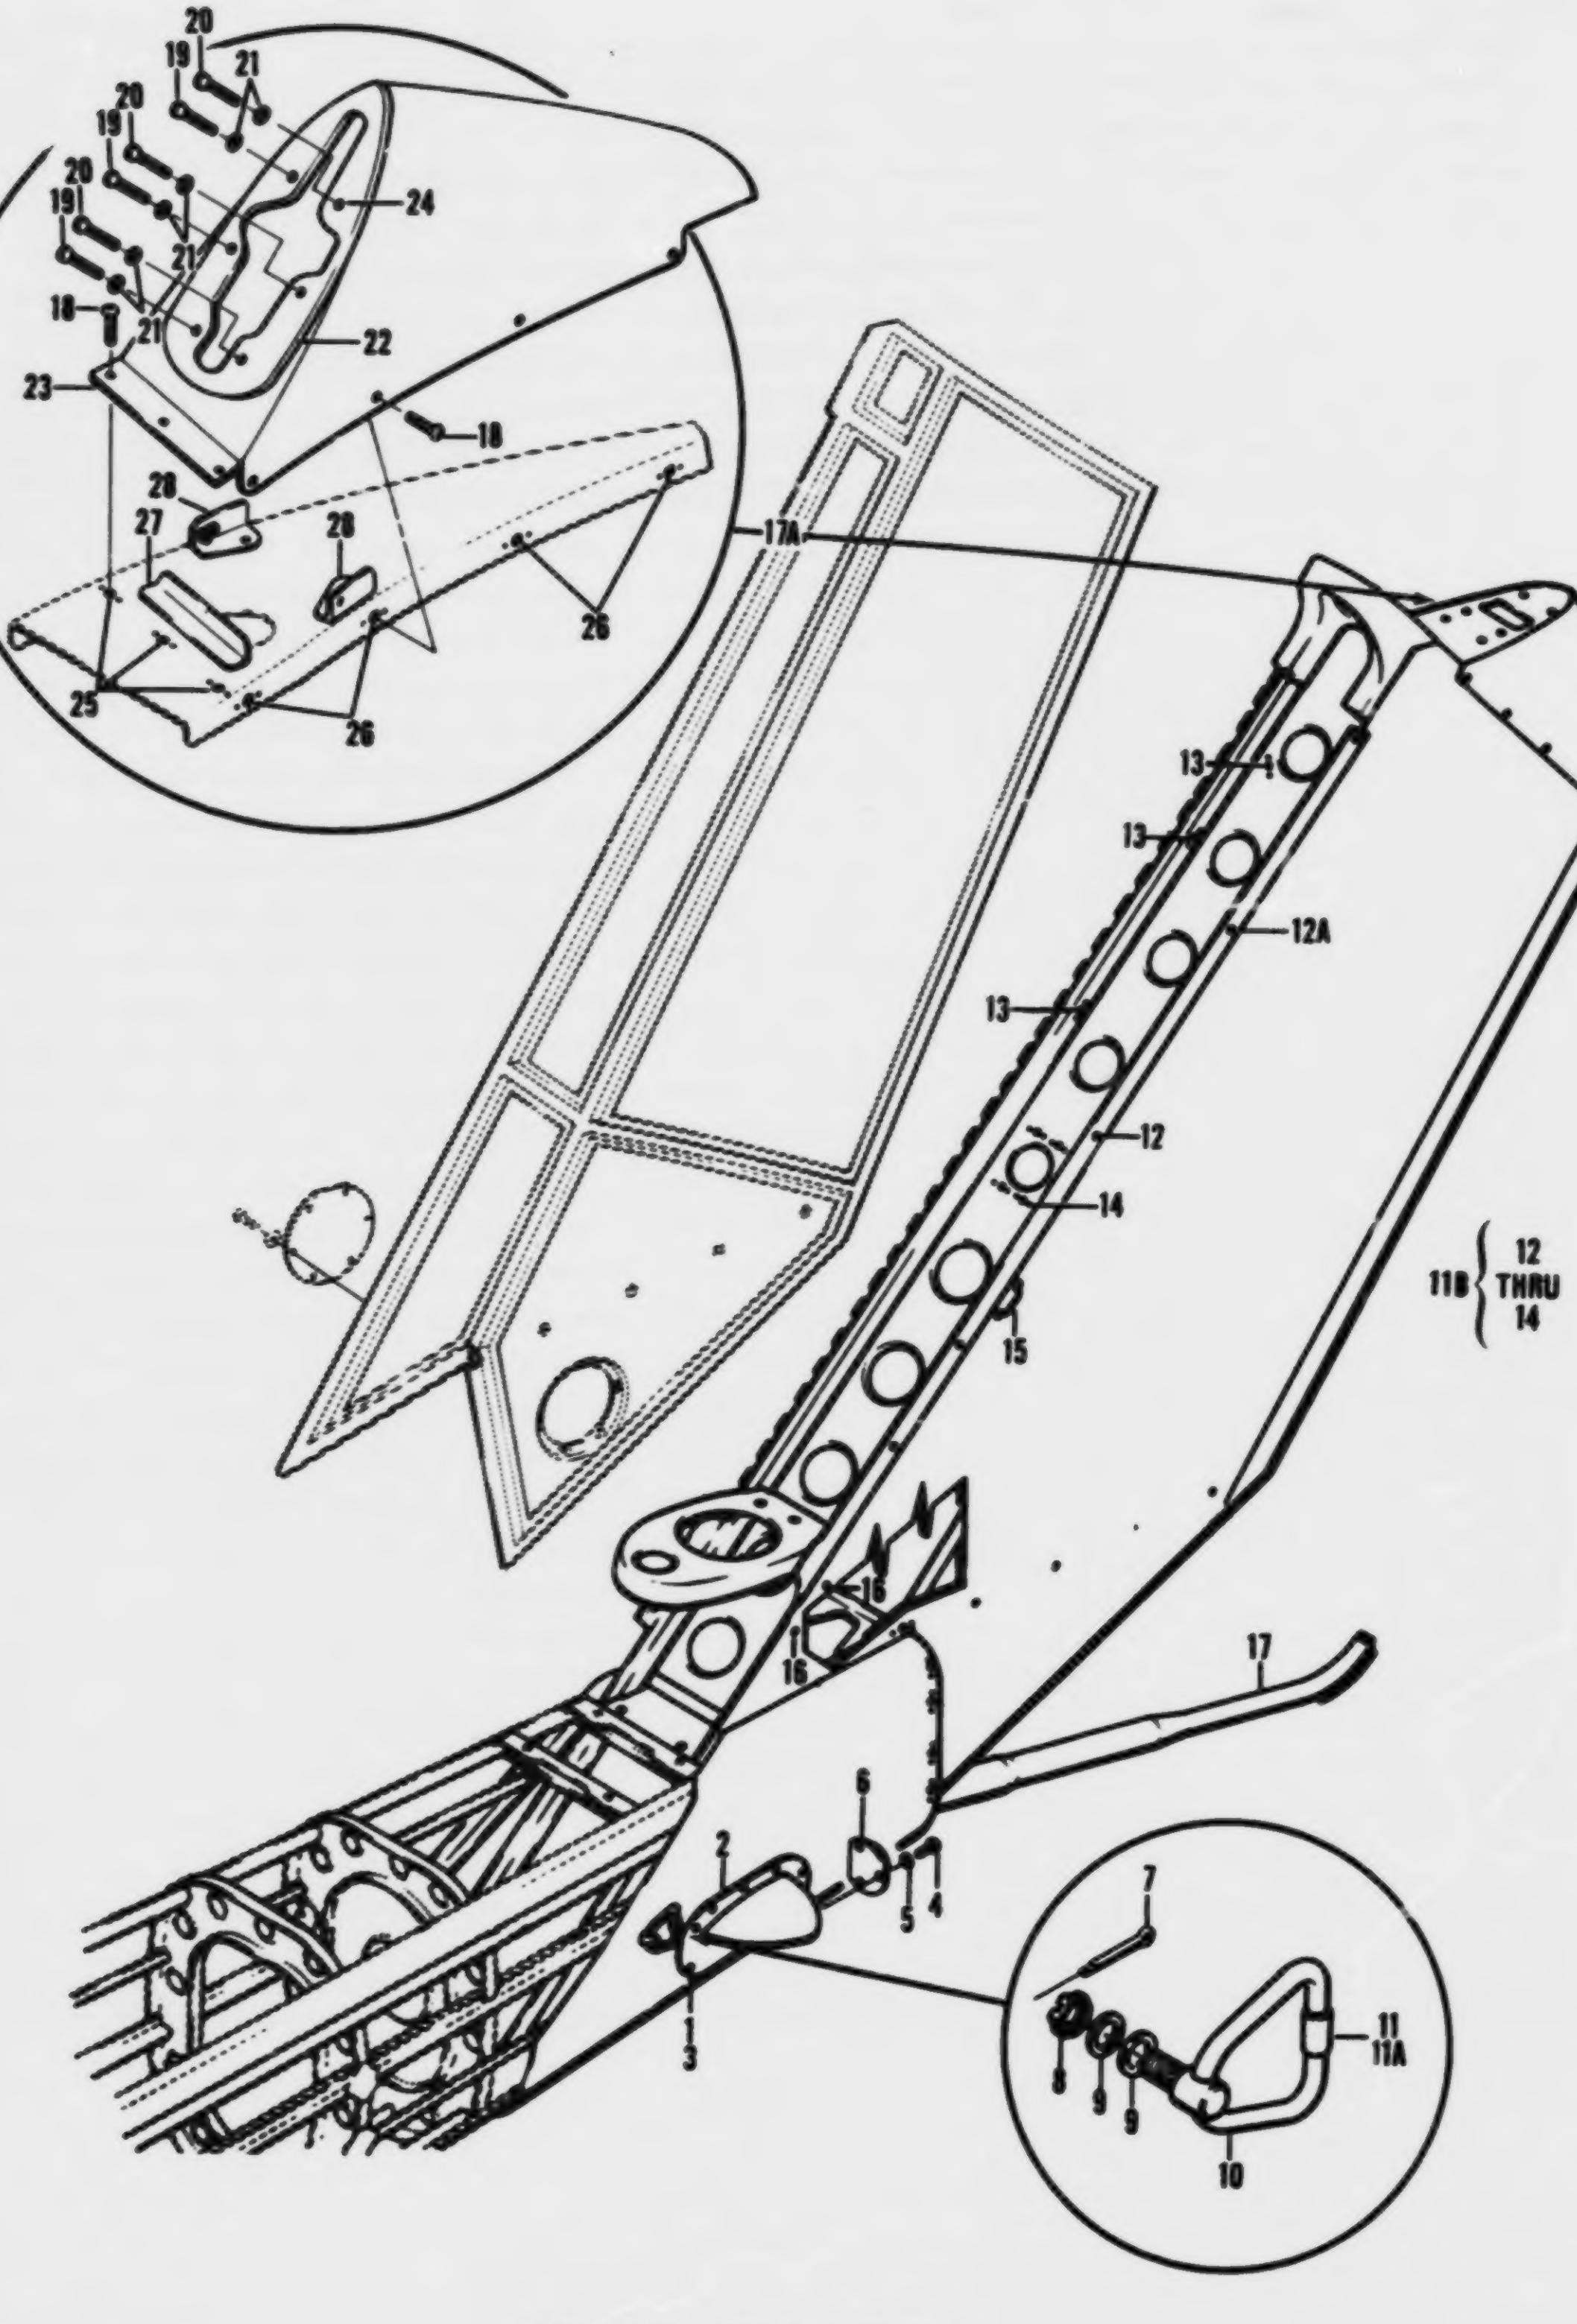
20
19
21
20
19
24
20
21
19
21
18
21
22
23
18
28
27
28
26
25
26
17A
13
13
12A
13
12
14
11B
12
THRU
14
15
16
16
17
6
2
5
4
1
3
7
8
9
9
11
11A
10

Figure 12. Fin Installation

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
12		XCFZZ		97499	204-031-090-1	FIN INSTL U/O PN 204-030-800-447,-451, -471,-473,& -491 SEE FIG. 9 FOR NHA..........UHB,UHC,UHM	EA	1
12	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..........UHB,UHC,UHM	EA	20
12	2	PAOZZ	1560-00-927-9513	97499	204-031-142-1	.FAIRING ASSEMBLY,TA -LH..........UHB,UHC,UHM	EA	1
12	2	PAOOO	1560-00-114-1279	97499	209-030-872-101	.FAIRING ASSEMBLY,TA..........UHB,UHC,UHM	EA	1
12	2	PAOZZ	1560-00-928-3856	97499	204-031-142-2	.FAIRING ASSEMBLY,TA -RH..........UHB,UHC,UHM	EA	1
12	2	PAOOO	1560-00-114-1278	97499	209-030-872-102	.FAIRING ASSEMBLY,TA..........UHB,UHC,UHM	EA	1
12	3	PAFZZ	5310-00-728-7716	96906	MS21069L3	.NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	20
12	4	PAOZZ	5305-00-993-0190	96906	MS35206-214	.SCREW,MACHINE..........UHB,UHC,UHM	EA	6
12	5	PAOZZ	5310-00-187-2397	88044	AN960PD4L	.WASHER,FLAT..........UHB,UHC,UHM	EA	6
12	6	PAOZZ	6250-00-912-8358	97499	204-075-633-1	.ADAPTER,LAMPHOLDER..........UHB,UHC,UHM	EA	2
12	7	PAOZZ	5315-00-059-0157	96906	MS24665-210	.PIN,COTTER..........UHB,UHC,UHM	EA	2
12	8	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,PLAIN,SLOTTED,H..........UHB,UHC,UHM	EA	2
12	9	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..........UHB,UHC,UHM	EA	4
12	10	PAOZZ	1560-00-847-8361	97499	204-031-806-1	.RING,TIE DOWN TAIL..........UHB,UHC,UHM	EA	2
12	11	PAOZZ	5340-00-063-5983	96906	MS17160-17	.CLIP,SPRING TENSION..........UHB,UHC,UHM	EA	2
12	11A	MDOZZ	5365-00-H01-6660	97499	204-031-090-37S	.SPACER..........UHB,UHC,UHM	EA	1
12	11B	XCFZZ		97499	205-030-846-5	.SPAR INSTL FRONT..........UHB,UHC,UHM	EA	1
12	12	PAOOO	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK..........UHB,UHC,UHM	EA	6
12	12	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK..........UHB,UHC,UHM	EA	2
12	12A	PAOZZ	5340-01-054-1588	70655	4237	..BUMPER,RUBBER..........UHB,UHC,UHM	EA	12
12	13	PAFZZ	5310-00-771-7348	96906	MS21048-3	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	3
12	14	PBFZZ	5310-00-275-4317	88044	AN362C632	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	4
12	15	PAFZZ	5340-00-663-2996	97499	90-009-1	.LOOP,STRAP FASTENER..........UHB,UHC,UHM	EA	1
12	16	MFOZZ	1560-00-H01-6659	97499	204-031-088-95	.COVER,ACCESS..........UHB,UHC,UHM	EA	1
12	16	PAOOO	5325-00-432-9810	72794	RF5	.RECEPTACLE,TURNLOCK..........UHB,UHC,UHM	EA	2
12	16	PAOZZ	5325-00-432-9964	72794	RF5-5	..EYELET,TURNLOCK..........UHB,UHC,UHM	EA	1
12	17	XCFZZ		97499	204-030-947-13	.SKID INSTL TAIL SEE FIG.93 FOR BREAKDOWN........UHB,UHC,UHM	EA	1
12	17A	XCFZZ		97499	204-031-089-1	MOUNT INSTL ANTENNA USBL EFF 64-14101 THRU 65-9474 ....UHC,UHM	EA	1
12	17A	XCFZZ		97499	204-031-089-13	MOUNT INSTL ANTENNA USBL EFF 65-9475 THRU 66-15022 ....UHC,UHM	EA	1
12	17A	XCFZZ		97499	204-031-089-15	MOUNT INSTL ANTENNA USBL EFF 66-15023 & SUBSEQUENT ....UHC,UHM	EA	1
12	18	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..........UHC,UHM	EA	11
12	19	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..........UHC,UHM	EA	3
12	20	PAOZZ	5305-00-925-9674	96906	MS27039-1-10	.SCREW,MACHINE..........UHC,UHM	EA	3
12	21	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHC,UHM	EA	6
12	22	PAOZZ	1560-00-930-9601	97499	204-031-130-1	.PLATE,STRUCTURAL..........UHC,UHM	EA	1
12	23	PAOFF	1560-00-929-8420	97499	204-031-089-17	.MOUNT ASSEMBLY,ANTE..........UHC,UHM	EA	1
12	24	PAFZZ	5310-00-771-7348	96906	MS21048-3	..NUT,SELF-LOCKING,PL..........UHC,UHM	FA	6
12	25	PAFZZ	5310-00-772-3720	96906	MS21075L3	..NUT,SELF-LOCKING,PL..........UHC,UHM	EA	3
12	26	PAFZZ	5310-00-899-1725	05476	2R1395	..NUT,SELF-LOCKING BARREL..........UHC,UHM	EA	8
12		XCFZZ		97499	205-031-837-17	RIB INSTALLATION,FI..........UHB,UHC,UHM	EA	1
12	27	MFFZZ	5340-00-H23-3526	97499	205-031-837-21S	.CLIP..........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
12	28	MFFZZ	5340-00-H23-3524	97499	205-031-837-195	.CLIP,LH....................................UHB,UHC,UHM	EA	1
12	28	MFFZZ	5340-00-H23-3525	97499	205-031-837-205	.CLIP,RH....................................UHB,UHC,UHM	EA	1

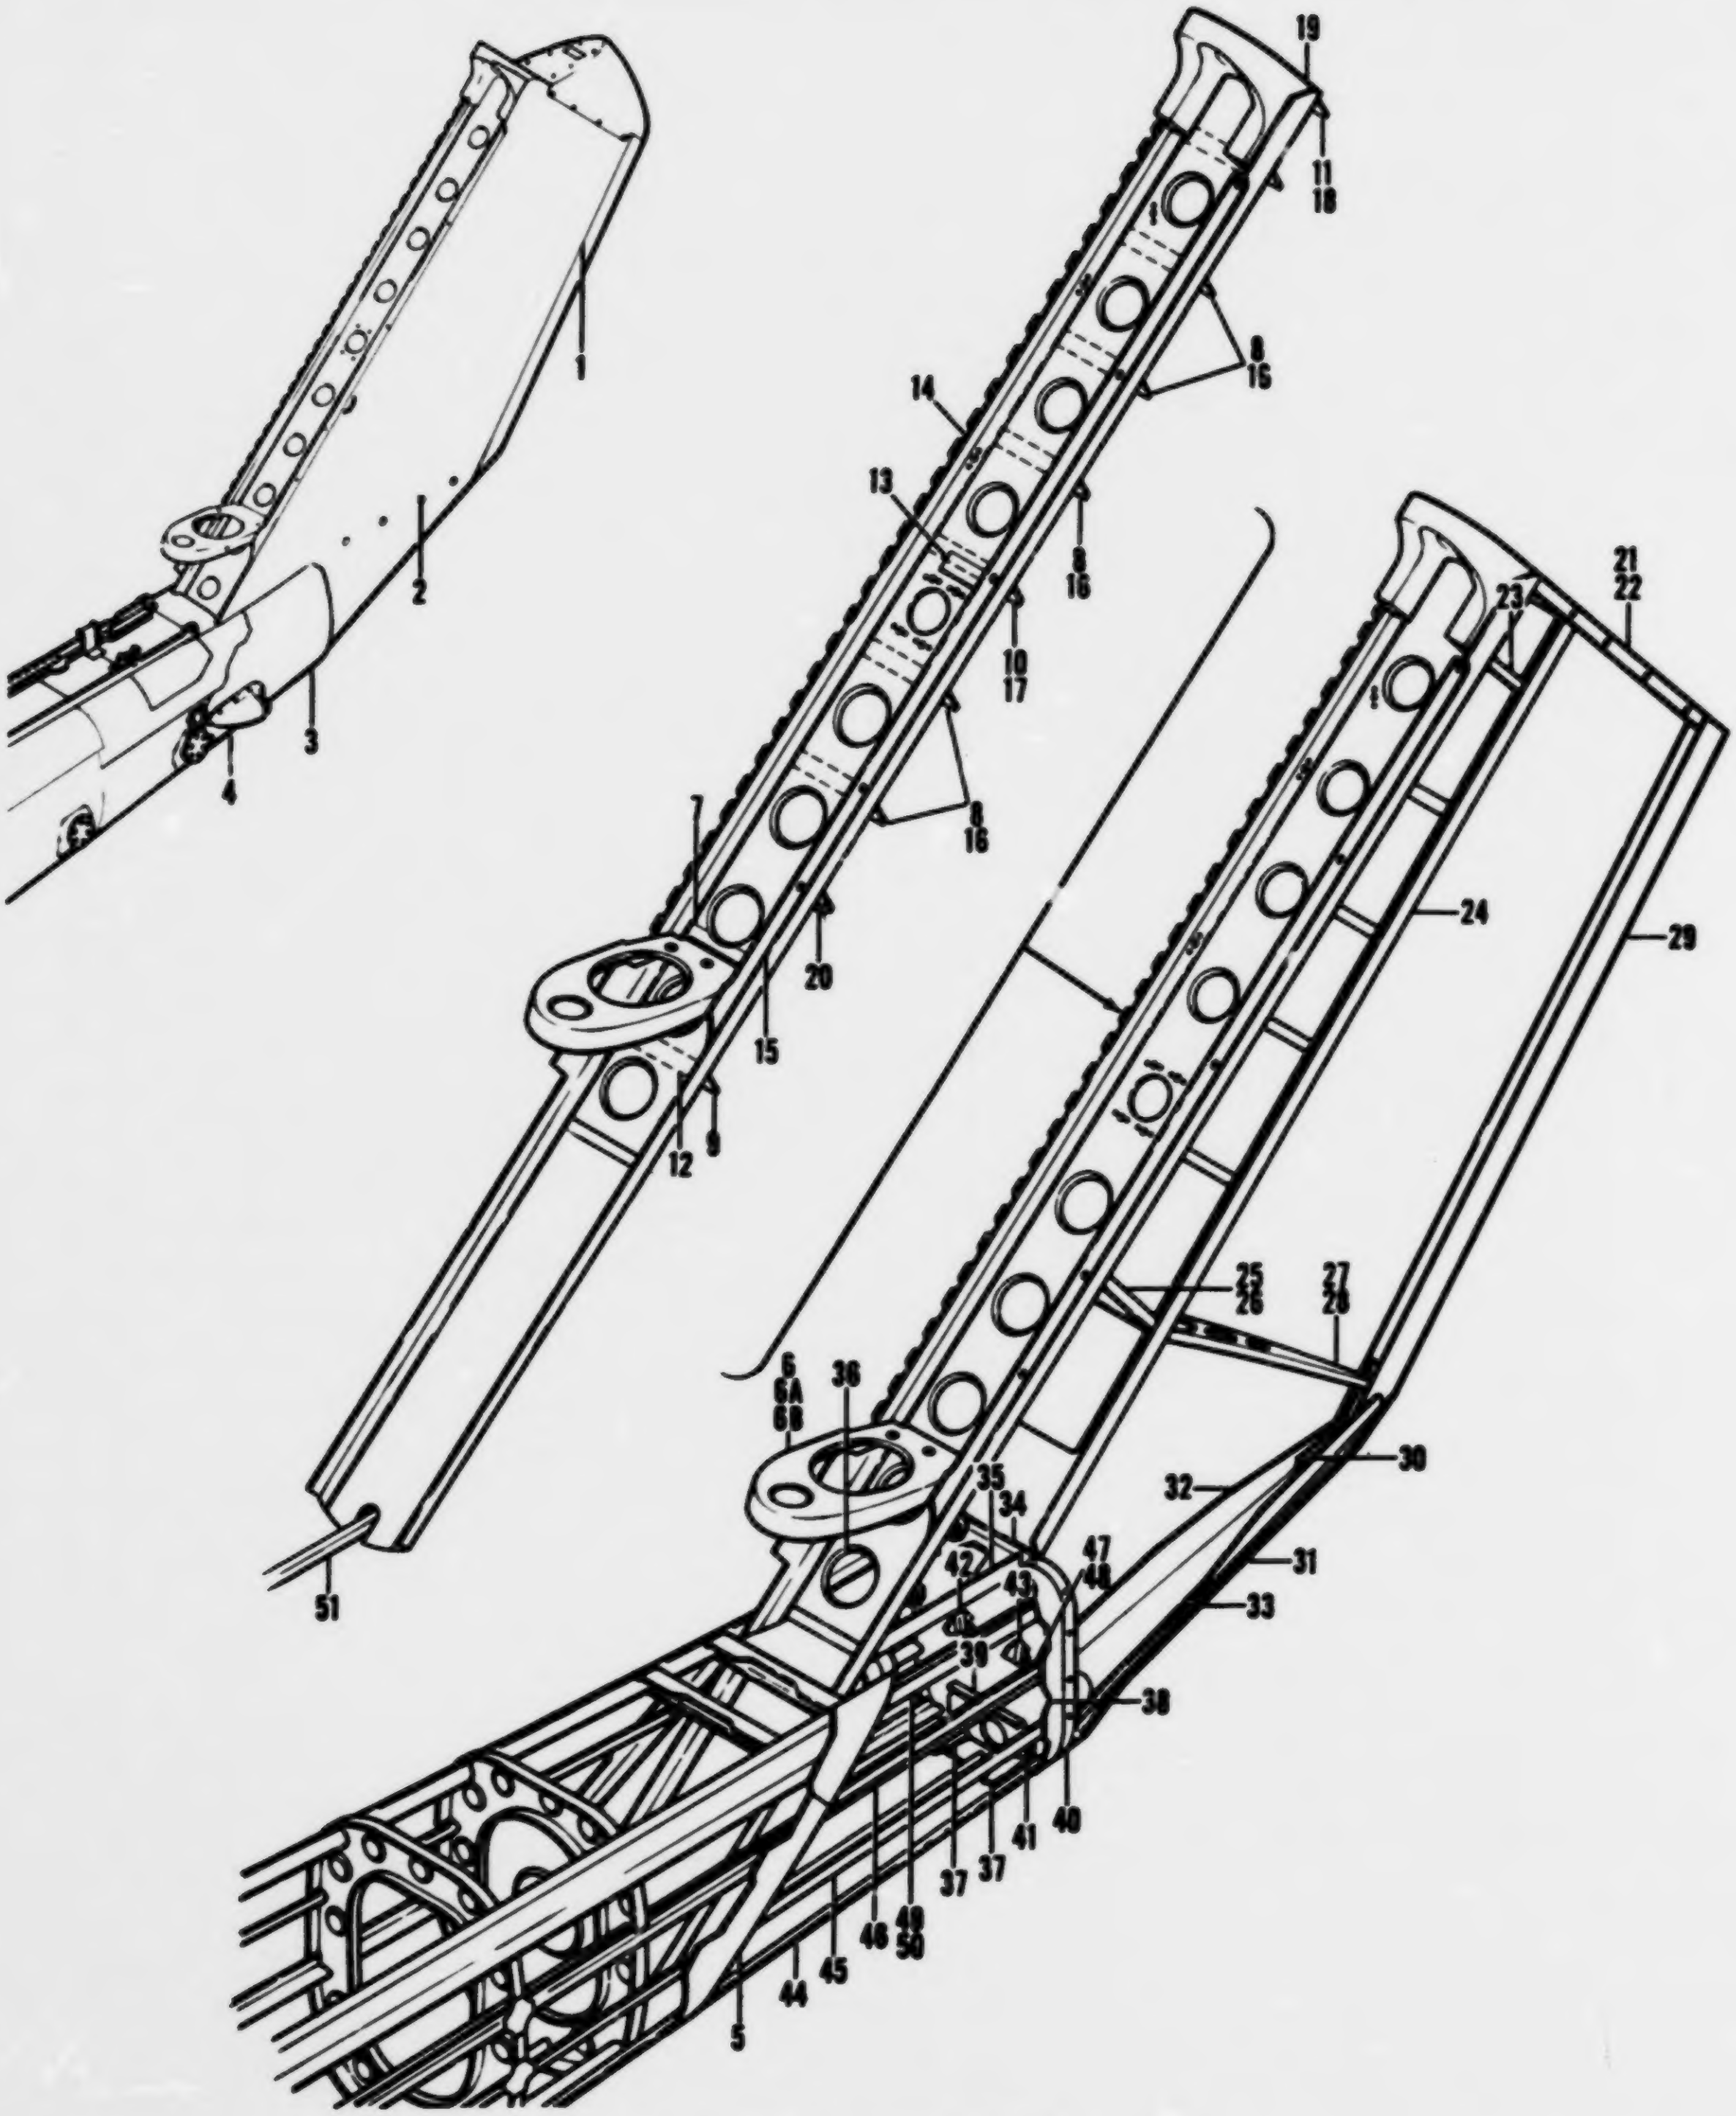
19
11
18
1
8
16
14
13
2
8
16
10
17
3
4
8
16
7
21
22
23
24
29
20
15
9
12
25
26
27
28
6
6A
6B
36
30
32
35
34
47
48
42
43
31
33
51
39
38
41
40
37
37
49
50
46
45
44
5

Figure 13. Fin installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
13		XCFZZ		97499	204-031-090-1	FIN INSTL U/O PN 204-030-800-491 SEE FIG.9 FOR NHA ....UHB,UHC,UHM	EA	1
13	1	PBDDD	1560-00-042-3220	97499	204-031-088-1	.PANEL ASSEMBLY,FIN -LH....UHB,UHC,UHM	EA	1
13	1	PBDDD	1560-00-042-3408	97499	204-031-088-3	.PANEL ASSEMBLY,FIN -RH....UHB,UHC,UHM	EA	1
13	2	PAFZZ	5340-00-073-6297	97499	80-005-1-6	.INSERT,SCREW THREAD....UHB,UHC,UHM	EA	4
13	3	PADZZ	1560-00-428-7111	97499	204-031-090-15S	.SKIN,AIRCRAFT....UHB,UHC,UHM	EA	1
13	4	XDDZZ	1560-00-427-8382	97499	204-031-090-26S	.DOUBLER,FIN -LH....UHB,UHC,UHM	EA	1
13	4	XDDZZ	1560-00-427-8383	97499	204-031-090-25S	.DOUBLER,FIN -RH....UHB,UHC,UHM	EA	1
13	5	PADZZ	1560-00-431-8515	97499	204-030-812-85S	.BULKHEAD,BOOM....UHB,UHC,UHM	EA	1
13		XCFZZ		97499	204-030-833-21	.NOSE RIB INSTL....UHC,UHM	EA	1
13	6	PADZZ	1560-00-928-3923	97499	204-030-833-23S	..RIB,VERTICAL STABIL....UHB,UHC,UHM	EA	1
13	6A	MDDZZ	5365-00-H05-5872	97499	204-030-833-13	..SHIM....UHB,UHC,UHM	EA	1
13	6B	MDDZZ	5365-00-H05-5873	97499	204-030-833-15	..SHIM....UHB,UHC,UHM	EA	1
13		XCFZZ		97499	205-030-846-5	.SPAR INSTL FIN....UHB,UHC,UHM	EA	1
13	7	MDDZZ	1560-00-H05-6476	97499	205-030-846-17S	..STIFFENER....UHB,UHC,UHM	EA	1
13	8	MDDZZ	1560-00-H05-6478	97499	205-030-846-19S	..STIFFENER....UHB,UHC,UHM	EA	1
13	9	PADZZ	1560-00-431-8496	97499	205-030-846-21S	..STIFFENER,SPAR,FIN....UHB,UHC,UHM	EA	1
13	10	MDDZZ	1560-00-H05-5886	97499	205-030-846-25S	..STIFFENER....UHB,UHC,UHM	EA	1
13	11	MDDZZ	1560-00-H05-6479	97499	205-030-846-27S	..STIFFENER....UHB,UHC,UHM	EA	1
13	12	MDDZZ	1560-00-H05-6480	97499	205-030-846-29S	..BRACKET....UHB,UHC,UHM	EA	1
13	13	MDDZZ	1560-00-H05-6441	97499	205-030-846-31	..FILLER....UHB,UHC,UHM	EA	1
13	14	MFFZZ	5340-00-H05-6442	97499	205-030-846-33S	..HINGE....UHB,UHC,UHM	EA	1
13	15	MDDZZ	1560-00-H05-6443	97499	205-030-846-45S	..DOUBLER....UHB,UHC,UHM	EA	1
13	16	MDDZZ	1560-00-H05-8303	97499	205-030-846-63S	..STIFFENER....UHB,UHC,UHM	EA	6
13	17	MDDZZ	1560-00-H04-6180	97499	205-030-846-69S	..STIFFENER....UHB,UHC,UHM	EA	1
13	18	MDDZZ	1560-00-H05-5959	97499	205-030-846-71S	..STIFFENER....UHB,UHC,UHM	EA	1
13	19	PADZZ	1560-00-898-8932	97499	204-030-867-1	..SHIM,SUPPORT,TAIL....UHB,UHC,UHM	EA	1
13	20	MDDZZ	1560-00-H05-6436	97499	204-031-090-41	..STRIP....UHB,UHC,UHM	EA	2
13	21	PBDZZ	1560-00-426-1538	97499	204-031-084-15S	.SUPPORT,FIN....UHB,UHC,UHM	EA	1
13	22	MDDZZ	1560-00-H05-6432	97499	204-031-084-17S	.SUPPORT....UHB,UHC,UHM	EA	1
13	23	PADZZ	1560-00-428-7113	97499	204-031-098-3S	.RIB,FIN,BOOM....UHB,UHC,UHM	EA	1
13	24	PADZZ	1560-00-432-2573	97499	204-031-093-3	.SPAR,FIN....UHB,UHC,UHM	EA	1
13	25	XDDZZ	1560-00-428-7114	97499	204-031-085-3S	.RIB,FIN,BOOM....UHB,UHC,UHM	EA	1
13	26	MDDZZ	1560-00-H05-6433	97499	204-031-085-5S	.CLIP....UHB,UHC,UHM	EA	1
13	27	PADZZ	1560-00-428-7117	97499	204-031-086-3S	.RIB,VERTICAL STABIL....UHB,UHC,UHM	EA	1
13	28	PADZZ	1560-00-428-7118	97499	204-031-086-5S	.CLIP,RIB,FIN....UHB,UHC,UHM	EA	1
13	29	PADZZ	1560-00-428-7104	97499	204-031-090-33S	.SUPPORT,FIN,BOOM....UHB,UHC,UHM	EA	1
13	30	PADZZ	1560-00-428-7119	97499	204-031-097-3S	.SUPPORT,TRAILING ED....UHB,UHC,UHM	EA	1
13	31	PBDZZ	1560-00-428-7172	97499	204-031-087-9S	.SUPPORT,TRAILING ED -LH....UHB,UHC,UHM	EA	1
13	32	PBDZZ	1560-00-428-7169	97499	204-031-087-11S	.SUPPORT,TRAILING ED -RH....UHB,UHC,UHM	EA	1
13	33	PADZZ	1560-00-428-7170	97499	204-031-087-7S	.WEB,FIN,BOOM....UHB,UHC,UHM	EA	1
13	34	PADZZ	1560-00-451-0433	97499	204-031-082-3	.FITTING,SPAR,BOOM....UHB,UHC,UHM	EA	1
13	35	PBDZZ	1560-00-428-7112	97499	204-031-090-29S	.ATTACHMENT,FIN....UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
13	36	PBDZZ	1560-00-428-7110	97499	204-031-090-30S	.ATTACHMENT,FIN..........UHB,UHC,UHH	EA	1
13	37	PADZZ	1560-00-451-1142	97499	204-031-083-1S	.FITTING,BOOM -LH..........UHB,UHC,UHH	EA	1
13	37	PADZZ	1560-00-451-1143	97499	204-031-083-3S	.FITTING,BOOM -RH..........UHB,UHC,UHH	EA	1
13	38	PADZZ	1560-00-428-6829	97499	204-031-080-5S	.BULKHEAD,BOOM..........UHB,UHC,UHH	EA	1
13	39	MDOZZ	1560-00-H05-5949	97499	204-031-080-7S	.DOUBLER..........UHB,UHC,UHH	EA	1
13	40	MDOZZ	1560-00-H05-6431	97499	204-031-080-11	.STRIP..........UHB,UHC,UHH	EA	1
13	41	PBDZZ	1560-00-428-6816	97499	204-031-080-13	.FRAME,BOOM..........UHB,UHC,UHH	EA	1
13	42	XDDZZ	1560-00-428-6856	97499	204-031-080-15S	.SUPPORT,BULKHEAD..........UHB,UHC,UHH	EA	1
13	43	PADZZ	1560-00-428-7206	97499	204-031-080-17S	.SUPPORT,BULKHEAD..........UHB,UHC,UHH	EA	1
13	44	PADZZ	1560-00-427-8389	97499	204-031-090-31S	.STIFFENER,FIN -LH..........UHB,UHC,UHH	EA	1
13	44	PADZZ	1560-00-427-8387	97499	204-031-090-32S	.STIFFENER,FIN -RH..........UHB,UHC,UHH	EA	1
13	45	PADZZ	1560-00-427-8355	97499	204-031-090-23S	.STRINGER,BOOM -LH..........UHB,UHC,UHH	EA	1
13	45	XDDZZ	1560-00-427-8353	97499	204-031-090-24S	.STRINGER,FIN -RH..........UHB,UHC,UHH	EA	1
13	46	XDDZZ	1560-00-428-7108	97499	204-031-090-21S	.STRINGER,BOOM -LH..........UHB,UHC,UHH	EA	1
13	46	PADZZ	1560-00-427-8359	97499	204-031-090-22S	.STRINGER,BOOM -RH..........UHB,UHC,UHH	EA	1
13	47	XDDZZ	1560-00-427-8366	97499	204-031-090-19S	.STRINGER,BOOM -LH..........UHB,UHC,UHH	EA	1
13	47	PADZZ	1560-00-427-8361	97499	204-031-090-20S	.STRINGER,FIN -RH..........UHB,UHC,UHH	EA	1
13	48	MDOZZ	1560-00-H05-6434	97499	204-031-090-35S	.FILLER..........UHB,UHC,UHH	EA	2
13	49	XDDZZ	1560-00-427-8381	97499	204-031-090-17S	.STRINGER,FIN-LH..........UHB,UHC,UHH	EA	1
13	49	XDDZZ	1560-00-427-8378	97499	204-031-090-18S	.STRINGER,FIN -RH..........UHB,UHC,UHH	EA	1
13	50	MDOZZ	1560-00-H05-6435	97499	204-031-090-39S	.FILLER..........UHB,UHC,UHH	EA	2
13	51	XDDZZ	1560-00-427-8352	97499	204-031-090-27S	.STRINGER,FIN..........UHB,UHC,UHH	EA	1

Figure 14. Not Used

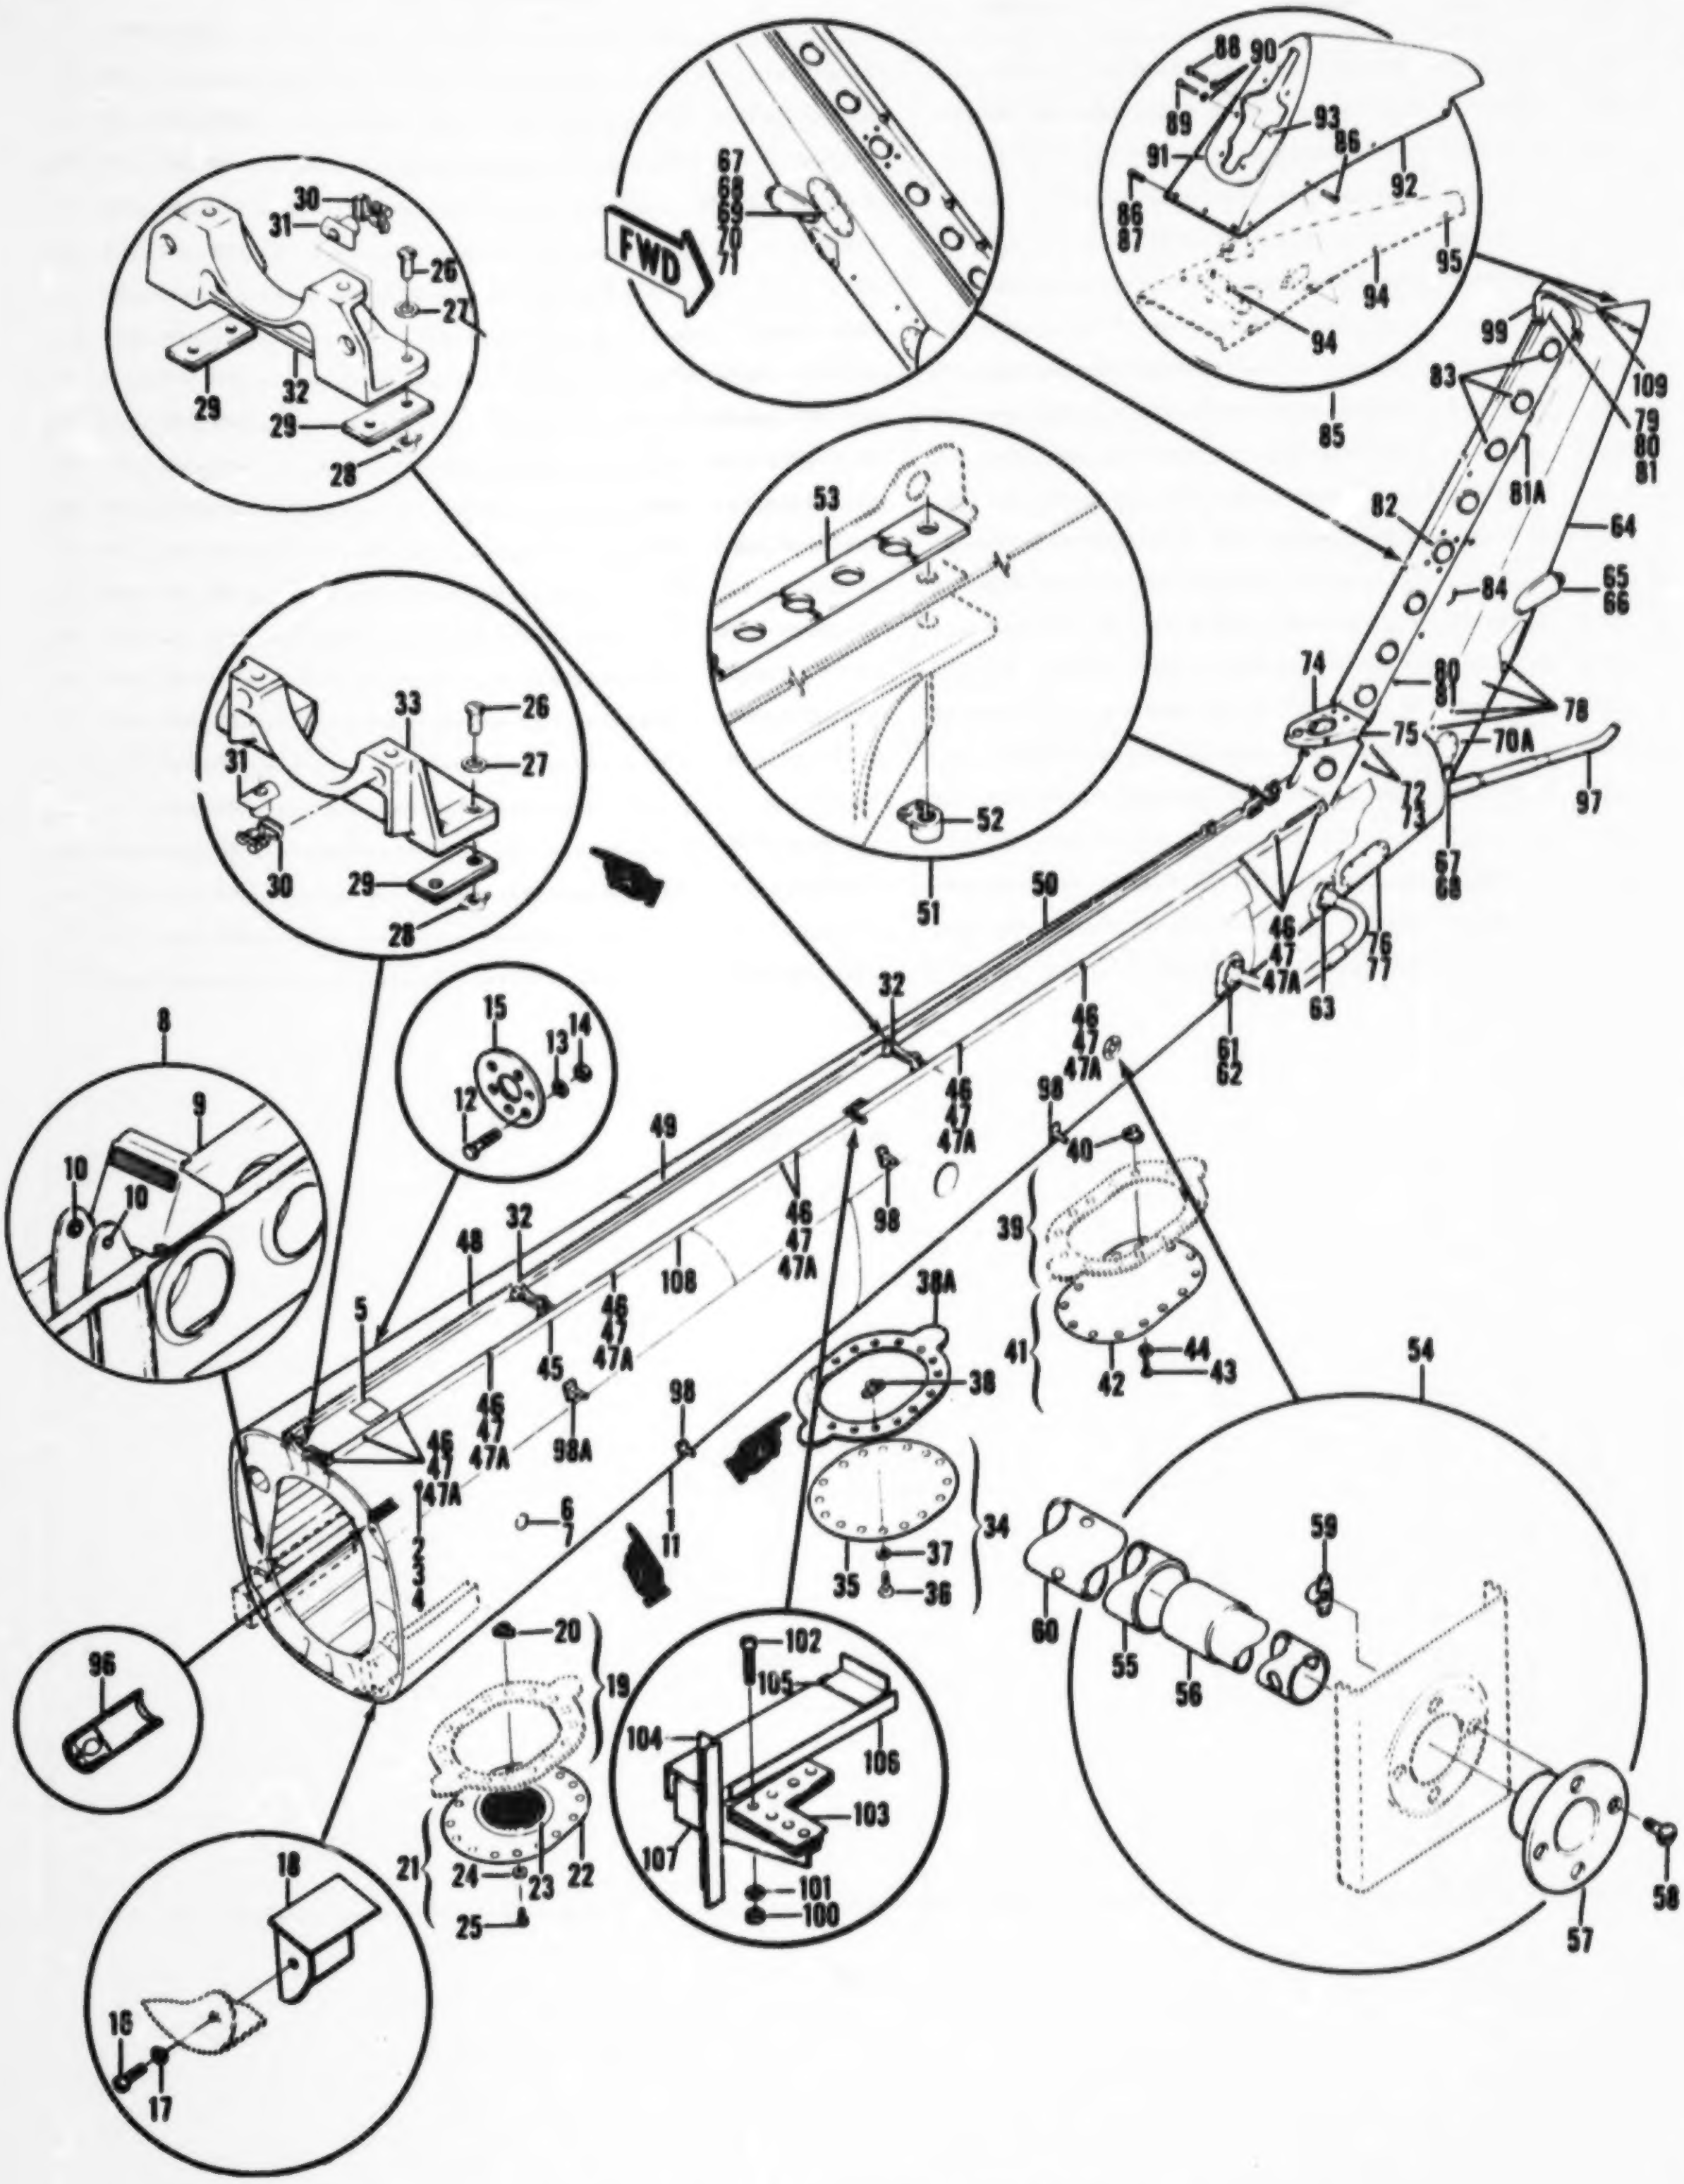
88
90
89
93
91
86
92
86
87
95
94
94
85
FWD
67
68
69
70
71
30
31
26
27
29
32
29
28
99
109
83
79
80
81
81A
64
53
82
84
65
66
74
80
81
78
75
70A
72
73
97
33
26
27
31
30
29
28
52
51
50
67
68
46
47
47A
76
77
63
8
9
10
10
15
13
14
12
32
46
47
47A
61
62
98
40
49
46
47
47A
98
39
48
32
108
46
47
47A
38A
41
42
44
43
5
45
98A
98
38
54
46
47
147A
6
7
1
11
2
3
4
34
37
36
35
59
60
55
56
96
20
19
102
105
106
104
103
107
101
100
21
24
23
22
25
18
16
17
57
58

Figure 15. Tailboom Assembly, 48 FT. System

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
15			1560-00-483-1273	97499	205-032-800-71	BOOM ASSEMBLY,TAIL 48 FT. SYSTEM..............UHE,UHH,UHV,UHX	EA	1
15	1	XCFZZ		97499	205-031-801-69	.TAIL BOOM INSTL.............................UHE,UHH,UHV,UHX	EA	1
15	2	PAOZZ	5325-00-276-4918	96906	MS27977-29H	..STUD,SNAP FASTENER.........................UHE,UHH,UHV,UHX	EA	2
15	3	PAOZZ	5310-00-184-8966	88044	AN960PD8	..WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	2
15	4	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	2
15	5	MFFZZ	9905-00-532-6678	96906	MS27253-2	..PLATE,IDENTIFICATIO........................UHE,UHH,UHV,UHX	EA	1
15	6	XCFZZ		97499	205-031-836-1	..BRACKET INSTL-LH...........................UHE,UHH,UHV,UHX	EA	1
15	6	XCFZZ		97499	205-031-836-2	..BRACKET INSTL-RH...........................UHE,UHH,UHV,UHX	EA	1
15	7	PAOZZ	5340-00-986-7214	90763	SS51276K2220	...BUTTON,PLUG...............................UHE,UHH,UHV,UHX	EA	1
15	8	XCFZZ		97499	205-031-657-1	..SUPPORT INSTL..............................UHE,UHH,UHV,UHX	EA	1
15	9	XBFFF	1560-00-116-0733	97499	205-031-897-75	...BRACKET ASSEMBLY..........................UHE,UHH,UHV,UHX	EA	1
15	10	PAFZZ	3120-00-625-0056	97499	22-006-15-13-16	....BUSHING,SLEEVE...........................UHE,UHH,UHV,UHX	EA	2
15	11	XCFZZ		97499	205-031-801-71	..TAIL BOOM ASSY.............................UHE,UHH,UHV,UHX	EA	1
15	12	PAOZZ	5305-00-984-4989	96906	MS35206-228	...SCREW,MACHINE.............................UHE,UHH,UHV,UHX	EA	6
15	13	PAOZZ	5310-00-187-2398	88044	AN960PD6L	...WASHER,FLAT...............................UHE,UHH,UHV,UHX	EA	6
15	14	PAOZZ	5310-00-857-5560	96906	MS21045L06	...NUT,SELF-LOCKING,HE.......................UHE,UHH,UHV,UHX	EA	6
15	15	XDOZZ	1560-00-916-2398	97499	205-031-801-535	...COVER,ACCESS..............................UHE,UHH,UHV,UHX	EA	1
15	16	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	...SCREW,MACHINE.............................UHE,UHH,UHV,UHX	EA	16
15	17	PAOZZ	5310-00-814-8313	80205	NAS1197-10L	...WASHER,FLAT...............................UHE,UHH,UHV,UHX	EA	8
15	18	XBOZZ	1560-00-178-8530	97499	205-031-834-3	...SHELF ASSY,RADIO SUPPORT..................UHE,UHH,UHV,UHX	EA	1
15	19	XCFZZ		97499	204-030-814-93	.DOUBLER INSTL...............................UHE,UHH,UHV,UHX	EA	1
15	20	PAFZZ	5310-00-772-3720	96906	MS21075L3	..NUT,SELF-LOCKING,PL........................UHE,UHH,UHV,UHX	EA	18
15	21	XCFZZ		97499	205-030-892-1	.DOOR INSTL VENT.............................UHE,UHH,UHV,UHX	EA	1
15	22	PAOZZ	1560-00-987-5192	97499	205-030-892-3	..COVER,ACCESS...............................UHE,UHH,UHV,UHX	EA	1
15	23	XAOZZ		97499	204-031-238-1	...SCREEN ASSEMBLY,VEN.......................UHE,UHH,UHV,UHX	EA	1
15	24	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	18
15	25	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	..SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	18
15	26	XDFZZ	5305-00-286-1766	88044	AN525-10R20	.SCREW,MACHINE U/W PN 204-030-818-7..........UHE,UHH,UHV,UHX	EA	8
15	26	PAFZZ	5305-00-282-8470	88044	AN525-10R18	.SCREW,MACHINE U/W PN 205-031-818-1..........UHE,UHH,UHV,UHX	EA	4
15	27	PAFZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT.................................UHE,UHH,UHV,UHX	EA	12
15	28	PAFZZ	5310-00-728-7716	96906	MS21069L3	.NUT,SELF-LOCKING,PL.........................UHE,UHH,UHV,UHX	EA	12
15	29	PAFZZ	5365-00-594-2079	97499	120-059-1	.SHIM..UHE,UHH,UHV,UHX	EA	6
15	30	PAFZZ	5340-00-882-1428	80205	NAS578-4A	.RETAINER,NUT AND BOLT.......................UHE,UHH,UHV,UHX	EA	2
15	31	PAFZZ	5310-00-810-8956	80205	NAS577-4A	.NUT,SELF-LOCKING BARRELL....................UHE,UHH,UHV,UHX	EA	2
15	32	PAFZZ	1560-00-674-4185	97499	204-030-818-7	.FITTING,TAIL BOOM...........................UHE,UHH,UHV,UHX	EA	2
15	33	PAFZZ	1560-00-754-7416	97499	205-031-818-1	.SUPPORT,STRUCTURAL..........................UHE,UHH,UHV,UHX	EA	1
15	34	XCFZZ		97499	205-030-814-1	.DOOR INSTL ACCESS-CENTER....................UHE,UHH,UHV,UHX	EA	1
15	35	PAOZZ	1560-00-981-5074	97499	205-030-814-175	..COVER,ACCESS...............................UHE,UHH,UHV,UHX	EA	1
15	36	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	..SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	18
15	37	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	18
15	38	PAFZZ	5310-00-772-3720	96906	MS21075L3	..NUT,SELF-LOCKING,PL........................UHE,UHH,UHV,UHX	EA	18
15	38A	PADZZ	1560-00-435-4806	97499	204-030-814-55	..DOUBLER,DOOR ACCESS........................UHE,UHH,UHV,UHX	EA	1
15	39	XCFZZ		97499	204-030-814-51	.DOUBLER INSTL...............................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
15	40	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	16
15	41	XCFZZ		97499	204-030-814-33	.DOOR INSTL ACCESS-AFT	UHE,UHH,UHV,UHX	EA	1
15	42	PAOZZ	1560-00-735-6557	97499	204-030-814-45S	..DOOR	UHE,UHH,UHV,UHX	EA	1
15	43	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	16
15	44	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	16
15	45	XCFZZ		97499	205-031-862-1	.ANGLE INSTL	UHE,UHH,UHV,UHX	EA	1
15	45	XCFZZ		97499	205-031-862-3	.ANGLE INSTL	UHE,UHH,UHV,UHX	EA	1
15	46	PAOOO	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	13
15	47	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK	UHE,UHH,UHV,UHX	EA	2
15	47A	PAOZZ	5340-01-054-1588	70655	4237	..BUMPER,RUBBER	UHE,UHH,UHV,UHX	EA	26
15	48	MFFZZ	5340-00-178-8028	97499	205-031-862-17S	..HINGE,HALF	UHE,UHH,UHV,UHX	EA	1
15	49	MFFZZ	5340-00-178-7957	97499	205-031-862-19S	..HINGE,HALF	UHE,UHH,UHV,UHX	EA	1
15	50	MFFZZ	5340-00-H23-3117	97499	205-031-862-21S	..HINGE HALF	UHE,UHH,UHV,UHX	EA	1
15	51	XCFZZ		97499	205-030-801-1	.SUPPORT INSTALLATIO	UHE,UHH,UHV,UHX	EA	1
15	52	PAFZZ	5310-00-111-9394	96906	MS21086L4	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	4
15	53	PAFZZ	5365-00-765-6256	97499	120-060-1	..SUPPORT INSTL	UHE,UHH,UHV,UHX	EA	2
15	54	XCFZZ		97499	205-030-837-3	.LIFT ARMS INSTALLAT USBL EFF 63-12956 THRU 63-13002	UHE,UHH,UHV,UHX	EA	1
15	54	XCFZZ		97499	205-030-837-5	.LIFT ARMS INSTALLAT USBL EFF 64-13492 THRU 68-16342	UHE,UHH,UHV,UHX	EA	1
15	55	PAOZZ	1560-00-215-4303	97499	205-031-836-1	..HOUSING,TAIL BOOM	UHE,UHH,UHV,UHX	EA	1
15	56	PAOZZ	1560-00-868-4822	97499	205-031-833-1	..TUBE,BOOM SECTION	UHE,UHH,UHV,UHX	EA	2
15	57	PAOZZ	1560-00-021-9087	97499	205-030-840-3	..FITTING,TAIL BOOM	UHE,UHH,UHV,UHX	EA	2
15	58	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	8
15	59	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	8
15	60	PAOZZ	3110-00-183-9164	96906	MS19060-26	..BALL,BEARING	UHE,UHH,UHV,UHX	EA	2
15	61	XCFZZ		97499	204-030-957-1	.SUPPORT INSTL-LH	UHE,UHH,UHV,UHX	EA	1
15	61	XCFZZ		97499	204-030-957-2	.SUPPORT INSTL-RH	UHE,UHH,UHV,UHX	EA	1
15	62	PAFZZ	1560-00-733-8296	97499	204-030-958-1S	..SUPPORT,TAIL BOOM -LH	UHE,UHH,UHV,UHX	EA	1
15	62	PAFZZ	1560-00-716-8575	97499	204-030-958-2S	..SUPPORT,TAIL BOOM -RH	UHE,UHH,UHV,UHX	EA	1
15	63	PAFZZ	1560-00-075-3383	97499	204-030-959-3S	..SUPPORT,TAIL BOOM -LH	UHE,UHH,UHV,UHX	EA	1
15	63	PAFZZ	1560-00-075-3387	97499	204-030-959-4S	..SUPPORT,TAIL BOOM -LH	UHE,UHH,UHV,UHX	EA	1
15	64	PBOOO	1560-00-482-9100	97499	205-030-899-109	.FIN ASSEMBLY,TAILBO	UHE,UHH,UHV,UHX	EA	1
15	65	XCFZZ		97499	204-030-038-1	..FAIRING INSTL TAIL LIGHT	UHE,UHH,UHV,UHX	EA	1
15	66	PAFZZ	1560-00-133-6994	97499	204-030-038-11	...FAIRING,FIN TAIL LI	UHE,UHH,UHV,UHX	EA	1
15	67	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	21
15	68	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	3
15	69	PAFZZ	5310-00-728-7723	96906	MS21069L3K	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	16
15	70	PAFZZ	5310-00-734-1850	96906	MS21071L3	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	2
15	70A	PAOZZ	1560-00-994-5809	97499	205-030-899-51	..COVER,ACCESS	UHE,UHH,UHV,UHX	EA	2
15	71	MFOZZ	1560-00-H01-6659	97499	204-031-088-95	..COVER,ACCESS	UHE,UHH,UHV,UHX	EA	1
15	72	PAOOO	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK ,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	2
15	73	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK	UHE,UHH,UHV,UHX	EA	2
15	74	XCFZZ		97499	205-030-833-13	..NOSE RIB INSTALLATI	UHE,UHH,UHV,UHX	EA	1
15	75	PAOZZ	5325-00-449-2993	72794	1-908	...LOCKSPRING,TURNL	UHE,UHH,UHV,UHX	EA	3

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
15	76	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	20
15	77	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	20
15	78	PAFZZ	5310-00-728-7715	96906	MS21069L08	..NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	8
15	79	XCFZZ		97499	205-030-846-47	..SPAR INSTL,FRONT..........UHE,UHH,UHV,UHX	EA	1
15	80	PAOOO	5325-00-432-9810	72794	RF5	...RECEPTACLE,TURNLOCK FASTENER..........UHE,UHH,UHV,UHX	EA	6
15	81	PAOZZ	5325-00-432-9964	72794	RF5-5	....EYELET,TURNLOCK..........UHE,UHH,UHV,UHX	EA	2
15	81A	PAOZZ	5340-01-054-1598	70655	4237	..BUMPER,RUBBER..........UHE,UHH,UHV,UHX	EA	12
15	82	PBFZZ	5310-00-275-4317	88044	AN362C632	...NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	4
15	83	PAFZZ	5310-00-764-7282	96906	MS21047L3	...NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	3
15	84	PAFZZ	5340-00-663-2996	97499	90-009-1	..LOOP,STRAP FASTENER..........UHE,UHH,UHV,UHX	EA	1
15	85	XCFZZ		97499	205-031-835-25	..MOUNT INSTL ANTENNA..........UHE,UHH,UHV,UHX	EA	1
15	86	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	...SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	9
15	87	PAOZZ	5305-00-925-7856	96906	MS27039-1-05	...SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
15	88	PAOZZ	5305-00-925-9674	96906	MS27039-1-10	...SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
15	89	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
15	90	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	6
15	91	PAOZZ	1560-00-930-9601	97499	204-031-130-1	...PLATE,STRUCTURAL..........UHE,UHH,UHV,UHX	EA	1
15	92	PAOFF	1560-00-879-0850	97499	205-031-835-27	...MOUNT ASSEMBLY,ANTE..........UHE,UHH,UHV,UHX	EA	1
15	93	PAFZZ	5310-00-771-7348	96906	MS21048-3	....NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	6
15	94	PAFZZ	5310-00-728-7716	96906	MS21069L3	....NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	7
15	95	PAFZZ	5310-00-734-1850	96906	MS21071L3	....NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	4
15	96	PAOZZ	1560-00-079-8931	97499	205-031-821-1	.FITTING,TAIL BOOM -LH..........UHE,UHH,UHV,UHX	EA	1
15	96	PAOZZ	1560-00-042-6645	97499	205-031-820-1	.FITTING,BOOM -LH..........UHE,UHH,UHV,UHX	EA	1
15	96	PAOZZ	1560-00-922-2712	97499	205-031-821-2	.FITTING,BOOM -RH..........UHE,UHH,UHV,UHX	EA	1
15	96	PAOZZ	1560-00-042-6646	97499	205-031-820-2	.FITTING,BOOM -RH..........UHE,UHH,UHV,UHX	EA	1
15	97	XCFZZ		97499	204-030-947-1	.SKID INSTL TAIL SEE FIG.93 FOR BREAKDOWN....UHE,UHH,UHV,UHX	EA	1
15		XCOFF		97499	204-075-324-15	.ANTENNA INSTL..........UHE,UHH,UHV,UHX	EA	1
15	98	PAOZZ	1560-00-738-5953	97499	204-075-541-13	..SUPPORT ASSEMBLY ANTENNA..........UHE,UHH,UHV,UHX	EA	3
15	99A	PAOZZ	5821-00-933-4561	97499	204-075-541-15	..SUPPORT ASSEMBLY ANTENNA..........UHE,UHH,UHV,UHX	EA	1
15	99	PAOZZ	1560-00-990-3734	97499	204-030-828-9	.FITTING ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
15	100	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
15	101	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
15	102	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	4
15	103	PBOZZ	1560-00-169-5091	97499	204-031-318-15	.STOP,ELEVATOR..........UHE,UHH,UHV,UHX	EA	1
15	104	PBFZZ	1560-00-169-5100	97499	204-031-318-17	.STIFFENER,ELEVATOR..........UHE,UHH,UHV,UHX	EA	1
15	105	MDFZZ	1560-00-H05-6455	97499	205-031-013-175	.CLIP..........UHE,UHH,UHV,UHX	EA	1
15	106	PBFZF	1560-00-169-0463	97499	204-031-318-3	.SUPPORT,STRUCTURAL..........UHE,UHH,UHV,UHX	EA	1
15	107	PBFZZ	5340-00-485-0655	97499	204-031-318-11	.BRACKET,ANGLE..........UHE,UHH,UHV,UHX	EA	1
15	108	MFFZZ	1560-00-H05-6426	97499	205-032-800-99	.STRIP..........UHE,UHH,UHV,UHX	EA	1
15	109	XCFZZ		97499	205-031-837-13	.RIB INSTALLATION,FI..........UHE,UHH,UHV,UHX	EA	1

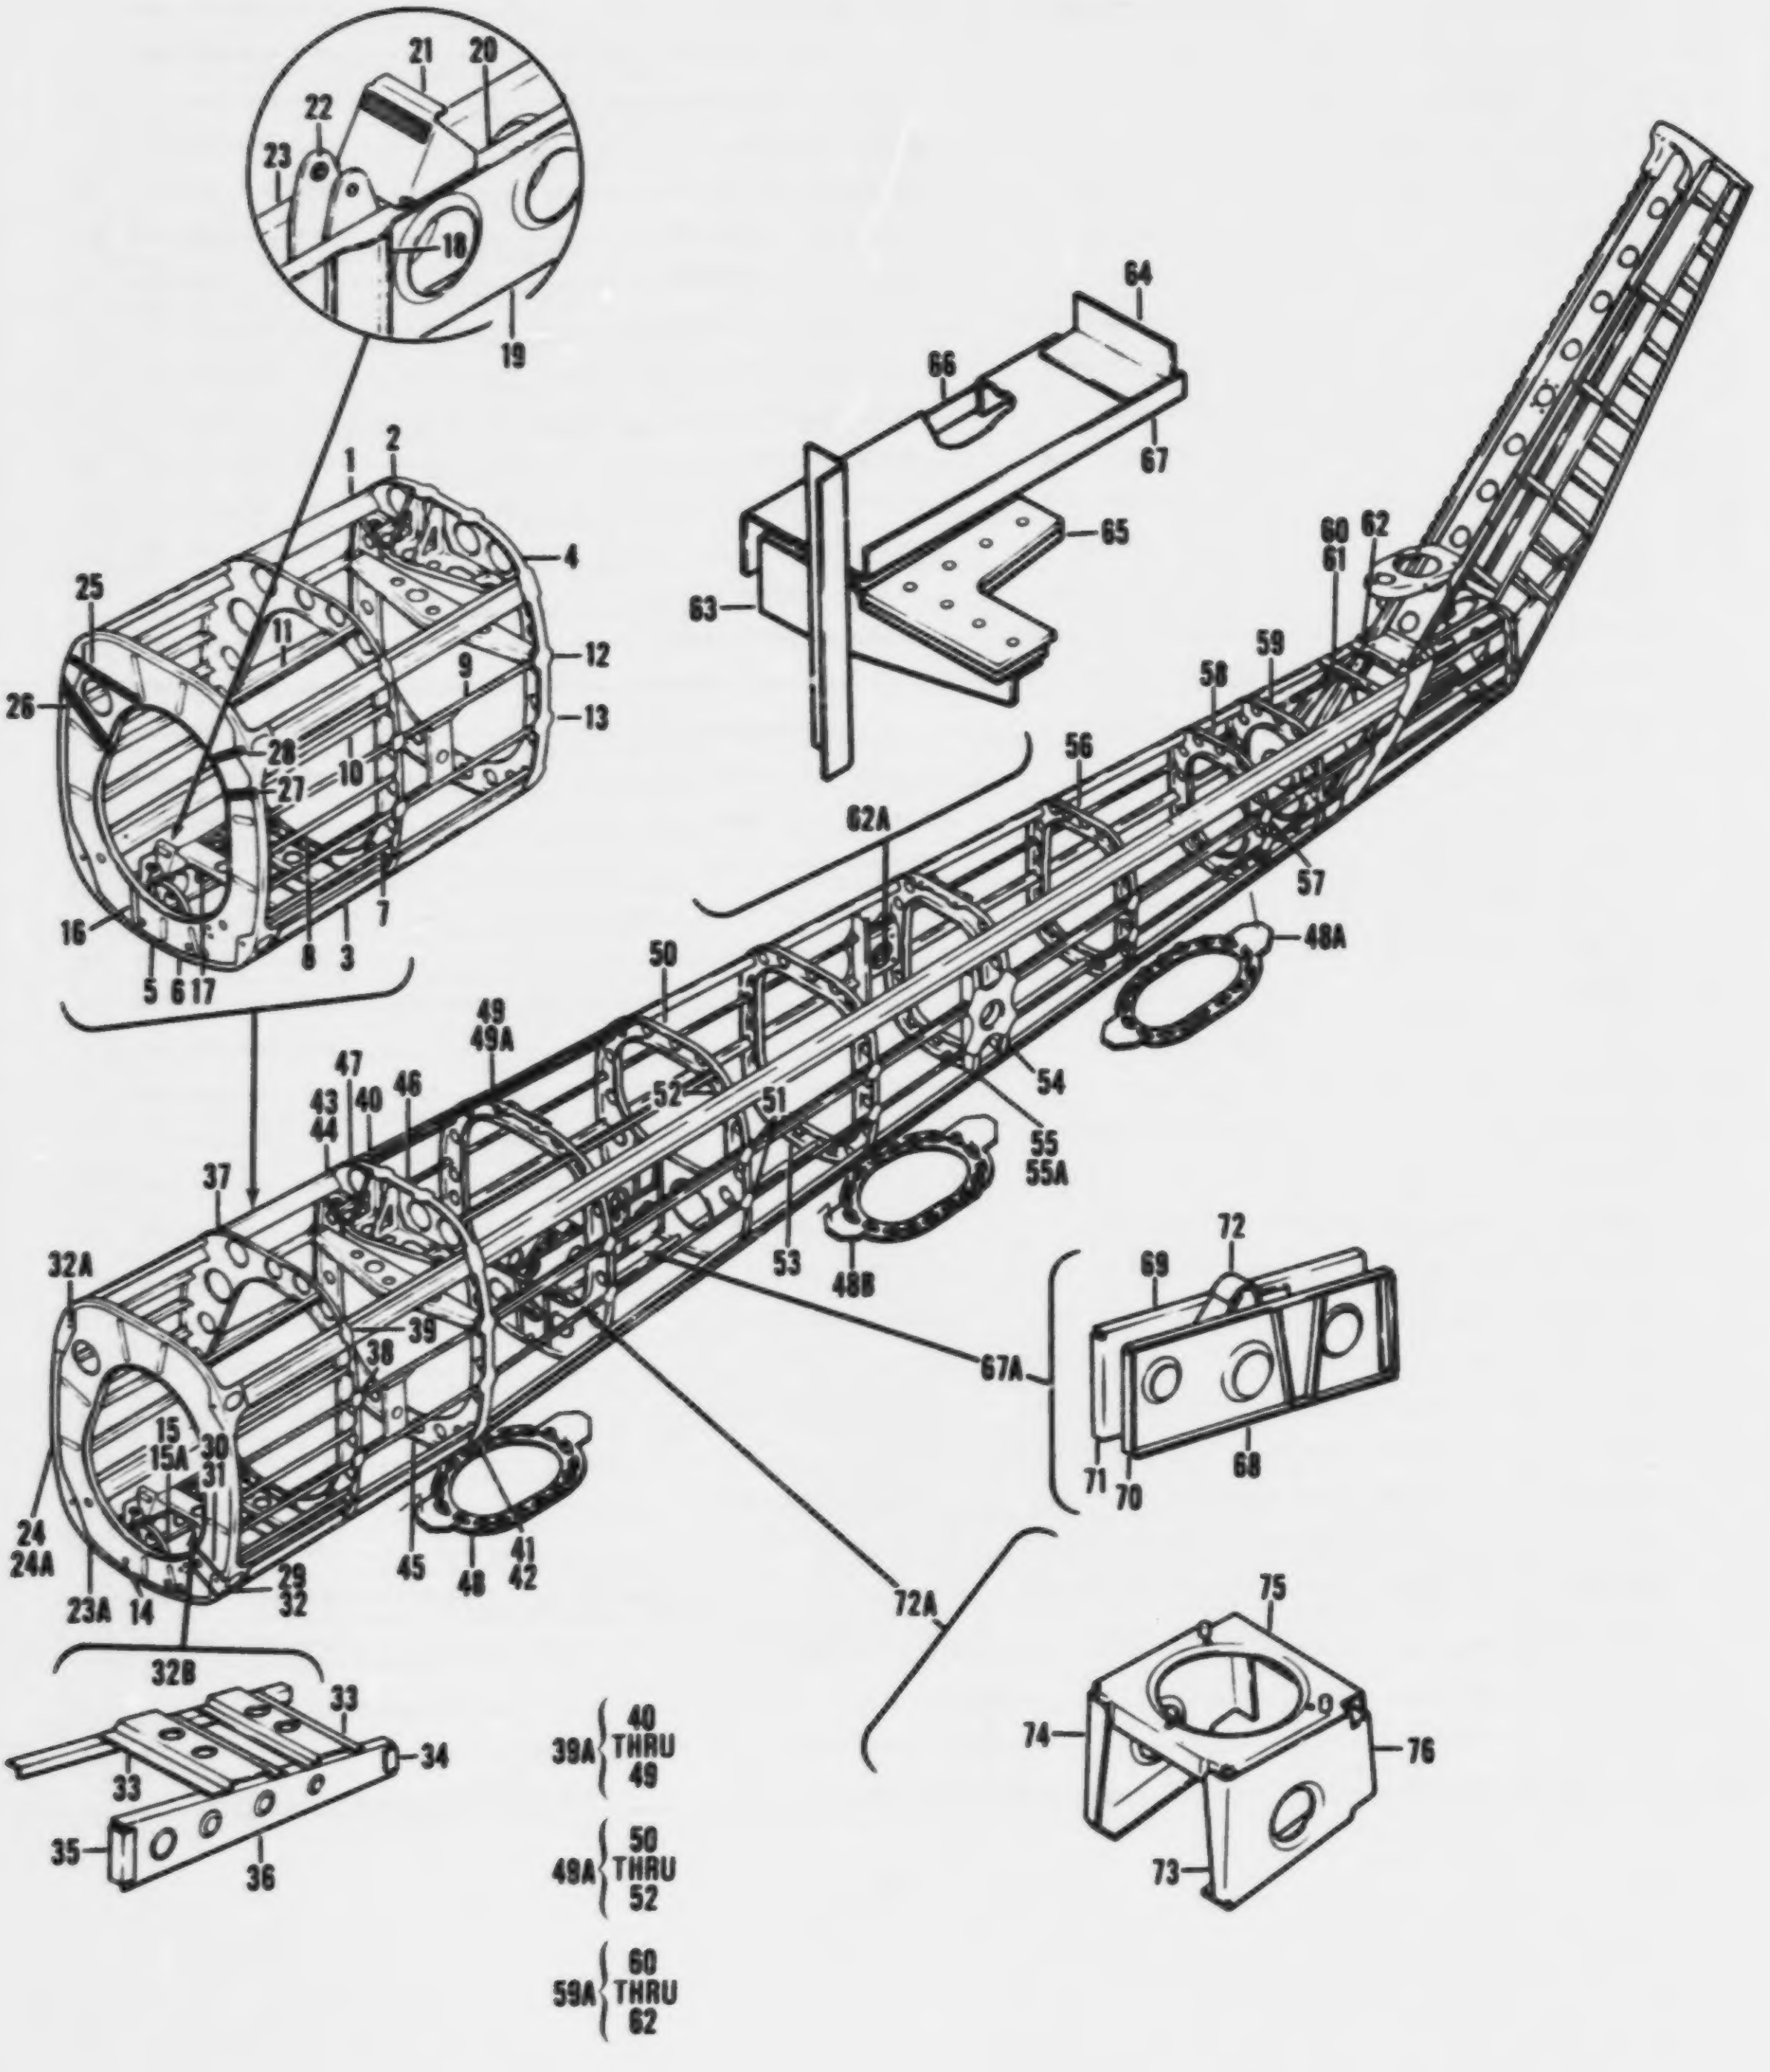
21
20
22
23
18
19
64
66
67
65
63
1
2
4
25
11
12
9
13
26
28
27
10
16
5
6
17
8
3
7
62A
56
58
59
60
61
62
57
48A
50
49
49A
47
43
44
40
46
52
51
54
55
55A
37
53
48B
32A
39
38
72
69
67A
15
15A
30
31
24
24A
23A
14
29
32
45
48
41
42
71
70
68
72A
75
32B
33
33
34
35
36
74
76
73
39A
40
THRU
49
49A
50
THRU
52
59A
60
THRU
62

Figure 16. Tailboom Installation (Sheet 1 of 5)

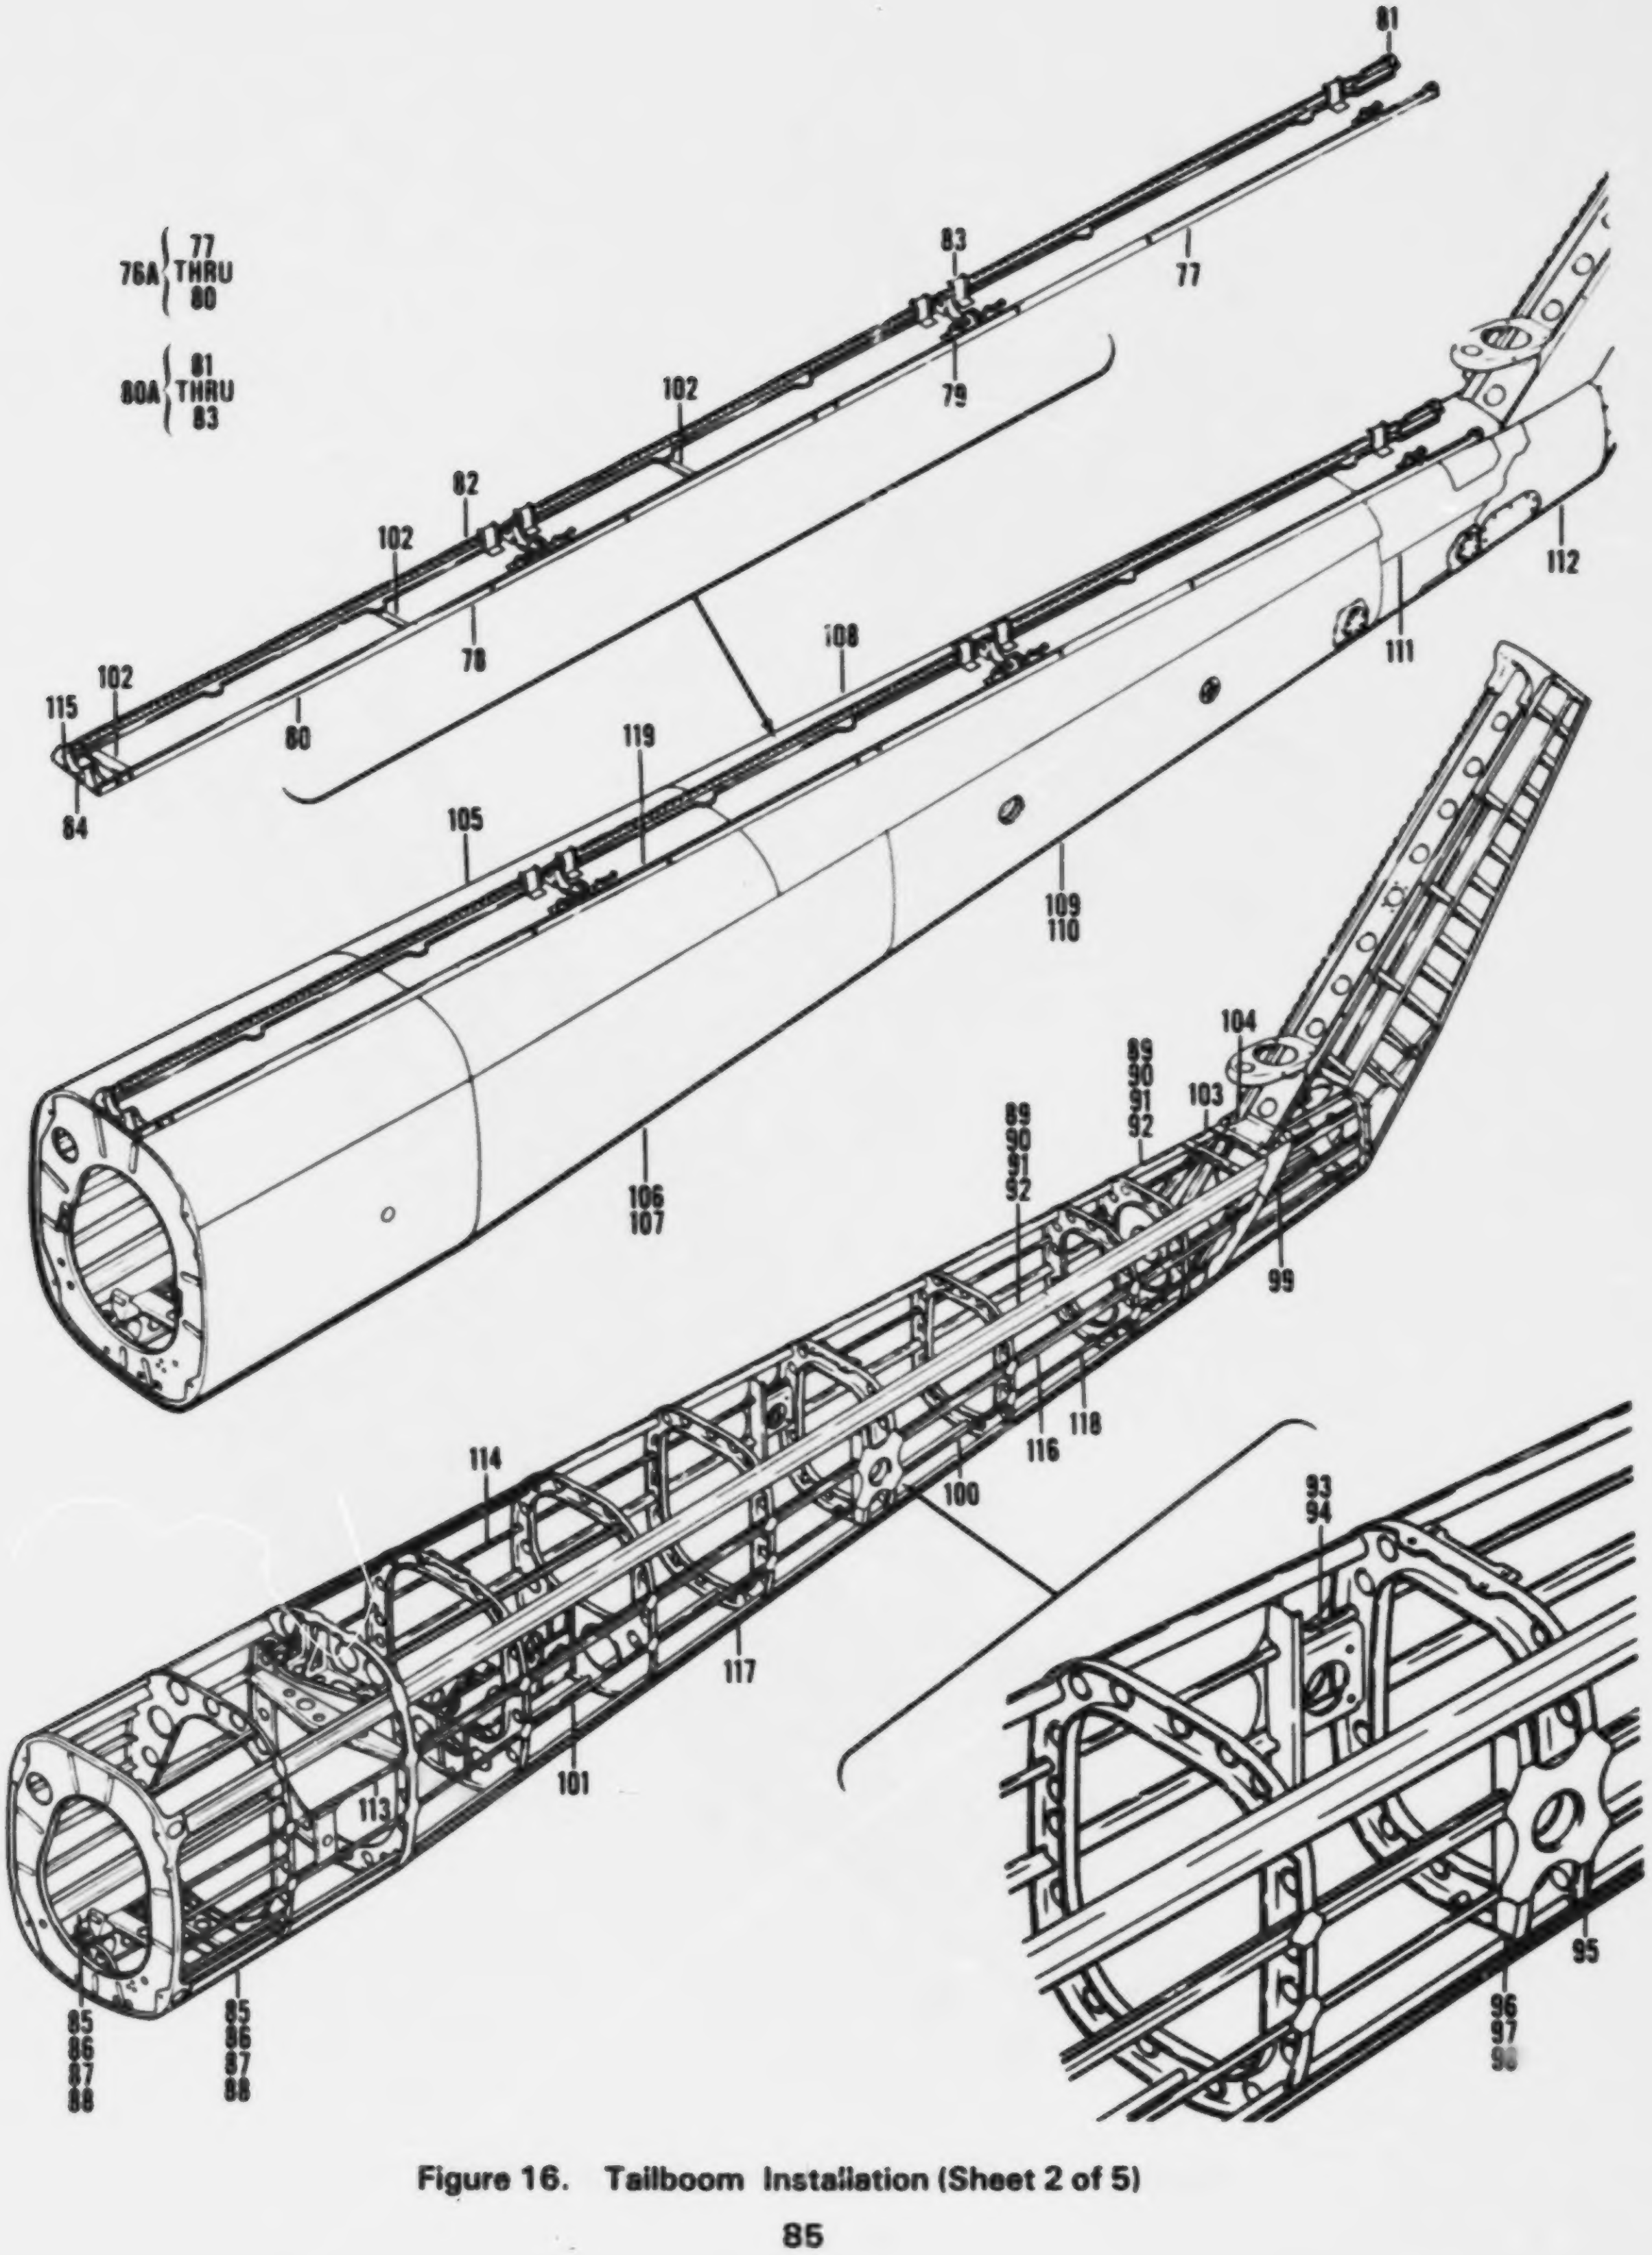
81
76A { 77 THRU 80
80A { 81 THRU 83
83
77
79
102
82
102
78
112
108
111
102
115
80
119
84
105
109
110
104
89
90
91
92
103
89
90
91
92
106
107
99
118
114
116
100
93
94
117
101
113
95
85
86
87
88
85
86
87
88
96
97
98

Figure 16. Tailboom Installation (Sheet 2 of 5)

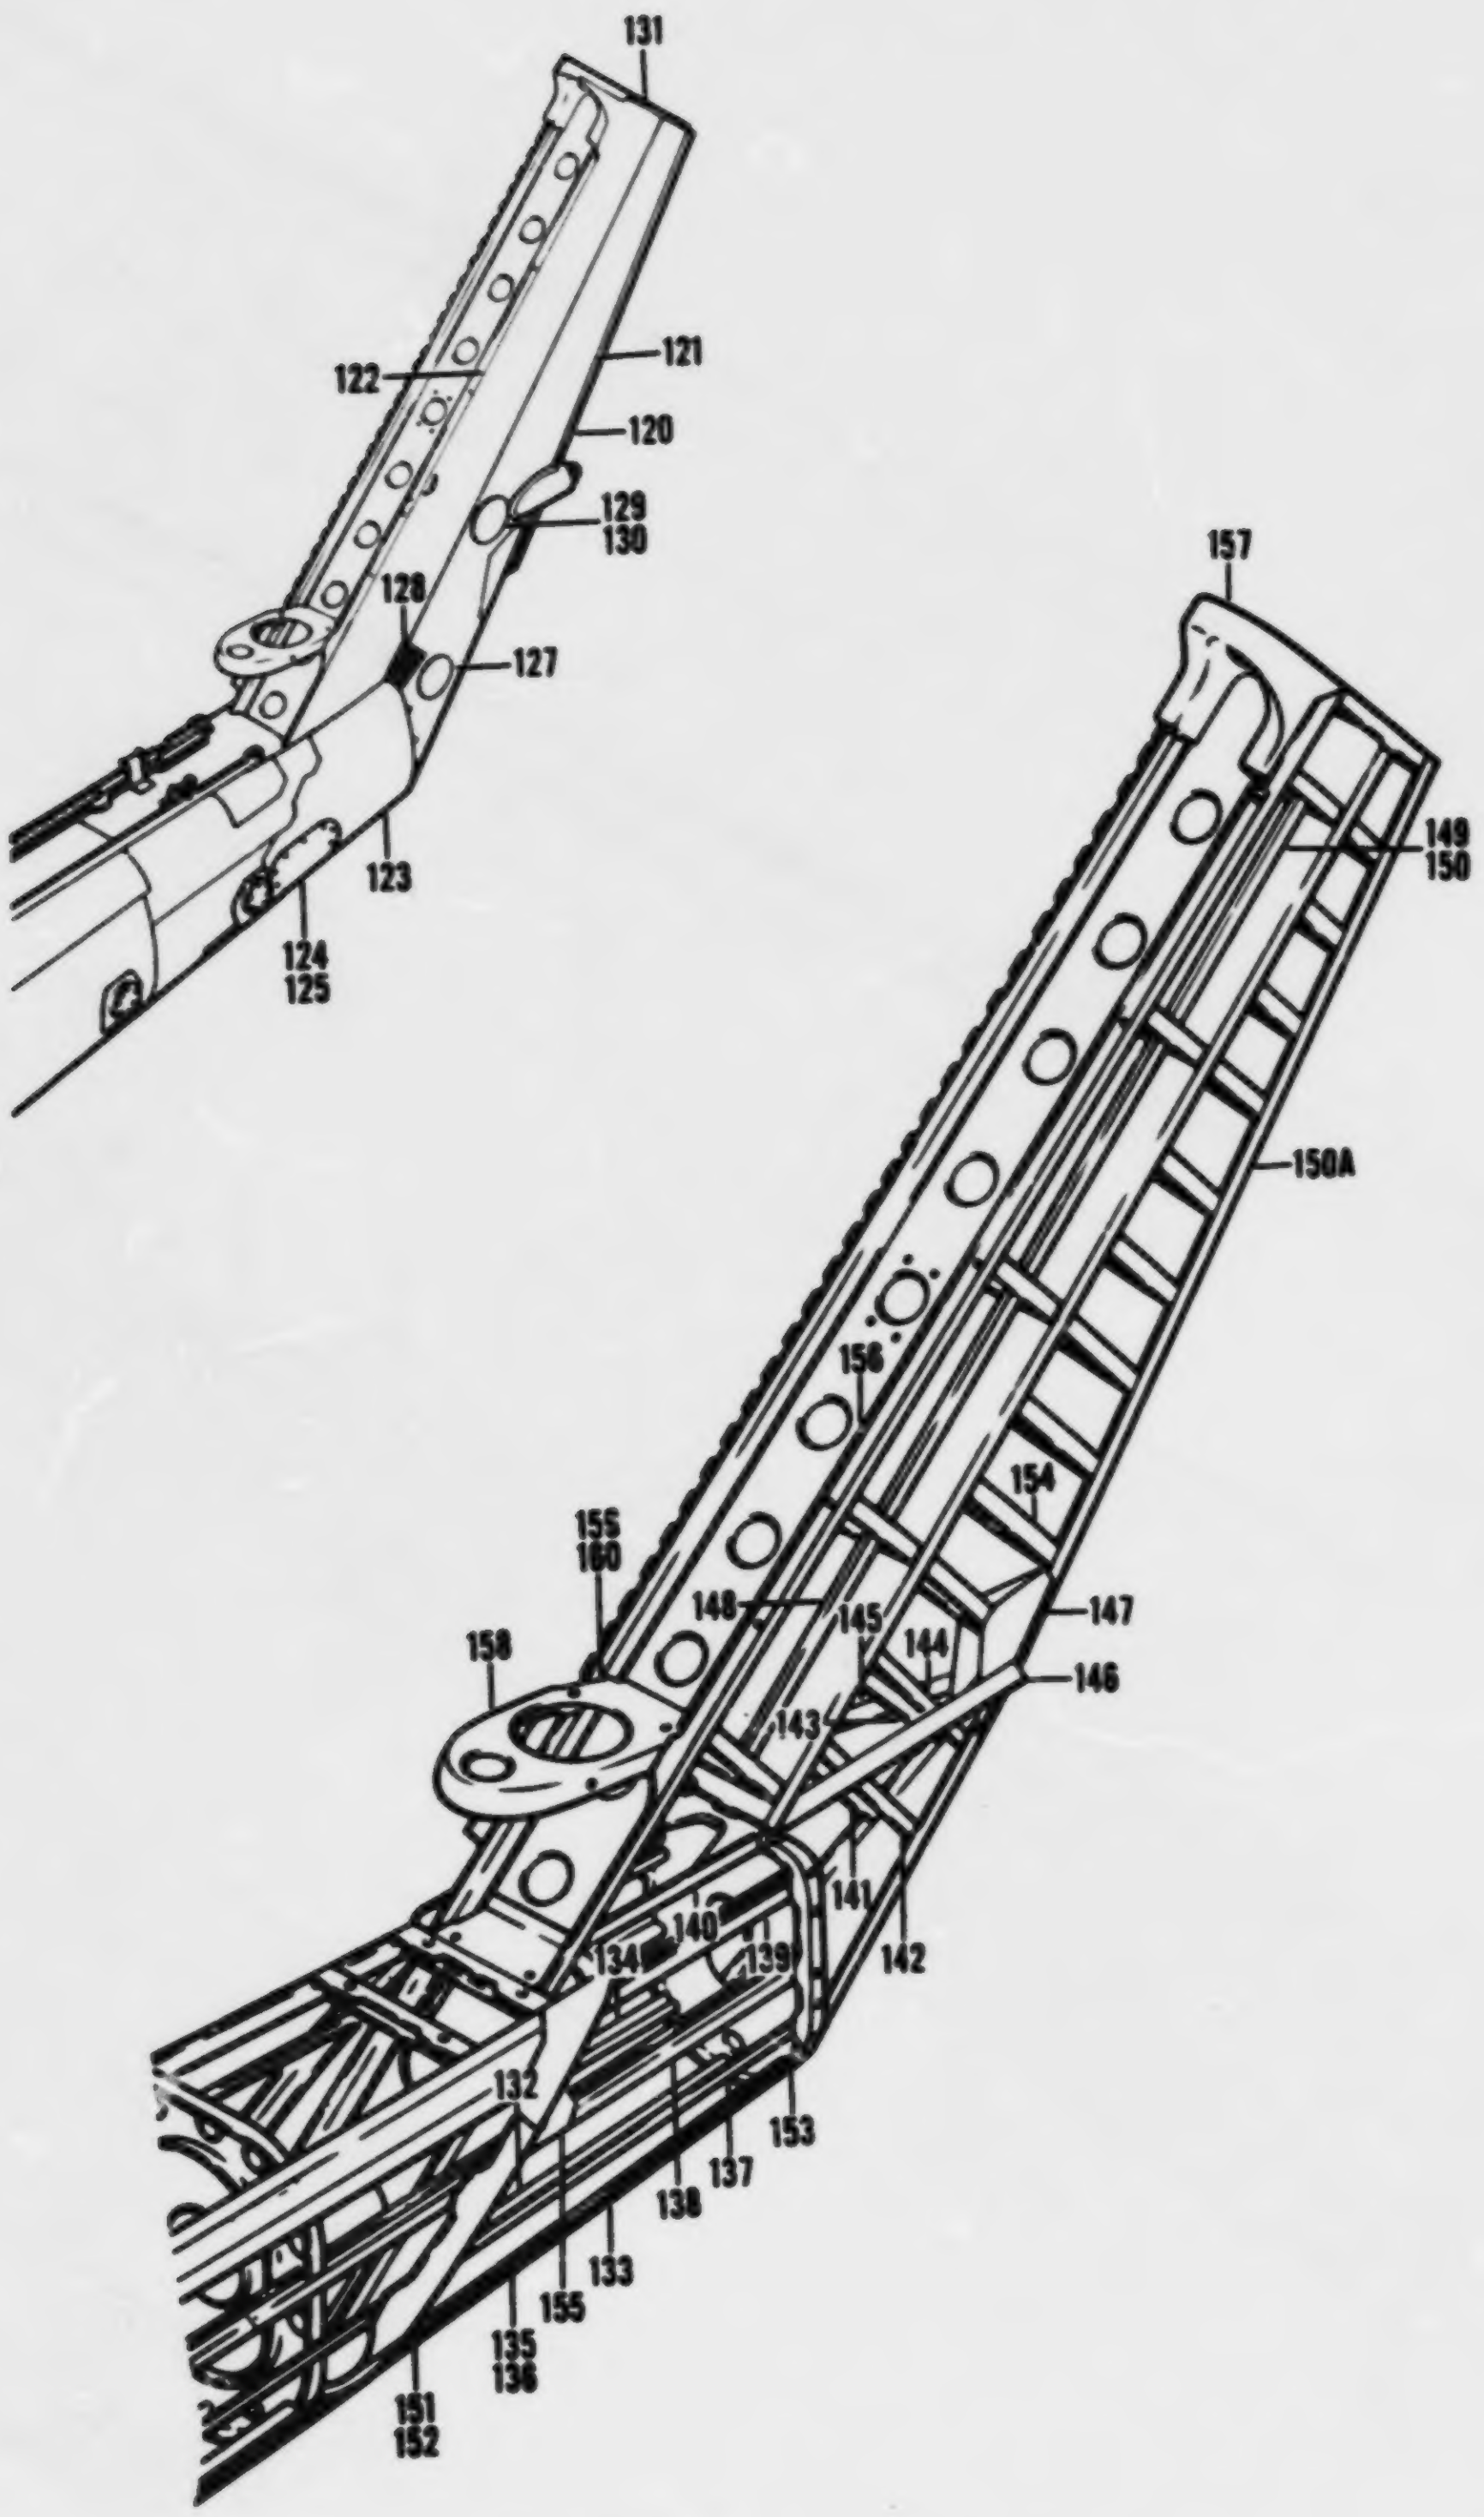
131
122
121
120
129
130
128
127
123
124
125
157
149
150
150A
156
154
155
160
158
148
145
144
147
146
143
141
140
134
139
142
132
153
137
138
133
155
135
136
151
152

Figure 16. Tailboom Installation (Sheet 3 of 5)

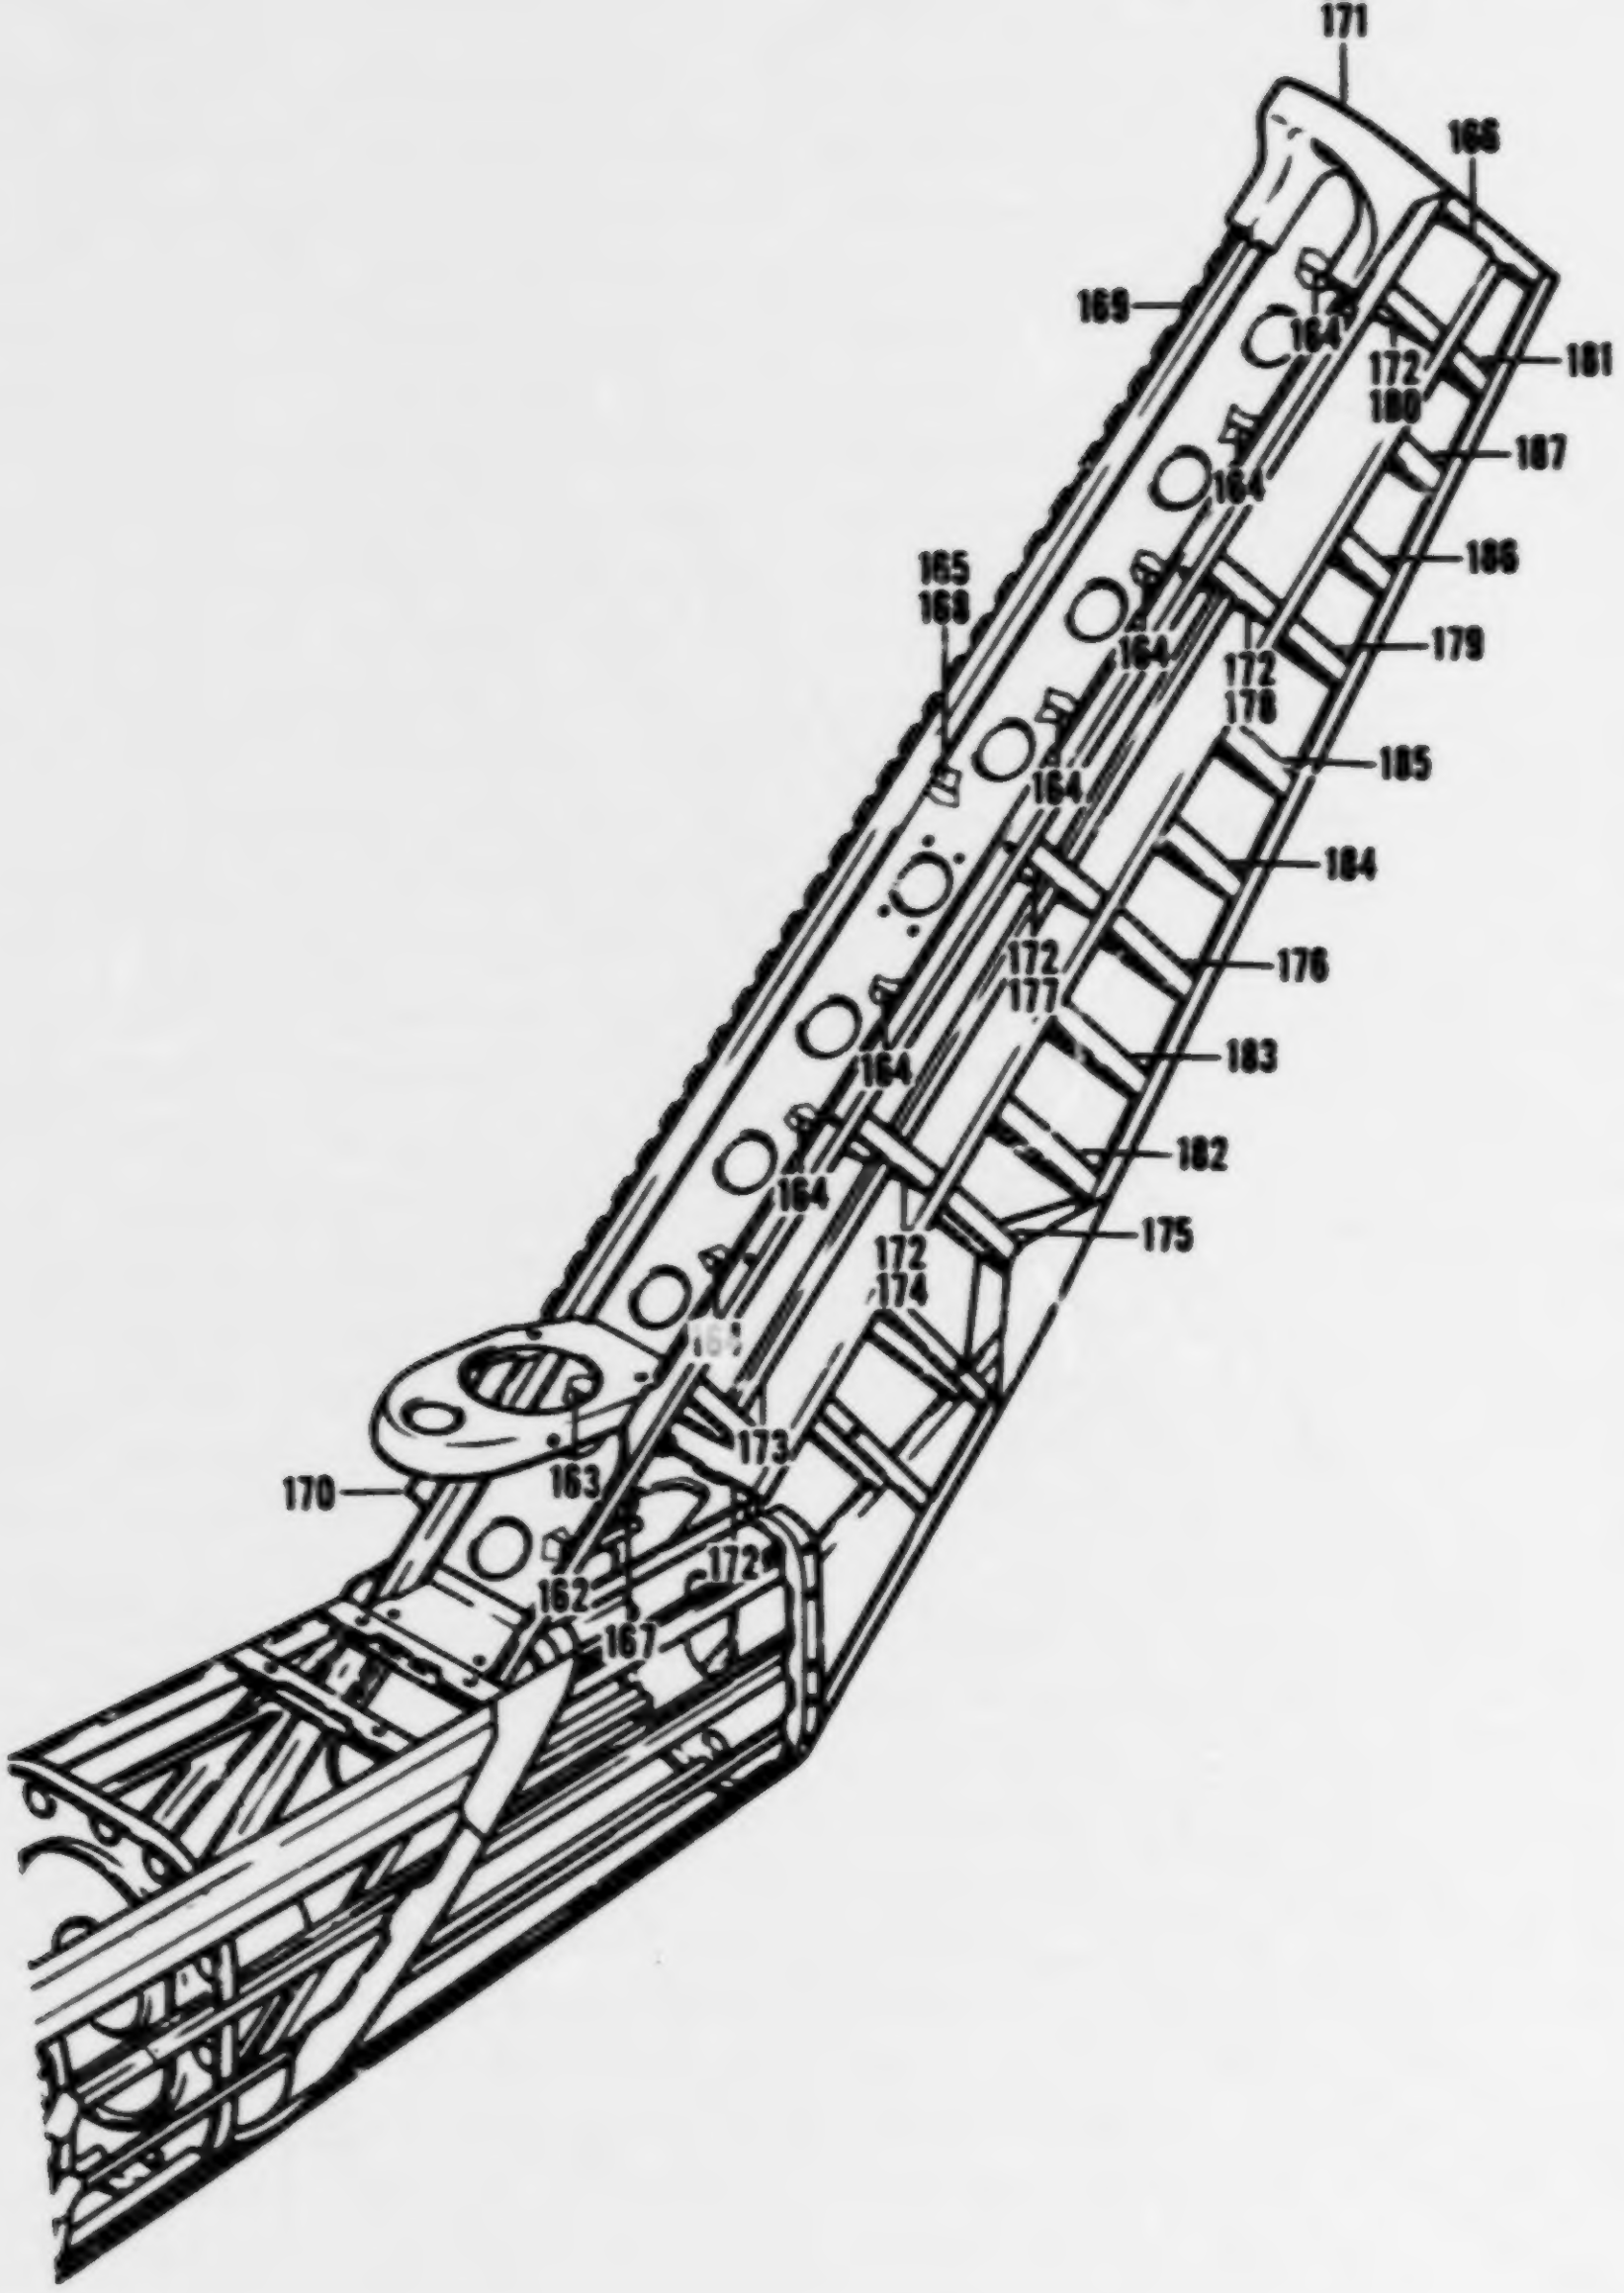
161
171
166
169
164
172
180
181
187
164
186
165
168
164
172
178
179
185
164
184
172
177
176
183
164
182
175
172
174
164
170
163
173
162
172
167

Figure 16. Tailboom Installation (Sheet 4 of 5)

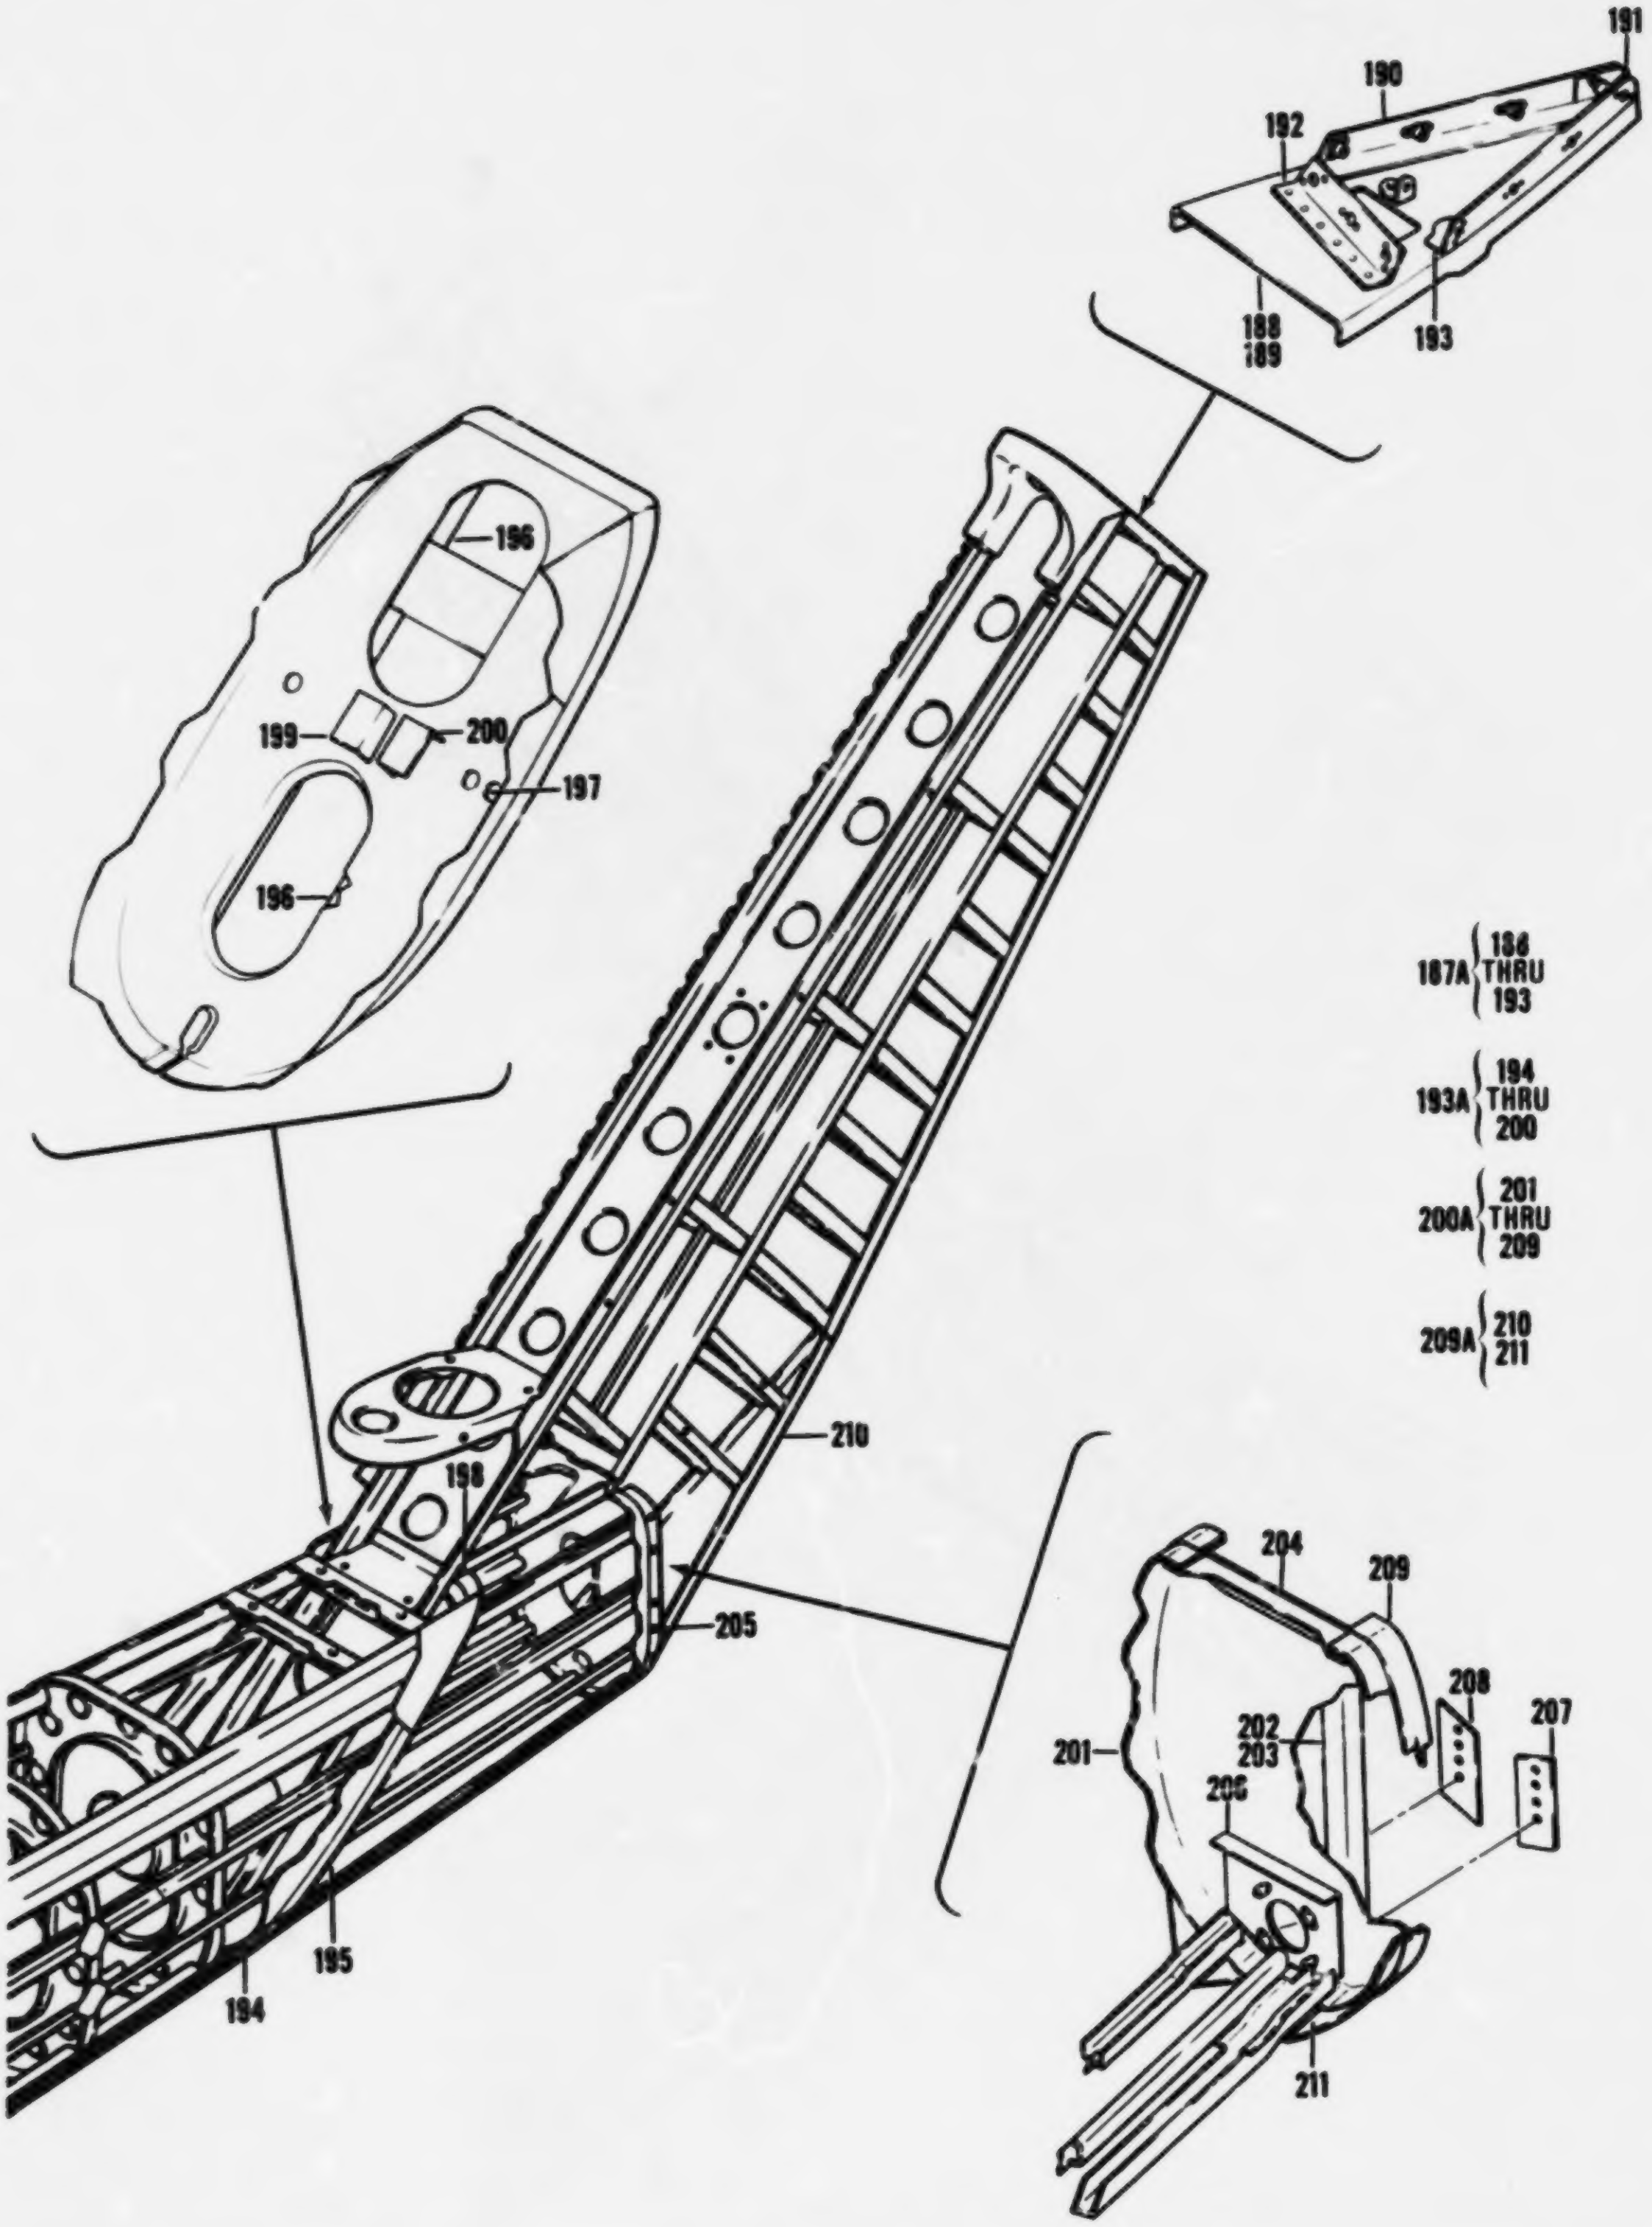
191
190
192
188
189
193
196
199
200
197
196
198
210
205
195
194
204
209
208
207
202
203
201
206
211
187A 188 THRU 193
193A 194 THRU 200
200A 201 THRU 209
209A 210 211

Figure 16. Tailboom Installation (Sheet 5 of 5)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
16		XCFZZ		20309	ES-F-220395	TAILBOOM INSTL FOR CONTINUATION OF BREAKDOWN SEE FIG. 16A SEE FIG.5A FOR NHA.......UHE	EA	1
16		XCFZZ		20309	ES-D-221551	TAILBOOM INSTL SEE FIG 5B FOR NHA.......UHX	EA	1
16	1	PADDD	1560-00-431-8552	97499	205-031-801-71S	.BOOM SECTION,ROTARY.......UHE,UHH,UHV,UHX	EA	1
16	2	PADZZ	1560-00-431-8557	97499	205-031-801-47S	..SKIN,AIRCRAFT UPPER.......UHE,UHH,UHV,UHX	EA	1
16	3	MDDDD		97499	205-031-801-61	..SKIN.......UHE,UHH,UHV,UHX	EA	1
16	4	MDDDD		97499	205-031-801-82	..SKIN-RH.......UHE,UHH,UHV,UHX	EA	1
16	4	MDDDD		97499	205-031-801-81	..SKIN-LH.......UHE,UHH,UHV,UHX	EA	1
16	5	PADZZ	1560-00-432-2566	97499	205-031-801-21S	..STRINGER,BOOM CENTER.......UHE,UHH,UHV,UHX	EA	1
16	6	PBDZZ	1560-00-431-8559	97499	205-031-801-37S	..STIFFENER,BOOM -LH.......UHE,UHH,UHV,UHX	EA	1
16	7	PADZZ	1560-00-432-2568	97499	205-031-801-33S	..STIFFENER,BOOM -LH.......UHE,UHH,UHV,UHX	EA	1
16	7	PBDZZ	1560-00-432-2570	97499	205-031-801-34S	..STIFFENER,BOOM -RH.......UHE,UHH,UHV,UHX	EA	1
16	8	PBDZZ	1560-00-432-2571	97499	205-031-801-31S	..STIFFENER,BOOM LH.......UHE,UHH,UHV,UHX	EA	1
16	8	PBDZZ	1560-00-432-2569	97499	205-031-801-32S	..STIFFENER,BOOM -RH.......UHE,UHH,UHV,UHX	EA	1
16	9	PBDZZ	1560-00-432-2565	97499	205-031-801-23S	..STRINGER,BOOM -LH.......UHE,UHH,UHV,UHX	EA	1
16	9	PADZZ	1560-00-432-2564	97499	205-031-801-24S	..STRINGER,BOOM -RH.......UHE,UHH,UHV,UHX	EA	1
16	10	PBDZZ	1560-00-431-8562	97499	205-031-801-29S	..STIFFENER,BOOM -LH.......UHE,UHH,UHV,UHX	EA	1
16	10	PBDZZ	1560-00-431-8561	97499	205-031-801-30S	..STIFFENER,BOOM -RH.......UHE,UHH,UHV,UHX	EA	1
16	11	PADZZ	1560-00-432-2567	97499	205-031-801-27S	..STIFFENER,BOOM -LH.......UHE,UHH,UHV,UHX	EA	1
16	11	PADZZ	1560-00-431-8550	97499	205-031-801-28S	..STIFFENER,BOOM -RH.......UHE,UHH,UHV,UHX	EA	1
16	12	PADZZ	1560-00-432-2560	97499	205-031-801-39S	..SPLICE,BOOM.......UHE,UHH,UHV,UHX	EA	2
16	13	PADZZ	1560-00-431-8551	97499	205-031-801-41S	..SPLICE,BOOM.......UHE,UHH,UHV,UHX	EA	2
16	14	PADZZ	1560-00-431-8558	97499	205-031-801-67S	..STIFFENER,BOOM.......UHE,UHH,UHV,UHX	EA	2
16	15	PBDZZ	1560-00-432-2561	97499	205-031-801-75S	..STRINGER,BOOM -LH.......UHE,UHH,UHV,UHX	EA	1
16	15	PBDZZ	1560-00-432-2563	97499	205-031-801-76S	..STRINGER,BOOM -RH.......UHE,UHH,UHV,UHX	EA	1
16	15A	PADZZ	1560-00-432-2587	97499	205-031-801-49S	..STIFFENER,SUPPORT.......UHE,UHH,UHV,UHX	EA	1
16		XCFZZ		97499	205-031-897-1	..SUPPORT INSTL.......UHE,UHH,UHV,UHX	EA	1
16	16	PBDZZ	1560-00-428-7205	97499	205-031-897-13S	...STIFFENER,SUPPORT -FWD.......UHE,UHH,UHV,UHX	EA	1
16	17	MDDZZ		97499	205-031-897-15S	...STIFFENER-AFT.......UHE,UHH,UHV,UHX	EA	1
16	18	MDDZZ		97499	205-031-897-17S	...STIFFENER-LH.......UHE,UHH,UHV,UHX	EA	1
16	18	MDDZZ		97499	205-031-897-19S	...STIFFENER-RH.......UHE,UHH,UHV,UHX	EA	1
16	19	PBDZZ	1560-00-427-8400	97499	205-031-897-21S	...GUSSET,SUPPORT.......UHE,UHH,UHV,UHX	EA	1
16	20	MDDZZ		97499	205-031-897-23S	...PLATE-LH.......UHE,UHH,UHV,UHX	EA	1
16	20	MDDZZ		97499	205-031-897-25S	...PLATE,LH.......UHE,UHH,UHV,UHX	EA	1
16	21	MDDZZ		97499	205-031-897-29	...PAD.......UHE,UHH,UHV,UHX	EA	1
16	22	PBDZZ	1560-00-427-8401	97499	205-031-897-9S	...INTERCOSTAL,SUPPORT -LH.......UHE,UHH,UHV,UHX	EA	1
16	23	PBDZZ	1560-00-427-8399	97499	205-031-897-11S	...INTERCOSTAL,SUPPORT -RH.......UHE,UHH,UHV,UHX	EA	1
16	23A	PADDD	1560-00-427-8410	97499	205-030-807-123S	..BULKHEAD,TAILBOOM ,FWD.......UHE,UHH,UHV,UHX	EA	1
16	24	MDDZZ	1560-00-169-0417	97499	205-030-807-97	...FORMER.......UHE,UHH,UHV,UHX	EA	1
16	24A	MDDZZ		97499	205-030-807-127	...FORMER.......UHE,UHH,UHV,UHX	EA	1
16	25	XADZZ		97499	205-030-807-81	...ANGLE,UPPER-RH.......UHE,UHH,UHV,UHX	EA	1
16	26	XADZZ		97499	205-030-807-83	...ANGLE,UPPER-RH.......UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
16	27	MDOZZ		97499	205-030-807-101	...ANGLE,UPPER-LH.........UHE,UHH,UHV,UHX	EA	1
16	28	XADZZ		97499	205-030-807-103	...ANGLE,UPPER-LH.........UHE,UHH,UHV,UHX	EA	1
16	29	XADZZ		97499	205-030-807-112	...ANGLE,LOWER-RH.........UHE,UHH,UHV,UHX	EA	1
16	30	XADZZ		97499	205-030-807-114	...ANGLE,LOWER-RH.........UHE,UHH,UHV,UHX	EA	1
16	31	XADZZ		97499	205-030-807-113	...ANGLE,LOWER-LH.........UHE,UHH,UHV,UHX	EA	1
16	32	XADZZ		97499	205-030-807-129	...ANGLE,LOWER-LH.........UHE,UHH,UHV,UHX	EA	1
16	32A	PAFZZ	5340-00-158-0567	78553	A1663-031-24A	...CLIP.........UHE,UHH,UHV,UHX	EA	2
16	32B	XCFZZ		97499	205-030-111-1	..CHANNEL INSTL.........UHE,UHH,UHV,UHX	EA	1
16	33	PADZZ	1560-00-428-7348	97499	205-030-111-3S	...CHANNEL,SUPPORT,BOO.........UHE,UHH,UHV,UHX	EA	2
16	34	PADZZ	1560-00-428-7359	97499	205-030-111-19S	...STIFFENER,CHANNEL,B.........UHE,UHH,UHV,UHX	EA	1
16	35	MDOZZ		97499	205-030-111-21S	...STIFFENER.........UHE,UHH,UHV,UHX	EA	1
16	36	PBDZZ	1560-00-427-8430	97499	205-030-111-17S	...INTERCOSTAL,CHANNEL.........UHE,UHH,UHV,UHX	EA	1
16		XCFZZ		97499	205-031-803-3	..BULKHEAD INSTL.........UHE,UHH,UHV,UHX	EA	1
16	37	PADZZ	1560-00-401-3596	97499	205-031-803-19S	...FRAME,BULKHEAD.........UHE,UHH,UHV,UHX	EA	1
16	38	MDOZZ		97499	205-031-803-15S	...GUSSET.........UHE,UHH,UHV,UHX	EA	5
16	39	PADZZ	1560-00-427-8422	97499	205-031-803-13S	...CLIP,BULKHEAD.........UHE,UHH,UHV,UHX	EA	1
16	39A	XCFZZ		97499	205-031-808-1	..BULKHEAD INSTL.........UHE,UHH,UHV,UHX	EA	1
16	40	PADZZ	1560-00-427-8405	97499	205-031-808-3S	...BULKHEAD ASSY,BOOM.........UHE,UHH,UHV,UHX	EA	1
16	41	MDOZZ		97499	205-031-808-13S	...STIFFENER-LH LOWER.........UHE,UHH,UHV,UHX	EA	1
16	41	MDOZZ		97499	205-031-808-11S	...STIFFENER-RH LOWER.........UHE,UHH,UHV,UHX	EA	1
16	42	MDOZZ		97499	205-031-808-15S	...STIFFENER-LH LOWER.........UHE,UHH,UHV,UHX	EA	1
16	42	MDOZZ		97499	205-031-808-9S	...STIFFENER-RH LOWER.........UHE,UHH,UHV,UHX	EA	1
16	43	PADZZ	1560-00-427-8409	97499	205-031-808-23S	...CLIP,BOOM -LH UPPER.........UHE,UHH,UHV,UHX	EA	1
16	44	PADZZ	1560-00-427-8404	97499	205-031-808-24S	...CLIP,BOOM.........UHE,UHH,UHV,UHX	EA	1
16	45	PADZZ	1560-00-428-7214	97499	205-031-808-5S	...SPLICE,BULKHEAD -LOWER.........UHE,UHH,UHV,UHX	EA	1
16	46	PADZZ	1560-00-428-7213	97499	205-031-808-7S	...SPLICE,BULKHEAD -UPPER.........UHE,UHH,UHV,UHX	EA	1
16	47	MDOZZ		97499	205-031-808-31S	...FILLER.........UHE,UHH,UHV,UHX	EA	1
16	48	PADZZ	1560-00-427-8336	97499	204-030-814-95S	.DOUBLER,BOOM.........UHE,UHH,UHV,UHX	EA	1
16	48A	PADZZ	1560-00-435-4805	97499	204-030-814-59S	.DOUBLER,DOOR ACCESS.........UHE,UHH,UHV,UHX	EA	1
16	48B	PADZZ	1560-00-435-4806	97499	204-030-814-55S	.DOUBLER,DOOR ACCESS.........UHE,UHH,UHV,UHX	EA	1
16	49	PADZZ	1560-00-427-8121	97499	205-030-809-19S	.BULKHEAD,BOOM.........UHE,UHH,UHV,UHX	EA	1
16	49A	XCFZZ		97499	205-030-810-9	.BULKHEAD INSTL.........UHE,UHH,UHV,UHX	EA	1
16	50	PADZZ	1560-00-426-1322	97499	205-030-810-15S	..BULKHEAD,BOOM.........UHE,UHH,UHV,UHX	EA	1
16	51	MDOZZ		97499	205-030-805-5S	..GUSSET.........UHE,UHH,UHV,UHX	EA	5
16	52	MDOZZ		97499	205-001-707-1S	..BRACKET.........UHE,UHH,UHV,UHX	EA	1
16	53	PADZZ	1560-00-432-2577	97499	205-030-811-9S	.BULKHEAD,BOOM.........UHE,UHH,UHV,UHX	EA	1
16	54	PADDD	1560-00-427-8156	97499	205-030-812-7S	.BULKHEAD,BOOM.........UHE,UHH,UHV,UHX	EA	1
16	55	XADZZ		97499	205-030-812-13	..ANGLE.........UHE,UHH,UHV,UHX	EA	1
16	55A	MDOZZ		97499	205-030-812-11	..BRACKET,ANGLE.........UHE,UHH,UHV,UHX	EA	1
16	56	PADDD	1560-00-428-6598	97499	205-030-813-13S	.BULKHEAD,BOOM.........UHE,UHH,UHV,UHX	EA	1
16	57	MDOZZ		97499	205-001-708-1S	..BRACKET.........UHE,UHH,UHV,UHX	EA	2
16	58	PADZZ	1560-00-428-6599	97499	205-030-813-15S	.BULKHEAD,BOOM.........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
16	59	PADZZ	1560-00-427-8140	97499	205-030-816-7S	.BULKHEAD,BOOM........UHE,UHH,UHV,UHX	EA	1
16	59A	XCFZZ		97499	205-030-801-1	.SUPPORT INSTL GEAR BOX........UHE,UHH,UHV,UHX	EA	1
16	60	MDDZZ		97499	205-030-801-7S	..STIFFENER,GEAR BOX........UHE,UHH,UHV,UHX	EA	1
16	61	PADZZ	1560-00-990-3747	97499	205-031-831-3S	..SUPPORT,GEAR BOX........UHE,UHH,UHV,UHX	EA	1
16	62	PADZZ	1560-00-990-3748	97499	205-031-832-3S	..SUPPORT,GEAR BOX........UHE,UHH,UHV,UHX	EA	1
16	62A	XCFZZ		97499	205-031-013-1	.RESTRICTOR INSTL ELEVATOR........UHE,UHH,UHV,UHX	EA	1
16	63	MDDZZ		97499	205-031-013-15S	..CLIP........UHE,UHH,UHV,UHX	EA	1
16	64	MDDZZ		97499	205-031-013-17S	..CLIP........UHE,UHH,UHV,UHX	EA	1
16	65	PADZZ	1560-00-432-2586	97499	205-031-013-19S	..STOP,RESTRICTOR,ELE........UHE,UHH,UHV,UHX	EA	1
16	66	MDDZZ		97499	205-031-013-21S	..DOUBLER........UHE,UHH,UHV,UHX	EA	1
16	67	MDDZZ		97499	205-031-013-23S	..SUPPORT........UHE,UHH,UHV,UHX	EA	1
16	67A	XCFZZ		97499	204-030-900-31	.SUPPORT INSTL SYNCHRONIZED ELEVATOR........UHE,UHH,UHV,UHX	EA	1
16	68	PADZZ	1560-00-432-2584	97499	204-030-900-3S	..SUPPORT,ELEVATOR BO UPPER AFT........UHE,UHH,UHV,UHX	EA	1
16	69	PADZZ	1560-00-432-2585	97499	204-030-900-5S	..SUPPORT,ELEVATOR BO........UHE,UHH,UHV,UHX	EA	1
16	70	MDDZZ		97499	204-030-900-21S	..STIFFENER -LH........UHE,UHH,UHV,UHX	EA	1
16	70	MDDZZ		97499	204-030-900-17S	..STIFFENER -RH........UHE,UHH,UHV,UHX	EA	1
16	71	MDDZZ		97499	204-030-900-23S	..STIFFENER -LH........UHE,UHH,UHV,UHX	EA	1
16	71	MDDZZ		97499	204-030-900-19S	..STIFFENER -RH........UHE,UHH,UHV,UHX	EA	1
16	72	MDDZZ		97499	204-030-900-33S	..STOP........UHE,UHH,UHV,UHX	EA	1
16	72A	XCFZZ		97499	205-030-842-1	.BRACKET INSTL........UHE,UHH,UHV,UHX	EA	1
16	73	PBDZZ	1560-00-427-8092	97499	205-030-842-7S	..BRACKET,VALVE,BOOM -LH........UHE,UHH,UHV,UHX	EA	1
16	74	PBDZZ	1560-00-427-8102	97499	205-030-842-8S	..BRACKET,VALVE,BOOM -RH........UHE,UHH,UHV,UHX	EA	1
16	75	PBDZZ	1560-00-427-8105	97499	205-030-842-9S	..BRACKET,VALVE,BOOM TOP........UHE,UHH,UHV,UHX	EA	1
16	76	PADZZ	1560-00-427-8091	97499	205-030-842-11S	..BRACKET,VALVE,BOOM AFT........UHE,UHH,UHV,UHX	EA	1
16	76A	XCFZZ		97499	205-031-862-1	.ANGLE INSTL-LH........UHE,UHH,UHV,UHX	EA	1
16	77	PADZZ	1560-00-428-7181	97499	205-031-862-5S	..ANGLE,TAILBOOM -LH AFT........UHE,UHH,UHV,UHX	EA	1
16	76	PADZZ	1560-00-428-7183	97499	205-031-862-9S	..ANGLE,TAILBOOM -LH FWD........UHE,UHH,UHV,UHX	EA	1
16	79	MDDZZ		97499	205-031-862-13S	..SPLICE-LH........UHE,UHH,UHV,UHX	EA	1
16	80	PAFZZ	9330-00-109-4605	97499	120-069-1	..PLASTIC STRIP........UHE,UHH,UHV,UHX	EA	5
16	80A	XCFZZ		97499	205-031-862-3	.ANGLE INSTL-RH........UHE,UHH,UHV,UHX	EA	1
16	81	PADZZ	1560-00-428-7182	97499	205-031-862-7S	..ANGLE,TAILBOOM -RH AFT........UHE,UHH,UHV,UHX	EA	1
16	82	PADZZ	1560-00-428-7173	97499	205-031-862-11S	..ANGLE,TAILBOOM -RH FWD........UHE,UHH,UHV,UHX	EA	1
16	83	MDDZZ		97499	205-031-862-15S	..SPLICE-RH........UHE,UHH,UHV,UHX	EA	1
16	84	MDDZZ		97499	205-030-851-1	.BLOCK,RADIUS........UHE,UHH,UHV,UHX	EA	1
16	85	PADZZ	1560-00-431-8498	97499	205-031-806-1S	.LONGERON -LH LOWER........UHE,UHH,UHV,UHX	EA	1
16	85	PADZZ	1560-00-431-8499	97499	205-031-806-3S	.LONGERON -RH LOWER........UHE,UHH,UHV,UHX	EA	1
16	86	PADZZ	1560-00-426-1291	97499	205-031-806-41S	.LONGERON -LH LOWER........UHE,UHH,UHV,UHX	EA	1
16	86	PADZZ	1560-00-426-1293	97499	205-031-806-43S	.LONGERON -RH LOWER........UHE,UHH,UHV,UHX	EA	1
16	87	PBDZZ	1560-00-426-1281	97499	205-031-806-75S	.LONGERON -LH LOWER........UHE,UHH,UHV,UHX	EA	1
16	87	PADZZ	1560-00-426-1282	97499	205-031-806-77S	.LONGERON -RH LOWER........UHE,UHH,UHV,UHX	EA	1
[illegible]	88	PADZZ	1560-00-426-1306	97499	205-031-806-65S	.SPLICE,LONGERON -LH LOWER........UHE,UHH,UHV,UHX	EA	1
16	88	PADZZ	1560-00-426-1321	97499	205-031-806-67S	.SPLICE,LONGERON -RH LOWER........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
16	89	PADZZ	1560-00-431-8500	97499	205-031-806-25S	.LONGERON -LH UPPER	UHE,UHH,UHV,UHX	EA	1
16	89	PADZZ	1560-00-426-1557	97499	205-031-806-7S	.LONGERON -RH UPPER	UHE,UHH,UHV,UHX	EA	1
16	90	PADZZ	1560-00-427-8350	97499	205-031-806-45S	.LONGERON -LH UPPER	UHE,UHH,UHV,UHX	EA	1
16	90	PADZZ	1560-00-426-1556	97499	205-031-806-47S	.LONGERON -RH UPPER	UHE,UHH,UHV,UHX	EA	1
16	91	PADZZ	1560-00-426-1555	97499	205-031-806-79S	.LONGERON -LH UPPER	UHE,UHH,UHV,UHX	EA	1
16	91	PADZZ	1560-00-426-1558	97499	205-031-806-81S	.LONGERON -RH UPPER	UHE,UHH,UHV,UHX	EA	1
16	92	PADZZ	1560-00-426-1314	97499	205-031-806-69S	.SPLICE,LONGERON -LH UPPER	UHE,UHH,UHV,UHX	EA	1
16	92	PADZZ	1560-00-428-7100	97499	205-031-806-71S	.SPLICE,LONGERON -RH UPPER	UHE,UHH,UHV,UHX	EA	1
16		XCFZZ		97499	205-030-889-3	.BRACKET INSTL LH	UHE,UHH,UHV,UHX	EA	1
16		XCFZZ		97499	205-030-889-4	.BRACKET INSTL RH	UHE,UHH,UHV,UHX	EA	1
16	93	PADZZ	1560-00-426-1559	97499	205-030-889-15S	..BRACKET,SUPPORT,ELE -LH	UHE,UHH,UHV,UHX	EA	1
16	93	PADZZ	5340-00-462-3199	97499	205-030-889-16	..BRACKET,TAIL BOOM -RH	UHE,UHH,UHV,UHX	EA	1
16	94	PADZZ	1560-00-427-8432	97499	205-030-889-17S	..CLIP,SUPPORT,ELEVAT -LH	UHE,UHH,UHV,UHX	EA	1
16	94	PADZZ	1560-00-427-8445	97499	205-030-889-18S	..CLIP,SUPPORT,ELEVAT -RH	UHE,UHH,UHV,UHX	EA	1
16	95	PADZZ	1560-00-426-1562	97499	205-030-889-25S	..DOUBLER,SUPPORT -LH	UHE,UHH,UHV,UHX	EA	1
16	95	PADZZ	1560-00-426-1563	97499	205-030-889-26S	..DOUBLER,SUPPORT -RH	UHE,UHH,UHV,UHX	EA	1
16	96	PBDZZ	1560-00-426-1560	97499	205-030-889-21S	..RIB,SUPPORT,ELEVATO -LH	UHE,UHH,UHV,UHX	EA	1
16	97	PBDZZ	1560-00-426-1561	97499	205-030-889-38	..RIB,SUPPORT,ELEVATO -RH	UHE,UHH,UHV,UHX	EA	1
16	98	MDDZZ		97499	205-030-889-19S	..CLIP	UHE,UHH,UHV,UHX	EA	4
16	99	PADZZ	1560-00-432-2597	97499	205-031-800-31S	.DOUBLER,SKIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	100	MDDZZ		97499	205-031-800-45S	.STRINGER	UHE,UHH,UHV,UHX	EA	1
16	101	MDDZZ		97499	205-031-800-43S	.STRINGER	UHE,UHH,UHV,UHX	EA	1
16	102	MDDZZ		97499	205-031-800-57S	.STIFFENER	UHE,UHH,UHV,UHX	EA	3
16	103	PADZZ	1560-00-432-2589	97499	205-031-800-75S	.SUPPORT,SKIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	104	MDDZZ		97499	205-031-800-59	.FILLER	UHE,UHH,UHV,UHX	EA	1
16	105	PADZZ	1560-00-428-7087	97499	205-032-800-23S	.SKIN,AIRCRAFT -UPPER FWD	UHE,UHH,UHV,UHX	EA	1
16	106	MDDFZ		97499	205-032-800-47	.SKIN	UHE,UHH,UHX	EA	1
16	106	MDDFZ		97499	205-032-800-48	.SKIN	UHE,UHH,UHX	EA	1
16	107	MDDFZ		97499	205-032-800-49	.SKIN	UHE,UHH,UHX	EA	1
16	108	MFFZZ		97499	205-032-800-35	.SKIN-UPPER	UHE,UHH,UHV,UHX	EA	1
16	108	MDDFZ		97499	205-032-800-55	.SKIN	UHE,UHH,UHX	EA	1
16	109	MFFZZ		97499	205-032-800-63	.SKIN-LH SIDE	UHE,UHH,UHV,UHX	EA	1
16	109	MDDFZ		97499	205-032-800-69	.SKIN	UHE,UHH,UHX	EA	1
16	109	MFFZZ		97499	205-032-800-64	.SKIN-RH SIDE	UHE,UHH,UHV,UHX	EA	1
16	109	MDDFZ		97499	205-032-800-70	.SKIN	UHE,UHH,UHX	EA	1
16	110	MDDFZ		97499	205-032-800-53	.SKIN	UHE,UHH,UHX	EA	1
16	111	PADZZ	1560-00-428-7085	97499	205-032-800-37S	.SKIN,AIRCRAFT -UPPER AFT	UHE,UHH,UHV,UHX	EA	1
16	112	PBDZZ	1560-00-432-2596	97499	205-031-800-35	.SKIN,AIRCRAFT LOWER AFT	UHE,UHH,UHV,UHX	EA	1
16	113	PADZZ	1560-00-426-1258	97499	205-032-800-13S	.STRINGER,BOOM -LH	UHE,UHH,UHV,UHX	EA	1
16	114	PADZZ	1560-00-426-1259	97499	205-032-800-14S	.STRINGER,BOOM -RH	UHE,UHH,UHV,UHX	EA	1
16	114	PADZZ	1560-00-426-1258	97499	205-032-800-13S	.STRINGER,BOOM	UHE,UHH,UHV,UHX	EA	1
16	115	MDDZZ		97499	205-032-800-25	.FILLER	UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
16	116	MDDZZ		97499	205-032-800-39S	.STRINGER-LOWER RH	UHE,UHH,UHV,UHX	EA	2
16	117	MDDZZ		97499	205-032-800-61S	.STIFFENER-LH LOWER	UHE,UHH,UHV,UHX	EA	1
16	118	PADZZ	1560-00-426-1260	97499	205-032-800-65S	.STRINGER,BOOM -LH	UHE,UHH,UHV,UHX	EA	1
16	118	PADZZ	1560-00-426-1276	97499	205-032-800-66S	.STRINGER,BOOM -RH	UHE,UHH,UHV,UHX	EA	1
16	119	MFFZZ		97499	205-032-800-69	.STRIP,RUBBER-DRIVE ANGLE SUPPORT	UHE,UHH,UHV,UHX	EA	1
16	120	PBDDD	1560-00-482-9100	97499	205-030-899-109	.FIN ASSEMBLY,TAILBO	UHE,UHH,UHV,UHX	EA	1
16	121	MDDZZ		97499	205-030-899-3S	..SKIN-LH LOWER	UHE,UHH,UHV,UHX	EA	1
16	121	MDDZZ		97499	205-030-899-5S	..SKIN-RH LOWER	UHE,UHH,UHV,UHX	EA	1
16	122	MDDZZ		97499	205-030-899-7S	..SKIN-LH-UPPER	UHE,UHH,UHV,UHX	EA	1
16	122	MDDZZ		97499	205-030-899-9S	..SKIN-RH UPPER	UHE,UHH,UHV,UHX	EA	1
16	123	PADZZ	1560-00-428-7063	97499	205-030-899-95S	..SKIN,AIRCRAFT	UHE,UHH,UHV,UHX	EA	1
16	124	PBDZZ	1560-00-413-1409	97499	205-030-899-53S	..COVER,FIN TAIL BOOM -LH	UHE,UHH,UHV,UHX	EA	1
16	124	PADZZ	1560-00-413-1410	97499	205-030-899-54S	..COVER,FIN TAIL BOOM -RH	UHE,UHH,UHV,UHX	EA	1
16	125	MDDZZ		97499	205-030-899-47S	..DOUBLER-LH	UHE,UHH,UHV,UHX	EA	1
16	125	MDDZZ		97499	205-030-899-48S	..DOUBLER-RH	UHE,UHH,UHV,UHX	EA	1
16	127	MDDZZ		97499	205-030-899-67S	..DOUBLER	UHE,UHH,UHV,UHX	EA	1
16	128	MDDZZ		97499	205-030-899-99S	..DOUBLER	UHE,UHH,UHV,UHX	EA	1
16	129	PADZZ	1560-00-994-5796	97499	205-030-899-49S	..COVER,ACCESS	UHE,UHH,UHV,UHX	EA	1
16	130	MDDZZ		97499	205-030-899-45S	..DOUBLER	UHE,UHH,UHV,UHX	EA	1
16	131	MDDZZ		97499	205-030-899-41S	..DOUBLER-LH	UHE,UHH,UHV,UHX	EA	1
16	131	MDDZZ		97499	205-030-899-43S	..DOUBLER-RH	UHE,UHH,UHV,UHX	EA	1
16	132	PADZZ	1560-00-428-7242	97499	205-030-899-21S	..STRINGER,FIN	UHE,UHH,UHV,UHX	EA	1
16	133	PADZZ	1560-00-428-7227	97499	205-030-899-39S	..STIFFENER,FIN	UHE,UHH,UHV,UHX	EA	1
16	134	PADZZ	1560-00-428-7226	97499	205-030-899-69S	..STIFFENER,FIN	UHE,UHH,UHV,UHX	EA	1
16	135	PADZZ	1560-00-428-7255	97499	205-030-899-18S	..STRINGER,FIN	UHE,UHH,UHV,UHX	EA	1
16	136	PADZZ	1560-00-428-7281	97499	205-030-899-17S	..STRINGER,FIN	UHE,UHH,UHV,UHX	EA	1
16	137	PADZZ	1560-00-428-7254	97499	205-030-899-19S	..STRINGER,FIN -LH	UHE,UHH,UHV,UHX	EA	1
16	137	PADZZ	1560-00-428-7245	97499	205-030-899-20S	..STRINGER,FIN -RH	UHE,UHH,UHV,UHX	EA	1
16	138	PADZZ	1560-00-428-7302	97499	205-030-899-15S	..STRINGER,FIN	UHE,UHH,UHV,UHX	EA	1
16	139	PADZZ	1560-00-431-8508	97499	205-030-899-13S	..STRINGER,BOOM -LH	UHE,UHH,UHV,UHX	EA	1
16	139	PADZZ	1560-00-431-8510	97499	205-030-899-14S	..STRINGER,BOOM -RH	UHE,UHH,UHV,UHX	EA	1
16	140	MDDZZ		97499	205-030-899-65S	..STIFFENER-LH	UHE,UHH,UHV,UHX	EA	1
16	140	MDDZZ		97499	205-030-899-66S	..STIFFENER-RH	UHE,UHH,UHV,UHX	EA	1
16	141	PADZZ	1560-00-136-9090	97499	205-030-899-27S	..STIFFENER,BOOM	UHE,UHH,UHV,UHX	EA	1
16	142	PADZZ	1560-00-426-1301	97499	205-030-899-25S	..STIFFENER,FIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	143	PADZZ	1560-00-426-1317	97499	205-030-899-31S	..STIFFENER,FIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	144	PADZZ	1560-00-426-1300	97499	205-030-899-29S	..STIFFENER,FIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	145	MDDZZ		97499	205-030-899-62S	..STRIP	UHE,UHH,UHV,UHX	EA	1
16	146	MDDZZ		97499	205-030-899-61S	..STRIP	UHE,UHH,UHV,UHX	EA	1
16	147	MDDZZ		97499	205-030-899-63S	..GUSSET-LH	UHE,UHH,UHV,UHX	EA	1
16	147	MDDZZ		97499	205-030-899-64S	..GUSSET-RH	UHE,UHH,UHV,UHX	EA	1
16	148	MDDZZ		97499	205-030-899-35S	..STIFFENER-LH	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
16	148	MDDZZ		97499	205-030-899-36S	..STIFFENER-RH	UHE,UHH,UHV,UHX	EA	1
16	149	MDDZZ		97499	205-030-899-33S	..STIFFENER-LH	UHE,UHH,UHV,UHX	EA	1
16	149	MDDZZ		97499	205-030-899-34S	..STIFFENER-RH	UHE,UHH,UHV,UHX	EA	1
16	150	PBDZZ	1560-00-426-1319	97499	205-030-899-97S	..STIFFENER,FIN,BOOM -LH	UHE,UHH,UHV,UHX	EA	1
16	150	PADZZ	1560-00-426-1320	97499	205-030-899-98S	..STIFFENER,FIN,BOOM -RH	UHE,UHH,UHV,UHX	EA	1
16	150A	PADZZ	1560-00-163-5102	97499	205-030-899-37	..STIFFENER, FIN	UHE,UHH,UHV,UHX	EA	1
16	151	PADZZ	1560-00-427-8425	97499	205-030-899-55S	..BRACKET,FIN	UHE,UHH,UHV,UHX	EA	1
16	152	PADZZ	1560-00-431-8491	97499	205-030-899-57S	..BRACKET,FIN	UHE,UHH,UHV,UHX	EA	1
16	153	MDDZZ		97499	205-030-899-75	..SHIM	UHE,UHH,UHV,UHX	EA	1
16	154	MDDZZ		97499	205-030-899-73	..FILLER	UHE,UHH,UHV,UHX	EA	1
16	155	MDDZZ		97499	205-030-899-77S	..FILLER	UHE,UHH,UHV,UHX	EA	1
16	156	MDDZZ		97499	205-030-899-105S	..STRIP	UHE,UHH,UHV,UHX	EA	1
16	157	MDDZZ		97499	205-030-899-107S	..STRIP	UHE,UHH,UHV,UHX	EA	1
16	158	PADZZ	1560-00-428-7168	97499	205-030-833-15S	..RIB,FIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	159	MDDZZ		97499	205-030-833-5	..FILLER	UHE,UHH,UHV,UHX	EA	1
16	160	MDDZZ		97499	205-030-833-7S	..FILLER	UHE,UHH,UHV,UHX	EA	1
16		XCFZZ		97499	205-030-846-47	..SPAR INSTL,FRONT	UHE,UHH,UHV,UHX	EA	1
16	161	PADZZ	1560-00-428-7321	97499	205-030-846-49S	...SPAR,FIIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	161	PADZZ	1560-00-431-8495	97499	205-030-846-7S	...SPAR,FIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	162	PADZZ	1560-00-431-8496	97499	205-030-846-21S	...STIFFENER,SPAR,FIN	UHE,UHH,UHV,UHX	EA	1
16	163	MDDZZ		97499	205-030-846-17S	...STIFFENER,SPAR	UHE,UHH,UHV,UHX	EA	1
16	164	PADZZ	1560-01-119-2187	97499	205-030-846-19	...STIFFENER,SPAR,FIN	UHE,UHH,UHV,UHX	EA	7
16	165	MDDZZ		97499	205-030-846-25S	...STIFFENER,SPAR	UHE,UHH,UHV,UHX	EA	1
16	166	MDDZZ		97499	205-030-846-27S	...STIFFENER,SPAR	UHE,UHH,UHV,UHX	EA	1
16	167	MDDZZ		97499	205-030-846-29S	...BRACKET,SPAR	UHE,UHH,UHV,UHX	EA	1
16	168	MDDZZ		97499	205-030-846-31	...FILLER,SPAR	UHE,UHH,UHV,UHX	EA	1
16	169	MFFZZ		97499	205-030-846-33S	...HINGE,SPAR	UHE,UHH,UHV,UHX	EA	1
16	170	MDDZZ		97499	205-030-846-45S	...DOUBLER,SPAR	UHE,UHH,UHV,UHX	EA	1
16	171	PADZZ	1550-00-898-8932	97499	204-030-867-1	...SHIM,SUPPORT,TAIL B	UHE,UHH,UHV,UHX	EA	1
16	172	PADZZ	1560-00-431-8548	97499	204-030-827-13S	..CLIP,RIB,FIN	UHE,UHH,UHV,UHX	EA	6
16	173	PADZZ	1560-00-431-8544	97499	204-030-827-53S	..RIB,FIN	UHE,UHH,UHV,UHX	EA	1
16	174	PADZZ	1560-00-431-8549	97499	204-030-827-15S	..RIB,FIN	UHE,UHH,UHV,UHX	EA	1
16	175	PADZZ	1560-00-431-8546	97499	204-030-827-43S	..RIB,FIN	UHE,UHH,UHV,UHX	EA	1
16	176	PADZZ	1560-00-431-8543	97499	204-030-827-19S	..RIB,FIN	UHE,UHH,UHV,UHX	EA	1
16	177	PADZZ	1560-00-431-8540	97499	204-030-827-45S	..RIB,FIN	UHE,UHH,UHV,UHX	EA	1
16	178	PADZZ	1560-00-431-8541	97499	204-030-827-23S	..RIB,FIN	UHE,UHH,UHV,UHX	EA	1
16	179	PADZZ	1560-00-431-8539	97499	204-030-827-47S	..RIB,FIN	UHE,UHH,UHV,UHX	EA	1
16	180	PADZZ	1560-00-431-8547	97499	204-030-827-27S	..RIB,FIN TAIL BOOM	UHE,UHH,UHV,UHX	EA	1
16	181	PADZZ	1560-00-431-8545	97499	204-030-827-49S	..RIB,FIN	UHE,UHH,UHV,UHX	EA	1
16	182	PADZZ	1560-00-431-8526	97499	204-030-863-37S	..RIB,FIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	183	PADZZ	1560-00-431-8525	97499	204-030-863-39S	..RIB,FIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	184	PADZZ	1560-00-431-8524	97499	204-030-863-41S	..RIB,FIN,BOOM	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
16	185	PADZZ	1560-00-431-8523	97499	204-030-863-43S	..RIB,FIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	186	PADZZ	1560-00-431-8522	97499	204-030-863-45S	..RIB,FIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	187	PADZZ	1560-00-431-8521	97499	204-030-863-47S	..RIB,FIN,BOOM	UHE,UHH,UHV,UHX	EA	1
16	187A	XCFZZ		97499	205-031-837-1	.RIB INSTL CLOSE OUT	UHE,UHH,UHV,UHX	EA	1
16	188	PADZZ	1560-00-432-2578	97499	205-031-837-3S	..RIB,FIN	UHE,UHH,UHV,UHX	EA	1
16	189	PADZZ	1560-00-428-6841	97499	205-031-837-15S	..CHANNEL,RIB,FIN	UHE,UHH,UHV,UHX	EA	1
16	190	MDDZZ		97499	205-031-837-29S	..STRAP	UHE,UHH,UHV,UHX	EA	2
16	191	PAFZZ	1560-00-428-6855	97499	205-031-837-27S	..BRACKET,RIB,FIN	UHE,UHH,UHV,UHX	EA	1
16	192	MFFZZ		97499	205-031-837-21S	..CLIP	UHE,UHH,UHV,UHX	EA	1
16	193	MFFZZ		97499	205-031-837-19S	..CLIP	UHE,UHH,UHV,UHX	EA	1
16	193	MFFZZ		97499	205-031-837-20S	..CLIP	UHE,UHH,UHV,UHX	EA	1
16	193A	PADDD	1560-00-426-1340	97499	205-030-817-3S	.BULKHEAD,BOOM	UHE,UHH,UHV,UHX	EA	1
16	194	PBDZZ	1560-00-427-8128	97499	205-030-817-17S	..BULKHEAD,BOOM	UHE,UHH,UHV,UHX	EA	1
16	195	PBDZZ	1560-00-426-1341	97499	205-030-817-19S	..BULKHEAD,BOOM	UHE,UHH,UHV,UHX	EA	1
16	196	PBDZZ	1560-00-427-8161	97499	205-030-817-21S	..CHANNEL,BULKHEAD	UHE,UHH,UHV,UHX	EA	1
16	197	PBDZZ	1560-00-427-8124	97499	205-030-817-23S	...CHANNEL,BULKHEAD	UHE,UHH,UHV,UHX	EA	1
16	198	PADZZ	1560-00-428-6579	97499	205-030-817-25S	...DOUBLER,BULKHEAD -LH	UHE,UHH,UHV,UHX	EA	1
16	198	PADZZ	1560-00-427-8157	97499	205-030-817-26S	...DOUBLER,BULKHEAD -RH	UHE,UHH,UHV,UHX	EA	1
16	199	PBDZZ	5340-00-178-6100	97499	204-030-948-1	...FITTING,BOOM TAIL S	UHE,UHH,UHV,UHX	EA	1
16	200	PBDZZ	5340-00-178-1560	97499	204-030-948-2	..BRACKET SUPPORT	UHE,UHH,UHV,UHX	EA	1
16	200A	XCFZZ		97499	205-030-819-1	.BULKHEAD INSTL	UHE,UHH,UHV,UHX	EA	1
16	201	PADZZ	1560-00-428-6646	97499	205-030-819-9S	..BULKHEAD,BOOM	UHE,UHH,UHV,UHX	EA	1
16	202	MDDZZ		97499	205-030-819-11S	..ANGLE	UHE,UHH,UHV,UHX	EA	1
16	203	MDDZZ		97499	205-030-819-13S	..ANGLE	UHE,UHH,UHV,UHX	EA	1
16	204	MDDZZ		97499	205-030-819-15S	..ANGLE	UHE,UHH,UHV,UHX	EA	1
16	205	PADZZ	1560-00-428-6769	97499	205-030-819-19S	..FRAME,BOOM	UHE,UHH,UHV,UHX	EA	1
16	206	MDDZZ		97499	205-030-819-17S	..DOUBLER	UHE,UHH,UHV,UHX	EA	1
16	207	MDDZZ		97499	204-030-857-1S	..FITTING	UHE,UHH,UHV,UHX	EA	1
16	208	MDDZZ		97499	204-030-857-3S	..FITTING	UHE,UHH,UHV,UHX	EA	1
16	209	MDDZZ		97499	205-030-819-21	..STRIP	UHE,UHH,UHV,UHX	EA	1
16	209A	XCFZZ		97499	204-030-769-1	.BULKHEAD INSTL	UHE,UHH,UHV,UHX	EA	1
16	210	PADZZ	1560-00-428-6624	97499	204-030-769-5S	..BULKHEAD,BOOM	UHE,UHH,UHV,UHX	EA	1
16	211	PBDZZ	1560-00-426-1246	97499	204-030-769-7	..FILLER,BULKHEAD -LH	UHE,UHH,UHV,UHX	EA	1
16	211	PADZZ	1560-00-426-1251	97499	204-030-769-8	..FILLER,BULKHEAD -RH	UHE,UHH,UHV,UHX	EA	1

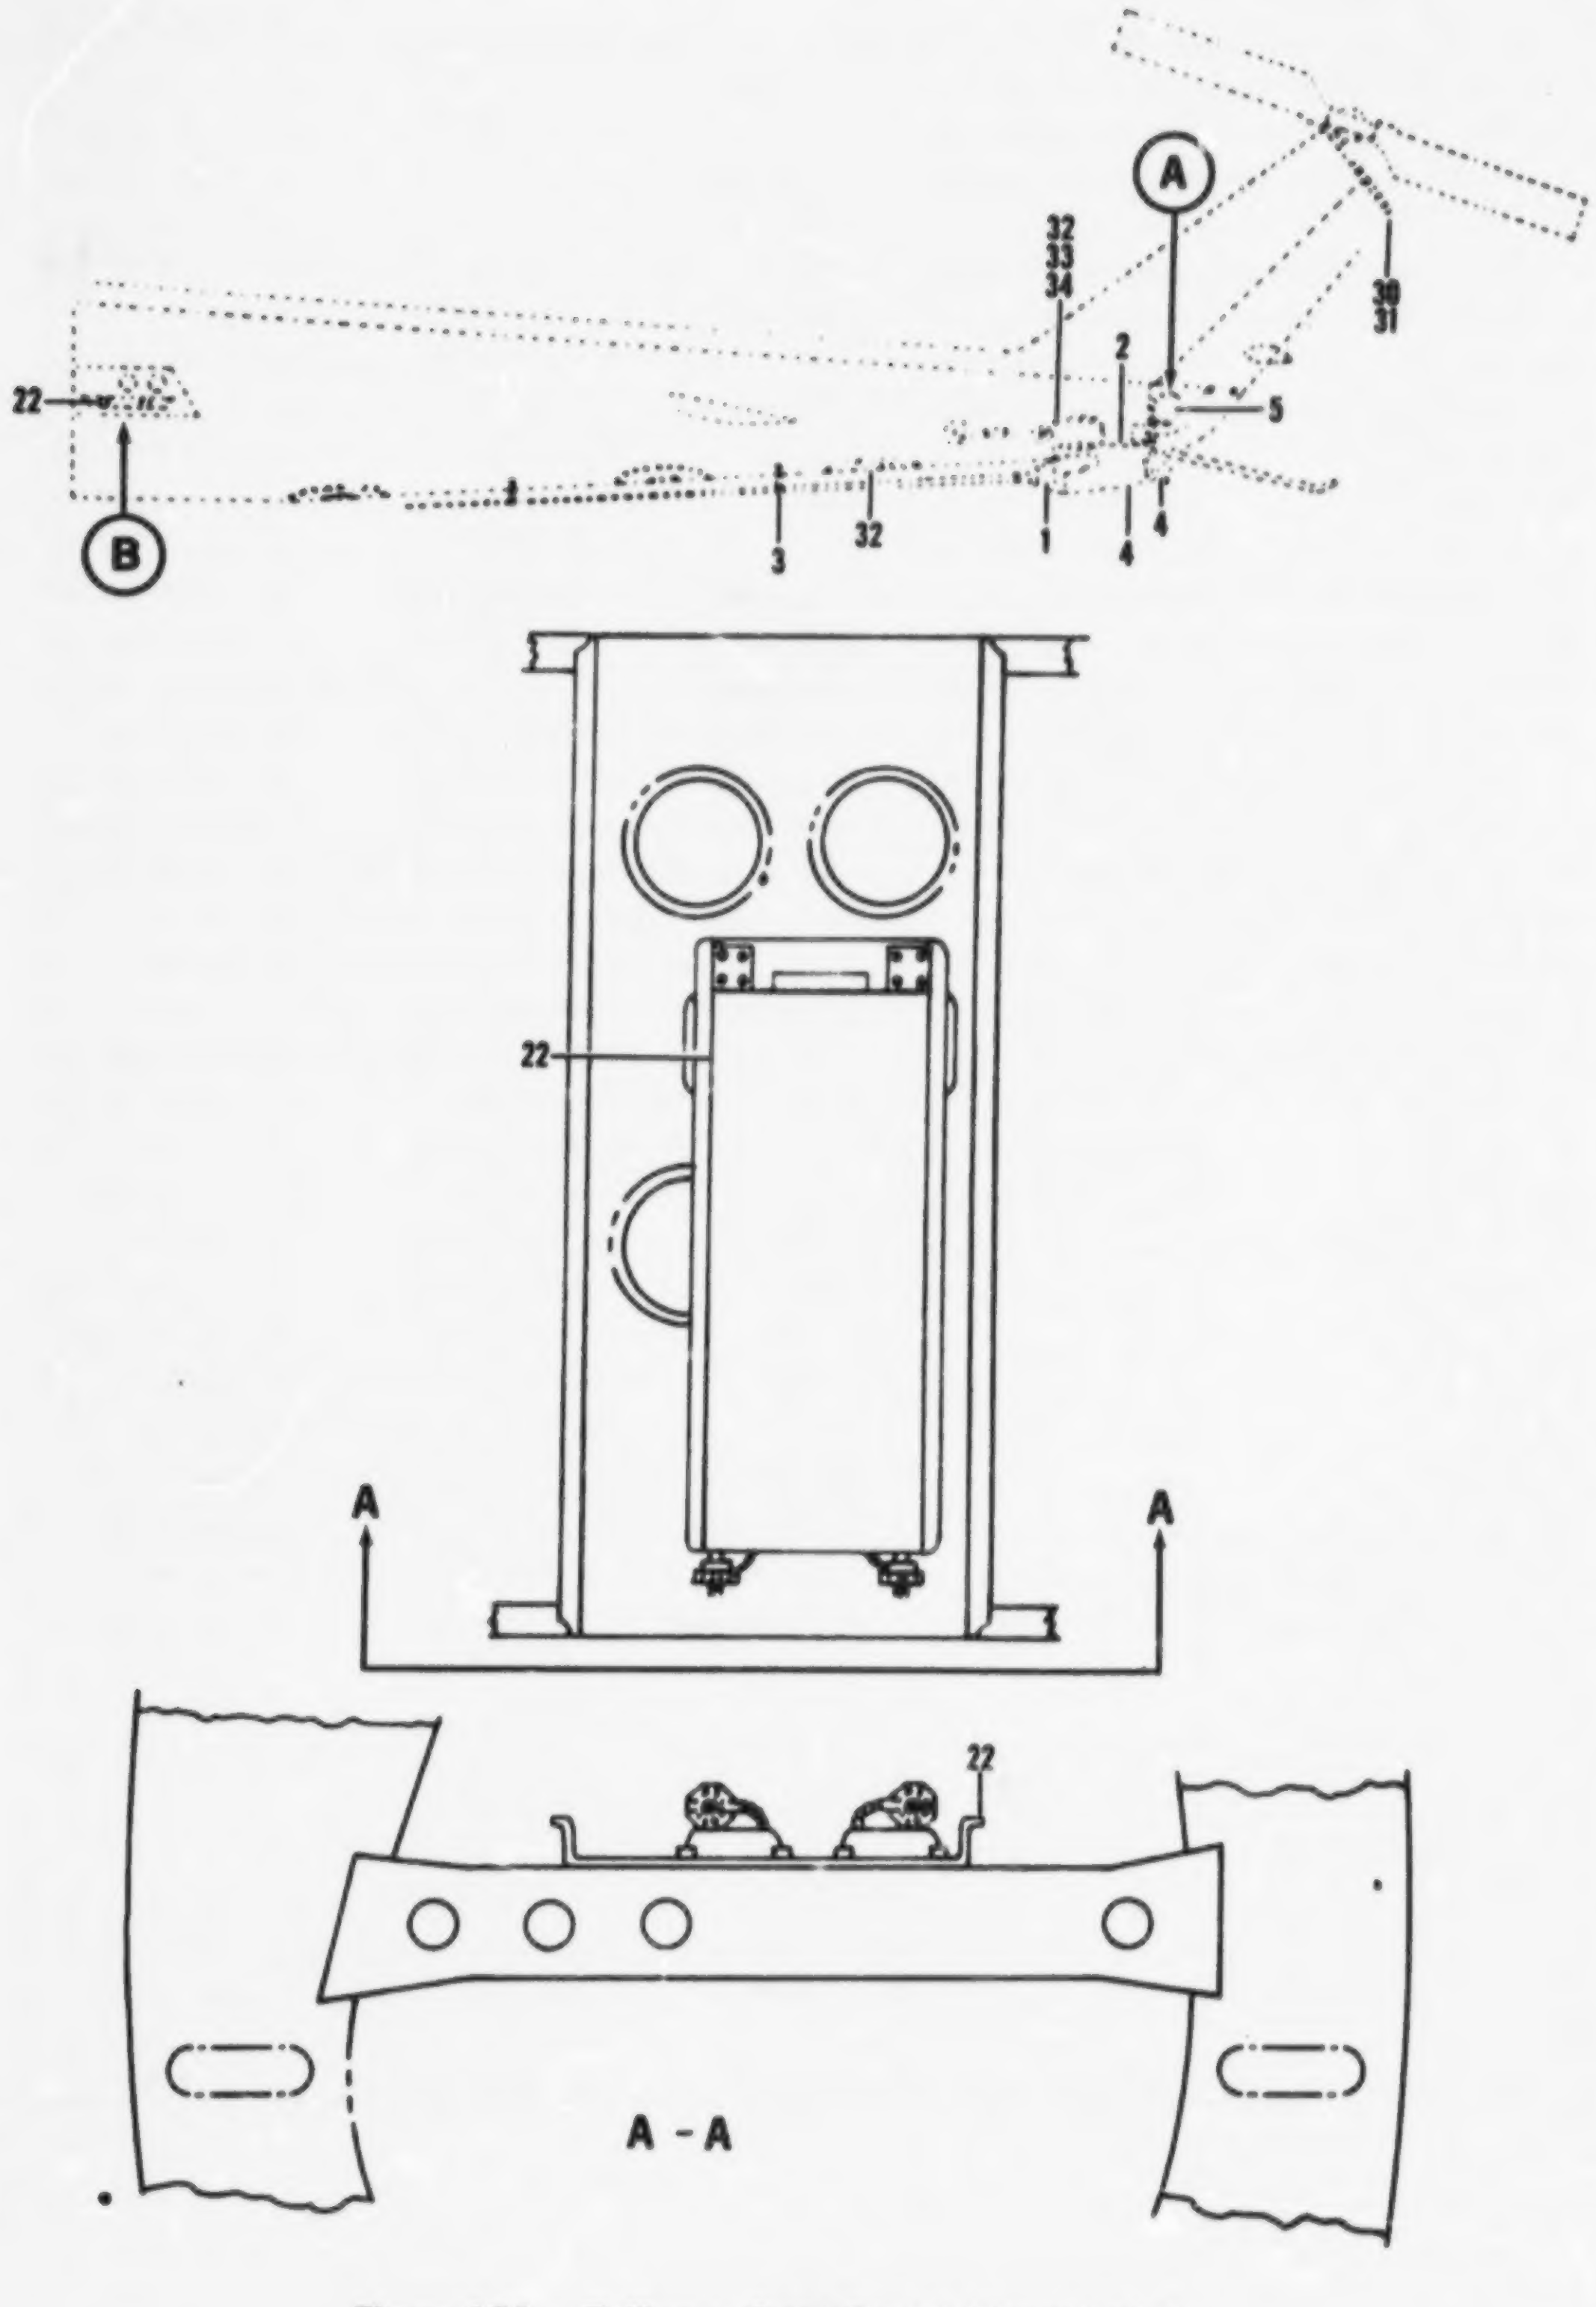
A
32
33
34
30
31
2
5
22
B
3
32
1
4
4
22
A
A
22
A - A

Figure 16A. Tailboom Quick Fix 1A (Sheet 1 of 2)

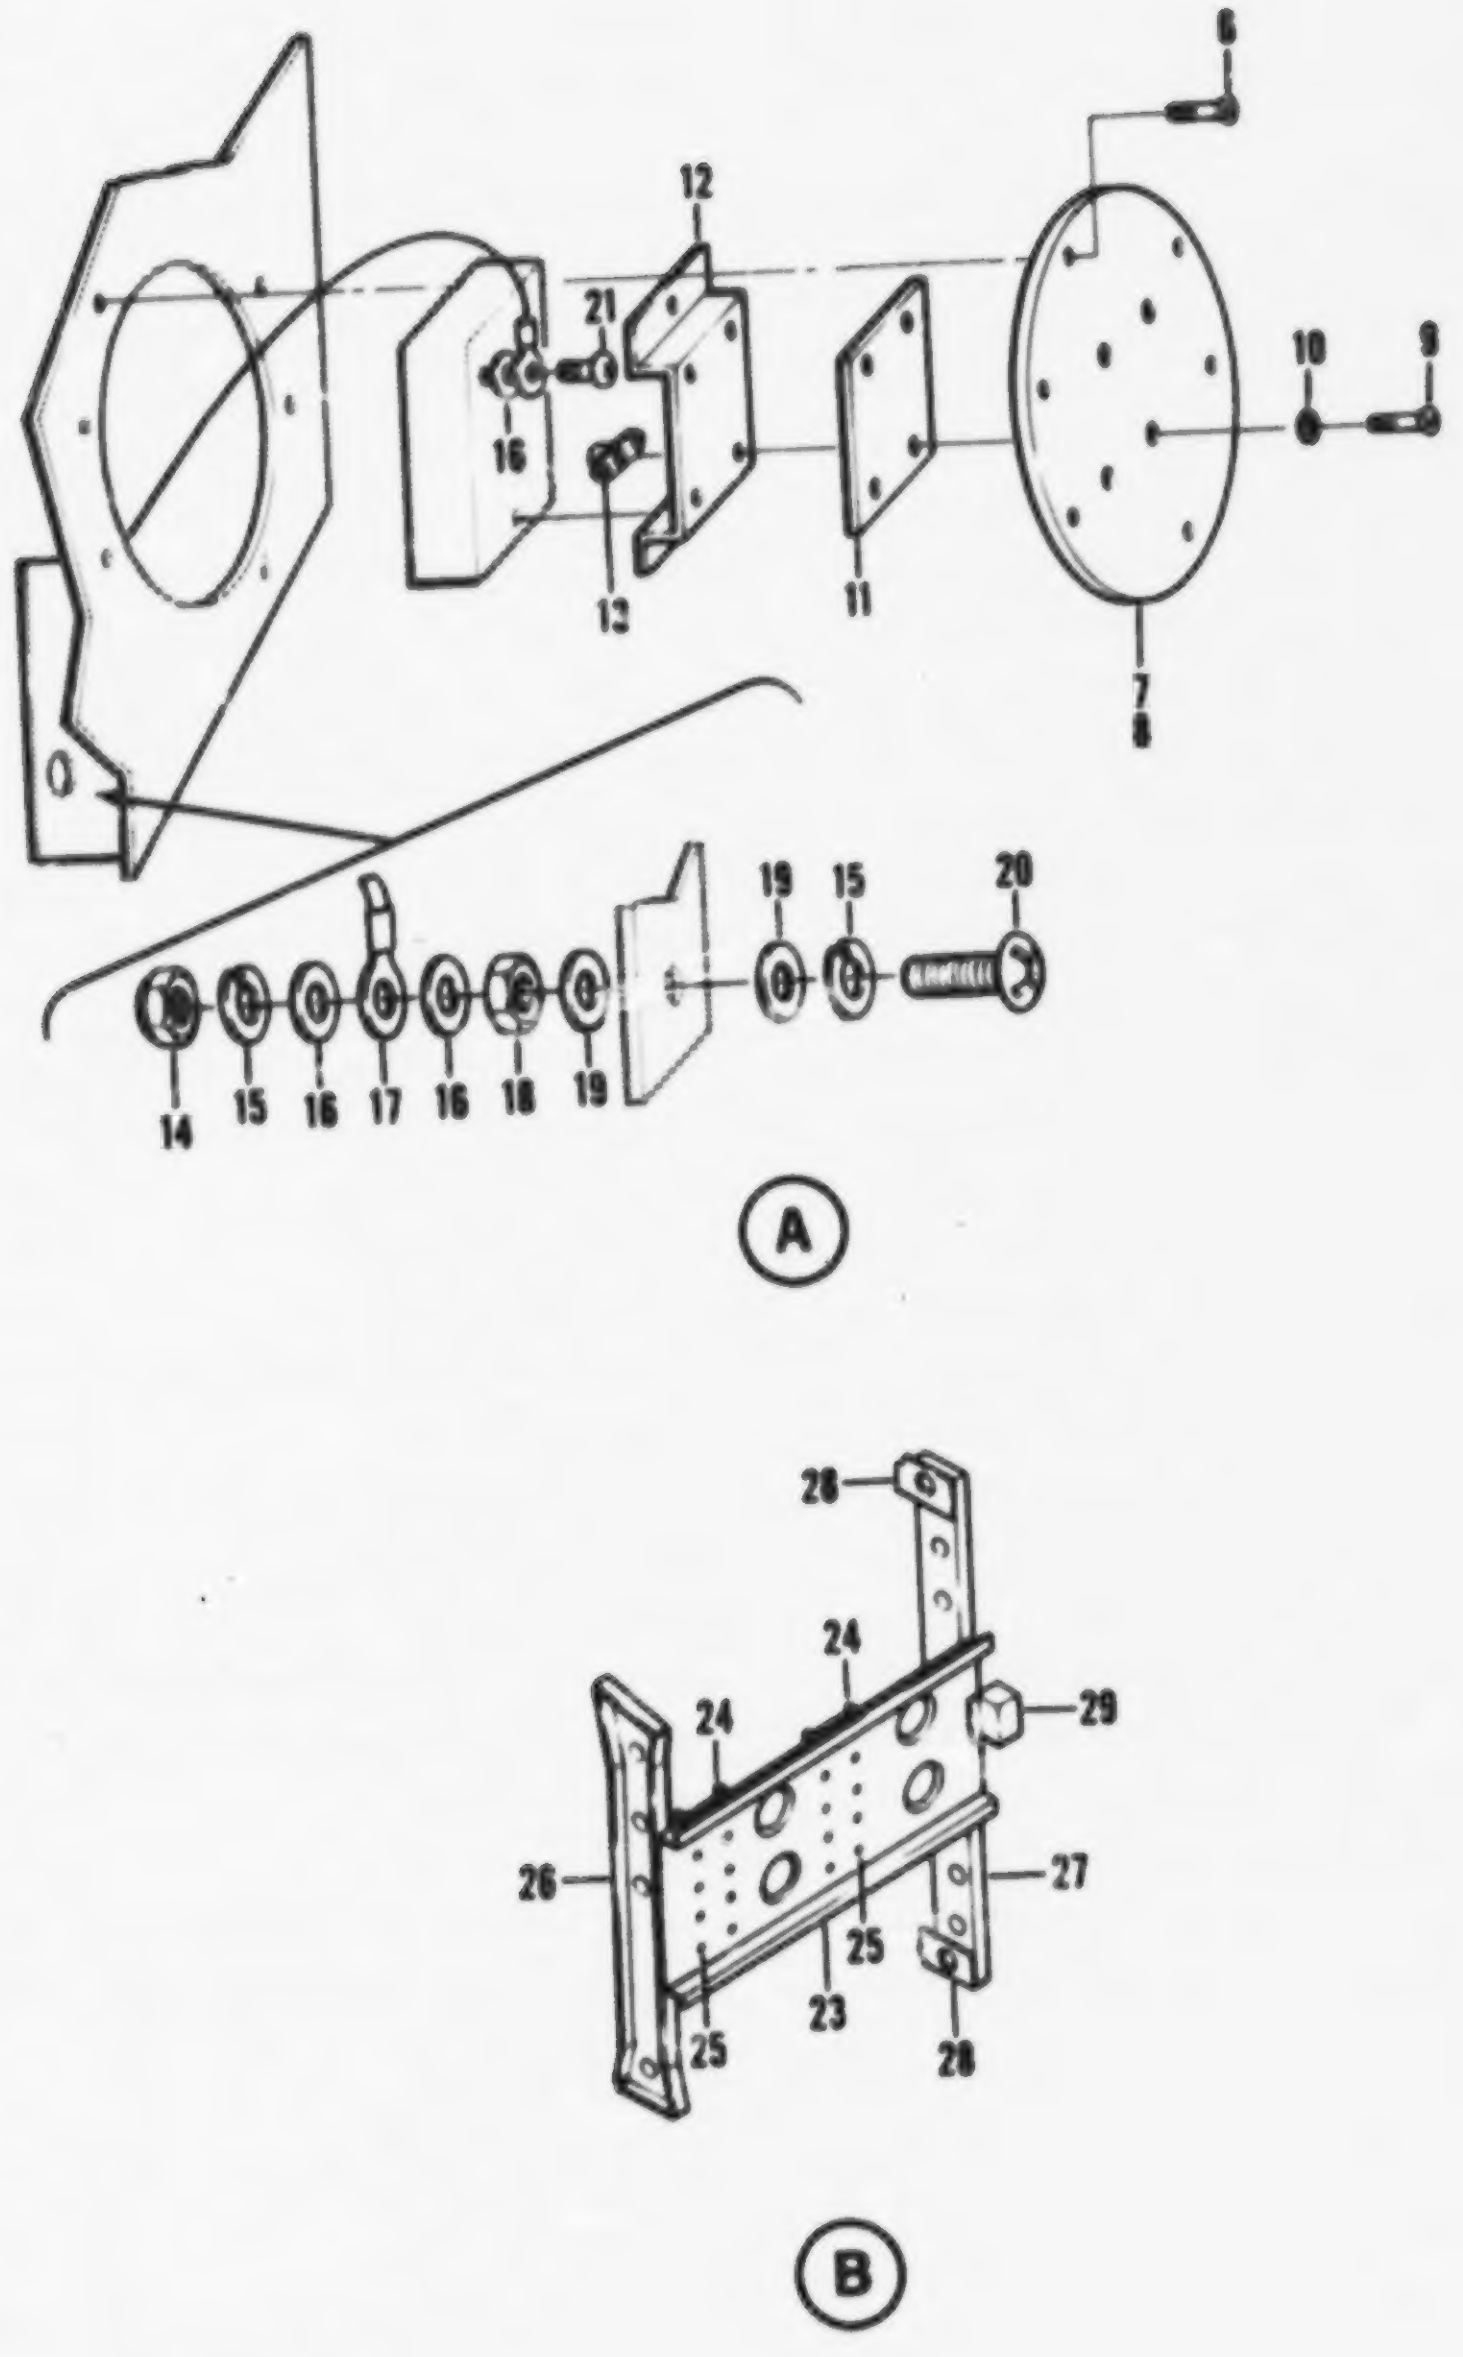
6
12
21
16
12
10
9
11
7
8
19
15
20
14
15
16
17
16
18
19
A
28
24
24
29
26
27
25
25
23
28
25
B

Figure 16A. Tailboom Quick Fix 1A (Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
16A		MDODD		20309	ES-F-220395	TAILBOOM INSTL SEE FIG.5A FOR NHA FOR CONTINUATION OF BREAKDOWN SEE FIG.16...............UHE,UHX	EA	1
16A	1	XCFZZ		20309	ES-F-220125	.ANTENNA GROUP, OE-202/ARQ 33 SEE FIG.16B FOR BREAKDOWN ....UHE,UHX	EA	1
16A	2	XCFZZ		20309	ES-F-220128	.ANTENNA SUPPORT INSTL SEE FIG.16C FOR BREAKDOWN.....UHF,UHX	EA	1
16A	3	XCFZZ		20309	ES-F-220386	.ANTENNA CRADLE INSTL SEE FIG.16D FOR BREAKDOWN......UHE,UHX	EA	1
16A	4	XCFZZ		20309	ES-F-220109	.ANTENNA INSTL APR 39 SEE FIG 16E FOR BREAKDOWN......UHE,UHX	EA	1
16A	5	XCFZZ		20309	ES-F-220316	.RECEIVER INSTL R-1838/APR 39(V).......................UHE,UHX	EA	1
16A	6	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	..SCREW,MACHINE..UHE,UHX	EA	6
16A	7	MFOZZ		20309	ES-C-221217	..COVER,ACCESS-RH......................................UHE,UHX	EA	1
16A	8	PAOZZ	1560-00-994-5809	97499	205-030-899-51	..COVER,ACCESS...UHM,UHV	EA	1
16A	9	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE..UHE,UHX	EA	4
16A	10	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..UHE,UHX	EA	4
16A	11	MFOZZ		20309	ES-B-220103	..PLATE..UHE,UHX	EA	1
16A	12	XDOZZ		20309	ES-C-220105	..MOUNT ASSEMBLY.......................................UHE,UHX	EA	1
16A	13	PAOZZ	5310-00-772-3720	96906	MS21075L3	...NUT,SELF-LOCKING....................................UHE,UHX	EA	4
16A	14	PAOZZ	5310-00-877-5797	96906	MS21044N3	..NUT,SELF-LOCKING.....................................UHE,UHX	EA	1
16A	15	PAOZZ	5310-00-045-3296	96906	MS35338-43	..WASHER,LOCK..UHE,UHX	EA	2
16A	16	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT..UHE,UHX	EA	3
16A	17	MFOZZ		20309	ES-B-220309-2	..JUMPER CABLE...UHE,UHX	EA	1
16A	18	PAOZZ	5310-00-934-9751	96906	MS35650-302	..NUT,PLAIN..UHE,UHX	EA	1
16A	19	PAOZZ	5310-00-183-4406	88044	AN960D10	..WASHER,FLAT..UHE,UHX	EA	2
16A	20	PAOZZ	5305-00-995-3444	96906	MS35207-266	..SCREW,MACHINE..UHE,UHX	EA	1
16A	21	PAOZZ	5305-00-990-6444	96906	MS35207-261	..SCREW,MACHINE..UHE,UHX	EA	1
16A	22	XCFZZ		20309	ES-F-220176	.SUPPORT INSTL APN-171.................................UHE,UHX	EA	1
16A	23	XDOZZ		20309	ES-D-220179	..SUPPORT ASSEMBLY.....................................UHE,UHX	EA	1
16A	24	MFOZZ		20309	ES-D-220179-3	...STIFFENER...UHE,UHX	EA	2
16A	25	PAOZZ	5310-00-772-3720	96906	MS21075L3	...NUT,SELF-LOCKING....................................UHE,UHX	EA	16
16A	26	XDOZZ		20309	ES-C-220177	..CHANNEL..UHE,UHX	EA	1
16A	27	XDOZZ		20309	ES-C-220178	..CHANNEL..UHE,UHX	EA	1
16A	28	MFOZZ		20309	ES-B-220306	..PLATE,STRUCTURAL.....................................UHE,UHX	EA	2
16A	29	XDOZZ		20309	ES-C-220180	..BRACKET ASSEMBLY.....................................UHE,UHX	EA	1
16A	30	PBOZZ	1560-01-074-5348	20309	ES-D-213078	.COVER,REPLACEMENT,A AS-1703/AR........................UHE,UHX	EA	1
16A	31	PAOZZ	5305-00-180-0009	88044	AN525-10R7	.SCREW,MACHINE...UHE,UHX	EA	47
16A	32	XDOZZ		20309	ES-C-220127-1	.COVER-LH..UHE,UHX	EA	1
16A	32	XDOZZ		20309	ES-C-220127-2	.COVER-RH..UHE,UHX	EA	1
16A	33	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE...UHE,UHX	EA	30
16A	34	PAOZZ	5305-00-180-0011	88044	AN525-10R9	.SCREW,MACHINE...UHE,UHX	EA	6

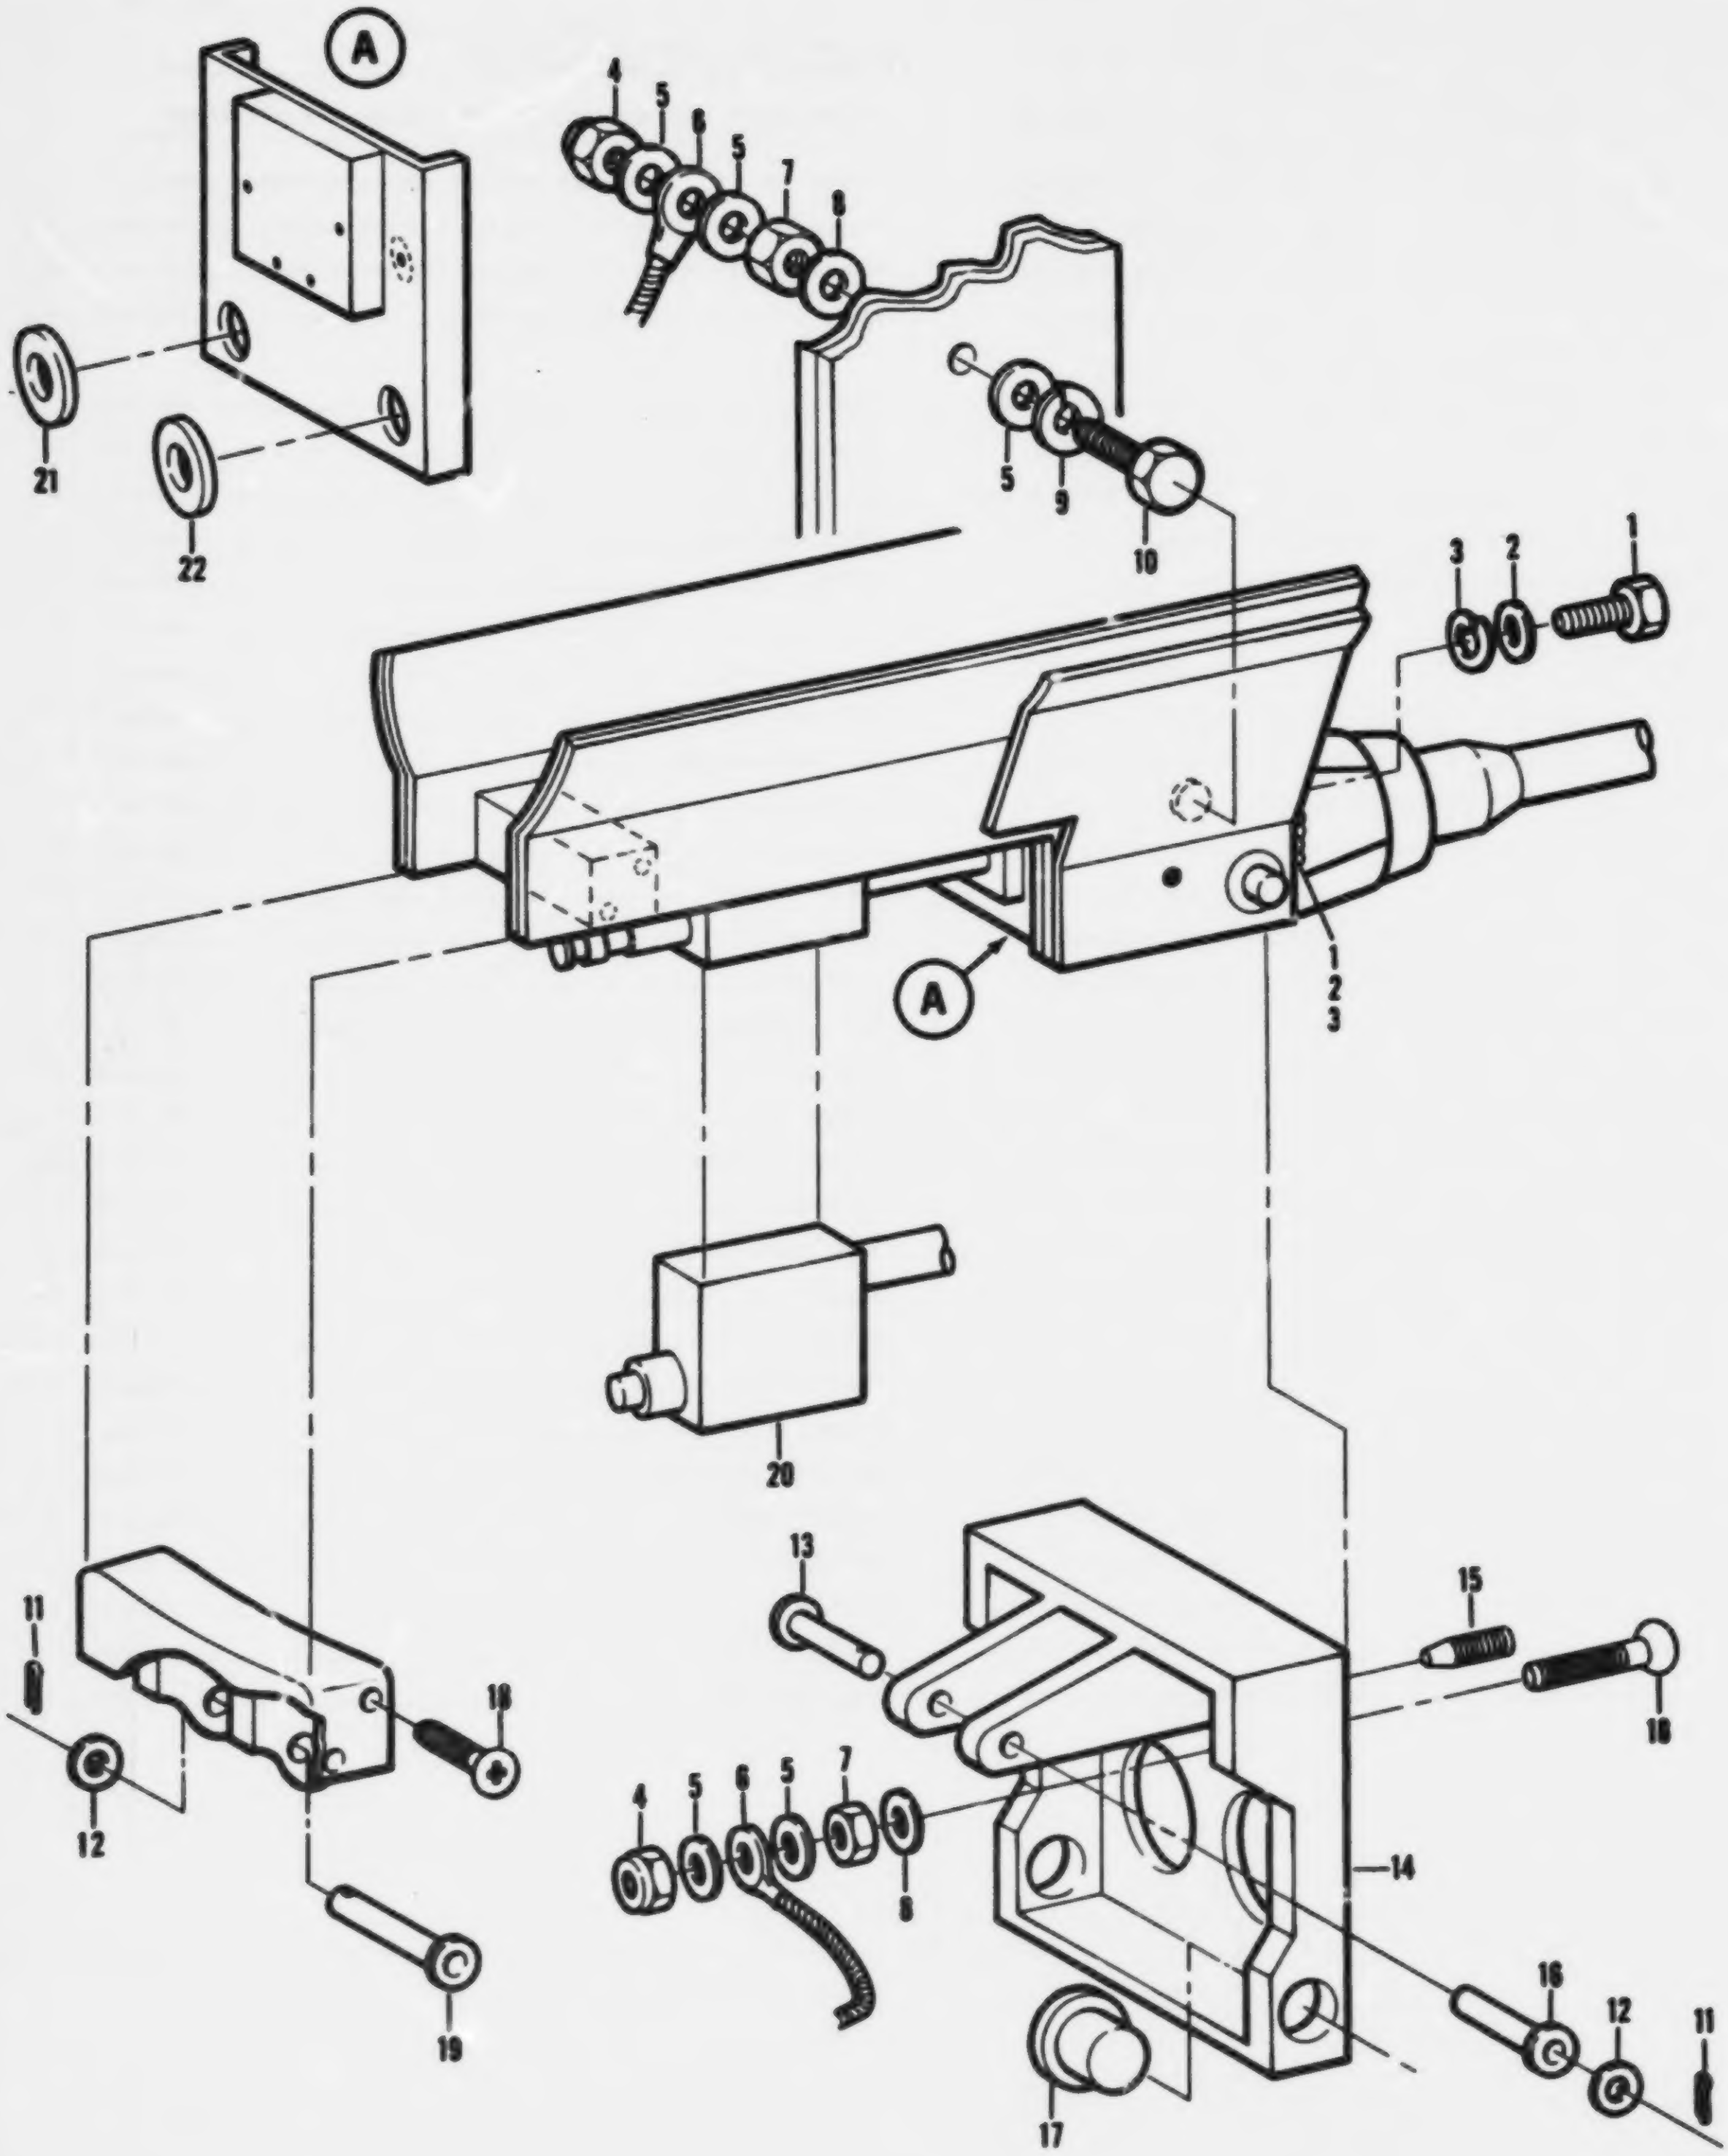
A
4
5
6
5
7
8
21
22
5
9
10
3
2
1
2
3
A
20
13
15
11
18
18
4
5
6
5
7
8
14
12
19
16
12
11
17

Figure 16B. Antenna Group, OE-202/ARQ-33

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
16B		XCFZZ		20309	ES-F-220125	ANTENNA GROUP. SEE FIG.16A FOR NHA	UHE,UHX	EA	1
16B	1	PAOZZ	5306-01-058-3902	80205	NAS6203-8	.BOLT,SHEAR	UHE,UHX	EA	4
16B	2	PAOZZ	5310-00-880-5975	96906	MS15795-807	.WASHER,FLAT	UHE,UHX	EA	4
16B	3	PAOZZ	5310-00-933-8119	96906	MS35338-137	.WASHER,LOCK	UHE,UHX	EA	4
16B	4	PAOZZ	5310-00-902-6676	96906	MS21083N3	.NUT,SELF-LOCKING	UHE,UHX	EA	2
16B	5	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT	UHE,UHX	EA	10
16B	6	MFOZZ		20309	ES-B-220309-1	.BONDING JUMPER	UHE,UHX	EA	1
16B	7	PAOZZ	5310-00-934-9751	96906	MS35650-302	.NUT,PLAIN,HEXAGON	UHE,UHX	EA	2
16B	8	PAOZZ	5310-00-543-5933	96906	MS35333-73	.WASHER,LOCK	UHE,UHX	EA	2
16B	9	PAOZZ	5310-00-261-8278	96906	MS35338-100	.WASHER,LOCK	UHE,UHX	EA	1
16B	10	PAOZZ	5306-00-274-2119	88044	AN3-5A	.BOLT,MACHINE	UHE,UHX	EA	1
16B	11	PAOZZ	5315-00-234-1863	96906	MS24665-300	.PIN,COTTER	UHE,UHX	EA	2
16B	12	PAOZZ	5310-00-550-5054	96906	MS15795-809	.WASHER,FLAT	UHE,UHX	EA	2
16B	13	XDOZZ		20309	ES-B-220215-3	.PIN,STRAIGHT,HEADED	UHE,UHX	EA	1
16B	14	XDOOO		20309	ES-F-220141	.CLEVIS ASSEMBLY	UHE,UHX	EA	1
16B	15	PAOZZ	5340-00-290-4497	96906	MS124735	..INSERT,SCREW THREAD	UHE,UHX	EA	4
16B	16	PAOZZ	3120-01-070-5285	20309	ES-B-212806-2	..BUSHING,SLEEVE	UHE,UHX	EA	2
16B	17	PAOZZ	3120-01-070-5284	20309	ES-B-220447	..BUSHING,SLEEVE	UHE,UHX	EA	2
16B	18	PAOZZ		96906	MS24693-S53	.SCREW	UHE,UHX	EA	1
16B	19	XDOZZ		20309	ES-B-220215-4	.PIN,STRAIGHT,HEADED	UHE,UHX	EA	1
16B	20	PAODD	1620-00-987-9635	17511	DL1326M31	.ACTUATOR,ELECTRO-ME	UHE,UHX	EA	1
16B	21	PAOZZ	5325-00-184-9846	96906	MS35489-10	.GROMMET,NONMETALLIC	UHE,UHX	EA	1
16B	22	PAOZZ	5325-00-276-6228	96906	MS35489-9	.GROMMET,NONMETALLIC	UHE,UHX	EA	2

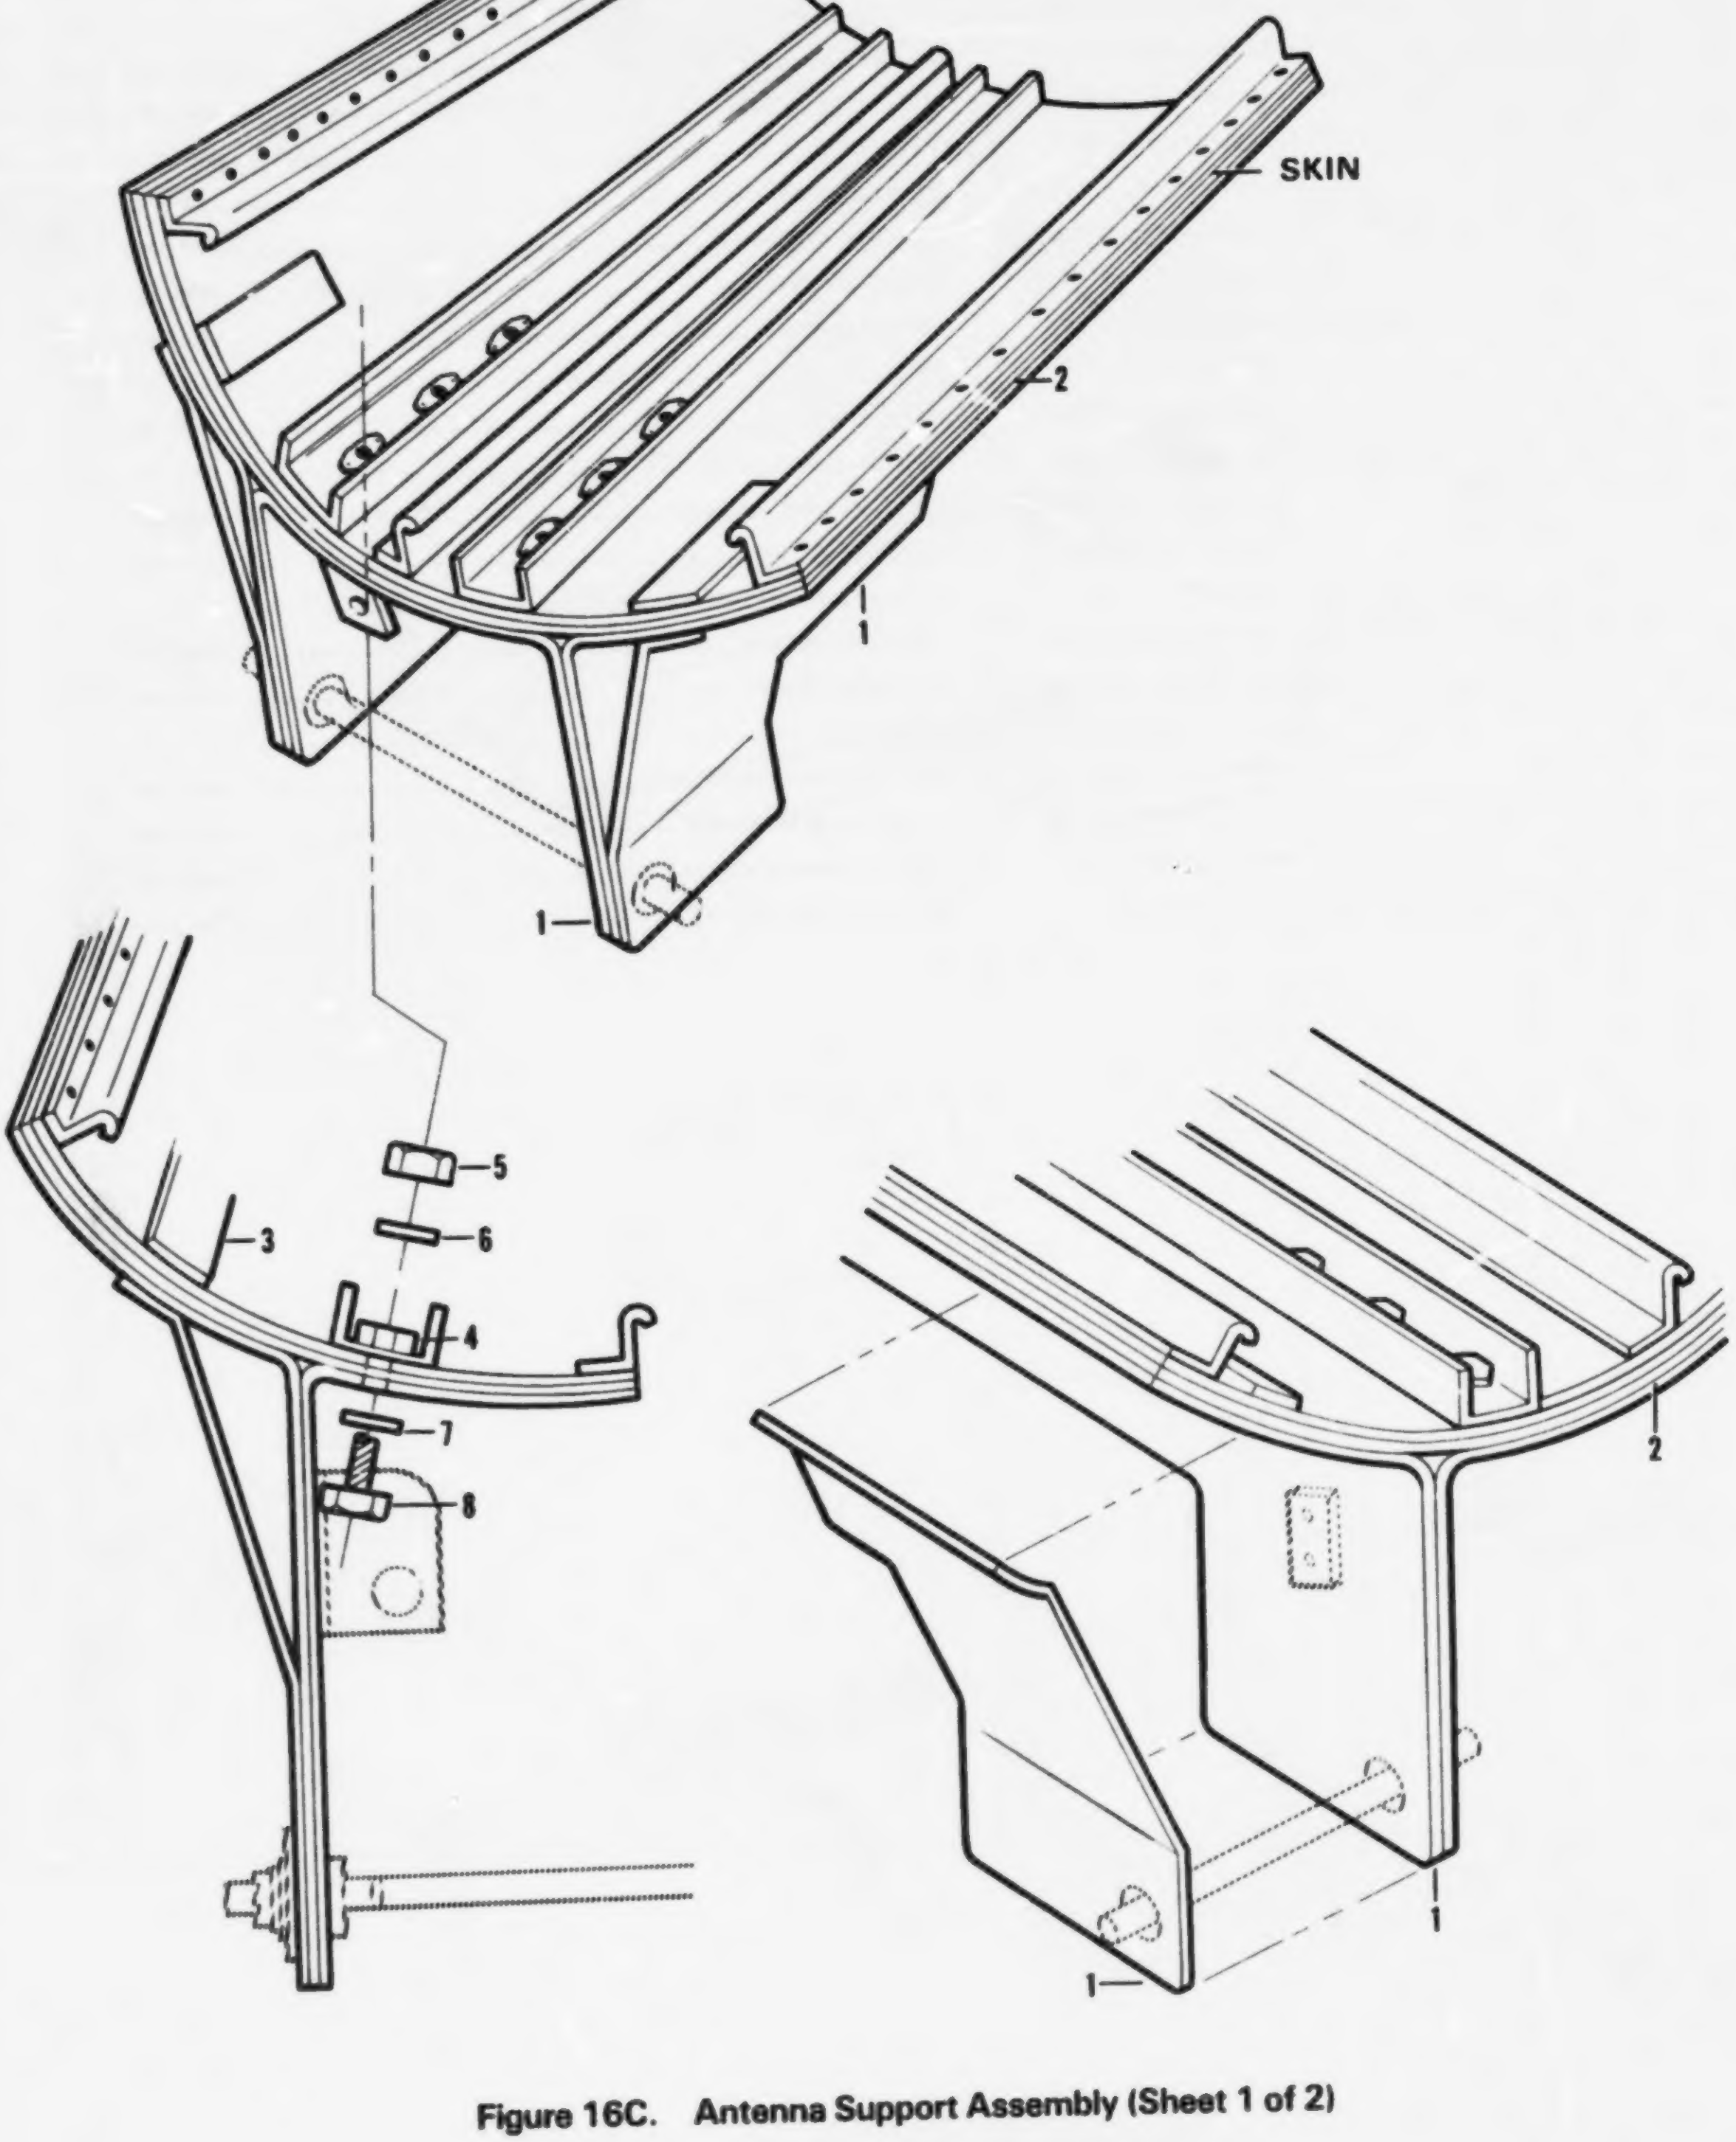
SKIN
2
1
1
5
6
3
4
7
8
2
1
1

Figure 16C. Antenna Support Assembly (Sheet 1 of 2)

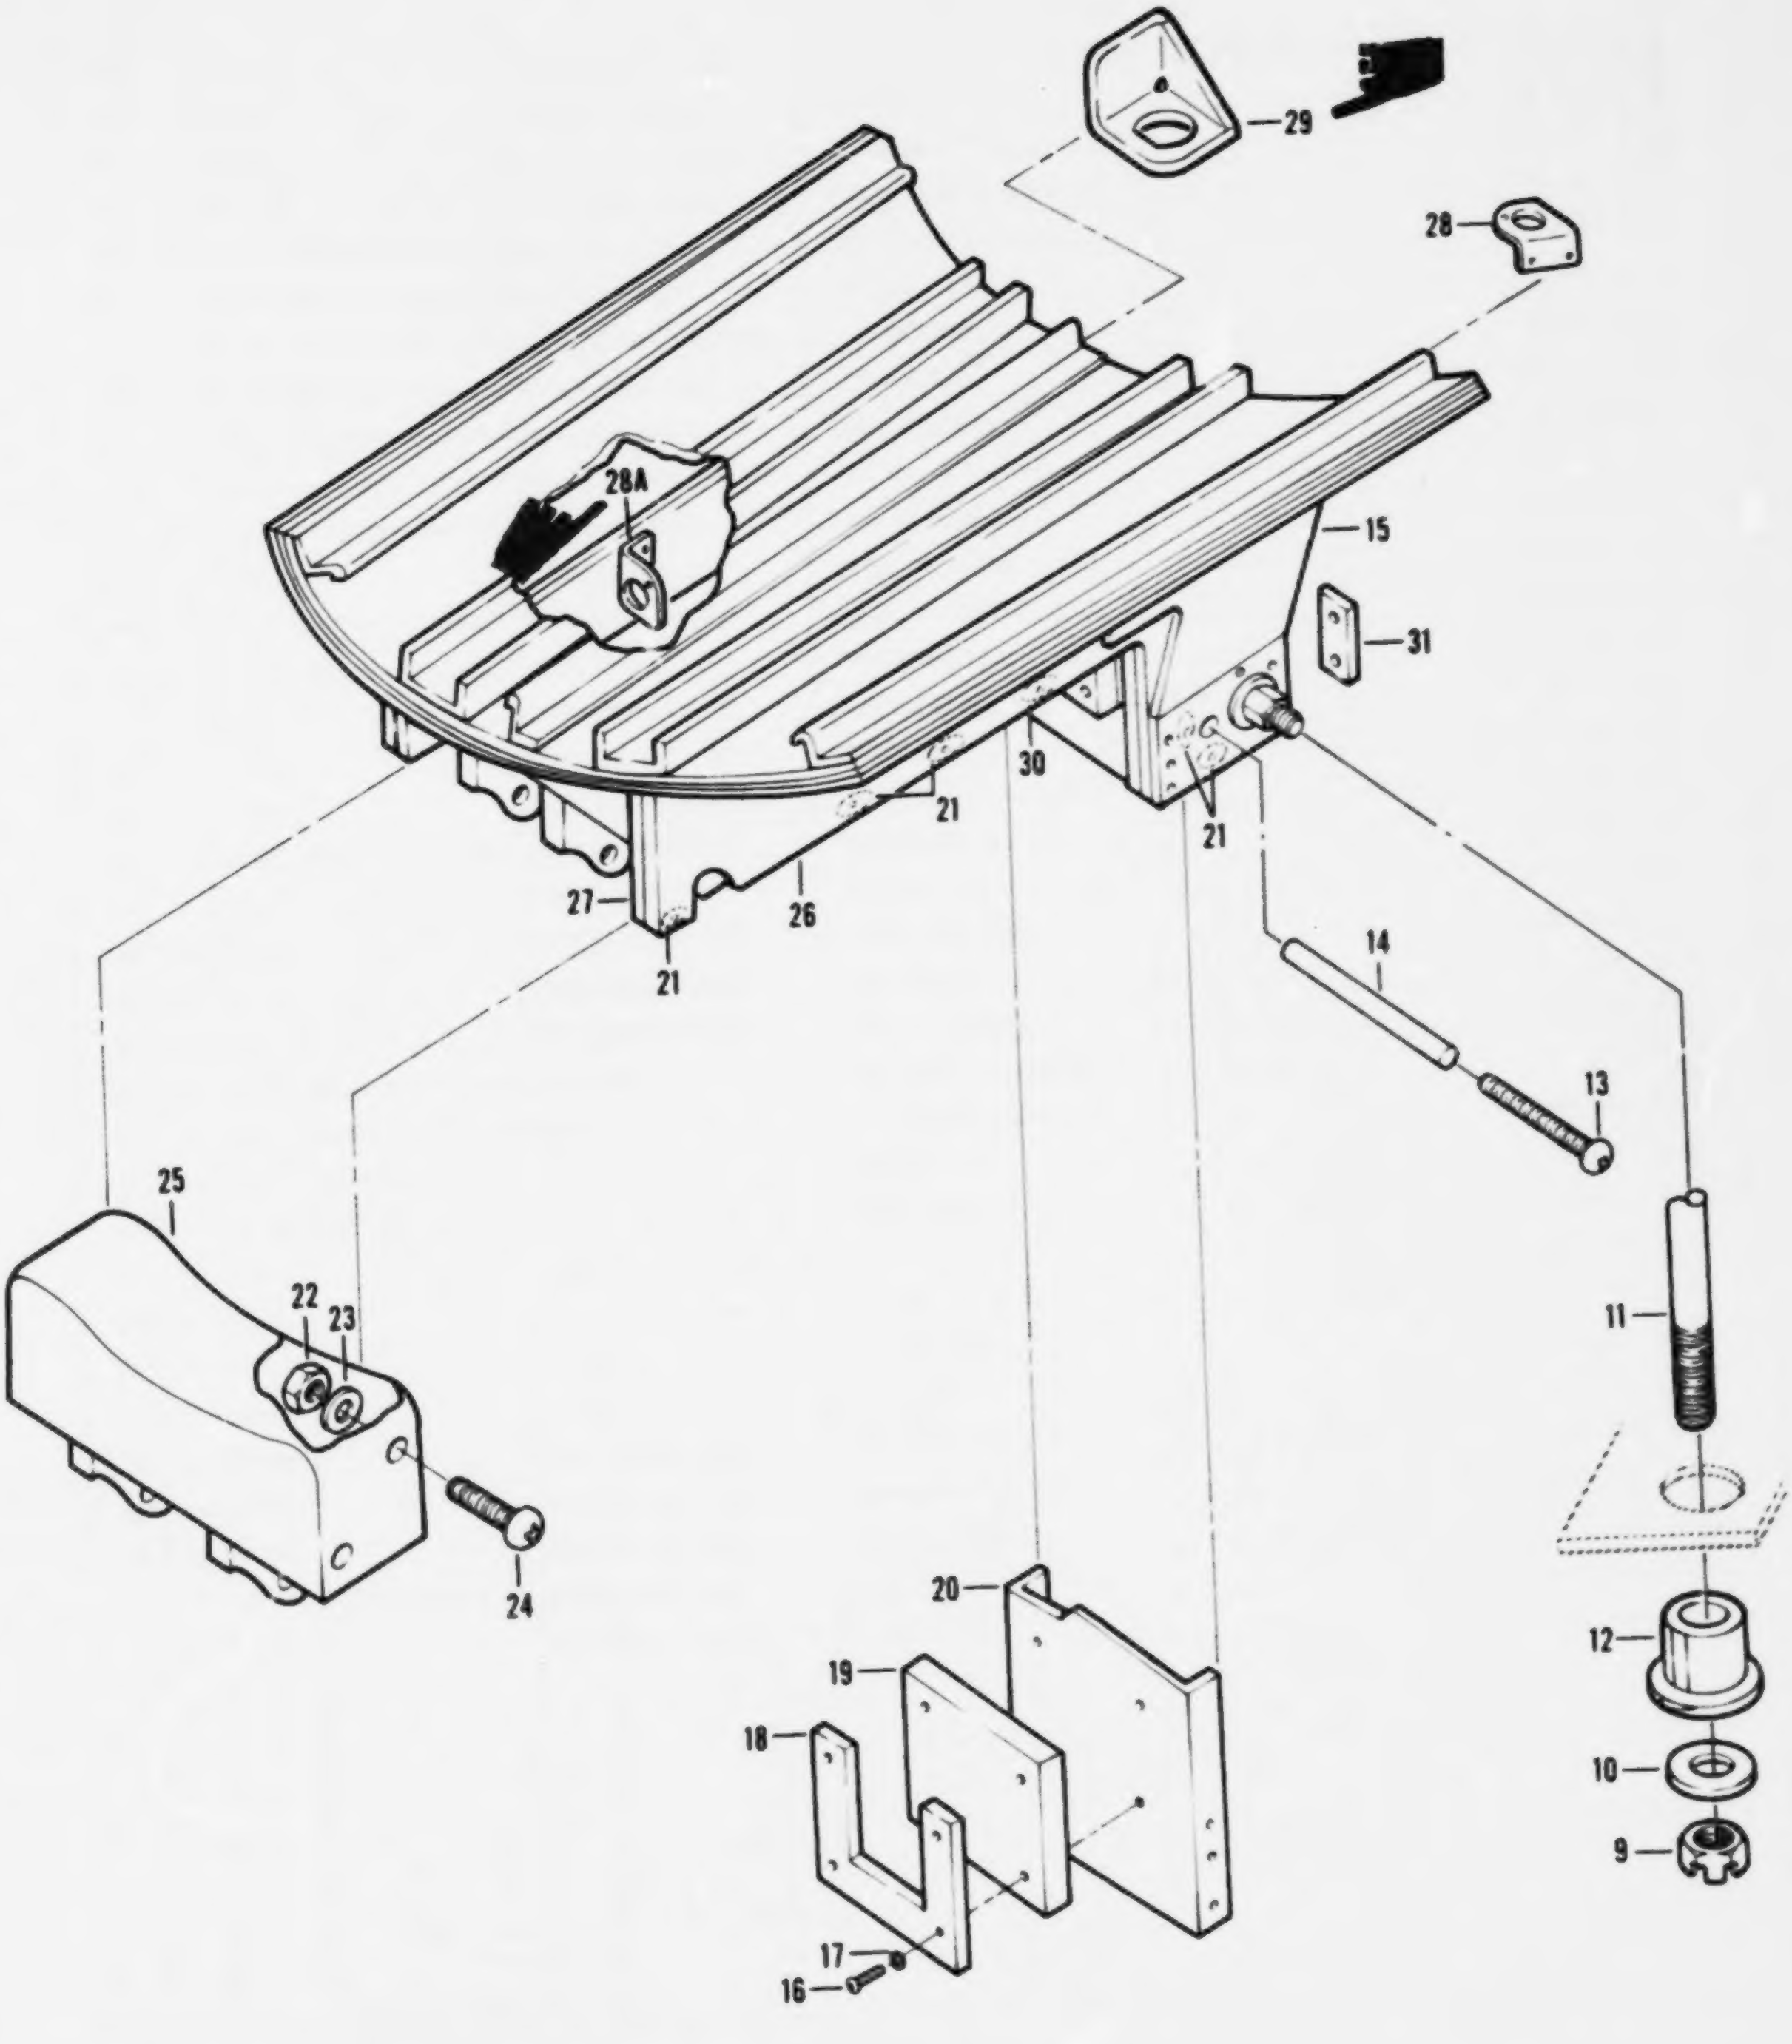
29
28
28A
15
31
30
21
21
21
27
26
21
14
13
25
22
23
11
24
20
12
19
18
10
9
17
16

Figure 16C. Antenna Support Assembly (Sheet 2 of 2)

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
16C		XCFZZ		20309	ES-F-220128	ANTENNA SUPPORT INSTL. SEE FIG. 16A FOR NHA	UHE,UHX	EA	1
16C	1	XDFFF		20309	ES-F-212942	.SUPPORT ASSEMBLY	UHE,UHX	EA	1
16C	2	XDFFF		20309	ES-F-212896	.PLATE,REINFORCEMENT	UHE,UHX	EA	1
16C	3	MFFZZ		20309	ES-B-220383	.STRIP,REINFORCEMENT	UHE,UHX	EA	2
16C	4	PAFZZ	5310-00-764-7282	96906	MS21047L3	.NUT,SELF-LOCKING,PL	UHE,UHX	EA	6
16C	5	PAFZZ	5310-00-915-8098	15653	H19300-3	.NUT,SELF-LOCKING,EX	UHE,UHX	EA	2
16C	6	PAFZZ	5310-00-701-8579	89372	HE114-0055-1001	.WASHER,CONCAVE	UHE,UHX	EA	2
16C	7	PAFZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT	UHE,UHX	EA	2
16C	8	PAFZZ	5306-00-151-0784	88044	AN3-10A	.BOLT,MACHINE	UHE,UHX	EA	2
16C	9	PAFZZ	5310-00-721-4434	88044	AN320C4	.NUT,PLAIN,SLOTTED,H	UHE,UHX	EA	2
16C	10	PAFZZ	5310-00-531-9515	88044	AN960C416	.WASHER,FLAT	UHE,UHX	EA	2
16C	11	XDFZZ		20309	ES-B-220367	.SHAFT,SHOULDER	UHE,UHX	EA	1
16C	12	PBFZZ	3120-01-070-5277	20309	ES-B-220366	.BUSHING ASSEMBLY	UHE,UHX	EA	2
16C	13	PAFZZ	5305-00-984-7363	96906	MS35191-272	.SCREW,MACHINE	UHE,UHX	EA	1
16C	14	XDFZZ		20309	ES-B-212923	.SPACER,ROD	UHE,UHX	EA	1
16C	15	XDFZZ		20309	ES-F-212942-1	.BRACE RH	UHE,UHX	EA	1
16C	15	XDFZZ		20309	ES-F-212942-2	.BRACE LH	UHE,UHX	EA	1
16C	16	PAFZZ	5305-00-889-3001	96906	MS35206-231	.SCREW,MACHINE	UHE,UHX	EA	4
16C	17	PAFZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT	UHE,UHX	EA	4
16C	18	MFFZZ		20309	ES-B-220301	.PLATE,RETAINER	UHE,UHX	EA	1
16C	19	MFFZZ		20309	ES-B-220258	.PAD,RUBBER	UHE,UHX	EA	1
16C	20	XDFZZ		20309	ES-D-212947	.BRACKET ASSEMBLY	UHE,UHX	EA	1
16C	21	PAFZZ	5310-00-777-5791	96906	MS21059L3	.NUT,SELF-LOCKING,PL	UHE,UHX	EA	10
16C	22	PAFZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING,HE	UHE,UHX	EA	4
16C	23	PAFZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT	UHE,UHX	EA	4
16C	24	PAFZZ	5305-00-719-5402	96906	MS24694S53	.SCREW,MACHINE	UHE,UHX	EA	4
16C	25	XDFZZ		20309	ES-D-212948	.CLEVIS	UHE,UHX	EA	1
16C	26	XDFZZ		20309	ES-F-212942-3	.PLATE, SIDE RH	UHE,UHX	EA	1
16C	26	XDFZZ		20309	ES-F-212942-4	.PLATE,SIDE LH	UHE,UHX	EA	1
16C	27	XDFZZ		20309	ES-F-212942-5	.SUPPORT	UHE,UHX	EA	1
16C	28	MFFZZ		20309	ES-B-212944-1	.BRACKET,ANGLE-RH	UHE,UHX	EA	1
16C	28A	MFFZZ		20309	ES-B-212944-2	.BRACKET,ANGLE-LH	UHE,UHX	EA	1
16C	29	MFFZZ		20309	ES-B-212943	.BRACKET,ANGLE	UHE,UHX	EA	1
16C	30	PAFZZ	5310-00-905-5473	80205	NAS1474A3	.NUT,SELF-LOCKING,PL	UHE,UHX	EA	2
16C	31	XDFZZ		20309	ES-B-220296	.NAME PLATE	UHE,UHX	EA	1

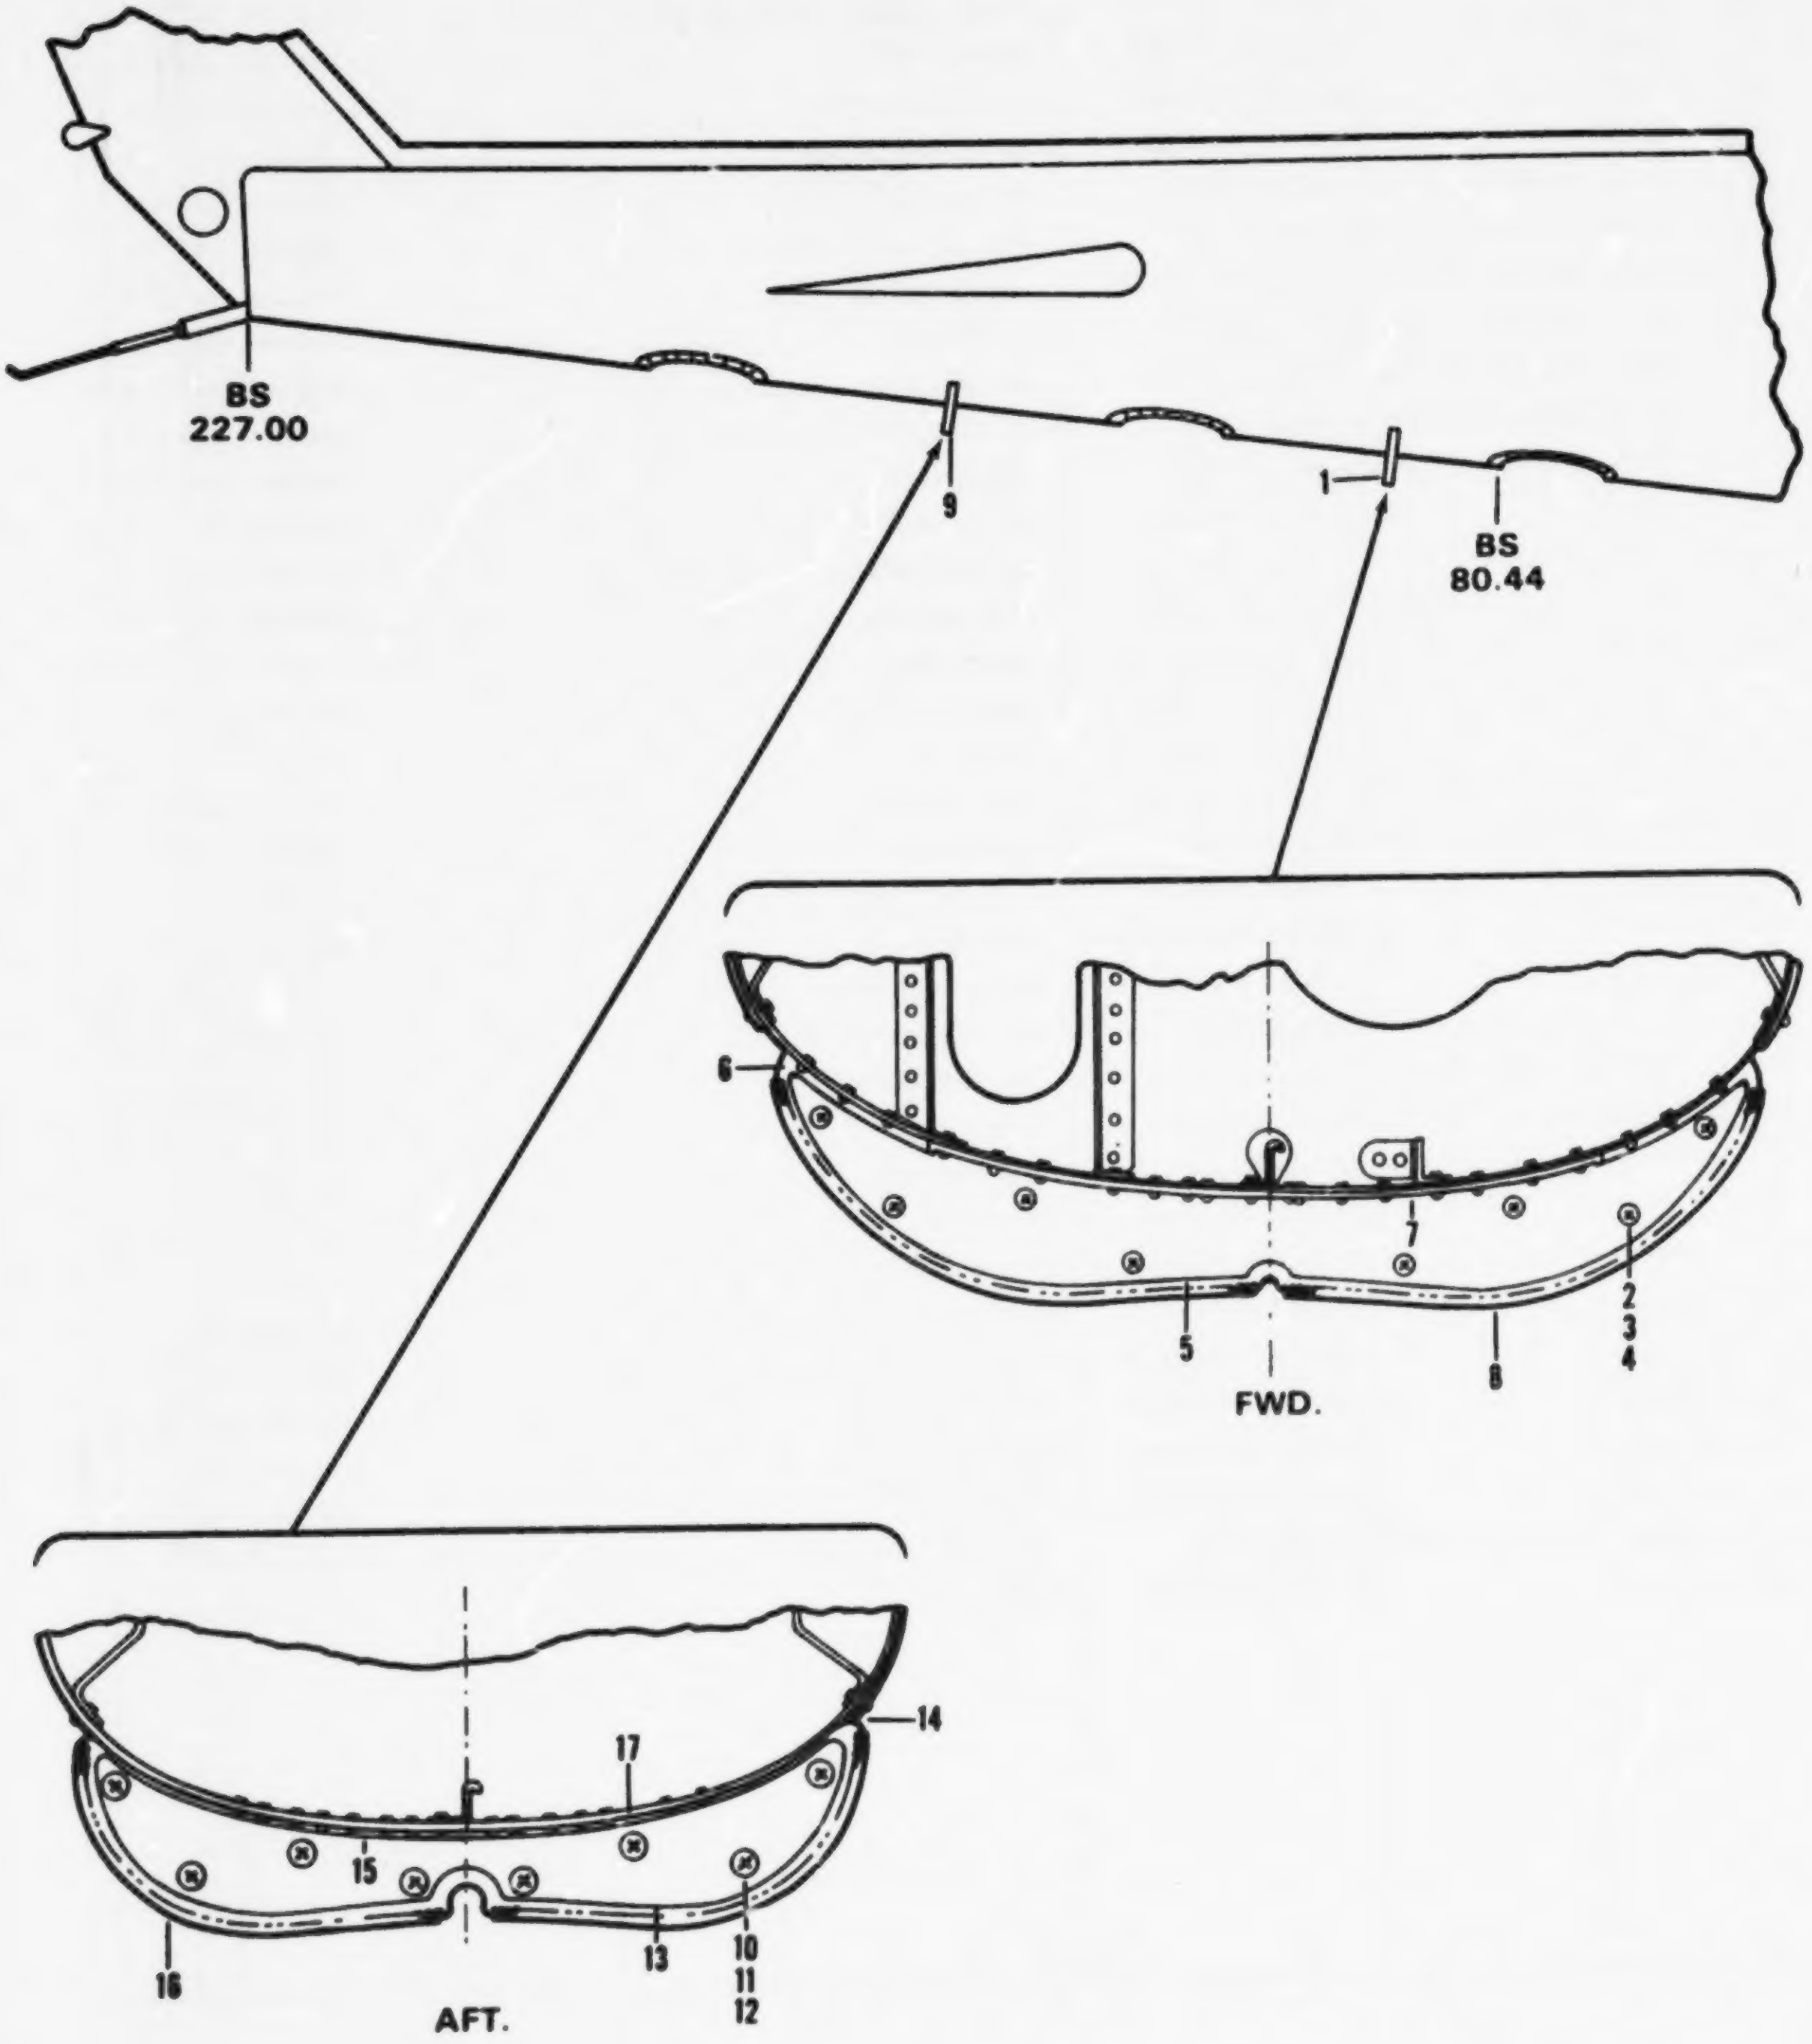
BS
227.00
9
1
BS
80.44
6
7
2
3
4
5
8
FWD.
14
17
15
16
13
10
11
12
AFT.

Figure 16D. Antenna Cradle Installation

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
16D		XCFZZ		20309	ES-F-220386	ANTENNA CRADLE INSTALLATION, SEE FIG.16A FOR NHA.....UHE,UHX	EA	1
16D	1	XDOOO		20309	FS-D-220325	.CRADLE ASSEMBLY,....................................UHE,UHX	EA	1
16D	2	PAOZZ	5310-00-811-3494	96906	MS21044N08	..NUT,SELF-LOCKING...................................UHE,UHX	FA	8
16D	3	PAOZZ	5310-00-184-9002	88044	AN960PD8L	..WASHER,FLAT..UHE,UHX	EA	16
16D	4	PAOZZ	5305-00-984-6195	96906	MS35206-247	..SCREW,MACHINE......................................UHE,UHX	EA	8
16D	5	MFOZZ		20309	ES-D-220324	..PLATE,ANTENNA MAST.................................UHE,UHX	EA	1
16D	6	MFOZZ		20309	ES-D-220323	..CRADLE,ANTENNA MAST................................UHE,UHX	EA	1
16D	7	MFOZZ		20309	ES-D-220322	..BRACKET,ANGLE......................................UHE,UHX	EA	1
16D	8	PAOZZ	5325-00-783-4754	96906	MS21266-5N	..GROMMET,NONMETALLIC................................UHE,UHX	EA	2
16D	9	XDOOO		20309	ES-D-212911	.CRADLE ASSEMBLY.....................................UHE,UHX	EA	1
16D	10	PAOZZ	5310-00-811-3494	96906	MS21044N08	..NUT,SELF-LOCKING...................................UHE,UHX	EA	9
16D	11	PAOZZ	5310-00-184-9002	88044	AN960PD8L	..WASHER,FLAT..UHE,UHX	FA	18
16D	12	PAOZZ	5305-00-984-6195	96906	MS35206-247	..SCREW,MACHINE......................................UHE,UHX	EA	9
16D	13	MFOZZ		20309	ES-D-212914	..PLATE,ANTENNA MAST.................................UHE,UHX	EA	1
16D	14	MFOZZ		20309	ES-D-212913	..CRADLE,ANTENNA MAST................................UHE,UHX	EA	1
16D	15	MFOZZ		20309	ES-D-212912	..BRACKET ANGLE......................................UHE,UHX	EA	1
16D	16	PAOZZ	5325-00-783-4754	96906	MS21266-5N	..GROMMET,NONMETALLIC................................UHE,UHX	EA	2
16D	17	MFOZZ		20309	ES-B-220326	.PLATE,STRUCTURAL....................................UHE,UHX	EA	1

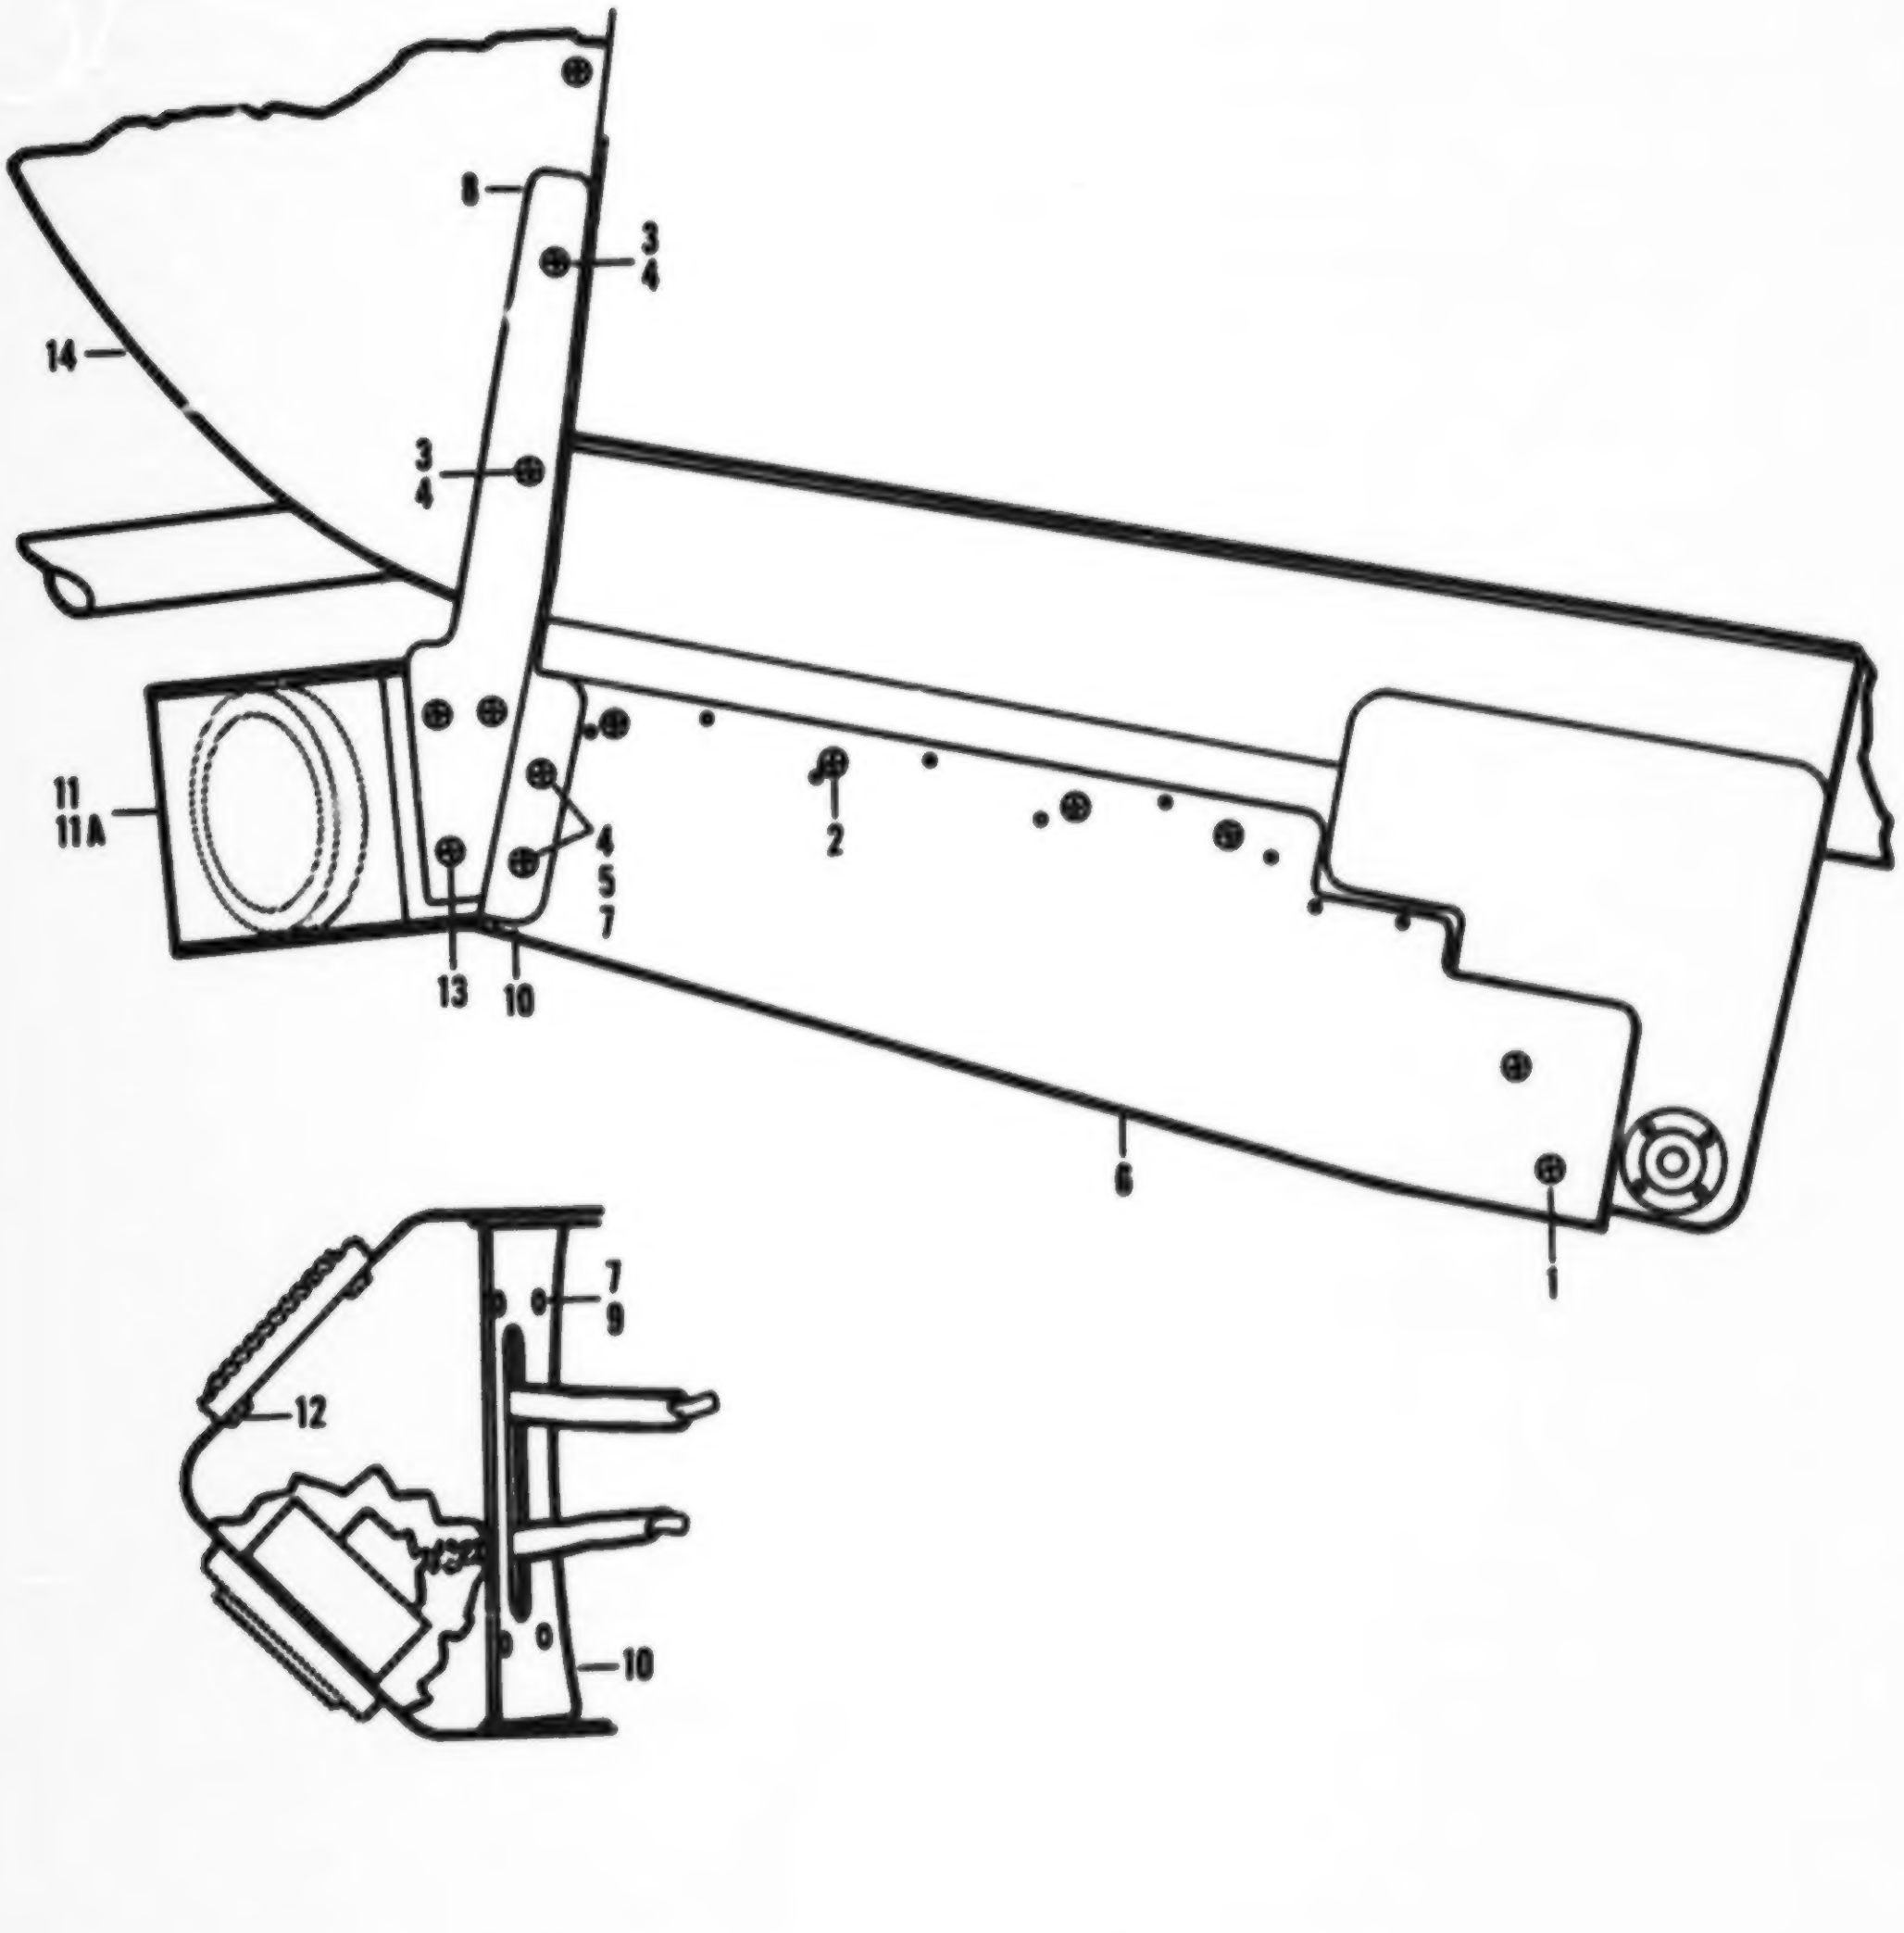
8
3
4
14
3
4
11
11A
13
10
2
4
5
7
6
1
7
9
12
10

Figure 16E. Antenna Installation AFT APR-39

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
16E		XCFZZ		20309	ES-F-220109	ANTENNA INSTALLATIO AFT APR-39, SEE FIG.16A FOR NHA ....UHE,UHX	EA	1
16E	1	PAOZZ	5305-00-180-0011	88044	AN525-10R9	.SCREW,MACHINE..........UHE,UHX	EA	4
16E	2	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE..........UHE,UHX	EA	8
16E	3	PAOZZ	5305-00-984-6193	96906	MS35206-245	.SCREW,MACHINE..........UHE,UHX	EA	4
16E	4	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT..........UHE,UHX	EA	14
16E	5	PAOZZ	5305-00-984-6192	96906	MS35206-244	.SCRFW,MACHINE..........UHE,UHX	EA	10
16E	6	XDOOO		20309	ES-F-212950	.COVER..........UHE,UHX	EA	1
16E	7	PAOZZ	5310-00-781-9493	96906	MS21075L06	..NUT,SELF-LOCKING..........UHE,UHX	EA	4
16E	8	PBOZZ	1560-01-074-1216	20309	ES-C-220108-1	.BRACKET,MTG,ANTENNA..........UHE,UHX	EA	1
16E	8	PBOZZ	1560-01-074-1215	20309	ES-C-220108-2	.BRACKET,MTG,ANTENNA..........UHE,UHX	EA	1
16E	9	PAOZZ	5305-00-957-7817	96906	MS24693526	.SCREW,MACHINE..........UHE,UHX	EA	4
16E	10	XDOZZ		20309	ES-C-220107	.PLATE..........UHE,UHX	EA	1
16E	11	PBOOD	1560-01-091-9232	20309	ES-F-220106	.SUPPORT,ANTENNA..........UHE,UHX	EA	1
16E	114	XAOZZ		20309	ES-F-220106-2	..PLATE,TOP..........UHE,UHX	EA	1
16E	12	PAOZZ	5310-00-761-4219	96906	MS21073L06	..NUT,SELF-LOCKING..........UHE,UHX	EA	8
16E	13	PAOZZ	5310-00-772-3721	96906	MS21075L08	..NUT,SELF-LOCKING..........UHE,UHX	EA	6
16E	14	MFOZZ		20309	ES-C-220385	.FAIRING,TAIL COVER..........UHE,UHX	EA	1

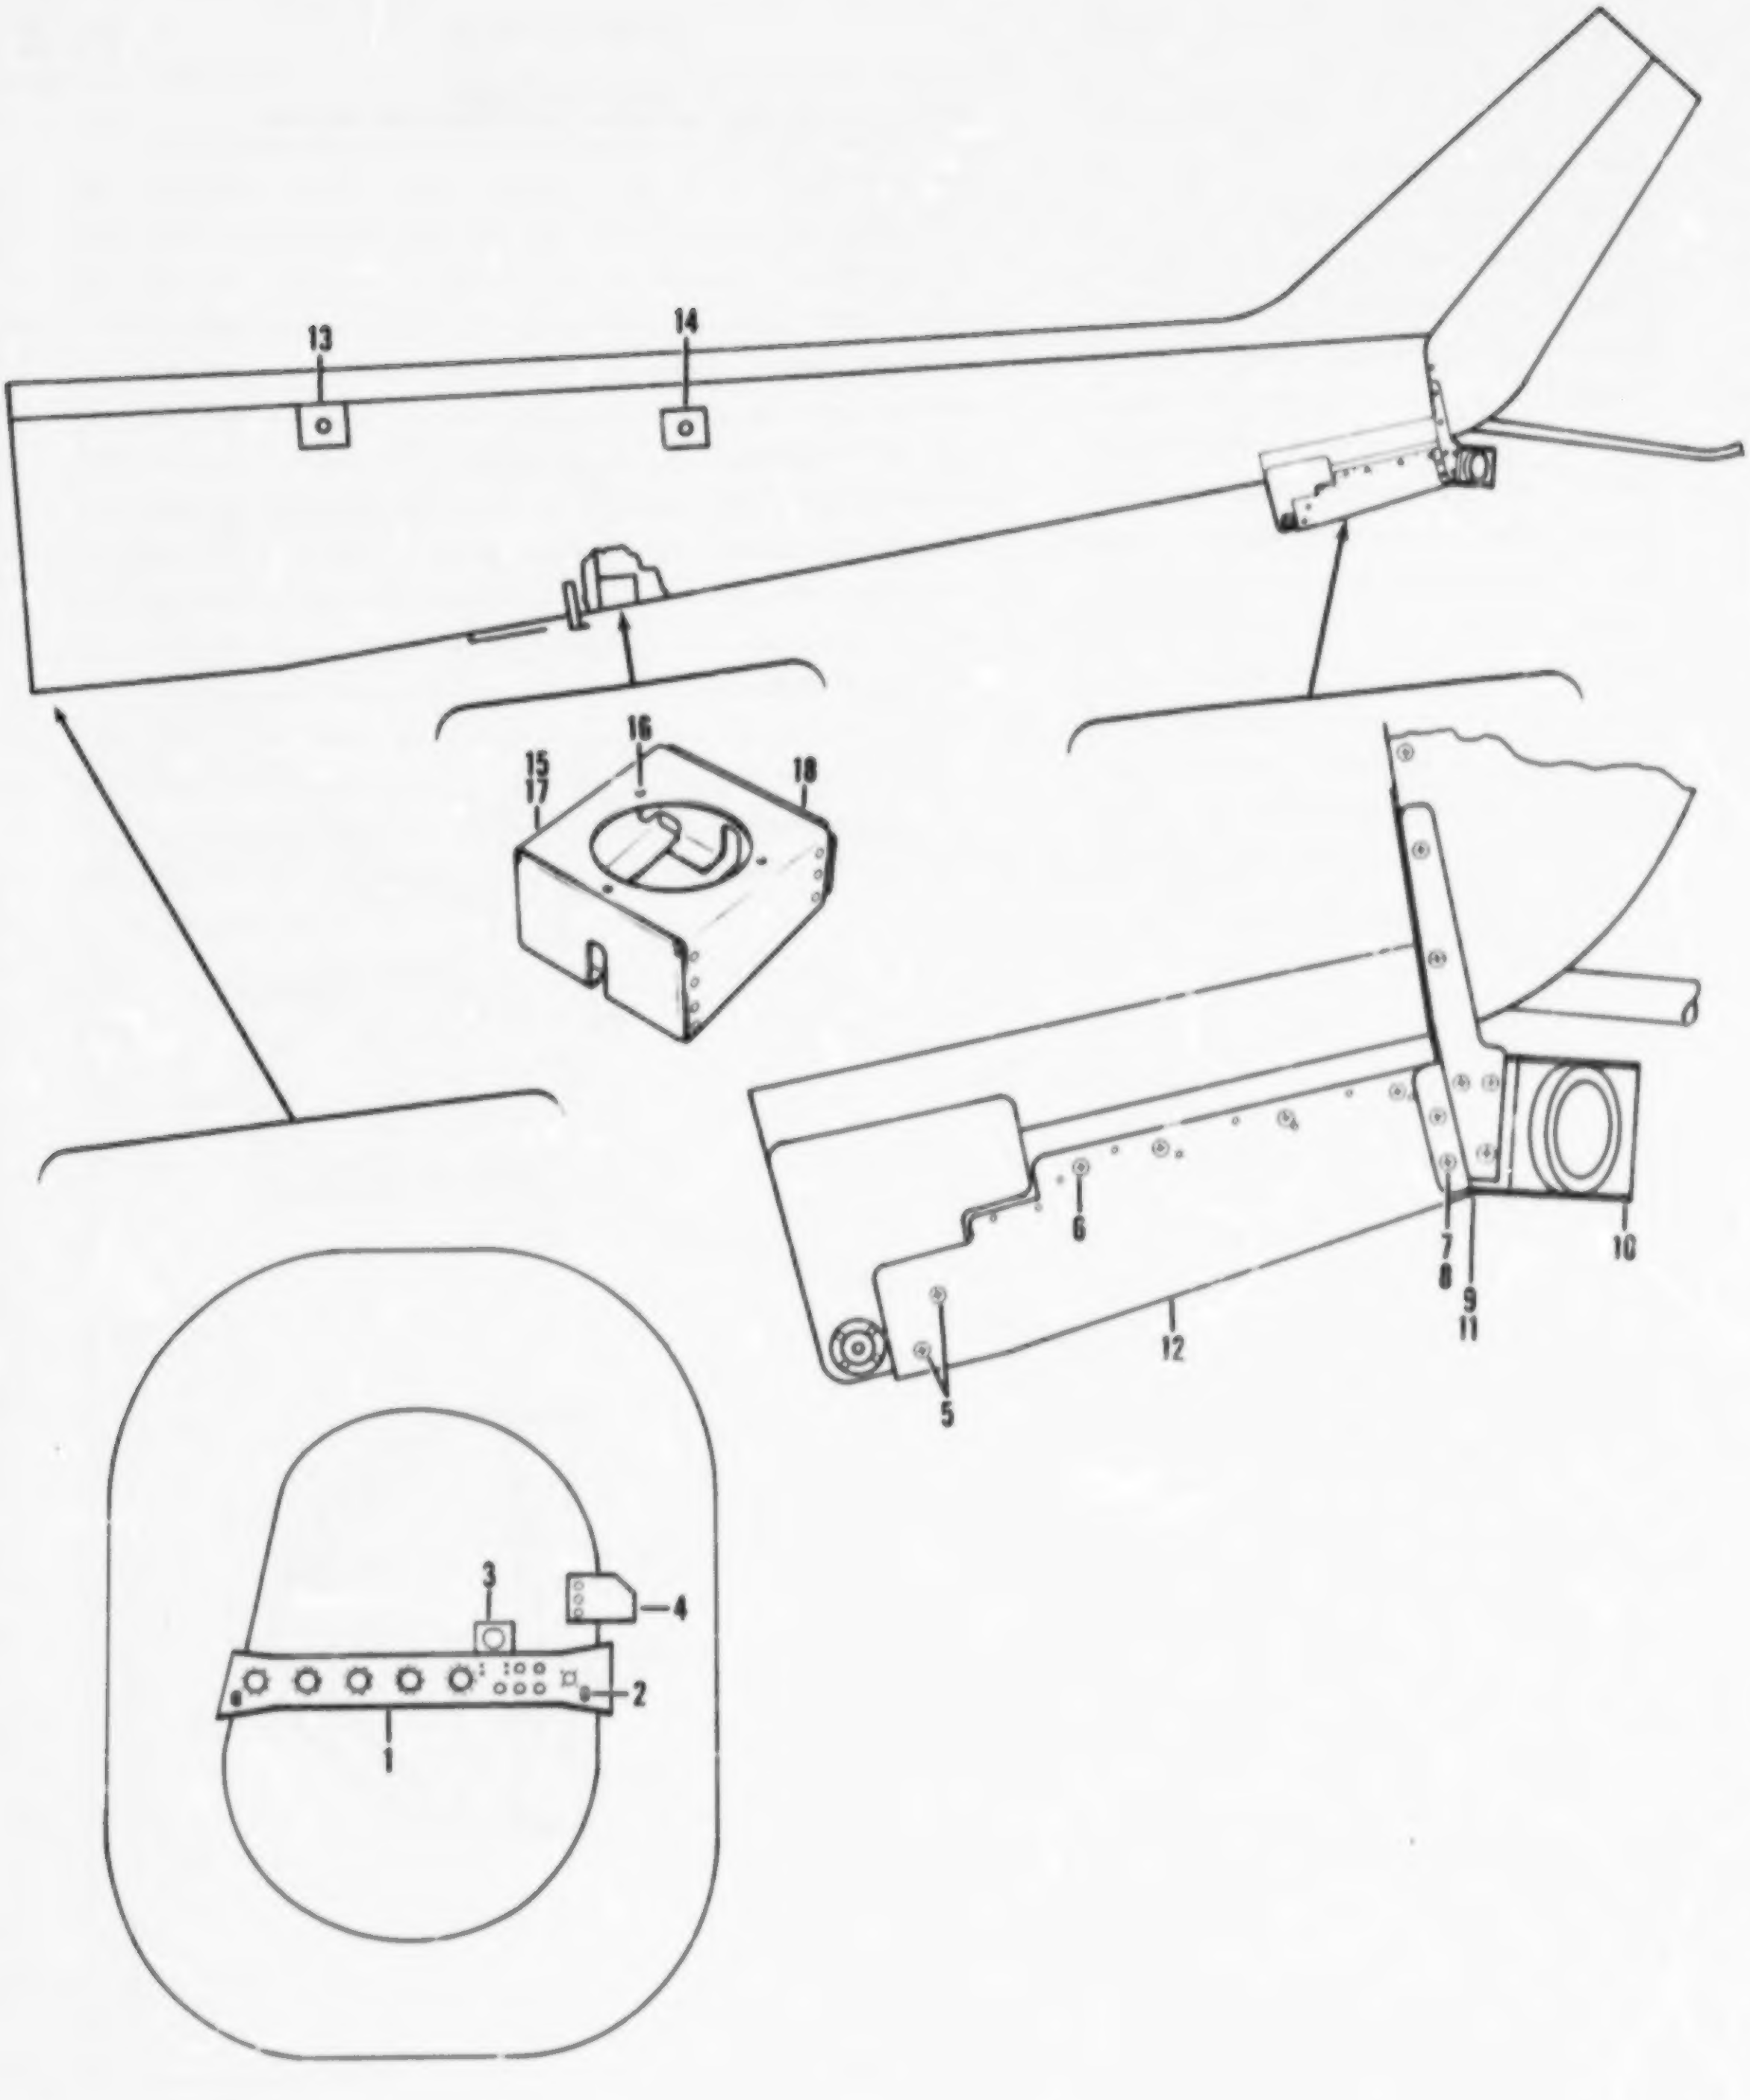
13
14
16
15
17
18
6
7
8
9
11
10
12
5
3
4
2
1

Figure 16F. Tailboom Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
16F		PAODD	1560-01-150-1486	20309	ES-F-221549	TAILBOOM ASSY SEE FIG.58 FOR NHA UHX	EA	1
16F		XCFZZ		20309	ES-D-221678	.CONNECTOR,MTG,INSTL UHX	EA	1
16F	1	XDOOO		20309	ES-D-221683	..MOUNT,CONNECTOR UHX	EA	1
16F	2	PAOZZ	5310-00-772-3720	96906	MS21075L3	...NUT,SELF-LOCKING, PLATE UHX	EA	2
16F	3	MFOZZ		20309	ES-C-221841	...BRACKET,TAILBOOM DI UHX	EA	1
16F	4	MFOZZ		20309	ES-C-221739	.BRACKET,ANGLE UHX	EA	1
16F		XCFZZ		20309	ES-F-221671	.PLATE,MTG ASSY AND INSTL (BITE ANT) SEE FIG. 16B FOR BREAKDOWN UHX	EA	1
16F		XCFZZ		20309	ES-F-220386	.ANTENNA CRADLE INSTL SEE FIG 16D FOR BREAKDOWN UHX	EA	1
16F		XCFZZ		20309	ES-F-220128	.ANTENNA SUPPORT INSTL SEE FIG.16C FOR BREAKDOWN UHX	EA	1
16F	5	PAOZZ	5305-00-180-0011	88044	AN525-10R9	.SCREW,MACHINE UHX	EA	4
16F	6	PAOZZ	5305-00-925-7857	88044	AN525-10R10	.SCREW,MACHINE UHX	EA	8
16F	7	PAOZZ	5305-00-984-5192	96906	MS35206-244	.SCREW,MACHINE UHX	EA	4
16F	8	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT UHX	EA	4
16F	9	PAOZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE UHX	EA	4
16F	10	PBOOO	1560-01-091-9232	20309	ES-F-220106	.SUPPORT,ANTENNA UHX	EA	1
16F	11	XDOZZ		20309	ES-C-220107	.PLATE,ANTENNA UHX	EA	1
16F	12	XDOOO		20309	ES-F-212950	.COVER ASSY ANTENNA SUPPORT UHX	EA	1
16F	13	XCFZZ		20309	5065694	.DF ANTENNA THROUGH STRUCTURE ASSY FWD SEE FIG.16H FOR BREAKDOWN UHX	EA	1
16F	14	XCFZZ		20309	5065693	.DF ANTENNA THROUGH STRUCTURE ASSY REAR SEE FIG.16J FOR BREAKDOWN UHX	EA	1
16F		XDOOO		20309	ES-F-221526	INSTL ATTITUDE HDG FOR AN/ASN 86 SEE FIG.224A FOR NHA UHX	EA	1
16F	15	XDOOO		20309	ES-D-221527	.MOUNT,DETECTOR UHX	EA	1
16F	16	PAOZZ	5310-00-728-9461	96906	MS21070L08	..NUT,SELF-LOCKING,PL UHX	EA	3
16F	17	XDOZZ		20309	ES-D-221527-1	..SIDE UHX	EA	1
16F	18	XDOZZ		20309	ES-D-221527-2	..FRONT UHX	EA	1

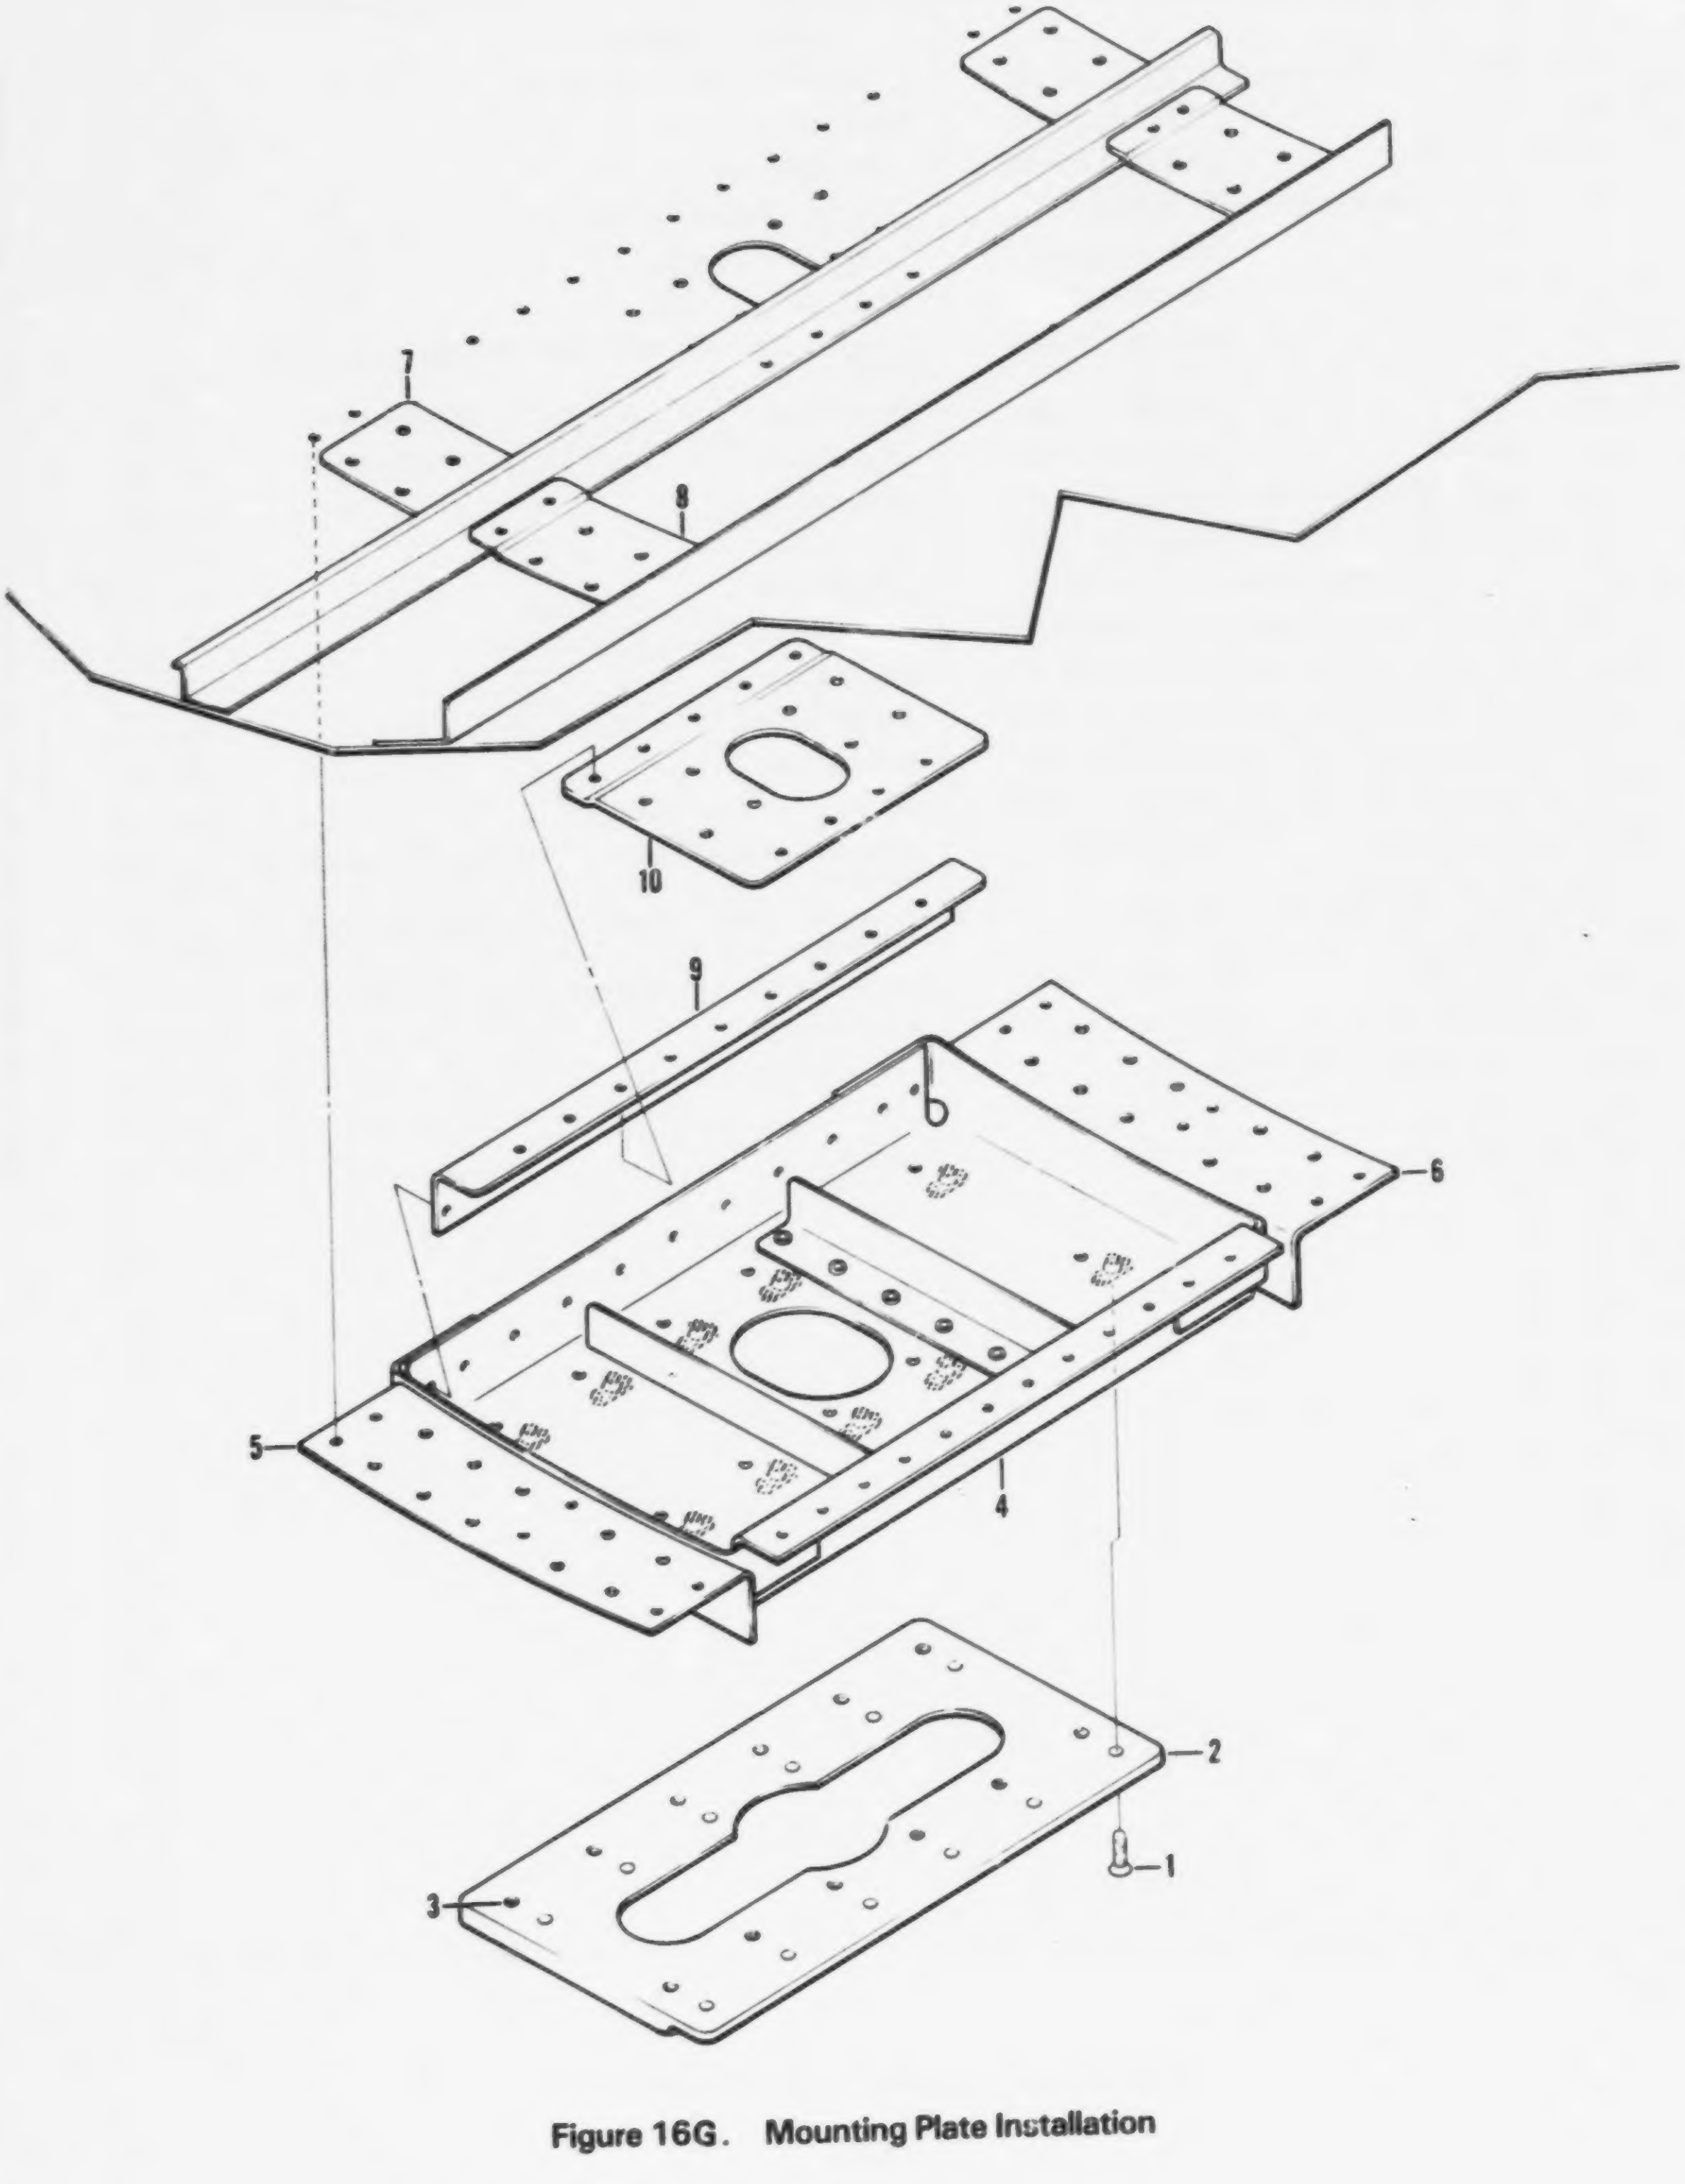
7
8
10
9
6
5
4
2
1
3

Figure 16G. Mounting Plate Installation

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
18G		XCFZZ		20309	ES-F-221671	PLATE,MTG ASSY AND SEE FIG.16F AND 58 FOR MHA'S..........	UHX	EA	1
18G	1	PAOZZ	5305-00-043-0257	96906	MS24693C274	.SCREW,MACHINE..........	UHX	EA	12
18G	2	XDOZZ		20309	ES-C-221751	.PLATE,ADAPTER..........	UHX	EA	1
18G	3	PAOZZ	5340-00-800-7874	96906	MS21209F1-15	..INSERT,SCREW THREAD..........	UHX	EA	12
18G	4	XDOZZ		20309	ES-D-221672-1	.PLATE..........	UHX	EA	1
18G	5	XDOZZ		20309	ES-D-221672-3	.ANGLE..........	UHX	EA	1
18G	6	XDOZZ		20309	ES-D-221672-4	.ANGLE..........	UHX	EA	1
18G	7	MFOZZ		20309	ES-D-221672-5	PLATE..........	UHX	EA	2
18G	8	MFOZZ		20309	ES-D-221672-6	.PLATE..........	UHX	EA	2
18G	9	XDOZZ		20309	ES-D-221672-2	.ANGLE MOUNTING..........	UHX	EA	1
18G	10	XDOZZ		20309	ES-D-221672-7	.PLATE REINFORCEMENT..........	UHX	EA	1

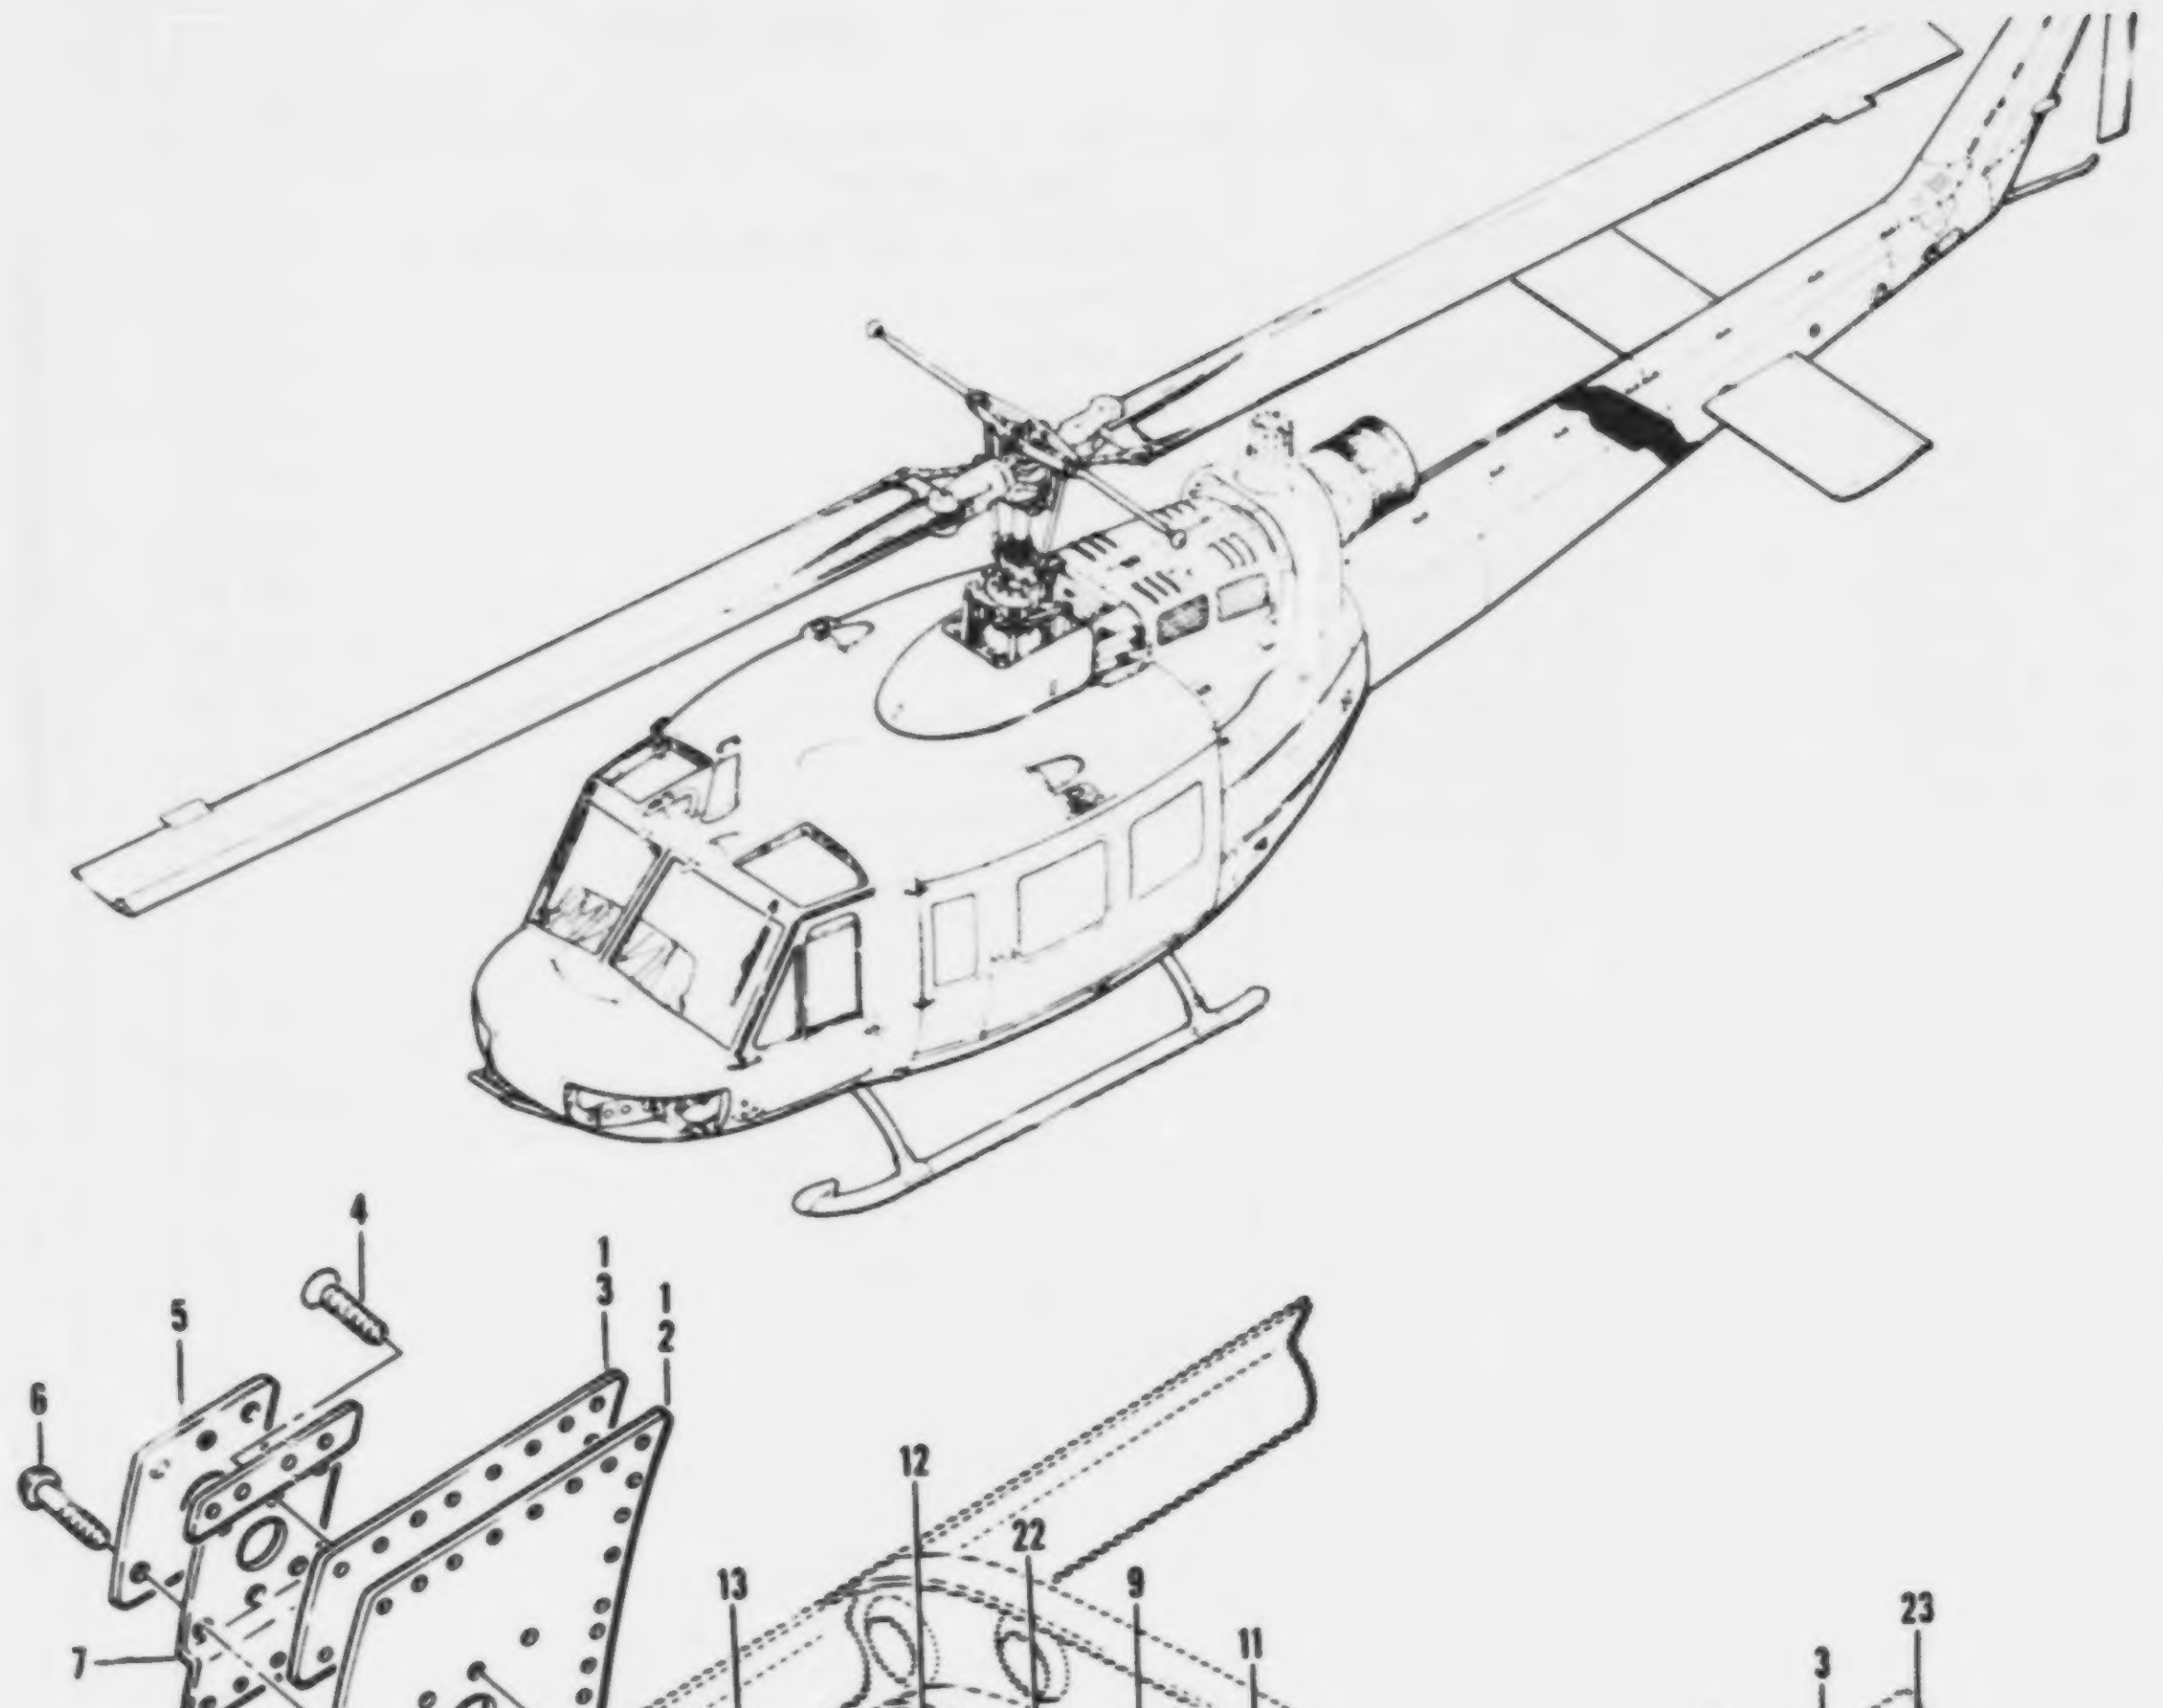
4
1
3
1
2
5
6
7
12
22
13
9
11
23
21
2
3
5
14
15
16
17
18
8
19
10
20
14
15
4
6
AFT

Figure 16H. DF Antenna Thru Structure

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE		(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
16H		XCFZZ		57958	5065693	DF ANT THRU STRUCT SEE FIG. 16F FOR NHA................	UHX	EA	1
16H	1	XD000		57958	5065688	.REINF AND DBLR....................	UHX	EA	1
16H	2	MFOZZ		57958	5065698	..REINF PLATE REAR....................	UHX	EA	2
16H	3	MFOZZ		57958	5065697	..DOUBLER PLATE REAR....................	UHX	EA	2
16H	4	PAOZZ	5305-00-043-0267	96906	MS24693C274	.SCREW,MACHINE....................	UHX	EA	4
16H	5	MFOZZ		15942	1951-1-3109	.PLATE,COVER-REARWAR....................	UHX	EA	2
16H	6	PAOZZ	5305-00-059-3663	96906	MS51958-67	.SCREW,MACHINE....................	UHX	EA	8
16H	7	XDOZZ		57958	5065756-1	.INTERFACE PLATE R/H....................	UHX	EA	1
16H	8	XDOZZ		57958	5065661	.THRU STRUCT CENTER....................	UHX	EA	1
16H	9	XDOZZ		57958	5065689	.THRU STRUCT CENTER....................	UHX	EA	1
16H	10	XCFZZ		15942	1951-1-5021	.THROUGH STRUCTURE....................	UHX	EA	1
16H	11	XDOZZ		15942	1951-1-4318-1	..STRUCTURAL SECT....................	UHX	EA	1
16H	12	XDOZZ		15942	1951-1-3113-1	..PLATE,SUPPORT-TOP....................	UHX	EA	2
16H	13	XDOZZ		15942	1951-1-4339-1	..STRUCTURAL SECT....................	UHX	EA	1
16H	14	XDOZZ		15942	1951-1-4121	..PROJECTION BASE....................	UHX	EA	1
16H	15	PAOZZ	5340-00-721-7663	96906	MS21209F1-20	...INSERT,SCREW THREAD....................	UHX	EA	6
16H	16	XDOZZ		15942	1951-1-4338-1	..STRUCTURAL SECT....................	UHX	EA	1
16H	17	XDOZZ		15942	1951-1-3116-1	..PLATE,SUPPORT-SIDE....................	UHX	EA	2
16H	18	XDOZZ		15942	1951-1-4319-1	..STRUCTURAL SECT....................	UHX	EA	1
16H	19	XDOZZ		15942	1951-1-4319-2	..STRUCTURAL SECT....................	UHX	EA	1
16H	20	XDOZZ		15942	1951-1-4338-2	..STRUCTURAL SECT....................	UHX	EA	1
16H	21	XDOZZ		15942	1951-1-4339-2	..STRUCTURAL SECT....................	UHX	EA	1
16H	22	XDOZZ		15942	1951-1-4318-2	..STRUCTURAL SECT....................	UHX	EA	1
16H	23	XDOZZ		57958	5065756-2	.INTERFACE PLATE L/H....................	UHX	EA	1

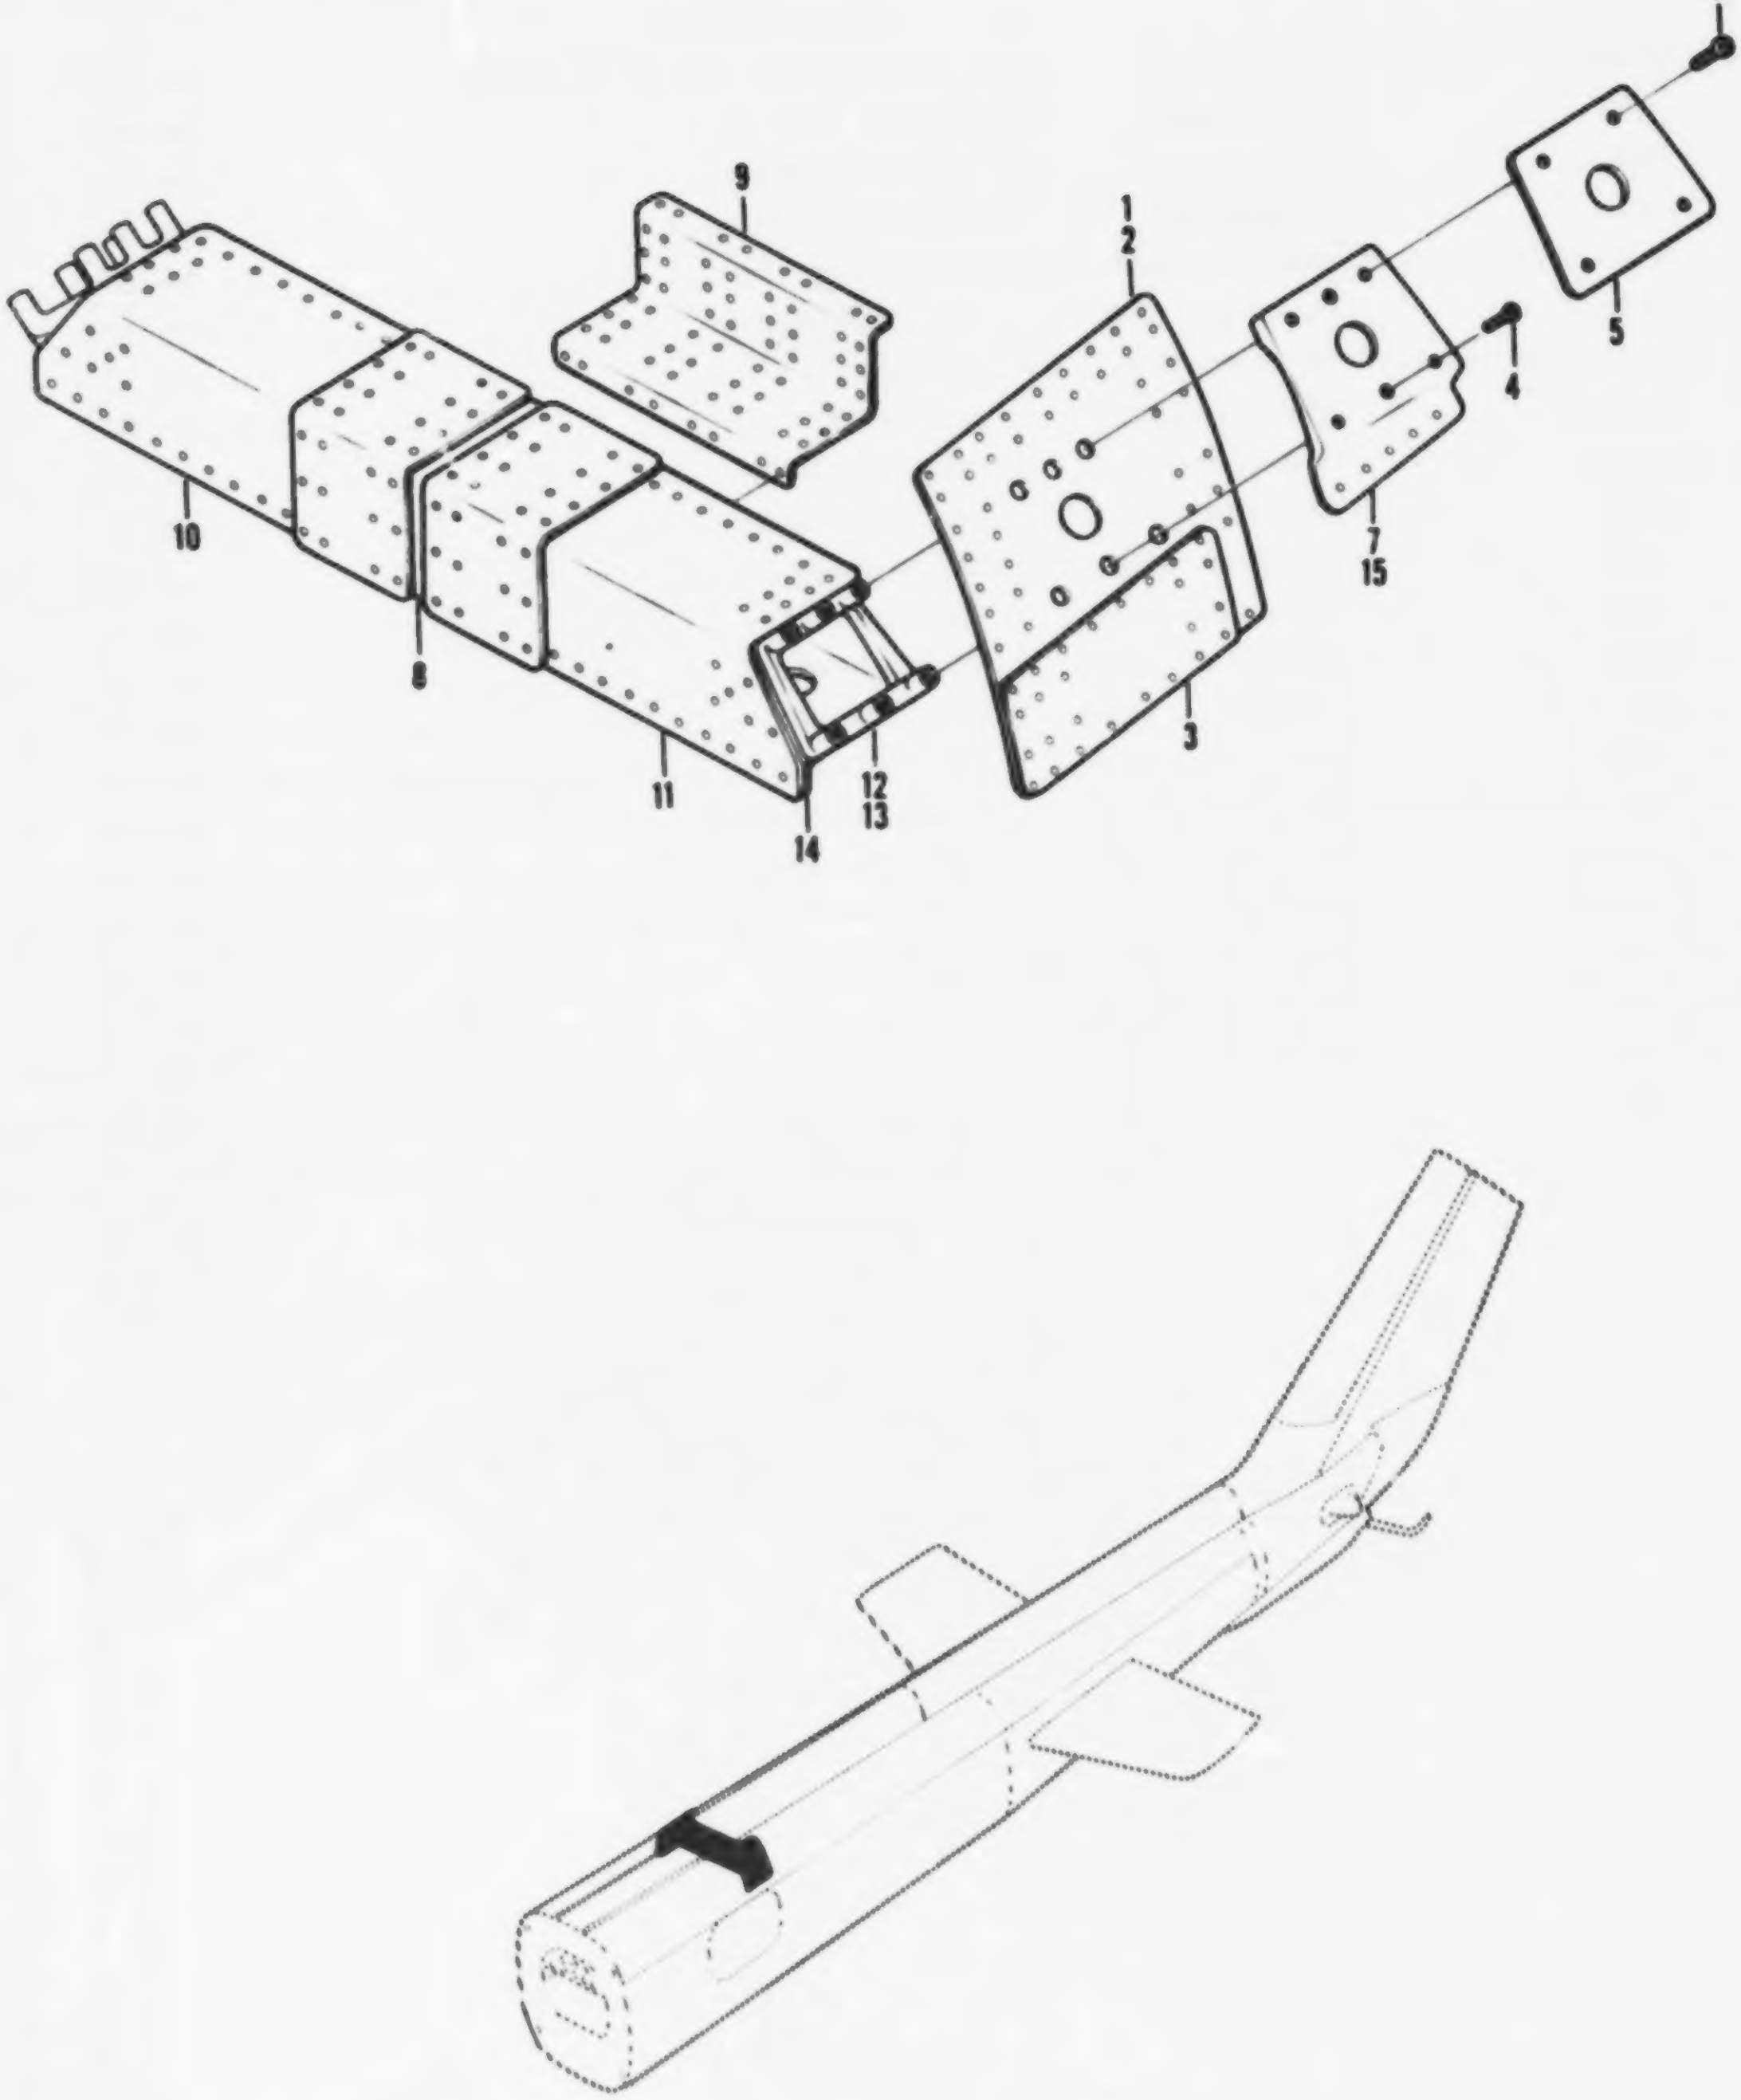
6
9
1
2
5
4
10
7
15
8
3
11
12
13
14

Figure 16J. DF Antenna Thru Structure

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
16J		XCFZZ		20309	5065694	DF ANT THRU STRUCT SEE FIG. 16F FOR NHA....................UHX	EA	1
16J	1	XD000		57958	5065687	.REINF AND DBLR....................UHX	EA	1
16J	2	MFOZZ		57958	5065696	. .PLATE,DOUBLER,FWD....................UHX	EA	2
16J	3	MFOZZ		57958	5065695	. .REINF PLATE FWD....................UHX	EA	2
16J	4	PAOZZ	5305-00-059-3663	96906	MS51958-67	.SCREW,MACHINE....................UHX	EA	4
16J	5	MFOZZ		15942	1951-1-3110	.COVER PLATE FWD....................UHX	EA	2
16J	6	PAOZZ	5305-00-043-0267	96906	MS24693C274	.SCREW,MACHINE....................UHX	EA	8
16J	7	XDOZZ		57958	5065755-1	.INTERFACE SUPPORT....................UHX	EA	1
16J	8	XDOZZ		57958	5065691	.CENTER SECT PLATE....................UHX	EA	1
16J	9	XDOZZ		57958	5065689	.CENTER SECT PLATE....................UHX	EA	1
16J	10	XD000		57958	5065877	.THRU STRUCT ASSY....................UHX	EA	1
16J	11	XDOZZ		15942	1915-1-4314-2	. .STRUCTURAL SECTION....................UHX	EA	1
16J	12	PBOCO	1560-01-157-5413	57958	5065878	. .SPACER,ANTENNA....................UHX	EA	1
16J	13	PAOZZ	5340-00-721-7653	96906	MS21209F1-20	. . .INSERT,SCREW THREAD....................UHX	EA	6
16J	14	XDOZZ		15942	1915-1-4315-2	. .STRUCTURAL SECTION....................UHX	EA	1
16J	15	XDOZZ		57958	5065755-2	.INTERFACE SUPPORT....................UHX	EA	1

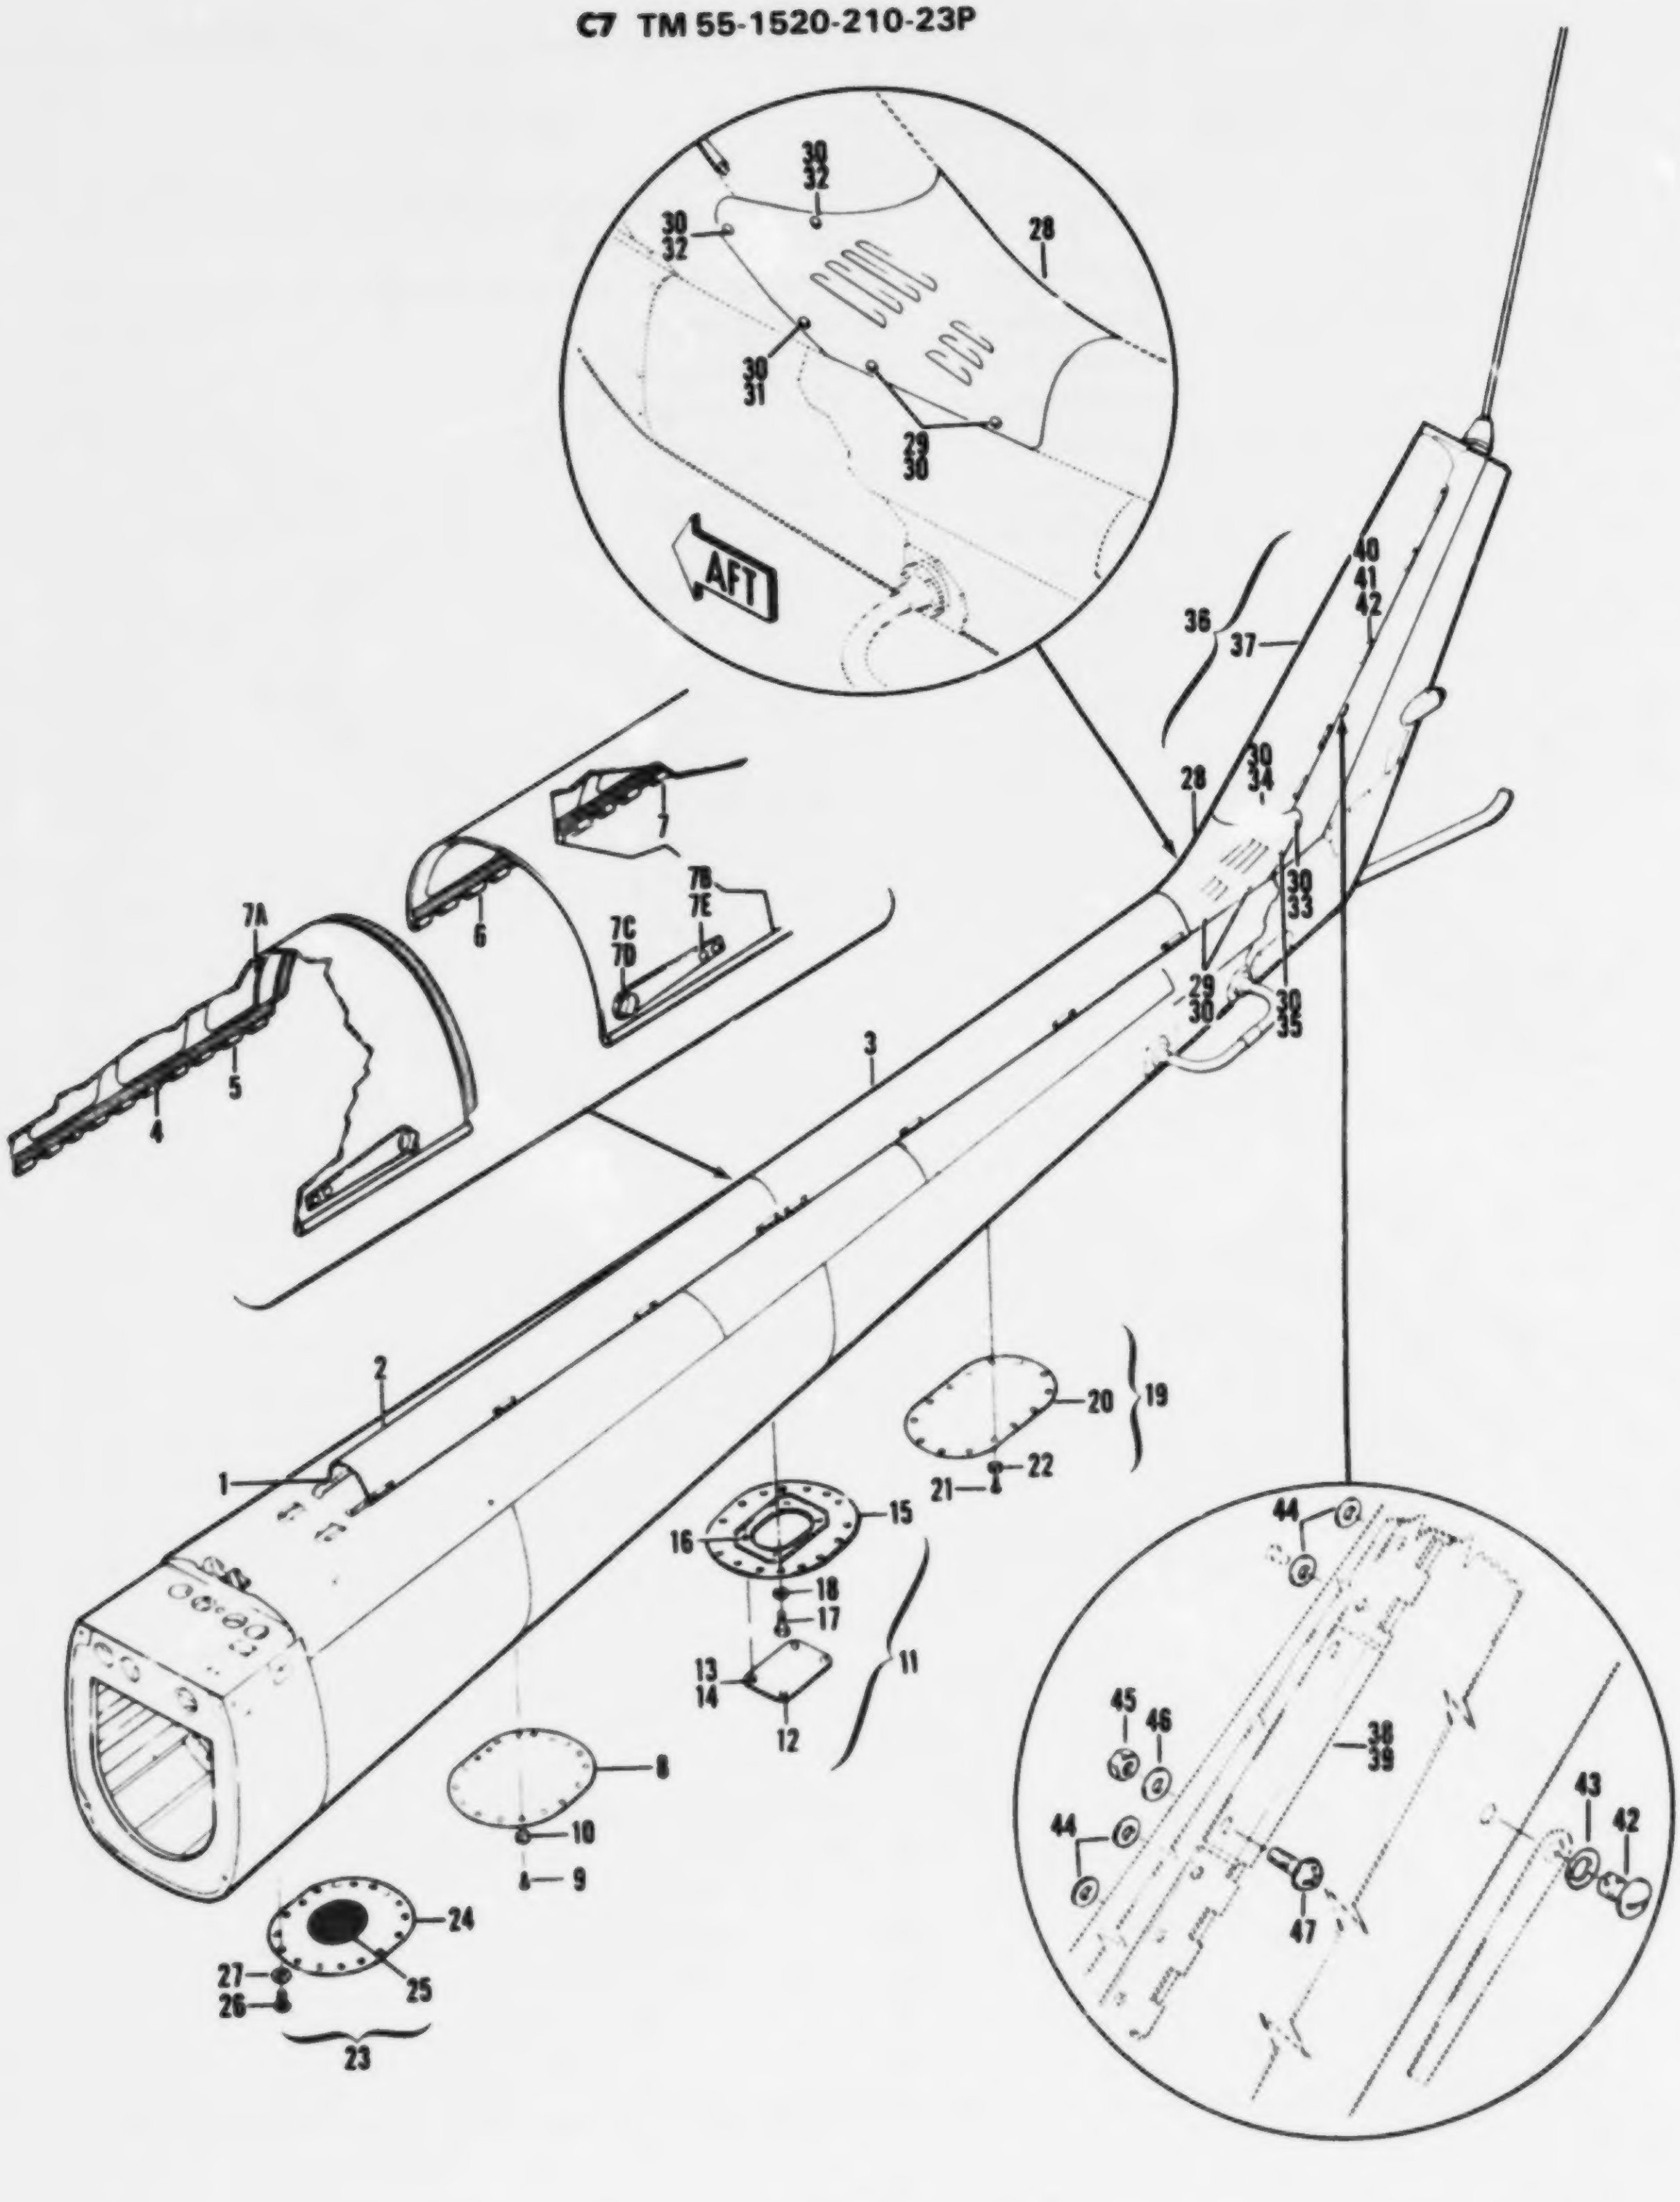
30
32
30
32
28
30
31
29
30
AFT
36
37
40
41
42
28
30
34
30
33
29
30
30
35
7
7B
7E
7A
6
7C
7D
5
4
3
2
1
20
19
21
22
15
16
18
17
13
14
12
11
8
10
9
24
27
26
25
23
44
45
46
38
39
44
43
42
47

Figure 17. Door Installation, Access, Tail Rotor Shaft

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
17		XCFZZ		97499	204-030-813-29	DOOR INSTL TAIL ROTOR SHAFT ACCESS SEE FIG.8 FOR NHA ....UHB,UHC,UHM	EA	1
17	1	PBOZZ	5340-00-498-6034	96906	MS20253P2-7950	.ROD,STRAIGHT,HEADLE..........UHB,UHC,UHM	EA	2
17	2	PAOOO	1560-00-775-3821	97499	204-030-813-31	.DOOR,ACCESS TAIL BOOM..........UHB,UHC,UHM	EA	1
17	3	PAOOO	1560-00-775-3823	97499	204-030-813-33	.DOOR,ACCESS TAIL BOOM..........UHB,UHC,UHM	EA	1
17	4	MFOZZ	1560-00-H24-5403	97499	204-030-840-3	..HINGE,HALF FORWARD..........UHB,UHC,UHM	EA	1
17	5	MFOZZ	5340-00-894-0682	97499	204-030-813-23	..LEAF,BUTT HINGE..........UHB,UHC,UHM	EA	1
17	6	MFOZZ	1560-00-H24-5404	97499	204-030-840-5	..HINGE,HALF AFT..........UHB,UHC,UHM	EA	1
17	7	MFOZZ	1560-00-H24-5402	97499	204-030-813-27	..HINGE,HALF AFT..........UHB,UHC,UHM	EA	1
17	7A	PBFZZ	1560-00-478-1777	97499	204-030-813-9	..STIFFENER,TAIL BOOM..........UHB,UHC,UHM	EA	1
17	7B	MOOOZ	1560-00-076-0411	97499	204-030-813-5	..SPRING ASSEMBLY..........UHE,UHH,UHV,UHX	EA	4
17	7C	PAOZZ	5325-00-721-5503	72794	AW5T15	...STUD,TURNLOCK FA..........UHE,UHH,UHV,UHX	EA	5
17	7D	PAOZZ	5325-00-141-4002	72794	GA5	...EYELET,TURNLOCK FAS..........UHE,UHH,UHV,UHX	EA	1
17	7E	PAOZZ	5360-00-828-8054	97499	204-030-437-3	...SPRING,FLAT..........UHE,UHH,UHV,UHX	EA	1
17		XCFZZ		97499	204-030-814-29	DOOR INSTL ACCESS-FORWARD SEE FIG.9 FOR NHA......UHB,UHC,UHM	EA	1
17	8	PAOZZ	1560-00-863-5753	97499	204-030-814-39	.DOOR..........UHB,UHC,UHM	EA	1
17	9	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..........UHB,UHC,UHM	EA	18
17	10	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	18
17		XCFZZ		97499	204-030-814-79	DOOR INSTL ACCESS-CENTER SEE FIG.9 FOR NHA.......UHB,UHC,UHM	EA	1
17	11	PAOOO	1560-00-737-6434	97499	204-030-814-37	.DOOR ASSEMBLY..........UHB,UHC,UHM	EA	1
17	12	PAOOO	1560-00-587-7105	97499	204-030-814-35	..DOOR ASSEMBLY..........UHB,UHC,UHM	EA	1
17	13	PAOZZ	5325-00-281-1916	72794	A5T9	...STUD,TURNLOCK FA..........UHB,UHC,UHM	EA	4
17	14	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FAS..........UHB,UHC,UHM	EA	4
17	15	XAOZZ		97499	204-030-814-43	..DOOR,CENTER..........UHB,UHC,UHM	EA	1
17	16	PAOZZ	5325-00-298-7026	72794	R5	..RECEPTACLE,TURNL FASTENER..........UHB,UHC,UHM	EA	4
17	17	PAOZZ	5306-00-182-2056	88044	AN3H3A	.BOLT,MACHINE..........UHB,UHC,UHM	EA	18
17	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	18
17	19	XCFZZ		97499	204-030-814-33	DOOR INSTL ACCESS-AFT SEE FIG.9 FOR NHA..........UHB,UHC,UHM	EA	1
17	20	PAOZZ	1560-00-735-6557	97499	204-030-814-455	.DOOR..........UHB,UHC,UHM	EA	1
17	21	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..........UHB,UHC,UHM	EA	16
17	22	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	16
17	23	XCFZZ		97499	204-030-814-73	DOOR INSTL VENT SEE FIG.9 FOR NHA..........UHB,UHC,UHM	EA	1
17	24	PAOFD	1560-00-246-4764	97499	204-030-814-75	.COVER ASSEMBLY..........UHB,UHC,UHM	EA	1
17	25	PAFZZ	1560-00-888-4818	97499	204-031-238-1	..SCREEN ASSEMBLY,VEN..........UHB,UHC,UHM	EA	1
17	26	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..........UHB,UHC,UHM	EA	18
17	27	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	18
17	28	PAOOO	1560-00-765-7834	97499	204-030-834-21	COVER,ACCESS SEE FIG.8 FOR NHA..........UHB,UHC,UHM	EA	1
17	29	PAOZZ	5325-00-281-5073	72794	A5T10	.STUD,TURNLOCK FA..........UHB,UHC,UHM	EA	4
17	30	PAOZZ	5325-00-141-4002	72794	GH5	.EYELET,TURNLOCK FAS..........UHB,UHC,UHM	EA	10
17	31	PAOZZ	5325-00-281-1916	72794	A5T9	.STUD,TURNLOCK FA..........UHB,UHC,UHM	EA	1
17	32	PAOZZ	5325-00-497-6757	72794	A5T26	.STUD,TURNLOCK FASTE LH..........UHB,UHC,UHM	EA	1
17	32	PAOZZ	5325-00-281-1551	72794	A5T37	.STUD,TURNLOCK FA RH..........UHB,UHC,UHM	EA	1
17	33	PAOZZ	5325-00-281-1552	72794	A5T20	.STUD,TURNLOCK FA..........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
17	34	PAOZZ	5325-00-515-9155	72794	A5T11	.STUD,TURNLOCK FA....................................UHB,UHC,UHM	EA	2
17	35	PAOZZ	5325-00-281-4399	72794	A5T19	.STUD, TUPNLOCK F....................................UHB,UHC,UHM	FA	1
17	36	XCFZZ		97499	204-030-829-33	DOOR INSTL VERTICAL FIN SEE FIG.8 FOR NHA........UHB,UHC,UHM	EA	1
17	37	PAOOO	1560-00-775-3824	97499	204-030-829-35	.DOOR,ACCESS....................................UHB,UHC,UHM	EA	1
17	38	PAOZZ	1560-00-777-3326	97499	204-030-860-3	..RETAINER,HINGE PIN....................................UHB,UHC,UHM	EA	1
17	39	MFOZZ	1560-00-488-4915	97499	204-030-829-15	..HINGE,LEADING EDGE....................................UHB,UHC,UHM	EA	1
17	39	MFOZZ	1560-00-488-4917	97499	204-030-829-27	..HINGE,LEADING EDGE..............................UHE,UHH,UHV,UHX	EA	1
17	40	PAOOO	1560-00-815-6681	97499	204-030-829-39	..SPRING ASSEMBLY,DOD....................................UHB,UHC,UHM	EA	5
17	41	XDOZZ	1560-00-932-3632	97499	204-030-437-1	...SPRING,FASTENER....................................UHB,UHC,UHM	EA	1
17	42	PAOZZ	5325-00-838-8803	72794	A5T27	...STUD,TURNLOCK FA....................................UHB,UHC,UHM	EA	1
17	43	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FAS....................................UHB,UHC,UHM	EA	1
17	44	XDOZZ	5310-00-076-9900	97499	140-001-1	..WASHER,FLAT....................................UHB,UHC,UHM	EA	46
17	45	PAOZZ	5310-00-807-1467	96906	MS21042-3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..............UHB,UHC,UHM	EA	2
17	46	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT....................................UHB,UHC,UHM	EA	2
17	47	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE....................................UHB,UHC,UHM	EA	2

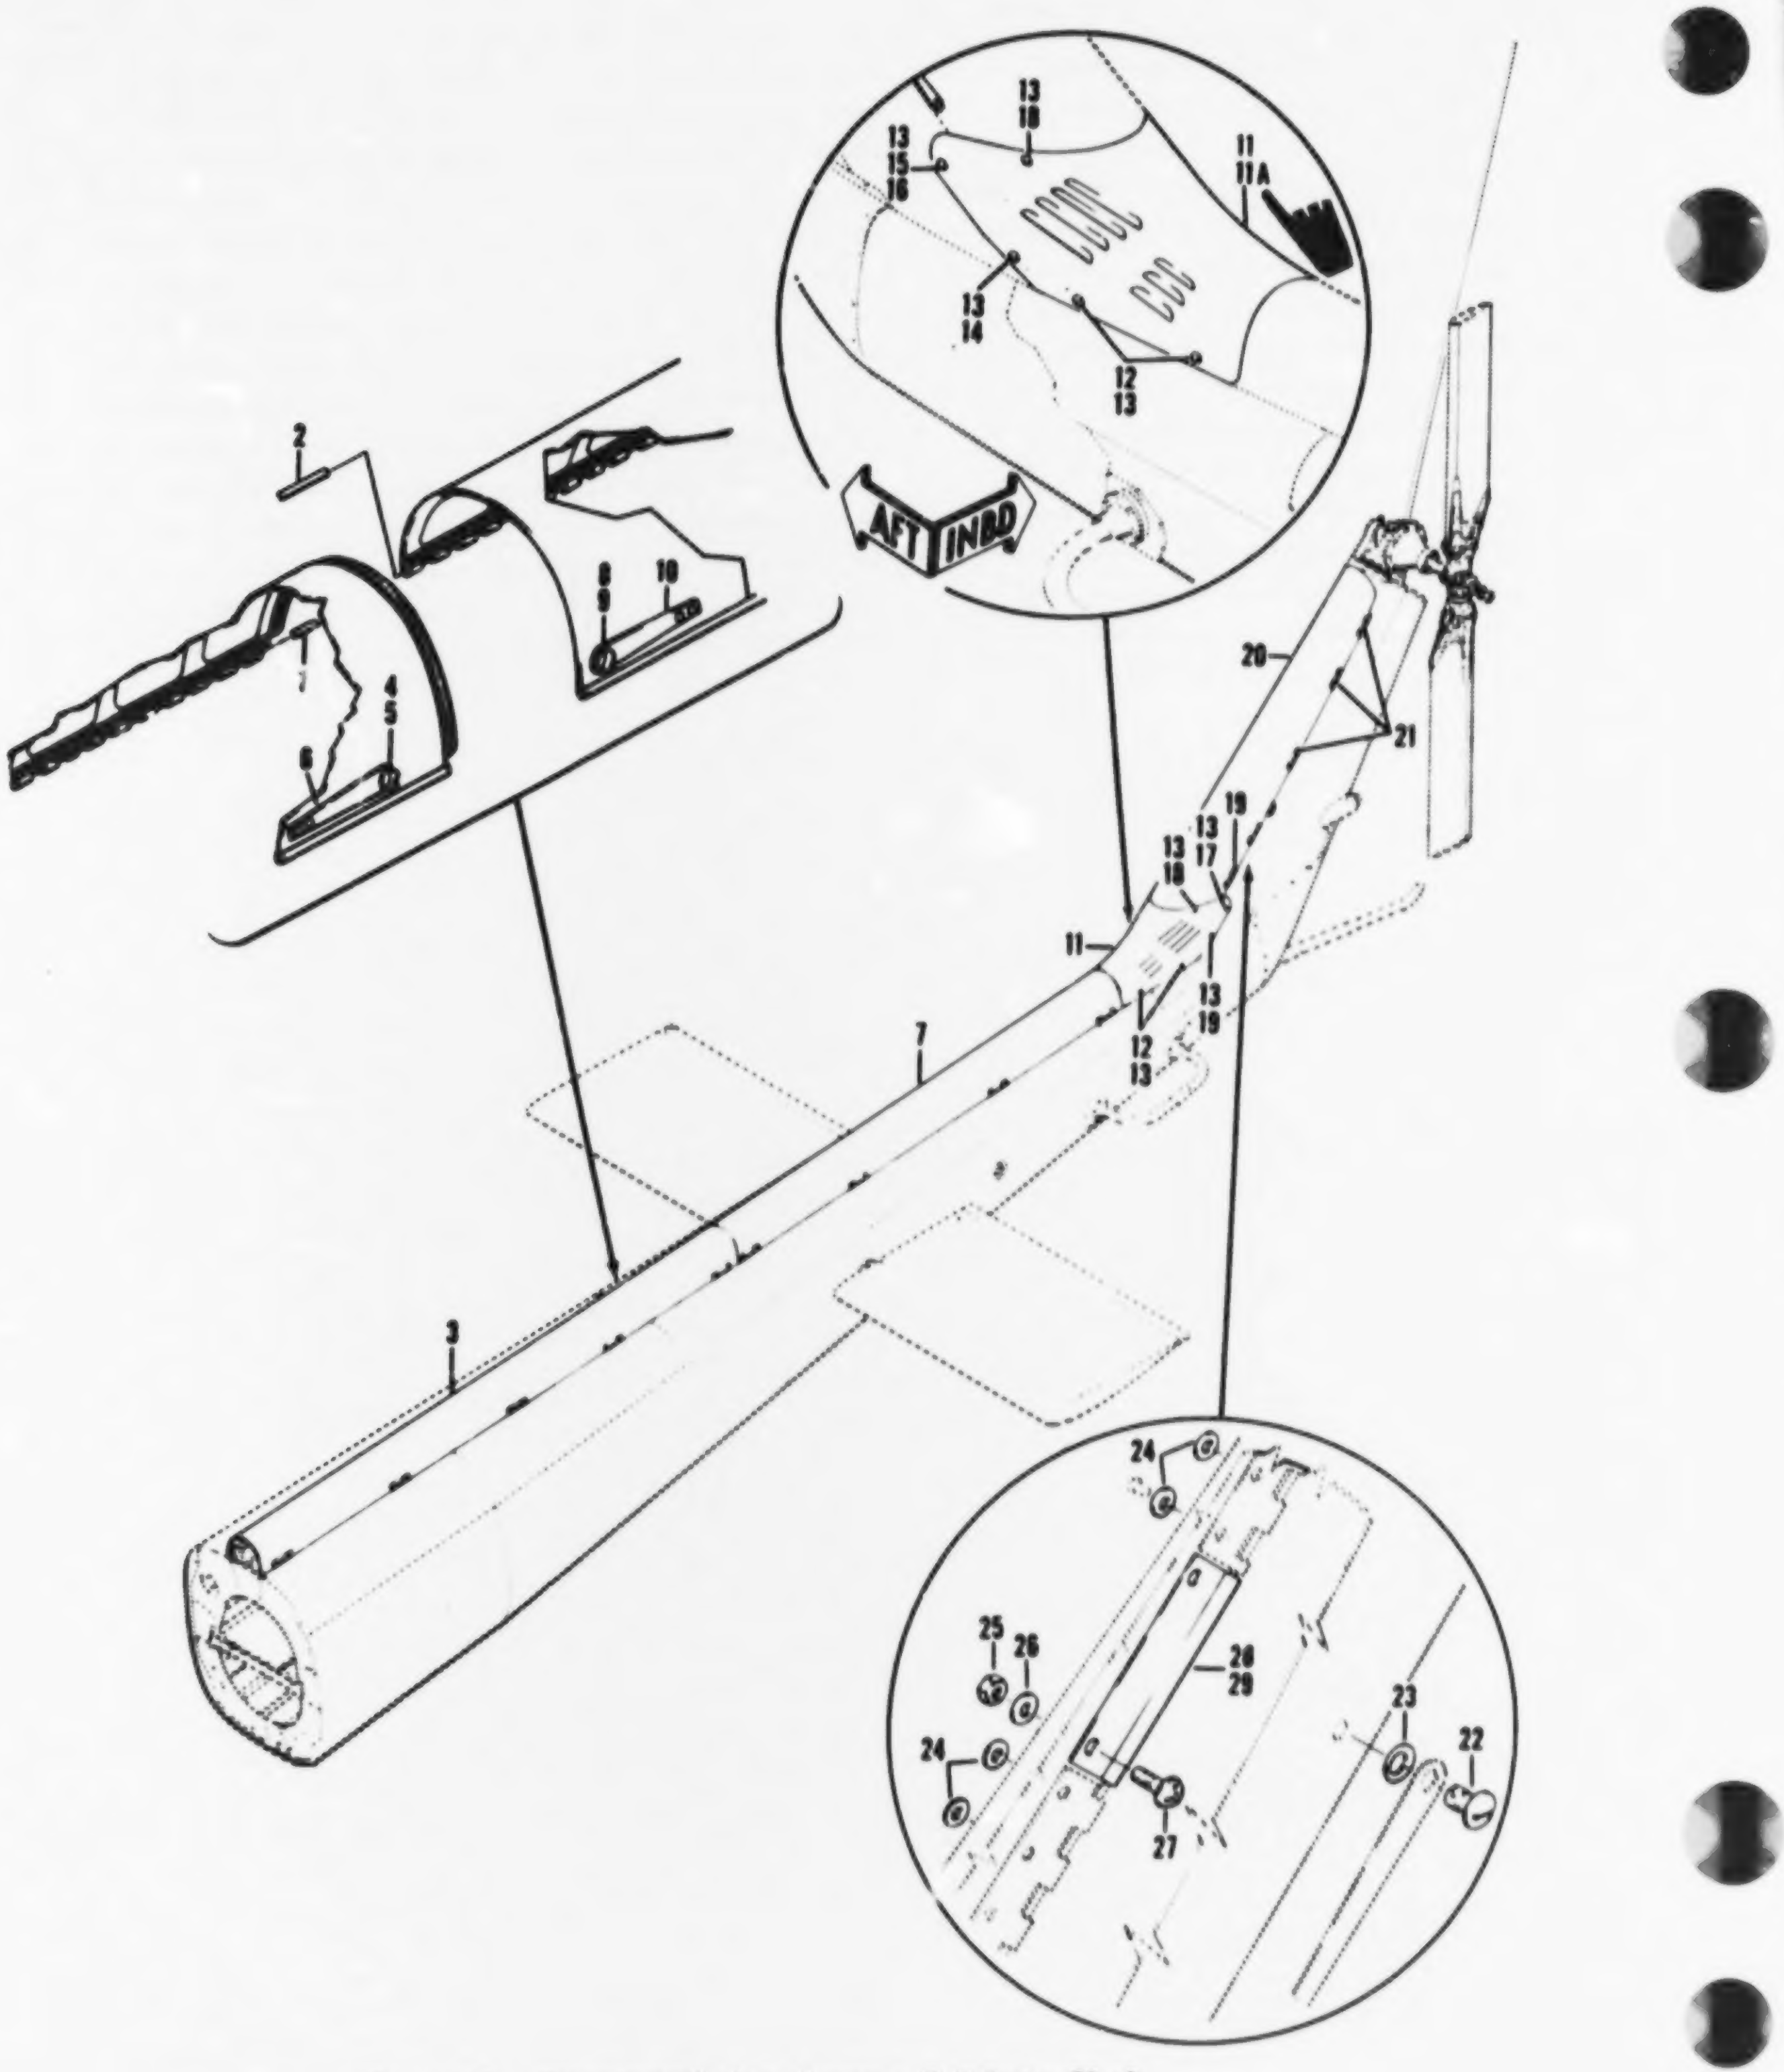
2
7
4
5
6
8
9
10
13
18
13
15
16
11
11A
13
14
12
13
AFT
INBD
20
21
19
13
17
13
18
11
13
19
12
13
7
3
24
25
26
28
29
24
23
22
27

Figure 18. Door Installation, Access, Tail Rotor Shaft

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
19		XCFZZ		97499	205-031-813-1	DOOR INSTL TAIL ROTOR SHAFT USBL EFF 63-12956 & SUBSEQUENT SEE FIG.9 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
18	1	PBOZZ	5340-00-498-6040	96906	MS20253P2-10350	.ROD,STRAIGHT HEADLE..........UHE,UHH,UHV,UHX	EA	1
18	2	PBOZZ	5340-00-498-6034	96906	MS20253P2-7950	.ROD,STRAIGHT,HEADLE..........UHE,UHH,UHV,UHX	EA	1
18	3	PAOOO	1560-00-659-9903	97499	205-031-813-3	.COVER ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
18	4	PAOZZ	5325-00-721-5503	72794	AWST15	..STUD,TURNLOCK..........UHE,UHH,UHV,UHX	EA	4
18	5	PAOZZ	5325-00-141-4002	72794	GH5	..EYELET,TURNLOCK FAS..........UHE,UHH,UHV,UHX	EA	1
18	6	PAOZZ	1680-00-362-8535	97499	50-010-5	..BLADE,EJECTING..........UHE,UHH,UHV,UHX	EA	5
18	7	PAOOF	1560-00-691-6008	97499	205-031-813-5	.COVER ACCESS..........UHE,UHH,UHV,UHX	EA	1
18	9	PAOZZ	5325-00-721-5503	72794	AWST15	..STUD,TURNLOCK FA..........UHE,UHH,UHV,UHX	EA	4
18	9	PAOZZ	5325-00-141-4002	72794	GH5	..EYELET,TURNLOCK FAS..........UHE,UHH,UHV,UHX	EA	4
18	10	PAOZZ	1680-00-362-8535	97499	50-010-5	..BLADE,EJECTING..........UHE,UHH,UHV,UHX	EA	4
18	11	PAOOO	1560-00-765-7834	97499	204-030-834-21	COVER,ACCESS SEE FIG.8 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
18	11A	MOOZZ		97499	204-070-832-7	.PAD..........UHE,UHH,UHV,UHX	EA	1
18	12	PAOZZ	5325-00-281-5073	72794	AST10	.STUD TURNLOCK FASTE..........UHE,UHH,UHV,UHX	EA	4
18	13	PAOZZ	5325-00-141-4002	72794	GH5	.EYELET,TURNLOCK FAS..........UHE,UHH,UHV,UHX	EA	10
18	14	PAOZZ	5325-00-291-1916	72794	AST9	.STUD TURNLOCK FASTE..........UHE,UHH,UHV,UHX	EA	1
18	15	PAOZZ	5325-00-897-6757	72794	AST26	.STUD,TURNLOCK FASTE..........UHE,UHH,UHV,UHX	EA	1
18	16	PAOZZ	5325-00-291-1551	72794	AST37	.STUD,TURNLOCK FASTE..........UHE,UHH,UHV,UHX	EA	1
18	17	PAOZZ	5325-00-281-1552	72794	AST20	.STUD,TURNLOCK FASTE..........UHE,UHH,UHV,UHX	EA	1
18	18	PAOZZ	5325-00-515-9155	72794	AST11	.STUD,TURNLOCK FASTE..........UHE,UHH,UHV,UHX	EA	2
18	19	PAOZZ	5325-00-281-4399	72794	AST19	.STUD,TURNLOCK FASTE..........UHE,UHH,UHV,UHX	EA	1
18		XCFZZ		97499	204-030-829-33	DOOR INSTL VERTICAL FIN SEE FIG.8 FOR NHA....UHE,UHH,UHV,UHX	EA	1
18	20	PAOOO	1560-00-775-3824	97499	204-030-829-35	.DOOR,ACCESS..........UHE,UHH,UHV,UHX	EA	1
18	21	PAOOO	1560-00-815-6681	97499	204-030-829-39	..SPRING ASSEMBLY,DOO..........UHE,UHH,UHV,UHX	EA	5
18	22	PAOZZ	5325-00-838-8803	72794	AST27	...STUD,TURNLOCK FASTE..........UHE,UHH,UHV,UHX	EA	1
18	23	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FAS..........UHE,UHH,UHV,UHX	EA	1
18	24	XDOZZ		97499	140-001-1	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	45
18	25	PAOZZ	5310-00-807-1467	96906	MS21042-3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	2
18	26	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
18	27	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
18	28	PAOZZ	1560-00-777-3326	97499	204-030-860-3	..RETAINER,HINGE PIN..........UHE,UHH,UHV,UHX	EA	1
18	29	MFOZZ		.7499	204-030-829-15	..HINGE,LEADING EDGE..........UHE,UHH,UHV,UHX	EA	1
18	29	MFOZZ		97499	204-030-829-27	..HINGE,LEADING EDGE..........UHE,UHH,UHV,UHX	EA	1

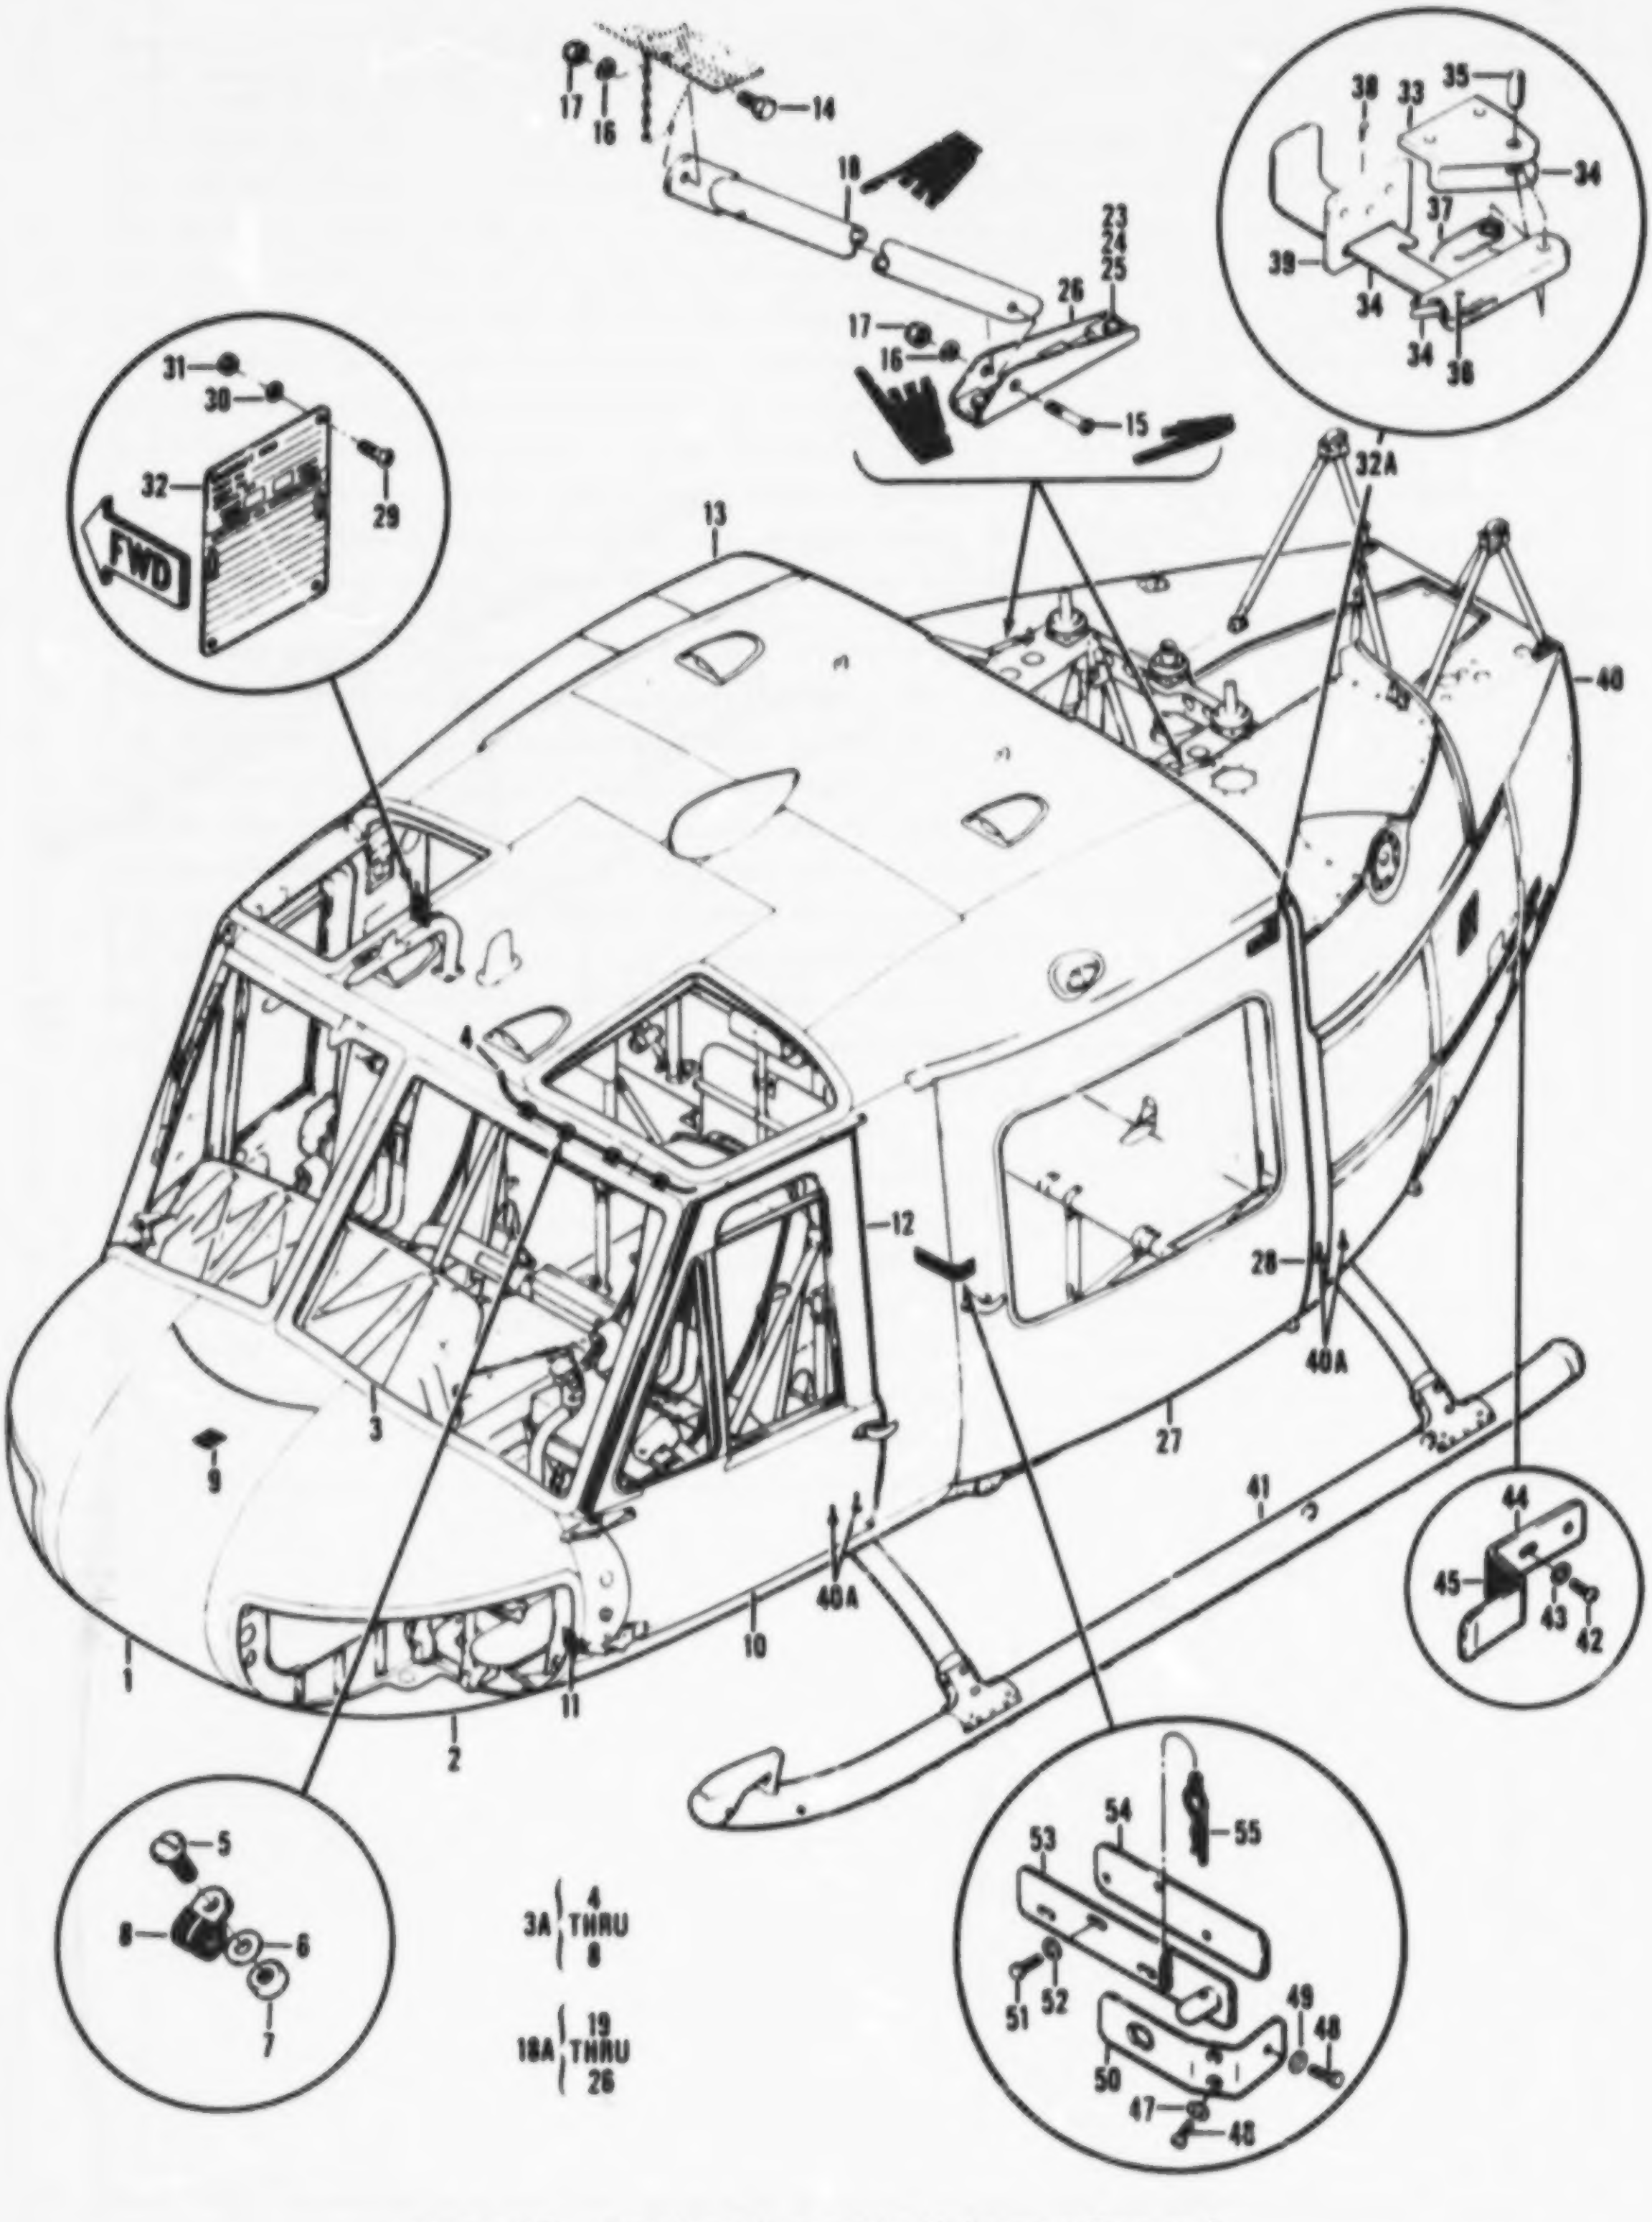
17
16
14
18
23
24
25
26
17
16
15
38
33
35
34
37
39
34
34
36
32A
31
30
29
32
FWD
13
40
4
12
28
40A
3
9
27
41
44
45
43
42
1
40A
10
11
2
5
8
6
7
55
54
53
51
52
49
48
50
47
46
3A 4 THRU 8
18A 19 THRU 26

Figure 19. Fuselage Assembly, Helicopter Forward (Sheet 1 of2)

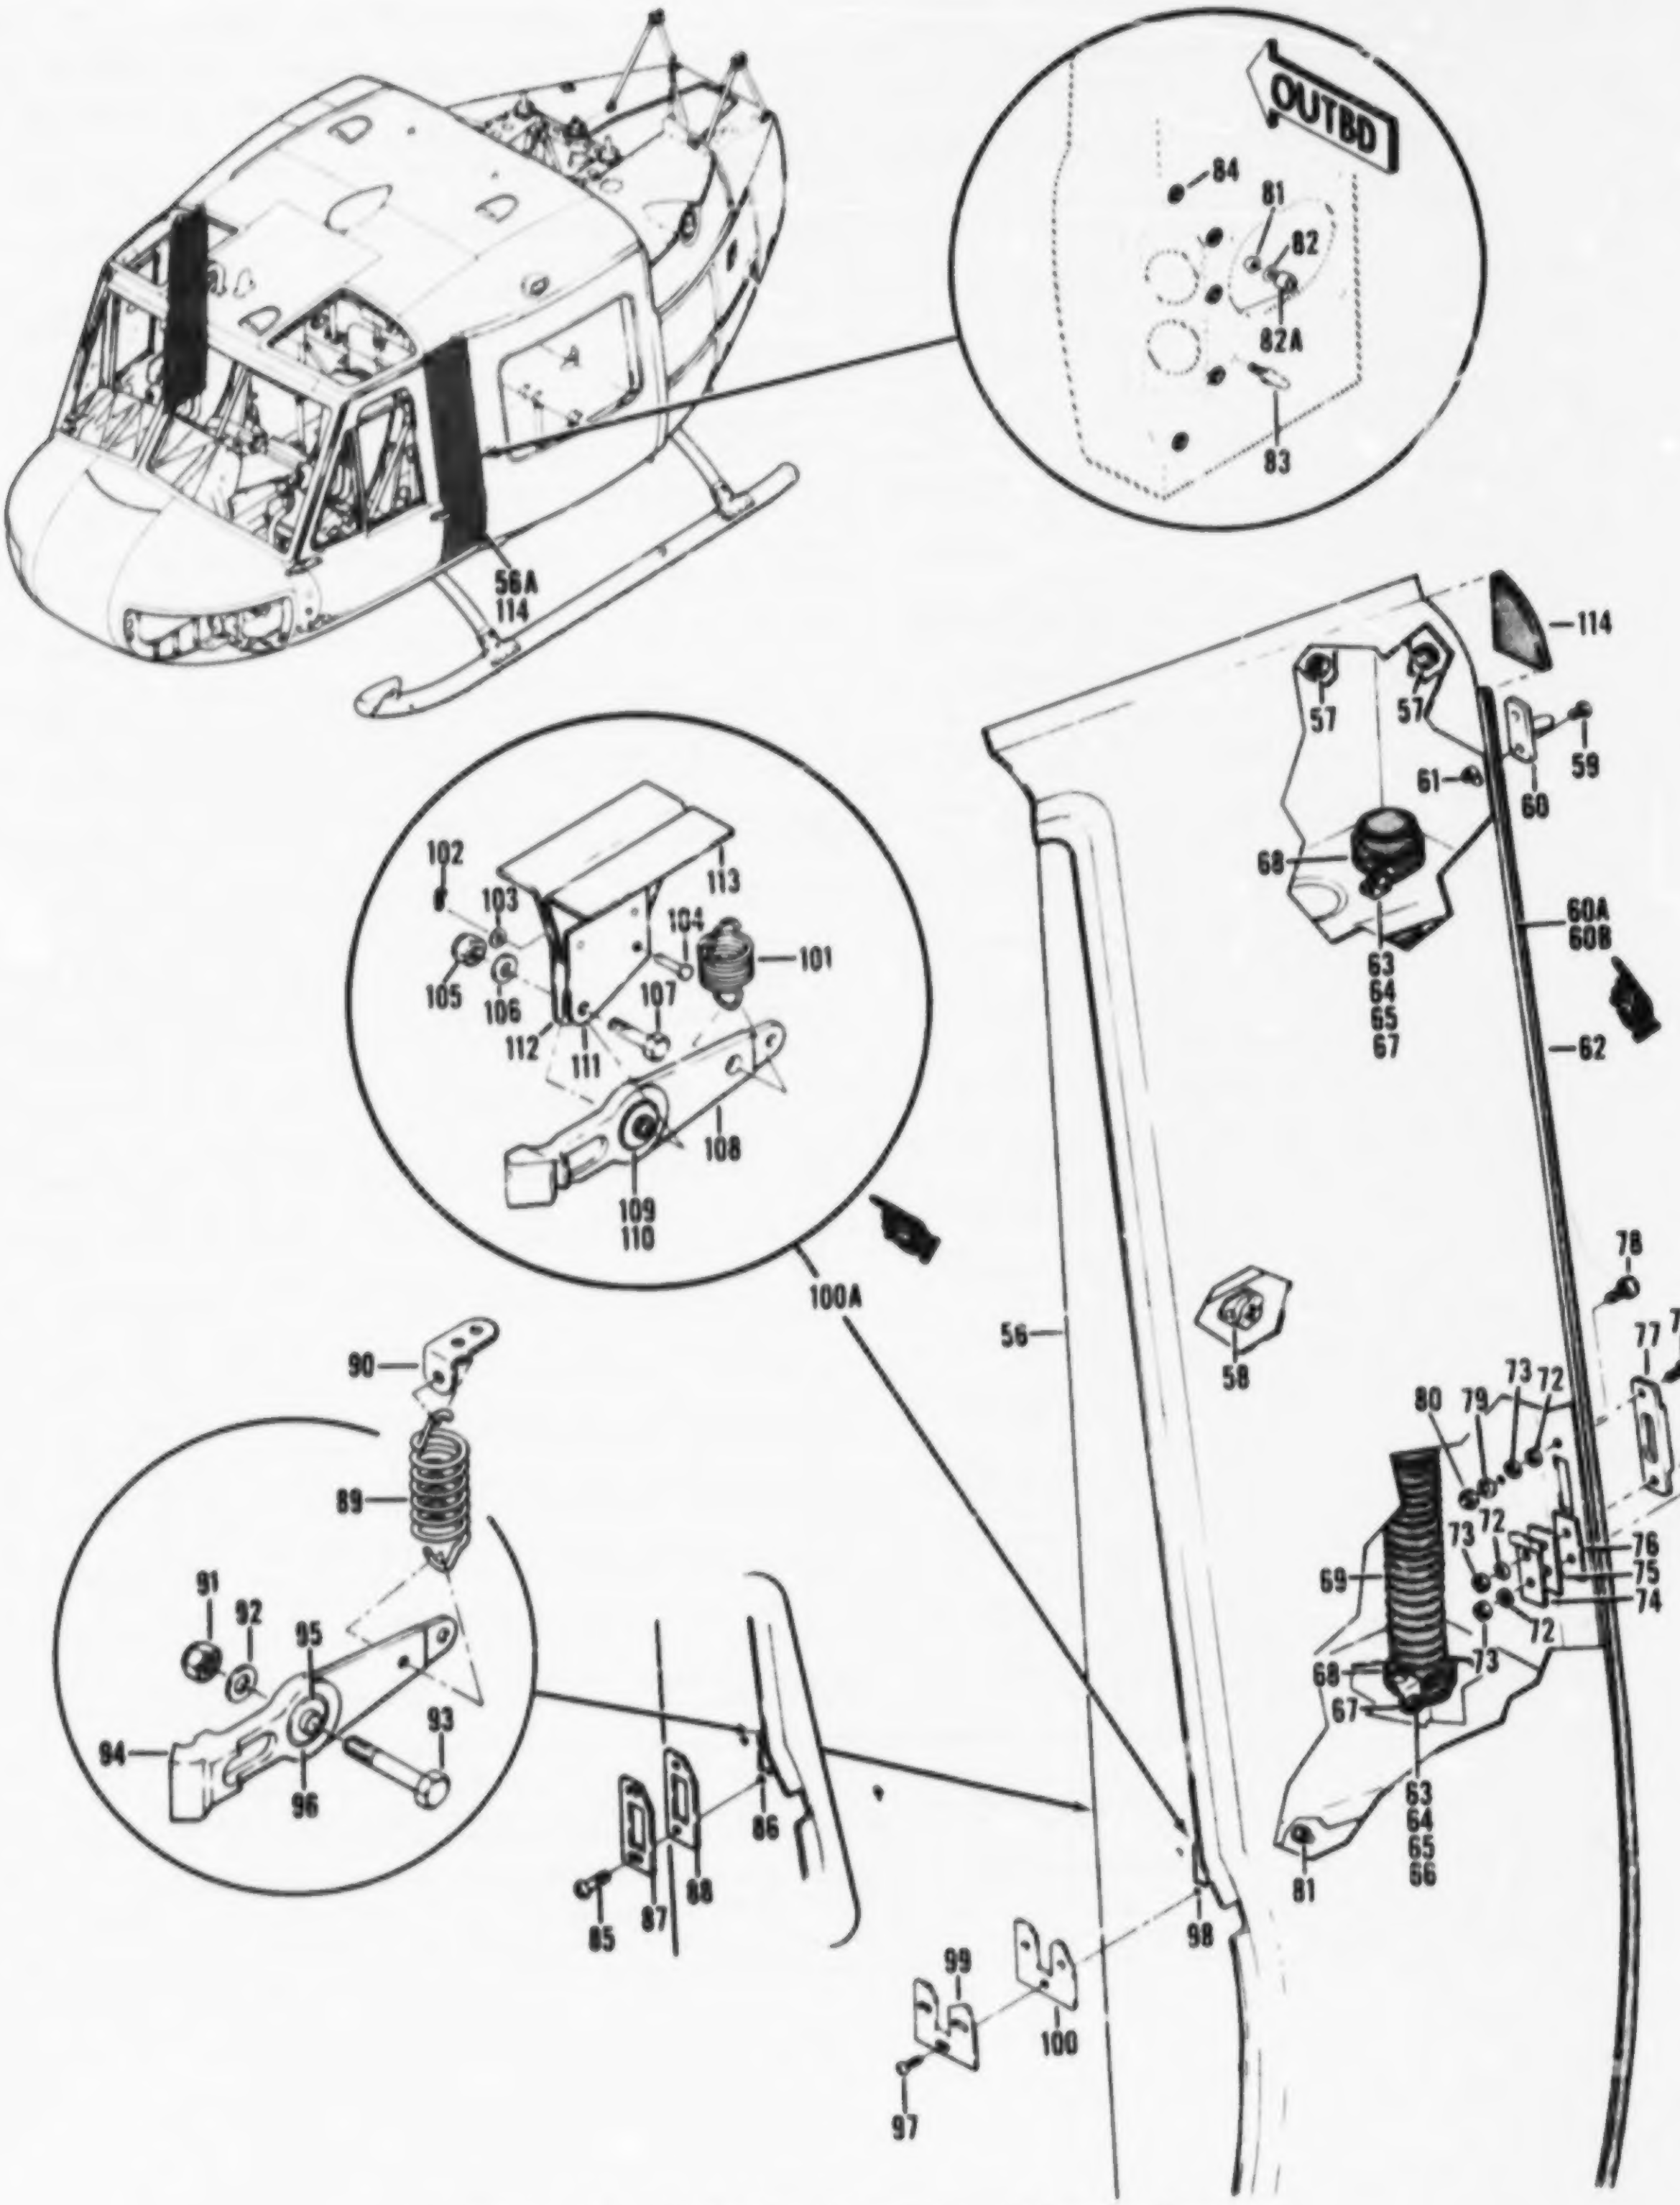
OUTBD
84
81
82
82A
83
56A
114
114
57
57
59
61
60
68
60A
60B
63
64
65
67
62
102
113
103
104
101
105
106
107
112
111
108
109
110
100A
56
58
78
77
70
71
70
80
79
73
72
72
73
76
75
74
69
72
73
68
67
63
64
65
66
81
90
89
91
92
95
93
94
96
86
85
87
88
98
99
100
97

Figure 19. Fuselage Assembly, Helicopter Forward (Sheet 2 of2)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
19		XCFZZ		97499	204-030-008-15	FUSELAGE ASSY,ACFT FORWARD USBL EFF 60-3546 THRU 60-3590 SEE FIG.6 FOR NHA....UHB	EA	1
19		XCFZZ		97499	204-030-008-21	FUSELAGE ASSY,ACFT FORWARD USBL EFF 60-3591 THRU 60-3619 SEE FIG.6 FOR NHA....UHB	EA	1
19		XCFZZ		97499	204-030-008-23	FUSELAGE ASSY,ACFT FORWARD USBL EFF 61-686 THRU 61-723 SEE FIG.6 FOR NHA....UHB	EA	1
19		XCFZZ		97499	204-030-008-27	FUSELAGE ASSY,ACFT FORWARD USBL EFF 61-724 THRU 61-753 SEE FIG.6 FOR NHA....UHB	EA	1
19		XCFZZ		97499	204-030-008-35	FUSELAGE ASSY,ACFT FORWARD USBL EFF 61-754 THRU 61-803 SEE FIG.6 FOR NHA....UHB	EA	1
19		XCFZZ		97499	204-030-008-29	FUSELAGE ASSY,ACFT FORWARD USBL EFF 62-1872 THRU 62-1996 SEE FIG.6 FOR NHA....UHB	EA	1
19		XCFZZ		97499	204-030-008-41	FUSELAGE ASSY,ACFT FORWARD USBL EFF 62-1997 THRU 62-12555 SEE FIG.6 FOR NHA....UHB	EA	1
19		XCFZZ		97499	204-031-003-1	FUSELAGE ASSY,ACFT FORWARD USBL EFF 63-8500 THRU 63-8658 SEE FIG.6 FOR NHA....UHB	EA	1
19		XCFZZ		97499	204-031-003-7	FUSELAGE ASSY,ACFT FORWARD USBL EFF 63-8659 THRU 63-12952 SEE FIG.6 FOR NHA....UHB	EA	1
19		XCFZZ		97499	204-031-003-19	FUSELAGE ASSY,ACFT FORWARD USBL EFF 64-13902 THRU 64-14100 SEE FIG.6 FOR NHA....UHB	EA	1
19		XCFZZ		97499	204-031-003-35	FUSELAGE ASSY,ACFT FORWARD USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA....UHC,UHM	EA	1
19		XCFZZ		97499	204-032-003-1	FUSELAGE ASSY,ACFT FORWARD USBL EFF 65-9416 THRU 65-12772 SEE FIG.6 FOR NHA....UHC,UHM	EA	1
19		XCFZZ		97499	204-032-003-9	FUSELAGE ASSY,ACFT FORWARD USBL EFF 66-492 THRU 66-601 SEE FIG.6 FOR NHA....UHC,UHM	EA	1
19		XCFZZ		97499	204-032-003-11	FUSELAGE ASSY,ACFT FORWARD USBL EFF 66-602 THRU 66-15022 SEE FIG.6 FOR NHA....UHC,UHM	EA	1
19		XCFZZ		97499	204-032-003-17	FUSELAGE ASSY,ACFT FORWARD USBL EFF 66-15023 & SUBSEQUENT SEE FIG.6 FOR NHA....UHC,UHM	EA	1
19	1	XCFZZ		97499	204-030-646-41	.DOOR INSTL,NOSE U/O PN 204-030-008-13,-15, 17,-21,-23,-27,-35,-29,& -41 SEE FIG.21 FOR BREAKDOWN....UHB	EA	1
19	1	XCFZZ		97499	204-030-646-53	.DOOR INSTL,NOSE U/O (UH-1B) PN 204-031-003-1,-7 &-19 SEE FIG.21 FOR BREAKDOWN....UHB,UHC,UHM	EA	1
19	2	XCFZZ		97499	204-030-003-35	.NOSE INSTL,CABIN U/O PN 204-030-008-15 & -21 SEE FIG.22 FOR BREAKDOWN....UHB	EA	1
19	2	XCFZZ		97499	204-030-003-47	.NOSE INSTL,CABIN U/O PN 204-030-008-23,-27, & -35 SEE FIG. 22 FOR BREAKDOWN....UHB	EA	1
19	2	XCFZZ		97499	204-030-025-1	.NOSE INSTL,CABIN U/O PN 204-030-008-29 SEE FIG.22 FOR BREAKDOWN....UHB	EA	1
19	2	XCFZZ		97499	204-030-025-27	.NOSE INSTL,CABIN U/O PN 204-030-008-41 SEE FIG.22 FOR BREAKDOWN....UHB	EA	1
19	2	XCFZZ		97499	204-030-025-33	.NOSE INSTL,CABIN U/O PN 204-031-003-1 SEE FIG.22 FOR BREAKDOWN....UHB	EA	1
19	2	XCFZZ		97499	204-030-025-63	.NOSE INSTL,CABIN U/O PN 204-031-003-7 SEE FIG.22 FOR BREAKDOWN....UHB	EA	1
19	2	XCFZZ		97499	204-030-025-71	.NOSE INSTL,CABIN U/O PN 204-031-003-19 SEE FIG.22 FOR BREAKDOWN....UHB	EA	1
19	2	XCFZZ		97499	204-030-025-97	.NOSE INSTL,CABIN U/O PN 204-031-003-35 SEE FIG.22 FOR BREAKDOWN....UHC,UHM	EA	1
19	2	XCFZZ		97499	204-030-025-101	.NOSE INSTL,CABIN U/O PN 204-032-003-1 & -9 SEE FIG.22 FOR BREAKDOWN....UHC,UHM	EA	1
19	2	XCFZZ		97499	204-030-025-117	.NOSE INSTL,CABIN U/O PN 204-032-003-11 & -17 SEE FIG.22 FOR BREAKDOWN....UHC,UHM	EA	1
19	2	XCFZZ		97499	204-030-025-141	.NOSE INSTL,CABIN U/O PN 204-032-003-17 SEE FIG.22 FOR BREAKDOWN....UHC,UHM	EA	1
19	3	XCFZZ		97499	204-030-666-33	.WINDSHIELD INSTL CABIN-LH U/O PN 204-030-008-15,-21,-23, -	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						27,-35,-29,-41, 204-031-003-1,& -7 SEE FIG.24 FOR BREAKDOWN ....UHB		
19	3	XCFZZ		97499	204-030-666-27	.WINDSHIELD INSTL CABIN-RH U/O PN 204-030-008-15,-21,-23, -27,-29,-35,-41, 204-031-003-1,-7,& -19 SEE FIG.24 FOR BREAKDOWN..........UHB	EA	1
19	3	XCFZZ		97499	204-030-666-35	.WINDSHIELD INSTL CABIN-LH U/O PN 204-031-003-19 SEE FIG.24 FOR BREAKDOWN..........UHB	EA	1
19	3	XCFZZ		97499	204-030-666-39	.WINDSHIELD INSTL CABIN-RH SEE FIG.24 FOR BREAKDOWN ....UHC,UHM	EA	1
19	3	XCFZZ		97499	204-030-666-41	.WINDSHIELD INSTL CABIN-LH SEE FIG.24 FOR BREAKDOWN ....UHC,UHM	EA	1
19	3A	XCFZZ		97499	204-030-399-5	.TUBE INSTALLATION,D -LH..........UHB,UHC,UHM	EA	1
19	3A	XCFZZ		97499	204-030-399-6	.TUBE INSTL,DRAIN-RH..........UHB,UHC,UHM	EA	1
19	4	PAOZZ	4720-00-739-4590	97499	204-030-399-7	..TUBING,NONMETALLIC..........UHB,UHC,UHM	EA	4
19	5	PAOZZ	5305-00-558-8934	88044	AN525D10R8	..SCREW,MACHINE..........UHB,UHC,UHM	EA	4
19	6	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHB,UHC,UHM	EA	4
19	7	PAOZZ	5310-00-905-3081	96906	MS21083N3	..NUT,SELF-LOCKING,HE..........UHB,UHC,UHM	EA	4
19	8	PAOZZ	5340-00-993-6245	81996	EAB70005	..CLAMP,LOOP..........UHB,UHC,UHM	EA	1
19	9	PAOZZ	9905-00-984-0275	97499	204-031-184-1	.PLATE,IDENTIFICATIO..........UHB,UHC,UHM	EA	1
19	10	PAOOO	1560-00-736-4013	97499	204-030-853-119	.DOOR,PASSENGER CABIN LH,SEE FIG.25 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
19	10	PAOOO	1560-00-736-4014	97499	204-030-853-120	.DOOR PASSENGER CABIN RH U/O PN 204-031-003-19 SEE FIG.25 FOR BREAKDOWN..........UHB,UHC,UHM	EA	1
19	11	PAOZZ	1560-00-872-7883	97499	204-031-034-1	.SEAL,DOOR,FUSELAGE..........UHB,UHC,UHM	EA	2
19	12	MFOZZ	5330-00-756-7942	97499	204-031-003-13	.RUBBER SEAL -LH..........UHB,UHC,UHM	EA	1
19	12	MFOZZ	1560-00-758-1943	97499	204-031-003-14	.RUBBER SEAL -RH..........UHB,UHC,UHM	EA	1
19	13	XCFZZ		97499	204-030-615-159	.ROOF INSTL,CABIN U/O PN 204-030-008-15 & -21 SEE FIG.30 FOR BREAKDOWN..........UHB	EA	1
19	13	XCFZZ		97499	204-030-615-187	.ROOF INSTL,CABIN U/O PN 204-030-008-23 & -27 SEE FIG.30 FOR BREAKDOWN..........UHB	EA	1
19	13	XCFZZ		97499	204-030-615-235	.ROOF INSTL,CABIN U/O PN 204-030-008-35 SEE FIG.30 FOR BREAKDOWN..........UHB	EA	1
19	13	XCFZZ		97499	204-030-615-267	.ROOF INSTL,CABIN U/O PN 204-030-008-29 & -41 SEE FIG.30 FOR BREAKDOWN..........UHB	EA	1
19	13	XCFZZ		97499	204-031-615-1	.ROOF INSTL,CABIN U/O PN 204-031-003-1 & -7 SEE FIG.30 FOR BREAKDOWN..........UHB	EA	1
19	13	XCFZZ		97499	204-031-615-13	.ROOF INSTL,CABIN U/O PN 204-031-003-19 SEE FIG.30 FOR BREAKDOWN..........UHB	EA	1
19	13	XCFZZ		97499	204-031-615-25	.ROOF INSTL,CABIN U/O PN 204-031-003-35 SEE FIG.30 FOR BREAKDOWN..........UHC,UHM	EA	1
19	13	XCFZZ		97499	204-031-615-21	.ROOF INSTL,CABIN U/O PN 204-032-003-1 SEE FIG.30 FOR BREAKDOWN..........UHC,UHM	EA	1
19	13	XCFZZ		97499	204-031-615-33	.ROOF INSTL,CABIN U/O PN 204-032-003-9 SEE FIG.30 FOR BREAKDOWN..........UHC,UHM	EA	1
19	13	XCFZZ		97499	204-031-615-39	.ROOF INSTL,CABIN U/O PN 204-032-003-11 & -17 SEE FIG.30 FOR BREAKDOWN..........UHC,UHM	EA	1
19	14	PAOZZ	5306-00-182-2016	88044	AN4H5A	.BOLT,MACHINE..........UHB,UHC,UHM	EA	2
19	15	PAOZZ	5305-00-182-1370	88044	AN525-416R24	.SCREW,MACHINE..........UHB,UHC,UHM	EA	1
19	16	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..........UHB,UHC,UHM	EA	4
19	17	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE..........UHB,UHC,UHM	EA	4
19	18	PBOZZ	1560-00-876-2408	97499	204-030-897-9	.BRACE ASSEMBLY,LH..........UHB	EA	1
19	18	PAOZZ	1560-00-876-2409	97499	204-030-897-15	.BRACE ASSEMBLY RH..........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
19	18A	XCFZZ		97499	204-030-093-5	.SUPPORT INSTL,LH....................................UHC,UHM	EA	1
19	19	PAOZZ	5305-00-182-1370	98044	AN525-416R24	..SCREW,MACHINE....................................UHB,UHC,UHM	EA	1
19	20	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT....................................UHB,UHC,UHM	EA	1
19	21	PAOZZ	5310-00-877-5796	96906	MS21044N4	..NUT,SELF-LOCKING,HE....................................UHB,UHC,UHM	EA	
19	22	PAOZZ	1560-00-869-9003	97499	204-030-092-1	..BRACE ASSY,PYLON SUPPORT-LH....................................UHC,UHM	EA	
19	23	PAOZZ	5306-00-182-2017	88044	AN6H6A	..BOLT,MACHINE....................................UHB,UHC,UHM	EA	3
19	24	PAOZZ	5310-00-728-7717	96906	MS21069L4	..NUT,SELF-LOCKING,PL....................................UHB,UHC,UHM	EA	3
19	25	MOOZZ	1560-00-869-8945	97499	204-030-919-39	..BLOCK,RADIUS,PYLON....................................UHC,UHM	EA	3
19	26	PAOZZ	1560-00-950-9826	97499	204-030-093-9	..BRACKET,PYLON....................................UHC,UHM	EA	1
19	27	PBOOO	1560-00-927-3613	97499	204-030-669-141	.DOOR,CARGO,AIRCRAFT LH,SEE FIG 45 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
19	27	PBOOO	1560-00-927-3612	97499	204-030-669-142	.DOOR,CARGO,AIRCRAFT RH,SEE FIG 45 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
19	28	MFOZZ	5330-00-756-7963	97499	204-031-003-23	.SEAL U/O <UH-1D> PN 204-031-003-19..............UHB,UHC,UHM	EA	2
19	29	PAOZZ	5305-00-151-3161	88044	AN515-3R3	.SCREW,MACHINE....................................UHB,UHC,UHM	EA	4
19	30	PAOZZ	5310-00-543-2410	96906	MS35338-40	.WASHER,LOCK....................................UHB,UHC,UHM	EA	4
19	31	PAOZZ	5310-00-176-8127	88044	AN340-3	.NUT,PLAIN,HEXAGO....................................UHB,UHC,UHM	EA	4
19	32	MFOZZ	9905-00-532-6678	96906	MS27253-2	.PLATE,IDENTIFICATIO....................................UHB,UHC,UHM	EA	1
19	32A	XCFZZ		97499	204-030-353-7	.STOP INSTL,DOOR-LH USBL EFF <UH-1C> 64-14101 THRU 66-717 ....UHB,UHC,UHM	EA	1
19	32A	XCFZZ		97499	204-030-353-8	.STOP INSTL,DOOR-RH USBL EFF <UH-1C> 64-14101 THRU 66-717 ....UHB,UHC,UHM	EA	1
19	33	PAOZZ	5365-00-849-3934	97499	204-030-353-9	..SHIM U/O PN 204-030-353-7....................................UHB,UHC,UHM	EA	1
19	33	XBOZZ	5365-00-901-1811	97499	204-030-353-10	..SHIM U/O PN 204-030-353-8....................................UHB,UHC,UHM	EA	1
19	34	PAOOO	1560-00-672-0080	97499	204-030-353-3	..STOP ASSEMBLY,DOOR -LH....................................UHB,UHC,UHM	EA	1
19	34	PAOOO	1560-00-672-0079	97499	204-030-353-4	..STOP ASSEMBLY,DOOR -RH....................................UHB,UHC,UHM	EA	
19	35	PAOZZ	5315-00-823-8743	96906	MS16562-219	...PIN,SPRING....................................UHB,UHC,UHM	EA	
19	36	PAOZZ	5315-00-844-3963	96906	MS16562-46	...PIN,SPRING....................................UHB,UHC,UHM	EA	1
19	37	PAOZZ	5360-00-664-5161	97499	61-785-139-1	...SPRING,HELICAL,TORS....................................UHB,UHC,UHM	EA	1
19	38	PAOZZ	5315-00-815-1405	96906	MS24665-151	..PIN,COTTER....................................UHB,UHC,UHM	EA	1
19	39	PAOZZ	1560-00-021-3621	97499	204-030-968-3	..GUIDE STOP,CARGO DO....................................UHB,UHC,UHM	EA	1
19	40	XCFZZ		97499	204-030-006-49	.FUSELAGE ASSY U/O PN 204-030-008-15 SEE FIG.49,51,55 THRU 61 FOR BREAKDOWN....................................UHB	EA	1
19	40	XCFZZ		97499	204-030-006-55	.FUSELAGE ASSY U/O PN 204-030-008-21 SEE FIG.49,51,55 THRU 61 FOR BREAKDOWN....................................UHB	EA	1
19	40	XCFZZ		97499	204-030-006-57	.FUSELAGE ASSY U/O PN 204-030-008-23 SEE FIG.49,51,55 THRU 61 FOR BREAKDOWN....................................UHB	EA	1
19	40	XCFZZ		97499	204-030-006-79	.FUSELAGE ASSY U/O PN 204-030-008-27 SEE FIG.49,51,55 THRU 61 FOR BREAKDOWN....................................UHB	EA	1
19	40	XCFZZ		97499	204-030-006-83	.FUSELAGE ASSY U/O PN 204-030-008-35 SEE FIG.49,51,55 THRU 61 FOR BREAKDOWN....................................UHB	EA	1
19	40	XCFZZ		97499	204-031-006-1	.FUSELAGE ASSY U/O PN 204-030-008-29 SEE FIG.49,52,53,55 THRU 61 FOR BREAKDOWN....................................UHB	EA	1
19	40	XCFZZ		97499	204-031-006-13	.FUSELAGE ASSY U/O PN 204-030-008-41 SEE FIG.49,52,53,55 THRU 61 FOR BREAKDOWN....................................UHB	EA	1
19	40	XCFZZ		97499	204-031-006-25	.FUSELAGE ASSY U/O PN 204-031-003-1 SEE FIG.49,50,52,55 THRU 61 FOR BREAKDOWN....................................UHB	EA	1
19	40	XCFZZ		97499	204-031-006-49	.FUSELAGE ASSY U/O PN 204-031-003-7 SEE FIG.49,50,52,53,55 THRU 61 FOR BREAKDOWN....................................UHB	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
19	40	XCFZZ		97499	204-031-006-71	.FUSELAGE ASSY U/O PN 204-031-003-19 SEE FIG.49,50,52,53,55 THRU 61 FOR BREAKDOWN.........UHB	EA	1
19	40	XCFZZ		97499	204-031-006-109	.FUSELAGE ASSY U/O PN 204-031-003-35 SEE FIG.49,50,52,53,55 THRU 61 FOR BREAKDOWN.........UHC,UHM	EA	1
19	40	XCFZZ		97499	204-032-006-1	.FUSELAGE ASSY U/O PN 204-032-003-1 SEE FIG.49,50,52,53,55 THRU 61 FOR BREAKDOWN.........UHC,UHM	EA	1
19	40	XCFZZ		97499	204-032-006-21	.FUSELAGE ASSY U/O PN 204-032-003-9 & -11 SEE FIG.49,50,52, 53,55 THRU 61 FOR BREAKDOWN.........UHC,UHM	EA	1
19	40	XCFZZ		97499	204-032-006-27	.FUSELAGE ASSY U/O PN 204-032-003-17 SEE FIG.49,50,52,53,55 THRU 61 FOR BREAKDOWN.........UHC,UHM	EA	1
19	40A	PAOZZ	5306-00-141-4516	88044	AN174H4A	.BOLT,CLOSE TOLERANC.........UHB,UHC,UHM	EA	8
19	41	AOOOO	1560-00-H26-1048	97499	204-050-152-87	.LANDING GEAR ASSEMB SEE FIG.92 FOR BREAKDOWN....UHB,UHC,UHM	EA	1
19		XCFZZ		97499	204-030-737-1	.CABLE INSTL-LH STRIKER EJECTION U/O PN 204-030-008-15,-21,-23,-27,-29,-35 &-41 SEE FIG.440 FOR BREAKDOWN.........UHB	EA	1
19		XCFZZ		97499	204-030-737-3	.CABLE INSTL-LH STRIKER EJECTION U/O (UH-1B) PN 204-031-003-1,-7 &-19 SEE FIG.440 FOR BREAKDOWN.........UHB,UHC,UHM	EA	1
19		XCFZZ		97499	204-030-737-2	.CABLE INSTL-RH STRIKER EJECTION U/O PN 204-030-008-15,-21,-23,-27,-29,-35 &-41 SEE FIG.440 FOR BREAKDOWN.........UHB	EA	1
19		XCFZZ		97499	204-030-737-4	.CABLE INSTL-RH STRIKER EJECTION U/O (UH-1B) PN 204-031-003-1,-7 &-19 SEE FIG.440 FOR BREAKDOWN.........UHB,UHC,UHM	EA	1
19		XCFZZ		97499	204-032-259-1	.RETAINER INSTL CARGO DOOR.........UHB,UHC,UHM	EA	1
19		XCFZZ		97499	204-032-259-23	..RETAINER INSTL-LH.........UHB,UHC,UHM	EA	1
19		XCFZZ		97499	204-032-259-24	..RETAINER INSTL-RH.........UHB,UHC,UHM	EA	1
19	42	PAOZZ	5305-00-925-9674	96906	MS27039-1-10	...SCREW,MACHINE.........UHB,UHC,UHM	EA	2
19	43	PAOZZ	5310-00-167-0834	88044	AN960-10L	...WASHER,FLAT.........UHB,UHC,UHM	EA	2
19	44	PAOOO	1560-00-927-5755	97499	204-032-259-29	...STRAP ASSEMBLY,CARG.........UHB,UHC,UHM	EA	1
19	45	MFOZZ	9320-00-842-6045	97499	204-032-259-27	....RUBBER STRIP.........UHB,UHC,UHM	EA	1
19	46	PAOZZ	5305-00-925-9682	96906	MS27039-1-11	...SCREW,MACHINE.........UHB,UHC,UHM	EA	2
19	47	PAOZZ	5310-00-167-0834	88044	AN960-10L	...WASHER,FLAT.........UHB,UHC,UHM	EA	2
19	48	PAOZZ	5306-00-182-2015	88044	AN4H4A	...BOLT,MACHINE.........UHB,UHC,UHM	EA	1
19	49	PAOZZ	5310-00-167-0835	88044	AN960-416L	...WASHER,FLAT ACCESS-CENTER.........UHB,UHC,UHM	EA	1
19	50	PAOZZ	1560-00-927-5753	97499	204-032-259-17	...STRAP,CARGO DOOR -LH U/O PN 204-032-259-23....UHB,UHC,UHM	EA	1
19	50	PAOZZ	1560-00-927-5754	97499	204-032-259-18	...STRAP,CARGO DOOR -RH U/O PN 204-032-259-24....UHB,UHC,UHM	EA	1
19	51	PAOZZ	5306-00-292-8252	88044	AN4H7A	...BOLT,MACHINE.........UHB,UHC,UHM	EA	3
19	52	PAOZZ	5310-00-167-0835	88044	AN960-416L	...WASHER,FLAT.........UHB,UHC,UHM	EA	3
19	53	PAOOO	1560-00-927-5752	97499	204-032-259-3	...CATCH ASSEMBLY,BAYO -LH U/O PN 204-032-259-23 ....UHB,UHC,UHM	EA	1
19	53	PAOOO	1560-00-927-5751	97499	204-032-259-4	...CATCH ASSEMBLY,BAYO -RH U/O PN 204-032-259-24 ....UHB,UHC,UHM	EA	1
19	54	PAOZZ	5365-00-865-8125	97499	204-032-259-25	....SPACER,PLATE.........UHB,UHC,UHM	EA	1
19	55	PAOZZ	5315-00-196-2455	88044	AN415-2	....PIN,LOCK.........UHB,UHC,UHM	EA	1
19	56	XCFZZ		97499	204-030-668-115	.POST INSTL,DOOR-LH U/O PN 204-030-008-15.........UHB	EA	1
19	56	XCFZZ		97499	204-030-668-135	.POST INSTL,DOOR-LH U/O PN 204-030-008-21.........UHB	EA	1
19	56	XCFZZ		97499	204-030-668-147	.POST INSTL,DOOR-LH U/O PN 204-030-008-23,-27, & -35.....UHB	EA	1
19	56	XCFZZ		97499	204-030-668-215	.POST INSTL,DOOR-LH U/O PN 204-030-008-29 & -41.........UHB	EA	1
19	56	XCFZZ		97499	204-031-668-1	.POST INSTL,DOOR-LH U/O PN 204-031-003-1.........UHB	EA	1
19	56	XCFZZ		97499	204-031-668-91	.POST INSTL,DOOR-LH U/O PN 204-031-003-7,-19, -35,204-032-003-1,-9,& -11.........UHB,UHC,UHM	EA	1
19	56	XCFZZ		97499	204-031-668-143	.POST INSTL,DOOR-LH U/O PN 204-032-003-17.........UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
19	56	XCFZZ		97499	204-030-668-116	.POST INSTL,DOOR-RH U/O PN 204-030-008-15................UHB	EA	1
19	56	XCFZZ		97499	204-030-668-136	.POST INSTL,DOOR-RH U/O PN 204-030-008-21................UHB	EA	1
19	56	XCFZZ		97499	204-030-668-148	.POST INSTL,DOOR-RH U/O PN 204-030-008-23,-27, & -35.....UHB	EA	1
19	56	XCFZZ		97499	204-030-668-189	.POST INSTL,DOOR-RH U/O PN 204-030-008-29................UHB	EA	1
19	56	XCFZZ		97499	204-030-668-219	.POST INSTL,DOOR-RH U/O PN 204-030-008-41................UHB	EA	1
19	56	XCFZZ		97499	204-031-668-2	.POST INSTL,DOOR-RH U/O PN 204-031-003-1.................UHB	EA	1
19	56	XCFZZ		97499	204-031-668-92	.POST INSTL,DOOR-RH U/O PN 204-031-003-7 & -19...........UHB	EA	1
19	56	XCFZZ		97499	204-031-668-103	.POST INSTL,DOOR-RH U/O PN 204-031-003-35, 204-032-003-1,-9, & -11..........UHC,UHM	EA	1
19	56	XCFZZ		97499	204-031-668-145	.POST INSTL,DOOR-RH U/O PN 204-032-003-17...........UHC,UHM	EA	1
19	56	XBFFF	1560-00-H24-7373	97499	204-030-668-117	..POST ASSEMBLY,DOOR- -LH U/O PN 204-030-668-11..........UHB	EA	1
19	56	XBFFF	1560-00-H24-7374	97499	204-030-668-137	..POST ASSEMBLY,DOOR- -LH U/O PN 204-030-668-135.........UHB	EA	1
19	56	XDFFF	1560-00-867-1192	97499	204-030-668-149	..POST ASSEMBLY,LEFT -RH U/O PN 204-030-668-147..........UHB	EA	1
19	56	XBFFZ	1560-00-867-1197	97499	204-030-668-217	..POST ASSEMBLY -LH U/O PN 204-030-668-215...............UHB	EA	1
19	56	XBFFZ	1560-00-867-1198	97499	204-031-668-3	..POST ASSEMBLY -LH U/O PN 204-031-668-1.................UHB	EA	1
19	56	PBFFF	1560-00-967-3531	97499	204-031-668-93A	..DOOR POST ASSEMBLY -LH U/O PN 204-031-668-9....UHB,UHC,UHM	EA	1
19	56	XDFFF		97499	204-031-668-209	..POST ASSY,DOOR -LH U/O PN 204-031-668-14...........UHC,UHM	EA	1
19	56	XBFFF	1560-00-H24-7971	97499	204-030-668-118	..POST ASSEMBLY,DOOR- -RH U/O PN 204-030-668-116.........UHP	EA	1
19	56	XBFFF	1560-00-H24-7972	97499	204-030-668-139	..POST ASSEMBLY,DOOR- -RH U/O PN 204-030-668-136.........UHB	EA	1
19	56	XBFFF	1560-00-H24-9840	97499	204-030-668-150	..POST ASSEMBLY,DOOR- -RH U/O PN 204-030-668-148.........UHB	EA	1
19	56	XBFFZ	1560-00-866-9543	97499	204-030-668-191	..POST ASSEMBLY -RH U/O PN 204-030-668-189...............UHB	EA	1
19	56	XBFFZ	1560-00-867-1196	97499	204-030-668-221	..POST ASSEMBLY -RH U/O PN 204-030-668-219...............UHB	EA	1
19	56	XBFFZ	1560-00-867-5495	97499	204-031-668-4	..POST ASSEMBLY -RH U/O PN 204-031-668-2.................UHB	EA	1
19	56	XBFFF	1560-00-H26-0898	97499	204-031-668-94	..POST ASSEMBLY,DOOR- -RH U/O PN 204-031-668-9...........UHB	EA	1
19	56	XBFFZ	1560-00-116-7218	97499	204-031-668-105B	..POST ASSEMBLY,STRUC -RH U/O PN 204-031-668-10......UHC,UHM	EA	1
19	56	XBFFF	1560-00-H26-5512	97499	204-031-668-149	..POST ASSEMBLY,DOOR- -RH U/O PN 204-031-668-145.....UHC,UHM	EA	1
19	56A	PBDZZ	1560-00-120-0882	97499	204-031-868-1	..CLIP...UHB,UHC,UHM	EA	1
19	56A	PADZZ	1560-00-120-0884	97499	204-031-868-2	..CLIP...UHB,UHC,UHM	EA	1
19	57	PADZZ	5325-00-174-2923	88044	AN227-8	...STUD,SNAP FASTENER..............................UHB,UHC,UHM	EA	V
19	58	MFOZZ	1560-00-867-1199	97499	204-031-668-7	...DOOR ASSEMBLY U/O PN 204-031-668-3,-4, -93A,-94,& -105 ....UHB,UHC,UHM	EA	1
19	59	PADZZ	5305-00-267-8971	96906	MS24694S7	...SCREW,MACHINE...................................UHB,UHC,UHM	EA	2
19	60	PADZZ	1560-00-738-8353	97499	204-031-247-1	...PIN,CARGO DOOR POST -LH.........................UHB,UHC,UHM	EA	1
19	60	PADZZ	1560-00-874-0872	97499	204-031-247-2	...PIN,CARGO DOOR POST -RH.........................UHB,UHC,UHM	EA	1
19	60A	PAFZZ	1560-01-125-5400	97499	204-030-668-143	..RETAINER,POST,LH.................................UHB,UHC,UHM	EA	1
19	60B	PAFZF	1560-00-133-7361	97499	204-030-668-144	..RETAINER,POST INSTA..............................UHB,UHC,UHM	EA	1
19	61	PAFZZ	5310-00-761-4220	96906	MS21073L08	...NUT,SELF-LOCKING,PL.............................UHB,UHC,UHM	EA	2
19	62	PADZZ	1560-00-738-8316	97499	204-030-668-125	...SEAL -LH U/O PN 204-030-668-117.......................UHB	EA	1
19	62	PADZZ	1560-00-738-8350	97499	204-030-668-145	...SEAL -LH U/O PN 204-030-668-137,-149,204-031-668-3,-93A & -209.............................UHB,UHC,UHM	EA	1
19	62	PADZZ	1560-00-738-8317	97499	204-030-668-126	...SEAL -RH U/O PN 204-030-668-118.......................UHB	EA	1
19	62	PADZZ	1560-00-739-2583	97499	204-030-668-146	...SEAL,RH U/O PN 204-030-668-138,-150,-191 PN 204-031-668-4,-94,-105 & 149...........UHB,UHC,UHM	EA	1
19	63	PADZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON...........UHB,UHC,UHM	EA	4
19	64	PADZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT.....................................UHB,UHC,UHM	EA	4

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
19	65	PAOZZ	5305-00-989-7434	96906	MS35207-263	...SCREW,MACHINE..................................UHB,UHC,UHM	EA	3
19	66	PAOZZ	5305-00-989-7435	96906	MS35207-264	...SCREW,MACHINE..................................UHB,UHC,UHM	EA	1
19	67	PAOZZ	5340-00-598-8251	88044	AN743-12	...BRACKET,ANGLE..................................UHB,UHC,UHM	EA	2
19	68	PAOZZ	5340-00-995-8005	81996	EAB700022	...CLAMP,LOOP..................................UHB,UHC,UHM	EA	2
19	69	PAOZZ	4720-00-068-4386	97499	70-00465F5521	...HOSE,AIR DUCT U/O PN 204-031-668-3,-4, -93A,-94,-149,& -209..................................UHB,UHC,UHM	EA	1
19	70	PAOZZ	5305-00-180-0014	88044	AN525-10R12	...SCREW,MACHINE..................................UHB,UHC,UHM	EA	2
19	71	PAOZZ	5305-00-180-3326	88044	AN525-10R16	...SCREW,MACHINE..................................UHB,UHC,UHM	EA	1
19	72	PAOZZ	5310-00-167-0834	88044	AN960-10L	...WASHER,FLAT..................................UHB,UHC,UHM	EA	3
19	73	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING..................................UHB,UHC,UHM	EA	3
19	74	PAOZZ	1560-00-772-0303	97499	204-030-824-3	...PLATE, STRIKER,LEFT..................................UHB,UHC,UHM	EA	1
19	74	PAOZZ	1560-00-771-2511	97499	204-030-824-4	...PLATE,STRIKER,RIGHT..................................UHB,UHC,UHM	EA	1
19	75	PAOZZ	1560-00-787-4255	97499	100-062-1	...STRIKER,BACKING PLA..................................UHB,UHC,UHM	EA	1
19	76	PAOZZ	5365-00-765-7849	97499	204-030-975-1	...SHIM..................................UHB,UHC,UHM	EA	1
19	77	PAOZZ	5340-00-738-8351	97499	204-031-237-1	...GUIDE,STRIKER..................................UHB,UHC,UHM	EA	1
19	78	PAOZZ	5325-00-276-4926	88044	AN227-10	...STUD,SNAP FASTENER..................................UHB,UHC,UHM	EA	1
19	79	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..................................UHB,UHC,UHM	EA	1
19	80	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING..................................UHB,UHC,UHM	EA	1
19	81	PAOZZ	5310-00-807-1473	96906	MS21042L08	...NUT,SELF-LOCKING..................................UHB,UHC,UHM	EA	4
19	82	PAOZZ	5310-00-184-8966	88044	AN960PD8	...WASHER,FLAT -LH SIDE..................................UHB,UHC,UHM	EA	4
19	82A	PAOZZ	5365-00-580-5787	80205	NAS43HT3-12	...SPACER,SLEEVE -LH SIDE..................................UHB,UHC,UHM	EA	4
19	83	XDOZZ		88044	AN227-26BM8	...STUD,SNAP FASTENER -LH SIDE..................................UHB,UHC,UHM	EA	4
19	84	PAOZZ	5325-00-174-2923	88044	AN227-8	...FASTENER..................................UHB,UHC,UHM	EA	5
19	85	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE USBL EFF UH-1C 64-14101 & SUBSEQUENT..................................UHB,UHC,UHM	EA	2
19	86	PAFZZ	5310-00-985-0762	80205	NAS1030A3	...NUT,SELF-LOCKING,PL USBL EFF UH-1C 64-14101 & SUBSEQUENT..................................UHB,UHC,UHM	EA	2
19	87	PAOZZ	1560-00-738-8320	97499	100-060-3	...PLATE,DOOR STRIKER -LH USBL EFF UH1C 64-14101 & SUB..................................UHB,UHC,UHM	EA	1
19	87	PAOZZ	1560-00-738-8330	97499	100-060-4	...PLATE,DOOR STRIKER -RH USBL EFF UH1C 64-14101 & SUB..................................UHB,UHC,UHM	EA	1
19	88	PAOZZ	1560-00-787-4254	97499	100-060-1	...PLATE,DOOR STRIKER -LH USBL EFF UH1C 64-14101 & SUB..................................UHB,UHC,UHM	EA	1
19	88	PAOZZ	5340-00-478-7290	97499	100-060-2	...PLATE,DOOR STRIKER -RH USBL EFF UH1C 64-14101 & SUB..................................UHB,UHC,UHM	EA	1
19	89	PAOZZ	5360-00-672-4796	97499	120-061-1	...SPRING,HELICAL,EXTE..................................UHB,UHC,UHM	EA	1
19	90	PAOZZ	5340-00-514-1339	88044	AN743Z13	...BRACKET,ANGLE USBL EFF UH-1C 64-14101 & SUBSEQUENT..................................UHB,UHC,UHM	EA	1
19	91	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON............UHB,UHC,UHM	EA	1
19	92	PAOZZ	5310-00-167-0834	88044	AN960-10L	...WASHER,FLAT..................................UHB,UHC,UHM	EA	1
19	93	PAOZZ	5306-00-182-2059	88044	AN3H6A	...BOLT,MACHINE..................................UHB,UHC,UHM	EA	1
19	94	PAOOO	1560-00-670-7933	97499	204-030-504-1	...STRIKER ASSEMBLY..................................UHB,UHC,UHM	EA	1
19	95	PAOZZ	3110-00-042-4805	96906	MS27645-3A	....BEARING,BALL,AIRFRA..................................UHB,UHC,UHM	EA	1
19	96	XDOZZ	3120-00-690-1135	97499	120-011-3LS	....BUSHING,SLEEVE..................................UHB,UHC,UHM	EA	1
19	97	PAOZZ	5305-00-964-5929	96906	MS27039-1-07	...SCREW,MACHINE USBL EFF UH-1C 66-15023 & SUBSEQUENT..................................UHC,UHM	EA	3
19	98	PAFZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL USBL EFF UH-1C 66-15023 & SUBSEQUENT	EA	3

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						.........UHC,UHM		
19	99	PAOZZ	1560-00-929-8439	97499	204-031-200-1	...PLATE,STRIKER GUIDE -LH USBL EFF UHIC 66-15023 & SUB ....UHC,UHM	EA	1
19	99	PAOZZ	1560-00-929-8437	97499	204-031-200-2	...PLATE,STRIKER GUIDE -RH USBL EFF UHIC 66-15023 & SUB ....UHC,UHM	EA	1
19	100	PAOZZ	1560-00-929-8440	97499	204-031-200-3	...PLATE,STRIKER GUIDE -LH USBL EFF UHIC 66-15023 & SUB ....UHC,UHM	EA	1
19	100	PAOZZ	1560-00-929-8438	97499	204-031-200-4	...PLATE,STRIKER GUIDE -RH USBL EFF UHIC 66-15023 & SUB ....UHC,UHM	EA	1
19	100A	XCFZZ		97499	204-031-198-3	...STRIKER INSTL-LH USBL EFF UH-1C 66-15023 & SUBSEQUENT ....UHC,UHM	EA	1
19	100A	XCFZZ		97499	204-031-198-4	...STRIKER INSTL-RH USBL EFF UH-1C 66-15023 & SUBSEQUENT ....UHC,UHM	EA	1
19	101	PAOZZ	5360-00-672-4796	97499	120-061-1	....SPRING,HELICAL,EXTE.........UHC,UHM	EA	1
19	102	PAOZZ	5315-00-234-1856	96906	MS24665-155	....PIN,COTTER USBL EFF UH-1C 66-15023 & SUBSEQUENT ....UHC,UHM	EA	1
19	103	PAOZZ	5310-00-167-0816	88044	AN960-6	....WASHER,FLAT USBL EFF UH-1C 66-15023 & SUBSEQUENT ....UHC,UHM	EA	1
19	104	PAOZZ	5315-00-867-1920	88044	AN121605	....PIN,STRAIGHT HEADED USBL EFF UH-1C 66-15023 & SUBSEQUENT ....UHC,UHM	EA	1
19	105	PAOZZ	5310-00-807-1474	96906	MS21042L3	....NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON......UHC,UHM	EA	1
19	106	PAOZZ	5310-00-167-0834	88044	AN960-10L	....WASHER,FLAT.........UHC,UHM	EA	1
19	107	PAOZZ	5306-00-182-2059	88044	AN3H6A	....BOLT,MACHINE.........UHC,UHM	EA	1
19	108	PAOOO	1560-00-670-7933	97499	204-030-504-1	....STRIKER ASSEMBLY.........UHC,UHM	EA	1
19	109	PAOZZ	3110-00-042-4805	96906	MS27645-3A	.....BEARING,BALL A/C.........UHE,UHH,UHV,UHX	EA	1
19	110	XDOZZ	3120-00-690-1135	97499	120-011-3LS	.....BUSHING,SLEEVE.........UHC,UHM	EA	1
19	111	PAOZZ	1560-00-929-8424	97499	204-031-199-3	....PLATE,STRIKER USBL EFF UH-1C 66-15023 & SUBSEQUENT ....UHC,UHM	EA	1
19	112	PAOZZ	1560-00-929-8425	97499	204-031-199-4	....PLATE,STRIKER USBL EFF UH-1C 66-15023 & SUPSEQUENT ....UHC,UHM	EA	1
19	113	XDOZZ	1560-00-929-8421	97499	204-031-198-7	....BRACKET ASSY-LH USBL EFF UH-1C 66-15023 & SUBSEQUENT ....UHC,UHM	EA	1
19	113	PAOZZ	1560-00-929-8422	97499	204-031-198-8	....BRACKET ASSY-RH USBL EFF UH-1C 66-15023 & SUBSEQUENT ....UHC,UHM	EA	1
19	114	PAOZZ	1560-00-831-0739	97499	204-030-971-3	..SEAL,CARGO DOOR.........UHB,UHC,UHM	EA	2

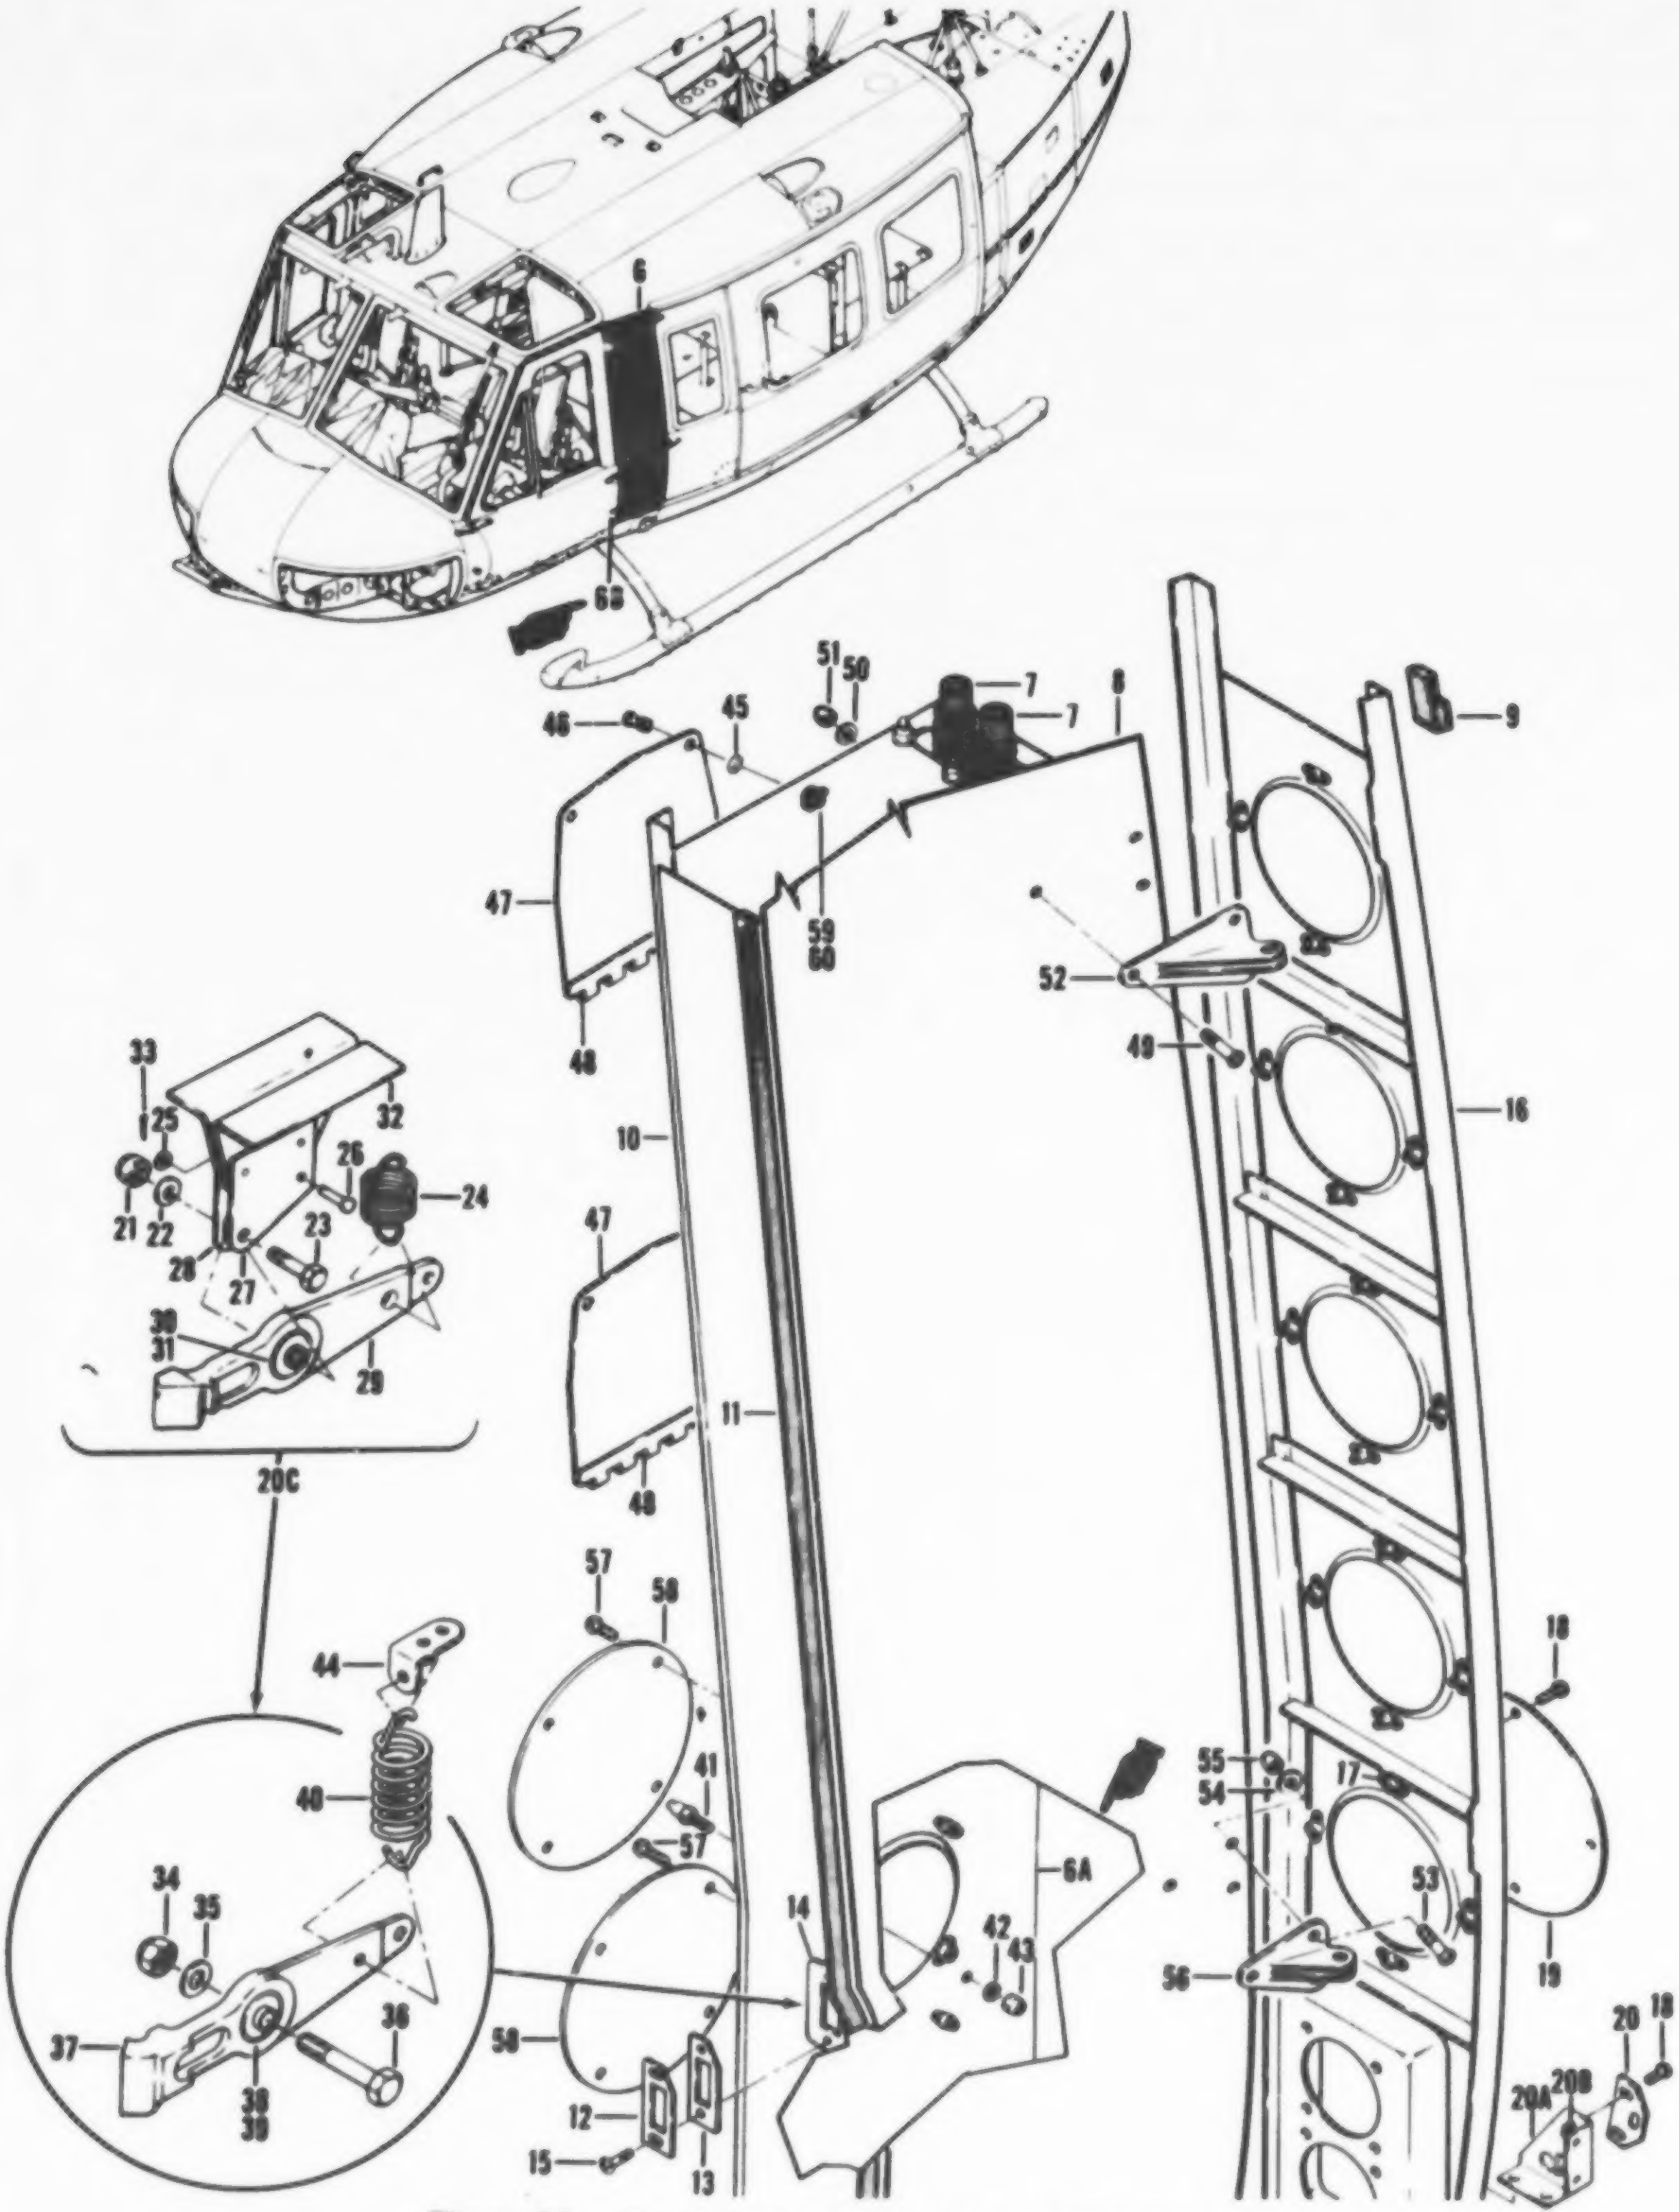
6
6B
51
50
7
7
8
9
46
45
47
59
60
52
48
49
16
33
25
32
26
24
21
22
23
28
27
30
31
29
10
47
11
48
20C
57
58
18
44
41
55
54
17
40
57
6A
34
35
53
42
43
14
56
19
36
20
18
37
38
39
58
12
15
13
20A
20B

Figure 20. Fuselage Assembly, Helicopter Forward (Sheet 1 of 3)

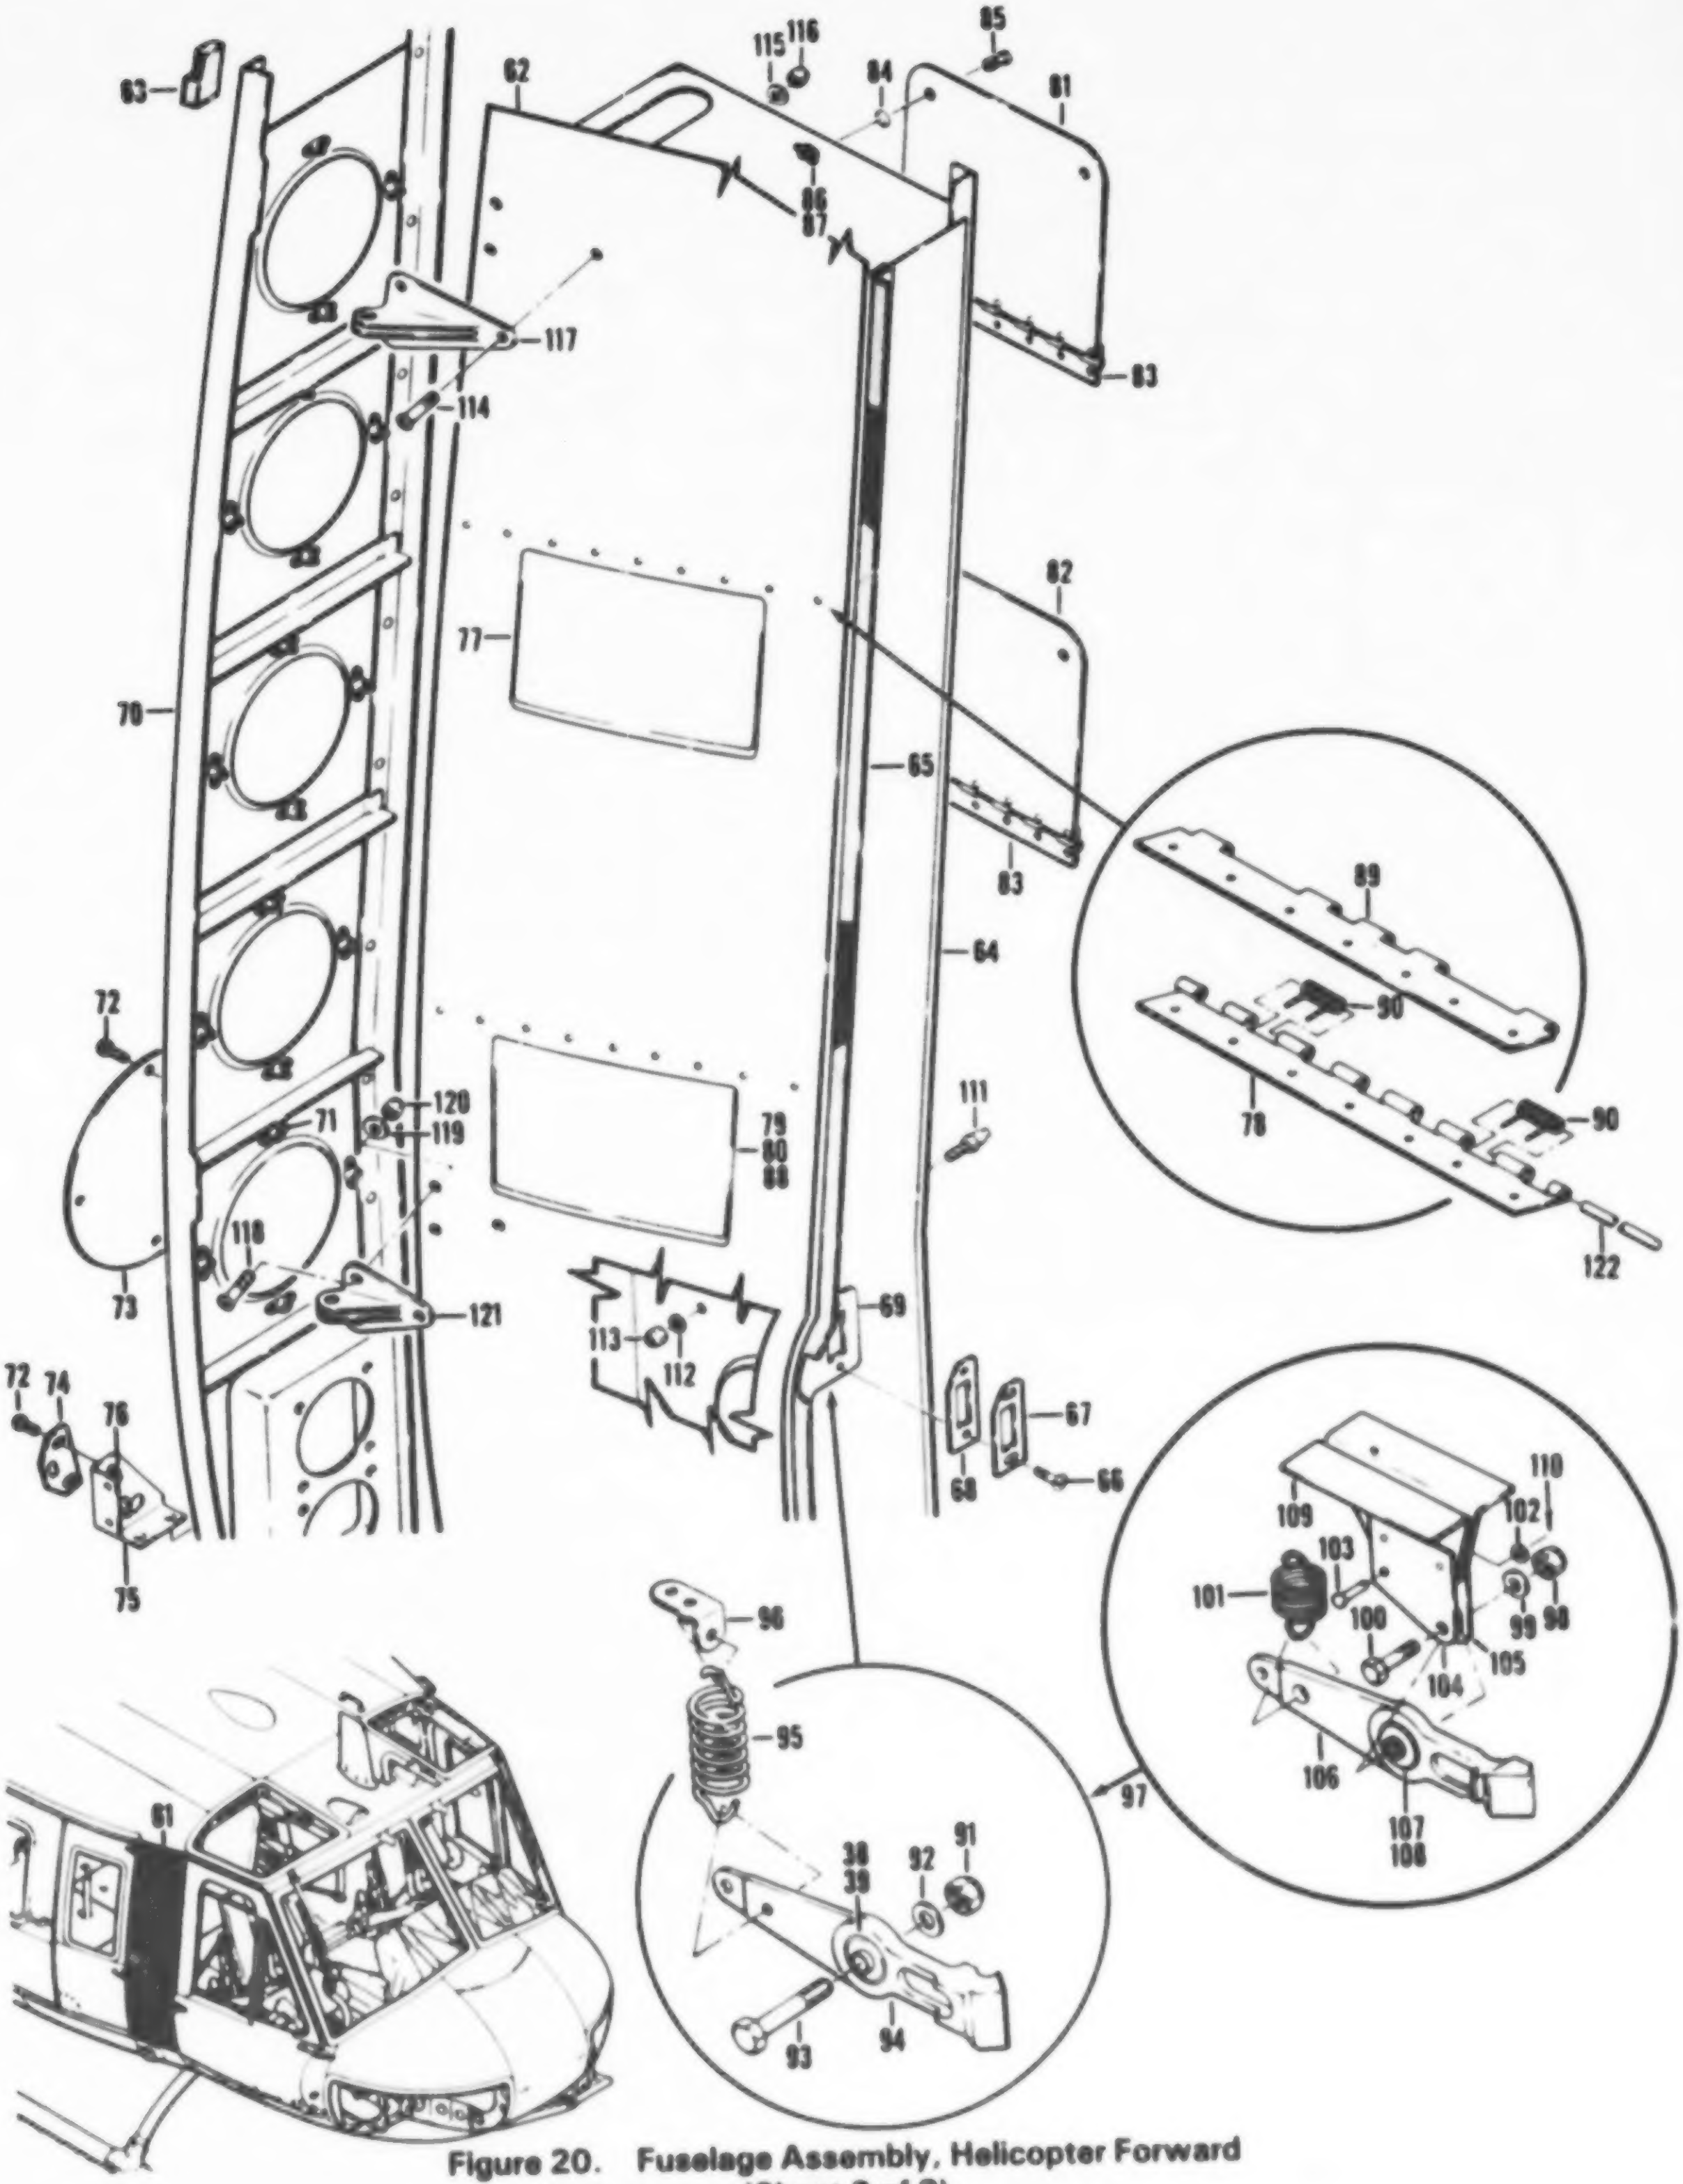
63
62
115
116
85
84
81
86
87
117
83
114
82
77
70
65
83
89
64
90
78
90
72
120
119
71
111
79
80
88
118
73
121
122
69
113
112
72
74
76
67
68
66
75
110
109
102
103
101
98
99
100
105
104
96
106
95
97
107
108
61
38
39
92
91
93
94

Figure 20. Fuselage Assembly, Helicopter Forward
(Sheet 2 of 3)

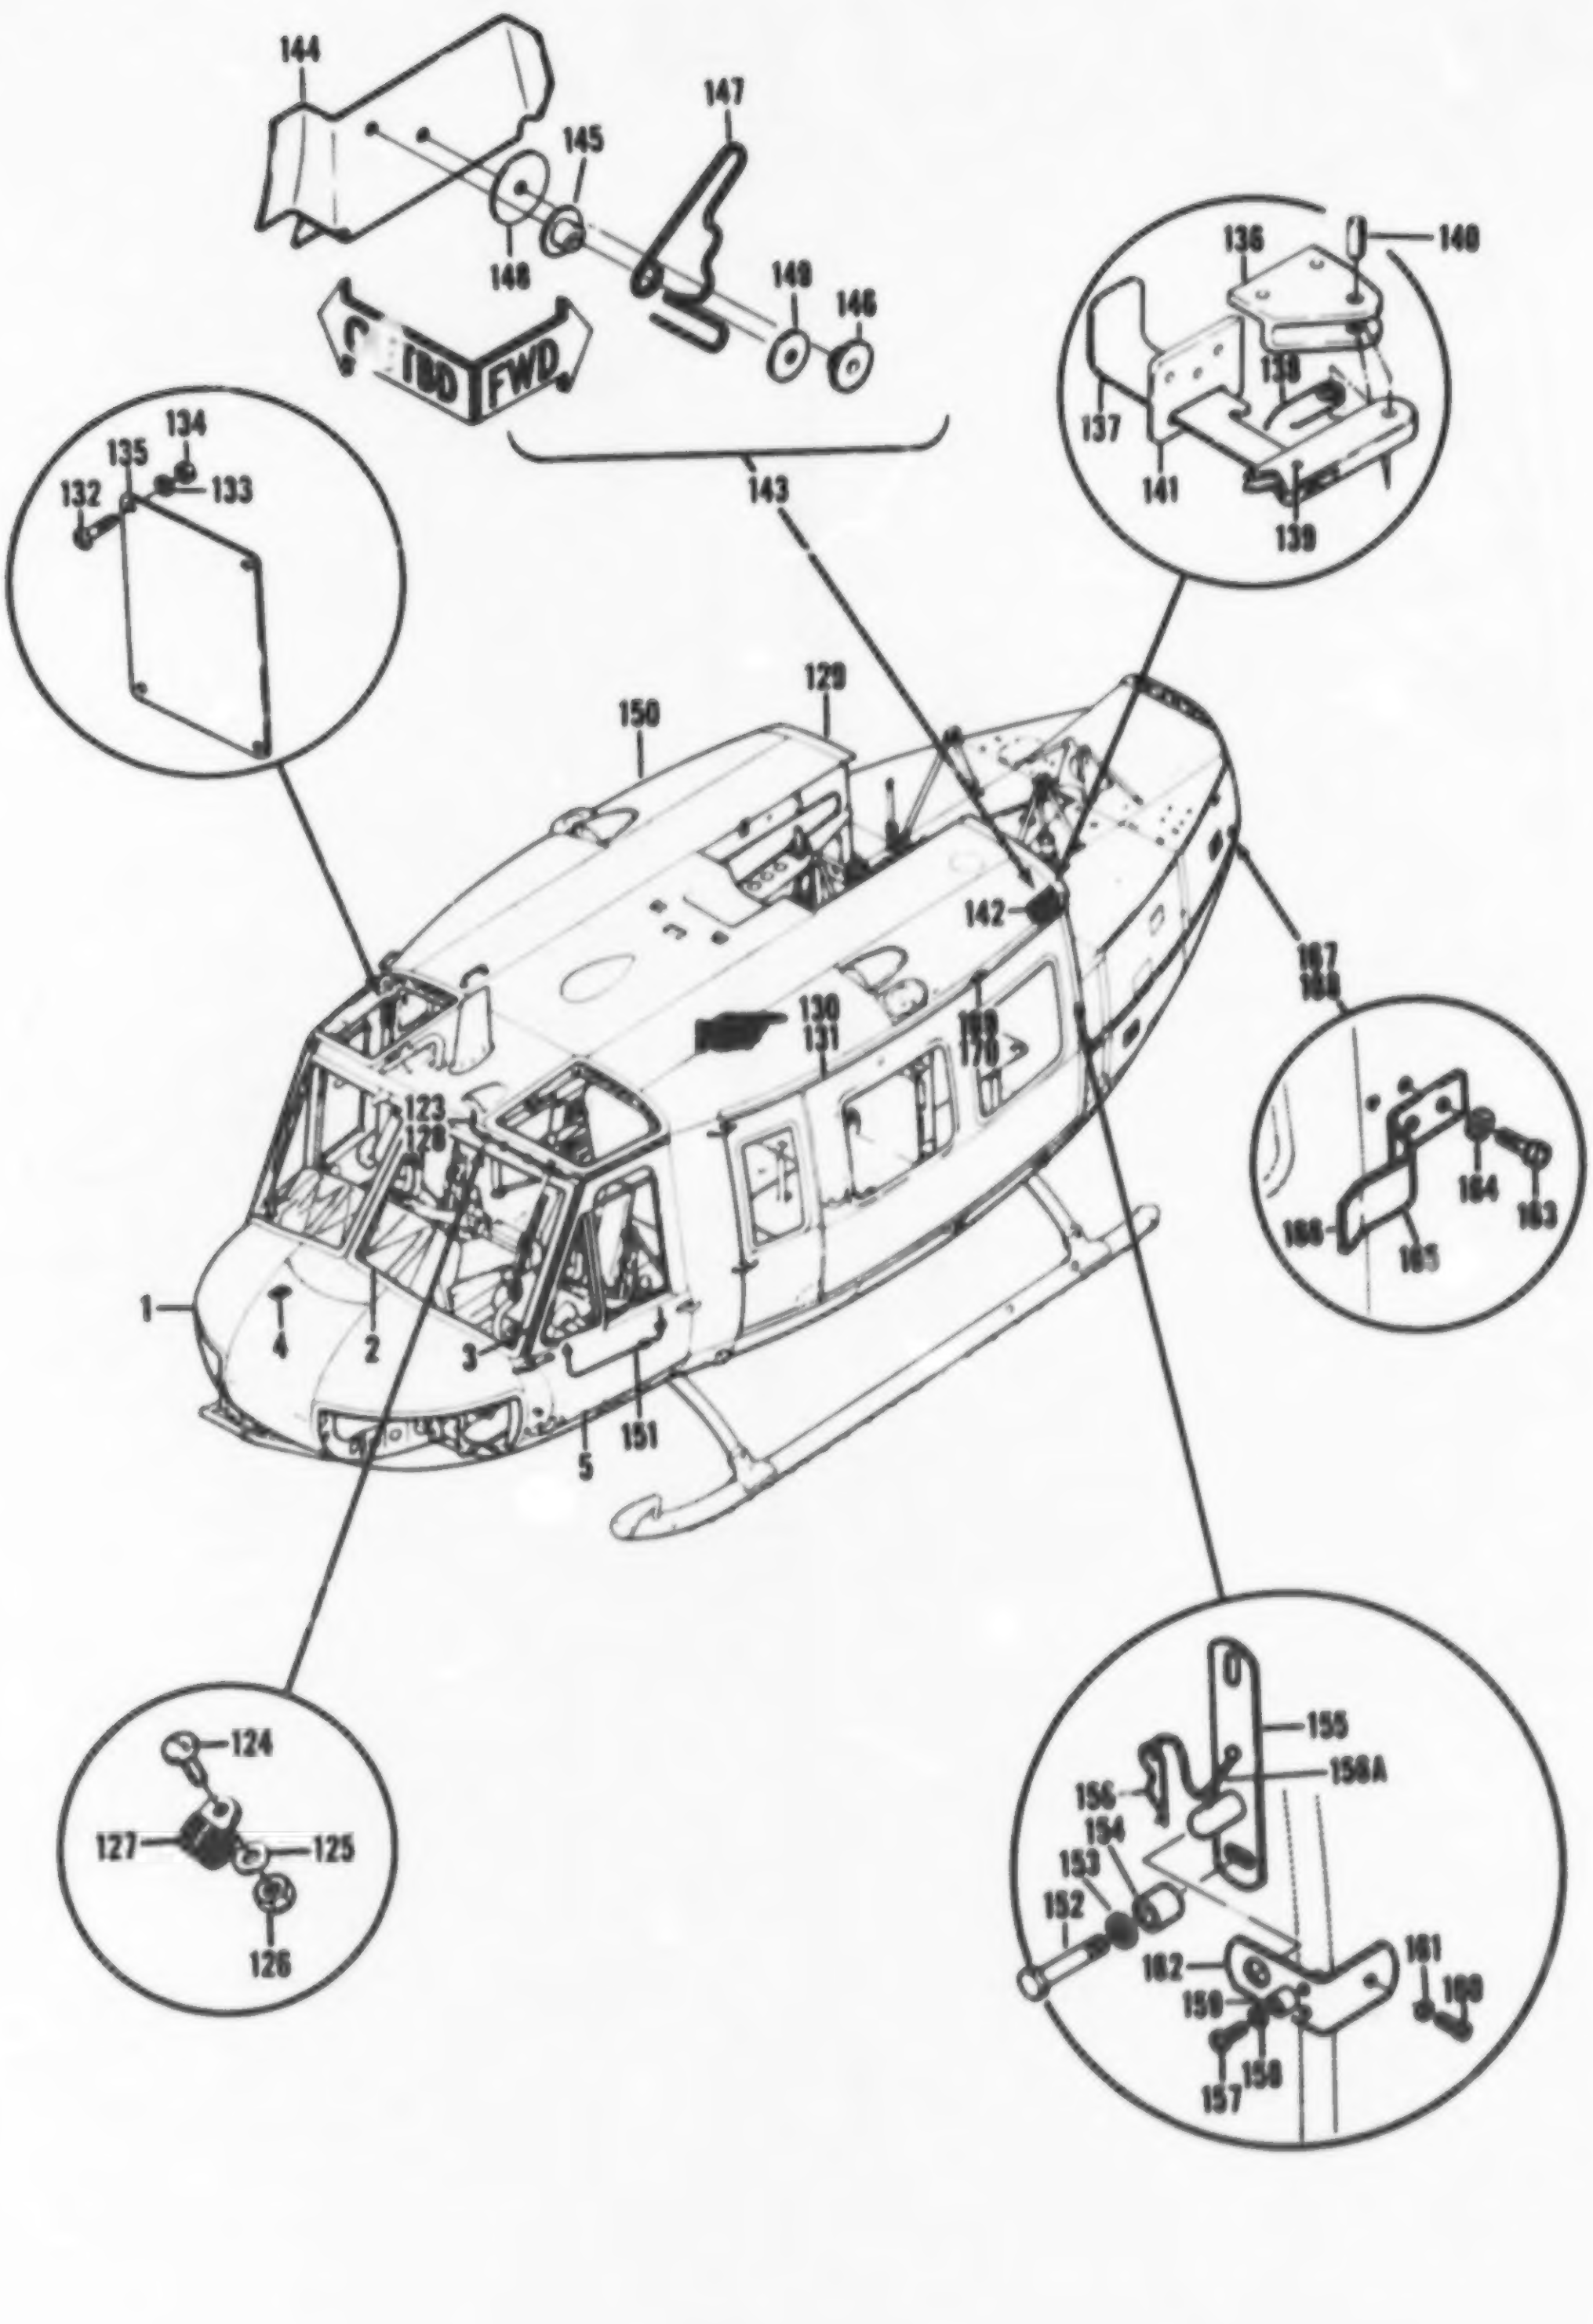
144
147
145
148
149
146
TBD
FWD
143
134
135
132
133
136
140
138
137
141
139
150
129
142
167
168
130
131
169
170
123
128
1
4
2
3
151
5
166
165
164
163
124
127
125
126
155
156A
156
154
153
152
162
161
160
159
158
157

Figure 20. Fuselage Assembly, Helicopter Forward
(Sheet 3 of 3)

(1) ILLUSTRATION (a) FIG. NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
20		XCFZZ		97499	205-030-008-3	FUSELAGE ASSY,ACFT FORWARD USBL EFF 62-2106 THRU 62-2113 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-5	FUSELAGE ASSY,ACFT FORWARD USBL EFF 62-12351 THRU 62-12372 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-7	FUSELAGE ASSY,ACFT FORWARD USBL EFF 63-8739 THRU 63-8803 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-9	FUSELAGE ASSY,ACFT FORWARD USBL EFF 63-8804 THRU 63-8859 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-15	FUSELAGE ASSY,ACFT FORWARD USBL EFF 63-12956 THRU 63-13002 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-13	FUSELAGE ASSY,ACFT FORWARD USBL EFF 64-13492 THRU 64-13661 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-17	FUSELAGE ASSY,ACFT FORWARD USBL EFF 64-13662 THRU 64-13901 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-19	FUSELAGE ASSY,ACFT FORWARD USBL EFF 65-9565 THRU 65-12895 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-21	FUSELAGE ASSY,ACFT FORWARD USBL EFF 66-746 THRU 66-16033 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-23	FUSELAGE ASSY,ACFT FORWARD USBL EFF 66-16034 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-33	FUSELAGE ASSY,ACFT FORWARD USBL EFF 67-17145 THRU 67-17312 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-35	FUSELAGE ASSY,ACFT FORWARD USBL EFF 67-17313 THRU 67-17777 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-39	FUSELAGE ASSY,ACFT FORWARD USBL EFF 67-17778 THRU 68-15324 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-45	FUSELAGE ASSY,ACFT FORWARD USBL EFF 68-15325 THRU 68-15489 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-49	FUSELAGE ASSY,ACFT FORWARD USBL EFF 68-15490 THRU 68-15778 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-51	FUSELAGE ASSY,ACFT FORWARD USBL EFF 68-16050 THRU 68-16342 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-57	FUSELAGE ASSY,ACFT FORWARD USBL EFF 68-16343 THRU 68-16625 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-53	FUSELAGE ASSY,ACFT FORWARD USBL EFF 69-15000 THRU 69-15291 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-59	FUSELAGE ASSY,ACFT USBL EFF 69-15292 THRU 70-15932 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-61	FUSELAGE ASSY,ACFT FORWARD USBL EFF 70-16200 THRU 70-16518 SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-008-65	FUSELAGE ASSY,ACFT FORWARD USBL EFF 71-20000 & SUBSEQUENT SEE FIG.7 FOR NHA..........UHE,UHM,UHV,UHX	EA	1
20	1	XCFZZ		97499	205-030-009-17	.NOSE INSTL,CHBIN U/O PN 205-030-008-3 & -9 SEE FIG.22 FOR BREAKDOWN..........UHE,UHM,UHV,UHX	EA	1
20	1	XCFZZ		97499	205-030-009-19	.NOSE INSTL,CABIN U/O PN 205-030-008-7 SEE FIG.22 FOR BREAKDOWN..........UHE,UHM,UHV,UHX	EA	1
20	1	XCFZZ		97499	205-030-009-29	.NOSE INSTL,CABIN U/O PN 205-030-008-9 & -15 SEE FIG.22 FOR BREAKDOWN..........UHE,UHM,UHV,UHX	EA	1
20	1	XCFZZ		97499	205-030-009-33	.NOSE INSTL,CABIN U/O PN 205-030-008-13 & -17 SEE FIG.22 FOR BREAKDOWN..........UHE,UHM,UHV,UHX	EA	1
20	1	XCFZZ		97499	205-030-009-41	.NOSE INSTL CABIN U/O PN 205-030-008-19 SEE FIG.18 FOR BREAKDOWN..........UHE,UHM,UHV,UHX	EA	1
20	1	XCFZZ		97499	205-030-009-45	.NOSE INSTL,CABIN U/O PN 205-030-008-21 & -23 SEE FIG.22 FOR BREAKDOWN..........UHE,UHM,UHV,UHX	EA	1
20	1	XCFZZ		97499	205-030-009-53	.NOSE INSTL,CABIN U/O PN 205-030-008-33 & -35 SEE FIG.22 FOR BREAKDOWN..........UHE,UHM,UHV,UHX	EA	1
20	1	XCFZZ		97499	205-030-009-61	.NOSE INSTL,CABIN U/O PN 205-030-008-39,-45, -49,-51,& -57	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION GROUP 02 AIRFRAME USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						SEE FIG. 22 FOR BREAKDOWN......................UHE,UHH,UHV,UHX		
20	1	XCFZZ		97499	205-030-009-73	.NOSE INSTL,CABIN U/O PN 205-030-008-53,-59, -61,&-65 SEE FIG.22 FOR BREAKDOWN...........................UHE,UHH,UHV,UHX	EA	1
20	2	XCFZZ		97499	204-030-666-33	.WINDSHIELD INSTL CABIN-LH U/O PN 205-030-008-3,-5,-7,-9,-15,-49,-51,-53,-57,-59,-61 & -65 SEE FIG.24 FOR BKDN ....UHE,UHH,UHV,UHX	EA	1
20	2	XCFZZ		97499	204-030-666-35	.WINDSHIELD INSTL CABIN-LH U/O PN 205-030-008-13,-17,-19, -21,-23,-33,-35,-39,-45, -49,-51,-53,-57,-59,& -61 SEE FIG.24 FOR BREAKDOWN.................................UHE,UHH,UHV,UHX	EA	1
20	2	XCFZZ		97499	204-030-666-27	.WINDSHIELD INSTL CABIN-RH SEE FIG.24 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
20	3	MFOZZ	5330-00-756-7942	97499	204-031-003-13	.RUBBER SEAL-LH...............................UHE,UHH,UHV,UHX	EA	1
20	3	MFOZZ	1560-00-758-1943	97499	204-031- 03-14	.RUBBER SEAL-RH...............................UHE,UHH,UHV,UHX	EA	1
20	3	PAOZZ	1560-00-872-7883	97499	204-031-034-1	.SEAL,DOOR,FUSELAGE...........................UHE,UHH,UHV,UHX	EA	2
20	4	PAOZZ	9905-00-984-0275	97499	204-031-184-1	.PLATE,IDENTIFICATIO..........................UHE,UHH,UHV,UHX	EA	1
20	5	PAODD	1560-00-736-4013	97499	204-030-853-119	.DOOR,PASSENGER,AIRC LH SEE FIG.25 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
20	5	PAODD	1560-00-736-4014	97499	204-030-853-120	.DOOR,PASSENGER,AIRC RH SEE FIG.25 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-306-1	.PANEL INSTL-LH U/O PN 205-030-008-3,-5,-7,-9, -13,-15,-17,& -19 SEE FIG.29 FOR BREAKDOWN.....................UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-306-3	.PANEL INSTL-LH U/O PN 205-030-008-19,-21,-23, -33,-35,-39, &-45 SEE FIG.29 FOR BREAKDOWN...................UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-306-9	.PANEL INSTL-LH U/O PN 205-030-008-49,-51,&-57 SEE FIG.29 FOR BREAKDOWN...................................UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-306-13	.PANEL INSTL-LH U/O PN 205-030-008-53,-59,-61 &-65 SEE FIG. 29 FOR BKDN.......................................UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-306-2	.PANEL INSTL-RH U/O PN 205-030-008-3,-5,-7,-9, -13,-15,-17,& -19 SEE FIG.29 FOR BREAKDOWN.....................UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-306-4	.PANEL INSTL-RH U/O PN 205-030-008-19 SEE FIG.29 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-306-5	.PANEL INSTL-RH U/O PN 205-030-008-21,-23,-33, -35,-39,& -45 SEE FIG.29 FOR BREAKDOWN.......................UHE,UHH,UHV,UHX	EA	1
20		MOFZZ		97499	205-030-306-11	.PANEL INSTL-RH U/O PN 205-030-008-49,-51,&-57 SEE FIG.29 FOR BREAKDOW...................................UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-306-15	.PANEL INSTL-RH U/O PN 205-030 008-53,59,-61 &-65 SEE FIG.29 FOR BKDN.......................................UHE,UHH,UHV,UHX	EA	1
20		PAOZZ	1560-00-872-7883	97499	204-031-034-1	.SEAL,DOOR,FUSELAGE...........................UHE,UHH,UHV,UHX	EA	2
20	6	XCFZZ		97499	205-031-668-1	.POST INSTL-LH U/O PN 205-030-008-3 & -5.....UHE,UHH,UHV,UHX	EA	1
20	6	XCFZZ		97499	205-031-668-61	.POST INSTL-LH U/O PN 205-030-008-7,-9,& -15 ....UHE,UHH,UHV,UHX	EA	1
20	6	XCFZZ		97499	205-031-668-69	.POST INSTL-LH U/O PN 205-030-008-13,-17,-19, & -21 ....UHE,UHH,UHV,UHX	EA	1
20	6	XCFZZ		97499	205-031-668-73	.POST INSTL-LH U/O PN 205-030-008-23,-33,-35, -39,-45,-49,-51,-53,-57, -59,-61,& -65..................UHE,UHH,UHV,UHX	EA	1
20	6	XCFZZ		97499	205-031-668-3	..POST ASSY U/O PN 205-031-668-1 & -61.......UHE,UHH,UHV,UHX	EA	1
20	6	XCFZZ		97499	205-031-668-71	..POST ASSY U/O PN 205-031-668-69............UHE,UHH,UHV,UHX	EA	1
20	6	PBFFF	1560-00-103-4631	97499	205-031-668-755	..POST ASSEMBLY,DOOR -LH.....................UHE,UHH,UHV,UHX	EA	1
20	6A	XCFZZ		97499	205-031-668-75	..POST ASSY U/O PN 205-031-668-73............UHE,UHH,UHV,UHX	EA	1
20	6B	PBFZZ	1560-00-451-8294	97499	205-031-668-39	...SKIN,AIRCRAFT.............................UHE,UHH,UHV,UHX	EA	1
20		MOFZZ	1560-00-H02-9688	97499	205-031-668-65	...ANGLE.....................................UHE,UHH,UHV,UHX	EA	1
20	7	PBOZZ	4720-00-924-7658	80205	NAS1374A05S8220	...HOSE,AIR DUCT U/O PN 205-031-668-71 & -75 ....UHE,UHH,UHV,UHX	EA	1
20	8	PAOZZ	1560-00-907-0861	97499	205-031-271-1	...PANEL,FUSELAGE,AIRC.......................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
20	9	PAOZZ	1560-00-967-7641	97499	205-030-940-1	...SEAL,DOOR POST INST..........................UHE,UHH,UHV,UHX	EA	1
20	10	XCFZZ		97499	205-030-246-1	...BULKHEAD ASSY U/O PN 205-031-668-3 & -71 ....UHE,UHH,UHV,UHX	EA	1
20	10	XCFZZ		97499	205-030-246-23	...BULKHEAD ASSY U/O PN 205-031-668-75.......UHE,UHH,UHV,UHX	EA	1
20	11	MFOZZ	5330-00-756-7942	97499	204-031-003-13	....RUBBER SEAL -LH..........................UHE,UHH,UHV,UHX	EA	1
20	12	PAOZZ	1560-00-738-8320	97499	100-060-3	....PLATE,DOOR STRIKER........................UHE,UHH,UHV,UHX	EA	1
20	12	PAOZZ	1560-00-929-8439	97499	204-031-200-1	....PLATE,STRIKER GUIDE U/O PN 205-030-246-23 ....UHE,UHH,UHV,UHX	EA	1
20	13	PAOZZ	1560-00-787-4254	97499	100-360-1	....STRIKER,BACKING PLA.......................UHE,UHH,UHV,UHX	EA	1
20	13	PAOZZ	1560-00-929-8440	97499	204-031-200-3	....PLATE,STRIKER GUIDE U/O PN 205-030-246-23 ....UHE,UHH,UHV,UHX	EA	1
20	14	PAOZZ	5310-00-728-7716	96906	MS21069L3	....NUT,SELF-LOCKING,PL.......................UHE,UHH,UHV,UHX	EA	2
20	15	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	....SCREW,MACHINE.............................UHE,UHH,UHV,UHX	EA	2
20	15	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	....SCREW,MACHINE U/O PN 205-030-246-23......UHE,UHH,UHV,UHX	EA	3
20	16	XCFZZ		97499	205-030-247-27	...BULKHEAD ASSY U/O PN 205-031-668-3........UHE,UHH,UHV,UHX	EA	1
20	16	XCFZZ		97499	205-030-247-41	...BULKHEAD ASSY U/O PN 205-031-668-71 & -75 ....UHE,UHH,UHV,UHX	EA	1
20	17	PAOZZ	5310-00-728-7716	96906	MS21069L3	....NUT,SELF-LOCKING,PL.......................UHE,UHH,UHV,UHX	EA	20
20	18	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	....SCREW,MACHINE.............................UHE,UHH,UHV,UHX	EA	22
20	19	MFOZZ	1560-00-986-7181	97499	205-030-247-25	....COVER PLATE,FUSELAG.......................UHE,UHH,UHV,UHX	EA	5
20	20	PAOZZ	1560-00-966-9349	97499	205-030-514-1	....PLATE,STRUCTURAL..........................UHE,UHH,UHV,UHX	EA	1
20	20A	PBODD	1560-00-404-9706	97499	205-030-515-1	....BRACKET ASSEMBLY..........................UHE,UHH,UHV,UHX	EA	1
20	20B	PAOZZ	5310-00-761-4221	96906	MS21073L3	....NUT,SELF-LOCKING..........................UHE,UHH,UHV,UHX	EA	2
20	20C	XCFZZ		97499	204-031-198-1	...STRIKER INSTL CREW DOOR U/O PN 205-031-668-75 ....UHE,UHH,UHV,UHX	EA	1
20	21	PAOZZ	5310-00-807-1474	96906	MS21042L3	....NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	1
20	22	PAOZZ	5310-00-167-0834	88044	AN960-10L	....WASHER,FLAT...............................UHE,UHH,UHV,UHX	EA	1
20	23	PAOZZ	5306-00-182-2059	88044	AN3H6A	....BOLT,MACHINE..............................UHE,UHH,UHV,UHX	EA	1
20	24	PAOZZ	5360-00-672-4796	97499	120-061-1	....SPRING,HELICAL,EXTE.......................UHE,UHH,UHV,UHX	EA	1
20	25	PAOZZ	5310-00-167-0816	88044	AN960-6	....WASHER,FLAT...............................UHE,UHH,UHV,UHX	EA	1
20	26	PAOZZ	5315-00-847-1920	88044	AN121605	....PIN,STRAIGHT HEADED.......................UHE,UHH,UHV,UHX	EA	1
20	27	PAOZZ	1560-00-929-8424	97499	204-031-199-3	....PLATE,STRIKER.............................UHE,UHH,UHV,UHX	EA	1
20	28	PAOZZ	1560-00-929-8425	97499	204-031-199-4	....PLATE,STRIKER.............................UHE,UHH,UHV,UHX	EA	1
20	29	PADOO	1560-00-670-7933	97499	204-030-904-1	....STRIKER ASSEMBLY CREW DOOR................UHE,UHH,UHV,UHX	EA	1
20	30	PAOZZ	3110-00-042-4805	96906	MS27645-3A	.....BEARING,BALL,AIRFRA......................UHE,UHH,UHV,UHX	EA	1
20	31	XDOZZ	3120-00-690-1135	97499	120-011-3LS	.....BUSHING,SLEEVE...........................UHE,UHH,UHV,UHX	EA	1
20	32	PAOZZ	1560-00-929-8423	97499	204-031-199-5	....BRACKET ASSEMBLY..........................UHE,UHH,UHV,UHX	EA	1
20	33	PAOZZ	5315-00-234-1896	96906	MS24665-155	....PIN,COTTER................................UHE,UHH,UHV,UHX	EA	1
20	34	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	1
20	35	PAOZZ	5310-00-167-0818	88044	AN960-10	...WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	1
20	36	PAOZZ	5306-00-182-2059	88044	AN3H6A	...BOLT,MACHINE...............................UHE,UHH,UHV,UHX	EA	1
20	37	PADOO	1560-00-670-7933	97499	204-030-904-1	...STRIKER ASSEMBLY CREW DOOR.................UHE,UHH,UHV,UHX	EA	1
20	38	PAOZZ	3110-00-042-4805	96906	MS27645-3A	....BEARING,BALL,AIRFRA.......................UHE,UHH,UHV,UHX	EA	1
20	39	XDOZZ	3120-00-690-1135	97499	120-011-3LS	....BUSHING,SLEEVE............................UHE,UHH,UHV,UHX	EA	2
20	40	PAOZZ	5360-00-672-4796	97499	120-061-1	...SPRING,HELICAL,EXTE........................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
20	41	PAOZZ	5325-01-043-6989	88044	AN227-25BM8	...STUD,SNAP FASTEN -ALTERNATE-...............UHE,UHH,UHV,UHX	EA	4
20	41	XDOZZ		88044	AN227-26BM8	...STUD,SNAP FASTEN...........................UHE,UHH,UHV,UHX	EA	4
20	42	PAOZZ	5310-00-184-8966	88044	AN960PD8	...WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	4
20	43	PAOZZ	5310-00-734-1885	96906	MS21071-4	...NUT,SELF-LOCKING,PL........................UHE,UHH,UHV,UHX	EA	4
20	44	PAFZZ	5340-00-514-1339	88044	AN743Z13	...BRACKET,ANGLE..............................UHE,UHH,UHV,UHX	EA	1
20	45	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FAS........................UHE,UHH,UHV,UHX	EA	2
20	46	PAOZZ	5325-00-063-7231	72794	AW5T6	...STUD,TURNLOCK FA...........................UHE,UHH,UHV,UHX	EA	2
20	47	MFOZZ	1560-00-H25-5376	97499	205-031-668-43	...DOOR ASSEMBLY..............................UHE,UHH,UHV,UHX	EA	2
20	48	MFOZZ	5340-00-H05-2941	97499	205-031-668-51	....HINGE HALF................................UHE,UHH,UHV,UHX	EA	1
20	49	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	...SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	3
20	50	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	3
20	51	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	3
20	52	PAOZZ	5340-00-967-3379	97499	205-031-501-1	..HINGE,ACCESS DOOR -LH.......................UHF,UHH,UHV,UHX	EA	1
20	53	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	...SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	3
20	54	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT......................... .UHE,UHH,UHV,UHX	EA	3
20	55	PAOZZ	5310-00-907-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	3
20	56	PAOZZ	5340-00-967-3377	97499	205-031-503-1	..HINGE,ACCESS DOOR -LH.......................UHE,UHH,UHV,UHX	EA	1
20	57	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	8
20	58	MFOZZ	1560-00-986-7182	97499	205-031-668-53	..COVER,ACCESS................................UHE,UHH,UHV,UHX	EA	2
20	59	PAOOO	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER................UHE,UHH,UHV,UHX	EA	4
20	60	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK............................UHE,UHH,UHV,UHX	EA	4
20		XCFZZ		97499	205-030-245-95	.POST INSTL-RH U/O PN 205-030-008-3 & -5.....UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-245-111	.POST INSTL-RH U/O PN 205-030-008-7,-9,& -15 ....UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-245-119	.POST INSTL-RH U/O PN 205-030-008-13.........UHF,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-245-125	.POST INSTL-RH U/O PN 205-030-008-17,-19,& -21 ....UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-245-129	.POST INSTL-RH U/O PN 205-030-008-23,-33,-35, -39,-45,-49,-51,-53,-57, -59,-61,& -65.....................UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-245-93	..POST ASSY U/O PN 205-030-245-95............UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-245-113	..POST ASSY U/O PN 205-030-245-111...........UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-245-121	..POST ASSY U/O PN 205-030-245-119...........UHF,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-245-127	..POST ASSY U/O PN 205-030-245-125...........UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-030-245-131	..POST ASSY U/O PN 205-030-245-129...........UHE,UHH,UHV,UHX	EA	1
20	61	PBFFF	1560-00-102-8573	97499	205-030-245-127A	..POST,DOOR,RIGHT HAN.........................UHE,UHH,UHV,UHX	EA	1
20	62	PAFZZ	1560-00-923-3510	97499	205-030-277-49	...SUPPORT,EXTERNAL...........................UHE,UHH,UHV,UHX	EA	1
20	63	PAOZZ	1560-00-967-7625	97499	205-030-540-2	...SEAL,DOOR POST INST........................UHE,UHH,UHV,UHX	EA	1
20	64	XCFZZ		97499	205-030-246-2	...BULKHEAD ASSY U/O PN 204-030-245-93,-113, -121,& -127 ....UHE,UHH,UHV,UHX	EA	1
20	64	XCFZZ		97499	205-030-246-24	...BULKHEAD ASSY U/O PN 204-030-245-131......UHE,UHH,UHV,UHX	FA	1
20	65	MFOZZ	1560-00-758-1943	97499	204-031-003-14	....SEAL,FUSELAGE ASSEM.......................UHE,UHH,UHV,UHX	EA	1
20	66	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	....SCREW,MACHINE.............................UHE,UHH,UHV,UHX	EA	2
20	66	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	....SCREW,MACHINE U/O PN 205-030-246-24......UHE,UHH,UHV,UHX	EA	3
20	67	PAOZZ	1560-00-738-8330	97499	100-060-4	....PLATE,DOOR STRIKER........................UHF,UHH,UHV,UHX	EA	1
20	67	PAOZZ	1560-00-929-8437	97499	204-031-200-2	....PLATE,STRIKER GUIDE U/O PN 205-030-246-24	EA	1

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						..........UHE,UHH,UHV,UHX		
20	68	PAOZZ	5340-00-478-7290	97499	100-060-2	....STRIKE,CATCH..........UHE,UHH,UHV,UHX	EA	1
20	68	PAOZZ	1560-00-929-8438	97499	204-031-200-4	....PLATE,STRIKER GUIDE U/O PN 205-030-246-24 ....UHE,UHH,UHV,UHX	EA	1
20	69	PAOZZ	5310-00-728-7716	96906	MS21069L3	....NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	2
20	70	XCFZZ		97499	205-030-247-28	...BULKHEAD ASSY U/O PN 205-030-245-93 & -113 ....UHE,UHH,UHV,UHX	EA	1
20	70	XCFZZ		97499	205-030-247-37	...BULKHEAD ASSY U/O PN 205-030-245-121,-127, & -131 ....UHE,UHH,UHV,UHX	EA	1
20	71	PAOZZ	5310-00-728-7716	96906	MS21069L3	....NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	20
20	72	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	....SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	22
20	73	MFOZZ	1560-00-986-7191	97499	205-030-247-25	....COVER PLATE,FUSELAG..........UHE,UHH,UHV,UHX	EA	5
20	74	PAOZZ	1560-00-966-9349	97499	205-030-514-1	....PLATE,STRUCTURAL..........UHE,UHH,UHV,UHX	EA	1
20	75	PAODZ	1560-00-404-9697	97499	205-030-515-2	....BRACKET ASSEMBLY-RH..........UHE,UHH,UHV,UHX	EA	1
20	76	PAOZZ	5310-00-761-4221	96906	MS21073L3	.....NUT,SELF-LOCKING, PLATE..........UHE,UHH,UHV,UHX	EA	2
20	77	PAOOO	1560-00-987-5194	97499	205-030-245-55	...DOOR,ACCESS..........UHE,UHH,UHV,UHX	EA	1
20	78	MFOZZ	1560-00-413-1431	97499	205-030-245-45	....HINGE HALF,LOWER..........UHE,UHH,UHV,UHX	EA	1
20	79	PAOFF	1560-00-987-5193	97499	205-030-245-53	...COVER,ACCESS..........UHE,UHH,UHV,UHX	EA	1
20	80	MFOZZ	1560-00-413-1392	97499	205-030-245-15	....HINGE HALF,LOWER..........UHE,UHH,UHV,UHX	EA	1
20	81	MFOZZ	1560-00-H25-5337	97499	205-030-245-61	...DOOR ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
20	82	MFOZZ	1560-00-H25-5338	97499	205-030-245-67	...DOOR ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
20	83	MFOZZ	5340-00-H05-2934	97499	205-030-245-65	....HINGE..........UHE,UHH,UHV,UHX	EA	1
20	84	PAOZZ	5325-00-141-4002	72794	GH5	....EYELET,TURNLOCK FAS..........UHE,UHH,UHV,UHX	EA	2
20	85	PAOZZ	5325-00-285-3278	72794	AW5T5	....STUD,TURNLOCK,FASTE..........UHE,UHH,UHV,UHX	EA	2
20	86	PAOOO	5325-00-432-9810	72794	RF5	....RECEPTACLE,TURNLOCK FASTENER..........UHE,UHH,UHV,UHX	EA	4
20	87	PAOZZ	5325-00-432-9964	72794	RF5-5	.....EYELET,TURNLOCK..........UHE,UHH,UHV,UHX	EA	4
20	88	MFOZZ	1560-00-413-1391	97499	205-030-245-13	...HINGE,HALF,UPPER..........UHE,UHH,UHV,UHX	EA	1
20	89	MFOZZ	1560-00-413-1430	97499	205-030-245-43	...HINGE HALF,UPPER..........UHE,UHH,UHV,UHX	EA	1
20	90	PAOZZ	5360-00-967-1808	97499	205-030-352-1	...SPRING,HELICAL,TORS..........UHE,UHH,UHV,UHX	EA	4
20	91	PAOZZ	5310-00-807-1467	96906	MS21042-3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
20	92	PAOZZ	5310-00-167-0818	88044	AN960-10	...WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
20	93	PAOZZ	5306-00-182-2059	88044	AN3H6A	...BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1
20	94	PAOOO	1560-00-670-7933	97499	204-030-504-1	...STRIKER ASSEMBLY CREW DOOR..........UHE,UHH,UHV,UHX	EA	1
20	95	PAOZZ	5360-00-672-4796	97499	120-061-1	...SPRING,HELICAL,EXTE..........UHE,UHH,UHV,UHX	EA	1
20	96	PAOZZ	5340-00-514-1339	88044	AN743Z13	...BRACKET,ANGLE..........UHE,UHH,UHV,UHX	EA	1
20	97	XCFZZ		97499	204-031-198-2	...STRIKER INSTL CREW DOOR U/O PN 205-030-245-131 ....UHE,UHH,UHV,UHX	EA	1
20	98	PAOZZ	5310-00-807-1474	96906	MS21042L3	....NUT,SELF-LOCKING EXTENDED WASHER,HEXAGON ....UHE,UHH,UHV,UHX	EA	1
20	99	PAOZZ	5310-00-167-0834	88044	AN960-10L	....WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
20	100	PAOZZ	5306-00-182-2059	88044	AN3H6A	....BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1
20	101	PAOZZ	5360-00-672-4796	97499	120-061-1	....SPRING,HELICAL,EXTE..........UHE,UHH,UHV,UHX	EA	1
20	102	PAOZZ	5310-00-167-0816	88044	AN960-6	....WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
20	103	PAOZZ	5315-00-847-1920	88044	AN121605	....PIN,STRAIGHT HEADED..........UHE,UHH,UHV,UHX	EA	1
20	104	PAOZZ	1560-00-929-8424	97499	204-031-199-3	....PLATE,STRIKER..........UHE,UHH,UHV,UHX	EA	1
20	105	PAOZZ	1560-00-929-8425	97499	204-031-199-4	....PLATE,STRIKER..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
20	106	PAOOO	1560-00-670-7939	97499	204-030-504-1	....STRIKER ASSEMBLY CREW DOOR...............UHE,UHH,UHV,UHX	EA	1
20	107	PAOZZ	3110-00-042-4805	96906	MS27645-3A	.....BEARING,BALL,AIRFRA.......................UHE,UHH,UHV,UHX	EA	1
20	108	XDOZZ		97499	120-011-3LS	.....BUSHING,SLEEVE..............................UHE,UHH,UHV,UHX	EA	1
20	109	PAOZZ	1560-00-929-8423	97499	204-031-198-5	....BRACKET ASSEMBLY SEE ITEM 32 FOR BREAKDOWN....UHE,UHH,UHV,UHX	EA	1
20	110	PAOZZ	5315-00-234-1856	96906	MS24665-155	....PIN,COTTER.....................................UHE,UHH,UHV,UHX	EA	1
20	111	PAOZZ	5325-01-043-6989	88044	AN227-25BH8	...STUD,SNAP FASTEN -ALTERNATE-.............UHE,UHH,UHV,UHX	EA	4
20	111	XDOZZ		88044	AN227-26BH8	...STUD,SNAP FASTEN..............................UHE,UHH,UHV,UHX	EA	4
20	112	PAOZZ	5310-00-184-8966	88044	AN960PD8	...WASHER,FLAT.....................................UHE,UHH,UHV,UHX	EA	4
20	113	PAFZZ	5310-00-734-1885	96906	MS21071-4	...NUT,SELF-LOCKING,PL.........................UHE,UHH,UHV,UHX	EA	4
20	114	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE...................................UHE,UHH,UHV,UHX	EA	3
20	115	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT.....................................UHE,UHH,UHV,UHX	EA	6
20	116	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	3
20	117	PAOZZ	5340-00-967-3378	97499	205-031-501-2	...HINGE,ACCESS DOOR RH.........................UHE,UHH,UHV,UHX	EA	1
20	118	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE...................................UHE,UHH,UHV,UHX	EA	3
20	119	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT.....................................UHE,UHH,UHV,UHX	EA	3
20	120	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	3
20	121	PAOZZ	5340-00-967-3376	97499	205-031-503-2	...HINGE,ACCESS DOOR RH.........................UHE,UHH,UHV,UHX	EA	1
20	122	XDOZZ		96906	MS20253-2-675	...PIN,STRAIGHT, HEADLESS......................UHE,UHH,UHV,UHX	EA	2
20	123	XCFZZ		97499	204-030-399-5	.TUBE,INSTALLATION DRAIN-LH.....................UHE,UHH,UHV,UHX	EA	1
20	123	XCFZZ		97499	204-030-399-6	.TUBE,INSTALLATION DRAIN-RH.....................UHE,UHH,UHV,UHX	EA	1
20	124	PAOZZ	5305-00-558-8934	88044	AN525D10R8	..SCREW,MACHINE....................................UHE,UHH,UHV,UHX	EA	4
20	125	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT......................................UHE,UHH,UHV,UHX	EA	4
20	126	PAOZZ	5310-00-995-3081	96906	MS21083D3	..NUT,SELF-LOCKING,HE............................UHE,UHH,UHV,UHX	EA	4
20	127	PAOZZ	5340-00-187-6023	81996	EAB70006	..CLAMP,LOOP...UHE,UHH,UHV,UHX	EA	4
20	128	PAOZZ	4720-00-739-4590	97499	204-030-399-7	..TUBING,NONMETALLIC.............................UHE,UHH,UHV,UHX	EA	1
20	129	XCFZZ		97499	205-030-615-3	.ROOF INSTL,CABIN U/O PN 205-030-008-3 & -5 SEE FIG.31 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
20	129	XCFZZ		97499	205-030-615-5	.ROOF INSTL,CABIN U/O PN 205-030-008-7 SEE FIG.31 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
20	129	XCFZZ		97499	205-030-615-7	.ROOF INSTL,CABIN U/O PN 205-030-008-9 SEE FIG.31 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
20	129	XCFZZ		97499	205-030-615-91	.ROOF INSTL,CABIN U/O PN 205-030-008-13 & -17 SEE FIG.31 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
20	129	XCFZZ		97499	205-030-615-97	.ROOF INSTL,CABIN U/O PN 205-030-008-15 SEE FIG.31 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
20	129	XCFZZ		97499	205-030-615-99	.ROOF INSTL,CABIN U/O PN 205-030-008-19 SEE FIG.31 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
20	129	XCFZZ		97499	205-030-615-101	.ROOF INSTL,CABIN U/O PN 205-030-008-21 & -23 SEE FIG.31 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
20	129	XCFZZ		97499	205-030-615-105	.ROOF INSTL,CABIN U/O PN 205-030-008-33 & -35 SEE FIG.31 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
20	129	XCFZZ		97499	205-030-615-109	.ROOF INSTL,CABIN U/O PN 205-030-008-39 & -45 SEE FIG.31 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
20	129	XCFZZ		97499	205-030-615-113	.ROOF INSTL,CABIN U/O PN 205-030-008-49,-51, -53,-57,-59,& -61 SEE FIG.31 FOR BREAKDOWN...................UHE,UHH,UHV,UHX	EA	1
20	129	XCFZZ		97499	205-030-615-131	.ROOF INSTL,CABIN U/O PN 205-030-008-65 SEE FIG.31 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
20	130	PAOOO	1560-00-927-9515	97499	205-031-669-15	.DOOR ASSY,CARGO,LH SEE FIG.46 FOR BREAKDOWN	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHE,UHH,UHV,UHX		
20	130	PAOOO	1560-00-927-9514	97499	205-031-669-16	.DOOR ASSY,CARGO,RH SEE FIG.46 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
20	131	PAOZZ	5306-00-182-2017	88044	AN4H6A	.RETAINER INSTL CARGO DOOR..................UHE,UHH,UHV,UHX	EA	8
20	132	PAOZZ	5305-00-151-3161	88044	AN515-3R3	.SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	4
20	133	PAOZZ	5310-00-543-2410	96906	MS35338-40	.WASHER,LOCK................................UHE,UHH,UHV,UHX	EA	4
20	134	PAOZZ	5310-00-176-8127	88044	AN340-3	.NUT,PLAIN,HEXAGO...........................UHE,UHH,UHV,UHX	EA	4
20	135	MFOZZ	9905-00-532-6678	96906	MS27253-2	.PLATE,IDENTIFICATIO........................UHE,UHH,UHV,UHX	EA	1
20	136	XCFZZ		97499	205-030-302-1	.STOP INSTL,DOOR-LH U/O PN 205-030-008-3 & -5 ....UHE,UHH,UHV,UHX	EA	1
20	136	XCFZZ		97499	205-030-302-2	.STOP INSTL,DOOR-RH U/O PN 205-030-008-3 & -5 ....UHE,UHH,UHV,UHX	EA	1
20	137	PAOOO	1560-00-672-0080	97499	204-030-353-3	..STOP ASSEMBLY,DOOR -LH....................UHE,UHH,UHV,UHX	EA	1
20	137	PAOOO	1560-00-672-0079	97499	204-030-353-4	..STOP ASSEMBLY,DOOR -RH....................UHE,UHH,UHV,UHX	EA	1
20	138	PAOZZ	5360-00-664-5161	97499	61-785-139-1	...SPRING,HELICAL,TORS......................UHE,UHH,UHV,UHX	EA	1
20	139	PAOZZ	5315-00-823-8743	96906	MS16562-219	...PIN,SPRING...............................UHE,UHH,UHV,UHX	EA	1
20	140	PAOZZ	5315-00-844-3963	96906	MS16562-46	...PIN,SPRING...............................UHE,UHH,UHV,UHX	EA	1
20	141	PAOZZ	1560-00-021-3621	97499	204-030-968-3	..GUIDE STOP,CARGO DO.......................UHE,UHH,UHV,UHX	EA	1
20	142	MFOZZ	1560-00-H25-5590	97499	205-030-302-5	..SUPPORT-LH................................UHE,UHH,UHV,UHX	EA	1
20	142	MFOZZ	1560-00-H25-5591	97499	205-030-302-6	..SUPPORT-RH................................UHE,UHH,UHV,UHX	EA	1
20	143	XCFZZ		97499	205-030-671-1	.BRACKET INSTL DOOR-LH USBL EFF 63-8739 THRU 66-970 ....UHE,UHH,UHV,UHX	EA	1
20	143	XCFZZ		97499	205-030-671-2	.BRACKET INSTL DOOR-RH USBL EFF 63-8739 THRU 66-970 ....UHE,UHH,UHV,UHX	EA	1
20	144	MFOZZ	1560-00-H25-9597	97499	205-030-671-7	..BRACKET-LH................................UHE,UHH,UHV,UHX	EA	1
20	144	MFOZZ	1560-00-H25-9598	97499	205-030-671-9	..BRACKET-RH................................UHE,UHH,UHV,UHX	EA	1
20	145	PAOZZ	5365-00-691-4765	97499	205-030-671-3	..SPACER,SLEEVE.............................UHE,UHH,UHV,UHX	EA	1
20	146	XDOZZ	3120-00-059-4742	97499	205-030-671-5	..BUSHING,SLEEVE............................UHE,UHH,UHV,UHX	EA	1
20	147	PAOZZ	5340-00-570-5387	97499	205-030-672-1	..SPRING -LH................................UHE,UHH,UHV,UHX	EA	1
20	147	PAOZZ	5340-00-570-5386	97429	205-030-672-2	..SPRING -RH................................UHE,UHH,UHV,UHX	EA	1
20	148	PAOZZ	5310-00-167-0765	96906	MS63040-3	..WASHER,FLAT...............................UHE,UHH,UHV,UHX	EA	1
20	149	PAOZZ	5310-00-072-4873	97499	140-001-5	..WASHER,FLAT...............................UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-7	.FUSELAGE ASSY U/O PN 205-030-008-3 SEE FIG.64 THRU 69 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-13	.FUSELAGE ASSY U/O PN 205-030-008-5 SEE FIG.64 THRU 69 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-19	.FUSELAGE ASSY U/O PN 205-030-008-7 SEE FIG.64 THRU 69 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-25	.FUSELAGE ASSY U/O PN 205-030-008-9 SEE FIG.64 THRU 69 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-31	.FUSELAGE ASSY U/O PN 205-030-008-13 SEE FIG.64 THRU 69 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-33	.FUSELAGE ASSY U/O PN 205-030-008-15 SEE FIG.64 THRU 69 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-43	.FUSELAGE ASSY U/O PN 205-030-008-17 SEE FIG.64 THRU 69 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-49	.FUSELAGE ASSY U/O PN 205-030-008-19 SEE FIG.64 THRU 69 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-55	.FUSELAGE ASSY U/O PN 205-030-008-21 SEE FIG.64 THRU 69 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
20	150	XCFZZ		97499	205-030-006-67	.FUSELAGE ASSY U/O PN 205-030-008-23 SEE FIG. 64 THRU 69 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-85	.FUSELAGE ASSY U/O PN 205-030-008-33 SEE FIG. 64 THRU 69 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-97	.FUSELAGE ASSY U/O PN 205-030-008-35 SEE FIG. 64 THRU 69 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-109	.FUSELAGE ASSY U/O PN 205-030-008-39 SEE FIG. 64 THRU 69 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-129	.FUSELAGE ASSY U/O PN 205-030-008-45 SEE FIG. 64 THRU 69 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-137	.FUSELAGE ASSY U/O PN 205-030-008-49 SEE FIG. 64 THRU 69 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-141	.FUSELAGE ASSY U/O PN 205-030-008-51 SEE FIG. 64 THRU 69 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-030-006-167	.FUSELAGE ASSY U/O PN 205-030-008-57 SEE FIG. 64 THRU 69 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-031-006-1	.FUSELAGE ASSY U/O PN 205-030-008-53 SEE FIG. 64 THRU 69 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-031-006-13	.FUSELAGE ASSY U/O PN 205-030-008-59 SEE FIG. 64 THRU 69 FOR BREAKDOWN. ....UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-031-006-19	.FUSELAGE ASSY U/O PN 205-030-008-61 SEE FIG. 64 THRU 69 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	150	XCFZZ		97499	205-031-006-31	.FUSELAGE ASSY U/O PN 205-030-008-65 SEE FIG. 64 THRU 69 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	151	XCFZZ		97499	205-030-737-1	.CABLE INSTL,STRIKER EJECTION-LH U/O PN 205-030-008-36-5 SEE FIG. 440 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	151	XCFZZ		97499	205-030-737-7	.CABLE INSTL,STRIKER EJECTION-LH U/O PN 205-030-008-7,-9,-13,-15, -17,-19,-21,-23,-33,-35,-39,-45,-49,-51,-53,-57,-59,-61, & -65 SEE FIG. 440 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	151	XCFZZ		97499	205-030-737-2	.CABLE INSTL,STRIKER EJECTION-RH U/O PN 205-030-008-36-5 SEE FIG. 440 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20	151	XCFZZ		97499	205-030-737-8	.CABLE INSTL,STRIKER EJECTION-RH U/O PN 205-030-008-7,-9,-13,-15,-17, -19,-21,-23,-33, -35,-39,-45,-49,-51,-53,-57,-59,-61, & -65 SEE FIG. 440 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	204-030-646-41	.DOOR INSTL,NOSE U/O PN 205-030-008-36-5 SEE FIG. 21 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	204-030-646-53	.DOOR INSTL,NOSE U/O PN 205-030-008-7,-9, -13,-15,-17,-19,-21,-23, -33,-35,-39,-45,-49,-51, -53,-57,-59,-61,& -65 SEE FIG. 21 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
20		XCFZZ		97499	205-031-481-1	.RETAINER INSTALLAI CARGO DOOR..........UHE,UHH,UHV,UHX	EA	1
20	152	XDOZZ		80205	NAS1304-10H	..BOLT,SHEAR..........UHE,UHH,UHV,UHX	EA	4
20	152	PAOZZ	5325-00-774-9430	21024	A121-1-13	..STUD,POSITIVE LOCK RPLS BOLT NAS1304-10H WHEN AUXILIARY FUEL TANKS ARE INSTALLED..........UHH,UHV	EA	2
20	153	PAOZZ	5310-00-167-0766	88044	AN970-4	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
20	154	PAOZZ	5340-00-931-4801	97499	205-031-481-31	..SPACER,TAPERED..........UHE,UHH,UHV,UHX	EA	6
20	156A	MFOZZ		97499	205-031-481-33	..DOUBLER..........UHE,UHH,UHV,UHX	EA	1
20	155	PAOOO	5340-00-971-6350	97499	205-031-481-3	..RETAINER,CARGO DOOR..........UHE,UHH,UHV,UHX	EA	2
20	156	PAOZZ	5315-00-194-2455	88044	AN415-2	...PIN,LOCK..........UHE,UHH,UHV,UHX	EA	1
20	156A	MOOZZ		97499	25C10-2-3	...CHAIN,SAFETY..........UHE,UHH,UHV,UHX	EA	1
20	157	PAOZZ	5305-00-925-7866	96906	MS27039-4-15	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	4
20	158	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
20	159	PAOZZ	5365-00-825-6995	80205	NAS43HT4-19	..SPACER,SLEEVE..........UHE,UHH,UHV,UHX	EA	4
20	160	PAOZZ	5306-00-898-9745	80205	NAS1304-5H	..BOLT,SHEAR..........UHE,UHH,UHV,UHX	EA	2
20	161	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
20	162	PAOZZ	5330-00-983-0122	97499	205-031-481-9	..BRACKET, ANGLE..........UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
20	163	PAOZZ	5306-00-680-6164	80205	NAS1304-7H	..BOLT,SHEAR..................................UHE,UHH,UHV,UHX	EA	6
20	164	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	8
20	165	PAOOO	5340-00-971-6349	97499	205-031-481-19	..STRAP,CARGO DOOR..........................UHE,UHH,UHV,UHX	EA	2
20	166	MFOZZ	5340-00-971-6342	97499	205-031-481-23	...BUMPER,SLIDING DOOR....................UHE,UHH,UHV,UHX	EA	1
20	167	PAOOO	5340-00-971-6347	97499	205-031-481-25	..STRAP,CARGO DOOR..........................UHE,UHH,UHV,UHX	EA	2
20	168	MFOZZ	5340-00-971-6348	97499	205-031-481-29	...BUMPER,CARGO DOOR........................UHE,UHH,UHV,UHX	EA	1
20	169	XCFZZ		97499	205-030-147-5	.SUPPORT INSTL PLUMB BOB U/O PN 205-030-008-65 ....UHE,UHH,UHV,UHX	EA	1
20	170	PAFZZ	1560-00-119-1177	97499	205-030-147-7	..SUPPORT,PLUMB BOB........................UHE,UHH,UHV,UHX	EA	1

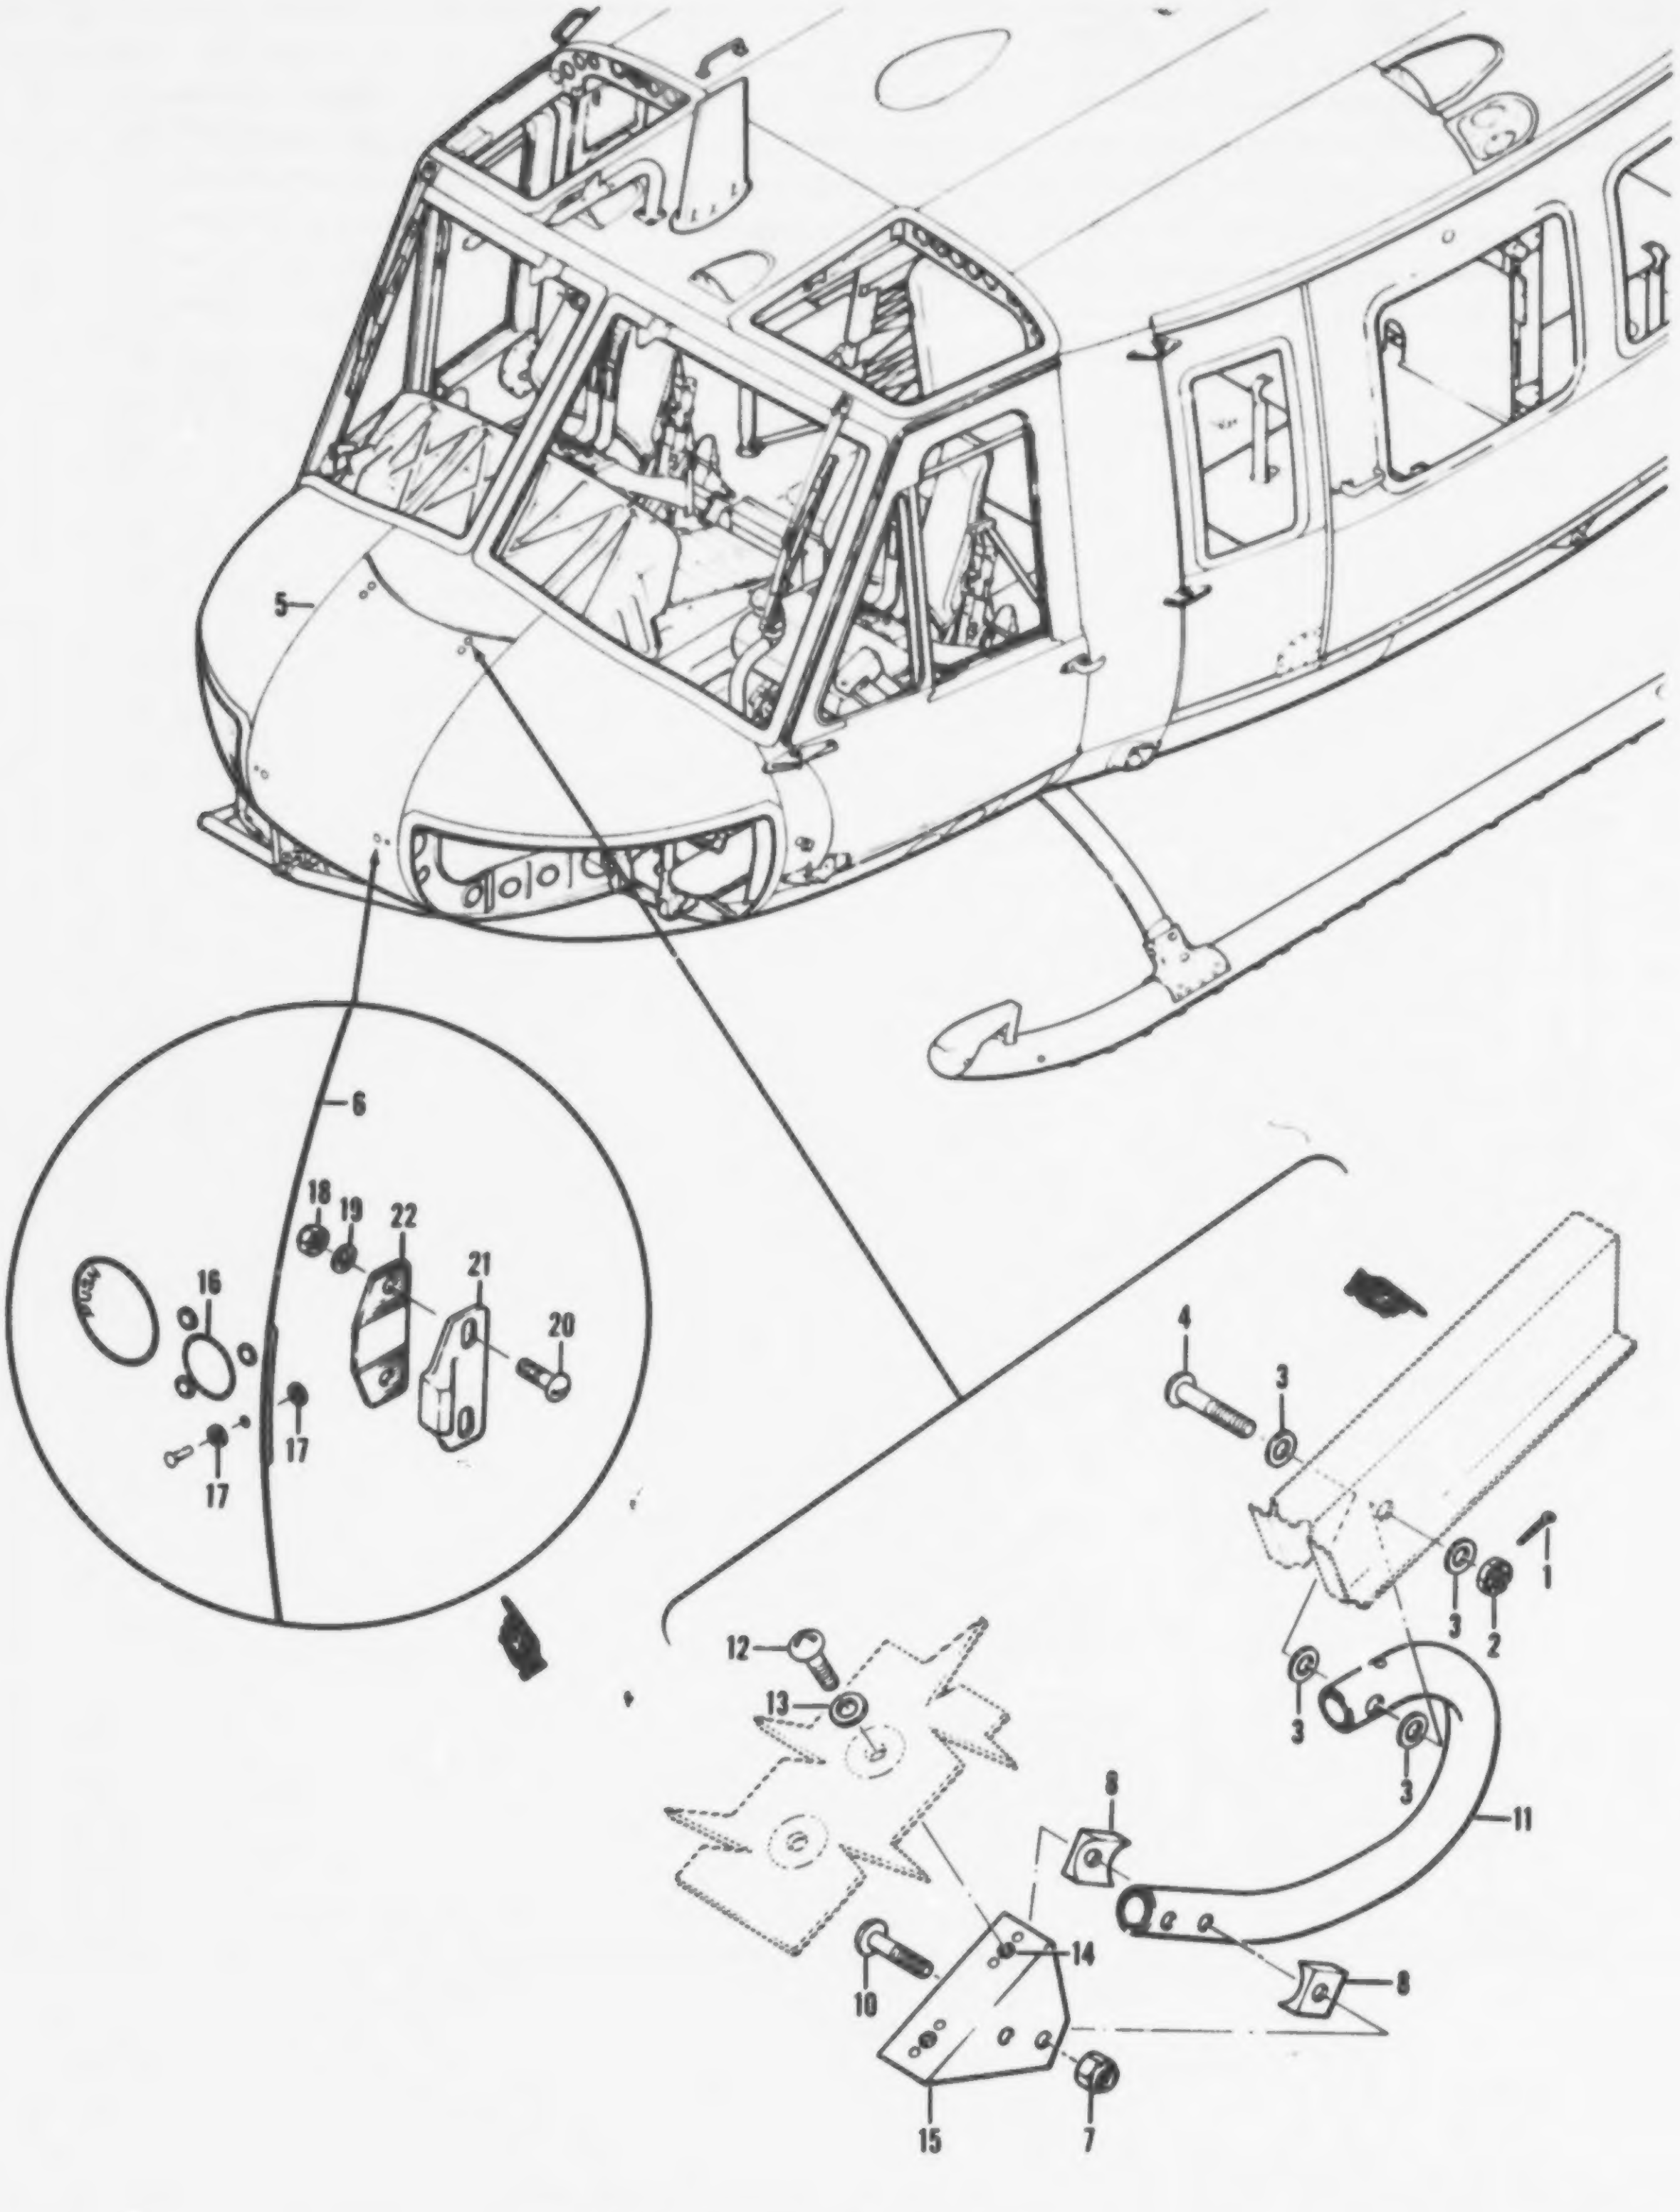
5
6
18
19
22
21
16
PUSH
20
17
17
4
3
1
3
2
12
13
3
3
11
8
14
8
10
15
7

Figure 21. Door Installation, Nose

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
21		XCFZZ		97499	204-030-646-41	DOOR INSTL,NOSE USBL EFF (UH-1B) 60-3546 THRU 62-12555,& (UH-1D) 62-2106 THRU 62-12372 SEE FIG.19 & 20 FOR NHA ....UHB,UHE,UHH,UHV,UHX	EA	1
21		XCFZZ		97499	204-030-646-53	DOOR INSTL,NOSE USBL EFF (UH-1B) 63-8900 & SUBSEQUENT,& (UH-1D) 63-8739 & SUBSEQUENT SEE FIG.19 & 20 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
21	1	PAOZZ	5315-00-236-1854	96906	MS24665-153	.PIN,COTTER....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
21	2	PAOZZ	5310-00-285-2177	88044	AN320-3	.NUT,PLAIN,SLOTTED,H..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
21	3	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
21	4	PAOZZ	5306-00-151-1970	88044	AN23-18	.BOLT,CLEVIS....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
21	5	PAOOO	1560-00-070-4586	97499	204-030-646-55	.DOOR ASSEMBLY,NOSE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
21	6	PAOZZ	1560-00-070-4605	97499	204-030-646-57	..SEAL,DOOR ASSEMBLY..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
21	7	PAOZZ	5310-00-857-5564	96906	MS21045L08	..NUT,SELF-LOCKING,HE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
21	8	PAOZZ	5310-00-690-5256	97499	204-030-526-1	..WASHER,SADDLE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
21	10	XDOZZ		88044	AN525-832R20	..SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
21	11	PAOZZ	5340-00-757-3791	97499	204-030-646-5	..HINGE,ACCESS DOOR................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
21	12	PAOZZ	5305-00-993-1848	96906	MS35207-265	..SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
21	13	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
21	14	PAOZZ	5310-00-728-1716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
21	15	PAOZZ	1560-00-875-9000	97499	204-030-646-33	..SUPPORT,STRUCTURAL -LH ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
21	15	PAOZZ	1560-00-875-8001	97499	204-030-646-34	..SUPPORT,STRUCTURAL -RH ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
21	16	PAOZZ	5340-00-872-7939	83014	H60550638163	..CATCH,FLUSH....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
21	17	XDOZZ	5310-00-076-9900	97499	140-001-1	..WASHER,FLAT....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
21	18	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
21	19	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
21	20	XDOZZ	5305-00-925-7457	96906	MS27039-1-09	.SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
21	21	PAOZZ	5340-00-178-1429	97499	204-030-989-3	.STRIKE,CATCH....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
21	22	PBOZZ	1560-00-758-3683	97499	204-030-990-1	.PLATE,STRUCTURAL................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

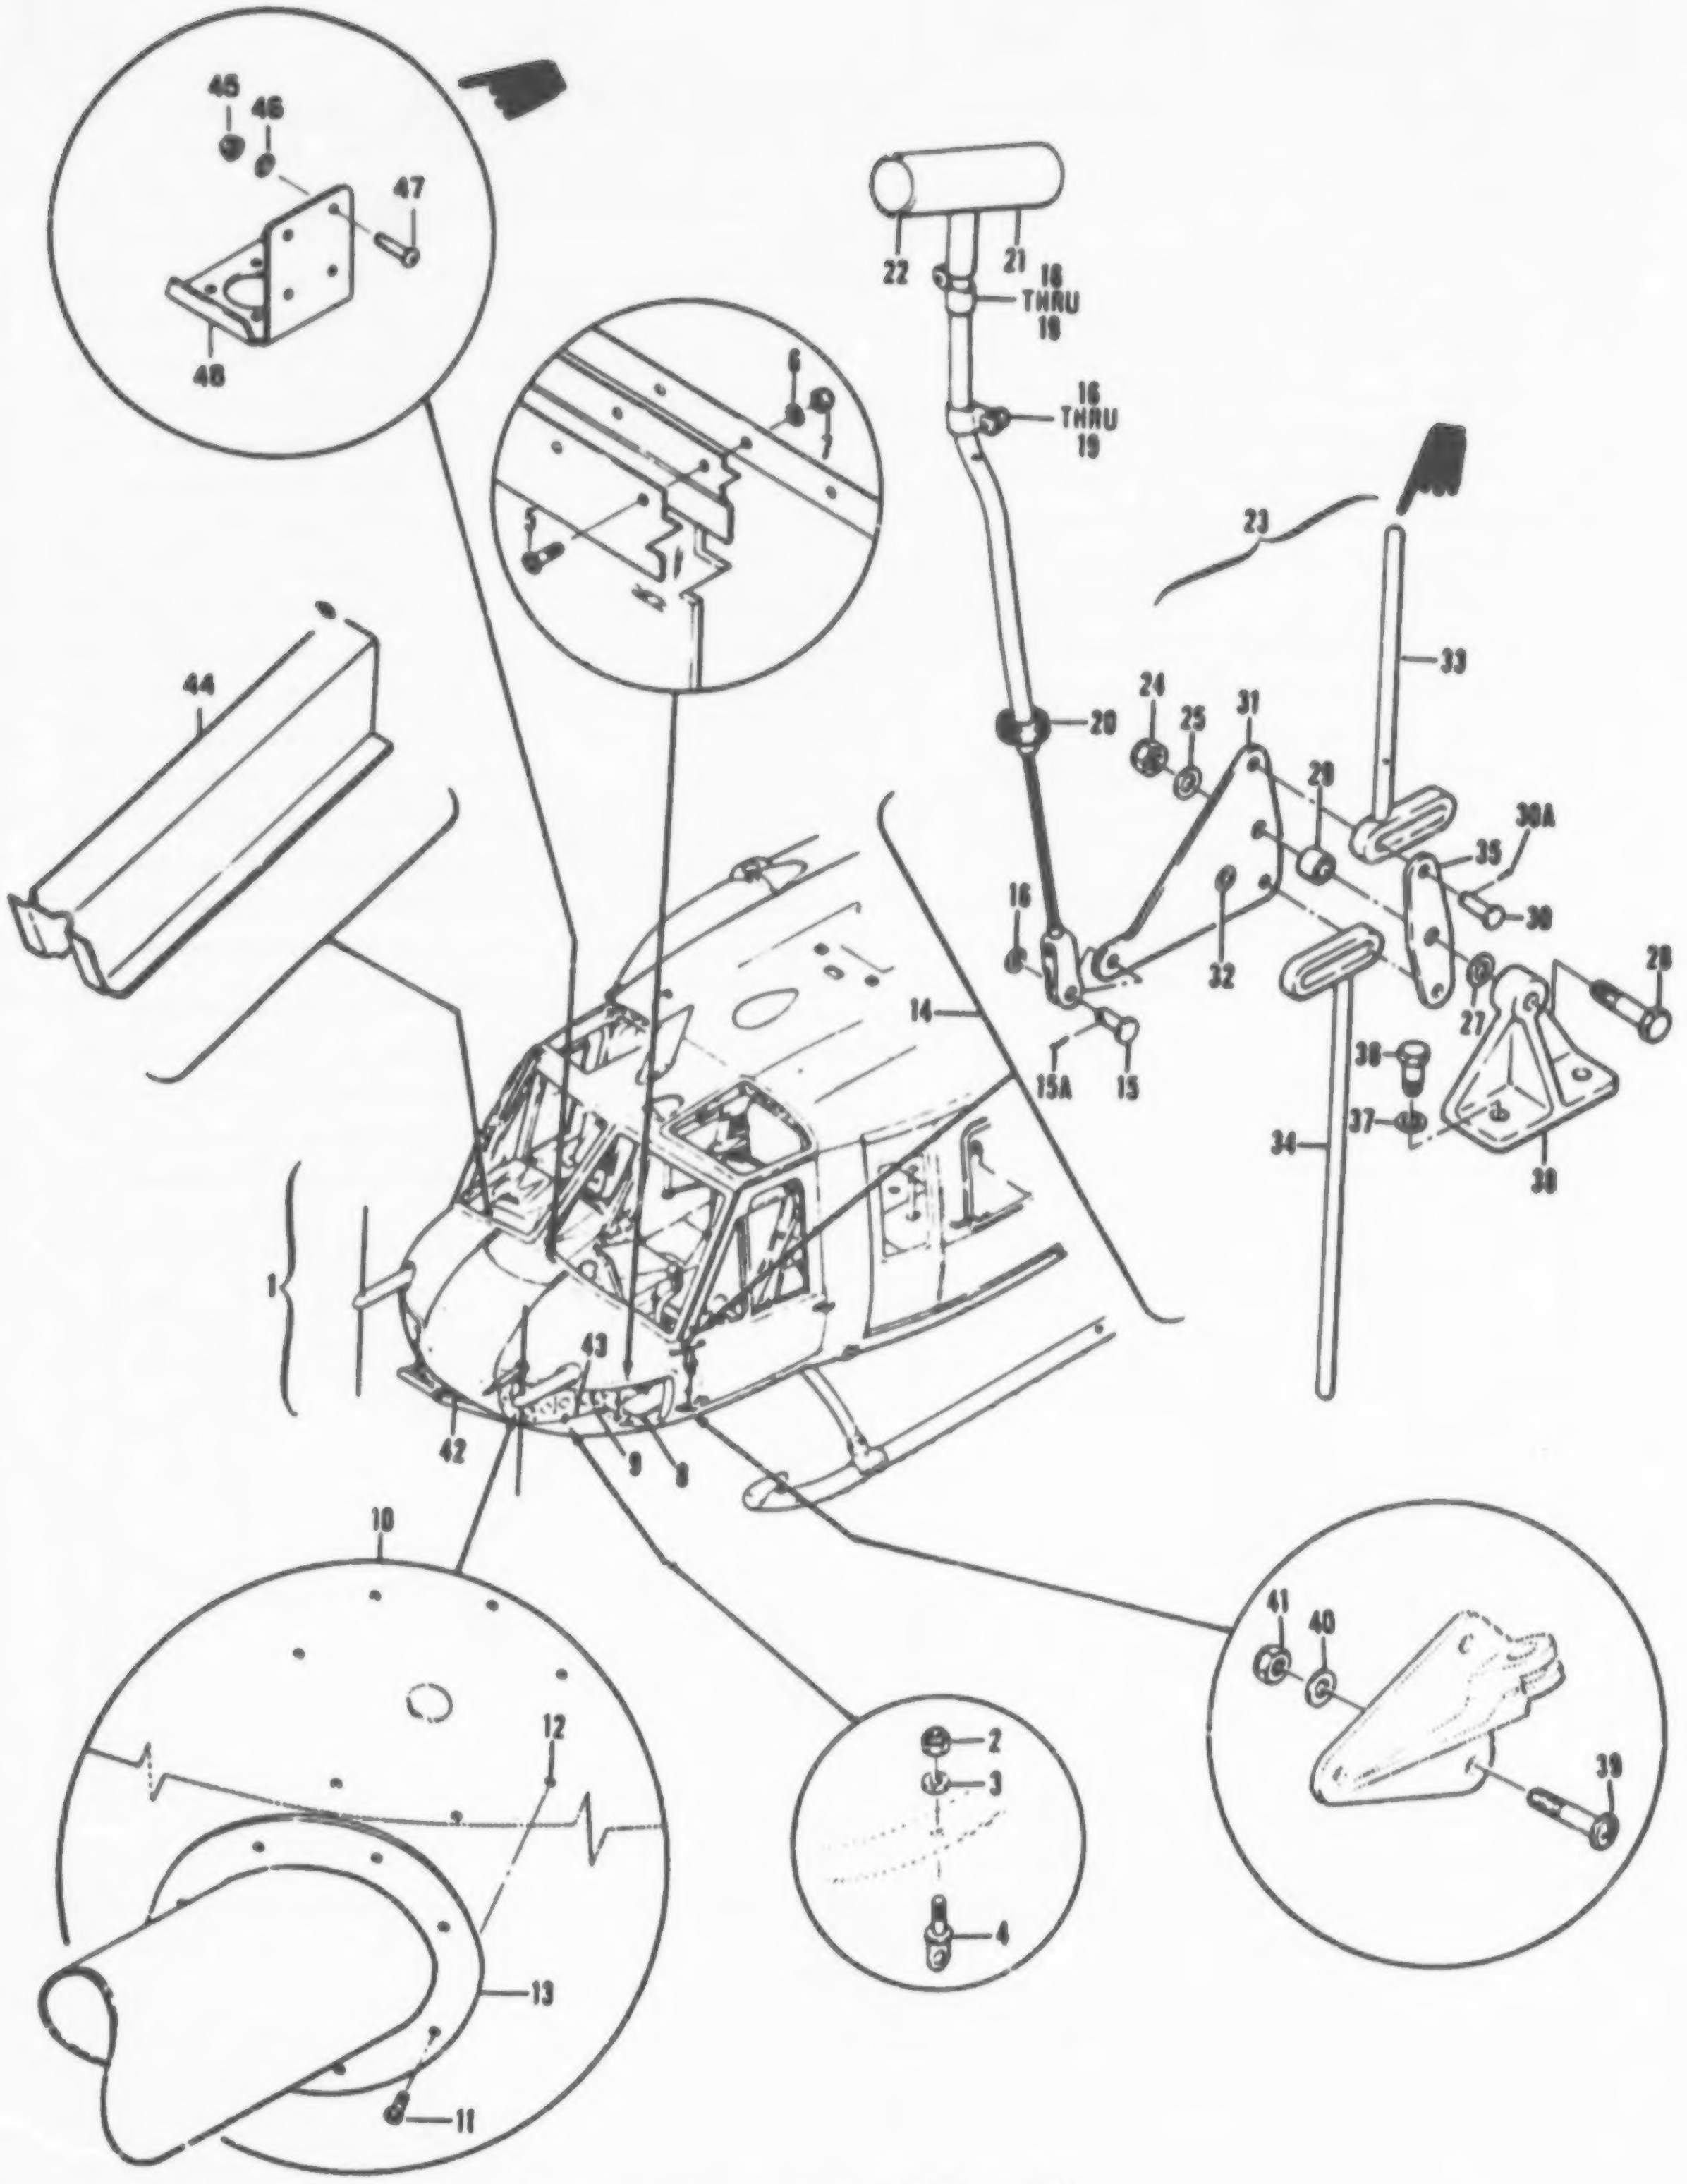
45
46
47
48
6
7
5
22
21
16 THRU 19
16 THRU 19
23
33
44
20
24
25
31
29
30A
35
30
16
32
28
27
14
36
15A
15
37
34
38
1
43
42
9
8
10
12
13
11
2
3
4
41
40
39

Figure 22. Nose Installation, Cabin

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
22		XCFZZ		97499	204-030-025-97	NOSE INSTL,CABIN USBL EFF 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA.........UHC,UHM	EA	1
22		XCFZZ		97499	204-030-025-101	NOSE INSTL,CABIN USBL EFF 65-9416 THRU 66-601 SEE FIG.19 FOR NHA.........UHC,UHM	EA	1
22		XCFZZ		97499	204-030-025-117	NOSE INSTL,CABIN USBL EFF 66-602 THRU 66-15105 SEE FIG.19 FOR NHA.........UHC,UHM	EA	1
22		XCFZZ		97499	204-030-025-141	NOSE INSTL,CABIN USBL EFF 66-15106 & SUBSEQUENT SEE FIG.19 FOR NHA.........UHC,UHM	EA	1
22		XCFZZ		97499	205-030-009-17	NOSE INSTL,CABIN USBL EFF 62-2106 THRU 62-12372 SEE FIG.20 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
22		XCFZZ		97499	205-030-009-19	NOSE INSTL,CABIN USBL EFF 63-8739 THRU 63-8803 SEE FIG.20 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
22		XCFZZ		97499	205-030-009-29	NOSE INSTL,CABIN USBL EFF 63-8804 THRU 63-13002 SEE FIG.20 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
22		XCFZZ		97499	205-030-009-33	NOSE INSTL,CABIN USBL EFF 64-13492 THRU 64-13901 SSEE FIG.20 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
22		XCFZZ		97499	205-030-009-41	NOSE INSTL,CABIN USBL EFF 65-9565 THRU 65-12895 SEE FIG.20 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
22		XCFZZ		97499	205-030-009-45	NOSE INSTL,CABIN USBL EFF 66-746 THRU 66-17164 & 66-8576 THRU 66-8577 SEE FIG.20 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
22		XCFZZ		97499	205-030-009-55	NOSE INSTL,CABIN USBL EFF 67-17165 THRU 67-17777 SEE FIG.20 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
22		XCFZZ		97499	205-030-009-61	NOSE INSTL,CABIN USBL EFF 67-17778 THRU 68-16625 SEE FIG.20 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
22		XCFZZ		97499	205-030-009-73	NOSE INSTL,CABIN USBL EFF 69-15000 & SUBSEQUENT SEE FIG.20 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
22		PBODD	1560-00-179-5975	97499	205-030-009-61A	NOSE ASSEMBLY,CABI.........UHE,UHH,UHV,UHX	EA	1
22		XCFZZ		97499	204-030-657-29	.WINDOW INSTL NOSE LOWER-LH U/O (UH-1B) PN 204-030-003-35,-47, 204-030-025-1,-27,-33,-63, & -71.........UHB,UHC,UHM	EA	1
22		XCFZZ		97499	204-030-657-30	.WINDOW INSTL NOSE LOWER-RH U/O (UH-1B) PN 204-030-003-35,-47, 204-030-025-1,-27,-33,-63, & -71.........UHB,UHC,UHM	EA	1
22		XCFZZ		97499	204-030-657-31	.WINDOW INSTL NOSE LOWER-LH.........UHE,UHH,UHV,UHX	EA	1
22		XCFZZ		97499	204-030-657-30	.WINDOW INSTL NOSE LOWER-RH.........UHE,UHH,UHV,UHX	EA	1
22	2	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 204-030-657-29 & -31.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	2	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 204-030-657-30 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
22	3	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT U/O PN 204-030-657-29 & -31 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	3	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT U/O PN 204-030-657-30 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
22	4	PAOZZ	5306-00-638-2216	88044	AN42B4	..BOLT,EYE U/O PN 204-030-657-29 & -31	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						....................................UHB,UHC,UHE,UHH,UHM,UHV,UHX		
22	4	PAOZZ	5306-00-638-2216	88044	AN42H4	..BOLT,EYE U/O PN 204-030-657-30 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
22	5	PAOZZ	5305-00-558-8936	88044	AN525D10R8	..SCREW,MACHINE U/O PN 204-030-657-29............UHB,UHC,UHM	EA	65
22	5	PAOZZ	5305-00-558-8936	88044	AN525D10R8	..SCREW,MACHINE U/O PN 204-030-657-30 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	64
22	5	PAOZZ	5305-00-558-8936	88044	AN525D10R8	..SCREW,MACHINE U/O PN 204-030-657-31........UHE,UHH,UHV,UHX	EA	57
22	6	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT U/O PN 204-030-657-29 & -30 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	66
22	6	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT U/O PN 204-030-657-31..........UHE,UHH,UHV,UHX	EA	58
22	7	PAOZZ	5310-00-877-5798	96906	MS21044D3	..NUT,SELF-LOCKING,HE U/O PN 204-030-657-29......UHB,UHC,UHM	EA	65
22	7	PAOZZ	5310-00-877-5798	96906	MS21044D3	..NUT,SELF-LOCKING,HE U/O PN 204-030-657-30 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	64
22	7	PAOZZ	5310-00-877-5798	96906	MS21044D3	..NUT,SELF-LOCKING,HE U/O PN 204-030-657-31 ....UHE,UHH,UHV,UHX	EA	57
22	8	PAOOO	1560-00-701-9923	97499	204-030-657-19	..WINDOW PANEL,AIRCRA LH.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	8	PAOOO	1560-00-701-9924	97499	204-030-657-20	..WINDOW PANEL,AIRCRA RH.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	9	PAOZZ	5340-00-205-5253	61864	SS50890K2215	..BUTTON,PLUG......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	10	XCFZZ		97499	204-030-671-1	.SUPPORT INSTL ANTENNA-LH........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	10	XCFZZ		97499	204-030-671-2	.SUPPORT INSTL ANTENNA-RH........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	11	PAOZZ	5305-00-558-8936	8804-	AN525D10R8	..SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	7
22	12	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	7
22	13	PAOZZ	1560-00-624-5272	97499	204-030-671-3	..SUPPORT ASSEMBLY ANTENNA LH....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	13	PAOZZ	1560-00-624-6785	97499	204-030-671-4	..SUPPORT ASSEMBLY ANTENNA RH....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	14	XCFZZ		97499	204-030-725-1	.HANDLE INSTL EJECTION-LH........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	14	XCFZZ		97499	204-030-725-2	.HANDLE INSTL EJECTION-RH........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	15	PBOZZ	5315-00-989-7631	96906	MS20392-2C7	..PIN,STRAIGHT,HEADED..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	15A	PAOZZ	5315-00-815-1405	96906	MS24665-151	..PIN,COTTER........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	16	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
22	17	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
22	18	PAOZZ	5310-00-263-2862	96906	MS21045C3	..NUT,SELF-LOCKING,HE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
22	19	PAOZZ	5340-00-990-9298	81996	EA870003	..CLAMP,LOOP........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
22	20	PAOZZ	5325-00-263-6632	96906	MS35489-6	..GROMMET,NONMETALLIC..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	21	PAOOO	1680-00-672-4831	97499	204-030-725-25	..HANDLE ASSY,EJECTIO..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	22	PAOZZ	5340-00-972-2493	61864	SS48172K2215	...BUTTON,PLUG.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
22	23	XCFZZ		97499	204-030-789-3	.MECHANISM INSTL EJECTION-LH.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	23	XCFZZ		97499	204-030-789-4	.MECHANISM INSTL EJECTION-RH.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	24	PAOZZ	5310-00-857-5557	96906	MS21045L4	..NUT,SELF-LOCKING,HE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	25	PAOZZ	5310-00-187-2356	88044	AN960PD416	..WASHER,FLAT.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
22	27	PAOZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	28	PAOZZ	5306-00-182-1961	88044	AN4H13A	..BOLT,MACHINE......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	29	PAOZZ	5365-00-839-1265	80205	NAS43HT4-28	..SPACER,SLEEVE.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	30	PAOZZ	5315-00-812-3766	96906	MS20392-2C15	..PIN,STRAIGHT, HEADED............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
22	30A	PAOZZ	5315-00-815-1405	96906	MS24665-151	..PIN,COTTER........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
22	31	PAOOO	1560-00-950-7008	97499	204-030-792-5	..PLATE,CREW DOOR EJE MECHANISM-LH ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
22	31	PAOOO	1560-00-910-6927	97499	204-030-792-6	..PLATE ASSY, CREW DOOR EJECTION ....UHE,UHH,UHM,UHV,UHX	EA	1
22	32	PAOZZ	3120-00-805-3005	97499	22-006-16-10-16	...BUSHING, SLEEVE..............UHE,UHH,UHM,UHV,UHX	EA	1
22	33	PAOZZ	5315-00-879-0338	97499	204-030-790-11	..PIN, STRAIGHT, HEADED.........UHE,UHH,UHM,UHV,UHX	EA	1
22	34	PAOZZ	5315-00-879-0337	97499	204-030-790-13	..PIN, STRAIGHT, HEADED.........UHE,UHH,UHM,UHV,UHX	EA	1
22	35	PAOZZ	3040-00-765-7831	97499	204-030-791-1	..CONNECTING LINK, RIG..........UHE,UHH,UHM,UHV,UHA	EA	1
22	36	PAOZZ	5306-00-182-2058	88044	AN3H5A	..BOLT, MACHINE.................UHE,UHH,UHM,UHV,UHX	EA	2
22	37	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER, FLAT..................UHE,UHH,UHM,UHV,UHX	EA	2
22	38	PAOZZ	5360-00-880-0646	97499	204-030-793-3	..BRACKET, ANGLE................UHE,UHH,UHM,UHV,UHX	EA	1
22	39	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW, MACHINE.................UHE,UHH,UHM,UHV,UHX	EA	2
22	40	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER, FLAT...................UHE,UHH,UHM,UHV,UHX	EA	2
22	41	PAOZZ	5310-00-807-1676	96906	MS21042L3	.NUT, SELF-LOCKING, EX WASHER, HEXAGON ....UHE,UHH,UHM,UHV,UHX	EA	2
22	42	XBDDZ	1560-00-920-7208	97499	204-030-025-99	.NOSE ASSEMBLY, CABIN U/O PN 204-030-025-97 SEE FIG.23 FOR BREAKDOWN..UHM	EA	1
22	42	XBDDD	1560-00-826-3930	97499	204-030-025-103	.NOSE ASSEMBLY, CABIN U/O PN 204-030-025-101 SEE FIG.23 FOR BREAKDOWN..UHM	EA	1
22	42	XBDDD	1560-00-826-6966	97499	204-030-025-119	.NOSE ASSEMBLY, CABIN U/O PN 204-030-025-117 SEE FIG.23 FOR BREAKDOSN..UHM	EA	1
22	42	XBDDD	1560-00-827-5152	97499	204-030-025-143	.NOSE ASSEMBLY, CABIN U/O PN 204-030-025-141 SEE FIG.23 FOR BREAKDOWN..UHM	EA	1
22	42	XBDDZ	1560-00-868-5840	97499	205-030-009-31	.NOSE ASSEMBLY, CABIN U/O PN 205-030-009-17, -19 & -29 SEE FIG.23 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
22	42	XBDDD	1560-00-826-0438	97499	205-030-009-35	.NOSE ASSEMBLY, CABIN U/O PN 205-030-009-33 SEE FIG.23 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
22	42	XBDDD	1560-00-963-0765	97499	205-030-009-43	.NOSE ASSEMBLY, CABIN U/O PN 205-030-009-41 SEE FIG.23 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
22	42	XBDDD	1560-00-826-4077	97499	205-030-009-47	.NOSE ASSEMBLY, CABIN U/O PN 205-030-009-45 SEE FIG.23 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
22	42	XBDDD	1560-00-827-4716	97499	205-030-009-55	.NOSE ASSEMBLY, CABIN U/O PN 205-030-009-53 SEE FIG.23 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
22	42	XDDDD	1560-00-411-4131	97499	205-030-009-75	.NOSE ASSEMBLY, CABIN U/O PN 205-030-009-61 & -73 SEE FIG.23 FOR BREAKDOWN......................................UHE,UHH,UHV,UHX	EA	1
22	43	PBDZZ	1560-00-103-2616	97499	204-030-651-53A	.SKIN AND FRAME ASSE U/O P/N 204-030-025-101.......UHM	EA	1
22		XCOFF		97499	204-030-655-65	.SKIN AND STIFFENER INSTL. U/O 205-030-009-33......UHM	EA	1
22	44	PAOZZ	1560-00-456-9953	97499	204-030-655-51	..BRACKET, CABIN NOSE -LH...........................UHE,UHH,UHM,UHV,UHX	EA	1
22	44	PAOZZ	1560-00-456-9952	97499	204-030-655-52	..BRACKET, CABIN NOSE -RH...........................UHE,UHH,UHM,UHV,UHX	EA	1
22	45	PAOZZ		96906	MS21044C06	.NUT, SELF-LOCKING HE SEE FIG.58 FOR NHA...........UHX	EA	4
22	46	PAOZZ		96906	MS15795-803	.WASHER, FLAT.......................................UHX	EA	4
22	47	PAOZZ		96906	MS51958-15	.SCREW, MACHINE.....................................UHX	EA	4
22	48	XDOOO		20309	ES-C-221709	SUPPORT, CONNECTOR SEE FIG.58 FOR NHA MF NSN 9535-00-167-2248.............................UHX	EA	1

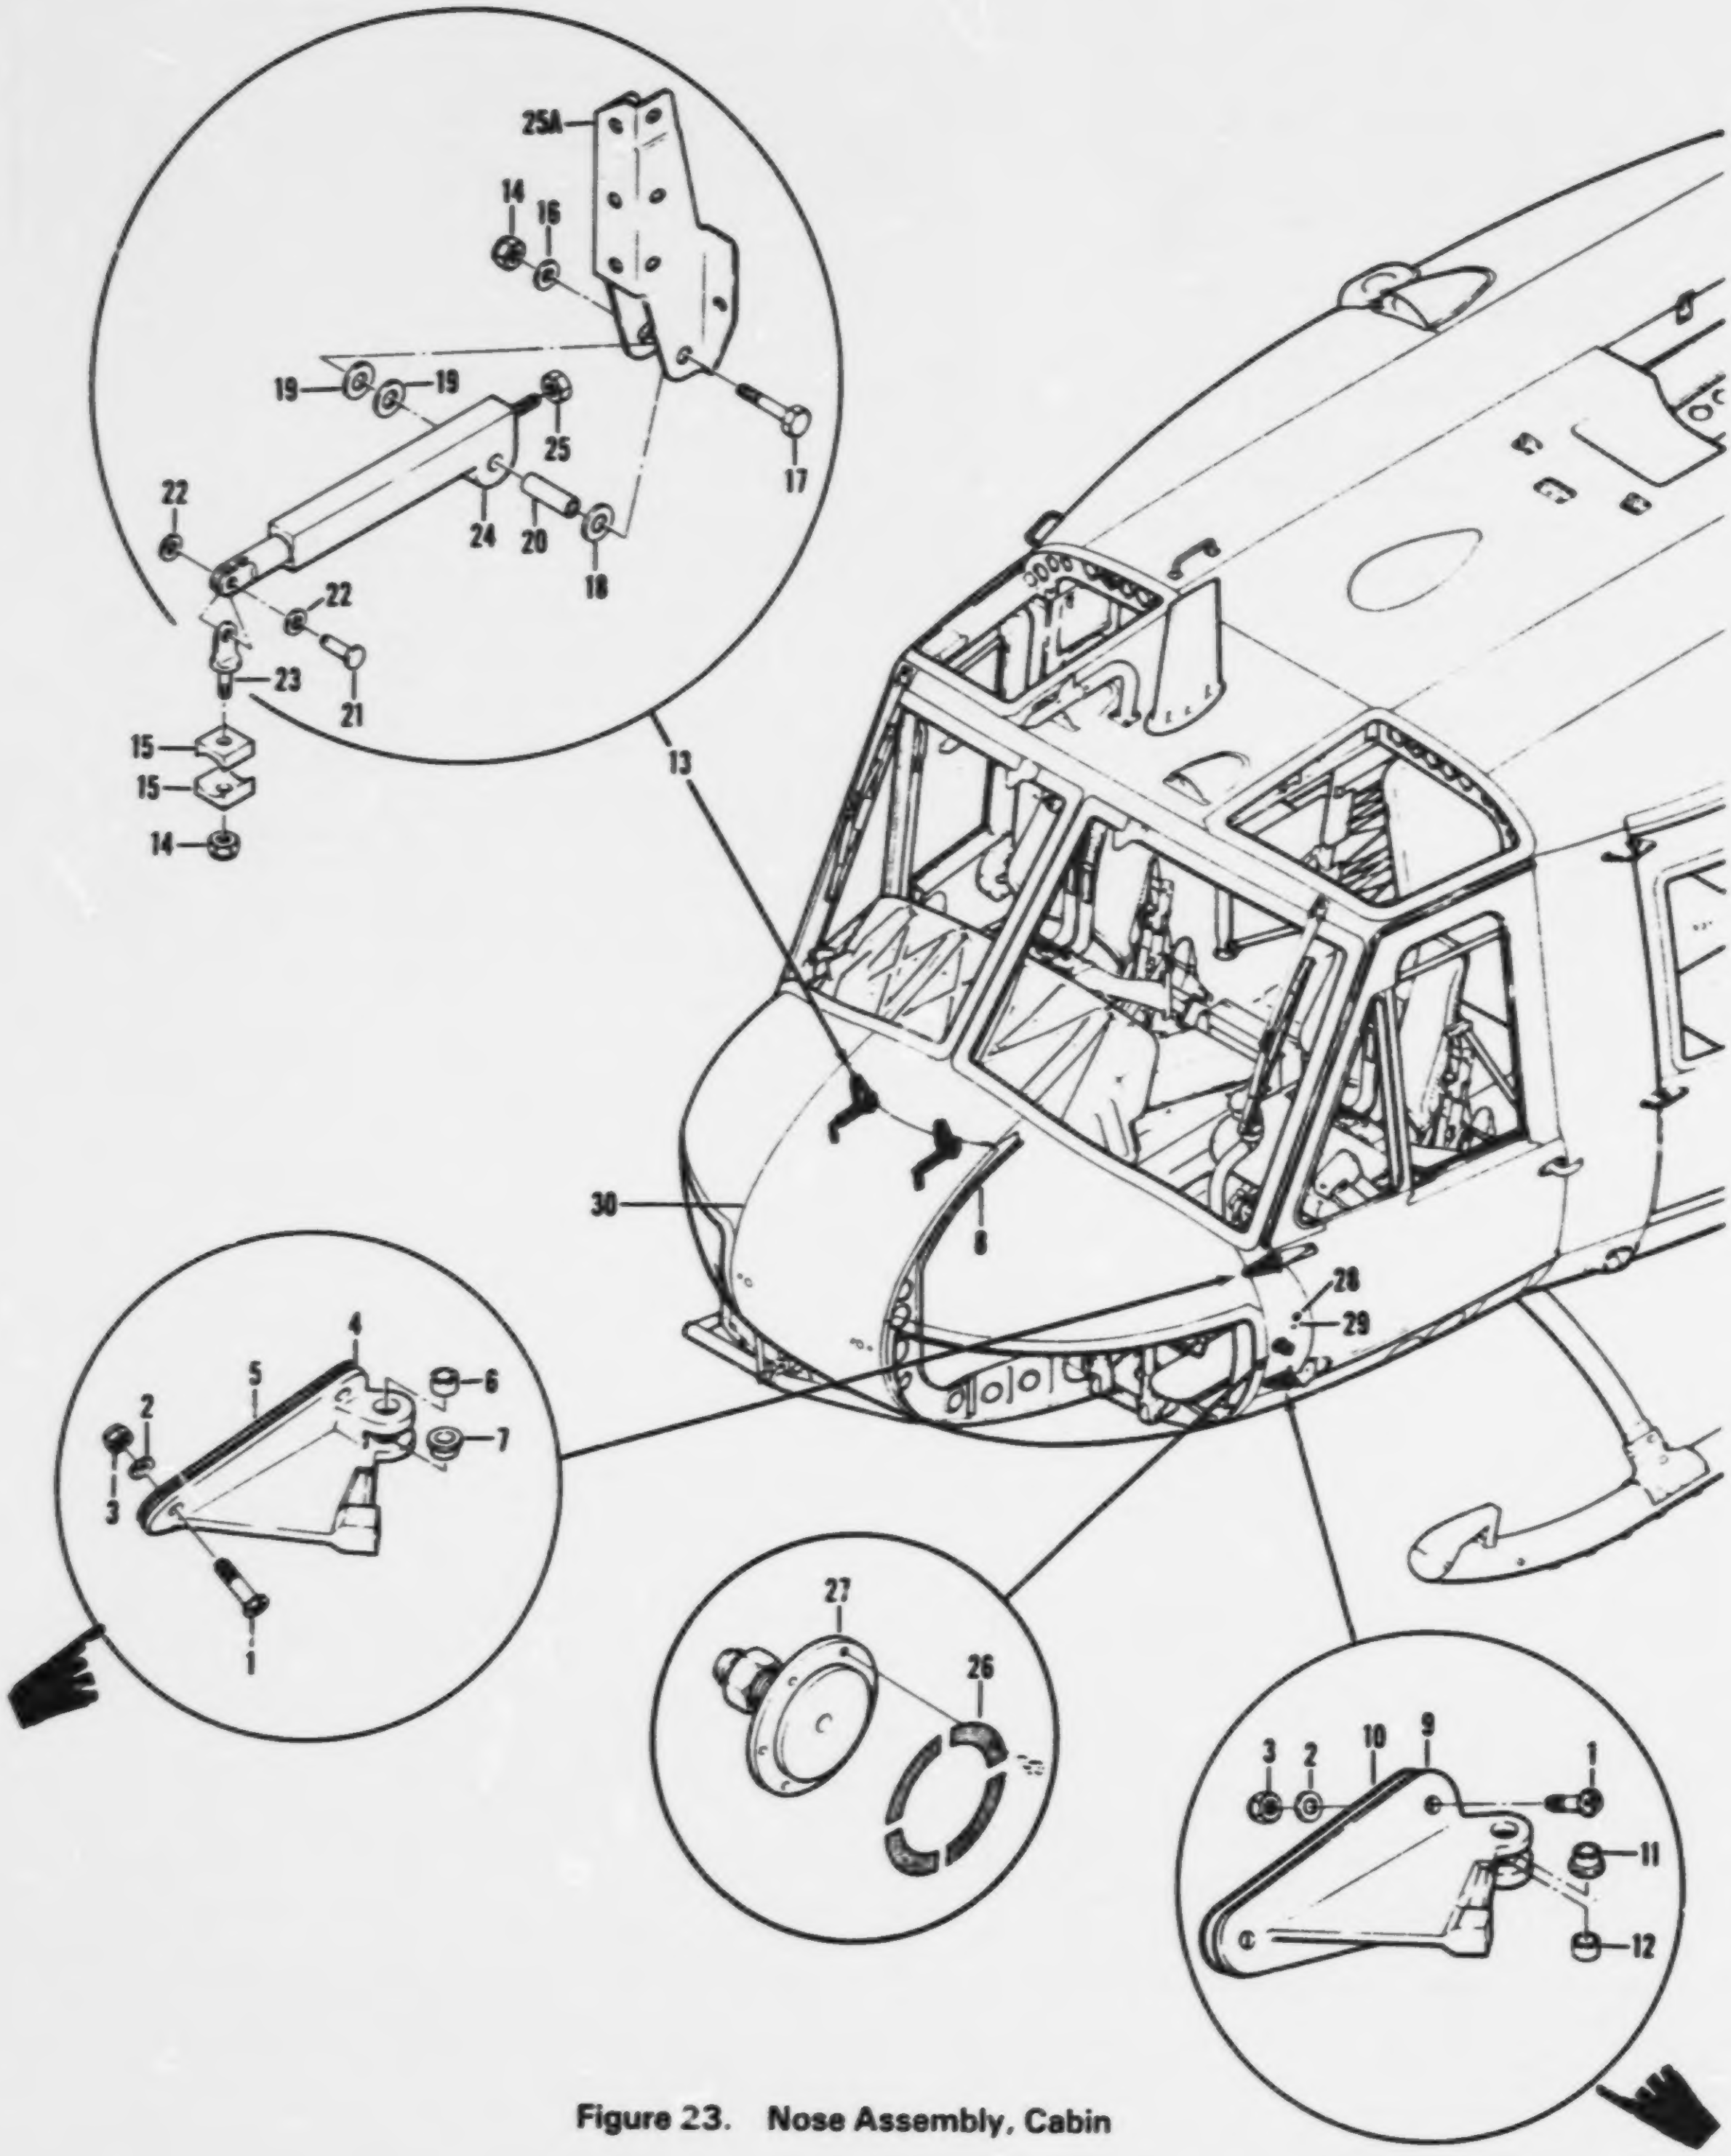
25A
14
16
19
19
25
17
22
24
20
18
22
23
21
15
15
14
13
30
8
28
29
4
5
6
2
7
3
1
27
26
3
2
10
9
1
11
12

Figure 23. Nose Assembly, Cabin

best copy available

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
23		XBDDZ	1560-00-920-7208	97499	204-030-025-99	NOSE ASSEMBLY,CABIN USBL EFF 64-14101 THRU 64-14191 SEE FIG. 22 FOR NHA........ UHM	EA	1
23		XBDDD	1560-00-H26-3930	97499	204-030-025-103	NOSE ASSEMBLY,CABIN USBL EFF 65-9416 THRU 66-601 SEE FIG.22 FOR NHA........ UHM	EA	1
23		XBDDD	1560-00-043-3727	97499	204-030-025-119	NOSE ASSEMBLY,CABIN USBL EFF 66-602 THRU 66-15105 SEE FIG.22 FOR NHA........ UHM	EA	1
23		XBDDD	1560-00-H27-5152	97499	204-030-025-143	NOSE ASSEMBLY,CABIN USBL EFF 66-15106 & SUBSEQUENT SEE FIG. 22 FOR NHA........ UHM	EA	1
23		XBDDZ	1560-00-868-5840	97499	205-030-009-31	NOSE ASSEMBLY,CABIN RPLS-- PN 205-030-009-15 & -21 USBL EFF 62-2106 THRU 63-13002SEE FIG.22 FOR NHA.......UHE,UHH,UHV.UHX	EA	1
23		XBDDD	1560-00-H26-0438	97499	205-030-009-35	NOSE ASSEMBLY,CABIN USBL EFF 64-13492 THRU 64-13901 SEE FIG. 22 FOR NHA........UHE,UHH,UHV,UHX	EA	1
23		XBDDD	1560-00-943-0765	97499	205-030-009-43	NOSE ASSEMBLY,CABIN USBL EFF 65-9565 THRU 65-12895 SEE FIG. 22 FOR NHA........UHE,UHH,UHV,UHX	EA	1
23		XBDDD	1560-00-H26-4077	97499	205-030-009-47	NOSE ASSEMBLY,CABIN USBL-EFF 66-746 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.22 FOR NHA........UHE,UHH,UHV,UHX	EA	1
23		XBDDD	1560-00-H27-4716	97499	205-030-009-55	NOSE ASSEMBLY,CABIN USBL EFF 67-17145 THRU 67-17777 SEE FIG. 22 FOR NHA........UHE,UHH,UHV,UHX	EA	1
23		XDDDD	1560-00-411-4131	97499	205-030-009-75	NOSE ASSEMBLY,CABIN USBL EFF 67-17778 & SUBSEQUENT SEE FIG. 22 FOR NHA........UHE,UHH,UHV,UHX	EA	1
23	1	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE........ UHE,UHH,UHM,UHV,UHX	EA	10
23	2	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT........ UHE,UHH,UHM,UHV,UHX	EA	10
23	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHM,UHV,UHX	EA	10
23	4	PAOOO	1560-00-757-4848	97499	204-031-837-11	.HINGE,ACCESS DOOR -LH........ UHE,UHH,UHM,UHV,UHX	EA	1
23	4	PAOOO	1560-00-757-4849	97499	204-031-837-12	.HINGE,ACCESS DOOR -RH........ UHE,UHH,UHM,UHV,UHX	EA	1
23	5	PAOZZ	5365-00-998-7624	97499	204-031-837-5	..SHIM -LH LOWER........UHE,UHH,UHV,UHX	EA	1
23	5	PAOZZ	5365-00-998-7625	97499	204-031-837-6	..SHIM -RH LOWER........UHE,UHH,UHV,UHX	EA	1
23	6	PAOZZ	3120-00-670-5310	97499	21-005-5-5-5	..BUSHING,SLEEVE U/O PN 204-031-837-11 & -12 .... UHE,UHH,UHV,UHX	EA	1
23	6	PAOZZ	3120-00-757-2924	97499	204-030-052-3	..BUSHING,SLEEVE U/O PN 204-031-837-11 & -12 .... UHE,UHH,UHM,UHV,UHX	EA	1
23	7	PAOZZ	3120-00-670-5322	97499	22-005-11-12-14	..BUSHING,SLEEVE........ UHE,UHH,UHM,UHV,UHX	EA	1
23	8	PAOZZ	1560-00-839-6746	97499	204-030-025-131	.SEAL,NOSE DOOR,CABI........ UHM	EA	1
23	8	MOOZZ	1560-00-078-2826	97499	205-030-009-51	.SEAL,NOSE DOOR........UHE,UHH,UHV,UHX	EA	1
23	9	PAOOO	1560-00-757-4846	97499	204-031-467-11	.HINGE,ACCESS DOOR -LH U/O(UH-1B) PN 204-030-025-73,-99,-103,-119 & -205........ UHE,UHH,UHM,UHV,UHX	EA	1
21	9	PAOOO	1560-00-757-4847	97499	204-031-467-12	.HINGE,ACCESS DOOR -RH U/O(UH-1B) PN 204-030-025-73,-99,-103,-119 & -205........ UHE,UHH,UHM,UHV,UHX	EA	1
23	10	PAOZZ	5365-00-998-7628	97499	204-031-467-5	..SHIM -LH UPPER........UHE,UHH,UHV,UHX	EA	1
23	10	PAOZZ	5365-00-998-7629	97499	204-031-467-6	..SHIM -RH UPPER ....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
23	11	PAOZZ	3120-00-670-5322	97499	22-005-11-12-14	..BUSHING,SLEEVE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	12	PAOZZ	3120-00-670-5310	97499	21-005-5-5-5	..BUSHING,SLEEVE U/O PN 204-031-467-7 & -8 ....UHB,UHE,UHH,UHV,UHX	EA	1
23	12	PAOZZ	3120-00-763-1271	97499	204-030-052-1	..BUSHING,SLEEVE U/O PN 204-031-467-11 & -12 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	13	XCFZZ		97499	204-030-647-11	.STAY INSTL DOOR-LH..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	13	XCFZZ		97499	204-030-647-12	.STAY INSTL DOOR-RH..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	14	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
23	15	PAOZZ	5310-00-690-5256	97499	204-030-526-1	..WASHER,SADDLE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
23	16	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	17	PAOZZ	5306-00-182-2062	88044	AN3H11A	..BOLT,MACHINE.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	18	PAOZZ	5310-00-167-0836	88044	AN960-516L	..WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	19	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
23	20	PAOZZ	5365-00-709-1830	80205	NAS43HT3-48	..SPACER,SLEEVE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	21	PBOZZ	5315-00-812-3759	96906	MS20392-2C11	..PIN,STRAIGHT,HEA HEADED........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	22	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
23	23	PAOZZ	5306-00-638-2223	88044	AN42B11	..BOLT,EYE.........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	24	PAOOO	1560-00-672-0070	97499	204-030-647-9	..PLUNGER ASSEMBLY,DO..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	25	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	25A	PAFFF	1560-00-133-7323	97499	204-030-647-13	..BRACKET,DOOR STAY -LH..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	25A	PBFZZ	1560-00-240-3358	97499	204-030-647-14	..BRACKET,DOOR STAY -RH..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	26	MFOZZ	7520-00-886-1306	97499	204-070-806-3	.STENCIL,STATIC VENT....................................UHB	EA	1
23	27	PAOZZ	4730-00-773-2219	97499	204-070-127-1	.VENT,STATIC USBL EFF <UH-1D> 62-2106 THRU 65-12895......UHB	EA	2
23	28	PAOZZ	5340-00-051-9769	83058	HS50726K2220	.BUTTON,PLUG.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
23	29	PAOZZ	5310-00-761-4221	96906	MS21073L3	.NUT,SELF-LOCKING,PL...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
23	30	PAFZZ	1560-00-903-1213	97499	204-030-651-21	.SKIN,FUSELAGE.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

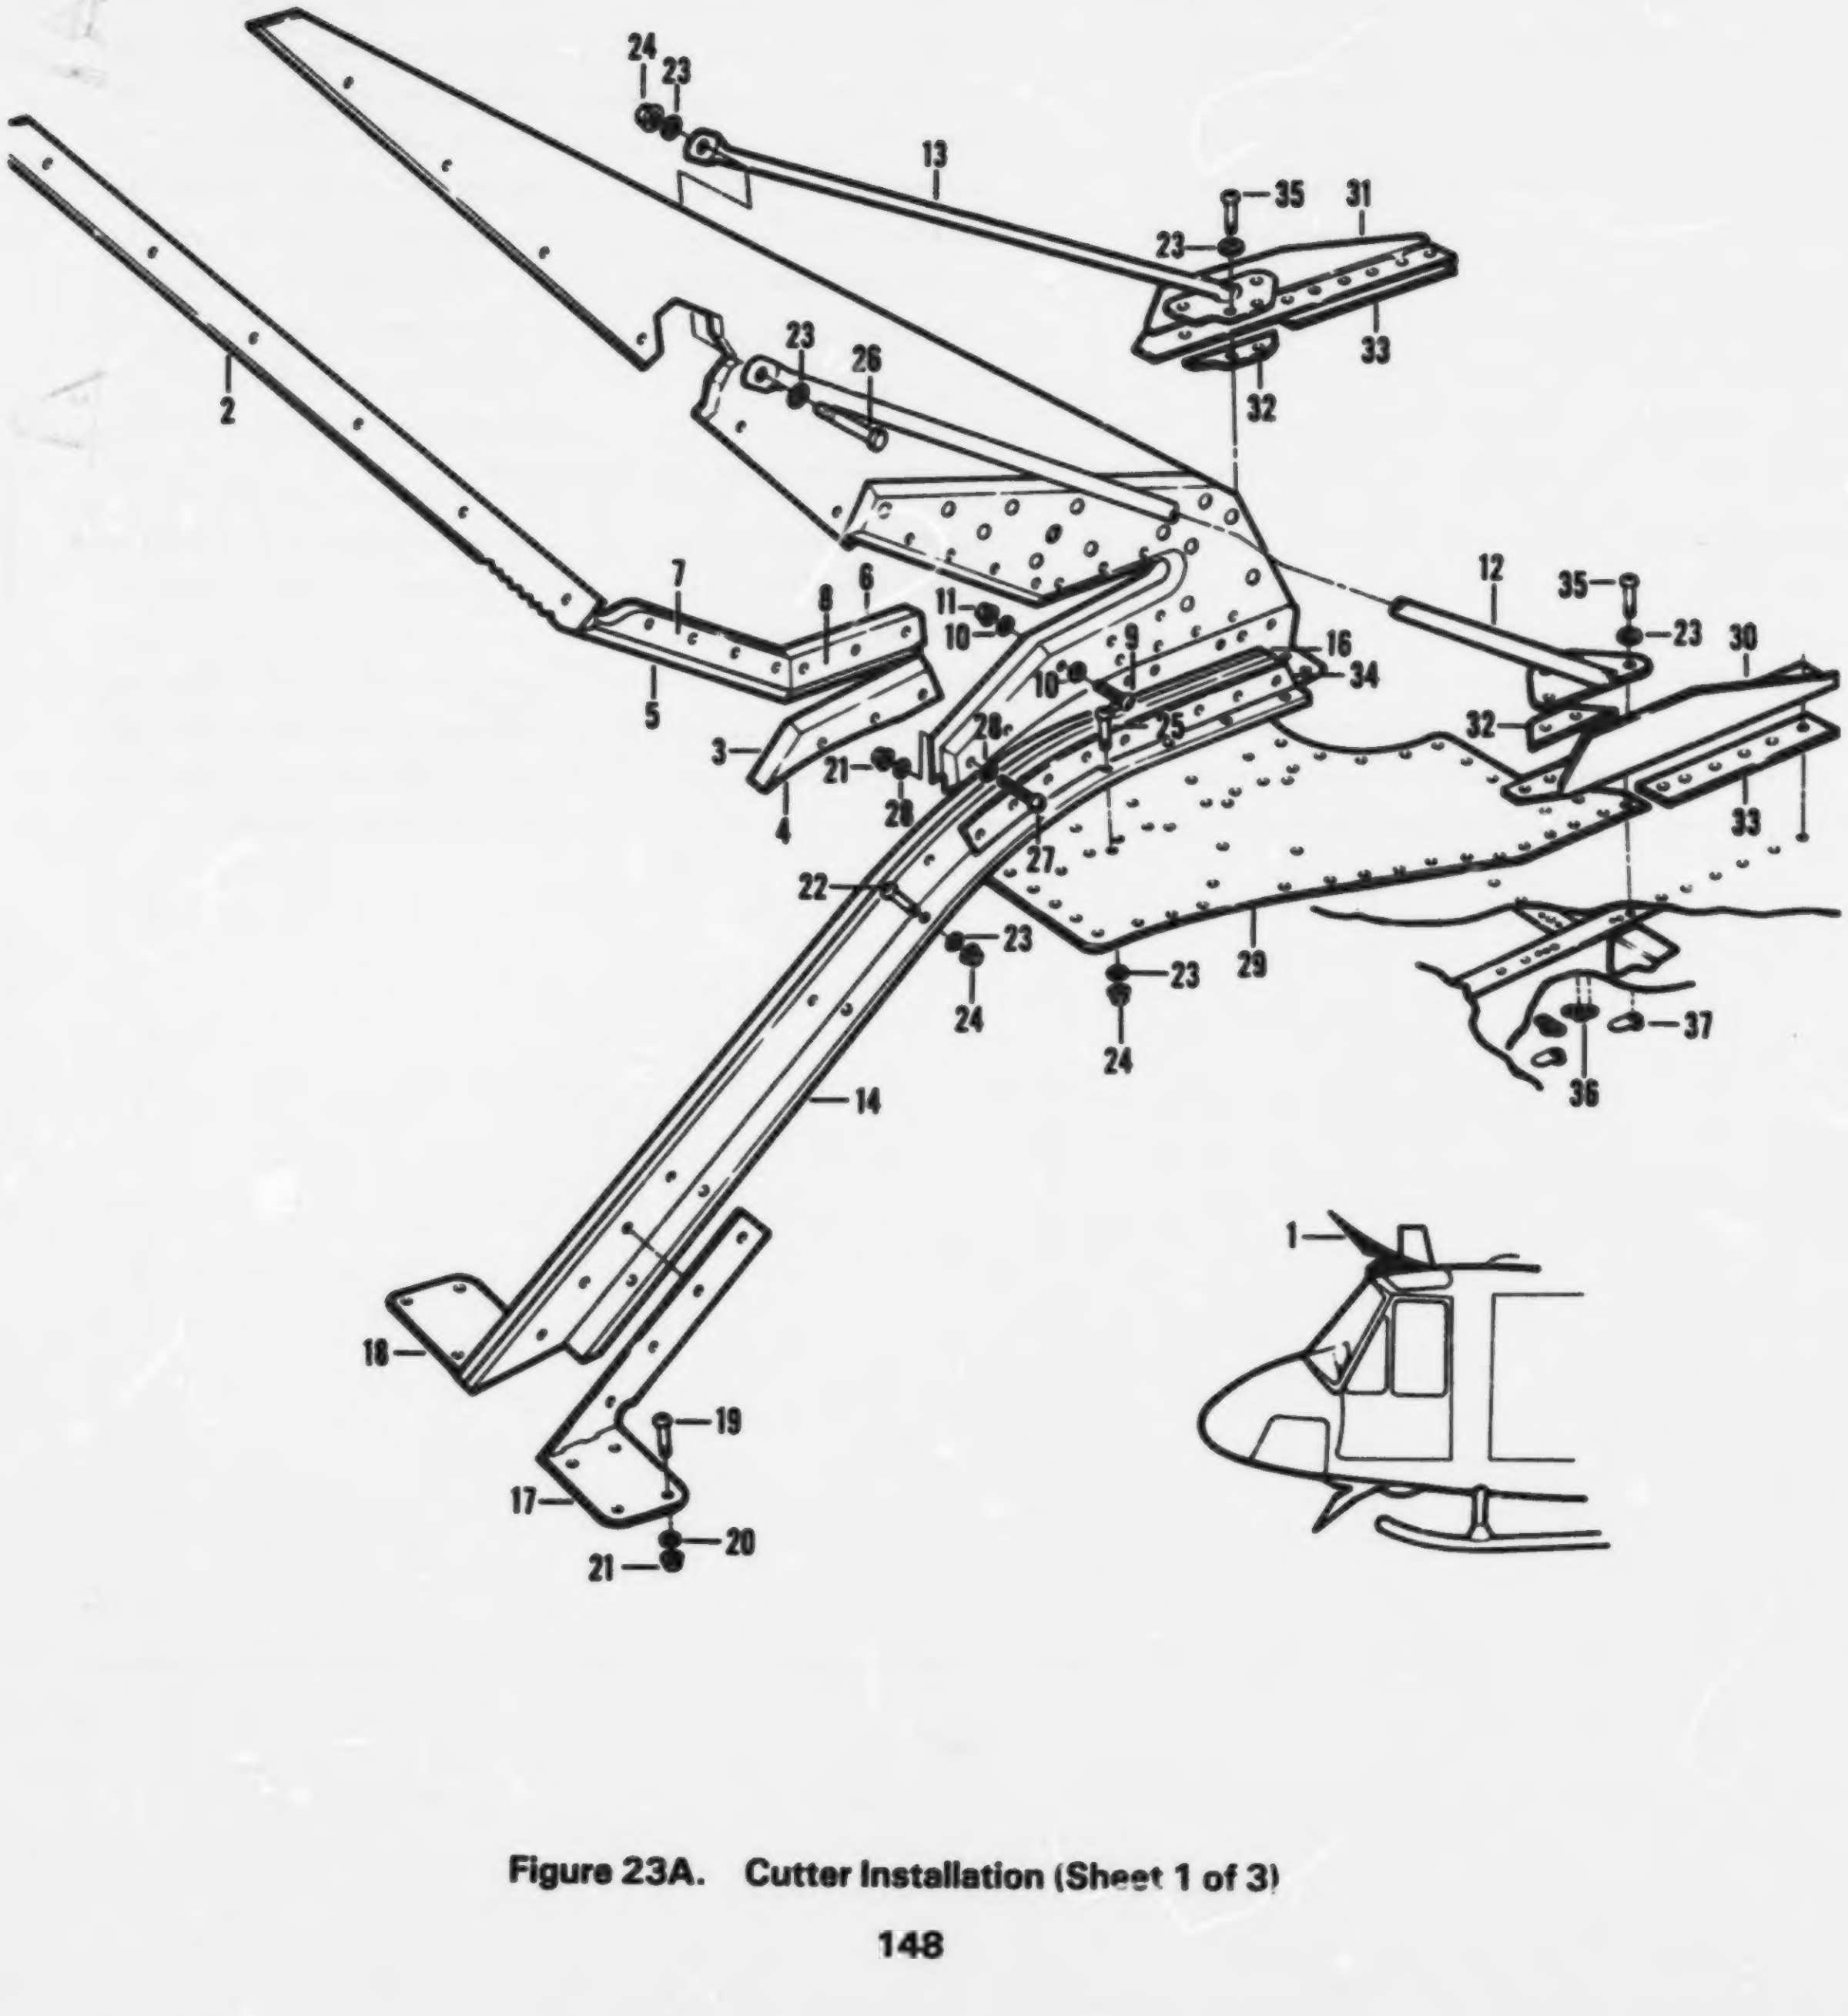
24
23
13
35
31
23
33
32
2
23
26
7
6
8
11
10
9
16
34
10
25
12
35
23
30
32
5
3
21
28
28
4
33
27
22
23
23
29
24
24
37
36
14
1
18
19
17
20
21

Figure 23A. Cutter Installation (Sheet 1 of 3)

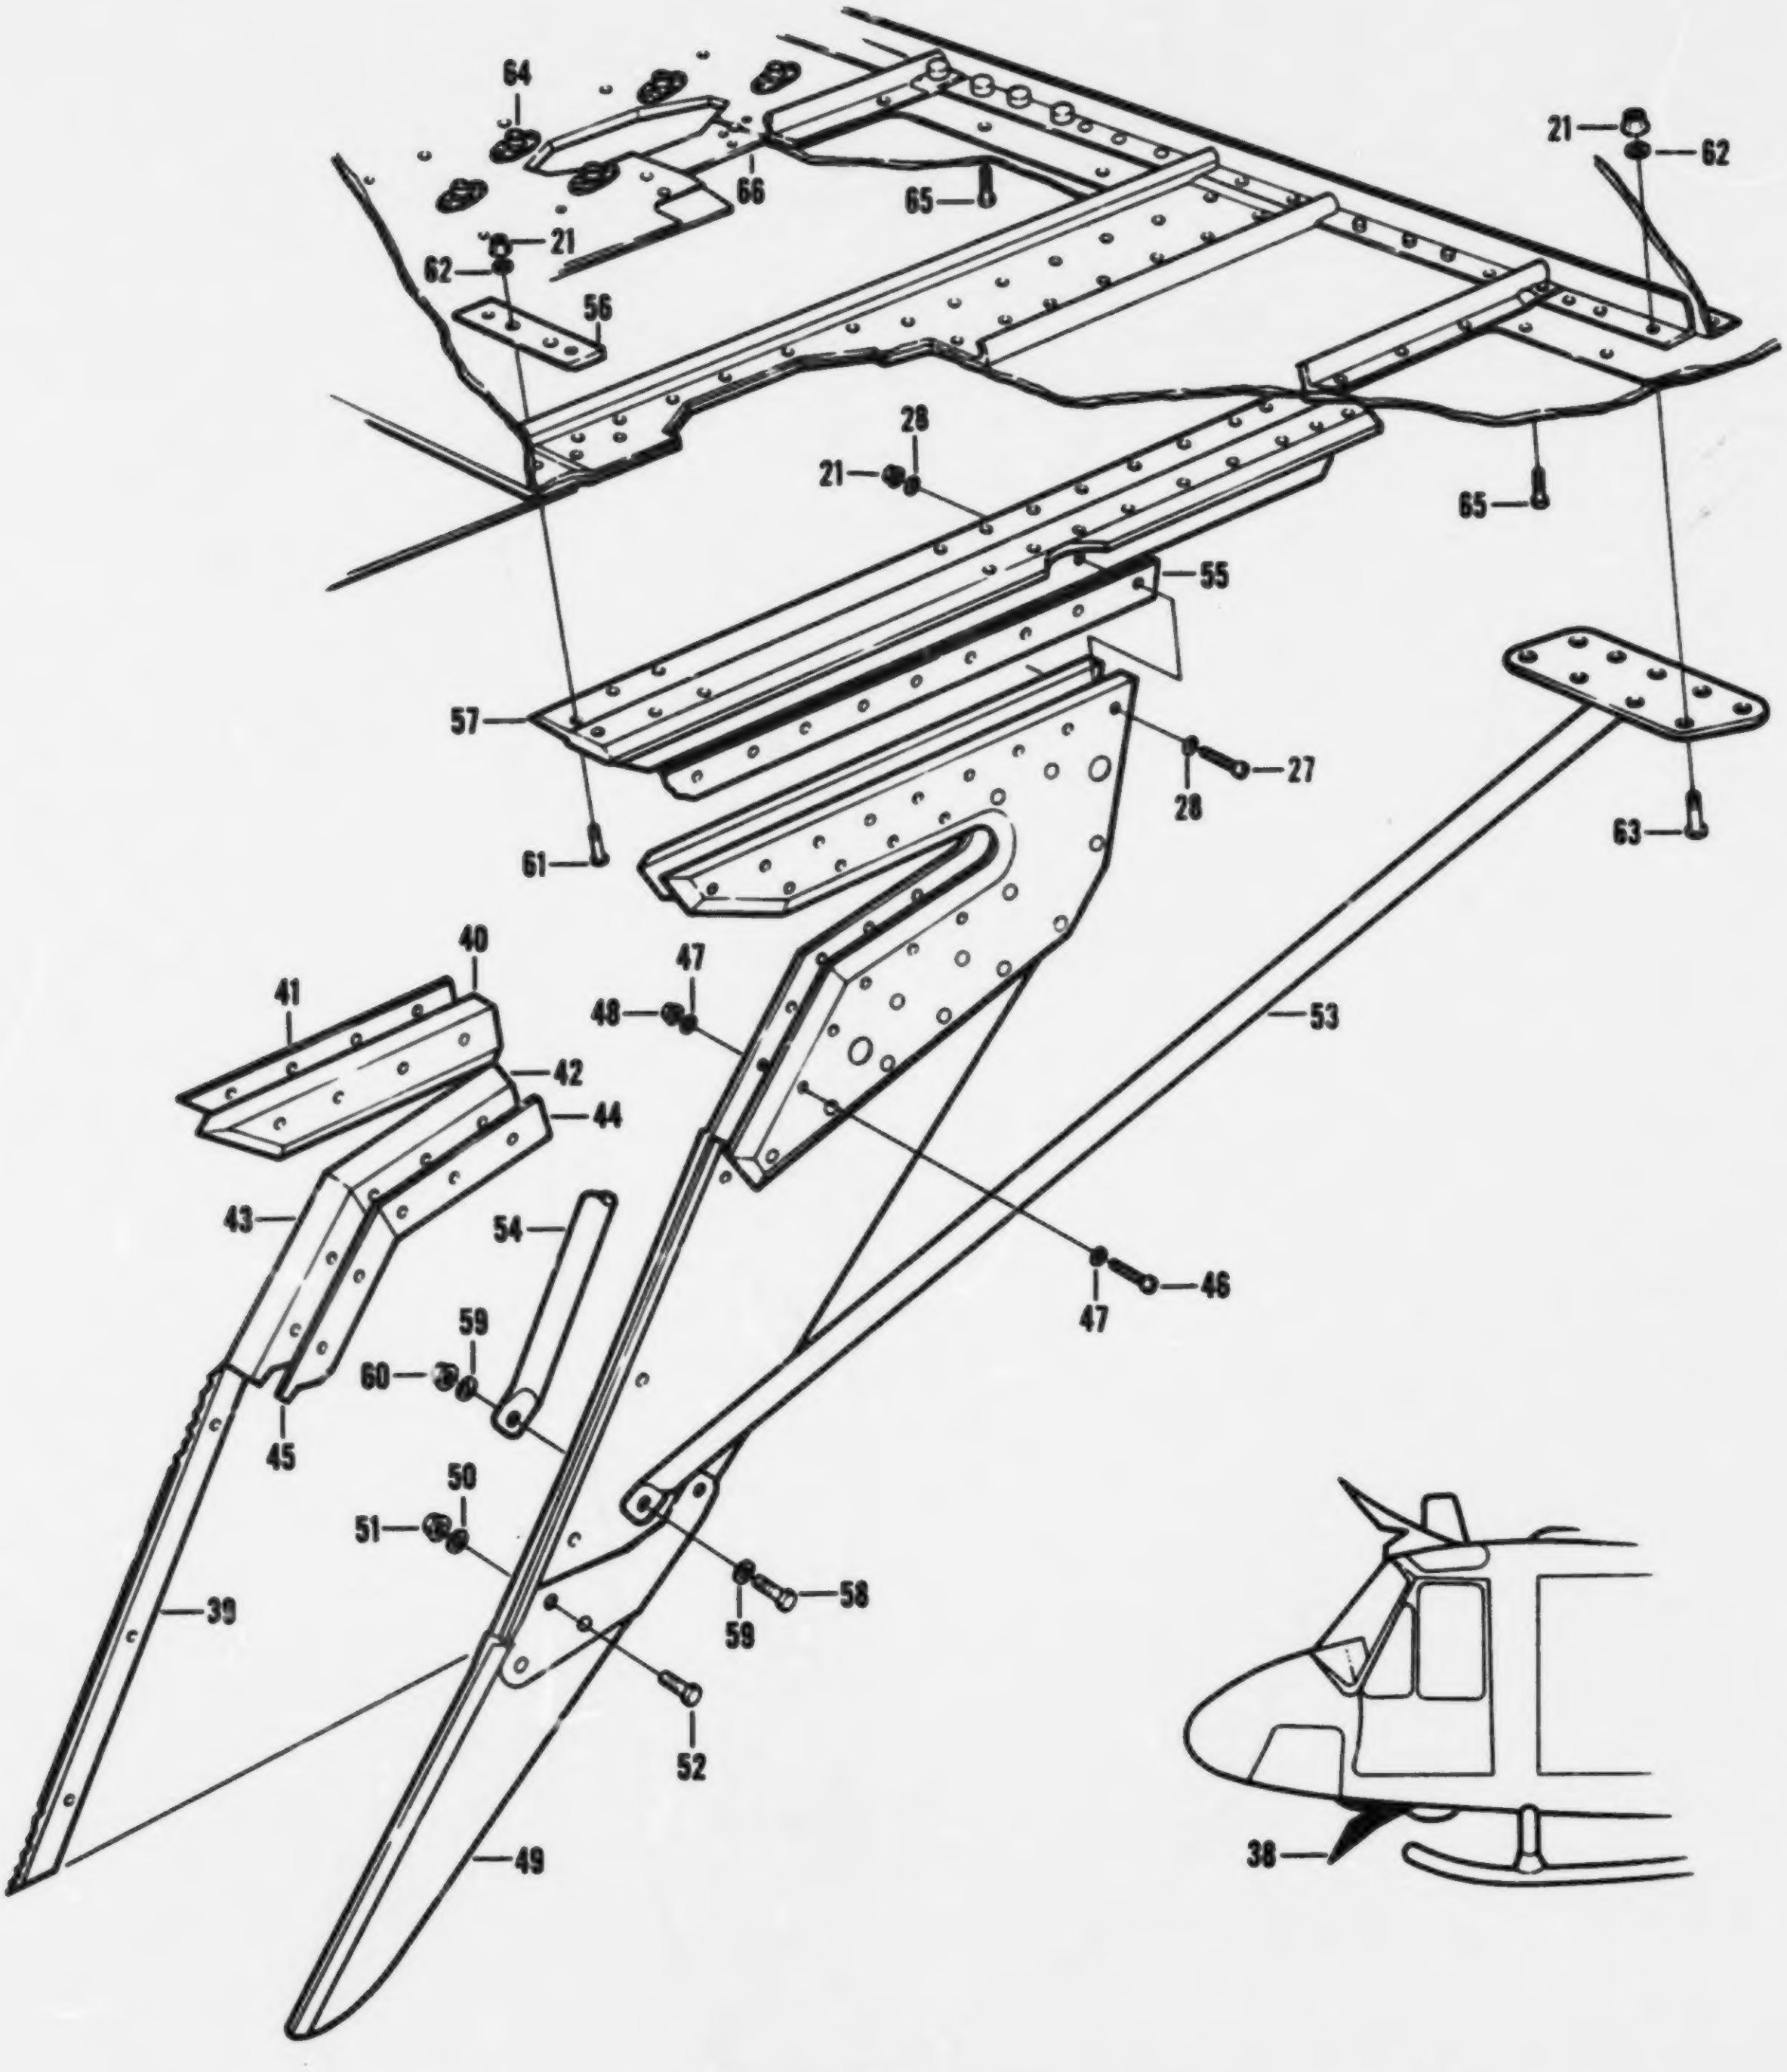
64
21
62
66
65
21
62
56
28
21
65
55
57
27
28
63
61
40
41
47
48
42
44
53
43
54
46
47
59
60
45
50
51
58
39
59
52
38
49

Figure 23A. Cutter Installation (Sheet 2 of 3)

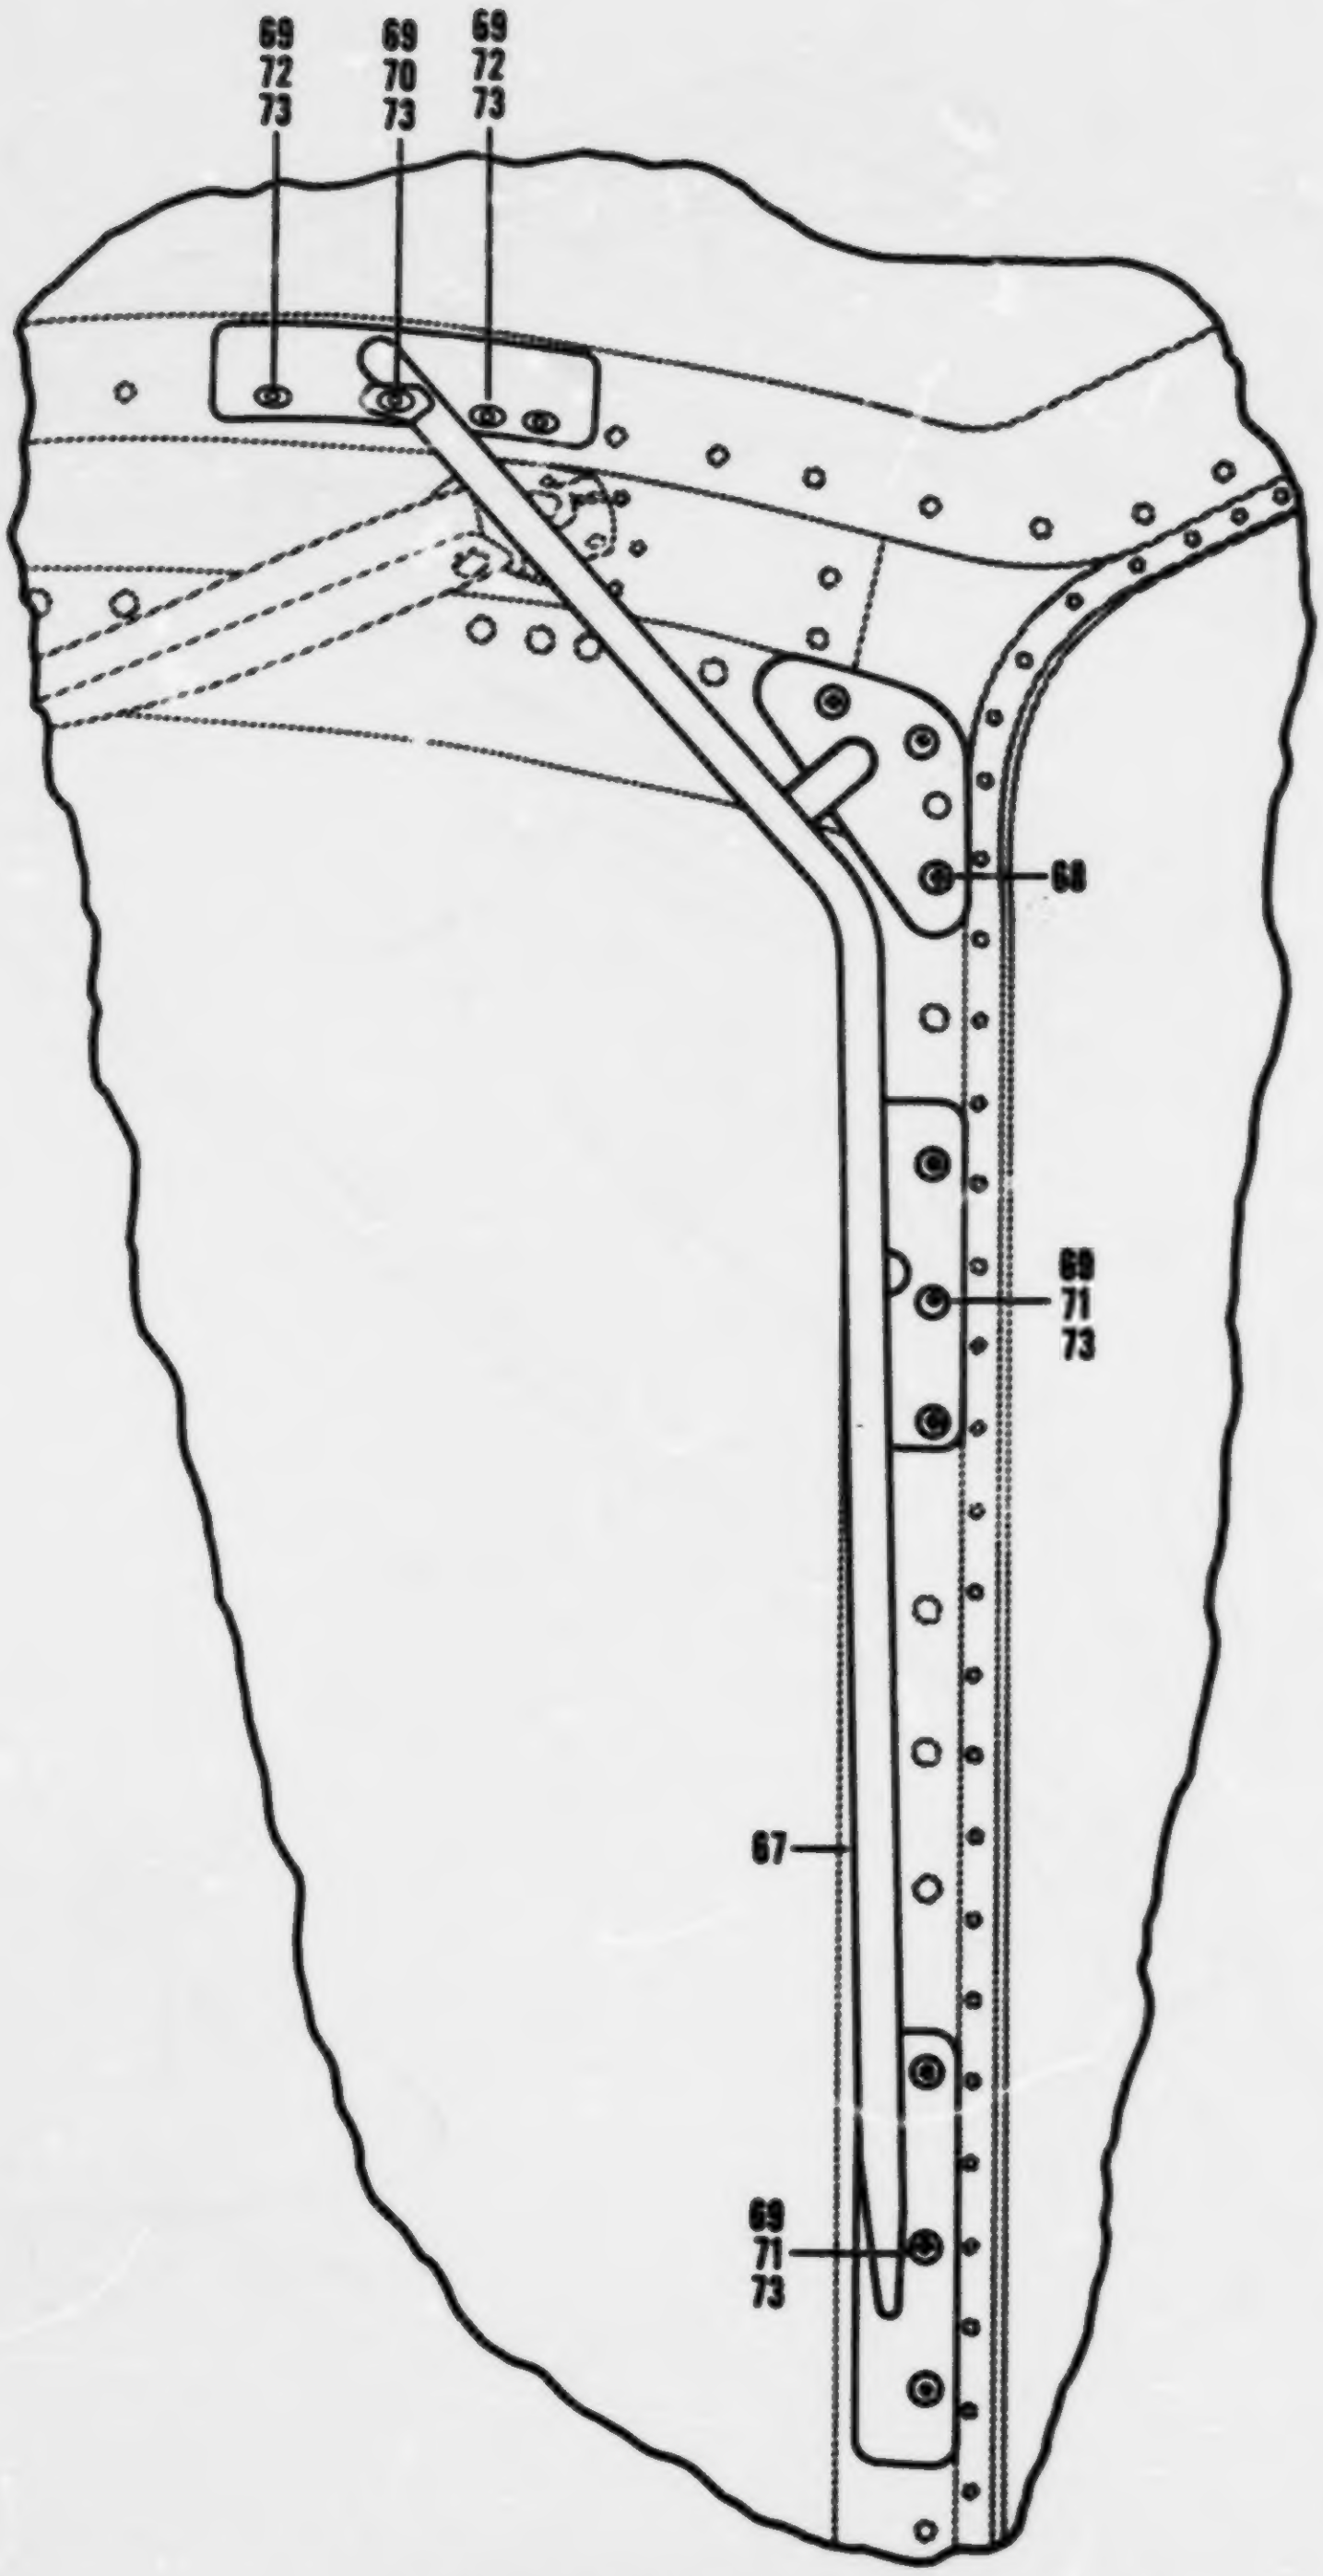
69
72
73
69
70
73
69
72
73
68
69
71
73
67
69
71
73

VIEW LOOKING AFT ON LH SIDE

Figure 23A. Cutter Installation (Sheet 3 of 3)

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
23A		XCFZZ		35951	364-83100-13	CUTTER INSTALLATION.....UHH,UHV	EA	1
23A		XCFZZ		35951	364-83043-1	.CUTTER INST,UPPER.....UHH,UHV	EA	1
23A	1	PBOOO	1560-01-142-6402	35951	364-83027-11	..CUTTER ASSY,UPPER UPPER.....UHH,UHV	EA	1
23A	2	PAOZZ	1560-01-201-4877	35951	364-83017-1	...SAWBLADE.....UHH,UHV	EA	1
23A	3	PAOZZ	1560-01-142-6412	35951	364-83019-5	...BLADE,CUTTER.....UHH,UHV	EA	1
23A	4	PAOZZ	5365-01-142-6431	35951	364-83021-1	...SHIM.....UHH,UHV	EA	V
23A	5	PAOZZ	1615-01-125-5475	35951	365-83006-1	...BLADE,CUTTER ASSY.....UHH,UHV	EA	1
23A	6	PAOZZ	1680-01-129-1263	35951	365-83006-3	...BLADE,CUTTER ASSY.....UHH,UHV	EA	1
23A	7	PAOZZ	5365-01-146-4528	35951	365-83024-1	...SHIM.....UHH,UHV	EA	V
23A	8	PAOZZ	5365-01-147-5035	35951	365-83024-3	...SHIM.....UHH,UHV	EA	V
23A	9	PAOZZ	5305-01-146-4018	35951	990-00026-3	...SCREW.....UHH,UHV	EA	9
23A	10	PAOZZ	5310-00-805-7632	80205	NAS620-8	...WASHER,FLAT.....UHH,UHV	EA	V
23A	10	PAOZZ	5310-00-834-7420	80205	NAS620-8L	...WASHER,FLAT.....UHH,UHV	EA	V
23A	11	PAOZZ	5310-00-807-1473	96906	MS21042L08	...NUT,SELF-LOCKING,EX.....UHH,UHV	EA	9
23A	12	PBOZZ	1560-01-144-7888	35951	364-83007-3	..STRUT ASSEMBLY,UPPE -LH.....UHH,UHV	EA	1
23A	13	PBOZZ	1560-01-142-6399	35951	364-83007-4	..STRUT ASSEMBLY,UPPE -RH.....UHH,UHV	EA	1
23A	14	XDOZZ		35951	364-83034-3	..DEFLECTOR ASSEMBLY.....UHH,UHV	EA	1
23A	16	PAOZZ	1560-01-142-6403	35951	364-83020-1	..FILLER,ANGLE ASSY.....UHH,UHV	EA	1
23A	17	PBOZZ	1560-01-142-6400	35951	364-83015-1	..CLIP,WINDSCREEN -LH.....UHH,UHV	EA	1
23A	18	PBOZZ	1560-01-142-6401	35951	364-83015-2	..CLIP,WINDSCREEN -RH.....UHH,UHV	EA	1
23A	19	PAOZZ	5305-00-926-5655	96906	MS27039C0808	..SCREW,MACHINE.....UHH,UHV	EA	8
23A	20	PAOZZ	5310-00-685-3744	88044	AN960C8	..WASHER,FLAT.....UHH,UHV	EA	8
23A	21	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING,EX.....UHH,UHV	EA	36
23A	22	PAOZZ	5305-00-946-7877	96906	MS27039C1-10	..SCREW,MACHINE.....UHH,UHV	EA	36
23A	23	PAOZZ	5310-00-167-0812	88044	AN960C10L	..WASHER,FLAT.....UHH,UHV	EA	54
23A	24	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX.....UHH,UHV	EA	45
23A	25	PAOZZ	5305-00-824-2022	96906	MS24694C53	..SCREW,MACHINE.....UHH,UHV	EA	8
23A	26	PAOZZ	5306-00-639-2262	80205	NAS464P3A10	..BOLT,SHEAR.....UHH,UHV	EA	1
23A	27	PAOZZ	5305-01-146-4018	35951	990-00026-3	..CAPSCREW.....UHH,UHV	EA	18
23A	28	PAOZZ	5310-00-805-7632	80205	NAS620-8	..WASHER,FLAT.....UHH,UHV	EA	V
23A	28	PAOZZ	5310-00-834-7420	80205	NAS620-8L	..WASHER,FLAT.....UHH,UHV	EA	V
23A	29	XDOZZ		35951	364-83016-5	..DOUBLER.....UHH,UHV	EA	1
23A	30	XDOZZ		35951	364-83016-3	..STIFFENER.....UHH,UHV	EA	1
23A	31	XDOZZ		35951	364-83016-4	..STIFFENER.....UHH,UHV	EA	1
23A	32	PAOZZ	5365-01-142-6426	35951	364-83021-9	..SHIM.....UHH,UHV	EA	2
23A	33	PAOZZ	5365-01-142-6427	35951	364-83021-11	..SHIM.....UHH,UHV	EA	2
23A	34	PAOZZ	5365-01-142-6425	35951	364-83021-3	..SHIM.....UHH,UHV	EA	V
23A	35	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE.....UHH,UHV	EA	8
23A	36	PAOZZ	5310-00-764-7282	96906	MS21047L3	..NUT,SELF-LOCKING,PL.....UHH,UHV	EA	4
23A	37	PAOZZ	5310-00-734-1850	96906	MS21071L3	..NUT,SELF-LOCKING,PL.....UHH,UHV	EA	4
23A		XCFZZ		35951	364-83044-1	.CUTTER INSTL,LOWER.....UHH,UHV	EA	1
23A	38	PBOOO	1560-01-142-6406	35951	364-83026-7	..CUTTER ASSY,LOWER LOWER.....UHH,UHV	EA	1
23A	39	PAOZZ	1560-01-142-6410	35951	364-83017-7	...SAW,BLADE,CUTTER.....UHH,UHV	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
23A	40	PAOZZ	1560-01-142-6411	35951	364-83019-7	...BLADE,CUTTER	UHH,UHV	EA	1
23A	41	PAOZZ	5365-01-142-6429	35951	364-83021-5	...SHIM	UHH,UHV	EA	V
23A	42	PAOZZ	1680-01-129-1263	35951	365-83006-3	...BLADE,CUTTER ASSY	UHH,UHV	EA	1
23A	43	PAOZZ	1680-01-130-7918	35951	365-83017-5	...BLADE,STRIKE	UHH,UHV	EA	1
23A	44	PAOZZ	5365-01-147-5035	35951	365-83024-3	...SHIM	UHH,UHV	EA	V
23A	45	PAOZZ	5365-01-142-6430	35951	365-83024-11	...SHIM	UHH,UHV	EA	V
23A	46	PAOZZ		35951	990-00026-3	..SCREW	UHH,UHV	EA	9
23A	47	PAOZZ	5310-00-805-7632	80205	NAS620-8	..WASHER,FLAT	UHH,UHV	EA	V
23A	47	PAOZZ	5310-00-834-7420	80205	NAS620-8L	..WASHER,FLAT	UHH,UHV	EA	V
23A	48	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING,EX	UHH,UHV	EA	9
23A	49	PAOZZ	1560-01-142-6409	35951	365-83013-17	..CUTTER,TIP ASSY	UHH,UHV	EA	1
23A	50	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT	UHH,UHV	EA	2
23A	51	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX	UHH,UHV	EA	2
23A	52	PAOZZ	5306-00-639-2264	80205	NAS464P3A7	..BOLT,SHEAR	UHH,UHV	EA	2
23A	53	PBOZZ	1560-01-142-6404	35951	364-83008-1	.STRUT ASSY, LOWER -LH	UHH,UHV	EA	1
23A	54	PBOZZ	1560-01-142-6405	35951	364-83008-2	.STRUT ASSY,LOWER -RH	UHH,UHV	EA	1
23A	55	PAOZZ	5365-01-142-6428	35951	364-83021-7	.SHIM	UHH,UHV	EA	V
23A	56	PBOZZ	1560-01-142-0407	35951	364-83032-1	.PLATE,BEARING,LOWER	UHH,UHV	EA	1
23A	57	XDOZZ	1680-01-260-0743	35951	364-83033-1	.ANGLE ASSY	UHH,UHV	EA	1
23A	58	PAOZZ	5306-00-639-2262	80205	NAS464P3A10	.BOLT,SHEAR	UHH,UHV	EA	1
23A	59	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT	UHH,UHV	EA	2
23A	60	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX	UHH,UHV	EA	1
23A	61	PAOZZ	5305-00-840-5895	96906	MS27039-0813	.SCREW,MACHINE	UHH,UHV	EA	2
23A	62	PAOZZ	5310-00-515-8058	88044	AN960-8	.WASHER,FLAT	UHH,UHV	EA	10
23A	63	PAOZZ	5305-00-921-0918	96906	MS27039-0808	.SCREW,MACHINE	UHH,UHV	EA	8
23A	64	PAOZZ	5310-00-781-9494	96906	MS21047L06	.NUT,SELF-LOCKING,PL	UHH,UHV	EA	6
23A	65	PAOZZ	5306-00-150-9221	88044	AN3-3A	.BOLT,MACHINE	UHH,UHV	EA	3
23A	66	XDOZZ		35951	364-83031-1	.DOUBLER	UHH,UHV	EA	1
23A		XCFZZ		35951	364-83047-1	DEFL INST WINDSHIEL	UHH,UHV	EA	1
23A		XCFZZ		35951	364-83047-3	DEFLECTOR INSTL,LH	UHH,UHV	EA	1
23A		XCFZZ		35951	364-83047-5	DEFLECTOR INSTL,RH	UHH,UHV	EA	1
23A	67	PBOZZ	1560-01-142-6408	35951	364-83045-1	.DEFLECTOR ASSY,L-H	UHH,UHV	EA	1
23A	67	PBOZZ	1560-01-143-0042	35951	364-83045-3	.DEFLECTOR ASSY,R-H	UHH,UHV	EA	1
23A	68	PAOZZ	5305-00-925-9674	96906	MS27039-1-10	..SCREW,MACHINE	UHH,UHV	EA	3
23A	69	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX U/O PN 364-83047-3	UHH,UHV	EA	12
23A	69	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX U/O PN 364-83047-5	UHH,UHV	EA	13
23A	70	PAOZZ	5305-00-719-5401	96906	MS24694S49	..SCREW,MACHINE U/O PN 364-83047-5	UHH,UHV	EA	1
23A	71	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	..SCREW,MACHINE	UHH,UHV	EA	6
23A	72	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE	UHH,UHV	EA	3
23A	73	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT U/O PN 364-83047-3	UHH,UHV	EA	12
23A	73	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT U/O PN 364-83047-5	UHH,UHV	EA	13

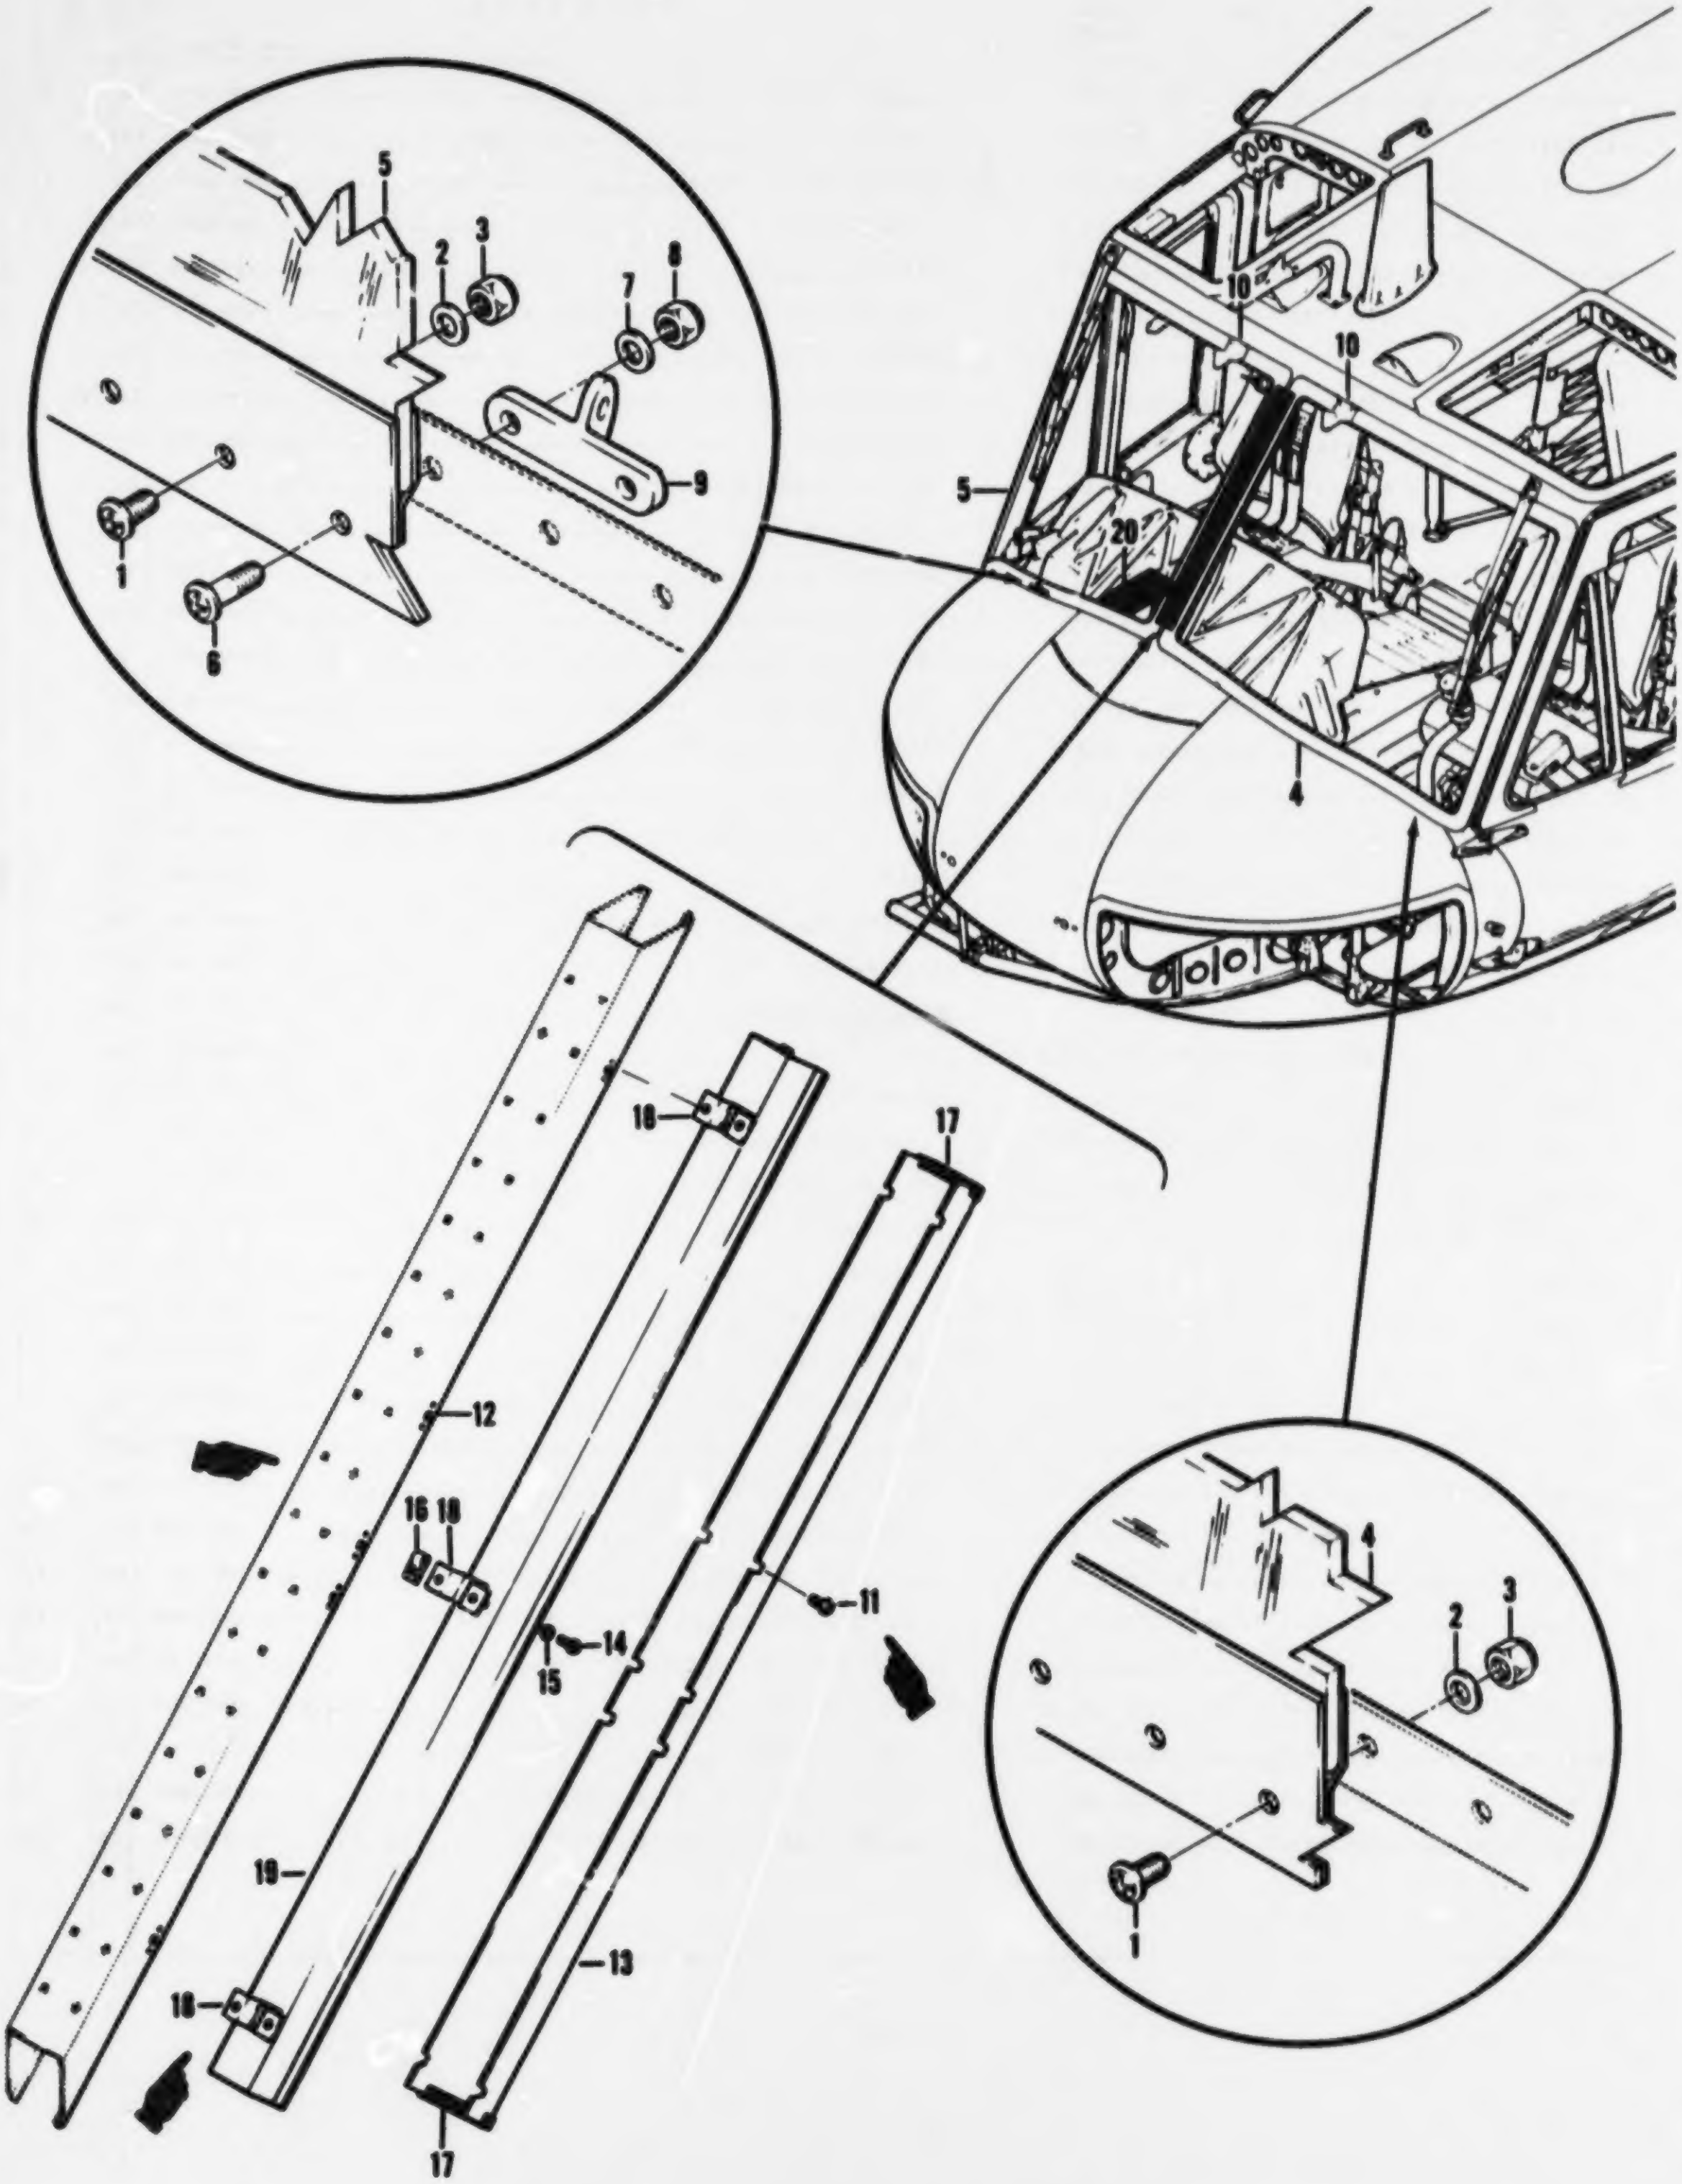
5
2
3
7
8
9
1
6
10
10
5
20
4
18
17
12
16
18
11
14
15
19
13
18
17
4
2
3
1

Figure 24. Windshield Installation, Cabin

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
24		XCFZZ		97499	204-030-666-33	WINDSHIELD INSTL CABIN-LH USBL EFF (UH-1B) 60-3546 THRU 63-12952 (UH-1D) 62-2106 THRU 63-13002 SEE FIG.19(UH-1B)&FIG. 20(UH-1D) FOR NHA........................ UHE,UHH,UHV,UHX	EA	1
24		XCFZZ		97499	204-030-666-35	WINDSHIELD INSTL CABIN-LH USBL EFF (UH-1B) 64-13902 THRU 64-14100 (UH-1D) 64-13492 & SUBSEQUENT SEE FIG.19(UH-1B)&FIG. 20(UH-1D) FOR NHA........................ UHE,UHH,UHV,UHX	EA	1
24		XCFZZ		97499	204-030-666-41	WINDSHIELD INSTL CABIN-LH USBL EFF 64-14101 & SUBSEQUENT SEE FIG.19 FOR NHA...................................... UHM	EA	1
24		XCFZZ		97499	204-030-666-27	WINDSHIELD INSTL CABIN-RH USBL EFF (UH-1D) 60-3546 THRU 64-14100 SEE FIG.19(UHX1B)&FIG.20(UH-1D) FOR NHA .... UHE,UHH,UHV,UHX	EA	1
24		XCFZZ		97499	204-030-666-39	WINDSHIELD INSTL CABIN-RH USBL EFF 64-14101 & SUBSEQUENT SEE FIG.19 FOR NHA...................................... UHM	EA	1
24	1	PAOZZ	5305-00-823-5794	88044	AN525D10R6	.SCREW,MACHINE.................. UHE,UHH,UHM,UHV,UHX	EA	V
24	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.................... UHE,UHH,UHM,UHV,UHX	EA	V
24	3	PAOZZ	5310-00-905-3081	96906	MS21083D3	.NUT,SELF-LOCKING,HE............. UHE,UHH,UHM,UHV,UHX	EA	V
24	4	PAOOO	1560-00-868-7004	97499	204-030-666-43	.WINDSHIELD ASSEMBLY.................... UHE,UHM,UHX	EA	1
24	4	PAOOO	1560-00-433-7321	53117	NP104401-1	.WINDSHIELD PANEL,AI -LH.............................UHH,UHV	EA	1
24	5	PAOOO	1560-00-868-7003	97499	204-030-666-44	.WINDSHIELD ASSEMBLY.................... UHE,UHM,UHX	EA	1
24	5	PAOOO	1560-00-433-7271	53117	NP104401-2	.WINDSHIELD PANEL -RH................................UHH,UHV	EA	1
24	6	PAOZZ	5305-00-576-7810	88044	AN525D10R10	.SCREW,MACHINE U/O PN 204-030-666-27 & -39 .... UHE,UHH,UHM,UHV,UHX	EA	2
24	7	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 204-030-666-27 & -39 .... UHE,UHH,UHM,UHV,UHX	EA	2
24	8	PAOZZ	5310-00-905-3081	96906	MS21083D3	.NUT,SELF-LOCKING,HE U/O PN 204-030-666-27 & -39 .... UHE,UHH,UHM,UHV,UHX	EA	2
24	9	PAOZZ	1560-00-737-6767	97499	204-070-047-1	.SUPPORT,STRUCTURAL -RH.......... UHE,UHH,UHM,UHV,UHX	EA	1
24	10	MFOZZ		97499	204-030-010-1	.STOP............................ UHE,UHH,UHM,UHV,UHX	EA	1
24		XCFZZ		97499	204-030-665-3	.POST INSTL...................... UHH,UHM,UHV,UHE,UHX	EA	1
24	11	PADZZ	5305-00-912-7307	96906	MS27039-1-06	..SCREW,MACHINE.................. UHM,UHH,UHV,UHE,UHX	EA	10
24	12	PADZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL............ UHM,UHH,UHV,UHE,UHX	EA	10
24	13	PADZZ	1680-00-342-8441	97499	204-030-665-13	..POST,CENTER WINDSHI............ UHM,UHH,UHV,UHE,UHX	EA	1
24	14	PADZZ	5305-00-432-4165	96906	MS51861-26	..SCREW,TAPPING,THREA............ UHM,UHH,UHV,UHE,UHX	EA	3
24	15	PADZZ	5310-00-187-2398	98044	AN960PD6L	..WASHER,FLAT.................... UHM,UHH,UHV,UHE,UHX	EA	3
24	16	PADZZ	5310-00-264-1877	80205	NAS395-1-[illegible]	..NUT,SHEET SPRING............... UHM,UHH,UHV,UHE,UHX	EA	3
24	17	PADZZ	1680-00-342-8442	97499	204-030-665-17	...POST, CHANNEL.................................... UHM,UHV,UHE,UHX	EA	2
24	18	PADZZ	1560-00-451-8303	97499	204-030-665-9	..CLIP,POST...................... UHH,UHM,UHV,UHE,UHX	EA	3
24	19	XDDZZ		97499	204-030-665-11	..CHANNEL........................ UHM,UHH,UHV,UHE,UHX	EA	1
24	20	PBDZZ	1560-00-133-7410	97499	204-030-654-34	.BRACKET ASSY,WINDSH..................... UHH,UHV	EA	1

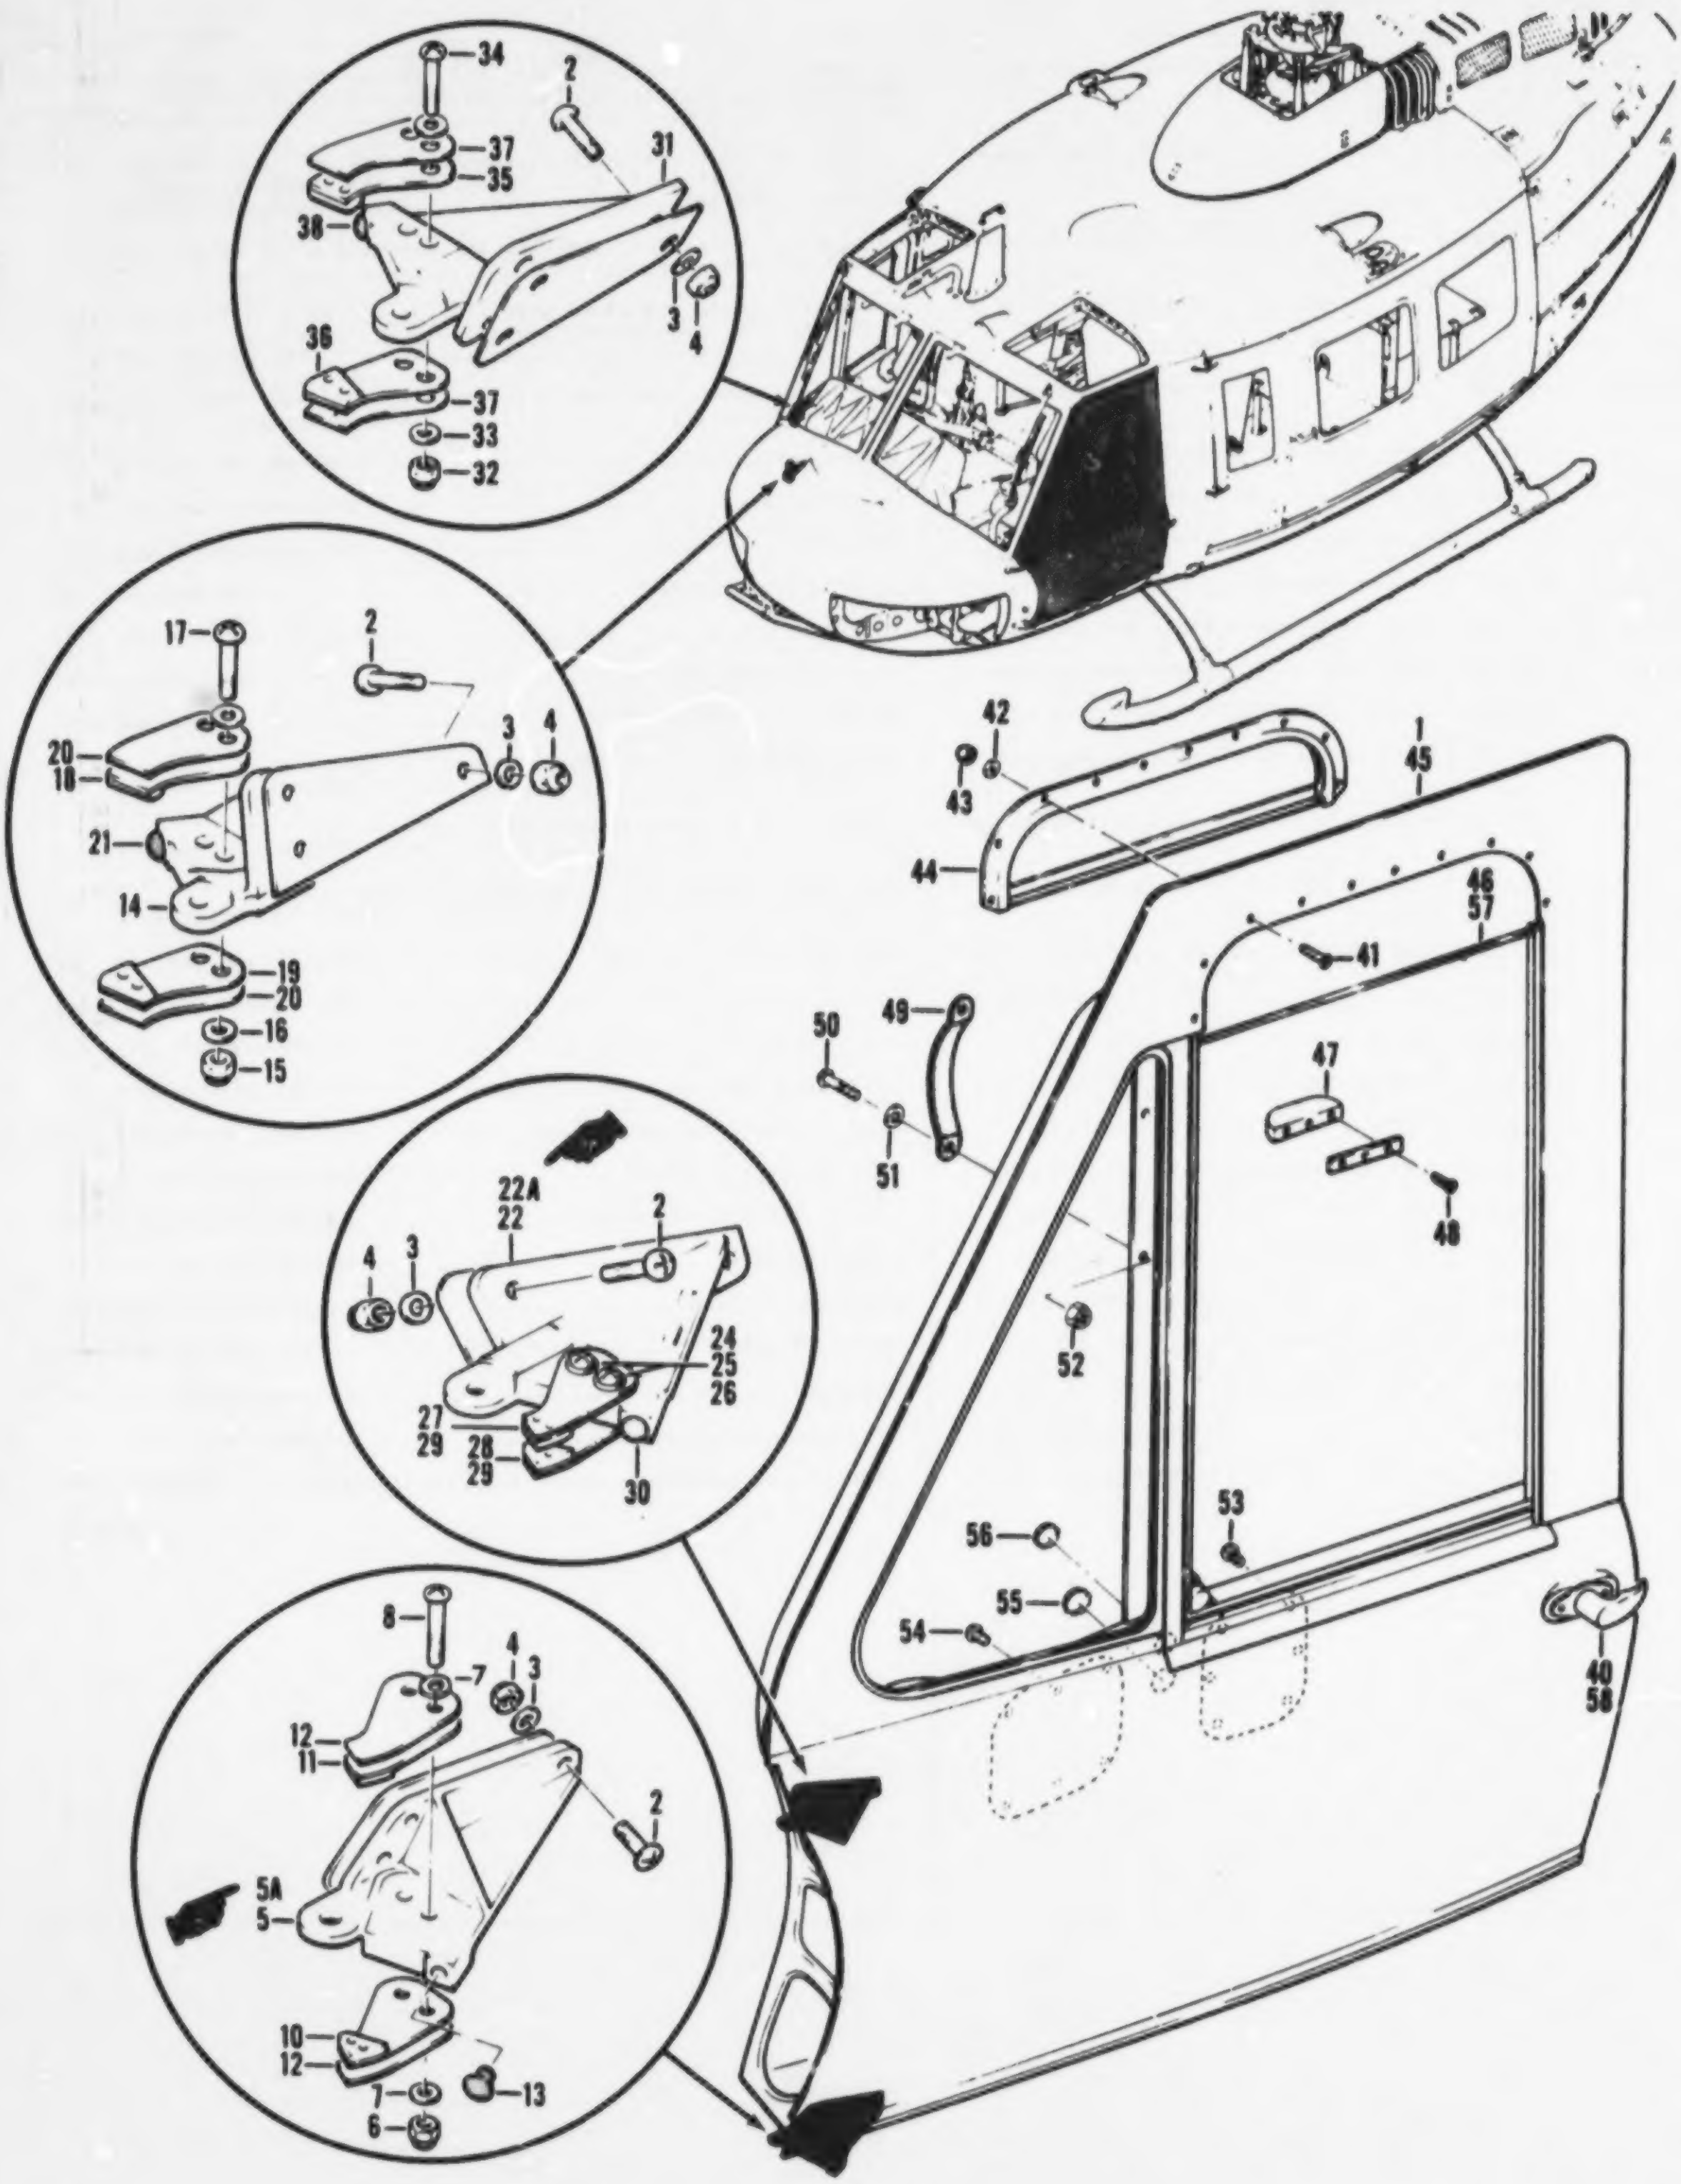
34
2
31
37
35
38
3
4
36
37
33
32
17
2
3
4
20
18
21
14
19
20
16
15
22A
22
2
4
3
24
25
26
27
29
28
29
30
8
7
4
3
12
11
2
5A
5
10
12
7
13
6
42
43
1
45
44
46
57
41
49
50
51
47
48
52
53
56
55
54
40
58

Figure 25. Door Assembly, Crew

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
25	1	PAOOO	1560-00-736-4013	97499	204-030-853-119	DOOR,PASSENGER,AIRC LH SEE FIG. 19,20 FOR NHA ....UHE,UHH,UHM,UHV,UHX	EA	1
25	1	PAOOO	1560-00-736-4014	97499	204-030-853-120	DOOR,PASSENGER,AIRC RH SEE FIG. 19,20 FOR NHA ....UHE,UHH,UHM,UHV,UHX	EA	1
25	2	PAOZZ	5305-00-180-0014	88044	AN525-10R12	.SCREW,MACHINE.......UHE,UHH,UHM,UHV,UHX	EA	6
25	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.......UHE,UHH,UHM,UHV,UHX	EA	6
25	4	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.......UHE,UHH,UHM,UHV,UHX	EA	6
25	5	PAOOO	1560-00-736-4033	97499	204-031-468-1	.HINGE,ACCESS DOOR -LH.......UHE,UHH,UHM,UHV,UHX	EA	1
25	5A	PAOZZ	5365-00-465-9491	97499	204-030-468-9	.SHIM.......UHE,UHH,UHM,UHV,UHX	EA	1
25	6	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHE,UHH,UHM,UHV,UHX	EA	2
25	7	PAOZZ	5310-00-515-8058	88044	AN960-8	..WASHER,FLAT.......UHE,UHH,UHM,UHV,UHX	EA	4
25	8	PAOZZ	5305-00-576-1499	88044	AN525-832R16	..SCREW,MACHINE.......UHE,UHH,UHM,UHV,UHX	EA	4
25	10	PAOZZ	1560-00-738-8354	97499	204-031-762-1	..SPRING,HINGE PLATE U/O PN 204-031-468-1 ....UHE,UHH,UHM,UHV,UHX	EA	1
25	11	PAOZZ	1560-00-738-8355	97499	204-031-762-2	..SPRING,HINGE PLATE U/O PN 204-031-468-1 ....UHE,UHH,UHM,UHV,UHX	EA	1
25	12	PAOZZ	1560-00-739-4565	97499	204-031-762-5	..SPRING,HINGE PLATE U/O PN 204-031-468-1 ....UHE,UHH,UHM,UHV,UHX	EA	2
25	13	PAOZZ	5340-00-499-0073	70485	713	..BUMPER,RUBBER U/O PN 204-031-468-1 ....UHE,UHH,UHM,UHV,UHX	EA	1
25	14	PAOOO	1560-00-736-4034	97499	204-031-468-2	.HINGE,ACCESS DOOR -RH.......UHE,UHH,UHM,UHV,UHX	EA	1
25	15	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHE,UHH,UHM,UHV,UHX	EA	2
25	16	PAOZZ	5310-00-515-8058	88044	AN960-8	..WASHER,FLAT.......UHE,UHH,UHM,UHV,UHX	EA	4
25	17	PAOZZ	5305-00-576-1499	88044	AN525-832R16	..SCREW,MACHINE.......UHE,UHH,UHM,UHV,UHX	EA	2
25	18	PAOZZ	1560-00-738-8354	97499	204-031-762-1	..SPRING,HINGE PLATE U/O PN 204-031-468-2 ....UHE,UHH,UHM,UHV,UHX	EA	1
25	19	PAOZZ	1560-00-738-8355	97499	204-031-762-2	..SPRING,HINGE PLATE U/O PN 204-031-468-2 ....UHE,UHH,UHM,UHV,UHX	EA	1
25	20	PAOZZ	1560-00-739-4565	97499	204-031-762-5	..SPRING,HINGE PLATE U/O PN 204-031-468-2 ....UHE,UHH,UHM,UHV,UHX	EA	2
25	21	PAOZZ	5340-00-499-0073	70485	713	..BUMPER,RUBBER U/O PN 204-031-468-2 .... UHE,UHH,UHM,UHV,UHX	EA	1
							EA	1
25	22	PAOOO	1560-00-737-6567	97499	204-031-658-1	.HINGE,ACCESS DOOR -LH....... UHE,UHH,UHM,UHV,UHX	EA	1
25	22A	PAOZZ	5635-00-465-9490	97499	204-030-658-13	.SHIM....... UHE,UHH,UHM,UHV,UHX	EA	1
25	24	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 204-031-658-1 ....UHE,UHH,UHM,UHV,UHX	EA	2
25	25	PAOZZ	5310-00-515-8058	88044	AN960-8	..WASHER,FLAT U/O PN 204-031-658-1 ....UHE,UHH,UHM,UHV,UHX	EA	4
25	26	PAOZZ	5305-00-576-1499	88044	AN525-832R16	..SCREW,MACHINE U/O PN 204-031-658-1 ....UHE,UHH,UHM,UHV,UHX	EA	2
25	27	PAOZZ	1560-00-738-8355	97499	204-031-762-2	..SPRING,HINGE PLATE U/O PN 204-031-658-1 ....UHE,UHH,UHM,UHV,UHX	EA	1
25	28	PAOZZ	1560-00-738-8354	97499	204-031-762-1	..SPRING,HINGE PLATE U/O PN 204-031-658-1 ....UHE,UHH,UHM,UHV,UHX	EA	1
25	29	PAOZZ	1560-00-739-4565	97499	204-031-762-5	..SPRING,HINGE PLATE U/O PN 204-031-658-1 ....UHE,UHH,UHM,UHV,UHX	EA	2
25	30	PAOZZ	5340-00-499-0073	70485	713	..BUMPER,RUBBER U/O PN 204-031-658-1 ....UHE,UHH,UHM,UHV,UHX	EA	1
25	31	PAOOO	1560-00-893-3441	97499	204-031-658-2	.HINGE,ACCESS DOOR -RH.......UHE,UHH,UHM,UHV,UHX	EA	1
25	32	PAOZZ	5310-00-807-1473	93906	MS21042L08	..NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 204-031-658-2 ....UHE,UHH,UHM,UHV,UHX	EA	2
25	33	PAOZZ	5310-00-515-8058	88044	AN960-8	..WASHER,FLAT U/O PN 204-031-658-2 ....UHE,UHH,UHM,UHV,UHX	EA	4

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....	UHE,UHH,UHM,UHV,UHX		
25	34	PAOZZ	5305-00-576-1499	88044	AN525-832R16	..SCREW,MACHINE U/O PN 204-031-658-2	UHE,UHH,UHM,UHV,UHX	EA	2
25	35	PAOZZ	1560-00-738-8354	97499	204-031-762-1	..SPRING,HINGE PLATE U/O PN 204-031-658-2	UHE,UHH,UHM,UHV,UHX	EA	1
25	36	PAOZZ	1560-00-738-8355	97499	204-031-762-2	..SPRING,HINGE PLATE U/O PN 204-031-658-2	UHE,UHH,UHM,UHV,UHX	EA	1
25	37	PAOZZ	1560-00-739-4565	97499	204-031-762-5	..SPRING,HINGE PLATE U/O PN 204-031-658-2	UHE,UHH,UHM,UHV,UHX	EA	2
25	38	PAOZZ	5340-00-499-0073	70485	713	..BUMPER,RUBBER U/O PN 204-031-658-2	UHE,UHH,UHM,UHV,UHX	EA	1
25	40	XCFZZ		97499	204-030-500-3	.LATCH INSTL CREW DOOR -LH U/O PN 204-030-853-119 SEE FIG.26 FOR BREAKDOWN......................	UHE,UHH,UHM,UHV,UHX	EA	1
25	40	XCFZ		97499	204-030-500-4	.LATCH INSTL,CREW DOOR-RH U/O PN 204-030-853-120 SEE FIG.26 FOR BREAKDOWN......................	UHE,UHH,UHM,UHV,UHX	EA	1
25	41	PAOZZ	5305-00-984-4988	96906	MS35206-228	.SCREW,MACHINE....................	UHE,UHH,UHM,UHV,UHX	EA	10
25	42	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT......................	UHE,UHH,UHM,UHV,UHX	EA	10
25	43	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING,HE.............	UHE,UHH,UHM,UHV,UHX	EA	10
25	44	PAOOO	1560-00-690-7288	97499	204-030-770-1	.WINDOW PANEL, AIRCRA -LH/RH	UHE,UHH,UHM,UHV,UHX	EA	1
25	45	XAOOZ		97499	204-030-853-125	.DOOR ASSY CREW LH U/O PN 204-030-853-119,SEE FIG 28 FOR BREAKDOWN..........................	UHE,UHH,UHM,UHV,UHX	EA	1
25	45	XAOOZ		97499	204-030-853-126	.DOOR ASSY,CREW RH U/O PN 204-030-853-120,SEE FIG 28 FOR BREAKDOWN..........................	UHE,UHH,UHM,UHV,UHX	EA	1
25	46	PAOOO	1560-00-690-7290	97499	204-030-799-1	.WINDOW PANEL,AIRCRA.............	UHE,UHH,UHM,UHV,UHX	EA	1
25	46	XAOZZ		97499	204-030-799-3	..WINDOW ASSY,LOWER...............	UHE,UHH,UHM,UHV,UHX	EA	1
25	47	PAOZZ	5340-00-765-8729	97499	204-030-692-11	..HANDLE,WINDOW..................	UHE,UHH,UHM,UHV,UHX	EA	1
25	48	PAOZZ	5305-00-889-3000	96906	MS35206-230	..SCREW,MACHINE..................	UHE,UHH,UHM,UHV,UHX	EA	3
25	49	PAOZZ	1680-01-047-8710	81996	90-04A-1	.HANDLE,LEATHER..................	UHE,UHH,UHM,UHV,UHX	EA	1
25	50	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE U/O PN 204-030-853-119 & -120	UHE,UHH,UHM,UHV,UHX	EA	2
25	51	PAOZZ	5310-00-167-0765	96906	MS63040-3	.WASHER,FLAT U/O PN 204-030-853-119 & -120	UHE,UHH,UHM,UHV,UHX	EA	2
25	52	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 204-030-853-119 & -120..............................	UHE,UHH,UHM,UHV,UHX	EA	2
25	53	PAOZZ	5305-00-984-4983	96906	MS35206-226	.SCREW,MACHINE....................	UHE,UHH,UHM,UHV,UHX	EA	6
25	54	PAOZZ	5305-00-984-6189	96906	MS35206-241	.SCREW,MACHINE....................	UHE,UHH,UHM,UHV,UHX	EA	6
25	55	PAOZZ	5340-00-708-8933	61864	MS51026K2215	.BUTTON,PLUG......................	UHE,UHH,UHM,UHV,UHX	EA	1
25	56	PAOZZ	5340-00-051-9769	61864	MS48172	.BUTTON,PLUG......................	UHE,UHH,UHM,UHV,UHX	EA	1
25	57	PBOZZ	1560-00-449-6557	97499	204-030-466-3	.CHANNEL,WINDOW STIF.............	UHE,UHH,UHM,UHV,UHX	EA	1
25	58	XDOZZ	5340-00-582-2741	96906	MS35647-4	.PADLOCK..........................	UHE,UHH,UHM,UHV,UHX	EA	1

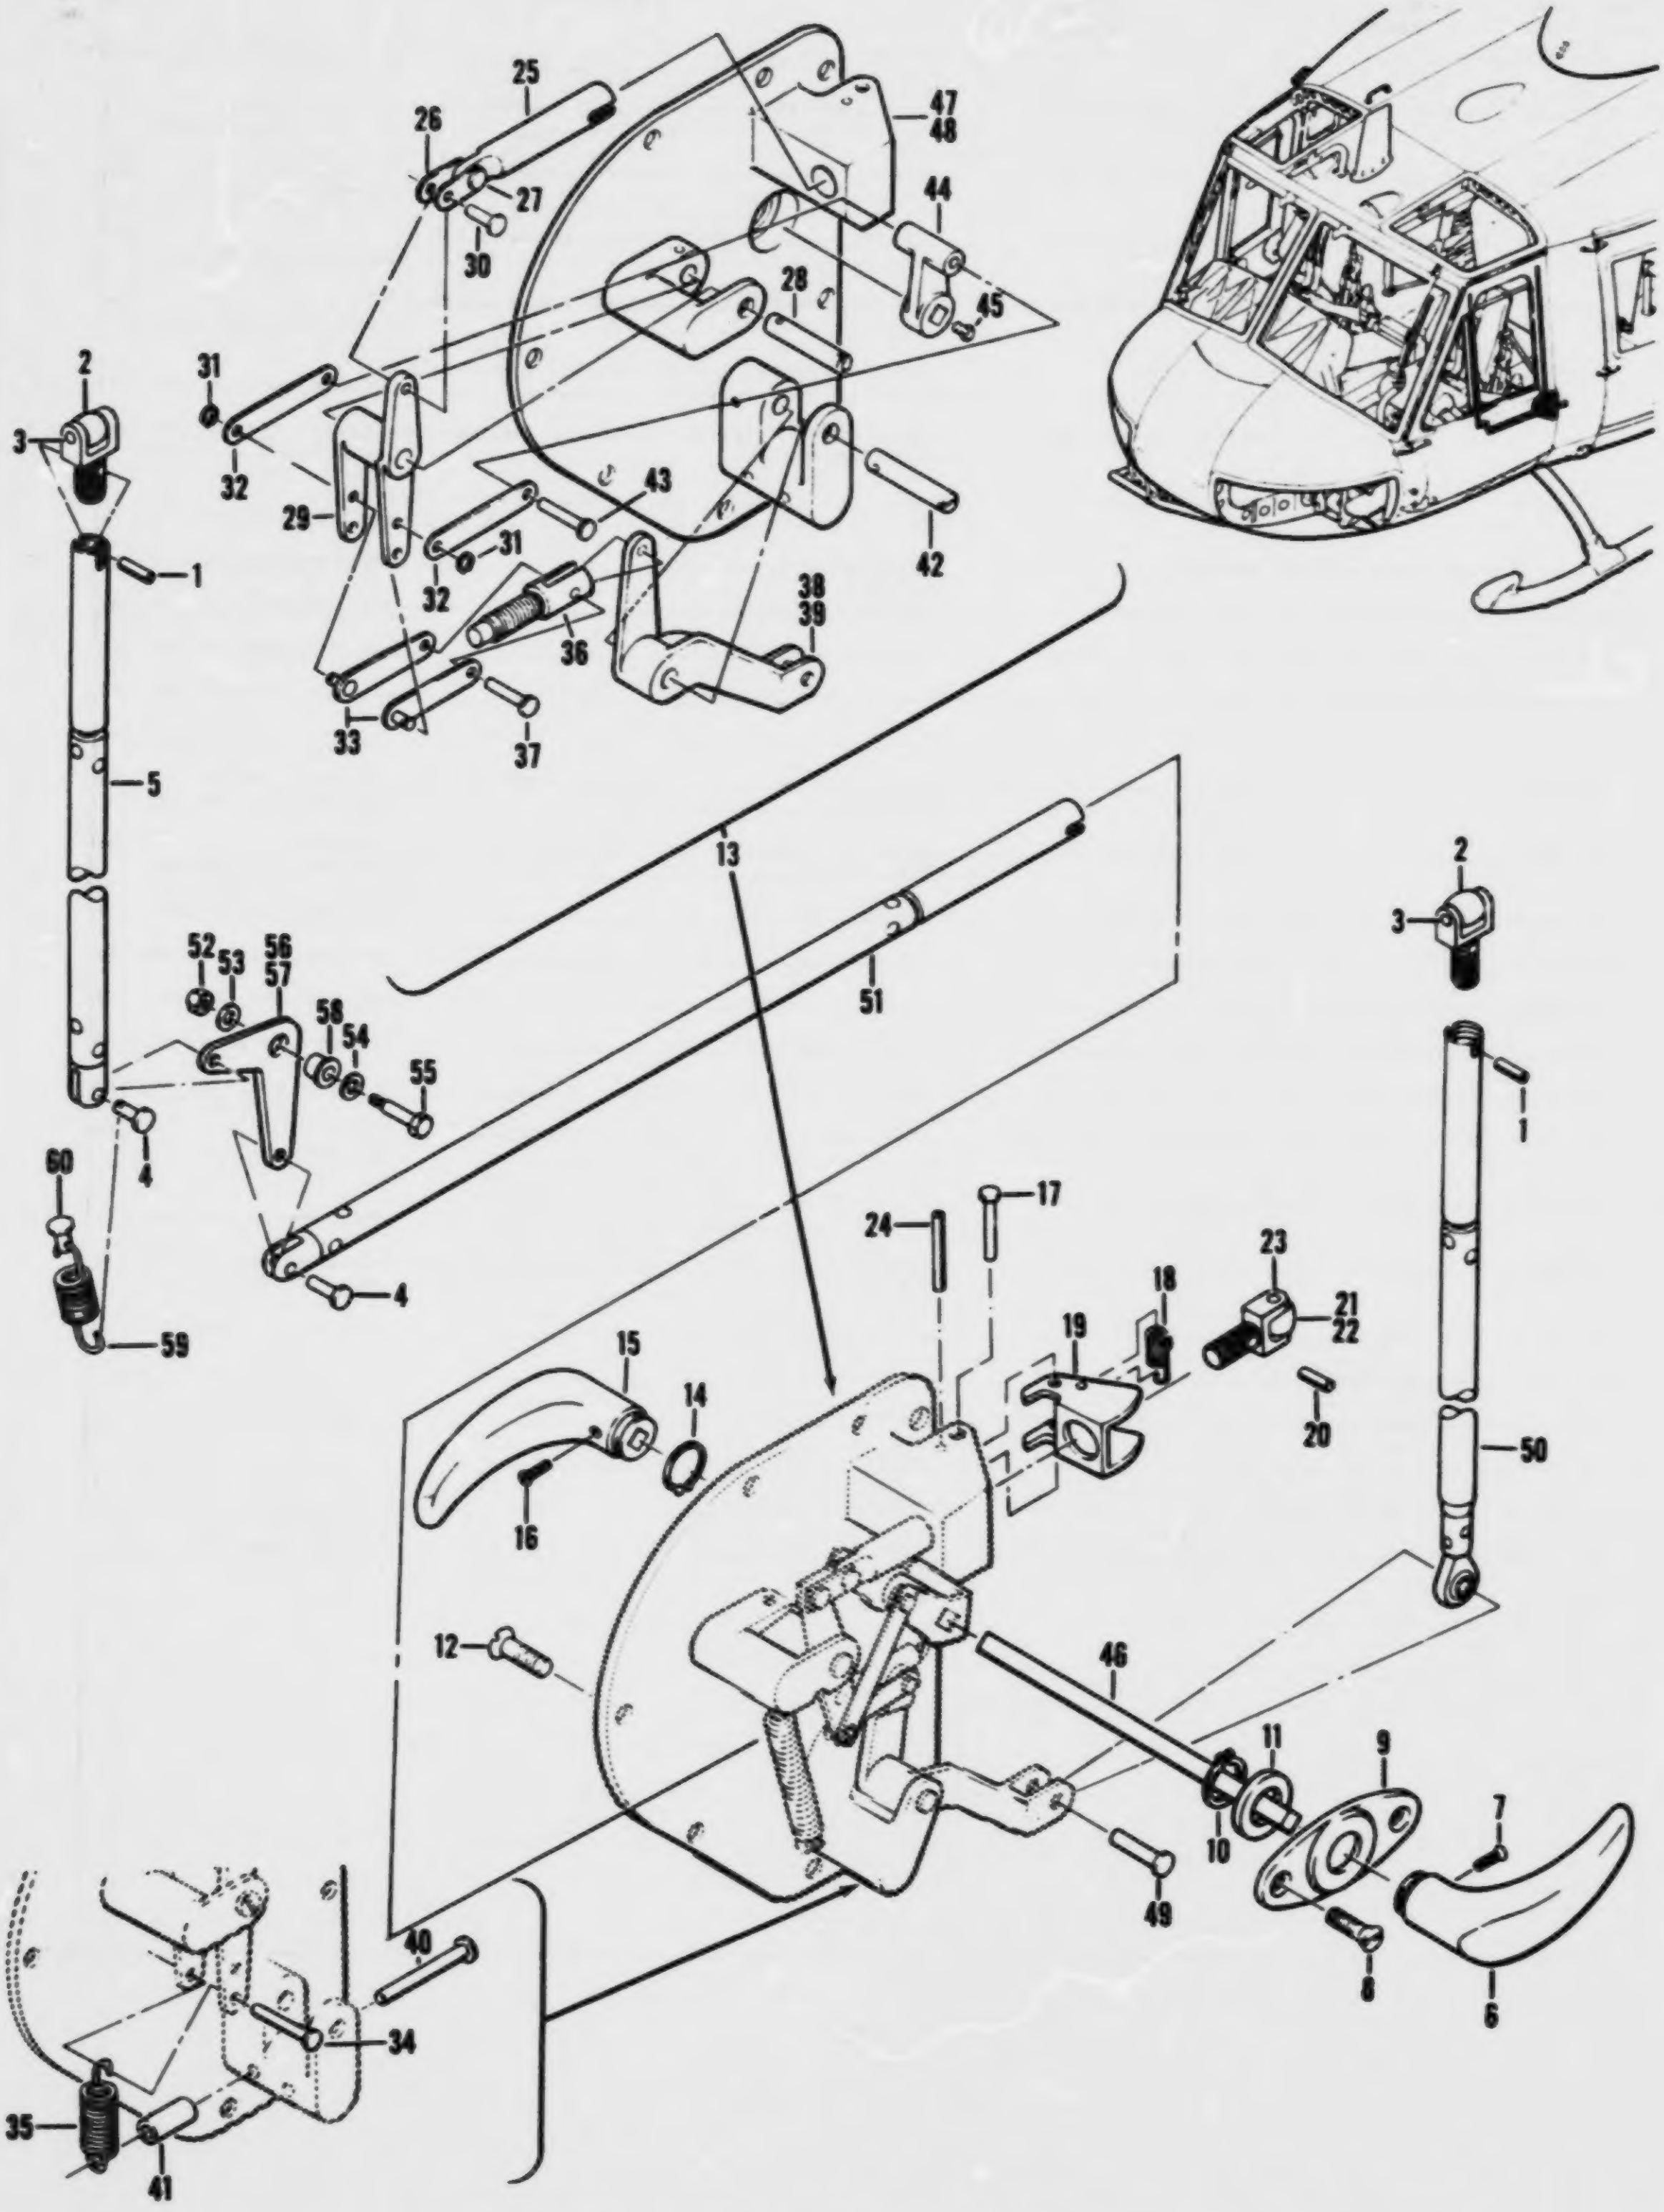
25
26
27
30
47
48
44
45
28
31
32
29
43
31
32
36
38
39
42
33
37
2
3
1
5
13
51
52
53
56
57
58
54
55
4
60
4
59
2
3
1
24
17
18
23
21
22
20
19
15
14
16
50
12
46
11
9
10
7
49
8
6
40
34
35
41

Figure 26. Latch Installation, Crew Door

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
26		XCFZZ		97499	204-030-500-3	LATCH INSTL DOOR-LH SEE FIG.25 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26		XCFZZ		97499	204-030-500-4	LATCH INSTL DOOR-RH SEE FIG.25 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	1	PAOZZ	5315-00-844-3940	96906	MS16562-4	.PIN,SPRING.........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
26	2	PAOOO	1560-00-765-2400	97499	204-030-499-1	.ROLLER ASSEMBLY DOOR.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
26	2	PAOZZ	3120-00-701-4133	97499	204-030-501-1	..BEARING,PLAIN,SPHER.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	3	PAOZZ	5315-00-814-3530	96906	MS16562-35	..PIN,SPRING........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	4	PAOZZ	5315-00-234-6088	88044	AN121604	.PIN,STRAIGHT, HEADED.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
26	5	PAOZZ	1560-00-701-9920	97499	204-030-483-1	.ROD ASSY,CREW DOOR LATCH........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	6	PAOOO	1680-00-411-0041	80477	AR133	.HANDLE,DOOR........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	7	PAOZZ	5305-00-719-5064	96906	MS51959-30	..SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	8	PBOZZ	5305-00-059-4568	96906	MS35190-253	.SCREW,MACHINE......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
26	9	PAOZZ	5340-00-437-8949	20293	07-1000	.ESCUTCHEON PLATE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	10	PAOZZ	5365-00-803-7305	96906	MS16624-1062	.RING,RETAINING......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	11	PAOZZ	5310-00-658-6169	80477	XW36	.WASHER,FLAT.........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	12	PAOZZ	5305-00-057-0491	96906	MS24694S5	.SCREW,MACHINE......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	9
26	13	PAOOO	1560-00-795-0896	83014	H481-1	.LATCH ASSEMBLY,DOOR -LH SEE FIG.27 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	13	PAOOO	1560-00-795-0970	83014	H481-2	.LATCH ASSEMBLY,DOOR -RH SEE FIG.27 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	14	PAOZZ	5365-00-803-7305	96906	MS16624-1062	..RING,RETAINING....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	15	PAOOO	1680-00-411-0041	80477	AR133	..HANDLE,DOOR.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	16	PAOZZ	5305-00-719-5064	96906	MS51959-30	...SCREW,MACHINE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	17	PAOZZ	5315-00-893-6006	88044	AN121616	..PIN,STRAIGHT, HEADED............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	18	PAOZZ	5360-00-765-7821	97499	204-030-494-1	..SPRING,HELICAL,TORS.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	19	PAOZZ	5340-00-773-2658	97499	204-030-496-3	..CATCH...............................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	20	PAOZZ	5315-00-844-3940	96906	MS16562-4	..PIN,SPRING........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	21	PAOOO	1560-00-765-2400	97499	204-030-499-1	..ROLLER ASSY.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	22	PAOZZ	3120-00-701-4133	97499	204-030-501-1	...BEARING,PLAIN,SPHER............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	23	PAOZZ	5315-00-826-3251	96906	MS16562-223	...PIN,SPRING.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	24	PAOZZ	5315-00-952-1185	80205	NAS561C3-18	..PIN,SPRING........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	25	PAOOO	1560-00-866-6039	97499	204-030-497-1	..RAM ASSEMBLY,DOOR L.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	26	PAOZZ	3040-00-707-7551	97499	204-030-498-1	...CONNECTING LINK,RIG.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
26	27	PAOZZ	5315-00-820-9066	88044	AN121603	...PIN,STRAIGHT, HEADED...........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	28	PAOZZ	5315-00-727-4958	97499	204-030-878-1	..PIN,STRAIGHT,HEADED.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	29	PBOZZ	5340-00-182-4731	97499	204-030-495-1	..LEVER...............................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	30	PAOZZ	5315-00-820-9066	88044	AN121603	..PIN,STRAIGHT, HEADED............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	31	PAOZZ	5365-00-804-6895	96906	MS16624-1012	..RING,RETAINING....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
26	32	PAOZZ	3040-00-707-7554	97499	204-030-491-1	..CONNECTING LINK,RIG..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
26	33	XBOZZ	3040-00-809-0585	97499	204-030-492-1	..CONNECTING LINK,RIG..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
26	34	XDOZZ		88044	AN121612	..PIN,STRAIGHT, HEADED............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	35	PAOZZ	5360-00-763-1254	83014	104213-1	..SPRING,HELICAL,EXTE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	36	XBOZZ	5340-00-765-8730	97499	204-030-487-1	..CLEVIS,ROD END....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	37	PBOZZ	5315-00-558-2733	88044	AN121610	..PIN,STRAIGHT, HEADED............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
26	38	PBOZZ	5340-00-465-6130	97499	204-030-488-1	..LATCH, JACKSHAFT -LH...........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	39	PBOZZ	1560-00-759-7487	97499	204-030-488-2	..JACKSHAFT -RH...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	40	XODZZ		88044	AN121620	..PIN,STRAIGHT, HEADED...........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	41	PAOZZ	5365-00-826-7274	80205	NAS42004-48	..SPACER,SLEEVE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	42	PAOZZ	5315-00-727-4958	97499	204-030-878-1	..PIN,STRAIGHT,HEADLE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	43	PAOZZ	5315-00-727-6304	88044	AN121615	..PIN,STRAIGHT, HEADED...........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	44	PAOOO	1560-00-932-9804	97499	204-030-489-1	..ARM,LATCH,DOOR..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	45	PAOZZ	5305-00-724-6794	96906	MS51964-48	...SETSCREW.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	46	PAOZZ	1560-00-765-7819	97499	204-030-485-1	..SPINDLE,AIRCRAFT DO.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	47	PAOZZ	1560-00-980-0239	97499	204-030-502-1	..SUPPORT,LATCH ASSEM -LH........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	48	PBOZZ	1560-00-805-5110	97499	204-030-502-2	..SUPPORT,LATCH ASSEM -RH........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	49	PAOZZ	5315-00-727-6303	88044	AN121655	.PIN,STRAIGHT,HEADED HEADED......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	50	PAOZZ	3040-00-701-9919	97499	204-030-481-1	.CONNECTING LINK,RIG..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	51	PAOZZ	1560-00-765-7813	97499	204-030-483-3	.ROD ASSEMBLY,CREW D..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	52	PAOZZ	5310-00-857-5560	96906	MS21045L06	.NUT,SELF-LOCKING,HE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	53	PAOZZ	5310-00-197-2398	88044	AN960PD6L	.WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	54	PAOZZ	5310-00-184-9002	88044	AN960PD8L	.WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	55	PAOZZ	5305-00-701-7564	97499	204-030-861-1	.SCREW,SHOULDER...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	56	PAOOO	1560-00-792-5077	97499	204-030-482-1	.BELL CRANK ASSY -LH.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	57	PAOOO	1560-00-759-7486	97499	204-030-482-2	.BELL CRANK ASSY -RH.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	58	PAOZZ	3120-00-690-8690	97499	22-004810-16-12	..BUSHING,SLEEVE..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	59	PAOZZ	5360-00-674-4197	97499	204-030-890-1	.SPRING,HELICAL,EXTE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
26	60	PAOZZ	5315-00-707-7641	97499	204-030-893-1	.PIN,STRAIGHT,HEADED..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

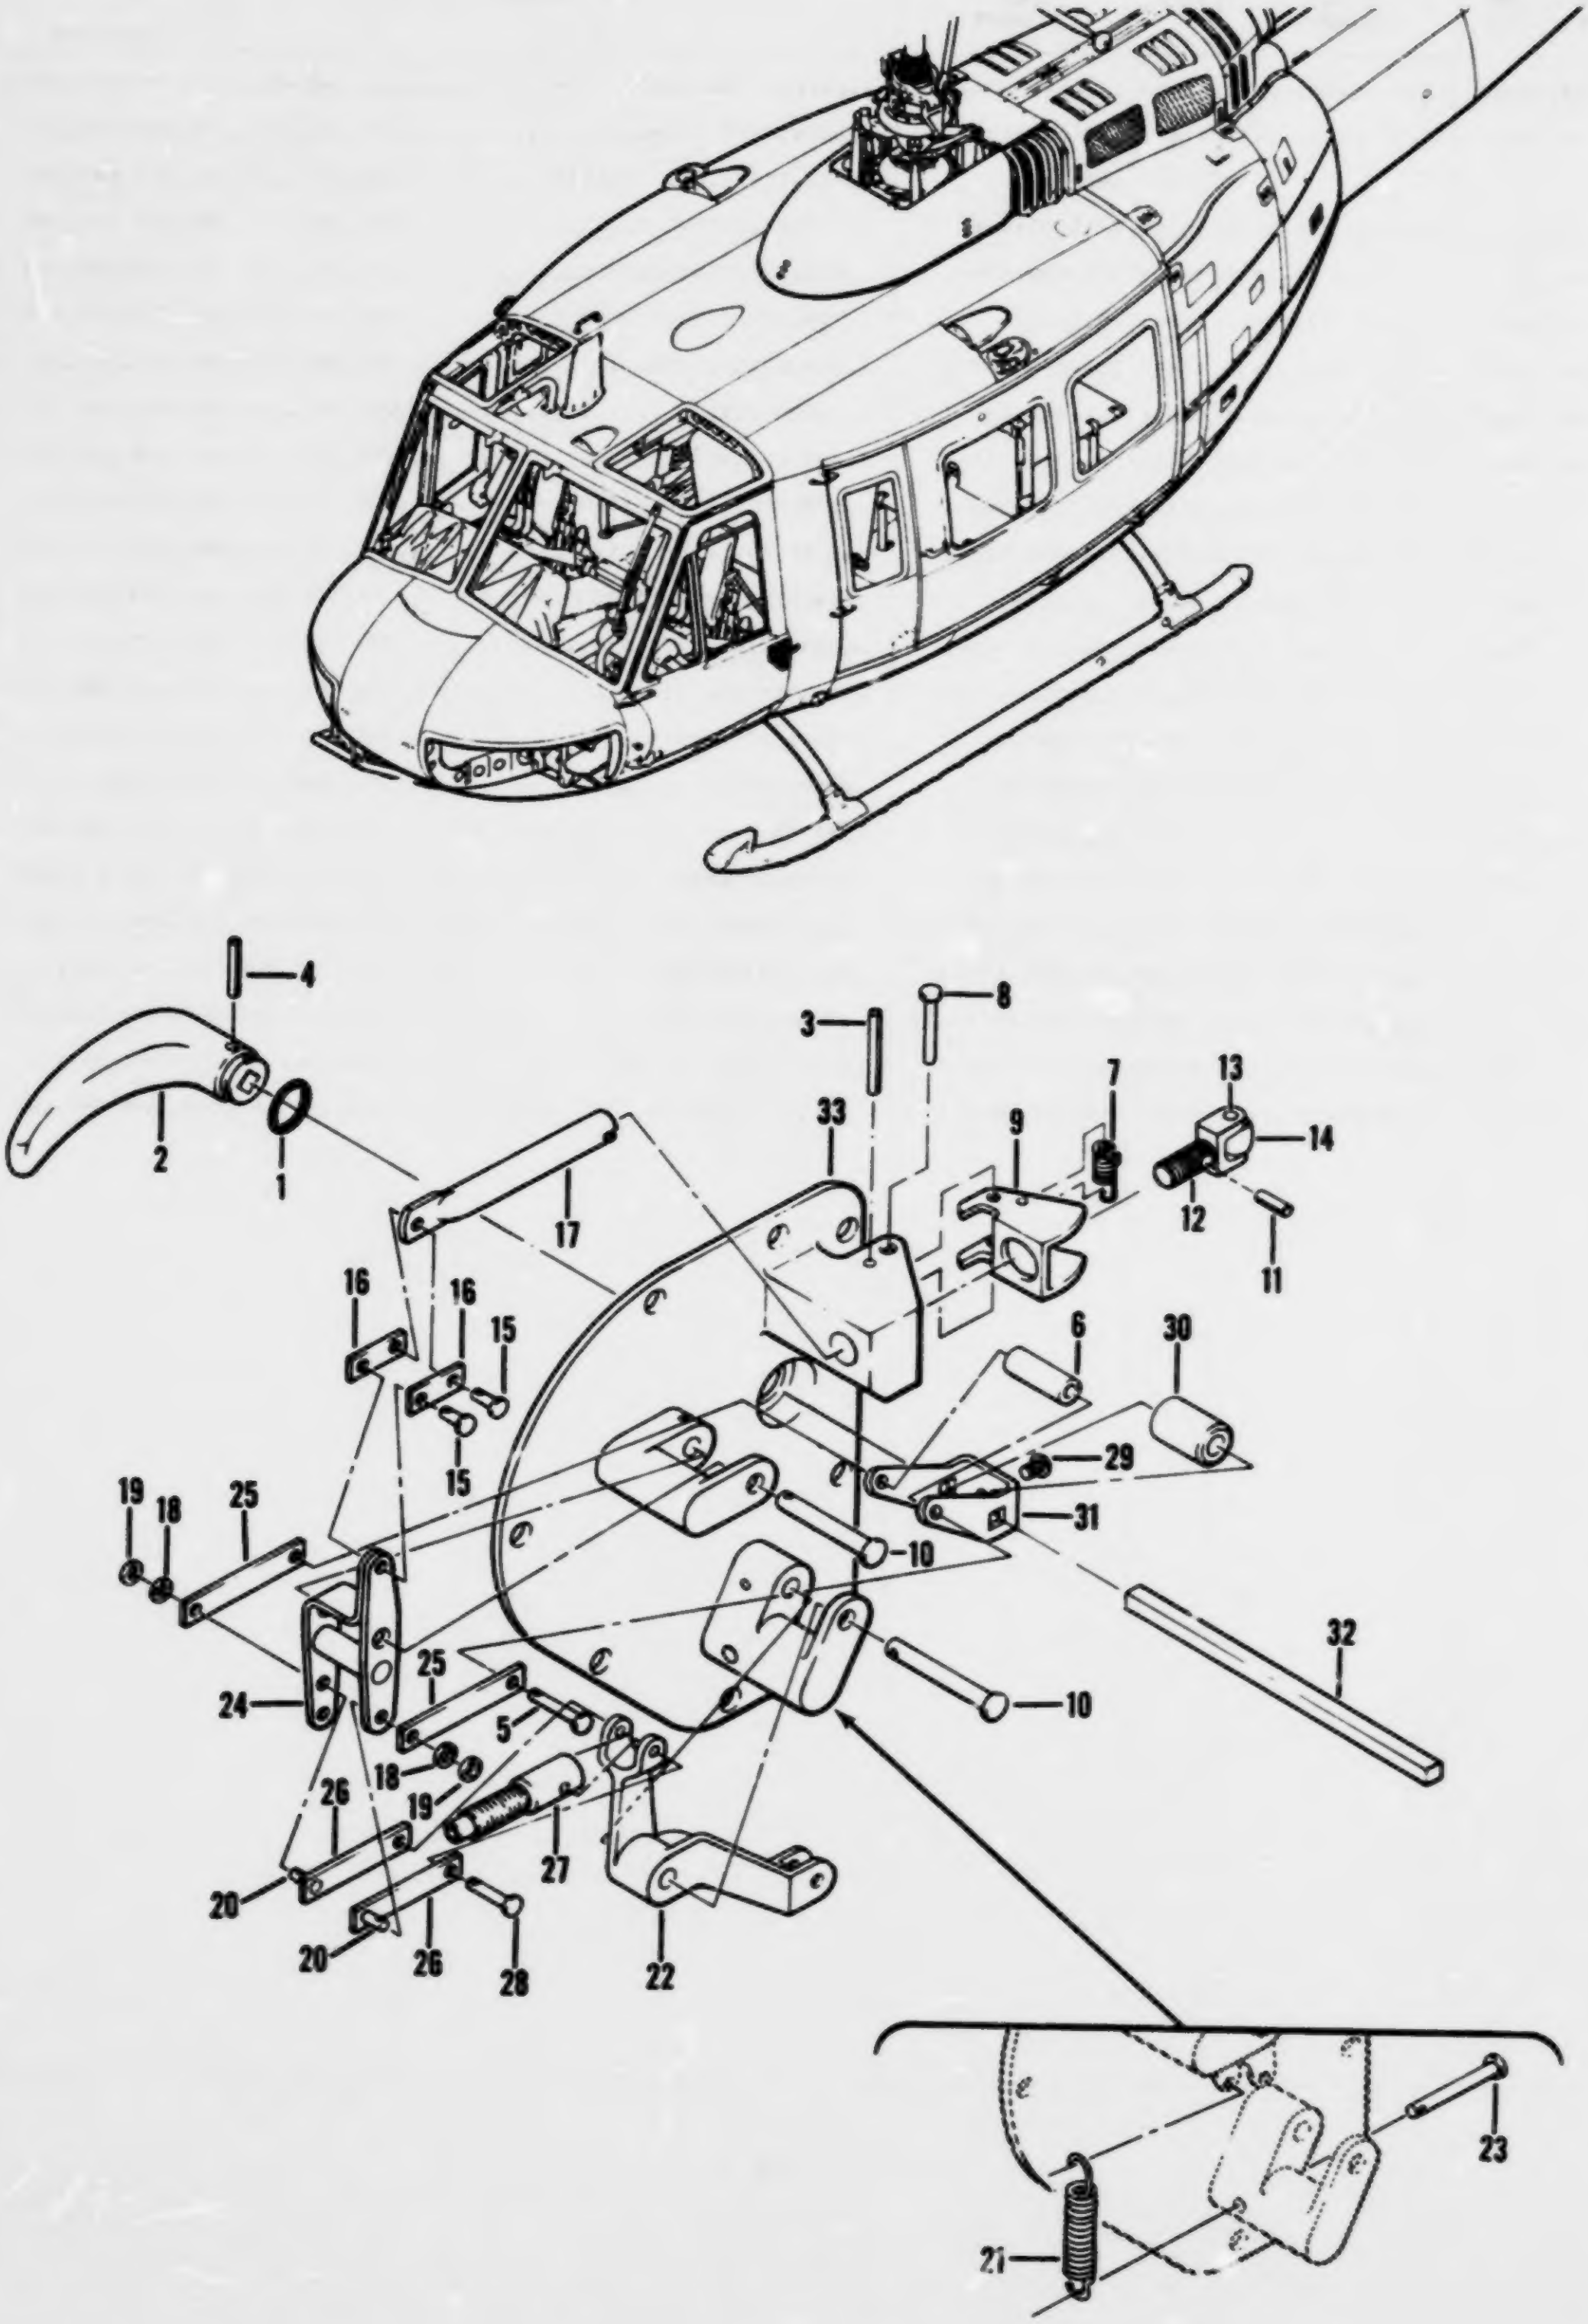
4
8
3
13
7
33
9
14
2
1
17
12
11
16
16
15
6
30
15
19
18
25
29
31
10
32
25
24
5
10
18
19
26
27
20
20
26
28
22
23
21

Figure 27. Latch Assembly, Crew Door

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
27		PAOCO	1560-00-795-0896	83014	H481-1	LATCH ASSEMBLY,DOOR LH,SEE FIG 26 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27		PAOOO	1560-00-795-0970	83014	H481-2	LATCH ASSEMBLY,DOOR RH,SEE FIG 26 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	1	PAOZZ	5365-00-803-7305	96906	MS16624-1062	.RING,RETAINING..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	2	PAOZZ	1680-00-758-3660	83014	104207-1	.HANDLE,DOOR -LH................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	2	PAOZZ	1680-00-758-3661	83014	104207-2	.HANDLE,DOOR -RH................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	3	PAOZZ	5315-00-952-1185	80205	NAS561C3-18	.PIN,SPRING......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	4	PAOZZ	5315-00-753-3892	96906	MS16562-216	.PIN,SPRING......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	5	PAOZZ	5315-00-812-3775	96906	MS20392-1C25	.PIN,STRAIGHT, HEADED............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	6	PAOZZ	3120-00-767-9481	83014	HSP139-3-812	.BUSHING,SLEEVE..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	7	PAOOO	5360-00-758-3659	83014	103788-1	.SPRING,LATCH....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	8	PAOZZ	5315-00-811-1270	96906	MS20392-1C39	.PIN,STRAIGHT, CREW DOOR.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	9	PAOZZ	1560-00-758-3657	83014	103774-1	.CATCH,ROLLER BOLT...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	10	PAOZZ	5315-00-080-0485	96906	MS20392-2C45	.PIN,STRAIGHT,HEA................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
27	11	PAOZZ	5315-00-844-5644	96906	MS16562-194	.PIN,SPRING......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	12	PAOOO	1560-00-758-3658	83014	103778-1	.ROLLER ASSEMBLY,DOO.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	13	PAOZZ	5315-00-826-3251	96906	MS16562-223	..PIN,SPRING.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	14	PAOZZ	3120-00-759-7546	83014	103777-1	..ROLLER,ROLLER BO...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	15	PAOZZ	5315-00-812-3737	96906	MS20392-1C9	.PIN,STRAIGHT,HEA................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
27	16	PAOZZ	3040-00-766-1754	83014	104212-5	.CONNECTING LINK,RIG.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
27	17	PAOZZ	3040-00-791-9390	83014	104209-1	.CONNECTING LINK,RIG.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	18	PAOZZ	5310-00-943-5411	81413	117357-004	.WASHER,SPRING TENSI.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
27	19	PAOZZ	5310-00-782-1349	96906	MS15795-804	.WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
27	20	PAOZZ	5315-00-764-6339	83014	104218-1	.PIN,STRAIGHT,HEADED.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
27	21	PAOZZ	5360-00-763-1254	83014	104213-1	.SPRING,HELICAL,EXTE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	22	XBOZZ	1560-00-411-7740	83014	104217-1	.JACK SHAFT LH...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	22	XBOZZ	1560-00-477-2693	83014	104217-2	.JACK SHAFT-RH...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	23	PAOZZ	5315-00-811-1242	96906	MS20392-2C29	.PIN,STRAIGHT, HEADED............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	24	XBOZZ	1560-00-411-7731	83014	104214-1	.LINK ASSY,ROCKER................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	25	PAOZZ	3040-00-758-3664	83014	104212-3	.CONNECTING LINK,RIG.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
27	26	PAOZZ	3040-00-758-3663	83014	104212-1	.CONNECTING LINK,RIG.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
27	27	PAOZZ	5340-00-758-3665	83014	104215-1	.CONNECTOR,ROD END...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	28	PAOZZ	5315-00-812-3775	96906	MS20392-1C25	.PIN,STRAIGHT, HEADED............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	29	PAOZZ	5305-00-150-9213	88044	AN502-10-6	.SCREW,MACHINE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	30	PAOZZ	5365-00-759-7549	83014	104293-1	.SPACER,SLEEVE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	31	XBOZZ	1560-00-758-3662	83014	104210-1	.ARM,LATCH.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	32	PAOZZ	3040-00-868-1060	83014	104208-1	.CONNECTING LINK,RIG.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	33	PAOZZ	1560-00-993-1850	83014	104206-1	.SUPPORT ROLLER LATCH LH.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
27	33	PAOZZ	1560-00-907-0840	83014	104206-2	.SUPPORT ROLLER LATCH RH.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

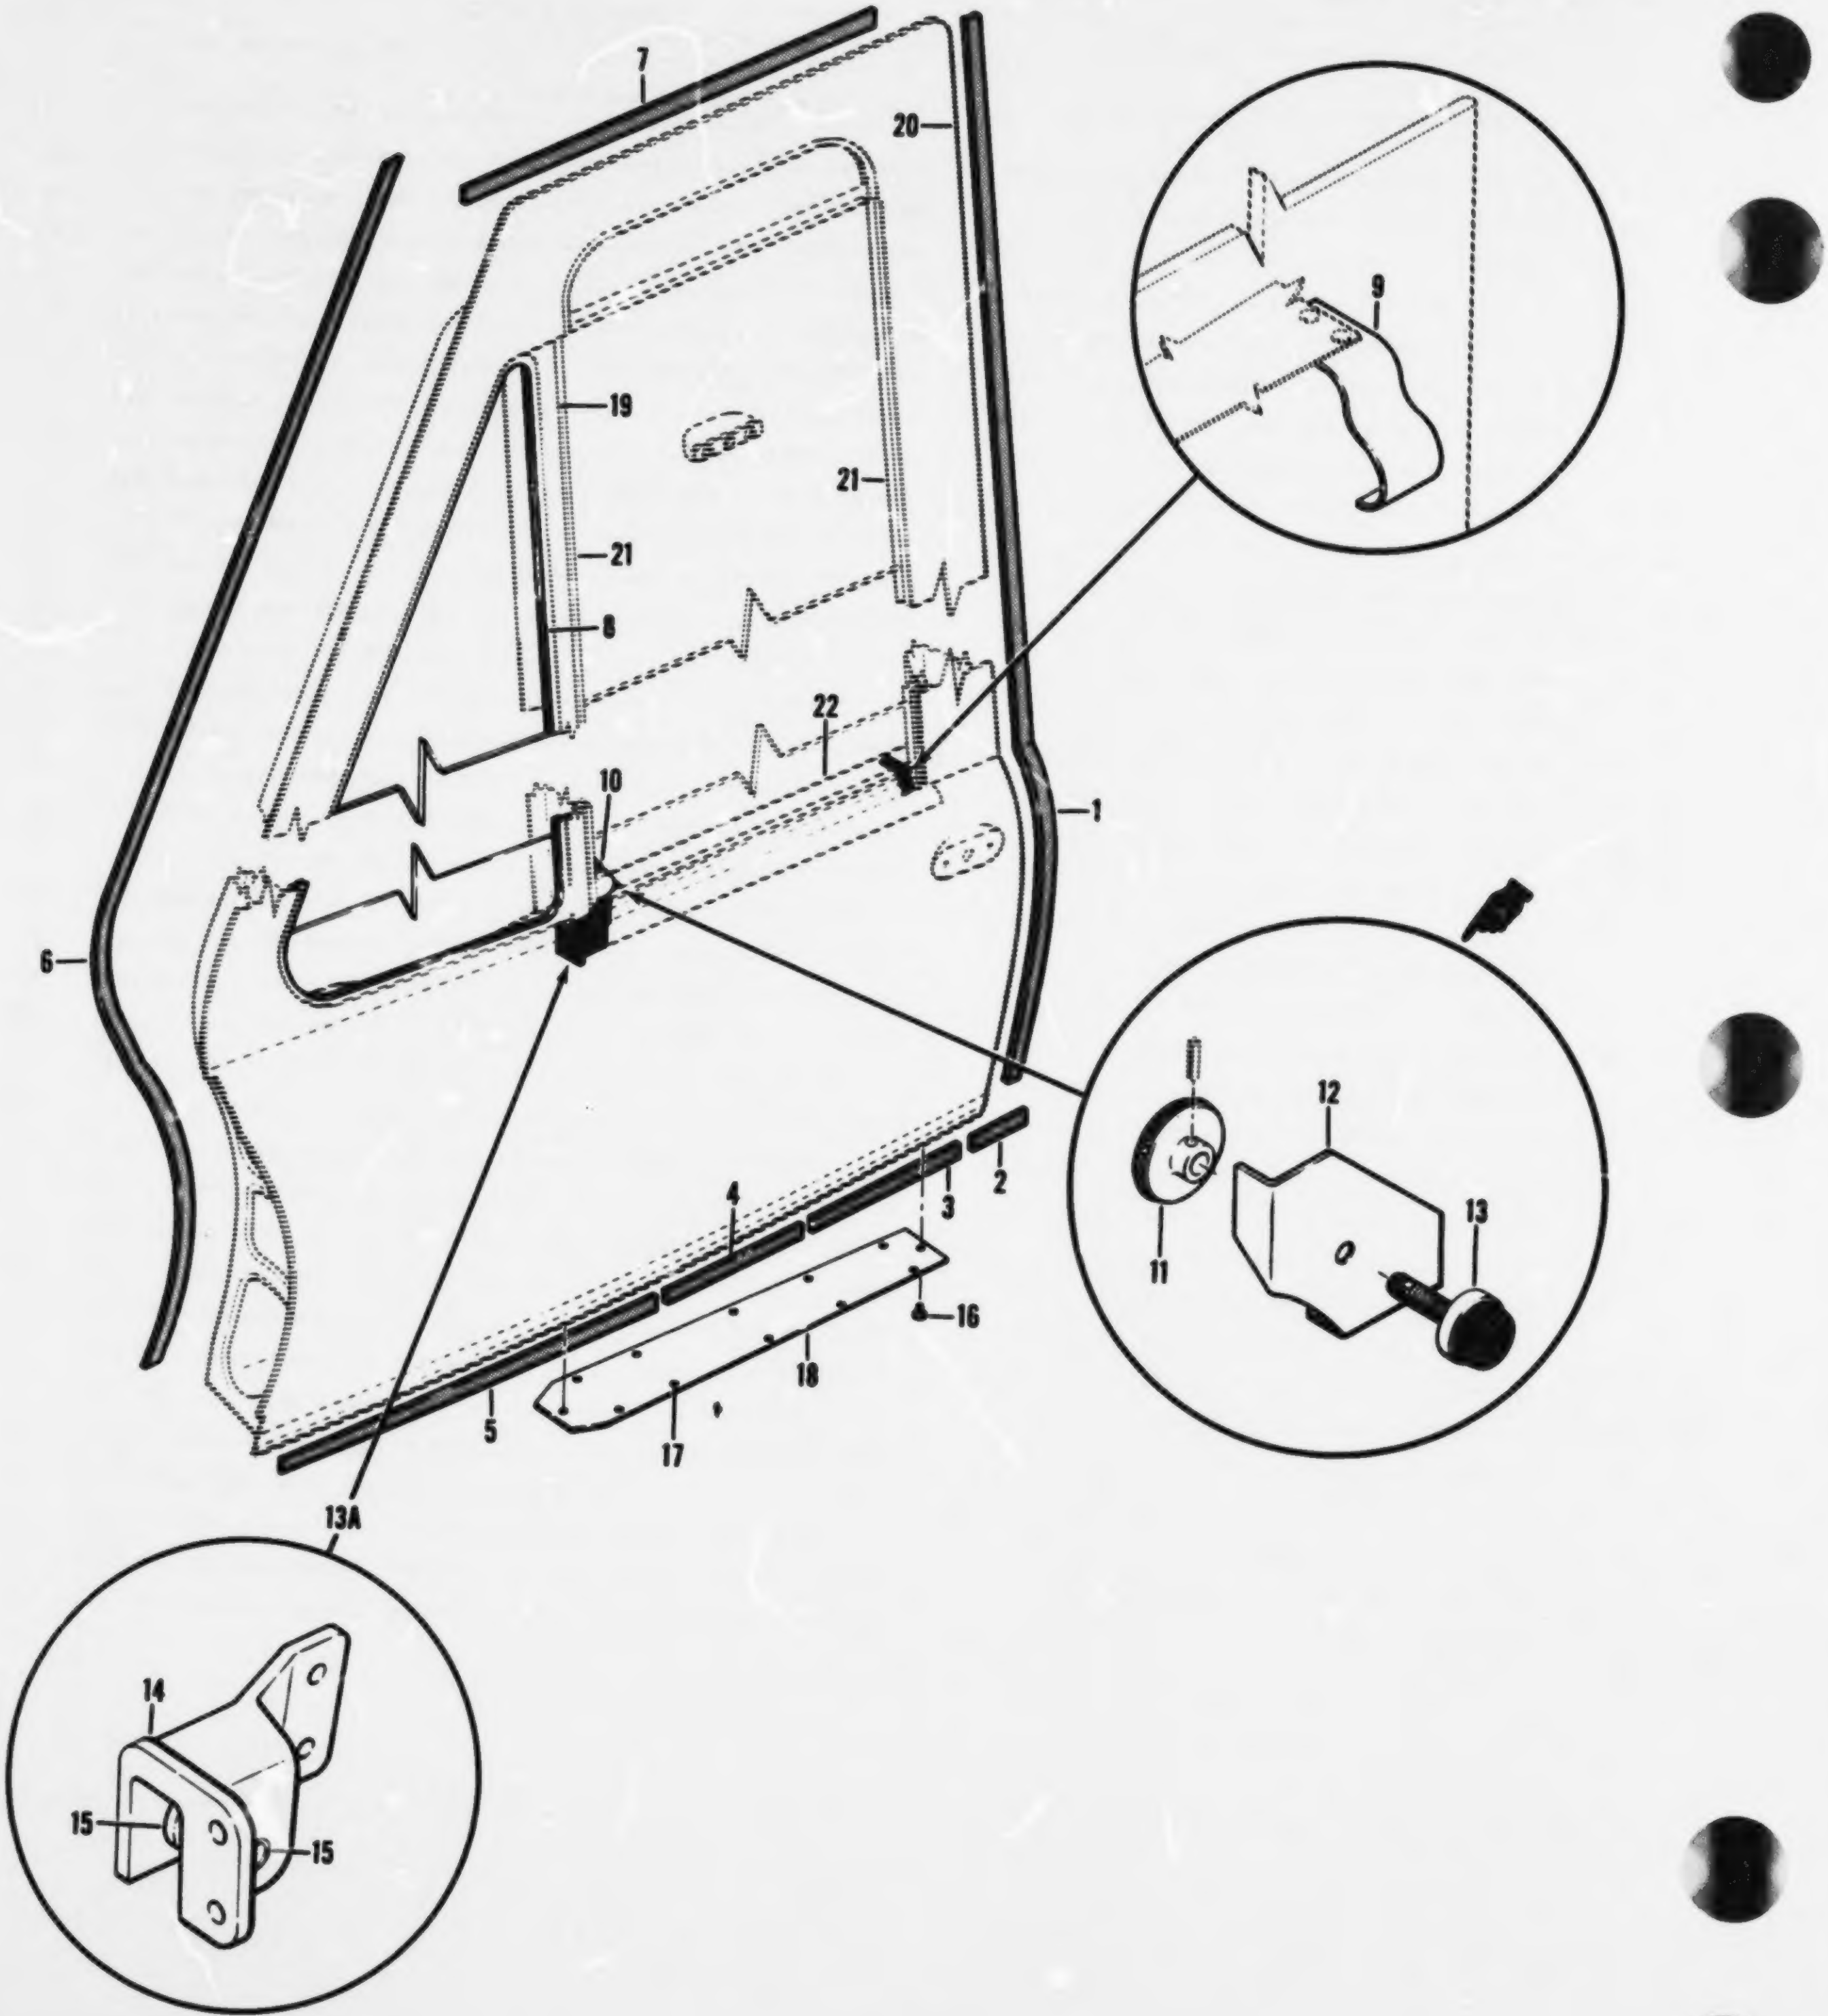
7
20
9
19
21
21
8
22
10
1
6
12
13
11
2
3
4
16
18
5
17
13A
14
15
15

Figure 28. Door Assembly, Crew

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
28		XAOOZ		97499	204-030-853-125	DOOR ASSY CREW LH SEE FIG.25 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
28		XAOOZ		97499	204-030-853-126	DOOR ASSY,CREW RH SEE FIG.25 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
28	1	MFOZZ		97499	204-030-853-73	.RUBBER STRIP.....................	UHE,UHH,UHM,UHV,UHX	EA	1
28	2	XDOZZ		97499	204-030-853-111	.RUBBER,STRIP....................	UHE,UHH,UHM,UHV,UHX	EA	1
28	3	MFOZZ		97499	204-030-853-113	.RUBBER STRIP.....................	UHE,UHH,UHM,UHV,UHX	EA	1
28	4	MFOZZ		97499	204-030-853-115	.RUBBER STRIP.....................	UHE,UHH,UHM,UHV,UHX	EA	1
28	5	MFOZZ		97499	204-030-853-117	.RUBBER STRIP.....................	UHE,UHH,UHM,UHV,UHX	EA	1
28	6	MFOZZ		97499	204-030-853-83	.RUBBER STRIP.....................	UHE,UHH,UHM,UHV,UHX	EA	1
28	7	XDOZZ		97499	204-030-853-85	.RUBBER STRIP....................	UHE,UHH,UHM,UHV,UHX	EA	1
28	8	PAOOO	1560-00-690-7285	97499	204-030-459-1	.WINDOW PANEL,AIRCRA -LH.........	UHE,UHH,UHM,UHV,UHX	EA	1
28	8	PAOOO	1560-00-690-7286	97499	204-030-459-2	.WINDOW PANEL,AIRCRA -RH.........	UHE,UHH,UHM,UHV,UHX	EA	1
28	9	PAOZZ	5360-00-707-7638	97499	204-030-797-1	.SPRING,FLAT.....................	UHE,UHH,UHM,UHV,UHX	EA	1
28	10	PAOOO	1560-01-073-8243	97499	214-030-748-1	.STOP ASSEMBLY,CREW RPLS-- 204-030-963-1	UHE,UHH,UHV	EA	1
28	11	XAOZZ		97499	214-030-749-1	..KNOB...........................	UHE,UHH,UHM,UHV,UHX	EA	1
28	12	XAOZZ		97499	204-030-934-1	..BRACKET ASSY...................................	UHH,UHM,UHV,UHX	EA	1
28	13	XAOZZ		97499	214-030-747-1	..SCREW STOP.....................................	UHH,UHM,UHV,UHX	EA	1
28	13A	XCFZZ		97499	204-030-940-1	.SUPPORT INSTL-LH.................	UHE,UHH,UHM,UHV,UHX	EA	1
28	13A	XCFZZ		97499	204-030-940-2	.SUPPORT INSTL-RH.................	UHE,UHH,UHM,UHV,UHX	EA	1
28	14	PAOOO	1560-00-757-3793	97499	204-030-939-5	..SUPPORT ASSEMBLY,BE -LH........	UHE,UHH,UHM,UHV,UHX	EA	1
28	14	PAOOO	1560-00-757-3792	97499	204-030-939-2	..SUPPORT ASSEMBLY,BE -RH........	UHE,UHH,UHM,UHV,UHX	EA	1
28	15	PAOZZ	3120-00-804-6320	97499	22-00489-13-12	...BUSHING,SLEEVE.................	UHE,UHH,UHM,UHV,UHX	EA	2
28	16	PAOZZ	5305-00-281-8526	88044	AN525-832R6	.SCREW,MACHINE....................	UHE,UHH,UHM,UHV,UHX	EA	12
28	17	PAOZZ	5310-00-728-7715	96906	MS21069L08	.NUT,SELF-LOCKING,PL..............	UHE,UHH,UHM,UHV,UHX	EA	12
28	18	MFOZZ		97499	204-030-853-133	.DOOR.............................	UHE,UHH,UHM,UHV,UHX	EA	1
28		MFOZZ		97499	204-070-343-1	.STENCIL..........................	UHE,UHH,UHM,UHV,UHX	EA	2
28		MFOZZ		97499	204-070-812-1	.STENCIL,MARKING..................	UHE,UHH,UHM,UHV,UHX	EA	1
28		MFOZZ		97499	204-070-812-3	.STENCIL..........................	UHE,UHH,UHM,UHV,UHX	EA	1
28	19	MFOZZ		97499	204-030-853-97	.CHANNEL,LH.......................	UHE,UHH,UHM,UHV,UHX	EA	1
28	19	MFOZZ		97499	204-030-853-98	.CHANNEL,RH.......................	UHE,UHH,UHM,UHV,UHX	EA	1
28	20	MFOZZ		97499	204-030-853-99	.CHANNEL-LH.......................	UHE,UHH,UHM,UHV,UHX	EA	1
28	20	MFOZZ		97499	204-030-853-100	.CHANNEL,RH.......................	UHE,UHH,UHM,UHV,UHX	EA	1
28	21	PAOZZ	1560-00-004-4458	82654	Y563-2	.CHANNEL,CREW DOOR................	UHE,UHH,UHM,UHV,UHX	EA	1
28	22	MFOZZ		97499	204-030-853-93	.WIPER,CREW DOOR..................	UHE,UHH,UHM,UHV,UHX	EA	2

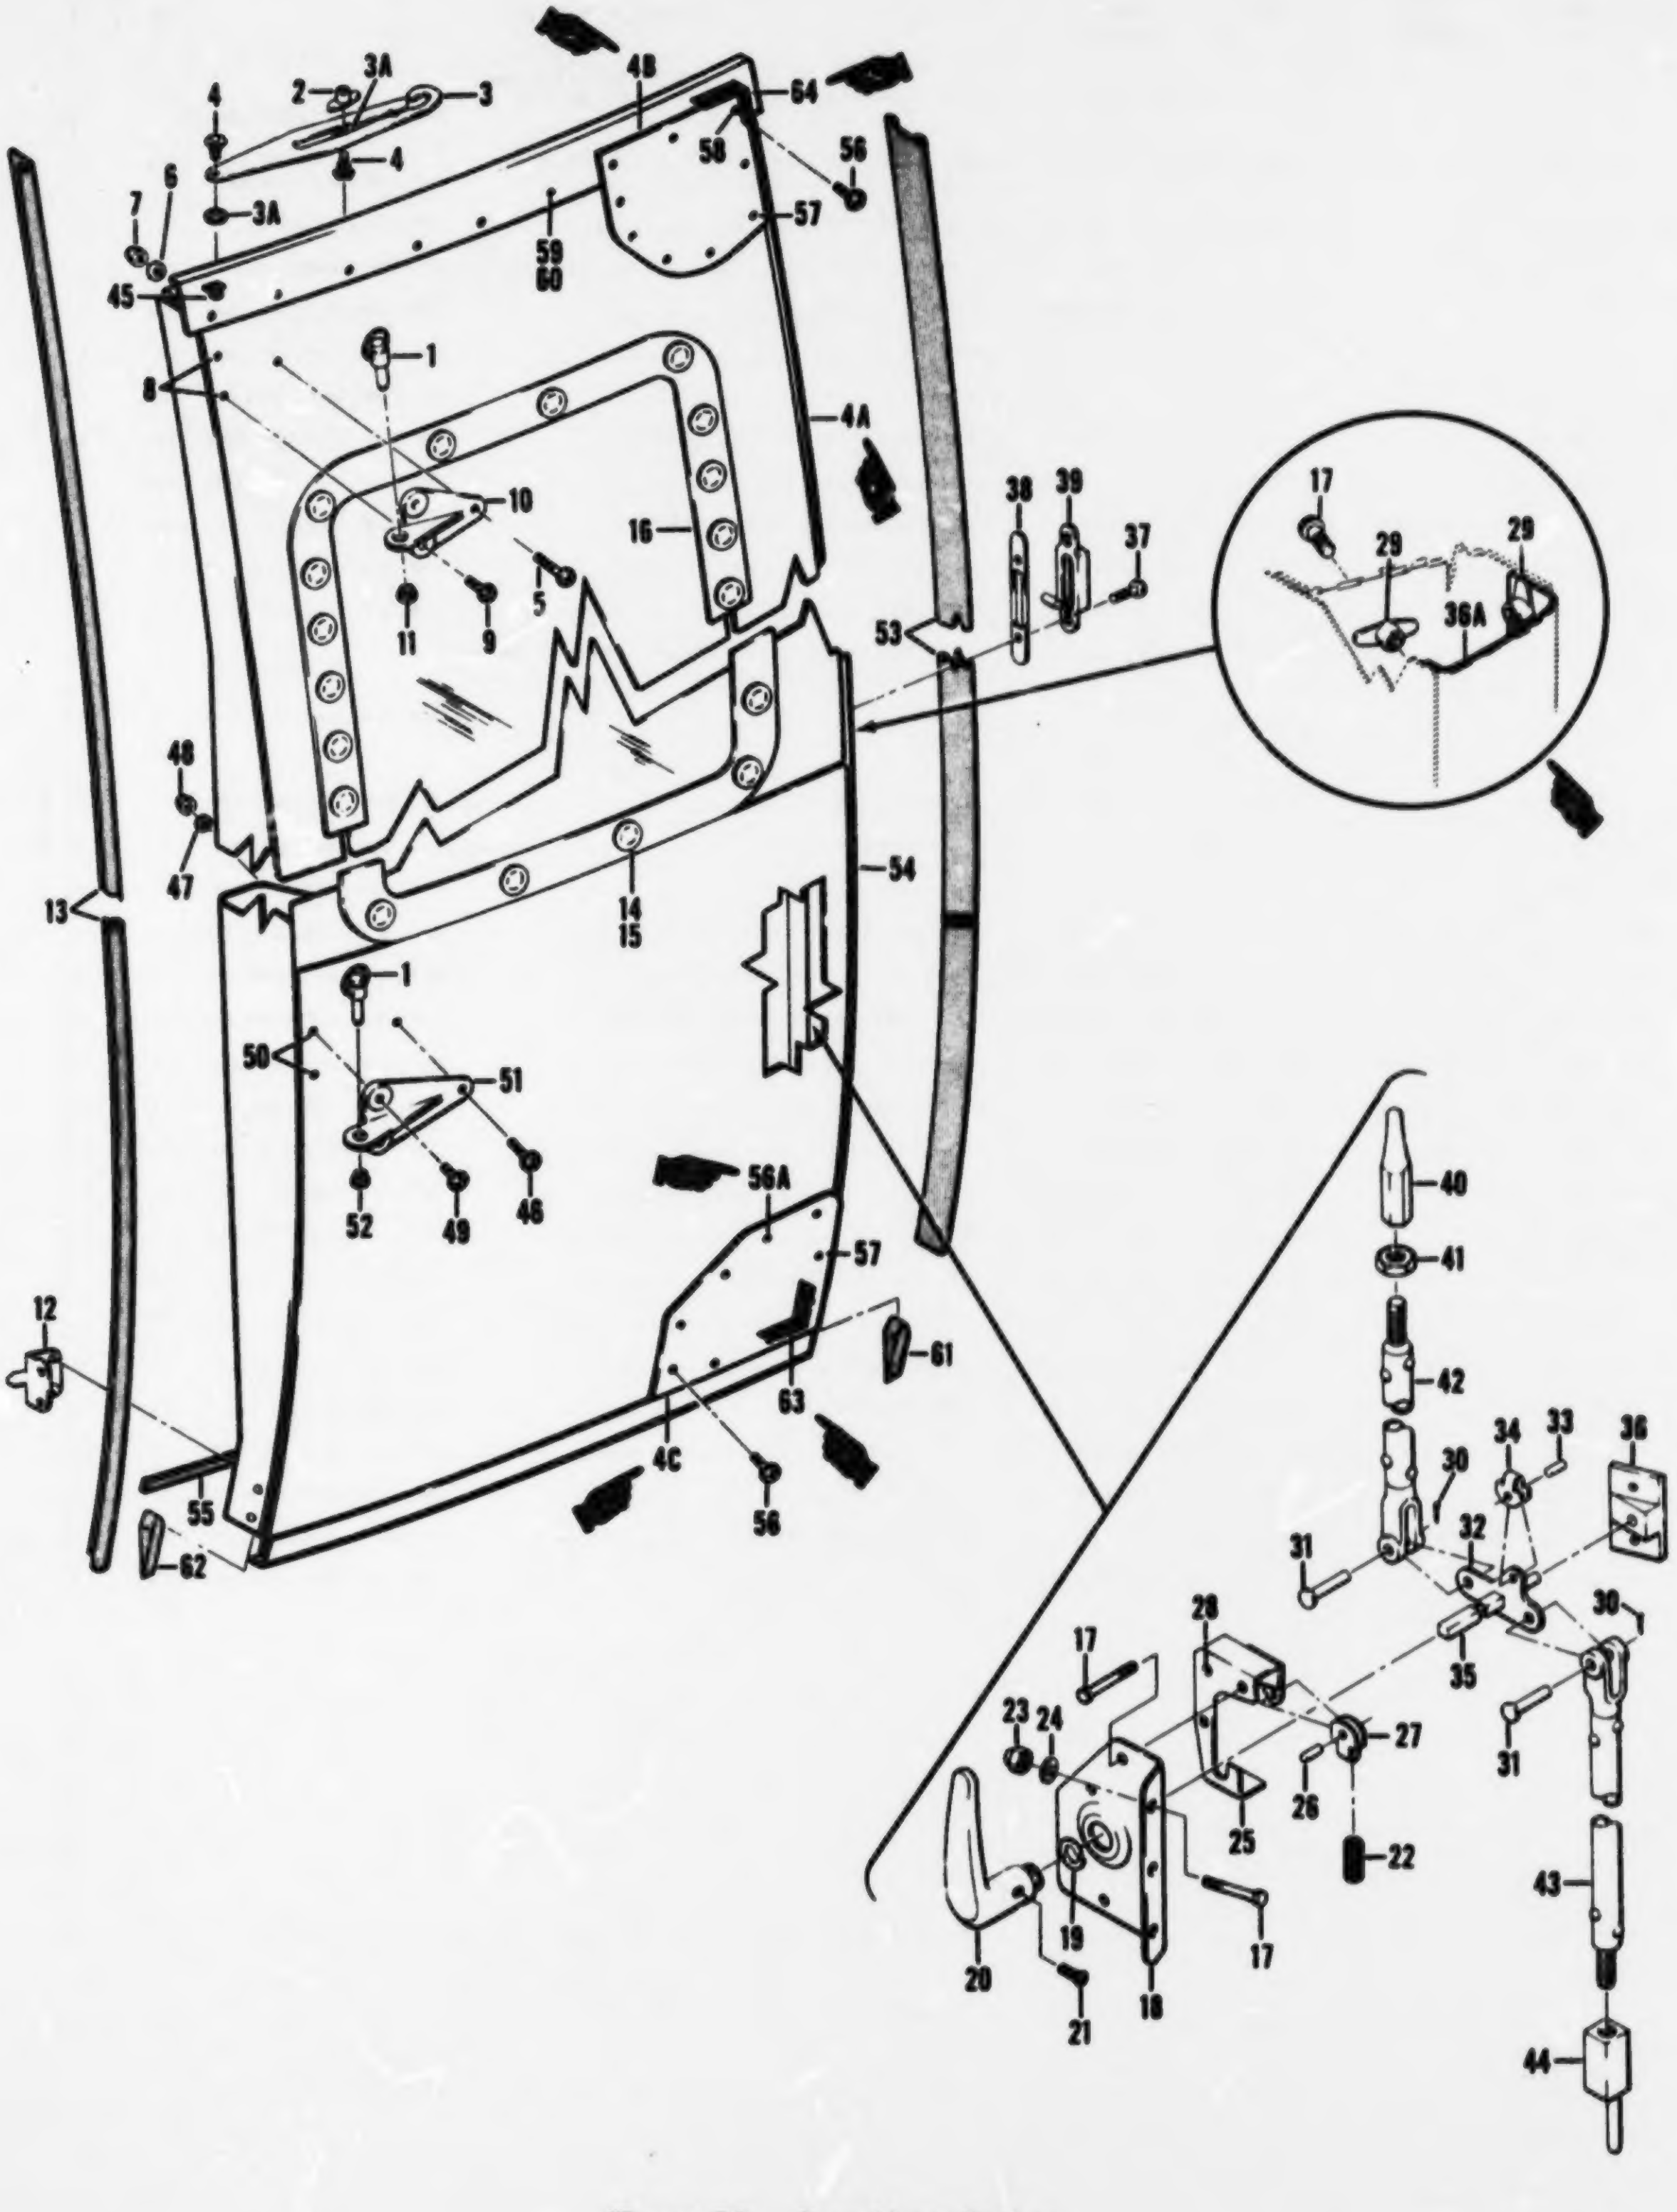
3A
2
3
4
4B
64
58
56
4
6
3A
7
59
60
57
45
1
8
4A
10
38
39
37
17
29
29
16
5
11
9
53
36A
48
47
13
14
15
54
1
50
51
56A
40
41
52
49
46
57
12
61
42
63
34
33
36
30
4C
55
56
32
31
62
28
30
17
35
23
24
27
26
31
25
22
43
19
17
20
18
21
44

Figure 29. Panel Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
29		XCFZZ		97499	205-030-306-1	PANEL INSTL-LH USBL EFF 62-2106 THRU 65-9675 SEE FIG.20 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
29		XCFZZ		97499	205-030-306-3	PANEL INSTL-LH USBL EFF 65-9676 THRU 68-15489 SEE FIG.20 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
29		XCFZZ		97499	205-030-306-9	PANEL INSTL-LH USBL EFF 68-15490 THRU 68-16625 SEE FIG.20 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
29		XCFZZ		97499	205-030-306-13	PANEL INSTL-LH USBL EFF 69-15000 & SUBSEQUENT SEE FIG.20 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
29		XCFZZ		97499	205-030-306-2	PANEL INSTL-RH USBL EFF 62-2106 THRU 65-9675 SEE FIG.20 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
29		XCFZZ		97499	205-030-306-4	PANEL INSTL-RH USBL EFF 65-9676 THRU 65-12895 SEE FIG.20 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
29		XCFZZ		97499	205-030-306-5	PANEL INSTL-RH USBL EFF 66-746 THRU 68-15489 SEE FIG.20 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
29		XCFZZ		97499	205-030-306-11	PANEL INSTL-RH USBL EFF 68-15490 THRU 68-16625 SEE FIG.20 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
29		XCFZZ		97499	205-030-306-15	PANEL INSTL-RH USBL EFF 69-15000 & SUBSEQUENT SEE FIG.20 FOR NHA.....UHE,UHH,UHV,UHX	EA	1
29	1	PAOZZ	5340-00-951-6908	96906	MS17990C305	.PIN,QUICK RELEAS RPLS--5340-00-781-0262.....UHE,UHH,UHV,UHX	EA	1
29	2	PAOZZ	5310-00-726-7716	96906	MS21069L3	.NUT,SELF-LOCKING,PL.....UHE,UHH,UHV,UHX	EA	1
29	3	PAOZZ	5325-00-761-7540	97499	205-030-303-1	.LATCH,SNAPSLIDE FAS.....UHE,UHH,UHV,UHX	EA	1
29	3A	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.....UHE,UHH,UHV,UHX	EA	2
29	4	PAOZZ	5306-00-067-9746	97499	205-030-016-1	.BOLT,SHOULDER U/O PN 205-030-306-1,-2,-3,& -4.....UHE,UHH,UHV,UHX	EA	2
29	4	PAOZZ	5306-00-948-3237	97499	205-030-016-3	.BOLT,SHOULDER U/O PN 205-030-306-5,-11,& -15.....UHE,UHH,UHV,UHX	EA	2
29	4A	PAOOO	1560-00-133-6260	97499	205-031-423-101	.PANEL ASSY,-LH RPLS--1560-00-247-0449 & 1560-00-966-9371.....UHE,UHH,UHV,UHX	EA	1
29	4A	PAOOO	1560-00-133-6259	97499	205-031-423-102	.PANEL ASSY,-RH RPLS--1560-00-247-0449 & 1560-00-966-9372.....UHE,UHH,UHV,UHX	EA	1
29	4A	PBOOO	1560-00-939-8447	97499	205-031-423-3	.PANEL,AIRCRAFT -LH.....UHE,UHH,UHV,UHX	EA	1
29	4A	PAOOO	1560-00-939-8444	97499	205-031-423-4	.PANEL,AIRCRAFT -RH.....UHE,UHH,UHV,UHX	EA	1
29	4B	MFOZZ		97499	205-031-423-13	..COVER,TOP L/H.....UHH	EA	1
29	4B	MFOZZ		97499	205-031-423-14	..COVER,TOP R/H.....UHH	EA	1
29	4C	MFOZZ		97499	205-031-423-15	..COVER,BOTTOM L/H.....UHH	EA	1
29	4C	MFOZZ		97499	205-031-423-16	..COVER,BOTTOM R/H.....UHH	EA	1
29	5	XDOZZ		88044	AN525-10R24	..SCREW, MACHINE.....UHE,UHH,UHV,UHX	EA	1
29	6	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT.....UHE,UHH,UHV,UHX	EA	1
29	7	PAOZZ	5310-00-616-3634	72962	22K2-02	..NUT,SELF-LOCKING.....UHE,UHH,UHV,UHX	EA	1
29	8	PAOZZ	5310-00-990-1361	96906	MS27130S25	..NUT,PLAIN,BLIND RIV.....UHE,UHH,UHV,UHX	EA	2
29	9	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE.....UHE,UHH,UHV,UHX	EA	2
29	10	PAOOO	5340-00-967-1787	97499	205-031-502-1	..HINGE,ACCESS DOOR -LH.....UHE,UHH,UHV,UHX	EA	1
29	10	PAOOO	5340-00-967-1788	97499	205-031-502-2	..HINGE,ACCESS DOOR -RH.....UHE,UHH,UHV,UHX	EA	1
29	11	PAOZZ	3120-00-825-1107	97499	21-005-6-3	...BUSHING,SLEEVE.....UHE,UHH,UHV,UHX	EA	1
29	12	PBOZZ	1560-00-130-2242	97499	205-031-513-1	..PIN,REMOVABLE HINGE.....UHE,UHH,UHV,UHX	EA	1
29	13	PAOZZ	9390-00-068-4384	97499	205-031-423-17	..NONMETALLIC SPECIAL SECTION.....UHE,UHH,UHV,UHX	EA	1
29	14	PAOZZ	5325-00-174-2923	88044	AN227-8	..STUD,SNAP FASTENER.....UHE,UHH,UHV,UHX	EA	18
29	15	PAOZZ	5310-00-184-8996	96906	MS35338-97	..WASHER, LOCK.....UHE,UHH,UHV,UHX	EA	1
29	16	PAOZZ	1560-00-987-5146	97499	205-030-285-1	..WINDOW PANEL,AIRCRA -LH.....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
29	16	PAOZZ	1560-00-987-5147	97499	205-030-285-2	..WINDOW PANEL,AIRCRA -RH	UHE,UHH,UHV,UHX	EA	1
29	17	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	8
29	18	PAOZZ	5340-00-076-6028	97499	205-031-512-1	..ESCUTCHEON-LH	UHE,UHH,UHV,UHX	EA	1
29	18	PAOZZ	5340-00-076-6027	97499	205-031-512-2	..ESCUTCHEON-RH	UHE,UHH,UHV,UHX	EA	1
29	19	PAOZZ	5365-00-298-6563	96906	MS16624-62	..RING,RETAINING	UHE,UHH,UHV,UHX	EA	1
29	20	PAOOO	1680-00-411-0041	80477	AR133	..HANDLE,DOOR	UHE,UHH,UHV,UHX	EA	1
29	21	PAOZZ	5305-00-719-5064	96906	MS51959-30	...SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
29	22	PAOZZ	5360-00-420-5902	97499	205-031-510-3	..SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
29	23	PAOZZ	5310-00-616-3634	72962	22K2-02	..NUT,SELF-LOCKING	UHE,UHH,UHV,UHX	EA	3
29	24	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	3
29	25	PAOOO	1560-00-967-1792	97499	205-031-507-1	..SUPPORT ASSEMBLY PANEL LH	UHE,UHH,UHV,UHX	EA	1
29	25	PAOOO	1560-00-967-1793	97499	205-031-507-2	..SUPPORT ASSEMBLY PANEL RH	UHE,UHH,UHV,UHX	EA	1
29	26	PBOZZ	5315-00-058-9698	96906	MS171433	...PIN,SPRING	UHE,UHH,UHV,UHX	EA	1
29	27	PAOZZ	1560-00-966-6131	97499	205-030-301-1	...GUIDE,LATCH SPRING	UHE,UHH,UHV,UHX	EA	1
29	28	PAOZZ	5310-00-734-1850	96906	MS21071L3	...NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	3
29	29	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	2
29	30	PAOZZ	5315-00-234-1652	96906	MS24665-143	..PIN,COTTER	UHE,UHH,UHV,UHX	EA	2
29	31	PAOZZ	5315-00-582-2838	88044	AN121653	..PIN,STRAIGHT,HEADED HEADED	UHE,UHH,UHV,UHX	EA	2
29	32	AOOOZ	1560-00-413-1432	97499	205-030-304-1	..SPINDEL ASSEMBLY LATCH LH	UHE,UHH,UHV,UHX	EA	1
29	32	AOOOZ	1560-00-413-1433	97499	205-030-304-2	..SPINDLE ASSEMBLY LATCH RH	UHE,UHH,UHV,UHX	EA	1
29	33	PBOZZ	5315-00-058-9698	96906	MS171433	...PIN,SPRING	UHE,UHH,UHV,UHX	EA	1
29	34	PAOZZ	1560-00-966-6131	97499	205-030-301-1	...GUIDE,LATCH SPRING	UHE,UHH,UHV,UHX	EA	1
29	35	PAOZZ	1560-00-967-1794	97499	205-031-511-1	...SPINDLE AIRCRAFT DOOR LH	UHE,UHH,UHV,UHX	EA	1
29	35	PAOZZ	1560-00-141-6195	97499	205-031-511-3	...SPINDLE AIRCRAFT DOOR RH	UHE,UHH,UHV,UHX	EA	1
29	36	PAOZZ	1560-00-126-9128	97499	205-031-509-1	..SPINDLE SUPPORT,LAT	UHE,UHH,UHV,UHX	EA	1
29	36A	MDOZZ	1560-00-H01-6805	97499	205-031-423-25	..DOUBLER	UHE,UHH,UHV,UHX	EA	1
29	36A	MDOZZ	1560-00-H01-6806	97499	205-031-423-26	..DOUBLER	UHE,UHH,UHV,UHX	EA	1
29	37	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
29	38	PAOZZ	5365-00-789-7831	97499	205-030-420-7	..SHIM	UHE,UHH,UHV,UHX	EA	1
29	39	PAOZZ	5340-00-055-6039	97499	205-030-489-1	..STRIKE,CATCH	UHE,UHH,UHV,UHX	EA	1
29	40	PAOZZ	5340-00-966-6161	97499	205-030-505-1	..PIN,HINGE PANEL	UHE,UHH,UHV,UHX	EA	1
29	41	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
29	42	PAOZZ	3040-00-992-2209	80205	NAS356-64-2380	..CONNECTING LINK,RIG	UHE,UHH,UHV,UHX	EA	1
29	43	PAOZZ	3040-00-992-2208	80205	NAS356-64-2240	..CONNECTING LINK,RIG	UHE,UHH,UHV,UHX	EA	1
29	44	PAOZZ	1560-00-966-9381	97499	205-030-517-1	..PIN,HINGED PANEL	UHE,UHH,UHV,UHX	EA	1
29	45	PAOZZ	5310-00-021-3884	96906	MS21086L3	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	1
29	46	PAOZZ	5305-00-180-0014	88044	AN525-10R12	..SCREW,MACHINE U/O PN 205-031-423-1 & -2	UHE,UHH,UHV,UHX	EA	1
29	46	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE U/O PN 204-031-423-3 & -4	UHE,UHH,UHV,UHX	EA	1
29	47	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
29	48	PAOZZ	5310-00-616-3634	72962	22K2-02	..NUT,SELF-LOCKING	UHE,UHH,UHV,UHX	EA	1
29	49	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
29	50	PAOZZ	5310-00-990-1361	96906	MS27130S25	..NUT,PLAIN,BLIND RIV	UHE,UHH,UHV,UHX	EA	2
29	51	PAOOO	5340-00-967-1789	97499	205-031-504-1	..HINGE,ACCESS DOOR -LH	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
29	51	PAOOO	5340-00-967-1791	97499	205-031-504-2	..HINGE,ACCESS DOOR -RH.	UHE,UHH,UHV,UHX	EA	1
29	52	PAOZZ	3120-00-990-9020	97499	22-005-10-10-14	...BUSHING,SLEEVE.	UHE,UHH,UHV,UHX	EA	1
29	53	PAOZZ	5330-00-069-9602	97499	205-031-423-51	..SEAL -LH.	UHE,UHH,UHV,UHX	EA	1
29	53	PAOZZ	5330-00-069-9603	97499	205-031-423-52	..SEAL -RH.	UHE,UHH,UHV,UHX	EA	1
29	54	PAOZZ	1560-00-009-0139	97499	205-031-423-27	..RETAINER,SEAL,PANEL -LH.	UHE,UHH,UHV,UHX	EA	1
29	54	PAOZZ	1560-00-165-4262	97499	205-031-423-28	..RETAINER,PANEL -RH.	UHE,UHH,UHV,UHX	EA	1
29	55	PAOZZ	5330-00-966-9382	97499	205-031-423-29	..SEAL,PANEL,HINGED.	UHE,UHH,UHV,UHX	EA	1
29	56	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE.	UHE,UHH,UHV,UHX	EA	18
29	56A	PAOZZ	5305-00-849-4642	96906	MS27039-1-06	..SCREW,MACHINE.	UHE,UHH,UHV,UHX	EA	1
29	57	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL.	UHE,UHH,UHV,UHX	EA	17
29	58	PAOZZ	5310-00-225-4680	96906	MS27130-25K	..NUT,PLAIN,BLIND RIVET.	UHE,UHH,UHV,UHX	EA	1
29	59	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE.	UHE,UHH,UHV,UHX	EA	6
29	60	PAOZZ	5310-00-052-7528	80205	NAS1329A3-80	..NUT,PLAIN,BLIND RIV.	UHE,UHH,UHV,UHX	EA	6
29	61	PAOZZ	5330-00-069-8481	97499	205-030-441-3	..SEAL,RUBBER.	UHE,UHH,UHV,UHX	EA	1
29	62	PAOZZ	5330-00-756-7951	97499	205-031-423-59	..SEAL,RUBBER STRIP.	UHE,UHH,UHV,UHX	EA	1
29	63	MFOZZ	1560-00-H01-6809	97499	205-031-423-33	..CLIP,GUIDE-LH.	UHE,UHH,UHV,UHX	EA	1
29	63	MFOZZ	1560-00-H01-6810	97499	205-031-423-34	..CLIP,RH.	UHE,UHH,UHV,UHX	EA	1
29	64	MFOZZ	1560-00-H01-6807	97499	205-031-423-31	..CLIP,LH.	UHE,UHH,UHV,UHX	EA	1
29	64	MFOZZ	1560-00-H01-6808	97499	205-031-423-32	..CLIP,GUIDE-RH.	UHE,UHH,UHV,UHX	EA	1

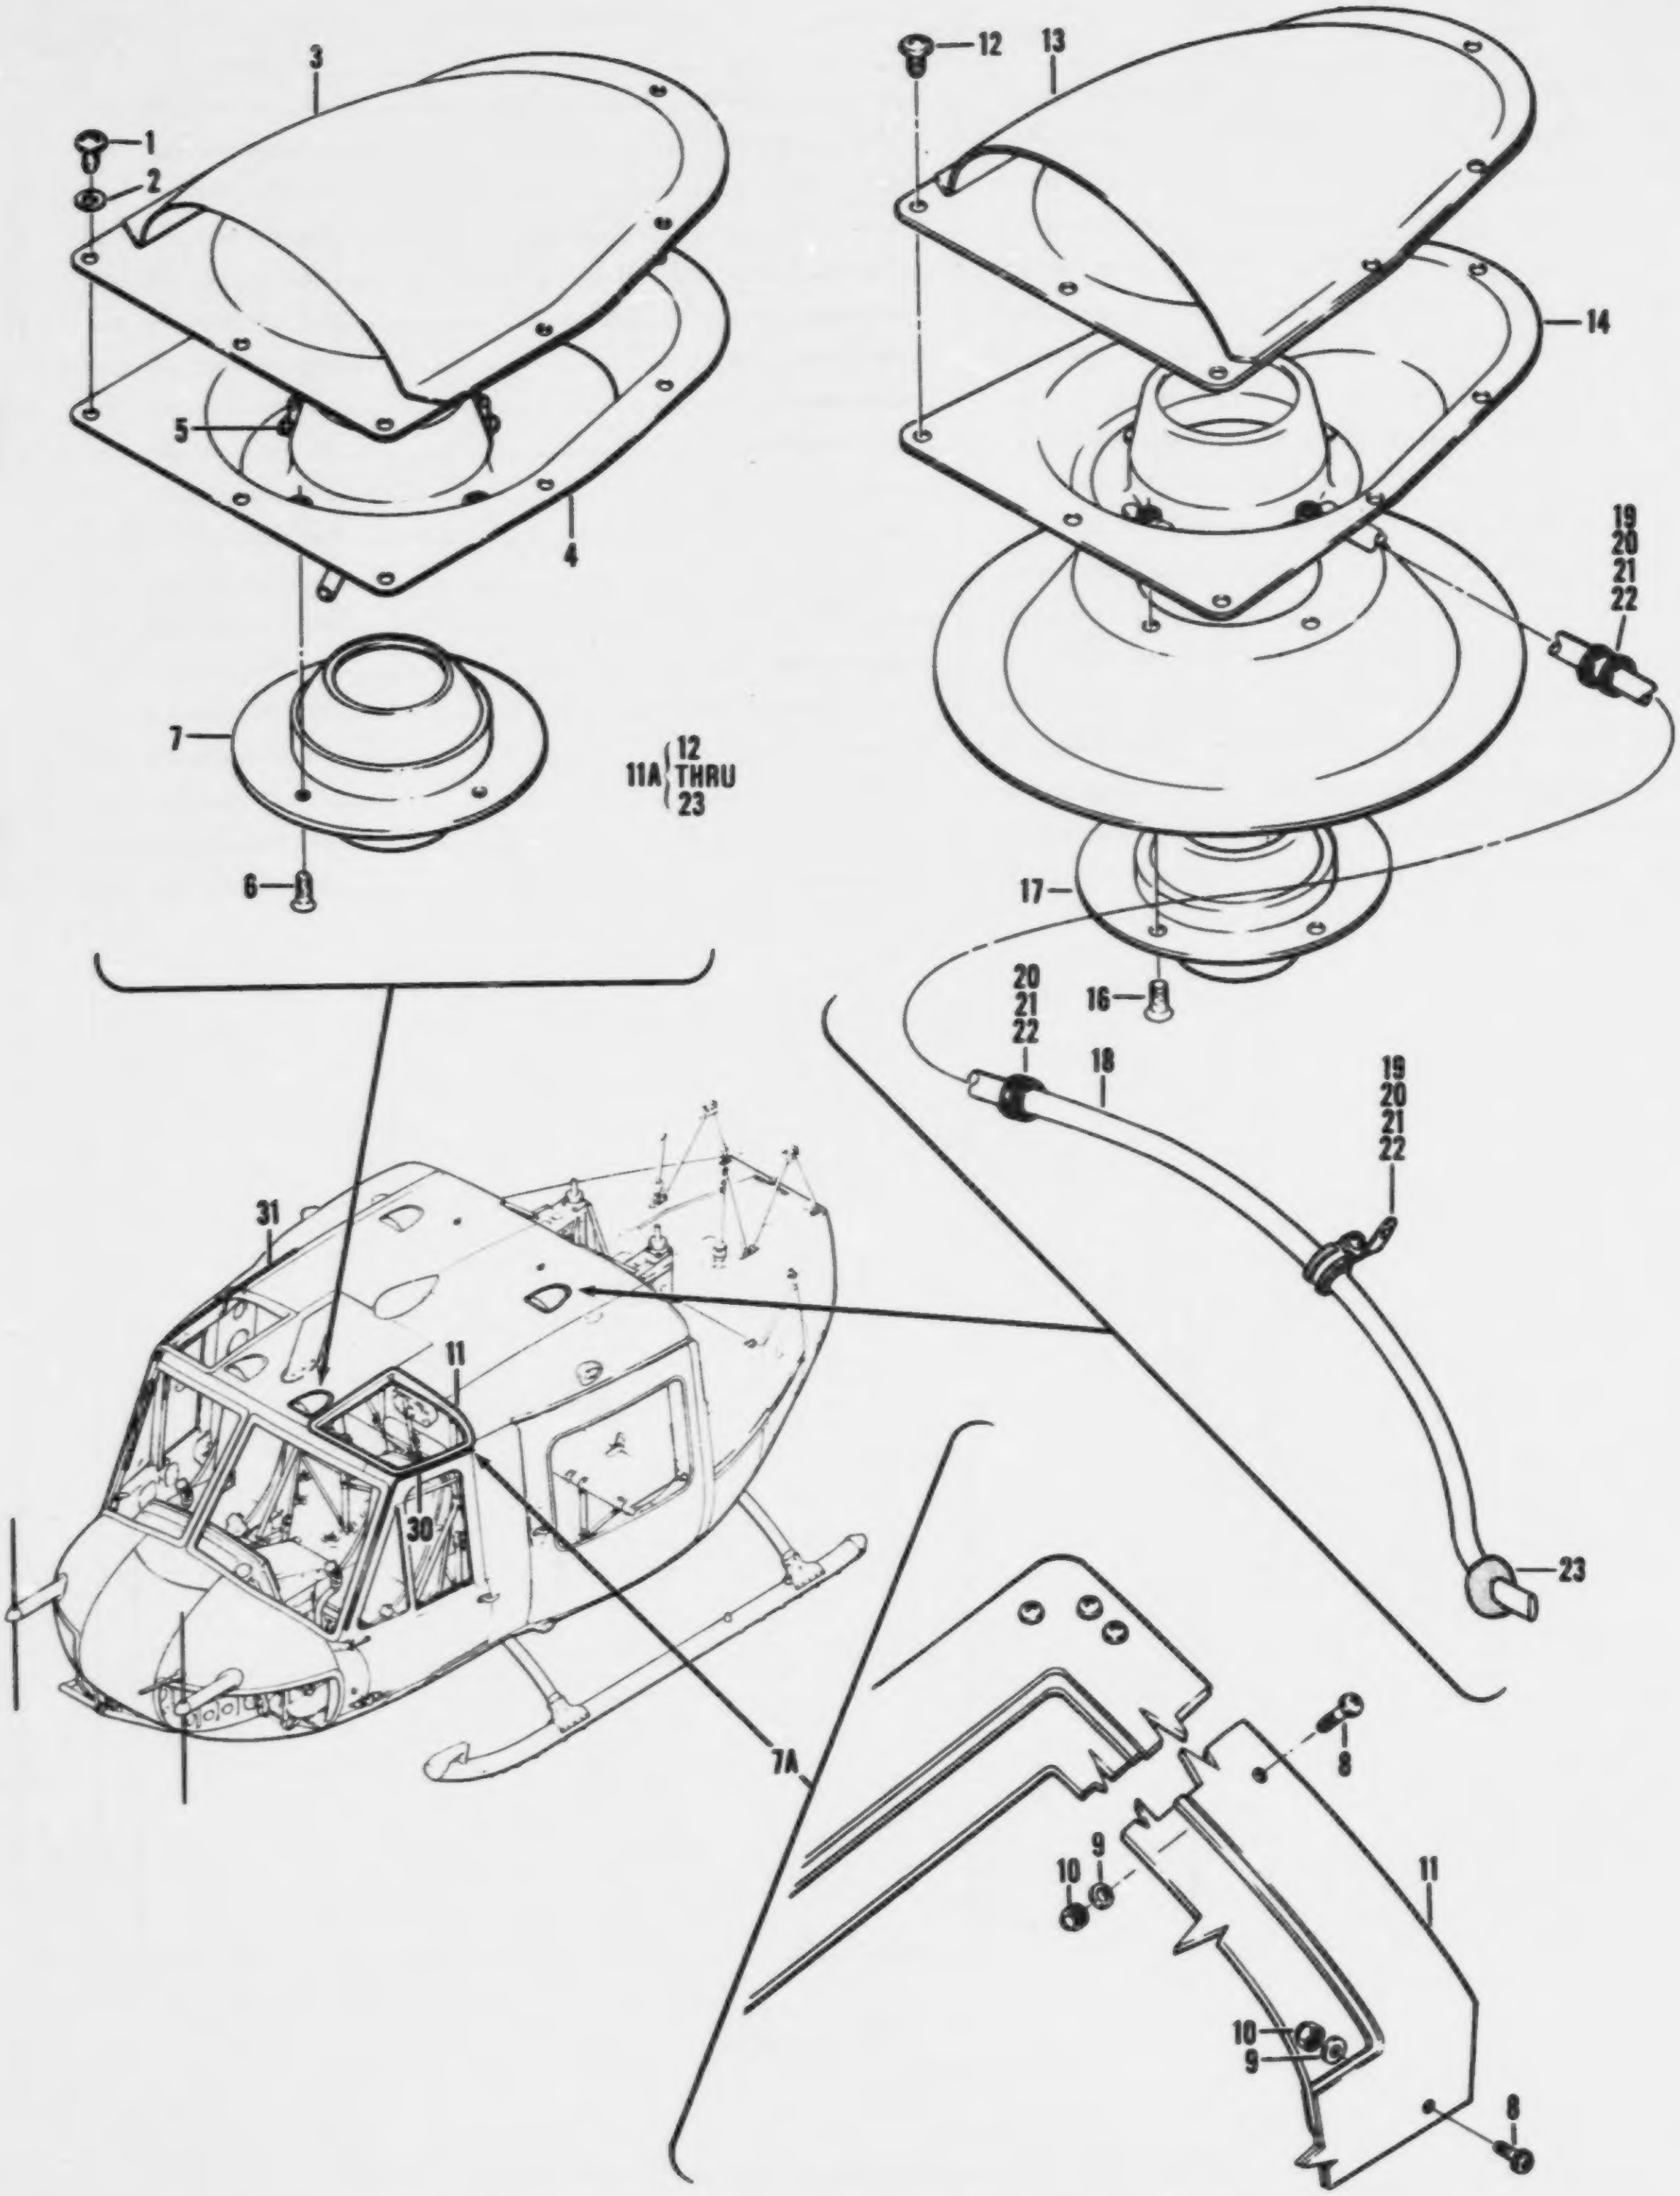
3
1
2
5
4
7
6
11A { 12 THRU 23
12
13
14
19
20
21
22
17
16
20
21
22
18
19
20
21
22
23
31
11
30
7A
8
9
10
11
10
9
8

Figure 30. Roof Installation, Cabin (Sheet 1 of 2)

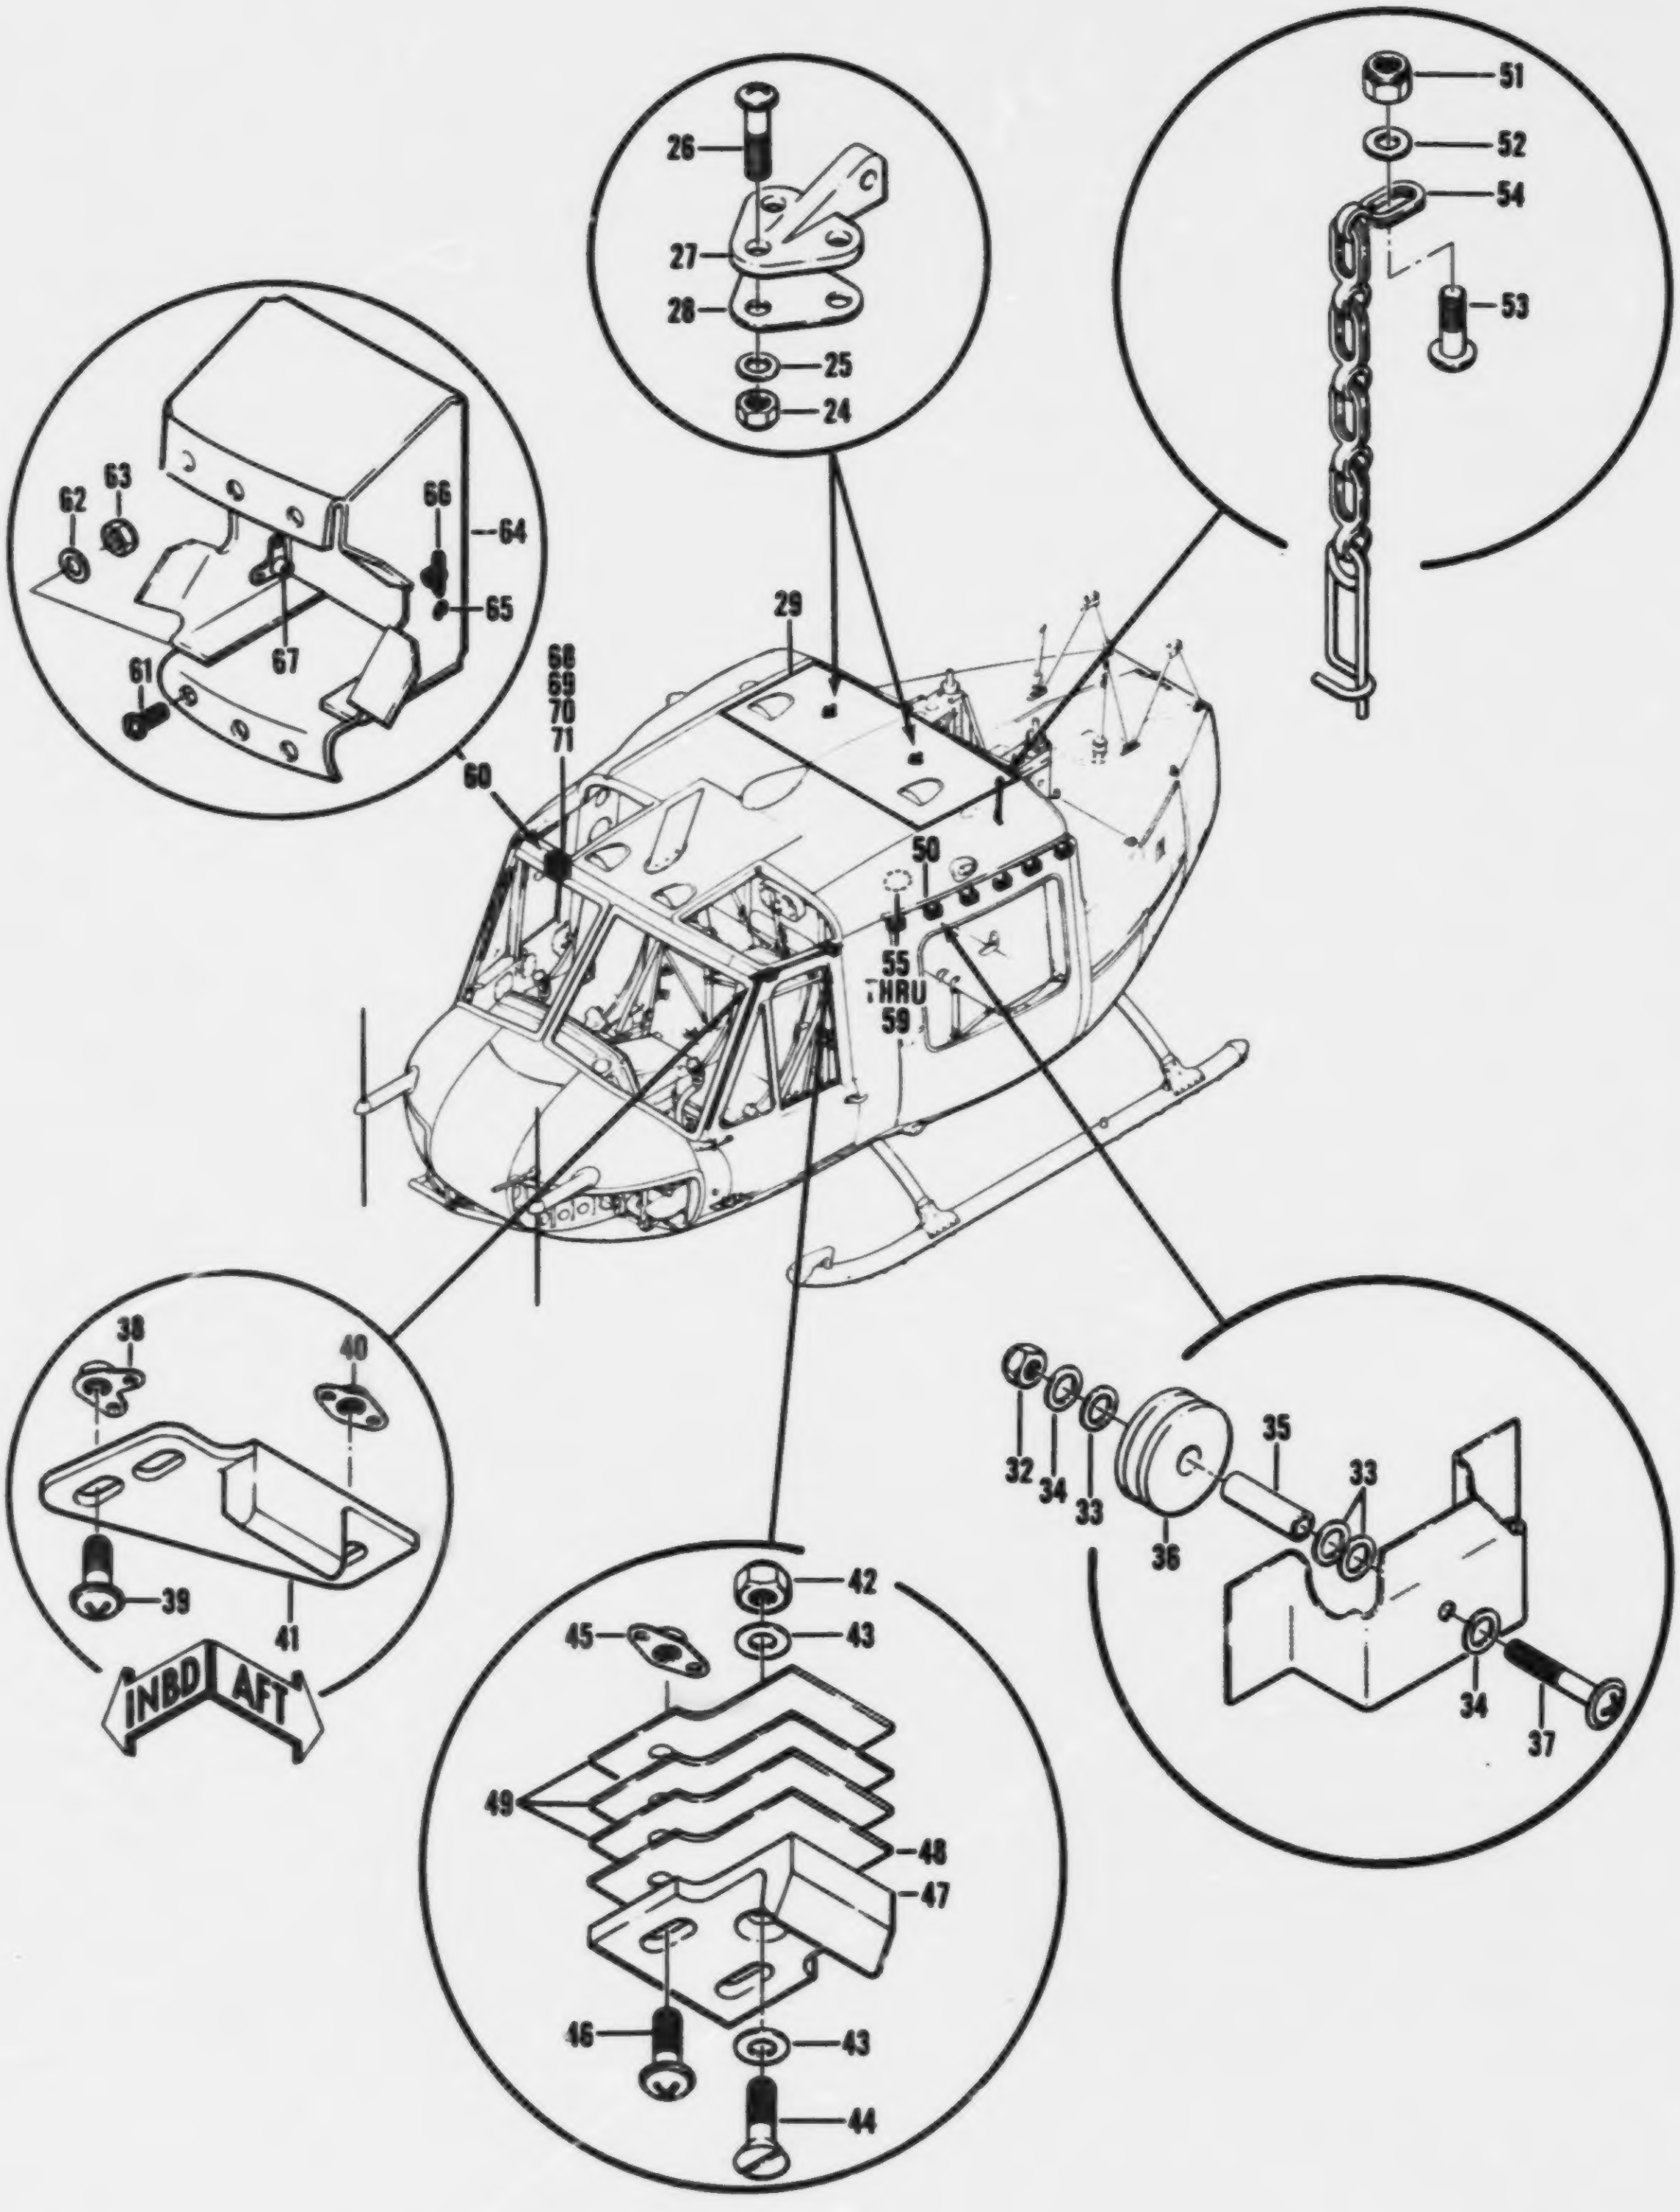
26
27
28
25
24
51
52
54
53
62
63
66
64
65
61
67
29
68
69
70
71
60
50
55
THRU
59
38
40
39
41
INBD
AFT
32
34
33
35
33
36
34
37
42
45
43
49
48
47
46
43
44

Figure 30. Roof Installation, Cabin (Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
30		XCFZZ		97499	204-030-615-159	ROOF INSTL,CABIN USBL EFF 60-3546 THRU 60-3619 SEE FIG.19 FOR NHA........UHB	EA	1
30		XCFZZ		97499	204-030-615-187	ROOF INSTL,CABIN USBL EFF 61-686 THRU 61-753 SEE FIG.19 FOR NHA........UHB	EA	1
30		XCFZZ		97499	204-030-615-235	ROOF INSTL,CABIN USBL EFF 61-754 THRU 61-803 SEE FIG.19 FOR NHA........UHB	EA	1
30		XCFZZ		97499	204-030-615-267	ROOF INSTL,CABIN USBL EFF 62-1872 THRU 62-12555 SEE FIG.19 FOR NHA........UHB	EA	1
30		XCFZZ		97499	204-031-615-1	ROOF INSTL,CABIN USBL EFF 63-8500 THRU 63-12952 SEE FIG.19 FOR NHA........UHB	EA	1
30		XCFZZ		97499	204-031-615-13	ROOF INSTL,CABIN USBL EFF 64-13902 THRU 64-14100 SEE FIG.19 FOR NHA........UHB	EA	1
30		XCFZZ		97499	204-031-615-25	ROOF INSTL,CABIN USBL 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA........UHC,UHM	EA	1
30		XCFZZ		97499	204-031-615-21	ROOF INSTL,CABIN USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA........UHC,UHM	EA	1
30		XCFZZ		97499	204-031-615-33	ROOF INSTL,CABIN USBL EFF 66-492 THRU 66-601 SEE FIG.19 FOR NHA........UHC,UHM	EA	1
30		XCFZZ		97499	204-031-615-39	ROOF INSTL,CABIN USBL EFF 66-602 & SUBSEQUENT SEE FIG.19 FOR NHA........UHC,UHM	EA	1
30		XCFZZ		97499	204-030-620-1	.VENT INSTL,AIR,FWD LH U/O PN 204-030-615-159, -187,-235,& -267........UHB	EA	1
30		XCFZZ		97499	204-030-620-11	.VENT INSTL,AIR,FWD LH U/O PN 204-031-615-1 & -13........UHB	EA	1
30		XCFZZ		97499	204-030-620-13	.VENT INSTL,AIR,FWD LH U/O PN 204-031-615-21, -25,-33,& -39 ....UHC,UHM	EA	1
30		XCFZZ		97499	204-030-620-2	.VENT INSTL,AIR,FWD RH U/O PN 204-030-615-159, -187,-235,& -267........UHB	EA	1
30		XCFZZ		97499	204-030-620-12	.VENT INSTL,AIR,FWD RH U/O PN 204-031-615-1 & -13........UHB	EA	1
30		XCFZZ		97499	204-030-620-14	.VENT INSTL,AIR,FWD RH U/O PN 204-031-615-21, -25,-33,& -39 ....UHC,UHM	EA	1
30	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE........UHB,UHC,UHM	EA	8
30	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT........UHB,UHC,UHM	EA	8
30	3	PAOZZ	1660-00-739-2586	97499	204-031-240-1	..SCOOP ASSEMBLY,AIR........UHB,UHC,UHM	EA	1
30	4	PAOOO	1560-00-869-6311	97499	204-030-620-3	..PAN,AIR VENT DRAIN -LH........UHB,UHC,UHM	EA	1
30	4	PAOOO	1560-00-475-2532	97499	204-030-620-4	..PAN,AIR VENT DRAIN -RH........UHB,UHC,UHM	EA	1
30	5	PAOZZ	5310-00-728-7715	96906	MS21069L08	...NUT,SELF-LOCKING,PL........UHB,UHC,UHM	EA	4
30	6	PAOZZ	5305-00-057-0491	96906	MS24694S5	..SCREW,MACHINE........UHB,UHC,UHM	EA	4
30	7	PAOZZ	1660-00-070-4606	97499	204-072-465-1	..VALVE ASSEMBLY,AIR DISTRIBUTION........UHB,UHC,UHM	EA	1
30	7A	XCFZZ		97499	204-030-673-1	.WINDOW INSTL ROOF-LH U/O PN 204-030-615-159,-187, -235,-267,& 204-031-615-1........UHB	EA	1
30	7A	XCFZZ		97499	204-030-673-27	.WINDOW INSTL ROOF-LH U/O (UH-1B) PN 204-031-615-13 ....UHB,UHC,UHM	EA	1
30	7A	XCFZZ		97499	204-030-673-21	.WINDOW INSTL ROOF-RH........UHB,UHC,UHM	EA	1
30	8	PAOZZ	5305-00-823-5794	88044	AN525D10R6	..SCREW,MACHINE LH SIDE........UHB,UHC,UHM	EA	54
30	8	PAOZZ	5305-00-823-5794	88044	AN525D10R6	..SCREW,MACHINE RH SIDE........UHB,UHC,UHM	EA	49
30	9	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT LH SIDE........UHB,UHC,UHM	EA	54
30	9	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT RH SIDE........UHB,UHC,UHM	EA	49
30	10	PAOZZ	5310-00-905-3081	96906	MS21083D3	..NUT,SELF-LOCKING,HE LH SIDE........UHB,UHC,UHM	EA	54
30	10	PAOZZ	5310-00-905-3081	96906	MS21083D3	..NUT,SELF-LOCKING,HE RH SIDE........UHB,UHC,UHM	EA	49
30	11	PAOOO	1560-00-672-4800	97499	204-030-673-3	..WINDOW PANEL,AIRCRA -LH U/O PN 204-030-673-1 & -27 ....UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
30	11	PAODD	1560-00-787-4251	97499	204-030-673-23	..WINDOW PANEL,AIRCRA -RH U/O PN 204-030-673-21 ....UHB,UHC,UHM	EA	1
30	11A	XCFZZ		97499	204-030-477-11	.VENT INSTL,AIR,AFT LH U/O PN 204-030-615-159,-187, -235,& -267........UHB	EA	1
30	11A	XCFZZ		97499	204-030-477-13	.VENT INSTL,AIR,AFT LH U/O PN 204-031-615-1, -13,21,-25,-33, & -39........UHB,UHC,UHM	EA	1
30	11A	XCFZZ		97499	204-030-477-12	.VENT INSTL,AIR,AFT RH U/O PN 204-030-615-159,-187, -235,& -267........UHB	EA	1
30	11A	XCFZZ		97499	204-030-477-14	.VENT INSTL,AIR,AFT RH U/O PN 204-031-615-1, -13,-21,-25,-33,& -39........UHB,UHC,UHM	EA	1
30	12	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE........UHB,UHC,UHM	EA	8
30	13	PAOZZ	1660-00-739-2586	97499	204-031-240-1	..SCOOP ASSEMBLY,AIR........UHB,UHC,UHM	EA	1
30	14	PAOZZ	1660-00-740-6509	97499	47-369-036-3	..PAN ASSEMBLY,CABIN -LH........UHB,UHC,UHM	EA	1
30	14	PAOZZ	1660-00-740-6510	97499	47-369-036-4	..PAN ASSEMBLY,CABIN -RH........UHB,UHC,UHM	EA	1
30	16	PAOZZ	5305-00-719-5400	96906	MS24694S48	..SCREW,MACHINE........UHB,UHC,UHM	EA	4
30	17	PAOZZ	1660-00-070-4606	97499	204-072-465-1	..VALVE ASSEMBLY,AIR DISTRIBUTION........UHB,UHC,UHM	EA	1
30	18	PAOZZ	4720-00-894-6534	97499	204-030-477-9	..HOSE,NONMETALLIC........UHB,UHC,UHM	EA	1
30	19	PAOZZ	5310-00-807-1467	96906	MS21042-3	..NUT,SELF-LOCKING........UHB,UHC,UHM	EA	6
30	20	PAOZZ	5340-00-187-6023	81996	EAB70006	..CLAMP,LOOP........UHB,UHC,UHM	EA	3
30	21	PAOZZ	5340-00-598-8251	88044	AN743-12	..BRACKET,ANGLE........UHB,UHC,UHM	EA	3
30	22	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	..SCREW,MACHINE........UHB,UHC,UHM	EA	6
30	23	PAOZZ	5325-00-291-9366	96906	MS35489-11	..GROMMET,NONMETALLIC........UHB,UHC,UHM	EA	1
30	24	PAOZZ	5310-00-807-1467	96906	MS21042-3	.NUT,SELF-LOCKING........UHB,UHC,UHM	EA	6
30	25	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHB,UHC,UHM	EA	6
30	26	PAOZZ	5305-00-206-1201	88044	AN525-10R14	.SCREW, MACHINE........UHB,UHC,UHM	EA	6
30	27	PAOZZ	1560-00-757-8763	97499	204-060-942-1	.BRACKET,OUTER VENT -LH........UHB,UHC,UHM	EA	1
30	27	PAOZZ	1560-00-757-8764	97499	204-060-942-2	.BRACKET,OUTER VENT -RH........UHB,UHC,UHM	EA	1
30	28	PBOZZ	5365-00-761-8079	97499	204-060-857-3	.SHIM........UHB,UHC,UHM	EA	2
30		XCFZZ		97499	204-030-615-167	.ROOF ASSY U/O PN 204-030-615-159........UHB	EA	1
30		XCFZZ		97499	204-030-615-189	.ROOF ASSY U/O PN 204-030-615-187........UHB	EA	1
30		XCFZZ		97499	204-030-615-237	.ROOF ASSY U/O PN 204-030-615-235........UHB	EA	1
30		XCFZZ		97499	204-030-615-269	.ROOF ASSY U/O PN 204-030-615-267........UHB	EA	1
30		XCFZZ		97499	204-031-615-3	.ROOF ASSY U/O PN 204-031-615-1........UHB	EA	1
30		XCFZZ		97499	204-031-615-15	.ROOF ASSY U/O PN 204-031-615-13........UHB	EA	1
30		XCFZZ		97499	204-031-615-27	.ROOF ASSY U/O PN 204-031-615-25........UHC,UHM	EA	1
30		XCFZZ		97499	204-031-615-23	.ROOF ASSY RPL-BY PN 204-031-615-41A U/O PN 204-031-615-21 ....UHC,UHM	EA	1
30		XCFZZ		97499	204-031-615-35	.ROOF ASSY U/O PN 204-031-615-33........UHC,UHM	EA	1
30		PBDDD	1560-00-102-8569	97499	204-031-615-41A	.FUSELAGE SECTION U/O PN 204-031-615-39........UHC,UHM	EA	1
30		XCFZZ		97499	204-031-615-41	.ROOF ASSEMBLY U/O PN 204-031-615-39........UHC,UHM	EA	1
30		XCFZZ		97499	204-031-622-1	..PANEL INSTL U/O PN 204-031-615-3,-15,&, -27....UHB,UHC,UHM	EA	1
30		XCFZZ		97499	204-031-622-11	..PANEL INSTL U/O PN 204-031-615-23,-35,& -41........UHC,UHM	EA	1
30	29	PAFFF	1560-00-089-9080	97499	204-031-622-3	...PANEL,FUSELAGE,AIRC U/O PN 204-031-622-1......UHB,UHC,UHM	EA	1
30	29	PAFFF	1560-00-071-8275	97499	204-031-622-13	...PANEL,FUSELAGE,AIRC U/O PN 204-031-622-11........UHC,UHM	EA	1
30		XCFZZ		97499	204-030-619-91	..LONGERON INSTL -LH U/O PN 204-030-615-167,-189,-237, & -269........UHB	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
30	30	PADZZ	1560-00-103-2412	97499	204-030-619-115A	..LONGERON INSTL-LH..............................UHB,UHC,UHM	EA	1
30	31	PBDZZ	1560-00-103-2413	97499	204-030-619-117A	..LONGERON.......................................UHB,UHC,UHM	FA	1
30		XCFZZ		97499	204-030-619-97	..LONGERON INSTL-RH U/O PN 204-030-615-167, -189,& -237 ....UHB	EA	1
30		XCFZZ		97499	204-030-619-99	..LONGERON INSTL-PH U/O PN 204-030-615-269...............UHB	EA	1
30	32	PAOZZ	5310-00-807-1467	96906	MS21042-3	...NUT,SELF-LOCKING,EX HEXAGON...................UHB,UHC,UHM	EA	6
30	33	PAOZZ	5310-00-187-2399	88044	AN960PD516	...WASHER,FLAT...................................UHB,UHC,UHM	EA	18
30	34	PAOZZ	5310-00-184-8980	88044	AN960PD516L	...WASHER,FLAT...................................UHB,UHC,UHM	EA	12
30	35	PAOZZ	3120-00-690-8684	80205	NAS75-3-023	...BUSHING, SLEEVE...............................UHB,UHC,UHM	EA	6
30	36	PAOZZ	3120-00-633-0821	97499	204-030-788-1	...ROLLER,LINEAR-ROTAR...........................UHB,UHC,UHM	FA	6
30	37	PAOZZ	5305-00-282-8470	88044	AN525-10R18	...SCREW,MACHINE.................................UHB,UHC,UHM	EA	6
30	38	PADZZ	5310-00-761-4221	96906	MS21073L3	...NUT,SELF-LOCKING,PL...........................UHB,UHC,UHM	EA	2
30	39	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	...SCREW,MACHINE.................................UHB,UHC,UHM	EA	3
30	40	PAOZZ	5310-00-764-7282	96906	MS21047L3	...NUT,SELF-LOCKING,PL...........................UHB,UHC,UHM	EA	1
30	41	PAOZZ	5340-00-779-2464	97499	204-030-480-1	...STRIKE,CATCH U/O PN 204-030-619-97,-99, & -117 ....UHB,UHC,UHM	EA	1
30	41	PAOZZ	5340-00-775-5953	97499	204-030-480-2	...STRIKE,CATCH U/O PN 204-030-619-91 & -115.....UHB,UHC,UHM	EA	1
30	42	PAOZZ	5310-00-263-2862	96906	MS21045C3	...NUT,SELF-LOCKING,HE...........................UHB,UHC,UHM	EA	1
30	43	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT...................................UHB,UHC,UHM	EA	2
30	44	PAOZZ	5305-00-719-5405	96906	MS24694S56	...SCREW,MACHINE U/O PN 204-030-619-91,-97, -99,-115,& -117 ....UHB,UHC,UHM	EA	1
30	45	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL...........................UHB,UHC,UHM	EA	2
30	46	PAOZZ	5305-00-180-0014	88044	AN525-10R12	...SCREW,MACHINE.................................UHB,UHC,UHM	EA	2
30	47	PAOZZ	5340-00-771-2515	97499	204-030-798-5	...STRIKE,CATCH..................................UHB,UHC,UHM	EA	1
30	48	PAOZZ	5340-00-070-4585	97499	204-030-986-9	...STRIKE,CATCH..................................UHB,UHC,UHM	EA	1
30	49	PAOZZ	5340-00-070-4604	97499	204-030-986-11	...STRIKE,CATCH..................................UHB,UHC,UHM	EA	3
30	50	PAOZZ	5325-00-174-2923	88044	AN227-8	...STUD,SNAP FASTENER....................................UHB	EA	3
30	51	PAOZZ	5310-00-857-5560	96906	MS21045L06	..NUT,SELF-LOCKING HEXAGON.......................UHB,UHC,UHM	EA	4
30	52	PAOZZ	5310-00-167-0816	88044	AN960-6	..WASHER,FLAT....................................UHB,UHC,UHM	EA	4
30	53	PAOZZ	5305-00-984-4988	96906	MS35206-228	..SCREW,MACHINE..................................UHB,UHC,UHM	EA	4
30	54	PAOZZ	1560-00-070-4603	97499	205-070-515-7	..HOOK ASSEMBLY..................................UHB,UHC,UHM	EA	6
30	55	XCFZZ		97499	204-031-624-1	..SKIN INSTL U/O PN 204-031-615-3........................UHB	EA	1
30	55	XCFZZ		97499	204-031-624-5	..SKIN INSTL U/O PN 204-031-615-15,-23, -27,-35,& -41 ....UHB,UHC,UHM	EA	1
30	56	XDOZZ		88044	AN227-268M8	...STUD,SNAP FASTEN..............................UHB,UHC,UHM	EA	8
30	57	PAOZZ	5310-00-167-0765	88044	AN970-3	...WASHER,FLAT...................................UHB,UHC,UHM	EA	8
30	58	PAOZZ	5365-00-580-5787	80205	NAS43HT3-12	...SPACER,SLEEVE.................................UHB,UHC,UHM	EA	8
30	59	PAOZZ	5310-00-807-1473	96906	MS21042L08	...NUT,SELF-LOCKING,EX WASHER,HEXAGON............UHB,UHC,UHM	EA	8
30	60	XBDDD	1560-00-885-1811	97499	204-030-465-4	.SUPPORT,WINDSHIELD..............................UHB,UHC,UHM	EA	1
30	61	PAOZZ	5305-00-823-5794	88044	AN525D10R6	..SCREW,MACHINE..................................UHB,UHC,UHM	EA	6
30	62	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT....................................UHB,UHC,UHM	EA	6
30	63	PAOZZ	5310-00-905-3081	96906	MS21083D3	..NUT,SELF-LOCKING HEXAGON.......................UHB,UHC,UHM	EA	6
30	64	PADZZ	1560-00-454-9957	97499	204-030-465-25	..BRACKET,SUPPORT................................UHB,UHC,UHM	EA	1
30	64	PADZZ	1560-00-454-9958	97499	204-030-465-26	..BRACKET,SUPPORT................................UHB,UHC,UHM	EA	1
30	65	PADZZ	5310-00-734-1850	96906	MS21071L3	..NUT,SELF-LOCKING,PL............................UHB,UHC,UHM	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
30	66	PADZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..............................UHB,UHC,UHM	EA	2
30	67	PADZZ	5310-00-761-4221	96906	MS21073L3	..NUT,SELF-LOCKING,PL..............................UHB,UHC,UHM	EA	2
30	68	MFFZZ	1560-00-H05-9682	81996	1560UH1-662	.BRACKET,ANTENNA,LH USE-AFT-CMPL-W MWO 55-1520-200-30/2 ....UHC,UHM	EA	1
30	68	MFFZZ	1560-00-H05-9683	81996	1560UH1-663	.BRACKET,ANTENNA,RH USE-AFT-CMPL-W MWO 55-1520-200-30/2 ....UHC,UHM	EA	1
30	69	MFFZZ	1560-00-H05-9684	81996	1560UH1-664	.DOUBLER,ANTENNA USE-AFT-CMPL-W MWO 55-1520-200-30/2 ....UHC,UHM	EA	1
30	70	MFFZZ	1560-00-H05-9685	81966	1560UH1-666	.BRACKET,ANTENNA USE-AFT-CMPL-W MWO 55-1560-200-30/2 ....UHC,UHM	EA	1
30	71	MFFZZ	1560-00-H05-9687	81996	1560UH1-671	.GUSSET,ANTENNA,LH USE-AFT-CMPL-W MWO 55-1520-200-30/2 ....UHC,UHM	EA	1
30	71	MFFZZ	1560-00-H05-9686	81996	1560UH1-670	.GUSSET,ANTENNA-RH USE-AFT-CMPL-W MWO 55-1520-200-30/2 ....UHC,UHM	EA	1

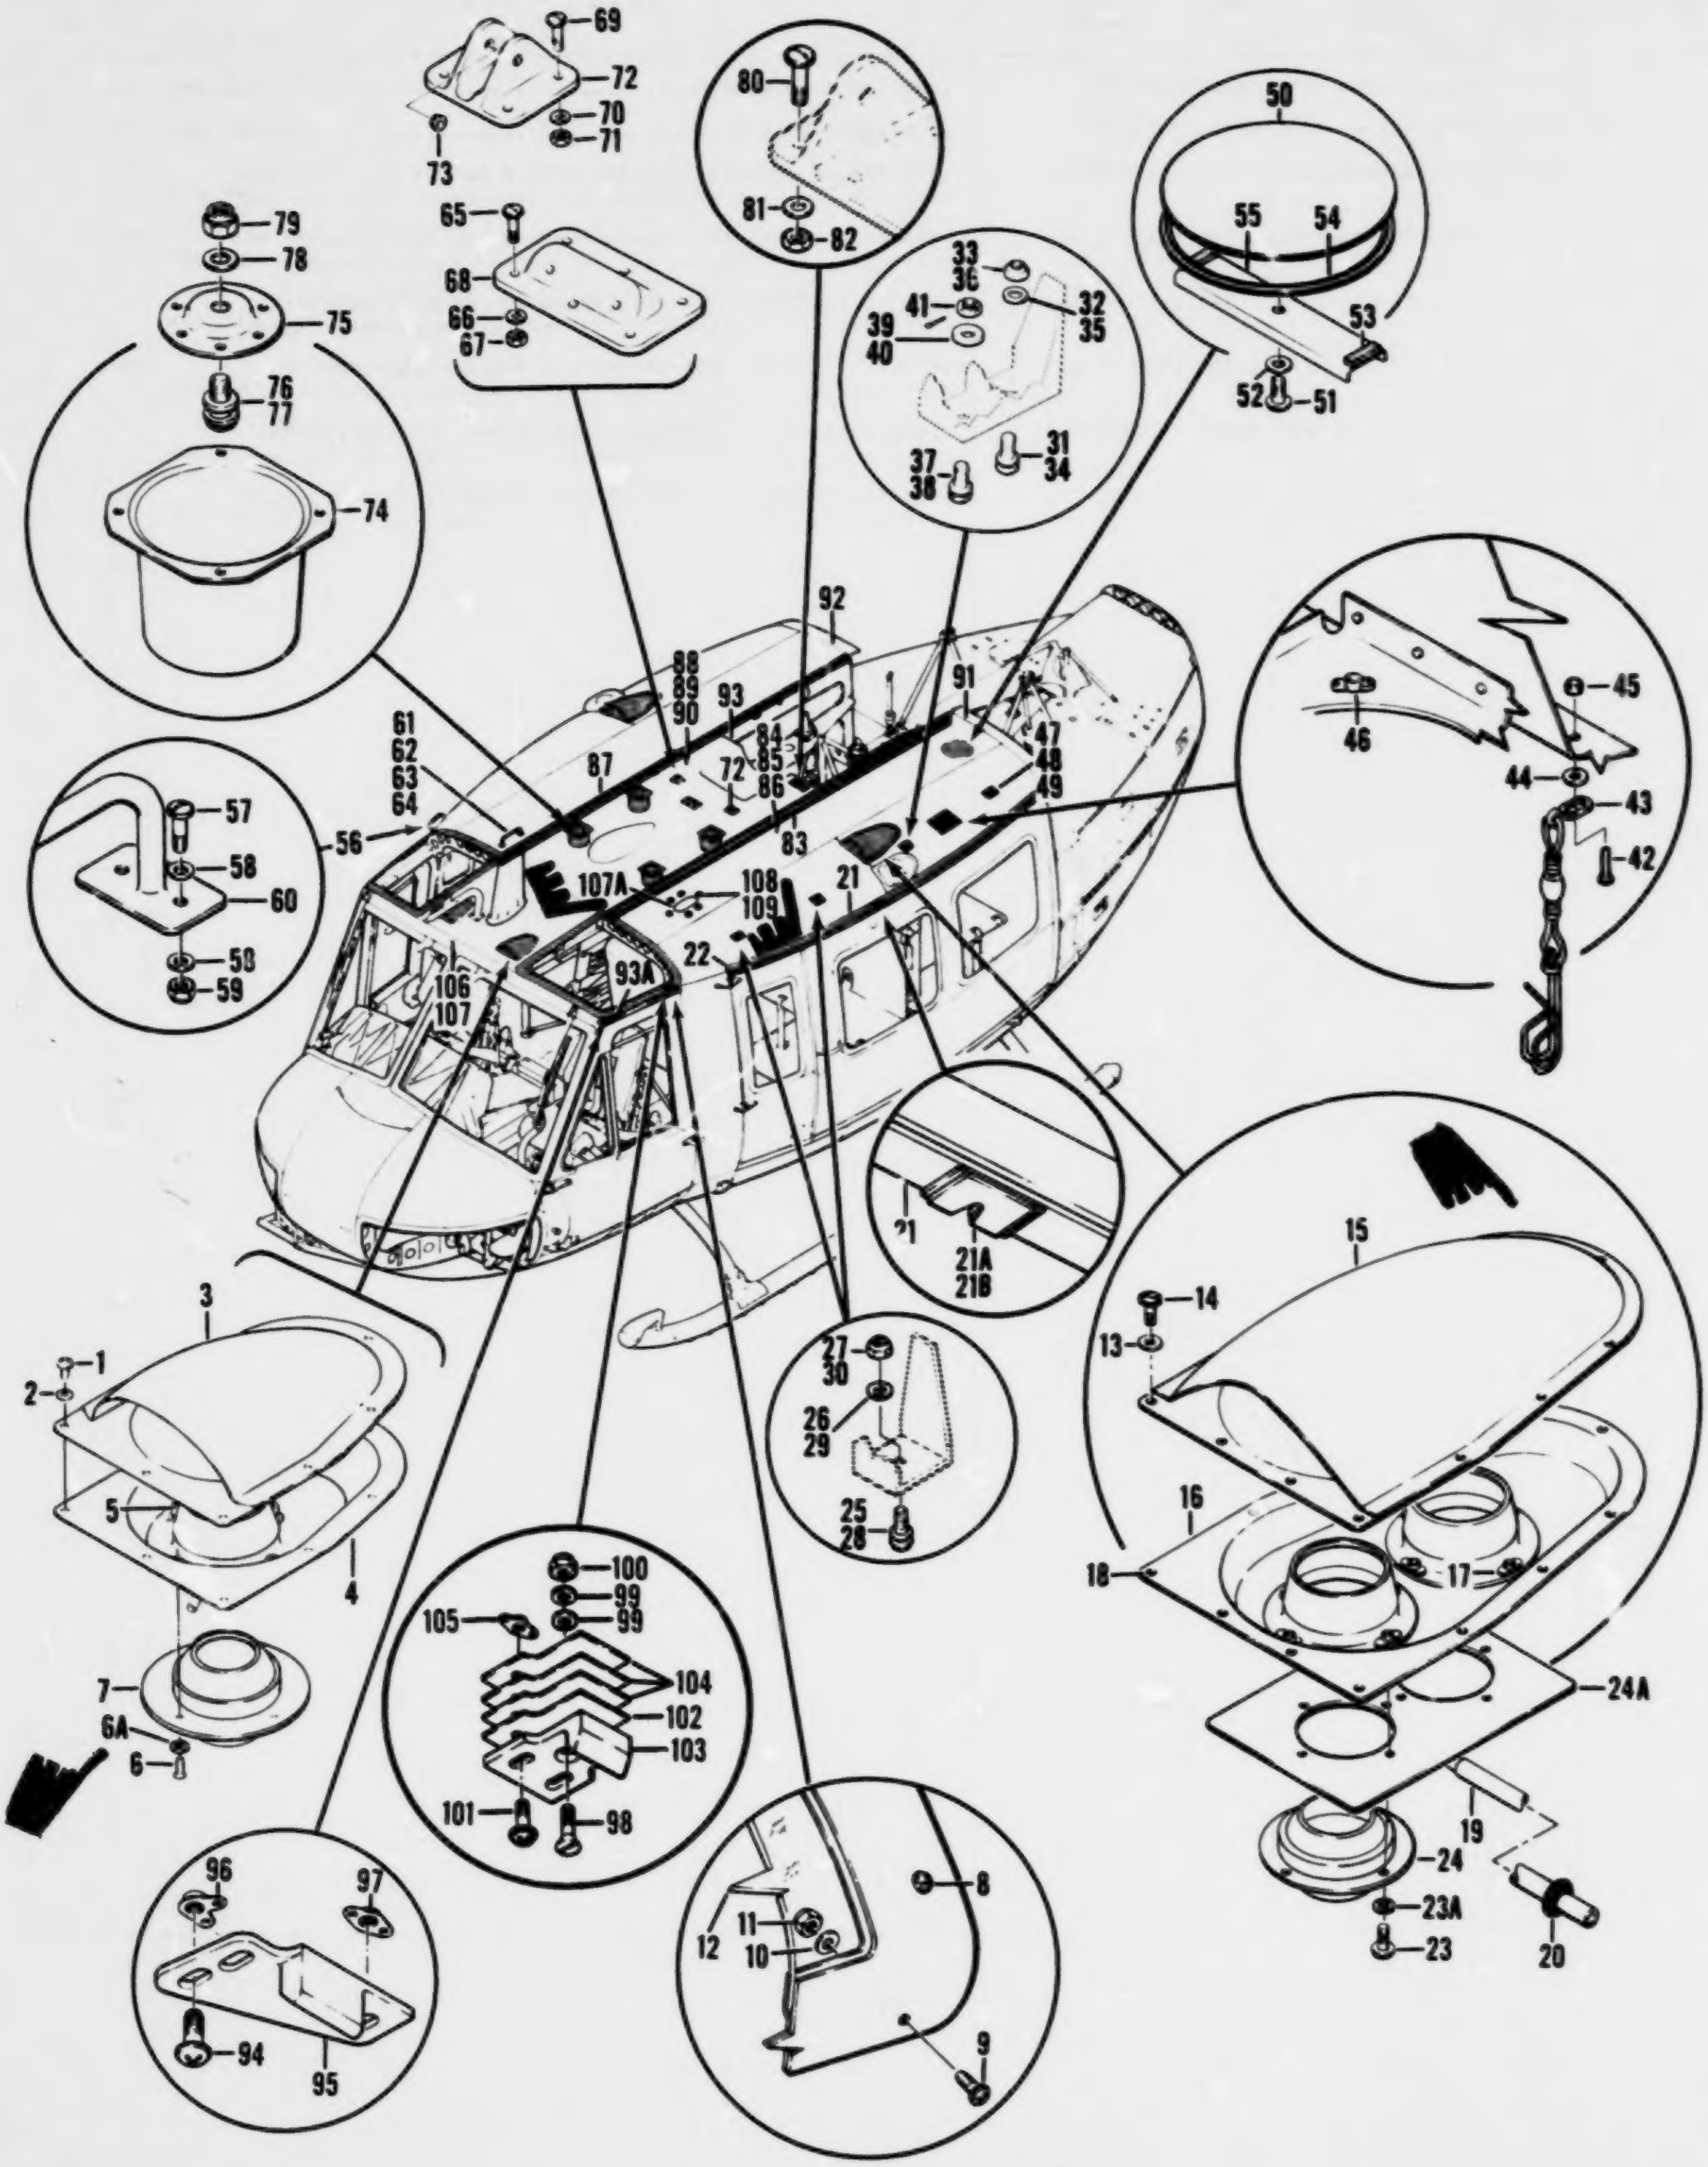
69
72
70
71
73
80
81
82
50
55
54
53
52
51
79
78
75
76
77
74
65
68
66
67
33
36
41
32
35
39
40
37
38
31
34
92
88
89
90
93
91
84
85
86
72
87
83
47
48
49
45
46
44
43
42
61
62
63
64
56
57
58
60
58
59
107A
108
109
21
22
106
107
93A
21
21A
21B
15
14
13
16
18
17
24A
19
24
23A
23
20
3
1
2
5
4
7
6A
6
27
30
26
29
25
28
100
99
99
105
104
102
103
101
98
96
97
94
95
8
11
12
10
9

Figure 31. Roof Installation,Cabin

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
31		XCFZZ		97499	205-030-615-3	ROOF INSTL,CABIN USBL EFF 62-2106 THRU 62-12372 SEE FIG.20 FOR NHA........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-615-5	ROOF INSTL,CABIN USBL EFF 63-8739 THRU 63-8803 SEE FIG.20 FOR NHA........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-615-7	ROOF INSTL,CABIN USBL EFF 63-8804 THRU 63-8859 SEE FIG.20 FOR NHA........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-615-97	ROOF INSTL,CABIN USBL EFF 63-12956 THRU 63-13002 SEE FIG.20 FOR NHA........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-615-91	ROOF INSTL,CABIN USBL EFF 64-13492 THRU 64-13901 SEE FIG.20 FOR NHA........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-615-99	ROOF INSTL,CABIN USBL EFF 65-9565 THRU 65-12895 SEE FIG.20 FOR NHA........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-615-101	ROOF INSTL,CABIN USBL EFF 66-746 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.20 FOR NHA........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-615-105	ROOF INSTL,CABIN USBL EFF 67-17145 THRU 67-17777 SEE FIG.20 FOR NHA........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-615-109	ROOF INSTALLATION,C USBL EFF 67-17778 THRU 68-15489 SEE FIG. 20 FOR NHA........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-615-113	ROOF INSTALLATION,C USBL EFF 68-15490 THRU 70-16518 SEE FIG. 20 FOR NHA........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-615-131	ROOF INSTL,CABIN USBL EFF 71-20000 & SUBSEQUENT SEE FIG.20 FOR NHA........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	204-030-620-1	.VENT INSTL,AIR,FWD LH U/O PN 205-030-615-3 ....UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	204-030-620-11	.VENT INSTL,AIR,FWD LH U/O PN 205-030-615-5,-7,-91 &-97 ....UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	204-030-620-13	.VENT INSTL,AIR,FWD LH U/O PN 205-030-615-99,-101,-105,-109, -113 &-131........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	204-030-620-2	.VENT INSTL,AIR,FWD RH U/O PN 205-030-615-3 ....UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	204-030-620-12	.VENT INSTL,AIR,FWD RH U/O PN 205-030-615-5,-7,-91 &-97 ....UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	204-030-620-14	.VENT INSTL,AIR,FWD RH U/O PN 205-615-99,-101,-105,-109,-113 &-131........UHE,UHH,UHV,UHX	EA	1
31	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	8
31	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT........UHE,UHH,UHV,UHX	EA	8
31	3	PAOZZ	1660-00-739-2586	97499	204-031-240-1	..SCOOP ASSEMBLY,AIR........UHE,UHH,UHV,UHX	EA	1
31	4	PAOOO	1660-00-869-6311	97499	204-030-620-3	..PAN, AIR VENT DRAIN DRAIN LH........UHE,UHH,UHV,UHX	EA	1
31	4	PAOOO	1660-00-475-2532	97499	204-030-620-4	..PAN, AIR VENT DRAIN DRAIN RH........UHE,UHH,UHV,UHX	EA	1
31	5	PAOZZ	5310-00-728-7715	96906	MS21069L08	...NUT,SELF-LOCKING,PL........UHE,UHH,UHV,UHX	EA	4
31	6	PAOZZ	5305-00-057-0491	96906	MS24694S5	..SCREW,MACHINE U/O PN 204-030-620-1 & -20 ....UHE,UHH,UHV,UHX	EA	4
31	6	PAOZZ	5305-00-891-1775	88044	AN525-832R10	..SCREW,MACHINE U/O PN 204-030-620-11 & -12 ....UHE,UHH,UHV,UHX	EA	4
31	6A	PAOZZ	5310-00-184-8966	88044	AN960PD8	..WASHER,FLAT U/O PN 204-030-620-11 & -12....UHE,UHH,UHV,UHX	EA	4
31	7	PAOZZ	1660-00-070-4606	97499	204-072-465-1	..VALVE ASSEMBLY,AIR........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-673-11	.WINDOW INSTL ROOF-LH U/O PN 205-030-615-3,-5,-7, & -97 ....UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-673-19	.WINDOW INSTL ROOF-LH U/O PN 205-030-615-91 ....UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-673-21	.WINDOW INSTL ROOF-LH U/O PN 205-030-615-99,-101, -105,-109, -113,& -131........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-673-12	.WINDOW INSTL ROOF-RH U/O PN 205-030-615-3,-5,-7, -91,& -97	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHE,UHH,UHV,UHX		
31		XCFZZ		97499	205-030-673-22	.WINDOW INSTL ROOF-RH U/O PN 205-030-615-99,-101, -105,-109, -113,& -131....................................UHE,UHH,UHV,UHX	EA	1
31	8	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	1
31	9	PAOZZ	5305-00-558-8934	88044	AN525D10R8	..SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	48
31	10	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	48
31	11	PAOZZ	5310-00-877-5798	96906	MS21044D3	..NUT,SELF-LOCKING,HE HEXAGON................UHE,UHH,UHV,UHX	EA	48
31	12	PAOOO	1560-00-999-0308	97499	205-030-673-23	..WINDOW PANEL,AIRCRA -LH....................UHE,UHH,UHV,UHX	EA	1
31	12	PAOOO	1560-00-999-0307	97499	205-030-673-24	..WINDOW PANEL,AIRCRA -RH....................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-611-1	.VENT INSTL,AIR,AFT LH.......................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-611-2	.VENT INSTL,AIR,AFT RH.......................UHE,UHH,UHV,UHX	EA	1
31	13	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	11
31	14	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	11
31	15	PAOZZ	1560-00-966-4368	97499	205-030-611-17	..SCOOP ASSEMBLY,AIR.........................UHE,UHH,UHV,UHX	EA	1
31	16	PAOOO	1560-00-114-1210	97499	205-030-611-3	..PAN ASSEMBLY,AIR VE -LH....................UHE,UHH,UHV,UHX	EA	1
31	16	PAOOO	1560-00-813-9357	97499	205-030-611-4	..PAN ASSEMBLY,AIR VE -RH....................UHE,UHH,UHV,UHX	EA	1
31	17	PAOZZ	5310-00-728-7715	96906	MS21069L08	...NUT,SELF-LOCKING,PL.......................UHE,UHH,UHV,UHX	EA	8
31	18	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL........................UHE,UHH,UHV,UHX	EA	11
31	19	MOOZZ	1560-00-986-9964	97499	205-030-611-15	..TUBE,PANEL ASSEMBLY........................UHE,UHH,UHV,UHX	EA	1
31	20	PAOZZ	5325-00-276-6089	96906	MS35489-16	..GROMMET,NONMETALLIC........................UHE,UHH,UHV,UHX	EA	1
31	21	PAFZZ	5340-00-252-2350	97499	205-030-220-7	.TRACK ASSEMBLY -LH UPPER....................UHE,UHH,UHV,UHX	EA	1
31	21	PAFZZ	5340-00-252-2351	97499	205-030-220-8	.TRACK ASSEMBLY -RH UPPER....................UHE,UHH,UHV,UHX	EA	1
31	21A	PADZZ	1560-00-133-7362	97499	205-030-516-1	.GUIDE,LATCH PIN.............................UHE,UHH,UHV,UHX	EA	1
31	21B	PBFZZ	3120-01-037-4275	97499	22-004-12-8-12	.BUSHING,SLEEVE U/O SHIPS PRIOR TO 68-15490 ....UHE,UHH,UHV,UHX	EA	2
31	22	MOOZZ	1560-00-757-2903	97499	205-030-615-93	.SEAL,CABIN ROOF -LH.........................UHE,UHH,UHV,UHX	EA	1
31	22	MOOZZ	1560-00-757-2904	97499	205-030-615-94	.SEAL,CABIN ROOF -RH.........................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-624-3	.AIR VENT INSTL-LH U/O PN 205-030-615-3......UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-624-11	.AIR VENT INSTL-LH U/O PN 205-030-615-5,-7, -91,-97,-99,-101,-105, -109,-113,& -131....................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-624-4	.AIR VENT INSTL-RH U/O PN 205-030-615-3......UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-624-12	.AIR VENT INSTL-RH U/O PN 205-030-615-5,-7, -91,-97,-99,-101,-105, -109,-113,& -131....................UHE,UHH,UHV,UHX	EA	1
31	23	PAOZZ	5305-00-267-8971	96906	MS24694S7	..SCREW,MACHINE U/O PN 205-030-624-3 & -4....UHE,UHH,UHV,UHX	EA	8
31	23	PAOZZ	5305-00-921-0918	96906	MS27039-0808	..SCREW,MACHINE U/O PN 205-030-624-11 & -12 ....UHE,UHH,UHV,UHX	EA	8
31	23A	PAOZZ	5310-00-184-8966	88044	AN960PD8	..WASHER,FLAT U/O PN 205-030-624-11 & -12....UHE,UHH,UHV,UHX	EA	8
31	24	PAOZZ	1660-00-070-4606	97499	204-072-465-1	..VALVE ASSEMBLY,AIR RPLS 1660-00-440-3373 ....UHE,UHH,UHV,UHX	EA	2
31	24A	PAOZZ	1560-00-404-7652	97499	205-030-624-9	..FAIRING,AIR VENT,CA CABIN U/O PN 205-030-624-1 ....UHE,UHH,UHV,UHX	EA	1
31	24A	PAOZZ	1560-00-404-7653	97499	205-030-624-10	..FAIRING,AIR VENT,CA CABIN U/O PN 205-030-624-12 ....UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-607-3	.FRAME INSTL-LH U/O PN 205-030-615-3,-5,-7, & -97 ....UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-607-5	.FRAME INSTL-LH U/O PN 205-030-615-91,-99, -105,-109,-113,& -131.......................................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-607-4	.FRAME INSTL-RH U/O PN 205-030-615-3,-5,-7, & -97	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						..............................UHE,UHH,UHV,UHX		
31		XCFZZ		97499	205-030-607-6	.FRAME INSTL-RH U/0 PN 205-030-615-91,-99, -101,-105,-109,-113,& -131..................UHE,UHH,UHV,UHX	EA	1
31	25	XDOZZ		00624	34113-30	..STUD,SNAPSLIDE FAST..................UHE,UHH,UHV,UHX	EA	1
31	26	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT..................UHE,UHH,UHV,UHX	EA	1
31	27	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX EXTENDED WASHER HEXAGON..................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-620-1	.FRAME INSTL-LH U/0 PN 205-030-615-3,-5,-7, & -97..................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-620-3	.FRAME INSTL-LH U/0 PN 205-030-615-91,-99, -101,-105,-109,-113,& -131..................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-620-2	.FRAME INSTL-RH U/0 PN 205-030-615-3,-5,-7, & -97..................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-620-4	.FRAME INSTL-RH U/0 PN 205-030-615-91,-99, -101,-105,-109,& -113..................UHE,UHH,UHV,UHX	EA	1
31	28	XDOZZ		00624	34113-30	..STUD,SNAPSLIDE FAST..................UHE,UHH,UHV,UHX	EA	1
31	29	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT..................UHE,UHH,UHV,UHX	EA	1
31	30	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-675-1	.FRAME INSTL-LH U/0 PN 205-030-615-3 & -5....UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-675-2	.FRAME INSTL-RH U/0 PN 205-030-615-3 & -5....UHE,UHH,UHV,UHX	EA	1
31	31	XDOZZ		00624	34113-30	..STUD,SNAPSLIDE FAST..................UHE,UHH,UHV,UHX	EA	1
31	32	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT..................UHE,UHH,UHV,UHX	EA	2
31	33	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	2
31		XCFZZ		97499	205-030-675-3	.FRAME INSTL-LH U/0 PN 205-030-615-7 & -97..................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-675-5	.FRAME INSTL-LH U/0 PN 205-030-615-91,-99, -101,-105,-109,-113,& -131..................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-675-4	.FRAME INSTL-RH U/0 PN 205-030-615-7 & -97..................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-675-6	.FRAME INSTL-RH U/0 PN 205-030-615-91,-99, -101,-105,-109,-113,& -131..................UHE,UHH,UHV,UHX	EA	1
31	34	XDOZZ		00624	34113-30	..STUD,SNAPSLIDE FAST..................UHE,UHH,UHV,UHX	EA	1
31	35	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT..................UHE,UHH,UHV,UHX	EA	1
31	36	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	1
31	37	PAOZO	5325-00-571-3765	97499	205-030-630-1	..STUD ASSEMBLY..................UHE,UHH,UHV,UHX	EA	1
31	38	PAOZZ	5315-00-058-9698	96906	MS16562-191	...PIN,SPRING..................UHE,UHH,UHV,UHX	EA	2
31	39	PAOZZ	5310-00-227-6534	97499	10W11-12-16-4	..WASHER,FLAT..................UHE,UHH,UHV,UHX	EA	1
31	40	PAOZZ	5310-00-809-4061	96906	MS27183-15	..WASHER,FLAT..................UHE,UHH,UHV,UHX	EA	1
31	41	PAOZZ	5310-00-176-8110	88044	AN320-6	..NUT,PLAIN,SLOTTED,H..................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-608-3	.FRAME INSTL-LH..................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-608-4	.FRAME INSTL-RH..................UHE,UHH,UHV,UHX	EA	1
31	42	PAOZZ	5305-00-984-4988	96906	MS35206-228	..SCREW,MACHINE..................UHE,UHH,UHV,UHX	EA	1
31	43	PAOZZ	1560-00-070-4603	97499	205-070-515-7	..HOOK ASSEMBLY,BLOOD BLOOD..................UHE,UHH,UHV,UHX	EA	6
31	44	PAOZZ	5310-00-157-0816	88044	AN960-6	..WASHER,FLAT..................UHE,UHH,UHV,UHX	EA	1
31	45	PAOZZ	5310-00-807-1472	96906	MS21042L06	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	1
31	46	PAOZZ	5310-00-619-3560	80205	NAS697A06	..NUT,SELF-LOCKING,PL..................UHE,UHH,UHV,UHX	EA	4
31		XCFZZ		97499	205-030-606-3	.FRAME INSTL-LH U/0 PN 205-030-615-3,-5,-7, & -97..................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
31		XCFZZ		97499	205-030-606-5	.FRAME INSTL-LH U/O PN 205-030-615-91,99, -101,-105,-109,-113,& -131....UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-606-4	.FRAME INSTL-RH U/O PN 205-030-615-3,-5,-7, & -97 ....UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-606-6	.FRAME INSTL-RH U/O PN 205-030-615-91,-99, -101,-105,-109,-113,& -131....UHE,UHH,UHV,UHX	EA	1
31	47	XDOZZ		00624	34113-30	..STUD,SNAPSLIDE FAST....UHE,UHH,UHV,UHX	EA	1
31	48	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT....UHE,UHH,UHV,UHX	EA	1
31	49	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHE,UHH,UHV,UHX	EA	1
31	50	PAOOO	1560-00-780-4377	97499	205-030-614-29	.COVER,ACCESS....UHE,UHH,UHV,UHX	EA	1
31	51	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	1
31	52	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT....UHE,UHH,UHV,UHX	EA	1
31	53	PAOZZ	1560-00-986-9962	97499	205-030-614-27	..PAD,PLATE ASSEMBLY....UHE,UHH,UHV,UHX	EA	2
31	54	PAOZZ	5330-00-966-4369	97499	205-030-614-25	..GASKET....UHE,UHH,UHV,UHX	EA	1
31	55	MFOZZ	1560-00-986-9963	97499	205-030-614-13	..CHANNEL,PLATE ASSEM....UHE,UHH,UHV,UHX	EA	1
31	56	XCFZZ		97499	205-030-492-1	.HANDLE INSTL....UHE,UHH,UHV,UHX	EA	1
31	57	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	4
31	58	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT....UHE,UHH,UHV,UHX	EA	8
31	59	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHE,UHH,UHV,UHX	EA	4
31	60	PAOZZ	1680-00-839-1756	97499	205-030-493-1	..HANDLE ASSY,CABIN R....UHE,UHH,UHV,UHX	EA	1
31	61	XCFZZ		97499	205-030-613-7	.HANDLE INSTL....UHE,UHH,UHV,UHX	EA	1
31	62	PAOZZ	5310-00-016-7181	96906	MS21083D5	..NUT,SELF-LOCKING,HE....UHE,UHH,UHV,UHX	EA	2
31	63	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT....UHE,UHH,UHV,UHX	EA	2
31	64	PAOZZ	5340-00-128-6729	97499	205-030-626-7	..HANDLE,BOW....UHE,UHH,UHV,UHX	EA	1
31	65	XDOZZ		88044	AN525-10R22	.SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	4
31	66	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....UHE,UHH,UHV,UHX	EA	4
31	67	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHE,UHH,UHV,UHX	EA	4
31	68	PAOZZ	1560-00-966-4371	97499	205-060-812-1	.FITTING,LATCH,TRANS....UHE,UHH,UHV,UHX	EA	1
31	69	XDOZZ		88044	AN525-10R22	.SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	8
31	70	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....UHE,UHH,UHV,UHX	EA	8
31	71	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHE,UHH,UHV,UHX	EA	8
31	72	PAOOO	1560-00-966-4402	97499	205-060-827-1	.FITTING,TRANSMISSIO....UHE,UHH,UHV,UHX	EA	2
31	73	PACZZ	3120-00-990-2581	97499	21-006B7-5-4	..BUSHING,SLEEVE....UHE,UHH,UHV,UHX	EA	2
31	74	XDOOZ	1560-00-587-4750	97499	205-030-627-7	.SUPPORT ASSEMBLY,CA U/O PN 205-030-615-3 & -5 ....UHE,UHH,UHV,UHX	EA	4
31	74	XDOOZ	1560-00-587-4750	97499	205-030-627-7	.SUPPORT ASSEMBLY,CA U/O PN 205-030-615-7,-91,-97, -99,-101, -105,-109,-113 & -131....UHE,UHH,UHV,UHX	EA	2
31	74	XDOOZ	1680-00-128-6731	97499	205-030-627-13	.SUPPORT,STANCHION U/O PN 205-030-615-7,-91,-97, -99,-101,-105,-109,-113 & -131....UHE,UHH,UHV,UHX	EA	2
31	75	XDOOZ	1560-00-128-6717	97499	205-030-258-1	..FITTING ASSEMBLY U/O PN 205-030-627-7....UHE,UHH,UHV,UHX	EA	1
31	75	XDOOZ	1680-00-128-6719	97499	205-030-258-5	..FITTING ASSY U/O PN 205-030-627-13....UHE,UHH,UHV,UHX	EA	1
31	76	PAOZZ	5325-00-573-4036	99879	34113-2	...STUD U/O PN 205-030-258-1....UHE,UHH,UHV,UHX	EA	1
31	77	PAOZO	5325-00-571-3765	97499	205-030-630-1	...STUD ASSEMBLY U/O PN 205-030-258-5....UHE,UHH,UHV,UHX	EA	1
31	78	PAOZZ	5310-00-167-0821	88044	AN960-616	...WASHER,FLAT U/O PN 205-030-258-1....UHE,UHH,UHV,UHX	EA	1
31	78	PAOZZ	5310-00-227-6534	97499	10W11-12-16-4	...WASHER,FLAT U/O PN 205-030-258-5....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
31	78	PAOZZ	5310-00-809-4061	96906	MS27183-15	...WASHER,FLAT U/O PN 205-030-258-5	UHE,UHH,UHV,UHX	EA	1
31	79	PAOZZ	5310-00-167-1300	88044	AN316-6R	...NUT,PLAIN,HEXAGON U/O PN 205-030-258-1	UHE,UHH,UHV,UHX	EA	1
31	79	PAOZZ	5310-00-582-6056	81352	AN310-5	...NUT,PLAIN,CASTELLAT U/O PN 205-030-258-5	UHE,UHH,UHV,UHX	EA	1
31	80	XDOZZ		88044	AN525-10R22	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	8
31	81	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	8
31	82	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	8
31	83	XCFZZ		97499	205-030-603-21	.FRAME ASSY-LH U/O PN 205-030-615-3	UHE,UHH,UHV,UHX	EA	1
31	83	XCFZZ		97499	205-030-603-33	.FRAME ASSY-LH U/O PN 205-030-615-5 & -7	UHE,UHH,UHV,UHX	EA	1
31	83	XCFZZ		97499	205-030-603-37	.FRAME ASSY-LH U/O PN 205-030-615-91,-97,-99, -101,-105,-109,-113,& -131	UHE,UHH,UHV,UHX	EA	1
31	84	PAOZZ	5305-00-984-4988	96906	MS35206-228	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	3
31	85	PAOZZ	1560-00-070-4603	97499	205-070-515-7	..HOOK ASSEMBLY,BLOOD BLOOD	UHE,UHH,UHV,UHX	EA	3
31	86	PAOZZ	5310-00-167-0816	88044	AN960-6	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	3
31	87	XCFZZ		97499	205-030-603-22	.FRAME ASSY-RH U/O PN 205-030-615-3	UHE,UHH,UHV,UHX	EA	1
31	87	XCFZZ		97499	205-030-603-34	.FRAME ASSY-RH U/O PN 205-030-615-5 & -7	UHE,UHH,UHV,UHX	EA	1
31	87	PBDDD	1560-00-152-3509	97499	205-030-603-38	.FRAME ASSY,CABIN RD RH U/O PN 205-030-615-91,-97,-99,-101,-105,-109,-113,&-131	UHE,UHH,UHV,UHX	EA	1
31	88	PAOZZ	5305-00-984-4988	96906	MS35206-228	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	3
31	89	PAOZZ	1560-00-070-4603	97499	205-070-515-7	..HOOK ASSEMBLY,BLOOD	UHE,UHH,UHV,UHX	EA	3
31	90	PAOZZ	5310-00-167-0816	88044	AN960-6	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	3
31	91	PAFFF	1560-00-924-8252	97499	205-030-602-49	.PANEL,FUSELAGE,AIRC LH USBL EFF 62-2106 THRU 70-16518,RPLS NSN 1560-00-069-3413	UHE,UHH,UHV,UHX	EA	1
31	91	PAFFF	1560-00-158-9197	97499	205-030-602-55	.PANEL ASSEMBLY,CABI LH USBL EFF 71-20000 & SUBSEQUENT	UHE,UHH,UHV,UHX	EA	1
31	92	PAFFF	1560-00-924-8250	97499	205-030-602-50	.PANEL,FUSELAGE,AIRC RH	UHE,UHH,UHV,UHX	EA	1
31	93	PAFFF	1560-00-950-9853	97499	205-030-601-125	.PANEL,FUSELAGE,AIRC USBL EFF 65-9811 THRU 70-16518	UHE,UHH,UHV,UHX	EA	1
31	93	PBFFF	1560-00-158-9195	97499	205-030-601-137	.PANEL ASSEMBLY, CAB U/O PN 205-030-615-131	UHE,UHH,UHV,UHX	EA	1
31	93	PAFFF	1560-00-102-8574	97499	205-030-615-99H	.PANEL,CABIN ROOF	UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-108-1	.SUPPORT INSTL-LH U/O PN 205-030-615-99, -101,& -105	UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-108-5	.SUPPORT INSTL-LH U/O PN 205-030-615-109	UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-108-7	.SUPPORT INSTL-LH U/O PN 205-030-615-131	UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-108-2	.SUPPORT INSTL-RH U/O PN 205-030-615-99, -101,& -105	UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-108-6	.SUPPORT INSTL-RH U/O PN 205-030-615-109	UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-108-8	.SUPPORT INSTL-RH U/O PN 205-030-615-131	UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-619-1	.LONGERON INSTL-LH	UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-030-619-2	.LONGERON INSTL-RH	UHE,UHH,UHV,UHX	EA	1
31	93A	PADZZ	1560-00-176-1001	97499	204-030-619-143	..BRACKET,LH	UHB	EA	1
31	93A	PBDZZ	1560-01-153-2081	97499	204-030-619-144	..BRACKET,CABIN,RIG	UHE,UHH,UHV,UHX	EA	1
31	94	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	3
31	95	PAOZZ	5340-00-775-5953	97499	204-030-480-2	..STRIKE,CATCH U/O PN 205-030-619-1	UHE,UHH,UHV,UHX	EA	1
31	95	PAOZZ	5340-00-779-2464	97499	204-030-480-1	..STRIKE,CATCH U/O PN 205-030-619-2	UHE,UHH,UHV,UHX	EA	1
31	96	PAOZZ	5310-00-761-4221	96906	MS21073L3	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
31	97	PAOZZ	5310-00-764-7282	96906	MS21047L3	..NUT,SELF-LOCKING,PL..........................UHE,UHH,UHV,UHX	EA	1
31	98	PAOZZ	5305-00-719-5405	96906	MS24694S56	..SCREW,MACHINE................................UHE,UHH,UHV,UHX	EA	1
31	99	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	2
31	100	PAOZZ	5310-00-263-2862	96906	MS21045C3	..NUT,SELF-LOCKING,HE HEXAGON..................UHE,UHH,UHV,UHX	EA	1
31	101	PAOZZ	5305-00-180-0014	88044	AN525-10R12	..SCREW,MACHINE................................UHE,UHH,UHV,UHX	EA	1
31	102	PAOZZ	5340-00-771-2515	97499	204-030-798-5	..STRIKE,CATCH.................................UHE,UHH,UHV,UHX	EA	1
31	103	PAOZZ	5340-00-070-4585	97499	204-030-985-9	..STRIKE,CATCH.................................UHE,UHH,UHV,UHX	EA	1
31	104	PAOZZ	5340-00-070-4604	97499	204-030-985-11	..STRIKE,CATCH.................................UHE,UHH,UHV,UHX	EA	3
31	105	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..........................UHE,UHH,UHV,UHX	EA	1
31		XCFZZ		97499	205-031-625-1	.FAIRING INSTL,HOIST...........................UHE,UHH,UHV,UHX	EA	1
31	106	MFOZZ		20309	ES-B-213075	.COVER,AS-1922/ARC SEE FIG.5A,5B FOR NHA.............UHE,UHX	EA	2
31	107	PAOZZ	5305-00-957-7811	96906	MS24693S272	..SCREW,MACHINE..UHE,UHX	EA	8
31	107A	XCFZZ		20309	ES-F-212986	ANTENNA SEE FIG. 5A & 5B FOR NHA.......................UHE,UHX	EA	1
31	108	XDFZZ		82831	P102D10-2	.PLUG..UHE,UHX	EA	6
31	109	PAFZZ	5325-00-704-0704	29372	S102D10-08	.SLEEVE..UHE,UHX	EA	6

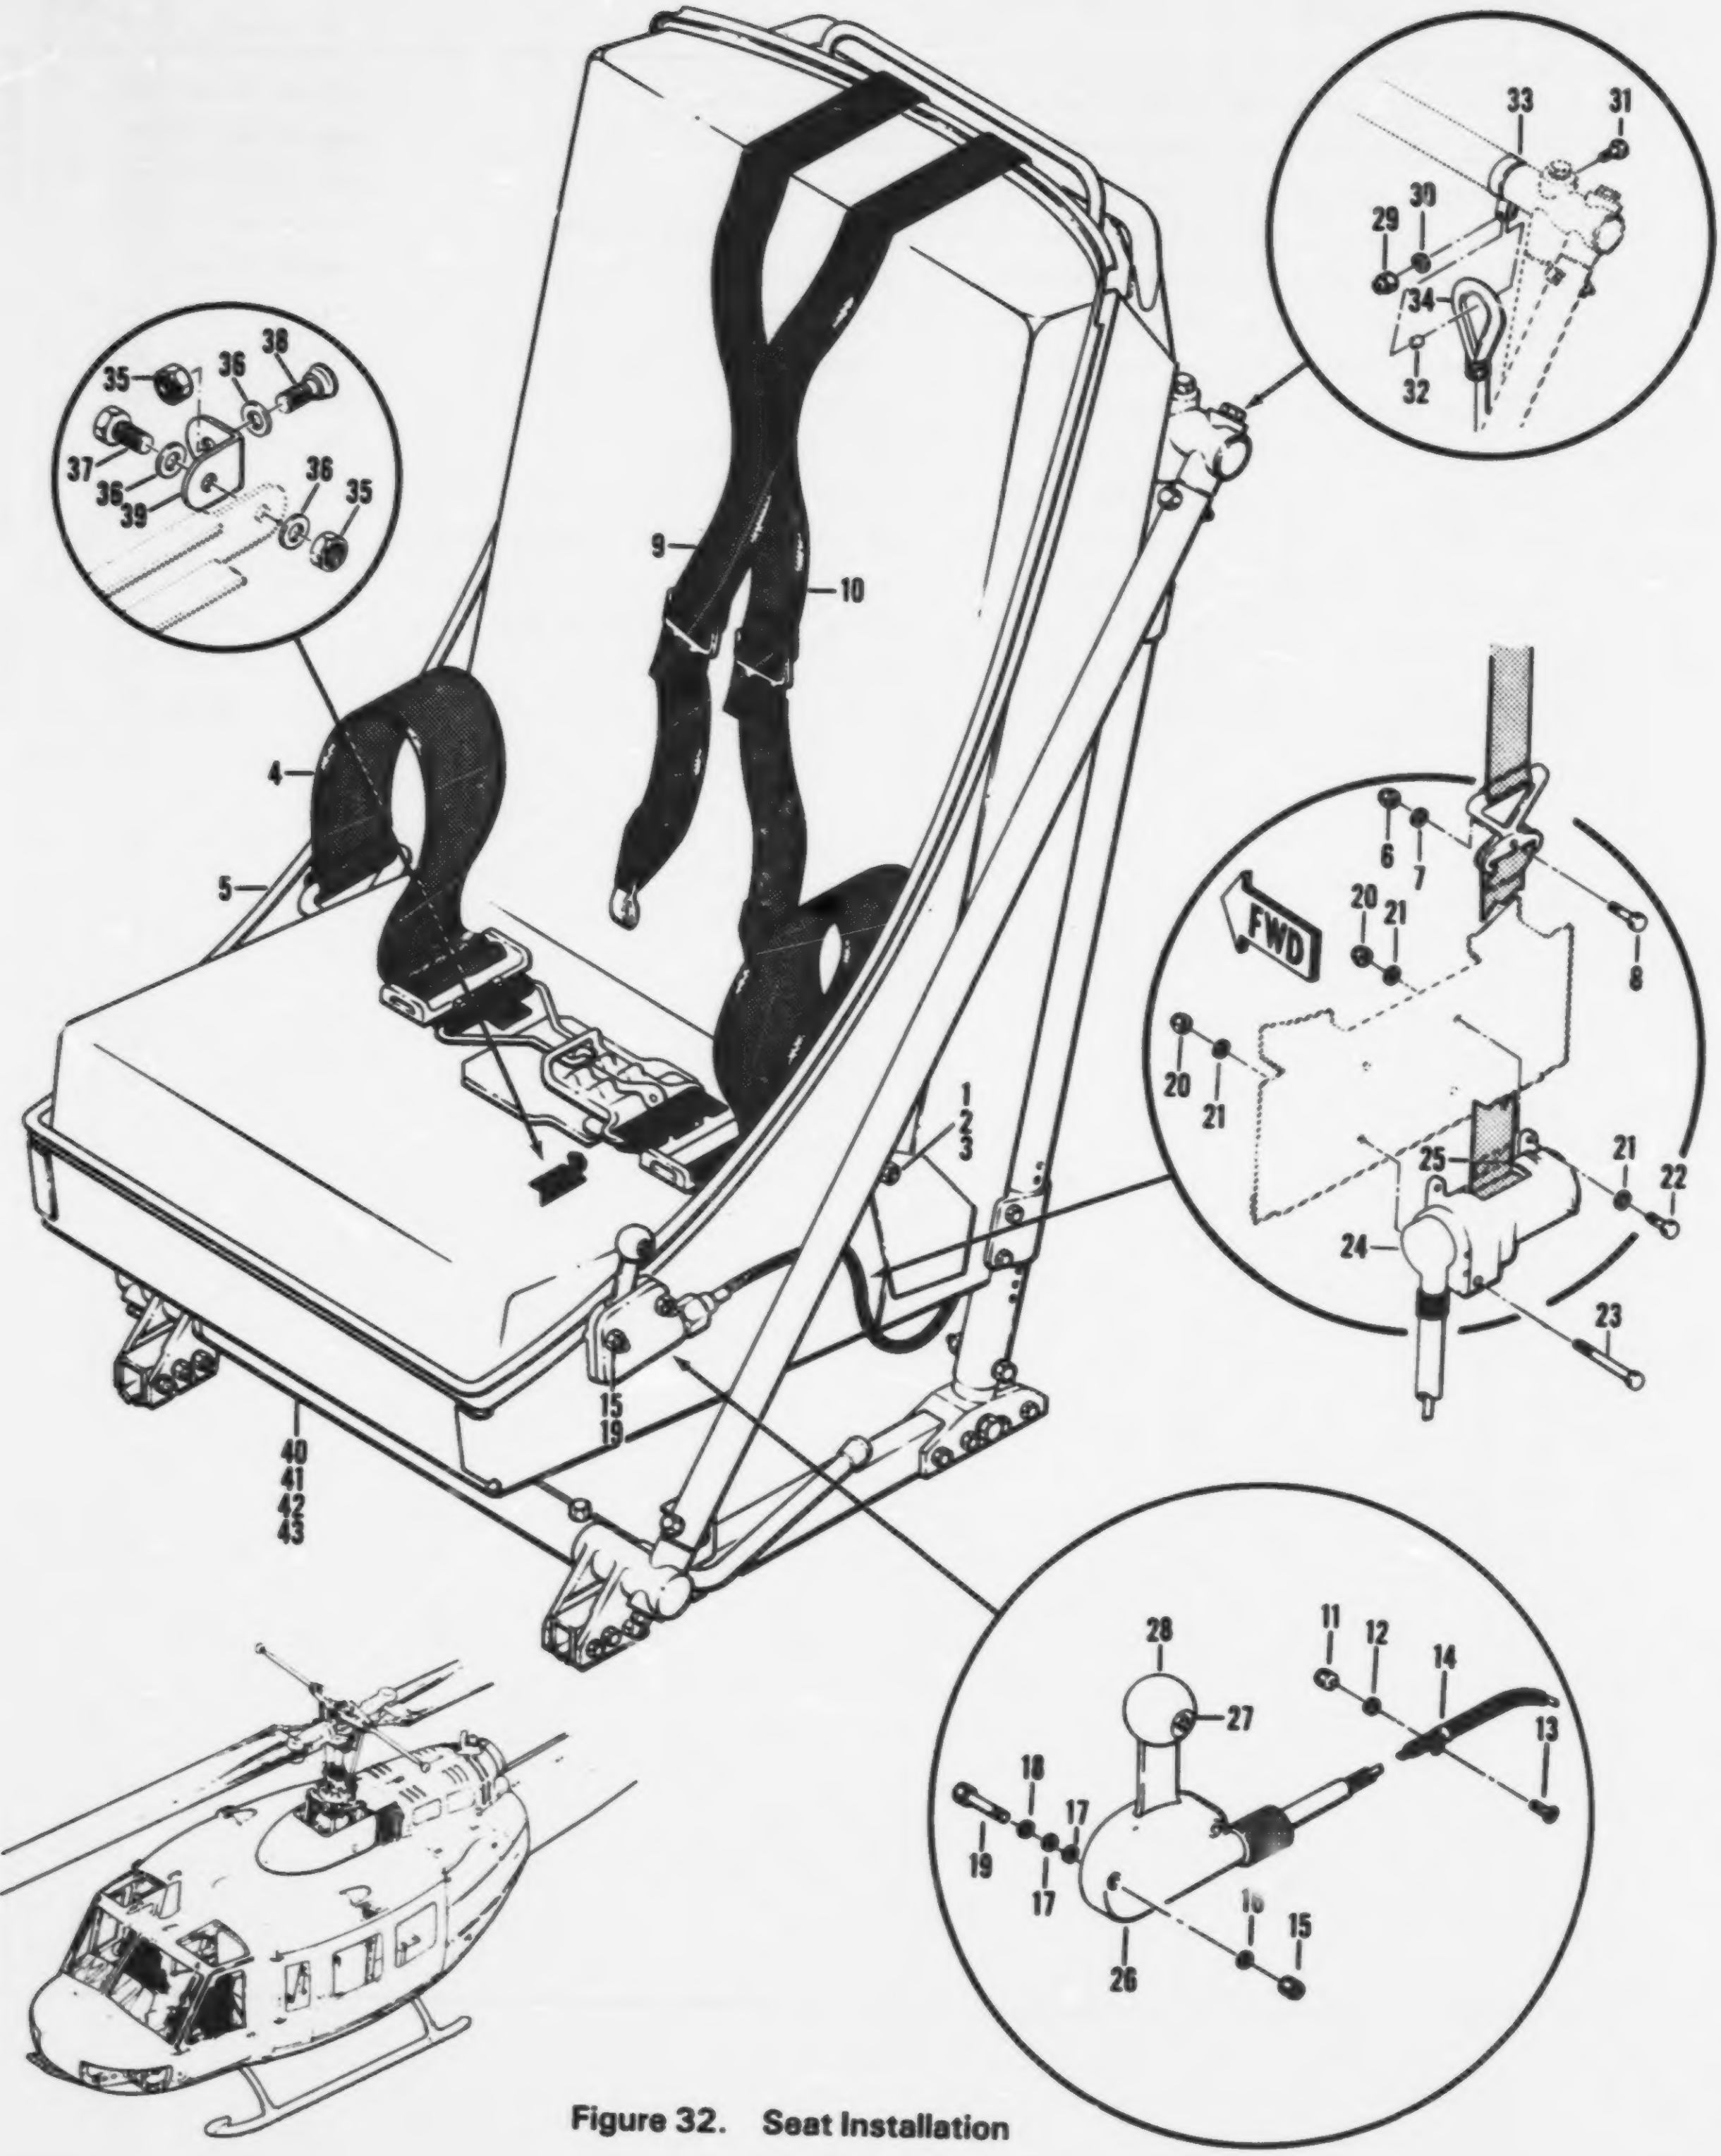
33
31
30
29
34
32
35
36
38
37
36
39
36
35
9
10
4
5
6
7
20
21
8
FWD
20
21
1
2
3
21
22
25
24
23
15
19
40
41
42
43
28
27
11
12
14
13
18
17
19
17
16
15
26

Figure 32. Seat Installation

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
32		XCFZZ		97499	204-070-700-11	SEAT INSTL,CO-PILOT USBL EFF 60-3546 THRU 61-719,61-736 THRU 61-803 SEE FIG.6 FOR NHA..........UHB	EA	1
32		XCFZZ		97499	204-070-700-13	SEAT INSTL,CO-PILOT USBL EFF 61-720 THRU 61-735 SEE FIG.6 FOR NHA..........UHB	EA	1
32		AOOOO	1560-00-H25-4473	97499	204-070-468-3	SEAT ASSEMBLY-COPIL USBL EFF 62-1872 THRU 62-1996 SEE FIG.6 FOR NHA..........UHB	EA	1
32		AOOOO	1560-00-H25-8607	97499	204-070-468-13	SEAT ASSEMBLY-COPIL USBL EFF 62-1997 THRU 62-12555 SEE FIG.6 FOR NHA..........UHB	EA	1
32		XCFZZ		97499	204-070-700-12	SEAT INSTL,PILOT USBL EFF 60-3546 THRU 61-803 SEE FIG.6 FOR NHA..........UHB	EA	1
32		AOOOO	1560-00-H25-4473	97499	204-070-468-3	SEAT ASSEMBLY-PILOT USBL EFF 62-1872 THRU 62-12555 SEE FIG.6 FOR NHA..........UHB	EA	1
32	1	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE..........UHB	EA	2
32	2	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..........UHB	EA	2
32	2	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT USBL EFF 62-1872 THRU 62-12555..........UHB	EA	2
32	3	PAOZZ	5306-00-156-2390	88044	AN24-11A	.BOLT,CLEVIS..........UHB	EA	2
32	4	PAOOZ	1680-00-516-6543	80049	54H19651	.BELT,AIRCRAFT SAFETY,LAP AERNO 45-1708..........UHB	EA	1
32	5	PAOZZ	1680-00-975-2987	07878	6284407	.SPRING,LAP BELT,WEB..........UHB	EA	1
32	6	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHB	EA	1
32	7	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB	EA	1
32	8	PAOZZ	5306-00-182-2059	88044	AN3H6A	.BOLT,MACHINE..........UHB	EA	1
32	9	XOOOO	1680-00-555-2938	07878	570677	.HARNESS,AIRCRAFT SA..........UHB	EA	1
32	10	PAOZZ	1680-00-853-5464	98750	65D34083-7	.SPRING,WEBBING RETA USE-AFT-CMPL-W MWO 55-1680-200-20/2 ....UHB	EA	3
32	11	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHB	EA	1
32	12	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT USBL EFF 60-3546 THRU 61-803..........UHB	EA	1
32	12	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT USBL EFF 62-1872 THRU 62-12555..........UHB	EA	1
32	13	PAOZZ	5305-00-990-6444	96906	MS35207-261	..SCREW,MACHINE..........UHB	EA	1
32	14	PAOZZ	5340-00-533-3505	91996	EAB700-3	.CLAMP,LOOP..........UHB	EA	1
32	15	PAOZZ	5310-00-616-3634	72962	22K2-02	.NUT,SELF-LOCKING USBL EFF 60-3546 THRU 62-12555..........UHB	EA	2
32	16	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..........UHB	EA	2
32	17	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT USBL EFF 60-3546 THRU 62-12555..........UHB	EA	4
32	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT USBL EFF 60-3546 THRU 62-12555..........UHB	EA	2
32	19	PAOZZ	5306-00-182-2061	88044	AN3H10A	.BOLT,MACHINE..........UHB	EA	2
32	20	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHB	EA	4
32	21	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT USBL EFF 60-3546 THRU 61-803..........UHB	EA	7
32	21	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT USBL EFF 62-1872 THRU 62-12555..........UHB	EA	4
32	22	PAOZZ	5306-00-182-2058	88044	AN3H5A	.BOLT,MACHINE..........UHB	EA	3
32	23	PAOZZ	5306-00-182-2012	88044	AN3H23A	.BOLT,MACHINE..........UHB	EA	1
32	24	AOOOZ	1680-00-710-1844	45402	0106176-0	.REEL,SHOULDER HARNE SEE FIG 42A FOR NHA..........UHB	EA	1
32	24	PAOZL	1680-00-775-4182	45402	0101385-01	..REEL ASSY,INERTIA L..........UHB	EA	1
32	25	PAOZZ	1680-00-632-9608	45402	0101238-01	..STRAP ASSY,REEL..........UHB	EA	1
32	26	PAOOO	1680-00-013-1279	45402	0101389-09	..CONTROL,INERTIAL RE..........UHB	EA	1
32	27	PAOZZ	5305-00-719-5403	96906	MS24694S54	...SCREW,MACHINE..........UHB	EA	1
32	28	PAOZZ	5355-00-667-9155	80205	NAS1218125	...KNOB..........UHB	EA	1
32	29	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHB	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
32	30	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT....................UHB	EA	2
32	31	PAOZZ	5306-00-182-2061	88044	AN3H10A	.BOLT,MACHINE....................UHB	EA	2
32	32	PAOZZ	5365-00-662-8788	80205	NAS43DD3-36	.SPACER,SLEEVE....................UHB	EA	2
32	33	MFOZZ	5340-00-624-6777	97499	204-070-706-17	.CLAMP,LOOP....................UHB	EA	2
32	34	PAOZZ	1680-00-709-6077	97499	204-070-718-9	.CORD ASSEMBLY,ELAST....................UHB	EA	2
32	35	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....................UHB	EA	3
32	36	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....................UHB	EA	5
32	37	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE....................UHB	EA	2
32	38	PAOZZ	5325-00-285-6297	88044	AN227-1086	.STUD,SNAP FASTEN....................UHB	EA	1
32	39	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE....................UH3	EA	1
32	40	PB000	1680-00-766-6366	97499	204-070-706-51	.SEAT,AIRCRAFT U/O PN 204-070-700-11 &-12 SEE FIG.35 FOR BREAKDOWN....................UHB	EA	1
32	41	PB000	1680-00-961-1342	97499	204-070-706-53	.FRAME ASSEMBLY,SEAT U/O PN 204-070-700-13 SEE FIG.35 FOR BREAKDOWN....................UHB	EA	1
32	42	PB000	1680-00-762-0051	97499	204-070-099-1	.FRAME,BRACKET ASSY U/O PN 204-070-468-3 SEE FIG.35 FOR BREAKDOWN....................UHB	EA	1
32	43	PB000	1680-00-762-0054	97499	204-070-099-3	.FRAME,BUCKET ASSEMB U/O PN 204-070-468-13 SEE FIG.35 FOR BREAKDOWN....................UHB	EA	1

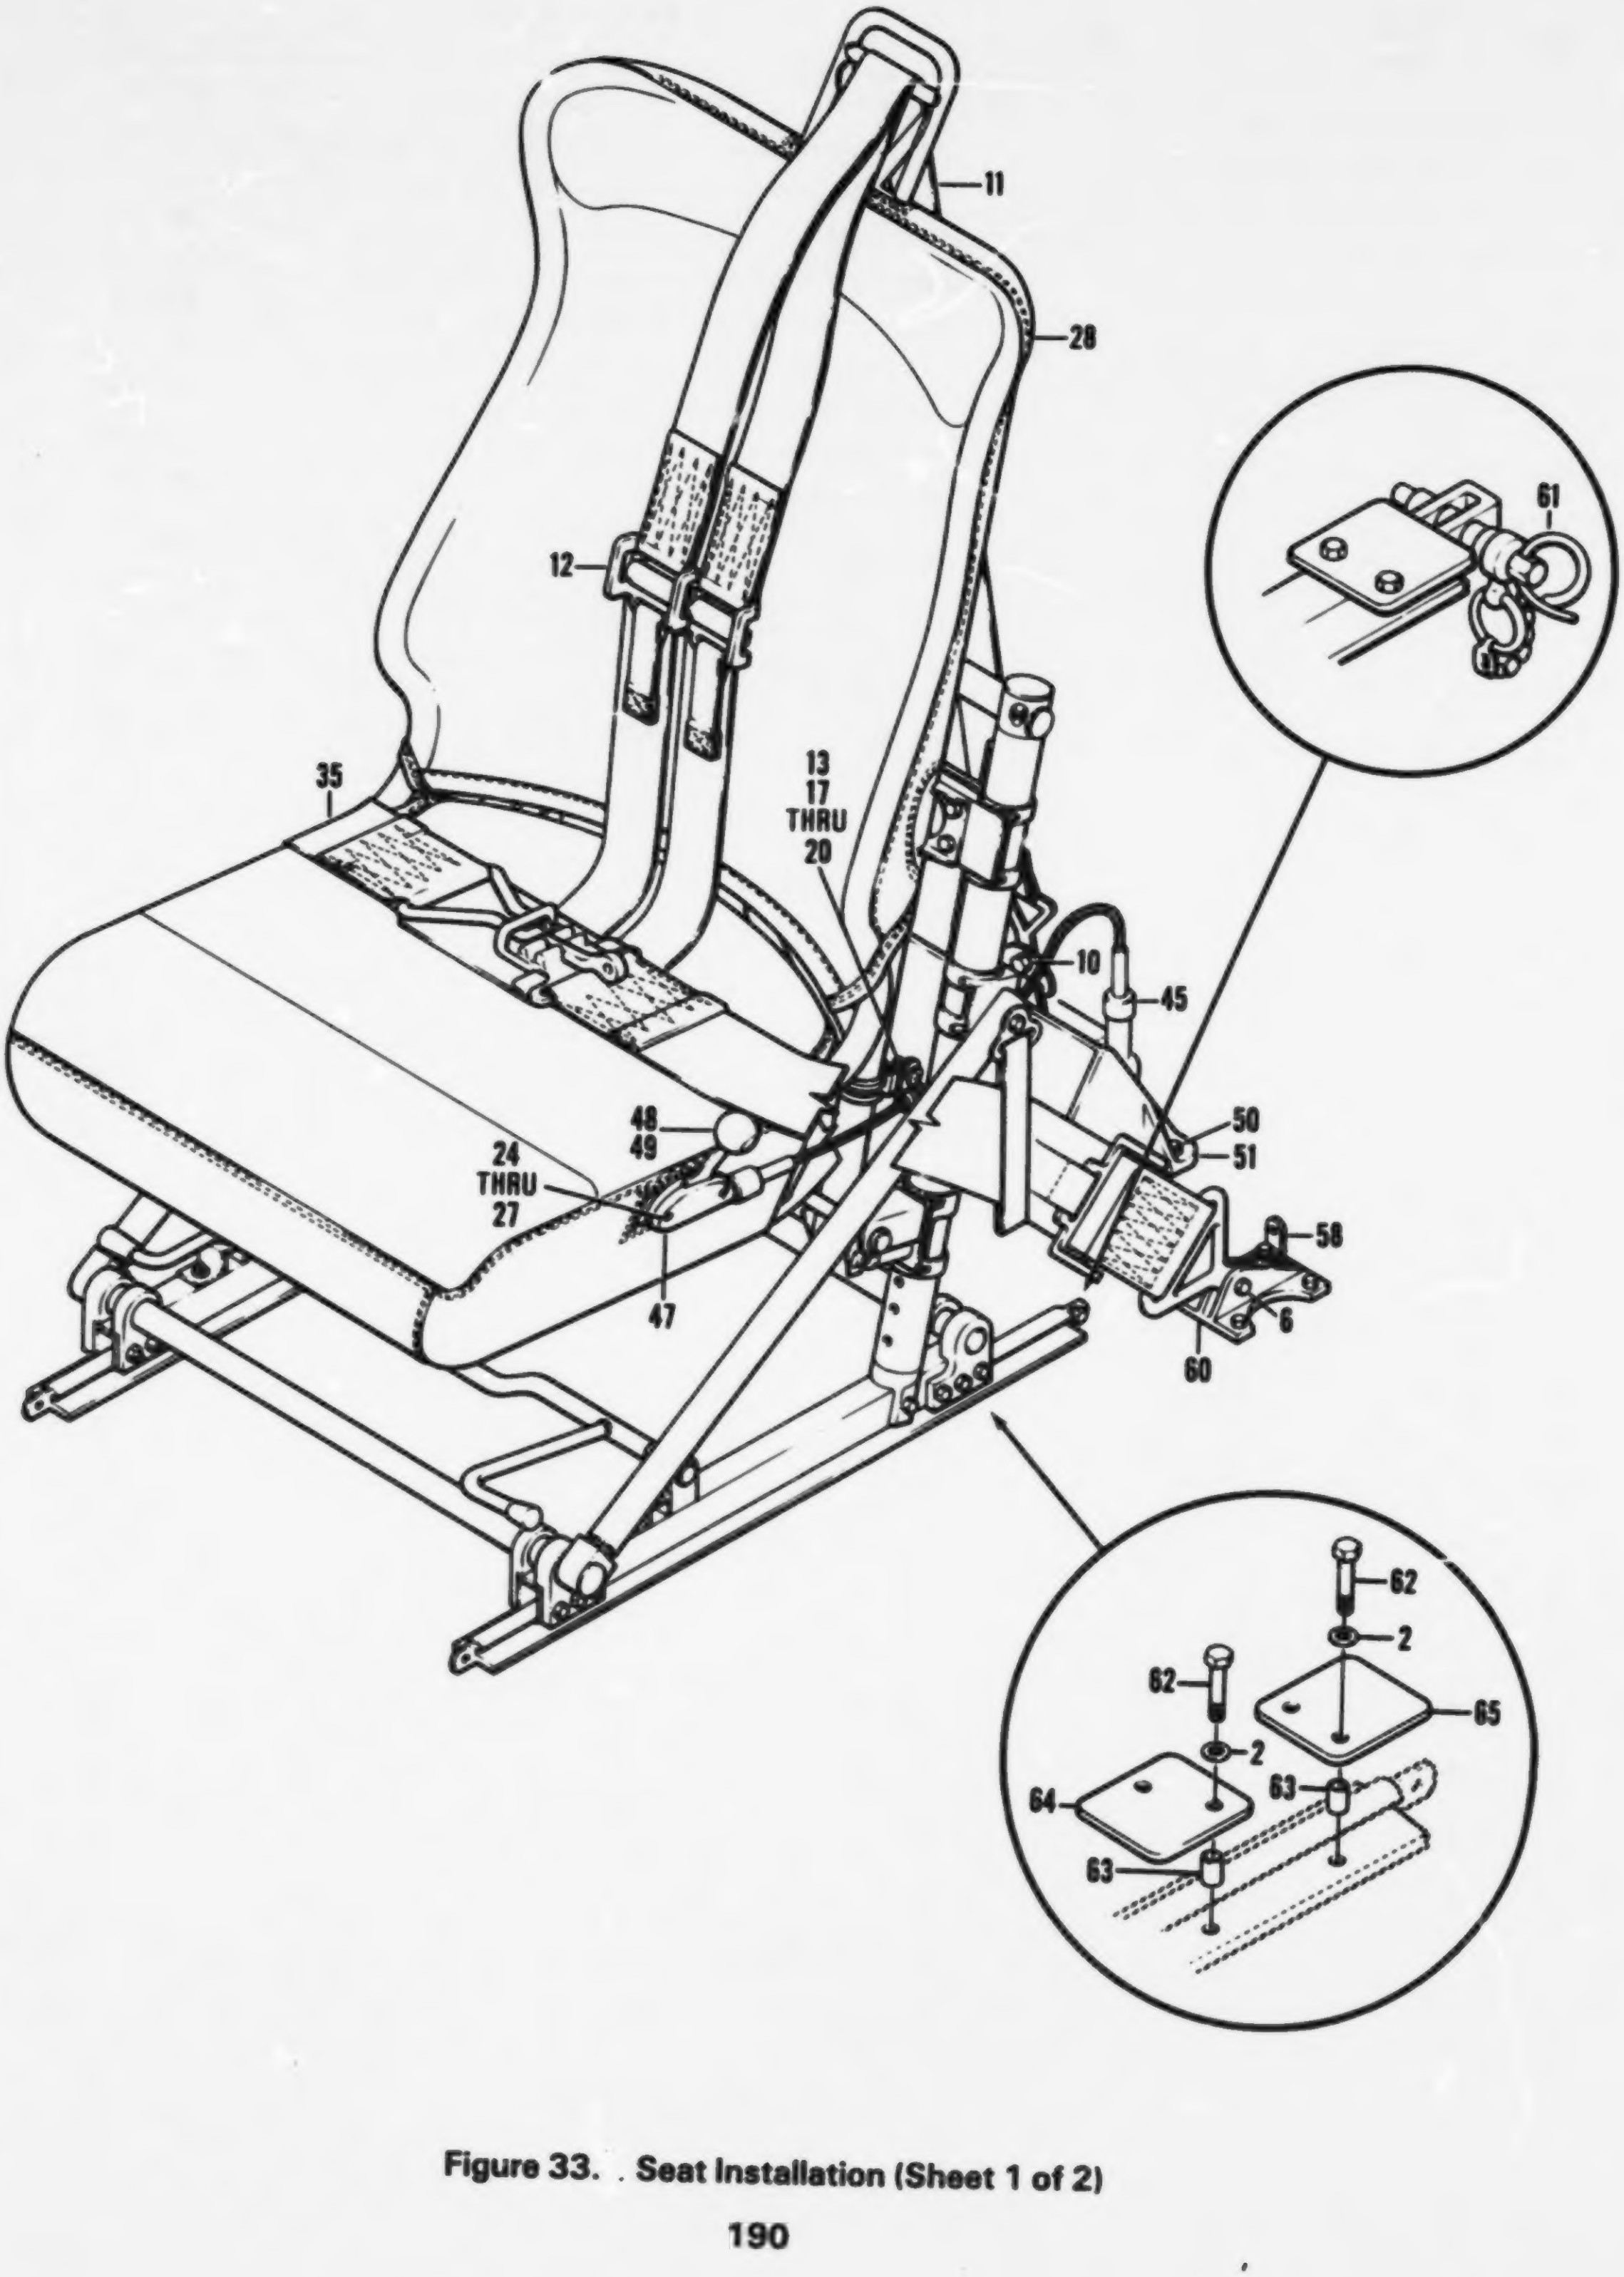
11
28
61
12
35
13
17
THRU
20
10
45
48
49
24
THRU
27
50
51
58
6
47
60
62
2
62
65
2
64
63
63

Figure 33. . Seat Installation (Sheet 1 of 2)

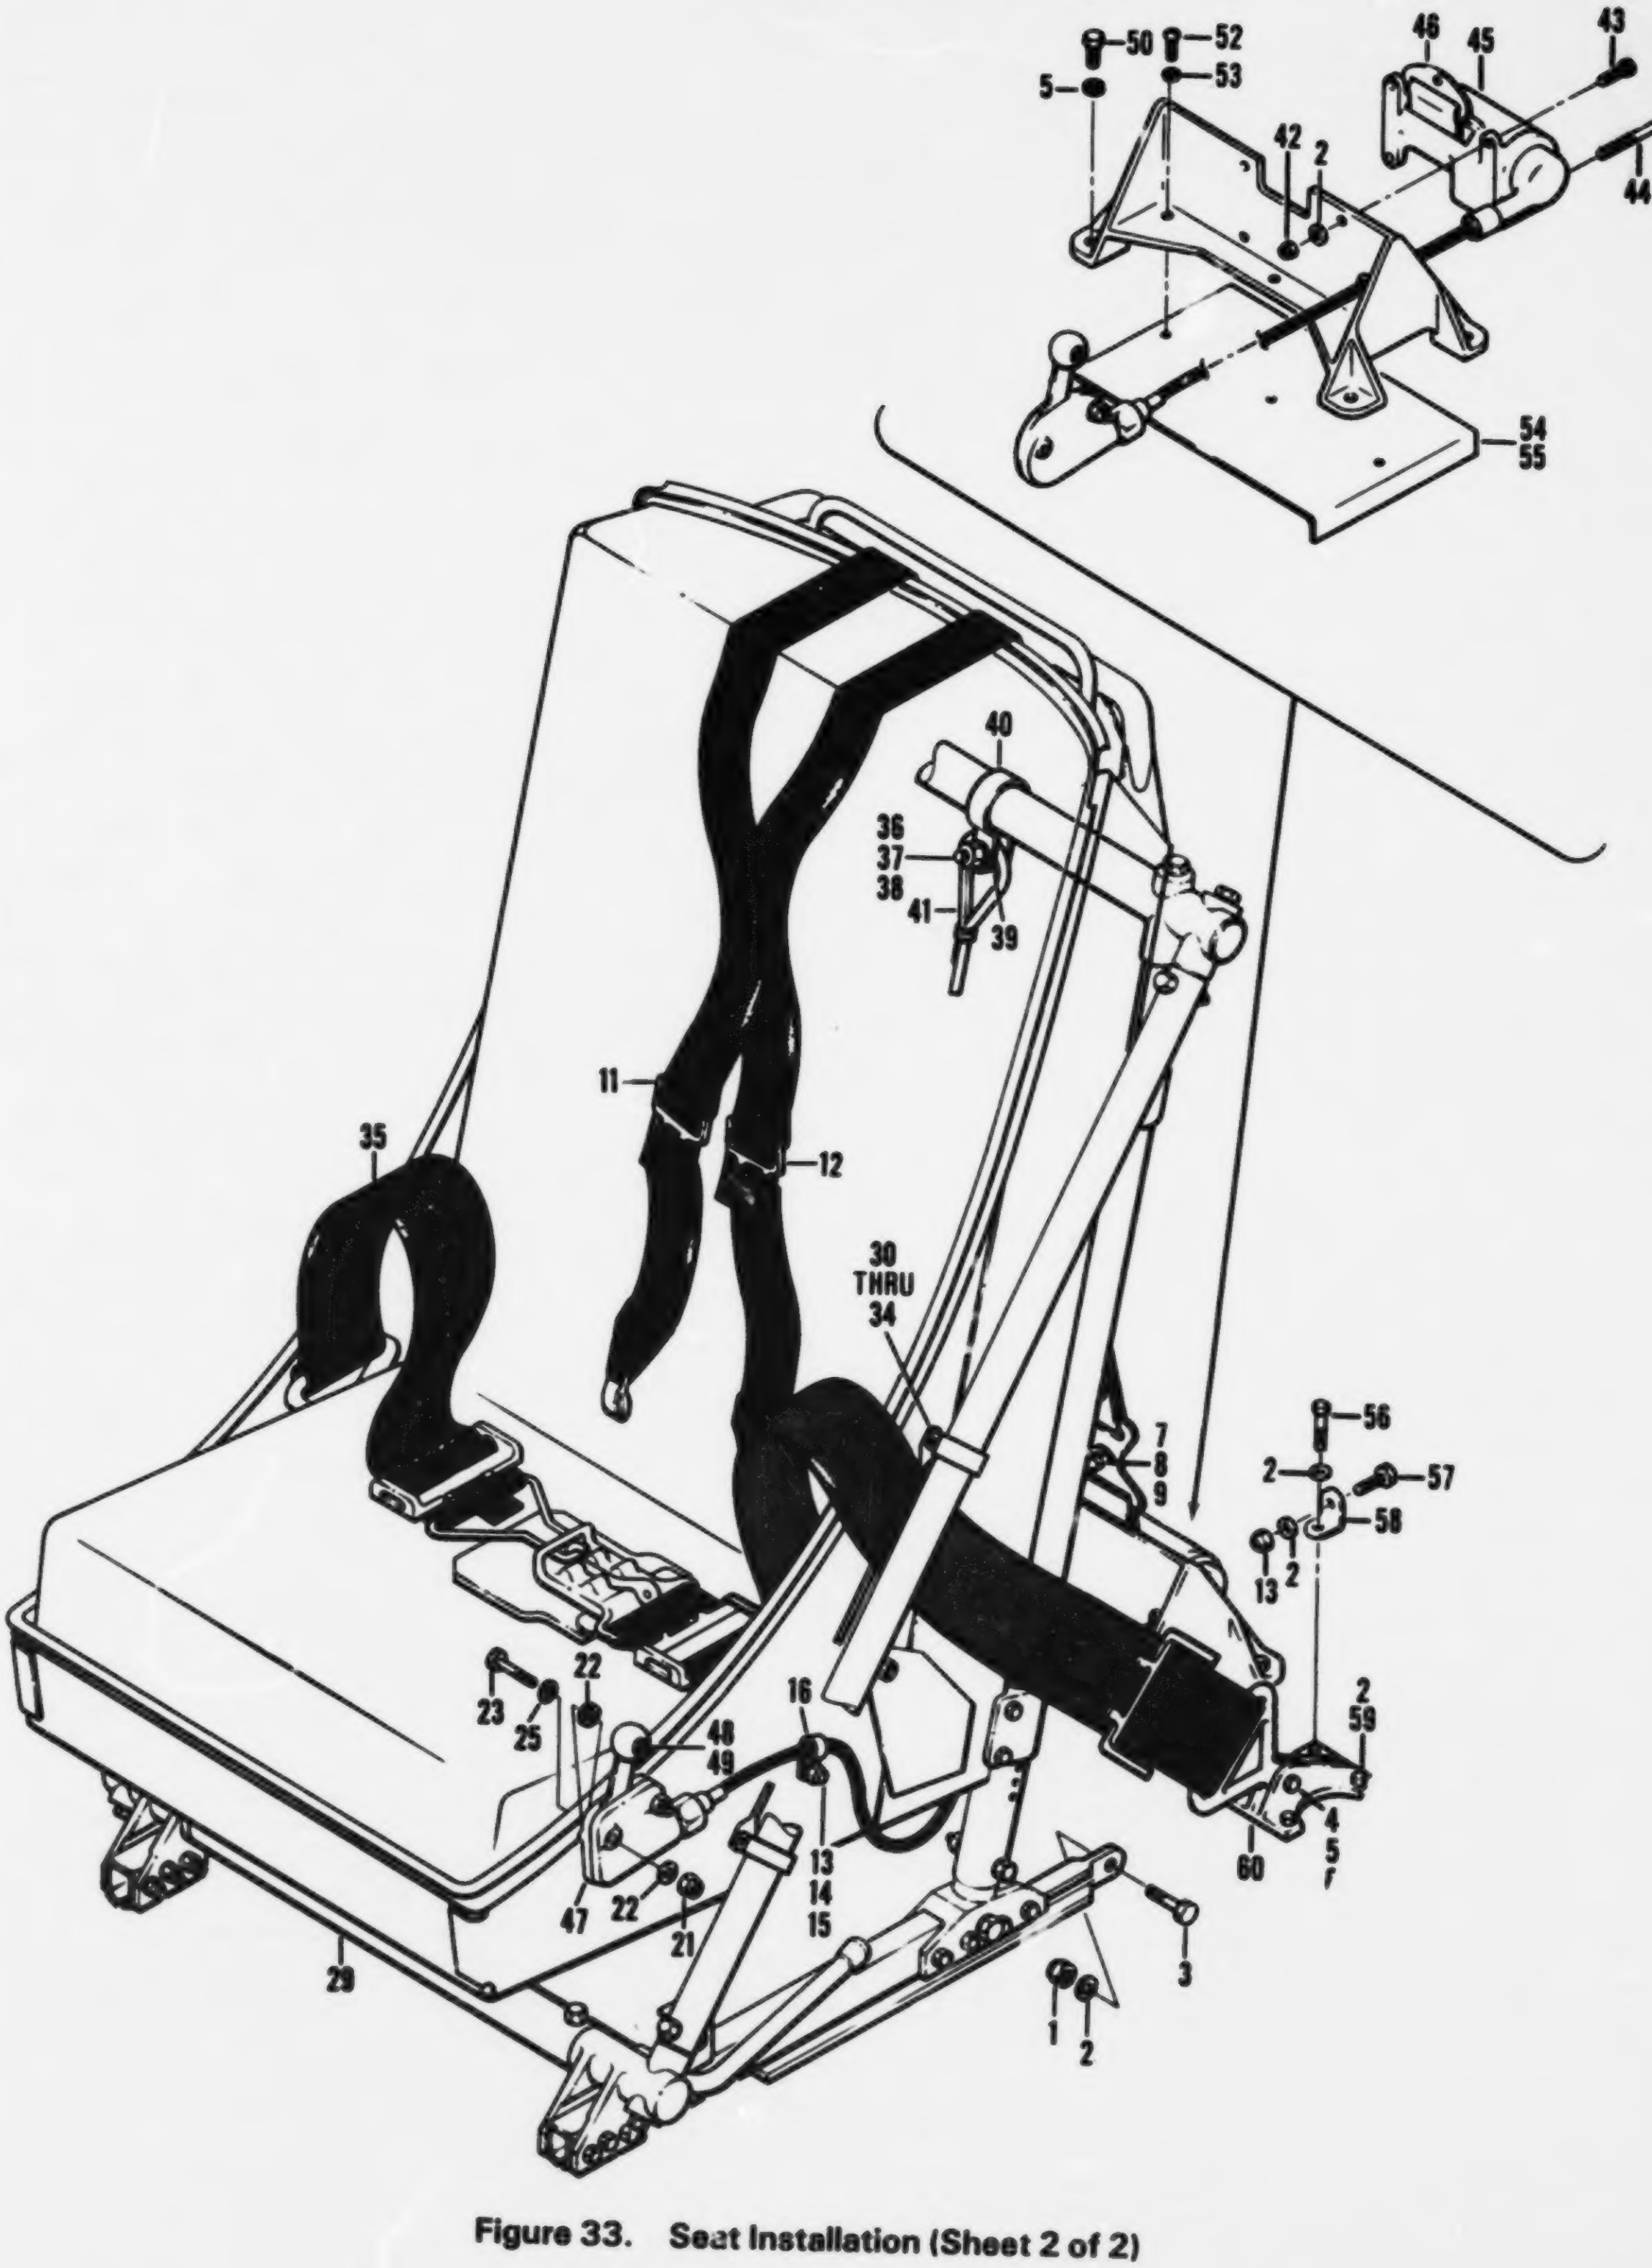
50
52
5
53
46
45
43
42
2
44
54
55
40
36
37
38
41
39
11
12
35
30
THRU
34
7
8
9
56
2
57
58
13
2
23
22
25
16
48
49
2
59
4
5
60
13
14
15
47
22
21
29
3
1
2

Figure 33. Seat Installation (Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
33		XCFZZ		97499	204-070-576-3	SEAT INSTL,CO-PILOT USBL EFF 63-8500 THRU 63-8658 SEE FIG.6 FOR NHA	EA	1
33		XCFZZ		97499	204-070-576-9	SEAT INSTL,CO-PILOT USBL EFF (UH-1B) 63-8659 THRU 64-14100 & (UH-1C) 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA UHM	EA	1
33		XCFZZ		97499	204-072-722-11	SEAT INSTL,CO-PILOT USBL EFF 65-9416 THRU 66-15022 SEE FIG.6 FOR NHA UHM	EA	1
33		XCFZZ		97499	204-072-366-3	SEAT INSTL,CO-PILOT USBL EFF 66-15023 & SUBSEQUENT SEE FIG.6 FOR NHA UHM	EA	1
33		XCFZZ		97499	204-070-576-1	SEAT INSTL,PILOT USBL EFF (UH-1B) 63-8500 THRU 64-14100 & (UH-1C) 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA UHM	EA	1
33		XCFZZ		97499	204-072-722-9	SEAT INSTL,PILOT USBL EFF 65-9416 THRU 66-15022 SEE FIG.6 FOR NHA UHM	EA	1
33		XCFZZ		97499	204-072-366-1	SEAT INSTL,PILOT USBL EFF 66-15023 & SUBSEQUENT SEE FIG.6 FOR NHA UHM	EA	1
33	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX HEXAGON UHM	EA	2
33	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT UHM	EA	V
33	3	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE UHM	EA	2
33	4	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHM	EA	2
33	5	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT UHM	EA	6
33	6	PAOZZ	5306-00-156-2700	88044	AN24-16	.BOLT,CLEVIS UHM	EA	2
33	7	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHM	EA	1
33	8	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT U/O:PN 204-070-576-1,-3,& -9 UHM	EA	1
33	8	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT U/O:PN 204-072-722-9,-11,204-072-366-1,& -2 UHM	EA	2
33	9	PAOZZ	5306-00-292-8252	88044	AN4H7A	.BOLT,MACHINE U/O:PN 204-070-576-1,-3,& -9 UHM	EA	1
33	10	PAOZZ	5306-00-156-2695	88044	AN24-11	.BOLT,CLEVIS U/O:PN 204-072-722-9,-11,204-072-366-1,& -3 UHM	EA	1
33	11	XD000		07878	570677	.HARNESS,AIRCRAFT SA UHM	EA	1
33	12	PAOZZ	1680-00-853-5464	98750	65034083-7	..SPRING,WEBBING RETA USE-AFT-CMPL-W MWO 55-1680-200-20/2 UHM	EA	3
33	13	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHM	EA	1
33	14	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O:PN 204-070-576-1,-3,& -9 UHM	EA	1
33	15	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE U/O:PN 204-070-576-1,-3,& -9 UHM	EA	1
33	16	PAOZZ	5340-00-533-3505	81996	EAB700-3	.CLAMP,LOOP U/O:PN 204-070-576-1,-3,& -9 UHM	EA	1
33	17	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O:PN 204-072-722-9,& -11 UHM	EA	1
33	18	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE U/O:PN 204-072-722-9,& -11 UHM	EA	1
33	19	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP U/O:PN 204-072-722-9,& -11 UHM	EA	1
33	20	PAOZZ	5340-00-993-1470	81996	EAB700D18	.CLAMP,LOOP U/O:PN 204-072-722-9,& -11 UHM	EA	1
33	21	PAOZZ	5310-00-616-3634	72962	22K2-02	.NUT,SELF-LOCKING U/O:PN 204-070-576-1,-3,& -9 UHM	EA	2
33	22	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O:PN 204-070-576-1,-3,& -9 UHM	EA	6
33	23	PAOZZ	5306-00-182-2061	88044	AN3H10A	.BOLT,MACHINE U/O:PN 204-070-576-1,-3,& -9 UHM	EA	2
33	24	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER U/O:PN:204-072-722-9,-11,204-072-366-1,& -3 UHM	EA	2
33	25	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O:PN 204-072-722-9,-11,204-072-366-1,& -3 UHM	EA	2
33	26	PAOZZ	5305-00-993-1851	96906	MS35207-267	.SCREW,MACHINE U/O:PN 204-072-722-9,-11,204-072-366-1,& -3 UHM	EA	2
33	27	PAOZZ	5365-00-337-2848	80205	NAS43DD3-10	.SPACER,SLEEVE U/O:PN 204-072-366-1,& -3 UHM	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
33	28	XDOOO		97499	204-070-099-7	.SEAT,AIRCRAFT U/O PN 204-070-576-5 SEE FIG.35 FOR BREAKDOWN	UHM	EA	1
33	28	PAOOO	1680-00-021-8997	09986	AL1018-5	.SEAT,AIRCRAFT U/O PN 204-070-576-1,-9, 204-072-722-9 & -11 SEE FIG.36 FOR BREAKDOWN	UHM	EA	1
33	28	AOOOZ		09986	178062-3	.SEAT,AIRCRAFT U/O PN 204-072-366-3 SEE FIG.37 FOR BREAKDOWN	UHM	EA	1
33	28	AOOOZ		09986	178061-3	.SEAT,AIRCRAFT U/O PN 204-072-366-1 SEE FIG.37 FOR BREAKDOWN	UHM	EA	1
33	28	AOOOO		97499	204-070-576-7	.SEAT ASSEMBLY U/O PN 204-070-576-3		EA	1
33	29	PBOOO	1680-00-762-0052	97499	204-070-099-9	..FRAME,BUCKET ASSEMB U/O PN 204-070-576-7 SEE FIG.35 FOR BREAKDOWN		EA	1
33	30	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING		EA	4
33	31	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT		EA	4
33	32	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE		EA	4
33	33	PAOZZ	5340-00-193-0112	88044	AN735-20	..CLAMP,LOOP		EA	4
33	34	XBOZZ		97499	204-070-580-1	..HANGER		EA	2
33	35	PAOZZ	1680-00-967-1831	97499	205-070-749-1	..BELT,AIRCRAFT SAFET		EA	1
33	36	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING		EA	2
33	37	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT		EA	2
33	38	PAOZZ	5306-00-182-2061	88044	AN3H10A	..BOLT,MACHINE		EA	2
33	39	PAOZZ	5365-00-662-8788	80205	NAS43DD3-36	..SPACER,SLEEVE		EA	2
33	40	MFOZZ		97499	204-070-706-17	..CLAMP,LOOP		EA	2
33	41	PAOZZ	1680-00-709-6077	97499	204-070-718-9	..CORD ASSEMBLY,ELAST		EA	2
33	42	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING	UHM	EA	4
33	43	PAOZZ	5306-00-182-2059	88044	AN3H6A	.BOLT,MACHINE U/O:PN 204-070-576-1,-3,-9,& 204-072-722-9,-11	UHM	EA	3
33	44	PAOZZ	5306-00-182-2060	88044	AN3H7A	.BOLT,MACHINE U/O:PN 204-072-366-1,& -3	UHM	EA	3
33	44	PAOZZ	5306-00-182-2013	88044	AN3H24A	.BOLT,MACHINE	UHM	EA	1
33	45	PAODD	1680-00-710-1844	45402	0106176-0	.REEL,SHOULDER HARNE	UHM	EA	1
33	45	PAOLL	1680-00-775-4182	45402	0101385-01	..REEL ASSY,INERTIA L	UHM	EA	1
33	46	PAOZZ	1680-00-632-9608	45402	0101238-01	..STRAP ASSY,REEL	UHM	EA	1
33	47	PAOOO	1680-00-013-1279	45402	0101389-09	..CONTROL,INERTIAL RE	UHM	EA	1
33	48	PAOZZ	5305-00-719-5403	96906	MS24694S54	...SCREW,MACHINE	UHM	EA	1
33	49	PAOZZ	5355-00-667-9155	80205	NAS1218125	...KNOB	UHM	EA	1
33	50	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE	UHM	EA	4
33	51	PAOZZ	1680-00-762-0046	97499	204-070-597-1	.FITTING,FLOOR INERT	UHM	EA	1
33	52	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHM	EA	3
33	53	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT	UHM	EA	3
33	54	PAOZZ	1680-00-758-0230	97499	204-070-593-5	.DUCT ASSEMBLY,FLOOR	UHM	EA	1
33	55	PAOZZ	1680-00-762-0048	97499	204-070-593-1	.DUCT ASSEMBLY,FLOOR	UHM	EA	1
33	56	PAOZZ	5306-00-182-2059	88044	AN3H6A	.BOLT,MACHINE	UHM	EA	1
33	57	PAOZZ	5325-00-285-6297	88044	AN227-1086	.STUD,SNAP FASTEN	UHM	EA	1
33	58	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHM	EA	1
33	59	PAOZZ	5306-00-182-2058	88044	AN3H5A	.BOLT,MACHINE	UHM	EA	7
33	60	PAOZZ	1680-00-762-0047	97499	204-070-596-1	.FITTING,FLOOR,SAFET	UHM	EA	2
33	61	PAOZZ	1680-00-950-6938	97499	204-072-819-1	.STOP ASSEMBLY,QUICK RELEASE U/O PN 204-072-722-9 &-11		EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....	UHM		
33	62	PAOZZ	5306-00-192-2062	88044	AN3H11A	.BOLT,MACHINE..	UHM	EA	12
33	63	PAOZZ	5365-00-837-1482	80205	NAS43DD3-31	.SPACER,SLEEVE...	UHM	EA	8
33	64	PAOZZ	1680-00-851-8949	97499	204-072-065-5	.STOP,SEAT,PILOT AND U/O PN 204-072-722-9,-11,& 204-072-366-1,-3..	UHM	EA	2
33	65	PAOZZ	1680-00-936-2392	97499	204-072-085-7	.STOP,AIRCRAFT SEAT U/O PN 204-072-722-9............	UHM	EA	1

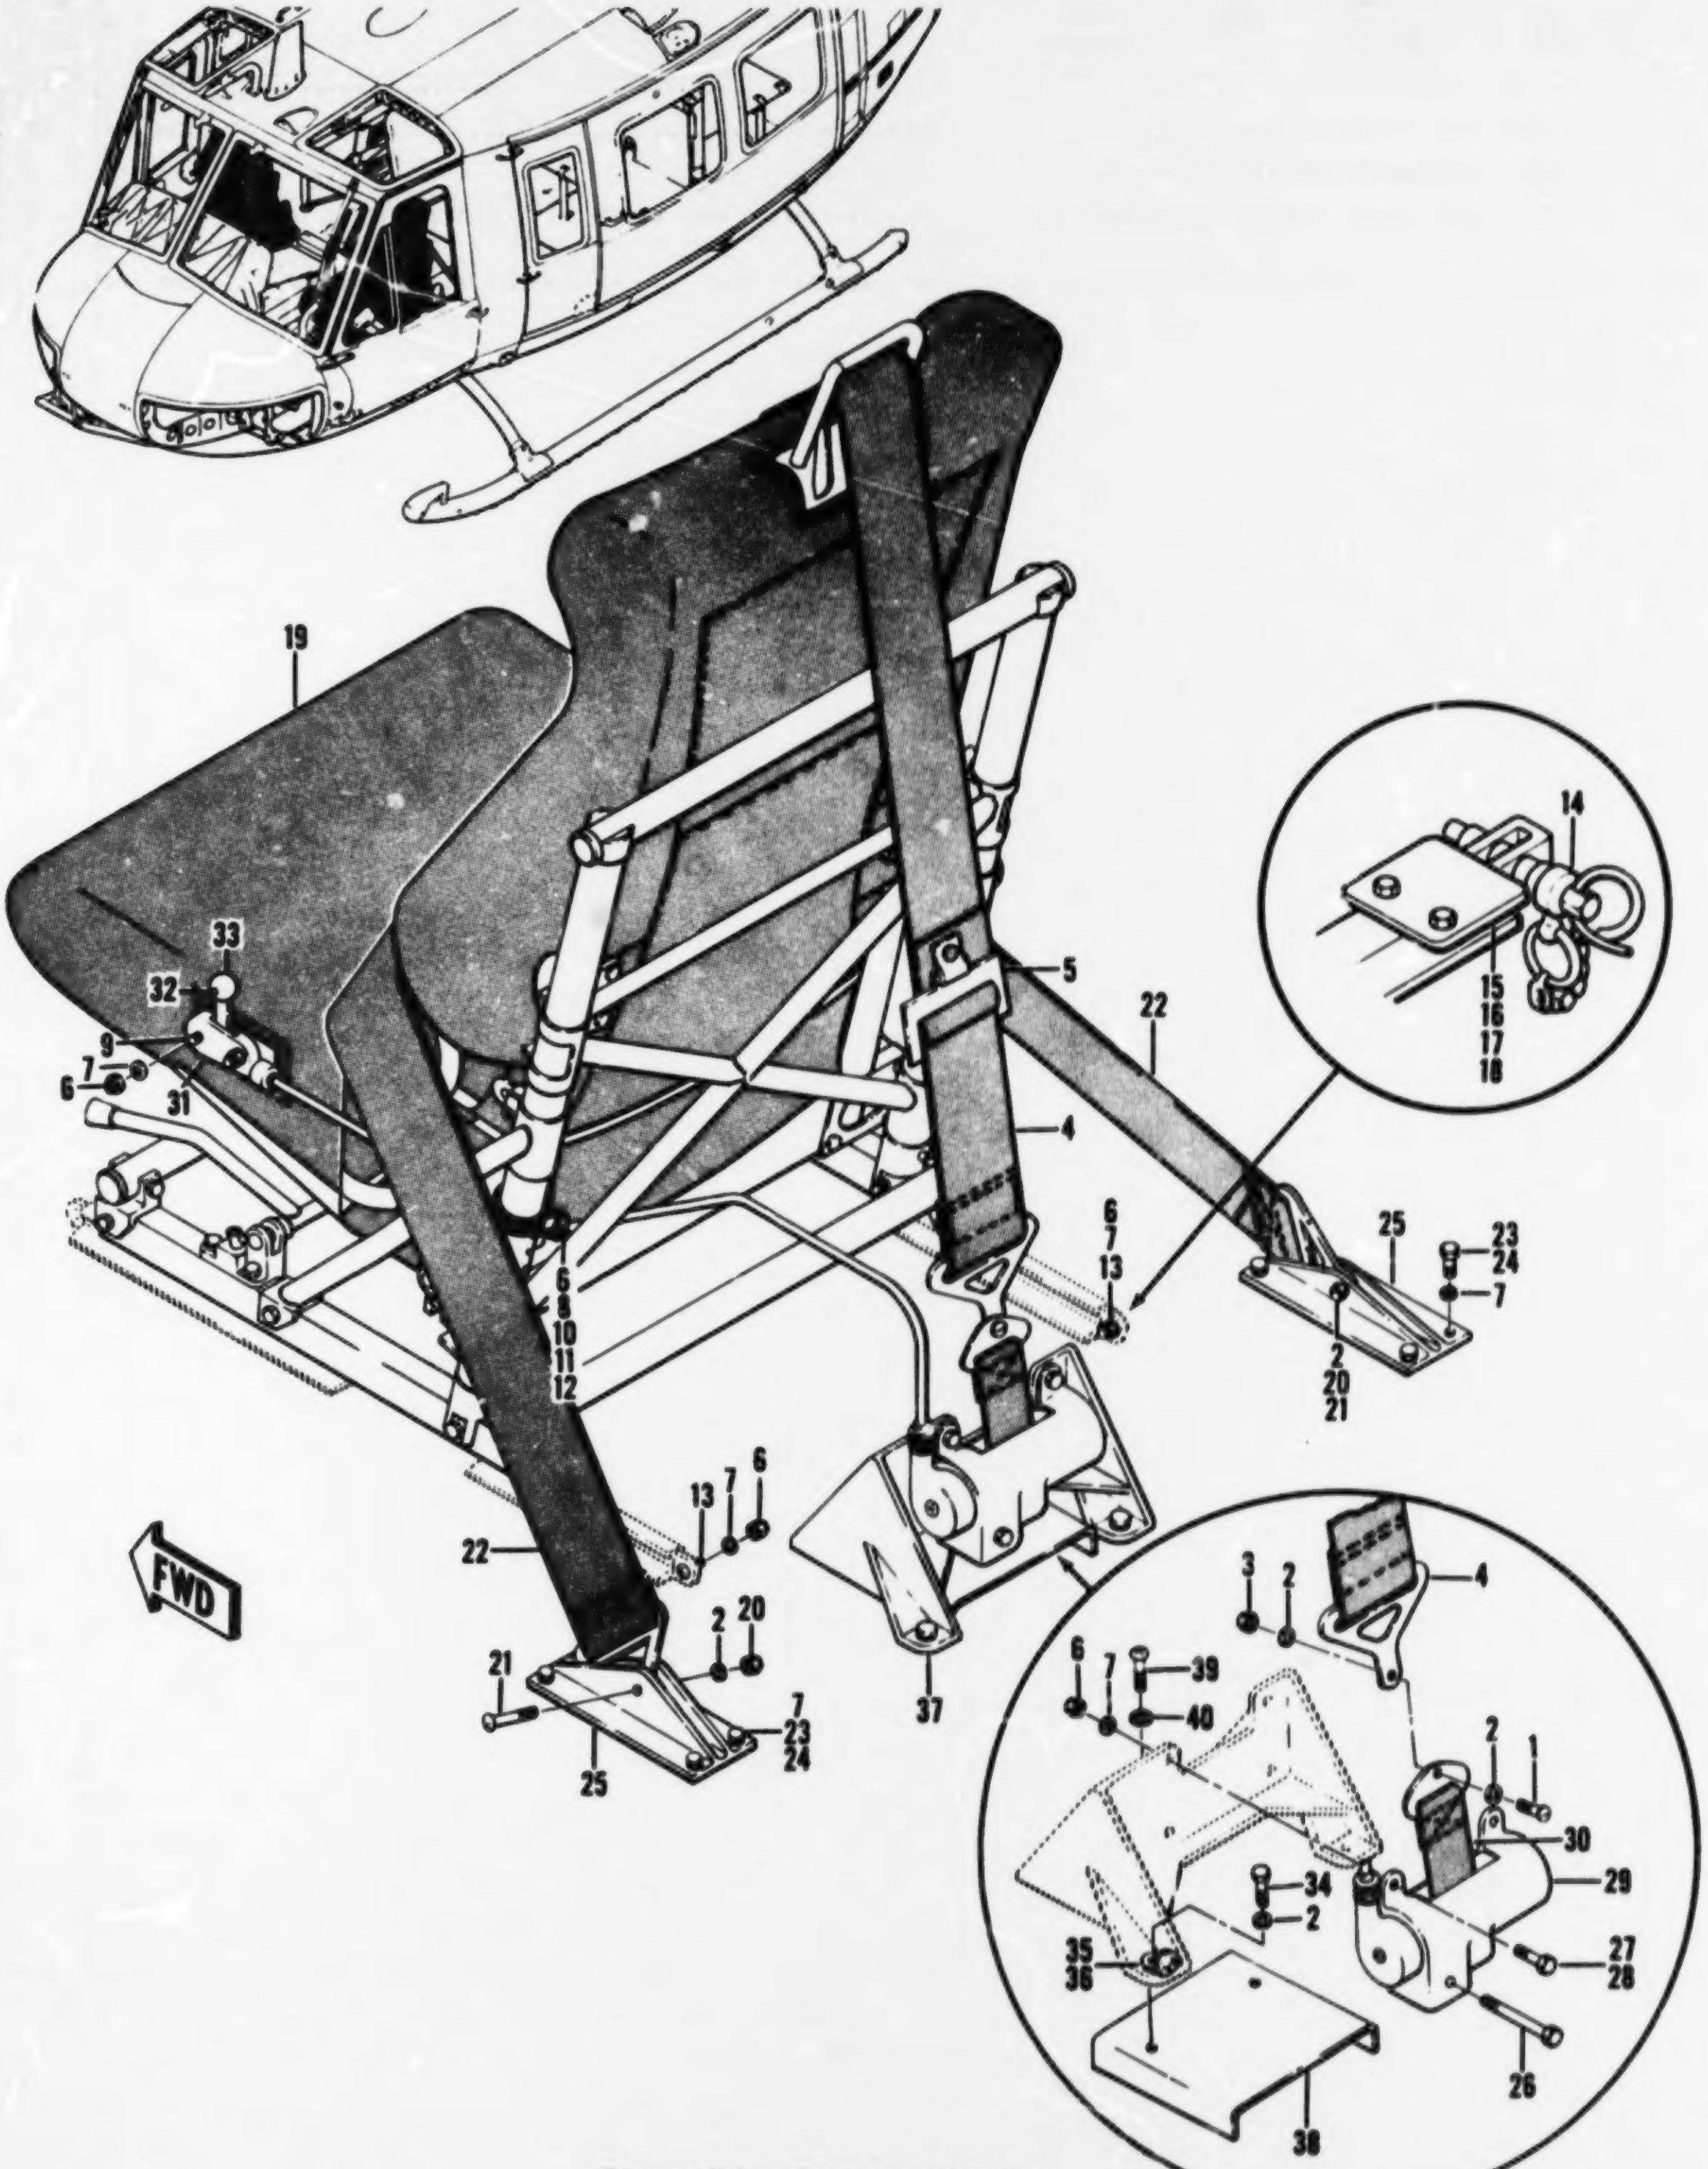
19
33
32
9
7
6
31
5
22
4
6
8
10
11
12
6
7
13
14
15
16
17
18
25
23
24
7
2
20
21
13
7
6
22
FWD
2
20
21
7
23
24
25
37
3
2
4
6
7
39
40
2
1
30
29
34
2
35
36
27
28
26
38

Figure 34. Seat Installation

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
34		XCFZZ		97499	205-070-747-3	SEAT INSTL,CO-PILOT USBL EFF 62-2106 THRU 63-13002 SEE FIG.7 FOR NHA..UHE,UHH,UHV,UHX	EA	1
34		XCFZZ		97499	205-070-747-15	SEAT INSTL,CO-PILOT USBL EFF 64-13492 THRU 64-13901 SEE FIG. 7 FOR NHA..UHE,UHH,UHV,UHX	EA	1
34		XCFZZ		97499	205-070-747-19	SEAT INSTL,CO-PILOT USBL EFF 65-9565 THRU 66-16033 SEE FIG.7 FOR NHA..UHE,UHH,UHV,UHX	EA	1
34		XCFZZ		97499	205-072-286-3	SEAT INSTL,CO-PILOT USBL EFF 66-16034 & SUBSEQUENT SEE FIG.7 FOR NHA..UHE,UHH,UHV,UHX	EA	1
34		XCFZZ		97499	205-070-747-1	SEAT INSTL,PILOT USBL EFF 62-2106 THRU 63-13002 SEE FIG.7 FOR NHA..UHE,UHH,UHV,UHX	EA	1
34		XCFZZ		97499	205-070-747-13	SEAT INSTL,PILOT USBL EFF 64-13492 THRU 64-13901 SEE FIG.7 FOR NHA..UHE,UHH,UHV,UHX	EA	1
34		XCFZZ		97499	205-070-747-17	SEAT INSTL,PILOT USBL EFF 65-9565 THRU 66-16033 SEE FIG.7 FOR NHA..UHE,UHH,UHV,UHX	EA	1
34		XCFZZ		97499	205-072-286-1	SEAT INSTL,PILOT USBL EFF 66-16034 & SUBSEQUENT SEE FIG.7 FOR NHA..UHE,UHH,UHV,UHX	EA	1
34	1	PAOZZ	5306-00-156-2695	88044	AN24-11	.BOLT,CLEVIS..UHE,UHH,UHV,UHX	EA	1
34	1	PAOZZ	5306-00-156-2390	88044	AN24-11A	.BOLT,CLEVIS U/O PN 205-072-286-1 & -3.......UHE,UHH,UHV,UHX	EA	1
34	2	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..UHE,UHH,UHV,UHX	EA	2
34	3	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
34	4	XDOOO	1680-00-555-2938	07878	57D677	.HARNESS,AIRCRAFT SA RPLS 1680-00-485-3047 ....UHE,UHH,UHV,UHX	EA	1
34	5	PAOZZ	1680-00-853-5464	98750	65D34083-7	..SPRING,WEBBING RETA USE-AFT-CMPL-W MWO 55-1680-200-20/2 ....UHE,UHH,UHV,UHX	EA	3
34	6	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	3
34	7	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..UHE,UHH,UHV,UHX	EA	5
34	8	PAOZZ	5365-00-622-1810	80205	NAS43DD3-8	.SPACER,SLEEVE..UHE,UHH,UHV,UHX	EA	2
34	9	PAOZZ	5305-00-180-3326	88044	AN525-10R16	.SCREW,MACHINE..UHE,UHH,UHV,UHX	EA	2
34	10	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..UHE,UHH,UHV,UHX	EA	1
34	11	XDOZZ	5340-00-990-9299	81996	EAB700D4	.CLAMP,LOOP..UHE,UHH,UHV,UHX	EA	1
34	11	PAOZZ	5340-00-291-5323	96906	MS21919WDG4	.CLAMP,LOOP..UHE,UHH,UHV,UHX	EA	1
34	12	PAOZZ	5340-00-993-1470	81996	EAB700D18	.CLAMP,LOOP..UHE,UHH,UHV,UHX	EA	1
34	13	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE..UHE,UHH,UHV,UHX	EA	2
34	14	PAOZZ	1680-00-950-6938	97499	204-072-819-1	.STOP ASSEMBLY,QUICK RELEASE U/O PN 205-070-747-17 &-19 ....UHE,UHH,UHV,UHX	EA	1
34	15	PAOZZ	5306-00-182-2063	88044	AN3H12A	.BOLT,MACHINE U/O PN 205-072-286-1 & -3......UHE,UHH,UHV,UHX	EA	4
34	16	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-072-286-1 & -3.......UHE,UHH,UHV,UHX	EA	4
34	17	PAOZZ	5365-00-837-1482	80205	NAS43DD3-31	.SPACER,SLEEVE U/O PN 205-072-286-1 & -3.....UHE,UHH,UHV,UHX	EA	4
34	18	PAOZZ	1680-00-851-8946	97499	204-072-085-3	.STOP,SEAT,PILOT AND U/O PN 205-072-286-1 & -3 ....UHE,UHH,UHV,UHX	EA	2
34	19	PAOOO	1680-00-021-8997	09986	AL1018-5	.SEAT ASSY,AIRCRAFT U/O PN 205-070-747-1,-3,-13, -15,-17,& -19 SEE FIG.36 FOR BREAKDOWN..................UHE,UHH,UHV,UHX	EA	1
34	19	AOOOZ	1680-00-933-9385	09986	178062-3	.SEAT ASSY,ARMOR, CO-PILOT U/O PN 205-072-286-3 SEE FIG 37 FOR BREAKDOWN................................UHE,UHH,UHV,UHX	EA	1
34	19	AOOOZ	1680-00-933-9384	09986	178061-3	.SEAT ASSY,ARMOR, PILOT U/O PN 205-072-286-1 SEE FIG 37 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
34	20	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	2
34	21	PAOZZ	5306-00-156-2700	88044	AN24-16	.BOLT,CLEVIS..UHE,UHH,UHV,UHX	EA	2
34	22	PAOZZ	1680-00-967-1831	97499	205-070-749-1	.BELT,AIRCRAFT SAFET..UHE,UHH,UHV,UHX	EA	1
34	23	PAOZZ	5306-00-182-2060	88044	AN3H7A	.BOLT,MACHINE..UHE,UHH,UHV,UHX	EA	8

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
34	24	PAOZZ	5306-00-182-2059	88044	AN3H6A	.BOLT,MACHINE U/O PN 205-072-286-1 & -3......UHE,UHH,UHV,UHX	EA	8
34	25	PAOZZ	1560-00-908-6765	97499	205-070-103-1	.FITTING,CARGO FLOOR..........................UHE,UHH,UHV,UHX	EA	2
34	26	PAOZZ	5306-00-182-2013	88044	AN3H24A	.BOLT,MACHINE.................................UHE,UHH,UHV,UHX	EA	1
34	27	PAOZZ	5306-00-182-2060	88044	AN3H7A	.BOLT,MACHINE U/O PN 205-072-286-1 & -2......UHE,UHH,UHV,UHX	EA	3
34	28	PAOZZ	5306-00-182-2059	88044	AN3H6A	.BOLT,MACHINE.................................UHE,UHH,UHV,UHX	EA	3
34	29	PAODD	1680-00-710-1844	45402	0106176-0	.REEL,SHOULDER HARNE..........................UHE,UHH,UHV,UHX	EA	1
34	29	PAODD	1680-00-775-4182	45402	0101385-01	..REEL ASSY,INERTIA L.........................UHE,UHH,UHV,UHX	EA	1
34	30	PAOZZ	1680-00-632-9608	45402	0101238-01	..STRAP ASSY,REEL.............................UHE,UHH,UHV,UHX	EA	1
34	31	PAODD	1680-00-013-1279	45402	0101389-09	..CONTROL,INERTIAL RE.........................UHE,UHH,UHV,UHX	EA	1
34	32	PAOZZ	5305-00-719-5403	96906	MS24694S54	...SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	1
34	33	PAOZZ	5355-00-667-9155	80205	NAS1218125	...KNOB.......................................UHE,UHH,UHV,UHX	EA	1
34	34	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE.................................UHE,UHH,UHV,UHX	EA	4
34	35	PAOZZ	5365-00-580-5791	80205	NAS43D04-16	.SPACER,SLEEVE U/O PN 205-072-286-1 & -3.....UHE,UHH,UHV,UHX	EA	4
34	36	MFOZZ		97499	205-070-609-1	.SUPPORT ASSEMBLY.............................UHE,UHH,UHV,UHX	EA	2
34	37	PAOOO	1560-00-966-6110	97499	205-070-106-1	.BRACKET ASSEMBLY,IN..........................UHE,UHH,UHV,UHX	EA	1
34	38	PAOZZ	1560-00-966-6109	97499	205-070-105-1	..SUPPORT,REEL,HARNES.........................UHE,UHH,UHV,UHX	EA	1
34	39	XDOZZ		96906	MS27039-1-09	..SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	2
34	40	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT.................................UHE,UHH,UHV,UHX	EA	2

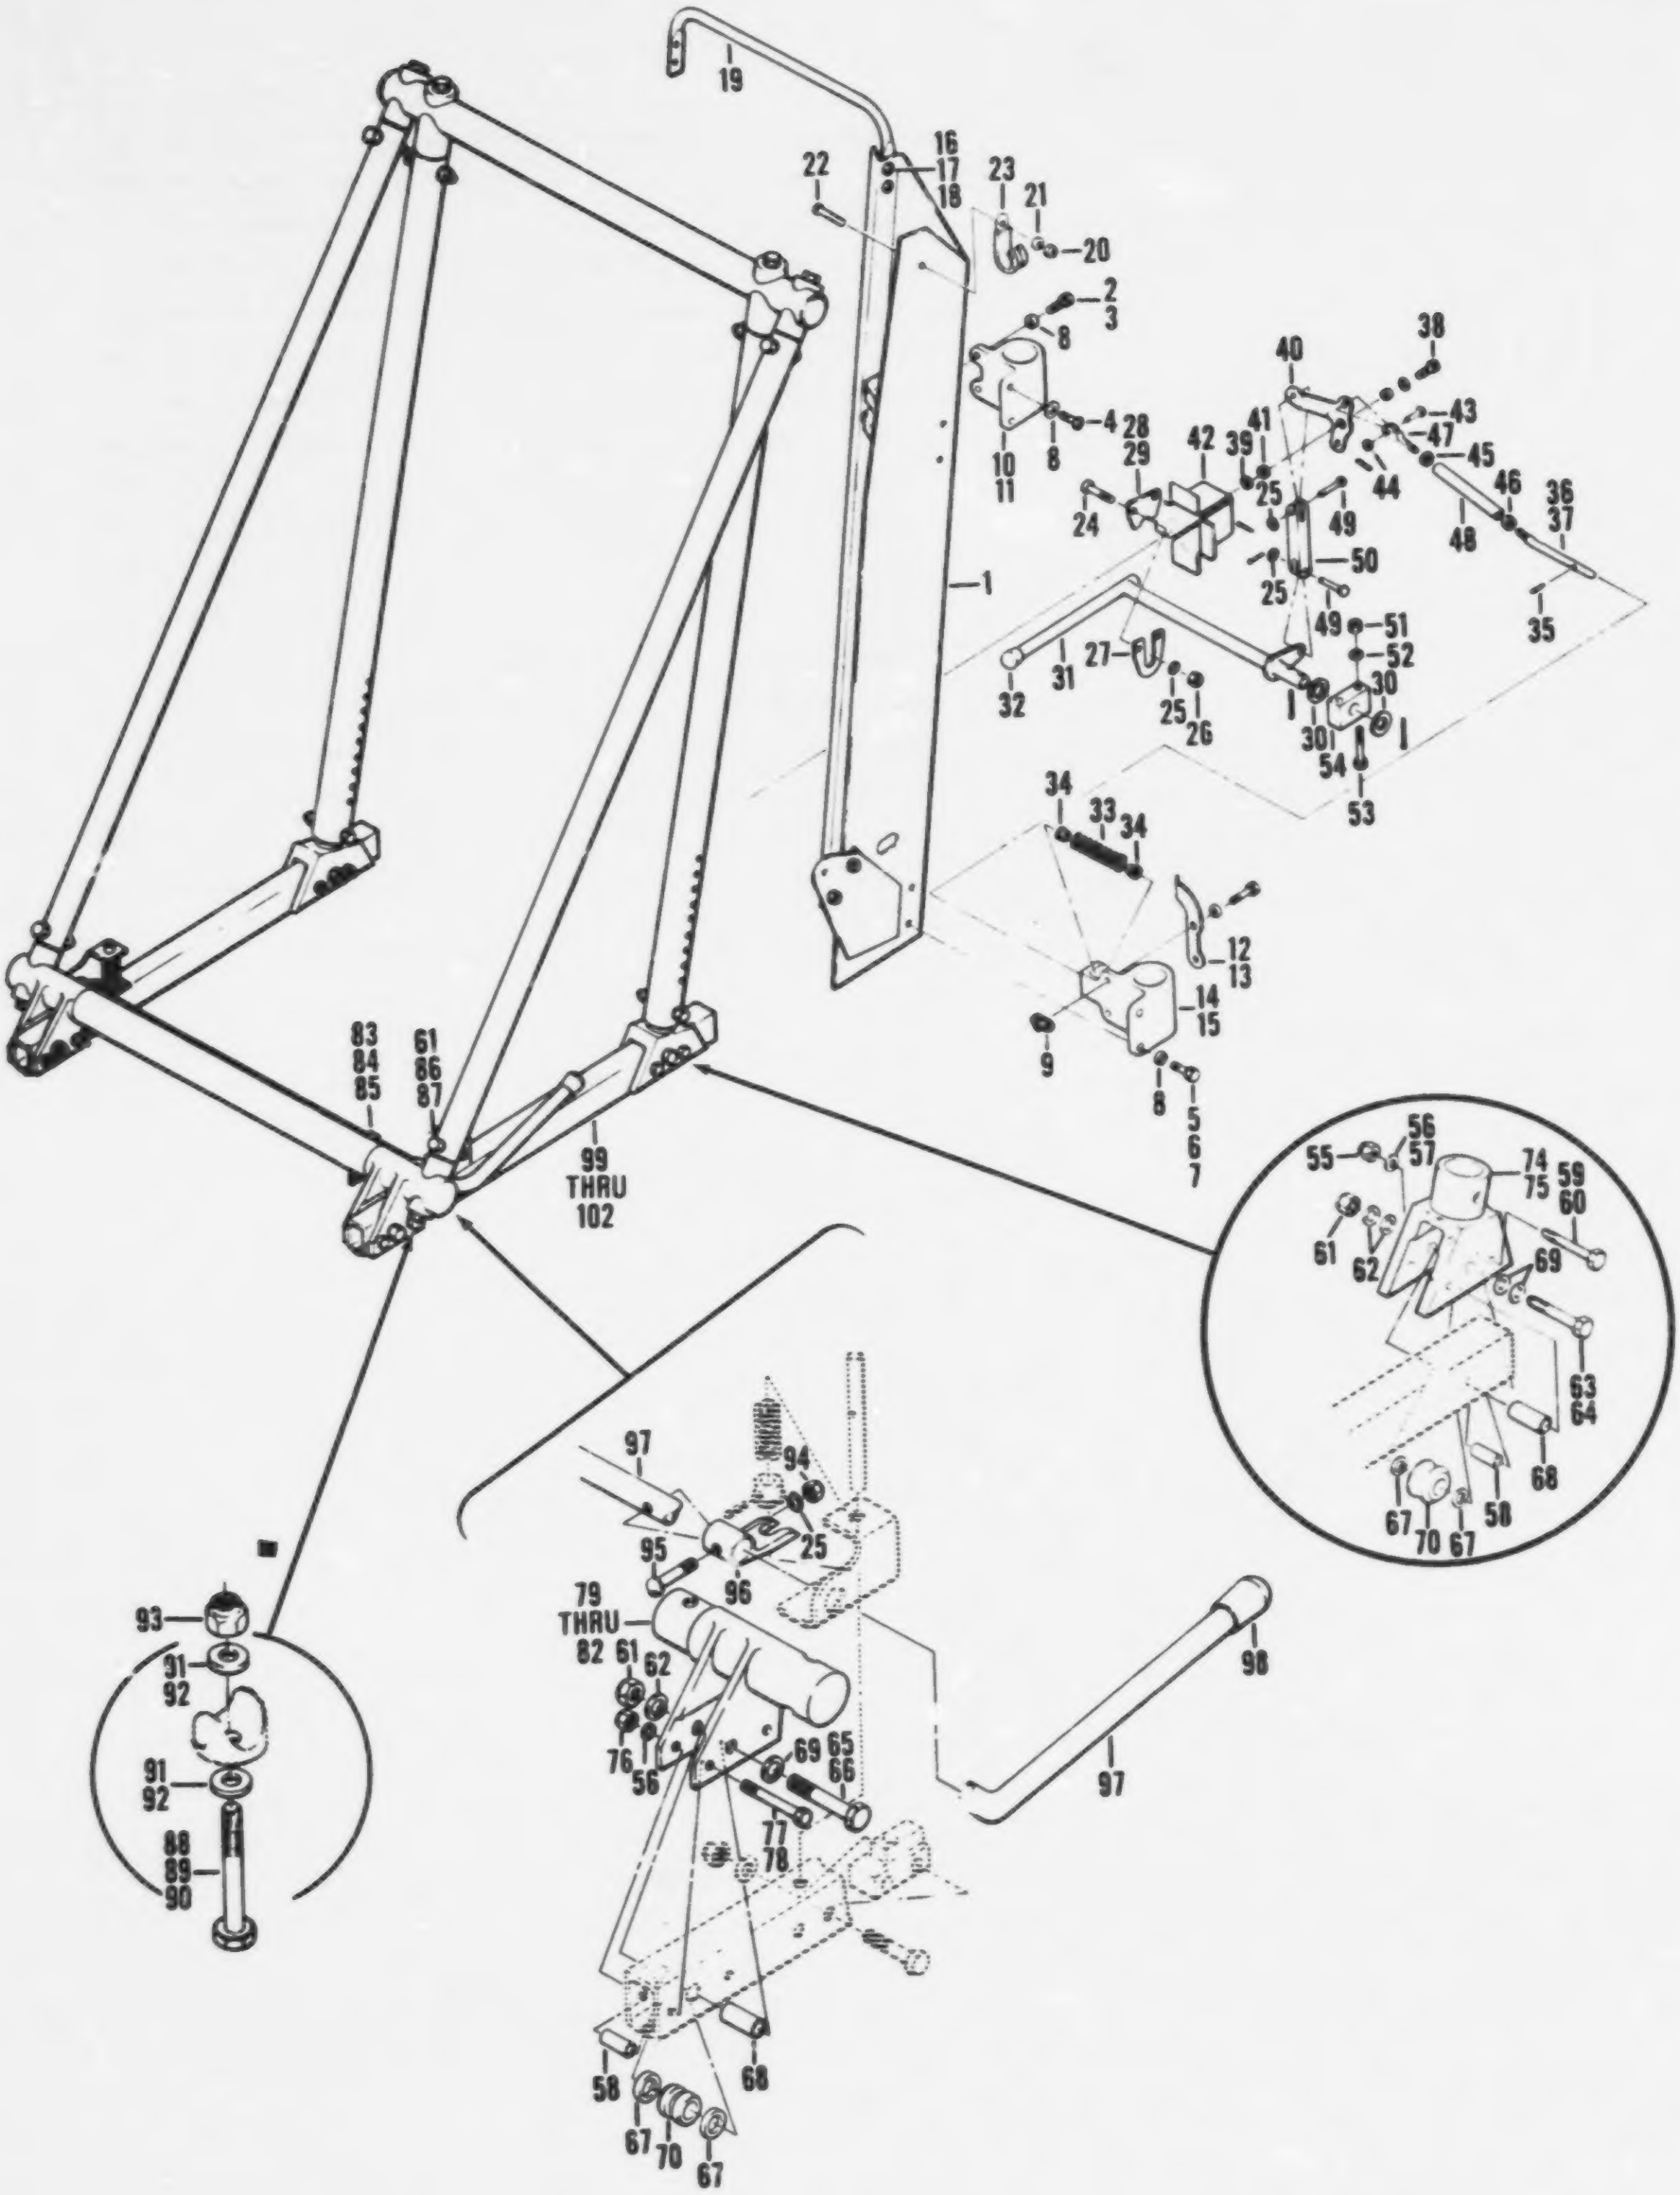
19
16
17
18
22
23
21
20
2
3
8
38
40
43
47
45
4
28
29
42
39
41
25
44
10
11
8
24
49
46
36
37
48
1
50
25
35
27
31
32
25
26
49
51
52
30
30
54
53
34
33
34
12
13
14
15
9
8
5
6
7
83
84
85
61
86
87
99
THRU
102
55
56
57
74
75
59
60
61
62
69
63
64
68
67
70
67
58
97
94
95
25
96
79
THRU
82
61
62
98
76
56
69
65
66
77
78
97
93
91
92
91
92
88
89
90
58
68
67
70
67

Figure 35. Seat Assembly Aircraft

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
35		PB000	1680-00-766-6366	97499	204-070-706-51	SEAT,AIRCRAFT USBL EFF <UH-1B> 60-3546 THRU 61-719,61-736 THRU 61-803 -LH,& 60-3546 THRU 61-803 -RH SEE FIG.32 FOR NHA 961-1342..........UHB	EA	1
35		PB000	1680-00-961-1342	97499	204-070-706-53	FRAME ASSEMBLY,SEAT USBL EFF 61-720 THRU 61-735-LH SEE FIG. 32 FOR NHA..........UHB	EA	1
35		PB000	1680-00-762-0051	97499	204-070-099-1	FRAME,BRACKET ASSY USBL EFF 62-1872 THRU 62-1996-LH & 62-1872 THRU 62-12555-RH SEE FIG.32 FOR NHA..........UHB	EA	1
35		PB000	1680-00-762-0054	97499	204-070-099-3	FRAME,BUCKET ASSEMB USBL EFF 62-1997 THRU 62-12555 -LH SEE FIG.32 FOR NHA..........UHB	EA	1
35		PB000	1680-00-762-0052	97499	204-070-099-9	FRAME,BUCKET ASSEMB USBL EFF 63-8500 THRU 63-8658-LH SEE FIG.33 FOR NHA..........UHB	EA	1
35		XD000	1680-00-762-0053	97499	204-070-099-7	SEAT,AIRCRAFT USBL EFF <UH-1B> 63-8659 THRU 64-14100,<UH-1C 64-14101 THRU 64-14191-LH,<UH-1B> 63-8500 THRU 64-14100 & <UH-1C> 64-14101 THRU 64-14191-RH SEE FIG.33......UHB,UHC,UHM	EA	1
35	1	XB000	1560-00-H24-6432	97499	204-070-708-13	.CHANNEL ASSEMBLY-LH U/O:PN 204-070-706-47,-51,& -53.....UHB	EA	1
35	1	XB00Z	1680-00-866-9541	97499	204-070-708-19	.CHANNEL ASSEMBLY,LH U/O:PN 204-070-099-1,-3,-7,& -9 ....UHB,UHC,UHM	EA	1
35	1	XB000	1560-00-H24-6433	97499	204-070-708-14	.CHANNEL ASSEMBLY-RH U/O:PN 204-070-706-47,-51,& -53.....UHB	EA	1
35	1	XB000	1560-00-H25-4485	97499	204-070-708-20	.CHANNEL ASSEMBLY-RH U/O PN 204-070-099-1,-3,-7,&-9 ....UHB,UHC,UHM	EA	1
35	2	PAOZZ	5306-00-182-2058	88044	AN3H5A	..BOLT,MACHINE U/O PN 204-070-708-13,&-14..........UHB	EA	2
35	3	PAOZZ	5306-00-182-2059	88044	AN3H6A	..BOLT,MACHINE U/O PN 204-070-708-19,&-20........UHB,UHC,UHM	EA	2
35	4	PAOZZ	5305-00-958-3409	96906	MS24694S52	..SCREW,MACHINE U/O PN 204-070-708-19,&-20.......UHB,UHC,UHM	EA	2
35	5	PAOZZ	5306-00-182-2060	88044	AN3H7A	..BOLT,MACHINE U/O PN 204-070-708-13,&-14..........UHB	EA	2
35	6	PAOZZ	5306-00-812-2305	80205	NAS1303-8H	..BOLT,SHEAR..........UHB,UHC,UHM	EA	2
35	7	XDOZZ	5306-00-655-7232	80205	NAS1303-4	..BOLT,SHEAR U/O PN 204-070-708-19,&-20..........UHB,UHC,UHM	EA	2
35	8	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT U/O PN 204-070-708-19,&-20..........UHB,UHC,UHM	EA	6
35	9	PAOZZ	5310-00-985-0762	80205	NAS1030A3	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	8
35	10	XBOZZ	1560-00-H24-6435	97499	204-070-710-3	..FITTING-UPPER U/O PN 204-070-708-13 & -14..........UHB	EA	1
35	11	XBOZZ	1680-00-932-1623	97499	204-070-710-5	..FITTING,UPPER U/O PN 204-070-708-19 & -20......UHB,UHC,UHM	EA	1
35	12	PAOZZ	1680-00-769-9860	97499	204-070-708-9	..HOOK,SHOCK CORD,LH..........UHB,UHC,UHM	EA	1
35	13	XBOZZ	1680-00-769-9859	97499	204-070-708-10	..HOOK,SHOCK CORD,RH..........UHB,UHC,UHM	EA	1
35	14	XBOZZ	1680-00-906-1275	97499	204-070-710-1	..FITTING,LOWER U/O PN 204-070-708-13 & -14..........UHB	EA	1
35	15	XBOZZ	1680-00-932-1624	97499	204-070-502-1	.FITTING,LOWER U/O PN 204-070-708-19 & -20.......UHB,UHC,UHM	EA	1
35	16	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE..........UHB,UHC,UHM	EA	4
35	17	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	4
35	18	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..........UHB,UHC,UHM	EA	4
35	19	PAOZZ	1680-00-961-1372	97499	204-070-706-39	.GUIDE BRACKET,SEAT..........UHB,UHC,UHM	EA	1
35	20	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE U/O PN 204-070-706-47,-51 & -53.....UHB	EA	1
35	21	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 204-070-706-47,-51 & -53..........UHB	EA	1
35	22	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE U/O PN 204-070-706-47,-51 & -53..........UHB	EA	1
35	23	MOOZZ	5340-00-178-7963	97499	70-005-1	.HOOK,HEADSET STOWAG U/O PN 204-070-706-47,-51,&-53......UHB	EA	1
35	24	PAOZZ	5305-00-891-1775	88044	AN525-832R10	.SCREW,MACHINE..........UHB,UHC,UHM	EA	2
35	25	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
35	26	PAOZZ	5310-00-857-5564	96906	MS21045L08	.NUT,SELF-LOCKING,HE..........UHB,UHC,UHM	EA	2
35	27	MFOZZ	1680-00-716-8515	97499	204-070-706-19	.SUPPORT..........UHB,UHC,UHM	EA	1
35	28	MFOZZ	1680-00-710-7942	97499	204-070-706-21	.SUPPORT U/O PN 204-070-706-51,&-53..........UHB	EA	1
35	29	MFOZZ	3120-00-761-7541	97499	204-070-099-29	.BEARING,SLEEVE U/O PN 204-070-099-1,-3,-7,&-9	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						....UHB,UHC,UHM		
35	30	PAOZZ	5310-00-184-8976	88044	AN960PD816L	.WASHER,FLAT..........................UHB,UHC,UHM	EA	2
35	31	PAOZZ	1680-00-769-9862	97499	204-070-712-1	.HANDLE ASSY SEAT ADJUSTMENT..........UHB,UHC,UHM	EA	1
35	32	PAOZZ	5340-00-720-6327	75543	T37	.TIP,RUBBER..........................UHB,UHC,UHM	EA	1
35	33	PAOZZ	5360-00-576-4091	97499	204-070-714-1	.SPRING,HELICAL,COMP..................UHB,UHC,UHM	EA	2
35	34	PAOZZ	5340-00-953-5034	97499	204-070-713-5	.RETAINER CARRIAGE P U/O PN 204-070-099-1,-3,-7,&-9 ....UHB,UHC,UHM	EA	4
35	35	PAOZZ	5315-00-882-1438	96906	MS16562-193	.PIN,SPRING..........................UHB,UHC,UHM	EA	2
35	36	XBOZZ	5315-00-955-0649	97499	204-070-706-25	.PIN,SEAT MECHANISM U/O PN 204-070-706-47,-51,-53, 204-070-099-1 & -3..........................UHB	EA	2
35	37	XBOZZ	1680-00-357-1932	97499	204-072-825-1	.PIN,SEAT U/O PN 204-070-099-7 & -9... ....UHB,UHC,UHM	EA	2
35	38	PAOZZ	5306-00-182-2059	88044	AN3H6A	.BOLT,MACHINE..........................UHB,UHC,UHM	EA	1
35	39	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..........................UHB,UHC,UHM	EA	3
35	40	XBOZZ	1680-00-961-1339	97499	204-070-706-45	.BELL CRANK,FRAME AN..........................UHB,UHC,UHM	EA	1
35	41	PAOZZ	5365-00-752-7502	80205	NAS43DD3-9	.SPACER,SLEEVE..........................UHB,UHC,UHM	EA	1
35	42	MFOZZ	1560-00-H25-4480	97499	204-070-706-41	.BRACKET..........................UHB,UHC,UHM	EA	1
35	43	PBOZZ	5315-00-812-3759	96906	MS20392-2C11	.PIN,STRAIGHT,HEA..........................UHB,UHC,UHM	EA	2
35	44	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........................UHB,UHC,UHM	EA	2
35	45	PAOZZ	5310-00-167-1343	88044	AN315-3R	.NUT,PLAIN,HEXAGON..........................UHB,UHC,UHM	EA	2
35	46	PAOZZ	5310-00-167-1331	88044	AN315-3L	.NUT,PLAIN,HEXAGON..........................UHB,UHC,UHM	EA	2
35	47	PAC Z	5340-00-068-0527	96906	MS21252-3RS	.CLEVIS,ROD END..........................UHB,UHC,UHM	EA	2
35	48	PAOZZ	5340-00-952-2950	97499	204-070-706-27	.TURNBUCKLE BODY..........................UHB,UHC,UHM	EA	2
35	49	PBOZZ	5315-00-912-3741	96906	MS20392-1C13	.PIN,STRAIGHT,HEA..........................UHB,UHC,UHM	EA	2
35	50	XBOZZ	3040-00-955-9252	97499	204-070-706-23	.CONNECTING LINK,RIG..........................UHB,UHC,UHM	EA	1
35	51	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE..........................UHB,UHC,UHM	EA	2
35	52	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........................UHB,UHC,UHM	EA	2
35	53	PAOZZ	5306-00-182-2063	88044	AN3H12A	.BOLT,MACHINE..........................UHB,UHC,UHM	EA	2
35	54	XBOZZ	1680-00-955-9600	97499	204-070-706-43	.BEARING,SEAT MECHAN U/O PN 204-070-099-1,-3,-7,&-9 ....UHB,UHC,UHM	EA	1
35	55	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE HEXAGON:U/O:PN 204-070-099-1,-3,-7,& -9 ....UHB,UHC,UHM	EA	8
35	56	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O:PN 204-070-706-51,& -53..................UHB	EA	4
35	57	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT U/O PN 204-070-099-1,-3,-7,&-9......UHB,UHC,UHM	EA	8
35	59	PAOZZ	5365-00-722-7897	80205	NAS43HT3-42	.SPACER,SLEEVE U/O PN 204-070-099-1,-3,-7,&-9....UHB,UHC,UHM	EA	8
35	59	PAOZZ	5306-00-182-2006	88044	AN3H15A	.BOLT,MACHINE U/O PN 204-070-099-1,-3,-7,&-9..............UHB	EA	4
35	60	PAOZZ	5306-00-182-2005	88044	AN3H14A	.BOLT,MACHINE U/O:PN 204-070-099-1,-3,-7,& -9....UHB,UHC,UHM	EA	8
35	61	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE..........................UHB,UHC,UHM	EA	4
35	62	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........................UHB,UHC,UHM	EA	4
35	63	PAOZZ	5306-00-182-1797	88044	AN174-15A	.BOLT,MACHINE U/O PN 204-070-706-051 &-53..................UHP	EA	2
35	64	PAOZZ	5306-00-550-1159	88044	AN174H14A	.BOLT,CLOSE TOLERANC U/O PN 204-070-099-1,-3,-7,&-9 ....UHB,UHC,UHM	EA	2
35	65	PAOZZ	5306-00-156-2541	88044	AN174H16A	.BOLT,CLOSE,TOLER U/O PN 204-070-706-51 &-53..............UHB	EA	2
35	66	XDOZZ		88044	AN174H13A	.BOLT,CLOSE TOLER U/O PN 204-070-099-1,-3,-7 &-9 ....UHB,UHC,UHM	EA	2
35	67	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT..........................UHB,UHC,UHM	EA	8
35	68	PAOZZ	5365-00-814-1879	80205	NAS43HT4-53	.SPACER,SLEEVE..........................UHB,UHC,UHM	EA	4

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
35	69	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT.....................................UHB,UHC,UHM	EA	4
35	70	PAOZZ	3120-00-675-9827	97499	204-070-711-21	.ROLLER,LINEAR-ROTAR..............................UHB,UHC,UHM	EA	4
35	74	XPOZZ	1680-00-938-3099	97499	204-070-742-1	.FITTING,CARRIAGE, AFT U/O PN-204-070-706-51 &-53........UHB	EA	2
35	75	XBOZZ	1680-00-866-9538	97499	204-070-095-1	.CLEVIS,AFT U/O PN 204-070-099-1,-3,-7,&-9.......UHB,UHC,UHM	EA	2
35	76	PAOZZ	5310-00-263-2062	96906	MS21045C3	.NUT,SELF-LOCKING,HE..............................UHB,UHC,UHM	EA	4
35	77	PAOZZ	5306-00-182-2007	88044	AN3H16A	.BOLT,MACHINE U/O PN 204-070-706-51 & -53.................UHB	EA	4
35	78	PAOZZ	5306-00-182-2064	88044	AN3H13A	.BOLT,MACHINE U/O:PN 204-070-099-1,-3,-7,& -9....UHB,UHC,UHM	EA	4
35	79	XBOZZ	1560-00-H24-6442	97499	204-070-743-1	.FITTING-LH FORWARD U/O:PN 204-070-706-51,& -53..........UHB	EA	1
35	80	XBOZZ	1680-00-866-9539	97499	204-070-097-1	.FITTING,LH-FWD U/O:PN 204-070-099-1,-3,-7,& -9 ....UHB,UHC,UHM	EA	1
35	81	XBOZZ	1560-00-H24-6443	97499	204-070-743-2	.FITTING-RH FORWARD U/O:PN 204-070-706-51,& -53..........UHB	EA	1
35	82	XBOZZ	1680-00-866-9540	97499	204-070-097-2	.FITTING,RH-FWD U/O:PN 204-070-099-1,-3,-7,& -9 ....UHB,UHC,UHM	EA	1
35	83	PAOZZ	5306-00-182-1964	88044	AN4H16A	.BOLT,MACHINE U/O:PN 204-070-706-51,& -53.................UHB	EA	2
35	84	XDOZZ		80205	NAS1304-21W	.BOLT,SHEAR U/O:PN 204-070-099-1,-3,-7,& -9......UHB,UHC,UHM	EA	2
35	85	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT.....................................UHB,UHC,UHM	EA	4
35	86	PAOZZ	5306-00-182-1962	88044	AN4H14A	.BOLT,MACHINE U/O:PN 204-070-706-51,& -53.................UHB	EA	4
35	87	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT.....................................UHB,UHC,UHM	EA	8
35	88	PAOZZ	5306-00-182-2038	88044	AN4H22A	.BOLT,MACHINE U/O:PN 204-070-706-51,& -53.................UHB	EA	6
35	69	XDOZZ		96906	MS20004-24	.BOLT,INTERNAL WR WRENCHING:U/O:PN 204-070-099-1,-3,-7,& -9 ....UHB,UHC,UHM	EA	2
35	90	XDOZZ		96906	MS20004H28	.BOLT,INTERNAL WRENC U/D PN 204-070-099-18-38-7 & -9 ....UHB,UHC,UHM	EA	4
35	91	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT U/O:PN 204-070-706-51,& -53..................UHB	EA	12
35	92	PAOZZ	5310-00-596-1766	96906	MS20002C4	.WASHER,RECESSED U/O:PN 204-070-099-1,-3,-7,& -9 ....UHB,UHC,UHM	EA	12
35	93	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE..............................UHB,UHC,UHM	EA	6
35	94	PAOZZ	5310-00-857-5564	96906	MS21045L08	.NUT,SELF-LOCKING,HE..............................UHB,UHC,UHM	EA	2
35	95	PAOZZ	5305-00-576-1499	88044	AN525-832R16	.SCREW,MACHINE....................................UHB,UHC,UHM	EA	2
35	96	XDOZZ	1680-00-769-9861	97499	204-070-711-19	.LIFTER,SEAT CARRIAG..............................UHB,UHC,UHM	EA	2
35	97	PAOZZ	1680-00-769-9858	97499	204-070-706-37	.ACTUATOR ARM.....................................UHB,UHC,UHM	EA	1
35	98	PAOZZ	5340-00-720-6327	75543	T37	.TIP,FURNITURE LE.................................UHB,UHC,UHM	EA	1
35	99	PAOZZ	1680-00-769-9863	97499	204-070-713-13	.CARRIAGE ASSEMBLY,S LH U/O PN 204-070-706-51 &-53.......UHB	EA	1
35	100	PAOZZ	1680-00-996-7488	97499	204-070-096-1	.CARRIAGE ASSEMBLY, LH............................UHB,UHC,UHM	EA	1
35	101	PAOZZ	1680-00-769-9864	97499	204-070-713-14	.CARRIAGE ASSEMBLY, RH U/O PN 204-070-706-51 &-53........UHB	EA	1
35	102	PAOZZ	1680-00-996-7487	97499	204-070-096-2	.CARRIAGE ASSEMBLY, RH U/O PN 204-070-099-1,-3,-7,&-9 ....UHB,UHC,UHM	EA	1

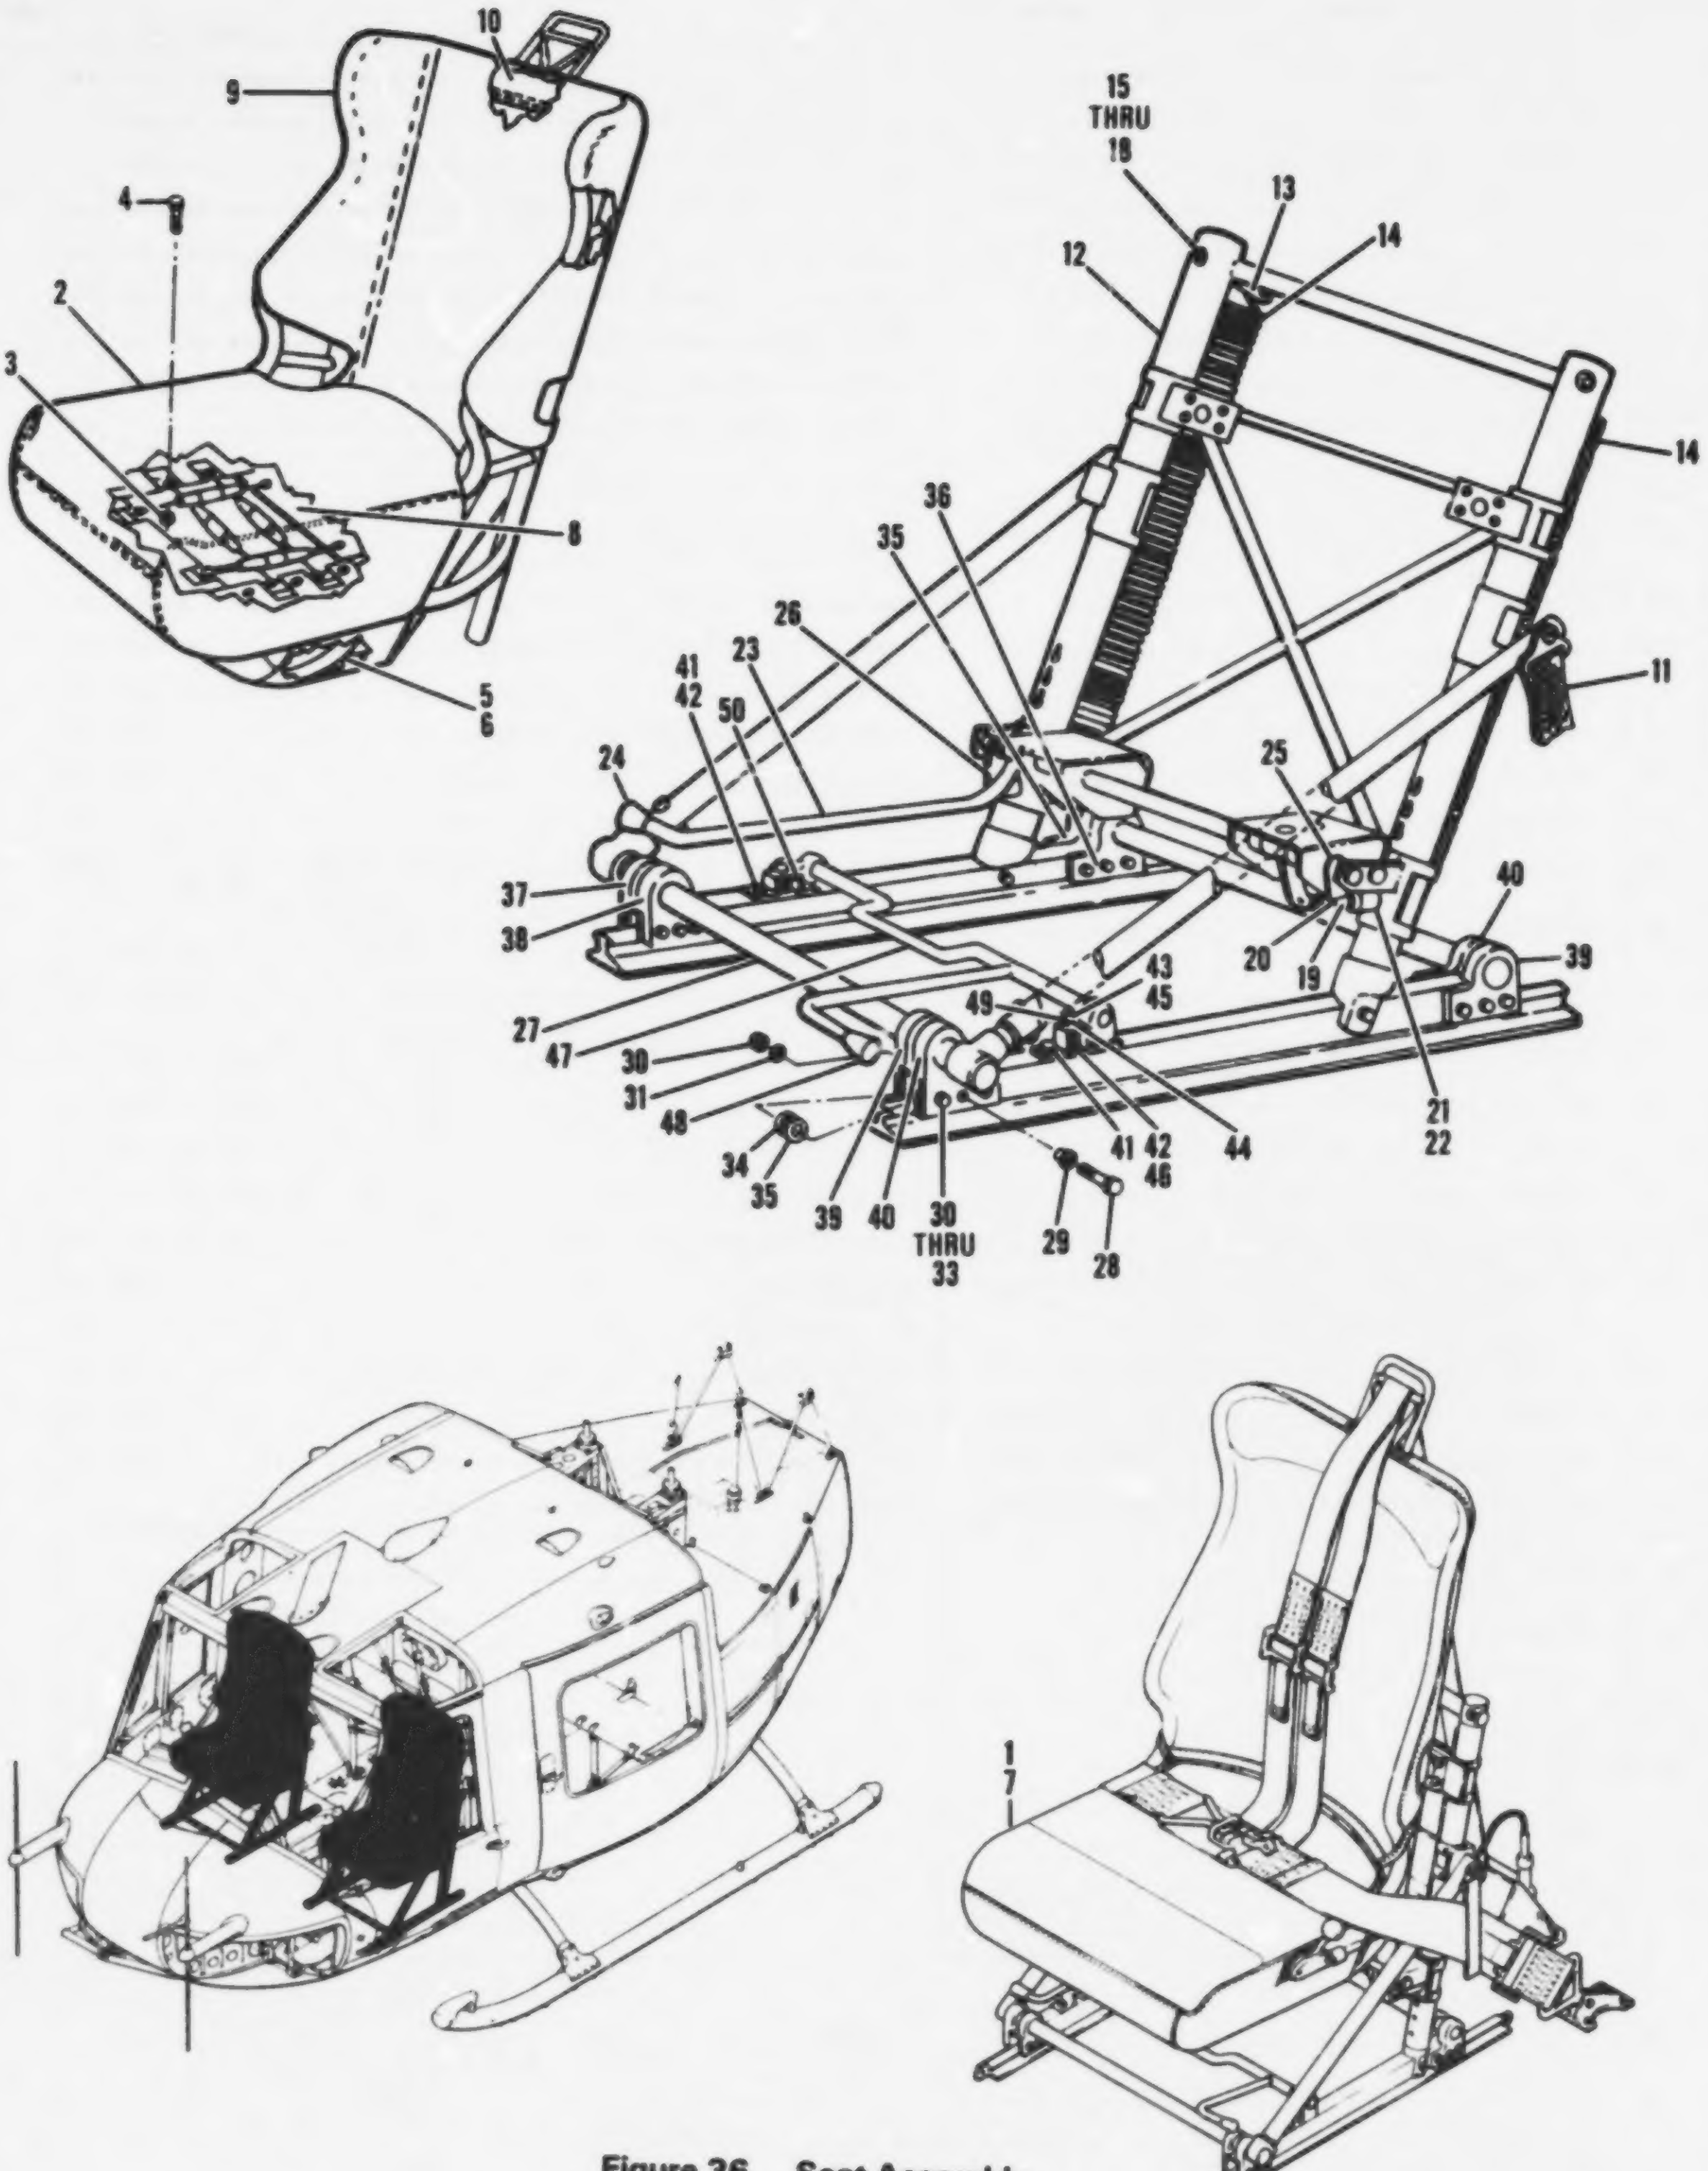
10
9
4
2
3
8
5
6
15
THRU
18
13
12
14
14
36
35
26
41
42
23
50
24
11
25
37
38
40
39
27
47
43
45
49
20
19
30
31
48
21
22
34
35
39
40
30
THRU
33
41
42
46
44
29
28
1
7

Figure 36. Seat Assembly

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
36	1	PAOOO	1680-00-021-8997	63788	3H1018-5	SEAT,AIRCRAFT USBL EFF (UH-1B) 63-8659 & SUBSEQUENT-LH,(UH-1B) 63-8500 & SUBSEQUENT-RH,(UH-1C) 64-14101 THRU 66-15022-LH,RH,SEE FIG.34 FOR NHA..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	2	PAOOO	1680-00-872-1238	63788	3H1018-11-00	.COVER,AIRCRAFT SEAT..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	3	PAOZZ	5310-00-263-2862	96906	MS21045C3	..NUT,SELF-LOCKING,HE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
36	4	PAOZZ	5306-00-182-2058	88044	AN3H5A	..BOLT,MACHINE......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
36	5	PAOOO	1680-00-872-3284	63788	3H1018-8-00	.PAD,BTM,SEAT ASSY................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	6	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
36	7	PAOZZ	1680-00-872-1236	63788	3H1018-8-01	.COVER,AIRCRAFT SEAT..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	8	XBOZZ	1680-00-459-2056	63788	3H1018-13-00	.SEAT PAD ASSEMBLY.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	9	PAOZZ	1680-00-872-1239	63788	3H1018-12-00	.COVER,AIRCRAFT SEAT..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	10	XAOZZ	1680-00-459-2057	63788	3H1018-14-00	.SHOULDER PAD ASSEMB..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	11	PAOZZ	1680-00-872-1237	63788	3H1018-9-00	.BELT HOLDER ASSEMBL..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	12	XAOOZ	1680-00-435-6733	63788	3H1018-20-00	.COLUMN ASSY........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	13	PAOZZ	1680-00-872-6123	63788	3H1018-10-9	..SPRING ATTACHMENT................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	14	PAOZZ	1680-00-872-3282	63788	3HS161	..SPRING,SEAT ASSEMBL.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	15	PAOZZ	5310-00-857-5557	96906	MS21045L4	..NUT,SELF-LOCKING,HE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	16	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	17	PAOZZ	5306-00-271-6851	88044	AN43-21	..BOLT,EYE...........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	18	XAOZZ	1680-00-454-4434	63788	3H1007-10-05	..SPACER,PILOT SEAT...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	19	PBOZZ	5315-00-812-3759	96906	MS20392-2C11	..PIN,STRAIGHT,HEA.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	20	PAOZZ	5340-00-871-8785	63788	3H1007-20-06	..CLEVIS,ROD END....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	21	PAOZZ	5365-00-247-7243	63788	3H1031-20-05	..BUSHING,MACHINE THR.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	22	PAOZZ	1680-00-872-3283	63788	3HS68	..SPRING,SEAT ASSEMBL.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	23	PAOZZ	1680-00-872-1243	63788	3H1018-21-00	..HANDLE,ELEVATION,SE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	24	PAOZZ	5340-00-720-6327	75543	T37	..TIP,RUBBER.........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	25	XBOZZ	1680-00-936-9713	63788	3H1007-17-00	..LIFTER,CARRIAGE STD ,STOP PIN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	26	XBOZZ	1680-00-936-9714	63788	3H1007-18-00	..LIFTER,CARRIAGE STD ,STOP PIN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	27	XBOOO	1680-00-435-6729	63788	3H1018-15-00	.CARRIAGE ASSY......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	28	PAOZZ	5306-00-872-1274	63788	3H1018-15-14	..BOLT,MACHINE......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
36	29	XBOZZ	5310-00-995-8191	63788	3H1018-15-11	..WASHER,SPECIAL....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
36	30	PAOZZ	5310-00-877-5796	96906	MS21044N4	..NUT,SELF-LOCKING,HE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
36	31	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
36	32	PAOZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
36	33	PAOZZ	5306-00-182-1965	88044	AN4H17A	..BOLT,MACHINE......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
36	34	PAOZZ	1680-00-872-1241	63788	3H1018-15-13	..CARRIAGE ROLLER,SEA.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
36	35	PAOZZ	1680-00-872-1240	63788	3H1018-15-12	..SLEEVE,ECCENTRIC,SE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
36	36	PAOZZ	5306-00-582-5754	88044	AN300H15A	..BOLT,MACHINE......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
36	37	XBOZZ	1680-00-435-6730	63788	3H1018-15-03	..BRACKET,OUTBOARD LH.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	38	XBOZZ	1680-00-435-6732	63788	3H1018-15-05	..BRACKET,INBOARD LH...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	39	XBOZZ	1680-00-435-6731	63788	3H1018-15-04	..BRACKET,OUTBOARD RH.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	40	XBOZZ	1680-00-435-6744	63788	3H1018-15-06	..BRACKET,INBOARD RH...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	41	PAOZZ	5306-00-182-2057	88044	AN3H4A	..BOLT,MACHINE......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
36	42	PAOZZ	5310-00-576-5752	96906	MS35333-39	..WASHER,LOCK....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
36	43	PAOZZ	5315-00-087-9226	96906	MS20392-2C21	..PIN,STRAIGHT,HEADED............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	44	PBOZZ	5315-00-812-3759	96906	MS20392-2C11	..PIN,STRAIGHT,HEA...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	45	PAOZZ	5340-00-871-8784	63788	3H1007-15-21	..CLEVIS,ROD END.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	46	PAOZZ	1680-00-872-3283	63788	3HS68	..SPRING,SEAT ASSEMBL............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
36	47	PAOZZ	1680-00-872-1242	63788	3H1018-16-00	..HANDLE ASSEMBLY,CAR............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	48	PAOZZ	5340-00-720-6327	75543	T37	..TIP,RUBBER.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	49	XBOZZ	1680-00-936-9713	63788	3H1007-17-00	..LIFTER,CARRIAGE, STOP PIN.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
36	50	XBOZZ	1680-00-936-9714	63788	3H1007-18-00	..LIFTER,CARRIAGE, STOP PIN.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

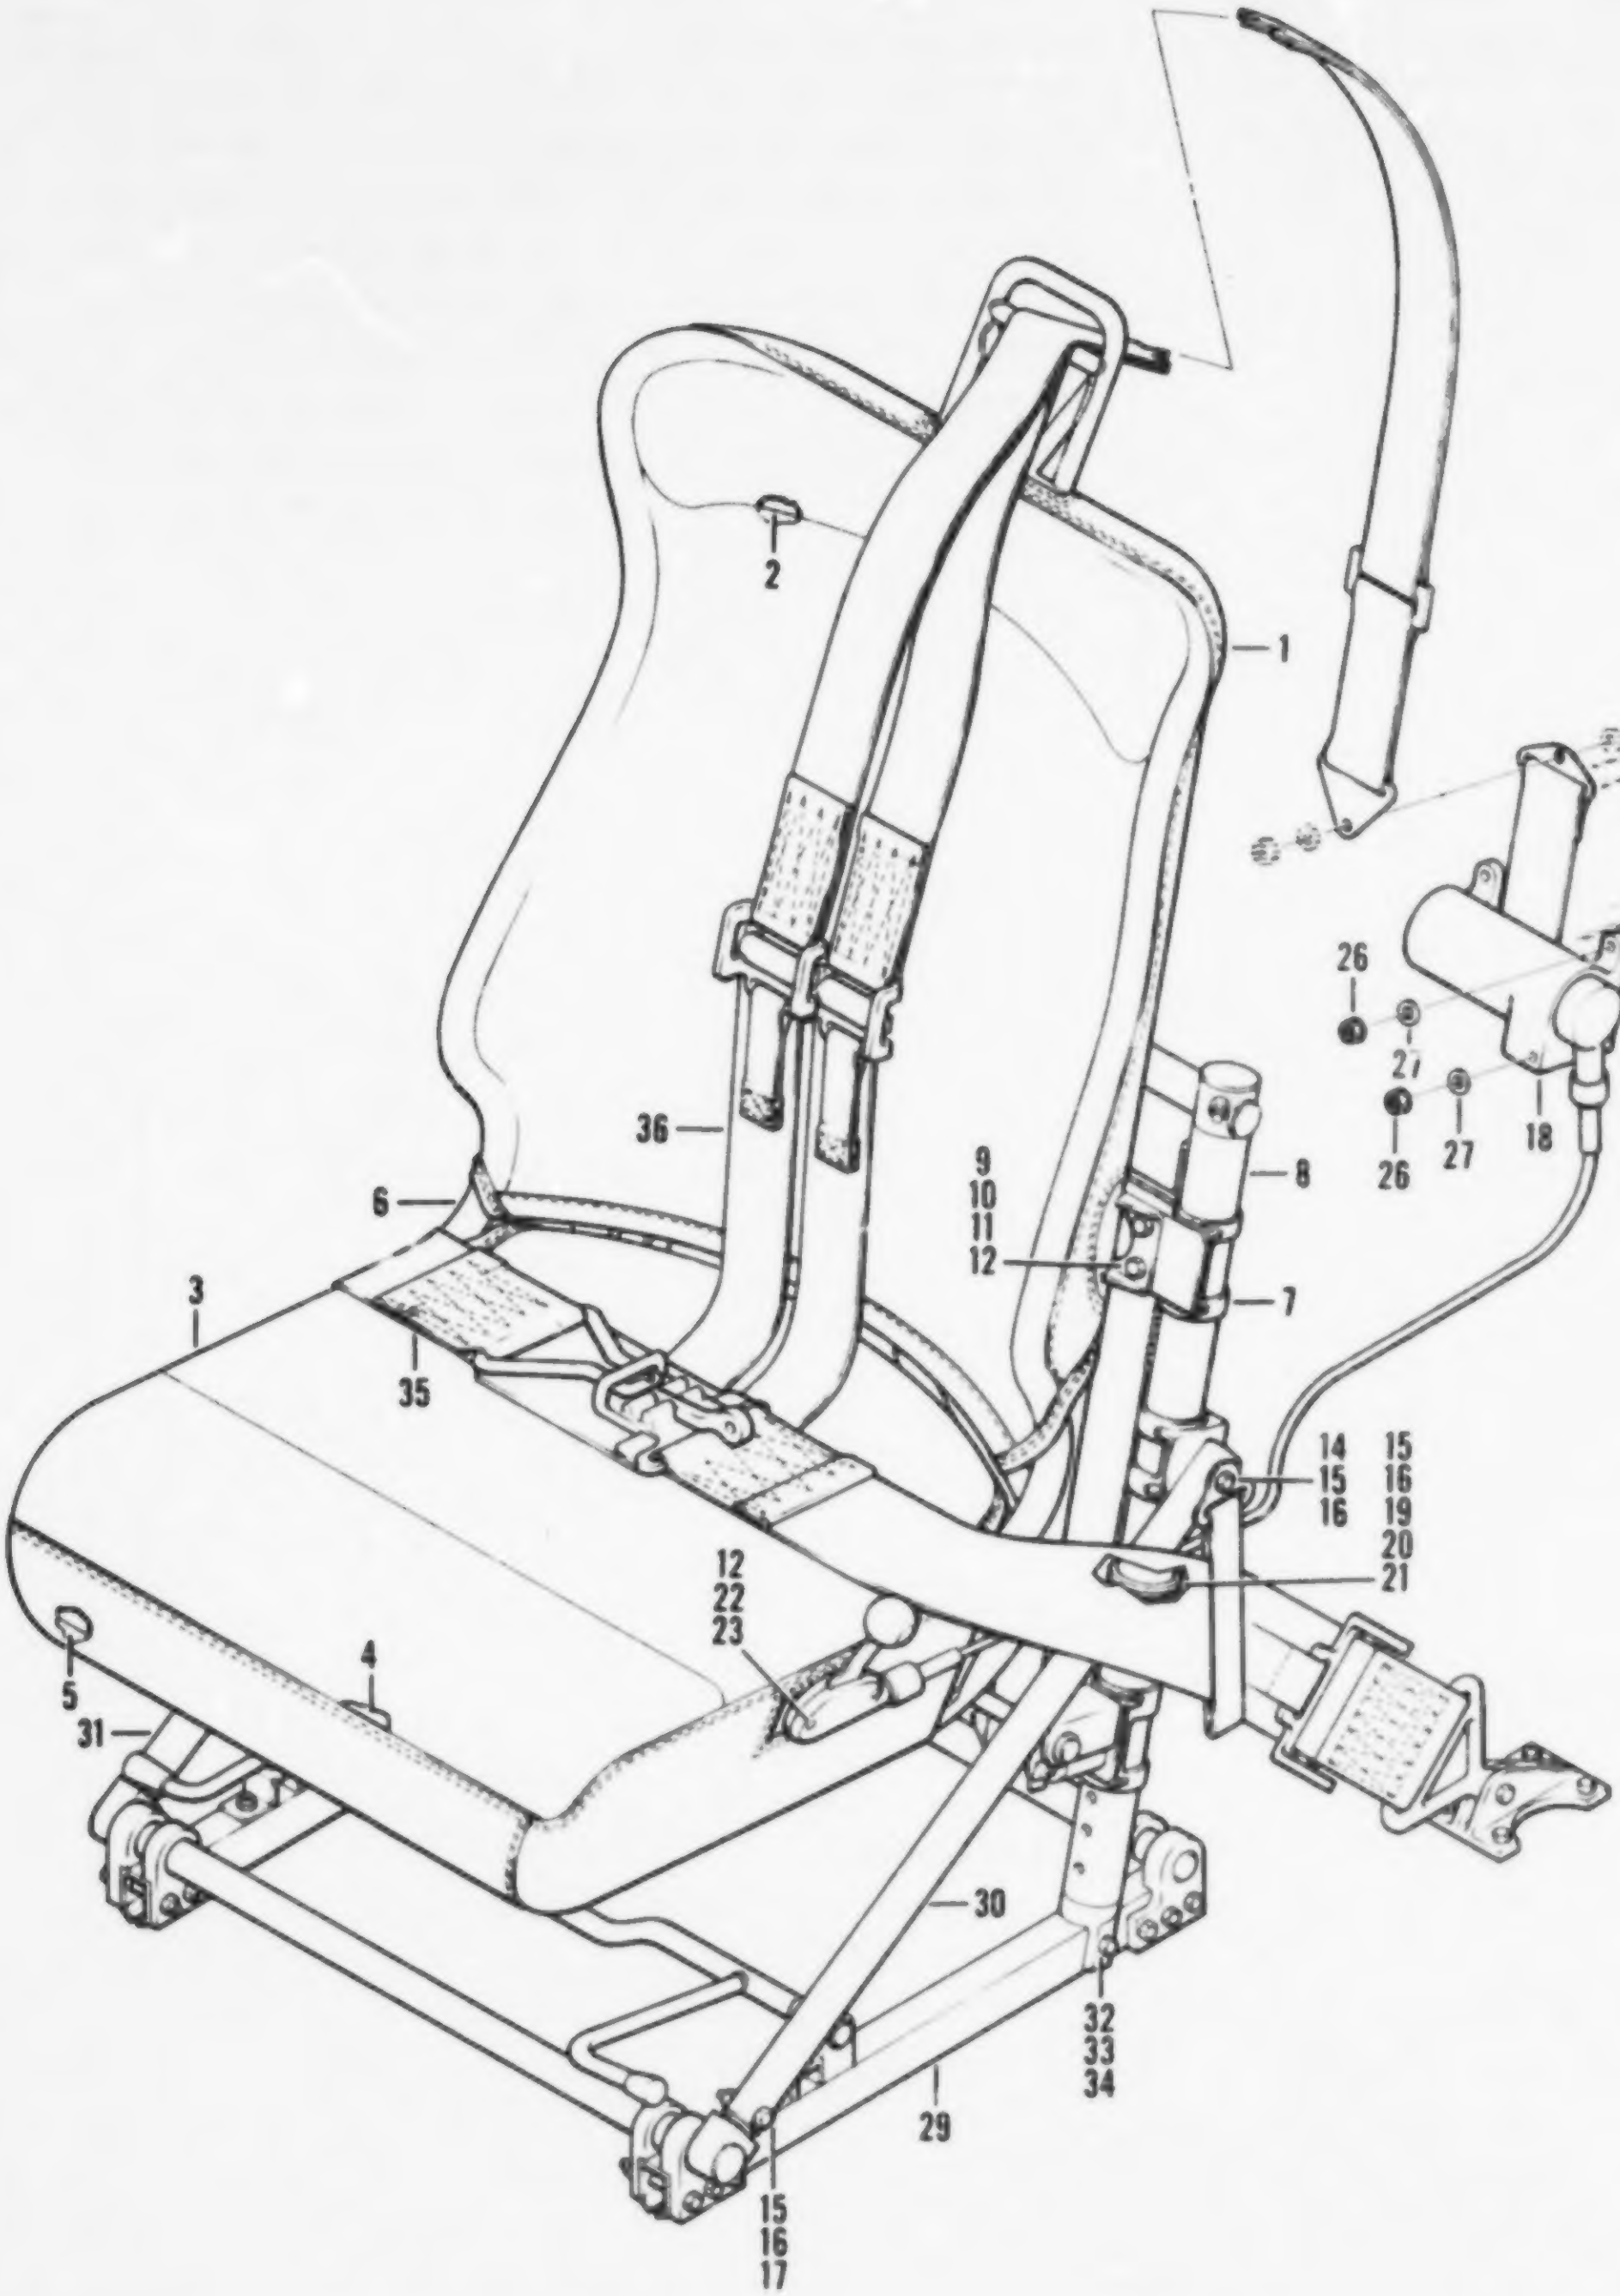
2
1
13
28
24
26
27
25
28
26
27
18
36
6
9
10
11
12
8
7
3
35
14
15
16
15
16
19
20
21
12
22
23
4
5
31
30
32
33
34
29
15
16
17

Figure 36A. Seat, Aircraft, Operators

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME			
36A		PA000	1680-01-166-9682	63788	3H1021-8	SEAT,AIRCRAFT SEE FIG.58 FOR NHA	UHX	EA	1
36A	1	PAOZZ	1680-01-164-1438	63788	3H1021-2H-00	.BACK COVER ASSEMBLY	UHX	EA	1
36A	2	PAOZZ	1680-01-164-1436	63788	3H1021-14-00	.SHOULDER PAD ASSEMB	UHX	EA	1
36A	3	PAOZZ	1680-01-164-1439	63788	3H1021-27-00	.SEAT COVER ASSEMBLY	UHX	EA	1
36A	4	PAOZZ	1680-00-459-2054	63788	3H1018-13-00	.SEAT PAD ASSEMBLY	UHX	EA	1
36A	5	PAOZZ	1680-01-164-1440	63788	3H1018-10-00	.BOTTOM PAD,SEAT	UHX	EA	1
36A	6	PAOZZ		63788	3H1021-60-00	.BUCKET WELDMENT,SEA	UHX	EA	1
36A	7	PBOZZ	1680-01-201-7825	63788	3H1021-25-00	.BEARING FRAME ASSY	UHX	EA	1
36A	8	XAOOZ		63788	3H1021-20-00	.COLUMN ASSY	UHX	EA	1
36A	9	PAOZZ	5306-00-182-2014	88044	AN4H3A	..BOLT,MACHINE	UHX	EA	16
36A	10	PAOZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT	UHX	EA	16
36A	11	PAOZZ	5310-00-784-8145	80205	NAS1068-A4	..NUT PLATE	UHX	EA	16
36A	12	PAOZZ	5320-00-118-2023	88044	AN427M3-3	..RIVET,SOLID	UHX	EA	36
36A	13	PAOZZ	5305-00-253-5618	96906	MS21318-27	..SCREW,DRIVE	UHX	EA	2
36A	14	PAOZZ	5306-00-151-1410	88044	AN4-28A	..BOLT,MACHINE	UHX	EA	2
36A	15	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT	UHX	EA	12
36A	16	PAOZZ	5310-00-061-7325	96906	MS21045-4	..NUT,SELF-LOCKING,HE	UHX	EA	6
36A	17	PAOZZ	5306-00-151-1421	88044	AN4-13A	..BOLT,MACHINE	UHX	EA	2
36A	18	PAOZZ	1680-01-166-9685	63788	0106176	..REEL,SHOULDER HARNE	UHX	EA	1
36A	19	PAOZZ	5330-01-210-7280	63788	LPG2U82J4	..SCREW,SEAT,AIRCRAFT	UHX	EA	2
36A	20	PAOZZ		63788	3HS185	..SEAT BELT ADAPTER	UHX	EA	2
36A	21	PAOZZ	5306-00-515-8064	88044	AN4-7A	..BOLT,MACHINE	UHX	EA	2
36A	22	PAOZZ	5310-00-777-5791	63788	MS21059-L3	..NUT,SELF-LOCKING,PL	UHX	EA	2
36A	23	PAOZZ	5365-00-304-7679	80205	NAS43DD3-12	..SPACER,SLEEVE	UHX	EA	2
36A	24	PAOZZ	5306-00-274-2119	88044	AN3-5A	..BOLT,MACHINE	UHX	EA	3
36A	25	PAOZZ	5306-00-150-9881	88044	AN3-24A	..BOLT,MACHINE	UHX	EA	1
36A	26	PAOZZ	5310-00-061-7326	96906	MS21045-3	..NUT,SELF-LOCKING,HE	UHX	EA	4
36A	27	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT	UHX	EA	4
36A	28	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT	UHX	EA	4
36A	29	XDOZO		63788	3H1018-15-00	.CARRIAGE ASSY	UHX	EA	1
36A	30	PAOZZ	1680-01-201-7827	63788	3H1018-29-00	.BRACE ASSY,SEAT	UHX	EA	1
36A	31	PAOZZ	1680-01-201-7828	63788	3H1018-30-00	.BRACE ASSY,SEAT	UHX	EA	1
36A	32	PAOZZ	5306-00-527-4126	88044	AN5-14A	..BOLT,MACHINE	UHX	EA	2
36A	33	PAOZZ	5310-00-982-4912	96906	MS21045-5	..NUT,SELF-LOCKING,HE	UHX	EA	2
36A	34	PAOZZ	5310-00-167-0836	88044	AN960-516L	..WASHER,FLAT	UHX	EA	2
36A	35	PAOOZ	1680-00-516-6543	07878	54H19651	..BELT,AIRCRAFT SAFET	UHX	EA	1
36A	36	PA000	1680-00-485-3047	80049	5003770	..HARNESS,AIRCRAFT SA	UHX	EA	1

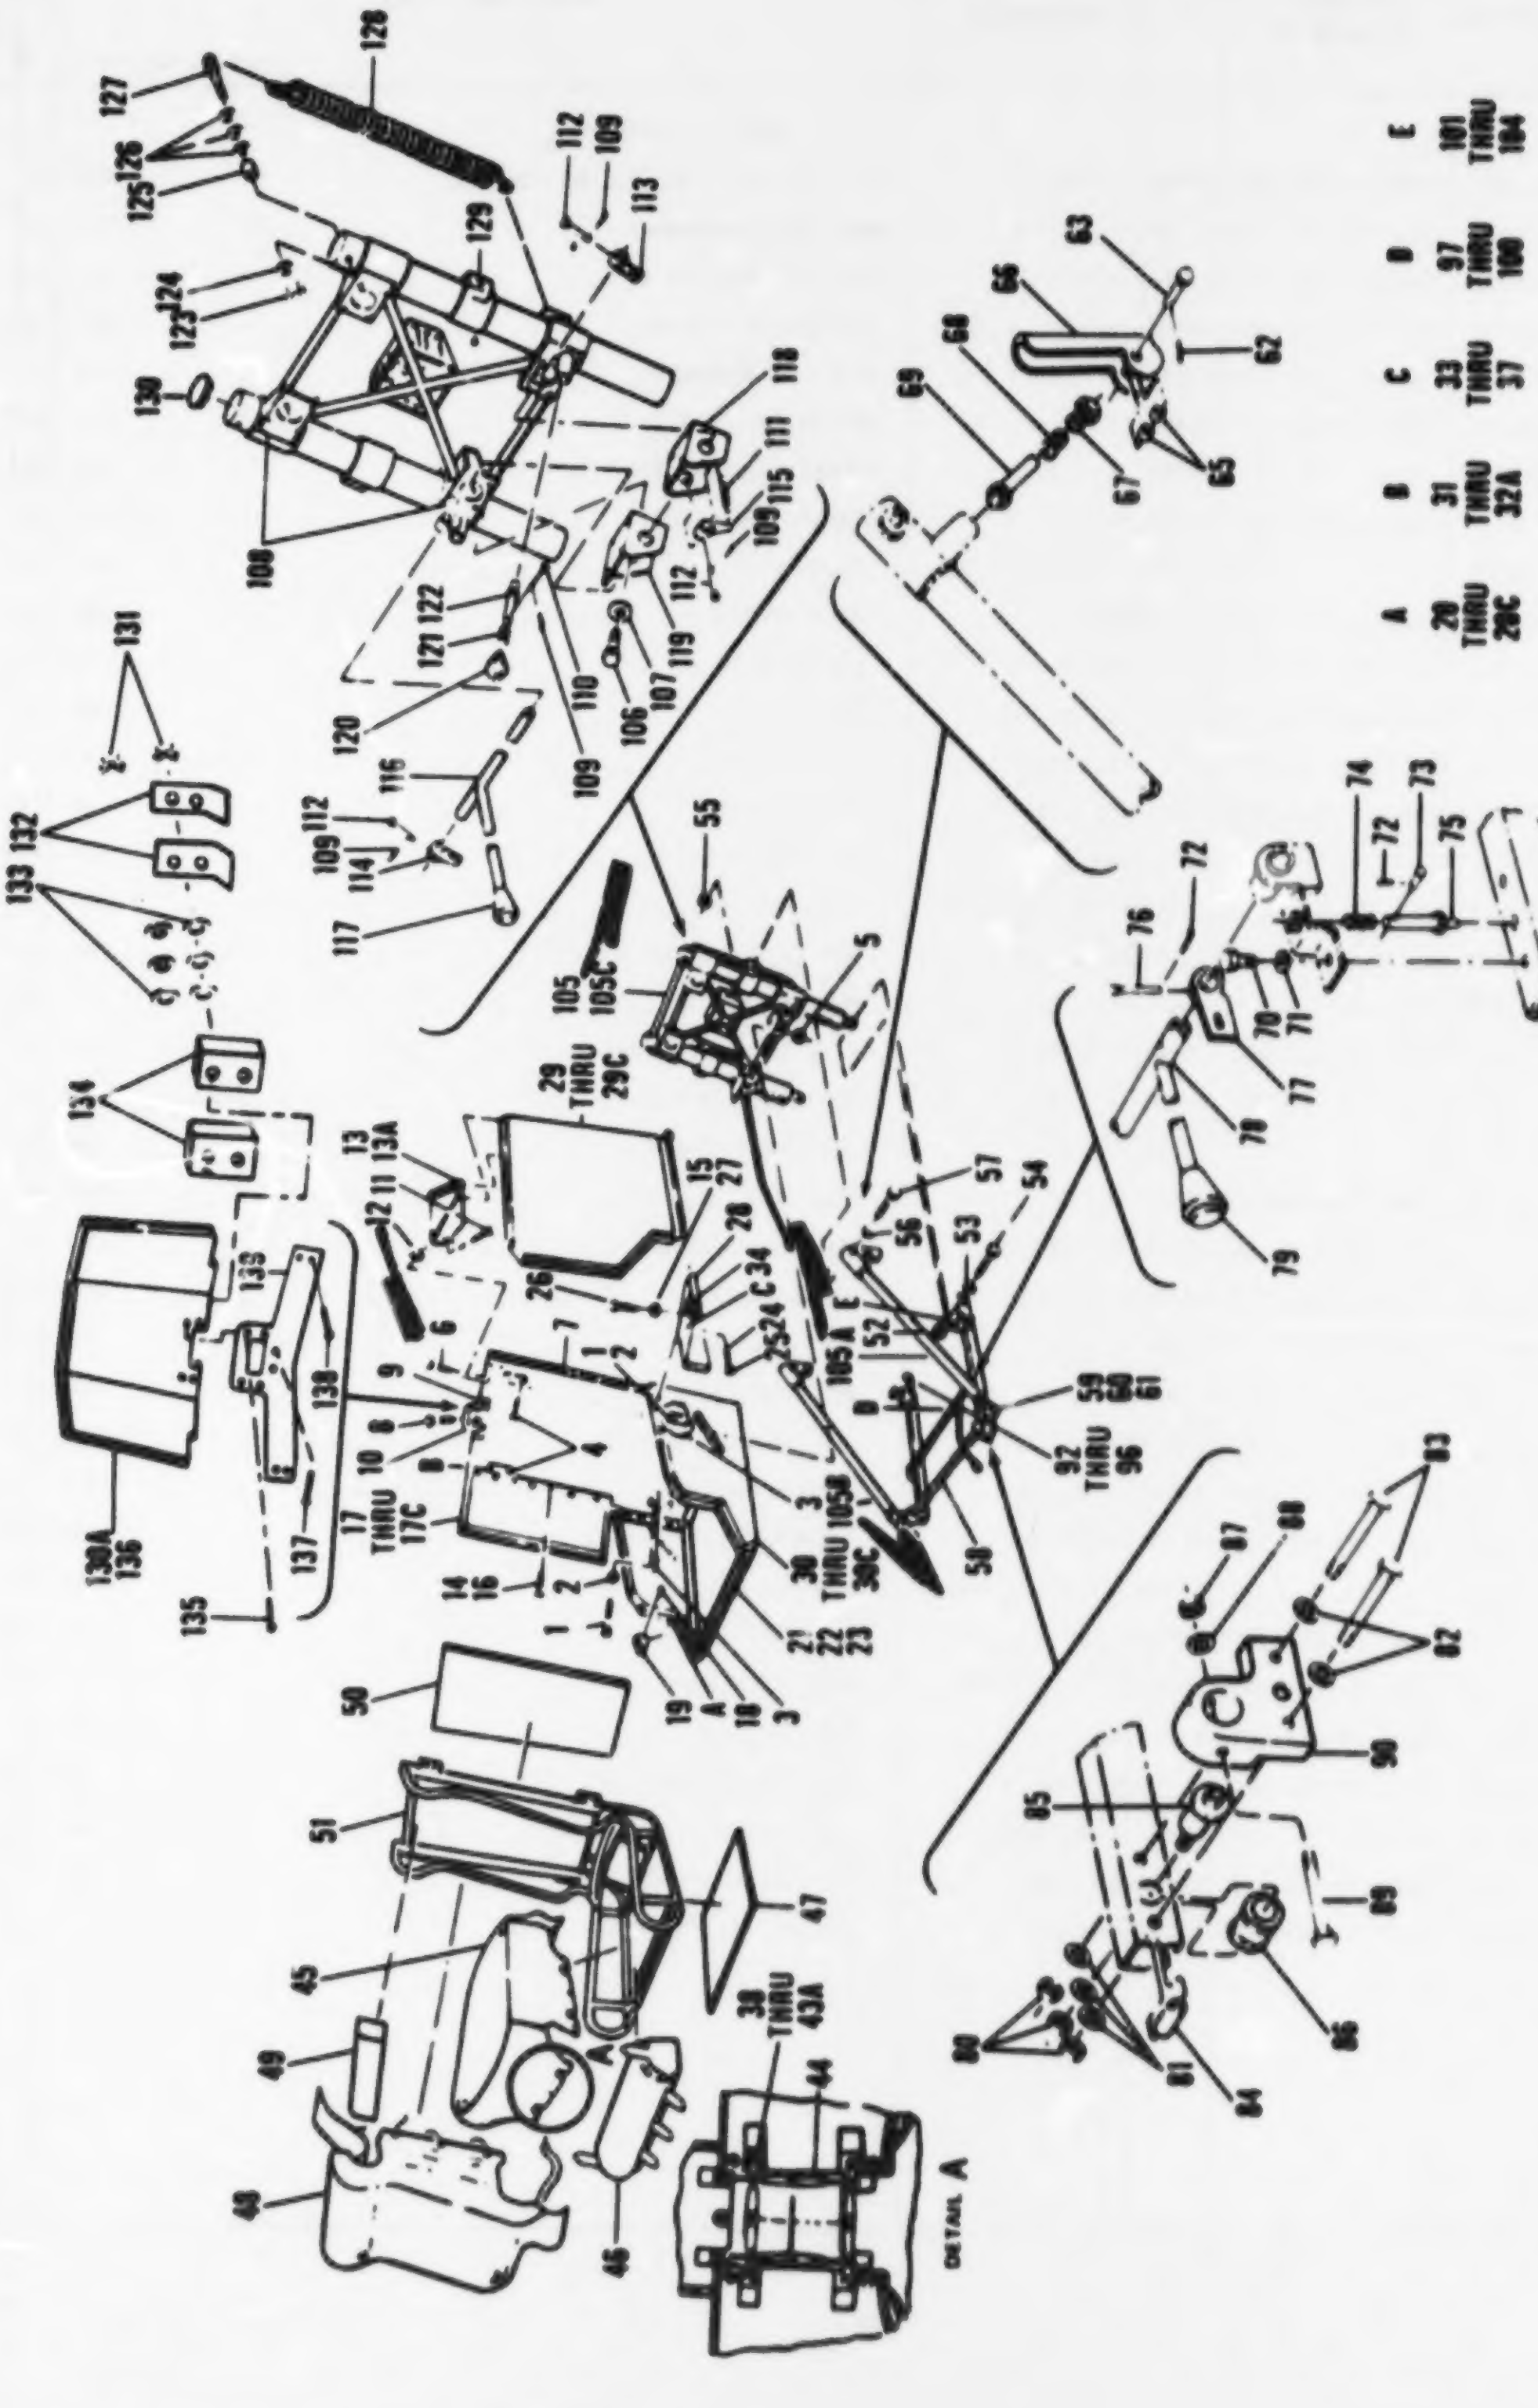
128
127
126
125
112
109
113
129
124
123
130
118
111
115
109
108
112
119
107
106
122
121
120
110
109
131
116
112
109
114
117
133
132
55
105
105C
5
29
THRU
29C
13
11
13A
12
15
27
28
26
C34
6
25
24
105A
E
52
53
56
57
54
134
138
9
8
10
1
2
7
4
B
3
17
THRU
17C
14
16
2
1
30
THRU
30C
105B
58
59
60
61
92
THRU
96
21
22
23
19
A
18
3
136A
136
137
135
50
51
47
45
49
48
38
THRU
43A
44
46
DETAIL A
63
66
62
68
69
67
65
72
76
74
73
72
75
70
71
77
78
79
91
83
87
88
82
90
85
89
86
80
81
84
A
29
THRU
29C
B
31
THRU
32A
C
33
THRU
37
D
97
THRU
100
E
101
THRU
104

Figure 37. Armor Seat Installation

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
37		AOOOZ	1680-00-933-9385	09986	178062-3	SEAT,ARMOR SEE FIG.33 AND 34 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37		AOOOZ	1680-00-933-9384	09986	178061-3	SEAT,ARMOR SEE FIG.33 AND 34 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	1	PAOZZ	5306-00-182-1961	88044	AN4H13A	.BOLT,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	2	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	3	PAOZZ	5305-00-058-4011	96906	MS24694S105	.SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	4	XDOZZ		81996	178010-11	.BOLT,SELF-LOCKING NOT REQUIRED WHEN HEADGUARD ASSY IS INSTALLED FOR AMBULANCE UNITS.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	5	PAOZZ	5310-00-877-5796	96906	MS21044N4	.NUT,SELF-LOCKING,HE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
37	6	PAOZZ	5305-00-058-4012	96906	MS24694S107	.SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
37	7	PAOOO	1680-00-944-7811	81996	178059-1	.SHELL,ARMOR SEAT, CO-PILOT U/O PN 178062-3 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	7	PAOOO	1680-00-944-7985	81996	178060-1	.SHELL,ARMOR SEAT, PILOT.........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	8	PAOZZ	5306-00-932-5199	81996	178010-13	..BOLT,SELF-LOCKING NOT REQUIRED WHEN HEADGUARD ASSY IS INSTALLED FOR AMBULANCE UNITS.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	9	PAOZZ	1680-00-176-1107	81996	178057-2	..GUIDE,SHOULDER HARN HARNESS NOT REQUIRED WHEN HEADGUARD ASSEMBLY IS INSTALLED FOR AMBULANCE UNITS ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	10	MFOZZ	1680-00-979-8065	81996	178065-1	..RUNNER,SHOULDER HARNESS........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	11	PAOZZ	5306-00-924-7770	70143	178010-5	..BOLT,SELF-LOCKING...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
37	12	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
37	13	PAOOO	1680-00-977-1823	81996	178055-2	..BRACKET,CHANNEL,ARM U/O PN 178059-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	13	PAOOO	1680-00-977-1824	81996	178055-1	..BRACKET,CHANNEL,ARM U/O PN 178060-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	13A	PAOZZ	1680-00-977-1735	81996	178032-1	...SUPPORT,ARMOR,SEAT.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	14	PAOZZ	5306-00-924-7770	70143	178010-5	..BOLT,SELF-LOCKING U/O PN 178060-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
37	15	PAOZZ	1680-00-975-0242	81996	178056-1	..BRACKET,ANGLE-PILOT U/O PN 178060-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	16	XDOZZ	5306-00-924-7768	70143	178010-1	..BOLT,SELF-LOCKING U/O PN 178059-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	46
37	16	XDOZZ	5306-00-924-7768	70143	178010-1	..BOLT,SELF-LOCKING U/O PN 178060-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	39
37	17	PAOOO	1680-00-975-0200	81996	178042-1	..PLATE,ARMOR SEAT INBOARD U/O PN 178059-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	17A	MOOZZ	1680-00-H05-9359	81996	178042-3	...CHANNEL.........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	17B	PAOZZ	1680-00-977-1971	81996	178040-1	..PLATE,ARMOR SEAT INBOARD U/O PN 178060-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	17C	MOOZZ	1680-00-H05-9356	81996	178040-3	...CHANNEL.........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	18	PAOZZ	5305-00-900-0596	96906	MS24693S70	..SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	19	PAOZZ	1680-00-977-1964	81996	178053-1	..BRACKET,ARMOR SEAT..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	20	PAOOO	1680-00-975-0194	81996	178050-2	..PLATE,ARMOR,SEAT SI U/O PN 178059-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	20A	MOOZZ	1680-00-H05-9355	81996	178050-3	...CHANNEL.........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	20B	PAOOO	1680-00-975-0193	81996	178050-1	..PLATE,ARMOR,SEAT SI U/O PN 178060-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	20C	MOOZZ	1680-00-H05-9357	81996	178050-5	...CHANNEL.........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	20C	MOOZZ	1680-00-H05-9361	81996	178050-7	...CHANNEL.........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	21	PAOOO	1680-00-975-0199	81996	178044-1	..PLATE,ARMOR,SEAT BO.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
37	22	PAOZZ	5305-00-782-8408	96906	MS24693S96	...SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	23	XBOZZ	5365-00-945-4494	70143	177785-1	...SPACER,PLATE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	24	PAOZZ	5306-00-924-7771	70143	178010-7	..BOLT,SELF-LOCKING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	25	PAOZZ	5310-00-837-2139	81996	177771-3	..WASHER,PLAIN SLIDING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	26	PAOZZ	5306-00-182-2017	88044	AN4H6A	..BOLT,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	27	PAOZZ	5310-00-877-5796	96906	MS21044N4	..NUT,SELF-LOCKING,HE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	28	PAOZZ	1680-00-181-3592	81996	178054-12	..BRACKET,LOWER,ARMOR U/O PN 178059-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	28	PAOZZ	1680-00-181-3593	81996	178054-11	..BRACKET,LOWER,ARMOR U/O PN 178060-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	29	PAOOO	1680-00-977-1973	81996	178038-1	..PLATE,ARMOR,SEAT,SH U/O PN 178059-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	29A	MOOZZ	1680-00-H05-9353	81996	178038-3	...CHANNEL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	29B	PAOOO	1680-00-975-0201	81996	178036-1	..PLATE,ARMOR,SEAT SI U/O PN 178060-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	29C	MOOZZ	1680-00-H05-9362	81996	178036-3	...CHANNEL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	30	PAOOO	1680-00-977-2019	81996	178052-2	..PLATE,ARMOR,SEAT SI U/O PN 178059-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	30A	MOOZZ	1680-00-H05-9360	81996	178052-3	...CHANNEL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	30B	PAOOO	1680-00-977-1977	81996	178052-1	..PLATE,ARMOR,SEAT SI U/O PN 178060-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	30C	MOOZZ	1680-00-H05-9363	81996	178052-5	...CHANNEL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	30C	MOOZZ	1680-00-H05-9358	81996	178052-7	...CHANNEL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	31	PAOOO	1680-00-975-0196	81996	178046-3	..PLATE,ARMOR,SEAT BA U/O PN 178059-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	31	PAOOO	1680-00-975-0197	81996	178046-1	..PLATE,ARMOR,SEAT BA U/O PN 178060-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	32	PAOZZ	5305-00-782-8408	96906	MS24693S96	...SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	32A	XBOZZ	1680-00-943-0782	70143	177786-1	...BLOCK,ARMOR SUPPORT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	33	PAOOO	1680-00-883-1673	70143	177778-5	..LATCH,ARMOR SEAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	34	PAOZZ	5315-00-614-3586	96906	MS16562-212	...PIN,SPRING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	35	PAOZZ	1680-00-939-8858	81996	177757-1	...HANDLE,DOOR..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	36	PAOZZ	5365-00-961-5622	81996	177780-1	...BUSHING,MACHINE THR..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	37	PBOZZ	1680-00-939-8882	81996	177781-1	...BODY,LATCH,ARMOR SE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	38	PAOOO	1680-00-933-9386	09986	AL1040-5	.FRAME AND CUSHION ARMOR SEAT....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	39	PAOOO	1680-00-168-5768	09986	AL1040-60-00	..BUCKET ASSY,SEAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	40	PAOZZ	5310-00-263-2862	96906	MS21045C3	...NUT,SELF-LOCKING,HE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
37	41	PAOZZ	5306-00-274-2119	88044	AN3-5A	...BOLT,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
37	42	PAOZZ	5340-00-619-7031	96906	MS21256-1	...CLIP,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	43	PAOZZ	5340-00-068-0526	96906	MS21252-2LS	...CLEVIS,ROD END..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	43A	PAOZZ	5340-00-068-0525	96906	MS21252-2RS	...CLEVIS,ROD END..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	44	PAOZZ	5340-00-067-9871	96906	MS21251B2S	...TURNBUCKLE BODY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	45	PAOZZ	1680-00-453-5677	09986	AL1040-11-00	...COVER,AIRCRAFT SEAT BOTTOM....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	46	PAOZZ	1680-00-247-7230	09986	AL1040-13-00	...CUSHION,SEAT BOTTOM..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	47	PAOZZ	1680-00-251-2540	09986	AL1040-9-00	...FILLER,SEAT BOTTOM..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	48	PAOZZ	1680-00-453-5678	09986	AL1040-12-00	...COVER,SEAT BACK..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	49	PAOZZ	1680-00-247-7231	09986	AL1040-14-00	...CUSHION,SEAT BACK..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
37	50	PAOZZ	1680-00-251-2534	09986	AL1040-8-00	...FILLER,SEAT BACK..............	UHE,UHH,UHM,UHV,UHX	EA	1
37	51	XAOZZ		09986	AL1040-55-00	...SEAT,BUCKET,FRAME.............	UHE,UHH,UHM,UHV,UHX	EA	1
37	52	PAOZZ	5310-00-061-7325	96906	MS21045-4	..NUT,SELF-LOCKING...............	UHE,UHH,UHM,UHV,UHX	EA	2
37	53	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT....................	UHE,UHH,UHM,UHV,UHX	FA	2
37	54	PAOZZ	5306-00-247-7244	09986	AL1040-10-08	..BOLT,SPECIAL...................	UHE,UHH,UHM,UHV,UHX	EA	2
37	55	PAOZZ	5310-00-987-4908	96906	MS21045-6	..NUT,SELF-LOCKING,HE............	UHE,UHH,UHM,UHV,UHX	EA	2
37	56	PAOZZ	5310-00-167-0837	88044	AN960-616L	..WASHER,FLAT....................	UHE,UHH,UHM,UHV,UHX	EA	2
37	57	PAOZZ	5306-00-582-6692	88044	AN6-36A	..BOLT,MACHINE...................	UHE,UHH,UHM,UHV,UHX	EA	2
37	58	XBOOO	1680-00-140-3520	09986	AL1040-15-00	..CARRIAGE ASSEMBLY,S............	UHE,UHH,UHM,UHV,UHX	EA	1
37	59	PAOZZ	5310-00-061-7325	96906	MS21045-4	...NUT,SELF-LOCKING..............	UHE,UHH,UHM,UHV,UHX	EA	2
37	60	PAOZZ	5310-00-141-1795	88044	AN960-416	...WASHER,FLAT...................	UHE,UHH,UHM,UHV,UHX	EA	4
37	61	PAOZZ	5306-00-151-1422	88044	AN4-12A	...BOLT,MACHINE..................	UHE,UHH,UHM,UHV,UHX	EA	2
37	62	PAOZZ	5315-00-815-1405	96906	MS24665-151	...PIN,COTTER....................	UHE,UHH,UHM,UHV,UHX	EA	2
37	63	PAOZZ	5315-00-080-1941	96906	MS20392-2C27	...PIN,STRAIGHT,HEA..............	UHE,UHH,UHM,UHV,UHX	EA	2
37	65	PAOZZ	5365-00-404-3335	09986	AL1040-29-34	...SPACER,SLEEVE.................	UHE,UHH,UHM,UHV,UHX	EA	4
37	66	PAOZZ	1680-00-251-2533	09986	AL1040-29-30	...LEVER,CAM RELEASE.............	UHE,UHH,UHM,UHV,UHX	FA	2
37	67	PAOZZ	5365-00-247-7243	09986	AL1031-20-05	...BUSHING,MACHINE THR...........	UHE,UHH,UHM,UHV,UHX	EA	2
37	68	PAOZZ	1680-00-872-3283	09986	ALS68	...SPRING,SEAT ASSEMBL...........	UHE,UHH,UHM,UHV,UHX	EA	2
37	69	PAOZZ	5315-00-251-8731	09986	AL1040-29-31	...PIN,SHOULDER,HEADLE...........	UHE,UHH,UHM,UHV,UHX	EA	2
37	70	PAOZZ	5306-00-722-0393	88044	AN3-4A	...BOLT,MACHINE..................	UHE,UHH,UHM,UHV,UHX	EA	4
37	71	PAOZZ	5310-00-576-5752	96906	MS35333-39	...WASHER,LOCK...................	UHE,UHH,UHM,UHV,UHX	FA	4
37	72	PAOZZ	5315-00-815-1405	96906	MS24665-151	...PIN,COTTER....................	UHE,UHH,UHM,UHV,UHX	EA	4
37	73	PBOZZ	5315-00-951-2395	96906	MS20392-2C13	...PIN,STRAIGHT,HEADED...........	UHE,UHH,UHM,UHV,UHX	EA	2
37	74	PAOZZ	1680-00-872-3283	09986	ALS68	...SPRING,SEAT ASSEMBL...........	UHE,UHH,UHM,UHV,UHX	EA	2
37	75	PAOZZ	5340-00-871-8784	09966	AL1007-15-21	...CLEVIS,ROD END................	UHE,UHH,UHM,UHV,UHX	EA	2
37	76	PAOZZ	5315-00-812-3757	96906	MS20392-1C21	...PIN,STRAIGHT,HEA..............	UHE,UHH,UHM,UHV,UHX	EA	2
37	77	PAOZZ	1680-00-247-7233	09986	AL1040-17-00	...PIN ASSY,AIRCRAFT S STOP-LH	UHE,UHH,UHM,UHV,UHX	FA	1
37	77	PAOZZ	1680-00-247-7234	09986	AL1040-18-00	...PIN ASSY,AIRCRAFT S STOP-RH	UHE,UHH,UHM,UHV,UHX	EA	1
37	78	PAOZZ	1680-00-061-6100	09986	AL1019-16-00	...LEVER,ADJUSTMENT,SE...........	UHE,UHH,UHM,UHV,UHX	FA	1
37	79	PAOZZ	5340-00-720-6327	75543	T37	...TIP,RUBBER....................	UHE,UHH,UHM,UHV,UHX	EA	1
37	80	PAOZZ	5310-00-061-7325	96906	MS21045-4	...NUT,SELF-LOCKING..............	UHE,UHH,UHM,UHV,UHX	EA	6
37	81	PAOZZ	5310-00-141-1795	88044	AN960-416	...WASHER,FLAT...................	UHE,UHH,UHM,UHV,UHX	FA	6
37	82	PAOZZ	5310-00-167-0835	88044	AN960-416L	...WASHER,FLAT...................	UHE,UHH,UHM,UHV,UHX	EA	4
37	83	PAOZZ	5306-00-151-1419	88044	AN4-15A	...BOLT,MACHINE..................	UHE,UHH,UHM,UHV,UHX	FA	4
37	84	PAOZZ	5365-00-247-3436	09986	AL1040-10-03	...SPACER,SLEEVE.................	UHE,UHH,UHM,UHV,UHX	EA	4
37	85	PAOZZ	1680-00-247-7232	09986	AL1040-15-10	...BOLT ASSY, ECCENTRIC..........	UHE,UHH,UHM,UHV,UHX	EA	2
37	86	PAOZZ	1680-00-872-1241	09986	AL1018-15-13	...CARRIAGE ROLLER,SEA...........	UHE,UHH,UHM,UHV,UHX	EA	2
37	87	PAOZZ	5310-00-061-7326	96906	MS21045-3	...NUT,SELF-LOCKING HE...........	UHE,UHH,UHM,UHV,UHX	FA	2
37	88	PAOZZ	5310-00-167-0834	88044	AN960-10L	...WASHER,FLAT...................	UHE,UHH,UHM,UHV,UHX	FA	2
37	89	PAOZZ	5306-00-151-0779	88044	AN3-15A	...BOLT,MACHINE..................	UHE,UHH,UHM,UHV,UHX	FA	2
37	90	XBOZZ	1680-00-H02-4624	09986	AL1040-15-03	...BRACKET-LH....................	UHE,UHH,UHM,UHV,UHX	EA	1
37	90	XBOZZ	1680-00-H02-4625	09986	AL1040-15-04	...BRACKET-RH....................	UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
37	91	PAOZZ	1680-00-251-2523	63788	3H1018-15-22	...BRACKET,AIRCRAFT SE............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	92	PAOZZ	5310-00-061-7325	96906	MS21045-4	...NUT,SELF-LOCKING................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	93	PAOZZ	5310-00-141-1795	88044	AN960-416	...WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	94	PAOZZ	5310-00-167-0835	88044	AN960-416L	...WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	95	PAOZZ	5363-00-247-3436	63788	3H1040-10-03	...SPACER,SLEEVE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	96	PAOZZ	5306-00-151-1422	88044	AN4-12A	...BOLT,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	97	PAOZZ	5310-00-061-7325	96906	MS21045-4	...NUT,SELF-LOCKING................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	98	PAOZZ	5310-00-141-1795	68044	AN960-416	...WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	99	PAOZZ	1680-00-247-7232	63788	3H1040-15-10	...BOLT ASSY, ECCENTRIC..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	100	PAOZZ	1680-00-872-1241	63788	3H1018-15-13	...CARRIAGE ROLLER,SEA.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	101	PAOZZ	5310-00-982-4912	96906	MS21045-5	...NUT,SELF-LOCKING,HE............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	102	PAOZZ	5310-00-167-0836	88044	AN960-516L	...WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	103	PAOZZ	5365-00-404-3334	63788	3H1018-10-04	...SPACER,SLEEVE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	104	PAOZZ	5306-00-180-2753	88044	AN5H14	...BOLT,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	105	PAOZZ	1680-01-045-5878	63788	3H1040-15-01	...CHANNEL,LEFT HAND...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	105	PAOZZ	1680-01-045-5877	63788	3H1040-15-02	...CHANNEL,RIGHT HAND..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	105A	XBOZZ		63788	3H1040-29-00	..SIDE BRACE ASSY-LH..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	105B	XBOZZ		63788	3H1040-30-00	..SIDE BRACE ASSY-RH...................UHB,UHC,UHE,UHH,UHM,UHV	EA	1
37	105C	XBOOZ	1680-00-169-0944	63788	3H1040-20-00	..COLUMN ASSY,SEAT.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	FA	1
37	106	PAOZZ	5306-00-150-9105	88044	AN4-4A	...BOLT,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
37	107	PAOZZ	5310-00-167-0835	88044	AN960-416L	...WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
37	108	PBOZZ	5310-00-784-8145	96906	MS21075L4	...NUT,SELF-LOCKING,PL............UHB,UHC,UHE,UHH,UHM,UHV,UHX	FA	16
37	109	PAOZZ	5315-00-815-1405	96906	MS24665-151	...PIN,COTTER......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
37	110	PBOZZ	5315-00-951-2395	96906	MS20392-2C13	...PIN,STRAIGHT,HEADED............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	111	PAOZZ	5360-00-438-2097	84830	LE055D4SS	...ELECTRICAL INSTL...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	112	PAOZZ	5315-00-812-3757	96906	MS20392-1C21	...PIN,STRAIGHT,HEA...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
37	113	PAOZZ	1680-00-247-7233	63788	3H1040-17-00	...PIN ASSY,AIRCRAFT S STOP-LH ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	114	PAOZZ	1680-00-247-7234	63788	3H1040-18-00	...PIN ASSY,AIRCRAFT S STOP-RH ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	115	PAOZZ	1680-00-251-2527	63788	3H1031-10-10	...BELL CRANK......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	116	PAOZZ	1680-00-247-7235	63788	3H1040-21-00	...LEVER,SEAT ELEVATIO............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	117	PAOZZ	5340-00-720-6327	75543	T37	...TIP,RUBBER......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	118	XBOZZ	1680-00-H02-4631	63788	3H1040-25-31	...BRACKET-LH......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	119	XBOZZ	1680-00-H02-4632	63788	3H1040-25-32	...BRACKET-RH......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	120	PAOZZ	5365-00-247-7243	63788	3H1031-20-05	...BUSHING,MACHINE THR............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	121	PAOZZ	1680-00-872-3283	63788	3HS68	...SPRING,SEAT ASSEMBL............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	122	PAOZZ	5340-00-871-8785	63788	3H1007-20-06	...CLEVIS,ROD END.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	123	PAOZZ	5310-00-061-7325	96906	MS21045-4	...NUT,SELF-LOCKING...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	124	PAOZZ	5310-00-167-0835	88044	AN960-416L	...WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	125	XBOZZ	1680-00-454-4434	63788	3H1007-10-05	...SPACER,PILOT SEAT..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	126	PAOZZ	5310-00-141-1795	88044	AN960-416	...WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
37	127	PAOZZ	5306-00-271-6851	88044	AN43-21	...BOLT,EYE........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	128	PAOZZ	5360-00-404-3336	63788	3HS150	...SPRING,HELICAL,COMP............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
37	129	PAOZZ	1680-00-251-2532	63788	3H1040-29-01	...SADDLE AND SLEEVE,U............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	130	PAOZZ	5340-00-270-8544	61864	SS48174	...BUTTON,PLUG..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37		XCFZZ		97499	1560UH1-421-3	HEADGUARD INSTL KIT REQUIRED WHEN HEADGUARD ASSY IS INSTALLED FOR AMBULANCE UNITS.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	130A	AOOOO	1560-00-H04-1345	81996	1560UH1-421-1	.HEADGUARD ASSEMBLY REQUIRED WHEN HEADGUARD ASSEMBLY IS INSTALLED FOR AMBULANCE UNITS.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	131	PAOZZ	5310-00-857-4959	96906	MS21044C6	..NUT,SELF-LOCKING,HE............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	132	PAOZZ	1680-00-403-1147	81996	1560UH1-417-1	..CLAMP,SUPPORT,ARMOR............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	133	PAOZZ	5310-00-187-2395	88044	AN960PD616L	..WASHER, FLAT..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
37	134	MFOZZ	1560-00-H04-1344	81996	1560UH1-409-1	..PLATE,SPACER..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	135	PAOZZ	5306-00-638-5832	88044	AN6H14A	..BOLT,MACHINE..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	136	PAOZZ	1680-00-403-1149	81996	1560UH1-414-1	..HEADGUARD,ARMOR...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
37	137	PAOZZ	5306-00-150-3229	81996	178010-17	..BOLT,SELF-LOCKING.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
37	138	PAOZZ	5306-00-150-3228	81996	178010-19	..BOLT,SELF-LOCKING.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
37	139	PAOZZ	1680-00-403-1148	81996	1560UH1-408-1	..BRACKET,ARMOR.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

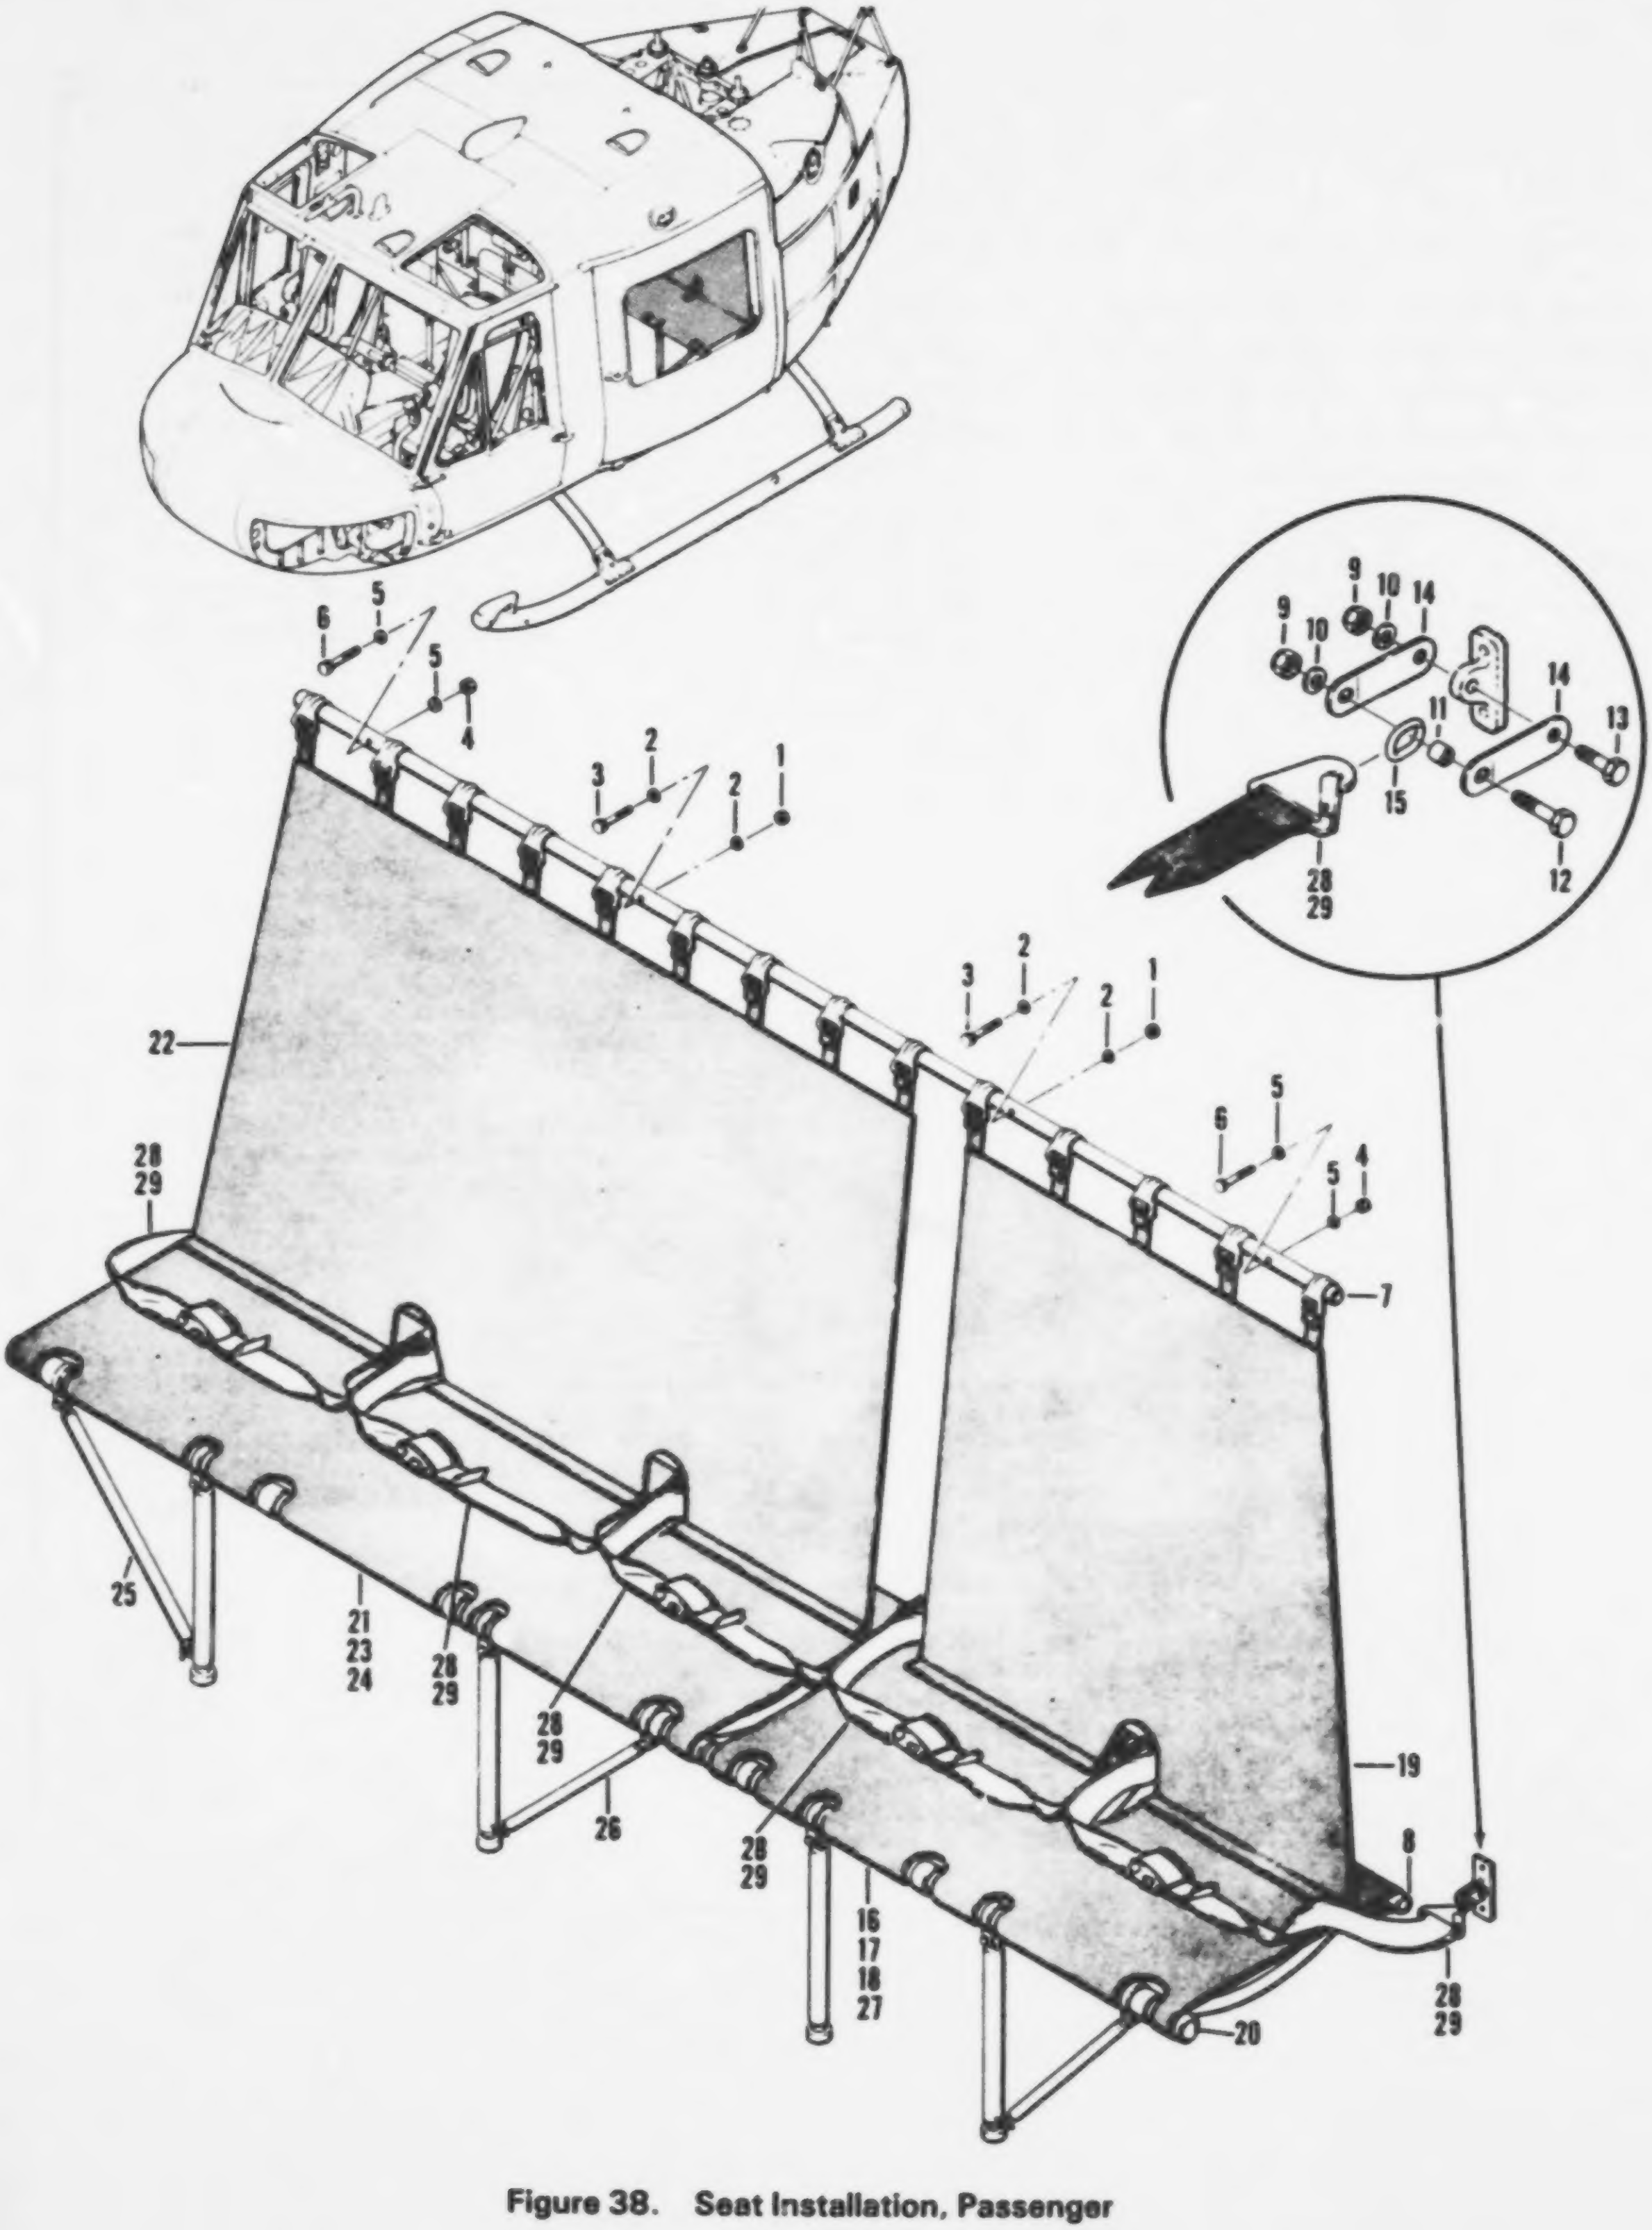
6
5
5
4
3
2
2
1
3
2
2
1
6
5
5
4
7
9
10
9
10
14
14
11
13
15
12
28
29
22
28
29
25
21
23
24
28
29
28
29
26
28
29
16
17
18
27
20
19
8
28
29

Figure 38. Seat Installation, Passenger

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
38		XCFZZ		97499	204-070-022-1	SEAT INSTL,PASSENGR USBL EFF 60-3546 THRU 60-3619 SEE FIG.6 FOR NHA........	EA	1
38		XCFZZ		97499	204-070-022-3	SEAT INSTL,PASSENGR USBL EFF (UH-1B) 61-686 & SUBSEQUENT & (UH-1C) 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA .... UHM	EA	1
38		XCFZZ		97499	204-070-022-7	SEAT INSTL,PASSENGR USBL EFF 65-9416 THRU 65-9421 SEE FIG.6 FOR NHA........ UHM	EA	1
38		XCFZZ		97499	204-070-022-9	SEAT INSTL,PASSENGR USBL EFF 65-9422 THRU 65-12772 SEE FIG.6 FOR NHA........ UHM	EA	1
38		XCFZZ		97499	204-072-038-1	SEAT INSTL,PASSENGR USBL EFF 66-492 & SUBSEQUENT SEE FIG.6 FOR NHA........ UHM	EA	1
38	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX HEXAGON:U/O:PN 204-070-022-1,-3,-7,& -9 .... UHM	EA	2
38	2	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O PN 204-070-022-1,-3,-7,&-9..... UHM	EA	4
38	3	PAOZZ	5306-00-182-2007	88044	AN3H16A	.BOLT,MACHINE U/O PN 204-070-022-1,-3,-7,&-9..... UHM	EA	2
38	4	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX U/O PN 204-070-022-1...............	EA	2
38	5	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O PN 204-070-022-1.......................	EA	4
38	5	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O PN 204-070-022-3,-7,& -9........ UHM	EA	2
38	6	PAOZZ	5306-00-182-2006	88044	AN3H15A	.BOLT,MACHINE U/O:PN 204-070-022-1,-3,-7,& -9... UHM	EA	2
38	7	PAOZZ	1680-00-856-1715	97499	204-070-011-3	.BRACE,AIRCRAFT SEAT UPPER U/O PN 204-070-022-1,-3,-7,&-9 .... UHM	EA	1
38	8	PAOZZ	1680-00-877-5843	97499	204-070-011-1	.BRACE,AIRCRAFT SEAT LOWER........................ UHM	EA	1
38	9	PAOZZ	5310-00-857-5559	96906	MS21045L5	.NUT,SELF-LOCKING,HE U/O PN 204-070-022-9,204-072-038-1 .... UHM	EA	12
38	10	PAOZZ	5310-00-167-0814	88044	AN960C516L	.WASHER,FLAT U/O PN 204-070-022-9,204-072-038-1..... UHM	EA	12
38	11	PAOZZ	5365-00-905-2509	80205	NAS43HT5-44	.SPACER,SLEEVE U/O PN 204-070-022-9,204-072-038-1... UHM	EA	6
38	12	PAOZZ	5306-00-180-2751	88044	AN5H12	.BOLT,MACHINE U/O PN 204-070-022-9,204-072-038-1.... UHM	EA	6
38	13	PAOZZ	5306-00-180-2749	88044	AN5H10	.BOLT,MACHINE U/O PN 204-070-022-9,204-072-038-1.... UHM	EA	6
38	14	MFOZZ		97499	204-070-054-1	.LINK U/O PN 204-070-022-9,204-072-038-1............ UHM	EA	12
38	15	PAOZZ	5365-00-057-3871	97499	204-070-595-5	.RING,CONNECTING,ROU U/O PN 204-070-022-9,204-072-038-1 .... UHM	EA	6
38	16	PAOOO	1680-00-928-3844	97499	204-072-037-1	.SEAT,AIRCRAFT RPLS-- 1680-00-718-6658, 1680-00-912-5179 BREAKDOWN FOR PN 204-072-037-1 <A8109>.......... UHM	EA	1
38	17	PAOZZ	1680-00-966-2245	15814	A6541-10	..COVER ASSEMBLY,SEAT U/O 1680-00-718-6658 PN A6509-10 .... UHM	EA	1
38	18	PAOZZ	5305-00-052-8875	96906	MS24630-3	..SCREW,TAPPING,THREA............................ UHM	EA	12
38	19	PAOZZ	1680-01-034-3323	15814	A8130-10	..COVER,SEAT,TWO MAN U/O P/N A8109-10........... UHM	EA	1
38	20	PAOZZ	5340-00-672-1094	83058	MS51400	..BUTTON,PLUG.................................... UHM	EA	1
38	21	PAOOO	1680-00-928-3846	97499	204-072-037-3	..SEAT,AIRCRAFT BREAKDOWN FOR PN 204-072-037-3<A8111-10> .... UHM	EA	1
38	22	PAOZZ	1680-00-151-4245	15814	A6542-20	.COVER ASSY,SEAT U/O PN A6511-10................. UHM	EA	1
38	23	PAOZZ	1680-00-421-7412	15814	A8129-10	..SEAT COVER,AIRCRAFT U/O PN A8111-10........... UHM	EA	1
38	24	PAOZZ	5305-00-052-8875	96906	MS24630-3	..SCREW,TAPPING,THREA............................ UHM	EA	12
38	25	PAOZZ	1680-00-780-5975	15814	A6845-10	..BRACE ASSEMBLY,SEAT............................ UHM	EA	1
38	26	XBOZZ		15814	A6845-20	..BRACE ASSEMBLY................................. UHM	EA	1
38	27	PAOZZ	1680-00-067-8208	81996	1560UH1-350-1	..CUSHION,GUNNER ARMOR .... UHM	EA	1
38	28	PAOZZ	1680-01-128-4488	98750	56E589-10	BELT,AIRCRAFT SAFET.............................. UHM	EA	5
38	29	PAOZZ	1680-00-853-5464	98750	65C34083-7	..SPRING,WEBBING RETA U/O P/N 56E589............. UHM	EA	1

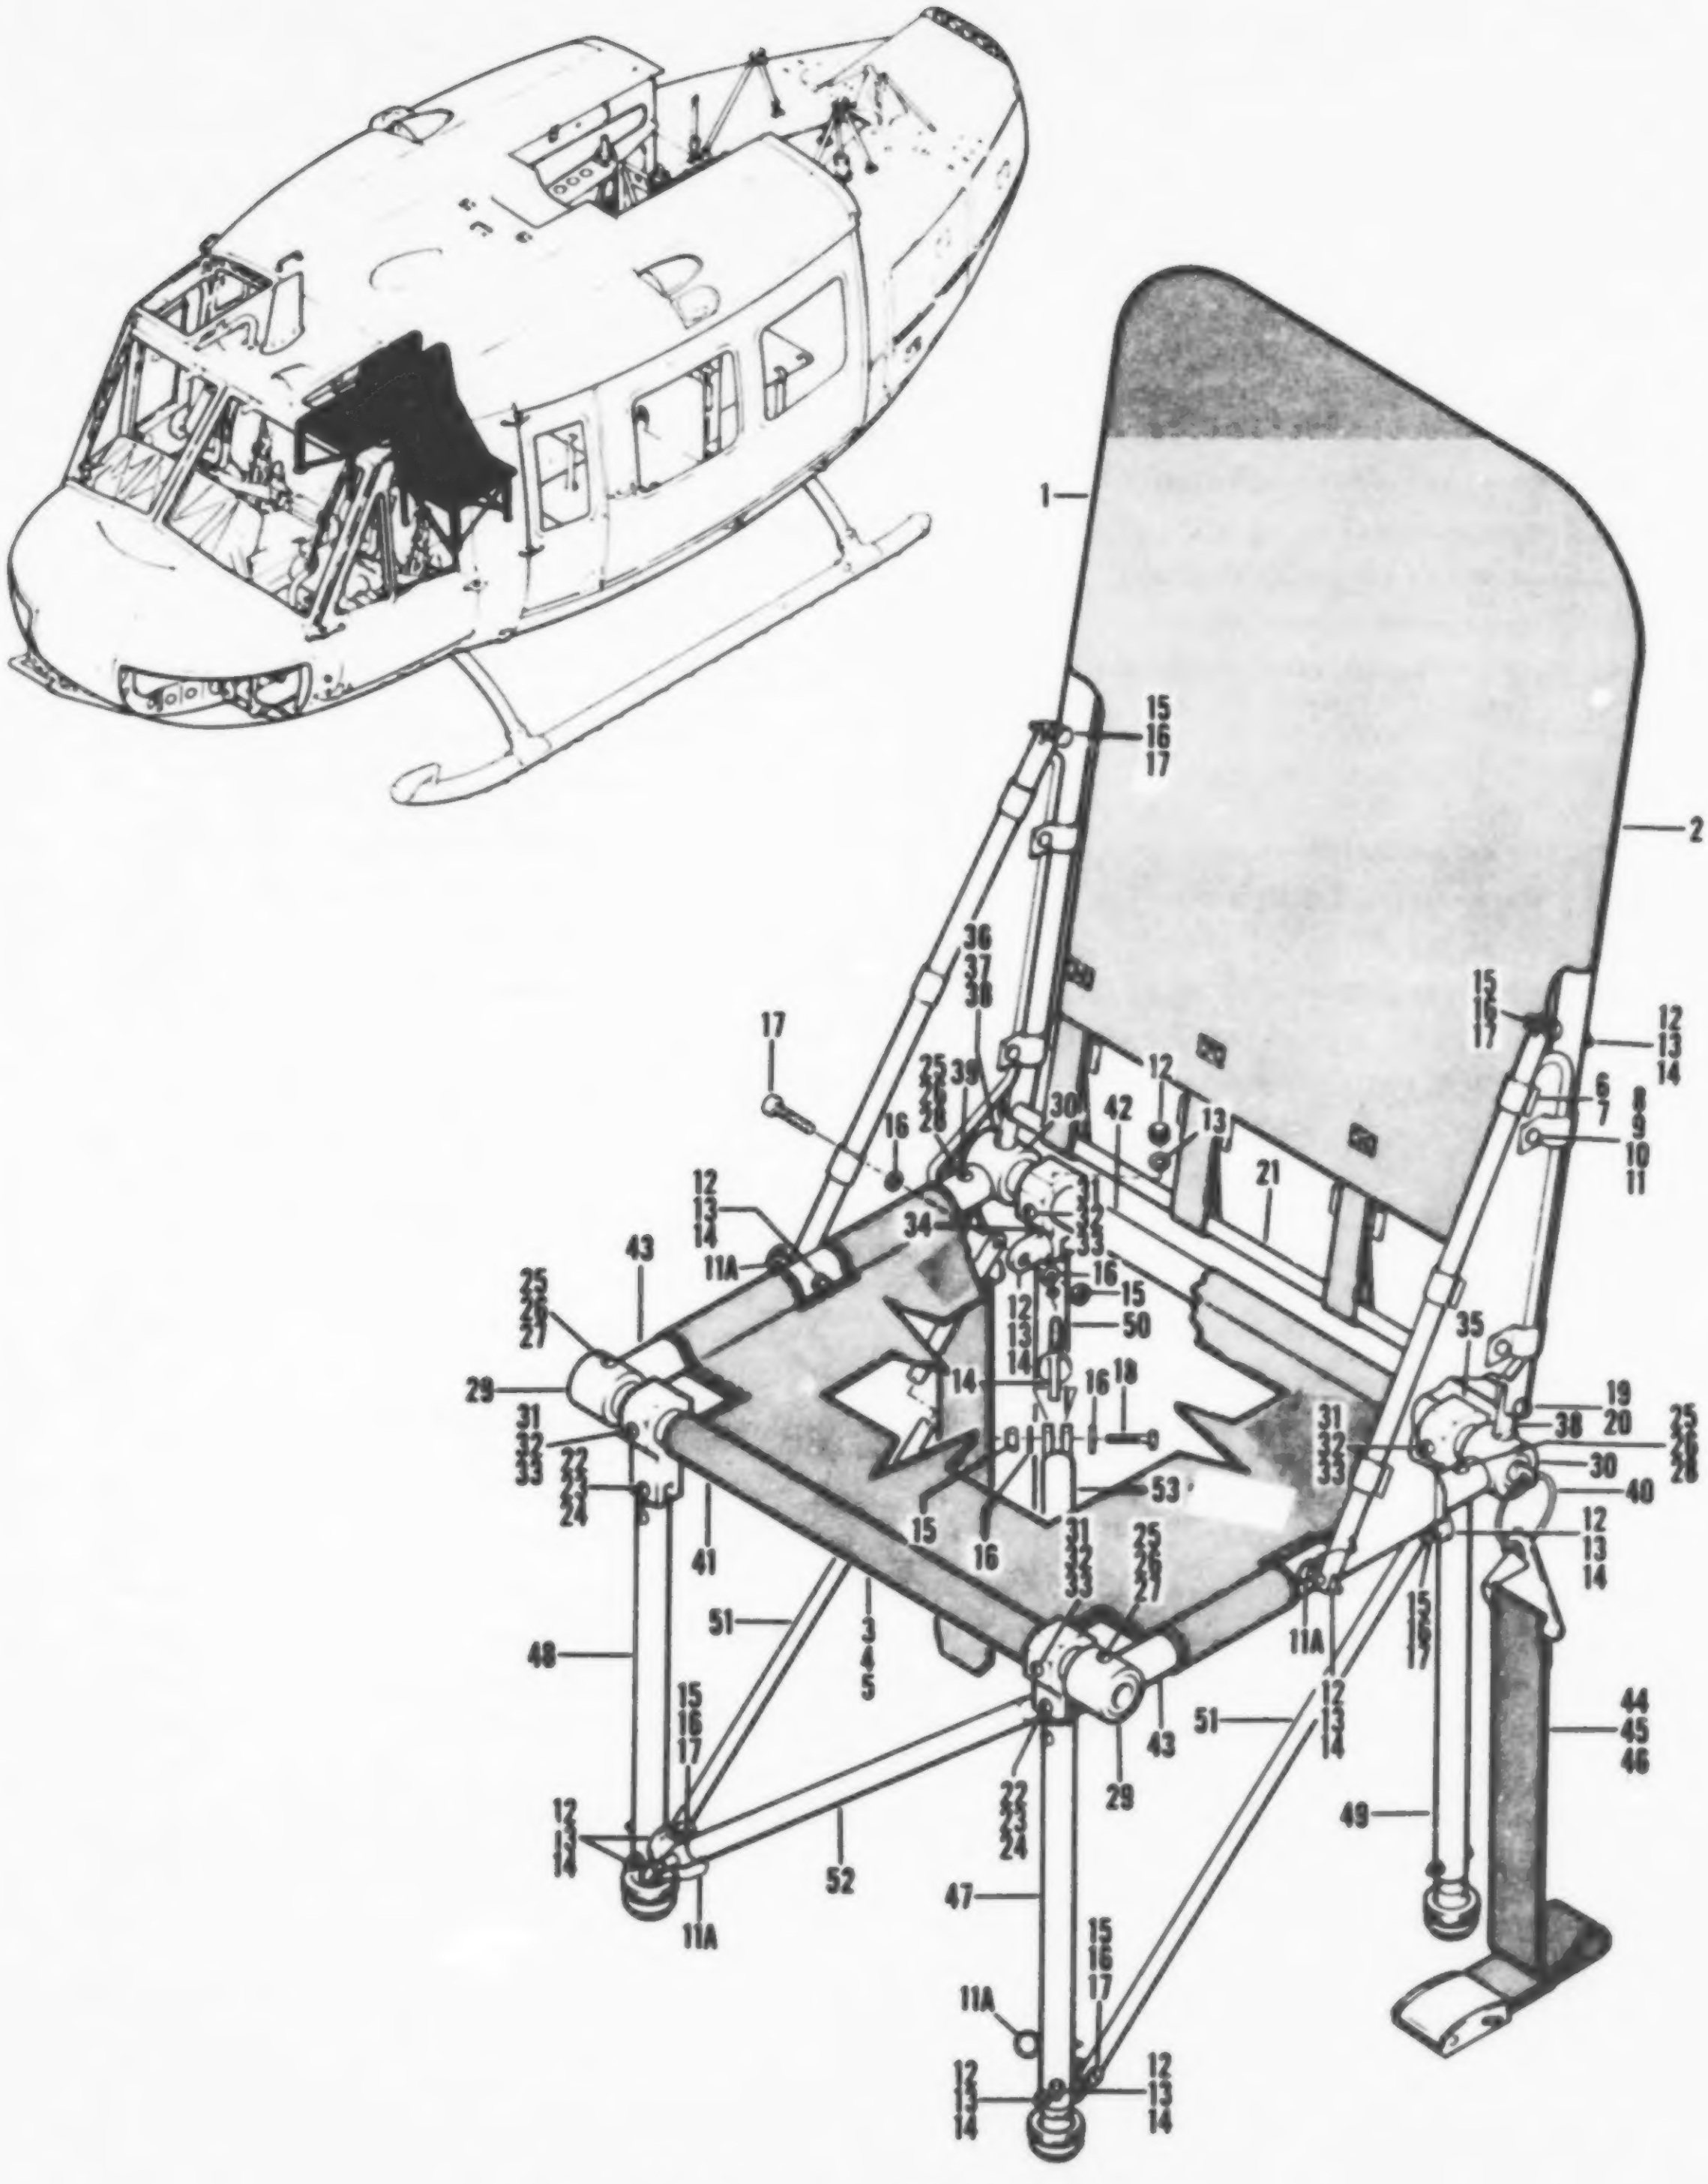
1
2
15
16
17
36
37
38
17
16
25
39
28
30
42
12
13
12
13
14
11A
34
31
32
33
43
25
26
27
29
31
32
33
22
23
24
16
15
12
13
14
50
14
16
18
15
16
53
41
31
32
33
25
26
27
48
51
3
4
5
15
16
17
12
13
14
11A
52
22
23
24
29
43
47
15
16
17
11A
12
13
14
12
13
14
51
11A
12
13
14
15
16
17
15
16
17
12
13
14
6
7
8
9
10
11
21
35
19
20
38
25
30
28
40
12
13
14
44
45
46
49

Figure 39. Seat Installation, Passenger

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
39		XCFZZ		97499	205-070-732-3	SEAT INSTL,PASSENGR SEE FIG.7 FOR NHA................UHM,UHV	EA	1
39	1	PAOOO	1680-00-044-2239	97499	205-070-703-7	.SEAT,AIRCRAFT BREAKDOWN FOR PN 205-070-703-5 <A7537-20> ....UHM,UHV	EA	2
39	2	PAOZZ	1680-00-916-2562	15814	A6567-20	.SEAT BACK,TROOP,AIR................................UHM,UHV	EA	1
39	2	PAOZZ	1680-00-213-5335	15814	A6567-50	.BACK,NYLON,SEAT,AIR................................UHM,UHV	EA	1
39	3	PAOOO	1680-00-924-8672	15814	A6568-20	.PANEL ASSEMBLY,SEAT................................UHM,UHV	FA	1
39	4	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER................................UHM,UHV	EA	4
39	5	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE................................UHM,UHV	EA	4
39	6	PAOOO	1680-00-122-5230	15814	A7730-30	.GUARD ASSY PASSENGER,RH................................UHM,UHV	EA	1
39	7	PAOOO	1680-00-122-5232	15814	A7730-40	.GUARD ASSY PASSENGER,LH................................UHM,UHV	EA	1
39	8	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER................................UHM,UHV	EA	4
39	9	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE................................UHM,UHV	EA	4
39	10	PAOZZ	5325-00-174-2923	88044	AN227-8	..STUD,SNAP FASTENER................................UHM,UHV	EA	6
39	11	PAOZZ	5325-00-276-4969	88044	AN227-9	..POST,SNAP FASTENER................................UHM,UHV	EA	6
39	11A	XDOZZ		96906	MS17990-407	.PIN................................UHM,UHV	EA	2
39	12	PAOZZ	5310-00-877-5796	96906	MS21044N4	.NUT,SELF-LOCKING,HE................................UHM,UHV	EA	11
39	13	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT................................UHM,UHV	FA	11
39	14	PAOZZ	5306-00-271-6885	88044	AN43B12	.BOLT,EYE................................UHM,UHV	EA	11
39	15	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING,HE................................UHM,UHV	EA	8
39	16	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT................................UHM,UHV	EA	16
39	17	PAOZZ	5306-00-150-9911	88044	AN23-15A	.BOLT, CLEVIS................................UHM,UHV	EA	7
39	18	PAOZZ	5305-00-841-2948	80205	NAS603-12P	.SCREW,MACHINE................................UHM,UHV	EA	1
39	19	PAOZZ	5306-00-151-3535	88044	AN25-21A	.BOLT,CLEVIS................................UHM,UHV	EA	2
39	20	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT................................UHM,UHV	FA	2
39	21	XBOZZ	1680-00-212-0746	15814	A6570	.SUPPORT,BACK,SEAT BOTTOM................................UHM,UHV	EA	1
39	22	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING,HE................................UHM,UHV	EA	3
39	23	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT................................UHM,UHV	EA	6
39	24	PAOZZ	5306-00-151-1969	88044	AN23-17	.BOLT,CLEVIS................................UHM,UHV	FA	3
39	25	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING,HE................................UHM,UHV	EA	4
39	26	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT................................UHM,UHV	FA	8
39	27	PAOZZ	5306-00-151-2305	88044	AN23-26	.BOLT,CLEVIS................................UHE,UHM,UHV,UHX	EA	2
39	28	PAOZZ	5306-00-182-2064	88044	AN3H13A	.BOLT,MACHINE................................UHM,UHV	EA	2
39	29	XBOZZ	1680-00-213-5340	15814	A7534-10	.BRACKET,SPREADER, FRONT................................UHM,UHV	EA	2
39	30	XBOZZ	1680-00-213-5336	15814	A7534-20	.BRACKET,SPREADER, REAR................................UHM,UHV	EA	2
39	31	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING,HE................................UHM,UHV	EA	4
39	32	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT................................UHM,UHV	EA	8
39	33	PAOZZ	5306-00-150-9919	88044	AN23-30A	.BOLT,CLEVIS................................UHM,UHV	EA	4
39	34	XBOZZ	1680-00-213-5337	15814	A6548	.LEG BRACKET,SEAT LH-REAR................................UHM,UHV	EA	1
39	35	XBOZZ	1680-00-215-0904	15814	A6546	.LEG BRACKET,SEAT RH-REAR................................UHM,UHV	FA	1
39	36	PAOZZ	5310-00-088-0553	96906	MS21044N5	.NUT,SELF-LOCKING................................UHM,UHV	EA	2
39	37	PAOZZ	5310-00-184-8980	88044	AN960PD516L	.WASHER,FLAT................................UHM,UHV	FA	4
39	38	PAOZZ	5306-00-206-3828	88044	AN45-15	.BOLT,EYE................................UHM,UHV	EA	2
39	39	XBOZZ	1680-00-165-4673	15814	A6569-10	.PLUG AND RING ASSY -LH................................UHM,UHV	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
39	40	XBOZZ	1680-00-212-0751	15814	A6569-20	.PLUG AND RING ASSEM -RH.............................UHM,UHV	EA	1
39	41	XBOZZ	1680-00-213-5352	15814	A6561	.BEAM,FRONT,SEAT.......................................UHM,UHV	EA	1
39	42	XBOZZ	1680-00-213-5338	15814	A6562	.BEAM,REAR,SEAT..UHM,UHV	EA	1
39	43	XBOZZ	1680-00-213-5339	15814	A6560	.TUBE,SPREADER,SEAT LHERH..............................UHM,UHV	EA	2
39	44	XCFZZ		97499	205-070-730-3	.BELT INSTALLATION.....................................UHM,UHV	EA	1
39	45	PAOZZ	1680-01-128-4488	98750	56E589-10	.BELT,AIRCRAFT SAFET...................................UHM,UHV	EA	2
39	46	PAOZZ	1680-00-853-5464	98750	65D34083-7	.SPRING,WEBBING RETA...................................UHM,UHV	EA	1
39	47	PBOZZ	1680-01-047-7531	15814	A6747	.LEG ASSEMBLY..UHM,UHV	EA	1
39	48	PBOZZ	1680-00-397-9991	15814	A6748	.LEG ASSY,FRONT,L H....................................UHM,UHV	EA	1
39	49	PBOZZ	1680-00-387-4986	15814	A6745	.LEG ASSY,REAR,R H.....................................UHM,UHV	EA	1
39	50	PBOZZ	1680-00-387-4987	15814	A6746L	.LEG ASSY,REAR,L H.....................................UHM,UHV	EA	1
39	51	PBOZZ	1680-01-049-7609	15814	A6759	.BRACE,TUBE ASSEMBLY...................................UHM,UHV	EA	2
39	52	PBOZZ	1680-01-047-8162	15814	A6758	.BRACE,TUBE ASSEMBLY...................................UHM,UHV	EA	1
39	53	XDOZZ		15814	A6877-20	.BRACE...UHM,UHV	EA	1

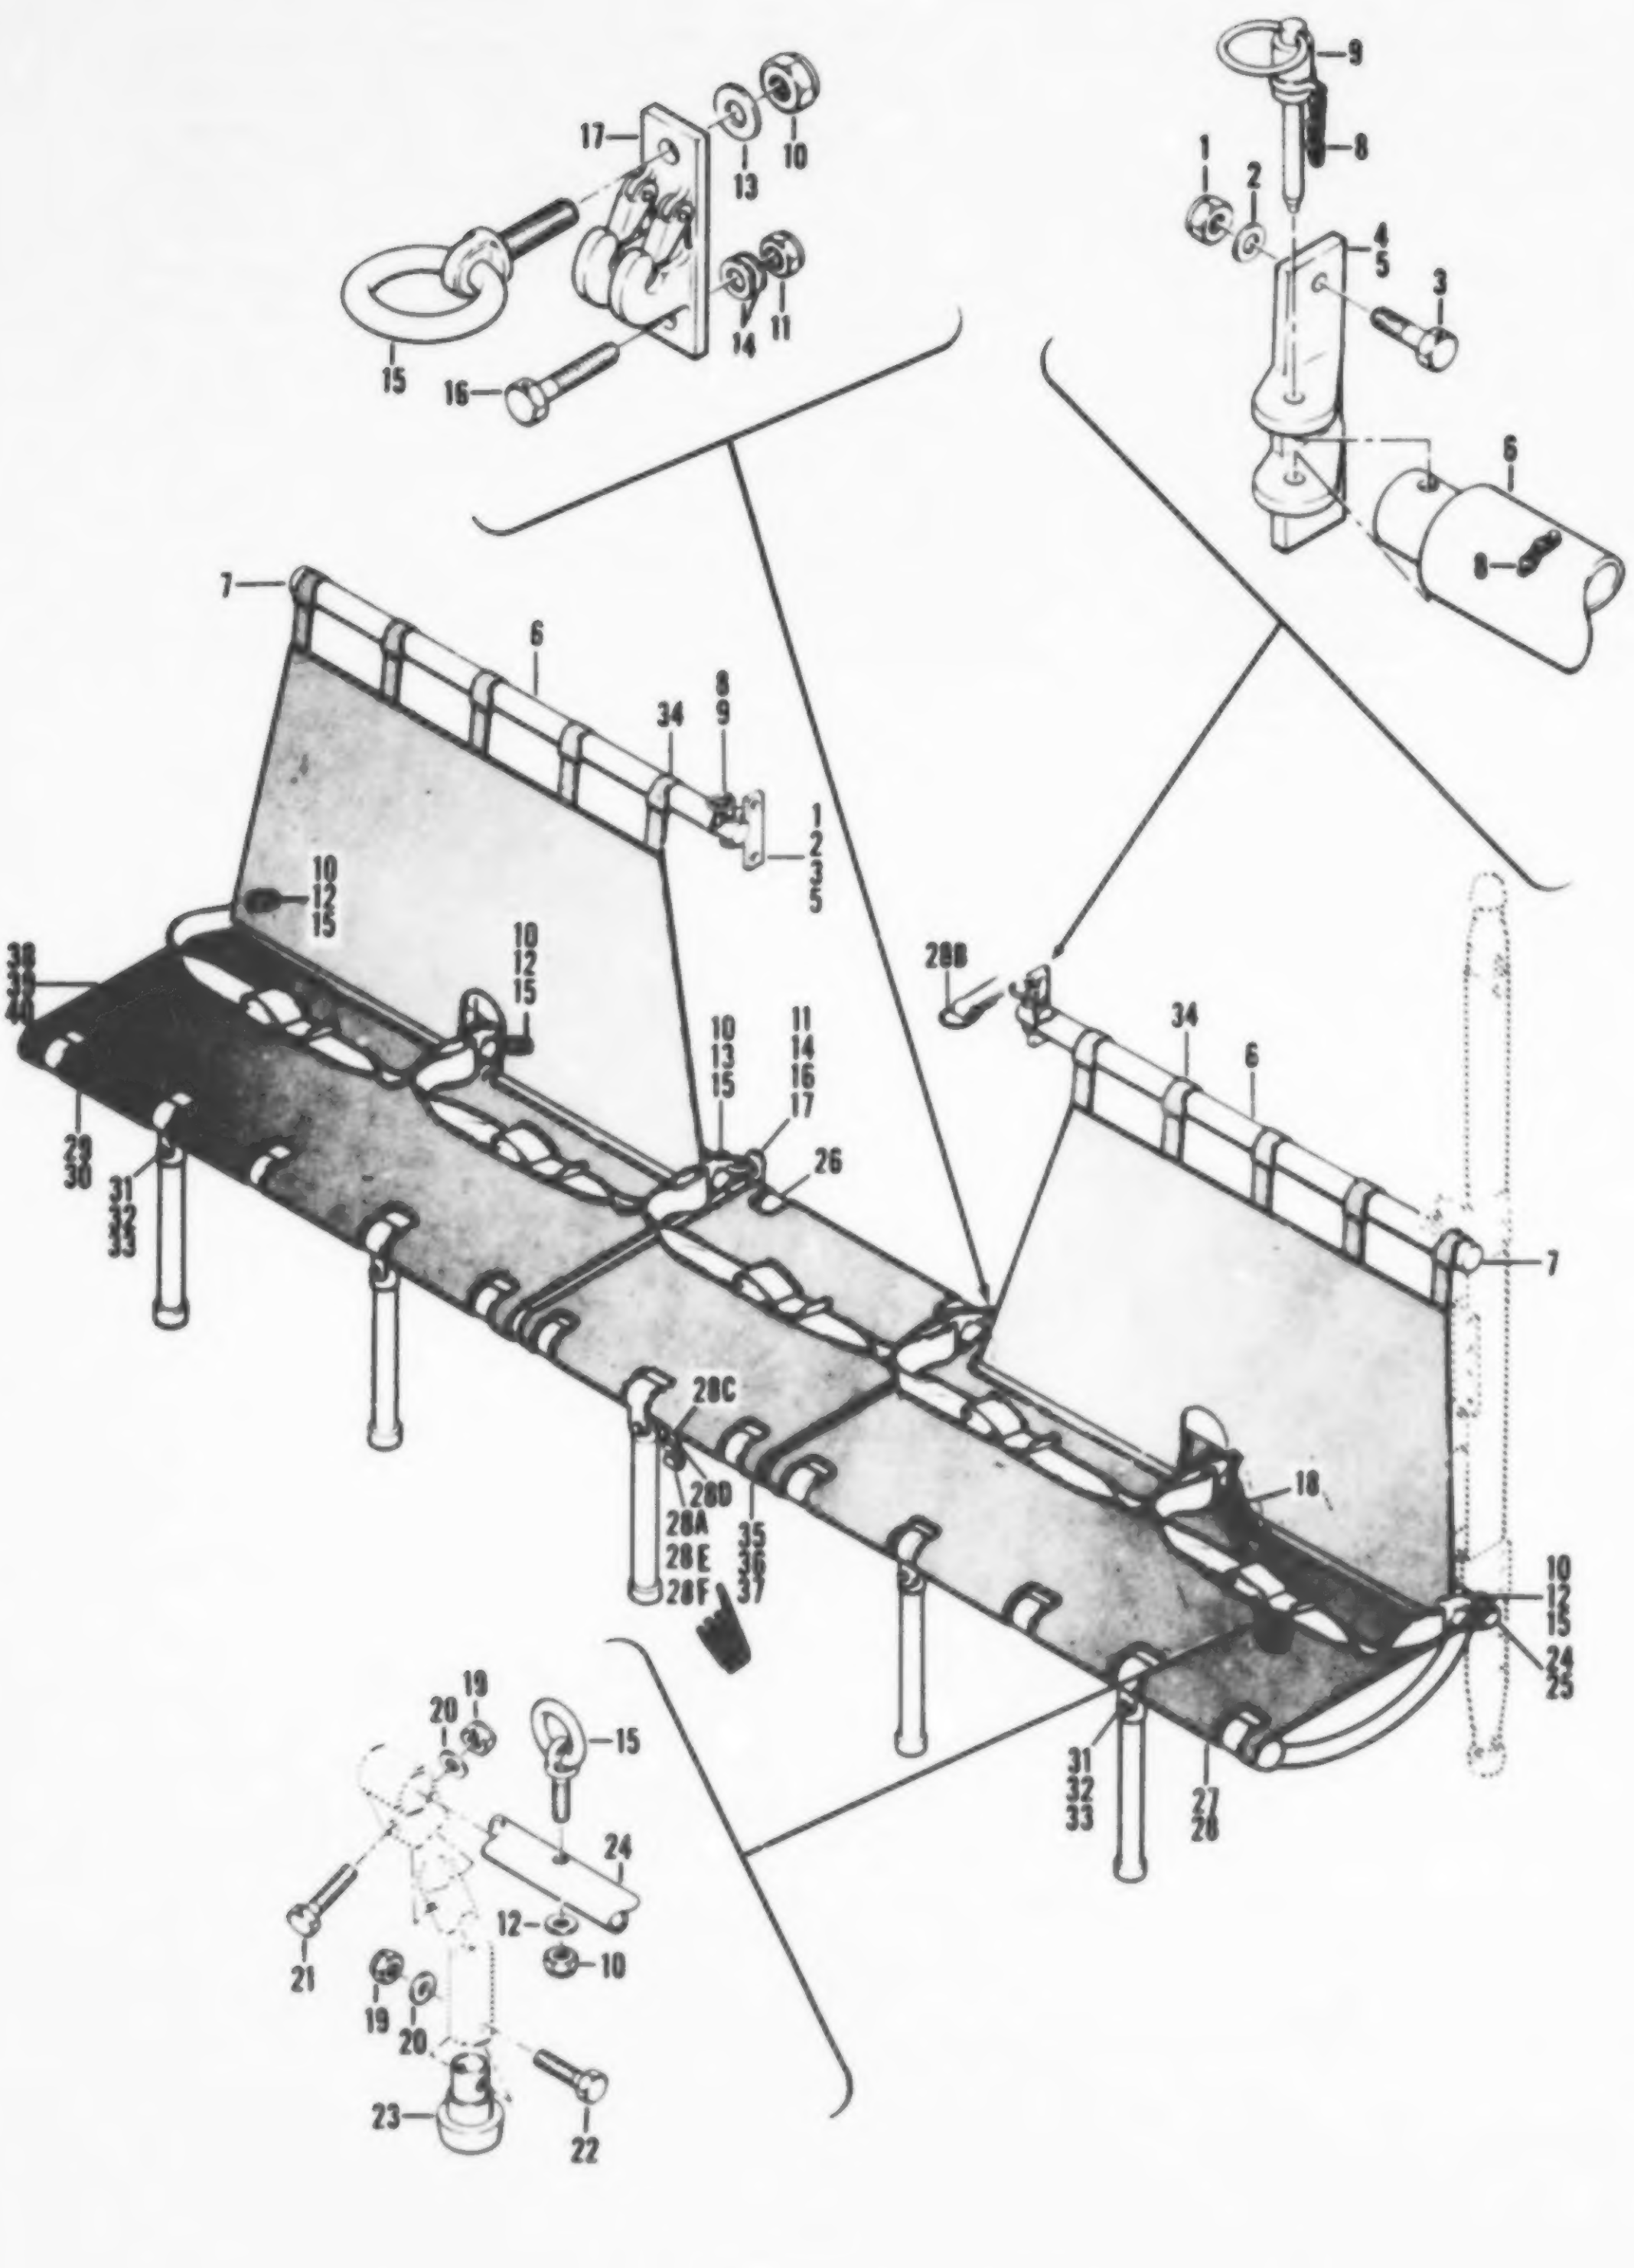
17
13
10
14
11
15
16
9
8
1
2
4
5
3
6
8
7
6
34
8
9
1
2
3
5
10
12
15
38
39
40
10
12
15
29
30
31
32
33
10
13
15
11
14
16
17
26
28B
34
6
7
28C
28D
28A
28E
28F
35
36
37
18
10
12
15
24
25
31
32
33
27
28
19
20
15
24
21
12
10
19
20
23
22

Figure 40. Seat Installation, Passenger

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
40		XCFZZ		97499	205-070-732-3	.SEAT INSTL,PASSENGR SEE FIG.7 FOR NHA............UHH,UHV	EA	1
40	1	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.................UHH,UHV	EA	4
40	2	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..UHH,UHV	EA	4
40	3	PAOZZ	5306-00-292-8252	88044	AN4H7A	.BOLT,MACHINE...UHH,UHV	EA	4
40	4	PAOZZ	1680-00-967-1771	97499	205-070-712-1	.BRACKET,EYE,NONROTA LH-UPPER.......................UHH,UHV	EA	1
40	5	PAOZZ	1680-00-967-1772	97499	205-070-712-2	.BRACKET,EYE,NONROTA RH-UPPER.......................UHH,UHV	EA	1
40	6	PAOOO	1680-00-967-1767	97499	205-070-709-1	.TUBE ASSEMBLY,TROOP UPPER..........................UHH,UHV	EA	2
40	7	PAOZZ	5340-00-761-6416	83058	SS48162K2215	..BUTTON,PLUG...UHH,UHV	EA	1
40	8	XDOZZ		97499	25C10-1A6	..CHAIN,WELDLESS......................................UHH,UHV	FT	1
40	9	PAOZZ	5340-00-200-3713	96906	MS17990-415	..PIN,QUICK RELEASE...................................UHH,UHV	EA	1
40	10	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.................UHH,UHV	EA	6
40	11	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX..................................UHH,UHV	EA	2
40	12	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT..UHH,UHV	EA	4
40	13	PAOZZ	5310-00-167-0836	88044	AN960-516L	.WASHER,FLAT..UHH,UHV	EA	2
40	14	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..UHH,UHV	EA	4
40	15	PAOZZ	5306-00-967-1776	97499	205-070-725-3	.BOLT,RING..UHH,UHV	EA	6
40	16	PAOZZ	5306-00-182-1961	88044	AN4H13A	.BOLT,MACHINE...UHH,UHV	EA	2
40	17	PAOZZ	1680-00-014-0717	97499	205-070-764-1	.FITTING,SEAT ASSEMB..................................UHH,UHV	EA	2
40	18	PAOOO	1680-00-967-1768	97499	205-070-710-1	.LEG ASSEMBLY,TROOP AFT.............................UHH,UHV	EA	2
40	19	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.................UHH,UHV	EA	2
40	20	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT...UHH,UHV	EA	2
40	21	PAOZZ	5306-00-151-1420	88044	AN4-14A	..BOLT,MACHINE..UHH,UHV	EA	1
40	22	PAOZZ	5306-00-151-1421	88044	AN4-13A	..BOLT,MACHINE..UHH,UHV	EA	1
40	23	PAOZZ	1630-00-592-4878	96906	MS22034-2	..ADAPTER QUICK DISCO.................................UHH,UHV	EA	1
40	24	PAOOO	1680-00-014-0697	97499	205-070-707-5	.TUBE ASSEMBLY,SEAT AFT.............................UHH,UHV	EA	2
40	25	PAOZZ	5340-00-968-2179	83058	SS48155K2220	..BUTTON,PLUG...UHH,UHV	EA	1
40	26	PAOZZ	1680-00-967-1766	97499	205-070-708-1	.TUBE ASSEMBLY,TROOP AFT............................UHH,UHV	EA	1
40	27	PAOOO	1680-00-824-2084	97499	205-070-700-4	.SEAT,AIRCRAFT TWO MAN..............................UHH,UHV	EA	1
40	27	PAOOO	1680-00-824-2084	15814	A7550-40	.SEAT,AIRCRAFT..UHH,UHV	EA	REF
40	27	PAOOO	1680-00-824-2084	76912	ACA3912-2	.SEAT,AIRCRAFT..UHH,UHV	EA	REF
40	28	PAOZZ	1680-00-916-2526	15814	A7556-40	..SEAT BOTTOM,TROOP LH..............................UHH,UHV	EA	1
40	28A	PBOZZ	5340-00-930-7081	76912	ACA2870	..HOOK..UHH,UHV	EA	1
40	28B	PBOZZ	1680-01-090-2067	76912	ACA3067	..STRAP,WEBBING.......................................UHH,UHV	EA	1
40	28C	PBOZZ	1680-00-116-1686	76912	ACA3049	..STRAP,WEBBING.......................................UHH,UHV	EA	1
40	28D	PBOZZ	1680-00-564-4890	76912	A3A563	..BUCKLE,BAR..UHH,UHV	EA	3
40	29	PAOOO	1680-00-824-2083	97499	205-070-700-3	.SEAT,AIRCRAFT TWO MAN BREAKDOWN FOR PN 205-070-700-3(A7550-30)..........UHH,UHV	EA	1
40	28E	PAOZZ	1680-01-142-6413	15814	A6968	..LEG ASSEMBLY..UHH,UHV	EA	4
40	28F	PAOZZ	5315-00-276-0362	44940	2015	..PIN,STRAIGHT,HEADLE.................................UHH,UHV	EA	2
40	29	PAOOO	1680-00-824-2083	15814	A7550-30	.SEAT,AIRCRAFT..UHH,UHV	EA	REF
40	29	PAOOO	1680-00-824-2083	76912	ACA3912-1	.SEAT,AIRCRAFT..UHH,UHV	EA	REF

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
40	30	PAOZZ	1680-00-916-2525	15814	A7556-30	..SEAT BOTTOM,TROOP RH..............................UHH,UHV	EA	1
40	31	PAOZZ	5310-00-877-5797	96906	MS21044N3	..NUT,SELF-LOCKING,HE..............................UHH,UHV	EA	1
40	32	PAOZZ	5310-00-167-0753	88[illegible]4	AN960PD10L	..WASHER,FLAT..............................UHH,UHV	EA	8

SECTION II

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
40	33	PAOZZ	5306-00-151-1971	88044	AN23-19	..BOLT,CLEVIS....................UHH,UHV	EA	2
40	34	PBOZZ	5340-00-168-7181	15814	A7543	..LOOP,STRAP FASTENER....................UHH,UHV	EA	5
40	35	PAOOO	1680-00-014-2039	97499	205-070-702-3	.SEAT,AIRCRAFT ONE MAN BREAKDOWN FOR PN 205-070-702-3(A7572-10)....................UHH,UHV	EA	1
40	36	PAOZZ	1680-00-916-2560	15814	A-6976-20	..SEAT BOTTOM,TROOP....................UHH,UHV	EA	1
40	37	PAOZZ	1680-00-067-6208	81996	1660UH1-350-1	.CUSHION,SEAT,AIRCRA ARMOR....................UHH,UHV	EA	1
40	38	PAOZZ	1680-01-128-4488	98750	56E589-10	.BELT,AIRCRAFT SAFET....................UHH,UHV	EA	5
40	39	XCFZZ		97499	205-070-730-3	BELT INSTL....................UHH,UHV	EA	1
40	40	PAOZZ	1680-00-853-5464	98750	55D34083-7	..SPRING,WEBBING RETA U/O P/N 56E589....................UHH,UHV	EA	1

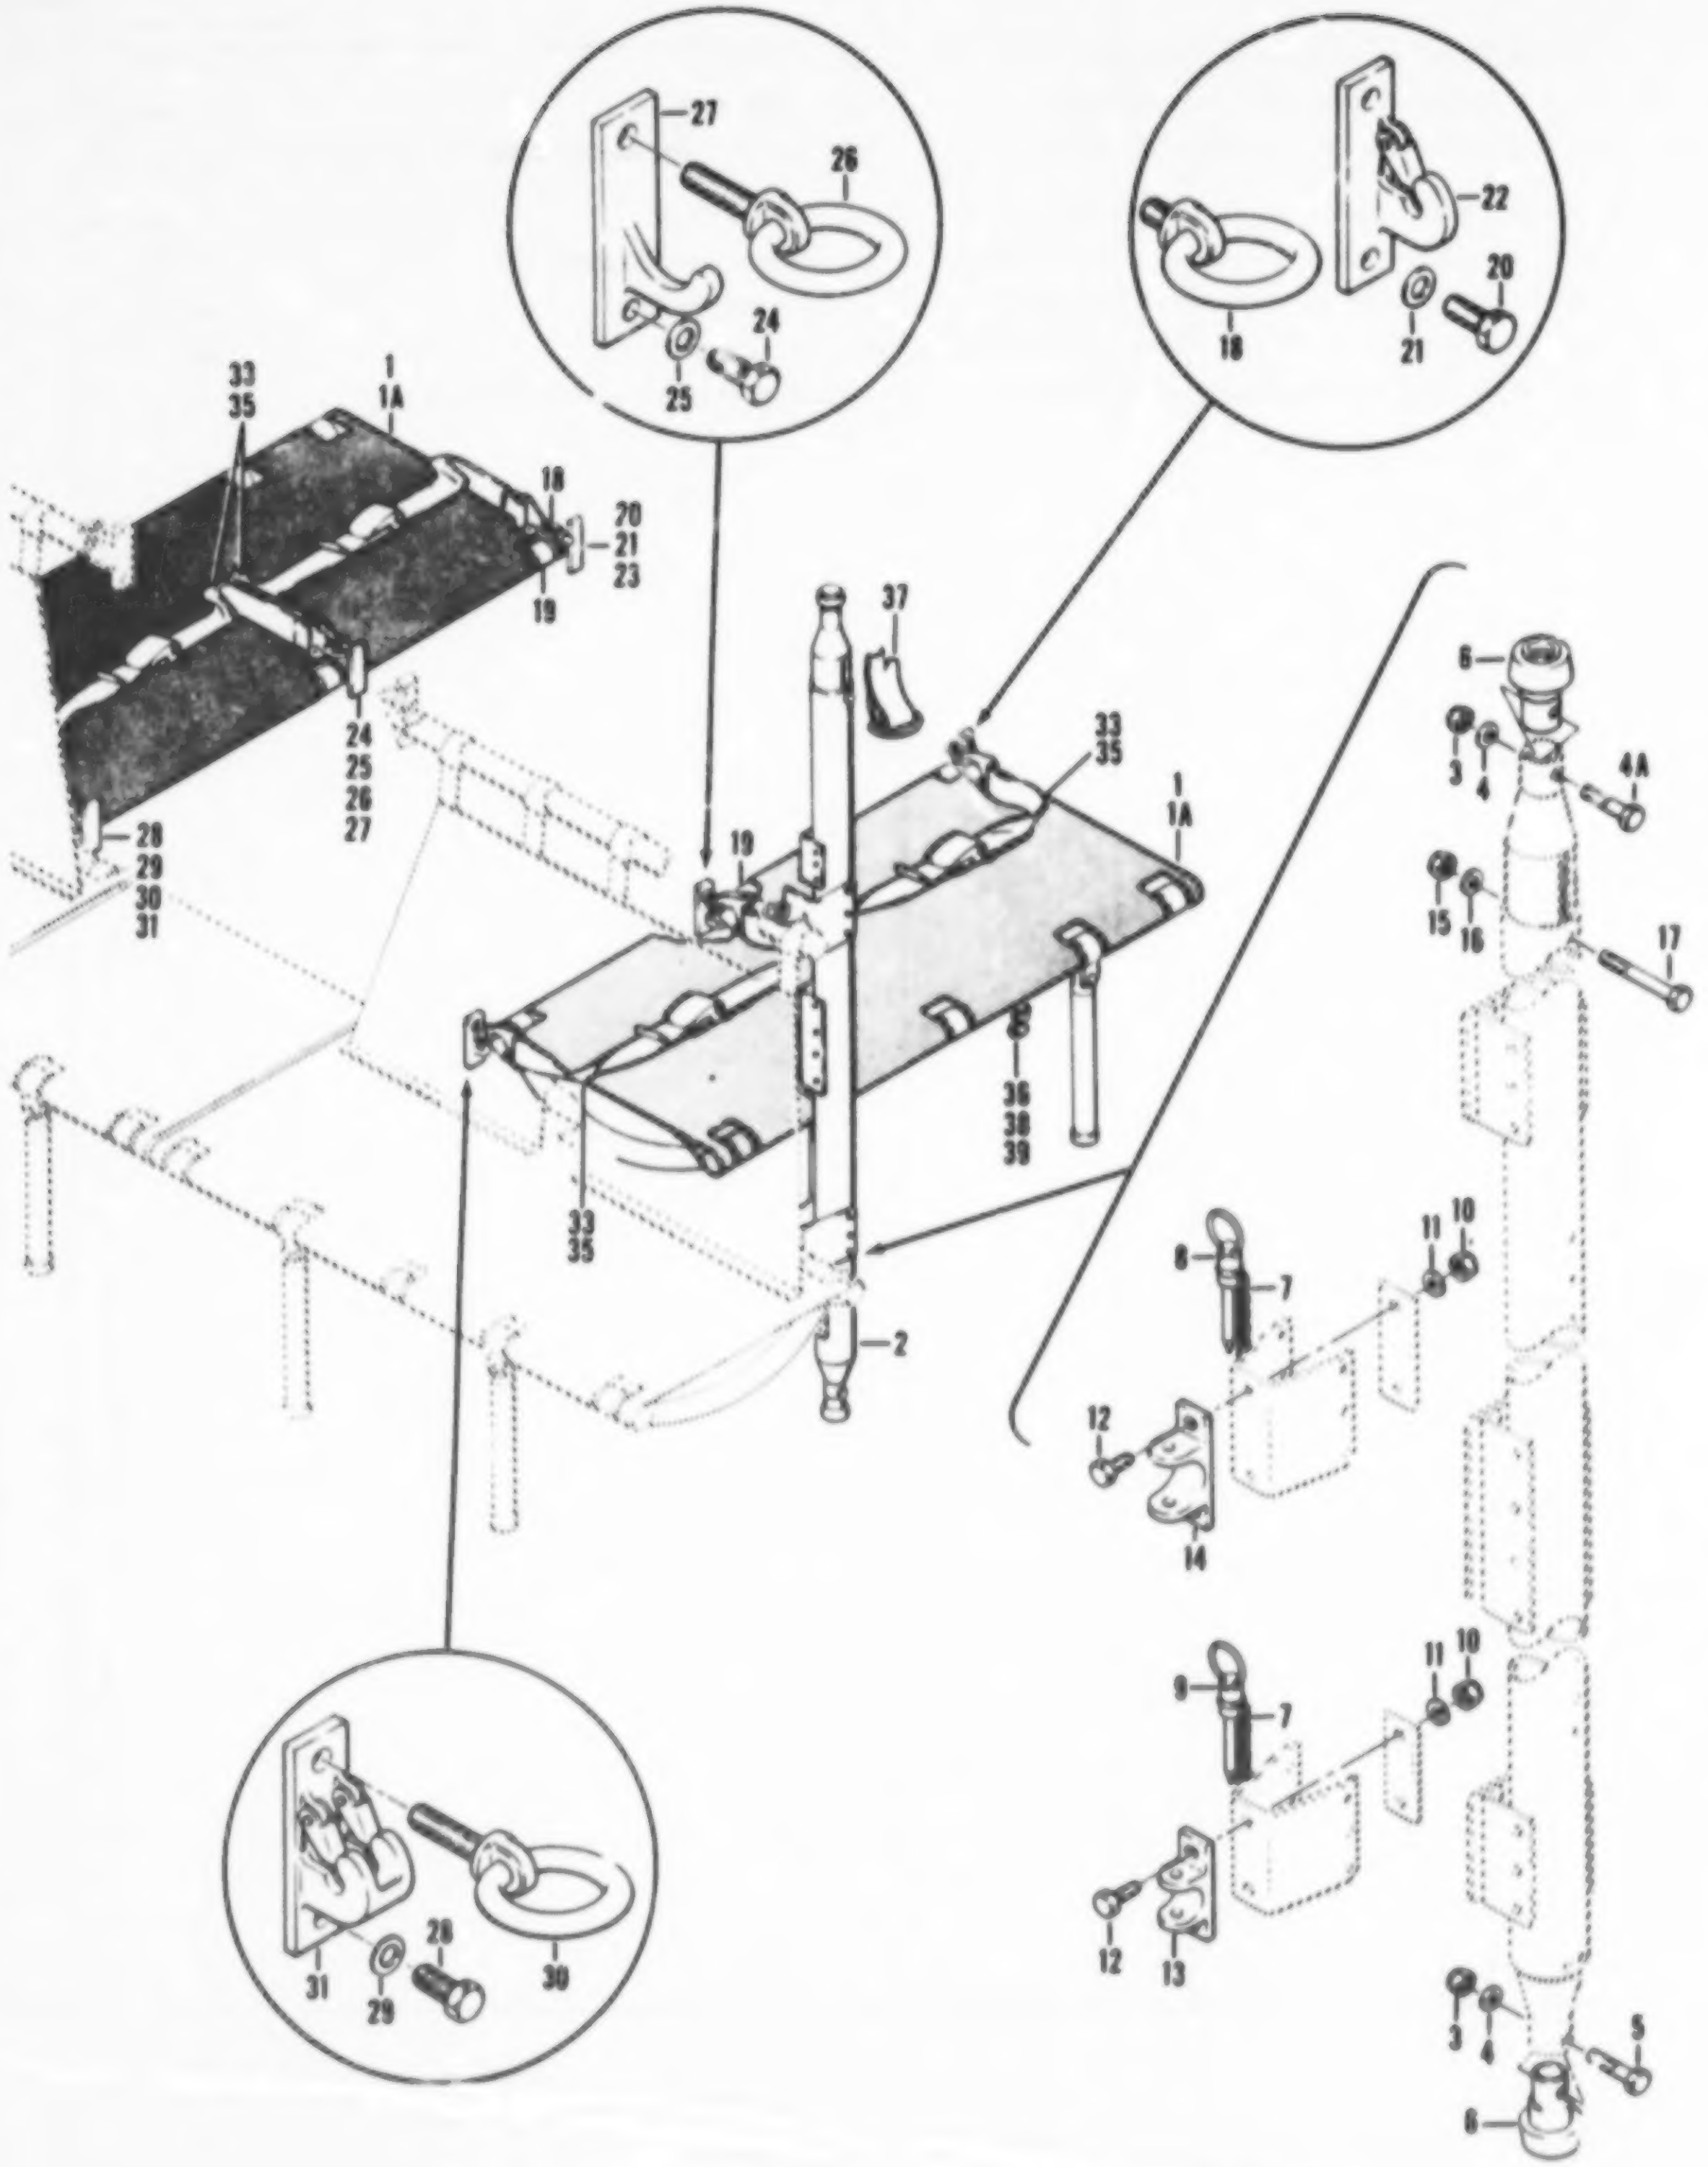
27
26
24
25
22
20
18
21
33
35
1
1A
18
20
21
23
19
24
25
26
27
28
29
30
31
37
19
33
35
1
1A
36
38
39
33
35
2
6
3
4
4A
15
16
17
8
7
11
10
12
14
9
7
11
10
12
13
31
29
28
30
3
4
5
6

Figure 42. Seat Installation, Passenger

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
42		XCFZZ		97499	205-07J-732-3	SEAT INSTL,PASSENGR SEE FIG.7 FOR NHA.................UHH,UHV	EA	1
42	1	PADDD	1680-00-967-1762	97499	205-070-701-1	.SEAT,AIRCRAFT BREAKDOWN FOR PN 205-070-701-1 <A6707-10> ....UHH,UHV	EA	2
42	1	PAOZZ	1680-00-916-2561	15814	A6974-20	..SEAT BOTTOM,TROOP..............................UHH,UHV	EA	1
42	1A	PAOZZ	5305-00-052-8875	96906	MS24630-3	..SCREW,TAPPING,THREA....................................UHH	EA	12
42	2	PADDD	1680-00-941-8708	97499	205-072-420-1	.STANCHION ASSEMBLY.................................UHH,UHV	EA	2
42	3	PAOZZ	5310-00-807-1468	96906	MS21042-4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..................UHH,UHV	EA	2
42	4	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT..UHH,UHV	EA	2
42	4A	PAOZZ	5306-00-182-1962	88044	AN4H14A	..BOLT,MACHINE.......................................UHH,UHV	EA	1
42	5	PAOZZ	5306-00-182-1963	88044	AN4H15A	..BOLT,MACHINE.......................................UHH,UHV	EA	1
42	6	PAOZZ	1680-00-592-4878	96906	MS22034-2	..ADAPTER QUICK DISCO................................UHH,UHV	EA	2
42	7	PAOZZ	4010-00-981-3150	80205	NAS1455-00-5	..CHAIN,WELDLESS.....................................UHH,UHV	EA	2
42	8	PAOZZ	5340-00-950-6471	80205	NAS1394D57S20	..PIN,QUICK RELEASE..................................UHH,UHV	EA	1
42	9	PAOZZ	5340-00-200-3713	96906	MS17990-415	..PIN,QUICK RELEASE..................................UHH,UHV	EA	1
42	10	PAOZZ	5310-00-807-1468	96906	MS21042-4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..................UHH,UHV	EA	4
42	11	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT..UHH,UHV	EA	4
42	12	PAOZZ	5306-00-292-8252	88044	AN4H7A	..BOLT,MACHINE.......................................UHH,UHV	EA	4
42	13	PAOZZ	1680-00-967-1780	97499	205-070-714-1	..FITTING,TROOP SEAT LOWER.............................UHH,UHV	EA	1
42	14	PAOZZ	1680-00-967-1778	97499	205-070-740-1	..FITTING,TROOP SEAT TOP...............................UHH,UHV	EA	1
42	15	PAOZZ	5310-00-807-1468	96906	MS21042-4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..................UHH,UHV	EA	1
42	16	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT..UHH,UHV	EA	1
42	17	PAOZZ	5306-00-182-2018	88044	AN4H24A	..BOLT,MACHINE.......................................UHH,UHV	EA	1
42	18	PAOZZ	5306-00-967-1775	97499	205-070-725-1	.BOLT,RING...UHH,UHV	EA	2
42	19	PAOZZ	1680-00-967-1764	97499	205-070-706-1	.TUBE ASSEMBLY,TROOP AFT...............................UHH,UHV	EA	2
42	20	PAOZZ	5306-00-182-2016	88044	AN4H5A	.BOLT,MACHINE..UHH,UHV	EA	4
42	21	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT...UHH,UHV	EA	4
42	22	PAOZZ	1680-00-967-1769	97499	205-070-711-1	.FITTING ASSY-LH.....................................UHH,UHV	EA	1
42	23	PAOZZ	1680-00-967-1770	97499	205-070-711-2	.FITTING ASSY-RH.....................................UHH,UHV	EA	1
42	24	PAOZZ	5306-00-182-2016	88044	AN4H5A	.BOLT,MACHINE..UHH,UHV	EA	2
42	25	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT...UHH,UHV	EA	2
42	26	PAOZZ	5306-00-014-0715	97499	205-070-725-9	.BOLT,RING...UHH,UHV	EA	2
42	27	PAOZZ	1680-00-967-1773	97499	205-070-713-1	.FITTING,TROOP SEAT..................................UHH,UHV	EA	2
42	28	PAOZZ	5306-00-182-2016	88044	AN4H5A	.BOLT,MACHINE..UHH,UHV	EA	2
42	29	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT...UHH,UHV	EA	2
42	30	PAOZZ	5306-00-014-0715	97499	205-070-725-9	.BOLT,RING...UHH,UHV	EA	2
42	31	PAOZZ	1680-00-014-0717	97499	205-070-764-1	.FITTING,SEAT ASSEMB.................................UHH,UHV	EA	2
42		XCFZZ		97499	205-070-730-3	BELT INSTL...UHH,UHV	EA	1
42	33	PAOZZ	1680-01-128-4488	99238	56E589	.BELT,AIRCRAFT SAFET ALT FOR P/N 204-070-032-3.......UHH,UHV	EA	4
42	35	PAOZZ	1680-00-853-5464	98750	65034083-7	.SPRING,WEBBING RETA U/O P/N P/N 56E589...............UHH,UHV	EA	1
42	36	PBOZZ	5340-00-930-7081	76912	ACA2870	.HOOK..UHH,UHV	EA	1
42	37	PBOZZ	1680-01-090-2067	76912	ACA3057	.STRAP,WEBBING.......................................UHH,UHV	EA	1
42	38	PBOZZ	1680-00-116-1686	76912	ACA3049	.STRAP,WEBBING.......................................UHH,UHV	EA	1
42	39	PBOZZ	1680-00-564-4890	76912	A3A563	.BUCKLE,BAR..UHH,UHV	EA	3

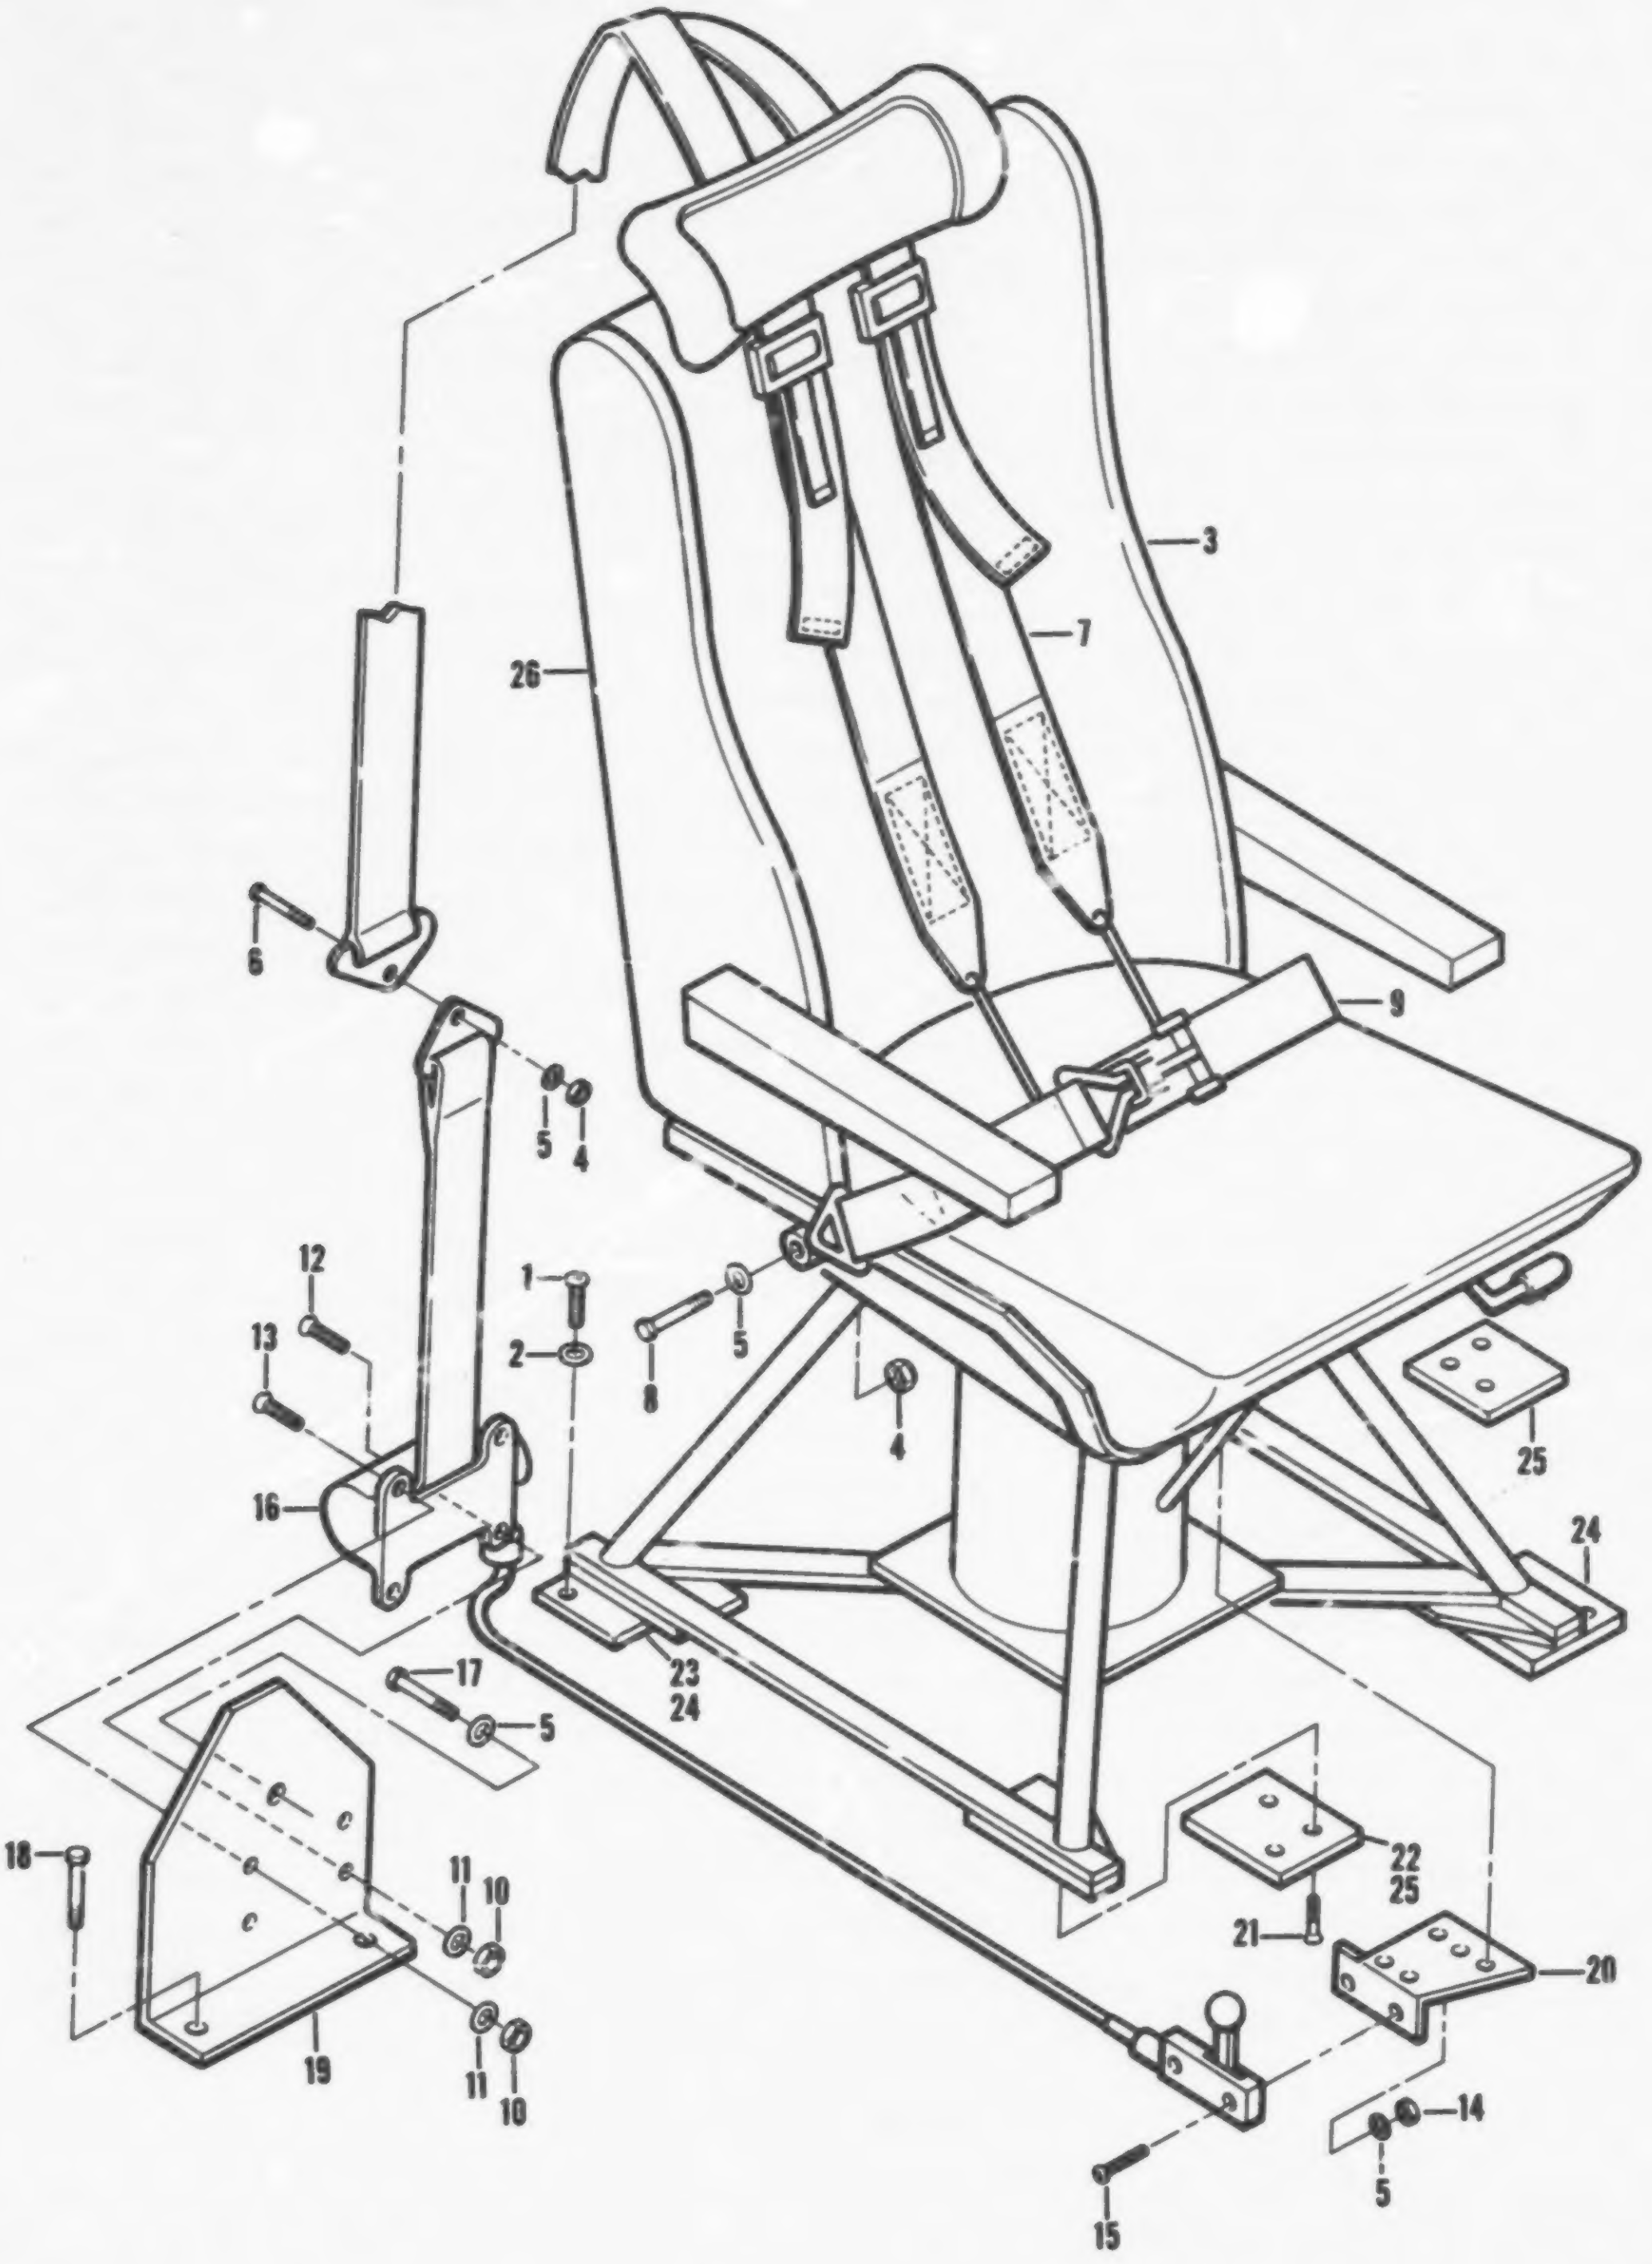
3
26
7
6
9
5
4
12
1
13
2
5
8
4
25
16
24
23
24
17
5
18
11
10
22
25
21
20
19
11
10
14
15
5

Figure 42A. Crew Seat Installation

(1) ILLUSTRATION (a) FIG. NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
42A		XCFZZ		20309	ES-F-220442	CREW SEAT INSTL SEE FIG.5A FOR NHA	UHE	EA	1
42A	1	PAOZZ	5306-00-151-1341	88044	AN6-10	.BOLT,MACHINE	UHE	EA	8
42A	2	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT	UHE	EA	8
42A	3	AOOOO		20309	ES-F-212848-1	.CREW SEAT ASSEMBLY	UHE	EA	1
42A	3	AOOOO		20309	ES-F-212848-2	.CREW SEAT ASSEMBLY	UHE	EA	1
42A	4	PAOZZ	5310-00-877-5796	96906	MS21044N4	..NUT,SELF-LOCKING	UHE	EA	3
42A	5	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT	UHE	EA	7
42A	6	PAOZZ	5306-00-151-1424	88044	AN4-10A	..BOLT,MACHINE	UHE	EA	1
42A	7	PAOZZ	1680-00-516-8132	96906	MS16069-1	..HARNESS,SHOULDER	UHE	EA	1
42A	8	PAOZZ	5306-00-637-7692	80205	NAS501-4-24A	..BOLT,MACHINE	UHE	EA	2
42A	9	PAOZZ	1680-00-516-6543	98750	54H19651	..BELT,AIRCRAFT SAFET	UHE	EA	1
42A	10	PAOZZ	5310-00-877-5797	96906	MS21044N3	..NUT,SELF-LOCKING	UHE	EA	4
42A	11	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT	UHE	EA	8
42A	12	PAOZZ	5305-00-052-5272	96906	MS24693S286	..SCREW,MACHINE	UHE	EA	1
42A	13	PAOZZ	5305-00-957-7086	96906	MS24693S273	..SCREW,MACHINE	UHE	EA	3
42A	14	PAOZZ	5310-00-902-6676	96906	MS21083N3	..NUT,SELF-LOCKING	UHE	EA	2
42A	15	PAOZZ	5305-00-993-1851	96906	MS35207-267	..SCREW,MACHINE	UHE	EA	2
42A	16	AOOOZ	1680-00-710-1844	45402	0106176-0	..REEL,SHOULDER HARNE SEE FIG 32 FOR BREAKDOWN	UHE	EA	1
42A	17	PAOZZ	5306-00-151-1426	88044	AN4-6A	..BOLT,MACHINE	UHE	EA	1
42A	18	PAOZZ	5306-00-151-2622	88044	AN5-21A	..BOLT,MACHINE	UHE	EA	2
42A	19	MFOZZ		20309	ES-D-220174	..BRACKET	UHE	EA	1
42A	20	MFOZZ		20309	ES-C-220175	..BRACKET	UHE	EA	1
42A	21	PAOZZ	5305-00-206-1082	80205	NAS517-5-8	..SCREW,MACHINE	UHE	EA	8
42A	22	XDOZZ		20309	ES-C-220172-1	..MOUNTING PAD	UHE	EA	1
42A	23	XDOZZ		20309	ES-C-220172-2	..MOUNTING PAD	UHE	EA	1
42A	24	XDOZZ		20309	FS-C-220173-1	..MOUNTING PAD	UHE	EA	2
42A	24	XDOZZ		20309	ES-C-220173-1	..MOUNTING PAD	UHE	EA	1
42A	25	XDOZZ		20309	ES-C-220173-2	..MOUNTING PAD	UHE	EA	2
42A	25	XDOZZ		20309	ES-C-220173-2	..MOUNTING PAD U/O P/N ES-F-212848-2	UHE	EA	1
42A	26	PAOFF	1680-00-253-2249	36659	641378-101	..SEAT,AIRCRAFT SEE FIG 42B FOR BREAKDOWN	UHE	EA	1

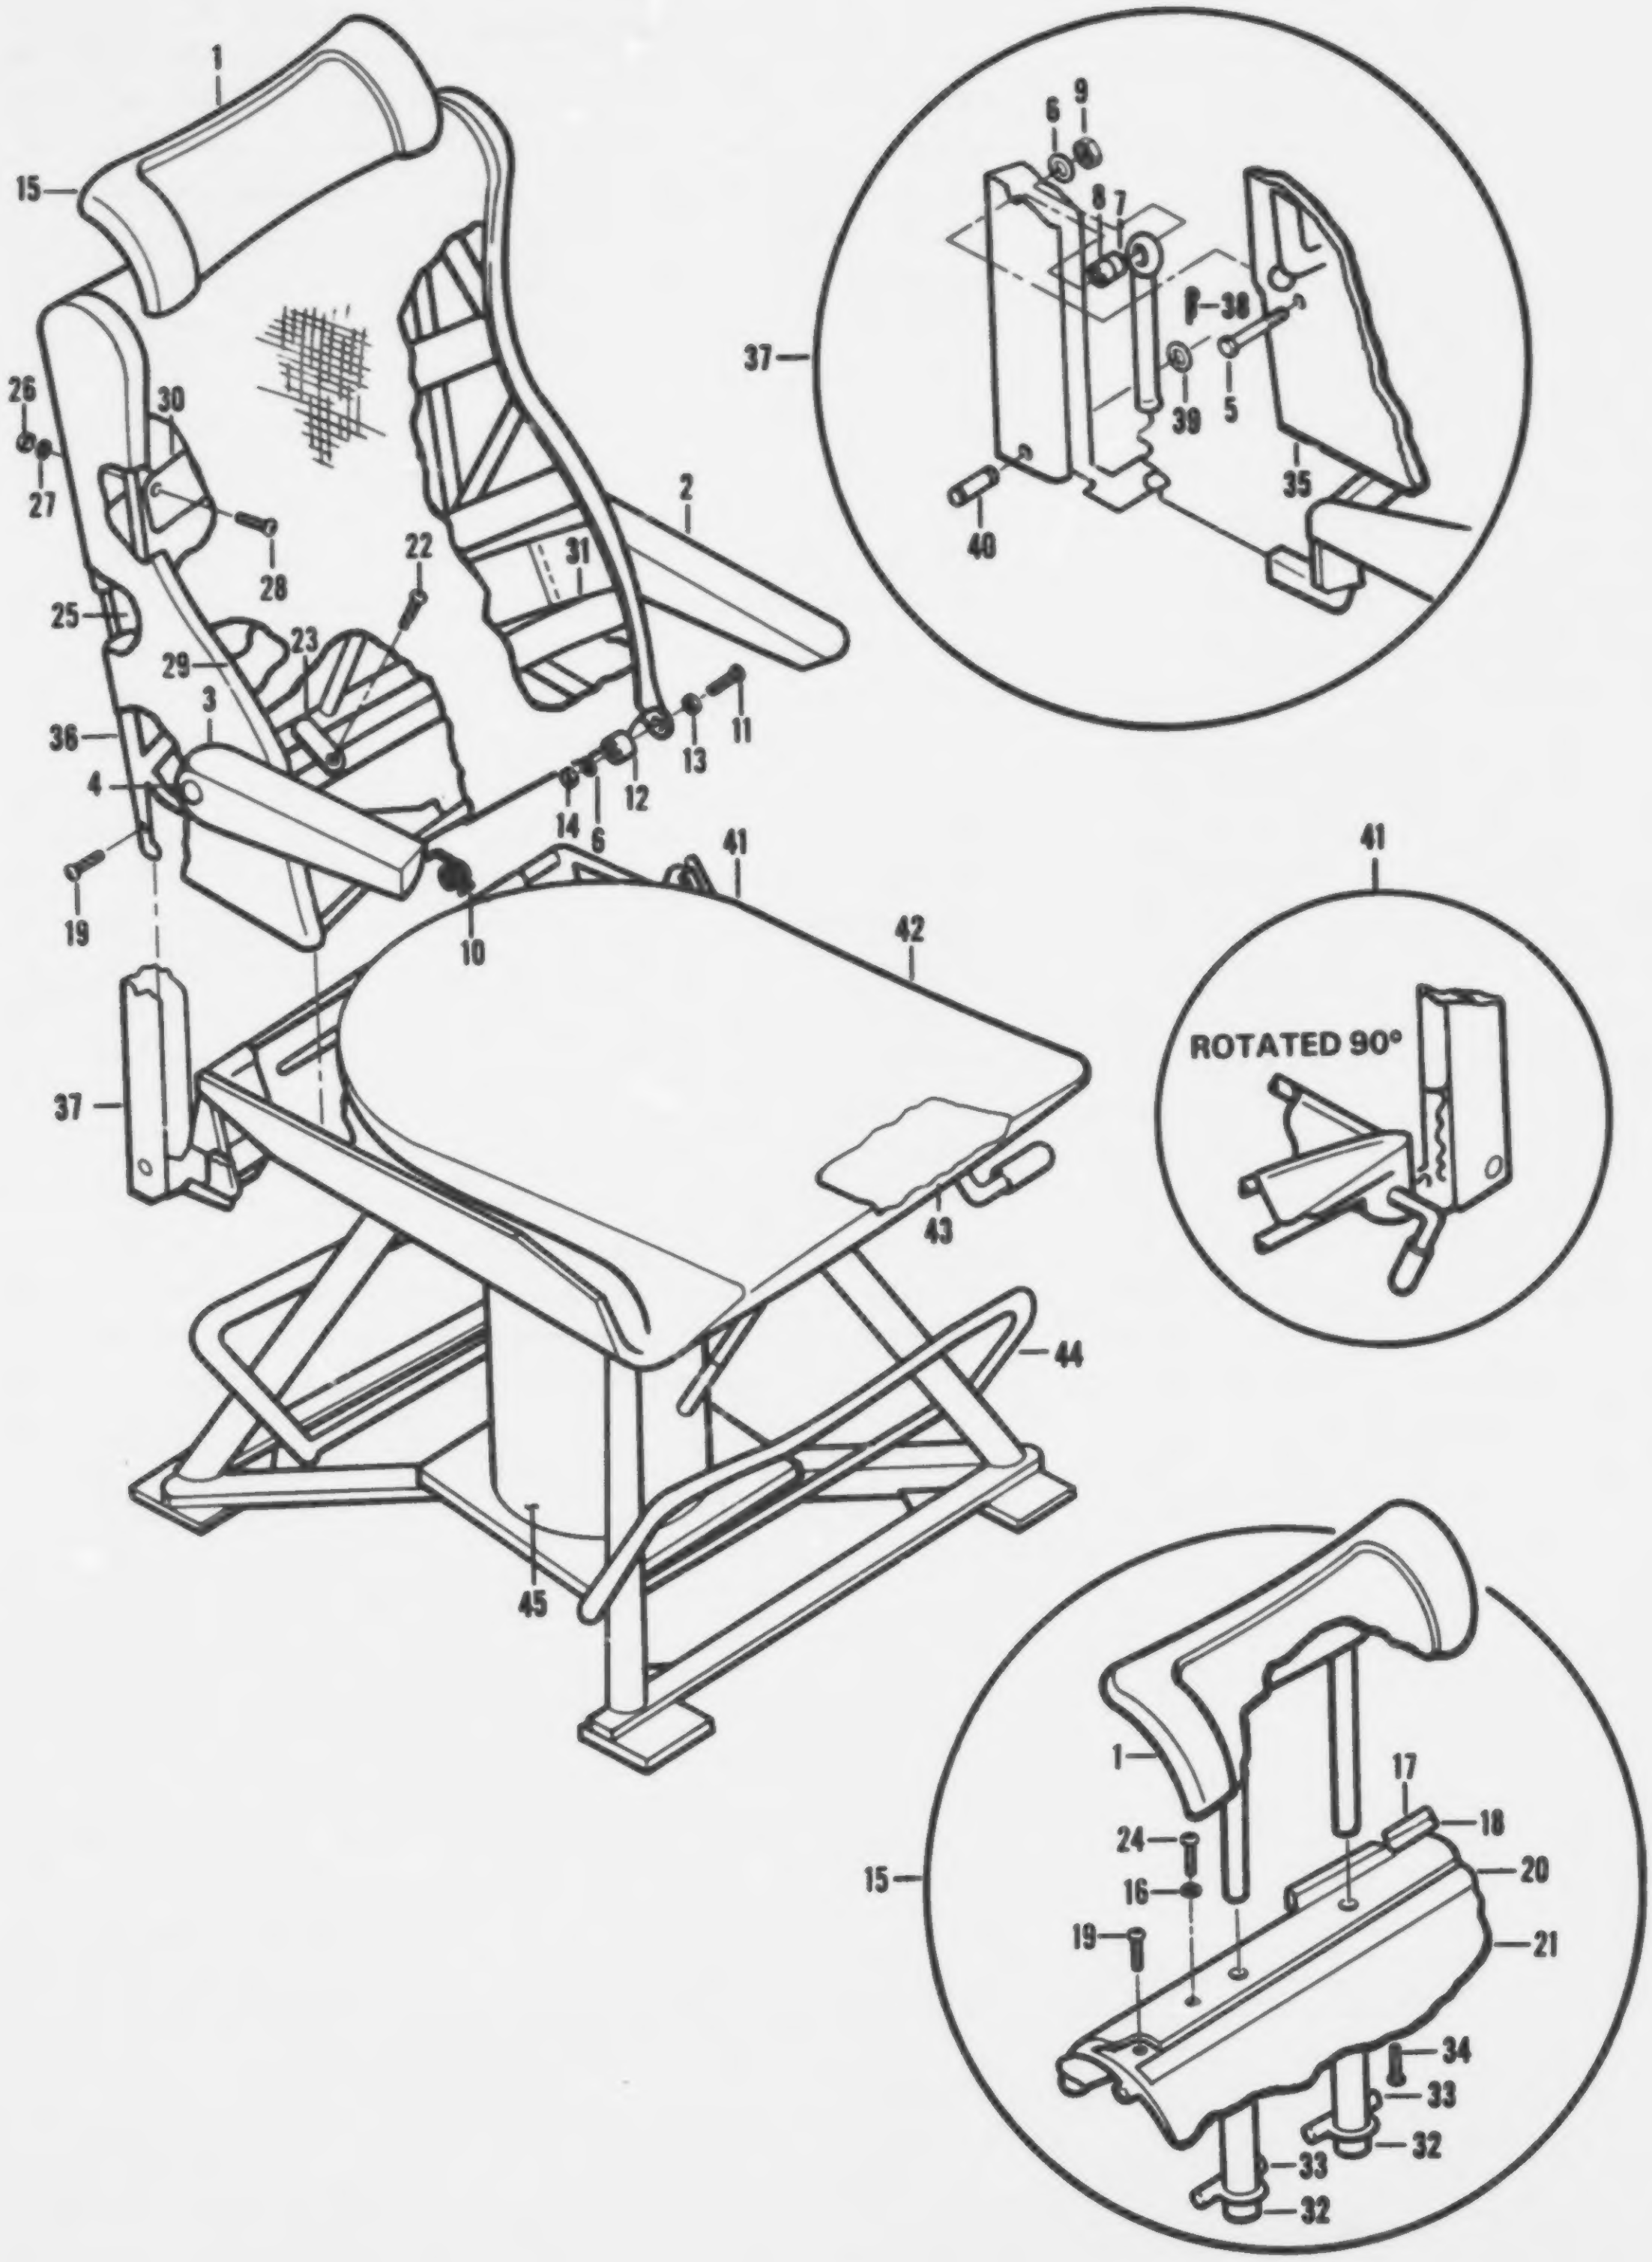
1
15
26
27
30
28
22
25
23
29
36
3
4
19
31
2
11
13
12
14
6
10
41
42
37
43
44
45
9
6
8
7
38
39
5
35
40
37
41
ROTATED 90°
1
17
18
24
20
15
16
19
21
34
33
32
33
32

Figure 42B. Seat Assembly

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
42B		PAOFF	1680-00-253-2249	83115	4251-5	SEAT,AIRCRAFT SEE FIG 42A FOR NHA....UHE	EA	1
42B	1	PBOOO	1680-00-858-4505	92802	4858	.HEAD REST,SEAT SEE FIG 42C FOR BREAKDOWN....UHE	EA	1
42B	2	PBOOO	1680-00-073-0796	92802	10491-1	.ARM REST,SEAT ASSEMBLY-LH SEE FIG.42D FOR BREAKDOWN....UHE	EA	1
42B	3	PBOOO	1680-00-073-0795	92802	10491-2	.ARM REST,SEAT ASSEMBLY-RH SEE FIG.42D FOR BREAKDOWN....UHE	EA	1
42B	4	XDOZZ		71785	41G	.HANDIBUTTON....UHE	EA	1
42B	5	PAOZZ	5306-00-151-1420	88044	AN4-14A	.BOLT,MACHINE....UHE	EA	2
42B	6	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT....UHE	EA	4
42B	7	PAOZZ	5365-00-057-9257	80205	NAS43HT4-12	.SPACER,SLEEVE....UHE	EA	2
42B	8	PAOZZ	5365-00-269-4457	80205	NAS43HT4-16	.SPACER,SLEEVE....UHE	EA	2
42B	9	PAOZZ	5310-00-877-5796	96906	MS20365-428	.NUT,SELF-LOCKING....UHE	EA	2
42B	10	XDOZZ		83115	4849	.SPRING....UHE	EA	2
42B	11	PAOZZ	5305-00-680-4963	80205	NAS623-4-14	.SCREW,MACHINE....UHE	EA	2
42B	12	PAOZZ	1680-01-158-4025	83115	MS31075-8	.SPACER,SPECIAL....UHE	EA	2
42B	13	PAOZZ	3120-00-027-6338	92802	3339-42	.BUSHING,SLEEVE....UHE	EA	2
42B	14	PAOZZ	5310-00-488-8566	72962	22K2-048	.NUT,SELF-LOCKING,CA....UHE	EA	1
42B	15	PBOOO	1560-01-158-4023	92802	10533-1	.BACK ASSEMBLY....UHE	EA	1
42B	16	PBOZZ	5365-01-158-4035	92802	5133-25	..RING,RETAINING....UHE	EA	4
42B	17	XDOZZ		83115	5189	..PIN,ROLLER....UHE	EA	2
42B	18	XDOZZ		83115	4532	..ROLLER....UHE	EA	2
42B	19	PAOZZ	5305-00-957-7817	96906	MS24693S26	..SCREW,MACHINE....UHE	EA	4
42B	20	PBOZZ	1680-01-101-7085	83115	5179-1	..SHROUD....UHE	EA	1
42B	21	XDOZZ		83115	4893	..RETAINER,NET....UHE	EA	1
42B	22	PAOZZ	5305-00-180-0009	88044	AN525-10R7	..SCREW,MACHINE....UHE	EA	2
42B	23	XDOZZ		83115	5163-1	..RETAINER,NET....UHE	EA	1
42B	24	PAOZZ	5305-00-984-4989	96906	MS35206-229	..SCREW,MACHINE....UHE	EA	2
42B	25	PAOZZ	1680-00-279-3674	83115	5154-3	..COVER,SEAT BACK,PIL....UHE	EA	1
42B	26	PAOZZ	5310-00-877-5797	96906	MS21044N3	..NUT....UHE	EA	12
42B	27	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT....UHE	EA	12
42B	28	PAOZZ	5305-00-052-6874	96906	MS24627-50	..SCREW,TAPPING,THREA....UHE	EA	12
42B	29	XDOZZ		83115	5112	..FILLER....UHE	EA	6
42B	30	XDOZZ		83115	4932-8	..STRAP,BACK....UHE	EA	2
42B	31	XDOZZ		83115	4932-4	..STRAP,BACK....UHE	EA	1
42B	32	XDOZZ		83115	2333-1	..SPRING....UHE	EA	2
42B	33	XDOZZ		83115	4529	..PIN....UHE	EA	2
42B	34	PAOZZ	5305-00-984-4988	96906	MS35206-228	..SCREW,MACHINE....UHE	EA	4
42B	35	XDOZZ		83115	5188-1	..PANEL....UHE	EA	1
42B	36	XAOZZ		83115	10708-1	..FRAME....UHE	EA	1
42B	37	PBOZZ	1680-00-858-0430	92802	5169	.SHROUD,MECHANISM....UHE	EA	2
42B	38	PAOZZ	5315-00-839-2325	96906	MS24665-132	.PIN,COTTER....UHE	EA	2
42B	39	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT....UHE	EA	2
42B	40	PAOZZ	5315-00-080-1944	96906	MS20392-2C37	.PIN,STRAIGHT....UHE	EA	2
42B	41	XCFZZ		83115	10501-3	.CONTROLS INSTL SEE FIG 42E FOR BREAKDOWN....UHE	EA	1
42B	42	PAOZZ	1680-01-074-9749	92802	10342-1	.COVER,CUSHION....UHE	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
42B	43	PAOZZ	1680-01-074-9750	92802	10502-1	.CUSHION,SEAT BOTTOM....................................UHE	EA	1
42B	44	XAOZZ		83115	9631-1	.TREADLE INSTL..UHE	EA	1
42B	45	XDOFF		83115	10534-3	.BOTTOM ASSEMBLY SEE FIG 42E FOR BREAKDOWN..............UHE	EA	1

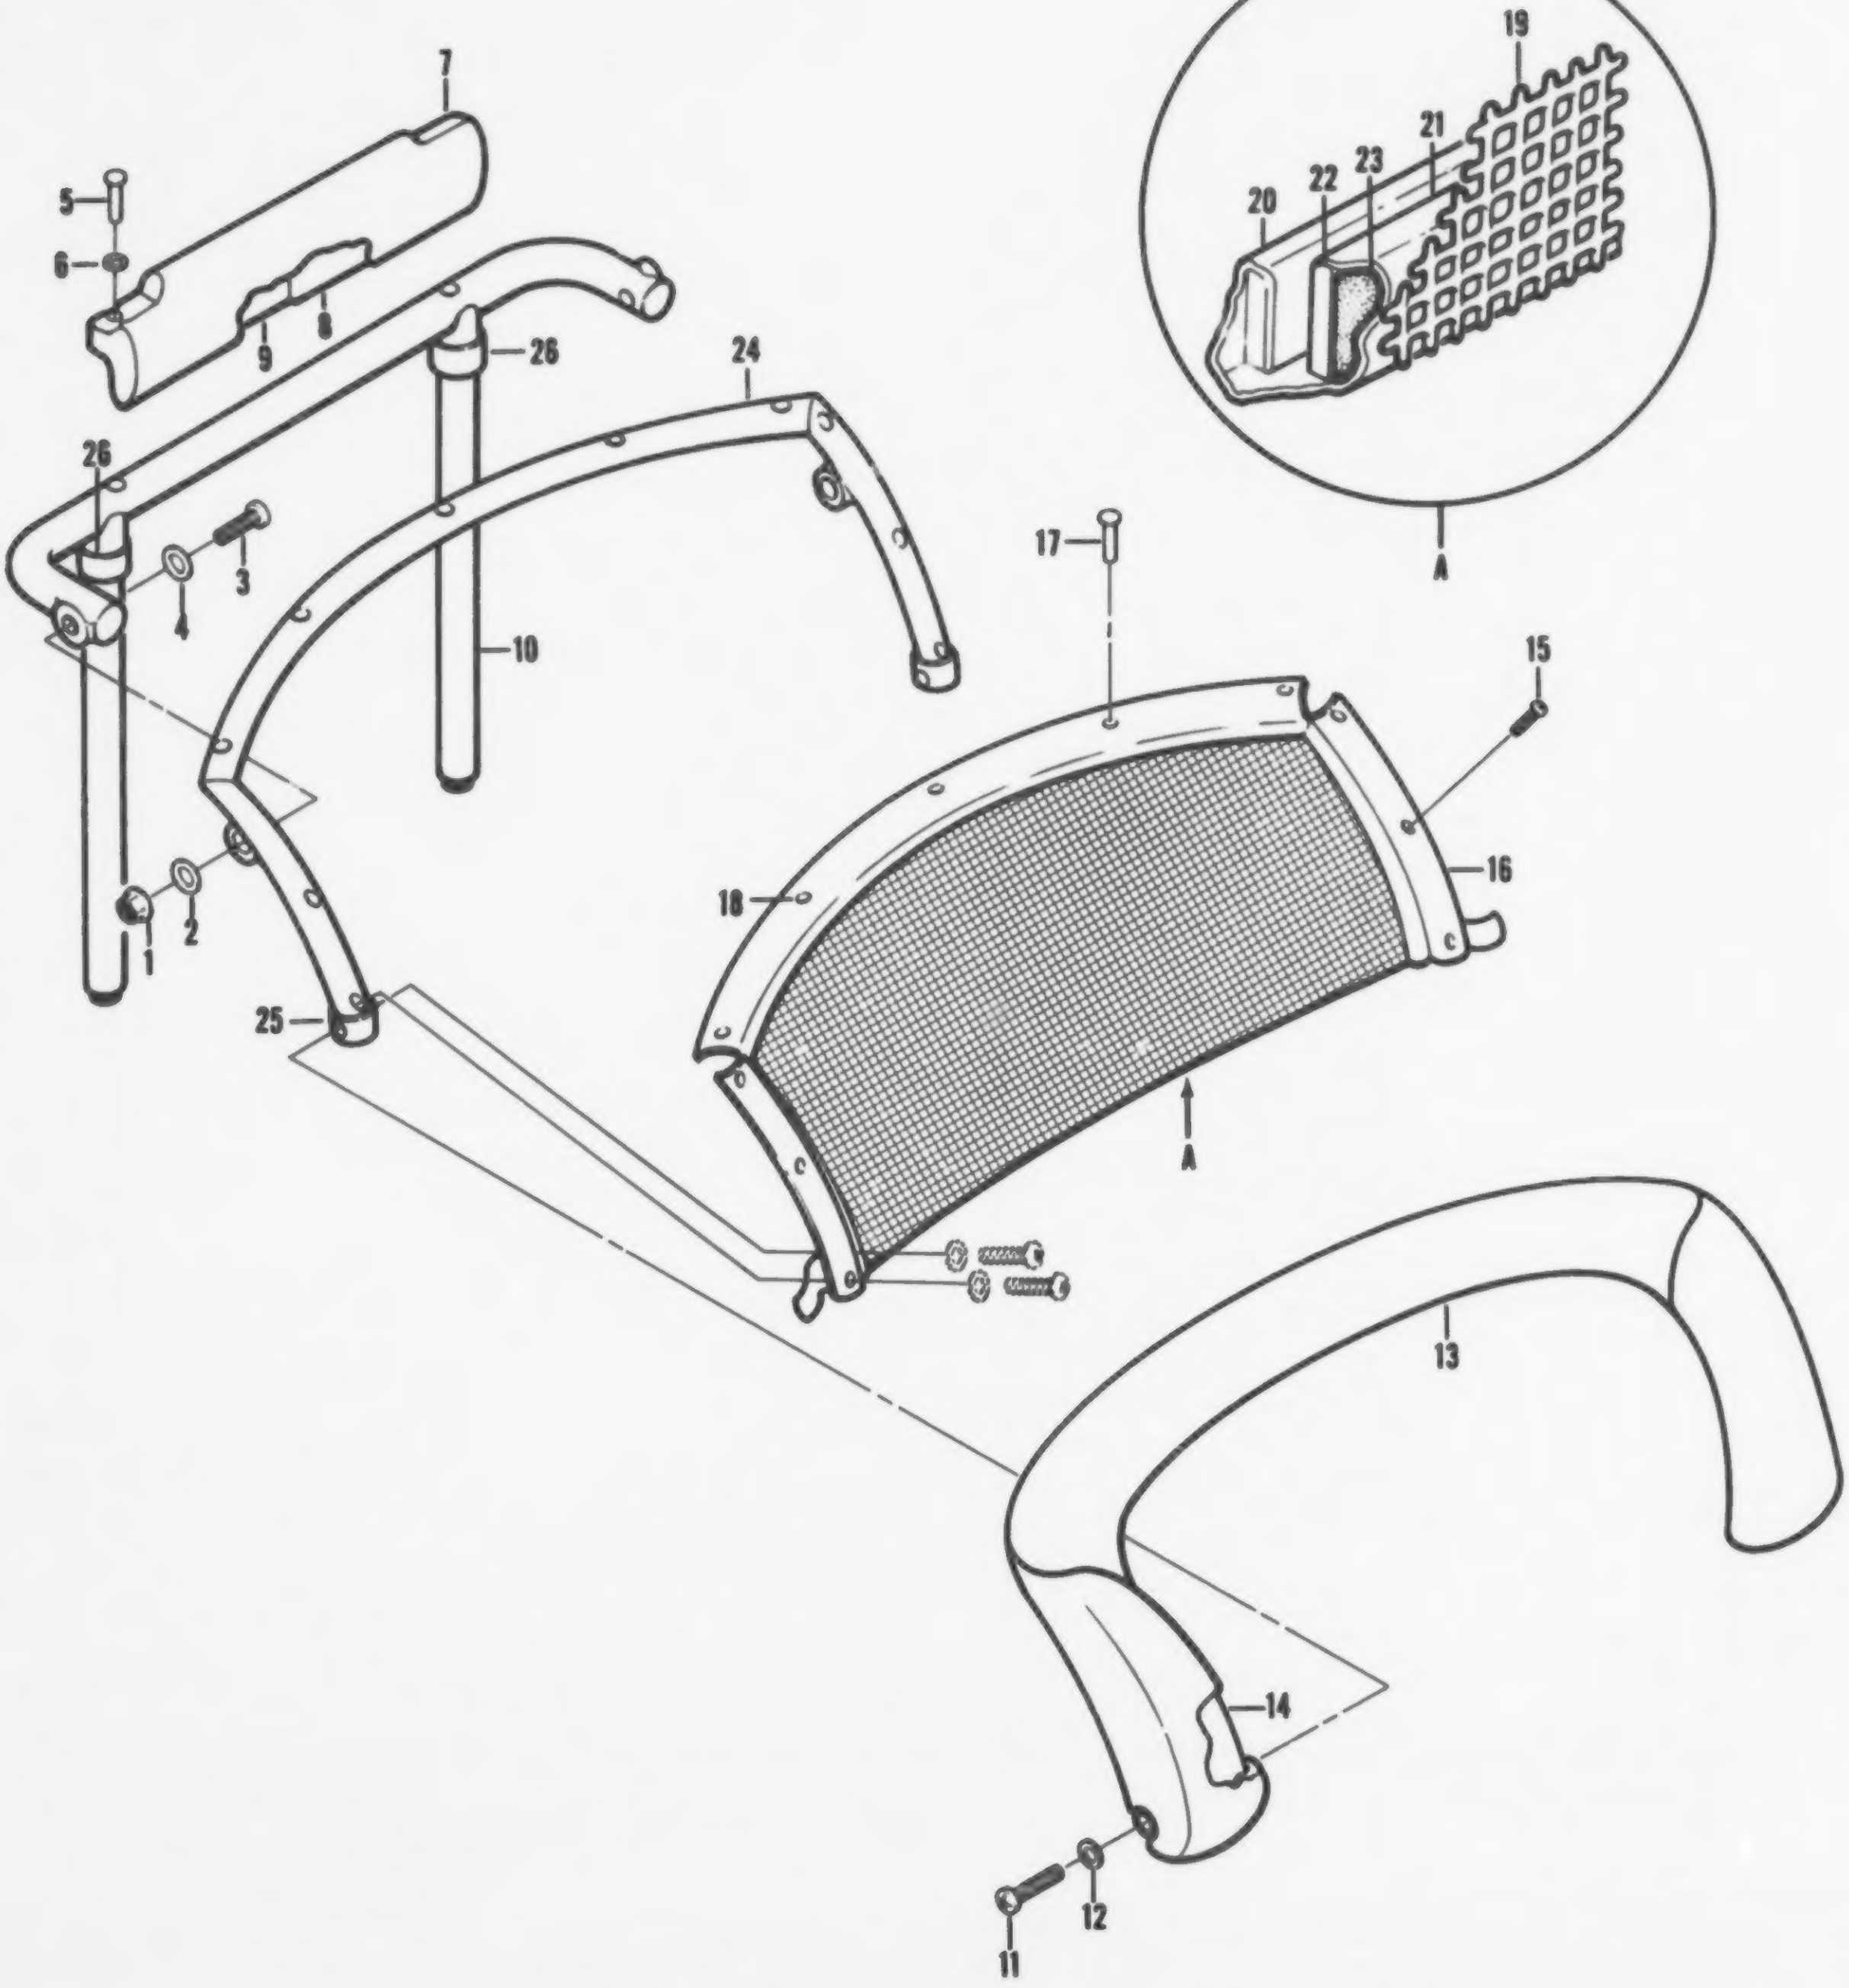
7
5
6
9
8
26
24
26
3
4
10
19
21
22
23
20
A
17
15
16
18
1
2
25
A
13
14
12
11

Figure 42C. Head Rest Assembly

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
42C		PBOOO	1680-00-058-4505	92802	4858	HEAD REST ASSEMBLY SEE FIG 42B FOR NHA..........UHE	EA	1
42C	1	PAOZZ	5310-00-167-1343	88044	AN315-3R	.NUT,SELF-LOCKING,HE..........UHE	EA	2
42C	2	PAOZZ	5310-00-995-8235	92802	5159	.WASHER,FLAT..........UHE	EA	2
42C	3	PAOZZ	5305-00-207-1205	88044	AN526-1032R7	.SCREW,MACHINE..........UHE	EA	2
42C	4	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT..........UHE	EA	2
42C	5	PAOZZ	5320-00-957-3582	81349	M2424316-A402F	.RIVET,BLIND..........UHE	EA	6
42C	6	PAOZZ	5310-00-595-6425	88044	AN960C4L	.WASHER,FLAT..........UHE	EA	6
42C	7	MOOZZ		83115	5183-21	.COVER..........UHE	EA	1
42C	8	MOOZZ		83115	5183	.PAD..........UHE	EA	1
42C	9	XOOZZ		83115	5152	.PLATE..........UHE	EA	1
42C	10	XOOZZ		83115	4533	.SOCKET AND TUBE..........UHE	EA	1
42C	11	PAOZZ	5305-00-957-7819	96906	MS24693S30	.SCREW,MACHINE..........UHE	EA	2
42C	12	PAOZZ	5310-00-198-9315	80205	NAS391B6P	.WASHER,FINISHING..........UHE	EA	2
42C	13	MOOZZ		83115	4859	.PAD..........UHE	EA	1
42C	14	MOOZZ		83115	10046	.SHROUD..........UHE	EA	1
42C	15	PAOZZ	5305-00-984-4984	96906	MS35206-227	.SCREW..........UHE	EA	6
42C	16	MOOZZ		83115	4863	.RETAINER..........UHE	EA	2
42C	17	PAOZZ	5320-00-582-3298	96906	MS20600B4W2	.RIVET,BLIND..........UHE	EA	5
42C	18	MOOZZ		83115	4864	.RETAINER..........UHE	EA	1
42C	19	PAOZZ	1680-00-020-4261	92802	5157-3	.NET ASSY,HEADREST..........UHE	EA	1
42C	20	MOOZZ		83115	5182	..STRAP..........UHE	EA	1
42C	21	MOOZZ		83115	5173	.COVER..........UHE	EA	1
42C	22	MOOZZ		83115	5168	.STRAP..........UHE	EA	1
42C	23	MOOZZ		83115	5183-3	..PAD..........UHE	EA	1
42C	24	XAOZZ		83115	4534	.FRAME ASSEMBLY..........UHE	EA	1
42C	25	PAOZZ	5310-00-064-1065	80205	NAS1330A06K106	.NUT,PLAIN,BLIND RIV..........UHE	EA	8
42C	26	PAOZZ	1680-01-158-4024	92802	10598-3	.COLLAR..........UHE	EA	2

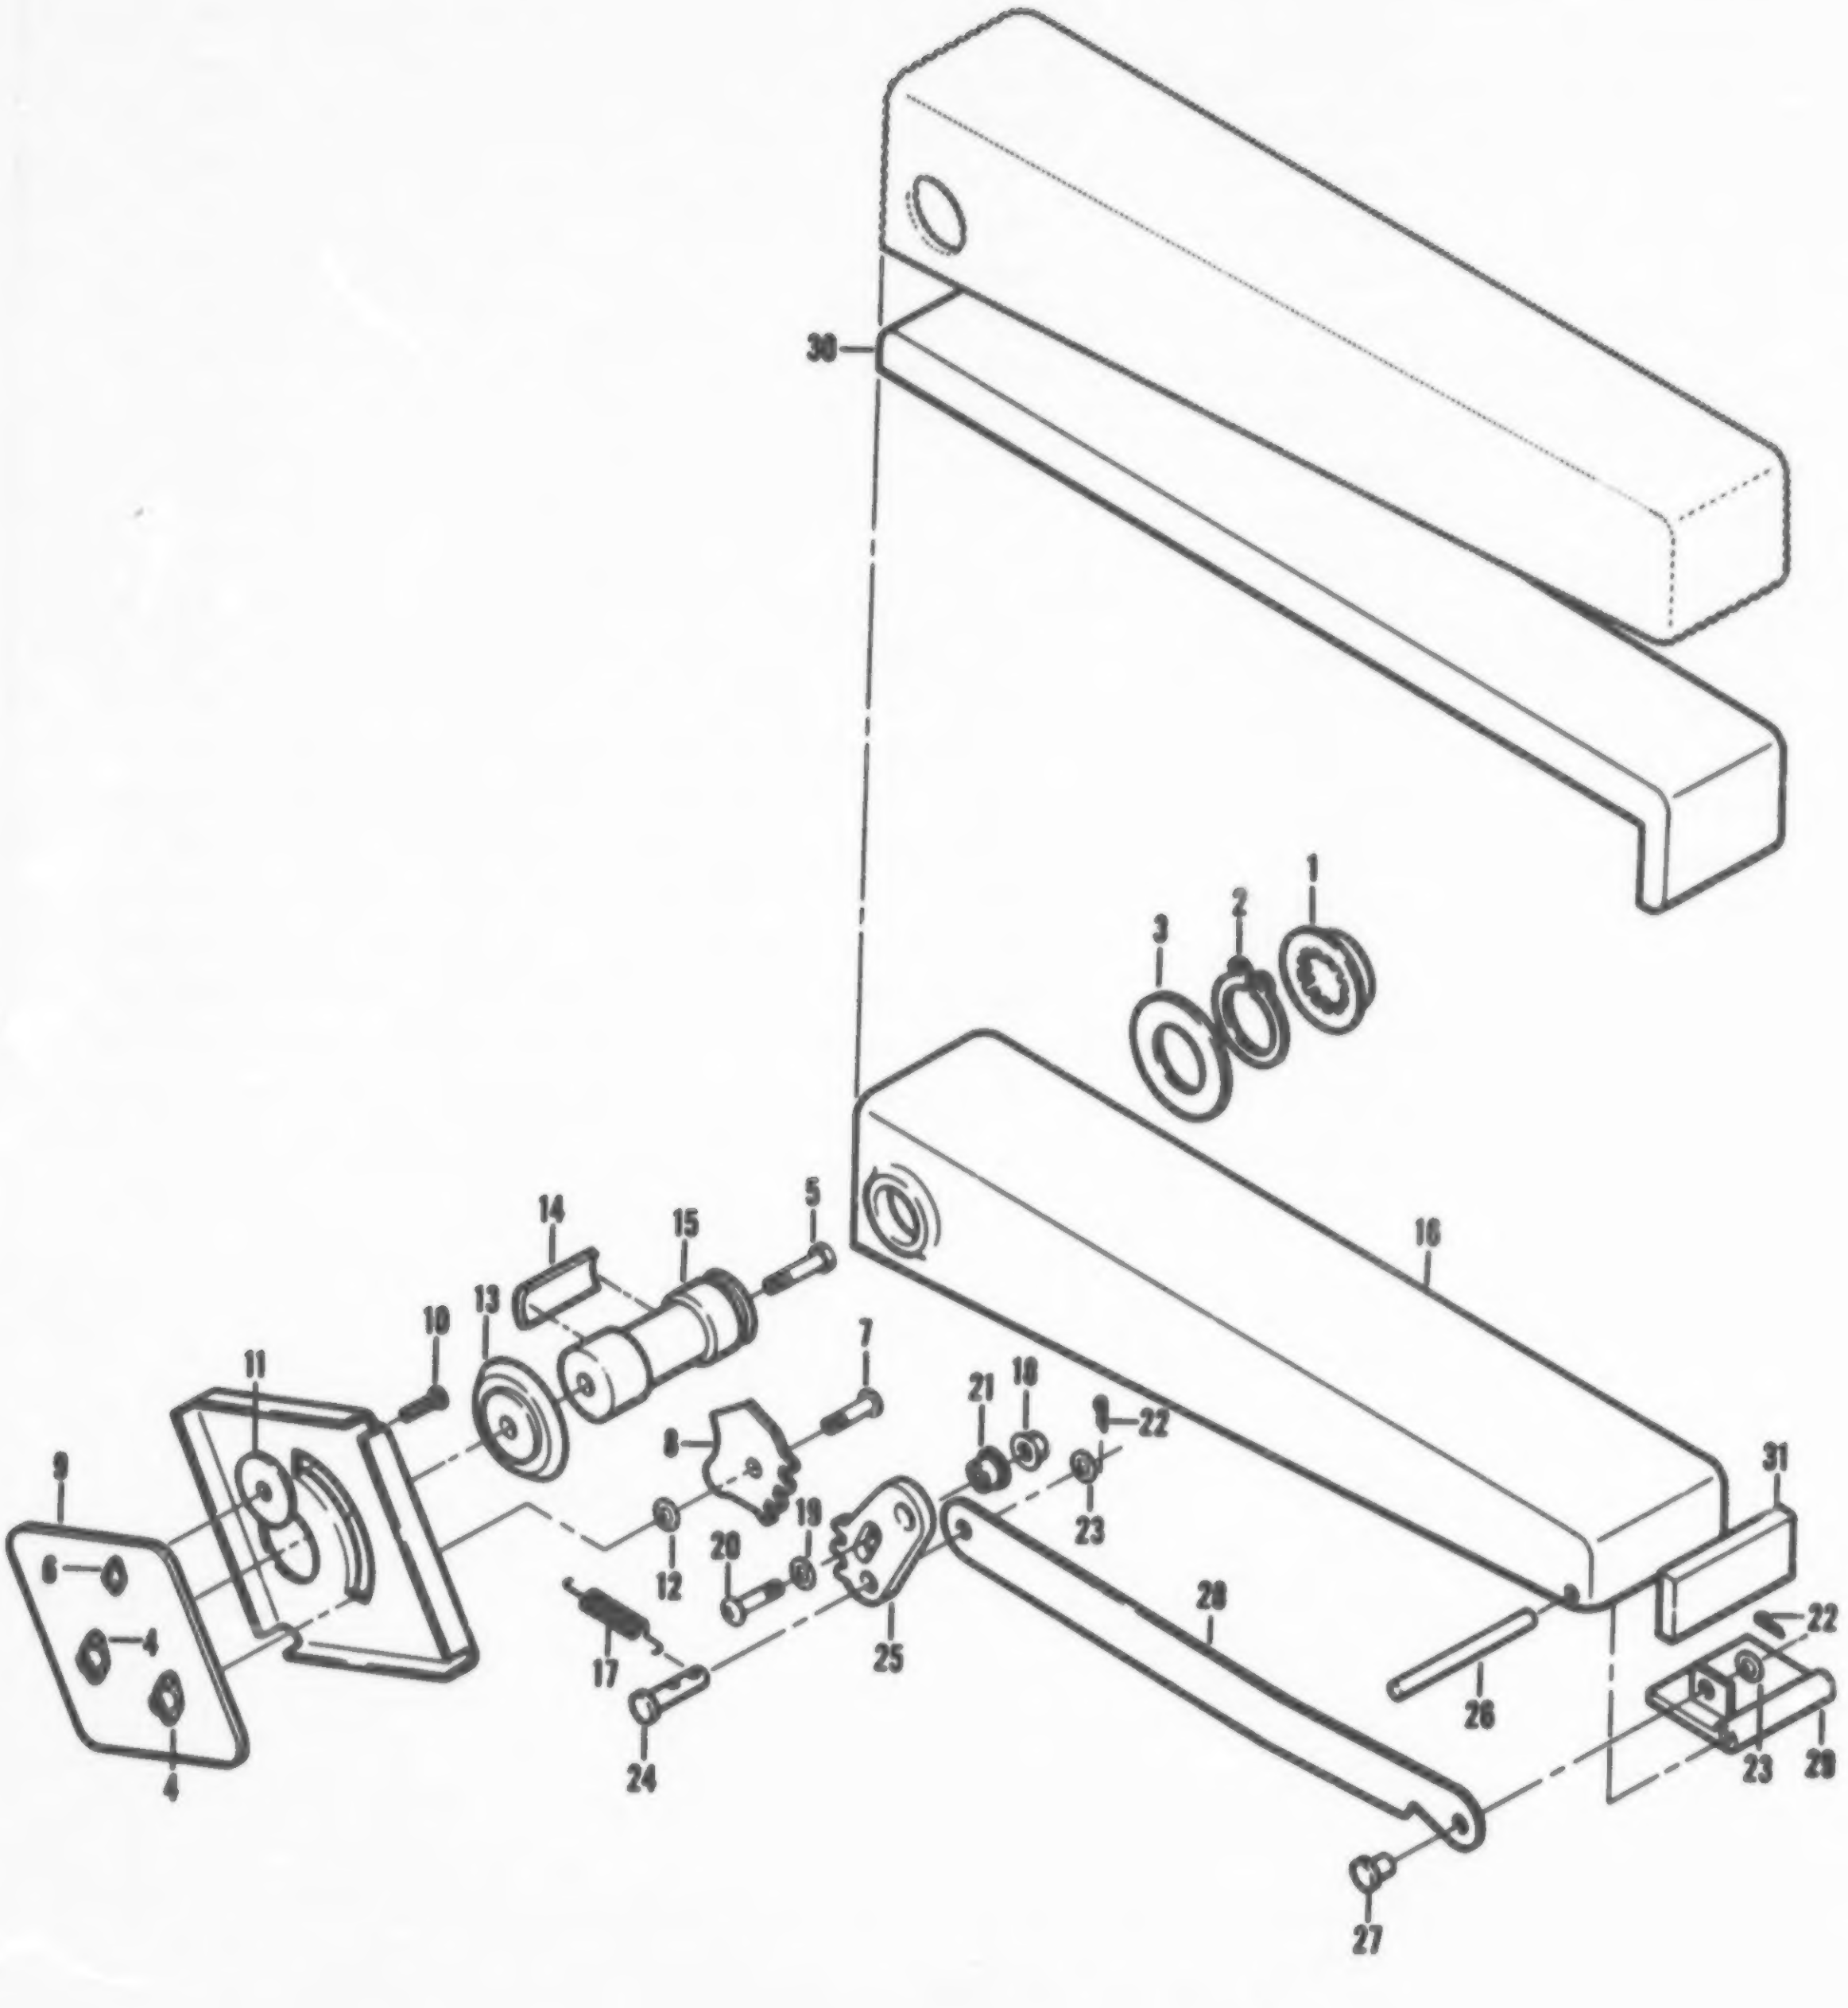
30
1
2
3
16
14
15
5
13
10
11
7
21
18
22
9
8
6
4
4
4
12
20
19
23
17
25
24
28
31
22
26
23
29
27

Figure 42D. Armrest Assembly

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
420		PBOOO	1680-00-073-0796	92802	10491-1	ARM REST,SEAT ASSEMBLY-LH SEE FIG.428 FOR NHA	UHE	EA	1
420		PBOOO	1680-00-073-0795	92802	10491-2	ARM REST,SEAT ASSEMBLY-RH SEE FIG.428 FOR NHA	UHE	EA	1
420	1	XDOZZ	5340-00-804-2181	61864	HS51247	.BUTTON,PLUG	UHE	EA	1
420	2	PAOZZ	5365-00-803-7302	96906	MS16624-1081	.RING	UHE	EA	1
420	3	XDOZZ		92802	8476-1	.WASHER	UHE	EA	1
420	4	PAOZZ	5310-00-763-7888	96906	MS21074L4	.NUT,SELF-LOCKING,PL	UHE	EA	2
420	5	PAOZZ	5306-00-144-3705	88044	AN6-6	.BOLT,MACHINF	UHE	EA	1
420	6	PAOZZ	5310-00-763-7887	96906	MS21074L3	.NUT,SELF-LOCKING,PL	UHE	EA	1
420	7	PAOZZ	5305-00-169-6954	80205	NAS222-16	.SCREW,MACHINE	UHE	EA	1
420	8	XDOZZ		92802	10495-1	.GEAR	UHE	EA	1
420	9	XDOZZ		92802	10496-1	.PLATE-LH	UHE	EA	1
420	9	XDOZZ		92802	10496-2	.PLATE-RH	UHE	EA	1
420	10	PAOZZ	5306-00-144-3646	88044	AN3-4	.BOLT,MACHINE	UHE	EA	1
420	11	PAOZZ	5310-00-167-0765	88044	AN970-3	.WASHER	UHE	EA	1
420	12	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT	UHE	EA	1
420	13	XDOZZ		92802	10498-1	.WASHER	UHE	EA	1
420	14	PAOZZ	1680-00-679-2051	92802	93010-1	.SPRING	UHE	EA	1
420	15	XDOZZ		92802	10497-1	.SHAFT	UHE	EA	1
420	16	XAOOO		92802	10500-1	.ARMREST-LH	UHE	EA	1
420	16	XAOOO		92802	10500-2	.ARMREST-RH	UHE	EA	1
420	17	PAOZZ	5360-00-679-2058	92802	93011-1	..SPRING,HELICAL,EXTE	UHE	EA	1
420	18	PAOZZ	5310-00-807-1467	96906	MS21040-3	..NUT,SELF-LOCKING	UHE	EA	1
420	19	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT	UHE	EA	1
420	20	PAOZZ	5305-00-889-2994	96906	MS24694S3	..SCREW,MACHINE	UHE	EA	1
420	21	PBOZZ	3120-00-943-2238	92802	96008-1	..BUSHING,SLEEVE	UHE	EA	1
420	22	PAOZZ	5315-00-839-2325	96906	MS24665-132	..PIN,COTTER	UHE	EA	2
420	23	PAOZZ	5310-00-167-0831	88044	AN960-4L	..WASHER,FLAT	UHE	EA	1
420	24	PAOZZ	5315-00-450-4584	92802	95005-1	..PIN,STRAIGHT,HEADED	UHE	EA	1
420	25	PBOZZ	3020-00-065-2236	92802	10492-1	..GEAR SECTOR,SPUR	UHE	EA	1
420	25	PBOZZ	1680-00-065-2237	92802	10492-2	..GEAR,ARM REST	UHE	EA	1
420	26	XDOZZ		92802	4958	..PIN	UHE	EA	1
420	27	PAOZZ	5315-00-812-3734	96906	MS20392-1C7	..PIN,STRAIGHT,HEADED	UHE	EA	1
420	28	XDOZZ		92802	10493-3	..LINK	UHE	EA	1
420	29	XDOZZ		92802	10507-1	..LEVER-LH	UHE	EA	1
420	29	XDOZZ		92802	10507-2	..LEVER-RH	UHE	EA	1
420	30	MOOZZ		92802	10500-27	..COVER,FRONT	UHE	EA	1
420	30	MOOZZ		92802	10500-29	..COVER,MIDDLE-LH	UHE	EA	1
420	30	MOOZZ		92802	10500-30	..COVER,MIDDLE-RH	UHE	EA	1
420	30	MOOZZ		92802	10500-31	..COVER,REAR	UHE	EA	1
420	30	MOOZZ		92802	10500-33	..PAD	UHE	EA	1
420	31	MOOZZ		92802	10500-21	..FILLER	UHE	EA	1

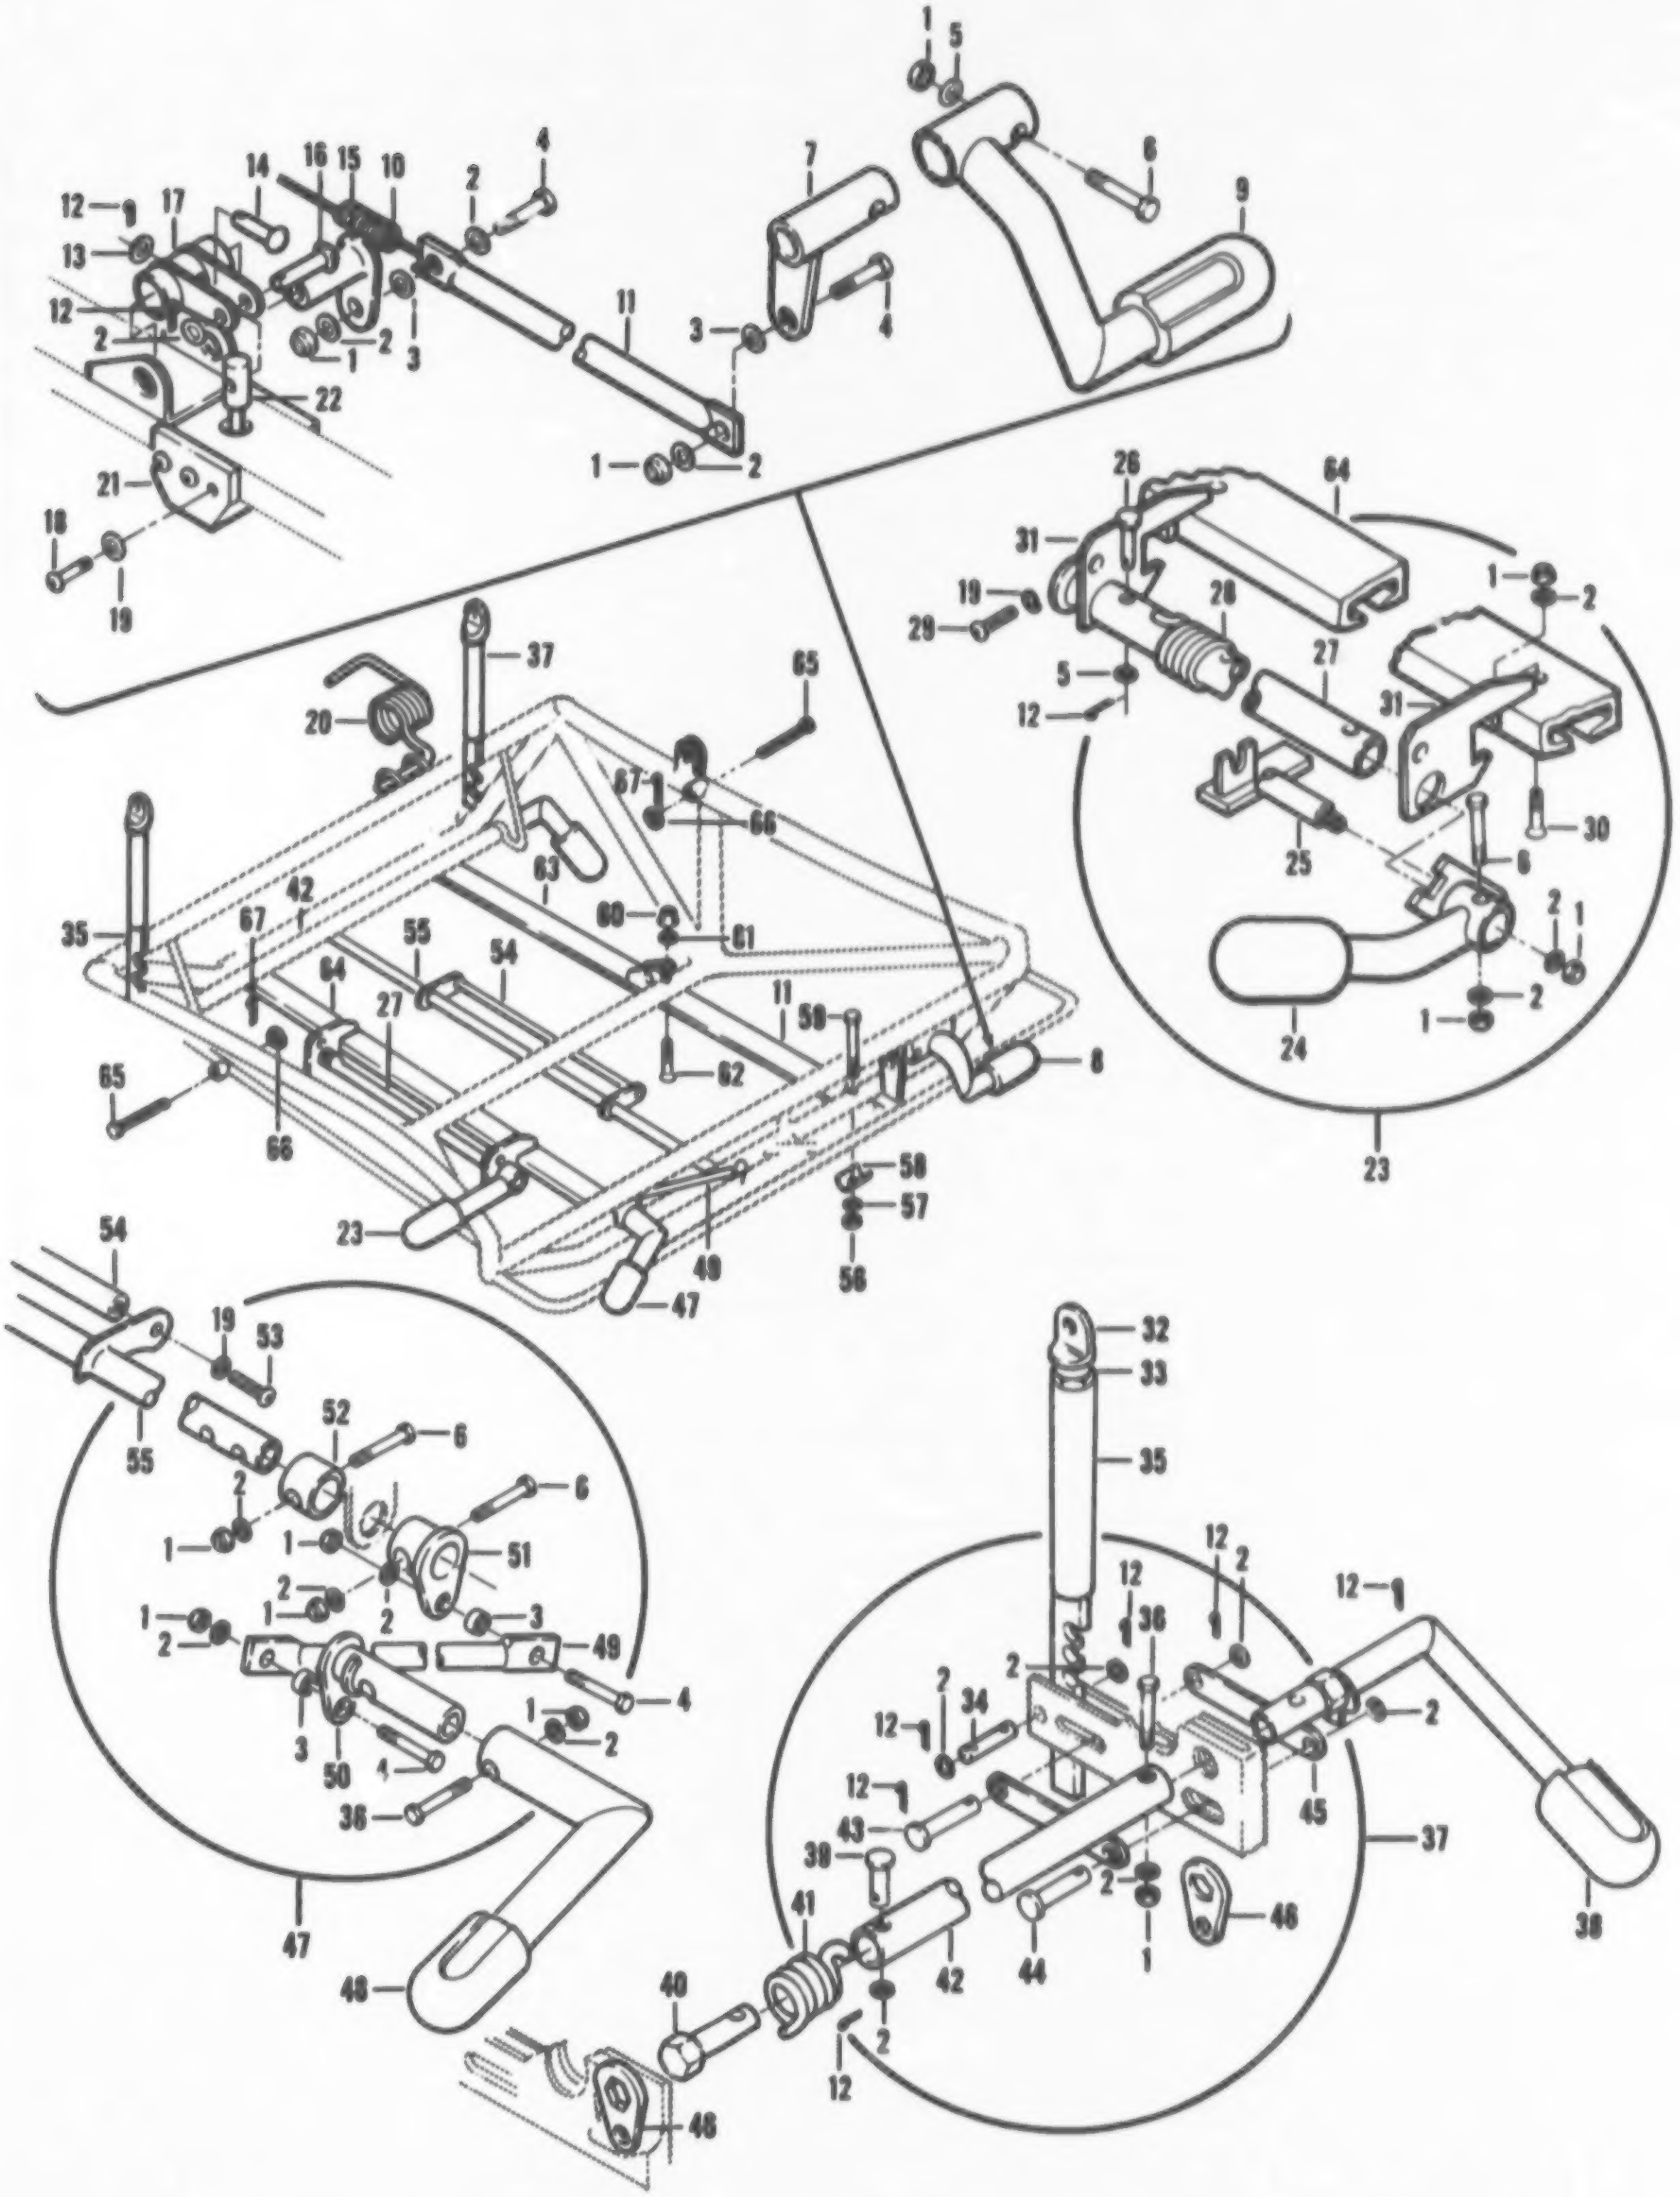
1
5
4
16
15
10
14
2
7
6
9
12
17
13
12
2
1
2
3
11
3
4
22
1
2
21
18
19
26
64
31
19
29
28
1
2
5
27
12
31
37
65
20
67
66
30
25
6
63
42
35
60
61
67
55
54
64
27
11
59
2
1
65
62
1
2
8
66
24
23
58
57
23
49
56
47
54
19
53
32
33
52
6
55
35
2
6
1
1
51
12
2
12
2
36
12
1
2
2
3
1
1
49
2
2
36
34
2
4
12
1
2
3
50
4
36
12
43
45
37
39
2
41
42
44
1
46
38
47
48
40
2
12
46

Figure 42E. Controls Installation, Seat

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
42E		XCFZZ		92802	10501-3	GROUP 02 AIRFRAME CONTROLS INSTL SEE FIG.42B FOR NHA.....UHE	EA	1
42E	1	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING,HE.....UHE	EA	13
42E	2	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT.....UHE	EA	2
42E	3	XDOZZ		92802	1567-5	.SPACER.....UHE	EA	4
42E	4	PAOZZ	5306-00-274-2119	88044	AN3-5A	.BOLT,MACHINE.....UHE	EA	4
42E	5	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT.....UHE	EA	2
42E	6	PAOZZ	5306-00-151-0784	88044	AN3-10A	.BOLT,MACHINE.....UHE	EA	3
42E	7	PBOZZ	1680-00-075-8149	92802	4742-2	.CRANK,SEAT.....UHE	EA	1
42E	8	PBOZZ	1680-00-858-0438	92802	10025-1	.HANDLE,CONTROL.....UHE	EA	1
42E	9	XDOZZ		92802	10011-5	.KNOB.....UHE	EA	1
42E	10	XDOZZ		92802	93015-1	.SPRING.....UHE	EA	1
42E	11	XDOZZ		92802	4708-10	.LINK.....UHE	EA	1
42E	12	PAOZZ	5315-00-839-2325	96906	MS24665-132	.PIN,COTTER.....UHE	EA	10
42E	13	PAOZZ	5310-00-950-1310	96906	MS15795-204	.WASHER,FLAT.....UHE	EA	1
42E	14	PAOZZ	5315-00-811-1266	96906	MS20392-1C19	.PIN,STRAIGHT.....UHE	EA	1
42E	15	XDOZZ		83115	4749-1	.TORQUE TUBE.....UHE	EA	2
42E	16	PAOZZ	5315-00-811-1265	96906	MS20392-1C15	.PIN,STRAIGHT,HEADED.....UHE	EA	1
42E	17	XDOZZ	1680-00-075-8148	92802	4599-2	.CRANK,SEAT.....UHE	EA	1
42E	18	PAOZZ	5305-00-993-1849	96906	MS35207-259	.SCREW,MACHINE.....UHE	EA	6
42E	19	PAOZZ	5310-00-576-5752	96906	MS35333-39	.WASHER.....UHE	EA	10
42E	20	XDOZZ		92802	4849	.SPRING.....UHE	EA	1
42E	21	XDOZZ		92802	10428-1	.RETAINER.....UHE	EA	1
42E	22	XDOZZ		92802	95002-1	.PIN.....UHE	EA	1
42E	23	PBOZZ	1680-00-858-4515	92802	10028-1	.HANDLE,SWIVEL.....UHE	EA	1
42E	24	XDOZZ		92802	10011-1	..KNOB.....UHE	EA	1
42E	25	PBOZZ	1680-00-053-9478	92802	4734	.SHAFT,SHOULDERED.....UHE	EA	1
42E	26	PAOZZ	5315-00-087-8226	96906	MS20392-2C21	.PIN,STRAIGHT,HEADED.....UHE	EA	1
42E	27	XDOZZ		92802	4733	.TORQUE TUBE.....UHE	EA	1
42E	28	XDOZZ		92802	4784	.SPRING.....UHE	EA	1
42E	29	XDOZZ	5305-00-088-9044	88044	AN520-10R5	.SCREW,MACHINE.....UHE	EA	2
42E	30	PAOZZ	5305-00-958-3409	88044	AN509-10R10	.SCREW,MACHINE.....UHE	EA	2
42E	31	XDOZZ		92802	4752	.BRACKET.....UHE	EA	2
42E	32	XDOZZ		92802	4854	.CLEVIS.....UHE	EA	2
42E	33	PAOZZ	5310-00-596-8422	88044	AN316-5R	.NUT.....UHE	EA	2
42E	34	PAOZZ	5315-00-951-2395	96906	MS20392-2C13	.PIN,STRAIGHT,HEADED.....UHE	EA	2
42E	35	PBOZZ	1680-00-858-4521	92802	4404	.PLATE,ADJUSTING,SEA.....UHE	EA	2
42E	36	PAOZZ	5306-00-151-0785	88044	AN3-7A	.BOLT,MACHINE.....UHE	EA	2
42E	37	PBOZZ	1680-00-858-4514	92802	10027-1	.HANDLE,RECLINE.....UHE	EA	1
42E	38	XDOZZ		92802	10011-3	..KNOB.....UHE	EA	1
42E	39	PAOZZ	5315-00-811-1241	96906	MS20392-2C17	.PIN,STRAIGHT,HEADED.....UHE	EA	1
42E	40	PBOZZ	1680-00-686-1869	92802	4517	.LUG ASSY,TORQUE TUB.....UHE	EA	1
42E	41	XDOZZ		92802	4784	.SPRING.....UHE	EA	1
42E	42	XDOZZ		92802	4717-8	.TUBE.....UHE	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
42E	43	PBOZZ	5315-00-997-0732	92802	95001-1	.PIN,STRAIGHT,HEADLE	UHE	EA	2
42E	44	PAOZZ	5315-00-990-1338	96906	MS20392-2C19	.PIN,STRAIGHT	UHE	EA	2
42E	45	XDOZZ		92802	4519-8	.LINK	UHE	EA	4
42E	46	PBOZZ	1680-00-675-8149	92802	4593	.ARM,SEAT RECLINE CO.	UHE	EA	2
42E	47	PBOZZ	1680-00-858-4513	92802	10026-1	.HANDLE,ELEVATION	UHE	EA	1
42E	48	XDOZZ		92802	10011-7	.KNOB	UHE	EA	1
42E	49	PBOZZ	3040-00-756-7652	92802	4708-8	.CONNECTING LINK,RIG.	UHE	EA	1
42E	50	XDOZZ	1680-00-858-0436	92802	4744	.ARM,ELEVATOR CONTRO.	UHE	EA	1
42E	51	XDOZZ	1680-00-858-0434	92802	4739	.ARM,TORQUE TUBE	UHE	EA	1
42E	52	XDOZZ		92802	4972	.SLEEVE	UHE	EA	1
42E	53	PAOZZ	5305-00-993-1849	96906	MS35207-259	.SCREW,MACHINE	UHE	EA	2
42E	54	XDOZZ		92802	4748	.ACTUATING TUBE	UHE	EA	1
42E	55	XDOZZ	1680-00-868-7202	92802	4737	.TUBE,TORQUE	UHE	EA	1
42E	56	PAOZZ	5310-00-088-0553	96906	MS21044N5	.NUT	UHE	EA	4
42E	57	PAOZZ	5310-00-167-0836	96906	AN960-516L	.WASHER,FLAT	UHE	EA	4
42E	58	XDOZZ		92802	4967	.RIDER	UHE	EA	4
42E	59	PAOZZ	5306-00-151-2624	88044	AN5-17A	.BOLT,MACHINE	UHE	EA	4
42E	60	PAOZZ	5310-00-877-5796	96906	MS20365-428	.NUT,SELF-LOCKING	UHE	EA	2
42E	61	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT	UHE	EA	2
42E	62	PAOZZ	5315-00-997-0732	88044	AN509-416R24	.SCREW	UHE	EA	2
42E	63	XDOZZ		92802	4753-8	.TRACK	UHE	EA	1
42E	64	XDOZZ		92802	4753-10	.TRACK	UHE	EA	1
42E	65	PAOZZ	5306-00-144-3871	88044	AN25-38	.BOLT,CLEVIS	UHE	EA	2
42E	66	PAOZZ	5310-00-176-8109	88044	AN320-5	.NUT,PLAIN,SLOTTED	UHE	EA	2
42E	67	PAOZZ	5315-00-839-5820	96906	MS24665-134	.PIN,COTTER	UHE	EA	2

best copy available

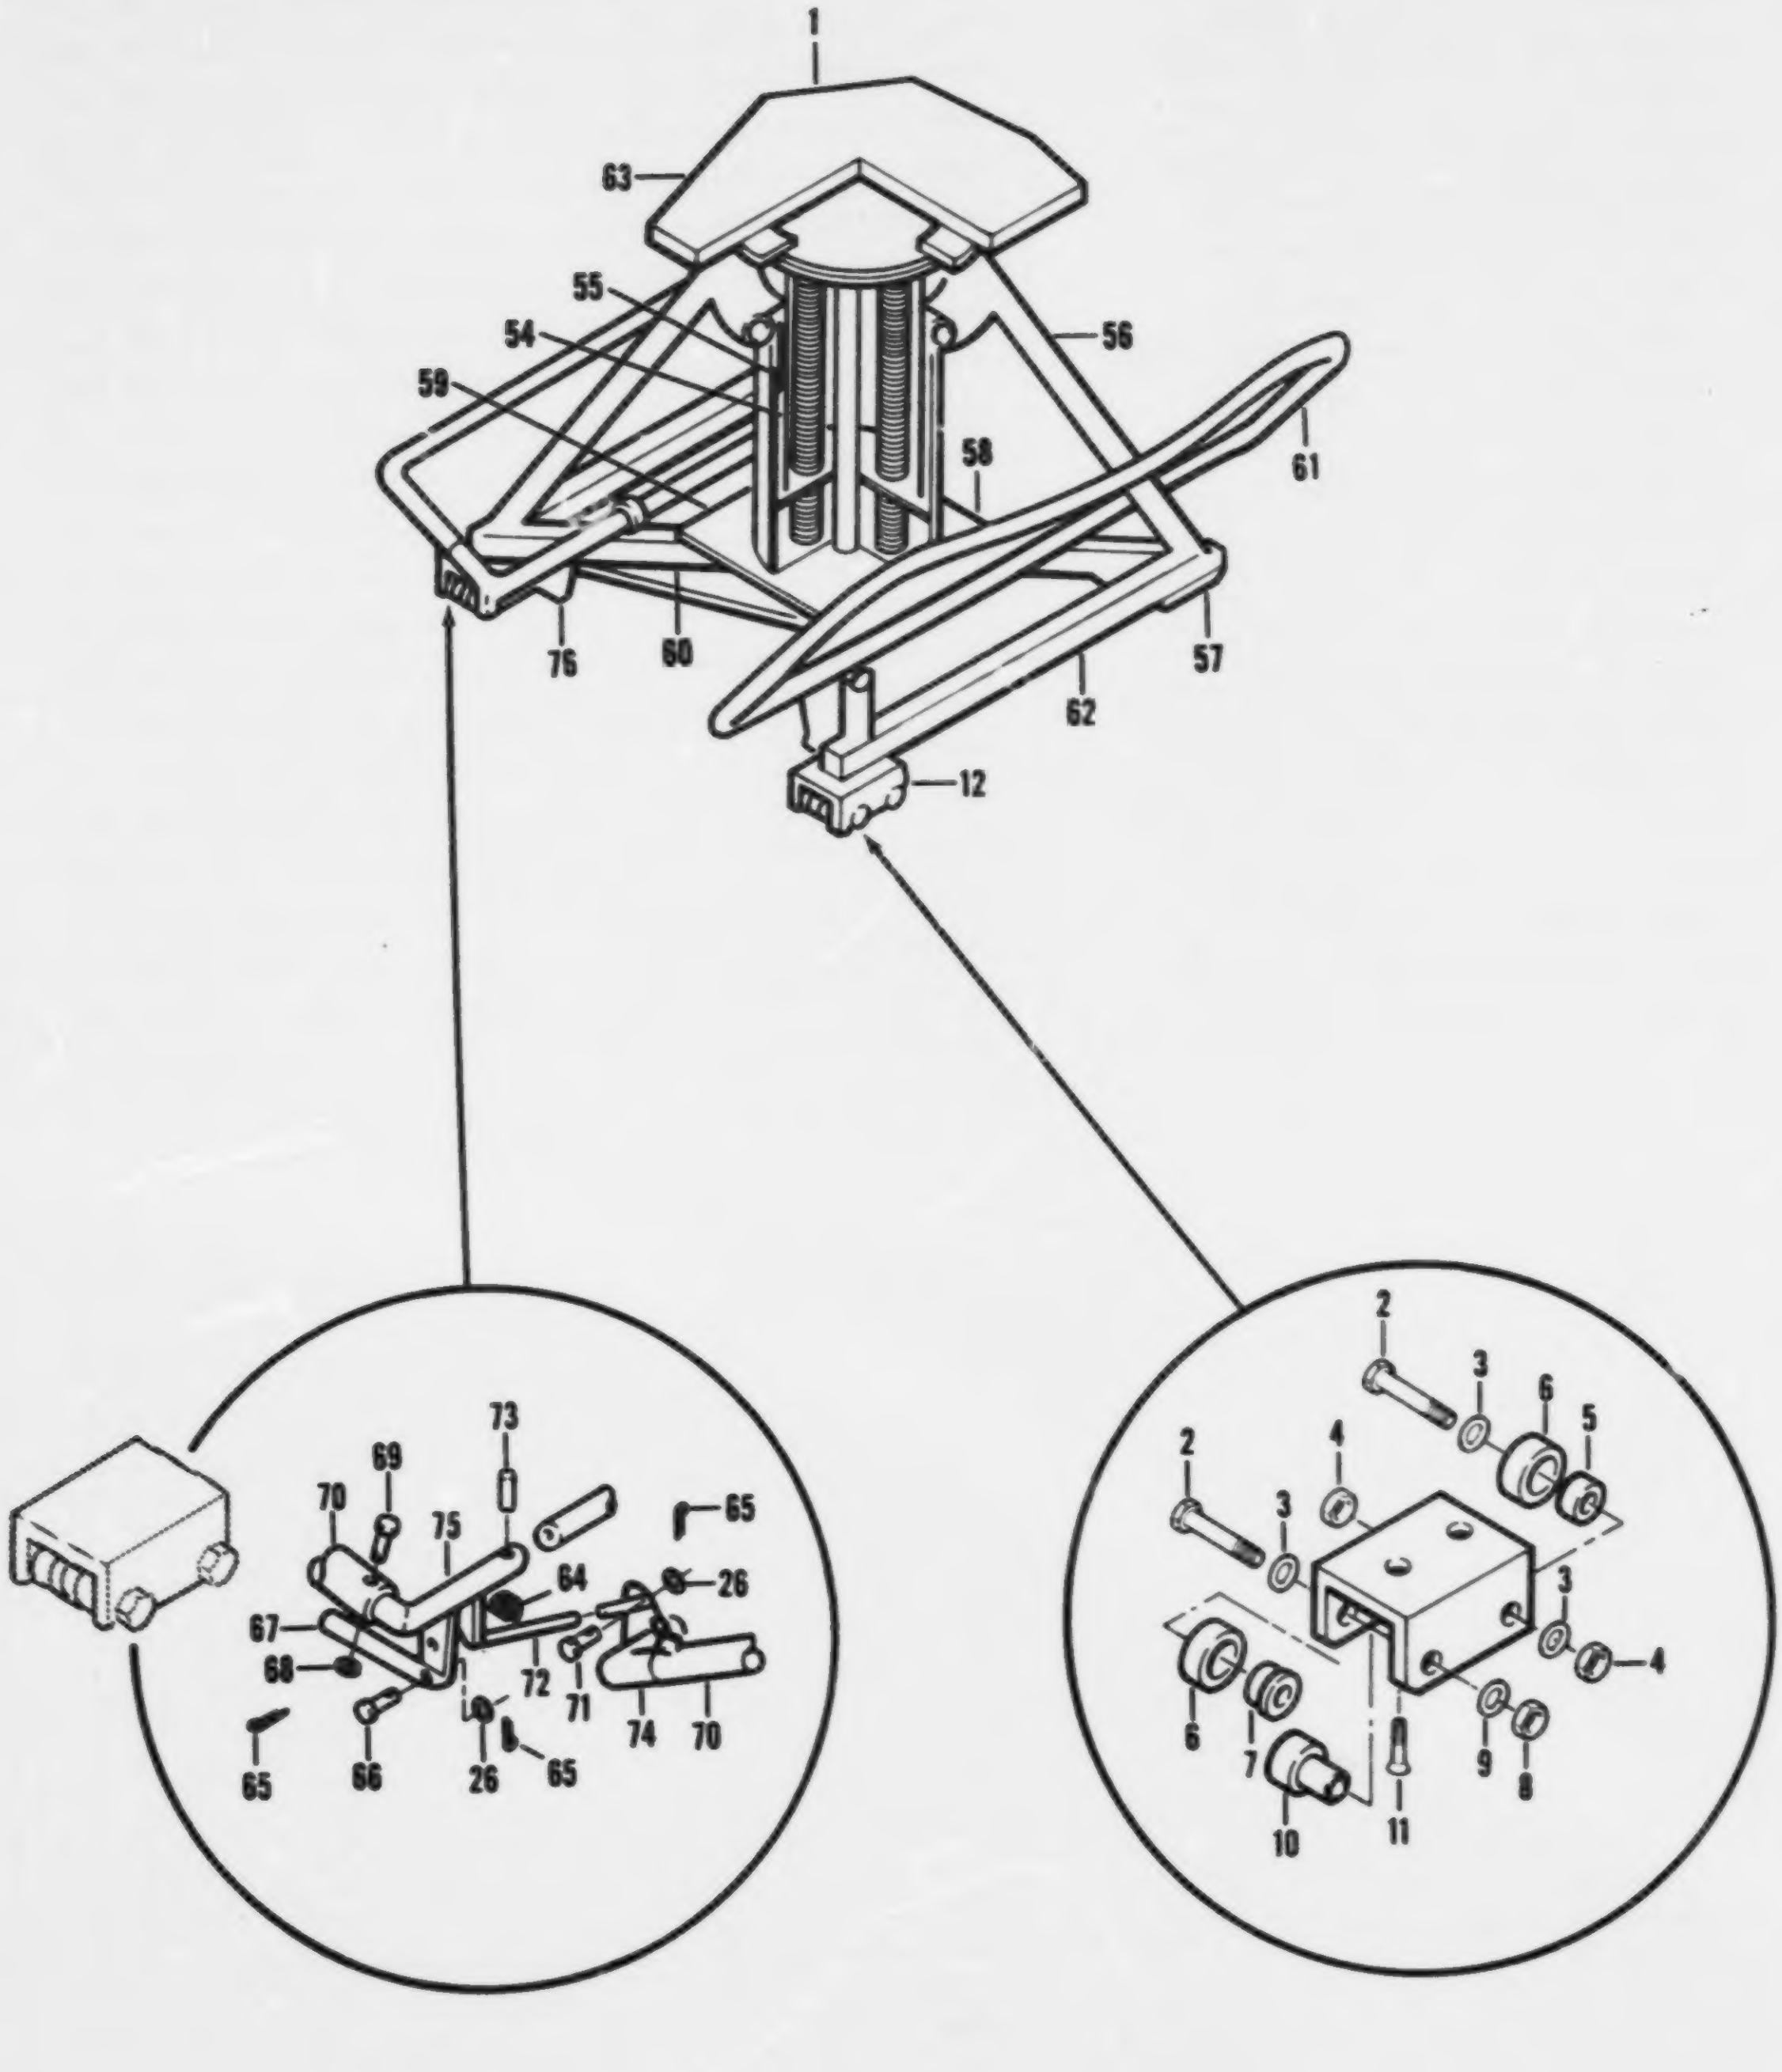
1
63
55
54
56
59
61
58
76
60
57
62
12
73
69
70
75
65
64
26
67
68
72
71
74
70
65
66
26
65
2
3
6
5
2
4
3
3
4
6
7
9
8
10
11

Figure 42F. Bottom Assembly, Seat (Sheet 1 of 2)

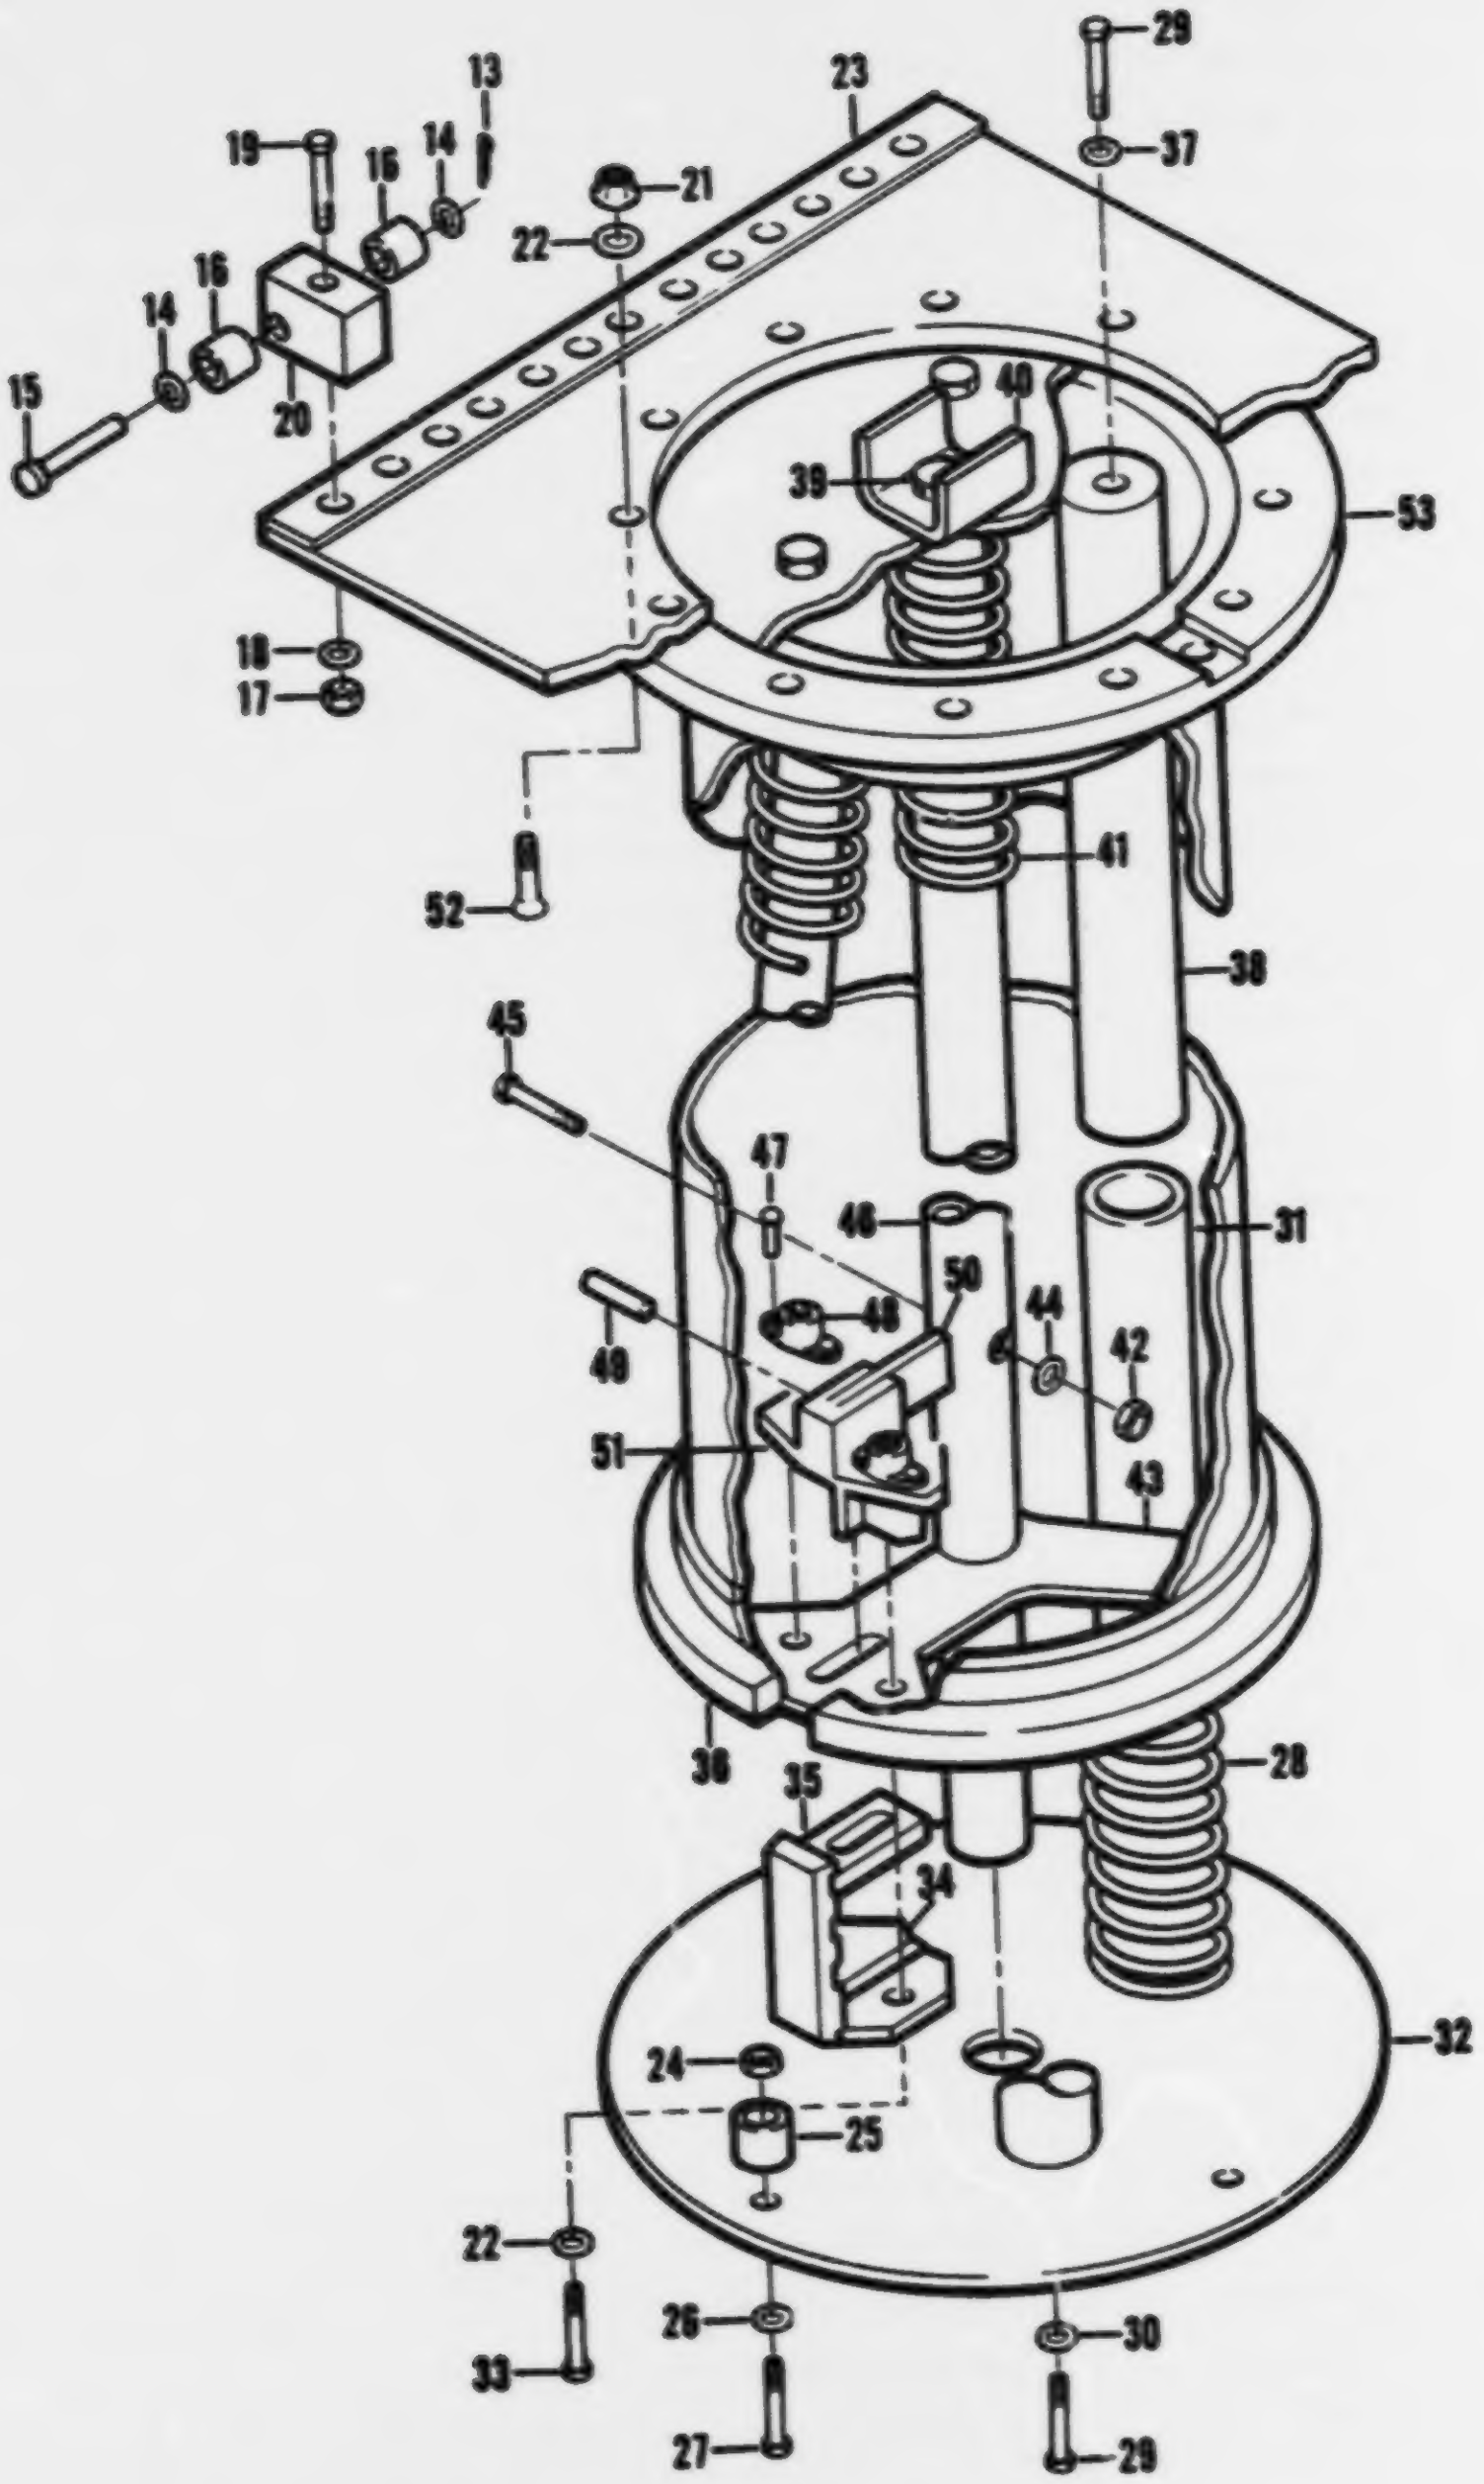
29
13
23
19
16
14
21
37
22
16
14
15
20
40
39
53
18
17
41
52
38
45
47
46
31
50
48
49
44
42
51
43
36
35
28
34
32
24
25
22
26
30
33
27
29

Figure 42F. Bottom Assembly, Seat (Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
42F		XDOFF		92802	10534-3	BOTTOM ASSEMBLY SEE FIG 42B FOR NHA....................UHE	EA	1
42F	1	XDFFF		92802	10535-3	.PEDESTAL ASSEMBLY....................UHE	EA	1
42F	2	PAFZZ	5306-00-515-8064	88044	AN4-7A	..BOLT,MACHINE....................UHE	EA	10
42F	3	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT....................UHE	EA	10
42F	4	PAFZZ	5310-00-222-4241	72962	22K1-048	..NUT,SELF-LOCKING,CA....................UHE	EA	12
42F	5	XDFZZ		92802	96003-0531	..SPACER....................UHE	EA	10
42F	6	PAFZZ	3110-00-034-5257	96906	MS27641-6	..BEARING....................UHE	EA	12
42F	7	XDFZZ		92802	10597-1	..BUSHING....................UHE	EA	2
42F	8	PAFZZ	5310-00-902-7846	96906	MS21083N7	..NUT....................UHE	EA	2
42F	9	PAFZZ	5310-00-167-0822	88044	AN960-716	..WASHER,FLAT....................UHE	EA	2
42F	10	XDFZZ		92802	10377-1	..BUSHING....................UHE	EA	2
42F	11	PAFZZ	5306-00-150-9102	88044	AN5-7A	..BOLT,MACHINE....................UHE	EA	8
42F	12	XDFZZ		92802	4429-1	..BRACKET....................UHE	EA	2
42F	12	XDFZZ		92802	4429-2	..BRACKET....................UHE	CA	2
42F	13	PAFZZ	5315-00-839-2325	96906	MS24655-132	..PIN,COTTER....................UHE	EA	4
42F	14	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT....................UHE	EA	8
42F	15	PAFZZ	5315-00-811-1245	96906	MS20392-2C35	..PIN,STRAIGHT,HEADED....................UHE	FA	4
42F	16	XDFZZ		92802	1729	..ROLLER....................UHE	EA	8
42F	17	PAFZZ	5310-00-950-0039	96906	MS21044N6	..NUT....................UHE	EA	4
42F	18	XDFZZ		92802	10012-1	..WASHER....................UHE	EA	4
42F	19	XDFZZ		92802	4544	..STUD....................UHE	EA	4
42F	20	XDFZZ		92802	1734	..GUIDE....................UHE	EA	4
42F	21	PAOZZ	5310-00-903-8282	96906	MS20364-428	..NUT,SELF-LOCKING....................UHE	EA	12
42F	22	PAOZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT....................UHE	EA	16
42F	23	XDFZZ		92802	4969	..STRIP....................UHE	EA	2
42F	24	PAOZZ	5310-00-877-5797	96906	MS21044N3	..NUT,SELF-LOCKING,HE....................UHE	EA	4
42F	25	XDFZZ		92802	10038-1	..SPACER....................UHE	EA	4
42F	26	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT....................UHE	EA	1
42F	27	PAFZZ	5306-00-685-3027	88044	AN3-11A	..BOLT,MACHINE....................UHE	EA	4
42F	28	XDFZZ		92802	4838	..SPRING....................UHE	EA	3
42F	29	PAFZZ	5306-00-150-9221	88044	AN3-3A	..BOLT,MACHINE....................UHE	EA	6
42F	30	PAFZZ	5310-00-045-3296	96906	AN935-10	..WASHER,LOCK....................UHE	EA	3
42F	31	PAFZZ	1680-00-868-7203	92802	4759	..GUIDE,SPRING,LOWER....................UHE	EA	3
42F	32	XDFZZ		92802	4758	..RETAINER....................UHE	EA	1
42F	33	PAOZZ	5306-00-151-1422	88044	AN4-12A	..BOLT,MACHINE....................UHE	EA	4
42F	34	XDFZZ		92802	10536-1	..RETAINER....................UHE	EA	1
42F	35	PBFZZ	1680-00-679-2021	92802	4399	..BLOCK,ACFT SEAT....................UHE	EA	1
42F	36	XDFZZ	1680-00-679-2042	92802	4842	..RETAINER....................UHE	EA	1
42F	37	PAOZZ	5310-00-045-3296	96906	MS35338-43	..WASHER,FLAT....................UHE	EA	3
42F	38	PBFZZ	1680-00-679-2040	92802	4837	..GUIDE,SPRING,SEAT....................UHE	EA	3
42F	39	PAFZZ	5310-00-680-7504	80205	NAS679A4W	..NUT,SELF-LOCKING,HE....................UHE	EA	1
42F	40	XDFZZ	1680-00-027-6370	92802	4754	..YOKE,ELEVATION TUBE....................UHE	EA	1
42F	41	XDFZZ		92802	4537	..SPRING....................UHE	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
42F	42	PAOZZ	5310-00-902-6676	96906	MS20364-1032	..NUT,SELF-LOCKING	UHE	EA	1
42F	43	XDFZZ		92802	4504	..RETAINER	UHE	EA	1
42F	44	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT	UHE	EA	1
42F	45	PAFZZ	5306-00-151-0784	88044	AN3-10A	..BOLT,MACHINE	UHE	EA	1
42F	46	XDFZZ	1680-00-679-2035	92802	4757	..TUBE,ELEVATION,SEAT	UHE	EA	1
42F	47	PAOZZ	5320-00-117-6938	96906	MS20426AD3-4	..RIVET,SOLID	UHE	EA	4
42F	48	XDFZZ		75237	MK3000-4	..NUTPLATE	UHE	EA	2
42F	49	XDFZZ		92802	95004-0562	..PIN	UHE	EA	1
42F	50	XDFZZ		92802	4702	..LEVER	UHE	EA	1
42F	51	XDFZZ		92802	4547	..BRACKET	UHE	EA	1
42F	52	PAFZZ	5305-00-058-5059	96906	MS24690US111	..SCREW	UHE	FA	12
42F	53	XDFZZ		92802	4269-3	..RING	UHE	EA	1
42F	54	PBFZZ	1680-01-009-2326	83115	4424-1	..TUBE ASSEMBLY,SPRIN	UHE	EA	1
42F	55	XDFZZ		92802	4264-2	..TUBE	UHE	EA	1
42F	56	XDFZZ		92802	10357-3	..BASF	UHE	EA	1
42F	57	XDFZZ		92802	10530-1	..PLATE	UHE	EA	4
42F	58	XDFZZ		92802	10546-1	..FLANGE	UHE	EA	1
42F	59	PAOZZ	5305-00-989-6265	96906	MS35207-262	..SCREW,MACHINE	UHE	EA	4
42F	60	XDFZZ		72962	52LHTG51-02J5-2	..CHANNEL	UHE	EA	4
42F	61	PAFZZ	5320-00-117-6950	96906	MS20426AD4-5	..RIVET,SOLID	UHE	EA	11
42F	62	XDFZZ		92802	97005-1	..CAP	UHE	EA	4
42F	63	XDFZZ		92802	10304-5	..SEAT BOTTOM	UHE	EA	1
42F	64	XDFZZ		92802	93009-1	..SPRING	UHE	EA	1
42F	65	PAFZZ	5315-00-839-2325	96906	MS24665-135	..PIN,COTTER	UHE	EA	8
42F	66	PAOZZ	5315-00-812-3759	96906	MS20392-2C11	..PIN,STRAIGHT	UHE	EA	2
42F	67	XDFZZ		92802	10372-1	..PIN	UHE	EA	2
42F	68	PAOZZ	5310-00-167-0831	88044	AN960-4L	..WASHER,FLAT	UHE	EA	4
42F	69	PAOZZ	5315-00-812-3757	96906	MS20392-1C21	..PIN,STRAIGHT	UHE	EA	4
42F	70	XDFZZ		92802	9628-1	..TREADLE	UHE	EA	2
42F	71	PAOZZ	5315-00-951-2395	96906	MS20392-2C13	..PIN,STRAIGHT,HEADED	UHE	EA	2
42F	72	XDFZZ		92802	9629-1	..LINK	UHE	EA	1
42F	73	PAOZZ	5315-00-812-3734	96906	MS20392-1C7	..PIN,STRAIGHT,HEADED	UHE	EA	1
42F	74	XDFZZ		92802	9621-1	..CONTROL	UHE	EA	1
42F	75	XDFZZ		92802	9627-1	..CONTROL	UHE	EA	1
42F	76	XDFZZ		92802	9630-1	..SHAFT	UHE	EA	2

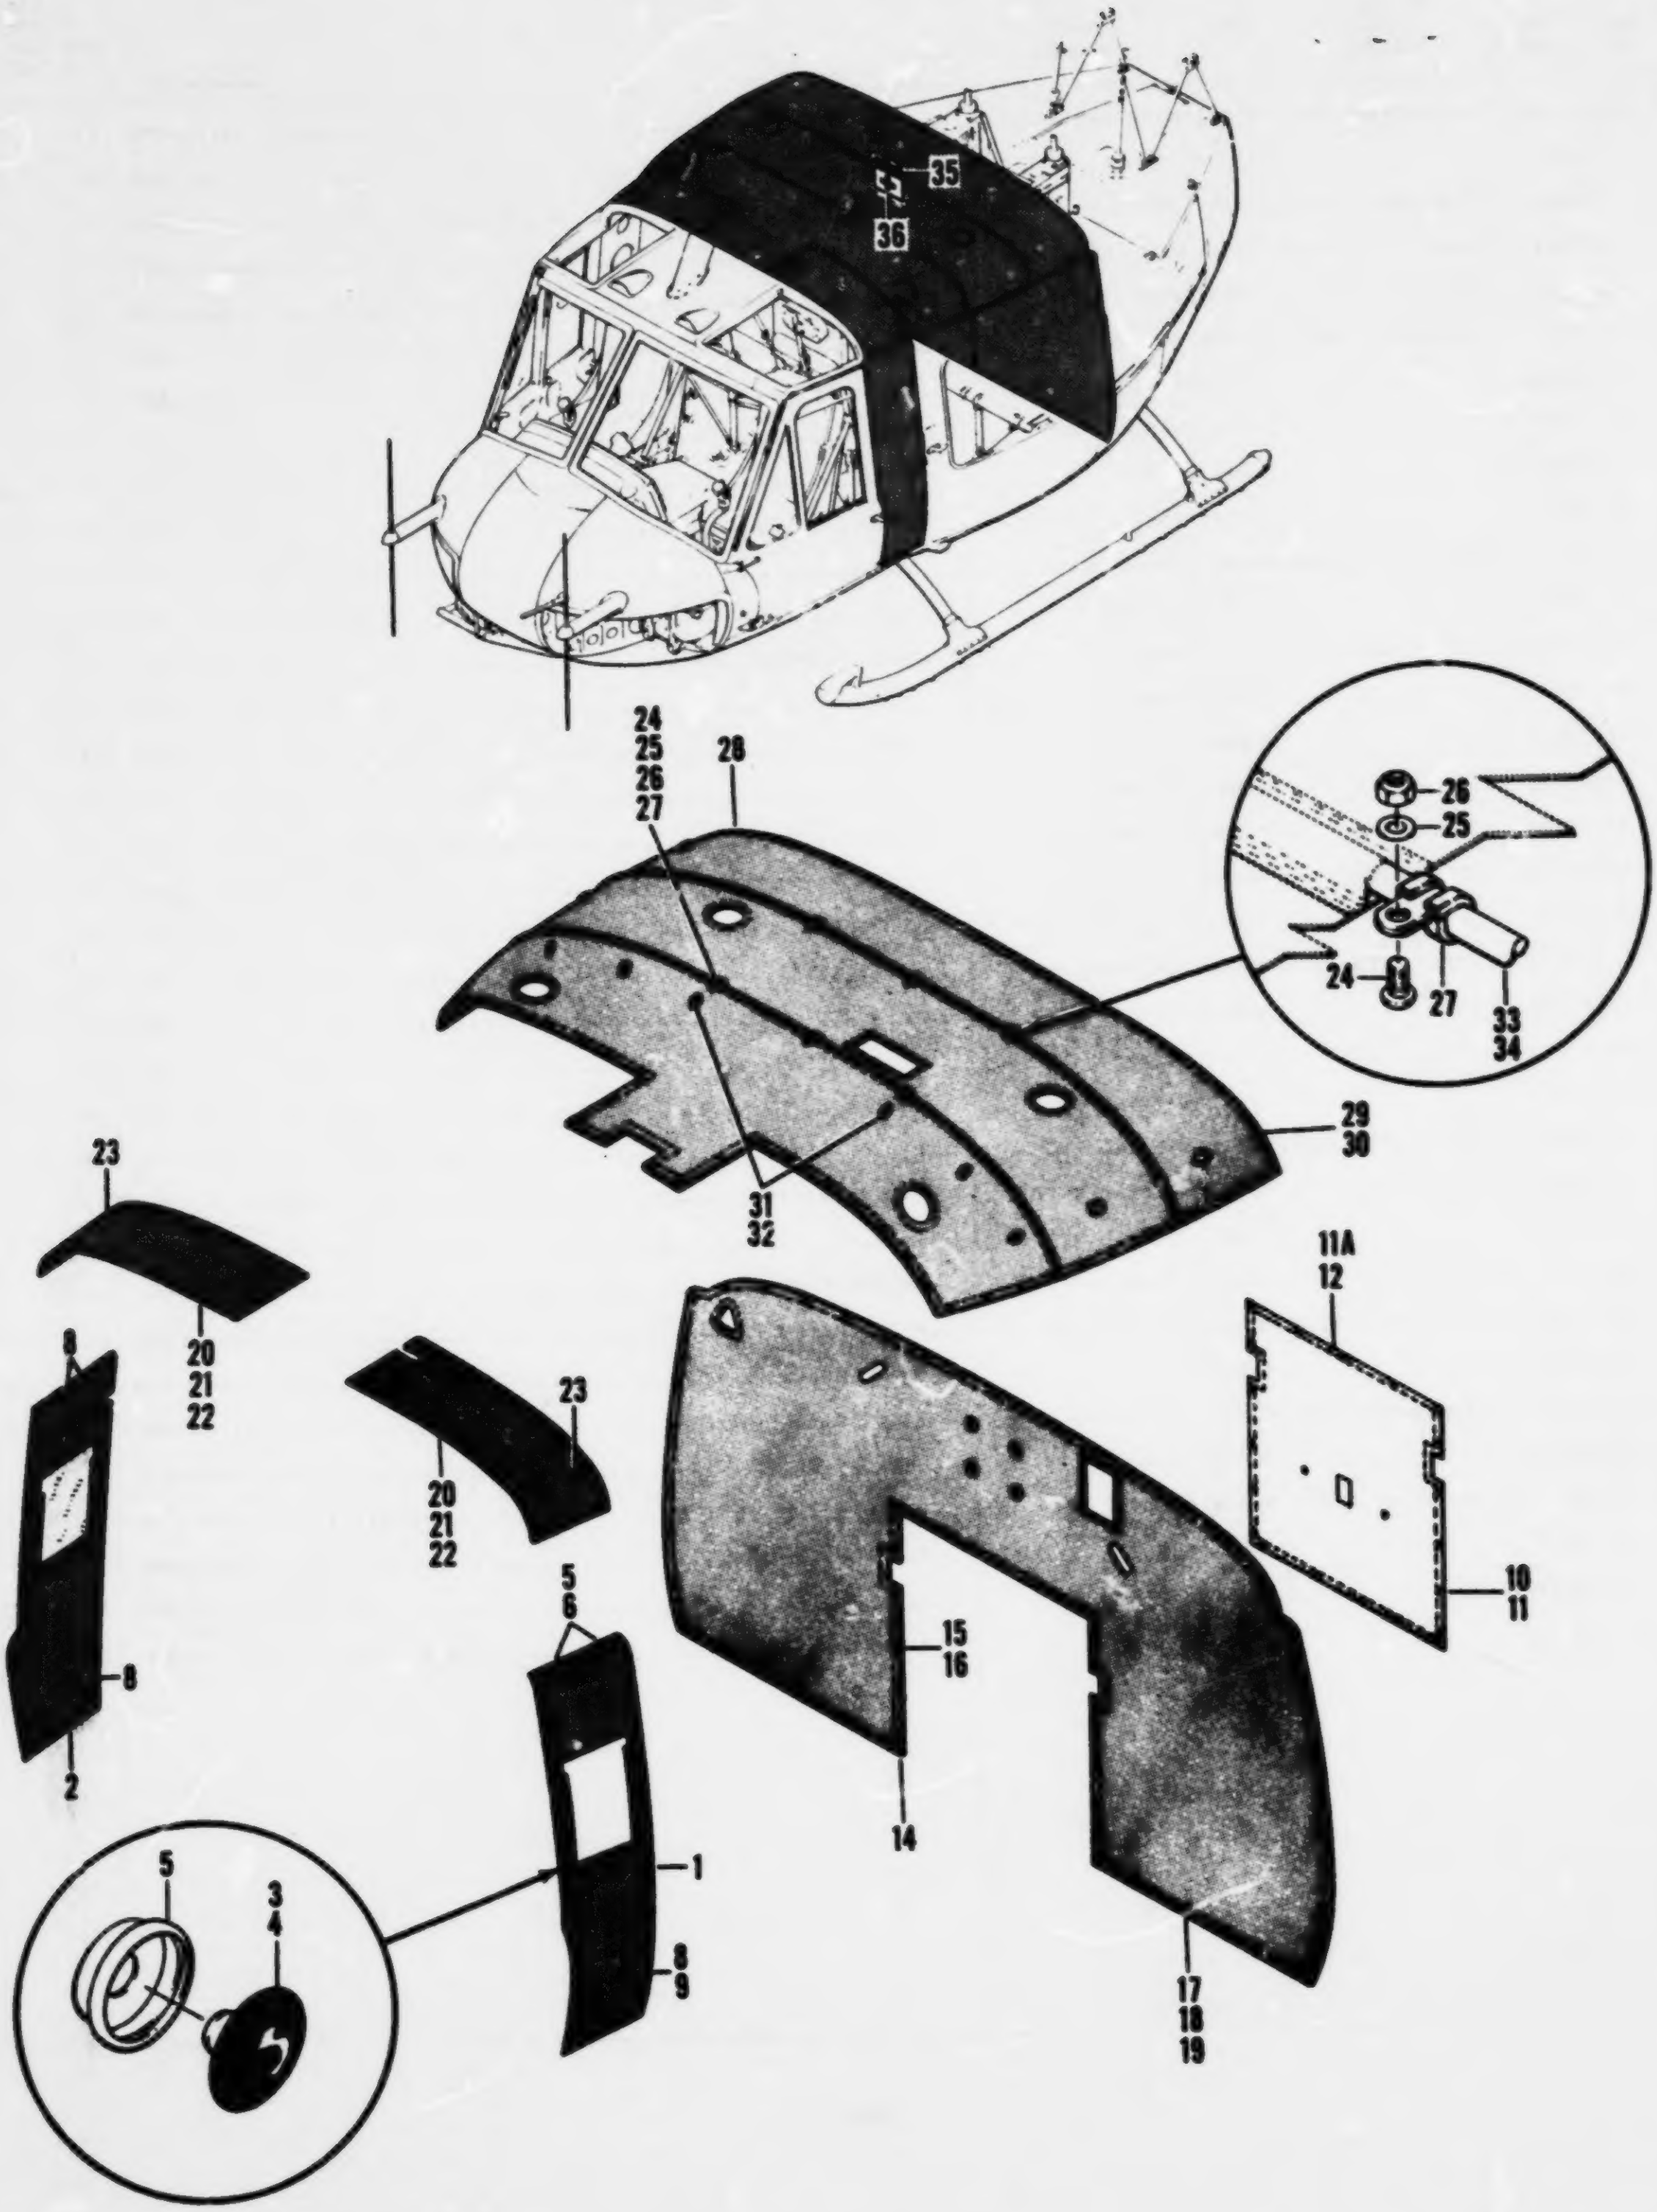
35
36
24
25
26
27
28
26
25
24
27
33
34
29
30
31
32
23
11A
12
20
21
22
8
23
20
21
22
5
6
8
2
15
16
10
11
14
1
5
3
4
8
9
17
18
19

Figure 43. Blanket Installation, Soundproofing

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
43		XCFZZ		97499	204-070-523-1	BLANKET INSTL SOUNDPROOFING USBL EFF 60-3546 THRU 60-3619 SEE FIG.6 FOR NHA..........UHB	EA	1
43		XCFZZ		97499	204-070-523-3	BLANKET INSTL SOUNDPROOFING USBL EFF 61-686 THRU 61-752 SEE FIG.6 FOR NHA..........UHB	EA	1
43		XCFZZ		97499	204-070-523-5	BLANKET INSTL SOUNDPROOFING USBL EFF 61-753 THRU 61-803 SEE FIG.6 FOR NHA..........UHB	EA	1
43		XCFZZ		97499	204-070-523-9	BLANKET INSTL SOUNDPROOFING USBL EFF 62-1872 THRU 62-1996 SEE FIG.6 FOR NHA..........UHB	EA	1
43		XCFZZ		97499	204-070-523-15	BLANKET INSTL SOUNDPROOFING USBL EFF 62-1997 THRU 62-12555 SEE FIG.6 FOR NHA..........UHB	EA	1
43		XCFZZ		97499	204-070-523-13	BLANKET INSTL SOUNDPROOFING USBL EFF 63-8500 THRU 63-8658 SEE FIG.6 FOR NHA..........UHB	EA	1
43		XCFZZ		97499	204-070-523-29	BLANKET INSTL SOUNDPROOFING USBL EFF 63-8659 THRU 64-14100 SEE FIG.6 FOR NHA..........UHB	EA	1
43		XCFZZ		97499	204-070-523-35	BLANKET INSTL SOUNDPROOFING USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA..........UHC,UHM	EA	1
43		XCFZZ		97499	204-070-523-37	BLANKET INSTL CREW DOOR POST SOUNDPROOFING-RH U/O P/N 204-070-523-1,-3,& -5A..........UHC,UHM	EA	1
43		XCFZZ		97499	204-070-523-41	BLANKET INSTL SOUNDPROOFING USBL EFF 66-15023 & SUBSEQUENT SEE FIG.6 FOR NHA..........UHC,UHM	EA	1
43	1	PAOFF	1560-00-981-8753	97499	204-070-496-1	.BLANKET ASSEMBLY-LH U/O P/N 204-070-523-13..........UHB	EA	1
43	2	PAOOO	5640-00-893-0892	97499	204-070-602-15	.BLANKET ASSEMBLY, CREW DOOR POST SOUNDPROOFING-RH U/C PN 204-070-523-1,-3 & -5..........UHB	EA	1
43	2	PAOFF	5640-00-981-3062	97499	204-070-602-19	.BLANKET ASSEMBLY-RH U/O P/N 204-070-523-9 & -15..........UHB	EA	1
43	2	PAOOO	1560-00-981-8754	97499	204-070-496-2	.BLANKET ASSEMBLY,SO -RH..........UHB	EA	1
43	3	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER..........UHB	EA	22
43	4	PAOZZ	5325-00-359-6844	88044	AN227-6B	..CAP,SNAP FASTENER..........UHB	EA	22
43	5	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENER..........UHB	EA	22
43	6	PAOZZ	5325-00-174-2923	88044	AN227-8	..STUD,SNAP FASTENER..........UHB	EA	2
43	8	PAOZZ	5325-00-291-0289	96906	MS20230BS2	..GROMMET,METALLIC..........UHB	EA	4
43	9	PAOZZ	5325-00-231-6590	96906	MS20230B2	..GROMMET,METALLIC..........UHB	EA	4
43	10	XAOZZ		96906	MS20230WB2	...WASHER GROMMET..........UHB	EA	1
43	11	PAOOO	1560-00-716-8602	97499	204-070-522-3	.BLANKET ASSEMBLY AFT CABIN,BULKHEAD SOUNDPROOFING,LOWER CENTER..........UHB,UHC,UHM	EA	1
43	11A	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER..........UHB,UHC,UHM	EA	22
43	12	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE..........UHB,UHC,UHM	EA	22
43	14	PAOOO	1560-00-716-8601	97499	204-070-522-1	.BLANKET ASSEMBLY AFT CABIN,BULKHEAD SOUNDPROOFING U/O PN 204-070-523-1..........UHB	EA	1
43	14	PAOOO	1560-00-803-5302	97499	204-070-522-11	.BLANKET ASSEMBLY AFT CABIN,BULKHEAD SOUNDPROOFING U/O PN 204-070-523-3..........UHB	EA	1
43	14	PAOFF	1560-00-509-2958	97499	204-070-522-17	.BLANKET ASSEMBLY AFT CABIN,BULKHEAD SOUNDPROOFING U/O PN 204-070-523-5..........UHB	EA	1
43	14	PAOFF	5640-00-981-3067	97499	204-070-522-19	.PANEL ASSEMBLY,ACOU U/O PN 204-070-523-9,-13,-15, & -29 ....UHB	EA	1
43	14	PAOOO	1560-00-946-9901	97499	204-070-522-31	.BLANKET ASSY U/O PN 204-070-523-35,-37, & -41.......UHC,UHM	EA	1
43	15	PAOZZ	5325-00-174-2923	88044	AN227-8	..STUD,SNAP FASTENER..........UHB,UHC,UHM	EA	15
43	16	PAOZZ	5325-00-276-4978	88044	AN227-9B	..POST,SNAP FASTENER..........UHB,UHC,UHM	EA	15
43	17	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER..........UHB,UHC,UHM	EA	55
43	17	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER..........UHB,UHC,UHM	EA	2
43	18	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE..........UHB,UHC,UHM	EA	55
43	19	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE..........UHB,UHC,UHM	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
43	20	PAOOO	1560-00-987-5156	97499	204-070-521-61	.BLANKET ASSEMBLY-LH U/O PN 204-070-253-9,-13,-15,-29,-35,-37,& -41..	UHM	EA	1
43	20	PAOOO	1560-00-981-8755	97499	204-070-521-41	.BLANKET ASSY,ROOF SOUNDPROOFING FORWARD-RH U/O PN 204-070-523-13,-29,-35,&37..................................	UHM	EA	1
43	20	PAOOO	5640-00-929-3657	97499	204-070-521-101	.SOUNDPROOFING BLANKET-RH...........................	UHM	EA	1
43	21	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER..............................	UHM	EA	21
43	22	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE.............................	UHM	EA	21
43	23	PAOZZ	5325-00-231-6590	96906	MS20230B2	..GROMMET,METALLIC U/O PN 204-070-521-41, -57,-61,& -101	UHM	EA	4
43	24	PAOZZ	5305-00-989-7634	96906	MS35207-263	.SCREW,MACHINE....................................	UHM	EA	6
43	25	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT......................................	UHM	EA	6
43	26	PAOZZ	5310-00-807-1467	96906	MS21042-3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON...............	UHM	EA	6
43	27	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP.......................................	UHM	EA	6
43	28	PAOOO	5640-00-907-8392	97499	204-070-521-93	.BLANKET ASSEMBLY....................................	UHM	EA	1
43	29	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER..............................	UHM	EA	73
43	30	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE.............................	UHM	EA	73
43	32	PBOZZ	5325-00-231-6591	96906	MS20230B4	..GROMMET,METALLIC U/O PN 204-070-521-51, & -93	UHM	EA	6
43	33	PAOZZ	1560-00-731-8973	97499	204-070-607-1	..STAY,ROOF,AFT SOUNDPROOFIN......................	UHM	EA	1
43	34	PAOZZ	1560-CD-731-8974	97499	204-070-607-5	.STAY,ROOF,FWD SOUNDPROOFING......................	UHM	EA	1
43	35	MFOZZ	1560-00-886-1309	97499	204-070-838-1	.STENCIL,FIRST AID KIT..........................	UHM	EA	1
43	36	MFOZZ	1560-00-886-1310	97499	204-070-839-1	.STENCIL,FIRST AID KIT............................	UHM	EA	1

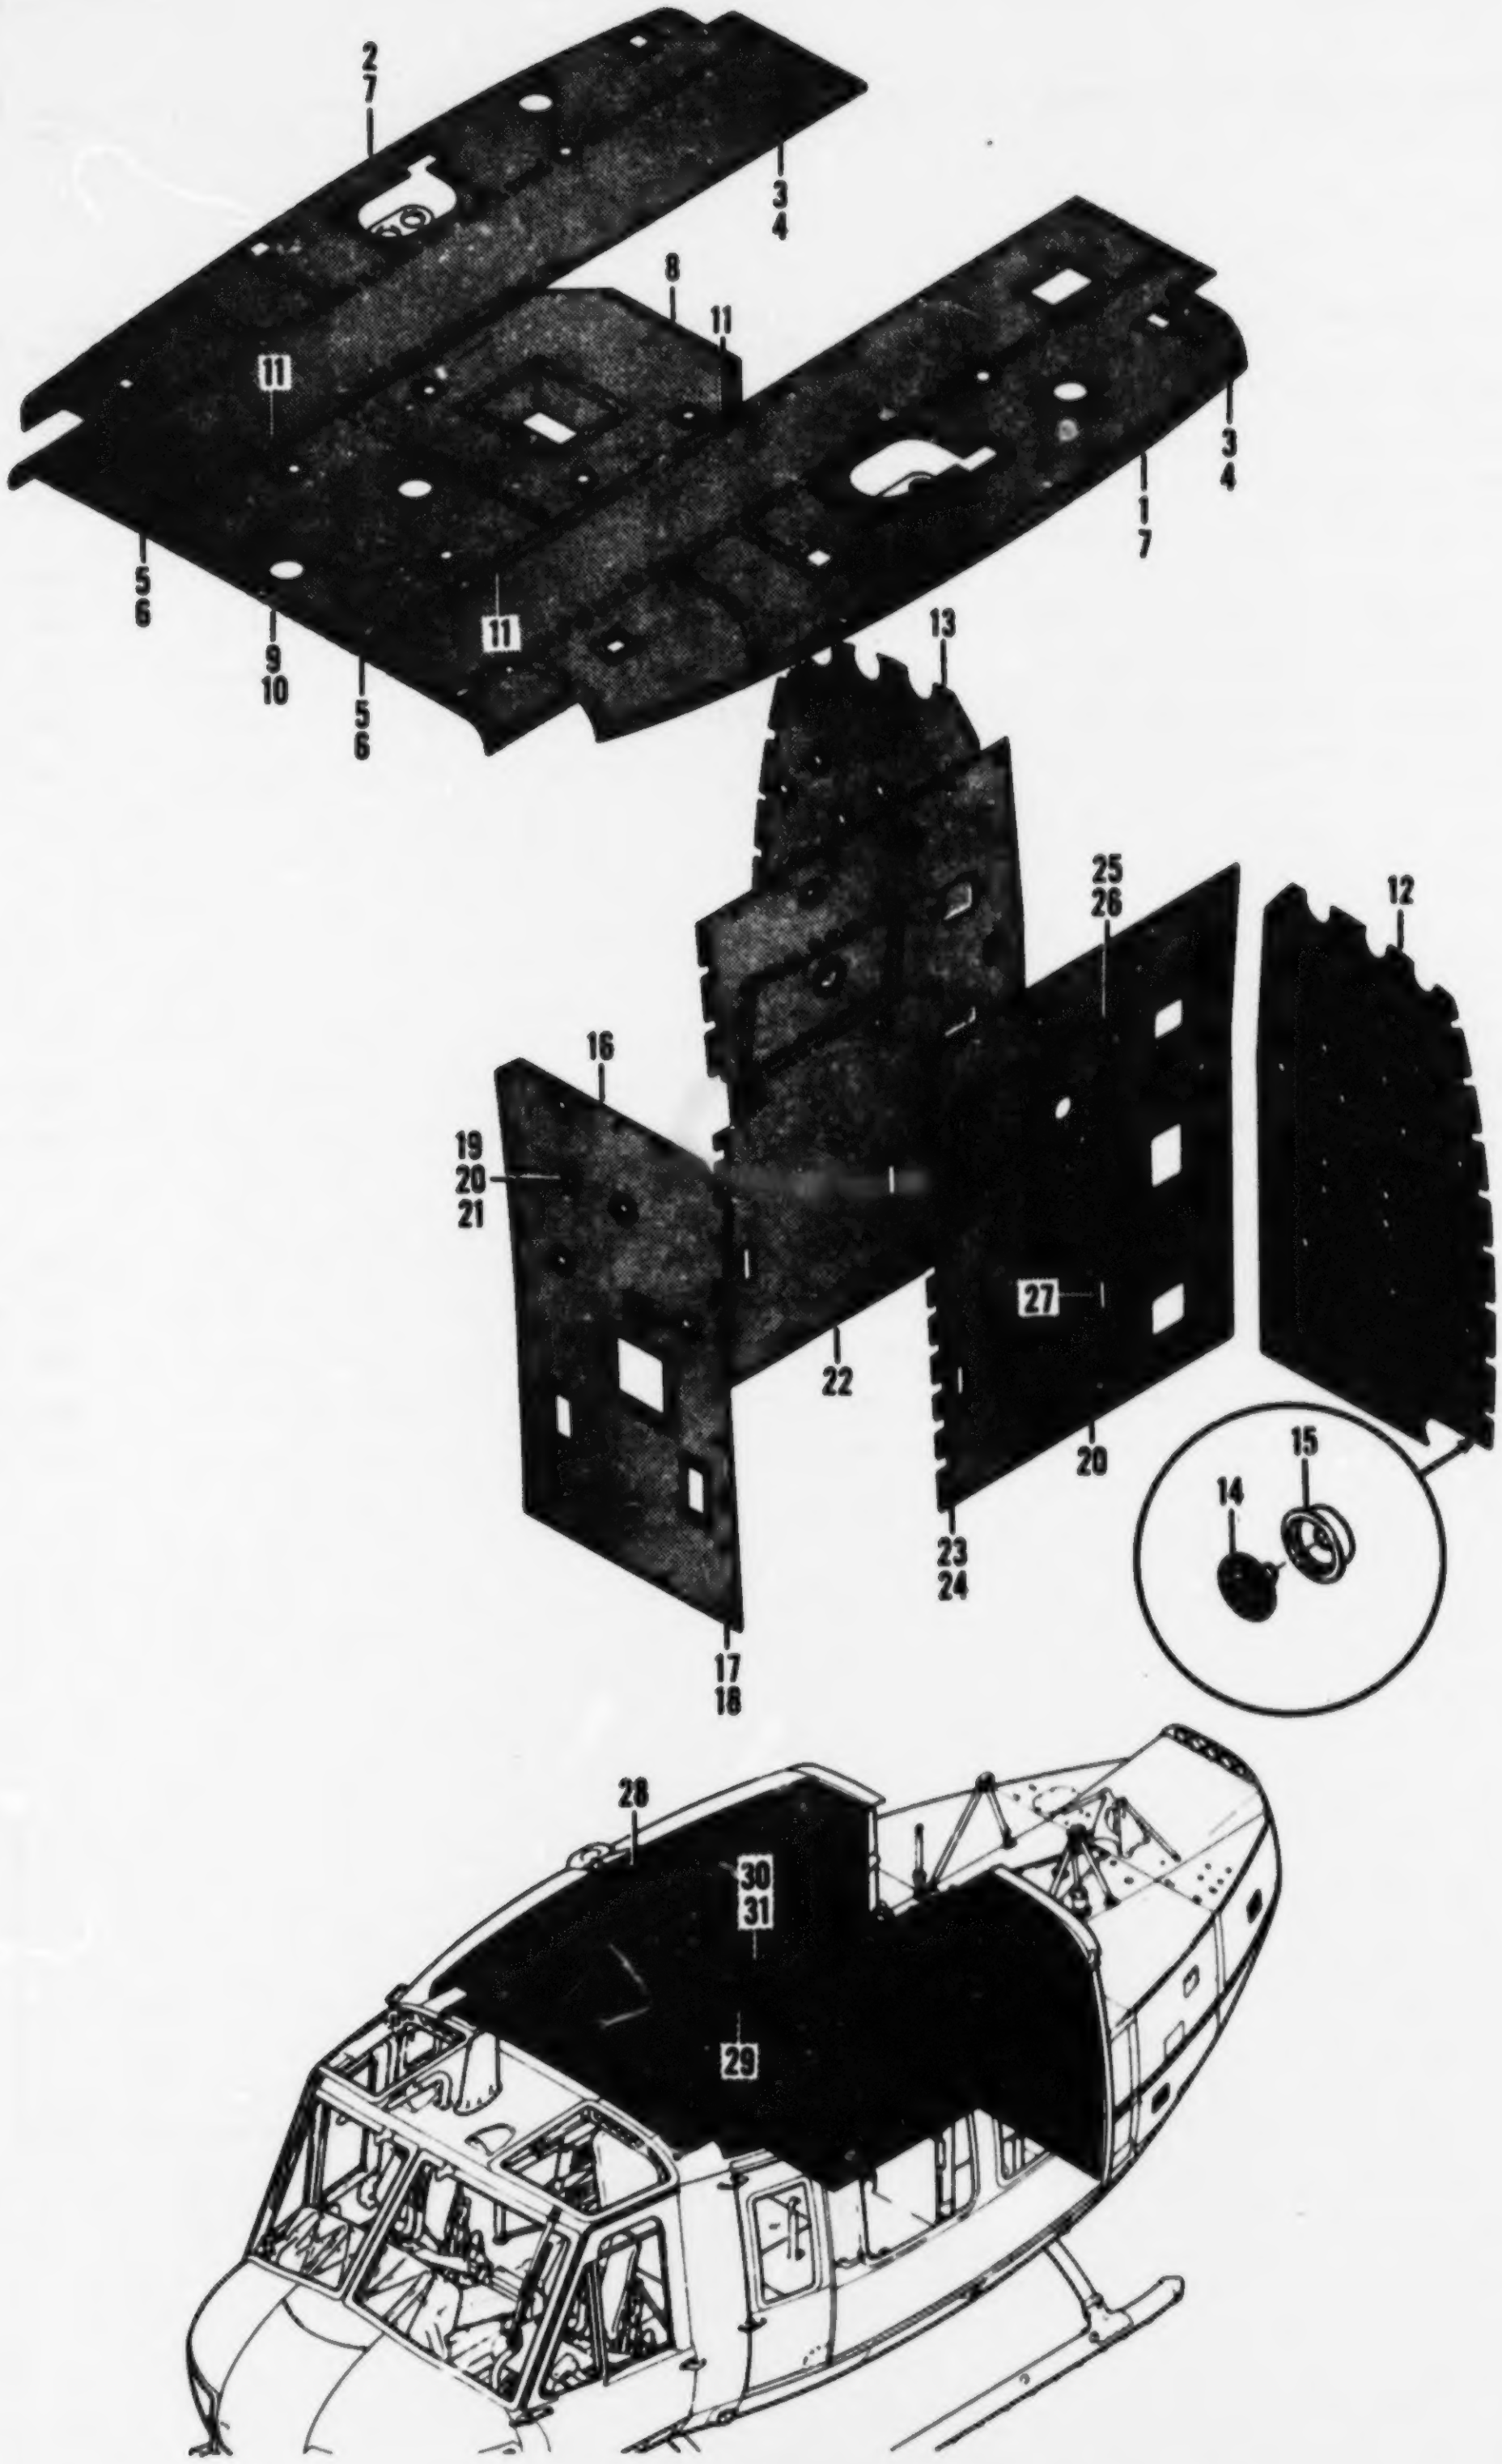
2
7
3
4
8
11
11
3
4
1
7
5
6
9
10
5
6
11
13
25
26
12
16
19
20
21
22
27
20
15
14
23
24
17
18
28
30
31
29

Figure 44. Blanket Installation, Soundproofing

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
44		XCFZZ		97499	205-070-610-1	BLANKET INSTL SOUNDPROOFING USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
44		XCFZZ		97499	205-070-610-3	BLANKET INSTL SOUNDPROOFING USBL EFF 63-8739 THRU 63-8859 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
44		XCFZZ		97499	205-070-610-7	BLANKET INSTL SOUNDPROOFING USBL EFF 63-12956 THRU 63-13002 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
44		XCFZZ		97499	205-070-610-5	BLANKET INSTL SOUNDPROOFING USBL EFF 64-13492 THRU 64-13901 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
44		XCFZZ		97499	205-070-610-9	BLANKET INSTL SOUNDPROOFING USBL EFF 65-9565 THRU 65-16033 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
44		XCFZZ		97499	205-070-610-11	BLANKET INSTL SOUNDPROOFING USBL EFF 66-16034 & SUBSEQUENT SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
44	1	PA000	5640-00-782-8507	97499	205-070-611-1	.SOUND CONTROLLING B BLANKET-LH U/O PN 205-070-610-1 ....UHE,UHH,UHV,UHX	EA	1
44	1	PA000	5640-00-796-5173	97499	205-070-611-159	.SOUND CONTROLLING B BLANKET-RH U/O PN 205-070-610-3 & -7 ....UHE,UHH,UHV,UHX	EA	1
44	1	PA000		20309	ES-F-221793	.BLANKET ASSY,LEFT M/F 1560-00-907-9696..........UHX	EA	1
44	1	PA000	1560-00-907-9696	97499	205-070-608-59	.SOUND CONTROLLING B BLANKET-LH U/O PN 205-070-610-5,-9, & -11..........UHE,UHH,UHV,UHX	EA	1
44	2	PA000	5640-00-782-8506	97499	205-070-611-3	.SOUND CONTROLLING B BLANKET-RH U/O PN 205-070-610-1,-3, & -7..........UHE,UHH,UHV,UHX	EA	1
44	2	PA000		20309	ES-F-221794	.BLANKET ASSY,RIGHT M/F 1560-00-907-9697..........UHX	EA	1
44	2	PA000	1560-00-907-9697	97499	205-070-608-67	.SOUND CONTROLLING B U/O PN 205-070-610-5,-9,& -11 ....UHE,UHH,UHV,UHX	EA	1
44	3	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER FASTENER..........UHE,UHH,UHV,UHX	EA	V
44	4	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE FASTENER..........UHE,UHH,UHV,UHX	EA	V
44	5	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER U/O PN 205-070-608-59 & -67 ....UHE,UHH,UHV,UHX	EA	1
44	6	PAOZZ	5325-00-432-9946	61864	XB10372	..OSTUD,SNAP FASTENER U/O PN 205-070-608-59 & -67 ....UHE,UHH,UHV,UHX	EA	1
44	7	PBOZZ	5325-00-231-6591	96906	MS20230B4	..GROMMET,METALLIC U/O PN 205-070-608-59 & -67 ....UHE,UHH,UHV,UHX	EA	4
44	8	PA000	5640-00-782-8505	97499	205-070-611-5	.SOUND CONTROLLING B BLANKET CTR U/O PN 205-070-610-1,-3, & -7..........UHE,UHH,UHV,UHX	EA	1
44	8	PA000	1560-00-907-9695	97499	205-070-608-75	.SOUND CONTROLLING B CTR U/O PN 205-070-610-5 & -9 ....UHE,UHH,UHV.UHX	EA	1
44	8	PA000	1560-00-927-7351	97499	205-070-608-83	.SOUND CONTROLLING B CTR U/O PN 205-070-610-11 ....UHE,UHH,UHV,UHX	EA	1
44	9	MFOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER..........UHE,UHH,UHV,UHX	EA	V
44	10	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE..........UHE,UHH,UHV,UHX	EA	V
44	11	PAOZZ	5325-00-291-0277	96906	MS20230B3	..GROMMET,METALLIC U/O PN 205-070-611-5......UHE,UHH,UHV,UHX	EA	1
44	11	PAOZZ	5325-00-231-6591	96906	MS20230B4	..GROMMET,METALLIC..........UHE,UHH,UHV,UHX	EA	6
44	12	PA000	5640-00-782-8503	97499	205-070-612-1	.SOUND CONTROLLING B BLANKET-LH U/O PN 205-070-610-1 ....UHE,UHH,UHV,UHX	EA	1
44	12	PA000	5640-00-021-3645	97499	205-070-612-53	.BLANKET ASSEMBLY U/O PN 205-070-610-3,-5,-7,-9, & -11 ....UHE,UHH,UHV,UHX	EA	1
44	13	PA000	5640-00-782-8502	97499	205-070-612-2	.SOUND CONTROLLING B BLANKET-RH U/O PN 205-070-610-1 ....UHE,UHH,UHV,UHX	EA	1
44	13	PA000	5640-00-010-0393	97499	205-070-612-54	.BLANKET,SOUND ABSOR ABSORBING-RH U/O PN 205-070-610-3,-5,-7,-9, & -11..........UHE,UHH,UHV,UHX	EA	1
44	14	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER..........UHE,UHH,UHV,UHX	EA	33
44	15	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE..........UHE,UHH,UHV,UHX	EA	33

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
44	16	PA000	5640-00-782-8504	97499	205-070-613-1	.SOUND CONTROLLING B BLANKET.................UHE,UHH,UHV,UHX	EA	1
44	16	PA000	1560-00-010-0392	97499	205-070-613-35	.SOUND CONTROLLING B BLANKET U/O PN 205-070-610-3 ....UHE,UHH,UHV,UHX	EA	1
44	16	PA000	1560-00-051-3362	97499	205-070-613-39	.SOUND CONTROLLING B BLANKET U/O PN 205-070-610-5 & -7 USBL EFF 63-12956 THRU 64-13901....................UHE,UHH,UHV,UHX	EA	1
44	16	PA000	5640-00-923-4075	97499	205-070-613-59	.SOUND CONTROLLING B BLANKET U/O PN 205-070-610-9 ....UHE,UHH,UHV,UHX	EA	1
44	16	PA000	1560-00-420-7852	97499	205-070-619-1	.PANEL ASSEMBLY,UPHO U/O PN 205-070-610-11 ....UHE,UHH,UHV,UHX	EA	1
44	16	MFOZZ		20309	ES-F-221752	.BLANKET ASSY SEE FIG.58 FOR NHA..........................UHX	EA	1
44	17	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER.........................UHE,UHH,UHV,UHX	EA	25
44	18	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE.........................UHE,UHH,UHV,UHX	EA	25
44	19	PBOZZ	5325-00-231-6591	96906	MS2023084	..GROMMET,METALLIC............................UHE,UHH,UHV,UHX	EA	1
44	20	PAOZZ	5325-00-359-6844	96906	MS27980-1B	..CAP,SNAP FASTENER U/O PN ES-F-221752..................UHX	EA	8
44	21	PAOZZ	5325-00-285-6250	96906	MS27980-6B	..SOCKET,SNAP FASTENE U/O PN ES-F-221752................UHX	EA	8
44	22	PA000	5640-00-014-0655	97499	205-070-614-41	.BLANKET UPHOLSTERY -LH.....................UHE,UHH,UHV,UHX	EA	1
44	22	PA000	5640-00-014-0724	97499	205-070-614-42	.BLANKET UPHOLSTERY -RH.....................UHE,UHH,UHV,UHX	EA	1
44	23	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER.........................UHE,UHH,UHV,UHX	EA	45
44	24	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE.........................UHE,UHH,UHV,UHX	EA	45
44	25	PAOZZ	5325-00-174-2923	88044	AN227-8	..STUD,SNAP FASTENER U/O PN 205-070-614-41 & -42 ....UHE,UHH,UHV,UHX	EA	2
44	26	PAOZZ	5325-00-276-4959	88044	AN227-9	..POST,SNAP FASTENER U/O PN 205-070-614-41 & -42 ....UHE,UHH,UHV,UHX	EA	2
44	27	MFOZZ	7520-00-215-4416	97499	205-070-810-1	.STENCIL INSIDE USBL EFF 62-2106 THRU 65-9564 ....UHE,UHH,UHV,UHX	EA	1
44	27	MFOZZ	7520-00-944-2514	97499	205-070-859-1	.STENCIL,MARKING INSIDE USBL EFF 65-9565 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
44	28	MFOZZ	7520-00-054-2153	97499	204-040-671-1	.STENCIL,MARKING LEVEL ACCESS................UHE,UHH,UHV,UHX	EA	1
44	29	MFOZZ	1560-00-034-3721	97499	100-057-5	.BACKUP PLATE ASSEMB U/O PN 205-070-610-5....UHE,UHH,UHV,UHX	EA	6
44	30	MFOZZ	7520-00-869-0723	97499	205-070-850-1	.STENCIL,HYD INFORMATION......................UHE,UHH,UHV,UHX	EA	1
44	31	MFOZZ	1560-00-285-7982	97499	205-070-840-1	.STENCIL,XMSN OIL LEVEL LIGHT................UHE,UHH,UHV,UHX	EA	1

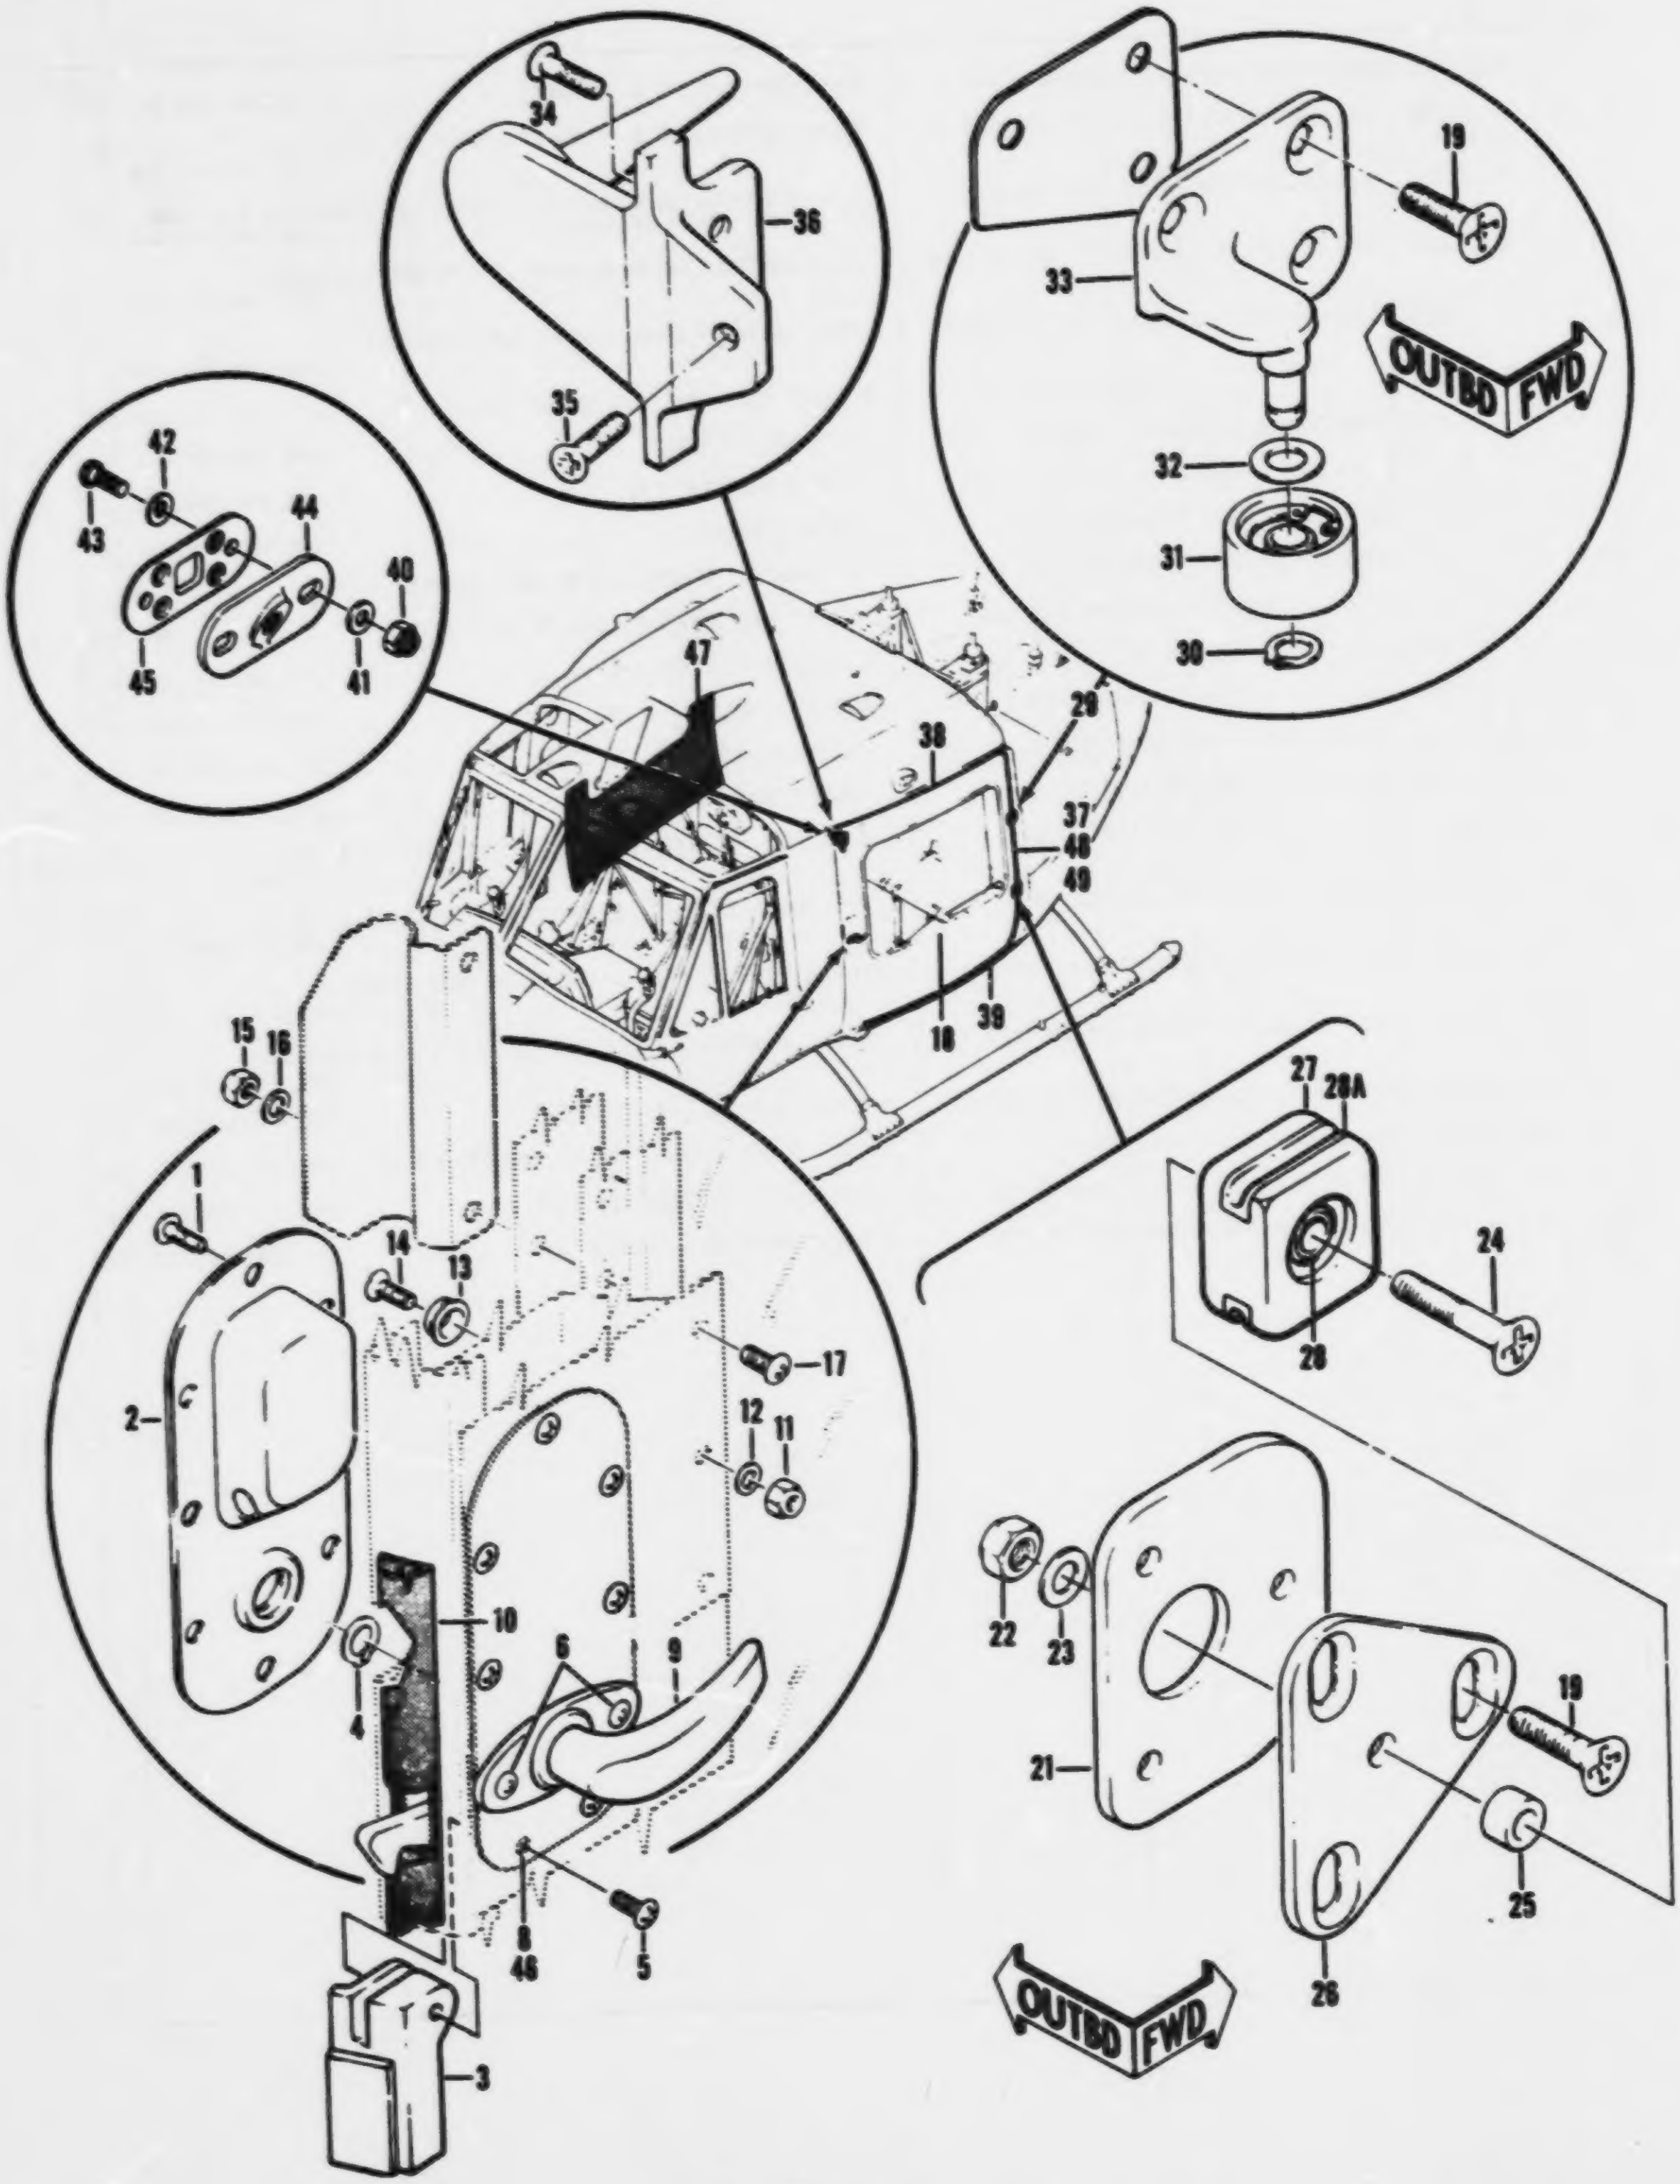
34
36
35
19
33
OUTBD
FWD
32
31
30
42
43
44
40
45
41
47
38
29
37
48
49
18
39
15
16
1
14
13
17
12
11
2
10
4
6
9
8
46
5
3
27
28A
24
28
22
23
21
19
25
26
OUTBD
FWD

Figure 45. Door Assembly, Cargo

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME			
45		PBOOO	1560-00-927-3613	97499	204-030-669-141	DOOR ASSEMBLY,CARGO -LH SEE FIG.19 FOR NHA.......	UHM	EA	1
45		PBOOO	1560-00-927-3612	97499	204-030-669-142	DOOR ASSEMBLY,CARGO -RH SEE FIG.19 FOR NHA.......	UHM	EA	1
45	1	PAOZZ	5305-00-702-0609	96906	MS24694S50	.SCREW,MACHINE....................................	UHM	EA	8
45	2	PAOZZ	1560-00-918-0720	97499	204-032-888-7	.PAN ASSEMBLY,CARGO U/O UH-1B P/N 204-030-669-141 & -142	UHM	EA	1
45	3	PBOZZ	1560-00-963-0963	97499	204-030-677-3	.BLOCK-PIVOT,CARGO DOOR LATCH-LH U/O PN 204-030-669-61,-77,-107..		EA	1
45	3	PBOZZ	1560-00-847-7432	97499	204-030-677-4	.BLOCK-PIVOT,CARGO DOOR LATCH-RH U/O PN 204-030-669-62,-78,-108..		EA	1
45	4	PAOZZ	5365-00-721-8187	96906	MS16624-1018	.RING,RETAINING...................................	UHM	EA	1
45	5	PAOZZ	5305-00-281-8527	88044	AN525-832R8	.SCREW,MACHINE....................................	UHM	EA	7
45	6	PAOZZ	5305-00-702-0609	96906	MS24694S50	.SCREW,MACHINE....................................	UHM	EA	2
45	8	PAOZZ	5310-00-728-0944	96906	MS21049L08	.NUT,SELF-LOCKING,PL..............................	UHM	EA	8
45	9	XCFZZ		97499	204-031-892-1	.LATCH INSTL CARGO DOOR-LH U/O P/N 204-030-669-141 SEE FIG. 47 FOR BREAKDOWN..........................	UHM	EA	1
45	9	XCFZZ		97499	204-031-892-2	.LATCH INSTL CARGO DOOR-RH U/O P/N 204-030-669-142 SEE FIG. 47 FOR BREAKDOWN..........................	UHM	EA	1
45	10	PAOZZ	9320-00-927-7393	97499	204-030-669-145	.RUBBER STRIP,LH..................................	UHM	EA	1
45	10	PAOZZ	9320-00-927-7392	97499	204-030-669-146	.RUBBER STRIP,RH..................................	UHM	EA	1
45	11	PAOZZ	5310-00-905-8451	96906	MS21083N06	.NUT,SELF-LOCKING,HE..............................	UHM	EA	14
45	12	PAOZZ	5310-00-187-2398	88044	AN960PD6L	.WASHER,FLAT......................................	UHM	EA	14
45	13	PAOZZ	5325-00-174-2923	88044	AN227-8	.STUD,SNAP FASTENER...............................	UHM	EA	14
45	14	PAOZZ	5305-00-837-3343	96906	MS24693S28	.SCREW,MACHINE....................................	UHM	EA	14
45	15	PAOZZ	5310-00-905-3081	96906	MS21083D3	.NUT,SELF-LOCKING,HE..............................	UHM	EA	32
45	16	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT......................................	UHM	EA	32
45	17	PAOZZ	5305-00-823-5794	88044	AN525D10R6	.SCREW,MACHINE....................................	UHM	EA	32
45	18	PAOOO	1560-00-633-0849	97499	204-030-669-5	.WINDOW ASSY,CARGO D -LH..........................	UHM	EA	1
45	18	PAOOO	1560-00-672-0064	97499	204-030-669-6	.WINDOW ASSY,CARGO D -RH..........................	UHM	EA	1
45	19	PAOZZ	5305-00-958-3409	96906	MS24694S52	.SCREW,MACHINE....................................	UHM	EA	3
45	21	XBOZZ		97499	204-030-873-1	.PLATE,CARGO......................................	UHM	EA	1
45		AOOOO		97499	204-030-004-1	.BRACKET,CARGO DOOR...............................	UHM	EA	1
45	22	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.............	UHM	EA	1
45	23	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT.....................................	UHM	EA	1
45	24	PAOZZ	5305-00-282-0138	88044	AN525-416R18	..SCREW,MACHINE...................................	UHM	EA	1
45	25	PAOZZ	5365-00-633-5593	80205	NAS43HT4-7	..SPACER,SLEEVE...................................	UHM	EA	1
45	26	PAOZZ	1560-00-908-1395	97499	204-030-695-13	..BRACKET,ROLLER,CARG.............................	UHM	EA	1
45	27	PAOOO	1560-00-872-7860	97499	204-030-220-1	..SLIDE ASSEMBLY,CARG.............................	UHM	EA	1
45	28	PAOZZ	5365-00-697-3379	96906	MS16625-1062	...RING,RETAINING.................................	UHM	EA	1
45	28A	PAOZZ	1560-00-448-5799	97499	204-030-727-1	...BEARING STRIP..................................	UHM	EA	2
45	29	PAOOO	1560-00-653-4328	97499	204-030-696-7	.BRACKET,ROLLER,CARG -LH..........................	UHM	EA	1
45	29	PAOOO	1560-00-653-4357	97499	204-030-696-8	.BRACKET,ROLLER,CARG -RH..........................	UHM	EA	1
45	30	PAOZZ	5365-00-721-8187	96906	MS16624-1018	..RING,RETAINING..................................	UHM	EA	1
45	31	PAOZZ	1560-00-633-0835	97499	204-030-698-1	..ROLLER ASSEMBLY,CAR.............................	UHM	EA	1
45	32	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT.....................................	UHM	EA	1
45	33	XAOZZ		97499	204-030-786-3	..FITTING,LH......................................	UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
45	33	XAOZZ		97499	204-030-786-4	..FITTING,RH......................................	UHM	EA	1
45	34	PAOZZ	5305-00-702-0609	96906	MS24694S50	.SCREW,MACHINE.....................................	UHM	EA	2
45	35	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE....................................	UHM	EA	1
45	36	PAOZZ	1560-00-736-4016	97499	204-031-221-1	.FITTING ASSEMBLY..................................	UHM	EA	1
45		XADOO		97499	204-030-669-143	.DOOR ASSEMBLY U/O PN 204-030-669-141............	UHM	EA	1
45		XAOZZ		97499	204-030-669-144	.DOOR ASSEMBLY U/O PN 204-030-669-142............	UHM	EA	1
45	37	PAOZZ	1560-00-H26-8211	97499	204-030-669-53	..SEAL...	UHM	EA	1
45	38	PBOZZ	5340-00-759-7525	97499	204-030-669-17	..TRACK,SLIDING DOOR UPPER-LH....................	UHM	EA	1
45	38	PAOZZ	5340-00-867-9007	97499	204-030-669-18	..TRACK,SLIDING DOOR UPPER-RH....................	UHM	EA	1
45	39	PAOZZ	5340-00-997-6607	97499	204-030-669-15	..TRACK,SLIDING DOOR LOWER-LH....................	UHM	EA	1
45	39	PAOZZ	1560-00-997-6608	97499	204-030-669-16	..TRACK,LOWER,RIGHT -RH..........................	UHM	EA	1
45	40	PAOZZ	5310-00-982-6803	96906	MS21044D10	..NUT,SELF-LOCKING,HE.............................	UHM	EA	2
45	41	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT.......................................	UHM	EA	2
45	42	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT.......................................	UHM	EA	2
45	43	PAOZZ	5305-00-180-0014	88044	AN525-10R12	..SCREW,MACHINE....................................	UHM	EA	2
45	44	PAOZZ	1560-00-070-6832	97499	204-031-248-1	..PLATE,STRUCTURAL,AI.............................	UHM	EA	1
45	45	PAOZZ	1560-00-070-6831	97499	204-031-248-3	..PLATE,STRUCTURAL,AI.............................	UHM	EA	1
45	46	PAOZZ	5310-00-728-0944	96906	MS21049L08	..NUT,SELF-LOCKING,PL.............................	UHM	EA	8
45	47	PAFZZ	1560-00-H01-6626	97499	204-030-669-122	.SKIN-RH LOWER......................................	UHM	EA	1
45	48	PAFZZ	1560-00-H01-6625	97499	204-030-669-21	.FRAME-LH AFT.......................................	UHM	EA	1
45	48	PAFZZ	1560-00-H01-6624	97499	204-030-669-22	.FRAME-RH AFT.......................................	UHM	EA	1
45	49	MFOZZ		81996	1560-UH1-760	.CABLE ASSEMBLY FAB FROM 4010-00-222-4482,9505-00-528-5017, 4030-00-452-2568....................................	UHM	EA	1

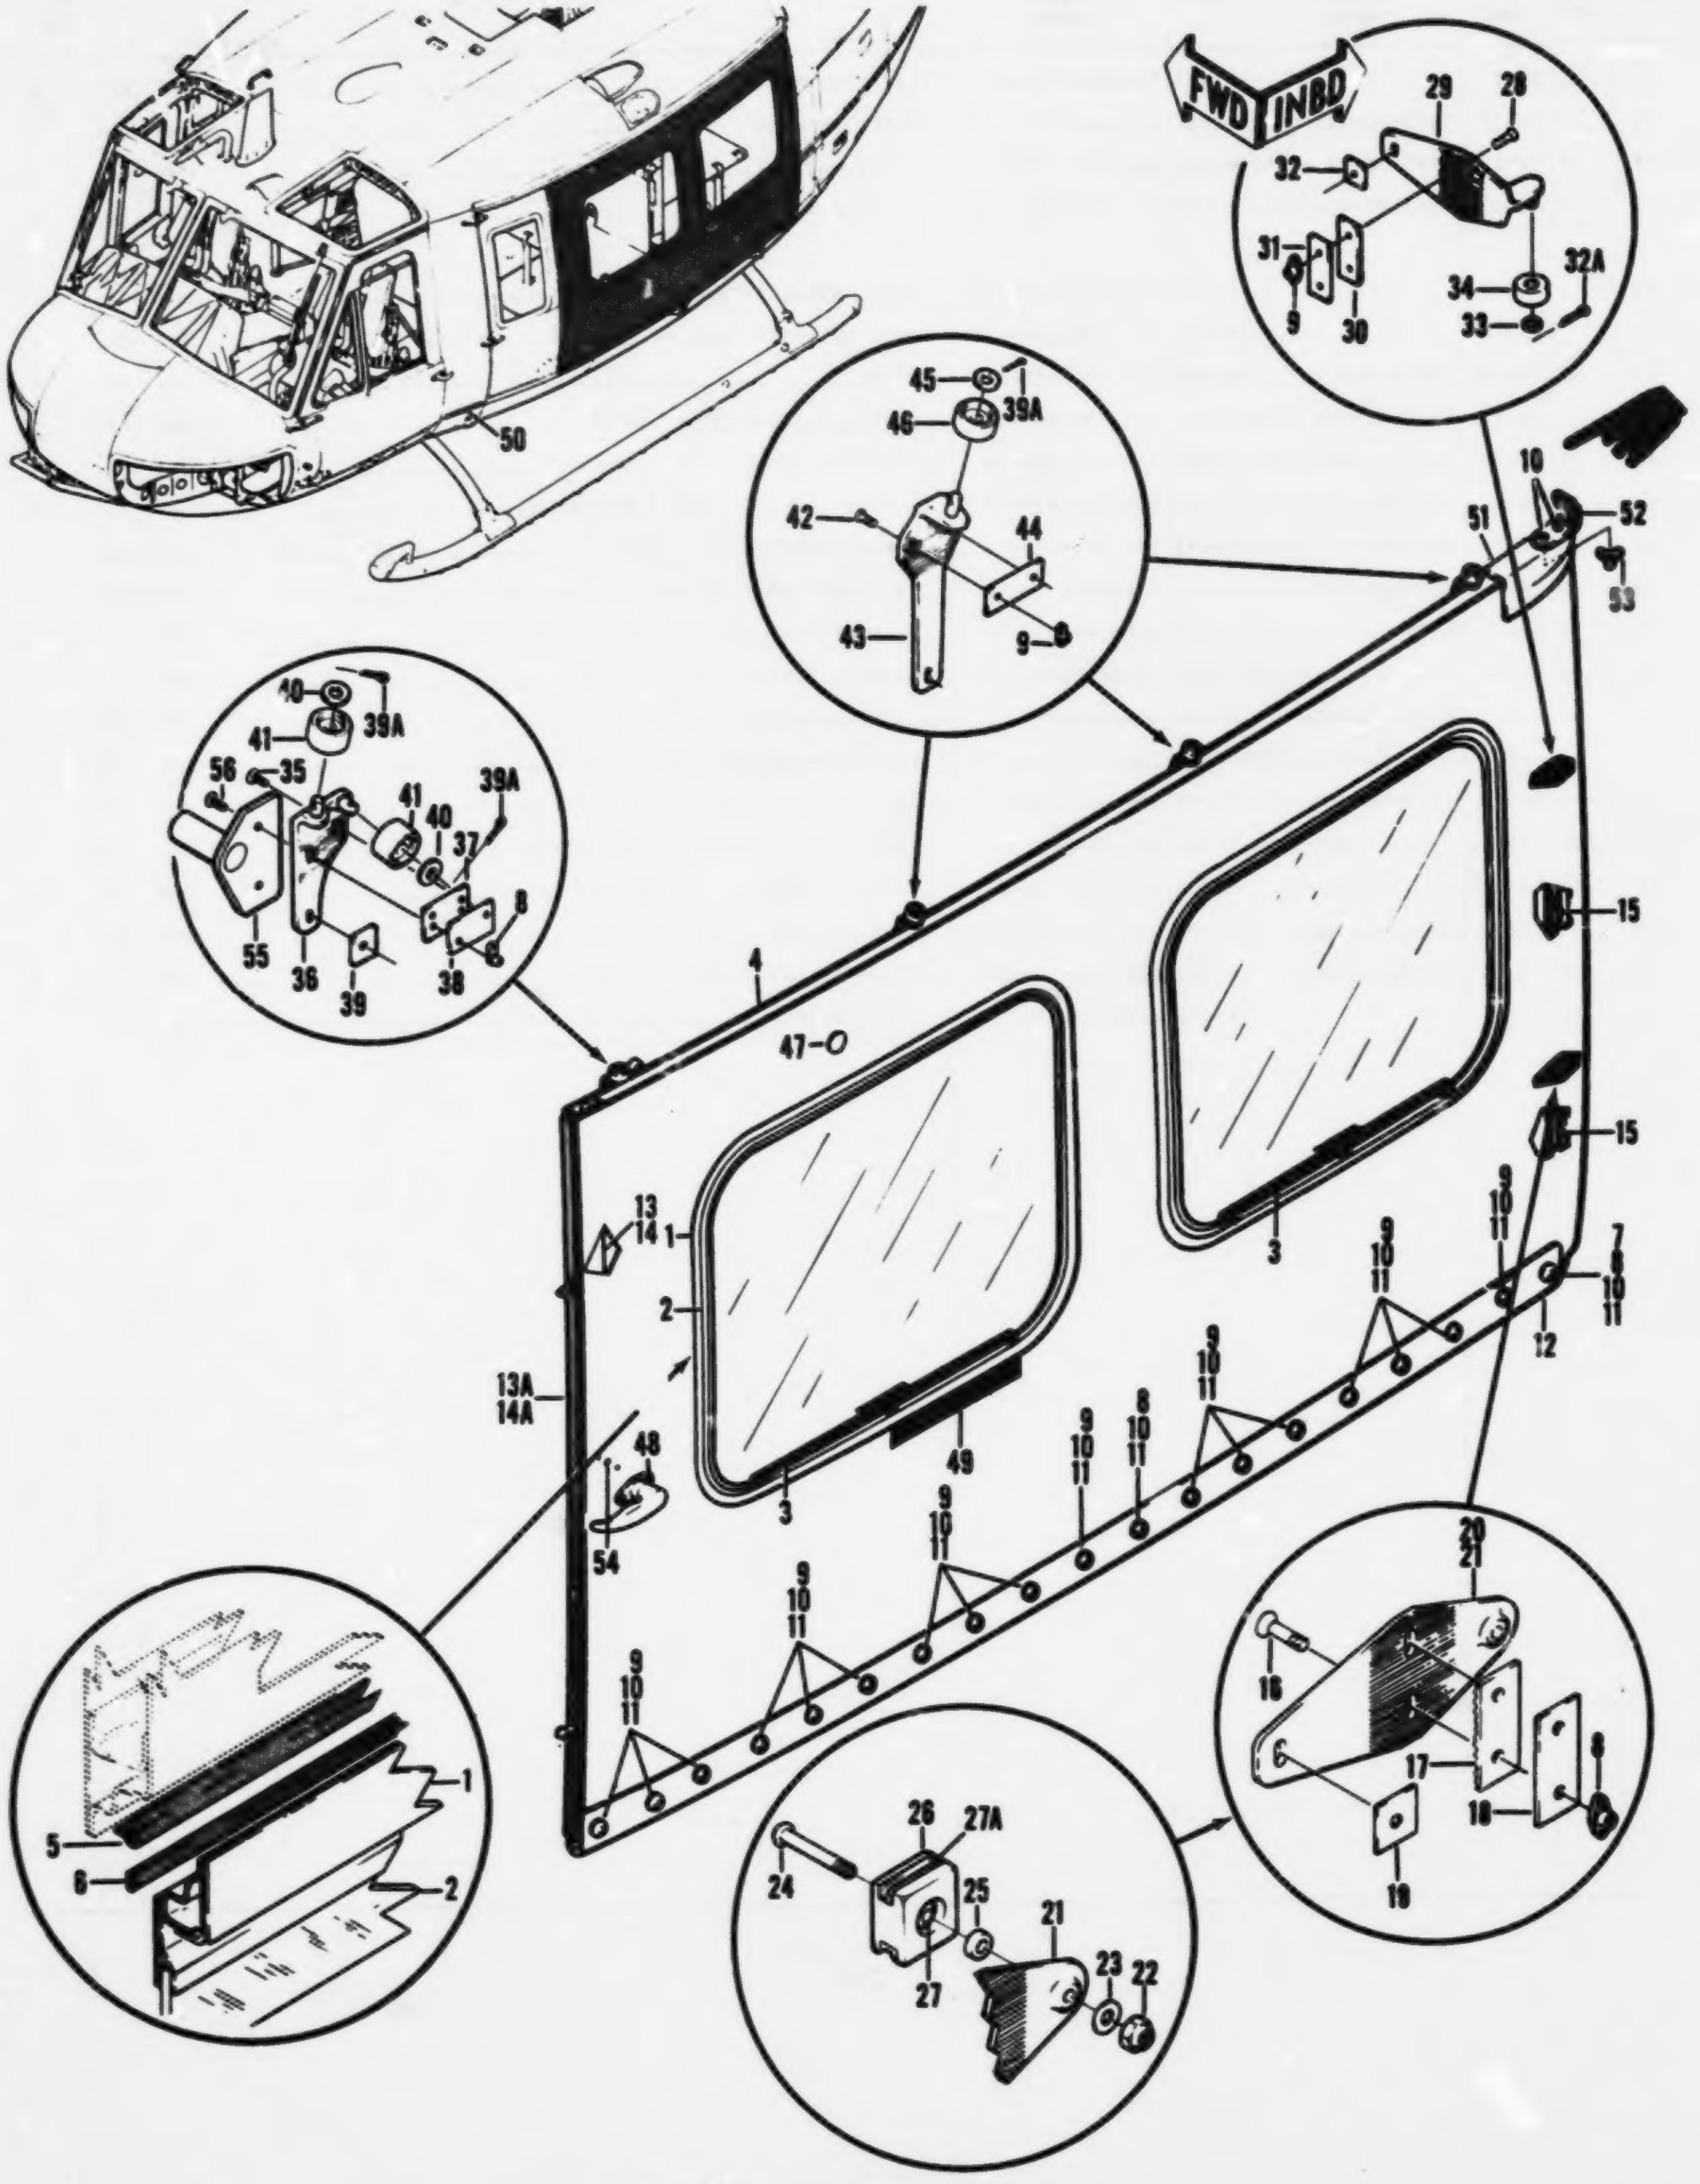
FWD
INBD
29
28
32
31
9
30
34
32A
33
45
39A
46
42
44
43
9
10
52
51
53
40
39A
41
56
35
41
40
39A
37
8
55
36
39
38
15
4
47
15
13
14
1
2
3
9
10
11
7
8
10
11
12
13A
14A
48
49
54
3
50
5
6
1
2
20
21
16
17
18
8
19
26
27A
24
25
21
27
23
22

Figure 46. Door Installation, Cargo

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
46		PA000	1560-00-927-9515	97499	205-031-669-15	DOOR,CARGO,AIRCRAFT SEE FIG.20 FOR NHA	UHE,UHH,UHV,UHX	EA	1
46		PA000	1560-00-927-9514	97499	205-031-669-16	DOOR,CARGO,AIRCRAFT SEE FIG.20 FOR NHA	UHE,UHH,UHV,UHX	EA	1
46	1	PA000	1560-00-908-6445	97499	205-031-669-5	.WINDOW PANEL,AIRCRA	UHE,UHH,UHV,UHX	EA	2
46	2	PA000	1560-00-967-1797	97499	205-031-669-7	..WINDOW PANEL, ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
46	3	XCFZZ		97499	205-030-543-1	..LATCH INSTL SEE FIG.48 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
46	4	XA00Z		97499	205-031-669-11	.DOOR,CARGO -LH	UHE,UHH,UHV,UHX	EA	1
46	4	XA00Z		97499	205-031-669-12	.DOOR,CARGO -RH	UHE,UHH,UHV,UHX	EA	1
46	5	PA0ZZ	1560-00-967-1800	97499	205-031-669-103	..SEAL,CARGO DOOR	UHE,UHH,UHV,UHX	EA	2
46	6	MO0ZZ	1560-00-967-1801	97499	205-031-669-105	..SEAL ASSEMBLY,STRIP	UHE,UHH,UHV,UHX	EA	2
46	7	PA0ZZ	1560-00-435-4802	97499	205-031-669-89	..GUSSET,CARGO DOOR -LH	UHE,UHH,UHV,UHX	EA	1
46	7	PA0ZZ	1560-00-435-4800	97499	205-031-669-90	..GUSSET.CARGO DOOR -RH	UHE,UHH,UHV,UHX	EA	1
46	8	PA0ZZ	5310-00-734-1850	96906	MS21071L3	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	7
46	9	PA0ZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	29
46	10	PA0ZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	21
46	11	PA0ZZ	5310-00-821-1489	82577	174870	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	19
46	12	PA0ZZ	5340-00-191-9406	63288	205-031-669-109	.TRACK,SLIDING DOOR -LH LOWER	UHE,UHH,UHV,UHX	EA	1
46	12	PA0ZZ	5340-00-097-8476	63288	205-031-669-110	.TRACK,SLIDING DOOR -RH LOWER	UHE,UHH,UHV,UHX	EA	1
46	13	MO0ZZ	1560-00-825-1614	97499	205-031-669-151	.DOUBLER,CARGO DOOR -LH	UHE,UHH,UHV,UHX	EA	1
46	13A	PA0ZZ	1560-00-509-6791	63288	205-031-669-123	.FRAME.CARGO DOOR	UHE,UHH,UHV,UHX	EA	1
46	14	MO0ZZ	5330-00-825-1612	97499	205-031-669-152	.SEAL,RUBBER SPECIAL	UHE,UHH,UHV,UHX	EA	1
46	14A	PB0ZZ	1560-00-511-7315	63288	205-031-669-124	.FRAME,CARGO DOOR	UHE,UHH,UHV,UHX	EA	1
46	15	MO0ZZ		97499	205-031-669-101	.RUBBER STRIP -AFT	UHE,UHH,UHV,UHX	EA	1
46	16	PA0ZZ	5305-00-719-5403	96906	MS24694S54	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	3
46	17	PA0ZZ	1560-00-967-1836	97499	205-031-433-3	PLATE.ROLLER,CARGO	UHE,UHH,UHV,UHX	EA	1
46	18	PA0ZZ	5365-00-967-7667	97499	205-030-439-5	.SHIM	UHE,UHH,UHV,UHX	EA	1
46	19	PA0ZZ	5365-00-967-7648	97499	205-030-439-7	.SHIM	UHE,UHH,UHV,UHX	EA	1
46	20	A0000	1560-00-872-7863	97499	205-030-313-1	.BRACKET ASSEMBLY,CA	UHE,UHH,UHV,UHX	EA	1
46	21	PA0ZZ	1560-00-133-7004	97499	205-031-434-3	..SUPPORT,ROLLER,CARG	UHE,UHH,UHV,UHX	EA	1
46	22	PA0ZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX	UHE,UHH,UHV,UHX	EA	1
46	23	PA0ZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
46	24	PA0ZZ	5305-00-182-1368	88044	AN525-416R20	..SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
46	25	PA0ZZ	5365-00-633-5593	80205	NAS43HT4-7	..SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
46	26	PA000	1560-00-872-7860	97499	204-030-220-1	..SLIDE ASSEMBLY, CAR	UHE,UHH,UHV,UHX	EA	1
46	27	PA0ZZ	5365-00-687-3379	96906	MS16625-1062	...RING,RETAINING	UHE,UHH,UHV,UHX	EA	1
46	27A	PA0ZZ	1560-00-448-5799	97499	204-030-727-1	...BEARING STRIP	UHE,UHH,UHV,UHX	EA	2
46	28	PA0ZZ	5305-00-719-5403	96906	MS24694S54	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	3
46	29	PA0ZZ	1560-00-966-9368	97499	205-031-433-1	.SUPPORT.ROLLER,CARG -LH	UHE,UHH,UHV,UHX	EA	1
46	29	PA0ZZ	1560-00-966-9366	97499	205-031-433-2	.SUPPORT,ROLLER,CARG -RH	UHE,UHH,UHV,UHX	EA	1
46	30	PA0ZZ	1560-00-967-1836	97499	205-031-433-3	.PLATE,ROLLER,CARGO	UHE,UHH,UHV,UHX	EA	1
46	31	PA0ZZ	5365-00-967-7667	97499	205-030-439-5	.SHIM	UHE,UHH,UHV,UHX	EA	1
46	32	PA0ZZ	5365-00-967-7648	97499	205-030-439-7	.SHIM	UHE,UHH,UHV,UHX	EA	1
46	32A	PA0ZZ	5315-00-879-4829	96906	MS9245-23	.PIN,COTTER	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
46	33	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
46	34	PAOZZ	3120-00-967-1798	97499	205-030-437-5	.ROLLER,LINEAP-ROTAR..........UHE,UHH,UHV,UHX	EA	1
46	35	PAOZZ	5305-00-719-5403	96906	MS24694S54	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
46	36	PAOZZ	1560-00-967-3382	97499	205-031-435-1	.SUPPORT,ROLLER,CARG -LH..........UHE,UHH,UHV,UHX	EA	1
46	36	PAOZZ	1560-00-967-3381	97499	205-031-435-2	.SUPPORT,ROLLER,CARG -RH..........UHE,UHH,UHV,UHX	EA	1
46	37	PAOZZ	1560-00-967-7647	97499	205-031-435-3	.PLATE,CARGO DOOR..........UHE,UHH,UHV,UHX	EA	1
46	38	PAOZZ	5365-00-967-7655	97499	205-030-439-1	.SHIM..........UHE,UHH,UHV,UHX	EA	1
46	39	PAOZZ	5365-00-967-7648	97499	205-030-439-7	.SHIM..........UHE,UHH,UHV,UHX	EA	1
46	39A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER..........UHE,UHH,UHV,UHX	EA	4
46	40	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
46	41	PAOZZ	3120-00-967-1799	97499	205-030-437-7	.ROLLER,LINEAR-ROTAR..........UHE,UHH,UHV,UHX	EA	2
46	42	PAOZZ	5305-00-719-5403	96906	MS24694S54	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	9
46	43	PAOZZ	1560-00-967-3380	97499	205-031-436-1	.SUPPORT,STRUCTURAL..........UHE,UHH,UHV,UHX	EA	3
46	44	PAOZZ	1560-00-967-7646	97499	205-031-436-3	.PLATE,CARGO DOOR..........UHE,UHH,UHV,UHX	EA	3
46	45	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	3
46	46	PAOZZ	3120-00-967-1799	97499	205-030-437-7	.ROLLER,LINEAR-ROTAR..........UHE,UHH,UHV,UHX	EA	3
46	47	PAOZZ	5340-00-051-9769	83058	HS50726K2220	.BUTTON,PLUG..........UHE,UHH,UHV,UHX	EA	1
46	48	XCFZZ		97499	205-031-515-1	.LATCH INSTALLATION- LH SEE FIG 48 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
46	48	XCFZZ		97499	205-031-515-2	.LATCH INSTL-RH SEE FIG.48 FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
46	49	MFOZZ	5821-00-780-3671	97499	204-070-343-1	.STENCIL EMERGENCY EXIT..........UHE,UHH,UHV,UHX	EA	4
46	50	MFOZZ	7520-00-088-9839	97499	205-070-801-1	.STENCIL,MARKING ALTERNATE FUEL..........UHE,UHH,UHV,UHX	EA	1
46	51	PAOOO	1560-00-435-7901	97499	205-030-549-3	.CAP,CARGO DOOR -LH..........UHE,UHH,UHV,UHX	EA	1
46	51	PAOOO	1560-00-435-4808	97499	205-030-549-4	.CAP,CARGO DOOR -RH..........UHE,UHH,UHV,UHX	EA	1
46	52	PAOZZ	1560-00-450-2672	97499	205-030-550-1	..SEAL ASSEMBLY,CARGO DOOR -LH..........UHE,UHH,UHV,UHX	EA	1
46	52	PAOZZ	1560-00-450-2673	97499	205-030-550-2	..SEAL ASSEMBLY,CARGO DOOR -RH..........UHE,UHH,UHV,UHX	EA	1
46	53	PAOZZ	5310-00-766-6654	96906	MS21073L5	..NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	2
46	54	MOFZZ	1560-00-249-3280	97499	205-031-481-15	.PLATE ASSEMBLY,RETA..........UHE,UHH,UHV,UHX	EA	1
46		XCFZZ		20309	ES-D-221776-101	DOOR HANDLE ASSY INSTL, AUXILIARY LH.SEE FIG.5B FOR NHA..........UHX	EA	1
46		XCFZZ		20309	ES-D-221776-102	DOOR HANDLE ASSY. INSTL, AUXILIARY RH.SEE FIG.5B FOR NHA..........UHX	EA	1
46	55	XDOZZ		20309	ES-C-221777-1	.DOOR HANDLE ASSY-LH..........UHX	EA	1
46	55	XDOZZ		20309	ES-C-221777-2	.DOOR HANDLE ASSY-RH..........UHX	EA	1
46	56	PAOZZ	5305-00-059-3660	96906	MS51958-64	.SCREW,MACHINE..........UHX	EA	2

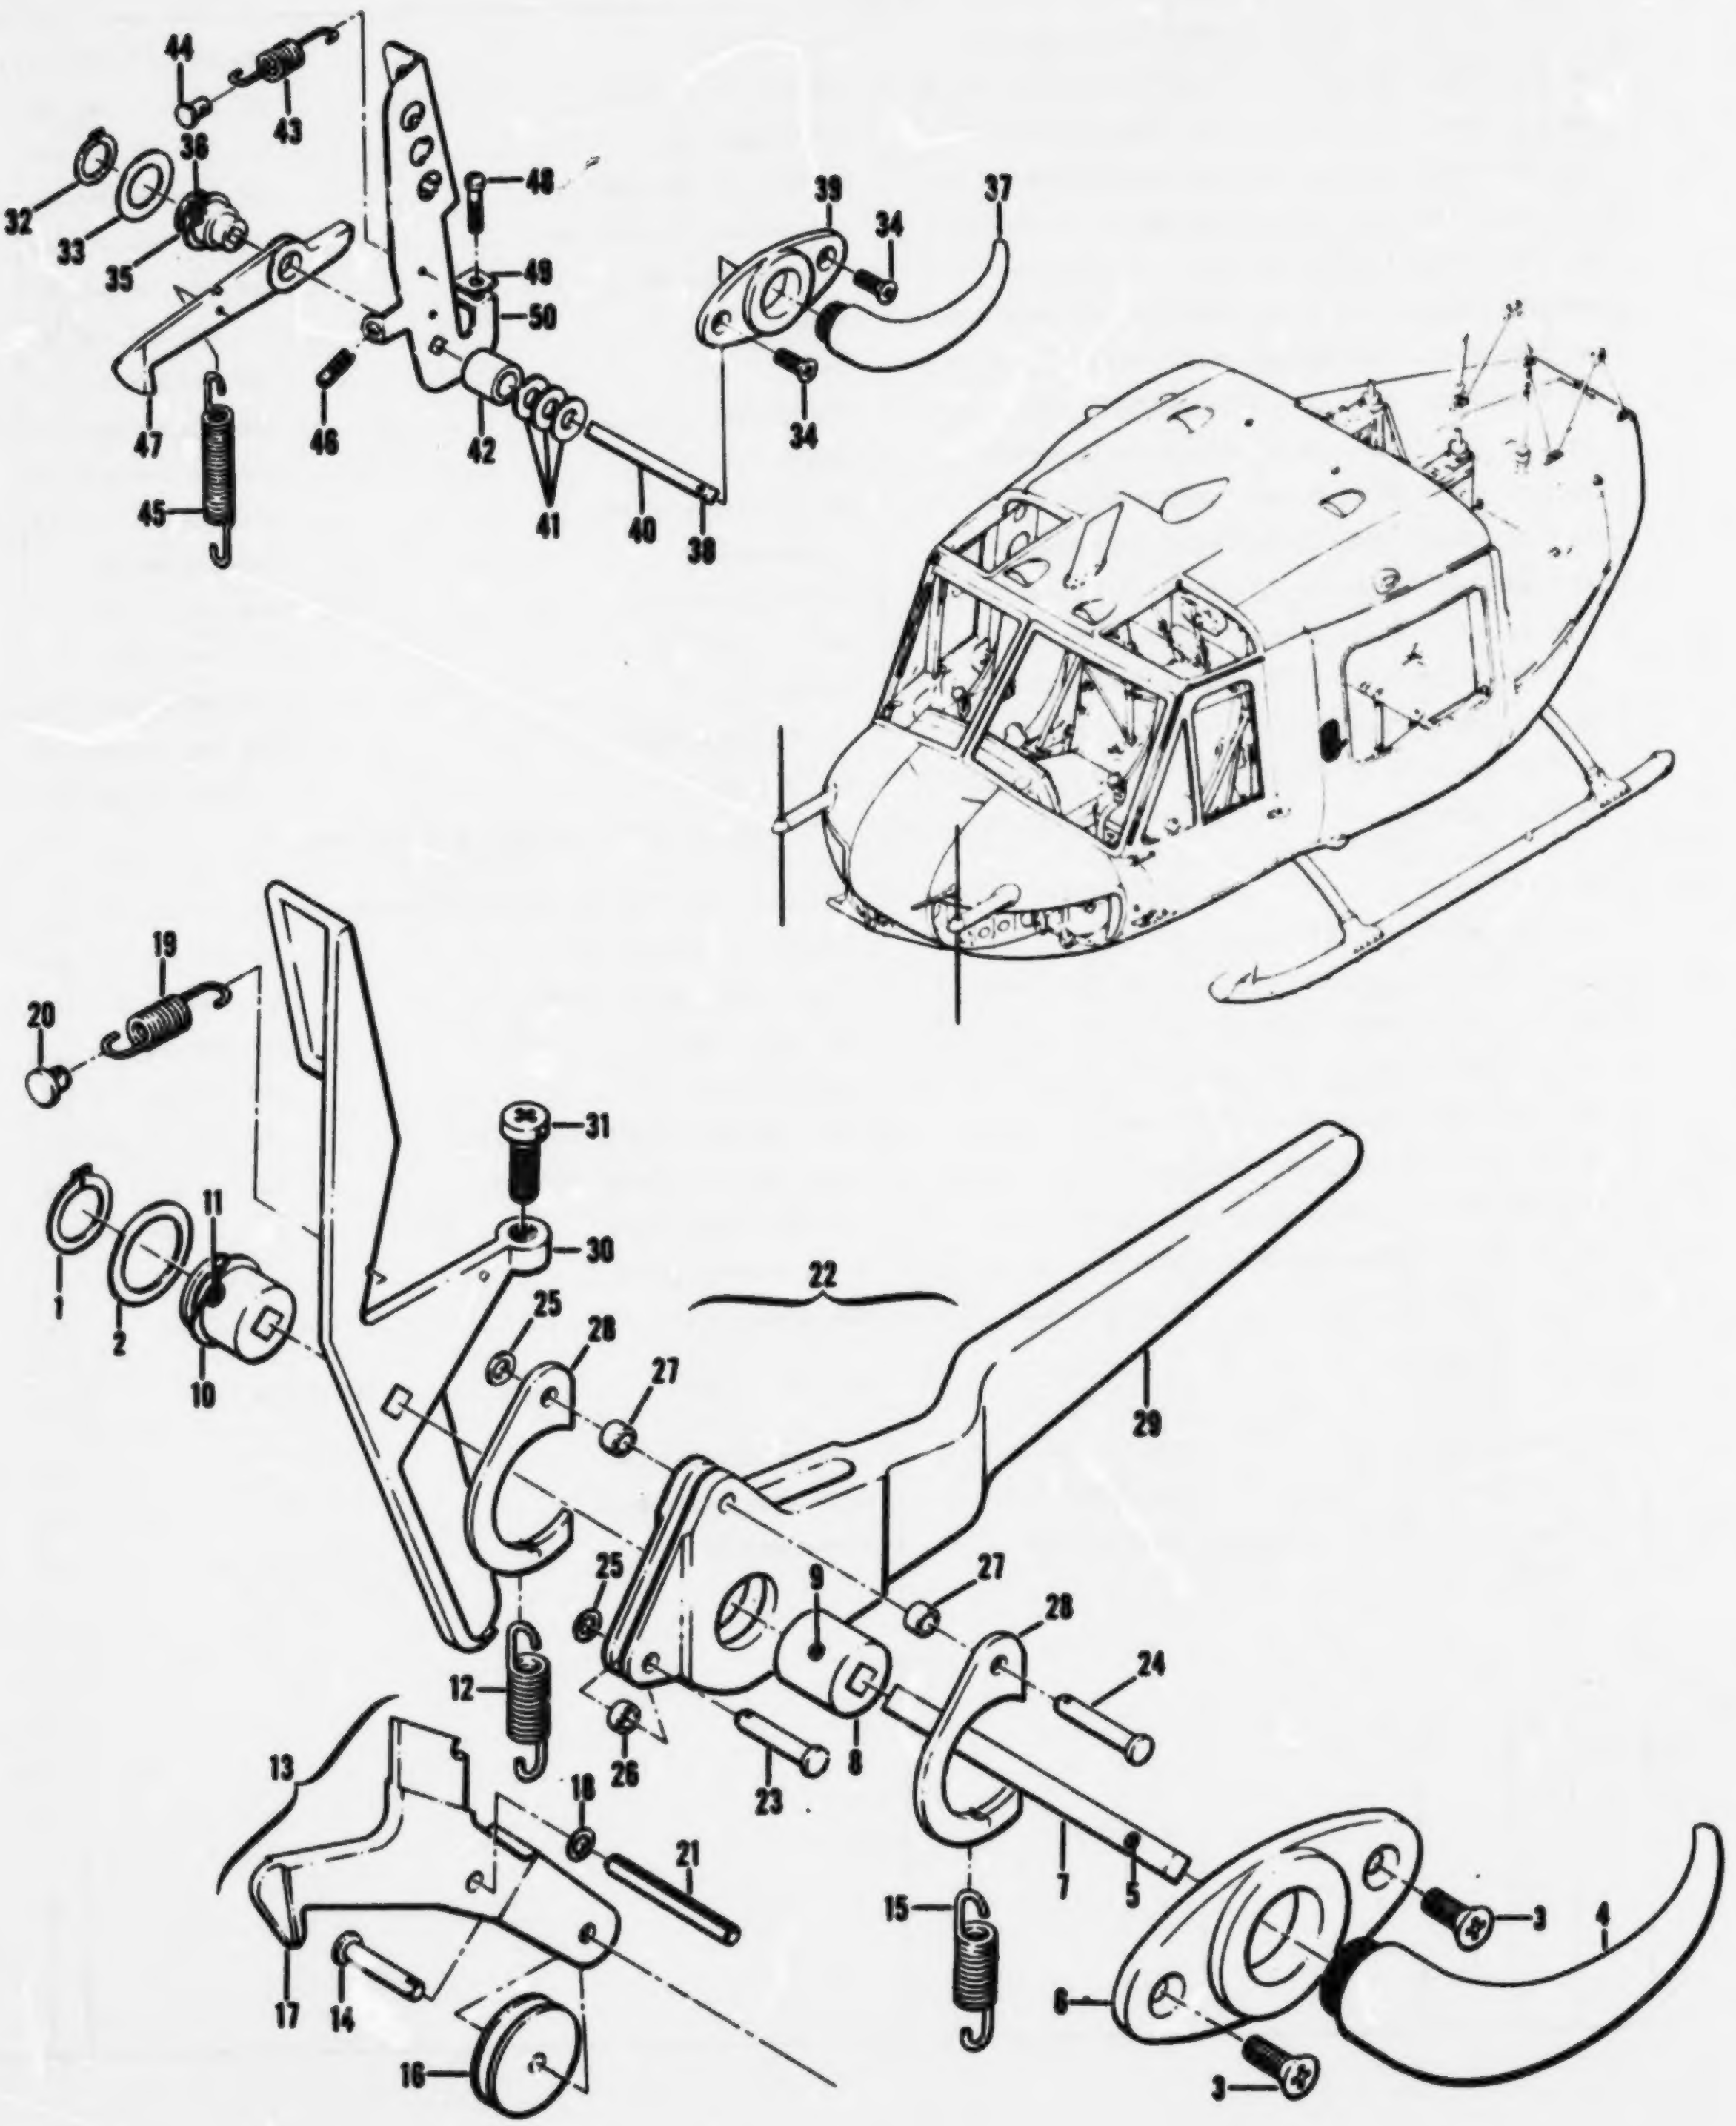
44
43
36
32
33
35
48
49
50
47
46
42
41
40
38
45
39
34
37
34
19
20
31
30
11
1
2
10
22
25
28
27
29
9
27
28
25
24
12
26
8
23
13
18
21
15
7
5
3
4
17
14
16
6
3

Figure 47. Latch Installation, Cargo Door

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
47		XCFZZ		97499	204-030-892-15	LATCH INSTL CARGO DOOR-LH USBL EFF 60-3546 THRU 60-3590 SEE FIG.45 FOR NHA..........UHB	EA	1
47		XCFZZ		97499	204-030-892-16	LATCH INSTL CARGO DOOR-RH USBL EFF 60-3546 THRU 60-3590 SEE FIG.45 FOR NHA..........UHB	EA	1
47	1	PAOZZ	5365-00-803-7305	96906	MS16624-1062	.RING,RETAINING..........UHB	EA	1
47	2	PAOZZ	5310-00-658-6169	80477	XW36	.WASHER,FLAT..........UHB	EA	1
47	3	PAOZZ	5305-00-957-6266	96906	MS35190-252	.SCREW,MACHINE..........UHB	EA	2
47	4	PAOOO	1680-00-411-0041	80477	AR133	.HANDLE,DOOR..........UHB	EA	1
47	5	PAOZZ	5305-00-719-5064	96906	MS51959-30	..SCREW,MACHINE..........UHB	EA	1
47	6	PAOZZ	5340-00-437-8949	20293	07-1000	.ESCUTCHEON,PLATE..........UHB	EA	1
47	7	PAOZZ	1560-00-876-0108	97499	204-031-892-3	.SPINDLE, LATCH, CAR..........UHB	EA	1
47	8	PAOOO	1560-00-765-7842	97499	204-030-887-5	.SPACER ASSEMBLY,DOO LATCH..........UHB	EA	1
47	9	PAOZZ	5305-00-719-5330	96906	MS51963-21	..SETSCREW..........UHB	EA	1
47	10	PAOOO	1560-00-765-7843	97499	204-030-887-1	.SPACER ASSEMBLY,DOO LATCH..........UHB	EA	1
47	11	PAOZZ	5305-00-719-5330	96906	MS51963-21	..SETSCREW..........UHB	EA	1
47	12	PAOZZ	1560-00-787-4243	97499	204-030-891-5	.SPRING..........UHB	EA	1
47	13	AOOOZ	1560-00-792-6388	97499	204-030-892-13	.LATCH ASSEMBLY -LH..........UHB	EA	1
47	13	AOOOZ	1560-00-793-6767	97499	204-030-892-14	.LATCH ASSEMBLY -RH..........UHB	EA	1
47	14	PAOZZ	5315-00-234-6088	88044	AN171604	..PIN,STRAIGHT,HEA..........UHB	EA	1
47	15	PAOZZ	5360-00-765-7839	97499	204-030-891-3	..SPRING,HELICAL,EXTE..........UHB	EA	1
47	16	PAOZZ	3120-00-624-5253	97499	204-030-568-1	..ROLLER,CARGO DOOR..........UHB	EA	1
47	17	PAOZZ	1560-00-858-8430	97499	204-030-883-7	..HOOK,LATCH,CARGO DO..........UHB	EA	1
47	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB	EA	1
47	19	PAOZZ	5360-00-674-4197	97499	204-030-890-1	.SPRING,HELICAL,EXTE..........UHB	EA	1
47	20	PAOZZ	5315-00-707-7641	97499	204-030-893-1	.PIN,STRAIGHT,HEADED..........UHB	EA	1
47	21	PBOZZ	5315-00-754-1854	80205	NAS561C6-18	.PIN,SPRING..........UHB	EA	1
47	22	AOOOZ	1560-00-707-6849	97499	204-030-892-9	.HANDLE ASSY,CARGO LH..........UHB	EA	1
47	22	AOOOZ	1560-00-707-6848	97499	204-030-892-10	.HANDLE ASSEMBLY,CAR..........UHB	EA	1
47	23	PAOZZ	5315-00-820-9066	88044	AN121603	..PIN,STRAIGHT,HEA..........UHB	EA	1
47	24	PAOZZ	5315-00-820-4322	88044	AN121609	..PIN,STRAIGHT,HEA..........UHB	EA	2
47	25	PAOZZ	5310-00-550-5009	96906	MS15795-704	..WASHER,FLAT..........UHB	EA	1
47	26	PAOZZ	5365-00-807-4211	80205	NAS42HT4-8	..SPACER,SLEEVE..........UHB	EA	2
47	27	XDOZZ		80205	NAS43HT1-7	..SPACER,SLEEVE..........UHB	EA	1
47	28	PAOZZ	1560-00-765-7838	97499	204-030-886-1	..LINK,LATCH SPRING..........UHB	EA	1
47	29	PAOZZ	1560-00-790-6404	97499	204-030-884-1	..LEVER,MANUAL CONTRO LH..........UHB	EA	1
47	29	PAOZZ	1560-00-765-7857	97499	204-030-884-2	..LEVER,MANUAL CONTRO RH..........UHB	EA	1
47	30	PAOOO	1560-00-674-4195	97499	204-030-885-1	.HANDLE ASSEMBLY, CARGO-LH USBL EFF 60-3546 THRU 60-3590 ....UHB	EA	1
47	30	PAOOO	1560-00-674-4196	97499	204-030-885-2	.HANDLE ASSEMBLY, CARGO-RH USBL EFF 60-3546 THRU 60-3590 ....UHB	EA	1
47	31	PAOZZ	5305-00-145-7011	88044	AN503-8-8	..SCREW,MACHINE..........UHB	EA	1
47		XCFZZ		97499	204-031-892-1	LATCH INSTL CARGO DOOR-LH USBL EFF 60-3591 & SUBSEQUENT SEE FIG.45 FOR NHA..........UHB,UHC,UHM	EA	1
47		XCFZZ		97499	204-031-892-2	LATCH INSTL CARGO DOOR-RH USBL EFF 60-3591 & SUBSEQUENT SEE FIG.45 FOR NHA..........UHB,UHC,UHM	EA	1
47	32	PAOZZ	5365-00-803-7305	96906	MS16624-1062	.RING,RETAINING..........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
47	33	PAOZZ	5310-00-658-6169	80477	XW36	.WASHER,FLAT....................................UHB,UHC,UHM	EA	1
47	34	PAOZZ	5305-00-957-6266	96906	MS35190-252	.SCREW,MACHINE..................................UHB,UHC,UHM	EA	2
47	35	PAOOO	1560-00-739-4563	97499	204-031-252-1	.BUSHING ASSEMBLY,CA............................UHB,UHC,UHM	EA	1
47	36	PAOZZ	5305-00-719-5330	96906	MS51963-21	..SETSCREW......................................UHB,UHC,UHM	EA	1
47	37	PAOOO	1680-00-411-0041	80477	AR133	.HANDLE,DOOR....................................UHB,UHC,UHM	EA	1
47	38	PAOZZ	5305-00-719-5064	96906	MS51959-30	..SCREW,MACHINE.................................UHB,UHC,UHM	EA	1
47	39	PAOZZ	5340-00-437-8949	20293	07-1000	.ESCUTCHEON,PLATE...............................UHB,UHC,UHM	EA	1
47	40	PAOZZ	1560-00-876-0108	97499	204-031-892-3	.SPINDLE, LATCH, CAR............................UHB,UHC,UHM	EA	1
47	41	PAOZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER, FLAT...................................UHB,UHC,UHM	EA	3
47	42	PAOZZ	5365-00-710-4272	80205	NAS43HT6-30	.SPACER,SLEEVE..................................UHB,UHC,UHM	EA	1
47	43	PAOZZ	5360-00-674-4197	97499	204-030-890-1	.SPRING,HELICAL,EXTE............................UHB,UHC,UHM	EA	1
47	44	PAOZZ	5315-00-707-7641	97499	204-030-893-1	.PIN,STRAIGHT,HEADED............................UHB,UHC,UHM	EA	1
47	45	PAOZZ	5360-00-739-4582	97499	47-385-165-3	.SPRING,HELICAL,EXTE............................UHB,UHC,UHM	EA	1
47	46	PBOZZ	5305-00-724-6792	96906	MS51964-54	.SETSCREW.......................................UHB,UHC,UHM	EA	1
47	47	PAOZZ	1560-00-739-4564	97499	204-031-254-1	.HOOK ASSEMBLY,CARGO............................UHB,UHC,UHM	EA	1
47	48	PAOZZ	5305-00-984-6196	96906	MS35206-248	.SCREW,MACHINE..................................UHB,UHC,UHM	EA	1
47	49	PAOZZ	5310-00-934-9757	96906	MS35649-282	.NUT,PLAIN,HEXAGON..............................UHB,UHC,UHM	EA	1
47	50	PAOZZ	1560-00-894-6537	97499	204-031-253-1	.HANDLE,LATCH -LH...............................UHB,UHC,UHM	EA	1
47	50	PAOZZ	1560-00-894-6538	97499	204-031-253-2	.HANDLE,LATCH -RH...............................UHB,UHC,UHM	EA	1

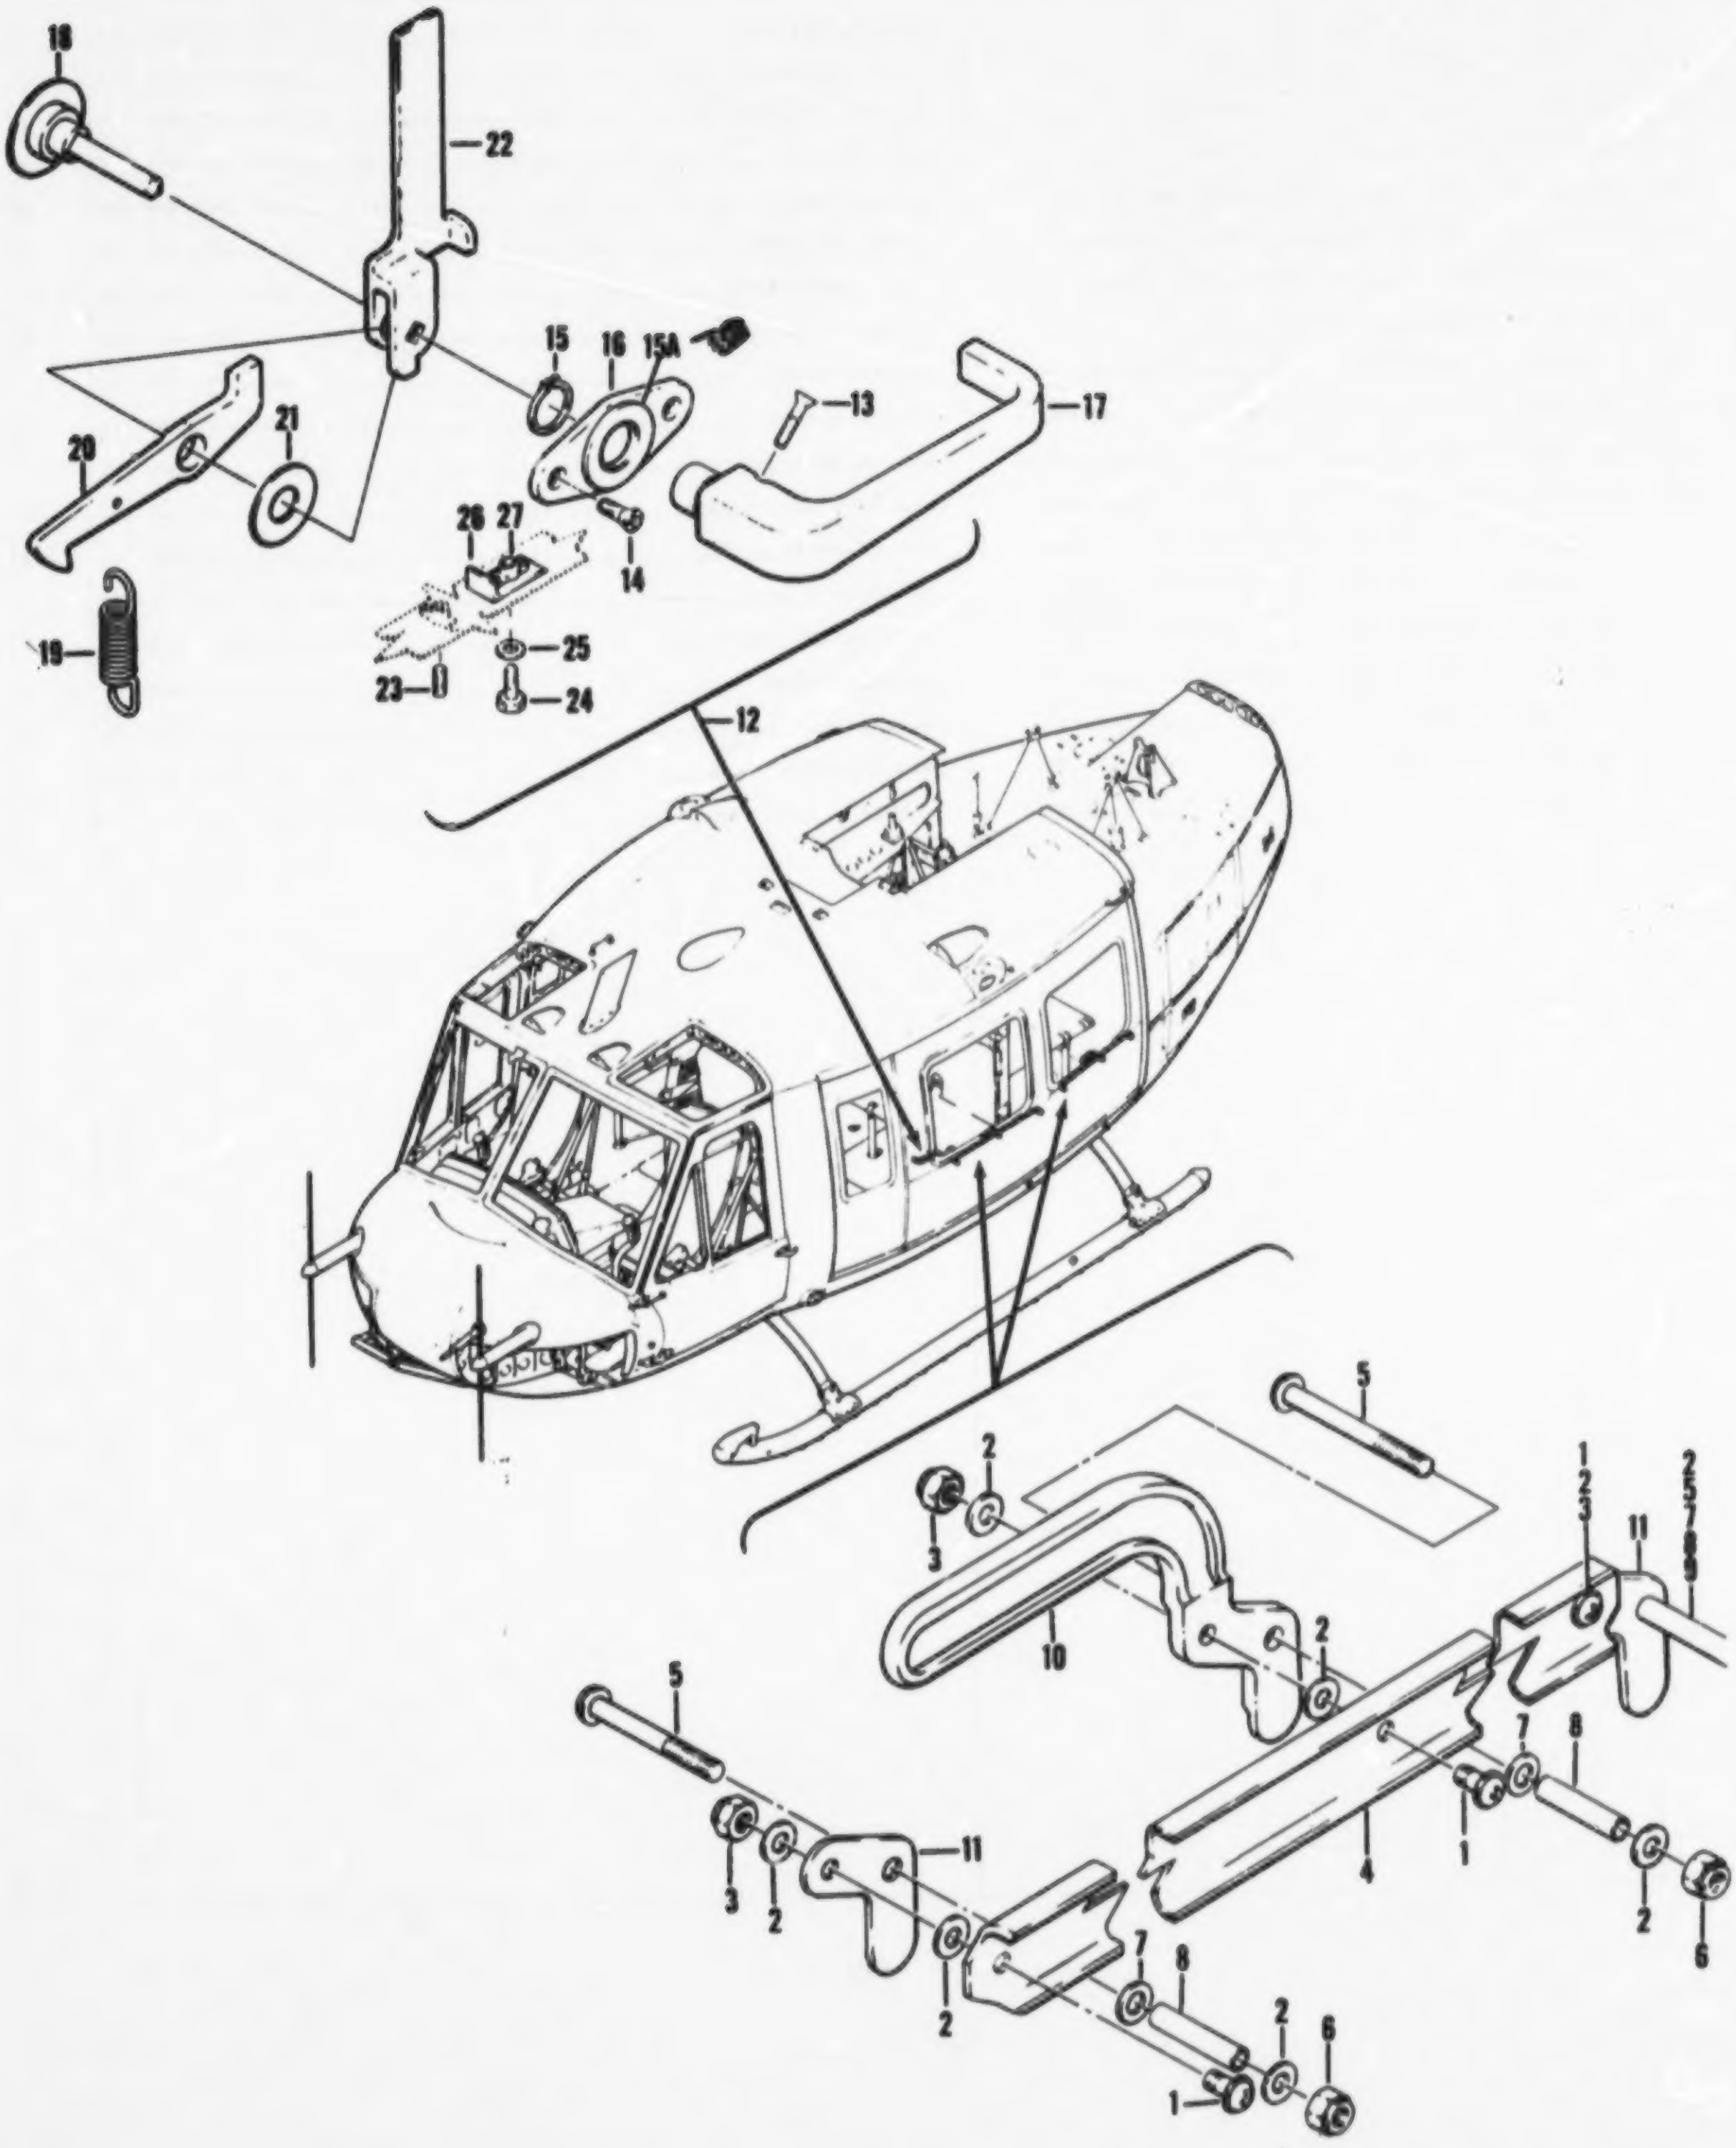
18
22
15
16
15A
13
17
21
20
26
27
14
19
25
23
24
12
5
2
3
10
1
2
3
11
2
5
7
8
9
2
5
7
8
1
3
2
11
4
2
6
2
7
8
2
6
1

Figure 48. Latch Installation, Cargo Door

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
48		XCFZZ		97499	205-030-543-1	LATCH INSTL SEE FIG.46 FOR NHA................UHE,UHH,UHV,UHX	EA	1
48	1	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	3
48	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	6
48	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	3
48	4	MFOZZ	1560-00-987-1355	97499	205-030-543-15	.CHANNEL,LATCH INSTA........................UHE,UHH,UHV,UHX	EA	1
48	5	PAOZZ	5305-00-282-8470	88044	AN525-10R18	.SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	3
48	6	PAOZZ	5310-00-616-3634	72962	22K2-02	.NUT,SELF-LOCKING...........................UHE,UHH,UHV,UHX	EA	3
48	7	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	6
48	8	MFOZZ	5365-00-987-1356	97499	205-030-543-17	.SPACER,SLEEVE..............................UHE,UHH,UHV,UHX	EA	3
48	9	PAOZZ	5365-00-809-9379	80205	NAS43DD3-51	.SPACER,SLEEVE..............................UHE,UHH,UHV,UHX	EA	1
48	10	PAOZZ	1560-00-966-9360	97499	205-030-542-1	.HANDLE,WINDOW,CARGO........................UHE,UHH,UHV,UHX	EA	1
48	11	PAOZZ	1560-00-966-9361	97499	205-030-543-11	.PLATE,LATCH,GUIDE..........................UHE,UHH,UHV,UHX	EA	1
48	12	XCFZZ		97499	205-031-515-1	LATCH INSTL-LH SEE FIG.46 FOR NHA............UHE,UHH,UHV,UHX	EA	1
48	12	XCFZZ		97499	205-031-515-2	LATCH INSTL-RH SEE FIG.46 FOR NHA............UHE,UHH,UHV,UHX	EA	1
48	13	PAOZZ	5305-00-958-5451	96906	MS35190-239	.SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	1
48	14	PBOZZ	5305-00-059-4568	96906	MS35190-253	.SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	2
48	15	PAOZZ	5365-00-803-7305	96906	MS16624-1062	.RING,RETAINING.............................UHE,UHH,UHV,UHX	EA	1
48	15A	PAOZZ	1680-01-113-0167	81996	1680-UH1-012-1	.INSERT,ESCUTCHEON,D ....UHE,UHH,UHV,UHX	EA	1
48	16	PAOZZ	5340-00-437-8949	20293	07-1000	.ESCUTCHEON,PLATE...........................UHE,UHH,UHV,UHX	EA	1
48	17	PAOZZ	1680-00-450-7746	97499	205-031-514-3	.HANDLE,DOOR................................UHE,UHH,UHV,UHX	EA	1
48	18	PAOZZ	1560-00-073-3308	97499	205-030-451-3	.SHAFT,LATCH,CARGO..........................UHE,UHH,UHV,UHX	EA	1
48	19	PAOZZ	5360-00-073-5434	97499	205-030-458-1	.SPRING.....................................UHE,UHH,UHV,UHX	EA	1
48	20	PAOZZ	5340-00-222-9259	97499	205-030-491-5	.HOOK,LATCH.................................UHE,UHH,UHV,UHX	EA	1
48	21	PAOZZ	5365-00-761-1996	97499	120-035-24-11	.SHIM.......................................UHE,UHH,UHV,UHX	EA	1
48	22	PAOZZ	5340-00-073-5436	97499	205-031-516-1	.HANDLE,LEFT HAND...........................UHE,UHH,UHV,UHX	EA	1
48	22	PAOZZ	5340-00-073-5437	97499	205-031-516-2	.HANDLE,RIGHT HAND..........................UHE,UHH,UHV,UHX	EA	1
48	23	PBOZZ	5305-00-724-6792	96906	MS51964-54	.SETSCREW...................................UHE,UHH,UHV,UHX	EA	1
48	24	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE...............................UHE,UHH,UHV,UHX	EA	1
48	25	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	1
48	26	PAOOD	1560-00-922-2714	97499	205-030-447-1	.STOP,LATCH,DOOR CAR........................UHE,UHH,UHV,UHX	EA	1
48	26	XAOZZ		97499	205-030-447-3	..STOP......................................UHE,UHH,UHV,UHX	EA	1
48	27	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL.......................UHE,UHH,UHV,UHX	EA	1

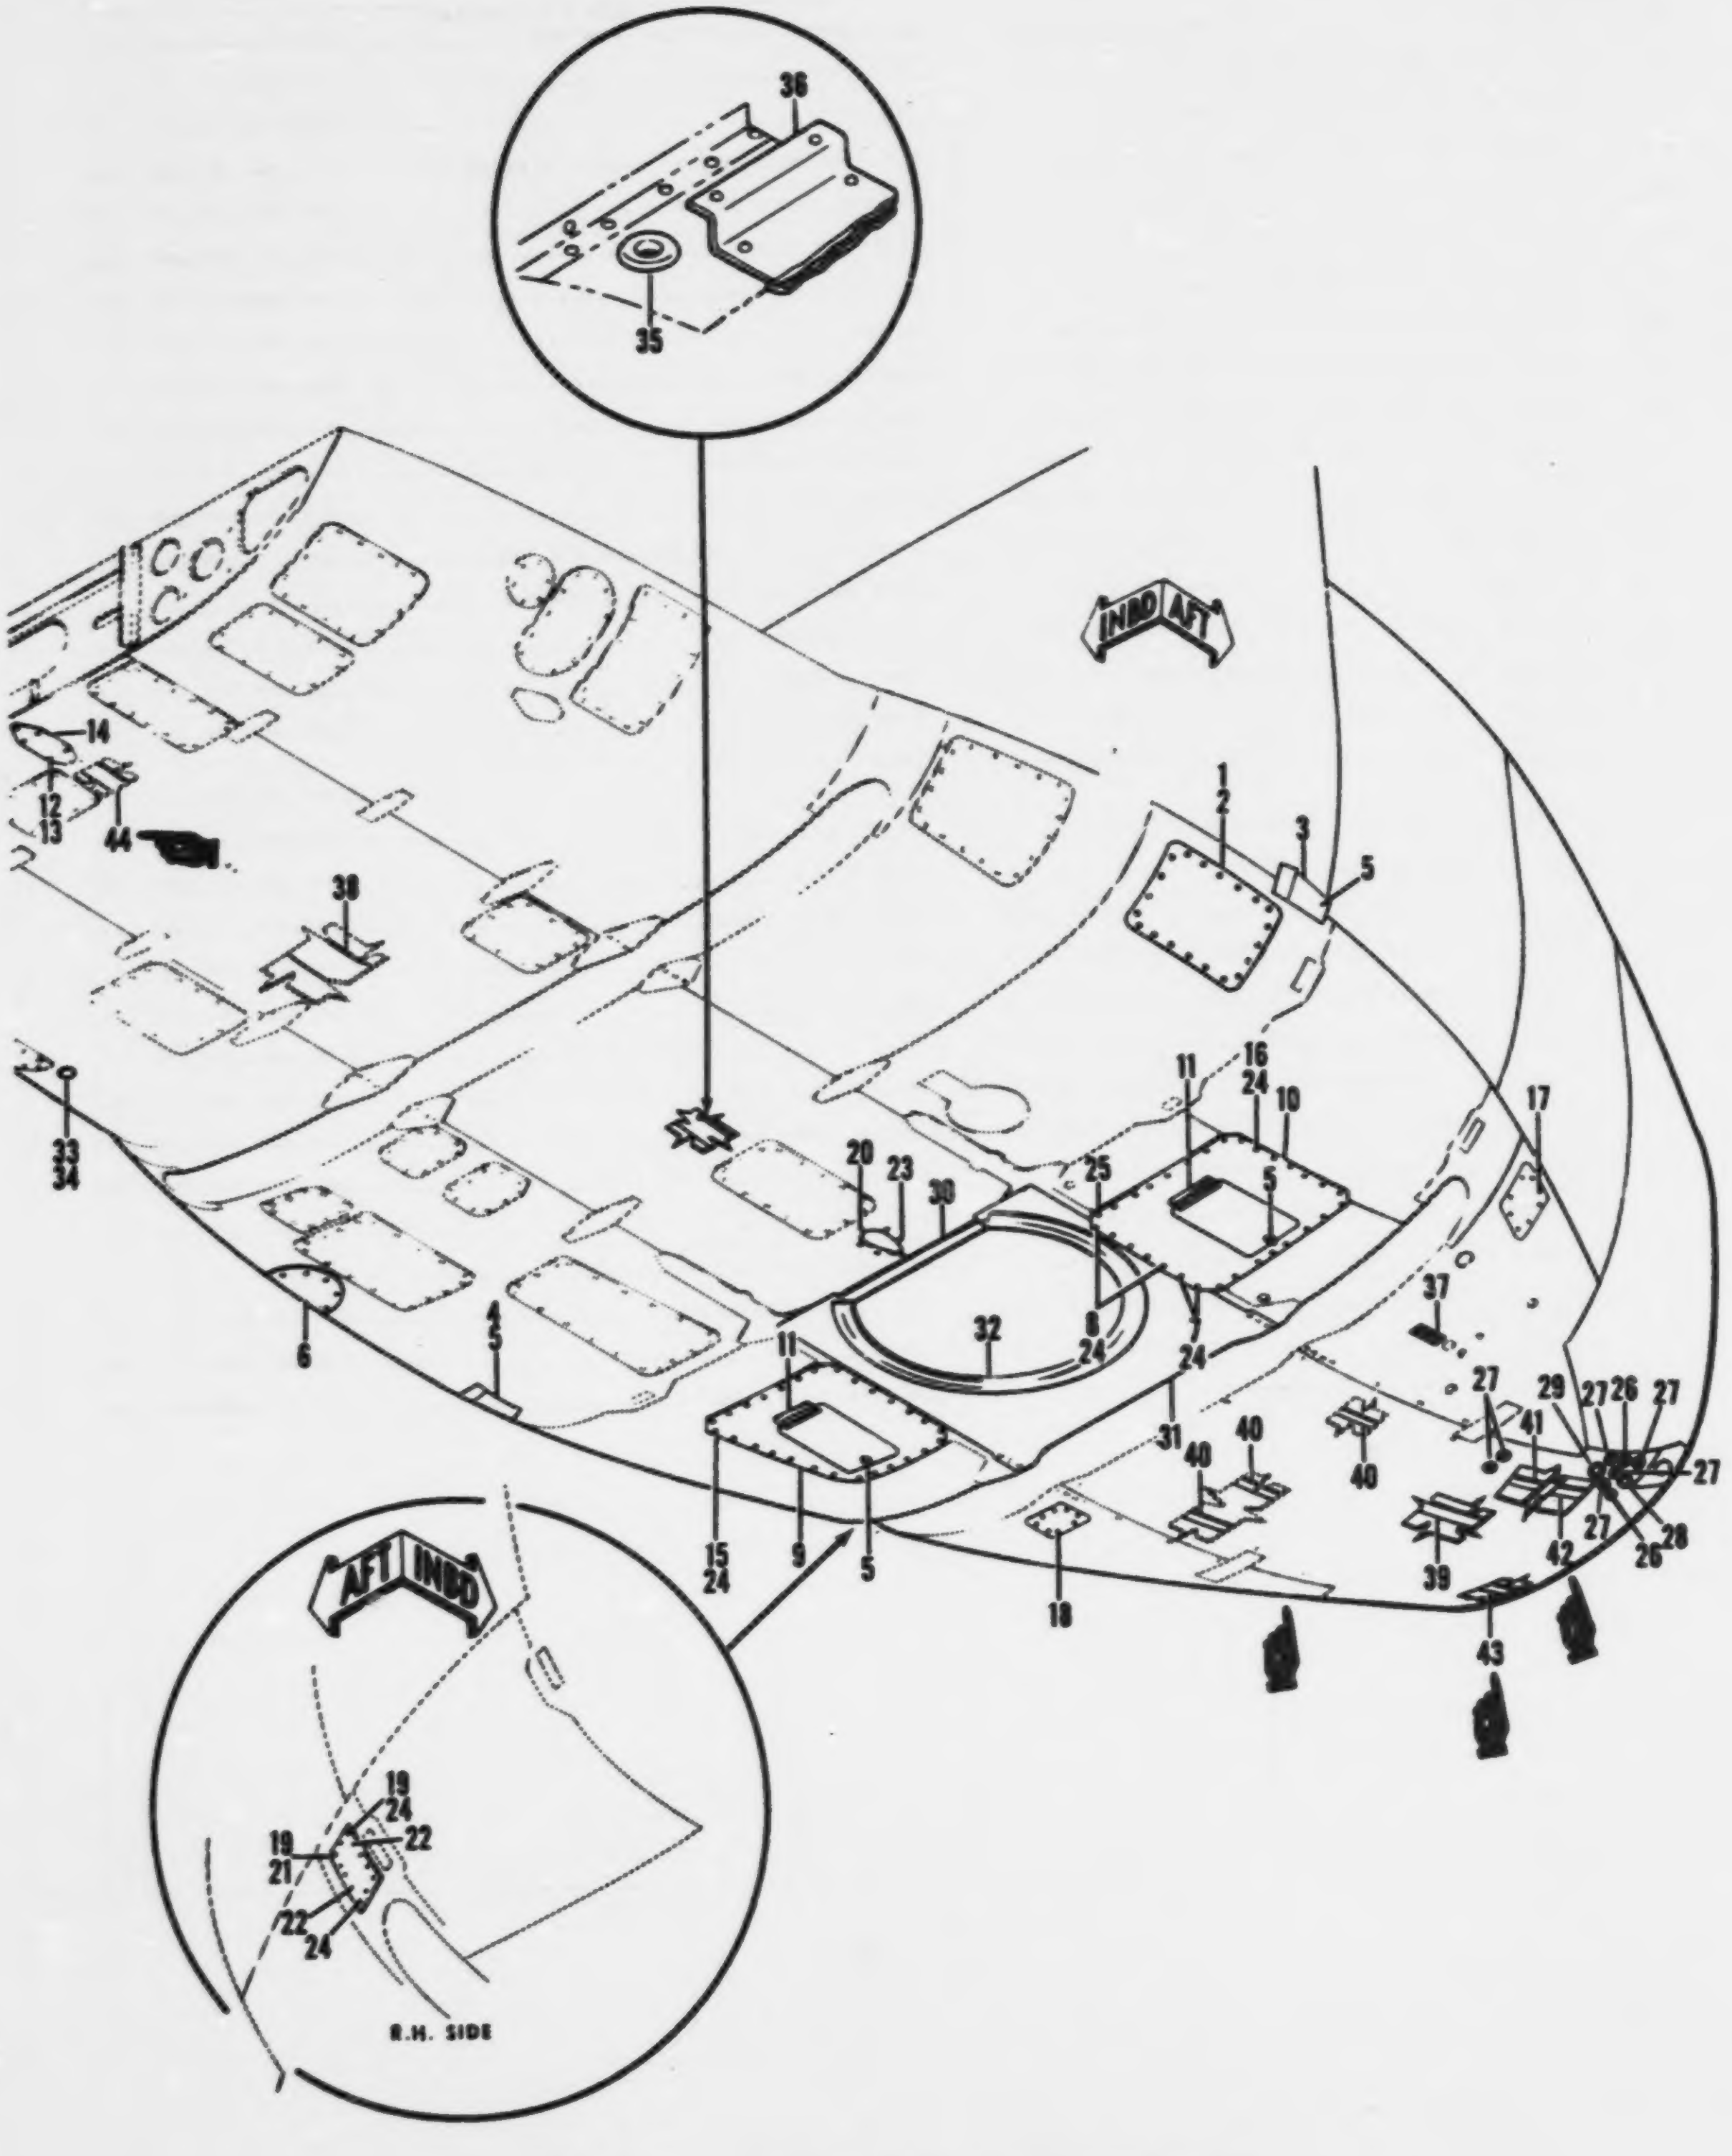
36
35
INBD
AFT
14
12
13
44
38
1
2
3
5
33
34
11
16
24
10
17
20
23
30
25
5
37
8
24
7
24
32
6
4
5
11
31
40
40
40
40
27
29
27
26
27
41
27
15
24
9
5
39
42
27
26
28
18
43
AFT
INBD
19
24
22
19
21
22
24
R.H. SIDE

Figure 49. Fuselage Assembly, Structure Aft

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
49		XCFZZ		97499	204-030-006-49	FUSELAGE ASSY USBL EFF 60-3546 THRU 60-3576 SEE FIG.19 FOR NHA....UHB	EA	1
49		XCFZZ		97499	204-030-006-55	FUSELAGE ASSY USBL EFF 60-3591 THRU 60-3619 SEE FIG.19 FOR NHA....UHB	EA	1
49		XCFZZ		97499	204-030-006-57	FUSELAGE ASSY USBL EFF 61-686 THRU 61-723 SEE FIG.19 FOR NHA ....UHB	EA	1
49		XCFZZ		97499	204-030-006-79	FUSELAGE ASSY USBL EFF 61-724 THRU 61-753 SEE FIG.19 FOR NHA ....UHB	EA	1
49		XCFZZ		97499	204-030-006-83	FUSELAGE ASSY USBL EFF 61-754 THRU 61-803 SEE FIG.19 FOR NHA ....UHB	EA	1
49		XCFZZ		97499	204-031-006-1	FUSELAGE ASSY USBL EFF 62-1872 THRU 62-1996 SEE FIG.19 FOR NHA....UHB	EA	1
49		XCFZZ		97499	204-031-006-13	FUSELAGE ASSY USBL EFF 62-1997 THRU 62-12555 SEE FIG.19 FOR NHA....UHB	EA	1
49		XCFZZ		97499	204-031-006-25	FUSELAGE ASSY USBL EFF 63-8500 THRU 63-8658 SEE FIG.19 FOR NHA....UHB	EA	1
49		XCFZZ		97499	204-031-006-49	FUSELAGE ASSY USBL EFF 63-8659 THRU 63-12952 SEE FIG.19 FOR NHA....UHB	EA	1
49		XCFZZ		97499	204-031-006-71	FUSELAGE ASSY USBL EFF 64-13902 THRU 64-14100 SEE FIG.19 FOR NHA....UHB	EA	1
49		XCFZZ		97499	204-031-006-109	FUSELAGE ASSY USBL EFF 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA....UHC,UHM	EA	1
49		XCFZZ		97499	204-032-006-1	FUSELAGE ASSY USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA....UHC,UHM	EA	1
49		XCFZZ		97499	204-032-006-21	FUSELAGE ASSY USBL EFF 66-492 THRU 66-15022 SEE FIG.19 FOR NHA....UHC,UHM	EA	1
49		XCFZZ		97499	204-032-006-27	FUSELAGE ASSY USBL EFF 66-15023 & SUBSEQUENT SEE FIG.19 FOR NHA....UHC,UHM	EA	1
49		XCFZZ		97499	204-031-007-1	.SKIN INSTL U/O PN 204-030-006-49 & -55....UHB	EA	1
49		XCFZZ		97499	204-031-007-3	.SKIN INSTL U/O PN 204-030-006-57,-79, & -83....UHB	EA	1
49		XCFZZ		97499	204-031-007-7	.SKIN INSTL U/O PN 204-031-006-1....UHB	EA	1
49		XCFZZ		97499	204-031-007-267	.SKIN INSTL U/O PN 204-031-006-13....UHB	EA	1
49		XCFZZ		97499	204-031-104-1	.SKIN INSTL,CENTER U/O PN 204-031-006-25 & -49....UHB	EA	1
49		XCFZZ		97499	204-031-104-95	.SKIN INSTL,CENTER U/O PN 204-031-006-71....UHB	EA	1
49		XCFZZ		97499	204-031-104-101	.SKIN INSTL,CENTER U/O PN 204-031-006-109, 204-032-006-1,-21,& -27....UHC,UHM	EA	1
49	1	MFOZZ	1560-00-983-4047	97499	204-030-021-27	..DOOR ASSEMBLY U/O PN 204-031-007-7 & -267....UHB	EA	1
49	2	MFOZZ	1560-00-H25-5815	97499	204-030-021-17	...DOOR USBL EFF 61-686 THRU 61-803....UHB	EA	1
49	3	XDOZZ	1560-00-983-4045	97499	204-030-021-23	..COVER,ACCESS -LH U/O PN 204-031-007-7 & -267....UHB	EA	1
49	4	MFOZZ	1560-00-983-4046	97499	204-030-021-25	..COVER ASSEMBLY -RH U/O PN 204-031-007-7 & -267....UHB	EA	1
49	5	PAOZZ	5325-00-298-7026	72794	R5	..RECEPTACLE,TURNL....UHB,UHC,UHM	EA	14
49	6	MFOZZ	1560-00-075-3373	97499	204-031-007-253	..COVER,ACCESS U/O PN 204-031-007-7 & -267....UHB	EA	1
49	7	PAOZZ	5305-00-180-0014	88044	AN525-10R12	..SCREW,MACHINE....UHB,UHC,UHM	EA	2
49	8	PAOZZ	5305-00-180-0014	88044	AN525-10R12	..SCREW,MACHINE....UHB,UHC,UHM	EA	6
49	9	MFOZZ	1560-00-707-7621	97499	204-031-007-53	..DOOR ASSEMBLY....UHB,UHC,UHM	EA	1
49	10	MFOZZ	1560-00-707-7628	97499	204-031-007-85	..DOOR ASSEMBLY....UHB	EA	1
49	11	MFOZZ	5315-00-997-3109	96906	MS20253-2-440	...PIN,STRAIGHT,HEADED....UHB,UHC	EA	1
49	12	PAOZZ	5305-00-889-3000	96906	MS35206-230	..SCREW,MACHINE....UHB,UHC,UHM	EA	6
49	13	PBOZZ	5310-00-275-4317	88044	AN362C632	..NUT,SELF-LOCKING,PL....UHB,UHC,UHM	EA	6
49	13	PAOZZ	5310-00-964-2800	96906	MS27130-22K	..NUT,PLAIN,BLIND RIVET U/O PN 204-031-007-7 & -267....UHB	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
49	14	MFOZZ	1560-00-715-2233	97499	204-031-251-1	..COVER,ACCESS..........UHB,UHC,UHM	EA	1
49	15	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE..........UHB,UHC	EA	25
49	16	PAOZZ	5305-00-781-9057	88044	AN525-10R8	..SCREW,MACHINF..........UHB,UHC,UHM	EA	25
49	17	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE U/O PN 204-031-007-7..........UHB	EA	8
49	18	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE U/O PN 204-031-007-7..........UHB	EA	8
49	19	PAOZZ	5305-00-702-0609	96906	MS24694S50	..SCREW,MACHINE..........UHB,UHC,UHM	EA	3
49	20	PAOZZ	5310-00-619-3547	80205	NAS696A06	..NUT,SELF-LOCKING,PL..........UHB	EA	1
49	21	PAFZZ	5310-00-021-3884	96906	MS21086L3	..NUT,SELF-LOCKING,PL U/O PN 204-031-007-1..........UHB	EA	1
49	22	PAOZZ	5310-00-734-1850	96906	MS21071L3	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	14
49	23	PAOZZ	5310-00-655-5892	80205	NAS698A06	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	5
49	24	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	35
49	25	PAOZZ	5310-00-761-4221	96906	MS21073L3	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	1
49	26	PAOZZ	5325-00-263-6632	96906	MS35489-6	..GROMMET,NONMETALLIC..........UHB,UHC,UHM	EA	3
49	27	PAOZZ	5325-00-291-9366	96906	MS35489-11	..GROMMET,NONMETALLIC..........UHB,UHC,UHM	EA	5
49	28	PAOZZ	5325-00-174-9038	96906	MS35489-20	..GROMMET,NONMETALLIC..........UHB,UHC,UHM	EA	1
49	29	PAOZZ	5325-00-276-6343	96906	MS35489-23	..GROMMET,NONMETALLIC..........UHB,UHC,UHM	EA	1
49	30	PAOZZ	5340-00-953-5033	97499	204-031-007-77	..BUMPER..........UHB,UHC,UHM	EA	1
49	31	PBFFF	1560-00-911-9984	97499	204-030-772-39	..PANEL,FUSELAGE,AIRC..........UHB,UHC,UHM	EA	1
49	32	PCFZZ	9390-00-967-3385	97499	204-030-772-25	...NONMETALLIC RUBBER SPECIAL..........UHB,UHC,UHM	EA	1
49	33	PAOZZ	5935-00-432-9340	96906	MS90298-2	..CONNECTOR,RECEPTACL U/O 204-031-007- 7 & -267..........UHB	EA	1
49	34	MFOZZ	1560-00-H25-5709	97499	204-075-185-3	..BRACKET U/O PN 204-031-007-267, 204-031-104-1,-95,& -101 ....UHB,UHC,UHM	EA	1
49	35	PAOZZ	5325-00-174-5315	96906	MS35489-7	..GROMMET,NONMETALLIC..........UHB,UHC,UHM	EA	1
49	36	MFOZZ	1560-00-H26-3250	97499	204-031-139-3	..BRACKET ASSEMBLY..........UHB,UHC,UHM	EA	1
49	37	MFOZZ	1560-00-886-1308	97499	204-070-829-1	..STENCIL,AUXILIARY..........UHB,UHC,UHM	EA	1
49	38	PBOZZ	1560-00-119-4124	97499	204-031-876-3	..STIFFENER,LOWER FUS..........UHB,UHC,UHM	EA	1
49	38	PBOZZ	1560-00-119-4151	97499	204-031-104-61	..STIFFENER,LOWER FUS..........UHB,UHC,UHM	EA	2
49	39	PBOZZ	1560-00-121-6701	97499	204-031-007-69	..SKIN,AIRCRAFT..........UHB,UHC,UHM	EA	1
49	40	PBOZZ	1560-00-119-4153	97499	204-031-104-57	..STIFFENER,LOWER FUS..........UHB,UHC,UHM	EA	3
49	41	PBOZZ	1560-00-119-4152	97499	204-031-104-59	..STIFFENER,LOWER FUS..........UHB,UHC,UHM	EA	2
49	42	PBOZZ	1560-00-119-4150	97499	204-031-104-63	..STIFFENER,LOWER FUS..........UHB,UHC,UHM	EA	1
49	43	PBOZZ	1560-00-119-4149	97499	204-031-104-64	..STIFFENER,LOWER FUS..........UHB,UHC,UHM	EA	1
49	44	PBOZZ	1560-00-119-4154	97499	204-031-104-49	..SUPPORT,LOWER FUSEL..........UHB,UHC,UHM	EA	1

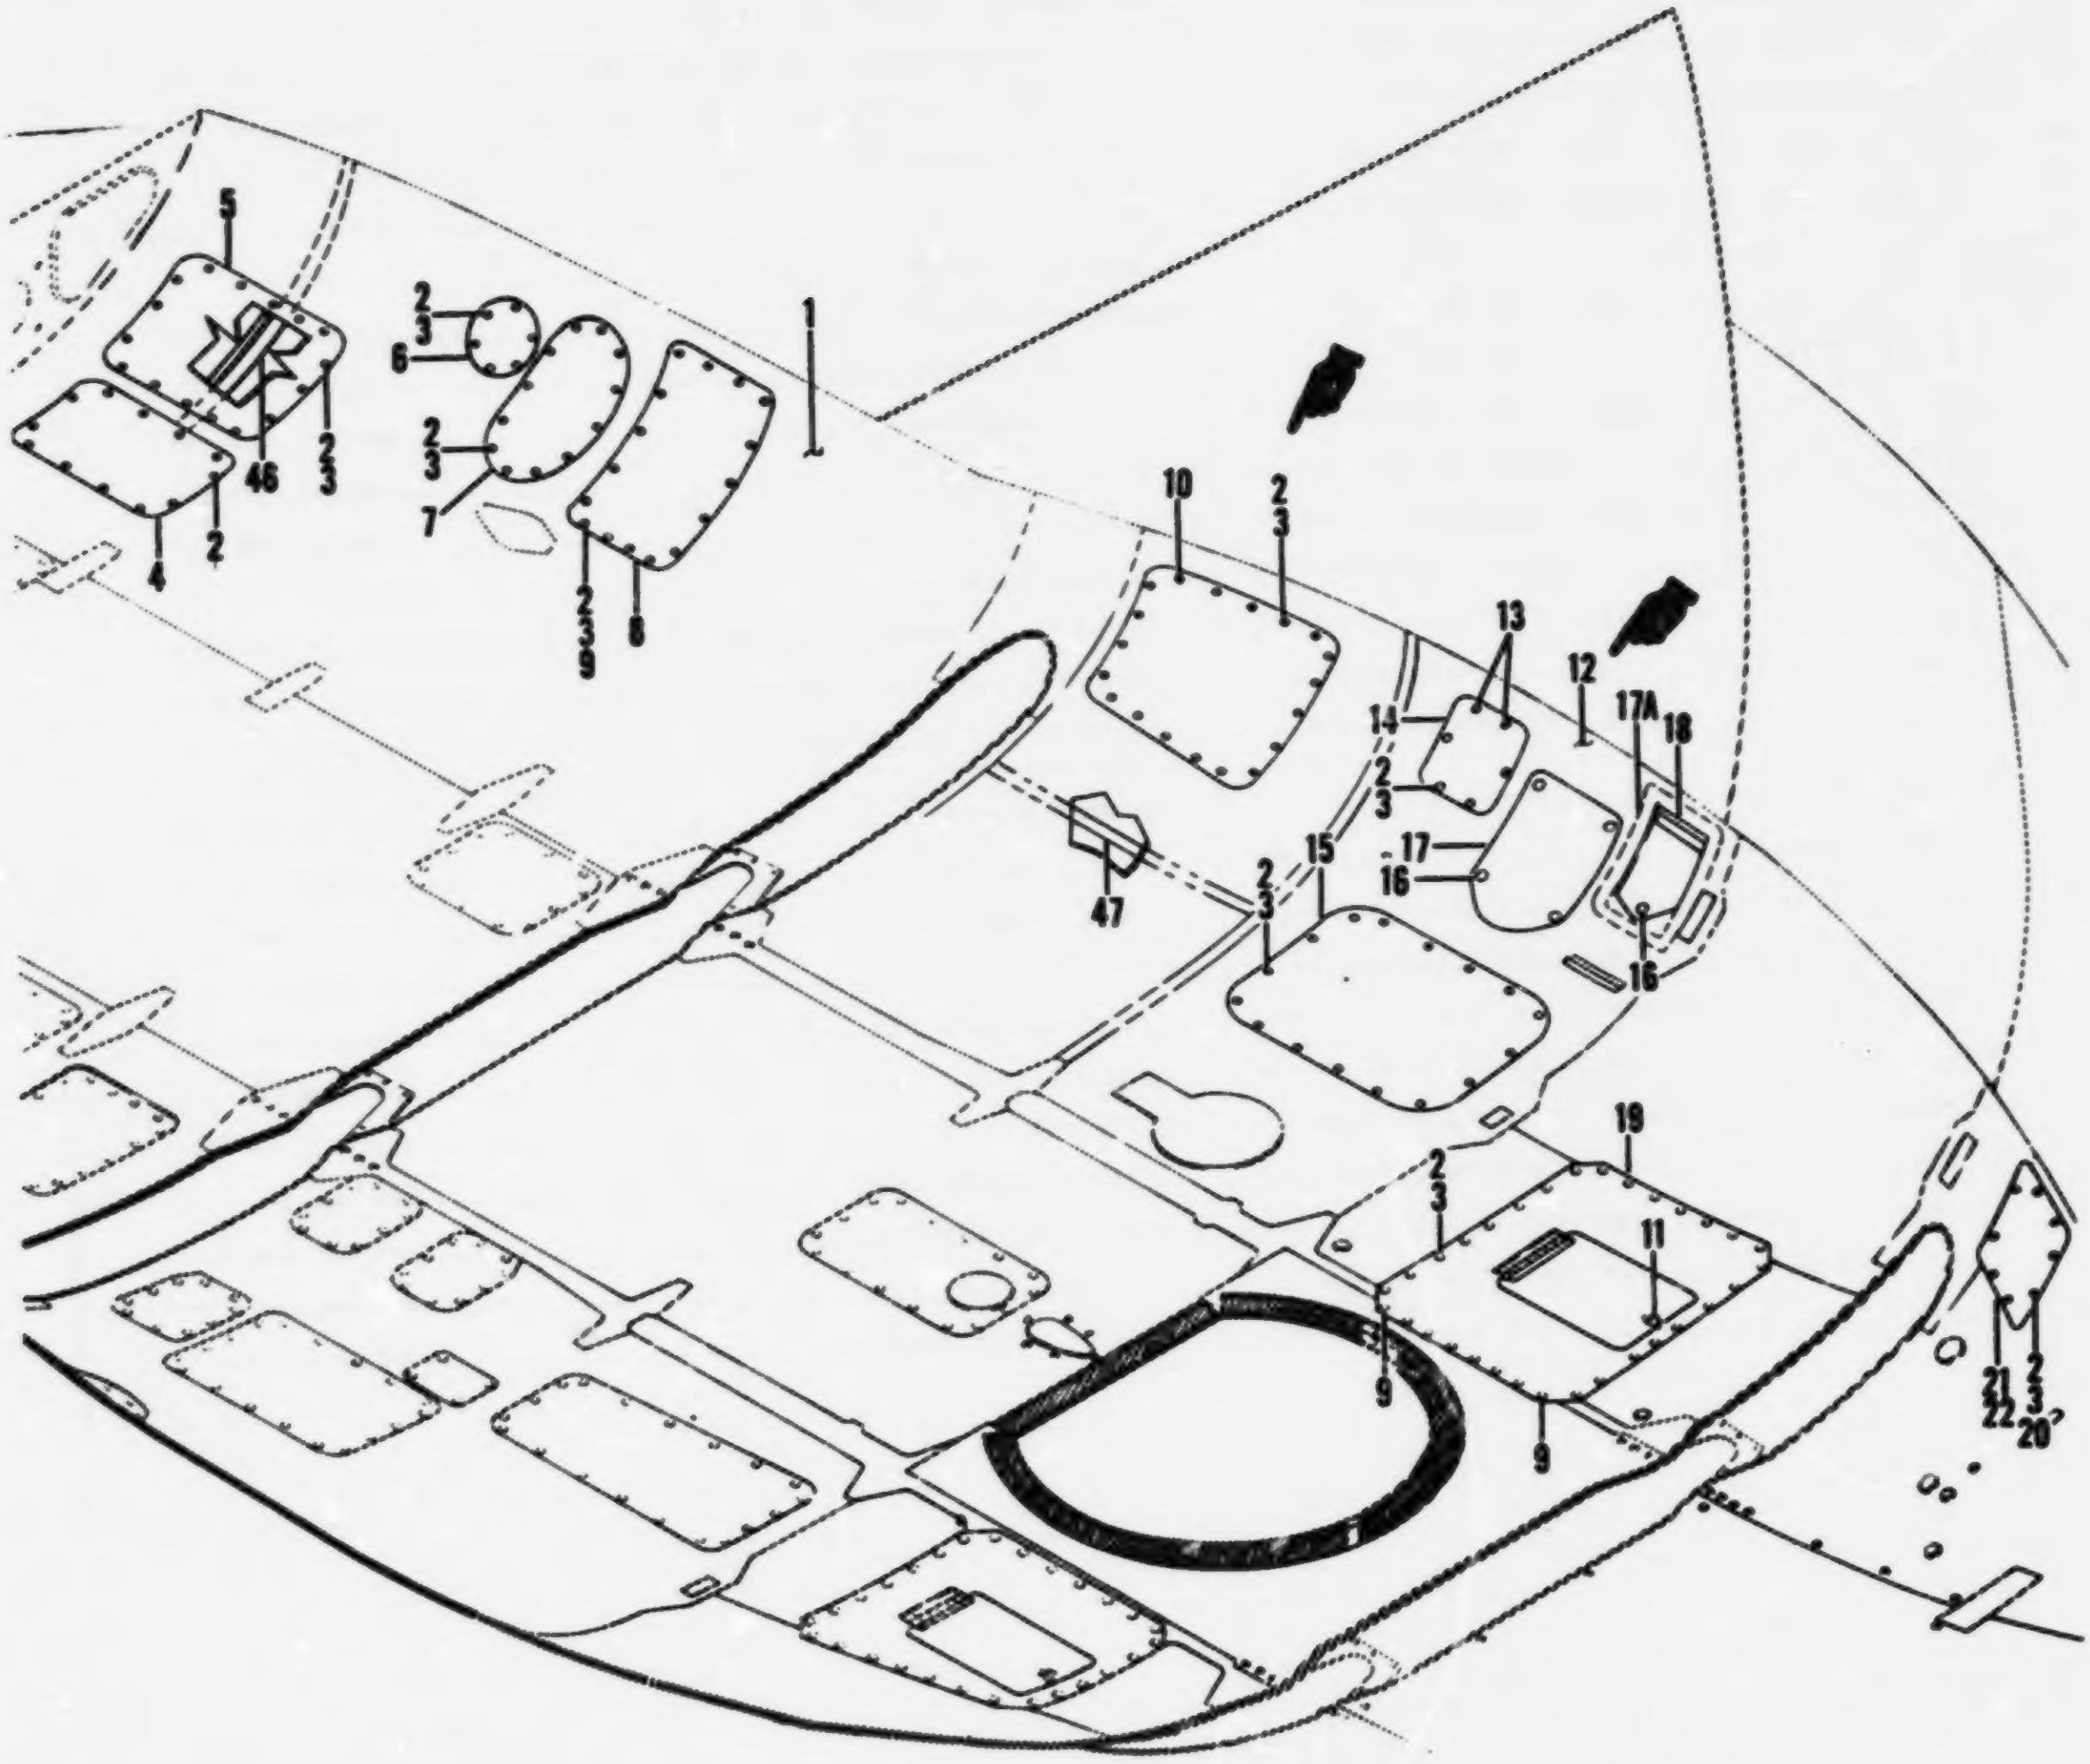
5
2
3
6
1
2
3
7
46
2
3
4
2
2
3
9
8
10
2
3
13
12
14
17A
18
2
3
17
16
15
2
3
47
16
19
2
3
11
9
9
21
22
2
3
20

Figure 50. Fuselage Assembly, Structure Aft
(Sheet 1 of 2)

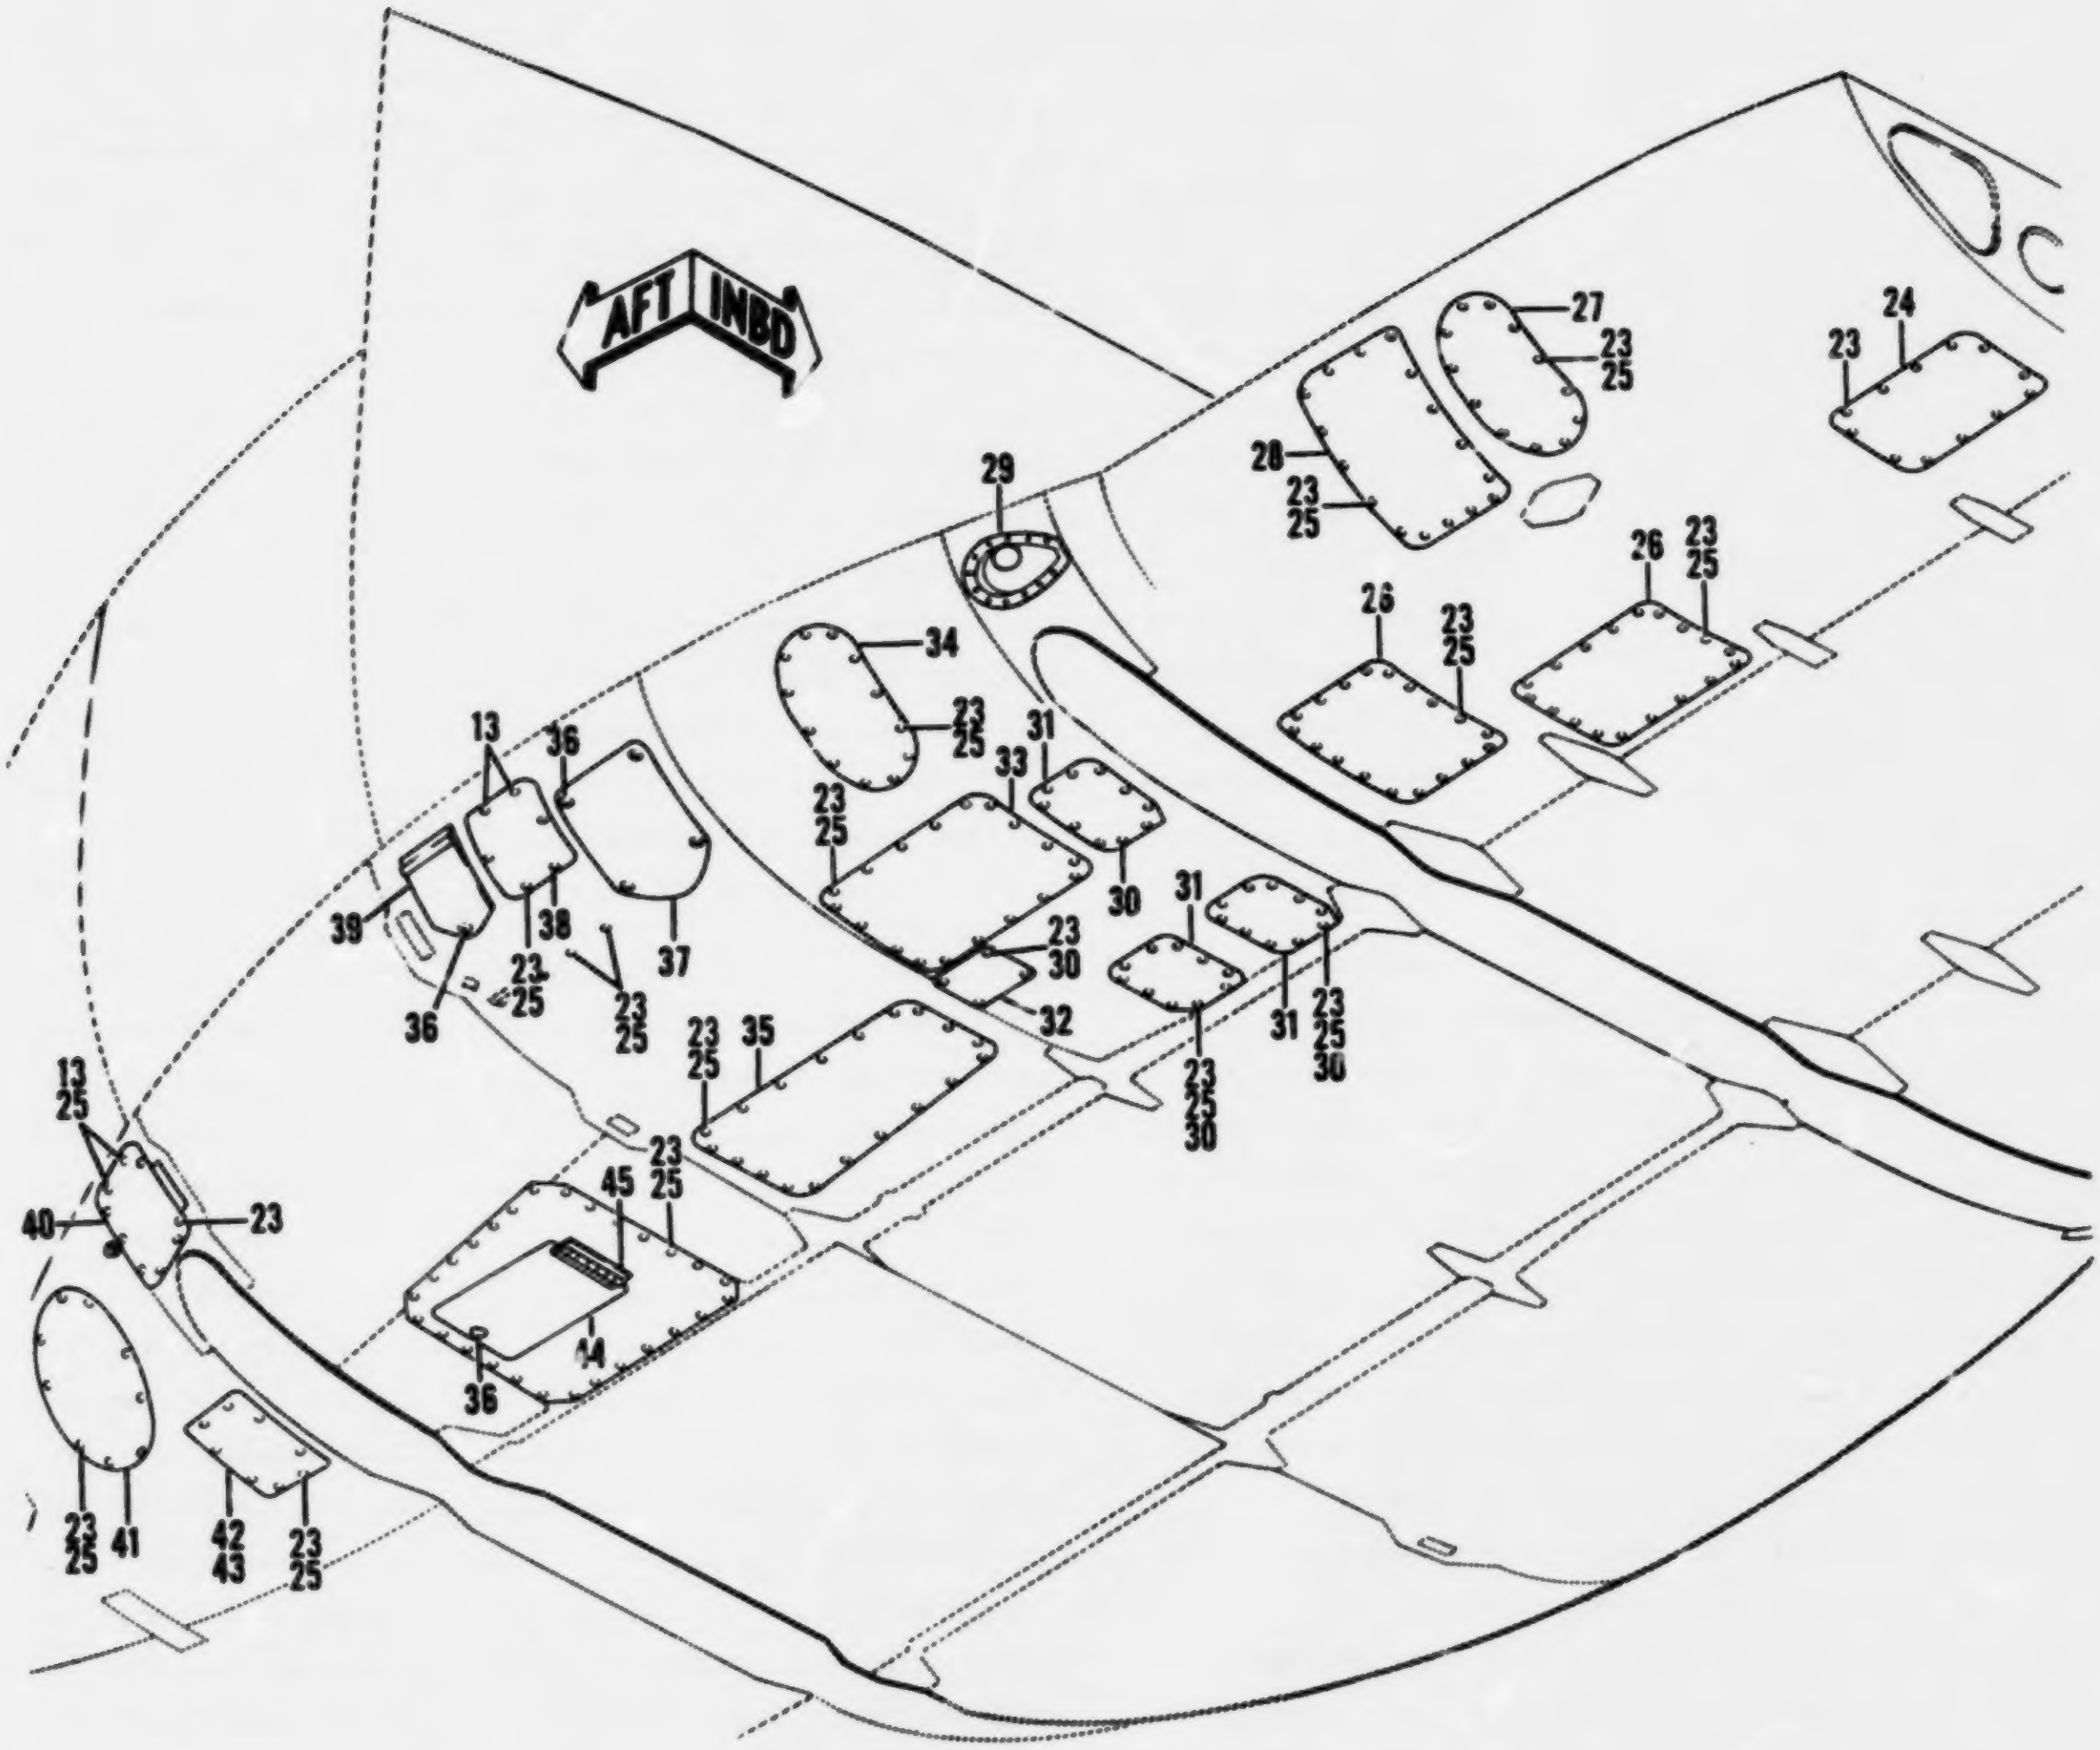
AFT
INBD
27
23
25
24
23
28
23
25
29
26
23
25
26
23
25
34
23
25
31
33
23
25
30
13
36
39
38
37
23
30
31
32
23
25
36
23
25
31
23
25
30
23
25
35
23
25
30
13
25
23
25
45
40
23
14
36
23
25
41
42
43
23
25

Figure 50. Fuselage Assembly, Structure Aft
(Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
50		XCFZZ		97499	204-031-006-25	FUSELAGE ASSY USBL EFF 63-8500 THRU 63-8658 SEE FIG.19 FOR NHA........................UHB	EA	1
50		XCFZZ		97499	204-031-006-49	FUSELAGE ASSY USBL EFF 63-8659 THRU 63-12952 SEE FIG.19 FOR NHA........................UHB	EA	1
50		XCFZZ		97499	204-031-006-71	FUSELAGE ASSY USBL EFF 64-13902 THRU 64-14100 SEE FIG.19 FOR NHA........................UHB	EA	1
50		XCFZZ		97499	204-031-006-109	FUSELAGE ASSY USBL EFF 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA........................UHC,UHM	EA	1
50		XCFZZ		97499	204-032-006-1	FUSELAGE ASSY USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA........................UHC,UHM	EA	1
50		XCFZZ		97499	204-032-006-21	FUSELAGE ASSY USBL EFF 66-492 THRU 66-15022 SEE FIG.19 FOR NHA........................UHC,UHM	EA	1
50		XCFZZ		97499	204-032-006-27	FUSELAGE ASSY USBL EFF 66-15023 & SUBSEQUENT SEE FIG.19 FOR NHA........................UHC,UHM	EA	1
50		XCFZZ		97499	204-031-006-27	.BEAM ASSY-LH U/O PN 204-031-006-25 & -49..................UHB	EA	1
50		XCFZZ		97499	204-031-006-73	.BEAM ASSY-LH U/O PN 204-031-006-71........................UHB	EA	1
50		XCFZZ		97499	204-031-006-111	.BEAM ASSY-LH FASTENER.................................UHC,UHM	EA	1
50		XCFZZ		97499	204-032-006-3	.BEAM ASSY-LH FASTENER.................................UHC,UHM	EA	1
50		XCFZZ		97499	204-032-006-23	.BEAM ASSY-LH U/O PN 204-032-006-21...................UHC,UHM	EA	1
50		XCFZZ		97499	204-032-006-29	.BEAM ASSY-LH U/O PN 204-032-006-27...................UHC,UHM	EA	1
50		XCFZZ		97499	204-031-006-29	.BEAM ASSY-RH U/O PN 204-031-006-25 & -49..................UHB	EA	1
50		XCFZZ		97499	204-031-006-75	.BEAM ASSY-RH U/O PN 204-031-006-71........................UHB	EA	1
50		XCFZZ		97499	204-031-006-113	.BEAM ASSY-RH U/O PN 204-031-006-109..................UHC,UHM	EA	1
50		XCFZZ		97499	204-032-006-5	.BEAM ASSY-RH U/O PN 204-032-006-1....................UHC,UHM	EA	1
50		XCFZZ		97499	204-032-006-37	.BEAM ASSY-RH U/O PN 204-032-006-21...................UHC,UHM	EA	1
50		XCFZZ		97499	204-032-006-25	.BEAM ASSY-RH U/O PN 204-032-006-27...................UHC,UHM	EA	1
50	1	XCFZZ		97499	204-031-102-1	..SKIN INSTL-LH U/O PN 204-031-006-27 & -73.............UHB	EA	1
50	1	XCFZZ		97499	204-031-102-11	..SKIN INSTL-LH U/O PN 204-031-006-111 & 204-032-006-3 ....UHC,UHM	EA	1
50	1	XCFZZ		97499	204-031-102-137	..SKIN INSTL-LH U/O PN 204-032-006-23 & -29..........UHC,UHM	EA	1
50	2	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE...............................UHB,UHC,UHM	EA	V
50	3	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL.........................UHB,UHC,UHM	EA	V
50	4	MDOZZ	1560-00-993-1943	97499	204-031-102-35	...COVER,ACCESS................................UHB,UHC,UHM	EA	1
50	5	MDOZZ	1560-00-993-1945	97499	204-031-102-37	...COVER,ACCESS................................UHB,UHC,UHM	EA	1
50	6	MDOZZ	1560-00-993-1946	97499	204-031-102-39	...COVER,ACCESS................................UHB,UHC,UHM	EA	1
50	7	MDOZZ	1560-00-993-1947	97499	204-031-102-41	...COVER,ACCESS................................UHB,UHC,UHM	EA	1
50	8	PBDZZ	1560-00-454-8930	97499	204-031-102-45	...COVER,ACCESS................................UHB,UHC,UHM	EA	1
50	9	PAOZZ	5305-00-180-0014	88044	AN525-10R12	...SCREW,MACHINE...............................UHB,UHC,UHM	EA	8
50	10	PBDZZ	1560-00-993-1956	97499	204-031-102-43	...COVER,ACCESS................................UHB,UHC,UHM	EA	1
50	11	PADZO	5325-00-298-7026	72794	R5	...RECEPTACLE, TURNLOCK........................UHB,UHC,UHM	EA	1
50	12	PBDZZ	1560-00-121-6692	97499	204-031-102-27	...SKIN,AIRCRAFT...............................UHB,UHC,UHM	EA	1
50	13	PAOZZ	5305-00-702-0609	96906	MS24694S50	...SCREW,MACHINE...UHB	EA	2
50	14	MFOZZ	1560-00-793-0523	97499	204-030-021-11	...COVER,ACCESS U/O PN 204-031-102-1......................UHB	EA	1
50	15	MFOZZ	1560-00-983-4047	97499	204-030-021-27	...DOOR ASSEMBLY...............................UHB,UHC,UHM	EA	1
50	16	PAOZZ	5325-00-298-7026	72794	R5	...RECEPTACLE,TURNL............................UHB,UHC,UHM	EA	5
50	17	XDOZZ	1560-00-946-2402	97499	204-030-021-19	...COVER,ACCESS................................UHB,UHC,UHM	EA	1
50	17A	PADZZ	1560-00-120-0886	97499	204-030-012-1	...SUPPORT ASSEMBLY,FU.........................UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
50	18	XDOZZ	1560-00-983-4045	97499	204-030-021-23	...COVER,ACCESS..................UHB,UHC,UHM	EA	1
50	19	MFOOZ	1560-00-707-7628	97499	204-031-007-85	..DOOR ASSEMBLY U/O PN 204-031-102-1..........UHB	EA	1
50	19	MFOZZ	1560-00-942-9642	97499	204-031-102-111	..DOOR ASSEMBLY,FUSEL U/O PN 204-031-102-11 & -137 ....UHC,UHM	EA	1
50	20	PAOZZ	5310-00-734-1850	96906	MS21071L3	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	2
50	21	MFOZZ	1560-00-987-5201	97499	204-031-007-205	..COVER,DOOR ASSEMBLY..........UHB	EA	1
50	22	PAOZZ	1560-00-969-9205	97499	204-030-026-1	..SUPPORT ASSEMBLY, LH..........UHB,UHC,UHM	EA	1
50		XCFZZ		97499	204-031-103-1	..SKIN INSTL-RH U/O PN 204-031-006-29 & -75 USBL EFF 63-8500 THRU 64-14034..........UHB	EA	1
50		XCFZZ		97499	204-031-103-11	..SKIN INSTL-RH U/O PN 204-031-006-75 & 113 USBL EFF (UH-1B) 64-14035 THRU 64-14100 & (UH-1C) 64-14101 THRU 64-14191 ....UHB,UHC,UHM	EA	1
50		XCFZZ		97499	204-031-103-15	..SKIN INSTL-RH U/O PN 204-032-006-5,-25,& -37.......UHC,UHM	EA	1
50	23	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE..........UHB,UHC,UHM	EA	V
50	24	MFOZZ	1560-00-071-0856	97499	204-031-103-47	...COVER,ACCESS..........UHB,UHC,UHM	EA	1
50	25	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	V
50	26	MFOZZ	1560-00-071-0859	97499	204-031-103-41	...COVER,ACCESS,AIRCRA..........UHB,UHC,UHM	EA	2
50	27	MFOZZ	1560-00-071-0857	97499	204-031-103-45	...COVER,ACCESS,AIRCRA..........UHB,UHC,UHM	EA	1
50	28	MFOZZ	1560-00-071-0858	97499	204-031-103-43	...COVER,ACCESS,AIRCRA..........UHB,UHC,UHM	EA	1
50	29	PBOZZ	1560-00-997-6624	97499	204-030-538-16	...FAIRING ASSY..........UHB,UHC,UHM	EA	1
50	30	PAOZZ	5310-00-734-1850	96906	MS21071L3	...NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	2
50	31	MFOZZ	1560-00-071-0860	97499	204-031-103-39	...COVER,ACCESS,AIRCRA..........UHB,UHC,UHM	EA	3
50	32	MFOZZ	1560-00-075-3374	97499	204-031-007-273	...COVER,ACCESS..........UHB,UHC,UHM	EA	1
50	33	MFOZZ	1560-00-071-0862	97499	204-031-103-35	...COVER,ACCESS,AIRCRA..........UHB,UHC,UHM	EA	1
50	34	MFOZZ	1560-00-075-3373	97499	204-031-007-253	...COVER,ACCESS..........UHB,UHC,UHM	EA	1
50	35	MFOZZ	1560-00-071-0861	97499	204-031-103-37	...COVER,ACCESS,AIRCRA..........UHB,UHC,UHM	EA	1
50	36	PAOZZ	5325-00-298-7026	72794	R5	...RECEPTACLE, TURNLOCK..........UHB,UHC,UHM	EA	4
50	37	MFOZZ	1560-00-065-6908	97499	204-030-021-21	...COVER,ACCESS..........UHB,UHC,UHM	EA	1
50	38	MFOZZ	1560-00-993-1863	97499	204-030-021-13	...COVER,ACCESS,AIRCRA U/O PN 204-030-103-1..........UHB	EA	1
50	39	MFOZZ		97499	204-030-021-25	...COVER ASSEMBLY..........UHB,UHC,UHM	EA	1
50	40	MFOZZ	1560-00-071-0855	97499	204-031-103-55	...COVER USBL EFF <UH-1C@ 64-14100 THRU 64-14191 ....UHB,UHC,UHM	EA	1
50	41	MFOZZ	1560-00-071-0854	97499	204-031-103-59	...COVER USBL EFF <UH-1C@ 64-14100 THRU 64-14191 ....UHB,UHC,UHM	EA	1
50	42	MFOZZ	1560-00-987-5202	97499	204-031-007-201	...COVER,DOOR ASSEMBLY..........UHB,UHC,UHM	EA	1
50	43	PAOZZ	1560-00-969-9206	97499	204-030-026-3	...SUPPORT ASSEMBLY, RH..........UHB,UHC,UHM	EA	1
50	44	PBOZZ	1560-00-461-4366	97499	204-031-026-1	...ADAPTER,INTAKE,AIR..........UHB	EA	1
50	44	MFOZZ		97499	204-031-007-53	...DOOR ASSEMBLY..........UHB,UHC,UHM	EA	1
50	45	MFOZZ		96906	MS20253-2-440	....PIN,HINGE..........UHB,UHC,UHM	EA	1
50	46	MOOZZ	1560-00-H02-9686	97499	204-031-102-53	..STIFFENER,FUSELAGE..........UHB,UHC,UHM	EA	1
50	47	PBOZZ	1560-00-121-6691	97499	204-031-102-59	..STIFFENER,LOWER FUS..........UHB,UHC,UHM	EA	1

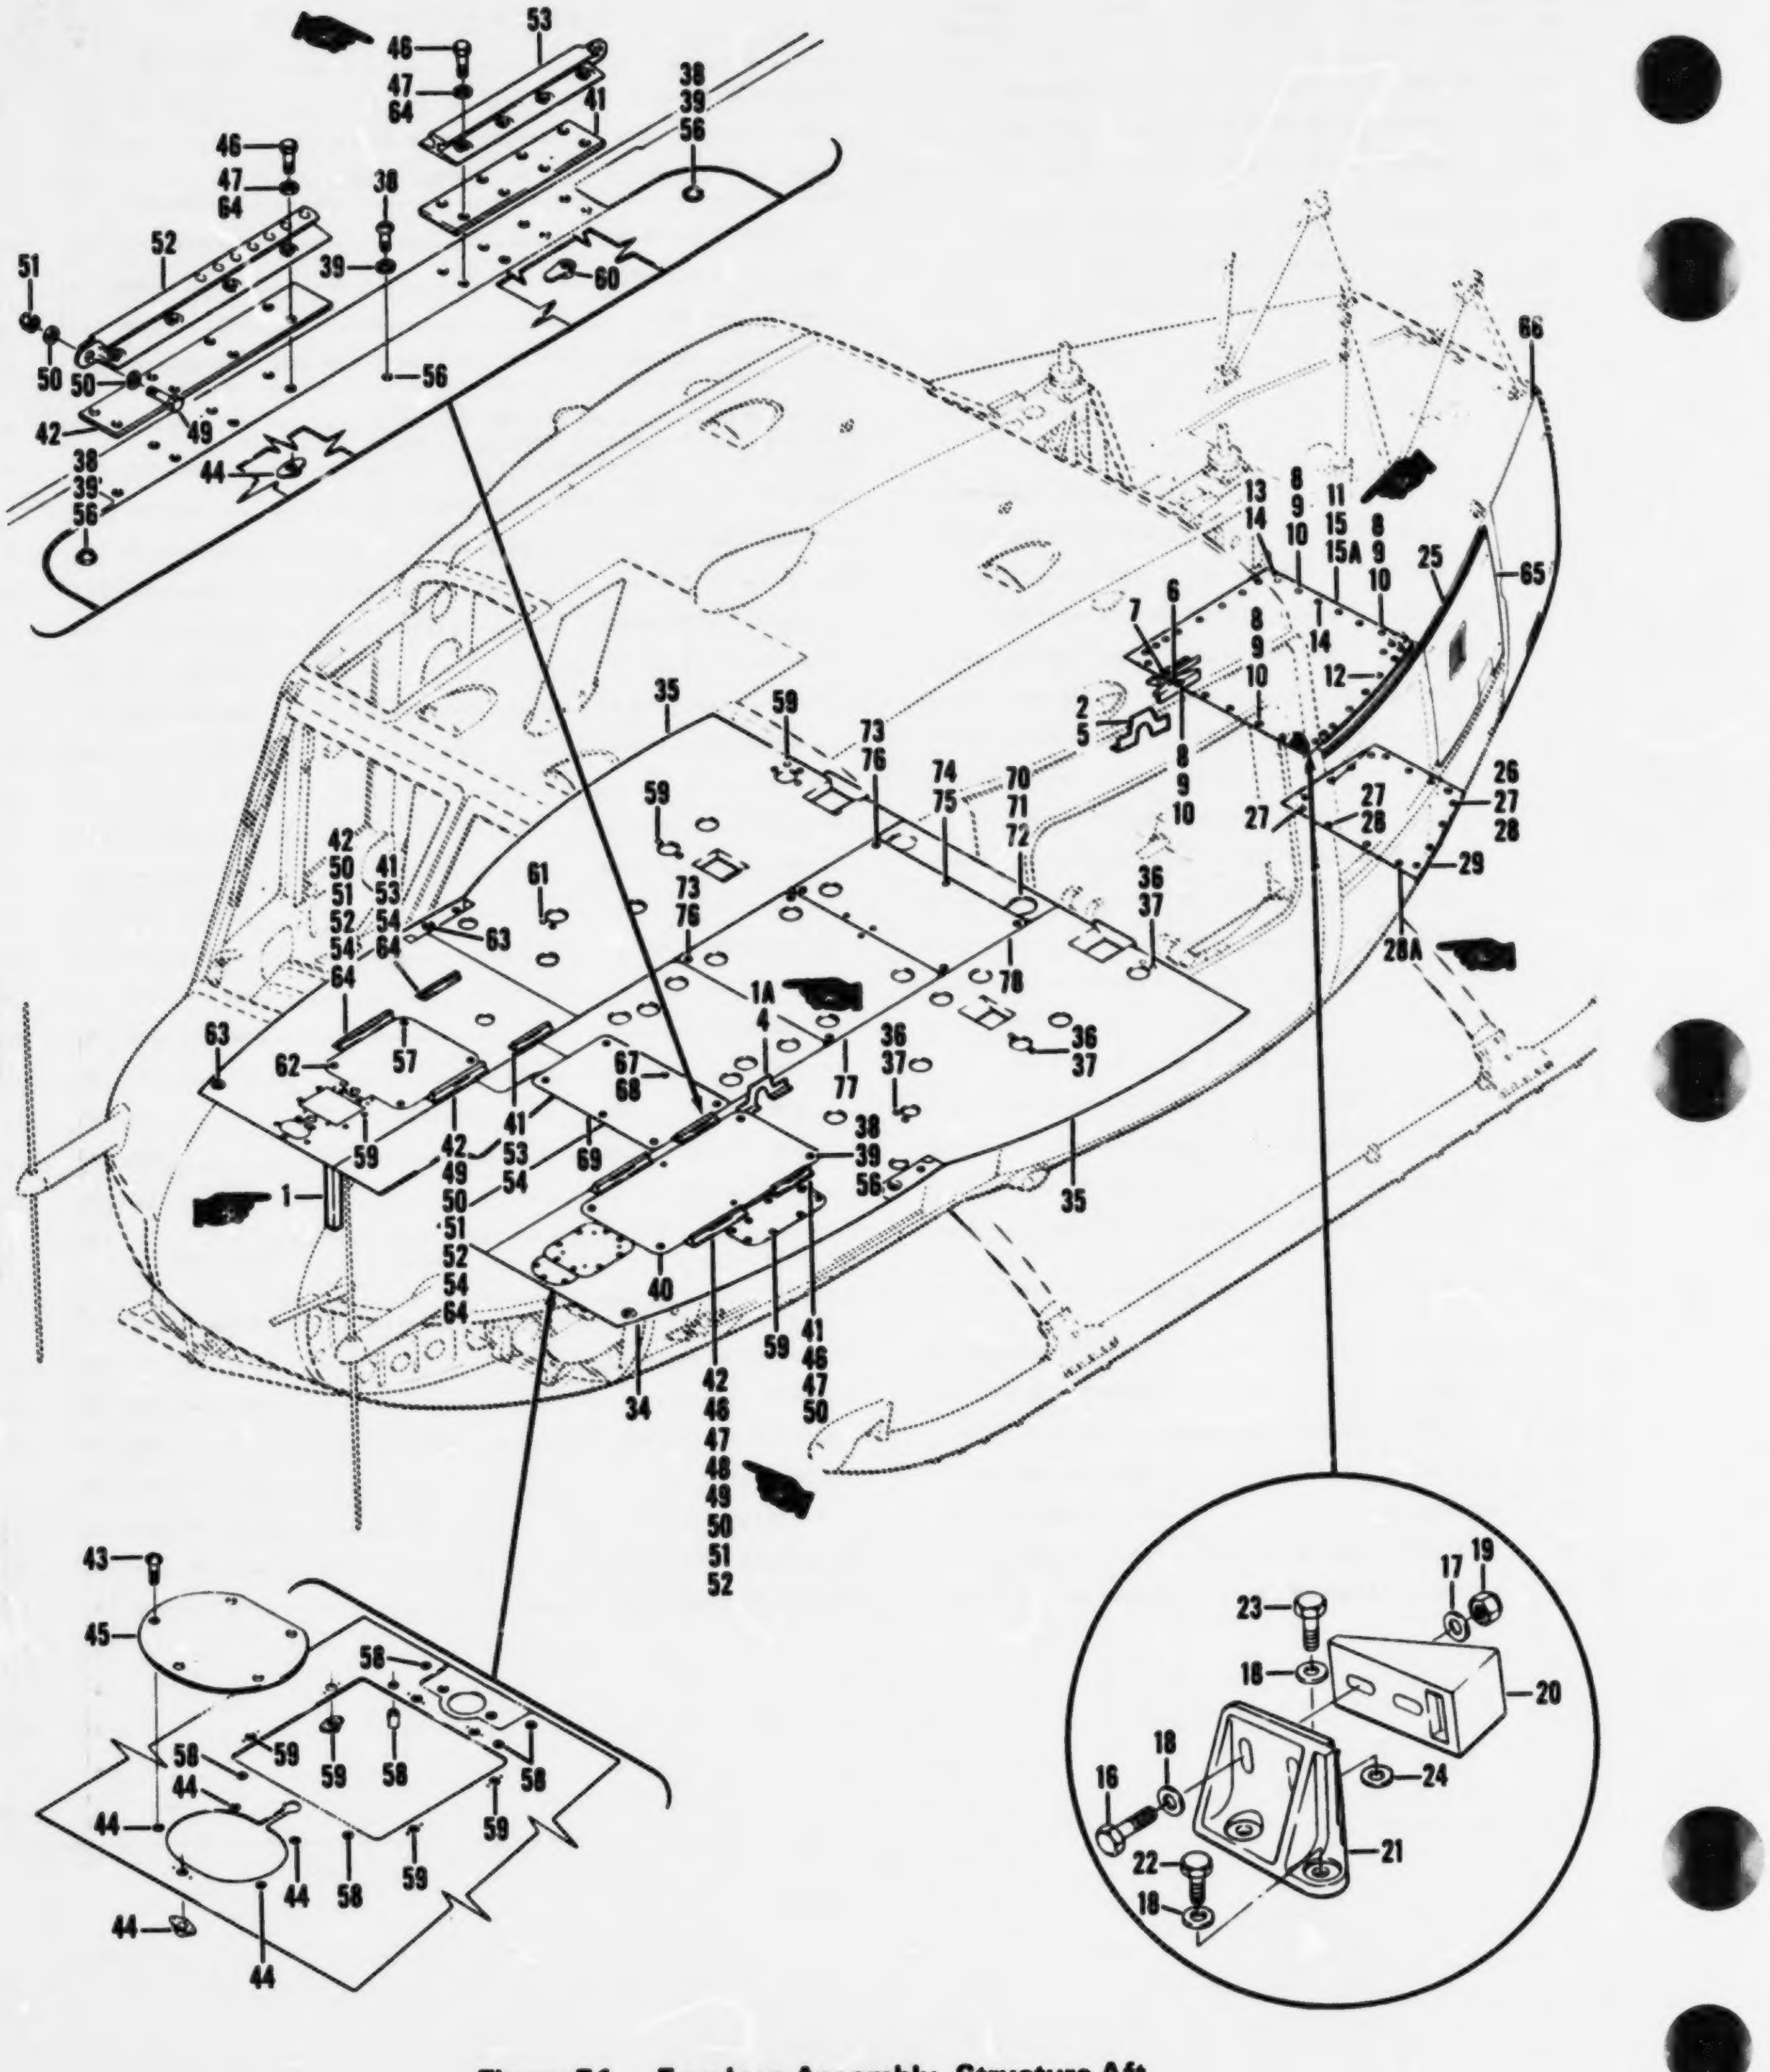
53
46
47
64
41
38
39
56
46
47
64
38
52
51
39
60
50
50
56
49
42
38
39
56
44
66
13
14
8
9
10
11
15
15A
8
9
10
25
65
7
6
8
9
10
14
12
2
5
8
9
10
35
59
73
76
74
75
70
71
72
26
27
28
27
28
27
29
59
36
37
28A
42
50
51
52
54
64
41
53
54
64
61
73
76
63
1A
4
78
63
62
57
67
68
36
37
77
36
37
59
42
49
50
51
52
54
64
41
53
54
69
38
39
56
35
1
40
34
42
46
47
48
49
50
51
52
59
41
46
47
50
43
45
58
59
59
58
58
58
44
44
59
44
58
59
44
44
23
17
19
18
20
18
16
24
22
21
18

Figure 51. Fuselage Assembly, Structure Aft

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
51		XCFZZ		97499	204-030-006-49	FUSELAGE ASSY USBL EFF 60-3546 THRU 60-3590 SEE FIG.19 FOR NHA..........UHB	EA	1
51		XCFZZ		97499	204-030-006-55	FUSELAGE ASSY USBL EFF 60-3591 THRU 60-3619 SEE FIG.19 FOR NHA..........UHB	EA	1
51		XCFZZ		97499	204-030-006-57	FUSELAGE ASSY USBL EFF 61-686 THRU 61-723 SEE FIG.19 FOR NHA ....UHB	EA	1
51		XCFZZ		97499	204-030-006-79	FUSELAGE ASSY USBL EFF 61-724 THRU 61-753 SEE FIG.19 FOR NHA ....UHB	EA	1
51		XCFZZ		97499	204-030-006-83	FUSELAGE ASSY USBL EFF 61-754 THRU 61-803 SEE FIG.19 FOR NHA ....UHB	EA	1
51		XCFZZ		97499	204-030-006-51	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-49..........UHB	EA	1
51		XCFZZ		97499	204-030-006-65	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-55..........UHB	EA	1
51		XCFZZ		97499	204-030-006-67	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-57..........UHB	EA	1
51		XCFZZ		97499	204-030-006-75	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-79..........UHB	EA	1
51		XCFZZ		97499	204-030-006-85	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-83..........UHB	EA	1
51		XCFZZ		97499	204-030-006-53	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-49..........UHB	EA	1
51		XCFZZ		97499	204-030-006-61	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-55..........UHB	EA	1
51		XCFZZ		97499	204-030-006-69	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-57..........UHB	EA	1
51		XCFZZ		97499	204-030-006-77	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-79..........UHB	EA	1
51		XCFZZ		97499	204-030-006-87	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-83..........UHB	EA	1
51		XCFZZ		97499	204-030-163-237	..BEAM ASSY-LH U/O PN 204-030-006-51..........UHB	EA	1
51		XCFZZ		97499	204-030-163-297	..BEAM ASSY-LH U/O PN 204-030-006-65..........UHB	EA	1
51		XCFZZ		97499	204-030-163-305	..BEAM ASSY-LH U/O PN 204-030-006-67,-75, & -85..........UHB	EA	1
51		XCFZZ		97499	204-030-164-203	..BEAM ASSY-RH U/O PN 204-030-006-53 & -61..........UHB	EA	1
51		XCFZZ		97499	204-030-164-283	..BEAM ASSY-RH U/O PN 204-030-006-69,-77, & -87..........UHB	EA	1
51	1	MFFZZ	1560-00-H27-5107	97499	204-030-164-187	...STIFFENER-RH..........UHB	EA	1
51	1A	PAFZZ	1560-00-869-8978	97499	204-030-104-1	...SUPPORT,STRUCTURAL FRONT,LH&RH..........UHB	EA	1
51	2	PAFZZ	1560-00-925-8129	97499	204-031-105-9	...SUPPORT,LANDING GEA AFT..........UHB	EA	1
51	2	PAFZZ	1560-00-925-8082	97499	204-031-105-11	...SUPPORT,LANDING GEA AFT..........UHB	EA	1
51	4	PAFZZ	5340-00-907-2252	97499	204-030-970-1	...BRACKET,ANGLE FRONT,LH&RH..........UHB	EA	1
51	5	PAFZZ	5340-00-907-2252	97499	204-030-970-1	...BRACKET,ANGLE REAR,LH&RH..........UHB	EA	1
51	6	XDFZZ	3120-00-836-5185	97499	22-006-15-10-16	...BUSHING,SLEEVE -RH..........UHB	EA	1
51	7	PAFZZ	3120-00-662-4742	97499	22-006-15-14-16	...BUSHING,SLEEVE -RH..........UHB	EA	1
51		XCFZZ		97499	204-030-173-39	..SUPPORT INSTL-LH..........UHB	EA	1
51		XCFZZ		97499	204-030-173-43	..SUPPORT INSTL-RH..........UHB	EA	1
51	8	PAOZZ	5305-00-957-7812	96906	MS24693S276	...SCREW,MACHINE..........UHB	EA	4
51	9	PAOZZ	5310-00-772-3491	97499	140-006-4	...WASHER,DIMPLED..........UHB	EA	4
51	10	PAOZZ	5310-00-771-7348	96906	MS21048-3	...NUT,SELF-LOCKING,PL..........UHB	EA	4
51	11	PBOZZ	1560-00-805-5078	97499	204-030-173-35	...PAN ASSY,LH..........UHB	EA	1
51	11	PBOZZ	1560-00-998-7645	97499	204-030-173-45	...PAN ASSY,RH..........UHB	EA	1
51		XCFZZ		97499	204-030-173-41	..FLOOR INSTL-LH..........UHB	EA	1
51		XCFZZ		97499	204-030-173-42	..FLOOR INSTL-RH..........UHB	EA	1
51	12	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE..........UHB	EA	18
51	13	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	...SCREW,MACHINE..........UHB	EA	4
51	14	PAOZZ	5310-00-771-7348	96906	MS21048-3	...NUT,SELF-LOCKING,PL..........UHB	EA	26

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
51	15	PAOZZ	1560-00-203-1178	97499	204-030-173-65	...FLOOR,AIRCRAFT -LH.......UHB	EA	1
51	15	PBOZZ	1560-00-203-1168	97499	204-030-173-66	...FLOOR,AIRCRAFT -RH.......UHB	EA	1
51	15A	PAOZZ	1560-00-427-8268	97499	204-030-173-46	...SKIN,AIRCRAFT U/W PN 204-030-173-37.......UHB	EA	1
51	15A	PAOZZ	1560-00-427-8274	97499	204-030-173-47	...SKIN,AIRCRAFT U/W PN 204-030-173-38.......UHB	EA	1
51	16	PAOZZ	5306-00-180-2696	88044	AN3H10	...BOLT,MACHINE.......UHB	EA	2
51	17	PAOZZ	5310-00-167-0818	88044	AN960-10	...WASHER,FLAT.......UHB	EA	2
51	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT.......UHB	EA	5
51	19	PAOZZ	5310-00-807-1467	96906	MS21042-3	...NUT,SELF-LOCKING,EX HEXAGON.......UHB	EA	2
51	20	PAOZZ	1560-00-872-1135	97499	204-060-931-3	...BRACKET,COWL LATCH.......UHB	EA	1
51	21	PAOZZ	1560-00-075-9335	97499	204-060-932-1	...BRACKET,COWL LATCH -LH.......UHB	EA	1
51	21	PAOZZ	1560-00-075-9336	97499	204-060-932-2	...BRACKET,COWL LATCH -RH.......UHB	EA	1
51	22	PAOZZ	5306-00-282-4312	88044	AN3H4	...BOLT,MACHINE.......UHB	EA	2
51	23	PAOZZ	5306-00-282-4309	88044	AN3H5	...BOLT,MACHINE.......UHB	EA	1
51	24	XDOZZ		97499	120-035E24-6	...SHIM.......UHB	EA	1
51	25	PBOZZ	5340-00-866-9531	97499	204-030-194-1	..TRACK,SLIDING DOOR -LH.......UHB	EA	1
51	25	PBOZZ	5340-00-795-1157	97499	204-030-194-3	..TRACK,DOOR -RH.......UHB	EA	1
51	26	XCFZZ		97499	204-030-199-11	..SHELF INSTL-LH U/O PN 204-030-006-51, & -65.......UHB	EA	1
51	26	XCFZZ		97499	204-030-199-15	..SHELF INSTL-LH U/O PN 204-030-006-67, -75,& -85.......UHB	EA	1
51	27	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE.......UHB	EA	17
51	28	PAOZZ	5310-00-764-7282	96906	MS21047L3	...NUT,SELF-LOCKING,PL.......UHB	EA	16
51	28A	PAOZZ	5310-00-021-3884	96906	MS21086L3	...NUT,SELF-LOCKING,PL.......UHB	EA	1
51	29	PAOZZ	1560-00-010-0387	97499	204-030-965-5	...SHELF ASSEMBLY,BATT.......UHB	EA	1
51	34	PAOOO	1560-00-129-6285	97499	204-030-134-16	..ANGLE,FLOOR SUPPOR.......UHB	EA	1
51		XCFZZ		97499	204-030-321-93	..FLOOR INSTL-LH U/O PN 204-030-006-51.......UHB	EA	1
51		XCFZZ		97499	204-030-321-99	..FLOOR INSTL-LH U/O PN 204-030-006-65, -67,& -75.......UHB	EA	1
51		XCFZZ		97499	204-030-321-107	..FLOOR INSTL-LH U/O PN 204-030-006-85.......UHB	EA	1
51		XCFZZ		97499	204-030-320-53	..FLOOR INSTL-RH U/O PN 204-030-006-53.......UHB	EA	1
51		XCFZZ		97499	204-030-320-97	..FLOOR INSTL-RH U/O PN 204-030-006-61, -69,& -77.......UHB	EA	1
51		XCFZZ		97499	204-030-320-115	..FLOOR INSTL-RH U/O PN 204-030-006-87.......UHB	EA	1
51	35	XBOOO	1560-00-H24-7235	97499	204-030-321-89	...FLOOR ASSEMBLY-LH U/O PN 204-030-321-93.......UHB	EA	1
51	35	XBOOO	1560-00-H24-9968	97499	204-030-321-97	...FLOOR ASSEMBLY-LH U/O PN 204-030-321-99.......UHB	EA	1
51	35	XOOOO	1560-00-181-4670	97499	204-030-321-109	...FLOOR ASSEMBLY, LH U/O PN 204-030-321-107.......UHB	EA	1
51	35	XBOOO	1560-00-H24-7313	97499	204-030-320-55	...FLOOR ASSEMBLY-RH U/O PN 204-030-320-53.......UHB	EA	1
51	35	XBOOO	1560-00-H24-9967	97499	204-030-320-99	...FLOOR ASSEMBLY-RH U/O PN 204-030-320-97.......UHB	EA	1
51	35	XBOOO	1560-00-H25-1236	97499	204-030-320-117	...FLOOR ASSEMBLY-RH U/O PN 204-030-320-115.......UHB	EA	1
51	36	PAOZZ	5305-00-206-1201	88044	AN525-10R14	....SCREW, MACHINE.......UHB	EA	6
51	37	PAOZZ	5310-00-728-7716	96906	MS21069L3	....NUT,SELF-LOCKING,PL.......UHB	EA	6
51	38	PAOZZ	5305-00-282-0135	88044	AN525-416R8	...SCREW,MACHINE -LH ONLY.......UHB	EA	6
51	39	PAOZZ	5310-00-184-9001	88044	AN960PD416L	...WASHER,FLAT -LH ONLY.......UHB	EA	6
51	40	PBOZZ	1560-00-795-0597	97499	204-031-327-1	...COVER,ACCESS -LH U/O PN 204-030-321-93,-99, & 107.......UHB	EA	1
51	41	MFOZZ	1560-00-345-8156	97499	204-030-320-111	...SHIM,FLOOR INSTALLA U/O PN 204-030-320-97,-115, 204-030-321-99,& -107.......UHB	EA	2
51	42	MFOZZ	1560-00-345-8157	97499	204-030-320-113	...SHIM,FLOOR INSTALLA U/O PN 204-030-320-97,-115, 204-030-	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						321-99,& -107	UHB		
51	43	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE	UHB	EA	3
51	44	PAOZZ	5310-00-764-7282	96906	MS21047L3	...NUT,SELF-LOCKING,PL	UHB	EA	5
51	45	MFOZZ	1560-00-765-7855	97499	204-030-337-3	...COVER,ACCESS -LH	UHB	EA	1
51	46	PAOZZ	5306-00-182-2058	88044	AN3H5A	...BOLT,MACHINE	UHB	EA	32
51	47	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT	UHB	EA	32
51	48	AOOOZ	1560-00-770-8296	97499	204-070-705-1	...TRACK ASSEMBLY,SEAT	UHB	EA	2
51	49	PAOZZ	5306-00-182-2057	88044	AN3H4A	....BOLT,MACHINE	UHB	EA	1
51	50	PAOZZ	5310-00-167-0753	88044	AN960PD10L	....WASHER,FLAT	UHB	EA	2
51	51	PAOZZ	5310-00-263-2862	96906	MS21045C3	....NUT,SELF-LOCKING, HEXAGON	UHB	EA	1
51	52	PAOZZ	1560-00-691-2123	97499	204-070-705-5	...TRACK,SEAT	UHB	EA	1
51	53	PAOZZ	1560-00-691-2124	97499	204-070-705-7	...TRACK,SEAT	UHB	EA	2
51	54	PAOZZ	5306-00-182-2058	88044	AN3H5A	...BOLT,MACHINE	UHB	EA	32
51	56	PAOZZ	5310-00-766-6651	96906	MS21048L4	...NUT,SELF-LOCKING,PL	UHB	EA	6
51	57	PAOZZ	5305-00-282-0135	88044	AN525-416R8	...SCREW,MACHINE	UHB	EA	4
51	57	PAOZZ	5310-00-766-6651	96906	MS21048L4	...NUT,SELF-LOCKING,PL	UHB	EA	4
51	58	PAOZZ	5365-00-618-1792	80205	NAS42DD4-16	...SPACER,SLEEVE	UHB	EA	6
51	59	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL	UHB	EA	12
51	60	PAOZZ	5310-00-551-7016	80205	NAS1030N3	...NUT,SELF-LOCKING,PL	UHB	EA	1
51	61	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	...SCREW,MACHINE	UHB	EA	2
51	62	PAOZZ	1560-00-765-7854	97499	204-030-325-1	...COVER,ACCESS -RH	UHB	EA	1
51	63	PAOZZ	5325-00-185-0012	96906	MS35489-35	...GROMMET,NONMETALLIC	UHB	EA	2
51	64	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT	UHB	EA	32
51	65	PBOZF	1560-00-843-1224	97499	204-030-287-05	.DOOR,ACCESS -LH SEE FIG.63 FOR BREAKDOWN	UHB	EA	1
51	65	PAOOO	1560-00-987-3307	97499	204-030-287-72	.DOOR,ACCESS -RH SEE FIG.63 FOR BREAKDOWN	UHB	EA	1
51	66	PBOOO	1560-00-736-4029	97499	204-031-347-1	.DOOR ASSEMBLY-LH SEE FIG 63 FOR BREAKDOWN	UHB	EA	1
51	66	PBOOO	1560-00-736-4030	97499	204-031-347-2	.DOOR,ACCESS -RH SEE FIG.63 FOR BREAKDOWN	UHB	EA	1
51		XCFZZ		97499	204-030-322-15	.DOOR INSTL-LH	UHB	EA	1
51	67	PAOZZ	5305-00-282-0135	88044	AN525-416R8	..SCREW,MACHINE	UHB	EA	6
51	68	PAOZZ	5310-00-766-6651	96906	MS21048L4	..NUT,SELF-LOCKING,PL	UHB	EA	6
51	69	PAOZZ	1560-00-953-0218	97499	204-030-328-9	..COVER,ACCESS	UHB	EA	1
51		XCFZZ		97499	204-030-334-63	.FITTING INSTL	UHB	EA	1
51		XCFZZ		97499	204-030-334-64	.FITTING INSTL	UHB	EA	1
51	70	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE	UHB	EA	6
51	71	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT	UHB	EA	2
51	72	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL	UHB	EA	6
51		XCFZZ		97499	204-030-322-89	.FLOOR INSTL U/O PN 204-030-006-49	UHB	EA	1
51		XCFZZ		97499	204-030-322-107	.FLOOR INSTL U/O PN 204-030-006-55,-57,-79, & -83	UHB	EA	1
51	73	PAOZZ	5305-00-269-4204	96906	MS24694S146	..SCREW,MACHINE	UHB	EA	8
51	74	PAOZZ	5305-00-282-0135	88044	AN525-416R8	..SCREW,MACHINE	UHB	EA	5
51	75	PAOZZ	5310-00-728-7717	96906	MS21069L4	..NUT,SELF-LOCKING,PL	UHB	EA	5
51	76	PBOZZ	5310-00-777-6320	96906	MS21048L5	..NUT,SELF-LOCKING,PL	UHB	EA	8
51	77	PAOZZ	1560-00-859-6121	97499	204-031-203-1	..FLOOR ASSY U/O PN 204-030-322-89	UHB	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
51	77	PAOZZ	1560-00-876-4319	97499	204-031-203-3	..FLOOR,AIRCRAFT U/O PN 204-030-322-107..................UHB	EA	1
51	78	PAOZZ	1560-00-859-6122	97499	204-031-223-1	..FLOOR,AIRCRAFT U/O PN 204-030-322-89 & -107...........UHB	EA	1

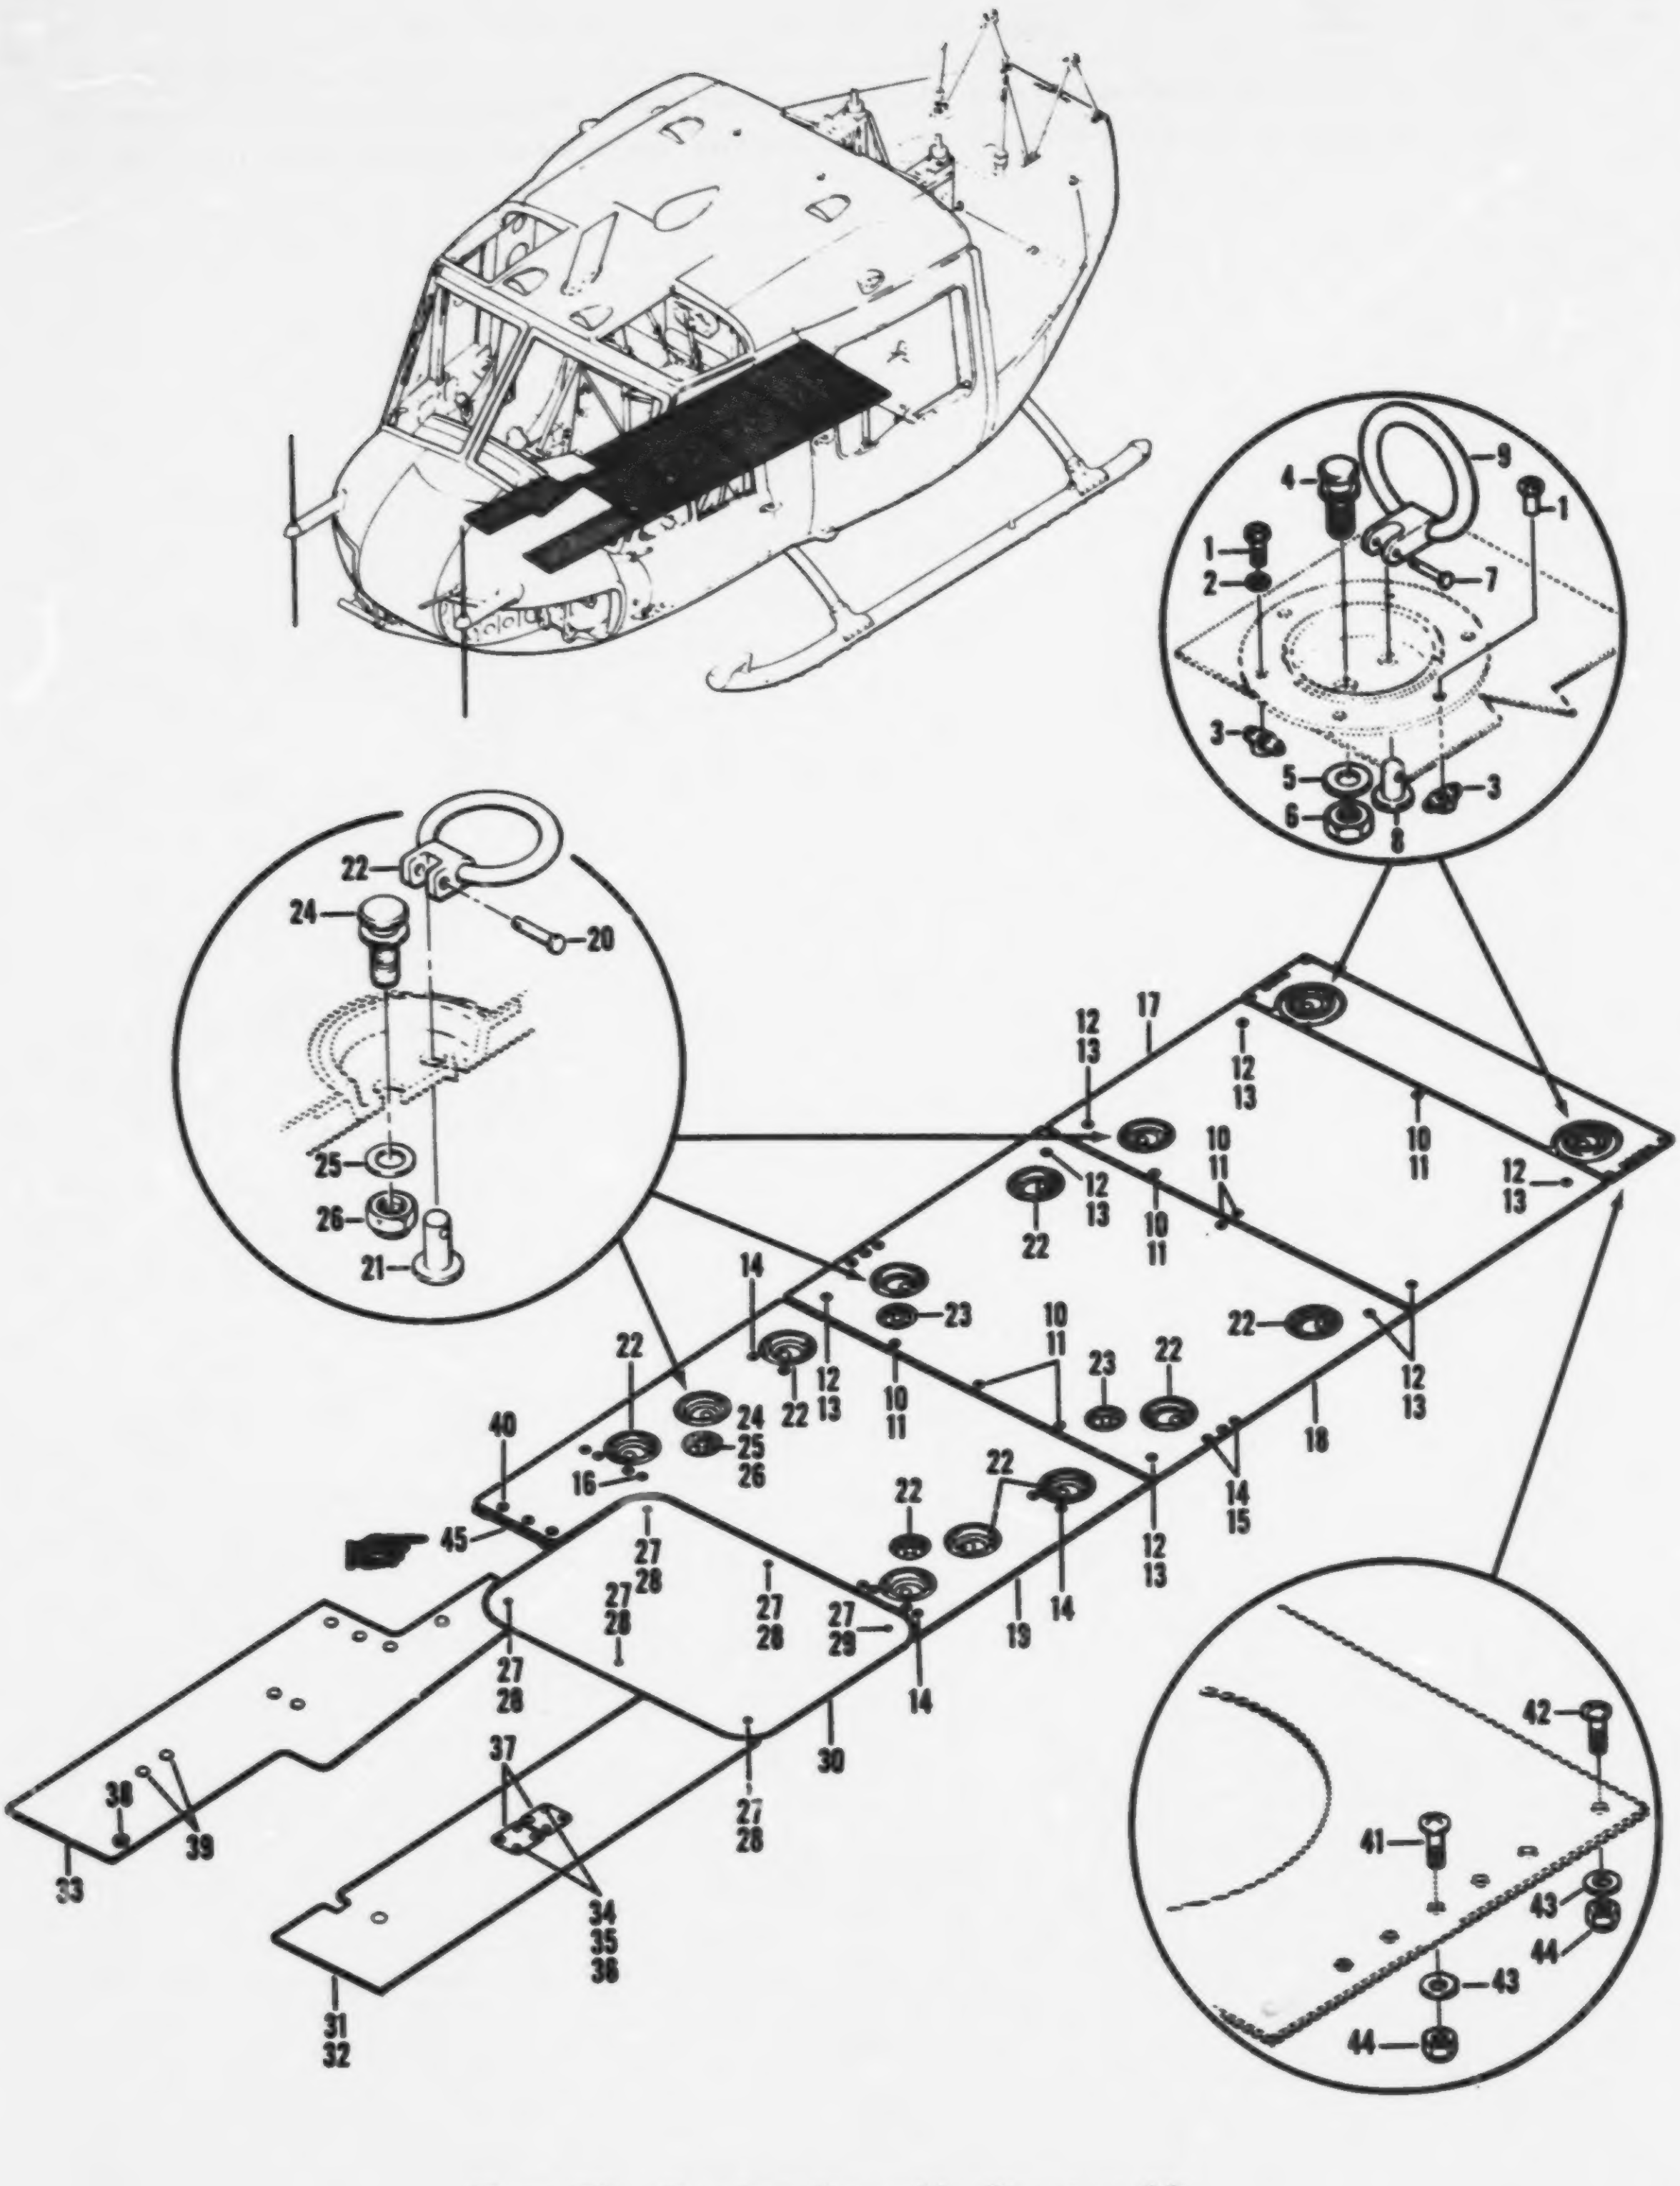
4
9
1
1
2
7
3
5
3
6
8
22
24
20
25
26
21
17
12
13
12
13
10
11
10
11
12
13
12
13
22
10
11
14
23
10
11
22
12
13
10
11
23
22
22
12
13
24
25
26
40
16
18
22
22
14
15
12
13
45
27
28
27
28
27
28
27
29
19
14
27
28
14
30
37
27
28
38
39
33
34
35
36
31
32
42
41
43
44
43
44

Figure 52. Fuselage Assembly, Structure Aft

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
52		XCFZZ		97499	204-031-006-1	FUSELAGE ASSY USBL EFF 62-1872 THRU 62-1996 SEE FIG.19 FOR NHA..........UHB	EA	1
52		XCFZZ		97499	204-031-006-13	FUSELAGE ASSY USBL EFF 62-1997 THRU 62-12555 SEE FIG.19 FOR NHA..........UHB	EA	1
52		XCFZZ		97499	204-031-006-25	FUSELAGE ASSY USBL EFF 63-8500 THRU 63-8658 SEE FIG.19 FOR NHA..........UHB	EA	1
52		XCFZZ		97499	204-031-006-49	FUSELAGE ASSY USBL EFF 63-8659 THRU 63-12952 SEE FIG.19 FOR NHA..........UHB	EA	1
52		XCFZZ		97499	204-031-006-71	FUSELAGE ASSY USBL EFF 64-13902 THRU 64-14100 SEE FIG.19 FOR NHA..........UHB	EA	1
52		XCFZZ		97499	204-031-006-109	FUSELAGE ASSY USBL EFF 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
52		XCFZZ		97499	204-032-006-1	FUSELAGE ASSY USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
52		XCFZZ		97499	204-032-006-21	FUSELAGE ASSY USBL EFF 66-492 THRU 66-15022 SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
52		XCFZZ		97499	204-032-006-27	FUSELAGE ASSY USBL EFF 66-15023 & SUBSEQUENT SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
52		XCFZZ		97499	204-031-334-1	.FITTING INSTL-LH U/O PN 204-031-006-1 & -13..........UHB	EA	1
52		XCFZZ		97499	204-031-334-9	.FITTING INSTL-LH U/O PN 204-031-006-25,-49, -71,-109,204-032-006-1, -21,& -27..........UHB,UHC,UHM	EA	1
52		XCFZZ		97499	204-031-334-2	.FITTING INSTL-RH U/O PN 204-031-006-1 & -13..........UHB	EA	1
52		XCFZZ		97499	204-031-334-10	.FITTING INSTL-RH U/O PN 204-031-006-25,-49, -71,-109,204-032-006-1, -21,& -27..........UHB,UHC,UHM	EA	1
52	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE..........UHB,UHC,UHM	EA	6
52	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER..........UHB,UHC,UHM	EA	2
52	3	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	6
52	4	PAOZZ	5325-00-195-0904	00624	34113-30	..STUD,SNAPSLIDE FAST..........UHB	EA	1
52	5	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT U/O PN 204-031-334-1 & -2..........UHB	EA	1
52	6	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX HEXAGON U/O PN 204-031-334-1 & -2 ....UHB	EA	1
52	7	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	..PIN,STRAIGHT,HEADED U/O PN 204-031-334-1 & -2..........UHB	EA	1
52	8	PAOZZ	5315-00-412-9867	97499	100-051-1	..PIN,STRAIGHT,HEADED U/O PN 204-031-334-1 & -2..........UHB	EA	1
52	9	PAOZZ	1680-00-802-3204	98313	FDA1886	..RING,DOOR ASSEMBLY, U/O PN 204-031-334-1 & -2..........UHB	EA	1
52		XCFZZ		97499	204-031-322-17	.FLOOR INSTL U/O PN 204-031-006-1..........UHB	EA	1
52		XCFZZ		97499	204-031-322-19	.FLOOR INSTL U/O PN 204-031-006-13..........UHB	EA	1
52		XCFZZ		97499	204-031-322-13	.FLOOR INSTL U/O PN 204-031-006-25,-49,& -71..........UHB	EA	1
52		XCFZZ		97499	204-031-322-67	.FLOOR INSTL U/O PN 204-031-006-109, 204-032-006-1,-21,& -27 ....UHC,UHM	EA	1
52	10	PAOZZ	5305-00-282-0135	88044	AN525-416R8	..SCREW,MACHINE..........UHB,UHC,UHM	EA	7
52	11	PAFZZ	5310-00-728-7717	96906	MS21069L4	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	7
52	12	PAOZZ	5305-00-269-4204	96906	MS24694S146	..SCREW,MACHINE..........UHB,UHC,UHM	EA	8
52	13	PBOZZ	5310-00-777-6320	96906	MS21048L5	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	8
52	14	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE..........UHB,UHC,UHM	EA	11
52	15	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	3
52	16	PAOZZ	5305-00-180-0014	88044	AN525-10R12	..SCREW,MACHINE..........UHB,UHC,UHM	EA	4
52	17	PAOOO	1560-00-980-9558	97499	204-031-223-15	..FLOOR,AIRCRAFT..........UHB,UHC,UHM	EA	1
52	18	PAOOO	1560-00-866-9544	97499	204-031-203-7	..FLOOR,AIRCRAFT..........UHB,UHC,UHM	EA	1
52	19	PAOOO	1560-00-366-9545	97499	204-031-286-1	..PANEL,FUSELAGE,AIRC U/O PN 204-031-322-17 & -19..........UHB	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
52	19	PAOOO	1560-00-867-1200	97499	204-031-286-3	..PANEL,FUSELAGE,AIRC U/O PN 204-031-322-13 & -67 ....UHB,UHC,UHM	EA	1
52	20	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	...PIN,STRAIGHT,HEADED............................UHB,UHC,UHM	EA	11
52	21	PAOZZ	5315-00-412-9867	97499	100-051-1	...PIN,STRAIGHT,HEADED............................UHB,UHC,UHM	EA	1
52	22	PAOZZ	1680-00-802-3204	98313	FDA1886	...RING,DOOR ASSEMBLY,............................UHB,UHC,UHM	EA	11
52	23	PAOZZ	5325-00-980-3388	99879	4159-2-7	...STUD,POSITIVE LOCK U/O PN 204-031-203-7 & 204-031-223-15 ....UHB,UHC,UHM	EA	7
52	24	PAOZZ	5325-00-195-0904	00624	34113-30	..STUD,SNAPSLIDF FAST.....................................UHB	EA	1
52	25	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT.................................UHB,UHC,UHM	EA	15
52	26	PAOZZ	5310-00-807-1477	96906	MS21042L6	...NUT,SELF-LOCKING,EX HEXAGON....................UHB,UHC,UHM	EA	15
52	27	PAOZZ	5305-00-282-0135	88044	AN525-416R8	..SCREW,MACHINE...............................UHB,UHC,UHM	EA	6
52	28	PAOZZ	5310-00-766-6651	96906	MS21048L4	..NUT,SELF-LOCKING,PL...........................UHB,UHC,UHM	EA	5
52	29	PAOZZ	5310-00-728-7717	96906	MS21069L4	..NUT,SELF-LOCKING,PL...........................UHB,UHC,UHM	EA	1
52	30	PAOZZ	1560-00-953-0218	97499	204-030-328-9	..COVER,ACCESS RPLS--1560-00-859-6120.............UHB,UHC,UHM	EA	1
52	31	XCFZZ		97499	204-031-322-5	..PANEL ASSY-LH U/O PN 204-031-322-17......................UHB	EA	1
52	32	PBOOO	1560-00-176-1081	97499	204-031-322-21A	..FLOOR,AIRCRAFT U/O PN 204-031-322-13, -19,& -67 ....UHB,UHC,UHM	EA	1
52	33	XDOOO	1560-00-176-2103	97499	204-031-322-3	..FLOUR,AIRCRAFT-RH U/O PN 204-031-322-17...................UHB	EA	1
52	33	PBOOO	1560-00-982-6480	97499	204-031-322-23	..FLOOR,AIRCRAFT-RH U/O PN 204-031-322-13,-19, & -67.....UHC	EA	1
52	34	PAOZZ	5305-00-889-3000	96906	MS35206-230	...SCREW,MACHINE U/O PN 204-031-322-21...........UHB,UHC,UHM	EA	8
52	35	PAOZZ	5310-00-187-2398	88044	AN960PD6L	...WASHER,FLAT U/O PN 204-031-322-21.............UHB,UHC,UHM	EA	8
52	36	PAOZZ	5310-00-807-1472	96906	MS21042L06	...NUT,SELF-LOCKING,EX HEXAGON U/O PN 204-031-322-21 ....UHB,UHC,UHM	EA	8
52	37	XDOZZ	1560-00-994-5531	97499	204-031-322-59	...COVER,ACCESS U/O PN 204-031-322-21............UHB,UHC,UHM	EA	2
52	38	PAOZZ	5325-00-185-0017	96906	MS35489-33	..GROMMET,NONMETALLIC.............................UHB,UHC,UHM	EA	1
52	39	PAOZZ	5310-00-779-7069	96906	MS21047L08K	..NUT,SELF-LOCKING,PL...........................UHB,UHC,UHM	EA	2
52	40	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL...........................UHB,UHC,UHM	EA	10
52	41	PAOZZ	5305-00-997-6969	80205	NAS1218-08-6	..SCREW,MACHINE U/O PN 204-031-322-67...............UHC,UHM	EA	12
52	42	XDOZZ		80205	NAS1218-08-7	..SCREW,MACHINE U/O PN 204-031-322-67...............UHC,UHM	EA	2
52	43	PAOZZ	5310-00-515-8058	88044	AN960-8	..WASHER,FLAT U/O PN 204-031-322-67.................UHC,UHM	EA	14
52	44	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING,EX HEXAGON U/O PN 204-031-322-67 ....UHC,UHM	EA	14
52	45	MOOZZ	1560-00-H01-6785	97499	204-031-322-37	..ANGLE...UHB,UHC,UHM	EA	1

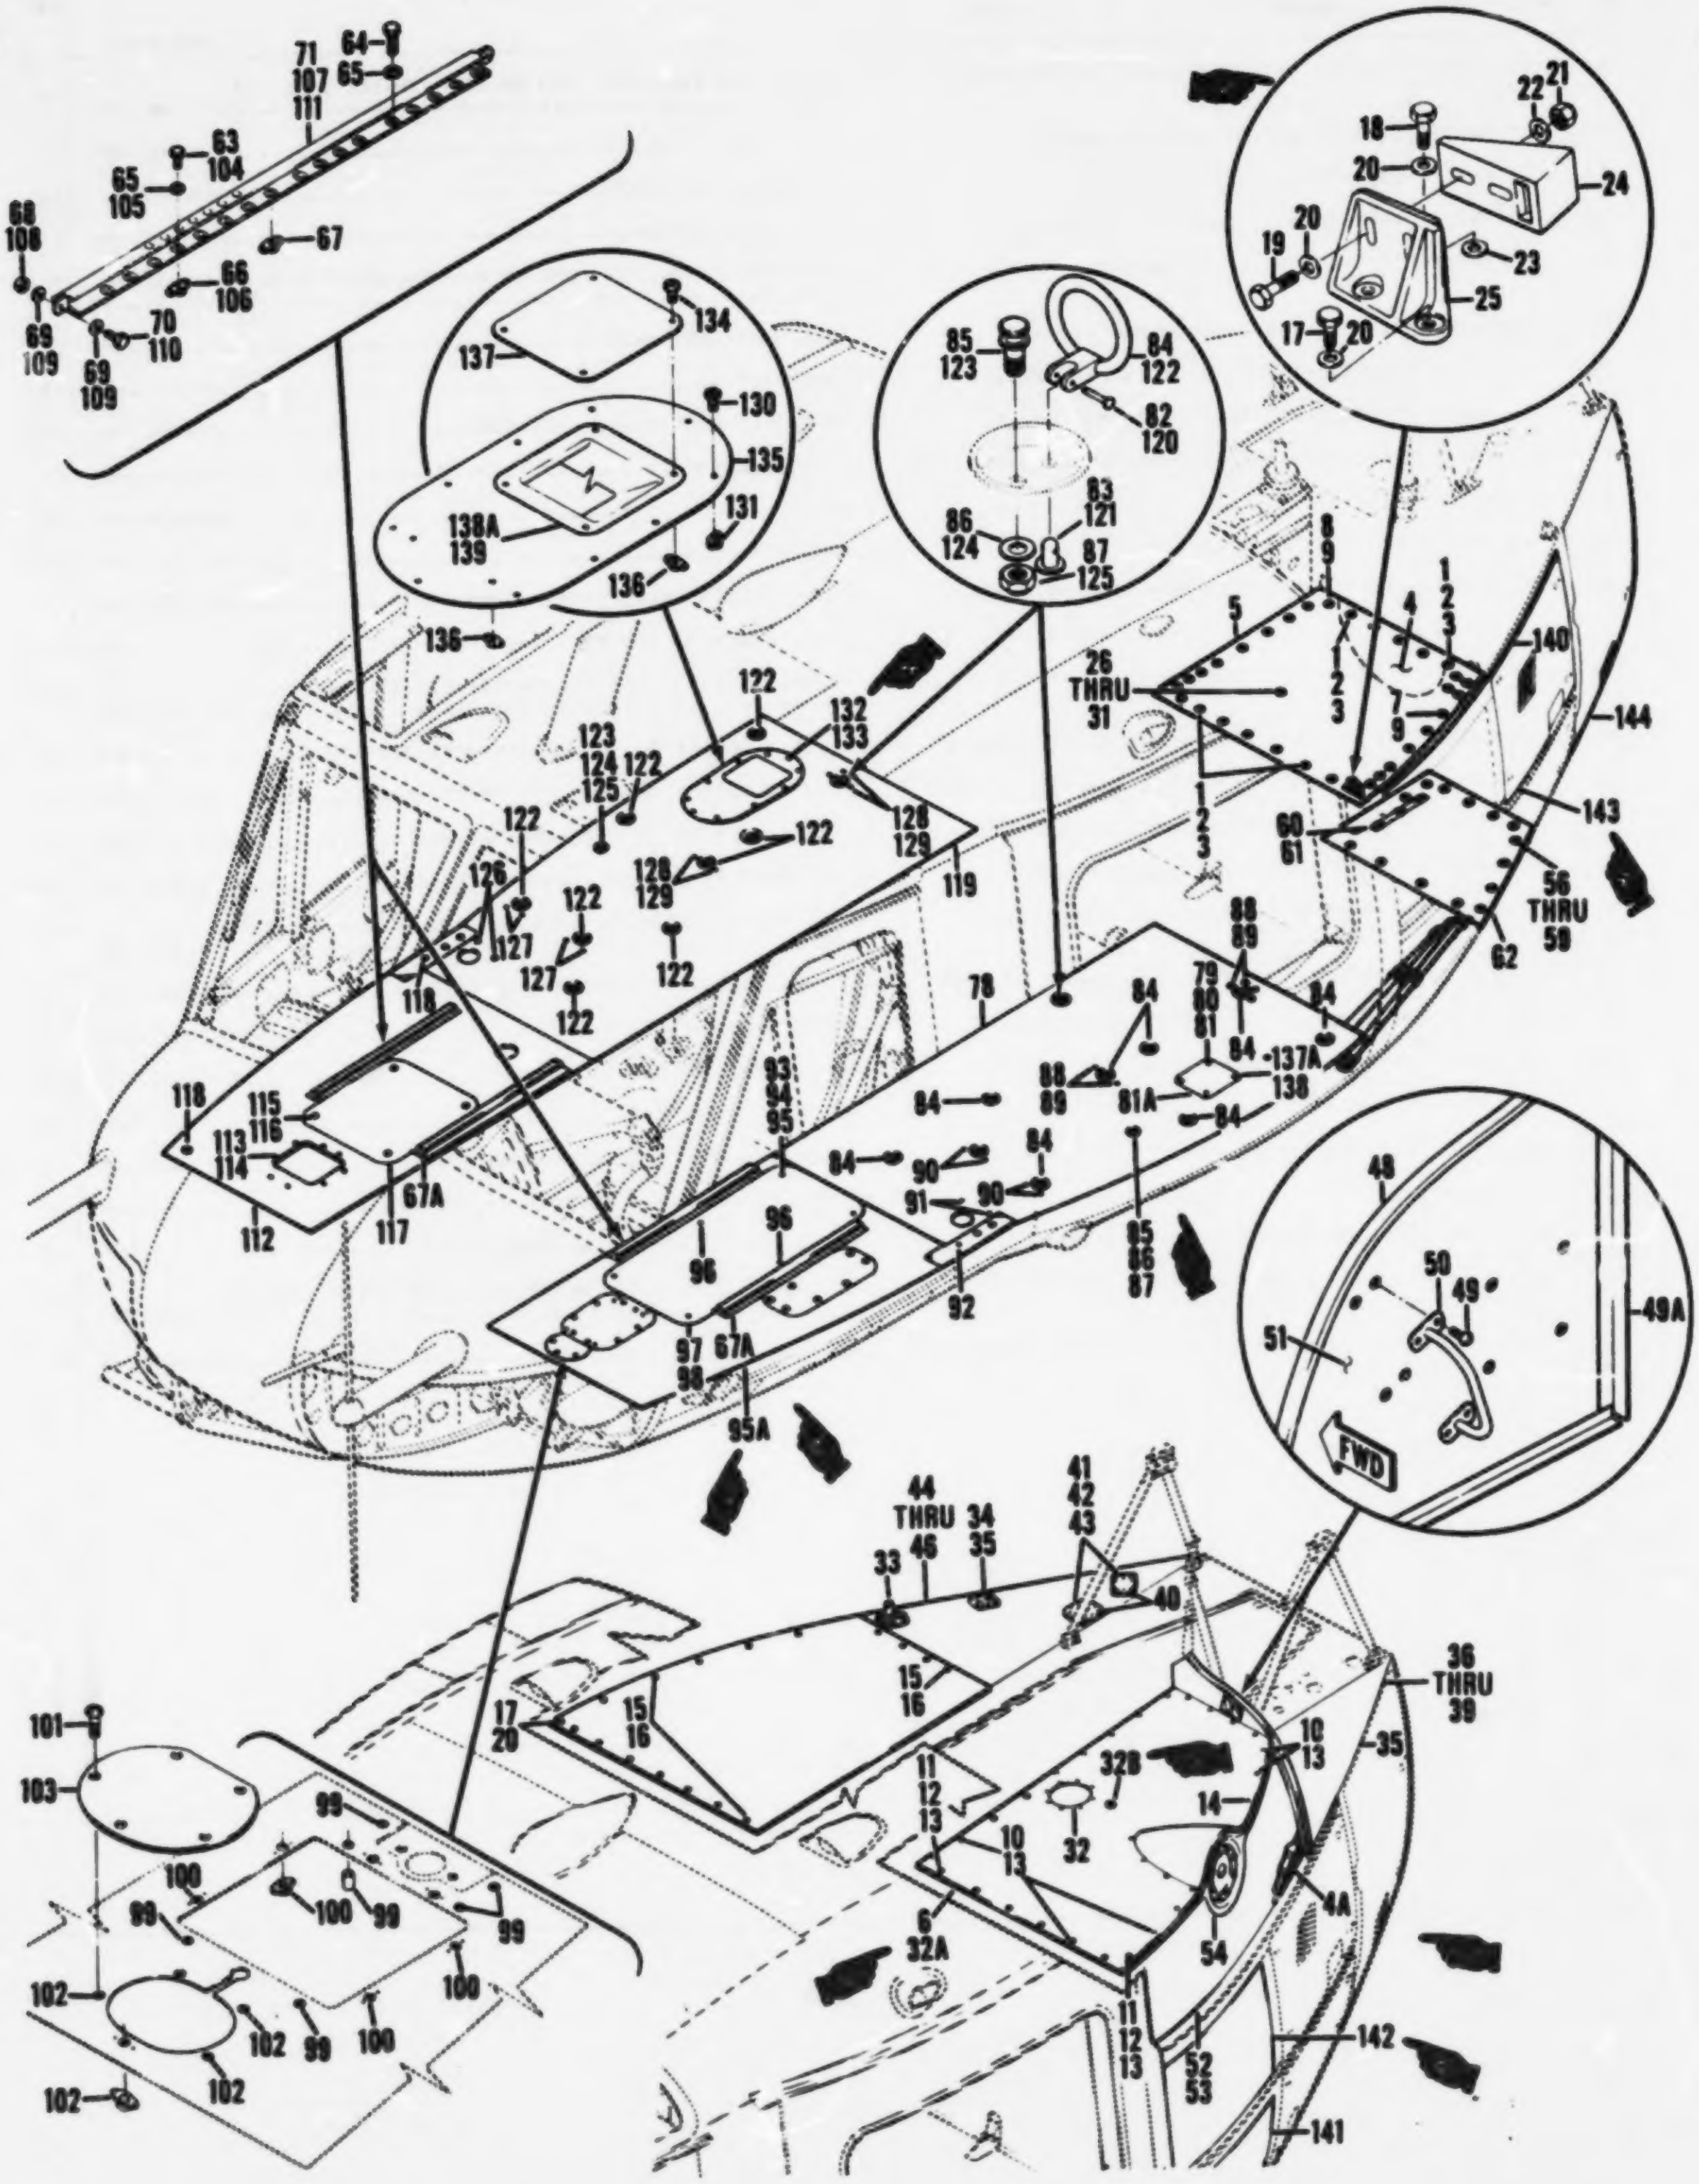
71
107
111
64
65
63
104
65
105
68
108
67
66
106
69
109
70
110
69
109
137
134
130
135
138A
139
131
136
136
85
123
84
122
82
120
83
121
86
124
87
125
18
22
21
20
24
20
19
23
25
17
20
8
9
5
4
1
2
3
26
THRU
31
1
2
3
7
9
140
144
1
2
3
143
60
61
56
THRU
59
62
122
132
133
123
124
125
122
122
128
129
119
122
128
129
122
126
127
127
122
122
118
118
115
116
113
114
112
117
67A
78
88
89
79
80
81
84
84
84
137A
138
88
89
81A
84
84
84
93
94
95
84
90
91
90
85
86
87
92
96
96
97
98
67A
95A
48
50
49
51
49A
FWD
44
THRU
46
34
35
41
42
43
40
33
36
THRU
39
15
16
17
20
15
16
11
12
13
10
13
32B
14
35
10
13
32
6
32A
54
4A
11
12
13
52
53
142
141
101
103
99
100
99
100
99
99
100
102
102
99
100
102
102

Figure 53. Fuselage Assembly, Structure Aft

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
53		XCFZZ		97499	204-031-006-1	FUSELAGE ASSY AFT USBL EFF 62-1872 THRU 62-1996 SEE FIG.19 FOR NHA..UHB	EA	1
53		XCFZZ		97499	204-031-006-13	FUSELAGE ASSY AFT USBL EFF 62-1997 THRU 62-12555 SEE FIG.19 FOR NHA..UHB	EA	1
53		XCFZZ		97499	204-031-006-25	FUSELAGE ASSY AFT USBL EFF 63-8500 THRU 63-8658 SEE FIG.19 FOR NHA..UHB	EA	1
53		XCFZZ		97499	204-031-006-49	FUSELAGE ASSY AFT USBL EFF 63-8659 THRU 63-12952 SEE FIG.19 FOR NHA..UHB	EA	1
53		XCFZZ		97499	204-031-006-71	FUSELAGE ASSY AFT USBL EFF 64-13902 THRU 64-14100 SEE FIG.19 FOR NHA..UHB	EA	1
53		XCFZZ		97499	204-031-006-109	FUSELAGE ASSY AFT USBL EFF 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA..UHC,UHM	EA	1
53		XCFZZ		97499	204-032-006-1	FUSELAGE ASSY AFT USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA..UHC,UHM	EA	1
53		XCFZZ		97499	204-032-006-21	FUSELAGE ASSY AFT USBL EFF 66-492 THRU 66-15022 SEE FIG.19 FOR NHA..UHC,UHM	EA	1
53		XCFZZ		97499	204-032-006-27	FUSELAGE ASSY AFT USBL EFF 66-15023 & SUBSEQUENT SEE FIG.19 FOR NHA..UHC,UHM	EA	1
53		XCFZZ		97499	204-031-006-3	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-1..................UHB	EA	1
53		XCFZZ		97499	204-031-006-15	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-13.................UHB	EA	1
53		XCFZZ		97499	204-031-006-27	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-25 & -49..........UHB	EA	1
53		XCFZZ		97499	204-031-006-73	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-71.................UHB	EA	1
53		XCFZZ		97499	204-031-006-111	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-109...........UHC,UHM	EA	1
53		XCFZZ		97499	204-032-006-3	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-1.............UHC,UHM	EA	1
53		XCFZZ		97499	204-032-006-23	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-21............UHC,UHM	EA	1
53		XCFZZ		97499	204-032-006-29	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-27............UHC,UHM	EA	1
53		XCFZZ		97499	204-031-006-5	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-1..................UHB	EA	1
53		XCFZZ		97499	204-031-006-17	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-13.................UHB	EA	1
53		XCFZZ		97499	204-031-006-29	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-25 & -49..........UHB	EA	1
53		XCFZZ		97499	204-031-006-75	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-71.................UHB	EA	1
53		XCFZZ		97499	204-031-006-113	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-109...........UHC,UHM	EA	1
53		XCFZZ		97499	204-032-006-5	.BEAM ASSY,OUTER-RH U/O PN 204-032-006-1.............UHC,UHM	EA	1
53		XCFZZ		97499	204-032-006-37	.BEAM ASSY,OUTER-RH U/O PN 204-032-006-21............UHC,UHM	EA	1
53		XCFZZ		97499	204-032-006-25	.BEAM ASSY,OUTER-RH U/O PN 204-032-006-27............UHC,UHM	EA	1
53		XCFZZ		97499	204-030-163-315	..BEAM ASSY-LH U/O PN 204-031-006-3 SEE FIG.54 FOR BREAKDOWN ....UHB	EA	1
53		XCFZZ		97499	204-030-163-353	..BEAM ASSY-LH U/O PN 204-031-006-15 SEE FIG.54 FOR BREAKDOWN...UHB	EA	1
53		XCFZZ		97499	204-030-163-379	..BEAM ASSY-LH U/O PN 204-031-006-27 SEE FIG.54 FOR BREAKDOWN...UHB	EA	1
53		XCFZZ		97499	204-030-163-449	..BEAM ASSY-LH U/O PN 204-031-006-73 SEE FIG.54 FOR BREAKDOWN...UHB	EA	1
53		XCFZZ		97499	204-030-163-433	..BEAM ASSY-LH U/O PN 204-031-006-111 SEE FIG.54 FOR BREAKDOWN...UHC,UHM	EA	1
53		XCFZZ		97499	204-030-163-483	..BEAM ASSY-LH U/O PN 204-032-006-3 SEE FIG.54 FOR BREAKDOWN ....UHC,UHM	EA	1
53		XCFZZ		97499	204-030-163-511	..BEAM ASSY-LH U/O PN 204-032-006-23 SEE FIG.54 FOR BREAKDOWN...UHC,UHM	EA	1
53		XCFZZ		97499	204-030-164-297	..BEAM ASSY-RH U/O PN 204-031-006-5 & -17 SEE FIG.54 FOR BREAKDOWN...UHB	EA	1
53		XCFZZ		97499	204-030-164-325	..BEAM ASSY-RH U/O PN 204-031-006-29 SEE FIG.54 FOR	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						BREAKDOWN..UHB		
53		XCFZZ		97499	204-030-164-361	..BEAM ASSY-RH U/O PN 204-031-006-75 SEE FIG.54 FOR BREAKDOWN..UHB	EA	1
53		XCFZZ		97499	204-030-164-365	..BEAM ASSY-RH U/O PN 204-031-006-113 SEE FIG.54 FOR BREAKDOWN..UHC,UHM	EA	1
53		XCFZZ		97499	204-030-164-367	..BEAM ASSY-RH U/O PN 204-032-006-5 SEE FIG.54 FOR BREAKDOWN ....UHC,UHM	EA	1
53		XCFZZ		97499	204-030-164-399	..BEAM ASSY-RH U/O PN 204-032-006-25 & -37 SEE FIG 54 FOR BREAKDOWN..UHC,UHM	EA	1
53		XCFZZ		97499	204-030-173-39	..SUPPORT INSTL-LH U/O PN 204-031-006-3,-15, -27,& -73 ....UHB	EA	1
53		XCFZZ		97499	204-030-173-43	..SUPPORT INSTL-RH U/O PN 204-031-006-5,-17, -29,& -75 ....UHB	EA	1
53	1	PAOZZ	5305-00-957-7812	96906	MS24693S276	...SCREW,MACHINE..UHB	EA	4
53	2	PAOZZ	5310-00-772-3491	97499	140-006-4	...WASHER,DIMPLED...UHB	EA	4
53	3	PAOZZ	5310-00-771-7348	96906	MS21048-3	...NUT,SELF-LOCKING,PL....................................UHB	EA	4
53	4	PAOZZ	1560-00-805-5078	97499	204-030-173-35	...PANEL,FUSELAGE-LH......................................UHB	EA	1
53	4	PAOZZ	1560-00-998-7645	97499	204-030-173-45	...PANEL,FUSELAGE-RH......................................UHB	EA	1
53		XCFZZ		97499	204-030-091-1	..SUPPORT INSTL-LH U/O PN 204-031-006-111, 204-032-006-3,-23,& -29...UHC,UHM	EA	1
53	4A	PAOZZ	1560-00-928-6257	97499	204-030-091-3	...SUPPORT,FUEL TANK -LH..........................UHC,UHM	EA	1
53	5	XCFZZ		97499	204-030-173-41	..FLOOR INSTL-LH U/O PN 204-031-006-3,-15, -27,& -73.....UHB	EA	1
53	5	XCFZZ		97499	204-030-173-42	..FLOOR INSTL-RH U/O PN 204-031-006-5,-17, -29,& -75.....UHB	EA	1
53	6	XCFZZ		97499	204-030-071-13	..COVER INSTL-LH U/O PN 204-031-006-111, 204-032-006-3,-23,& -29...UHC,UHM	EA	1
53	6	XCFZZ		97499	204-030-062-1	..PANEL INSTL-RH U/O PN 204-031-006-113, 204-032-006-5,-25,& -37...UHC,UHM	EA	1
53	7	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE U/U PN 204-030-173-41 & -42.............UHB	EA	18
53	8	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	...SCREW,MACHINE U/O PN 204-030-173-41...................UHB	EA	4
53	8	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	...SCREW,MACHINE U/O PN 204-030-173-42...................UHB	EA	6
53	9	PAOZZ	5310-00-771-7348	96906	MS21048-3	...NUT,SELF-LOCKING,PL U/O PN 204-030-173-41.............UHB	EA	26
53	9	PAOZZ	5310-00-771-7348	96906	MS21048-3	...NUT,SELF-LOCKING,PL U/O PN 204-030-173-42.............UHB	EA	28
53	10	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE U/O PN 204-030-071-13..............UHC,UHM	EA	26
53	11	PAOZZ	5306-00-182-2057	88044	AN3H4A	...BOLT,MACHINE U/O PN 204-030-071-13...............UHC,UHM	EA	8
53	12	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT U/O PN 204-030-071-13................UHC,UHM	EA	8
53	13	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL U/O PN 204-030-071-13........UHC,UHM	EA	32
53	14	PAOZZ	5310-00-761-4221	96906	MS21073L3	...NUT,SELF-LOCKING,PL U/O PN 204-030-071-13........UHC,UHM	EA	2
53	15	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE U/O PN 204-030-062-1...............UHC,UHM	EA	13
53	16	PAOZZ	5310-00-764-7282	96906	MS21047L3	...NUT,SELF-LOCKING,PL U/O PN 204-030-062-1.........UHC,UHM	FA	24
53	17	PAOZZ	5306-00-182-2057	88044	AN3H4A	...BOLT,MACHINE U/O PN 204-030-173-41,-42,& 204-030-062-1 ....UHB,UHC,UHM	EA	2
53	18	PAOZZ	5306-00-182-2058	88044	AN3H5A	...BOLT,MACHINE U/O PN 204-030-173-41,-42,& 204-030-062-1 ....UHB,UHC,UHM	FA	1
53	19	PAOZZ	5306-00-182-2061	88044	AN3H10A	...BOLT,MACHINE U/O PN 204-030-173-41,-42,& 204-030-062-1 ....UHB,UHC,UHM	EA	2
53	20	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT U/O PN 204-030-173-41,-42,& 204-030-062-1 ....UHB,UHC,UHM	EA	5
53	21	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON U/O PN 204-030-173-41,-42,& 204-030-062-1.......................................UHB,UHC,UHM	EA	2
53	22	PAOZZ	5310-00-167-0818	88044	AN960-10	...WASHER,FLAT U/O PN 204-030-173-41,-42,& 204-030-062-1	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHB,UHC,UHM		
53	23	XDOZZ		97499	120-035E24-6	...SHIM U/O PN 204-030-173-41,-42,& 204-030-062-1 ....UHB,UHC,UHM	EA	1
53	24	PAOZZ	1560-00-872-1135	97499	204-060-931-3	...BRACKET,COWL LATCH U/O PN 204-030-173-41,-42,& 204-030-062-1..UHB,UHC,UHM	EA	1
53	25	PAOZZ	1560-00-075-9335	97499	204-060-932-1	...BRACKET,COWL LATCH U/O PN 204-030-173-41..............UHB	EA	1
53	25	PAOZZ	1560-00-075-9336	97499	204-060-932-2	...BRACKET,COWL LATCH U/O PN 204-030-173-42 & 204-030-062-1 ....UHB,UHC,UHM	EA	1
53	26	PAOZZ	1560-00-203-1178	97499	204-030-173-65	...FLOOR,AIRCRAFT -LH U/O PN 204-030-173-41 USE-AFT-CMPL-W MWO 55-1500-219-50/1.......................................UHB	EA	1
53	27	PADZZ	1560-00-427-8268	97499	204-030-173-46	...SKIN,AIRCRAFT U/W PN 204-030-173-37...................UHB	EA	1
53	28	PADZZ	1560-00-203-1168	97499	204-030-173-66	...FLOOR,AIRCRAFT -RH U/O PN 204-030-173-42 USE-AFT-CMPL-W MWO 55-1500-219-50/1.......................................UHB	EA	1
53	29	XDOZZ		97499	80-011P12F10	...FASTENER,PANEL USE WHEN CRASHWORTHY FUEL SYSTEM IS INSTALLED...UHB	EA	6
53	30	PADZZ	5325-01-036-6677	97499	80-011S120080	...GROMMEET,SLEEVE USE WHEN CRASHWOPTHY FUEL SYSTEM IS INSTALLATED...UHB	EA	1
53	31	PADZZ	1560-00-427-8274	97499	204-030-173-47	...SKIN,AIRCRAFT U/W PN 204-030-173-38...................UHB	EA	1
53	32	PAFFF	1560-00-869-0715	97499	204-030-071-15	...COVER,ACCESS -LH U/O PN 204-030-071-13...........UHC,UHM	EA	1
53	32	PAFFF	1560-00-148-0836	97499	204-030-071-33	...COVER,ACCESS USE WHEN CRASHWORTHY FUEL SYSTEM IS INSTALLED...UHC,UHM	EA	1
53	32A	PAFFF	1560-00-944-3167	97499	204-030-062-3	...PANEL,FUSELAGE,AIRC -RH U/O PN 204-030-062-1......UHC,UHM	EA	1
53	32A	PAFFF	1560-00-146-6613	97499	204-030-062-17	...PANEL,WORK DECK USE WHEN CRASHWORTHY FUEL SYSTEM IS INSTALLED...UHC,UHM	EA	1
53	32B	PAOZZ	5310-00-905-5473	80205	NAS1474A3	...NUT,SELF-LOCKING,PL..............................UHC,UHM	EA	5
53		XCFZZ		97499	204-030-280-25	..PANEL INSTL-LH...UHB	EA	1
53		XCFZZ		97499	204-030-067-43	..PANEL INSTL-LH.....................................UHC,UHM	EA	1
53		XCFZZ		97499	204-030-279-33	..PANEL INSTL-RH...UHB	EA	1
53		XCFZZ		97499	204-030-066-55	..PANEL INSTL-RH U/O PN 204-031-006-113.............UHC,UHM	EA	1
53		XCFZZ		97499	204-030-066-57	..PANEL INSTL-RH U/O PN 204-032-006-5,-25, & -37.....UHC,UHM	EA	1
53	33	PAOZZ	1560-00-947-6228	97499	204-030-094-1	...SUPPORT,STRUCTURAL................................UHC,UHM	EA	1
53	34	PAOZZ	1560-00-947-6229	97499	204-030-099-1	...SUPPORT,STRUCTURAL................................UHC,UHM	EA	1
53	35	PAOZZ	1560-00-937-1102	97499	204-031-540-2	...FILLER BLOCK,ARM SU...............................UHC,UHM	EA	1
53	36	PBFFF	1560-00-111-3157	97499	204-030-280-27	...DECK ASSEMBLY,SERVI -LH U/O PN 204-030-280-25.........UHB	EA	1
53	37	PADZZ	1560-00-427-8282	97499	204-030-280-35	...SKIN,AIRCRAFT U/W PN 204-030-280-27...................UHB	EA	1
53	38	PBFFF	1560-00-089-7631	97499	204-030-067-39	...PANEL,FUSELAGE,AIRC U/O PN 204-030-067-43.........UHC,UHM	EA	1
53	39	PADZZ	1560-00-427-8265	97499	204-030-067-45	...SKIN,AIRCRAFT U/W PN 204-031-067-39..............UHC,UHM	EA	1
53	40	PADZZ	1560-00-484-1021	97499	204-031-095-1	...COVER,ACCESS U/O PN 204-030-066-57...............UHC,UHM	EA	2
53	41	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON......................UHC,UHM	EA	10
53	42	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT.......................................UHC,UHM	EA	10
53	43	PAOZZ	5305-00-912-7308	88044	AN525-10R14	...SCREW, MACHINE....................................UHC,UHM	EA	10
53	44	PBFFF	1560-00-111-3155	97499	204-030-279-35	...DECK ASSEMBLY,SERVI -RH U/O PN 204-030-279-33.........UHB	EA	1
53	45	PBFFF	1560-00-435-7912	97499	204-030-066-59	...PANEL,FUSELAGE,AIRC...............................UHC,UHM	EA	1
53	46	PADZZ	1560-00-426-1389	97499	204-030-066-63	...SKIN,AIRCRAFT U/W PN 204-030-066-59..............UHC,UHM	EA	1
53		XCFZZ		97499	204-030-080-5	..PANEL INSTL U/O PN 204-031-006-111, 204-032-006-3,-23,& -29..UHC,UHM	EA	1
53	48	PAFFF	1560-00-918-2686	97499	204-030-080-53	...COVER,ACCESS......................................UHC,UHM	EA	1
53	49	PADZZ	5305-00-781-9057	96906	MS27039-1-08	....SCREW,MACHINE....................................UHC,UHM	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
53	49A	MOOZZ		97499	204-030-080-21	....SEAL..........................UHB,UHC,UHM	EA	1
53	50	PAOZZ	1680-00-839-1756	97499	205-030-493-1	....HANDLE ASSY,CABIN R..........................UHC,UHM	EA	1
53	51	PAFZZ	1560-00-881-0273	97499	204-030-070-3	....PANEL,FUSELAGE, AIRCRAFT,UPPER-LH..........UHC,UHM	EA	1
53		XCFZZ		97499	204-030-068-1	..PANEL INSTL U/O PN 204-031-006-111, 204-032-006-3,-23,& -29..........................UHC,UHM	EA	1
53	52	XDFZZ	5310-00-076-9900	97499	140-001-1	...WASHER,FLAT..........................UHC,UHM	EA	141
53	53	PBFZZ	1560-00-898-8944	97499	204-030-068-3	...PANEL,FUEL CELL..........................UHC,UHM	EA	1
53		XCFZZ		97499	204-030-074-1	..FAIRING INSTL U/O PN 204-031-006-111, 204-032-006-3,-23,& -29..........................UHC,UHM	EA	1
53	54	PAFFF	1560-00-928-6253	97499	204-030-074-3	...FAIRING ASSEMBLY,FU..........................UHC,UHM	EA	1
53		XCFZZ		97499	204-030-199-15	..SHELF INSTL U/O PN 204-031-006-3 & -15..........UHB	EA	1
53		XCFZZ		97499	204-030-199-17	..SHELF INSTL U/O PN 204-031-006-27,-73, -111,204-032-006-3, -23,& -29..........................UHB,UHC,UHM	EA	1
53	56	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE..........................UHB,UHC,UHM	EA	17
53	57	PAOZZ	5310-00-167-0818	88044	AN960-10	...WASHER,FLAT..........................UHB,UHC,UHM	EA	17
53	58	PAOZZ	5310-00-764-7282	96906	MS21047L3	...NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	16
53	59	PAOZZ	5310-00-021-3884	96906	MS21086L3	...NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	1
53	60	PAOZZ	5305-00-912-7308	88044	AN525-10R14	...SCREW, MACHINE U/O PN 204-030-199-17..........UHB,UHC,UHM	EA	3
53	61	MFOZZ	1560-00-034-3716	97499	204-032-307-1	...RETAINER U/O PN 204-030-199-17..........UHB,UHC,UHM	EA	1
53	62	PAOZZ	1560-00-010-0387	97499	204-030-965-5	...SHELF ASSEMBLY,BATT..........................UHB,UHC,UHM	EA	1
53		XCFZZ		97499	204-031-321-1	..FLOOR INSTL-LH U/O PN 204-031-006-3 & -15..........UHB	EA	1
53		XCFZZ		97499	204-031-321-65	..FLOOR INSTL-LH U/O PN 204-031-006-27 & -73..........UHB	EA	1
53		XCFZZ		97499	204-031-321-115	..FLOOR INSTL-LH U/O PN 204-031-006-111..........UHC,UHM	EA	1
53		XCFZZ		97499	204-031-321-123	..FLOOR INSTL-LH U/O PN 204-032-006-3,-23, & -29.....UHC,UHM	EA	1
53	63	PAOZZ	5305-00-180-0014	88044	AN525-10R12	...SCREW,MACHINE..........................UHB,UHC,UHM	EA	61
53	64	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	...SCREW,MACHINE..........................UHB,UHC,UHM	EA	1
53	65	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..........................UHB,UHC,UHM	EA	62
53	66	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	61
53	67	PAOZZ	5310-00-734-1850	96906	MS21071L3	...NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	1
53	67A	AOOOZ	1560-00-133-6868	97499	204-070-098-1	...TRACK,SEAT..........................UHB,UHC,UHM	EA	2
53	68	PAOZZ	5310-00-807-1474	96906	MS21042L3	....NUT,SELF-LOCKING,EX HEXAGON..........UHB,UHC,UHM	EA	1
53	69	PAOZZ	5310-00-167-0753	88044	AN960PD10L	....WASHER,FLAT..........................UHB,UHC,UHM	EA	2
53	70	PAOZZ	5306-00-182-2057	88044	AN3H4A	....BOLT,MACHINE..........................UHB,UHC,UHM	EA	1
53	71	PAOZZ	1560-00-996-7486	97499	204-070-098-3	....TRACK,PILOT..........................UHB,UHC,UHM	EA	1
53	78	XBOFF	1560-00-176-2038	97499	204-031-321-3	...FLOOR,AIRCRAFT U/O PN 204-031-321-1..........UHB	EA	1
53	78	PAOFF	1560-00-181-3561	97499	204-031-321-67	...FLOOR,AIRCRAFT U/O PN 204-031-321-65..........UHB	EA	1
53	78	PAOFF	1560-00-181-5625	97499	204-031-321-117	...FLOOR,AIRCRAFT U/O PN 204-031-321-115 & -123......UHC,UHM	EA	1
53	78	XBOFZ	1560-00-181-4298	97499	204-031-321-26	...FLOOR,AIRCRAFT..........................UHC,UHM	EA	1
53	79	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	....SCREW,MACHINE U/O PN 204-031-321-3 & -67..........UHB	EA	4
53	80	PAOZZ	5310-00-728-7716	96906	MS21069L3	....NUT,SELF-LOCKING,PL U/O PN 204-031-321-3 & -67.......UHB	EA	4
53	81	PAOZZ	5340-00-995-6925	97499	204-031-323-7	....COVER,ACCESS U/O PN 204-031-321-3 & -67..........UHB	EA	2
53	81A	PBOZZ	1010-00-453-9450	97499	204-030-011-47	....CHUTE ASSEMBLY..........................UHB,UHC,UHM	EA	1
53	82	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	....PIN,STRAIGHT, HEADED..........................UHB,UHC,UHM	EA	10
53	83	PAOZZ	5315-00-412-9867	97499	100-051-1	....PIN,STRAIGHT,HEADED..........................UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
53	84	PAOZZ	1690-00-802-3204	98313	FDA1886	....RING,DOOR ASSEMBLY,.........................UHB,UHC,UHM	EA	10
53	85	PAOZZ	5325-00-195-0904	00624	34113-30	....STUC,SNAPSLIDE FAST.........................UHB,UHC,UHM	EA	-- 1
53	86	PAOZZ	5310-00-187-2400	88044	AN960PD616	....WASHER,FLAT.................................UHB,UHC,UHM	FA	11
53	87	PAOZZ	5310-00-807-1477	96906	MS21042L6	...NUT,SELF-LOCKING,EX HEXAGON..................UHB,UHC,UHM	EA	11
53	88	PAOZZ	5305-00-912-7308	88044	AN525-10R14	....SCREW, MACHINE..............................UHB,UHC,UHM	EA	6
53	89	PAOZZ	5310-00-728-7716	96906	MS21069L3	....NUT,SELF-LOCKING,PL.........................UHB,UHC,UHM	EA	6
53	90	XDOZZ	5305-00-92°-7857	96906	MS27039-1-09	....SCREW,MACHINE...............................UHB,UHC,UHM	EA	4
53	91	PAOZZ	5310-00-772-3720	96906	MS21075L3	....NUT,SELF-LOCKING,PL.........................UHB,UHC,UHM	EA	1
53	92	PAOZZ	5325-00-185-0012	96906	MS35489-35	...GROMMET,NONMETALLIC..........................UHB,UHC,UHM	EA	1
53	93	PAOZZ	5305-00-282-0135	88044	AN525-416R8	...SCREW,MACHINE................................UHB,UHC,UHM	EA	6
53	94	PAOZZ	5310-00-184-9001	88044	AN960PD416L	...WASHER,FLAT..................................UHB,UHC,UHM	EA	6
53	95	PAOZZ	5310-00-761-6830	96906	MS21073L4	...NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	4
53	95A	PBDZZ	1560-00-103-5907	97499	204-031-321-71	...FLOOR,AIRCRAFT U/O P/N 204-031-321-65.........UHB,UHC,UHM	EA	1
53	96	PAOZZ	5310-00-728-7717	96906	MS21069L4	...NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	2
53	97	PBOZZ	1560-00-795-0597	97499	204-031-327-1	...COVER,ACCESS U/O PN 204-031-321-1,-65,& -115 ....UHB,UHC,UHM	EA	1
53	98	PBOZZ	1560-00-915-5928	97499	204-030-327-13	...DOOR ASSEMBLY,AIRCR U/O PN 204-031-321-123........UHC,UHM	EA	1
53	99	PAOZZ	5365-00-618-1792	80205	NAS42004-16	...SPACER,SLEEVE................................UHB,UHC,UHM	EA	6
53	100	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	6
53	101	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE................................UHB,UHC,UHM	EA	5
53	102	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	5
53	103	MFOZZ	1560-00-765-7855	97499	204-030-337-3	...COVER,ACCESS.................................UHB,UHC,UHM	EA	1
53		XCFZZ		97499	204-031-320-1	..FLOOR INSTL-RH U/O PN 204-031-006-5.........................UHB	EA	1
53		XCFZZ		97499	204-031-320-107	..FLOOR INSTL-RH U/O PN 204-031-006-17........................UHB	EA	1
53		XCFZZ		97499	204-031-320-55	..FLOOR INSTL-RH U/O PN 204-031-006-29 & -75..............UHB	EA	1
53		XCFZZ		97499	204-031-320-145	..FLOOR INSTL-RH U/O PN 204-031-006-113..............UHC,UHM	EA	1
53		XCFZZ		97499	204-031-320-155	..FLOOR INSTL-RH U/O PN 204-032-006-5,-25, & -37.....UHC,UHM	EA	1
53	104	PAOZZ	5305-00-180-0014	88044	AN525-10R12	...SCREW,MACHINE................................UHB,UHC,UHM	EA	62
53	105	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..................................UHB,UHC,UHM	EA	62
53	106	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	62
53	107	AOOOZ	1560-00-133-6868	97499	204-070-098-1	...TRACK,SEAT...................................UHB,UHC,UHM	EA	2
53	108	PAOZZ	5310-00-807-1474	96906	MS21042L3	....NUT,SELF-LOCKING,EX HEXAGON.................UHB,UHC,UHM	EA	1
53	109	PAOZZ	5310-00-167-0753	88044	AN960PD10L	....WASHER,FLAT.................................UHB,UHC,UHM	EA	2
53	110	PAOZZ	5306-00-182-2057	88044	AN3H4A	....BOLT,MACHINE................................UHB,UHC,UHM	EA	1
53	111	PAOZZ	1560-00-996-7486	97499	204-070-098-3	....TRACK,PILOT AND CO-PILOT....................UHB,UHC,UHM	EA	1
53	112	XBOFF	1560-00-H25-4567	97499	204-031-320-5	...FLOOR ASSEMBLY U/O PN 204-031-320-1.......................UHB	EA	1
53	112	XBOFF	1560-00-H25-7601	97499	204-031-320-115	...FLOOR ASSEMBLY U/O PN 204-031-320-107.....................UHB	EA	1
53	112	PAOFF	1560-00-922-8248	97499	204-031-320-61	...FLOOR,AIRCRAFT U/O PN 204-031-320-55 & -145 ....UHB,UHC,UHM	EA	1
53	112	PBOFF	1560-00-922-8249	97499	204-031-320-159	...FLOOR,FUSELAGE U/O PN 204-031-320-155.............UHC,UHM	EA	1
53	113	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE................................UHB,UHC,UHM	EA	8
53	114	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	FA	8
53	115	PAOZZ	5305-00-282-0135	88044	AN525-416R8	...SCREW,MACHINE................................UHB,UHC,UHM	EA	4
53	116	PAOZZ	5310-00-761-6830	96906	MS21073L4	...NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
53	117	PAOZZ	1560-00-765-7854	97499	204-030-325-1	...COVER,ACCESS....................................UHB,UHC,UHM	EA	1
53	118	PAOZZ	5325-00-185-0012	96906	MS35489-35	...GROMMET,NONMETALLIC..............................UHB,UHC,UHM	EA	2
53	119	PBOFF	1560-00-181-3520	97499	204-031-320-3	...FLOOR,AIRCRAFT U/O PN 204-031-320-1....................UHB	EA	1
53	119	PBOFF	1560-00-179-5343	97499	204-031-320-109	...FLOOR,AIRCRAFT U/O PN 204-031-320-107..................UHB	EA	1
53	119	PAOFF	1560-00-922-2713	97499	204-031-320-57	...FLOOR,AIRCRAFT U/O PN 204-031-320-55,-145, & -155 ....UHB,UHC,UHM	EA	1
53	120	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	....PIN,STRAIGHT, HEADED...........................UHB,UHC,UHM	EA	9
53	121	PAOZZ	5315-00-412-9867	97499	100-051-1	....PIN,STRAIGHT,HEADED............................UHB,UHC,UHM	EA	1
53	122	PAOZZ	1680-00-802-3204	99313	FDA1886	....RING,DOOR ASSEMBLY.............................UHB,UHC,UHM	EA	9
53	123	PAOZZ	5325-00-195-0904	00624	34113-30	....STUD,SNAPSLIDE FAST............................UHB,UHC,UHM	EA	1
53	124	PAOZZ	5310-00-187-2400	88044	AN960PD616	....WASHER,FLAT....................................UHB,UHC,UHM	EA	10
53	125	PAOZZ	5310-00-807-1477	96906	MS21042L6	....NUT,SELF-LOCKING,EX HEXAGON....................UHB,UHC,UHM	EA	10
53	126	PAOZZ	5310-00-772-3720	96906	MS21075L3	....NUT,SELF-LOCKING,PL............................UHB,UHC,UHM	EA	2
53	127	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	....SCREW,MACHINE..................................UHB,UHC,UHM	EA	4
53	128	PAOZZ	5305-00-206-1201	88044	AN525-10R14	....SCREW, MACHINE.................................UHB,UHC,UHM	EA	6
53	129	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL.............................UHB,UHC,UHM	EA	6
53	130	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE...................................UHB,UHC,UHM	EA	10
53	131	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL.............................UHB,UHC,UHM	EA	10
53	132	AOOOO	1560-00-H25-7603	97499	204-031-323-13	...DOOR,ACCESS U/O PN 204-031-320-1,-55,& -107............UHB	EA	1
53	133	PAOOO	1560-00-794-2580	97499	204-031-323-21	...COVER,ACCESS U/O PN 204-031-320-145 & -155........UHC,UHM	EA	1
53	134	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	....SCREW,MACHINE..................................UHB,UHC,UHM	EA	6
53	135	PAOOO	1560-00-066-9053	97499	204-031-323-15	....COVER,ACCESS U/O PN 204-031-323-1 & -13...............UHB	EA	1
53	136	PAOZZ	5310-00-728-7716	96906	MS21069L3	.....NUT,SELF-LOCKING,PL..................................UHB	EA	6
53	137	PAOZZ	5340-00-995-6925	97499	204-031-323-7	....COVER,ACCESS...................................UHB,UHC,UHM	EA	1
53	137A	XCFZZ		97499	204-031-055-1	..CHUTE INST AMMUNITION-LH U/O PN 204-031-006-111,204-032-006-3,-23,-29...UHC,UHM	EA	1
53	138	PAOZZ	1560-00-929-5803	97499	204-031-055-5	...CHUTE ASSEMBLY,AMMU.................................UHC,UHM	EA	1
53	138A	XCFZZ		97499	204-031-055-3	..CHUTE INST AMMUNITION-RH U/O PN 204-031-006-113,204-032-006-5,-25,-37...UHC,UHM	EA	1
53	139	PAOZZ	1560-00-928-6252	97499	204-031-055-7	...CHUTE ASSEMBLY,AMMU.................................UHC,UHM	EA	1
53	140	PAOZZ	5340-00-866-9531	97499	204-030-194-1	..TRACK,SLIDING DOOR CARGO-LH U/O PN 204-031-006-3,-15,-27 & -73...UHB	EA	1
53	140	PAOZZ	5340-00-930-7464	97499	204-030-065-3	..TRACK,SLIDING DOOR CARGO-LH U/O PN 204-031-006-111, 204-032-006-3,-23, & -29.....................................UHC,UHM	EA	1
53	140	PAOZZ	5340-00-795-1157	97499	204-030-194-3	..TRACK,DOOR CARGO-RH U/O PN 204-031-006-5,-17,-29, & -75 ....UHB	EA	1
53	140	PAOZZ	5340-00-989-4254	97499	204-030-194-9	..TRACK,SLIDING DOOR CARGO-RH U/O PN 204-031-006-113,204-032-006-5,-25, & -37.....................................UHC,UHM	EA	1
53	141	PAOZZ	1560-00-883-1698	97499	204-030-175-21	..PANEL,FUSELAGE,AIRC -LH..............................UHC,UHM	EA	1
53	141	PAOZZ	1560-00-072-0813	97499	204-031-176-25	..PANEL,FUSELAGE,AIRC -RH..............................UHC,UHM	EA	1
53	142	PAOZZ	1560-00-881-0301	97499	204-030-191-25	..PANEL,FUSELAGE,AIRC -LH..............................UHC,UHM	EA	1
53	142	PAOZZ	1560-00-881-0300	97499	204-030-191-26	..PANEL,FUSELAGE,AIRC -RH..............................UHC,UHM	EA	1
53	142	PBOZZ	1560-00-172-9070	97499	204-030-191-43	..PANEL ASSEMBLY, FUE...UHB	EA	1
53	143	PBOOF	1560-00-843-1224	97499	204-030-287-85	.DOOR ASSY,EQUIPMENT -LH SEE FIG.63 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
53	143	PAOOO	1560-00-987-3307	97499	204-030-287-72	.DOOR ASSY,EQUIPMENT -RH SEE FIG.63 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
53	144	PBOOD	1560-00-736-4029	97499	204-031-347-1	.DOOR ASSEMBLY,LEFT SEE FIG.63 FOR BREAKDOWN.....UHB,UHC,UHM	EA	1
53	144	PBOOD	1560-00-736-4030	97499	204-031-347-2	.DOOR,ACCESS -RH SEE FIG 63 FOR BREAKDOWN........UHB,UHC,UHM	EA	1

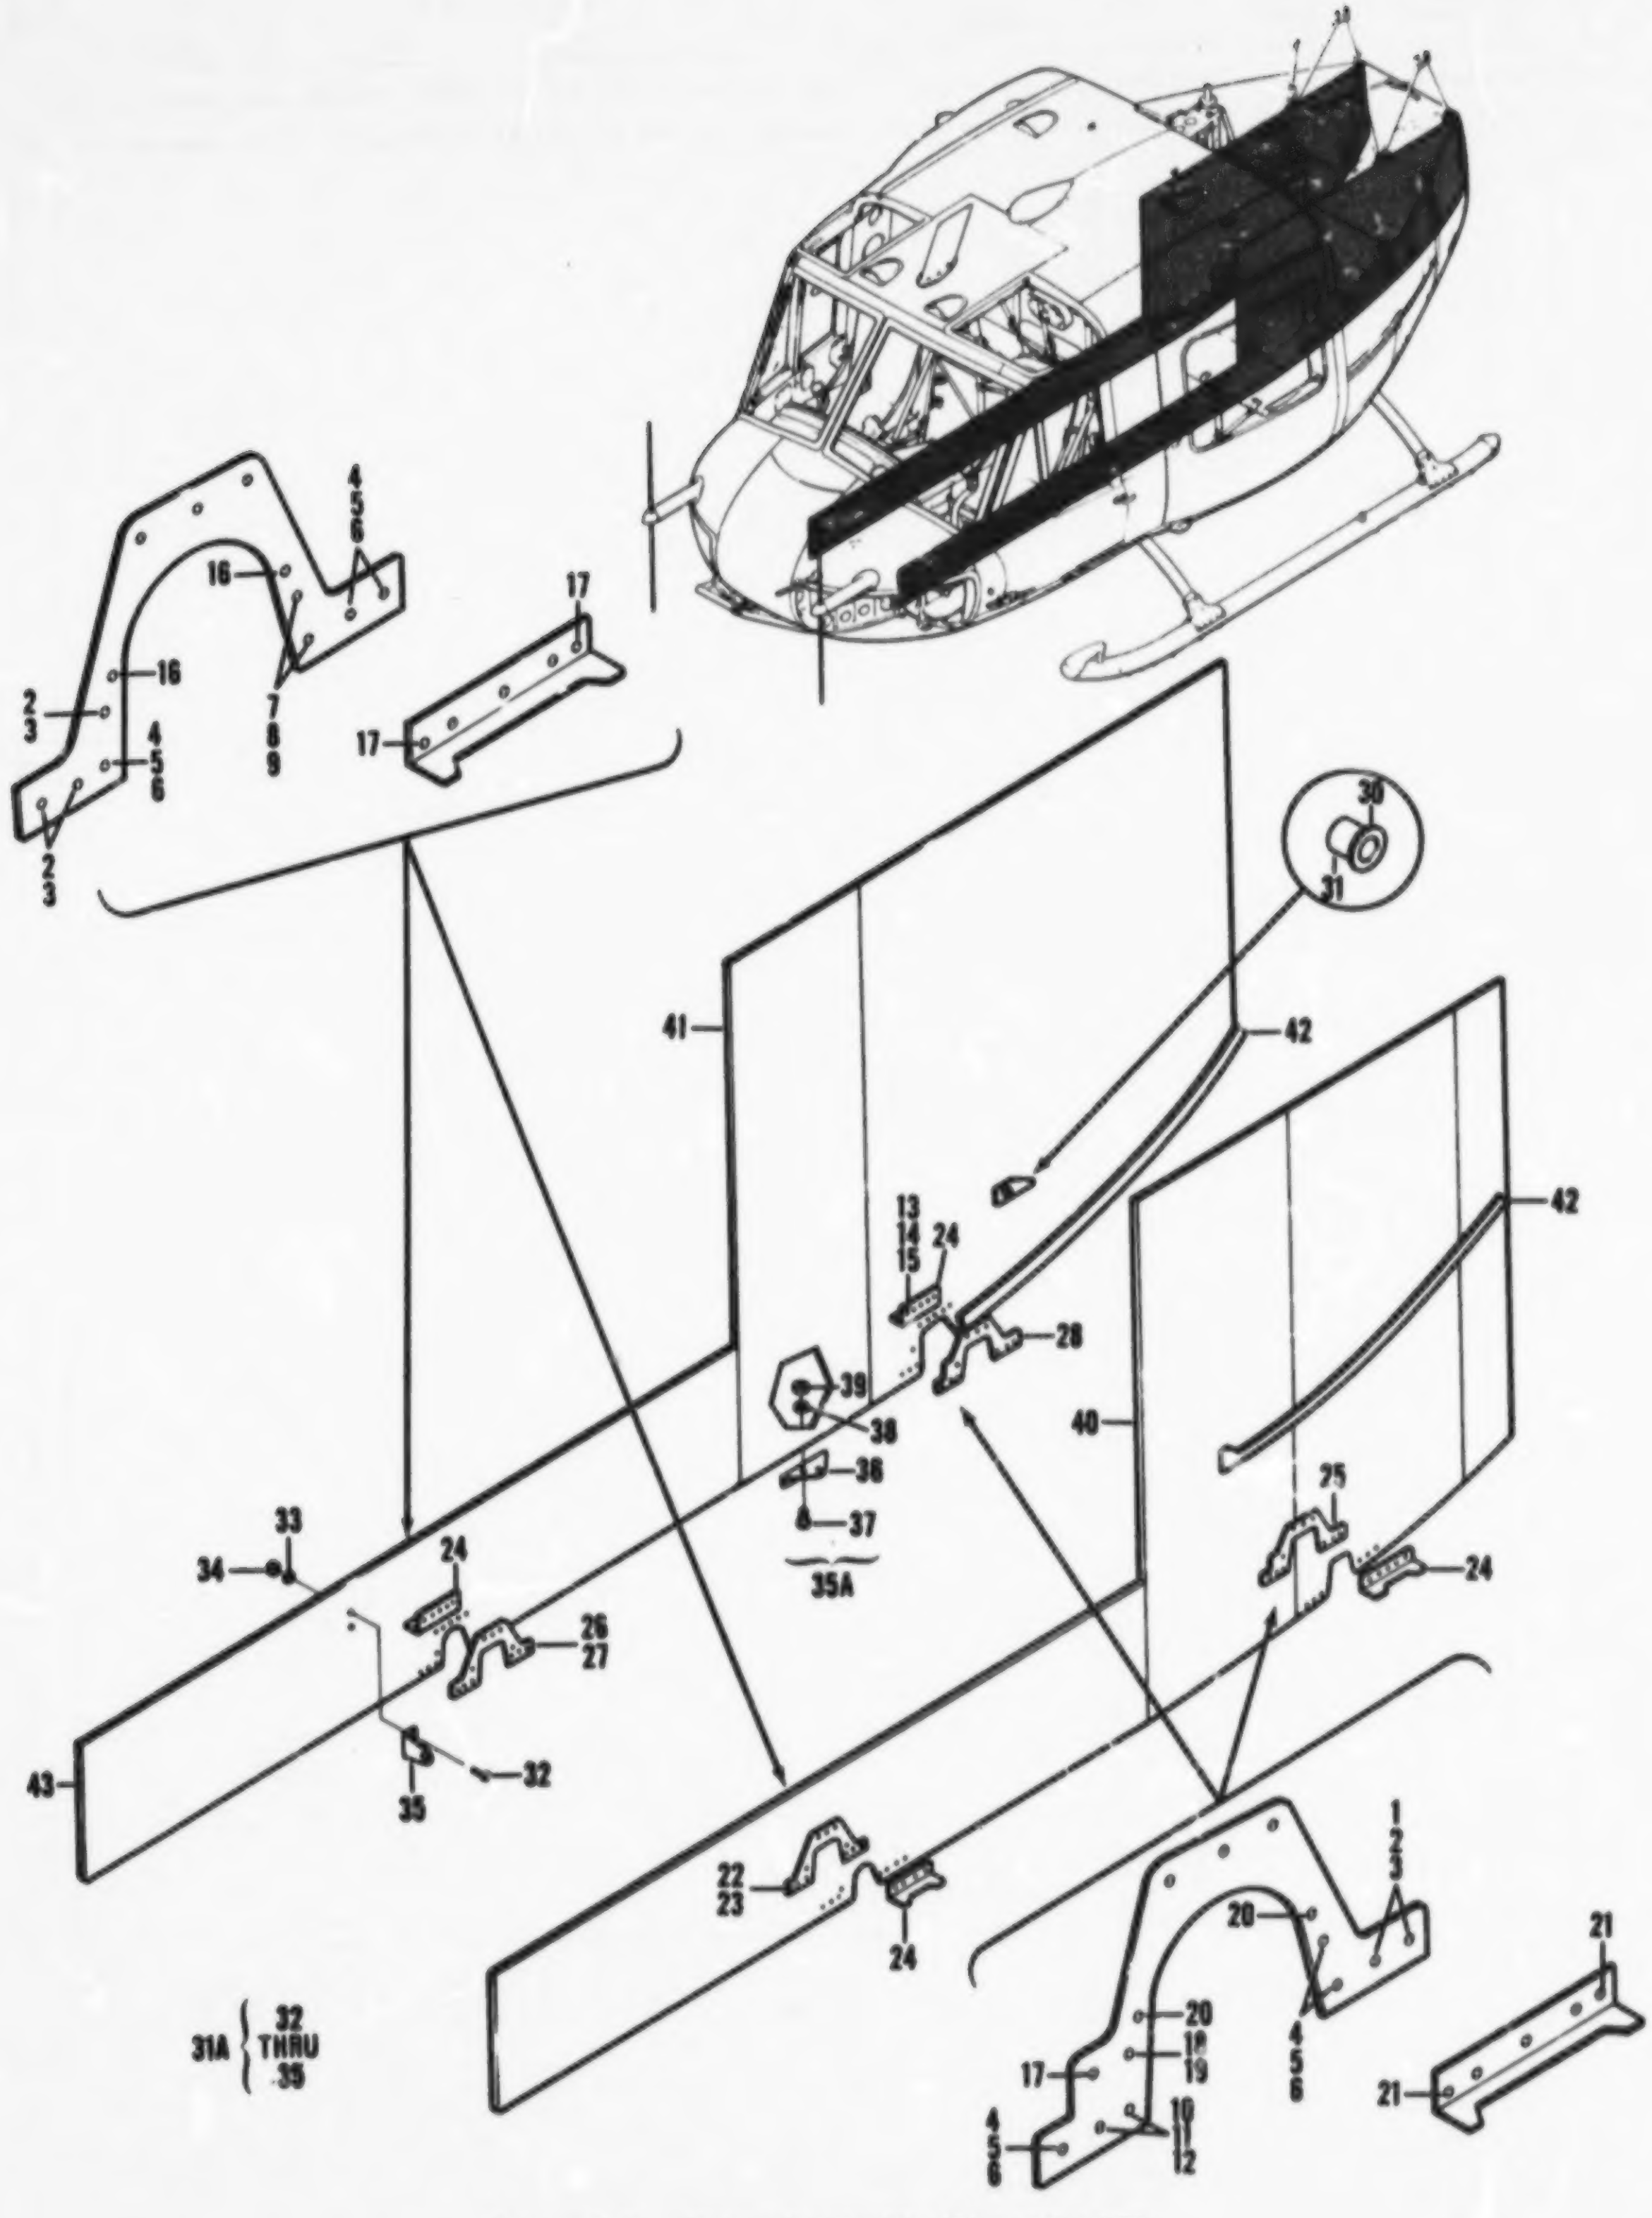
4
5
6
16
17
16
2
3
7
8
9
17
4
5
6
2
3
30
31
41
42
42
13
14
15
24
28
39
38
40
36
37
35A
25
33
34
24
26
27
24
43
32
35
22
23
24
1
2
3
20
21
31A
32
THRU
35
20
18
19
17
4
5
6
10
11
12
4
5
6
21

Figure 54. Beam Assembly (Sheet 1 of 2)

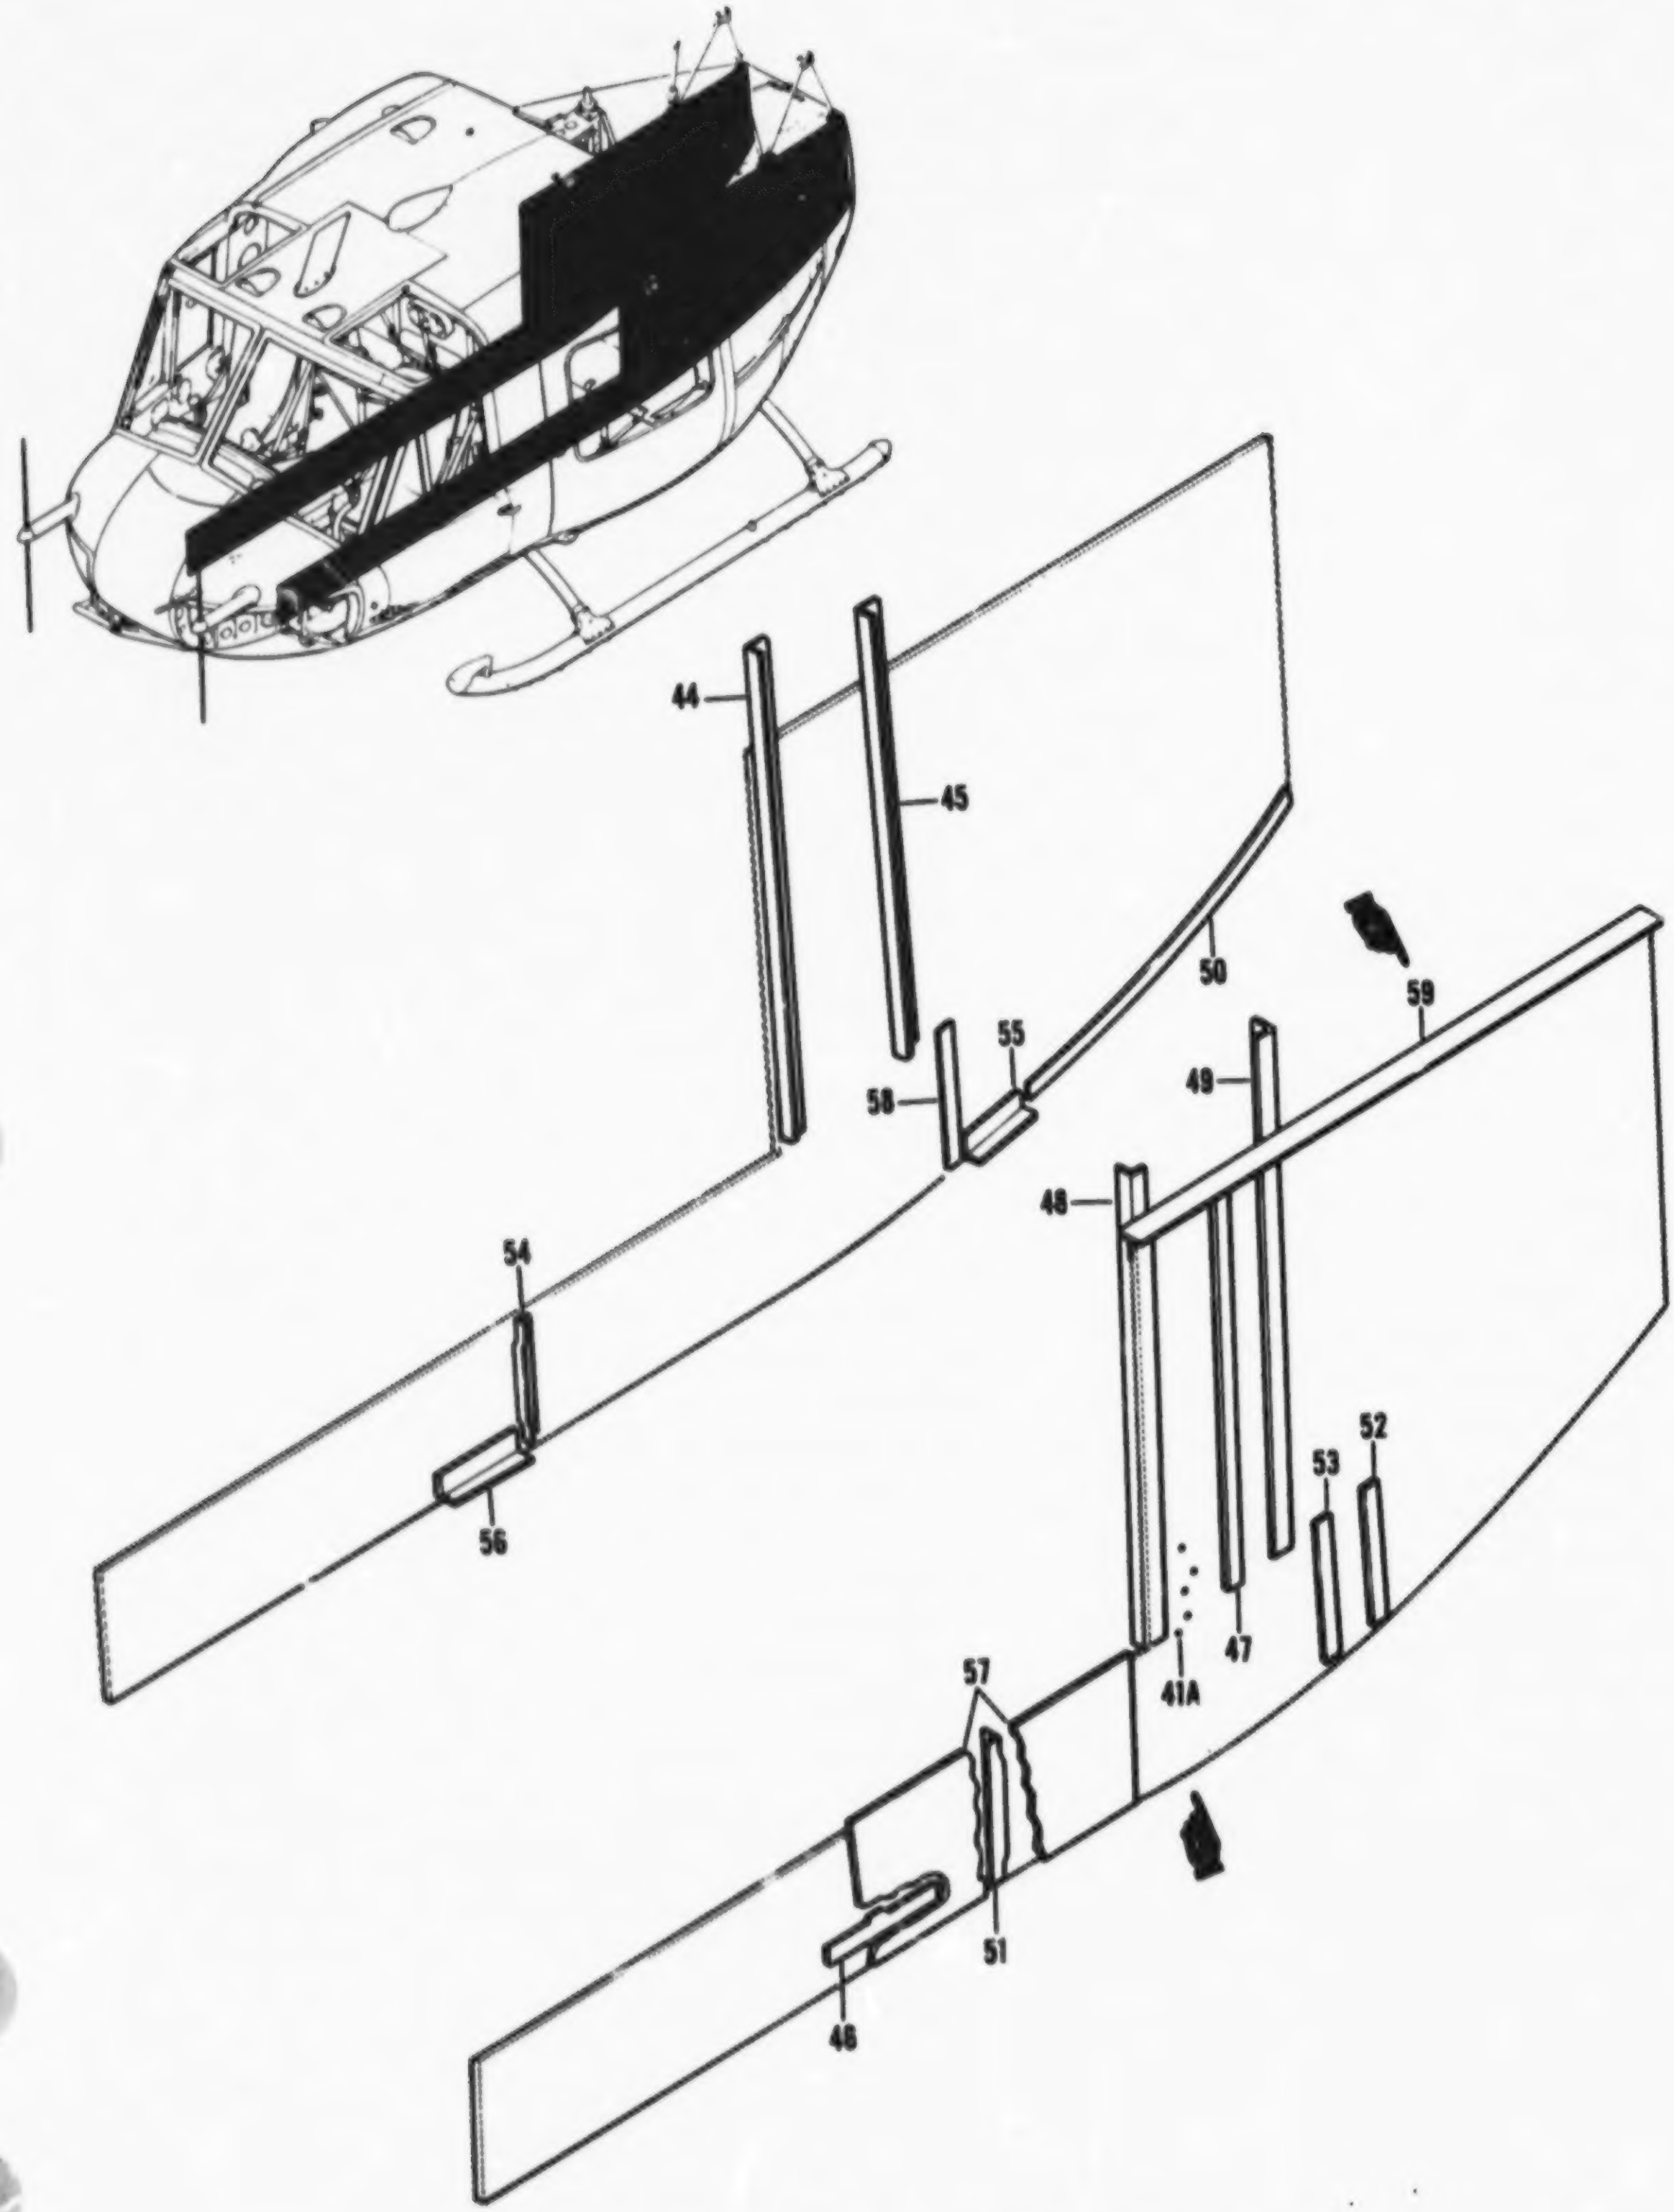
44
45
50
59
55
49
58
48
54
56
53
52
47
41A
57
51
46

Figure 54. Beam Assembly (Sheet 2 of 2)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
54		XCFZZ		97499	204-030-163-315	BEAM ASSY-LH USBL EFF 62-1872 THRU 62-1996 SEE FIG.53 FOR NHA..........UHB	EA	1
54		XCFZZ		97499	204-030-163-353	BEAM ASSY-LH USBL EFF 62-1997 THRU 62-12555 SEE FIG.53 FOR NHA..........UHB	EA	1
54		XCFZZ		97499	204-030-163-379	BEAM ASSY-LH USBL EFF 63-8500 THRU 63-12952 SEE FIG.53 FOR NHA..........UHB	EA	1
54		XCFZZ		97499	204-030-163-449	BEAM ASSY-LH USBL EFF 64-13902 THRU 64-14100 SEE FIG.53 FOR NHA..........UHB	EA	1
54		XCFZZ		97499	204-030-163-433	BEAM ASSY-LH USBL EFF 64-14101 THRU 64-14191 SEE FIG.53 FOR NHA..........UHC,UHM	EA	1
54		XCFZZ		97499	204-030-163-483	BEAM ASSY-LH USBL EFF 65-9416 THRU 65-12772 SEE FIG.53 FOR NHA..........UHC,UHM	EA	1
54		XCFZZ		97499	204-030-163-511	BEAM ASSY-LH USBL EFF 66-492 & SUBSEQUENT SEE FIG.53 FOR NHA..........UHC,UHM	EA	1
54		XCFZZ		97499	204-030-164-297	BEAM ASSY-RH USBL EFF 62-1872 THRU 62-12555 SEE FIG.53 FOR NHA..........UHB	EA	1
54		XCFZZ		97499	204-030-164-325	BEAM ASSY-RH USBL EFF 63-8500 THRU 63-12952 SEE FIG.53 FOR NHA..........UHB	EA	1
54		XCFZZ		97499	204-030-164-361	BEAM ASSY-RH USBL EFF 64-13902 THRU 64-14100 SEE FIG.53 FOR NHA..........UHB	EA	1
54		XCFZZ		97499	204-030-164-365	BEAM ASSY-RH USBL EFF 64-14101 THRU 64-14191 SEE FIG.53 FOR NHA..........UHC,UHM	EA	1
54		XCFZZ		97499	204-030-164-367	BEAM ASSY-RH USBL EFF 65-9416 THRU 65-12772 SEE FIG.53 FOR NHA..........UHC,UHM	EA	1
54		XCFZZ		97499	204-030-164-399	BEAM ASSY-RH USBL EFF 66-492 & SUBSEQUENT SEE FIG.53 FOR NHA..........UHC,UHM	EA	1
54	1	AFFFF	5320-00-H01-2733	73197	HL20PB86-6-5	.RIVET ASSEMBLY..........UHB,UHC,UHM	EA	5
54	2	PAFZZ	5320-00-864-6097	73197	HL20PB6-5	..PIN-RIVET,THREADED..........UHB,UHC,UHM	EA	1
54	3	PAFZZ	5320-00-869-1495	73197	HL86PBW6	..COLLAR,PIN-RIVET..........UHB,UHC,UHM	EA	1
54	4	AFFFF	5320-00-H02-0956	73197	HL20PB86-6-6	.RIVET ASSY,LH,RH FWD LH REAR..........UHB,UHC,UHM	EA	6
54	5	PAFZZ	5320-00-864-6099	73197	HL20PB6-6	..FASTENER ASSEMBL..........UHB,UHC,UHM	EA	1
54	6	PAFZZ	5320-00-869-1495	73197	HL86PBW6	..COLLAR,PIN-RIVET..........UHB,UHC,UHM	EA	1
54	7	XDFFZ		73197	HL20PB86-6-7	.FASTENER ASSEMBL..........UHB,UHC,UHM	EA	2
54	8	PBFZZ	5320-00-869-4298	73197	HL20PB6-7	..FASTENER ASSEMBL..........UHB,UHC,UHM	EA	1
54	9	PAFZZ	5320-00-869-1495	73197	HL86PBW6	..COLLAR,PIN-RIVET..........UHB,UHC,UHM	EA	1
54	10	AFFFF	5320-00-H04-5316	73197	HL20PB86-6-8	.FASTENER ASSEMBLY..........UHB,UHC,UHM	EA	2
54	11	PBFZZ	5320-00-869-1486	73197	HL20PB6-8	..PIN-RIVET,THREADED..........UHB,UHC,UHM	EA	1
54	12	PAFZZ	5320-00-869-1495	73197	HL86PBW6	..COLLAR,PIN-RIVET..........UHB,UHC,UHM	EA	1
54	13	AFFFF	5320-00-H05-0106	73197	HL20PB86-6-10	.FASTENER ASSEMBLY-R -RH REAR..........UHB,UHC,UHM	EA	2
54	14	PAFZZ	5320-00-464-7431	73197	HL20PB6-10	..PIN-RIVET,THREAD..........UHB,UHC,UHM	EA	1
54	15	PAFZZ	5320-00-869-1495	73197	HL86PBW6	..COLLAR,PIN-RIVET..........UHB,UHC,UHM	EA	1
54	16	PAFZZ	5320-00-117-6830	96906	MS20470AD4-8	.RIVET,SOLID..........UHB,UHC,UHM	LB	2
54	17	PAFZZ	5320-00-117-6844	96906	MS20470AD5-12	.RIVET,SOLID..........UHB,UHC,UHM	EA	1
54	18	PAFZZ	5320-00-579-6377	80205	NAS529-6-8	.PIN-RIVET,GROOVED ....UHB,UHC,UHM	EA	1
54	19	PAFZZ	5320-00-223-6093	80205	NAS179-6	.COLLAR,GROOVED PIN-..........UHB,UHC,UHM	EA	1
54	20	PAFZZ	5320-00-117-6831	96906	MS20470AD4-9	.RIVET,SOLID..........UHB,UHC,UHM	LB	2
54	21	PAFZZ	5320-00-117-6843	96906	MS20470AD5-10	.RIVET,SOLID..........UHB,UHC,UHM	LB	5
54	22	PAFZZ	1560-00-869-8978	97499	204-030-104-1	.SUPPORT,STRUCTURAL -LH FRONT U/O PN 204-030-163-315,-353,-379,-433 & -449..........UHB,UHC,UHM	EA	1
54	23	PAFZZ	1560-00-918-2452	97499	204-030-104-3	.SUPPORT FITTING,AIR -LH FRONT U/O PN 204-030-163-483 & -511	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						..........UHC,UHM		
54	24	PAFZZ	5340-00-907-2252	97499	204-030-970-1	.BRACKET,ANGLE -LH FRONT..........UHB,UHC,UHM	EA	1
54	25	PAFZZ	1560-00-925-5129	97499	204-031-105-9	.SUPPORT,LANDING GEA -LH REAR..........UHB,UHC,UHM	EA	1
54	26	PAFZZ	1560-00-869-8978	97499	204-030-104-1	.SUPPORT,STRUCTURAL -RH FRONT U/O PN 204-030-164-297,-325,-361,& -365..........UHB,UHC,UHM	EA	1
54	27	PAFZZ	1560-00-918-2452	97499	204-030-104-3	.SUPPORT FITTING-RH FRONT U/O PN 204-030-164-367&-399..........UHC,UHM	EA	1
54	28	PAFZZ	1560-00-925-8082	97499	204-031-105-11	.SUPPORT,LANDING GEA -RH REAR..........UHB,UHC,UHM	EA	1
54	30	XDFZZ	3120-00-836-5185	97499	22-006-15-10-16	.BUSHING,SLEEVE U/O PN 204-030-164-297,-325, -361,-365,-367, & -399..........UHB,UHC,UHM	EA	1
54	31	PAFZZ	3120-00-662-4742	97499	22-006-15-14-16	.BUSHING,SLEEVE U/O PN 204-030-164-297,-325, -361,-365,-367, & -399..........UHB,UHC,UHM	EA	1
54	31A	XCFZZ		97499	204-031-032-1	.BRACKET INSTL U/O PN 204-030-164-297,-325, -361,-365,-367,& -399..........UHB,UHC,UHM	EA	1
54	32	PAOZZ	5305-00-558-8934	88044	AN525D10R8	..SCREW,MACHINE..........UHB,UHC,UHM	EA	2
54	33	PAFZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT..........UHB,UHC,UHM	EA	2
54	34	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHB,UHC,UHM	EA	2
54	35	MFFZZ	5340-00-075-3372	97499	204-031-032-3	..BRACKET,ANGLE..........UHB,UHC,UHM	EA	1
54	35A	XCFZZ		97499	204-031-031-1	.SUPPORT INSTL U/O PN 204-030-164-297,-325, -361,-365,-367,& -399..........UHB,UHC,UHM	EA	1
54	36	XBFZZ	1560-00-H25-7597	97499	204-031-031-3	..SUPPORT ASSEMBLY..........UHB,UHC,UHM	EA	1
54	37	PAOZZ	5305-00-993-1848	96906	MS35207-265	...SCREW,MACHINE..........UHB,UHC,UHM	EA	1
54	38	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..........UHB,UHC,UHM	EA	1
54	39	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON..........UHB,UHC,UHM	EA	1
54	40	PBDZZ	1560-00-173-2322	97499	204-030-169-111	.PANEL,FUSELAGE,AIRC -LH..........UHB	EA	1
54	40	PADZZ	1560-00-173-2323	97499	204-030-169-129	.PANEL,FUSELAGE,AIRC -LH..........UHC,UHM	EA	1
54	40	XBDZZ	1560-00-H05-9192	97499	204-030-169-131	..PANEL ASSEMBLY..........UHC,UHM	EA	1
54	41	PADDD	1560-00-203-1144	97499	204-031-170-93	.PANEL,FUSELAGE,AIRC USE WHEN CRASHWORTHY FUEL SYSTEM IS INSTALLED..........UHB,UHC,UHM	EA	1
54	41A	PADZZ	5340-00-975-0531	97499	80-004-2-8	..FASTENER,PANEL,P U/O PN 204-030-169-129 & 204-031-170-93..........UHC,UHM	EA	1
54	42	PBDZZ	1560-00-781-9077	97499	204-031-310-1	.CAP ASSEMBLY,LH BEAM..........UHB,UHC,UHM	EA	1
54	42	PBDZZ	1560-00-181-4299	97499	204-031-310-2	.CAP ASSY,AIRCRAFT..........UHB,UHC,UHM	EA	1
54	43	MFFZZ	1560-00-H27-5107	97499	204-030-164-187	.STIFFENER-RH..........UHB	EA	1
54	44	PBDZZ	1560-00-120-0848	97499	204-030-164-173	.STIFFENER,BEAM ASSE..........UHB,UHC,UHM	EA	1
54	45	PBDZZ	1560-00-157-6493	97499	204-030-164-229	.STIFFENER,BEAM..........UHB,UHC,UHM	EA	1
54	46	PBDZZ	1560-00-120-0841	97499	204-030-163-289	.STIFFENER,BEAM ASSE..........UHB,UHC,UHM	EA	1
54	47	PADZZ	1560-00-120-0837	97499	204-030-163-41	.STIFFENER,BEAM ASSE..........UHB,UHC,UHM	EA	1
54	48	PBDZZ	1560-00-120-0838	97499	204-030-163-205	.STIFFENER,BEAM ASSE..........UHB,UHC,UHM	EA	1
54	49	PBDZZ	1560-00-120-0839	97499	204-030-163-49	.STIFFENER,BEAM ASSE..........UHB,UHC,UHM	EA	1
54	50	PBDZZ	1560-00-120-0849	97499	204-030-164-235	.ANGLE,BEAM ASSEMBLY..........UHB	EA	1
54	51	PBDZZ	1560-00-120-0846	97499	204-030-163-29	.ANGLE,BEAM,FUSELAGE..........UHB,UHC,UHM	EA	1
54	52	PBDZZ	1560-00-120-0842	97499	204-030-163-473	.ANGLE,BEAM,FUSELAGE..........UHB,UHC,UHM	EA	1
54	53	PBDZZ	1560-00-120-0843	97499	204-030-163-477	.ANGLE,BEAM,FUSELAGE..........UHC,UHM	EA	1
54	54	PADZZ	1560-00-120-0854	97499	204-030-164-25	.CLIP,BEAM ASSEMBLY..........UHB,UHC,UHM	EA	1
54	55	PADZZ	1560-00-120-0857	97499	204-030-164-83	.CLIP,BEAM ASSEMBLY..........UHB,UHC,UHM	EA	1
54	56	PADZZ	1560-00-120-0858	97499	204-030-164-111	.CLIP,BEAM ASSEMBLY..........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
54	57	PBDZZ	1560-00-120-0836	97499	204-030-163-261	.WEB,BEAM ASSEMBLY...............................UHB,UHC,UHM	EA	1
54	58	PADZZ	1560-00-120-0851	97499	204-030-164-285	.CLIP,BEAM ASSEMBLY..............................UHB,UHC,UHM	EA	1
54	59	XBDZZ	1560-00-169-0626	97499	204-030-186-5	..CAP,BEAM,STRUCTURE.....................................UHB	EA	1

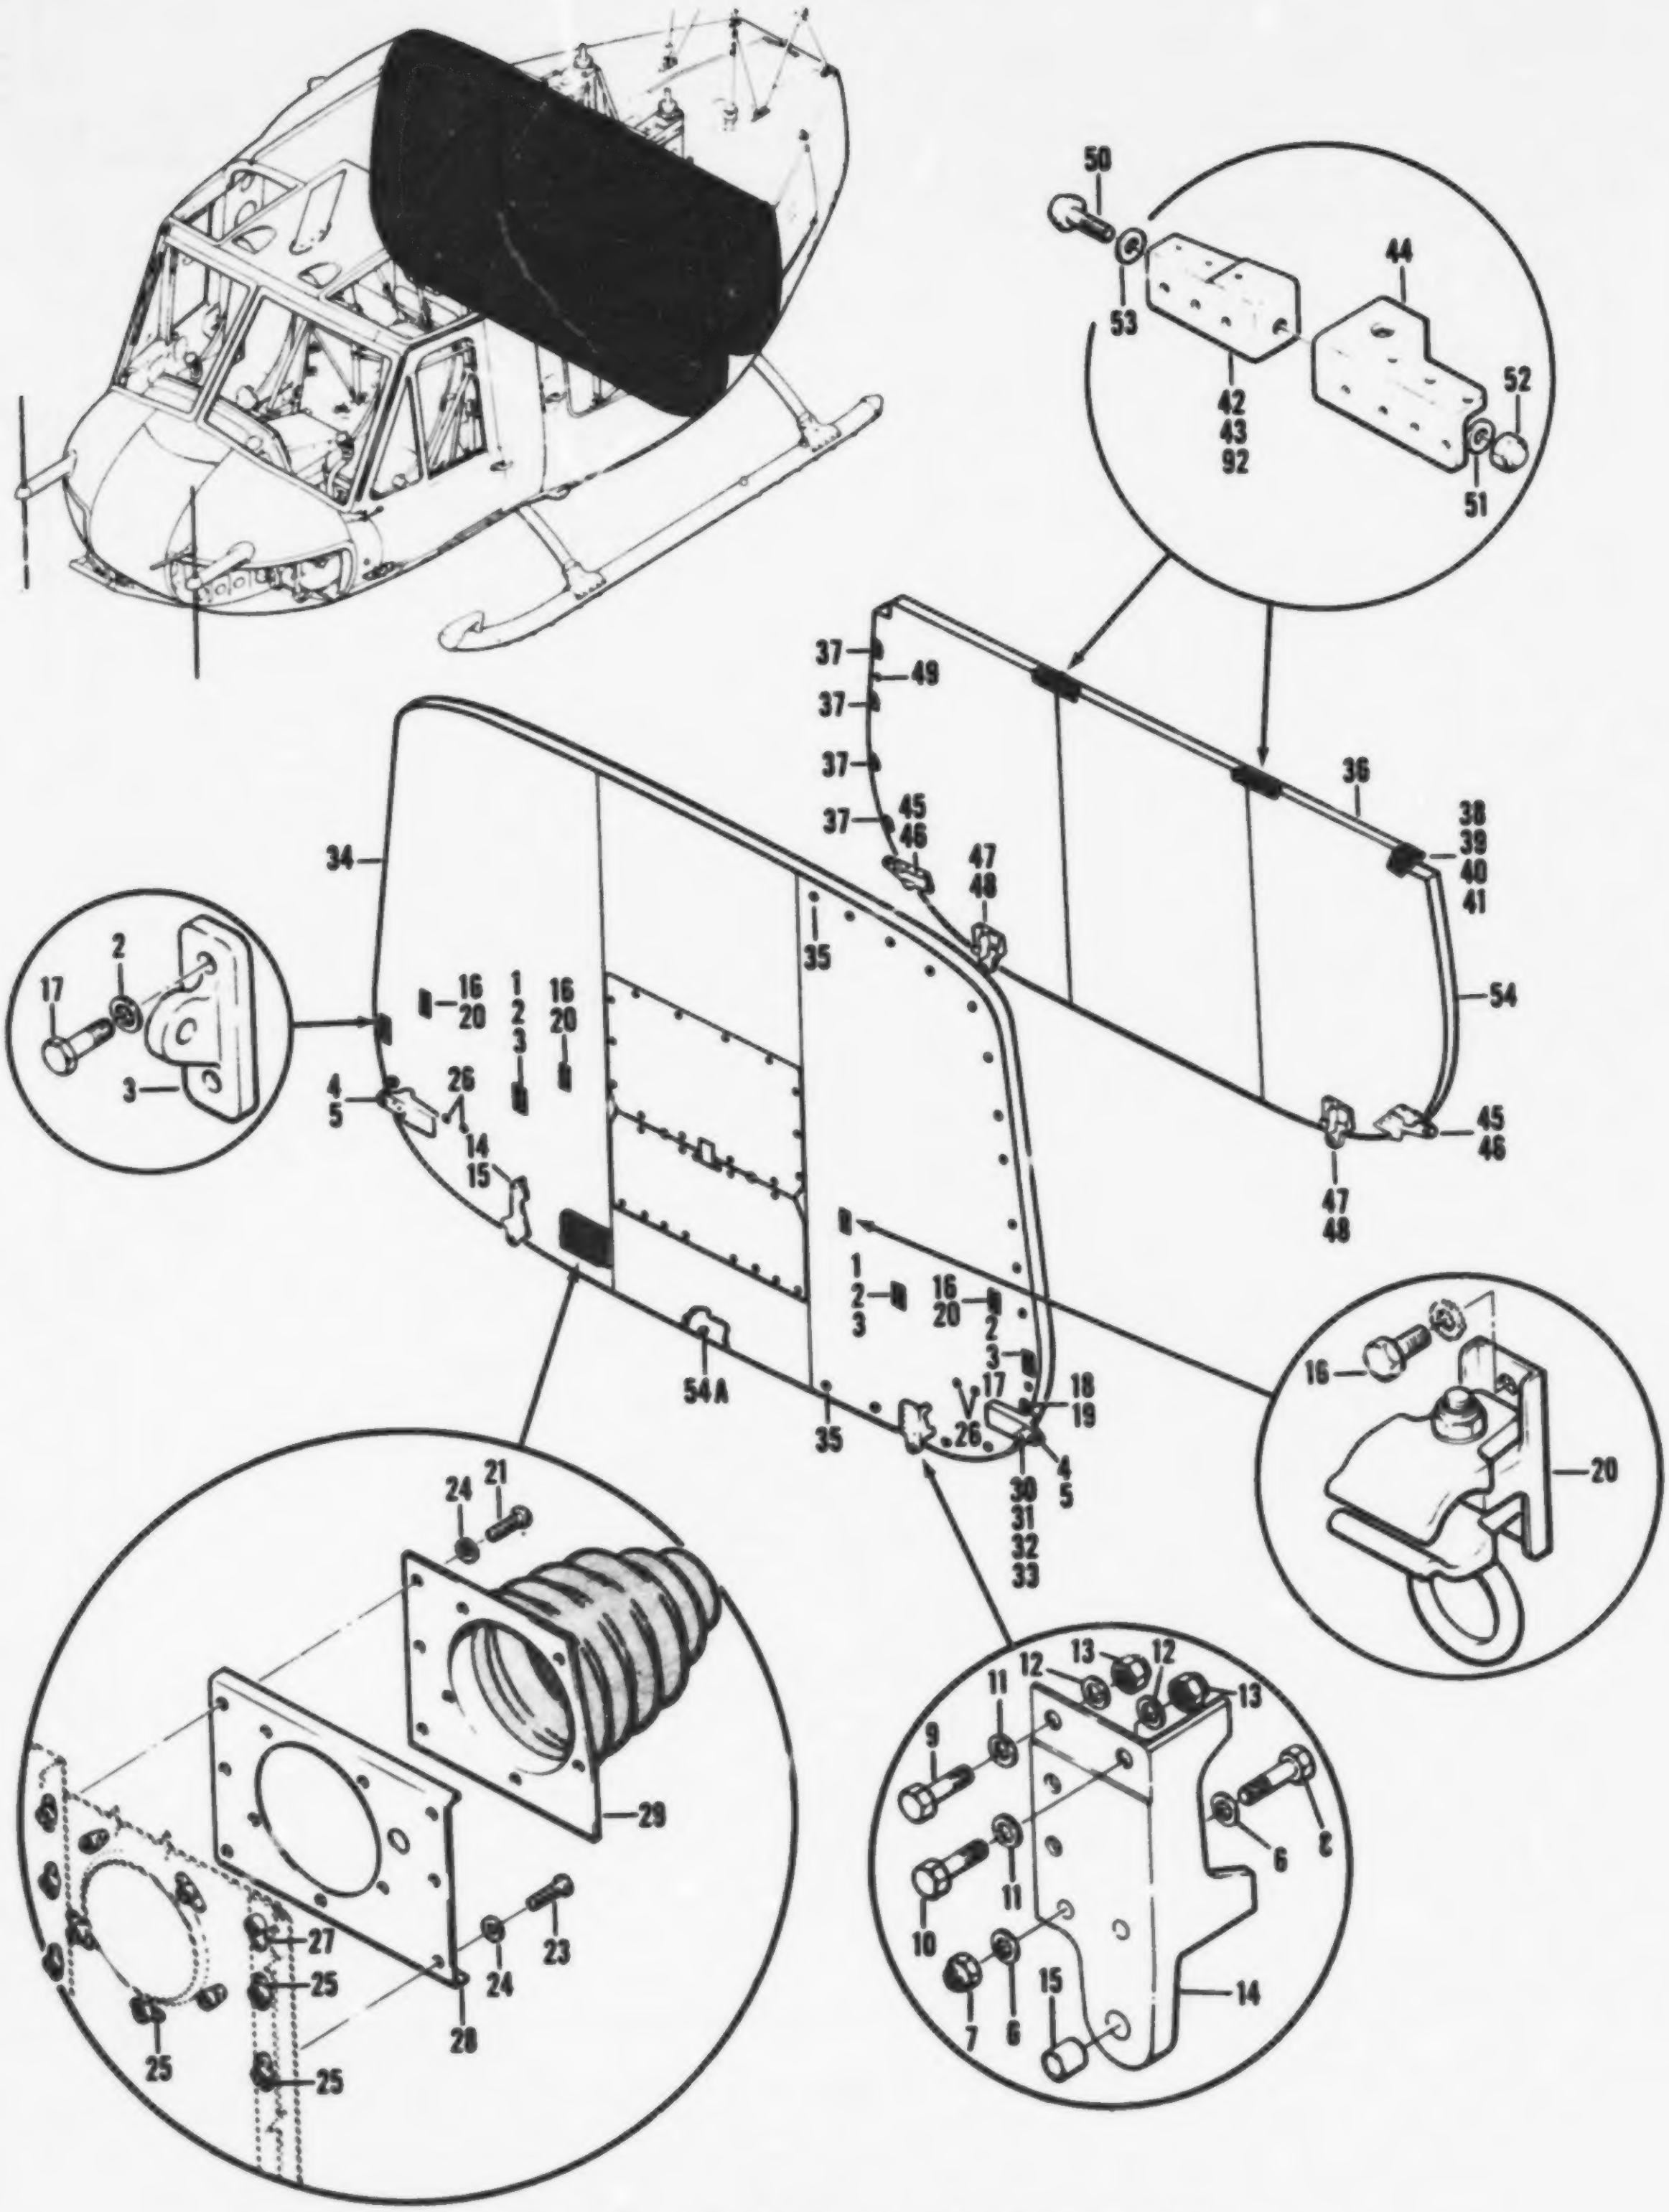
50
53
42
43
92
44
52
51
37
49
37
37
45
46
37
36
38
39
40
41
34
47
48
35
54
17
2
3
16
20
1
2
3
16
20
4
5
26
14
15
45
46
47
48
1
2
3
16
20
2
3
17
18
19
54A
35
26
30
31
32
33
4
5
16
20
24
21
29
27
25
24
23
28
25
25
9
11
12
13
12
13
11
10
8
6
7
6
15
14

Figure 55. Fuselage Assembly, Structure Aft
(Sheet 1 of 2)

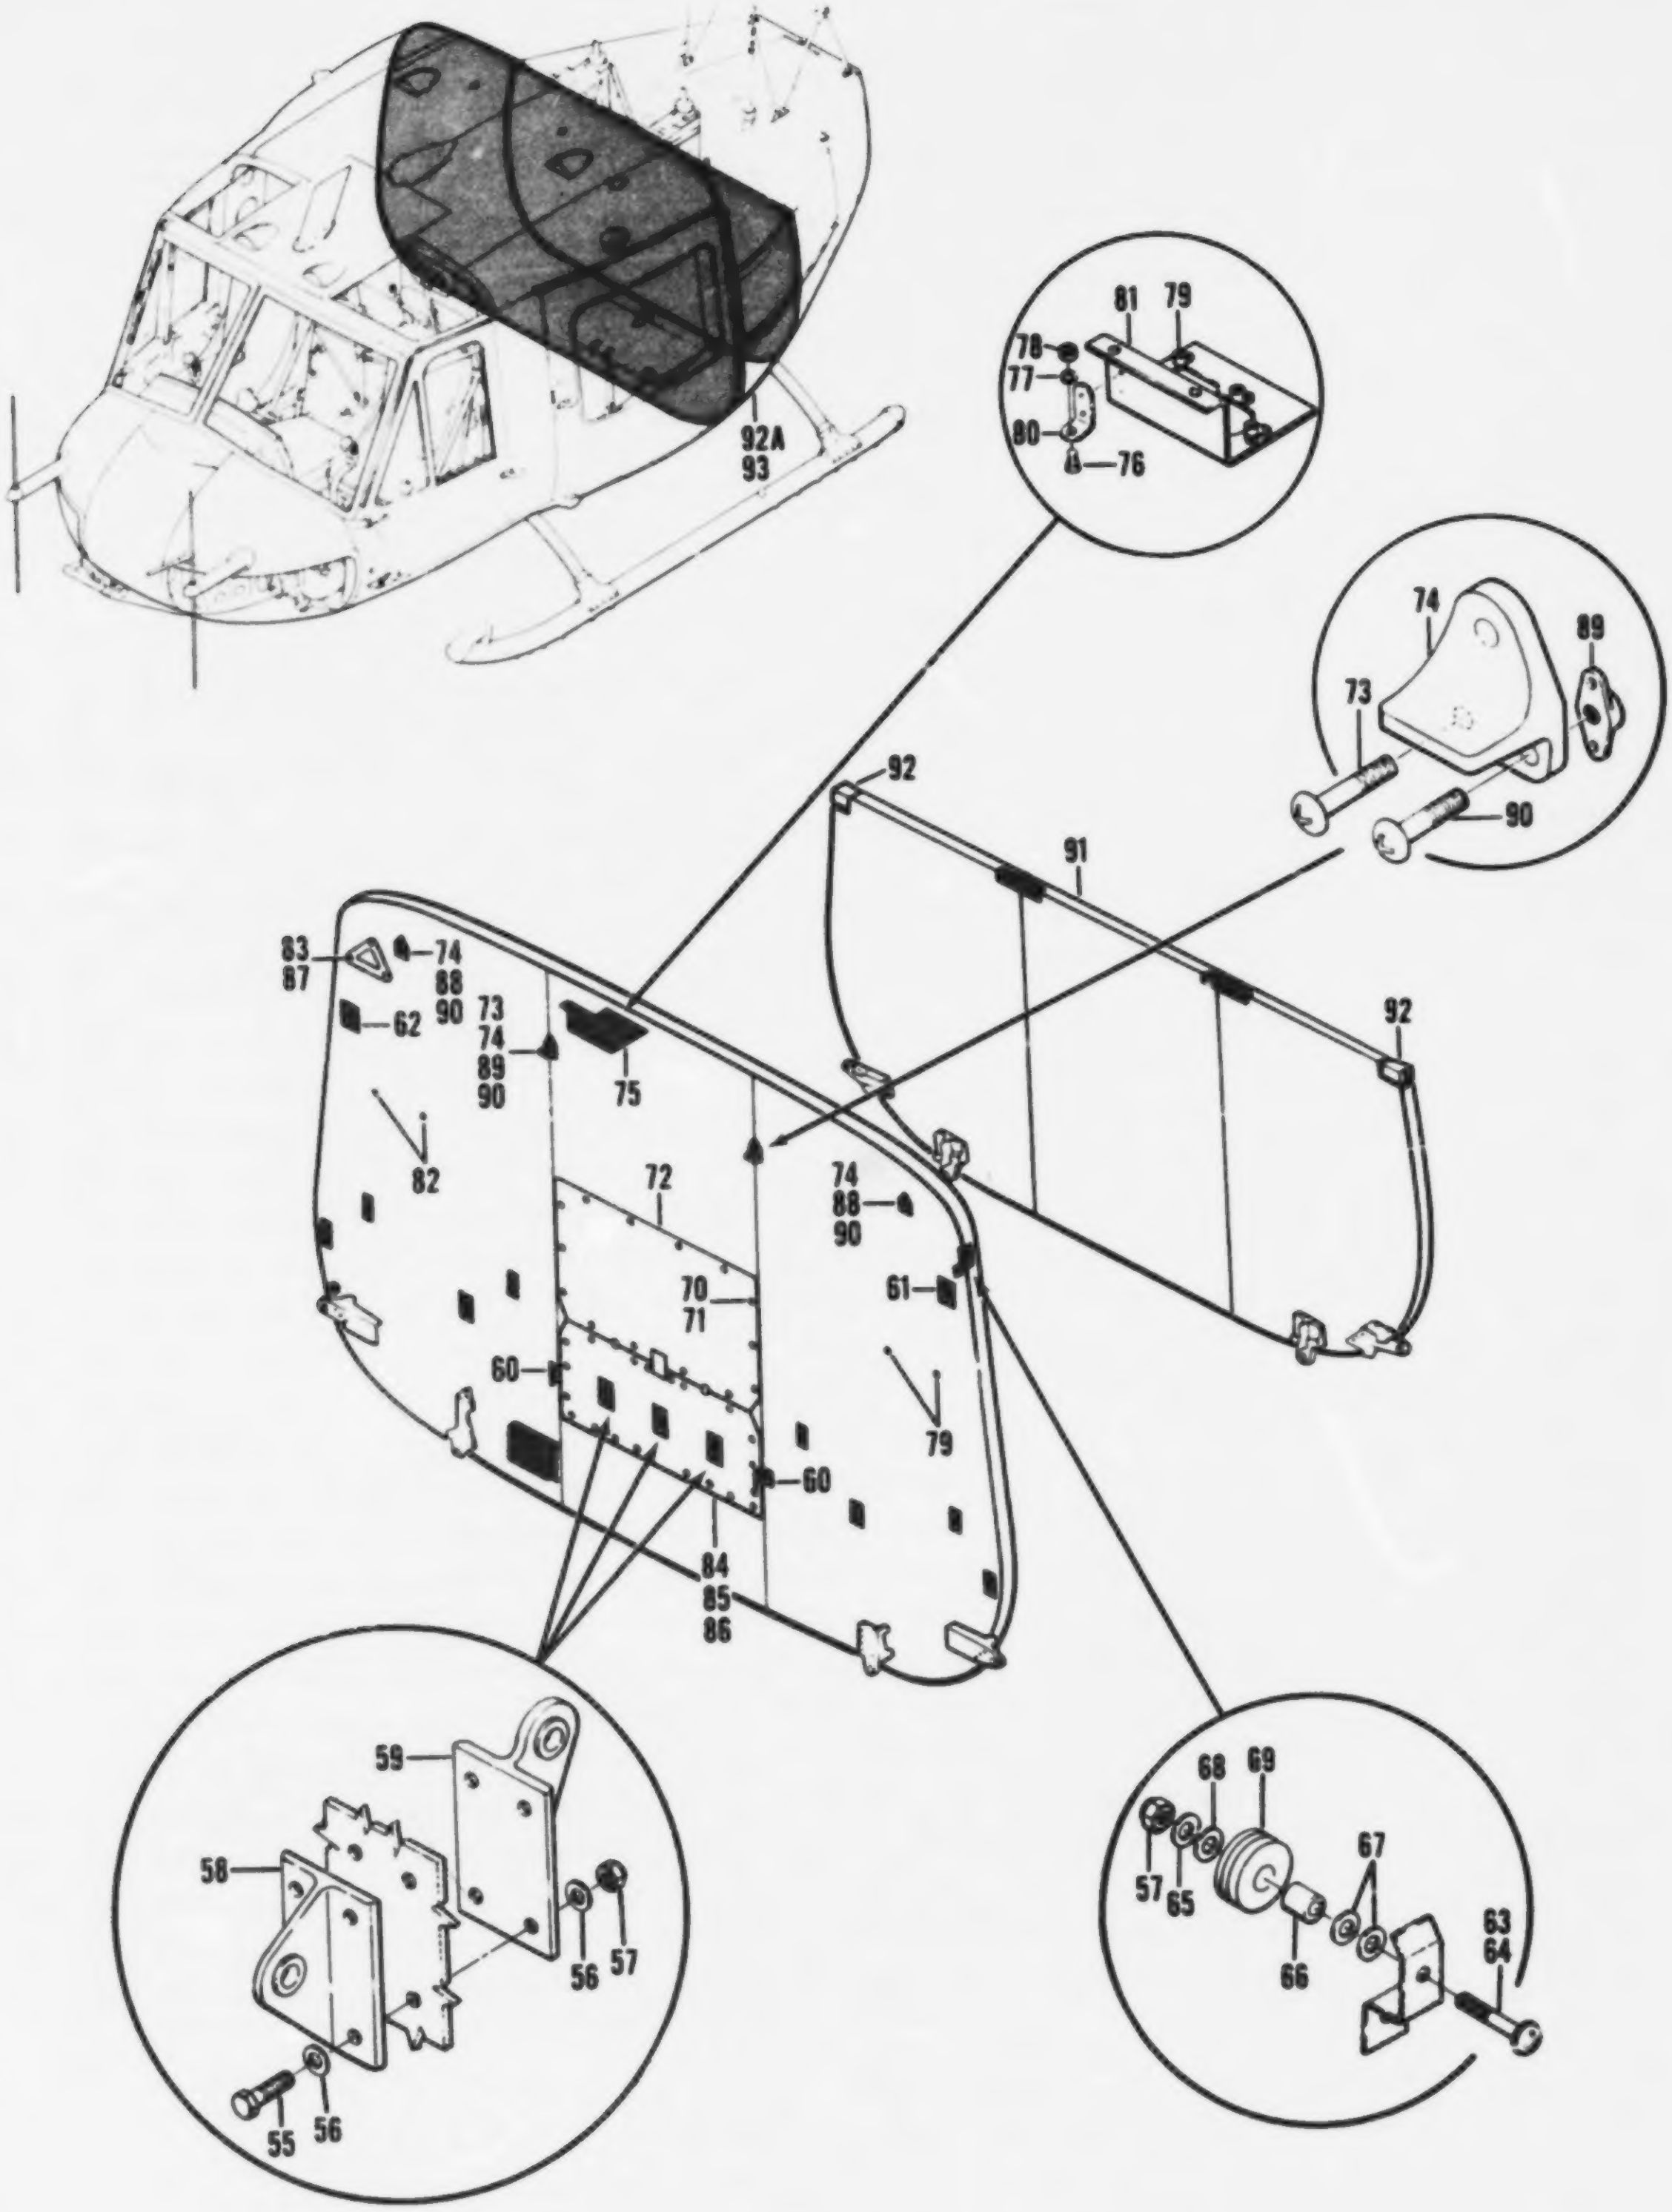
92A
93
81
79
78
77
80
76
74
89
73
90
92
91
92
83
87
74
88
90
62
73
74
89
90
75
82
72
74
88
90
70
71
61
60
79
60
84
85
86
59
58
56
57
55
56
68
69
57
65
67
66
63
64

Figure 55. Fuselage Assembly, Structure Aft
(Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
55		XCFZZ		97499	204-030-006-49	FUSELAGE ASSY USBL EFF 60-3546 THRU 60-3590 SEE FIG.19 FOR NHA.................UHB	EA	1
55		XCFZZ		97499	204-030-006-55	FUSELAGE ASSY USBL EFF 60-3591 THRU 60-3619 SEE FIG.19 FOR NHA.................UHB	EA	1
55		XCFZZ		97499	204-030-006-57	FUSELAGE ASSY USBL EFF 61-686 THRU 61-723 SEE FIG.19 FOR NHA.................UHB	EA	1
55		XCFZZ		97499	204-030-006-79	FUSELAGE ASSY USBL EFF 61-724 THRU 61-753 SEE FIG.19 FOR NHA.................UHB	EA	1
55		XCFZZ		97499	204-030-006-83	FUSELAGE ASSY USBL EFF 61-754 THRU 61-803 SEE FIG.19 FOR NHA.................UHB	EA	1
55		XCFZZ		97499	204-031-006-1	FUSELAGE ASSY USBL EFF 62-1872 THRU 62-1996 SEE FIG.19 FOR NHA.................UHB	EA	1
55		XCFZZ		97499	204-031-006-13	FUSELAGE ASSY USBL EFF 62-1997 THRU 62-12555 SEE FIG.19 FOR NHA.................UHB	EA	1
55		XCFZZ		97499	204-031-006-25	FUSELAGE ASSY USBL EFF 63-8500 THRU 63-8658 SEE FIG.19 FOR NHA.................UHB	EA	1
55		XCFZZ		97499	204-031-006-49	FUSELAGE ASSEMBLY,S USBL EFF 63-8659 THRU 63-12952 SFE FIG. 19FOR NHA.................UHB	EA	1
55		XCFZZ		97499	204-031-006-71	FUSELAGE ASSY USBL EFF 64-13902 THRU 64-14100 SEE F.G.19 FOR NHA.................UHB	EA	1
55		XCFZZ		97499	204-031-006-109	FUSELAGE ASSY USBL EFF 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA.................UHC,UHM	EA	1
55		XCFZZ		97499	204-032-006-1	FUSELAGE ASSY USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA.................UHC,UHM	EA	1
55		XCFZZ		97499	204-032-006-21	FUSELAGE ASSY USBL EFF 66-492 THRU 66-15022 SEE FIG.19 FOR NHA.................UHC,UHM	EA	1
55		XCFZZ		97499	204-032-006-27	FUSELAGE ASSY USBL EFF 66-15023 & SUBSEQUENT SEE FIG.19 FOR NHA.................UHC,UHM	EA	1
55		XCFZZ		97499	204-030-006-51	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-49.................UHB	EA	1
55		XCFZZ		97499	204-030-006-65	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-35.................UHB	EA	1
55		XCFZZ		97499	204-030-006-67	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-57.................UHB	EA	1
55		XCFZZ		97499	204-030-006-75	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-79.................UHB	EA	1
55		XCFZZ		97499	204-030-006-85	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-83.................UHB	EA	1
55		XCFZZ		97499	204-031-006-3	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-1.................UHB	EA	1
55		XCFZZ		97499	204-031-006-15	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-13.................UHB	EA	1
55		XCFZZ		97499	204-031-006-27	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-25 & -49..........UHB	EA	1
55		XCFZZ		97499	204-031-006-73	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-71.................UHB	EA	1
55		XCFZZ		97499	204-031-006-111	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-109...........UHC,UHM	EA	1
55		XCFZZ		97499	204-032-006-3	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-1.............UHC,UHM	EA	1
55		XCFZZ		97499	204-032-006-23	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-21...........UHC,UHM	EA	1
55		XCFZZ		97499	204-032-006-29	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-27...........UHC,UHM	EA	1
55		XCFZZ		97499	204-030-006-53	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-49.................UHB	EA	1
55		XCFZZ		97499	204-030-006-61	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-55.................UHB	EA	1
55		XCFZZ		97499	204-030-006-69	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-57.................UHB	EA	1
55		XCFZZ		97499	204-030-006-77	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-79.................UHB	EA	1
55		XCFZZ		97499	204-030-006-87	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-83.................UHB	EA	1
55		XCFZZ		97499	204-031-006-5	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-1.................UHB	EA	1
55		XCFZZ		97499	204-031-006-17	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-13.................UHB	EA	1
55		XCFZZ		97499	204-031-006-29	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-25 & -49..........UHB	EA	1
55		XCFZZ		97499	204-031-006-75	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-71.................UHB	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
55		XCFZZ		97499	204-031-006-113	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-109............UHC,UHM	EA	1
55		XCFZZ		97499	204-032-006-5	.BEAM ASSY,OUTER-RH U/O PN 204-032-006-1..............UHC,UHM	EA	1
55		XCFZZ		97499	204-032-006-37	.BEAM ASSY,OUTER-RH U/O PN 204-032-006-21............UHC,UHM	EA	1
55		XCFZZ		97499	204-032-006-25	.BEAM ASSY,OUTER-RH U/O PN 204-032-006-27............UHC,UHM	EA	1
55		XCFZZ		97499	204-030-708-293	..BULKHEAD INSTL-LH U/O PN 204-030-006-51.................UHB	EA	1
55		XCFZZ		97499	204-030-708-369	..BULKHEAD INSTL-LH U/O PN 204-030-006-65.................UHB	EA	1
55		XCFZZ		97499	204-030-708-417	..BULKHEAD INSTL-LH U/O PN 204-030-006-67.................UHB	EA	1
55		XCFZZ		97499	204-030-708-447	..BULKHEAD INSTL-LH U/O PN 204-030-006-75.................UHB	EA	1
55		XCFZZ		97499	204-030-708-461	..BULKHEAD INSTL-LH U/O PN 204-030-006-85.................UHB	EA	1
55		XCFZZ		97499	204-031-706-1	..BULKHEAD INSTL-LH U/O PN 204-031-006-3,-15, & -27......UHB	EA	1
55		XCFZZ		97499	204-031-706-9	..BULKHEAD INSTL-LH U/O PN 204-031-006-73.................UHB	EA	1
55		XCFZZ		97499	204-031-706-55	..BULKHEAD INSTL-LH U/O PN 204-031-006-111, 204-032-006-3,-23,& -29..UHC,UHM	EA	1
55		XCFZZ		97499	204-030-708-321	..BULKHEAD INSTL-RH U/O PN 204-030-006-53.................UHB	EA	1
55		XCFZZ		97499	204-030-708-371	..BULKHEAD INSTL-RH U/O PN 204-030-006-61.................UHB	EA	1
55		XCFZZ		97499	204-030-708-415	..BULKHEAD INSTL-RH U/O PN 204-030-006-69.................UHB	EA	1
55		XCFZZ		97499	204-030-708-449	..BULKHEAD INSTL-RH U/O PN 204-030-006-77.................UHB	EA	1
55		XCFZZ		97499	204-030-708-463	..BULKHEAD INSTL-RH U/O PN 204-030-006-87.................UHB	EA	1
55		XCFZZ		97499	204-031-707-1	..BULKHEAD INSTL-RH U/O PN 204-031-006-5,-17, & -29......UHB	EA	1
55		XCFZZ		97499	204-031-707-9	..BULKHEAD INSTL-RH U/O PN 204-031-006-75.................UHB	EA	1
55		XCFZZ		97499	204-031-707-63	..BULKHEAD INSTL-RH U/O PN 204-031-006-113 204-032-006-5,-25,& -37..UHC,UHM	EA	1
55	1	PAOZZ	5306-00-182-2016	88044	AN4H5A	...BOLT,MACHINE...................................UHB,UHC,UHM	EA	4
55	2	PAOZZ	5310-00-184-9001	88044	AN960PD416L	...WASHER,FLAT....................................UHB,UHC,UHM	EA	4
55	3	PAOOO	1560-00-876-0110	97499	204-070-547-1	...FITTING,SAFETY BELT............................UHB,UHC,UHM	EA	2
55	4	XBOOZ	1560-00-781-6708	97499	204-031-213-1	...BRACKET,FUSELAGE -LH U/O PN 204-030-708-293,-369......UHB	EA	1
55	4	XBOOO	1560-00-997-6618	97499	204-031-263-1	...BRACKET,FUSELAGE -LH U/O PN 204-030-708-417,-461, 204-031-706-1,-9,& -55...........................UHB,UHC,UHM	EA	1
55	4	XBOOZ	1560-00-916-2513	97499	204-031-213-2	...FITTING ASSEMBLY,FU -RH U/O PN 204-030-708-321,-371 ....UHB	EA	1
55	4	PAOOO	1560-00-866-9507	97499	204-031-263-2	...BRACKET,FUSELAGE -RH U/O PN 204-030-708-415,-449,-463,. 204-031-707-1,-9,& -63..............................UHB,UHC,UHM	EA	1
55	5	PAOZZ	3120-00-836-5187	97499	21-007-10-14	....BUSHING,SLEEVE................................UHB,UHC,UHM	EA	1
55	6	PAOZZ	5310-00-187-2354	88044	AN960PD416	...WASHER,FLAT..UHB	EA	4
55	7	PAOZZ	5310-00-857-5557	96906	MS21045L4	...NUT,SELF-LOCKING,HE..UHB	EA	2
55	8	PAOZZ	5306-00-680-5842	80205	NAS1304-11H	...BOLT,SHEAR U/O PN 204-030-708-293 & -369..............UHB	EA	2
55	9	PAOZZ	5306-00-616-1911	80205	NAS1303-7	...BOLT,SHEAR U/O PN 204-030-708-293 & -369..............UHB	EA	3
55	10	XDOZZ	5306-00-655-7232	80205	NAS1303-4	...BOLT,SHEAR U/O PN 204-030-708-293 & -369..............UHB	EA	1
55	11	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT -RH ONLY.......................................UHB	EA	4
55	12	PAOZZ	5310-00-183-4406	88044	AN960PD10	...WASHER,FLAT -RH ONLY.......................................UHB	EA	4
55	13	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON............................UHB	EA	4
55	14	XBOOZ	1560-00-070-6760	97499	204-031-227-1	...BRACKET,FUSELAGE -LH U/O PN 204-030-708-293,& -369....UHB	EA	1
55	14	XBOOO	1560-00-997-6617	97499	204-031-227-5	...BRACKET,FUSELAGE -LH U/O PN 204-030-708-417,-447,-461, 204-031-706-1,-9, & -55.........................UHB,UHC,UHM	EA	1
55	14	XBOOZ	1560-00-943-0759	97499	204-031-214-1	...BRACKET,FUSELAGE -RH U/O PN 204-030-708-321 & -371....UHB	EA	1
55	14	XBOOZ	1560-00-915-6088	97499	204-031-214-5	...BRACKET,FUSELAGE -RH U/O PN 204-030-708-415,-449,-463,	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						204-031-707-1,-9,& -63..........UHB,UHC,UHM		
55	15	PAOZZ	3120-00-836-5187	97498	21-007-10-14	....BUSHING,SLEEVE..........UHB,UHC,UHM	EA	1
55	16	PAOZZ	5306-00-182-2015	88044	AN4H4A	...BOLT,MACHINE..........UHB,UHC,UHM	EA	4
55	17	PAOZZ	5306-00-292-8252	88044	AN4H7A	...BOLT,MACHINE..........UHB,UHC,UHM	EA	2
55	18	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON..........UHB,UHC,UHM	EA	1
55	19	PAOZZ	5325-00-285-6297	88044	AN227-1086	...STUD,SNAP FASTEN..........UHB	EA	1
55	19	PAOZZ	5325-00-276-4931	88044	AN227-10-10	...STUD,SNAP FASTEN U/O PN 204-031-706-1,-9,& -55..........UHB,UHC,UHM	EA	1
55	20	PAOZZ	1560-00-766-8594	76912	ACA2429	...RING ASSEMBLY,TUBE..........UHB,UHC,UHM	EA	2
55	21	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE..........UHB	EA	8
55	23	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE..........UHB,UHC,UHM	EA	11
55	24	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..........UHB,UHC,UHM	EA	4
55	25	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	10
55	26	PAOZZ	5310-00-728-7717	96906	MS21069L4	...NUT,SELF-LOCKING,PL..........UHB	EA	2
55	27	PAOZZ	5310-00-734-1850	96906	MS21071L3	...NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	1
55	28	MFOZZ	1560-00-876-2397	97499	204-030-708-331	...RETAINER..........UHB	EA	1
55	29	PAOZZ	1560-00-739-2572	97499	204-031-196-1	...BOOT,CONTROL TUBE..........UHB	EA	1
55	30	PAOZZ	5306-00-680-5285	80205	NAS1303-6	...BOLT,SHEAR U/O PN 204-030-708-321 & -371..........UHB	EA	2
55	30	XDOZZ	5306-00-555-7232	80205	NAS1303-4	...BOLT,SHEAR U/O PN 204-030-708-293 & -369..........UHB	EA	2
55	30	PAOZZ	5306-00-684-9779	80205	NAS1303-11	...BOLT,SHEAR U/O PN 204-030-708-293, -321,-369,& -371..........UHB	EA	3
55	31	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT U/O PN 204-030-708-293,-321, -369,& -371..........UHB	EA	3
55	32	PAOZZ	5310-00-183-4406	88044	AN960PD10	...WASHER,FLAT U/O PN 204-030-708-293,-321, -369,& -371..........UHB	EA	3
55	33	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON U/O PN 204-030-708-293,-321, -369,& -371..........UHB	EA	3
55	34	XBFFF	1560-00-H24-7227	97499	204-030-178-39	...PANEL ASSEMBLY-LH U/O PN 204-030-708-293,-369, -417,& -447..........UHB	EA	1
55	34	XBFFF	1560-00-H25-1235	97499	204-030-178-49	...PANEL ASSEMBLY-LH U/O PN 204-030-708-461..........UHB	EA	1
55	34	PAFFF	1560-00-072-0814	97499	204-031-178-5	...PANEL,FUSELAGE,AIRC -LH..........UHC,UHM	EA	1
55	34	PADZZ	1560-00-427-8286	97499	204-031-178-47	...SKIN,AIRCRAFT U/W PN 204-031-178-5..........UHC,UHM	EA	1
55	34	XBFFF	1560-00-H24-7320	97499	204-031-177-1	...PANEL ASSEMBLY-RH U/O PN 204-030-708-321,-371, -415,& -449..........UHB	EA	1
55	34	XBFFZ	1560-00-867-1215	97499	204-031-177-17	...PANEL,STRUCTURAL,AI -RH U/O PN 204-030-708-463..........UHB	EA	1
55	34	PBFFF	1560-00-483-1272	97499	204-031-277-1	...PANEL ASSY,FUSELAGE -RH U/O PN 204-031-707-1 & -9..........UHB	EA	1
55	34	PAFFF	1560-00-072-0812	97499	204-031-277-5	...PANEL,FUSELAGE,AIRC -RH..........UHC,UHM	EA	1
55	34	PADZZ	1560-00-239-2919	97499	204-031-277-7	...SKIN,AIRCRAFT U/W PN 204-031-277-5..........UHC,UHM	EA	1
55	35	PAOZZ	5325-00-174-2923	88044	AN227-8	...STUD,SNAP FASTENER U/O PN 204-031-706-1,9,-55, 204-031-707-1,-9,& -63..........UHB,UHC,UHM	EA	17
55	36	XCFZZ		97499	204-031-709-1	..BULKHEAD INSTL-LH U/O PN 204-030-006-51 & -65..........UHB	EA	1
55	36	XCFZZ		97499	204-031-709-191	..BULKHEAD INSTL-LH U/O PN 204-030-006-67, -75,-85,204-031-006-3, -15,& -27..........UHB	EA	1
55	36	XCFZZ		97499	204-031-709-7	..BULKHEAD INSTL-LH U/O PN 204-031-006-73..........UHB	EA	1
55	36	XCFZZ		97499	204-031-709-63	..BULKHEAD INSTL-LH U/O PN 204-031-006-111, 204-032-006-3,-23,& -29..........UHC,UHM	EA	1
55	36	XCFZZ		97499	204-031-709-21	..BULKHEAD INSTL-RH U/O PN 204-030-006-53 & -61..........UHB	EA	1
55	36	XCFZZ		97499	204-031-709-195	..BULKHEAD INSTL-RH U/O PN 204-030-006-49, -77,-87,204-031-	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						006-5, -17,-29,& -75....................UHB		
55	36	XCFZZ		97499	204-031-709-67	..BULKHEAD INSTL-RH U/O PN 204-031-006-113..........UHC,UHM	EA	1
55	36	XCFZZ		97499	204-031-709-379	..BULKHEAD INSTL-RH U/O PN 204-032-006-5,-25, & -37 ....UHC,UHM	EA	1
55	36	XBDDZ	1560-00-070-6757	97499	204-031-709-31	...BULKHEAD ASSEMBLY -LH U/O PN 204-031-709-1..........UHB	EA	1
55	36	XDDDZ	1560-00-157-6649	97499	204-031-709-37	...BULKHEAD ASSY,FUSEL -LH U/O PN 204-031-709-7 & -191 ....UHB	EA	1
55	36	PBDDD	1560-00-404-0907	97499	204-031-709-65	...BULKHEAD ASSY,AIRCR -LH U/O PN 204-031-709-63.....UHC,UHM	EA	1
55	36	PADDD	1560-00-203-1166	97499	204-030-075-33	..PANEL,FUSELAGE,AIRC -LH USE-AFT-CMPL-W MWO 55-1500-219-50/ 1....................UHC,UHM	EA	1
55	36	XBDDD	1560-00-H24-7325	97499	204-031-709-51	...BULKHEAD ASSEMBLY-R -RH U/O PN 204-031-709-21..........UHB	EA	1
55	36	XBDDD	1560-00-H24-9983	97499	204-031-709-197	...BULKHEAD ASSEMBLY-R -RH U/O PN 204-031-709-195..........UHB	EA	1
55	36	XDDDD	1560-00-919-1366	97499	204-031-709-69	...BULKHEAD ASSEMBLY,R -RH U/O PN 204-031-709-67.....UHC,UHM	EA	1
55	36	XBDDD	1560-00-918-2437	97499	204-031-709-381	...BULKHEAD ASSEMBLY,R -RH U/O PN 204-031-709-379....UHC,UHM	EA	1
55	37	PBDZZ	1560-00-939-5948	97499	204-030-763-1	....FITTING,HINGE,DOOR -RH USBL EFF 60-3546 THRU 60-3619 ....UHB	EA	4
55	37	PBDZZ	1560-00-939-5948	97499	204-030-763-1	....FITTING,HINGE,DOOR -RH USBL EFF 61-686 & SUBSEQUENT ....UHB,UHC,UHM	EA	3
55	37	PBDZZ	1560-00-919-1369	97499	204-030-763-3	....FITTING,HINGE,DOOR -RH USBL EFF 61-686 & SUBSEQUENT ....UHB,UHC,UHM	EA	1
55	38	XBDZZ	1560-00-H24-7243	97499	204-030-776-1	....SUPPORT-LH....................UHB	EA	1
55	39	PBDZZ	1560-00-939-5948	97499	204-030-763-1	....FITTING,HINGE,DOOR -LH..........UHC,UHM	EA	4
55	40	XBDDD	1560-00-H24-7244	97499	204-030-777-1	....SUPPORT ASSEMBLY-LH....................UHB	EA	1
55	41	PADZZ	5310-00-111-9394	96906	MS21086L4	.....NUT,SELF-LOCKING,PL....................UHB	EA	2
55	42	XDDZZ	1560-00-997-6619	97499	204-030-852-1	....FITTING,HOIST -LH....................UHB	EA	1
55	43	XDDZZ	1560-00-997-6620	97499	204-030-048-3	....SUPPORT,STRUCTURAL -LH..........UHC,UHM	EA	1
55	44	PBDZZ	5340-00-134-3382	97499	204-030-275-1	....BRACKET,ANGLE -RH....................UHB	EA	1
55	45	PADDD	1560-00-908-6457	97499	204-031-264-1	....BRACKET,FUSELAGE -LH U/O PN 204-031-709-31,-37,& -65 ....UHB,UHC,UHM	EA	1
55	45	XBDDZ	1560-00-916-2558	97499	204-031-217-1	....SUPPORT,STRUCTURAL -RH U/O PN 204-031-709-51..........UHB	EA	1
55	45	PADDD	1560-00-908-6458	97499	204-031-217-3	....SUPPORT,STRUCTURAL -RH U/O PN 204-031-709-69,-197,& -381 ....UHB,UHC,UHM	EA	1
55	46	PADZZ	3120-00-836-5187	97499	21-007-10-14	.....BUSHING,SLEEVE....................UHB,UHC,UHM	EA	1
55	47	XBDDZ	1560-00-916-2523	97499	204-031-216-1	....SUPPORT,STRUCTURAL -LH U/O PN 204-031-709-31..........UHB	EA	1
55	47	PBDDD	1560-00-997-6621	97499	204-031-216-3	....SUPPORT,STRUCTURAL -LH U/O PN 204-031-709-37,-65 ....UHB,UHC,UHM	EA	1
55	47	PBDDD	1560-00-866-5048	97499	204-031-218-1	....SUPPORT,STRUCTURAL -RH..........UHB,UHC,UHM	EA	1
55	48	PADZZ	3120-00-836-5187	97499	21-007-10-14	.....BUSHING,SLEEVE..........UHB,UHC,UHM	EA	1
55	49	PADZZ	5935-00-432-9340	96906	MS90298-2	....CONNECTOR,RECEPTACL....................UHB	EA	1
55	50	PADZZ	5306-00-206-1353	96906	MS20004-10	...BOLT INTERNAL WRENCHING..........UHB,UHC,UHM	EA	1
55	51	PADZZ	5310-00-187-2354	88044	AN960PD416	...WASHER,FLAT..........UHB,UHC,UHM	EA	1
55	52	PBDZZ	5310-00-488-9137	72962	E8048	...NUT,SELF-LOCKING EXTEENDED,WASHER..........UHB,UHC,UHM	EA	1
55	53	PADZZ	5310-00-596-1766	96906	MS20002C4	...WASHER,RECESSED..........UHB,UHC,UHM	EA	1
55	54	XDDDD		97499	204-030-180-43	...PANEL ASSEMBLY-LH....................UHB	EA	1
55	54	PBDDD	1560-00-203-1100	97499	204-030-180-69	...PANEL,FUSELAGE,AIRC -LH USE WHEN CRASHWORTHY FUEL SYSTEM IS INSTALLED....................UHB	EA	1
55		MDDZZ	1560-00-H05-8783	97499	204-961-058-27	...COVER USE WHEN CRASH- WORTHY FUEL SYSTEM IS INSTALLED ....UHB,UHC,UHM	EA	1
55	54	PADZZ	1560-00-427-8287	97499	204-030-180-55	...SKIN,AIRCRAFT U/W PN 204-030-180-43....................UHB	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
55	54	PADDO	1560-00-907-0870	97499	204-031-179-1	...PANEL ASSEMBLY,FUEL -RH U/O PN 204-031-709-51 & -197 ....UHB	EA	1
55	54	PADDO	1560-00-828-3333	97499	204-030-081-27	...PANEL,FUSELAGE,AIRC -RH U/O PN 204-031-709-69 & -381 ....UHC,UHM	EA	1
55	54	PADZZ	1560-00-427-8266	97499	204-030-081-35	...SKIN,AIRCRAFT U/W PN 204-030-081-27...........UHB,UHC,UHM	EA	1
55		XCFZZ		97499	204-030-195-9	..VENT INSTL..................................UHB,UHC,UHM	EA	1
55	54A	PBDZZ	1560-00-133-7412	97499	204-030-195-17	...VENT,FUEL CAVITY............................UHB,UHC,UHM	EA	1
55		XCFZZ		97499	204-030-708-307	.BULKHEAD INSTL CENTER U/O PN 204-030-006-496-55.........UHB	EA	1
55		XCFZZ		97499	204-030-708-373	.BULKHEAD INSTL CENTER U/O PN 204-030-006-576-79.........UHB	EA	1
55		XCFZZ		97499	204-030-708-459	.BULKHEAD INSTL CENTER U/O PN 204-030-006-83.............UHB	EA	1
55		XCFZZ		97499	204-031-708-1	.BULKHEAD INSTL U/O PN 204-031-006-16-13 SEE FIG.62 FOR BREAKDOWN.......................UHB	EA	1
55		XCFZZ		97499	204-031-708-109	.BULKHEAD INSTL U/O PN 204-031-006-25 SEE FIG.62 FOR BREAKDOWN.......................UHB	EA	1
55		XCFZZ		97499	204-031-708-27	.BULKHEAD INSTL U/O PN 204-031-006-49 SEE FIG.62 FOR BREAKDOWN.......................UHB	EA	1
55		XCFZZ		97499	204-031-708-19	.BULKHEAD INSTL U/O PN 204-031-006-71 SEE FIG.62 FOR BREAKDOWN.......................UHB	EA	1
55		XCFZZ		97499	204-031-708-157	.BULKHEAD INSTL U/O PN 204-031-006-109 & 204-032-006-1 SEE FIG.62 FOR BRKDN.......................UHC,UHM	EA	1
55		XCFZZ		97499	204-031-708-185	.BULKHEAD INSTL U/O PN 204-032-006-219-27 SEE FIG.62 FOR BREAKDOWN.......................UHC,UHM	EA	1
55	55	PADZZ	5306-00-182-2061	88044	AN3H10A	..BOLT,MACHINE..................................UHB	EA	4
55	56	PADZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT...................................UHB	EA	8
55	57	PADZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON...........UHB	EA	4
55	58	PADZZ	1560-00-971-5150	97499	204-070-486-1	..FITTING,SAFETY BELT...........................UHB	EA	3
55	59	PADZZ	1560-00-736-4019	97499	204-030-954-1	..FITTING,ASSEMBLY..............................UHB	EA	3
55	60	MFOZZ	5340-00-707-7525	97499	204-070-962-1	..BRACKET,ANGLE.................................UHB	EA	2
55	61	PADZZ	1560-00-997-6558	97499	204-031-257-7	..GUIDE ASSEMBLY,DOOR -LH.......................UHB	EA	1
55	62	PADZZ	1560-00-997-6560	97499	204-031-257-8	..GUIDE ASSEMBLY,DOOR -RH.......................UHB	EA	1
55	63	XDOZZ		88044	AN525-10R22	..SCREW,MACHINE U/O <UH-1BB PN 204-030-708-307...........UHB	EA	2
55	64	XDOZZ		88044	AN525-10R32	..SCREW,MACHINE U/O PN 204-030-708-373 & -459............UHB	EA	2
55	65	PADZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT...................................UHB	EA	2
55	66	PADZZ	3120-00-807-2307	80205	NAS75-3-020	..BUSHING,SLEEVE................................UHB	EA	2
55	67	PADZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT...................................UHB	EA	4
55	68	PADZZ	5310-00-184-8980	88044	AN960PD516L	..WASHER,FLAT...................................UHB	EA	2
55	69	PADZZ	3120-00-633-0821	97499	204-030-788-1	..ROLLER CARGO DOOR.............................UHB	EA	2
55	70	PADZZ	5310-00-764-7282	96906	MS21047L3	..NUT,SELF-LOCKING,PL...........................UHB	EA	8
55	71	PADZZ	5305-00-206-1201	88044	AN525-10R14	..SCREW, MACHINE................................UHB	EA	14
55	72	PADZZ	1560-00-701-4139	97499	204-030-872-1	..COVER,ACCESS..................................UHB	EA	1
55	73	PADZZ	5305-00-180-0014	88044	AN525-10R12	..SCREW,MACHINE.................................UHB	EA	2
55	74	PADZZ	1680-00-738-8343	97499	204-030-185-1	..FITTING,TROOP SEAT............................UHB	EA	4
55	75	XCFZZ		97499	204-031-259-1	..SUPPORT INSTL U/O PN 204-030-708-307 & -373............UHB	EA	1
55	76	PADZZ	5325-00-285-6297	88044	AN227-10B6	...STUD,SNAP FASTEN.............................UHB	EA	1
55	77	PADZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..................................UHB	EA	1
55	78	PADZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON..................UHB	EA	1
55	79	PAFZZ	5310-00-655-5892	80205	NAS698A06	...NUT,SELF-LOCKING,PL..........................UHB	EA	5

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
55	80	PAOZZ	5340-00-514-1339	88044	AN743Z13	...BRACKET,ANGLE..UHB	EA	1
55	81	MFOZZ	1560-00-H24-1804	97499	204-031-259-3	...SUPPORT..UHB	EA	1
55	82	PAOZZ	5310-00-978-2279	80539	4600-054	..NUT,SELF-LOCKING,PL U/O PN 204-030-708-459..............UHB	EA	6
55	83	PAOZZ	1560-00-671-4934	97499	204-030-341-1	..SIGHT GLASS ASSEMBL..UHB	EA	1
55	84	PAOZZ	5305-00-206-1201	88044	AN525-10R14	..SCREW, MACHINE..UHB	EA	22
55	85	PAOZZ	5310-00-764-7282	96906	MS21047L3	..NUT,SELF-LOCKING,PL..UHB	EA	14
55	86	PAOZZ	1560-00-066-1364	97499	204-030-953-23	..DOOR ASSEMBLY..UHB	EA	1
55	87	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE..UHB	EA	3
55	88	PAOZZ	5310-00-734-1850	96906	MS21071L3	..NUT,SELF-LOCKING,PL..UHB	EA	4
55	89	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..UHB	EA	7
55	89	PAOZZ	5310-00-885-1850	80539	14652HA048-1	..NUT,SELF-LOCKING,PL..UHB	EA	1
55	89	PAOZZ	5310-00-978-2279	80539	4600-054	..NUT,SELF-LOCKING,PL..UHB	EA	2
55	90	XDOZZ	5305-00-929-7857	96906	MS27039-1-09	..SCREW,MACHINE..UHB	EA	4
55		XCFZZ		97499	204-031-709-11	.BULKHEAD INSTL U/O PN 204-030-006-49, -55,-57,-79,& -83 ....UHB	EA	1
55		XCFZZ		97499	204-031-709-253	.BULKHEAD INSTL U/O PN 204-031-006-1,-13,& -25............UHB	EA	1
55		XCFZZ		97499	204-031-709-13	.BULKHEAD INSTL U/O PN 204-031-006-49....................UHB	EA	1
55		XCFZZ		97499	204-031-709-17	.BULKHEAD INSTL U/O PN 204-031-006-71....................UHB	EA	1
55		XCFZZ		97499	204-031-709-341	.BULKHEAD INSTL U/O PN 204-031-006-109................UHC,UHM	EA	1
55		XCFZZ		97499	204-031-709-373	.BULKHEAD INSTL U/O PN 204-032-006-1..................UHC,UHM	EA	1
55		XCFZZ		97499	204-031-709-387	.BULKHEAD INSTL U/O PN 204-032-006-21 & -27..........UHC,UHM	EA	1
55	9:	XBDDD	1560-00-H24-7449	97499	204-031-709-41	..BULKHEAD ASSEMBLY U/O PN 204-031-709-11.................UHB	EA	1
55	91	XBDDD	1560-00-H25-4577	97499	204-031-709-255	..BULKHEAD ASSEMFLY U/O PN 204-031-709-253................UHB	EA	1
55	91	XBDDD	1560-00-H25-9142	97499	204-031-709-43	..BULKHEAD ASSEMBLY U/O PN 204-031-709-13.................UHB	EA	1
55	91	XBDDD	1560-00-H26-0405	97499	204-031-709-47	..BULKHEAD ASSEMBLY U/O PN 204-031-709-17.................UHB	EA	1
55	91	XBDDD	1560-00-H26-2139	97499	204-031-709-343	..BULKHEAD ASSEMBLY U/O PN 204-031-709-341...........UHC,UHM	EA	1
55	91	XBDDZ	1560-00-918-2438	97499	204-031-709-375	..BULKHEAD ASSEMBLY,L U/O PN 204-031-709-373.........UHC,UHM	EA	1
55	91	XBDDD	1560-00-H26-5643	97499	204-031-709-389	..BULKHEAD ASSEMBLY U/O PN 204-031-709-387...........UHC,UHM	EA	1
55	92	PBOZZ	1560-00-997-6563	97499	204-030-802-5	...FITTING,TENSION TIE -LH........................UHB,UHC,UHM	EA	1
55	92	PBOZZ	1560-00-997-6564	97499	204-030-802-6	...FITTING,TENSION TIE -RH........................UHB,UHC,UHM	EA	1
55	92A	XCFZZ		97499	204-031-172-33	..PANEL INSTL FUEL CELL-LH........................UHB,UHC,UHM	EA	1
55	92A	XCFZZ		97499	204-031-974-31	..PANEL INSTL FUEL CELL-RH........................UHB,UHC,UHM	EA	1
55	93	PADZZ	1560-00-224-3686	97499	204-031-172-55	...PANEL,FUSELAGE,AIRC -LH USE WHEN CRASHWORTHY FUEL SYSTEM IS INSTALLED..................................UHB,UHC,UHM	EA	1
55	93	PADZZ	1560-00-932-5134	97499	204-031-172-37	...PANEL,FUEL CELL -LH............................UHB,UHC,UHM	EA	1
55	93	PADZZ	1560-00-203-1134	97499	204-031-974-47	...PANEL,FUSELAGE,AIRC -RH USE WHEN CRASHWORTHY FUEL SYSTEM IS INSTALLED..................................UHB,UHC,UHM	EA	1

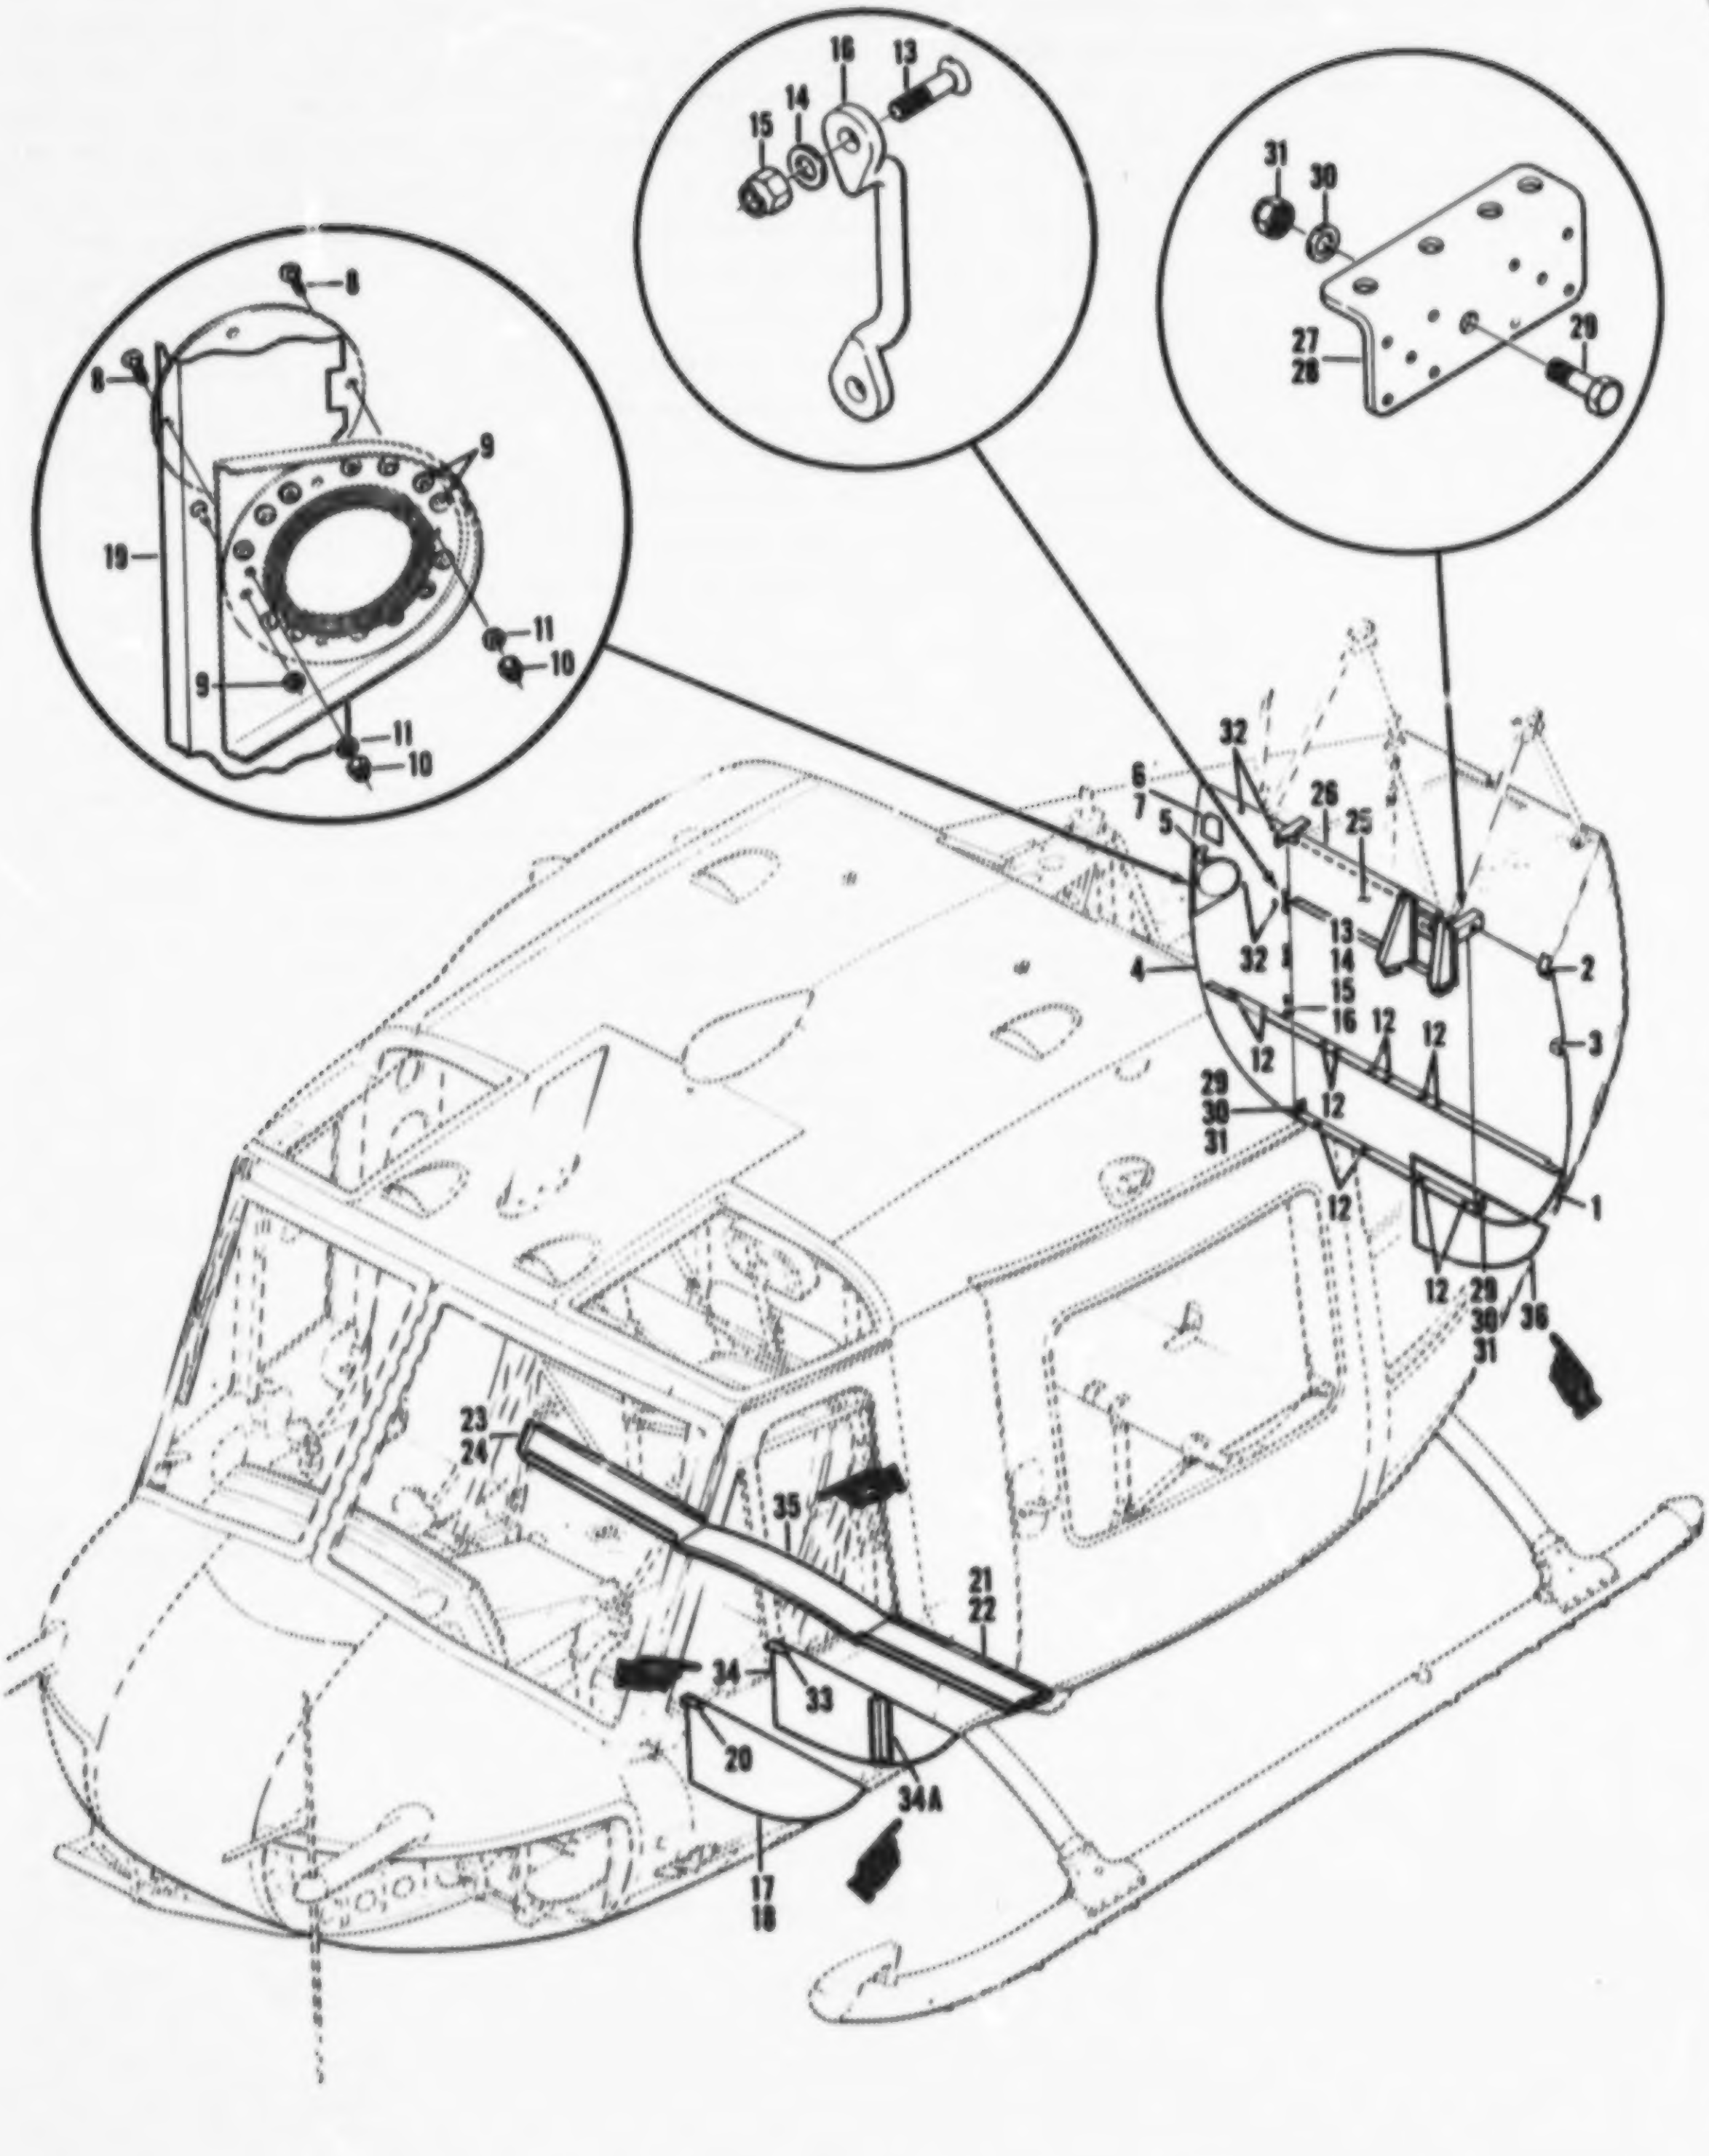
16
13
15
14
31
30
27
28
29
8
8
9
19
11
10
9
11
10
32
6
7
5
26
25
13
14
32
4
15
16
12
12
2
12
3
29
30
31
12
12
1
12
29
30
31
36
23
24
35
21
22
34
33
20
34A
17
18

Figure 56. Fuselage Assembly, Structure Aft

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
56		XCFZZ		97499	204-030-006-49	FUSELAGE ASSY USBL EFF 60-3546 THRU 60-3590 SEE FIG.19 FOR NHA..........UHB	EA	1
56		XCFZZ		97499	204-030-006-55	FUSELAGE ASSY USBL EFF 60-3591 THRU 60-3619 SEE FIG.19 FOR NHA..........UHB	EA	1
56		XCFZZ		97499	204-030-006-57	FUSELAGE ASSY USBL EFF 61-686 THRU 61-723 SEE FIG.19 FOR NHA ....UHB	EA	1
56		XCFZZ		97499	204-030-006-79	FUSELAGE ASSY USBL EFF 61-724 THRU 61-753 SEE FIG.19 FOR NHA ....UHB	EA	1
56		XCFZZ		97499	204-030-006-83	FUSELAGE ASSY USBL EFF 61-754 THRU 61-803 SEE FIG.19 FOR NHA ....UHB	EA	1
56		XCFZZ		97499	204-031-006-1	FUSELAGE ASSY USBL EFF 62-1872 THRU 62-1996 SEE FIG.19 FOR NHA..........UHB	EA	1
56		XCFZZ		97499	204-031-006-13	FUSELAGE ASSY USBL EFF 62-1997 THRU 62-12555 SEE FIG.19 FOR NHA..........UHB	EA	1
56		XCFZZ		97499	204-031-006-25	FUSELAGE ASSY USBL EFF 63-8500 THRU 63-8658 SEE FIG.19 FOR NHA..........UHB	EA	1
56		XCFZZ		97499	204-031-006-49	FUSELAGE ASSY USBL EFF 63-8659 THRU 63-12952 SEE FIG.19 FOR NHA..........UHB	EA	1
56		XCFZZ		97499	204-031-006-71	FUSELAGE ASSY USBL EFF 64-13902 THRU 64-14100 SEE FIG.19 FOR NHA..........UHB	EA	1
56		XCFZZ		97499	204-031-006-109	FUSELAGE ASSY USBL EFF 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
56		XCFZZ		97499	204-032-006-1	FUSELAGE ASSY USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
56		XCFZZ		97499	204-032-006-21	FUSELAGE ASSY USBL EFF 66-492 THRU 66-15022 SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
56		XCFZZ		97499	204-032-006-27	FUSELAGE ASSY USBL EFF 66-15023 & SUBSEQUENT SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
56		XCFZZ		97499	204-030-006-51	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-49..........UHB	EA	1
56		XCFZZ		97499	204-030-006-65	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-55..........UHB	EA	1
56		XCFZZ		97499	204-030-006-67	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-57..........UHB	EA	1
56		XCFZZ		97499	204-030-006-75	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-79..........UHB	EA	1
56		XCFZZ		97499	204-030-006-85	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-83..........UHB	EA	1
56		XCFZZ		97499	204-031-006-3	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-1..........UHB	EA	1
56		XCFZZ		97499	204-031-006-15	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-13..........UHB	EA	1
56		XCFZZ		97499	204-031-006-27	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-25 & -49..........UHB	EA	1
56		XCFZZ		97499	204-031-006-73	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-71..........UHB	EA	1
56		XCFZZ		97499	204-031-006-111	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-109..........UHC,UHM	EA	1
56		XCFZZ		97499	204-032-006-3	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-1..........UHC,UHM	EA	1
56		XCFZZ		97499	204-032-006-23	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-21..........UHC,UHM	EA	1
56		XCFZZ		97499	204-032-006-29	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-27..........UHC,UHM	EA	1
56		XCFZZ		97499	204-030-006-53	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-49..........UHB	EA	1
56		XCFZZ		97499	204-030-006-61	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-55..........UHB	EA	1
56		XCFZZ		97499	204-030-006-69	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-57..........UHB	EA	1
56		XCFZZ		97499	204-030-006-77	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-79..........UHB	EA	1
56		XCFZZ		97499	204-030-006-87	.CABLE INSTL-RH U/O PN 204-030-006-83..........UHB	EA	1
56		XCFZZ		97499	204-031-006-5	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-1..........UHB	EA	1
56		XCFZZ		97499	204-031-006-17	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-13..........UHB	EA	1
56		XCFZZ		97499	204-031-006-29	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-25 & -49..........UHB	EA	1
56		XCFZZ		97499	204-031-006-75	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-71..........UHB	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
56		XCFZZ		97499	204-031-006-113	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-109...........UHC,UHM	EA	1
56		XCFZZ		97499	204-032-006-5	.BEAM ASSY,OUTER-RH U/O PN 204-032-006-1.............UHC,UHM	EA	1
56		XCFZZ		97499	204-032-006-37	.BEAM ASSY-RH U/O PN 204-032-006-21..................UHC,UHM	EA	1
56		XCFZZ		97499	204-032-006-25	.BEAM ASSY,OUTER-RH U/O PN 204-032-006-27............UHC,UHM	EA	1
56		XCFZZ		97499	204-030-711-257	..BULKHEAD INSTL-LH U/O PN 204-030-006-51, -65,-67,-75,-85, 204-031-006-3,-15,-27, & -73..................................UHB	EA	1
56		XCFZZ		97499	204-030-711-453	..BULKHEAD INSTL-LH U/O PN 204-031-006-111...........UHC,UHM	EA	1
56		XCFZZ		97499	204-030-711-515	..BULKHEAD INSTL-LH U/O PN 204-032-006-3 & -23.......UHC,UHM	EA	1
56		XCFZZ		97499	204-030-711-559	..BULKHEAD INSTL-LH U/O PN 204-032-006-29............UHC,UHM	EA	1
56	1	XDDDZ	1560-00-571-8041	97499	204-030-711-259	...BULKHEAD ASSEMBLY U/O PN 204-030-711-257..............UHB	EA	1
56	1	XDDDZ	1560-00-571-8035	97499	204-030-711-517	...BULKHEAD ASSEMBLY U/O PN 204-030-711-453 & -515 ....UHC,UHM	EA	1
56	1	XDDDD	1560-00-571-8034	97499	204-030-711-563	...BULKHEAD ASSEMBLY U/O PN 204-030-711-559..........UHC,UHM	EA	1
56	2	PAFZZ	1560-00-765-7844	97499	204-030-262-1	....SUPPORT,STRUCTURAL U/O <UH-1B8 PN 204-030-711-259....UHB	EA	1
56	3	PBFZZ	1560-00-939-5948	97499	204-030-763-1	....FITTING,HINGE,DOOR...........................UHB,UHC,UHM	EA	2
56		XCFZZ		97499	204-030-711-253	..BULKHEAD INSTL-RH U/O PN 204-030-006-53, -61,-69,-77,& -87 ....UHB	EA	1
56		XCFZZ		97499	204-030-711-333	..BULKHEAD INSTL-RH U/O PN 204-031-006-5 & -17...........UHB	EA	1
56		XCFZZ		97499	204-030-711-375	..BULKHEAD INSTL-RH U/O PN 204-031-006-29 & -75..........UHB	EA	1
56		XCFZZ		97499	204-030-711-549	..BULKHEAD INSTL-RH U/O PN 204-031-006-113...........UHC,UHM	EA	1
56		XCFZZ		97499	204-030-711-551	..BULKHEAD INSTL-RH U/O PN 204-032-006-5.............UHC,UHM	EA	1
56		XCFZZ		97499	204-030-711-605	..BULKHEAD INSTL-RH U/O PN 204-032-006-37............UHC,UHM	EA	1
56		XCFZZ		97499	204-030-711-561	..BULKHEAD INSTL-RH U/O PN 204-032-006-25............UHC,UHM	EA	1
56	4	XBDDD	1560-00-H24-7318	97499	204-030-711-255	...BULKHEAD ASSEMBLY U/O PN 204-030-711-253..............UHB	EA	1
56	4	XBDDD	1560-00-571-8033	97499	204-030-711-331	...BULKHEAD ASSEMBLY U/O PN 204-030-711-333..............UHB	EA	1
56	4	XDDDD	1560-00-571-8115	97499	204-030-711-377	...BULKHEAD ASSEMBLY U/O PN 204-030-711-375..............UHB	EA	1
56	4	XBDDZ	1560-00-936-2372	97499	204-030-711-553	...BULKHEAD ASSEMBLY,R U/O PN 204-030-711-549........UHC,UHM	EA	1
56	4	XBDDZ	1560-00-957-9286	97499	204-030-711-555	...BULKHEAD ASSEMBLY,F U/O PN 204-030-711-551........UHC,UHM	EA	1
56	4	XDDDD	1560-00-571-8032	97499	204-030-711-607	...BULKHEAD ASSEMBLY U/O PN 204-030-711-605..........UHC,UHM	EA	1
56	4	XBDDZ	1560-00-105-6307	97499	204-030-711-609	...BULKHEAD ASSEMBLY,F U/O PN 204-030-711-561........UHC,UHM	EA	1
56	5	PBFZZ	1560-00-939-5948	97499	204-030-763-1	....FITTING,HINGE,DOOR...........................UHB,UHC,UHM	EA	2
56	6	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	....SCREW,MACHINE U/O PN 204-030-711-555, -607,& -609 ....UHC,UHM	EA	11
56	6	PAOZZ	5310-00-167-0753	88044	AN960PD10L	....WASHER,FLAT..UHC,UHM	EA	11
56	7	PAOZZ	5310-00-807-1474	96906	MS21042L3	....NUT,SELF-LOCKING,EX HEXAGON.....................UHC,UHM	EA	11
56	8	PAOZZ	5305-00-984-6191	96906	MS35206-243	....SCREW,MACHINE................................UHB,UHC,UHM	EA	4
56	9	PAOZZ	5310-00-515-9371	88044	AN960PD3	....WASHER,FLAT..................................UHB,UHC,UHM	EA	14
56	10	PAOZZ	5310-00-807-1473	96906	MS21042L08	....NUT,SELF-LOCKING,EX HEXAGON.................UHB,UHC,UHM	EA	4
56	11	PAOZZ	5310-00-184-8966	88044	AN960PD8	....WASHER,FLAT..................................UHB,UHC,UHM	EA	4
56	12	PAOZZ	5310-00-728-7716	96906	MS21069L3	....NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	12
56	13	PAOZZ	5305-00-957-7811	96906	MS24693S272	....SCREW,MACHINE................................UHB,UHC,UHM	EA	6
56	14	PAOZZ	5310-00-167-0753	88044	AN960PD10L	....WASHER,FLAT..................................UHB,UHC,UHM	EA	6
56	15	PAOZZ	5310-00-807-1474	96906	MS21042L3	....NUT,SELF-LOCKING,EX HEXAGON.................UHB,UHC,UHM	EA	6
56	16	PAOZZ	5340-00-897-2542	76786	662R1-1 1-4	....LOOP,STRAP FASTENER..........................UHB,UHC,UHM	EA	3
56		XCFZZ		97499	204-030-715-23	..BULKHEAD INSTL.................................UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
56	17	XDOZZ		97499	204-030-715-25	...BULKHEAD ASSEMBLY..........UHB,UHC,UHM	EA	1
56	18	PBDZZ	1560-00-121-1228	97499	204-030-715-27	....WEB,AIRFRAME..........UHB,UHC,UHM	EA	1
56	19	PBDZZ	1560-00-120-0877	97499	204-030-711-281	....CLOSURE,BULKHEAD..........UHB	EA	1
56	20	XBFZZ	1560-00-H24-7220	97499	204-030-167-1	...FITTING..........UHB,UHC,UHM	EA	1
56		XCFZZ		97499	204-031-729-3	..COVER INSTL-LH..........UHB,UHC,UHM	EA	1
56	21	XBFZZ	1560-00-H24-7259	97499	204-031-729-7	...COVER ASSEMBLY..........UHB,UHC,UHM	EA	1
56	22	PBDZZ	1560-00-121-1249	97499	204-031-729-11	...ANGLE,AIRFRAME..........UHB,UHC,UHM	EA	1
56	23	XCFZZ		97499	204-031-729-4	..COVER INSTL-RH..........UHB,UHC,UHM	EA	1
56	24	XBFZZ	1560-00-H24-7326	97499	204-031-729-8	...COVER ASSEMBLY..........UHB,UHC,UHM	EA	1
56	25	XCFZZ		97499	204-030-733-23	..COVER INSTL U/D P/N 204-032-006-23..........UHB,UHC,UHM	EA	1
56	26	MODZZ	1560-00-H02-9713	97499	204-030-733-17	.ANGLE,COVER INSTALL..........UHB,UHC,UHM	EA	1
56		XCFZZ		97499	204-030-711-271	.BULKHEAD INSTL U/O PN 204-030-006-49,-55,-57, -79,& -83 ....UHB	EA	1
56		XCFZZ		97499	204-030-711-323	.BULKHEAD INSTL U/O PN 204-031-006-1..........UHB	EA	1
56		XCFZZ		97499	204-030-711-369	.BULKHEAD INSTL U/O PN 204-031-006-13,-25,-49, & -71.....UHB	EA	1
56		XCFZZ		97499	204-030-711-451	.BULKHEAD INST U/O PN 204-031-006-109..........UHC,UHM	EA	1
56		XCFZZ		97499	204-030-711-503	.BULKHEAD INSTL U/O PN 204-032-006-1,-21,& -27.......UHC,UHM	EA	1
56	27	PAFZZ	1560-00-252-2362	97499	204-031-289-1	..BRACKET,ENGINE MOUN -LH..........UHB,UHC,UHM	EA	1
56	28	PAFZZ	1560-00-828-8114	97499	204-031-289-2	..BRACKET,MOUNT SUPPO -RH..........UHB,UHC,UHM	EA	1
56	29	PAFZZ	5306-00-182-2017	88044	AN4H6A	..BOLT,MACHINE..........UHB,UHC,UHM	EA	2
56	29	PAFZZ	5306-00-292-8252	88044	AN4H7A	..BOLT,MACHINE..........UHB,UHC,UHM	EA	2
56	30	PAFZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT..........UHB,UHC,UHM	EA	8
56	31	PAFZZ	5310-00-857-5557	96906	MS21045L4	..NUT,SELF-LOCKING, HEXAGON..........UHB,UHC,UHM	EA	4
56	32	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	4
56		XCFZZ		97499	204-031-716-1	..BULKHEAD INSTL-LH U/O PN 204-030-006-51, -65,-67,& -75 ....UHB	EA	1
56		XCFZZ		97499	204-031-716-29	..BULKHEAD INSTL-LH U/O PN 204-030-006-85..........UHB	EA	1
56		XCFZZ		97499	204-031-716-21	..BULKHEAD INSTL-LH U/O PN 204-031-006-3,-15, -27,-73,-111, 204-032-006-3,-23,& -29..........UHB,UHC,UHM	EA	1
56	33	XBFZZ	1560-00-H24-7219	97499	204-030-166-3	...FITTING..........UHB,UHC,UHM	EA	1
56	34	XCFZZ		97499	204-031-716-3	...BULKHEAD ASSEMBLY U/O P/N 204-031-716-1..........UHB	EA	1
56	34A	PBDZZ	1560-00-119-4121	97499	204-031-716-13	....STIFFENER,BULKHEAD..........UHB,UHC,UHM	EA	1
56		XCFZZ		97499	204-031-729-1	.COVER INSTL,CENTER..........UHB,UHC,UHM	EA	1
56	35	XBFZZ	1560-00-H24-7450	97499	204-031-729-5	..COVER ASSEMBLY..........UHB,UHC,UHM	EA	1
56		XCFZZ		97499	204-030-276-9	..BULKHEAD INSTL U/O PN 204-031-006-3,-15,-27,-73,-111,204-032-006-3,-23,&-29..........UHB,UHC,UHM	EA	1
56	36	PBDZZ	1560-00-133-7316	97499	204-030-276-11	...BULKHEAD,AIRCRAFT..........UHB,UHC,UHM	EA	1

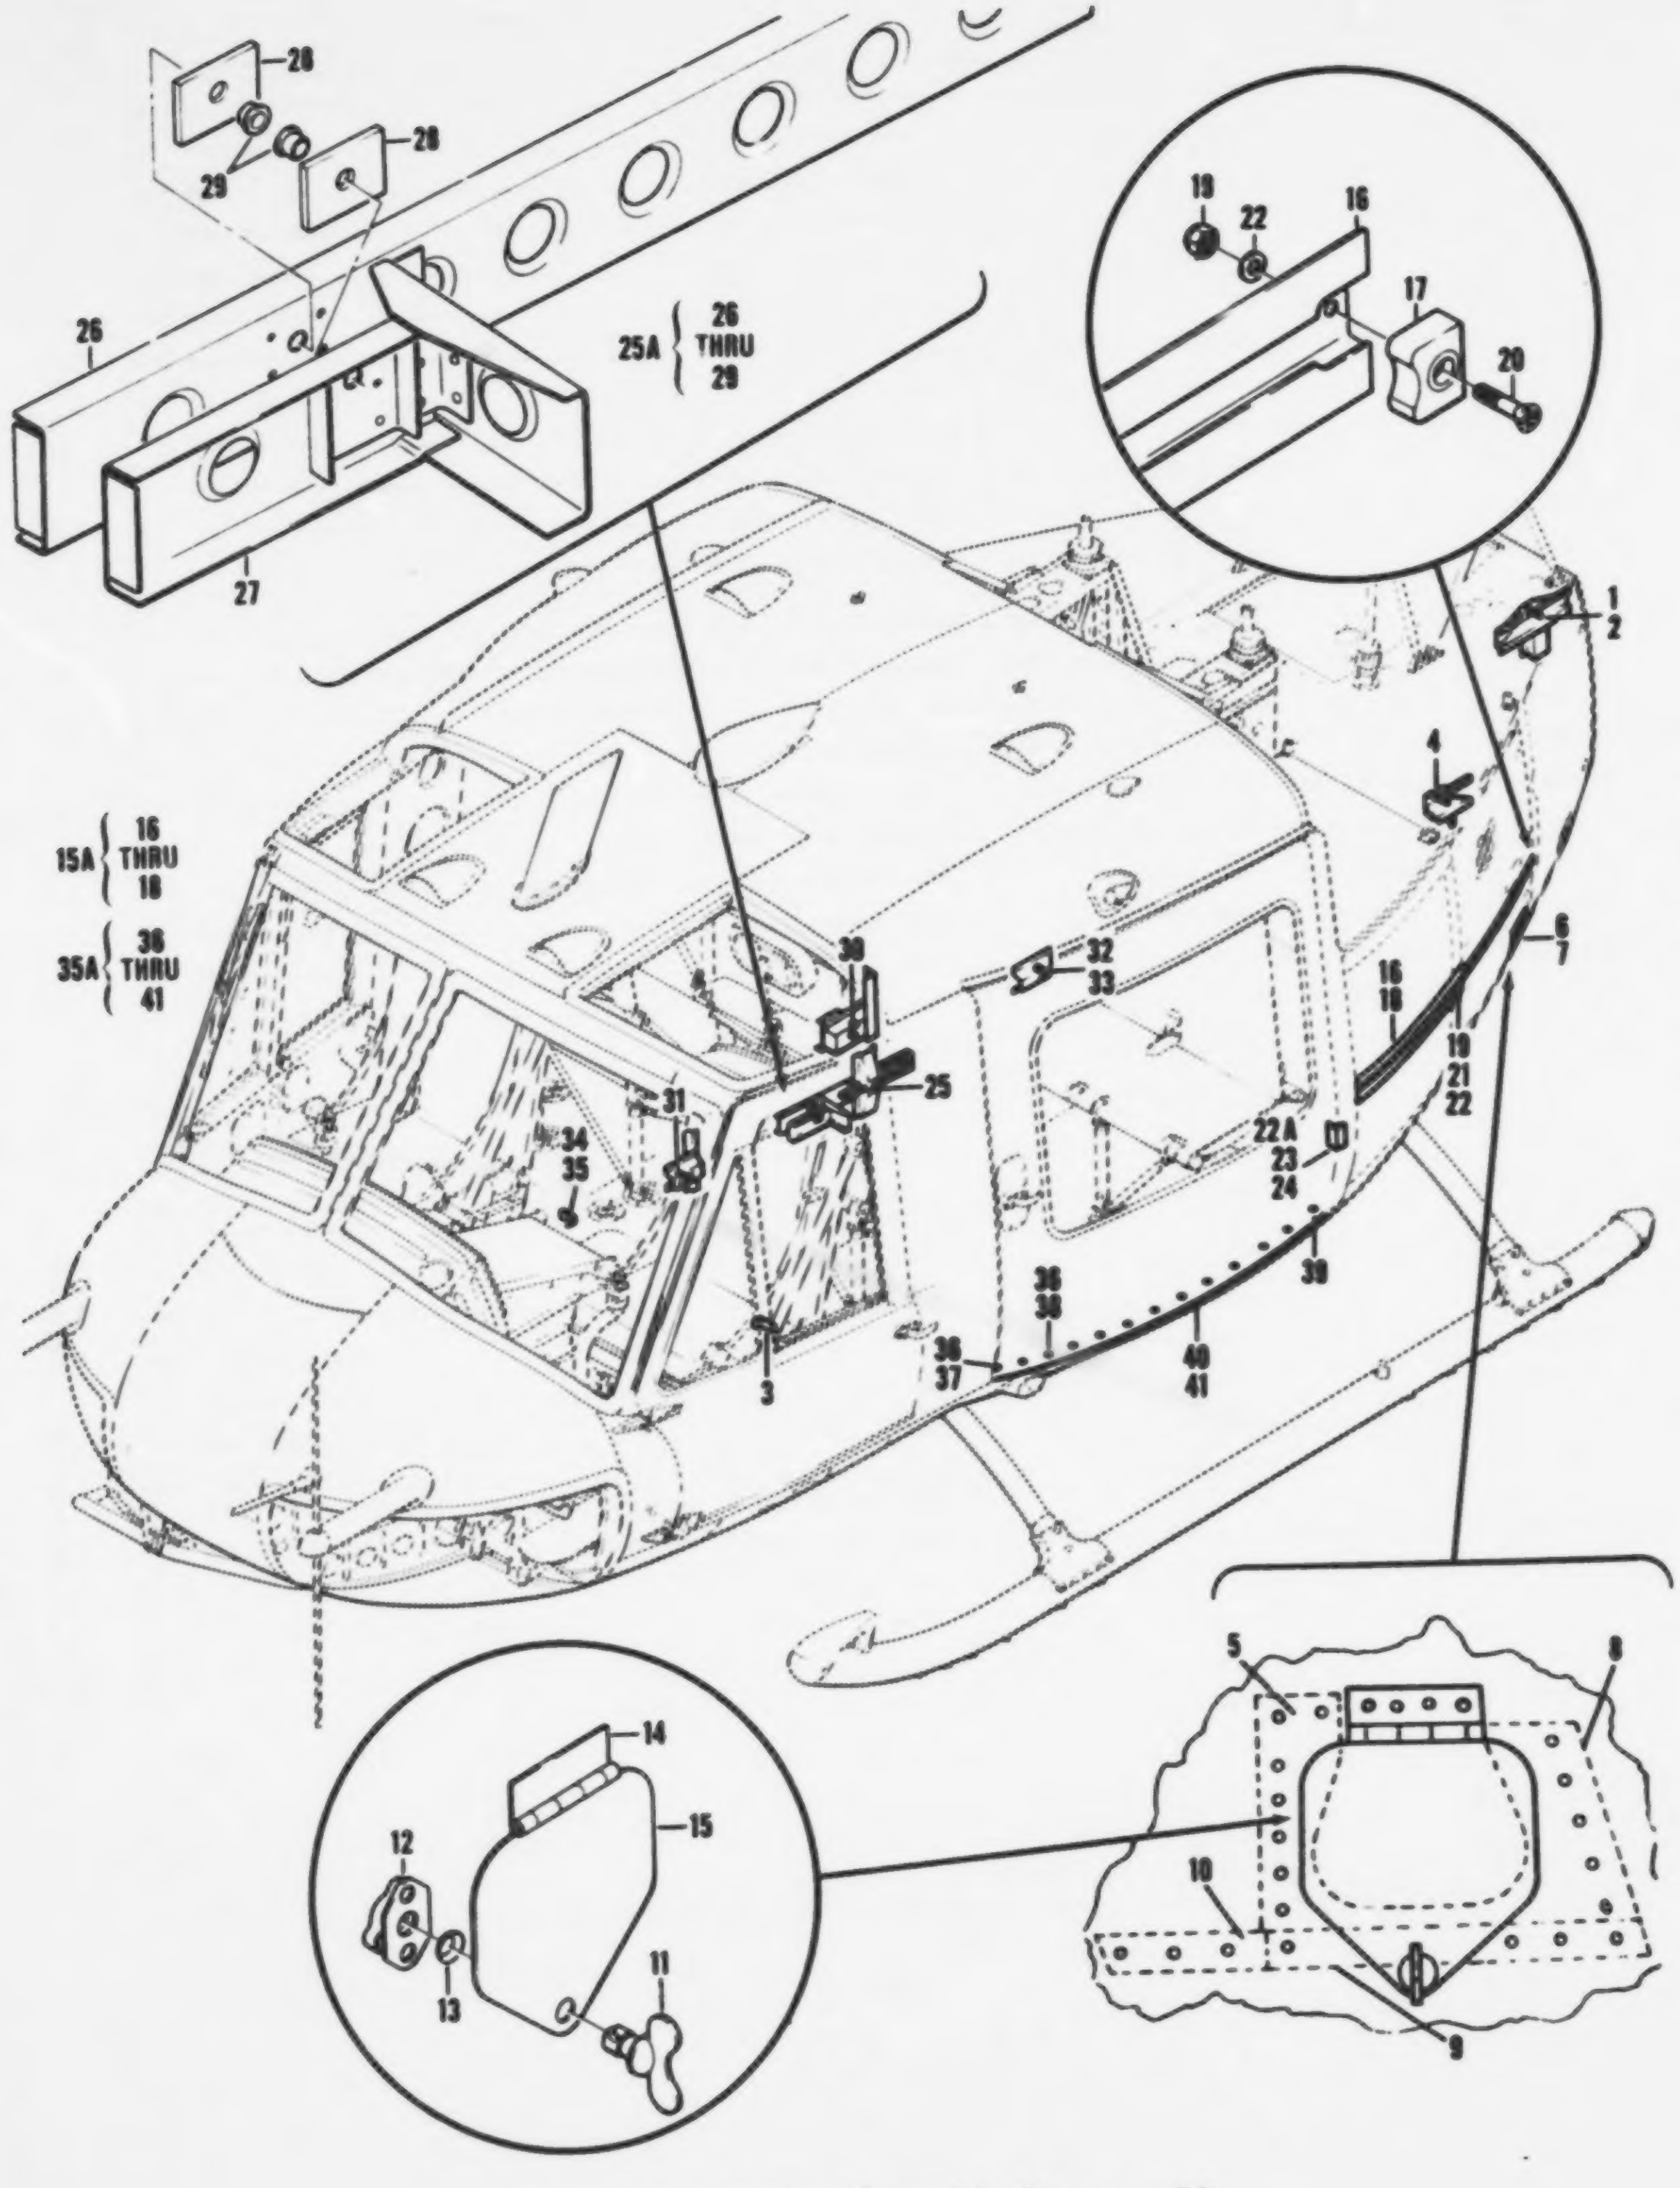
28
29
28
26
25A { 26 THRU 29
27
19
22
16
17
20
1
2
4
15A { 16 THRU 18
35A { 36 THRU 41
30
32
33
25
31
34
35
6
7
16
18
19
21
22
22A
23
24
39
36
38
36
37
40
41
3
5
8
10
9
14
15
12
13
11

Figure 57. Fuselage Assembly, Structure Aft

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
57		XCFZZ		97499	204-030-006-49	FUSELAGE ASSY USBL EFF 60-3546 THRU 60-3590 SEE FIG.19 FOR NHA..........UHB	EA	1
57		XCFZZ		97499	204-030-006-55	FUSELAGE ASSY USBL EFF 60-3591 THRU 60-3619 SEE FIG.19 FOR NHA..........UHB	EA	1
57		XCFZZ		97499	204-030-006-57	FUSELAGE ASSY USBL EFF 61-686 THRU 61-723 SEE FIG.19 FOR NHA ....UHB	EA	1
57		XCFZZ		97499	204-030-006-[illegible]9	FUSELAGE ASSY USBL EFF 61-724 THRU 61-753 SEE FIG.19 FOR NHA ....UHB	EA	1
57		XCFZZ		97499	204-030-006-83	FUSELAGE ASSY USBL EFF 61-754 THRU 61-803 SEE FIG.19 FOR NHA ....UHB	EA	1
57		XCFZZ		97499	204-031-006-1	FUSELAGE ASSY USBL EFF 62-1872 THRU 62-1996 SEE FIG.19 FOR NHA..........UHB	EA	1
57		XCFZZ		97499	204-031-006-13	FUSELAGE ASSY USBL EFF 62-1997 THRU 62-12555 SEE FIG.19 FOR NHA..........UHB	EA	1
57		XCFZZ		97499	204-031-006-25	FUSELAGE ASSY USBL EFF 63-8500 THRU 63-8658 SEE FIG.19 FOR NHA..........UHB	EA	1
57		XCFZZ		97499	204-031-006-49	FUSELAGE ASSY USBL EFF 63-8659 THRU 63-12952 SEE FIG.19 FOR NHA..........UHB	EA	1
57		XCFZZ		97499	204-031-006-71	FUSELAGE ASSY USBL EFF 64-13902 THRU 64-14100 SEE FIG.19 FOR NHA..........UHB	EA	1
57		XCFZZ		97499	204-031-006-109	FUSELAGE ASSY USBL EFF 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
57		XCFZZ		97499	204-032-006-1	FUSELAGE ASSY USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
57		XCFZZ		97499	204-032-006-21	FUSELAGE ASSY USBL EFF 66-492 THRU 66-15022 SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
57		XCFZZ		97499	204-032-006-27	FUSELAGE ASSY USBL EFF 66-15023 & SUBSEQUENT SEE FIG.19 FOR NHA..........UHC,UHM	EA	1
57		XCFZZ		97499	204-030-006-51	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-49..........UHB	EA	1
57		XCFZZ		97499	204-030-006-65	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-55..........UHB	EA	1
57		XCFZZ		97499	204-030-006-67	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-57..........UHB	EA	1
57		XCFZZ		97499	204-030-006-75	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-79..........UHB	EA	1
57		XCFZZ		97499	204-030-006-85	.BEAM ASSY,OUTER-LH U/O PN 204-030-006-83..........UHB	EA	1
57		XCFZZ		97499	204-031-006-3	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-1..........UHB	EA	1
57		XCFZZ		97499	204-031-006-15	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-13..........UHB	EA	1
57		XCFZZ		97499	204-031-006-27	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-25 & -49..........UHB	EA	1
57		XCFZZ		97499	204-031-006-73	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-71..........UHB	EA	1
57		XCFZZ		97499	204-031-006-111	.BEAM ASSY,OUTER-LH U/O PN 204-031-006-109..........UHC,UHM	EA	1
57		XCFZZ		97499	204-032-006-3	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-1..........UHC,UHM	EA	1
57		XCFZZ		97499	204-032-006-23	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-21..........UHC,UHM	EA	1
57		XCFZZ		97499	204-032-006-29	.BEAM ASSY,OUTER-LH U/O PN 204-032-006-27..........UHC,UHM	EA	1
57		XCFZZ		97499	204-030-006-53	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-49..........UHB	EA	1
57		XCFZZ		97499	204-030-006-61	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-55..........UHB	EA	1
57		XCFZZ		97499	204-030-006-69	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-57..........UHB	EA	1
57		XCFZZ		97499	204-030-006-77	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-79..........UHB	EA	1
57		XCFZZ		97499	204-030-006-87	.BEAM ASSY,OUTER-RH U/O PN 204-030-006-83..........UHB	EA	1
57		XCFZZ		97499	204-031-006-5	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-1..........UHB	EA	1
57		XCFZZ		97499	204-031-006-17	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-13..........UHB	EA	1
57		XCFZZ		97499	204-031-006-29	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-25 & -49..........UHB	EA	1
57		XCFZZ		97499	204-031-006-75	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-71..........UHB	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
57		XCFZZ		97499	204-031-006-113	.BEAM ASSY,OUTER-RH U/O PN 204-031-006-109...........UHC,UHM	EA	1
57		XCFZZ		80205	NAS1455-A-00-4	.BEAM ASSY,OUTER-RH U/O PN 204-032-006-1.............UHC,UHM	EA	1
57		XCFZZ		97499	204-032-006-37	.BEAM ASSY,OUTER-RH U/O PN 204-032-006-21............UHC,UHM	EA	1
57		XCFZZ		97499	204-032-006-25	.BEAM ASSY,OUTER-RH U/O PN 204-032-006-27............UHC,UHM	EA	1
57		XCFZZ		97499	204-030-757-13	..BRACKET INSTL-LH...............................UHB,UHC,UHM	EA	1
57	1	XOFZZ	3120-00-670-5329	97499	22-006-15-128-16	...BUSHING,SLEEVE................................UHB,UHC,UHM	EA	1
57	2	PAFZZ	5310-00-734-1850	96906	MS21071L3	...NUT,SELF-LOCKING,PL U/W BOLT AN3-5A FOR FLIGHT IDLE SOLENOID...UHB,UHC,UHM	EA	4
57		XCFZZ		97499	204-031-778-1	..BULKHEAD INSTL-LH U/O PN 204-030-006-51, -65,-67,-75,-85, 204-031-006-3,& -15..................................UHB	EA	1
57		XCFZZ		97499	204-031-778-23	..BULKHEAD INSTL-LH U/O PN 204-031-006-27, -73,-111,204-032-006-3, -23,& -29..........................UHB,UHC,UHM	EA	1
57	3	XBFZZ	1560-00-H24-7232	97499	204-030-281-1	...FITTING U/O PN 204-031-778-1.........................UHB	EA	1
57	3	XBFZZ	1560-00-H25-7596	97499	204-031-271-1	...FITTING U/O PN 204-031-778-23.................UHB,UHC,UHM	EA	1
57		XCFZZ		97499	204-030-755-5	..BRACKET INSTL-LH...............................UHB,UHC,UHM	EA	1
57	4	XDFZZ	3120-00-670-5329	97499	22-006-15-128-16	...BUSHING,SLEEVE................................UHB,UHC,UHM	EA	1
57		XCFZZ		97499	204-030-277-29	..SUPPORT INSTL-LH...............................UHB,UHC,UHM	EA	1
57	5	PBOZZ	1560-00-454-9969	97499	204-030-277-35	...DOUBLER,SUPPORT...............................UHB,UHC,UHM	EA	1
57	6	XBFDD	1560-00-148-6451	97499	204-030-277-31	...SUPPORT ASSEMBLY..............................UHB,UHC,UHM	EA	1
57	7	PAOZZ	5310-00-771-7348	96906	MS21048-3	....NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	2
57	8	PADZZ	1560-00-454-9968	97499	204-030-277-19	....DOUBLER,SUPPORT..............................UHB,UHC,UHM	EA	1
57	9	PADZZ	1560-00-454-9970	97499	204-030-277-33	....SUPPORT,RECEPTACLE...........................UHB,UHC,UHM	EA	1
57	10	PADZZ	1560-00-454-9966	97499	204-030-277-7	....FORMER.......................................UHB,UHC,UHM	EA	1
57	11	PAOZZ	5325-00-721-5503	72794	AW5T15	...STUD,TURNLOCK FA..............................UHB,UHC,UHM	EA	1
57	12	PAOZZ	5325-00-298-7026	72794	R5	...RECEPTACLE,TURNL..............................UHB,UHC,UHM	EA	1
57	13	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FAS...........................UHB,UHC,UHM	EA	1
57	14	MFOZZ	1560-00-H24-7231	97499	204-030-277-39	...HINGE...UHB,UHC,UHM	EA	1
57	15	MFOZZ	1560-00-H24-7230	97499	204-030-277-37	...DOOR..UHB,UHC,UHM	EA	1
57	15A	XCFZZ		97499	204-030-294-15	..TRACK INSTL-LH.................................UHB,UHC,UHM	EA	1
57	15A	XCFZZ		97499	204-030-294-16	..TRACK INSTL-RH.................................UHB,UHC,UHM	EA	1
57	16	PAOZZ	1560-00-758-9278	97499	204-030-293-5	...TRACK,CARGO DOOR U/O PN 204-030-294-15........UHB,UHC,UHM	EA	1
57	16	PAOZZ	5340-00-867-5507	97499	204-030-293-6	...TRACK,SLIDING DOOR U/O PN 204-030-294-16......UHB,UHC,UHM	EA	1
57	17	PAOZZ	5340-00-701-9917	97499	204-030-226-1	...BUMPER,RUBBER.................................UHB,UHC,UHM	EA	1
57	18	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL...........................UHB,UHC,UHM	EA	1
57	19	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON...................UHB,UHC,UHM	EA	2
57	20	PAOZZ	5305-00-705-1640	96906	MS24694S58	...SCREW,MACHINE.................................UHB,UHC,UHM	EA	1
57	21	PAOZZ	5305-00-958-3409	96906	MS24694S52	...SCREW,MACHINE.................................UHB,UHC,UHM	EA	1
57	22	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT...................................UHB,UHC,UHM	EA	1
57	22A	XCFZZ		97499	204-031-210-1	..SUPPORT INSTL-LH...............................UHB,UHC,UHM	EA	1
57	22A	XCFZZ		97499	204-031-210-2	..SUPPORT,INSTL-RH...............................UHB,UHC,UHM	EA	1
57	23	XBFZZ	1560-00-868-6992	97499	204-031-210-3	...SUPPORT,STRUCTURAL -LH........................UHB,UHC,UHM	EA	1
57	23	XDFZZ	1560-00-868-6993	97499	204-031-210-4	...SUPPORT,STRUCTURAL -RH........................UHB,UHC,UHM	EA	1
57	24	PAFZZ	5310-00-761-6830	96906	MS21073L4	...NUT,SELF-LOCKING,PL...........................UHB,UHC,UHM	EA	2
57		XCFZZ		97499	204-030-754-35	..BRACKET INSTL-RH...............................UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
57	25	PAFZZ	3120-00-670-5327	97499	22-006-15-100-16	...BUSHING,SLEEVE.................................UHB,UHC,UHM	EA	1
57	25A	XCFZZ		97499	204-031-730-1	..BRACKET INSTL U/O PN 204-030-006-53,-61, -69,-77,-87,& 204-031-006-5.......................................UHB	EA	1
57	25A	XCFZZ		97499	204-031-730-23	..BRACKET INSTL U/O PN 204-031-006-17,-29, -75,-113,204-032-006-5, -25,& -37..........................UHB,UHC,UHM	EA	1
57	26	PBFFF	1560-00-909-0901	97499	204-031-730-25	...SUPPORT ASSEMBLY,FU............................UHB,UHC,UHM	EA	1
57	27	XBFFF	1560-00-H24-7345	97499	204-031-730-5	...SUPPORT ASSEMBLY...............................UHB,UHC,UHM	EA	1
57	28	PAFFF	1560-00-765-6252	97499	204-030-879-75	....PLATE,STRUCTURAL,AI...........................UHB,UHC,UHM	EA	1
57	29	PAFZZ	3120-00-528-5726	97499	22-006-15-11-16	.....BUSHING,SLEEVE...............................UHB,UHC,UHM	EA	1
57	30	XCFZZ		97499	204-030-754-1	..BRACKET INSTL-RH U/O PN 204-030-006-53, -61,-69,-77,& -87 ....UHB	EA	1
57	30	XCFZZ		97499	204-030-754-43	..BRACKET INSTL U/O PN 204-031-006-5,-17,-29, -75,-113,204-032-006-5, -25,& -37.........................UHB,UHC,UHM	EA	1
57	31	PAOZZ	3120-00-670-5327	97499	22-006-15-100-16	...BUSHING,SLEEVE.................................UHB,UHC,UHM	EA	1
57	32	XCFZZ		97499	204-030-755-43	..BRACKET INSTL...................................UHB,UHC,UHM	EA	1
57	33	XDFZZ	3120-00-869-4525	97499	22-006-16-117-16	...BUSHING,SLEEVE.................................UHB,UHC,UHM	EA	1
57		XCFZZ		97499	204-030-780-29	..BULKHEAD INSTL U/O PN 204-030-006-53, -61,-69,-77,& -87 ....UHB	EA	1
57		XCFZZ		97499	204-030-780-53	..BULKHEAD INSTL U/O PN 204-031-006-5 & -17..............UHB	EA	1
57		XCFZZ		97499	204-030-780-59	..BULKHEAD INSTL U/O PN 204-031-006-29, -75,-113,204-032-006-5, -25,& -37.........................UHB,UHC,UHM	EA	1
57		XBFZZ	1560-00-H25-9203	97499	204-030-780-55	...BULKHEAD ASSEMBLY U/O PN 204-030-780-53................UHB	EA	1
57		XBFZZ	1560-00-H25-9204	97499	204-030-780-61	...BULKHEAD ASSEMBLY U/O PN 204-030-780-59.......UHB,UHC,UHM	EA	1
57	34	PAOZZ	5325-00-685-6221	97820	S11154-6AY	....GROMMET,NONMETALLIC...........................UHB,UHC,UHM	EA	1
57	35	XBFZZ	1560-00-H24-7329	97499	204-030-281-3	...FITTING U/O PN 204-030-780-29 & -53....................UHB	EA	1
57	35	XBFZZ	5340-01-012-5401	97499	204-031-271-3	...BRACKET,FITTING U/O PN 204-030-780-59.........UHB,UHC,UHM	EA	1
57	35A	XCFZZ		97499	204-031-385-11	..TRACK INSTL-LH USBL EFF 62-1827 & SUB..........UHB,UHC,UHM	EA	1
57	35A	XCFZZ		97499	204-031-385-12	..TRACK INSTL-RH USBL EFF 62-1827 & SUB..........UHB,UHC,UHM	EA	1
57	36	PBOZZ	5305-00-180-0011	88044	AN525-10R9	...SCREW,MACHINE..................................UHB,UHC,UHM	EA	11
57	37	PAOZZ	5310-00-761-4221	96906	MS21073L3	...NUT,SELF-LOCKING,PL............................UHB,UHC,UHM	EA	1
57	38	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL............................UHB,UHC,UHM	EA	10
57	39	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE..................................UHB,UHC,UHM	EA	1
57	40	PAOZZ	1560-00-997-6616	97499	204-031-385-13	...TRACK,CARGO DOOR -LH...........................UHB,UHC,UHM	EA	1
57	40	PAOZZ	1560-00-997-6626	97499	204-031-385-14	...TRACK,CARGO DOOR -RH...........................UHB,UHC,UHM	EA	1
57	41	MFOZZ	5330-00-222-9256	97499	204-031-385-5	...SEAL,DOOR GUIDE................................UHB,UHC,UHM	EA	1
57	41	MFOZZ	5330-00-222-9255	97499	204-031-385-7	...SEAL,DOOR GUIDE................................UHB,UHC,UHM	EA	1
57		XCFZZ		97499	204-031-919-1	.MOUNT INSTL,PYLON U/O PN 204-030-006-49 & -55 SEE FIG.91 FOR BREAKDOWN...................................UHB	EA	1
57		XCFZZ		97499	204-031-919-3	.MOUNT INSTL,PYLON U/O PN 204-030-006-57,-59,-79,-83,204-031-006-1 & -13 SEE FIG.91 FOR BREAKDOWN..................UHB	EA	1
57		XCFZZ		97499	204-031-919-5	.MOUNT INSTL,PYLON U/O PN 204-031-006-25 & -49 SEE FIG.91 FOR BREAKDOWN...................................UHB	EA	1
57		XCFZZ		97499	204-031-919-65	.MOUNT INSTL,PYLON U/O PN 204-031-006-71 SEE FIG.91 FOR BREAKDOWN...UHB	EA	1
57		XCFZZ		97499	204-031-919-75	.MOUNT INSTL,PYLON SEE FIG.91 FOR BREAKDOWN..........UHC,UHM	EA	1

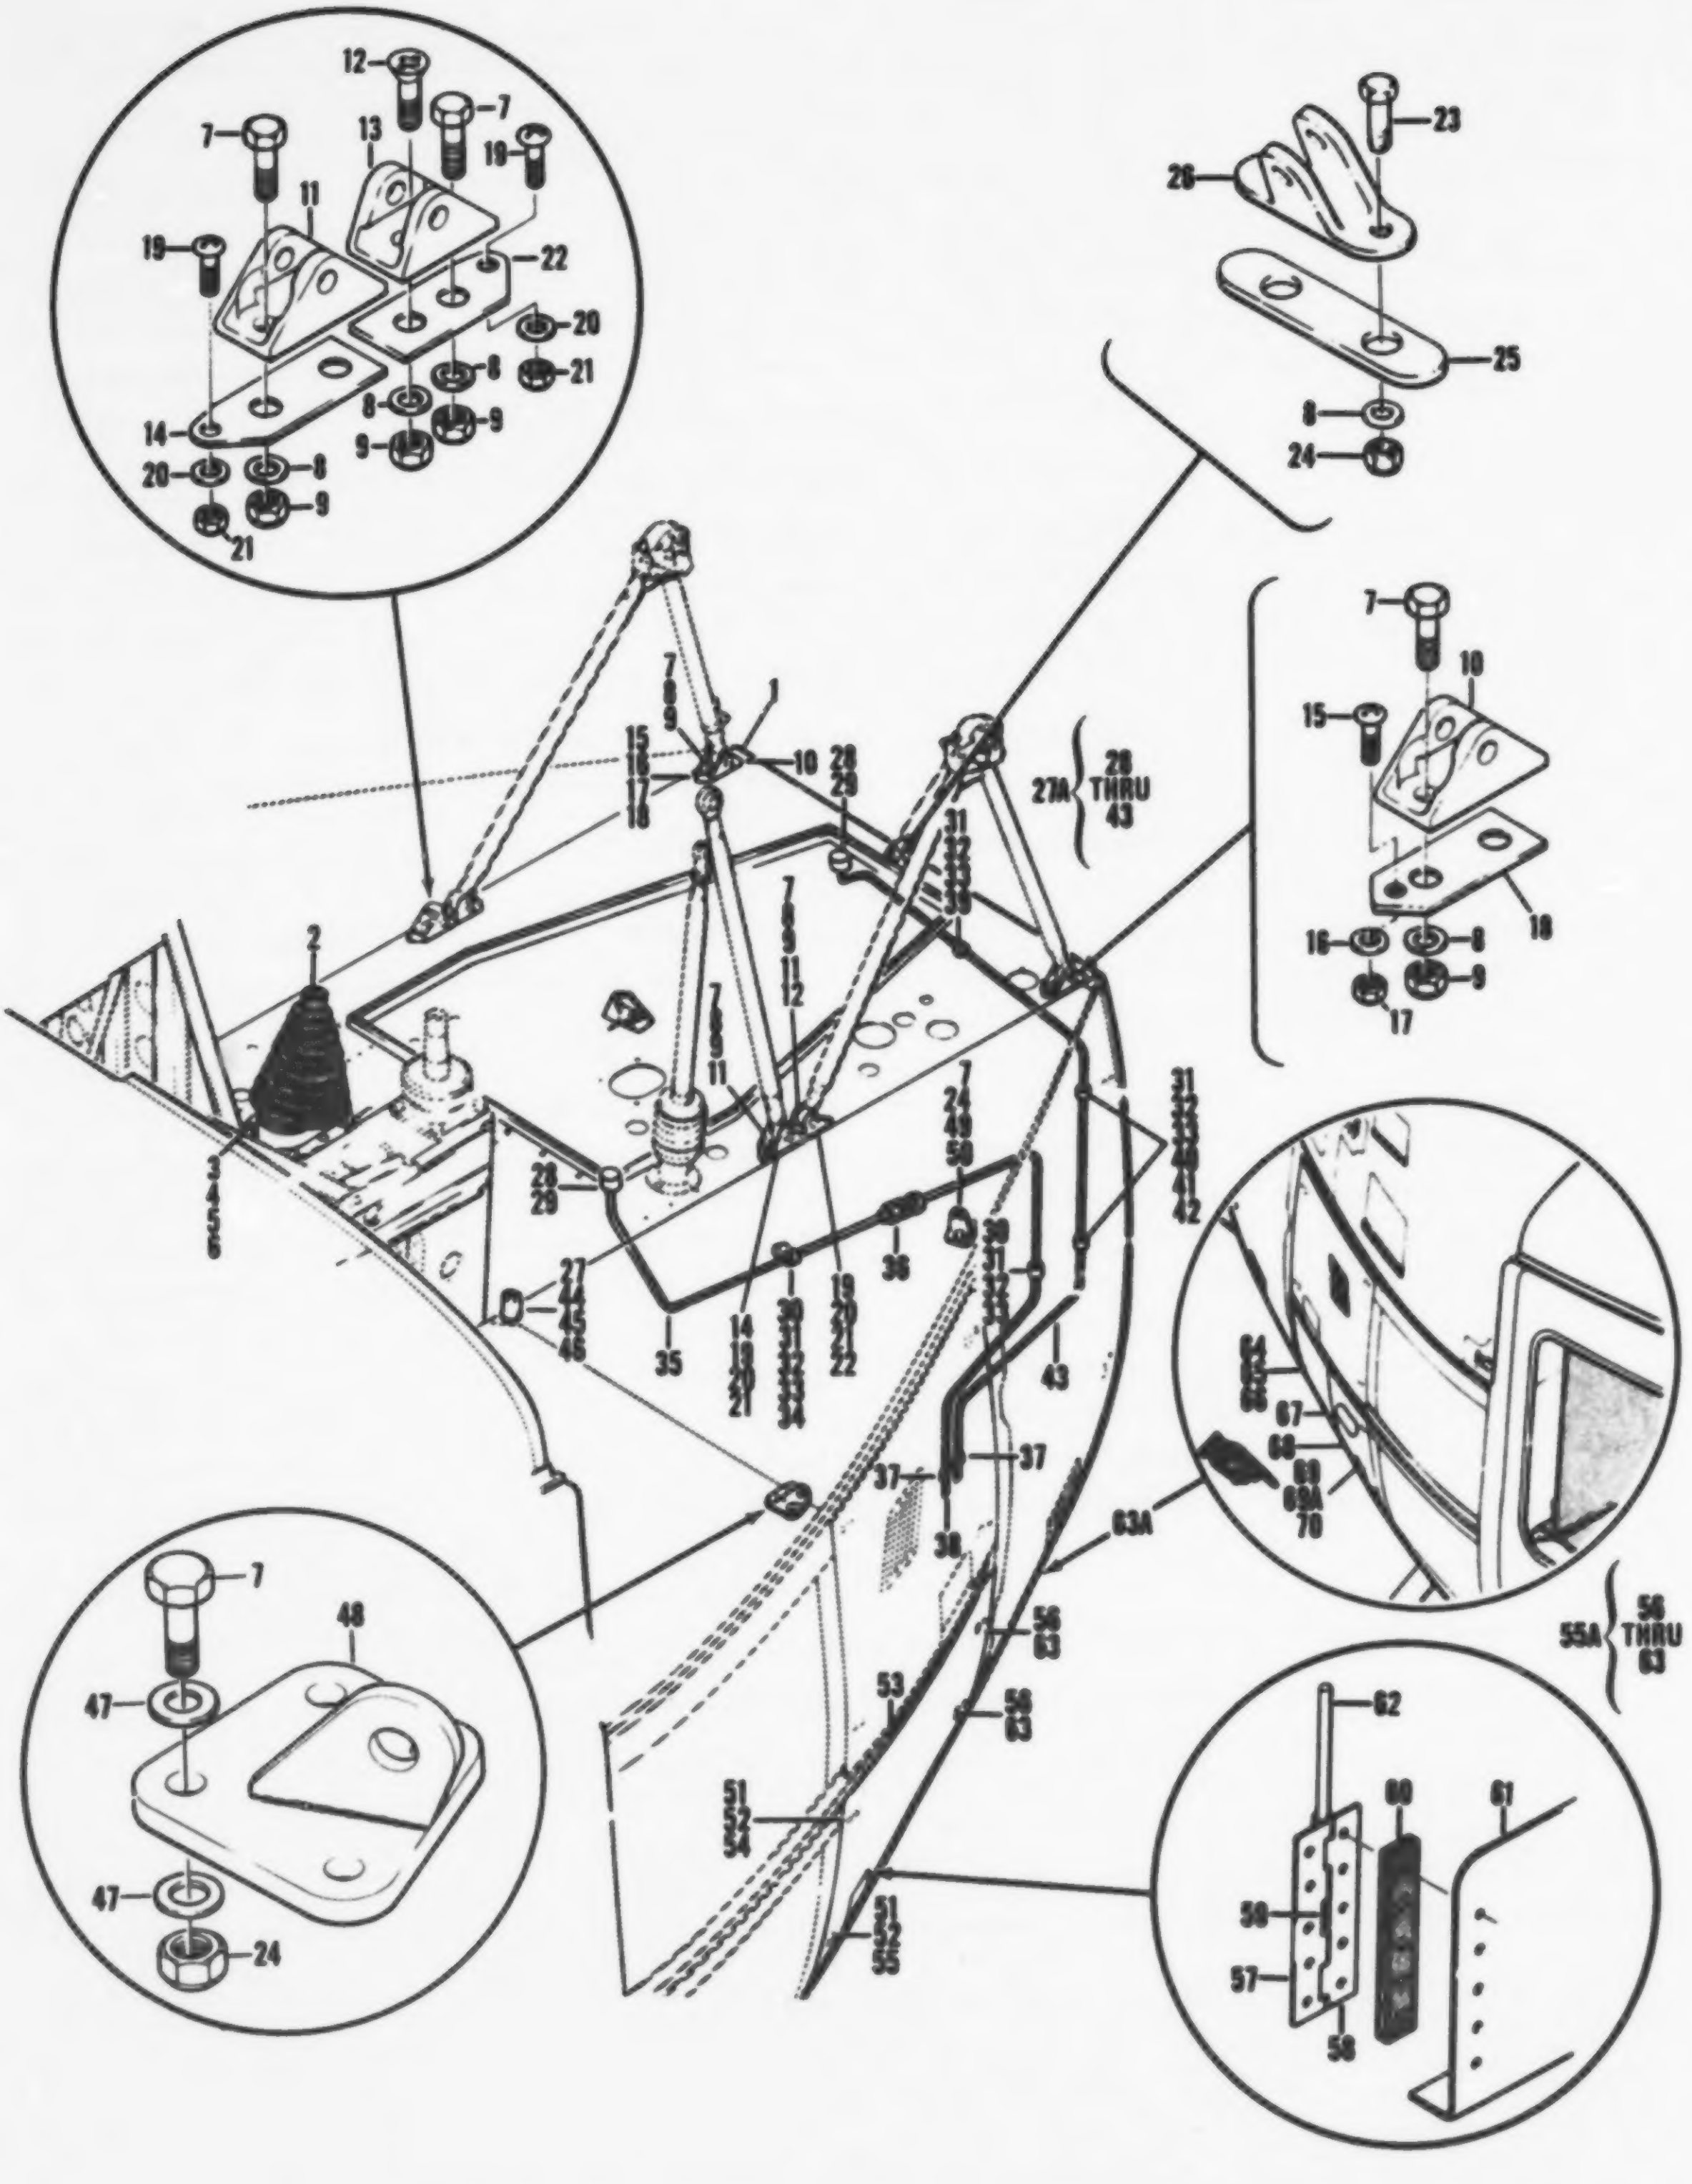

12
7
13
7
19
11
19
22
20
21
8
9
14
20
8
9
21
26
23
25
8
24
1
7
8
9
10
15
16
17
18
28
29
27A
28
THRU
43
31
32
33
30
2
3
4
5
6
7
8
9
11
12
7
8
9
11
7
24
49
50
31
32
33
40
41
42
28
29
27
44
45
46
35
14
18
20
21
30
31
32
33
34
19
20
21
22
36
30
31
32
33
43
37
37
38
63A
64
65
66
67
68
69
69A
70
7
10
15
16
8
9
17
18
7
48
47
47
24
56
63
55A
56
THRU
63
53
56
63
51
52
54
51
52
55
62
60
61
59
57
58
58

Figure 58. Fuselage Assembly, Structure Aft

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
58		XCFZZ		97499	204-030-006-49	FUSELAGE ASSY USBL EFF 60-3546 THRU 60-3590 SEE FIG.19 FOR NHA....UHB	EA	1
58		XCFZZ		97499	204-030-006-55	FUSELAGE ASSY USBL EFF 60-3591 THRU 60-3619 SEE FIG.19 FOR NHA....UHB	EA	1
58		XCFZZ		97499	204-030-006-57	FUSELAGE ASSY USBL EFF 61-686 THRU 61-723 SEE FIG.19 FOR NHA ....UHB	EA	1
58		XCFZZ		97499	204-030-006-79	FUSELAGE ASSY USBL EFF 61-724 THRU 61-753 SEE FIG.19 FOR NHA ....UHB	EA	1
58		XCFZZ		97499	204-030-006-83	FUSELAGE ASSY USBL EFF 61-754 THRU 61-803 SEE FIG.19 FOR NHA ....UHB	EA	1
58		XCFZZ		97499	204-031-006-1	FUSELAGE ASSY USBL EFF 62-1872 THRU 62-1996 SEE FIG.19 FOR NHA....UHB	EA	1
58		XCFZZ		97499	204-031-006-13	FUSELAGE ASSY USBL EFF 62-1997 THRU 62-12555 SEE FIG.19 FOR NHA....UHB	EA	1
58		XBFZZ		97499	204-031-006-25	FUSELAGE ASSEMBLY,S USBL EFF 63-8500 THRU 63-8658 SEE FIG.19 FOR NHA....UHB	EA	1
58		XCFZZ		97499	204-031-006-49	FUSELAGE ASSY USBL EFF 63-8659 THRU 63-12952 SEE FIG.19 FOR NHA....UHB	EA	1
58		XCFZZ		97499	204-031-006-71	FUSELAGE ASSY USBL EFF 64-13902 THRU 64-14100 SEE FIG.19 FOR NHA....UHB	EA	1
58		XCFZZ		97499	204-031-006-109	FUSELAGE ASSY USBL EFF 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA....UHC,UHM	EA	1
58		XCFZZ		97499	204-032-006-1	FUSELAGE ASSY USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA....UHC,UHM	EA	1
58		XBFZZ		97499	204-032-006-21	FUSELAGE ASSEMBLY,S USBL EFF 66-492 THRU 66-15022 SEE FIG.19 FOR NHA....UHC,UHM	EA	1
58		XCFZZ		97499	204-032-006-27	FUSELAGE ASSY USBL EFF 66-15023 & SUBSEQUENT SEE FIG.19 FOR NHA....UHC,UHM	EA	1
58		XBFZZ		97499	204-031-197-1	.DECK INSTALLATION U/O PN 204-030-006-49,-55,-57, -79,& -83 ....UHB	EA	1
58		XCFZZ		97499	204-031-197-29	.DECK INSTL U/O PN 204-031-006-1,-13,-25, -49,& -71......UHB	EA	1
58		XCFZZ		97499	204-031-197-69	.DECK INSTL U/O PN 204-031-006-109, 204-032-006-1,-21,& -27 ....UHC,UHM	EA	1
58	1	PADDD	1560-00-071-8277	97499	204-031-197-31	..DECK ASSEMBLY,FUSEL U/O PN 204-031-169-29..............UHB	EA	1
58	1	PADDD	1560-00-179-4097	97499	204-031-197-95	..DECK ASSEMBLY,FUSEL..........................UHB,UHC,UHM	EA	1
58	2	PAOZZ	1560-00-671-4431	97499	204-030-196-1	..BOOT,DUST AND MOIST FORWARD CONTROL............UHB,UHC,UHM	EA	1
58	3	XDOZZ	1560-00-939-5910	97499	204-031-224-1	..RETAINER,BOOT,ELEVA..........................UHB,UHC,UHM	EA	1
58	4	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE..........................UHB,UHC,UHM	EA	8
58	5	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	7
58	6	PAFZZ	5310-00-734-1890	96906	MS21071L3	..NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	1
58	7	PAOZZ	5306-00-292-8252	88044	AN4H7A	.BOLT,MACHINE..........................UHB,UHC,UHM	EA	14
58	8	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........................UHB,UHC,UHM	EA	14
58	9	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE..........................UHB,UHC,UHM	EA	12
58	10	PAOZZ	1560-00-625-0072	97499	204-060-126-1	.BRACKET,ENGINE MOUN..........................UHB	EA	2
58	10	MFOZZ	1560-00-909-5228	97499	204-060-126-3	.FITTING,ENGINE MOUN U/O PN 204-031-006-109, 204-032-006-1,-21,& -27....UHC,UHM	EA	1
58	11	PAOZZ	1560-00-737-6606	97499	204-060-171-1	.BRACKET,ENGINE MOUN..........................UHB,UHC,UHM	EA	1
58	12	PAOZZ	5305-00-059-3086	96906	MS24694S103	.SCREW,MACHINE..........................UHB,UHC,UHM	EA	2
58	13	PAOZZ	1560-00-737-6607	97499	204-060-172-1	.BRACKET,ENGINE MOUN..........................UHB,UHC,UHM	EA	2
58	14	PAOZZ	5365-00-738-8335	97499	204-060-173-1	.SHIM..........................UHB,UHC,UHM	EA	3
58	15	PAOZZ	5305-00-889-3001	96906	MS35206-231	.SCREW,MACHINE..........................UHB,UHC,UHM	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
58	16	PAOZZ	5310-00-167-0816	88044	AN960-6	.WASHER,FLAT..UHB,UHC,UHM	EA	2
58	17	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX WASHER,HEXAGON...............UHB,UHC,UHM	EA	2
58	18	PAOZZ	5365-00-625-0080	97499	204-060-139-1	.SHIM..UHB,UHC,UHM	EA	6
58	19	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE..UHB,UHC,UHM	EA	4
58	20	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..UHB,UHC,UHM	EA	4
58	21	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX ALIGNING.........................UHB,UHC,UHM	EA	4
58	22	PAOZZ	5365-00-738-9336	97499	204-060-173-3	.SHIM ALIGNING..UHB,UHC,UHM	EA	6
58	23	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE...UHB,UHC,UHM	EA	2
58	24	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON...............UHB,UHC,UHM	EA	6
58	25	PAOZZ	5365-00-584-2081	97499	204-060-140-3	.SHIM..UHB,UHC,UHM	EA	3
58	26	PAOZZ	1560-00-674-4221	97499	204-060-150-1	.BRACKET,ENGINE MOUN..................................UHB,UHC,UHM	EA	1
58	27	PAOZZ	5310-00-878-5560	81996	EAB1405	.NUT,PLAIN,EXTENDED HEXAGON...........................UHB,UHC,UHM	EA	1
58	27A	XCFZZ		97499	204-030-679-3	.DRAIN INSTL..UHB	EA	1
58	27A	XCFZZ		97499	204-030-679-5	.DRAIN INSTL..UHC,UHM	EA	1
58	28	PAOZZ	4730-00-640-5099	96906	MS2190D06	..NIPPLE,TUBE...UHB,UHC,UHM	EA	2
58	29	PCOZZ	5330-00-804-5695	96906	MS28778-6	..PACKING,PREFORMED...................................UHB,UHC,UHM	EA	2
58	30	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE.......................................UHB,UHC,UHM	EA	2
58	31	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT...UHB,UHC,UHM	EA	5
58	32	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..............UHB,UHC,UHM	EA	5
58	33	PAOZZ	5340-00-187-6023	81996	EAB700D6	..CLAMP,LOOP..UHB,UHC,UHM	EA	5
58	34	PAOZZ	5340-00-993-5478	81996	EAB700D12	..CLAMP,LOOP..UHB,UHC,UHM	EA	1
58	35	MFOZZ	1560-00-740-6501	97499	204-060-570-1	..TUBE ASSEMBLY,METAL U/D PN 204-030-679-3...................UHB	EA	1
58	35	MFOZZ	4710-00-761-1682	97499	204-061-505-1	..TUBE ASSEMBLY,METAL U/D PN 204-030-679-5...............UHC,UHM	EA	1
58	36	PAOZZ	4730-00-684-6916	96906	MS24392D6	..NIPPLE,TUBE...UHB,UHC,UHM	EA	1
58	37	PAOZZ	5325-00-291-9366	96906	MS35489-11	..GROMMET,NONMETALLIC.................................UHB,UHC,UHM	EA	2
58	38	MFOZZ	4710-00-740-6499	97499	204-060-571-1	..TUBE ASSEMBLY,METAL..UHB	EA	1
58	39	PAOZZ	5305-00-990-6444	96906	MS35207-261	..SCREW,MACHINE.......................................UHB,UHC,UHM	EA	1
58	40	PAOZZ	5305-00-993-1851	96906	MS35207-267	..SCREW,MACHINE.......................................UHB,UHC,UHM	EA	2
58	41	PAOZZ	5365-00-662-3098	80205	NAS43DD3-32	..SPACER,SLEEVE.......................................UHB,UHC,UHM	EA	2
58	42	PAOZZ	5340-00-598-8251	88044	AN743-12	..BRACKET,ANGLE.......................................UHB,UHC,UHM	EA	2
58	43	MFOZZ	1560-00-895-9322	97499	204-060-020-97	..TUBE ASSEMBLY,METAL.................................UHB,UHC,UHM	EA	1
58	44	PAOZZ	5306-00-271-4797	88044	AN46-11	.BOLT,EYE...UHB	EA	1
58	45	PAOZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER, FLAT...UHB	EA	1
58	46	MFOZZ	1560-00-885-3627	97499	204-030-148-1	.SPACER,SLEEVE..UHB	EA	1
58	47	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..UHB,UHC,UHM	EA	6
58	48	PBOZZ	1730-00-778-3029	97499	204-030-391-1	.ADAPTER,HOISTING.....................................UHB,UHC,UHM	EA	1
58	49	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..UHB,UHC,UHM	EA	4
58	50	PBOZZ	1560-00-949-8228	97499	204-031-392-1	.BRACKET,FUSELAGE.....................................UHB,UHC,UHM	EA	1
58	51	PBOZZ	5315-00-812-3764	96906	MS20392-2C41	.PIN,STRAIGHT,HEA.....................................UHB,UHC,UHM	EA	2
58	52	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..UHB,UHC,UHM	EA	2
58	53	PAOOO	1560-00-980-9548	97499	204-030-348-49	.DOOR ASSEMBLY,DECK COMPARTMENT-LH....................UHB,UHC,UHM	EA	1
58	53	PBOOO	1560-00-973-3346	97499	204-030-348-51	.DOOR,ACCESS COMPARTMENT-RH USBL EFF <UH-1C> 64-14101 THRU 64-14191.....................................UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
59	54	PAOZZ	5340-00-671-4425	97499	204-030-285-1	..HINGE,ACCESS DOOR -LH..........................UHB,UHC,UHM	EA	1
58	54	PAOZZ	5340-00-671-4426	97499	204-030-285-2	..HINGE,ACCESS DOOR -RH..........................UHB,UHC,UHM	EA	1
58	55	PAOZZ	5340-00-671-4427	97499	204-030-286-1	..HINGE,ACCESS DOOR -LH..........................UHB,UHC,UHM	EA	1
58	55	PAOZZ	5340-00-671-4428	97499	204-030-286-2	..HINGE,ACCESS DOOR -RH..........................UHB,UHC,UHM	EA	1
58	55A	XAOOO		97499	204-030-348-33	..DOOR ASSEMBLY U/O PN 204-030-348-31............UHB,UHC,UHM	EA	1
58	55A	XAOOZ		97499	204-030-348-53	..DOOR,ACESS U/O PN 204-030-348-49...............UHB,UHC,UHM	EA	1
58	55A	XAOOO		97499	204-030-348-34	..DOOR ASSEMBLY U/O PN 204-030-348-32............UHB,UHC,UHM	EA	1
58	55A	XAOOO		97499	204-030-348-43	..DOOR ASSEMBLY-RH U/O PN 204-030-348-41.........UHB,UHC,UHM	EA	1
58	55A	XAOOZ		97499	204-030-348-55	..DOOR,ACCESS U/O PN 204-030-348-51..............UHC,UHC,UHM	EA	1
58	56	PAOZZ	5340-00-872-7937	83014	H6055063A123	...CATCH,FLUSH U/O PN 204-030-348-33,-34, -43,-53,& -55 ....UHB,UHC,UHM	EA	2
58	57	MFOZZ	1560-00-H24-7337	97499	204-030-348-11	...HINGE,HALF U/O PN 204-030-348-33,-34, -43,-53,& -55 ....UHB,UHC,UHM	EA	1
50	58	MFOZZ	1560-00-H24-7338	97499	204-030-348-15	...HINGE,HALF U/O PN 204-030-348-33,-34, -43,-53,& -55 ....UHB,UHC,UHM	EA	1
58	59	PAOZZ	5360-00-593-9167	97499	61-310-086-15	...SPRING,HELICAL,TORS U/O PN 204-030-348-33, -34,-43,-53,& -55.......................................UHB,UHC,UHM	EA	1
58	60	MFOZZ	5365-00-913-6925	97499	204-030-377-1	...SPACER,PLATE U/O PN 204-030-348-33,-34, -43,-53,& -55 ....UHB,UHC,UHM	EA	1
58	61	MFOZZ	1560-00-985-0015	97499	204-030-348-29	...DOOR U/O PN 204-030-348-33 & -53..............UHB,UHC,UHM	EA	1
58	61	MFOZZ	1560-00-885-3539	97499	204-030-348-30	...DOOR U/O PN 204-030-348-34,-43, & -55.........UHB,UHC,UHM	EA	1
58	62	MFOZZ	5315-00-200-3456	96906	MS20253-2-275	...PIN,STRAIGHT HEADLESS U/O PN 204-030-348-33,-34,-43,-53, & -55.......................................UHB,UHC,UHM	EA	1
58	63	PAOZZ	5310-00-550-5009	96906	MS15795-704	...WASHER,FLAT...................................UHB,UHC,UHM	EA	8
58	63A	XCFZZ		97499	204-031-168-1	.PANEL INSTL-RH USBL EFF 65-9416 & SUBSEQUENT........UHC,UHM	EA	1
58	64	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	..SCREW,MACHINE..UHC,UHM	EA	15
58	65	PAOZZ	5310-00-187-2399	89044	AN960PD516	..WASHER,FLAT..UHC,UHM	EA	1
58	66	PAOZZ	5310-00-021-3884	96906	MS21086L3	..NUT,SELF-LOCKING,PL....................................UHC,UHM	EA	13
58	66	PAOZZ	5310-00-772-3720	96906	MS21075L3	..NUT,SELF-LOCKING,PL....................................UHC,UHM	EA	2
58	67	MFOZZ	1560-00-939-7613	97499	204-031-168-17	..PANEL,HEATER COMPAR....................................UHC,UHM	EA	1
58	68	XCFZZ		97499	204-031-168-3	..PANEL ASSY...UHC,UHM	EA	1
58	69	MFOZZ	1560-00-915-6593	97499	204-031-169-1	...HINGE ASSY,DOOR.......................................UHC,UHM	EA	1
58	69A	MFOZZ	5315-00-H05-1852	96906	MS20253P2-284	....PIN,STRAIGHT HEADLESS................................UHC,UHM	EA	1
58	70	MFOZZ	1560-00-H26-3574	97499	204-031-168-15	...DOOR..UHC,UHM	EA	1

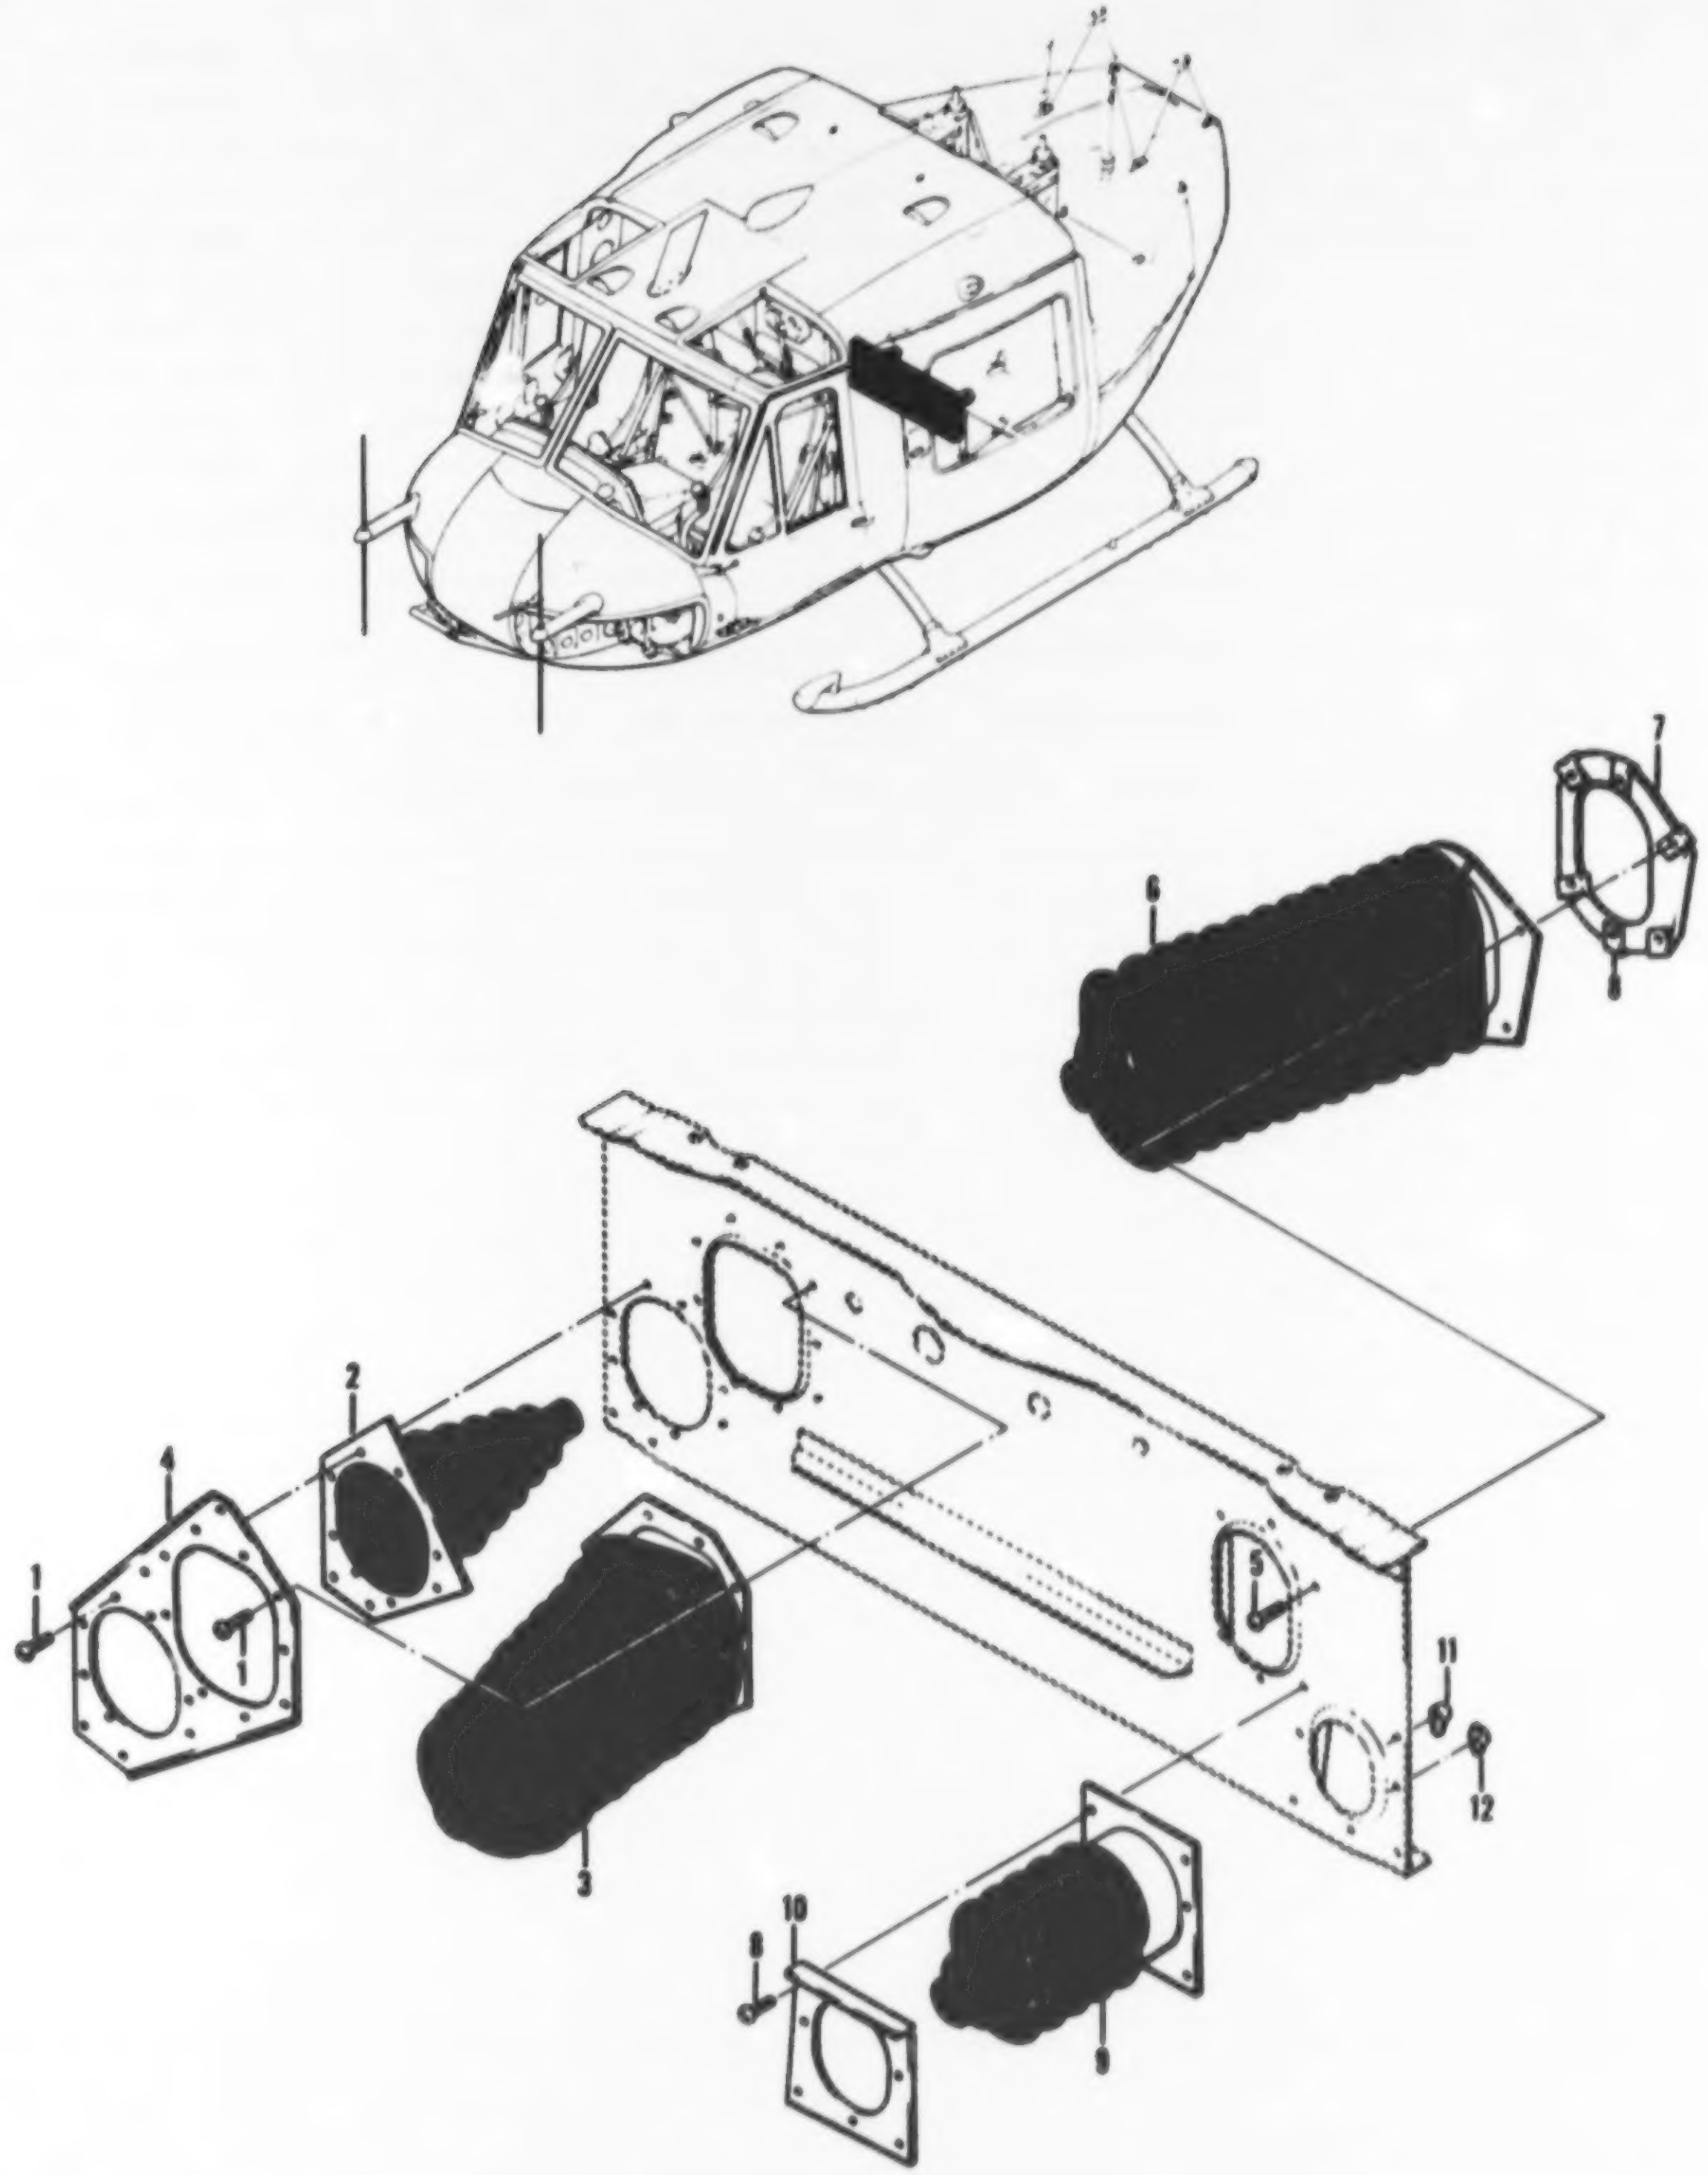
7
6
8
2
4
1
1
5
11
12
3
10
8
9

Figure 59. Fuselage Assembly, Structure

(1) ILLUSTRATION (a) FIG. NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
59		XCFZZ		97499	204-030-006-49	FUSELAGE ASSY USBL EFF 60-3546 THRU 60-3590 SEE FIG.19 FOR NHA.......UHB	EA	1
59		XCFZZ		97499	204-030-006-55	FUSELAGE ASSY USBL EFF 60-3591 THRU 60-3619 SEE FIG.19 FOR NHA.......UHB	EA	1
59		XCFZZ		97499	204-030-006-57	FUSELAGE ASSY USBL EFF 61-686 THRU 61-723 SEE FIG.19 FOR NHA.......UHB	EA	1
59		XCFZZ		97499	204-030-006-79	FUSELAGE ASSY USBL EFF 61-724 THRU 61-753 SEE FIG.19 FOR NHA.......UHB	EA	1
59		XCFZZ		97499	204-030-006-83	FUSELAGE ASSY USBL EFF 61-754 THRU 61-803 SEE FIG.19 FOR NHA.......UHB	EA	1
59		XCFZZ		97499	204-031-006-1	FUSELAGE ASSY USBL EFF 62-1872 THRU 62-1996 SEE FIG.19 FOR NHA.......UHB	EA	1
59		XCFZZ		97499	204-031-006-13	FUSELAGE ASSY USBL EFF 62-1997 THRU 62-12555 SEE FIG.19 FOR NHA.......UHB	EA	1
59		XCFZZ		97499	204-031-006-25	FUSELAGE ASSY USBL EFF 63-8500 THRU 63-8658 SEE FIG.19 FOR NHA.......UHB	EA	1
59		XCFZZ		97499	204-031-006-49	FUSELAGE ASSY USBL EFF 63-8659 THRU 63-12952 SEE FIG.19 FOR NHA.......UHB	FA	1
59		XCFZZ		97499	204-031-006-71	FUSELAGE ASSY USBL EFF 64-13902 THRU 64-14100 SEE FIG.19 FOR NHA.......UHB	EA	1
59		XCFZZ		97499	204-031-006-109	FUSELAGE ASSY USBL EFF 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA.......UHC,UHM	EA	1
59		XCFZZ		97499	204-032-006-1	FUSELAGE ASSY USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA.......UHC,UHM	EA	1
59		XCFZZ		97499	204-032-006-21	FUSELAGE ASSY USBL EFF 66-492 THRU 66-15022 SEE FIG.19 FOR NHA.......UHC,UHM	EA	1
59		XCFZZ		97499	204-032-006-27	FUSELAGE ASSY USBL EFF 66-15023 & SUBSEQUENT SEE FIG.19 FOR NHA.......UHC,UHM	EA	1
59		XCFZZ		97499	204-030-707-41	.BULKHEAD INSTL U/O PN 204-030-006-49,-55,-57, -79,& -83.......UHB	EA	1
59		XCFZZ		97499	204-030-707-55	.BULKHEAD INSTL U/O PN 204-031-006-1,-13,-25, & -49......UHB	EA	1
59		XCFZZ		97499	204-030-707-63	.BULKHEAD INSTL U/O PN 204-031-006-71.......UHB	EA	1
59		XCFZZ		97499	204-030-707-79	.BULKHEAD INSTL U/O PN 204-031-006-109.......UHC,UHM	FA	1
59		XCFZZ		97499	204-030-707-71	.BULKHEAD INSTL U/O PN 204-032-006-1.......UHC,UHM	EA	1
59		XCFZZ		97499	204-030-707-91	.BULKHEAD INSTL U/O PN 204-032-006-21 & -27.......UHC,UHM	EA	1
59	1	PAOZZ	5305-00-984-6193	96906	MS35206-245	..SCREW,MACHINE U/O PN 204-030-707-41, -55,-63,& -79.......UHB,UHC,UHM	FA	21
59	2	PAOZZ	1560-00-671-4420	97499	204-030-196-9	..BOOT,DUST AND MOIST.......UHB	EA	1
59	3	PAOZZ	1560-00-690-7284	97499	204-030-196-15	..BOOT,DUST AND MOIST.......UHB	EA	1
59	4	MFOZZ	1560-00-707-7600	97499	204-030-386-1	..RETAINER U/O PN 204-030-707-41, -55,-63,& -79.......UHB,UHC,UHM	EA	1
59	5	PAOZZ	5305-00-476-7369	96906	MS51862-25	..SCREW,TAPPING,THREA.......UHB,UHC,UHM	EA	6
59	6	PAOZZ	1560-00-646-2855	97499	204-030-196-13	..BOOT,DUST AND MOIST.......UHB	EA	1
59	7	MFOOZ	1560-00-876-2398	97499	204-030-384-1	..RETAINER ASSEMBLY U/O PN 204-030-707-41, -55,-63,& -79.......UHB,UHC,UHM	EA	1
59	8	PAOZZ	5310-00-632-1260	80205	NAS395-17-3	...NUT,SHEET,SPRING.......UHB,UHC,UHM	EA	6
59	8	PAOZZ	5305-00-984-6193	96906	MS35206-245	..SCREW,MACHINE U/O PN 204-030-707-41, -55,-63,& -79.......UHB,UHC,UHM	EA	6
59	9	PAOZZ	1560-00-671-4434	97499	204-030-196-5	..BOOT,DUST AND MOIST.......UHB	FA	1
59	10	MFOZZ	1560-00-707-7602	97499	204-030-383-1	..RETAINER.......UHB	FA	1
59	11	PAOZZ	5310-00-734-1859	96906	MS21071L08	..NUT,SELF-LOCKING,PL U/O PN 204-030-707-41,-55,-63,& -79.......UHB,UHC,UHM	FA	4
59	12	PAOZZ	5310-00-728-7715	96906	MS21069L08	..NUT,SELF-LOCKING,PL U/O PN 204-030-707-41,-55,-63,& -79.......UHB,UHC,UHM	EA	23

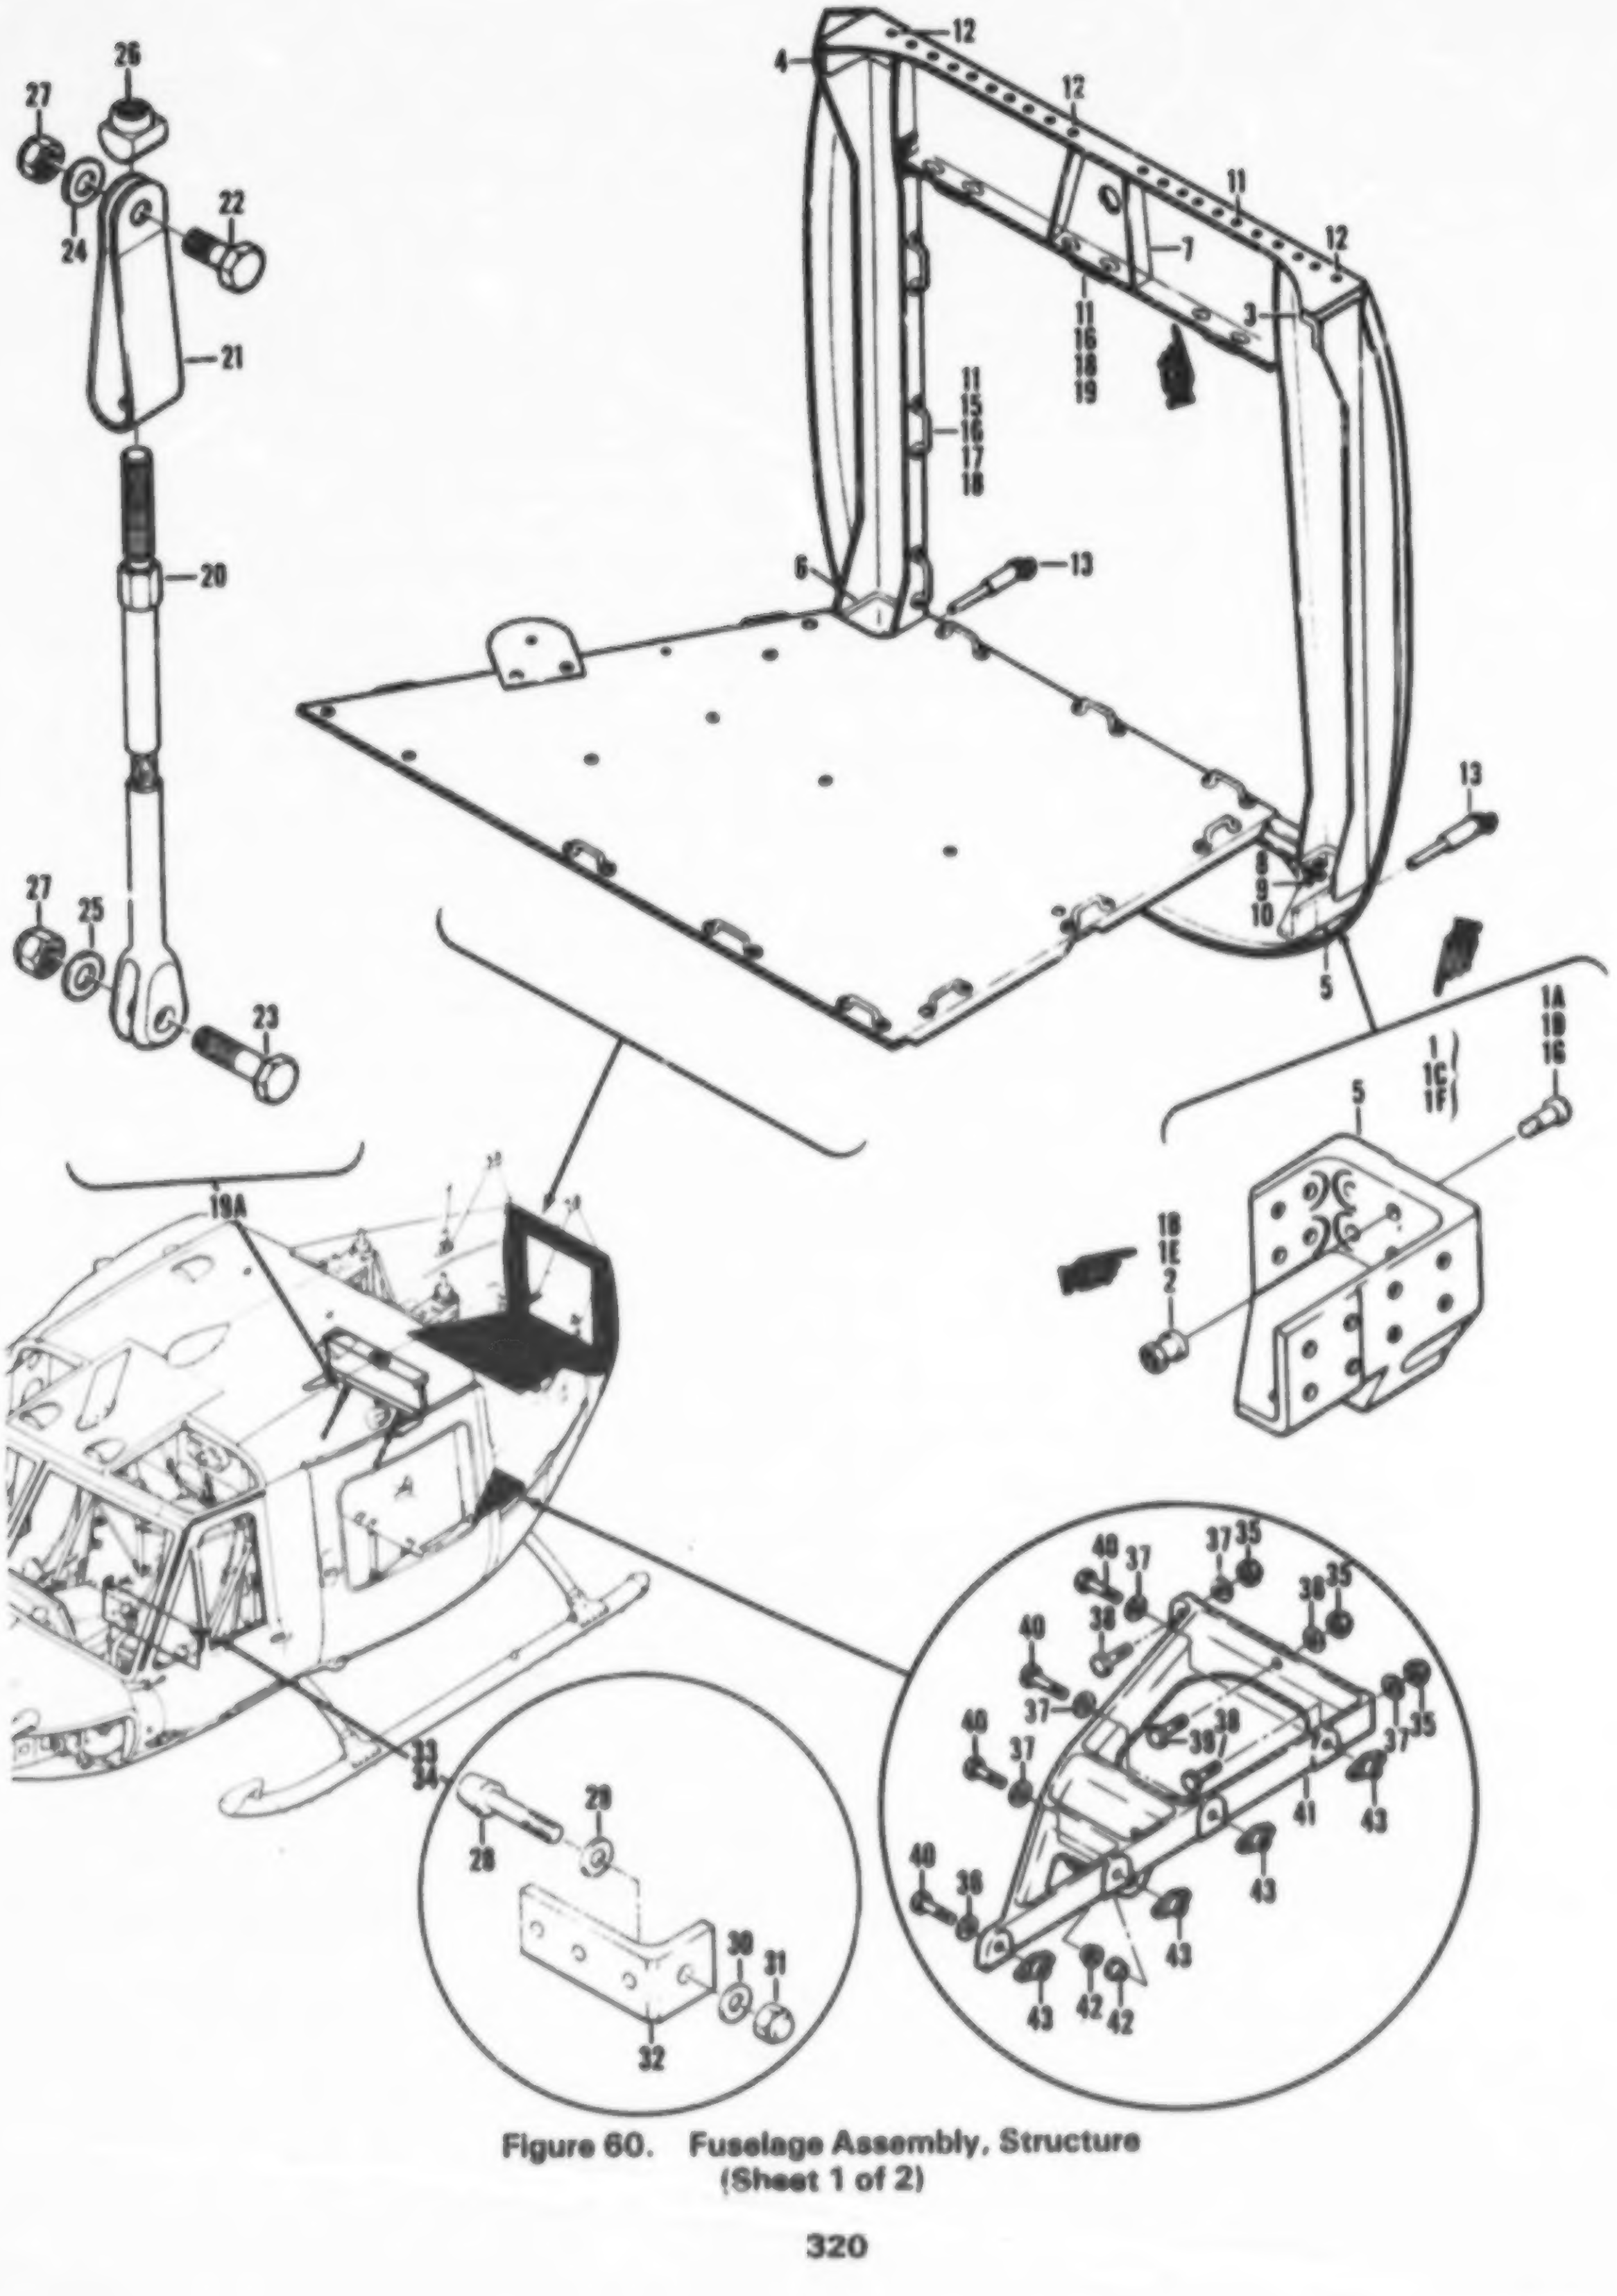
12
4
12
11
12
7
3
11
16
18
19
11
15
16
17
18
26
27
24
22
21
20
6
13
13
8
9
10
5
27
25
23
1A
1D
1G
1
1C
1F
5
1B
1E
2
19A
33
34
28
29
30
31
32
40
37
37
35
38
35
40
38
40
37
38
39
37
35
40
37
41
43
43
40
36
43
43
42
42

Figure 60. Fuselage Assembly, Structure (Sheet 1 of 2)

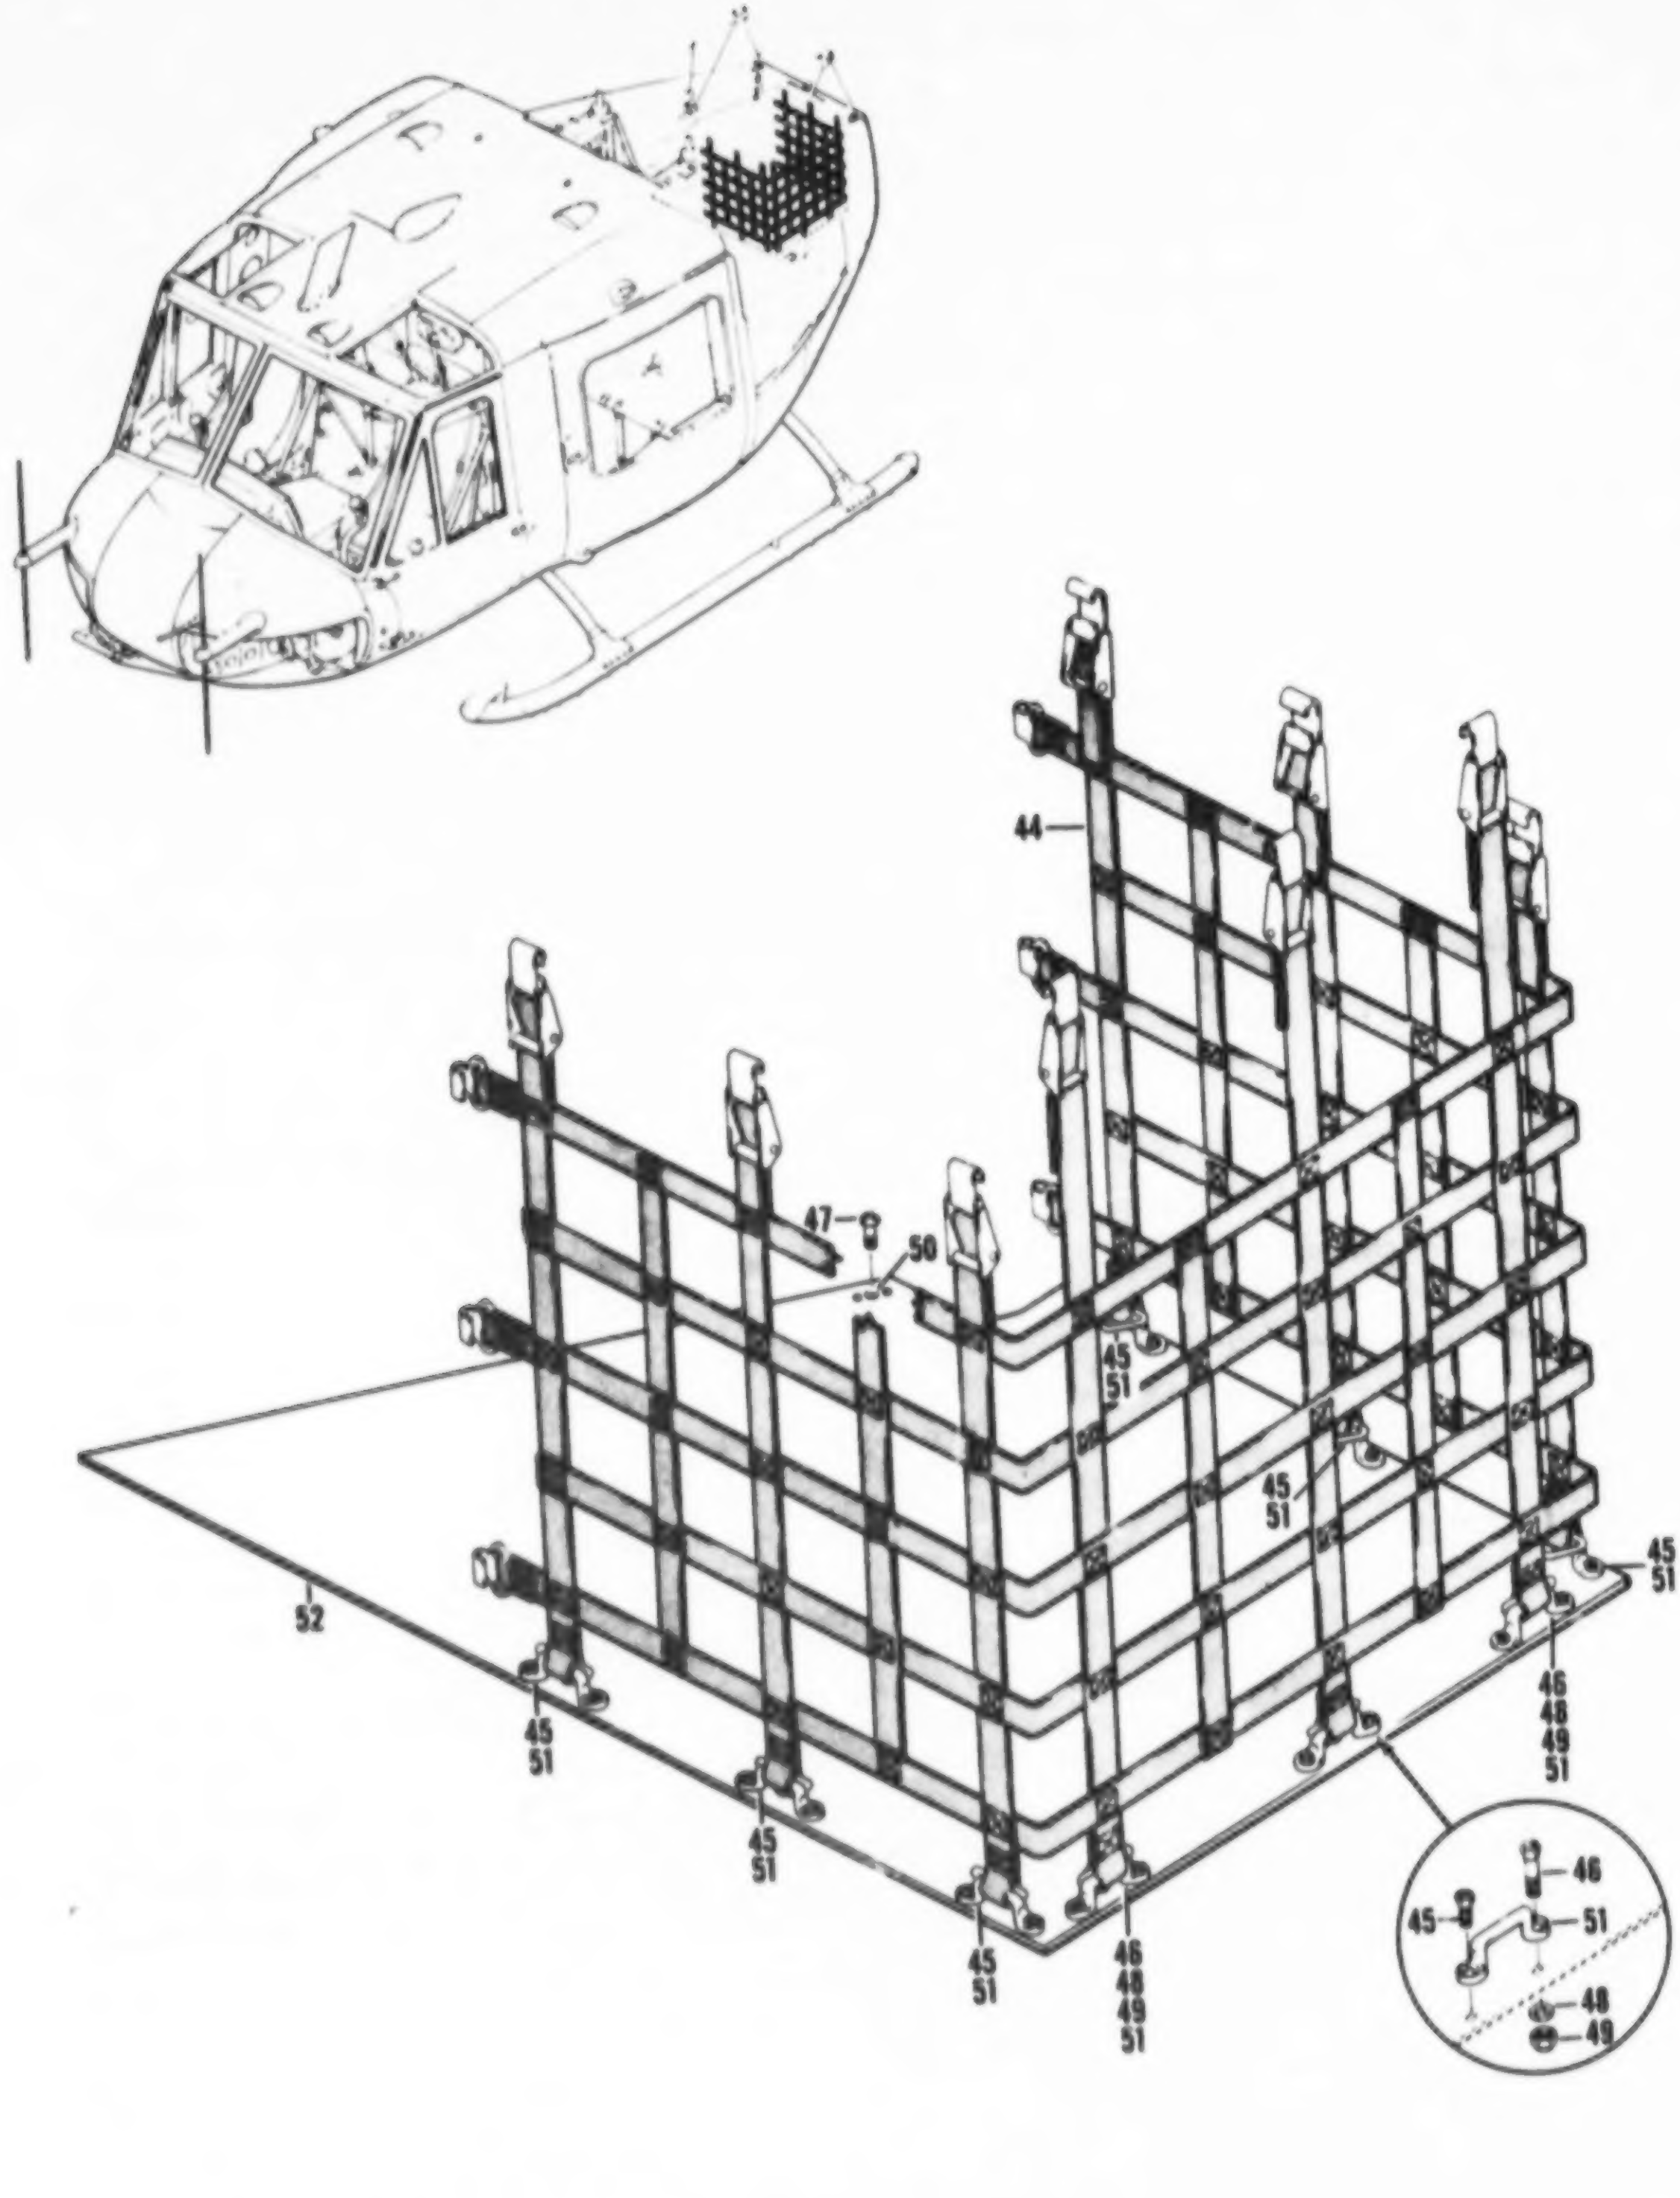
44
47
50
45
51
52
45
51
45
51
45
51
45
51
45
51
46
48
49
51
46
48
49
51
46
45
51
48
49

Figure 60. Fuselage Assembly, Structure (Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
60		XCFZZ		97499	204-030-006-49	FUSELAGE ASSY USBL EFF 60-3546 THRU 60-3590 SEE FIG.19 FOR NHA........UHB	EA	1
60		XCFZZ		97499	204-030-006-55	FUSELAGE ASSY USBL EFF 60-3591 THRU 61-3619 SEE FIG.19 FOR NHA........UHB	EA	1
60		XCFZZ		97499	204-030-006-57	FUSELAGE ASSY USBL EFF 61-686 THRU 61-723 SEE FIG.19 FOR NHA ....UHB	EA	1
60		XCFZZ		97499	204-030-006-79	FUSELAGE ASSY USBL EFF 61-724 THRU 61-753 SEE FIG.19 FOR NHA ....UHB	EA	1
60		XCFZZ		97499	204-030-006-83	FUSELAGE ASSY USBL EFF 61-754 THRU 61-803 SEE FIG.19 FOR NHA ....UHB	EA	1
60		XCFZ		97499	204-031-006-1	FUSELAGE ASSY USBL EFF 62-1872 THRU 6[illegible]96 SEE FIG.19 FOR NHA........UHB	EA	1
60		XCFZZ		97499	204-031-006-13	FUSELAGE ASSY USBL EFF 62-1997 THRU 62-12555 SEE FIG.19 FOR NHA........UHB	EA	1
60		XCFZZ		97499	204-031-006-25	FUSELAGE ASSY USBL EFF 63-8500 THRU 63-8658 SEE FIG.19 FOR NHA........UHB	EA	1
60		XCFZZ		97499	204-031-006-49	FUSELAGE ASSY USBL EFF 63-8659 THRU 63-12952 SEE FIG.19 FOR NHA........UHB	EA	1
60		XCFZZ		97499	204-031-006-71	FUSELAGE ASSY USBL EFF 64-13902 THRU 64-14100 SEE FIG.19 FOR NHA........UHB	EA	1
60		XCFZZ		97499	204-031-006-109	FUSELAGE ASSY USBL EFF 64-14101 THRU 14191 SEE FIG.19 FOR NHA........UHC,UHM	EA	1
60		XCFZZ		97499	204-032-006-1	FUSELAGE ASSY USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA........UHC,UHM	EA	1
60		XCFZZ		97499	204-032-006-21	FUSELAGE ASSY USBL EFF 66-492 THRU 66-15022 SEE FIG.19 FOR NHA........UHC,UHM	EA	1
60		XCFZZ		97499	204-032-006-27	FUSELAGE ASSY USBL EFF 66-15023 & SUBSEQUENT SEE FIG.19 FOR NHA........UHC,UHM	EA	1
60		XCFZZ		97499	204-030-713-63	.BULKHEAD INSTL U/O PN 204-030-006-49,-55,& -57........UHB	EA	1
60		XCFZZ		97499	204-030-713-91	.BULKHEAD INSTL U/O PN 204-030-006-79 & -83........UHB	EA	1
60		XCFZZ		97499	204-030-713-97	.BULKHEAD INSTL U/O PN 204-031-006-1,-13,-25, -49,& -71 ....UHB	EA	1
60		XCFZZ		97499	204-030-713-111	.BULKHEAD INSTL U/O PN 204-031-006-109, 204-032-006-1,-21,& 27........UHC,UHM	EA	1
60	1	AFFFF	5306-00-H04-0315	73197	HL19PB70-6-10	..BOLT ASSEMBLY........UHB,UHC,UHM	EA	6
60	1A	PAFZZ	5320-00-969-4519	73197	HL19PB6-10	...PIN-RIVET,THREADED ,LH-LOWER........UHB,UHC,UHM	EA	2
60	1B	PAFZZ	5320-00-631-3429	73197	HL70-6	...COLLAR,PIN THREADED........UHB,UHC,UHM	EA	2
60	1C	AFFFF	5306-00-H04-0316	73197	HL19PB70-6-8	..BOLT ASSEMBLY........UHB,UHC,UHM	EA	4
60	1D	PAFZZ	5320-00-959-0145	73197	HL19PB6-8	...RIVET,THREADED ,RH-LOWER........UHB,UHC,UHM	EA	1
60	1E	PAFZZ	5320-00-631-3429	73197	HL70-6	...COLLAR,PIN THREADED........UHB,UHC,UHM	EA	1
60	1F	AFFFF	5306-00-H04-0317	73197	HL19PB70-6-9	..BOLT ASSEMBLY........UHB,UHC,UHM	EA	2
60	1G	PAFZZ	5320-00-959-7305	73197	HL19PB6-9	...RIVET,THREADED,RH UPPER........UHB,UHC,UHM	EA	1
60	2	PAFZZ	5320-00-631-3429	73197	HL70-6	...COLLAR,PIN THREADED........UHB,UHC,UHM	EA	1
60	3	PBFZZ	1560-00-997-6632	97499	204-031-767-1	..BRACKET,FUSELAGE -LH UPPER U/O PN 204-030-713-63,-91, & -97........UHB	EA	1
60	3	PBFZZ	1560-00-917-9972	97499	204-031-767-3	..FITTING,TAIL BOOM -LH UPPER U/O PN 204-030-713-111 ....UHC,UHM	EA	1
60	4	PAFZZ	1560-00-827-2585	97499	204-030-288-5	..SUPPORT,STRUCTURAL -RH UPPER........UHB,UHC,UHM	EA	1
60	5	PBFZZ	1560-00-916-2530	97499	204-030-815-1	..FITTING,FUSELAGE -LH LOWER........UHB,UHC,UHM	EA	1
60	6	PAFZZ	1560-00-759-7491	97499	204-030-848-3	..BRACKET,BOOM ATTACH -RH LOWER U/O PN 204-030-713-63,-91,-97,& -111........UHB,UHC,UHM	EA	1
60	7	PAFZZ	1560-00-736-4004	97499	204-030-298-1C	..BLANK CASTING,ENGIN........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
60	7	XDFZZ		97499	204-030-298-1	..BRACKET,SUPPORT..............................UHB,UHC,UHM	EA	1
60	8	PAFZZ	5306-00-292-8280	88044	AN173H5A	..BOLT,CLOSE TOLERANC U/O PN 204-030-713-63 & -91........UHB	EA	4
60	8	PAFZZ	5306-00-292-8280	88044	AN173H5A	..BOLT,CLOSE TOLERANC U/O PN 204-030-713-97 & -111 ....UHB,UHC,UHM	EA	8
60	9	PAFZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT U/O PN 204-030-713-63 & -91................UHB	EA	8
60	9	PAFZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT U/O PN 204-030-713-97 & -111.......UHB,UHC,UHM	EA	16
60	10	PAFZZ	5310-00-263-2862	96906	MS21045C3	..NUT,SELF-LOCKING HEXAGON..............................UHB	EA	4
60	10	PAFZZ	5310-00-263-2862	96906	MS21045C3	..NUT,SELF-LOCKING HEXAGON...................UHB,UHC,UHM	EA	8
60	11	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	FA	30
60	12	PAFZZ	5310-00-761-3712	96906	MS21073-3	..NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	3
60	13	PAOZZ		80205	NAS1354DS7S12D	..PIN,QUICK RELEASE U/O PN 204-030-713-63 & -91..........UHB	EA	1
60	13	PAOZZ	5340-00-841-2940	80205	NAS1354S7S16	..PIN,QUICK RELEASE RPLS—5340-00-985-0742.......UHB,UHC,UHM	EA	1
60	15	PAOZZ	5305-00-984-7342	96906	MS35191-274	..SCREW,MACHINE................................UHB,UHC,UHM	EA	6
60	16	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..................................UHB,UHC,UHM	EA	12
60	17	PAOZZ	5365-00-684-2093	80205	NAS43003-16	..SPACER,SLEEVE................................UHB,UHC,UHM	EA	6
60	18	PAOZZ	5340-00-897-2542	76786	662R1-1 1-4	..LOOP,STRAP FASTE.............................UHB,UHC,UHM	EA	3
60	19	PAOZZ	5305-00-984-7362	96906	MS35191-271	..SCREW,MACHINE................................UHB,UHC,UHM	EA	6
60	19A	XCFZZ		97499	204-031-212-1	.CABLE INSTL...UHB	EA	1
60	20	PAOZZ	1560-00-736-4015	97499	204-031-212-3	..CABLE ASSEMBLY.......................................UHB	EA	1
60	21	MFOZZ	1560-00-707-7630	97499	204-031-222-1	..CLEVIS,CABLE SUPPOR..................................UHB	EA	1
60	22	PAOZZ	5306-00-182-1852	88044	AN5H6	..BOLT,MACHINE...UHB	EA	1
60	23	PAOZZ	5306-00-180-2749	88044	AN5H10	..BOLT,MACHINE...UHB	EA	1
60	24	PAOZ7	5310-00-167-0836	88044	AN960-516L	..WASHER,FLAT..UHB	EA	1
60	25	PAOZZ	5310-00-167-0903	88044	AN960C516	..WASHER,FLAT..UHB	EA	1
60	26	PAOZZ	5310-00-820-1560	80205	NAS577-6A	..NUT,SELF-LOCKING BARREL..............................UHB	EA	1
60	27	PAOZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON...................UHB	EA	2
60		XCFZZ		97499	204-030-779-49	.BULKHEAD INSTL U/O PN 204-030-006-49..................UHB	EA	1
60		XCFZZ		97499	204-030-779-65	.BULKHEAD INSTL U/O PN 204-030-006-55..................UHB	EA	1
60		XCFZZ		97499	204-030-779-73	.BULKHEAD INSTL U/O PN 204-030-006-57,-79,-83...........UHB	EA	1
60		XCFZZ		97499	204-030-779-81	.BULKHEAD INSTL U/O PN 204-031-006-1...................UHB	EA	1
60		XCFZZ		97499	204-030-779-103	.BULKHEAD INSTL U/O PN 204-031-006-13..................UHB	EA	1
60		XCFZZ		97499	204-030-779-89	.BULKHEAD INSTL U/O PN 204-031-006-25 & -49............UHB	EA	1
60		XCFZZ		97499	204-030-779-109	.BULKHEAD INSTL U/O PN 204-031-006-71,-109, 204-032-006-1,-21,& -27..........................UHB,UHC,UHM	EA	1
60	28	PAFZZ	5306-00-275-8501	96906	MS20004H12	..BOLT INTERNAL WRENCHING......................UHB,UHC,UHM	EA	2
60	29	PAFZZ	5310-00-596-1766	96906	MS20002C4	..WASHER,RECESSED..............................UHB,UHC,UHM	EA	2
60	30	PAFZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT..................................UHB,UHC,UHM	EA	2
60	31	PBFZZ	5310-00-488-9137	72962	E8048	..NUT,SELF-LOCKING,EX..........................UHB,UHC,UHM	EA	2
60	32	PBFZZ	5340-00-134-3383	97499	204-030-381-3	..BRACKET,ANGLE................................UHB,UHC,UHM	EA	2
60	33	XDDZZ		97499	204-030-779-111	..BULKHEAD,ASSEMBLY....................................UHB	EA	1
60	34	PBDZZ	1560-00-119-1176	97499	204-030-779-113	...WEB,BULKHEAD..UHB	EA	1
60		XCFZZ		97499	204-031-204-1	.BAGGAGE INSTALLATIO U/O PN 204-030-006-49,-55,-57,-79&-83 ....UHB	EA	1
60		XCFZZ		97499	204-031-204-17	.BAGGAGE INSTL U/O PN 204-031-006-1,-13,-25,&-49.........UHB	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
60		XCFZZ		97499	204-031-204-51	.BAGGAGE INSTL U/O PN 204-031-006-71,-109,204-032-006-1,-21, &-27....UHB,UHC,UHM	EA	1
60		XCFZZ		97499	204-031-731-1	.SUPPORT INSTL USBL EFF 65-9416 & SUBSEQUENT....UHC,UHM	EA	1
60	35	PAFZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHC,UHM	EA	3
60	36	PAFZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT....UHC,UHM	EA	2
60	37	PAFZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT....UHC,UHM	EA	5
60	38	PAFZZ	5306-00-656-0358	88044	AN3-6A	..BOLT,MACHINE....UHC,UHM	EA	2
60	39	PAFZZ	5306-00-274-2119	88044	AN3-5A	..BOLT,MACHINE....UHC,UHM	EA	1
60	40	PAFZZ	5306-00-151-0785	88044	AN3-7A	..BOLT,MACHINE....UHC,UHM	EA	4
60	41	XDFFZ	1560-00-947-2585	97499	204-031-731-3	..SUPPORT,BELLCRANK SEE FIG.347 FOR SUPPORT ASSEMBLY U/O USBL EFF 64-14101 THRU 64-14191....UHC,UHM	EA	1
60	42	PAFZZ	3120-00-625-0051	97499	22-007-19-19-18	...BUSHING,SLEEVE....UHC,UHM	EA	2
60	43	PAFZZ	5310-00-905-5473	80205	NAS1474A3	...NUT,SELF-LOCKING,PL....UHC,UHM	EA	4
60		XCFZZ		97499	204-031-204-1	BAGGAGE INSTALLATIO USBL EFF 60-3546 THRU 61-803 SEE FIG.62 FOR NHA....UHB	EA	1
60		XCFZZ		97499	204-031-204-17	BAGGAGE INSTALLATIO USBL EFF 62-1872 THRU 63-12952 SEE FIG. 62 FOR NHA....UHB	EA	1
60		XCFZZ		97499	204-031-204-51	BAGGAGE INSTALLATIO USBL EFF <UH-1B@ 64-13902 & SUBSEQUENT SEE FIG.62 FOR NHA....UHB,UHC,UHM	EA	1
60	44	PAOZZ	1680-00-758-0211	97499	204-031-205-13	.NET ASSEMBLY,BAGGAG....UHB,UHC,UHM	EA	1
60	45	PAOZZ	5305-00-988-3796	96906	MS35191-307	.SCREW,MACHINE....UHB,UHC,UHM	EA	1
60	46	PAOZZ	5305-00-984-7343	96906	MS35191-276	.SCREW,MACHINE....UHB,UHC,UHM	EA	5
60	47	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE....UHB,UHC,UHM	EA	9
60	48	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....UHB,UHC,UHM	EA	5
60	49	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHB,UHC,UHM	EA	5
60	50	PAOZZ	5310-00-728-7716	96906	MS21069L3	.NUT,SELF-LOCKING,PL....UHB,UHC,UHM	EA	1
60	51	PAOZZ	5340-00-897-2542	76786	662R1-1 1-4	.LOOP,STRAP FASTE....UHB,UHC,UHM	EA	9
60	52	PAOFF	1560-00-725-6055	97499	204-031-204-19	.FLOOR,AIRCRAFT....UHB,UHC,UHM	EA	1

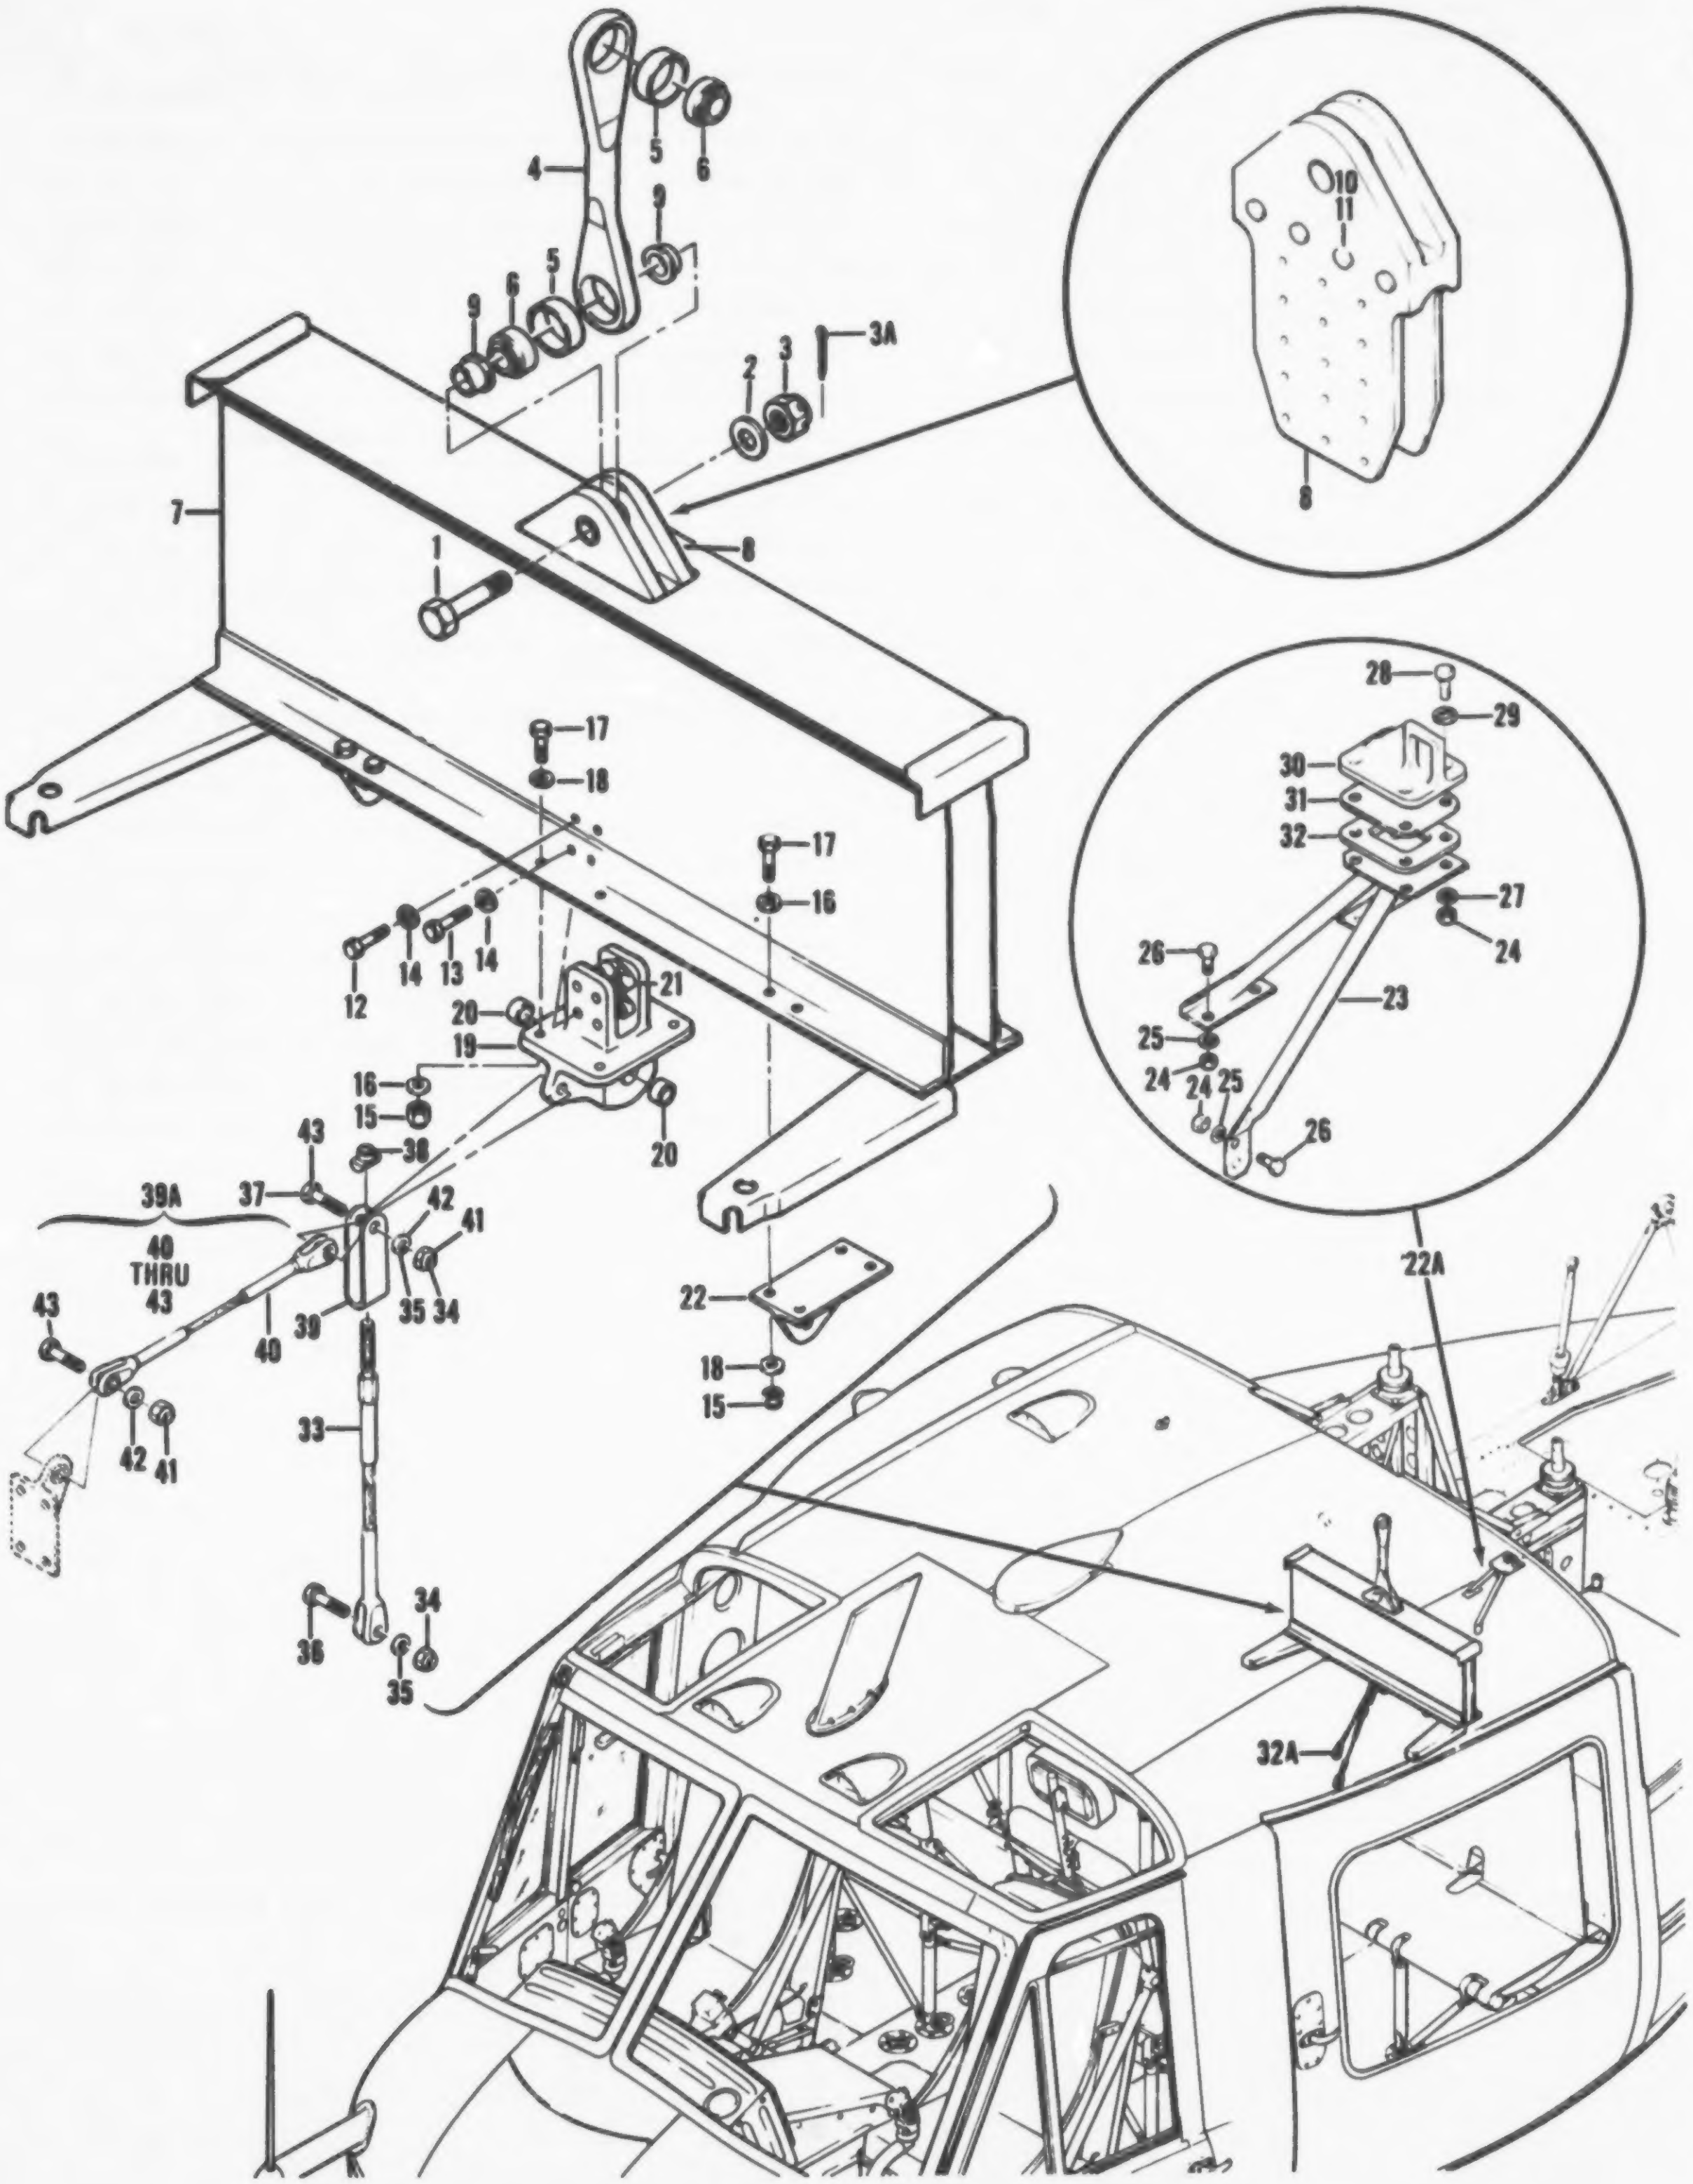
4
5
6
9
6
5
9
10
11
3A
2
3
7
8
1
8
28
29
30
31
32
27
24
17
18
17
16
26
23
12
14
13
14
21
20
19
25
24
24
25
26
16
15
20
43
38
39A
37
42
41
40
THRU
43
22A
43
35
34
39
40
22
18
15
33
42
41
34
36
35
32A

Figure 61. Fuselage Assembly, Structure Aft

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
61		XCFZZ		97499	204-030-006-49	FUSELAGE ASSY USBL EFF 60-3546 THRU 60-3590 SEE FIG.19 FOR NHA..........		EA	1
61		XCFZZ		97499	204-030-006-55	FUSELAGE ASSY USBL EFF 60-3591 THRU 60-3619 SEE FIG.19 FOR NHA..........		EA	1
61		XCFZZ		97499	204-030-006-57	FUSELAGE ASSY USBL EFF 61-686 THRU 61-723 SEE FIG.19 FOR NHA		EA	1
61		XCFZZ		97499	204-030-006-79	FUSELAGE ASSY USBL EFF 61-724 THRU 61-753 SEE FIG.19 FOR NHA		EA	1
61		XCFZZ		97499	204-030-006-83	FUSELAGE ASSY USBL EFF 61-754 THRU 61-803 SEE FIG.19 FOR NHA		EA	1
61		XCFZZ		97499	204-031-006-1	FUSELAGE ASSEMBLY USBL EFF 62-1872 THRU 62-1996 SEE FIG.19 FOR NHA..........		EA	1
61		XCFZZ		97499	204-031-006-13	FUSELAGE ASSEMBLY,S USBL EFF 62-1997 THRU 62-12555 SEE FIG. 19 FOR NHA..........		EA	1
61		XCFZZ		97499	204-031-006-25	FUSELAGE ASSY USBL EFF 63-8500 THRU 63-8658 SEE FIG.19 FOR NHA..........		EA	1
61		XCFZZ		97499	204-031-006-49	FUSELAGE ASSEMBLY,S USBL EFF 63-8659 THRU 63-12952 SEE FIG. 19 FOR NHA..........		EA	1
61		XCFZZ		97499	204-031-006-71	FUSELAGE ASSY USBL EFF 64-13902 THRU 64-14100 SEE FIG.19 FOR NHA..........		EA	1
61		XCFZZ		97499	204-031-006-109	FUSELAGE ASSY USBL EFF 64-14101 THRU 64-14191 SEE FIG.19 FOR NHA..........	UHM	EA	1
61		XCFZZ		97499	204-032-006-1	FUSELAGE ASSY USBL EFF 65-9416 THRU 65-12772 SEE FIG.19 FOR NHA..........	UHM	EA	1
61		XCFZZ		97499	204-032-006-21	FUSELAGE ASSY USBL EFF 66-492 THRU 66-15022 SEE FIG.19 FOR NHA..........	UHM	EA	1
61		XCFZZ		97499	204-032-006-27	FUSELAGE ASSY USBL EFF 66-15023 & SUBSEQUENT SEE FIG.19 FOR NHA..........	UHM	EA	1
61	1	PADZZ	5306-00-847-2226	80205	NAS1309-220	.BOLT,SHEAR..........	UHM	EA	1
61	2	PADZZ	5310-00-167-0824	88044	AN960-916	.WASHER,FLAT..........	UHM	EA	2
61	3	PADZZ	5310-00-167-1290	88044	AN310-9	.NUT,PLAIN..........	UHM	EA	1
61	3A	PBOZZ	5315-00-236-8359	96906	MS24665-370	.PIN,COTTER..........	UHM	EA	1
61	4	PADZZ	1560-00-221-5691	97499	209-030-357-1	.LINK ASSEMBLY,LIFT..........	UHM	EA	1
61	5	PADZZ	3120-00-670-5306	97499	204-030-909-11	..BUSHING,SLEEVE..........	UHM	EA	2
61	6	PADZZ	3120-00-133-6605	99528	RG9SS	..BEARING,PLAIN, SELF-ALIGNING U/O PN 209-030-357-1	UHM	FA	2
61		XCFZZ		97499	204-030-845-7	.BEAM INSTL U/O PN 204-030-006-49,-55,-57, -79,& -83.....		EA	1
61		XCFZZ		97499	204-030-845-61	.COUPLING HALF,QUICK DISCONNECT U/O PN 204-031-006-1,-13,-25,-49,&-71..........		EA	1
61		XCFZZ		97499	204-030-845-65	.BEAM INSTL U/O PN 204-031-006-109 & 204-032-006-1	UHM	EA	1
61		XCFZZ		97499	204-030-845-93	.BEAM INSTL U/O PN 204-032-006-21 & -27..........	UHM	EA	1
61	7	PBDDD	1560-00-986-6094	97499	204-030-845-95	..BEAM ASSEMBLY,FUSEL..........	UHM	EA	1
61	7	XADDD		97499	204-030-845-11	...BEAM ASSEMBLY..........		EA	1
61	7	XADDD		97499	204-030-845-69	...BEAM ASSEMBLY..........	UHM	FA	1
61	7	XADDD		97499	204-030-845-97	...BEAM ASSEMBLY..........	UHM	EA	1
61	8	PAFFF	1560-00-923-3513	97499	205-031-025-1	....FITTING ASSEMBLY..........	UHM	EA	1
61	9	PAFZZ	3120-00-670-5319	97499	22-011-35-28-26	.....BUSHING,SLEEVE..........	UHM	EA	2
61	10	PBFZZ	5320-00-853-4938	73197	HL86G10	....COLLAR,PIN-RIVET,TH..........	UHM	EA	4
61	11	PBFZZ	5320-00-853-4929	73197	HL20PB10-29	....PIN-RIVET,THREAD -ALTERNATE-..........	UHM	EA	4
61	11	XDFZZ		80205	NAS1305-29DW	....BOLT,SHEAR..........	UHM	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
61	12	PAFZZ	5306-00-156-2533	88044	AN174H6A	...BOLT,CLOSE TOLER..................................	UHM	EA	4
61	13	PAFZZ	5306-00-285-5325	88044	AN174H7A	...BOLT,CLOSE TOLER..................................	UHM	EA	4
61	14	PAFZZ	5310-00-184-9001	88044	AN960PD416L	...WASHER,FLAT..................................	UHM	EA	8
61	15	PAFZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON..................	UHM	EA	12
61	16	PAFZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..................................	UHM	EA	12
61	17	PAFZZ	5306-00-141-4524	88044	AN173H6A	...BOLT,CLOSE TOLERANC..........................	UHM	EA	12
61	18	PAFZZ	5310-00-183-4406	88044	AN960PD10	...WASHER,FLAT..................................	UHM	EA	12
61	19	PAFFF	1560-00-691-2143	97499	204-030-841-5	...FITTING ASSEMBLY.............................	UHM	EA	1
61	20	PAFZZ	3120-00-690-8689	97499	21-010-15-5-11	....BUSHING,SLEEVE..............................	UHM	EA	2
61	21	PAFZZ	5310-00-761-6830	96906	MS21073L4	....NUT,SELF-LOCKING,PL.........................	UHM	EA	8
61	22	XBFZZ		97499	204-031-211-1	...SUPPORT,STRUCTURAL U/O PN 204-030-845-9................		EA	2
61	22A	XCFZZ		97499	204-030-926-1	.SUPPORT INSTL..		EA	1
61	22A	XCFZZ		97499	204-030-926-2	.SUPPORT INSTL..		EA	1
61	23	PBOZZ	1560-00-847-7505	97499	204-030-926-3	..SUPPORT,COWL..		EA	1
61	23	PBOZZ	1560-00-847-7506	97499	204-030-926-4	..SUPPORT,COWL..		EA	1
61	24	PAOZZ	5310-00-263-2862	96906	MS21045C3	..NUT,SELF-LOCKING HEXAGON..............................		EA	8
61	25	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT...		EA	4
61	26	PAOZZ	5306-00-282-4309	88044	AN3H5	..BOLT,MACHINE..		EA	4
61	27	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT...		EA	4
61	28	PAOZZ	5306-00-180-2695	88044	AN3H7	..BOLT,MACHINE..		EA	4
61	29	PAOZZ	5310-00-077-2114	97499	204-060-927-1	..WASHER,FLAT...		EA	4
61	30	PAOZZ	1560-00-963-0964	97499	204-060-937-1	..BRACKET,COWL LATCH....................................		EA	1
61	31	PAOZZ	1560-00-675-3262	97499	204-060-936-1	..PLATE, FITTING, COW...................................		EA	1
61	32	PAOZZ	5365-00-769-3425	97499	204-060-938-1	..SHIM..		EA	1
61	32A	XCFZZ		97499	204-030-952-1	.CABLE INSTL U/O PN 204-030-006-49,-55,-57, -79,& -83...		EA	1
61	33	PAOZZ	1560-00-765-2415	97499	204-030-952-5	..CABLE ASSEMBLY,SUPP...................................		EA	1
61	34	PAOZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON....................		EA	2
61	35	PAOZZ	5310-00-167-0803	88044	AN960C516	..WASHER,FLAT...		EA	2
61	36	PAOZZ	5306-00-180-2749	88044	AN5H10	..BOLT,MACHINE..		EA	1
61	37	PAOZZ	5306-00-180-2750	88044	AN5H11	..BOLT,MACHINE..		EA	1
61	38	PAOZZ	5310-00-820-1560	80205	NAS577-6A	..NUT SELF-LOCKING BARREL...............................		EA	1
61	39	PAOZZ	1560-00-885-3629	97499	204-030-951-1	..FITTING...		EA	1
61	39A	XCFZZ		97499	204-030-349-7	.CABLE INSTL U/O PN 204-031-006-1,-13,-25, -49,-71,-109. 204-032-006-1,-21,& -27..........................	UHM	EA	1
61	40	PAOZZ	4010-00-006-0800	80205	NAS326-22-0090	..WIRE ROPE ASSEMBLY,............................	UHM	EA	1
61	41	PAOZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.............	UHM	EA	2
61	42	PAOZZ	5310-00-167-0803	88044	AN960C516	..WASHER,FLAT....................................	UHM	EA	2
61	43	PAOZZ	5306-00-180-2749	88044	AN5H10	..BOLT,MACHINE...................................	UHM	EA	2

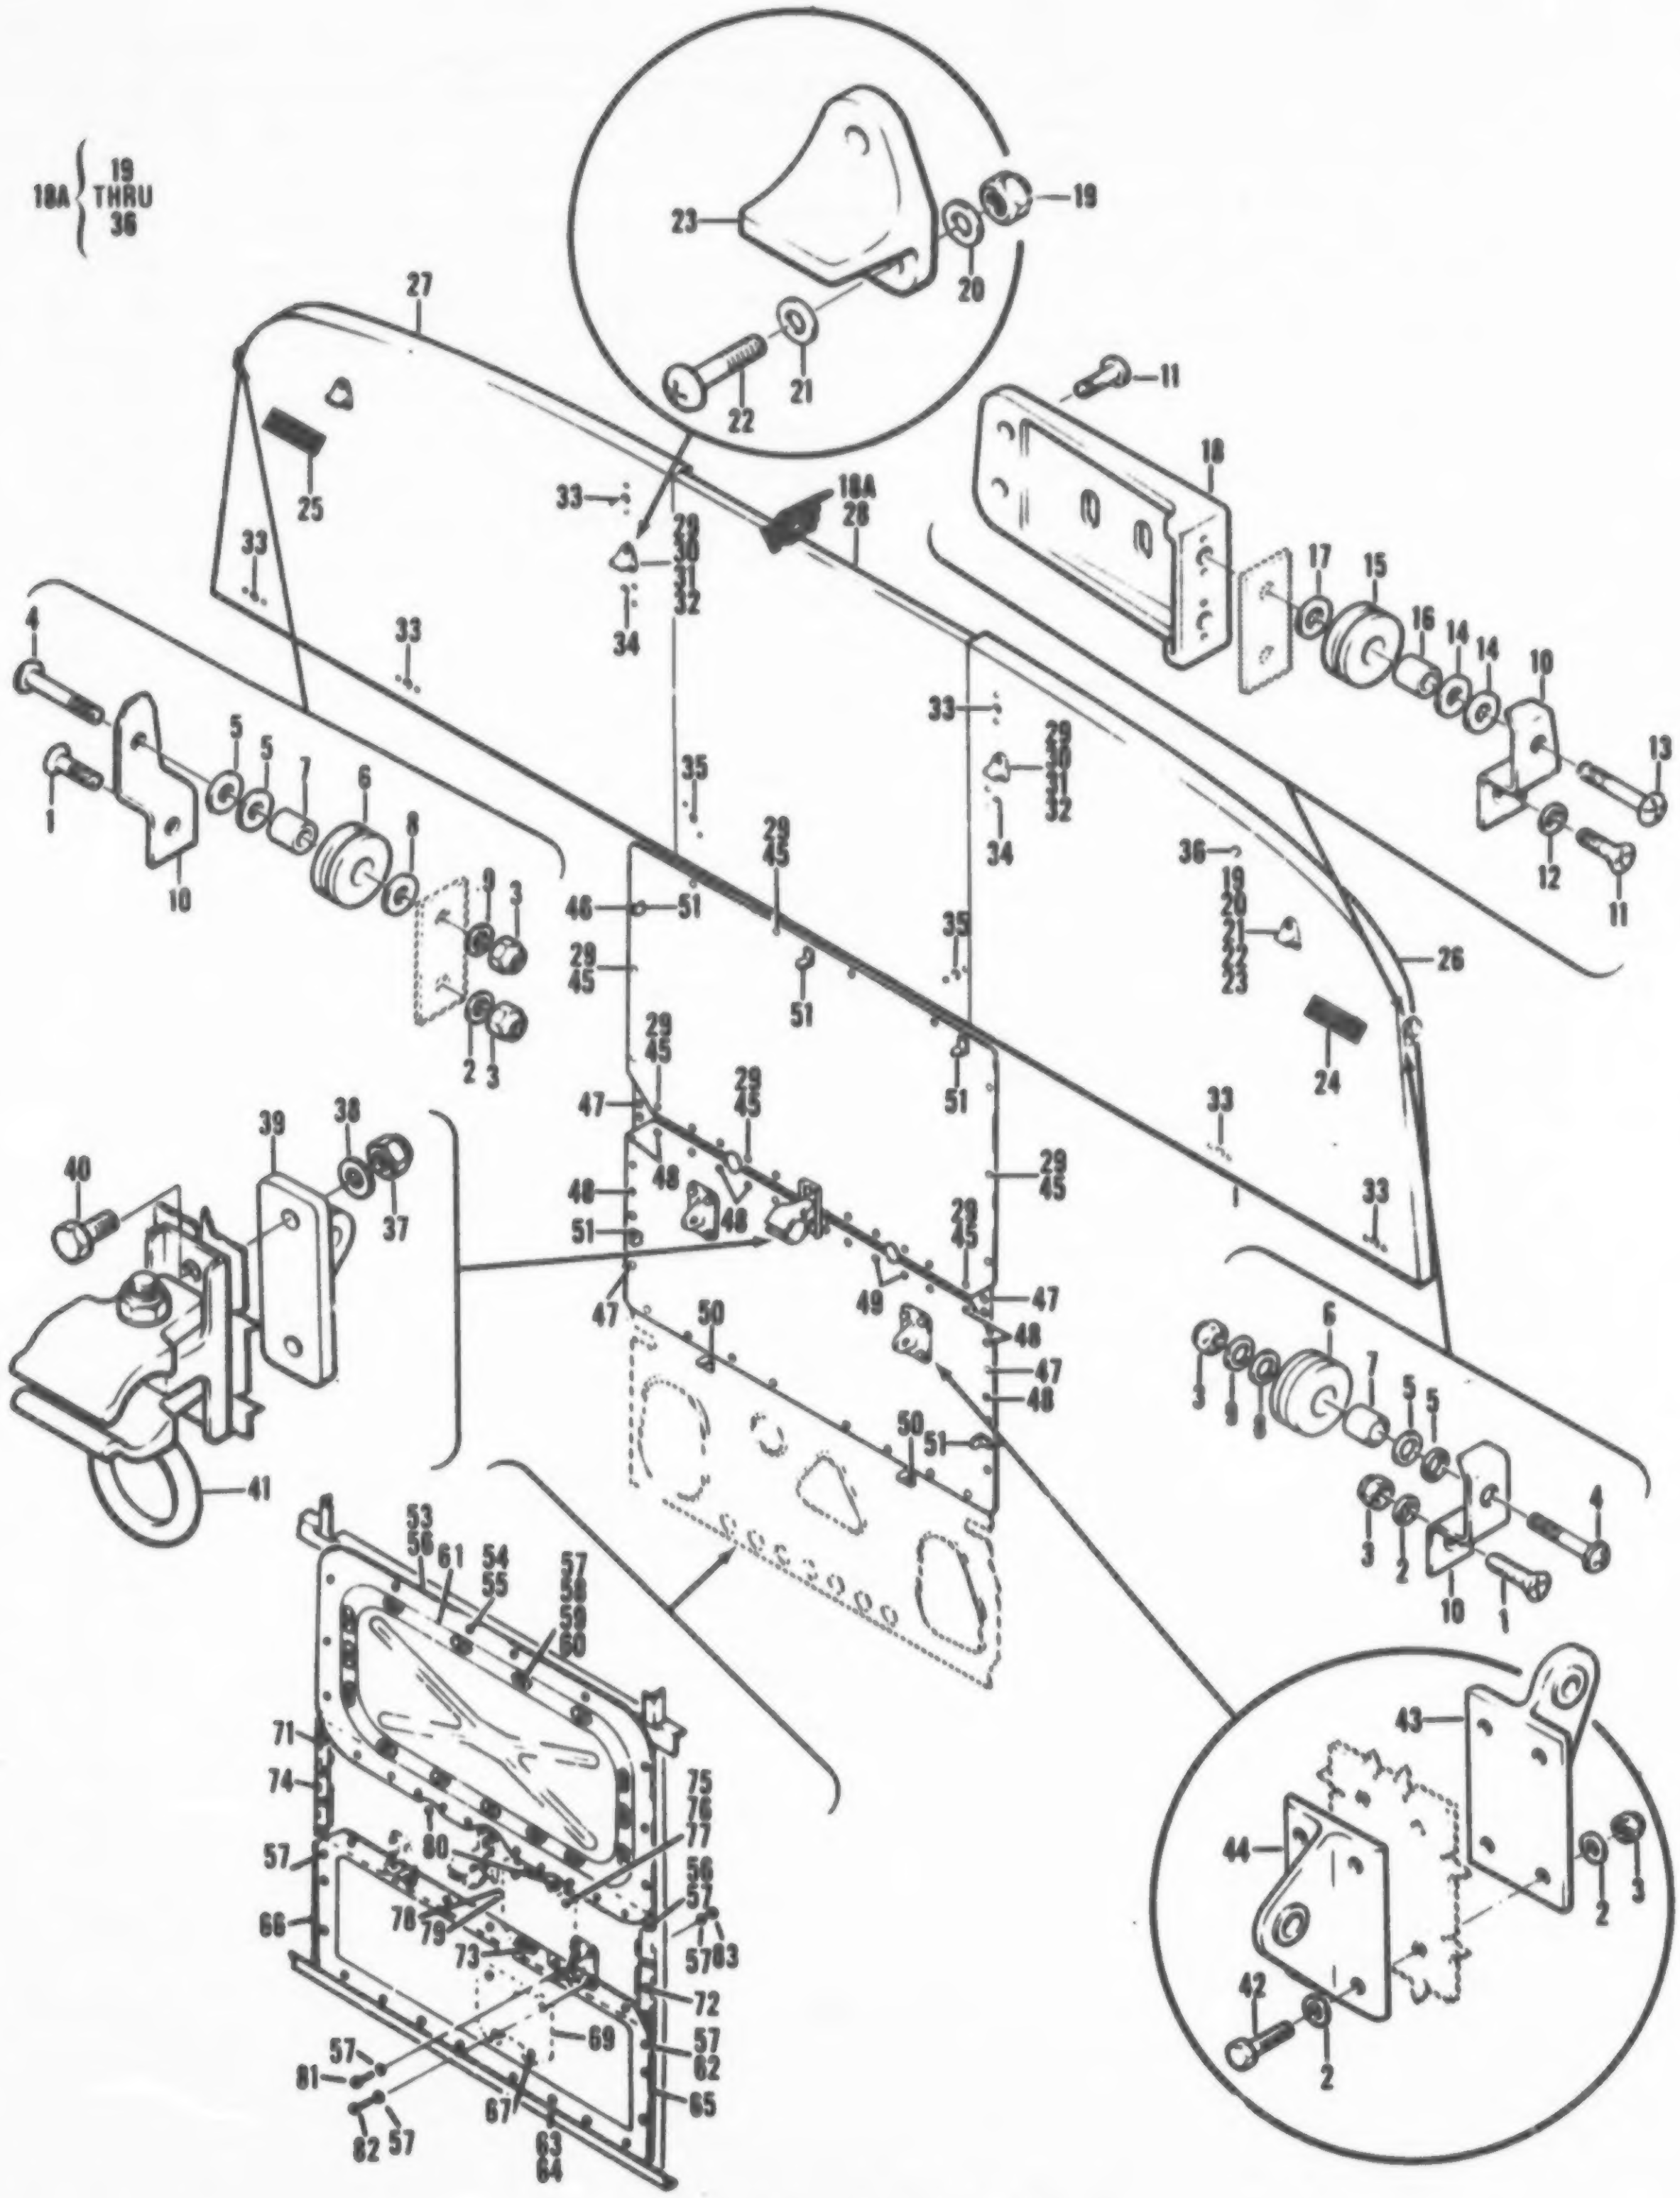
18A
19
THRU
36
23
19
20
21
22
27
11
18
25
33
18A
28
29
30
31
32
33
17
15
16
14
14
10
34
33
4
33
29
30
31
32
13
5
5
7
6
35
1
8
34
12
10
29
45
36
19
20
21
22
23
11
9
3
46
51
26
29
45
35
51
2
3
51
24
29
45
29
45
47
33
39
38
40
37
48
48
29
45
51
48
33
29
45
47
47
49
48
47
50
6
48
3
9
8
7
5
5
41
50
51
53
56
61
54
55
57
58
59
60
3
2
4
10
1
43
71
74
75
76
77
57
80
56
57
66
78
79
73
57
83
72
44
3
2
57
81
69
57
62
42
2
67
65
82
57
63
64

Figure 62. Bulkhead Installation

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
62		XCFZZ		97499	204-031-708-1	BULKHEAD INSTL USBL EFF 62-1872 THRU 62-12555 SEE FIG.55 FOR NHA....UHB	EA	1
62		XCFZZ		97499	204-031-708-109	BULKHEAD INSTL USBL EFF 63-8500 THRU 63-8658 SEE FIG.55 FOR NHA....UHB	EA	1
62		XCFZZ		97499	204-031-708-27	BULKHEAD INSTL USBL EFF 63-8659 THRU 63-12952 SEE FIG.55 FOR NHA....UHB	EA	1
62		XCFZZ		97499	204-031-708-19	BULKHEAD INSTL USBL EFF 64-13902 THRU 64-14100 SEE FIG.55 FOR NHA....UHB	EA	1
62		XCFZZ		97499	204-031-708-157	BULKHEAD INSTL USBL EFF 64-14101 THRU 65-12772 SEE FIG.55 FOR NHA....UHC,UHM	EA	1
62		XCFZZ		97499	204-031-708-185	BULKHEAD INSTL USBL EFF 66-492 & SUBSEQUENT SEE FIG.55 FOR NHA....UHC,UHM	EA	1
62	1	PAOZZ	5305-00-719-5400	96906	MS24694S48	.SCREW,MACHINE....UHB,UHC,UHM	EA	2
62	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....UHB,UHC,UHM	EA	10
62	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHB,UHC,UHM	EA	8
62	4	XDOZZ		88044	AN525-10R32	.SCREW,MACHINE....UHB,UHC,UHM	EA	2
62	5	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT....UHB,UHC,UHM	EA	4
62	6	PAOZZ	3120-00-633-0821	97499	204-030-788-1	.ROLLER,LINEAR-ROTAR....UHB,UHC,UHM	EA	2
62	7	PAOZZ	3120-00-807-2307	80205	NAS75-3-020	.BUSHING,SLEEVE....UHB,UHC,UHM	EA	2
62	8	PAOZZ	5310-00-184-8990	88044	AN960PD516L	.WASHER,FLAT....UHB,UHC,UHM	EA	2
62	9	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT....UHB,UHC,UHM	EA	2
62	10	XDOZZ	1560-00-994-5999	97499	204-031-708-89	.BRACKET,BULKHEAD....UHB,UHC,UHM	EA	1
62	10	XDOZZ	1560-00-994-6000	97499	204-031-708-90	.BRACKET,BULKHEAD....UHB,UHC,UHM	EA	1
62	11	PAOZZ	5305-00-719-5400	96906	MS24694S48	.SCREW,MACHINE U/O PN 204-031-708-157 & -185....UHC,UHM	EA	3
62	12	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 204-031-708-157 & -185....UHC,UHM	EA	1
62	13	XDOZZ		88044	AN525-10R32	.SCREW,MACHINE U/O PN 204-031-708-157 & -185....UHC,UHM	EA	1
62	14	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT U/O PN 204-031-708-157 & -185....UHC,UHM	EA	2
62	15	PAOZZ	3120-00-633-0821	97499	204-030-788-1	.ROLLER,LINEAR-ROTAR U/O PN 204-031-708-157 & -185....UHC,UHM	EA	1
62	16	PAOZZ	3120-00-807-2307	80205	NAS75-3-020	.BUSHING,SLEEVE U/O PN 204-031-708-157 & -185....UHC,UHM	EA	1
62	17	PAOZZ	5310-00-184-8990	88044	AN960PD516L	.WASHER,FLAT U/O PN 204-031-708-157 & -185....UHC,UHM	EA	1
62	18	PAOZZ	1560-00-847-7468	97499	204-031-069-1	.BRACKET ASSEMBLY,CO U/O PN 204-031-708-157 & -185....UHC,UHM	EA	1
62	18A	XCFZZ		97499	204-031-708-5	.BULKHEAD ASSY U/O PN 204-031-708-1....UHB	EA	1
62	18A	XCFZZ		97499	204-031-708-111	.BULKHEAD ASSY U/O PN 204-031-708-109....UHB	EA	1
62	18A	XCFZZ		97499	204-031-708-21	.BULKHEAD ASSY U/O PN 204-031-708-19....UHB	EA	1
62	18A	XCFZZ		97499	204-031-708-155	.BULKHEAD ASSY U/O PN 204-031-708-157....UHC,UHM	EA	1
62	18A	XCFZZ		97499	204-031-708-191	.BULKHEAD ASSY U/O PN 204-031-708-185....UHC,UHM	EA	1
62	19	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHB,UHC,UHM	EA	4
62	20	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT....UHB,UHC,UHM	EA	4
62	21	PAOZZ	5310-00-660-2473	36659	232856	..WASHER....UHB,UHC,UHM	EA	4
62	22	PAOZZ	5305-00-282-8470	88044	AN525-10R18	..SCREW,MACHINE....UHB,UHC,UHM	EA	4
62	23	PAOZZ	1680-00-738-8343	97499	204-030-185-1	..FITTING,TROOP SEAT....UHB,UHC,UHM	EA	2
62	24	PAOZZ	1560-00-997-6558	97499	204-031-257-7	..GUIDE ASSEMBLY,DOOR -LH....UHB,UHC,UHM	EA	1
62	25	PAOZZ	1560-00-997-6560	97499	204-031-257-8	..GUIDE ASSEMBLY,DOOR -RH....UHB,UHC,UHM	EA	1
62	26	PBFFF	1560-00-932-5124	97499	204-031-281-5	..PANEL,FUSELAGE,AIRC -LH....UHB	EA	1
62	26	PAFFF	1560-00-069-3423	97499	204-030-087-3	..PANEL,FUSELAGE,AIRC -LH....UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
62	27	PBFFF	1560-00-069-3425	97499	204-031-280-5	..PANEL,FUSELAGE,AIRC -RH..........UHB	EA	1
62	27	PAFFF	1560-00-071-8278	97499	204-031-280-7	..PANEL,FUSELAGE,AIRC -RH..........UHB,UHC,UHM	EA	1
62	28	PBDZZ	1560-00-907-2255	97499	204-031-282-1	..PANEL,FUSELAGE,AIRC..........UHB,UHC,UHM	EA	1
62	28	PAFFF	1560-00-997-6561	97499	204-031-282-3	..PANEL,FUSELAGE,AIRC -CENTER..........UHB,UHC,UHM	EA	1
62	29	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF LOCKING..........UHB,UHC,UHM	EA	4
62	30	XDOZZ	5305-00-925-7857	88044	AN525-10R10	..SCREW,MACHINE..........UHB,UHC,UHM	EA	28
62	31	PAOZZ	5305-00-180-0014	88044	AN525-10R12	..SCREW,MACHINE..........UHB,UHC,UHM	EA	10
62	32	PAOZZ	1680-00-738-8343	97499	204-030-185-1	..FITTING,TROOP SEAT..........UHB,UHC,UHM	EA	2
62	33	PAFZZ	5310-00-978-2279	80539	4600-054	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	6
62	34	PAFZZ	5310-00-885-1850	80539	14652HA048-1	..NUT,DOME U/O PN 204-031-708-19,-27, -157,& -185 ....UHB,UHC,UHM	EA	1
62	35	PAFZZ	5310-00-978-2279	80539	4600-054	..NUT,SELF-LOCKING,PL U/O PN 204-031-708-19 & -27..........UHB	EA	2
62	36	PAOZZ	5325-00-174-2923	88044	AN227-8	..STUD,SNAP FASTENER..........UHB,UHC,UHM	EA	47
62	37	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHB,UHC,UHM	EA	2
62	38	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
62	39	PAOZZ	1560-00-997-6562	97499	204-030-351-1	.SUPPORT,SEAT..........UHB,UHC,UHM	EA	1
62	40	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE..........UHB,UHC,UHM	EA	2
62	41	PAOZZ	1560-00-766-8594	76912	ACA2429	.RING ASSEMBLY,TUBE..........UHB,UHC,UHM	EA	1
62	42	PAOZZ	5306-00-182-2061	88044	AN3H10A	.BOLT,MACHINE U/O PN 204-031-708-1,-19,-27, & -109..........UHB	EA	8
62	42	PAOZZ	5306-00-182-2062	88044	AN3H11A	.BOLT,MACHINE U/O PN 204-031-708-157 & -185..........UHC,UHM	EA	8
62	43	PAOZZ	1560-00-736-4019	97499	204-030-954-1	.FITTING ASSEMBLY,SA U/O PN 204-031-708-1,-19,-27, & -109 ....UHB	EA	2
62	44	PAOZZ	1560-00-971-5150	97499	204-070-486-1	.FITTING,SAFETY BELT..........UHB,UHC,UHM	EA	2
62	45	PAFZZ	5310-00-764-7282	96906	MS21047L3	.NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	20
62	46	MFOZZ	1560-00-075-9352	97499	204-030-872-27	.COVER,ACCESS..........UHB,UHC,UHM	EA	1
62	47	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE..........UHB,UHC,UHM	EA	10
62	48	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE U/O PN 204-031-708-157 & -185..........UHC,UHM	EA	10
62	49	PBOZZ	1560-00-907-7652	97499	204-031-953-1	.COVER,ACCESS U/O PN 204-031-708-1,-19,-27, & -109..........UHB	EA	1
62	49	PBOZZ	1560-00-927-9517	97499	204-031-953-3	.COVER,ACCESS U/O PN 204-031-708-157 & -185..........UHC,UHM	EA	1
62	50	PAOZZ	5340-00-514-1339	88044	AN743Z13	.BRACKET,ANGLE..........UHB,UHC,UHM	EA	2
62	51	PAOZZ	5340-00-514-1339	88044	AN743Z13	.BRACKET,ANGLE U/O PN 204-031-708-157 & -185..........UHC,UHM	EA	5
62	53	XCFZZ		97499	204-031-311-1	.SUPPORT INSTL AMMUNITION CAN USBL EFF (UH-1B) 63-8500 & SUBSEQUENT USE-AFT-CHPL-W MWO 55-1520-211-30/32 ....UHB,UHC,UHM	EA	1
62	54	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	..SCREW,MACHINE..........UHB,UHC,UHM	EA	20
62	55	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHB,UHC,UHM	EA	20
62	56	PAOOO	1560-00-827-0683	97499	204-031-313-1	..COVER ASSEMBLY,BULK..........UHB,UHC,UHM	EA	1
62	57	PAOZZ	5325-00-860-3494	72794	AST24	...STUD,TURNLOCK FASTENER..........UHB,UHC,UHM	EA	15
62	58	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FAS FASTENER..........UHB,UHC,UHM	EA	15
62	59	PAOOO	5325-00-432-9810	72794	RF5	...RECEPTACLE,TURNLOCK FASTENER..........UHB,UHC,UHM	EA	15
62	60	PAOZZ	5325-00-432-9964	72794	RF5-5	....EYELET,TURNLOCK FASTENER..........UHB,UHC,UHM	EA	15
62	61	PAOZZ	1560-00-827-0682	97499	204-031-313-19	...SEAL,COVER,BULKHEAD..........UHB,UHC,UHM	EA	1
62	62	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE..........UHB,UHC,UHM	EA	11
62	63	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE..........UHB,UHC,UHM	EA	8
62	64	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHB,UHC,UHM	EA	8

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
62	65	PBODO	1560-00-831-1044	97499	204-031-312-1	..COVER,ACCESS........UHB,UHC,UHM	EA	1
62	66	PAOZZ	5330-00-831-1041	97499	204-031-312-35	...SEAL,RUBBER STRIP........UHB,UHC,UHM	EA	1
62	67	PAOZZ	5305-00-849-4642	96906	MS27039-1-04	...SCREW,MACHINE........UHB,UHC,UHM	EA	4
62	68	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT........UHB,UHC,UHM	EA	4
62	69	XAODO		97499	204-031-312-3	...DOOR........UHB,UHC,UHM	EA	1
62	70	PAOZZ	5325-00-849-4001	97499	80-005-2-8	....EYELET,METALLIC........UHB,UHC,UHM	EA	4
62	71	PAODO	1560-00-878-9950	97499	204-031-311-3	..SUPPORT,COVER........UHB,UHC,UHM	EA	1
62	72	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL........UHB,UHC,UHM	EA	26
62	73	PAOZZ	5310-00-734-1050	96906	MS21071L3	...NUT,SELF-LOCKING,PL........UHB,UHC,UHM	EA	1
62	74	PAOZZ	1560-00-827-0691	97499	204-031-311-15	...SUPPORT,COVER........UHB,UHC,UHM	EA	1
62	75	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	...SCREW,MACHINE........UHB,UHC,UHM	EA	5
62	76	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT........UHB,UHC,UHM	EA	10
62	77	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON........UHB,UHC,UHM	EA	5
62	78	PAOZZ	1560-00-827-0695	97499	204-031-311-19	...COVER,ACCESS........UHB,UHC,UHM	EA	1
62	79	PAOZZ	1560-00-827-0690	97499	204-031-311-21	...SEAL,COVER,AIRCRAFT........UHB,UHC,UHM	EA	1
62	80	PAOZZ	5325-00-174-2923	88044	AN227-8	...STUD,SNAP FASTENER FASTENER........UHB,UHC,UHM	EA	2
62	81	PAOZZ	5306-00-656-0358	88044	AN3-6A	..BOLT,MACHINE........UHB,UHC,UHM	EA	4
62	82	PAOZZ	5306-00-151-0782	88044	AN3-12A	..BOLT,MACHINE........UHB,UHC,UHM	EA	4
62	83	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHB,UHC,UHM	EA	4

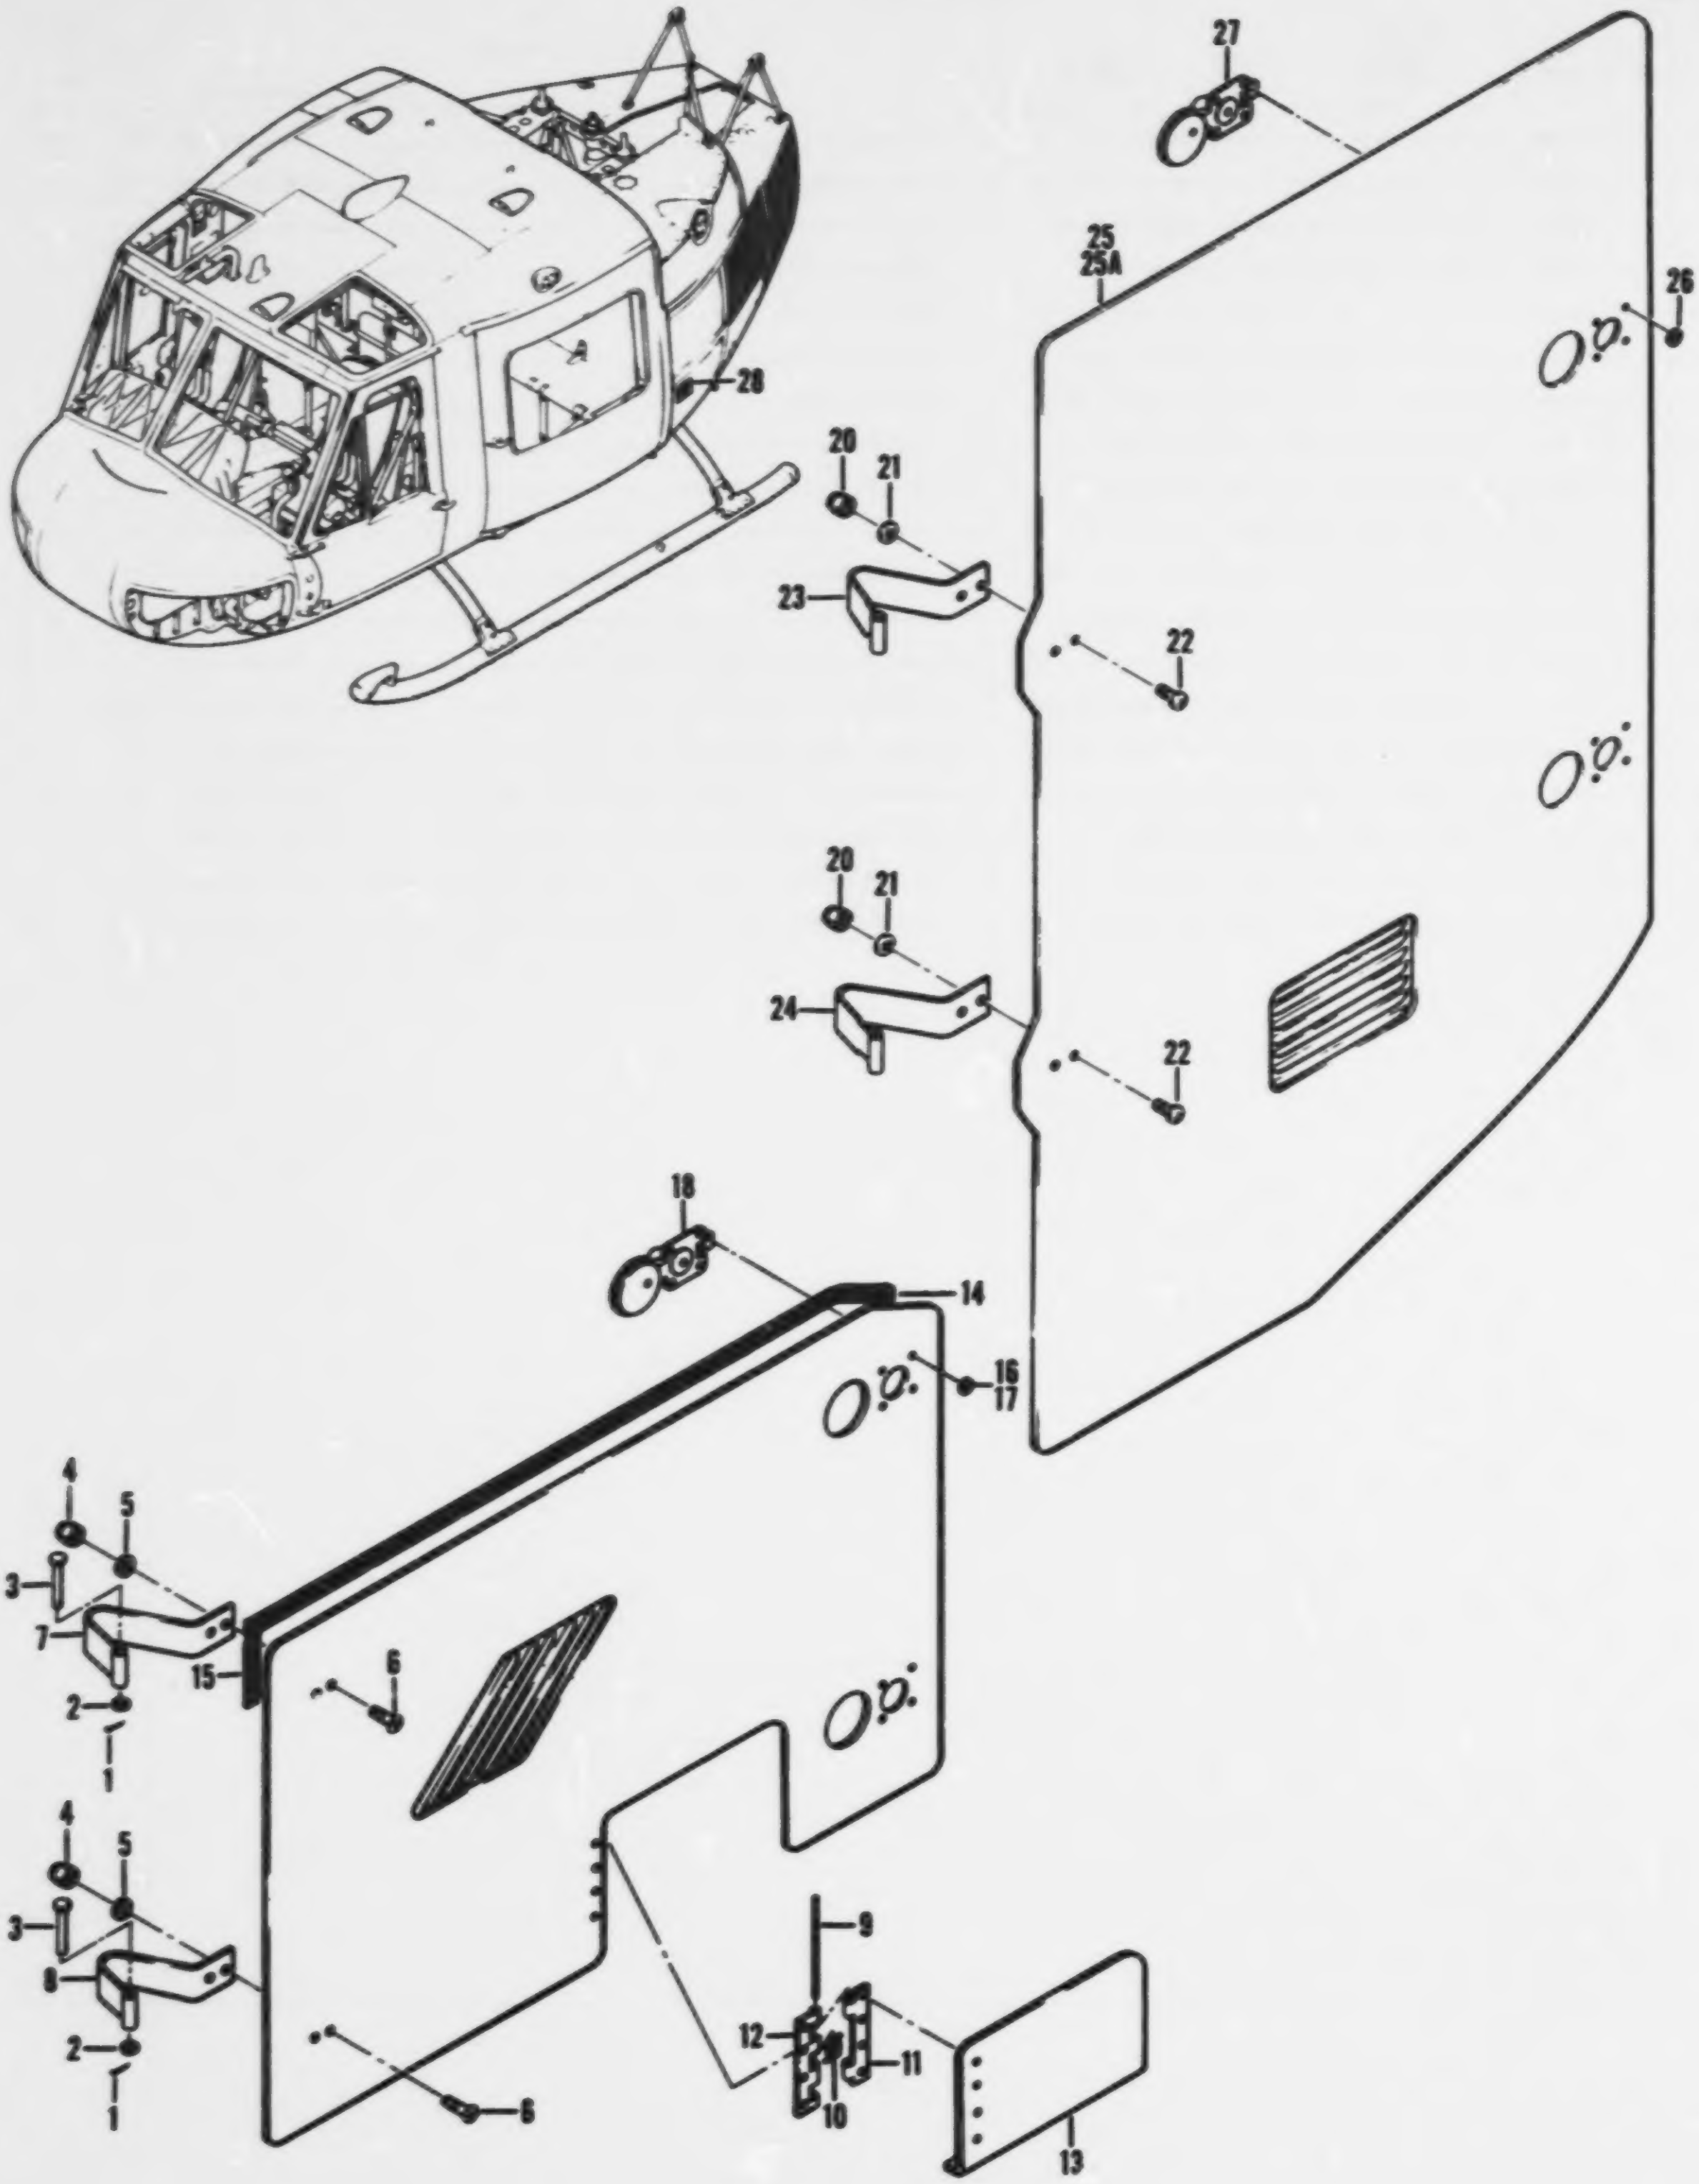
27
25
25A
26
28
20
21
23
22
20
21
24
22
18
14
16
17
4
5
3
7
15
6
2
1
4
5
3
8
2
1
9
12
11
10
6
13

Figure 63. Door Assembly Equipment

best copy available

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
63		PBOOF	1560-00-843-1224	97499	204-030-287-85	DOOR,ACCESS -LH SEE FIG.51 & 53 FOR NHA.........UHB,UHC,UHM	EA	1
63		PAOOO	1560-00-987-3307	97499	204-030-287-72	DOOR,ACCESS -RH SEE FIG.51 & 53 FOR NHA.........UHB,UHC,UHM	EA	1
63	1	PAOZZ	5315-00-234-1856	96906	MS24665-155	.PIN,COTTER U/O PN 204-030-287-85...............UHB,UHC,UHM	EA	2
63	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 204-030-287-85..............UHB,UHC,UHM	EA	2
63	3	PAOZZ	5315-00-812-3763	96906	MS20392-1C41	.PIN,STRAIGHT,HEA U/O PN 204-030-287-85..........UHB,UHC,UHM	EA	2
63	4	PAOZZ	5310-00-902-6676	96906	MS21083N3	.NUT,SELF-LOCKING,HE.............................UHB,UHC,UHM	EA	4
63	5	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT.....................................UHB,UHC,UHM	EA	4
63	6	PAOZZ	5305-00-719-5405	96906	MS24694S56	.SCREW,MACHINE...................................UHB,UHC,UHM	EA	4
63	7	PAOZZ	5340-00-671-4421	97499	204-030-283-1	.HINGE,ACCESS DOOR -LH UPPER.....................UHB,UHC,UHM	EA	1
63	7	PAOZZ	5340-00-671-4422	97499	204-030-283-2	.HINGE,ACCESS DOOR -RH UPPER.....................UHB,UHC,UHM	EA	1
63	8	PAOZZ	5340-00-671-4423	97499	204-030-284-1	.HINGE,ACCESS DOOR -LH LOWER.....................UHB,UHC,UHM	EA	1
63	8	PAOZZ	5340-00-671-4424	97499	204-030-284-2	.HINGE,ACCESS DOOR -RH LOWER.....................UHB,UHC,UHM	EA	1
63	9	XOOZZ		88044	AN253-2-290	.PIN,STRAIGHT HEADLESS...........................UHB,UHC,UHM	EA	1
63	10	PAOZZ	5360-00-593-9167	97499	61-310-086-15	.SPRING,HELICAL, TORSION.........................UHB,UHC,UHM	EA	1
63	11	MFOZZ	1560-00-H24-7330	97499	204-030-287-13	.HINGE HALF......................................UHB,UHC,UHM	EA	1
63	12	MFOZZ	1560-00-H24-7331	97499	204-030-287-15	.HINGE HALF......................................UHB,UHC,UHM	EA	1
63	13	MFOZZ	1560-00-885-0013	97499	204-030-287-53	.DOOR,ACCESS-LH -LH..............................UHB,UHC,UHM	EA	1
63	13	MFOZZ	1560-00-885-0014	97499	204-030-287-54	.DOOR,ACCESS -RH.................................UHB,UHC,UHM	EA	1
63	14	MOOZZ	1560-00-H27-5760	97499	204-030-287-89	.STRIP,RUBBER....................................UHB,UHC,UHM	EA	1
63	15	MOOZZ	1560-00-H27-5759	97499	204-030-287-91	.STRIP,RUBBER....................................UHB,UHC,UHM	EA	1
63	16	PAOZZ	5310-00-183-4357	88044	AN960PD3L	.WASHER,FLAT...UHB	EA	4
63	17	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT.....................................UHB,UHC,UHM	EA	8
63	18	PAOZZ	5340-00-872-7937	83014	H6055063A123	.CATCH,FLUSH.....................................UHB,UHC,UHM	EA	2
63		PBOOO	1560-00-736-4029	97499	204-031-347-1	DOOR ASSEMBLY,LEFT SEE FIG.51 & 53 FOR NHA.......UHB,UHC,UHM	EA	1
63		PBOOO	1560-00-736-4030	97499	204-031-347-2	DOOR ASSEMBLY RIGHT SEE FIG 51&53 FOR NHA........UHB,UHC,UHM	FA	1
63	20	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..............UHB,UHC,UHM	EA	4
63	21	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT.....................................UHB,UHC,UHM	EA	4
63	22	PAOZZ	5305-00-180-0014	88044	AN525-10R12	.SCREW,MACHINE...................................UHB,UHC,UHM	EA	4
63	23	PAOZZ	5340-00-671-5875	97499	204-030-346-1	.HINGE,ACCESS DOOR -LH UPPER.....................UHB,UHC,UHM	EA	1
63	23	PAOZZ	5340-00-671-4935	97499	204-030-346-2	.HINGE,ACCESS DOOR -RH UPPER.....................UHB,UHC,UHM	EA	1
63	24	PAOZZ	5340-00-672-0078	97499	204-030-363-1	.HINGE,ACCESS DOOR -LH LOWER.....................UHB,UHC,UHM	EA	1
63	24	PAOZZ	5340-00-672-0077	97499	204-030-363-2	.HINGE,ACCESS DOOR -RH LOWER.....................UHB,UHC,UHM	EA	1
63	25	XAOOO		97499	204-031-347-3	.DOOR ASSEMBLY-LH................................UHB,UHC,UHM	EA	1
63	25	XAOOO		97499	204-031-347-4	.DOOR ASSEMBLY-RH................................UHB,UHC,UHM	EA	1
63	25A	MFOZZ	5330-00-179-1243	97499	204-031-347-25	..SEAL...UHB,UHC,UHM	EA	1
63	26	XDOZZ	5310-00-076-9900	97499	140-001-1	..WASHER,FLAT....................................UHB,UHC,UHM	EA	V
63	27	PAOZZ	5340-00-872-7938	83014	H6055080A140	..CATCH,FLUSH....................................UHB,UHC,UHM	EA	2
63	28	MFOZZ	7520-00-886-1305	97499	204-070-797-1	.STENCIL,MARKING MODEL USBL EFF 60-3546 THRU 62-1996.....UHB	EA	1
63	28	MFOZZ	7520-00-269-4455	97499	204-072-468-1	.STENCIL,MARKING MODEL USBL EFF 62-1997 & SUBSEQUENT ....UHB,UHC,UHM	EA	1

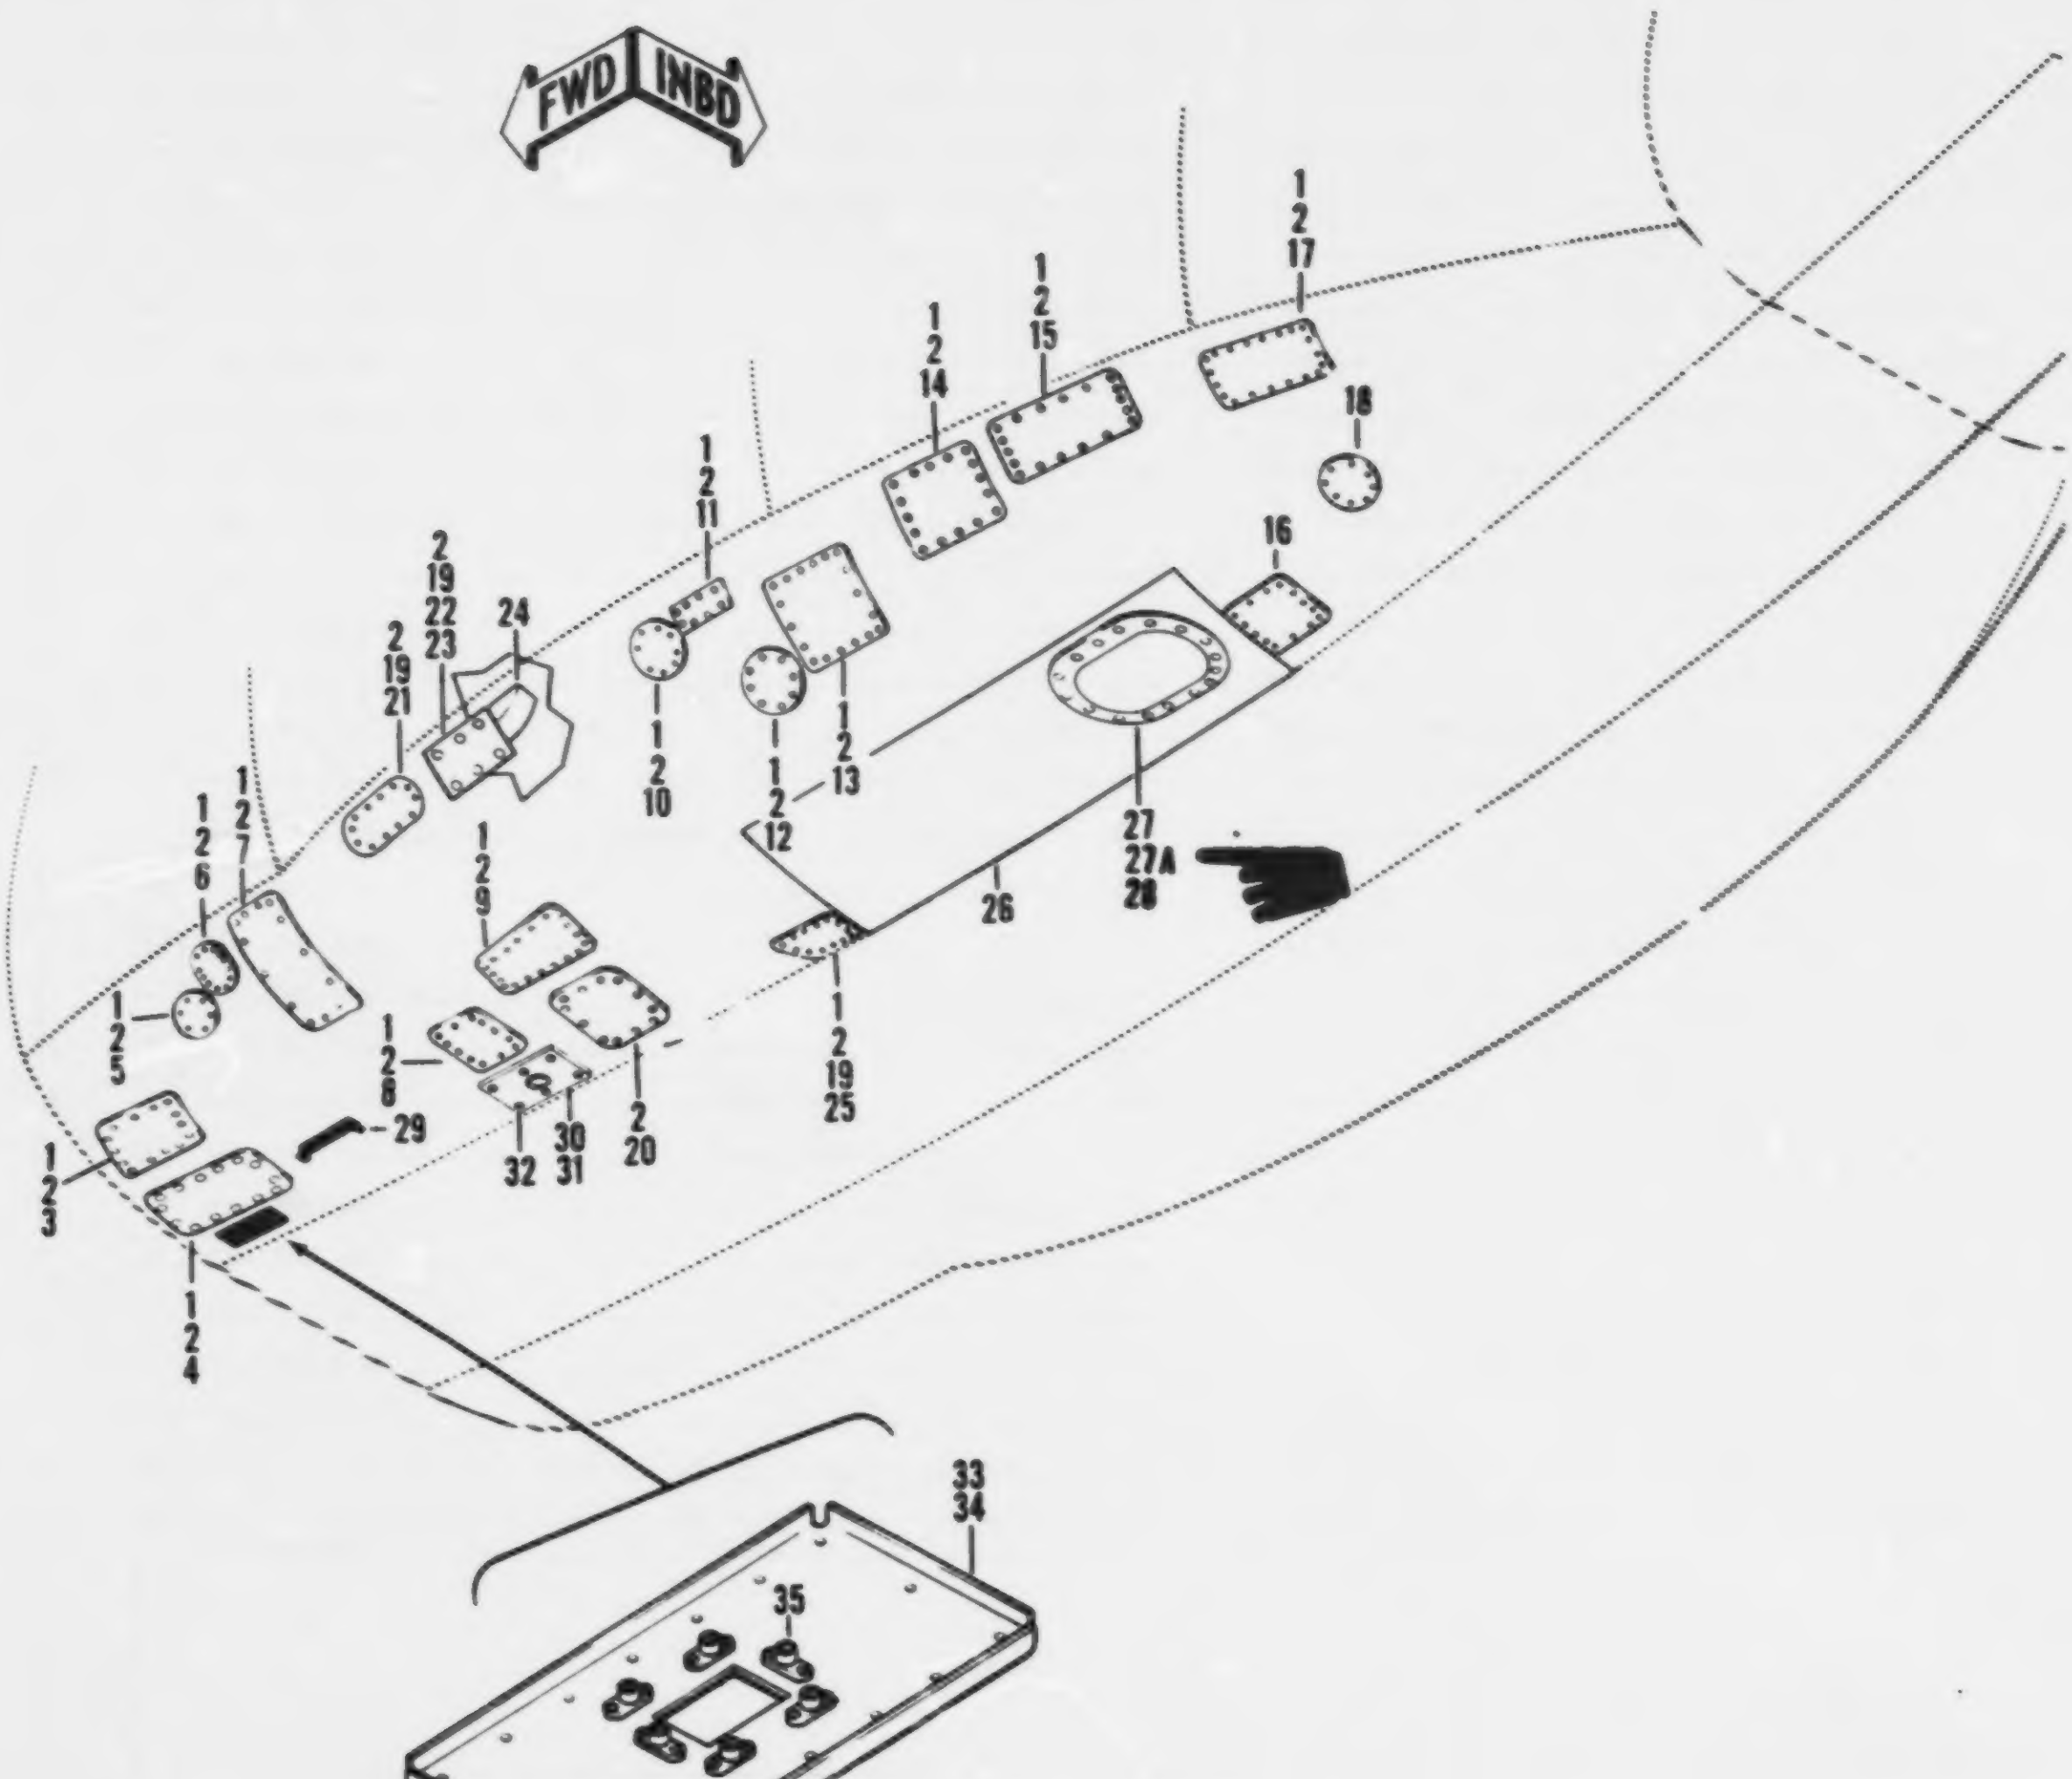
FWD
INBD
1 2 17
1 2 15
1 2 14
18
1 2 11
16
2 19 22 23
24
2 19 21
1 2 10
1 2 12
1 2 13
27 27A 28
26
1 2 7
1 2 6
1 2 9
1 2 5
1 2 8
2 20
1 2 19 25
29
30 31
32
1 2 3
1 2 4
33 34
35

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
64		XCFZZ		97499	205-030-006-7	FUSELAGE ASSY USBL EFF 62-2106 THRU 62-2113 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-13	FUSELAGE ASSY USBL EFF 62-12351 THRU 62-12372 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-19	FUSELAGE ASSY USBL EFF 63-8739 THRU 63-8803 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-25	FUSELAGE ASSY USBL EFF 63-8804 THRU 63-8859 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-33	FUSELAGE ASSY USBL EFF 63-12956 THRU 63-13002 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-31	FUSELAGE ASSY USBL EFF 64-13492 THRU 64-13661 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-43	FUSELAGE ASSY USBL EFF 64-13662 THRU 64-13901 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-49	FUSELAGE ASSY USBL EFF 65-9565 THRU 65-12895 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-55	FUSELAGE ASSY USBL EFF 66-746 THRU 66-16033 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-67	FUSELAGE ASSY USBL EFF 66-16034 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FJG.20 FOR NHA.....................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-85	FUSELAGE ASSY USBL EFF 67-17145 THRU 67-17312 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-97	FUSELAGE ASSY USBL EFF 67-17313 THRU 67-17777 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-109	FUSELAGE ASSY USBL EFF 67-17778 THRU 68-15324 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-129	FUSELAGE ASSY USBL EFF 68-15325 THRU 68-15489 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-137	FUSELAGE ASSEMBLY,S USBL EFF 68-15490 THRU 68-15778 SEE FIG. 20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-141	FUSELAGE ASSY USBL EFF 68-16060 THRU 68-16342 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-147	FUSELAGE ASSY USBL EFF 68-16343 THRU 68-16625 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-031-006-1	FUSELAGE ASSY USBL EFF 69-15000 THRU 69-15291 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-031-006-13	FUSELAGE ASSY USBL EFF 69-15292 THRU 70-15932 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97439	205-031-006-19	FUSELAGE ASSY USBL EFF 70-16200 THRU 70-16518 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-031-006-31	FUSELAGE ASSY USBL EFF 71-20000 & SUBSEQUENT SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-9	.BEAM ASSY-LH U/O PN 205-030-006-7...........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-15	.BEAM ASSY-LH U/O PN 205-030-006-13..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-21	BEAM ASSY-LH U/O PN 205-030-006-19..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-37	.BEAM ASSY-LH U/O PN 205-030-006-25..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-35	.BEAM ASSEMBLY-LH U/O PN 205-030-006-33......UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-27	.BEAM ASSY-LH U/O PN 205-030-006-31..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-45	.BEAM ASSY-LH U/O PN 205-030-006-43..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-51	.BEAM ASSY-LH U/O PN 205-030-006-49..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-57	.BEAM ASSY-LH U/O PN 205-030-006-55..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-81	.BEAM ASSY-LH U/O PN 205-030-006-67..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
64		XCFZZ		97499	205-030-006-87	.BEAM ASSY-LH U/O PN 205-030-006-85..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-101	.BEAM ASSY-LH U/O PN 205-030-006-97..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-111	.BEAM ASSY-LH U/O PN 205-030-006-109,-129, & -137 ....UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-006-143	.BEAM ASSY-LH U/O PN 205-030-006-141 & -147 ....UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-031-006-3	.BEAM ASSY-LH U/O PN 205-031-006-1...........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-031-006-15	.BEAM ASSY-LH U/O PN 205-031-006-13..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-031-006-21	.BEAM ASSY-LH U/O PN 205-031-006-19..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-007-11	..SKIN INSTL-LH U/O PN 205-030-006-9.........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-007-15	..SKIN INSTL-LH U/O PN 205-030-006-15........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-007-19	..SKIN INSTL-LH U/O PN 205-030-006-21,-35, & -37 ....UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-007-149	..SKIN INSTL-LH U/O PN 205-030-006-27........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-007-361	..SKIN INSTL-LH U/O PN 205-030-006-45........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-007-381	..SKIN INSTL-LH U/O PN 205-030-006-51,-57, -81,-87,-101,-111,-143, & 205-031-006-3....................UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-007-463	..SKIN INSTL-LH U/O PN 205-031-006-15........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-030-007-467	..SKIN INSTL-LH U/O PN 205-031-006-21........UHE,UHH,UHV,UHX	EA	1
64	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE............................UHE,UHH,UHV,UHX	EA	V
64	2	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL......................UHE,UHH,UHV,UHX	EA	V
64	3	MFOZZ	1560-00-991-0346	97499	205-030-007-77	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	4	MFOZZ	1560-00-991-0347	97499	205-030-007-97	...DOOR SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	5	MFOZZ	1560-00-991-0349	97499	205-030-007-99	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	6	MFOZZ	1560-00-991-0333	97499	205-030-007-131	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	7	MFOZZ	1560-00-991-0335	97499	205-030-007-133	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	8	MFOZZ	1560-00-991-0344	97499	205-030-007-271	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	9	MFOZZ	1560-00-991-0338	97499	205-030-007-159	...DOOR,SKIN INSTALLAT U/O PN 205-030-007-11 & -15 ....UHE,UHH,UHV,UHX	EA	1
64	10	PAOZZ	1560-00-987-5131	97499	205-030-007-297	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	11	PAOZZ	1560-00-987-5129	97499	205-030-007-295	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	12	PAOZZ	1560-00-987-5135	97499	205-030-007-299	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	13	PAOZZ	1560-00-987-5127	97499	205-030-007-265	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	14	PAOZZ	1560-00-987-5125	97499	205-030-007-261	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	15	PAOZZ	1560-00-987-5123	97499	205-030-007-255	...DOOR,SKIN INSTALLAT U/O PN 205-030-007-11,-15, & -19 ....UHE,UHH,UHV,UHX	EA	1
64	16	MFOZZ	1560-00-991-0342	97499	205-030-007-245	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	17	MFOZZ	1560-00-991-0339	97499	205-030-007-179	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	18	PAOZZ	1560-00-987-5122	97499	205-030-007-229	...DOOR,SKIN INSTALLAT......................UHE,UHH,UHV,UHX	EA	1
64	19	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	...SCREW,MACHINE............................UHE,UHH,UHV,UHX	EA	V
64	20	PAOZZ	1560-00-570-5310	97499	205-030-007-325	...DOOR,SKIN INSTALLAT U/O PN 205-030-007-19,-149, -361,-381,-463,& -467.........................UHE,UHH,UHV,UHX	EA	1
64	21	MFOZZ	1560-00-678-8574	97499	205-030-007-339	...DOOR U/O PN 205-030-007-19,-149, -361,-381,-463,& -467 ....UHE,UHH,UHV,UHX	EA	1
64	22	PAOZZ	5310-00-761-4221	96906	MS21073L3	...NUT,SELF-LOCKING,PL......................UHE,UHH,UHV,UHX	EA	2
64	23	MFOZZ	1560-00-758-5699	97499	205-030-007-351	...DOOR,BOTTOM FUSELAG U/O PN 205-030-007-19,-149, -361,-	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						381,-463, & -467..........UHE,UHH,UHV,UHX		
64	24	PAOZZ	1010-00-922-5810	97499	205-031-210-11	...CHUTE,EJECTION..........UHE,UHH,UHV,UHX	EA	1
64	25	MFOZZ	1560-00-678-8578	97499	205-030-007-341	...DOOR..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-031-282-1	...PANEL INSTL-LH U/O PN 205-030-007-11..........UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-031-282-33	...PANEL INSTL U/O PN 205-030-007-15,-19,-149,-361, & 381 ....UHE,UHH,UHV,UHX	EA	1
64		XCFZZ		97499	205-031-282-67	...PANEL INSTL U/O PN 205-030-007-463,-467 ....UHE,UHH,UHV,UHX	EA	1
64	26	PAFFF	1560-00-176-1090	97499	205-031-282-69	....PANEL ASSEMBLY, LOW FUEL CELL U/O PN 205-031-282-67 ....UHE,UHH,UHV,UHX	EA	1
64	27	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	....SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	16
64	27A	PAOZZ	5310-00-183-4406	88044	AN960PD10	....WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	16
64	28	PAOZZ	1560-00-177-4082	97499	205-031-282-63	....COVER,ACCESS U/O PN 205-031-282-67..........UHE,UHH,UHV,UHX	EA	1
64	29	XCFZZ		94799	205-075-144-5	...SUPPORT ASSY U/O PN 205-030-007-381 & -463 SEE FIG. 65 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
64	30	XCFZZ		20309	ES-D-220111	.ANTENNA INSTALLATIO U/O PN 205-031-006-1 & -13 SEE FIG. 5A FOR NHA..........UHE,UHX	EA	1
64	31	MF000		20309	ES-B-213081	..PLATE..........UHE,UHX	EA	1
64	32	PAOZZ	5310-00-781-9493	96906	MS21075L06	...NUT,SELF-LOCKING,PL PLATE..........UHE,UHX	EA	6
64	33	XCFZZ		20309	ES-D-221674	.COMM ANT MTG INSTL SEE FIG. 5B FOR NHA..........UHX	EA	1
64	34	XD000		20309	ES-C-221677	..PLATE MTG..........UHX	EA	1
64	35	PAOZZ	5310-00-772-3720	96906	MS21075L3	..NUT,SELF-LOCKING,PL..........UHX	EA	6

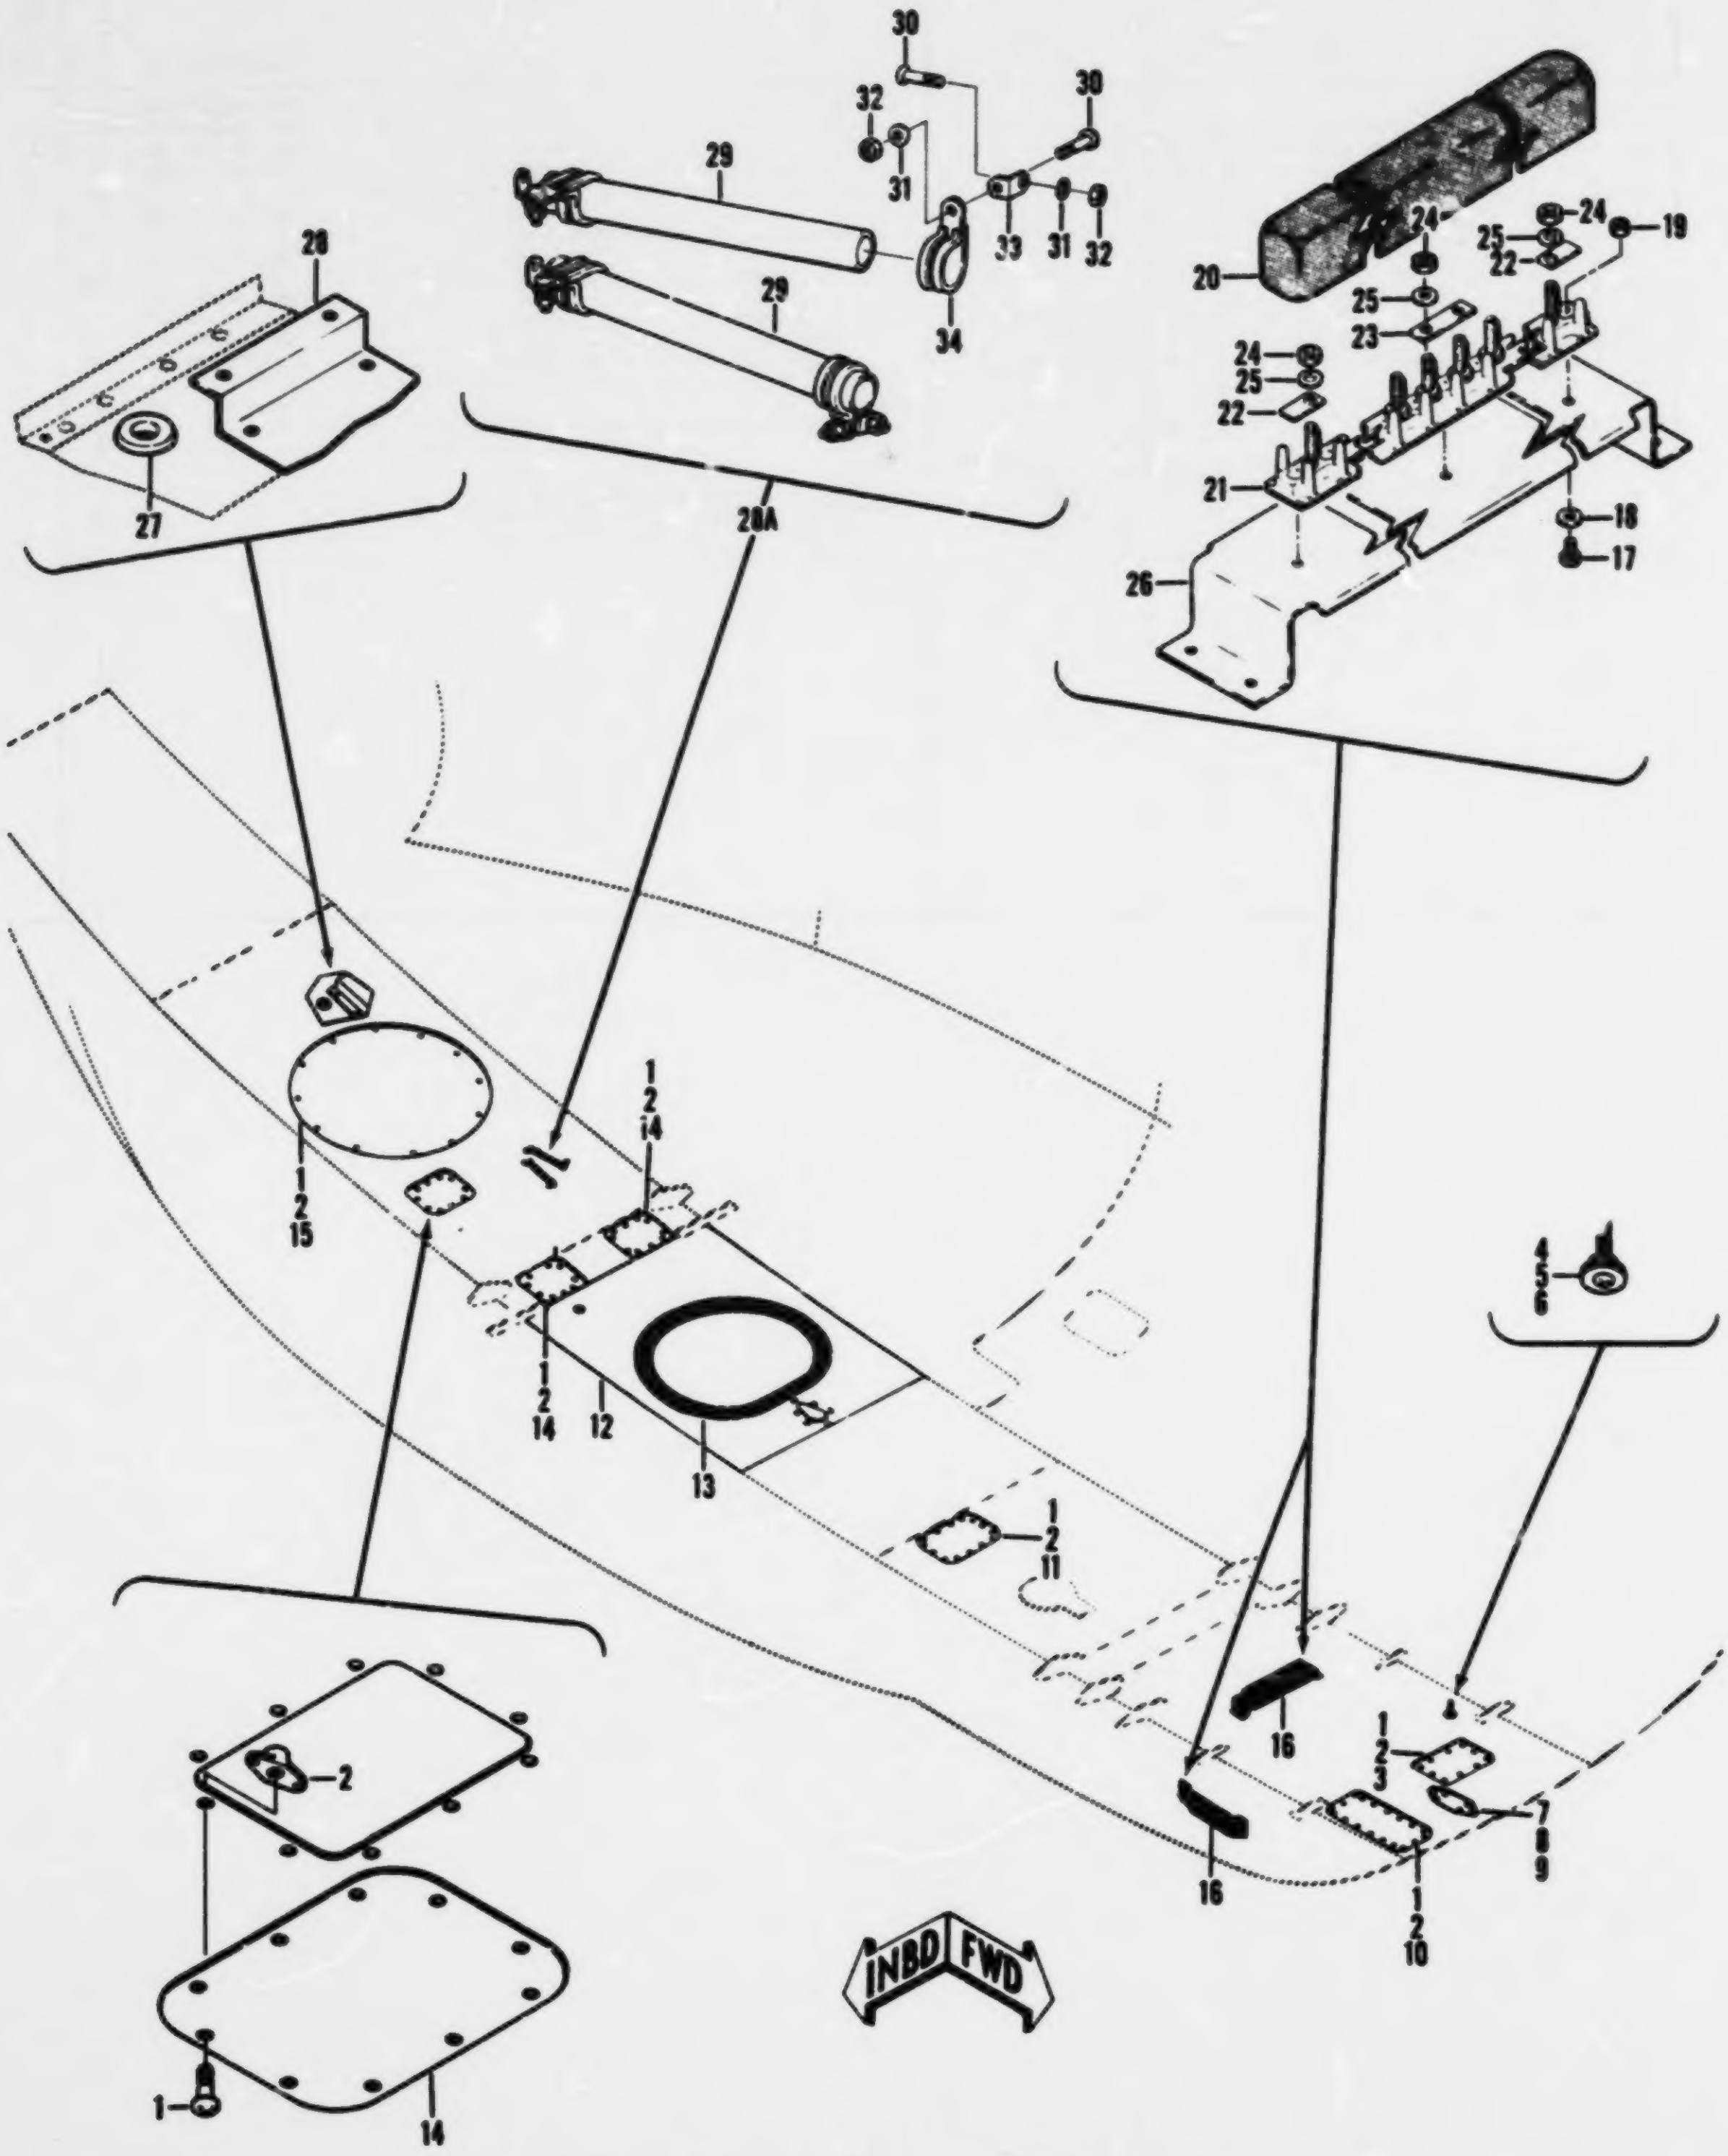
30
32
31
30
29
28
31
33
31
32
34
29
20
24
24
19
25
22
25
23
24
25
22
21
18
17
26
27
28A
1
2
14
1
2
15
1
2
14
12
13
1
2
11
4
5
6
16
16
1
2
3
7
8
9
1
2
10
2
1
14
INBD
FWD

Figure 65. Fuselage Assembly, Lower Center
(Sheet 1 of 3)

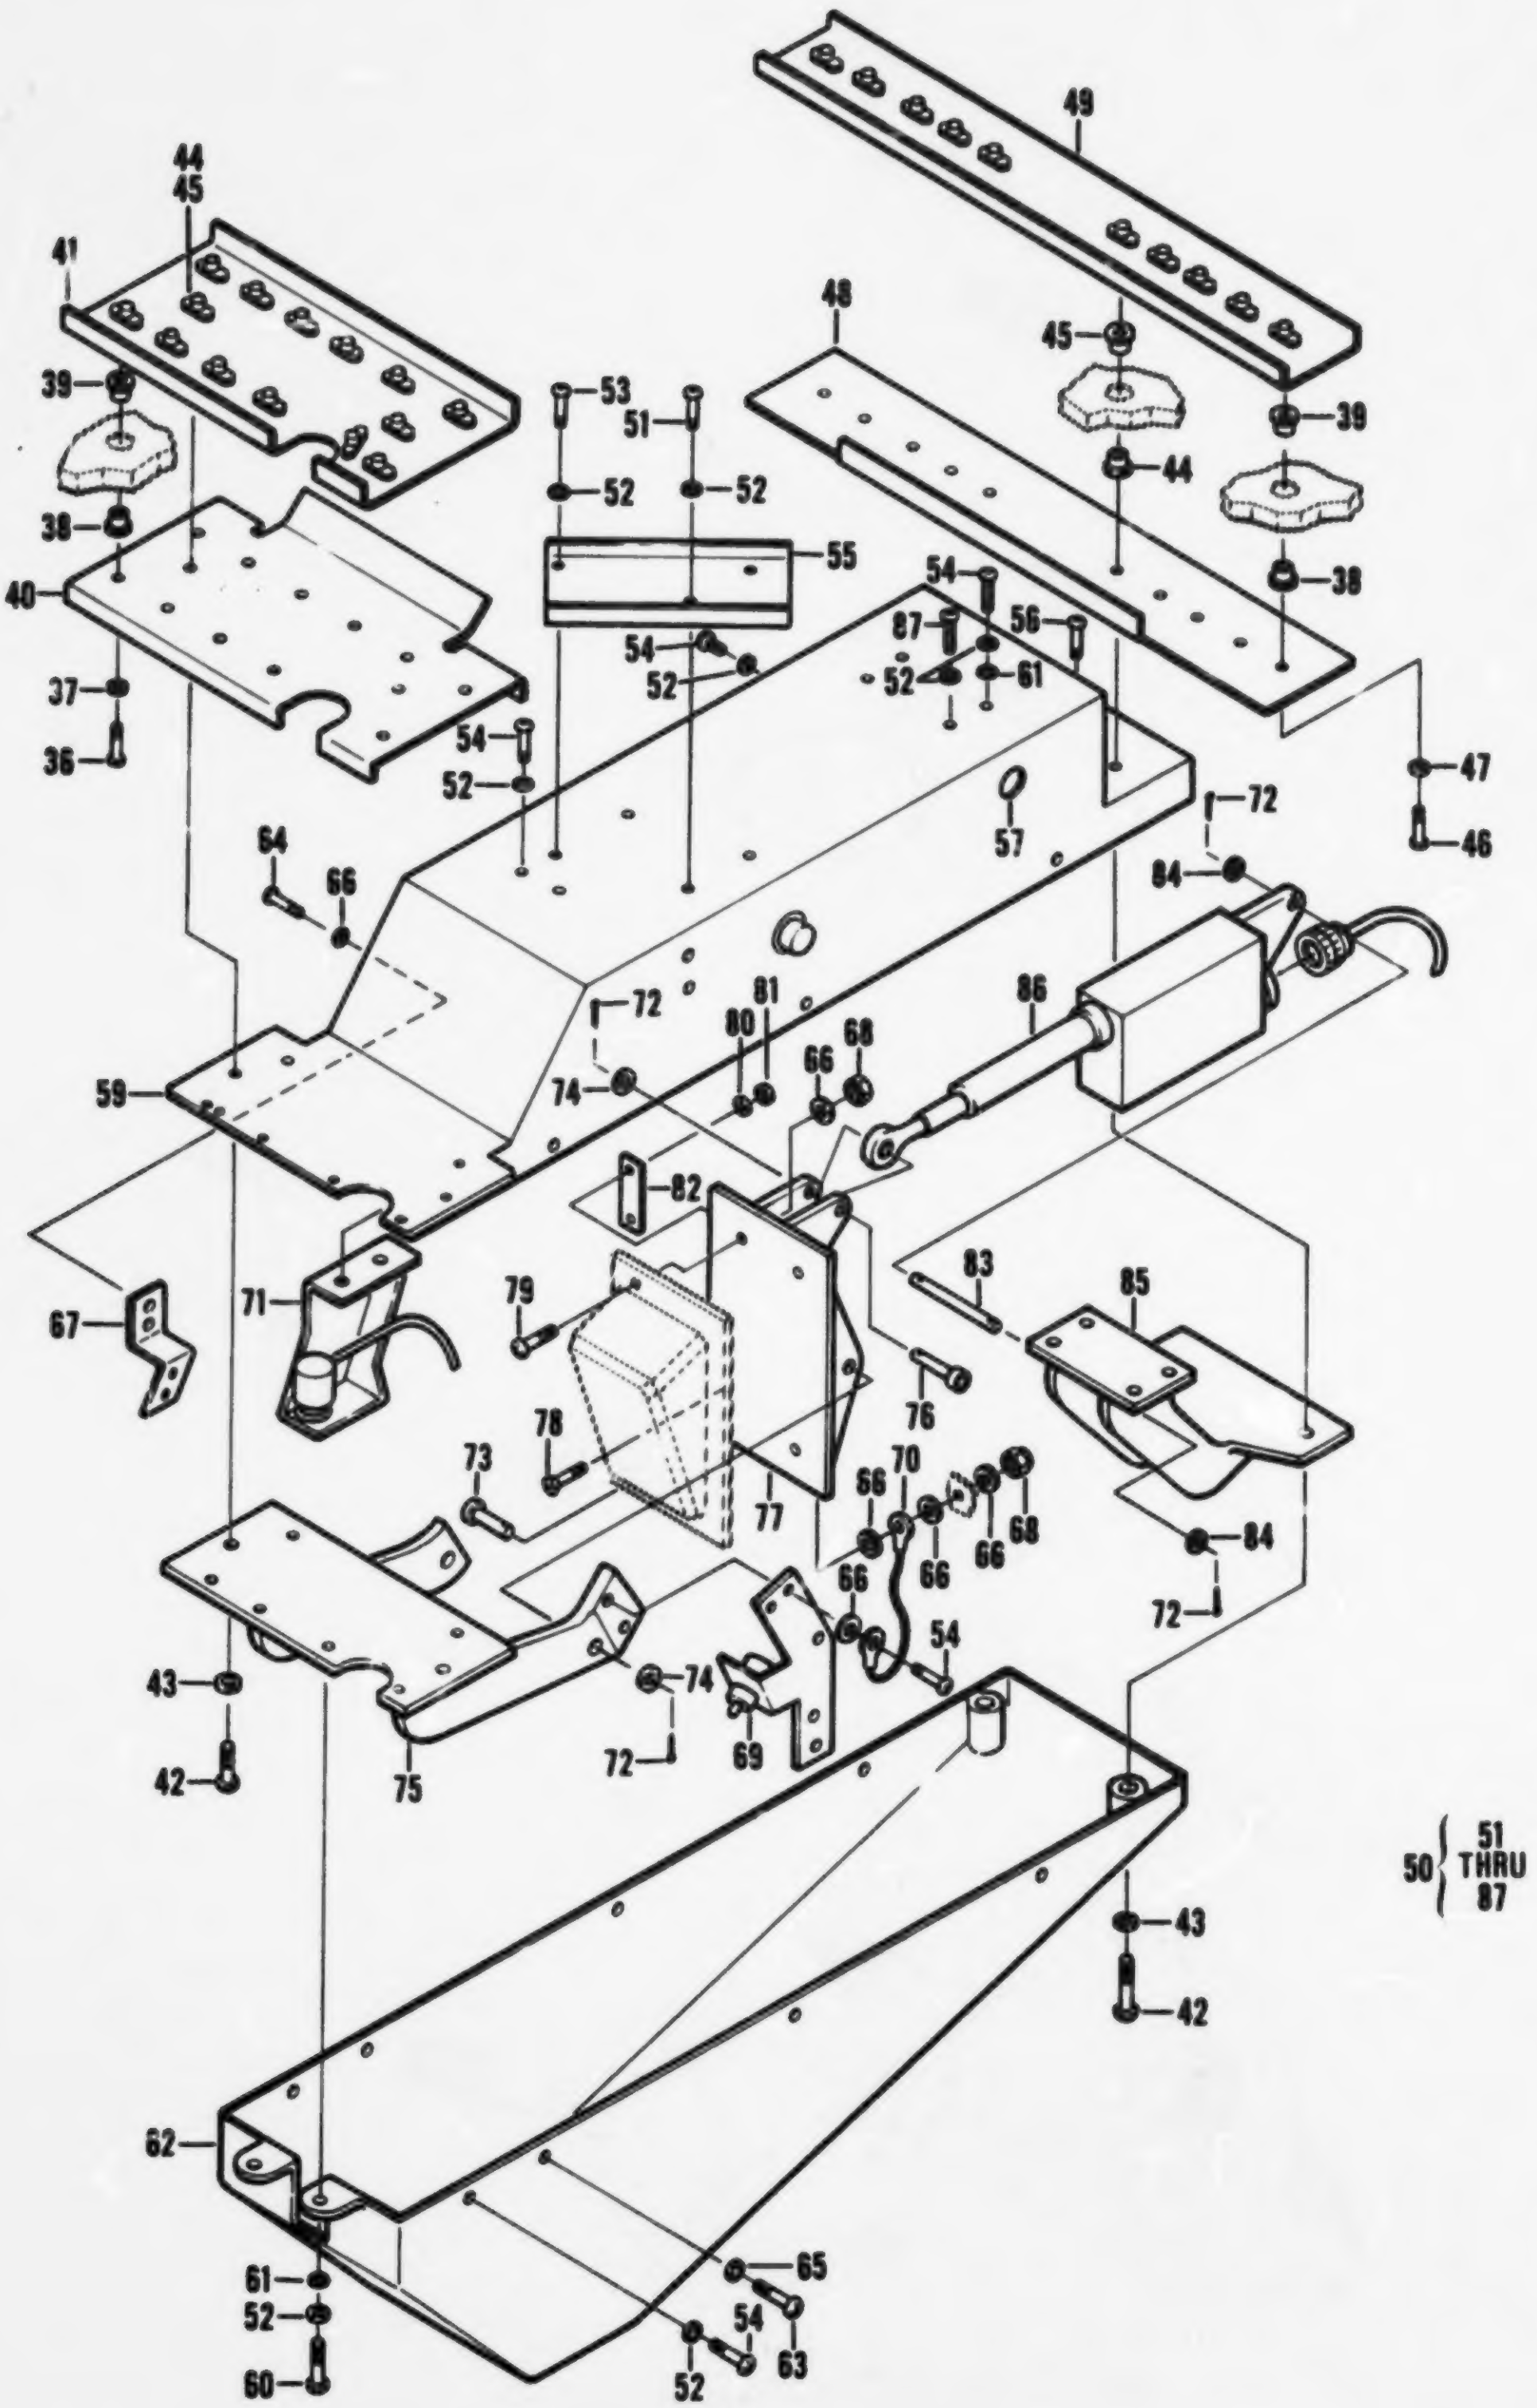
49
44
45
41
48
45
39
53
51
39
52
52
38
44
55
40
38
54
87
56
54
52
52
61
37
36
54
47
52
72
57
46
84
64
66
86
72
81
80
66
68
59
74
82
83
85
79
71
67
76
73
78
70
66
68
77
66
66
66
84
66
54
72
43
74
42
72
69
75
50 { 51 THRU 87
43
42
62
65
61
52
54
63
60
52

Figure 65. Fuselage Assembly, Lower Center (Sheet 2 of 3)

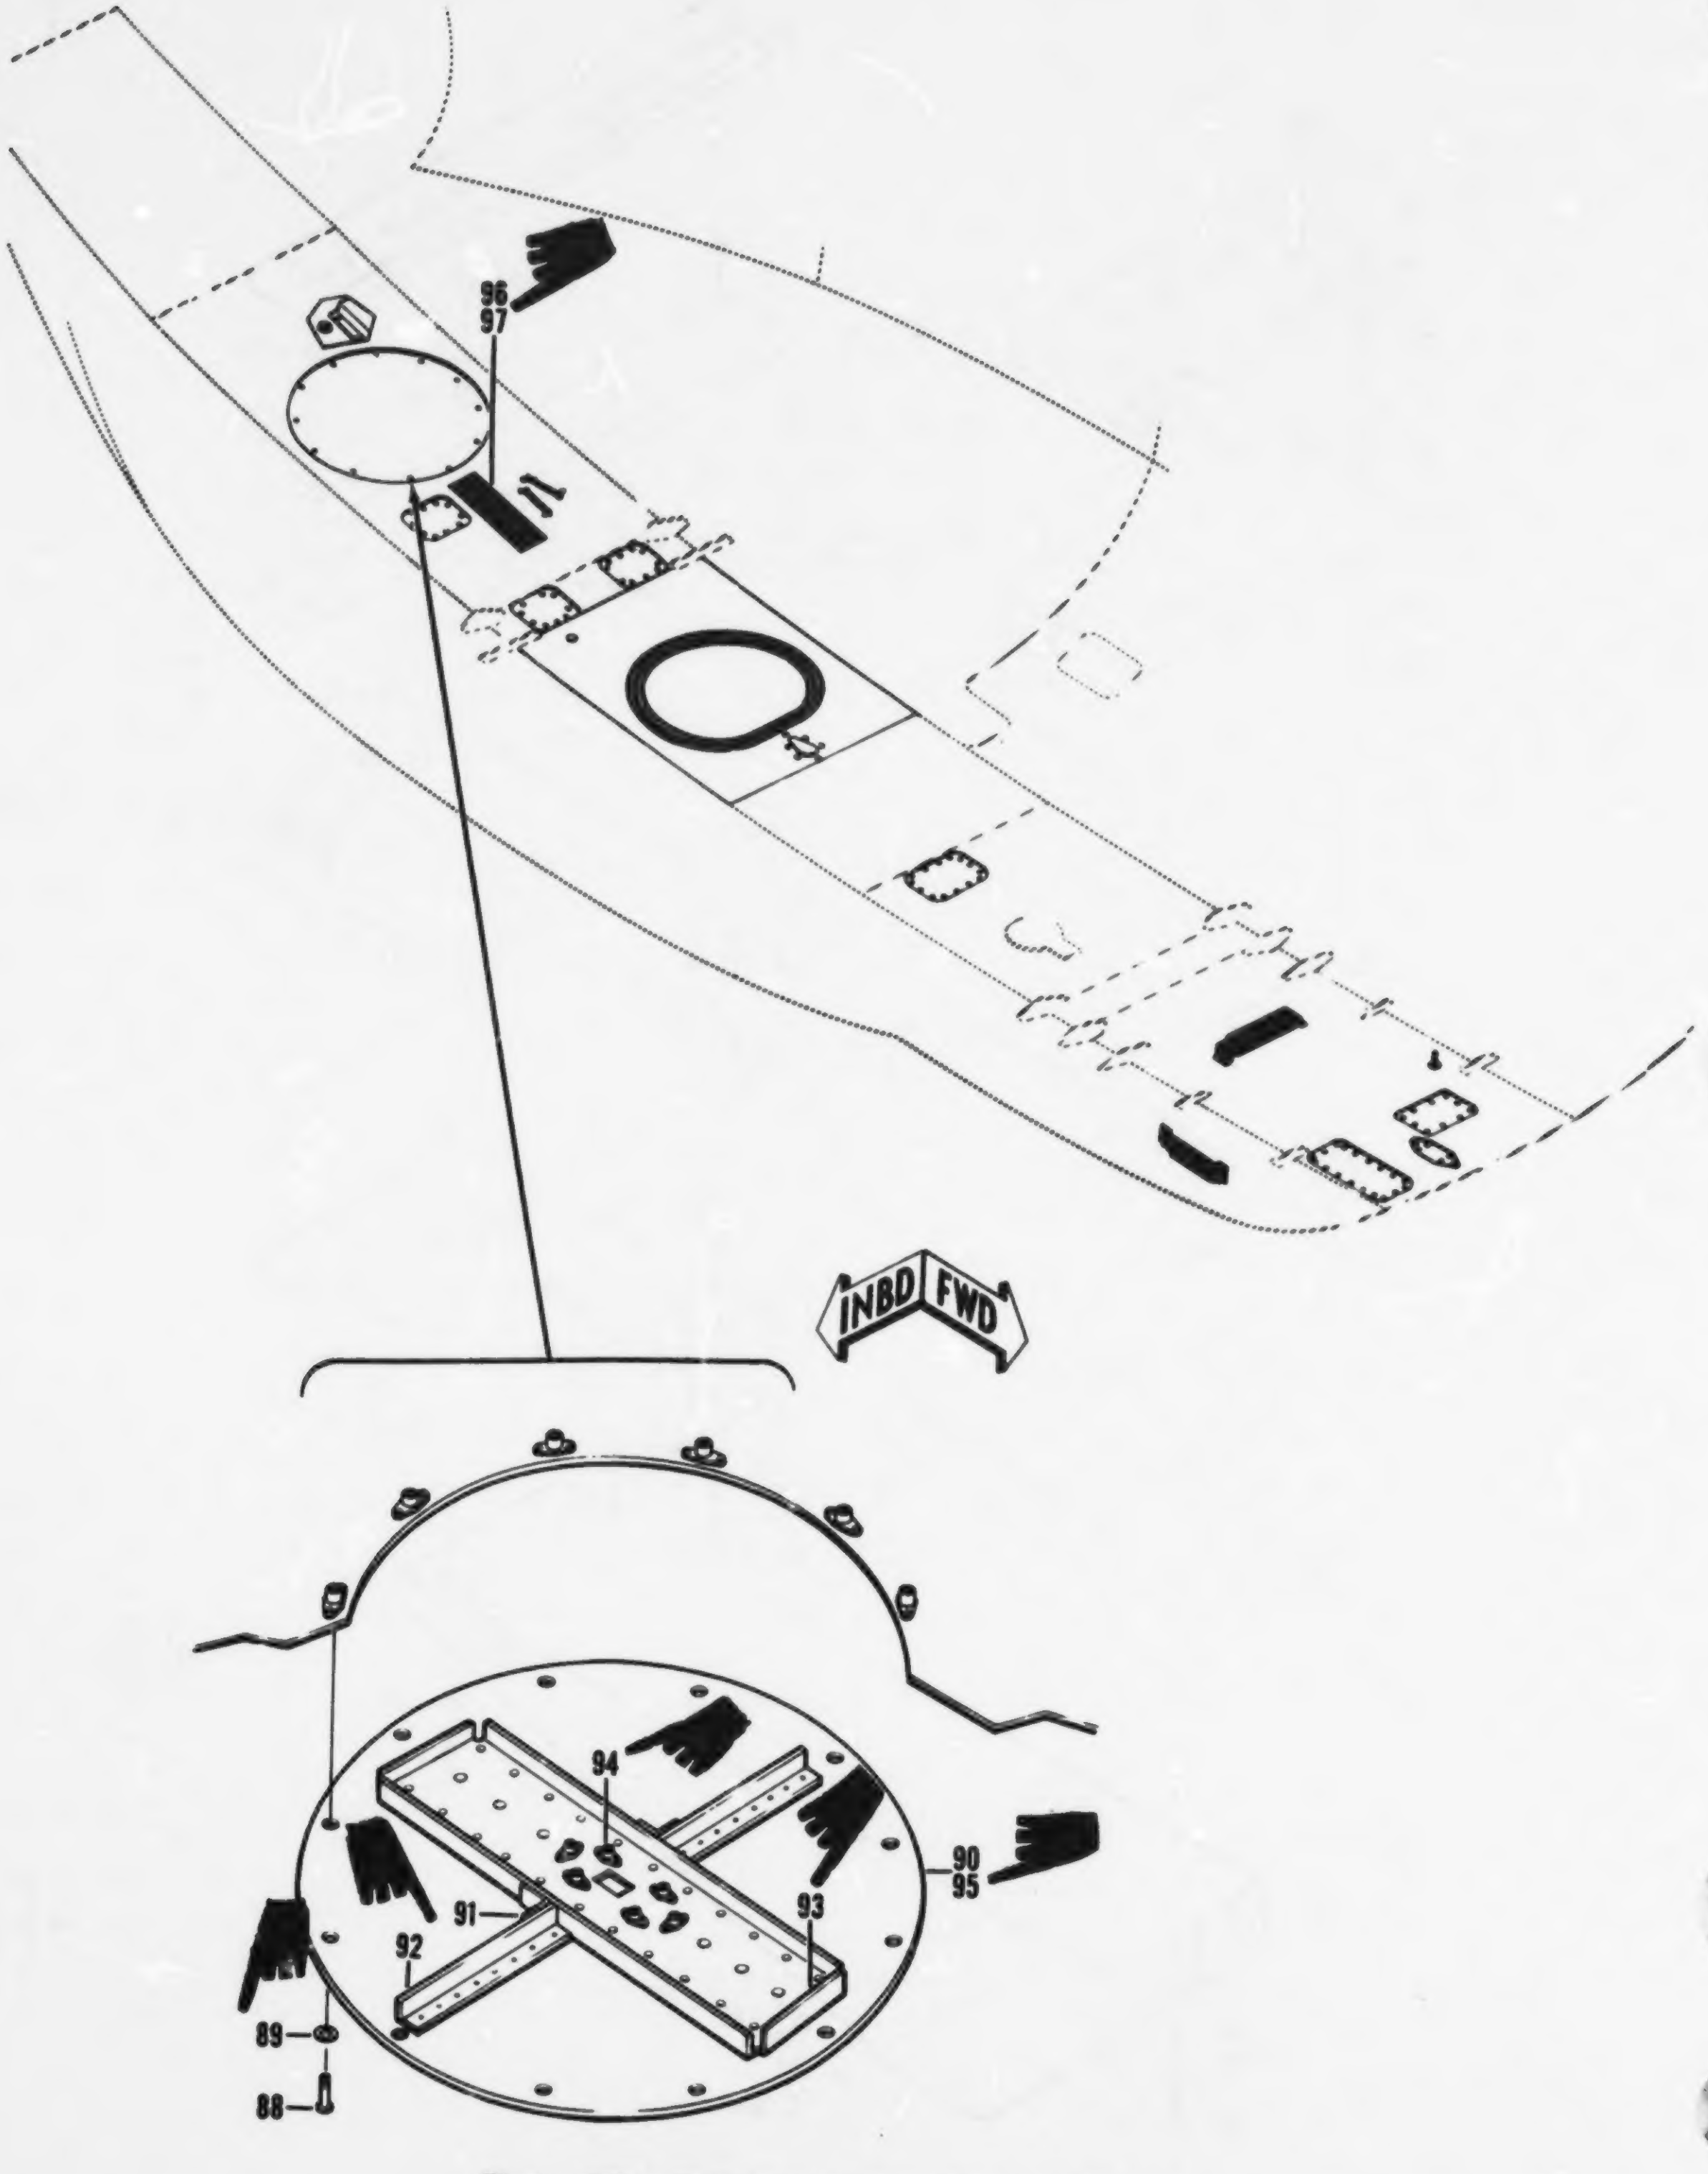
96
97
INBD
FWD
94
90
95
91
93
92
89
88

Figure 65. Fuselage Assembly, Lower Center
(Sheet 3 of 3)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
65		XCFZZ		97499	205-030-006-7	FUSELAGE ASSY USBL EFF 62-2106 THRU 62-2113 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-13	FUSELAGE ASSY USBL EFF 62-12351 THRU 62-12372 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-19	FUSELAGE ASSY USBL EFF 63-8739 THRU 63-8803 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-25	FUSELAGE ASSY USBL EFF 63-8804 THRU 63-8859 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-33	FUSELAGE ASSY USBL EFF 63-12956 THRU 63-13002 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-31	FUSELAGE ASSY USBL EFF 64-13492 THRU 64-13661 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-43	FUSELAGE ASSY USBL EFF 64-13662 THRU 64-13901 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-49	FUSELAGE ASSY USBL EFF 65-9565 THRU 65-12895 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-55	FUSELAGE ASSY USBL EFF 66-746 THRU 66-16033 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-67	FUSELAGE ASSY USBL EFF 66-16034 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG. SEE FIG.20 FOR NHA...........UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-85	FUSELAGE ASSY USBL EFF 67-17145 THRU 67-17312 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-97	FUSELAGE ASSY USBL EFF 67-17313 THRU 67-17777 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-109	FUSELAGE ASSY USBL EFF 67-17778 THRU 68-15324 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-129	FUSELAGE ASSY USBL EFF 68-15325 THRU 68-15489 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-137	FUSELAGE ASSY USBL EFF 68-15490 THRU 68-15778 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-141	FUSELAGE ASSY USBL EFF 68-16050 THRU 68-16342 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-006-147	FUSELAGE ASSY USBL EFF 68-16343 THRU 68-16625 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-031-006-1	FUSELAGE ASSY USBL EFF 69-15000 THRU 69-15921 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-031-006-13	FUSELAGE ASSY USBL EFF 69-15292 THRU 70-15932 SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-031-006-19	FUSELAGE ASSEMBLY,S USBL EFF 70-16200 THRU 70-16518 SEE FIG. 20 FOR NHA..................................UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-031-006-31	FUSELAGE ASSY USBL EFF 71-20000 & SUBSEQUENT SEE FIG.20 FOR NHA..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-007-9	.SKIN INSTL U/O PN 205-030-006-7 & -13.......UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-007-13	.SKIN INSTL U/O PN 205-030-006-19,-25, & -33 ....UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-007-359	.SKIN INSTL U/O PN 205-030-006-31 & -43......UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-007-421	.SKIN INSTL U/O PN 205-030-006-109...........UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-007-373	.SKIN INSTL U/O PN 205-030-006-49,-55,-67, -85,-97,-129,& -137..UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-007-439	.SKIN INSTL U/O PN 205-030-006-141...........UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-007-441	.SKIN INSTL U/O PN 205-030-006-147, 205-031-006-1,-13,-19 &-31..UHE,UHH,UHV,UHX	EA	1
65	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	10
65	2	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL........................UHE,UHH,UHV,UHX	EA	10

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
65	3	MFOZZ	1560-00-987-1351	97499	205-030-007-107	..DOOR,CENTER SKIN..........UHE,UHH,UHV,UHX	EA	1
65	4	MFOZZ	5305-00-947-6251	97499	205-031-898-1	..SCREW,MACHINE U/O PN 205-030-007-359 & -373 ....UHE,UHH,UHV,UHX	EA	1
65	5	PAOZZ	5310-00-167-0765	88044	AN970-3	..WASHER,FLAT U/O PN 205-030-007-359 & -373 ....UHE,UHH,UHV,UHX	EA	2
65	6	PAOZZ	5310-00-807-1474	96905	MS21042L3	..NUT,SELF-LOCKING,EX U/O PN 205-030-007-359 & -373 ....UHE,UHH,UHV,UHX	EA	1
65	7	PAOZZ	5305-00-889-3000	96906	MS35206-230	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	6
65	8	PAOZZ	5310-00-619-3560	80205	NAS697A06	..NUT,SELF-LOCKING,PL U/O PN 205-030-007-9 ....UHE,UHH,UHV,UHX	EA	6
65	8	PAOZZ	5310-00-680-4985	80205	NAS1031A06	..NUT,SELF-LOCKING,PL U/O PN 205-030-007-13, -359,-373,& -421..........UHE,UHH,UHV,UHX	EA	6
65	9	MFOZZ	1560-00-715-2233	97499	204-031-251-1	..COVER,ACCESS U/O PN 205-030-007-9 & -13....UHE,UHH,UHV,UHX	EA	1
65	10	MFOZZ	1560-00-987-1352	97499	205-030-007-109	..DOOR,CENTER SKIN..........UHE,UHH,UHV,UHX	EA	1
65	11	MFOZZ	1560-00-987-1353	97499	205-030-007-111	..DOOR,CENTER SKIN..........UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-772-29	..PANEL INSTL U/O PN 205-030-007-9,-13,& -359 ....UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-772-37	..PANEL INSTL U/O PN 205-030-007-373 & -421 ....UHE,UHH,UHV,UHX	EA	1
65		XCFZZ		97499	205-030-772-85	..PANEL INSTL U/O PN 205-030-007-439 & -441 ....UHE,UHH,UHV,UHX	EA	1
65	12	PAFFF	1560-00-411-5897	97499	205-030-772-87	...PANEL,FUSELAGE,AIRC..........UHE,UHH,UHV,UHX	EA	1
65	13	PAOZZ	1560-00-967-1783	97499	205-030-772-25	....BUMPER,FUSELAGE ASS ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
65	14	MFOZZ	1560-00-678-8579	97499	205-030-007-347	..DOOR..........UHE,UHH,UHV,UHX	EA	3
65	15	PAOZZ	1560-00-966-7523	97499	205-030-417-1	..COVER,ACCESS..........UHE,UHH,UHV,UHX	EA	1
65	16	XCFZZ		97499	205-075-144-1	..SUPPORT ASSY U/O PN 205-030-007-13,-359, & -373 ....UHE,UHH,UHV,UHX	EA	1
65	16	XCFZZ		97499	205-075-144-5	..SUPPORT ASSY-LH USBL EFF 65-9565 & SUBSEQUENT SEE FIG.64 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
65	17	PBOZZ	5305-00-889-2997	96906	MS35206-215	...SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	3
65	18	PAOZZ	5310-00-550-5009	96906	MS15795-704	...WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	3
65	19	PAOZZ	5310-00-807-1471	96906	MS21042L04	...NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	3
65	20	MFOZZ		96906	MS18029-1S15	...COVER,TERMINAL BOARD..........UHE,UHH,UHV,UHX	EA	1
65	21	MOOZZ	5940-00-132-2765	96906	MS27212-1-15	...TERMINAL BOARD..........UHE,UHH,UHV,UHX	EA	3
65	22	XBOZZ	5970-00-926-2544	96906	MS25227-1A	...INSULATOR,PLATE..........UHE,UHH,UHV,UHX	EA	2
65	23	PAOZZ	5970-00-963-6321	96906	MS25227-2A	...INSULATOR,PLATE..........UHE,UHH,UHV,UHX	EA	1
65	24	PAOZZ	5310-00-807-1472	96906	MS21042L06	...NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	15
65	25	PAOZZ	5310-00-167-0816	88044	AN960-6	...WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	15
65	26	MFOZZ	1560-00-489-0090	97499	205-075-144-3	...BRACKET..........UHE,UHH,UHV,UHX	EA	1
65	27	PAOZZ	5325-00-174-5315	96906	MS35489-7	..GROMMET,NONMETALLIC..........UHE,UHH,UHV,UHX	EA	1
65	28	MFOZZ		97499	204-031-139-3	..BRACKET ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
65	28A	XCFZZ		97499	205-030-113-1	.CONDUIT INSTL USBL EFF 65-9565 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
65	29	XBFZZ	5975-00-332-2516	97499	130-010-1	..CONDUIT,NONMETALLIC..........UHE,UHH,UHV,UHX	EA	2
65	30	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	8
65	31	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	8
65	32	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	8
65	33	PAOZZ	5340-00-598-8251	88044	AN743-12	..BRACKET,ANGLE..........UHE,UHH,UHV,UHX	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
65	34	PAOZZ	5340-00-989-4573	81996	EAB700D16	..CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	4
65		XCFZZ		20309	ES-F-220144	ANTENNA GROUP, SEE FIG.5A FOR NHA	UHE	EA	1
65	36	PAOZZ	5306-00-781-5665	96906	MS24693C277	.SCREW,MACHINE	UHE	EA	12
65	37	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE	EA	V
65	38	PAFZZ	5325-00-983-7393	29372	S102D25-08	.FASTENER,PANEL	UHE	EA	20
65	39	PAFZZ	5325-00-671-7345	29372	P102D25-1	.FASTENER,PANEL	UHE	EA	20
65	40	XDOZZ		20309	ES-D-220218	.SUPPORT,LOWER-LH	UHE	EA	1
65	41	MFOZZ		20309	ES-C-220219	.SUPPORT ASSEMBLY UPPER-LH	UHE	EA	1
65	42	XDOZZ		80205	NAS1304-19	.BOLT,SHEAR	UHE	EA	4
65	43	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT	UHE	EA	4
65	44	PAFZZ	5325-01-077-8029	29372	S102D31-08	.FASTENER,PANEL	UHE	EA	4
65	45	PAFZZ	5340-00-891-1699	29372	P102D31-1	.PLUG,SPECIAL	UHE	EA	4
65	46	PAOZZ	5306-00-851-6429	80205	NAS1303-14	.BOLT,SHEAR	UHE	EA	8
65	47	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT	UHE	EA	8
65	48	MFOZZ		20309	ES-C-220220	.SUPPORT	UHE	EA	1
65	49	MFOZZ		20309	ES-C-220221	.SUPPORT ASSEMBLY	UHE	EA	1
65	50	XCFZZ		20309	ES-F-220145	.ANTENNA GROUP	UHE	EA	1
65	51	PAOZZ	5305-00-059-3660	96906	MS51958-64	..SCREW,MACHINE	UHE	EA	6
65	52	PAOZZ	5310-00-619-1148	96906	MS15795-808	..WASHER,FLAT	UHE	EA	21
65	53	PAOZZ	5305-00-059-3661	96906	MS51958-65	..SCREW,MACHINE	UHE	EA	1
65	54	PAOZZ	5305-00-059-3659	96906	MS51958-63	..SCREW,MACHINE	UHE	EA	14
65	55	MFOZZ		20309	ES-C-220155	..BRACKET	UHE	EA	1
65	56	PAOZZ	5305-00-781-5664	96906	MS24693C271	..SCREW,MACHINE	UHE	EA	8
65	57	PAOZZ	5340-00-057-3869	80205	NAS451-17	..BUTTON,PLUG	UHE	EA	1
65	59	XDOZZ		20309	ES-F-220153	..COVER ASSEMBLY,TOP	UHE	EA	1
65	60	PAOZZ	5305-00-059-3657	96906	MS51958-61	..SCREW,MACHINE	UHE	EA	2
65	61	PAOZZ	5310-00-933-8120	96906	MS35338-138	..WASHER,LOCK	UHE	EA	5
65	62	XDOZZ		20309	ES-F-220154	..COVER ASSEMBLY,	UHE	EA	1
65	63	PAOZZ	5305-00-054-6670	96906	MS51957-45	..SCREW,MACHINE	UHE	EA	2
65	64	PAOZZ	5305-00-059-3663	96906	MS51958-67	..SCREW,MACHINE	UHE	EA	1
55	65	PAOZZ	5310-00-880-5978	96906	MS15795-807	..WASHER,FLAT	UHE	EA	2
65	66	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT	UHE	EA	23
65	67	XDOZZ		20309	ES-C-220364	..BRACKET	UHE	EA	1
65	68	PAOZZ	5310-00-926-1835	96906	MS21083C3	..NUT,SELF-LOCKING,HE	UHE	EA	6
65	69	XDOZZ		20309	ES-C-220156	..BRACKET,SWITCH	UHE	EA	1
65	70	MFOZZ		20309	ES-B-220309-3	..BONDING JUMPER	UHE	EA	1
65	71	XDOZZ		20309	ES-C-220353	..BRACKET,SWITCH	UHE	EA	1
65	72	PAOZZ	5315-00-234-1861	96906	MS24665-298	..PIN,COTTER	UHE	EA	5
65	73	PBOZZ	5315-01-093-7962	20309	ES-B-220215-2	..PIN,STRAIGHT,HEADED	UHE	EA	2
65	74	PAOZZ	5310-00-582-5577	96906	MS15795-810	..WASHER,FLAT	UHE	EA	5
65	75	XDOZZ		20309	ES-D-220147	..CLEVIS ASSEMBLY	UHE	EA	1
65	76	PBOZZ	5315-01-081-8846	20309	ES-B-220215-1	..PIN,STRAIGHT,HEADED	UHE	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
65	77	XDOZZ		20309	ES-D-220149	..CLEVIS ASSEMBLY	UHE	EA	1
65	78	PAOZZ	5305-00-043-0267	96906	MS24693C274	..SCREW,MACHINE	UHE	EA	4
65	79	PAOZZ	5305-00-958-2918	96906	MS24693C26	..SCREW,MACHINE	UHE	EA	2
65	80	PAOZZ	5310-00-187-2398	88044	AN960PD6L	..WASHER,FLAT	UHE	EA	2
65	81	PAOZZ	5310-00-925-9646	96906	MS21083C06	..NUT,SELF-LOCKING,HE	UHE	EA	2
65	82	PBOZZ	1560-01-067-6212	20309	ES-B-220365	..PLATE,PLUNGER	UHE	EA	1
65	83	PBOZZ	5315-01-097-8797	20309	ES-B-220305	..PIN	UHE	EA	1
65	84	PAOZZ	5310-00-515-7449	88044	AN960C416L	..WASHER,FLAT	UHE	EA	2
65	85	XDOZZ		20309	ES-D-220151	..CLEVIS ASSEMBLY	UHE	EA	1
65	86	PAOOO	1620-00-987-9635	12511	DL1326M31	..ACTUATOR,ELECTRO-ME	UHE	EA	1
65	87	PAOZZ	5305-00-059-3662	96906	MS51958-66	..SCREW,MACHINE	UHE	EA	1
65		XCFZZ		20309	ES-D-221675	COMM ANT MTG INSTL SEE FIG.58 FOR NHA	UHX	EA	1
65	88	PAOZZ	5305-00-059-3656	96906	MS51958-60	.SCREW,MACHINE	UHX	EA	12
65	89	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT	UHX	EA	12
65	90	XDOOO		20309	ES-F-221676	.ANT MTG PLATE ASSY	UHX	EA	1
65	91	MFOZZ		20309	ES-F-221676-4	..BRACE	UHX	EA	2
65	92	MFOZZ		20309	ES-F-221676-3	..ANGLE	UHX	EA	2
65	93	MFOZZ		20309	ES-F-221676-2	..STIFFENER	UHX	EA	1
65	94	PAOZZ	5310-00-772-3720	96906	MS21075-L3	..NUT,SELF-LOCKING,PL	UHX	EA	6
65	95	MFOZZ		20309	ES-F-221676-1	..PLATE	UHX	EA	1
65		XDOOO		20309	ES-D-221556	AT-741 ARN ANT	UHX	EA	1
65	96	XDOOO		20309	ES-C-221555	.PLATE,STRUCT A/C	UHX	EA	1
65	97	PAOZZ	5310-00-781-9493	96906	MS21075L06	..NUT,SELF-LOCKING,PL	UHX	EA	5

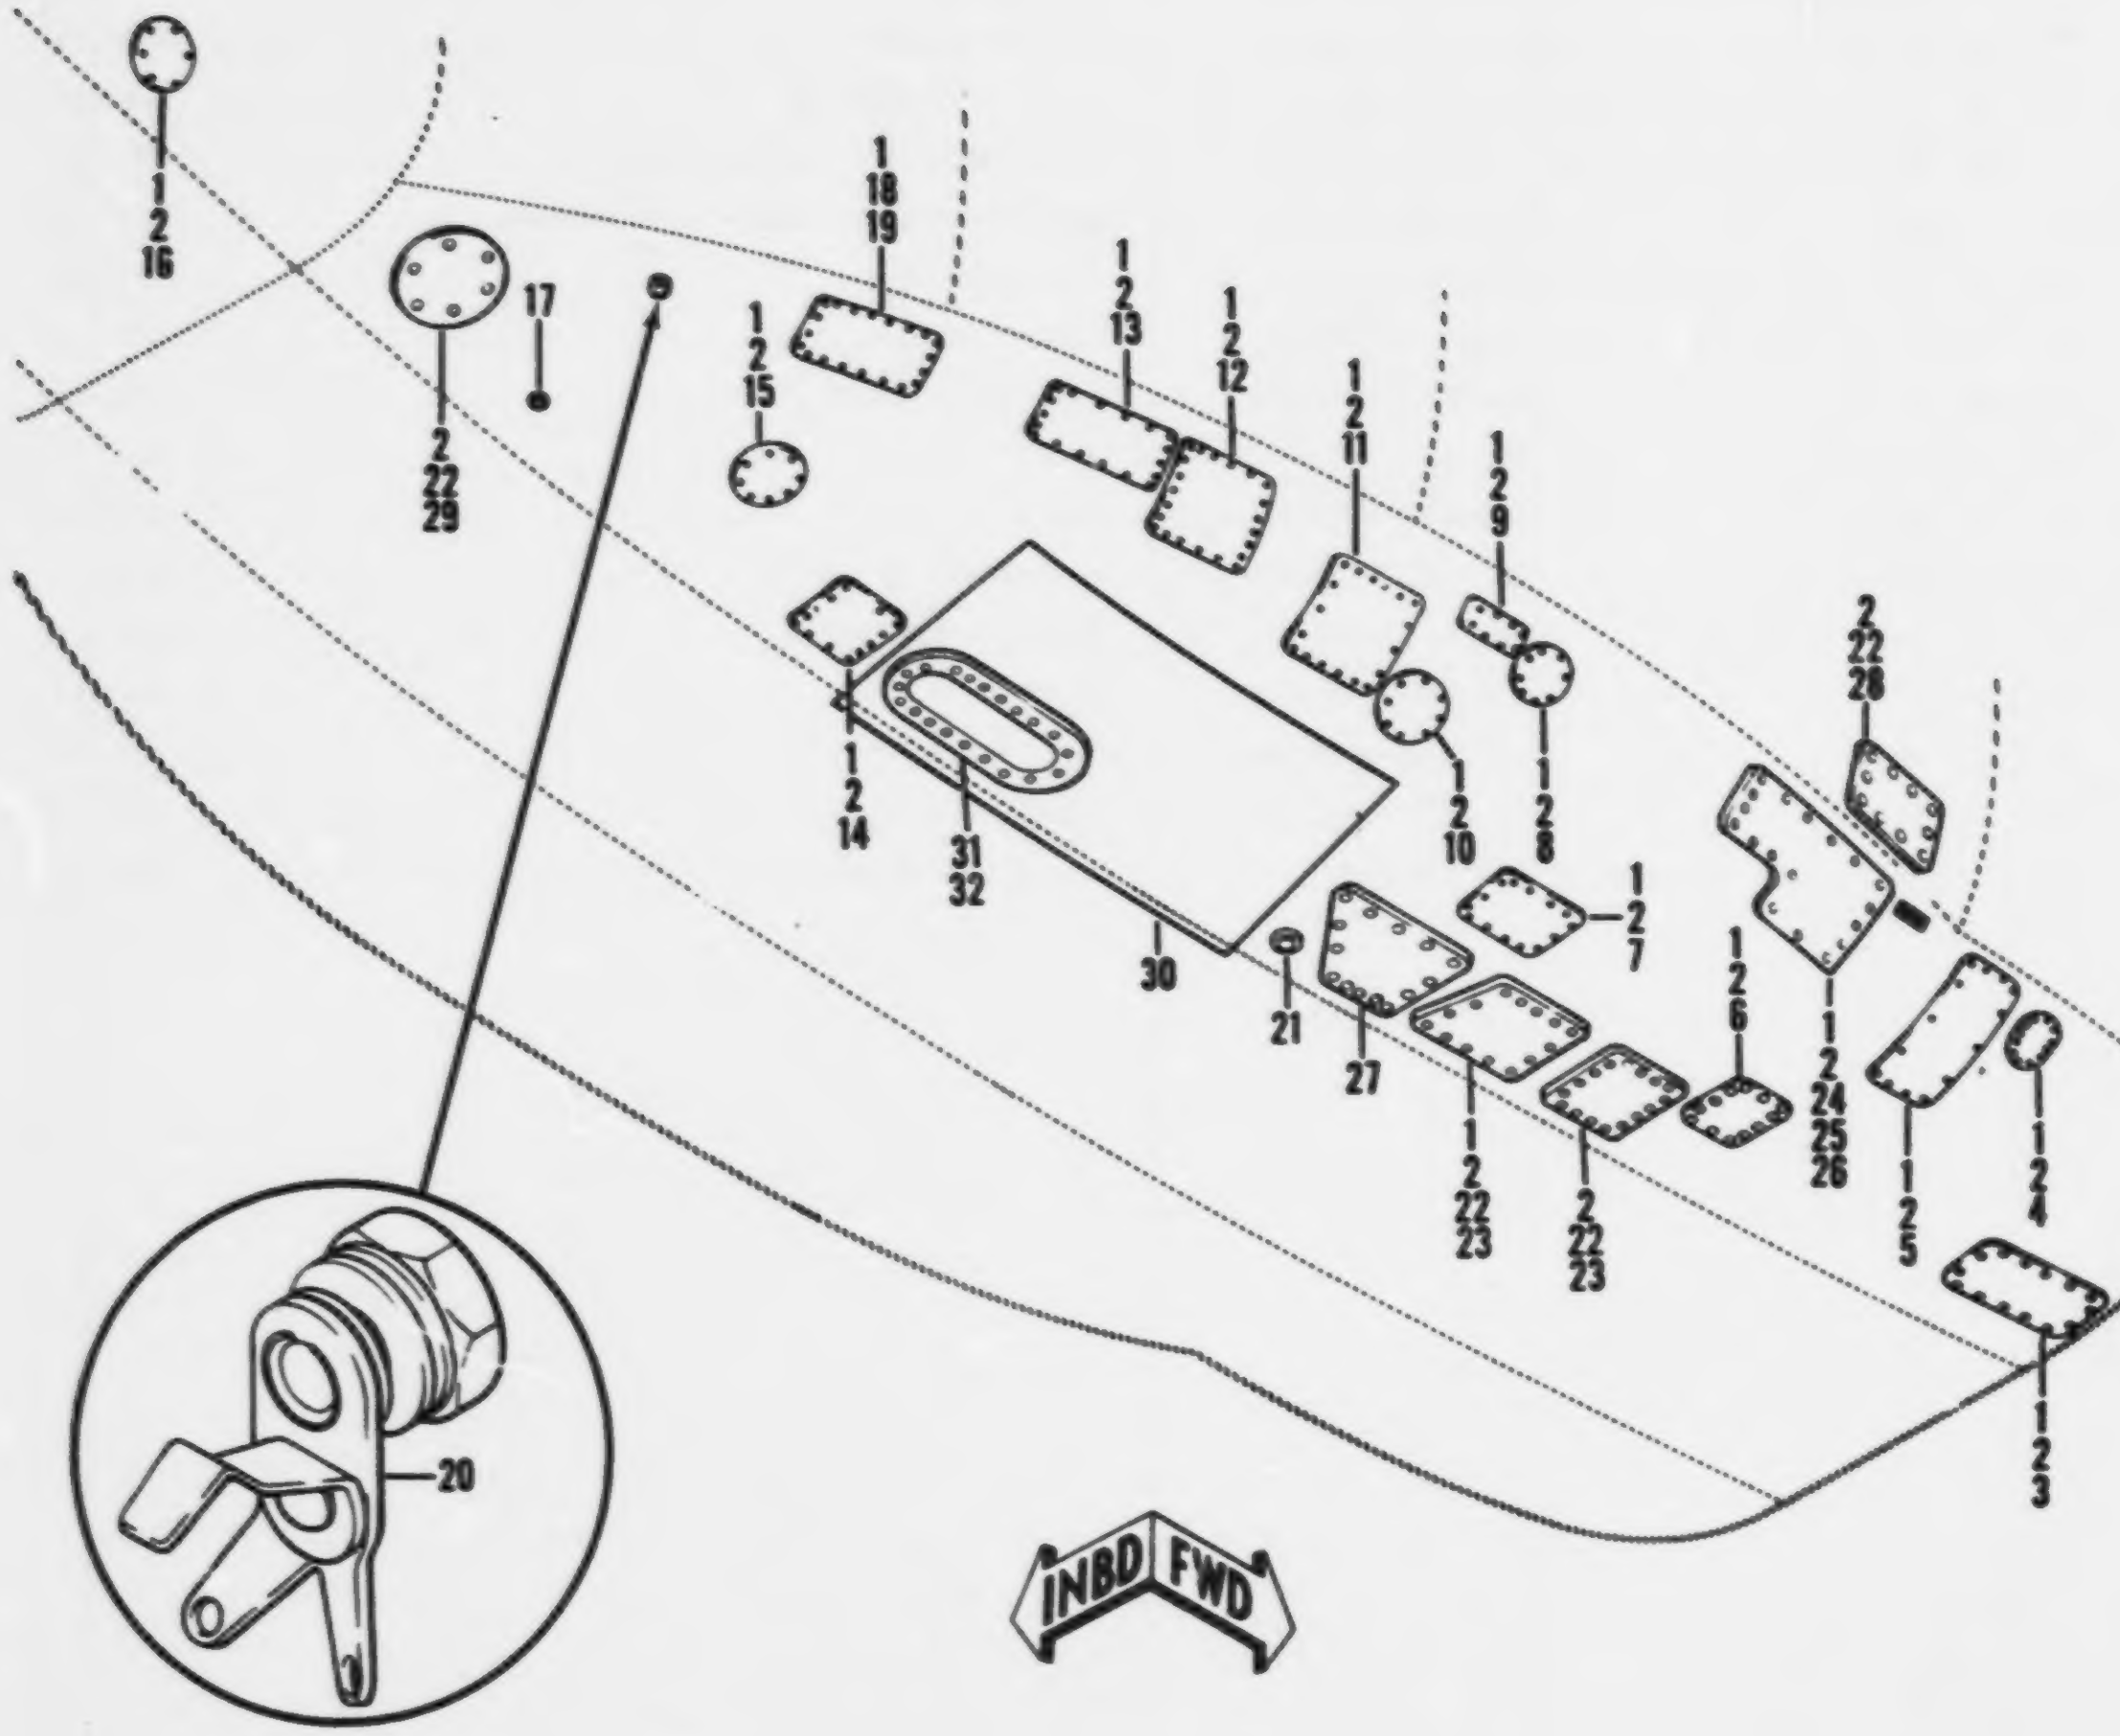
1 2 16
2 22 29
17
1 18 19
1 2 15
1 2 13
1 2 12
1 2 11
1 2 9
2 22 28
1 2 14
31 32
30
21
27
1 2 10
1 2 8
1 2 7
1 2 6
1 2 24 25 26
1 2 22 23
2 22 23
1 2 5
1 2 4
1 2 3
20
INBD
FWD

Figure 66. Fuselage Assembly, Lower Right Hand

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
66		XCFZZ		97499	205-030-006-7	FUSELAGE ASSY USBL EFF 62-2106 THRU 62-2113 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-13	FUSELAGE ASSY USBL EFF 62-12351 THRU 62-12372 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-19	FUSELAGE ASSY USBL EFF 63-8739 THRU 63-8803 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-25	FUSELAGE ASSY USBL EFF 63-8804 THRU 63-8859 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-33	FUSELAGE ASSY USBL EFF 63-12956 THRU 63-13002 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-31	FUSELAGE ASSY USBL EFF 64-13492 THRU 64-13661 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-43	FUSELAGE ASSY USBL EFF 64-13662 THRU 64-13901 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-49	FUSELAGE ASSY USBL EFF 65-9565 THRU 65-12895 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-55	FUSELAGE ASSY USBL EFF 66-746 THRU 66-16033 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-67	FUSELAGE ASSY USBL EFF 66-16034 THRU 66-17144 SEE FIG.20 FOR NHA G.16 FOR NHA...................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-85	FUSELAGE ASSY USBL EFF 67-17145 THRU 67-17312 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-97	FUSELAGE ASSY USBL EFF 67-17313 THRU 67-17777 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-109	FUSELAGE ASSY USBL EFF 67-17778 THRU 68-15324 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-129	FUSELAGE ASSEMBLY,S USBL EFF 68-15325 THRU 68-15489 SEE FIG. 20 FOR NHA.................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-137	FUSELAGE ASSY USBL EFF 68-15490 THRU 68-15778 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-141	FUSELAGE ASSY USBL EFF 68-16050 THRU 68-16342 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-147	FUSELAGE ASSY USBL EFF 68-16343 THRU 68-16625 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-031-006-1	FUSELAGE ASSY USBL EFF 69-15000 THRU 69-15291 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-031-006-13	FUSELAGE ASSY USBL EFF 69-15292 THRU 70-15932 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-031-006-19	FUSELAGE ASSY USBL EFF 70-16200 THRU 70-16518 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-031-006-31	FUSELAGE ASSY USBL EFF 71-20000 & SUBSEQUENT SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-11	.BEAM ASSY-RH U/O PN 205-030-006-7...........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-17	.BEAM ASSY-RH U/O PN 205-030-006-13..........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-23	.BEAM ASSY-RH U/O PN 205-030-006-19..........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-39	.BEAM ASSY-RH U/O PN 205-030-006-25..........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-41	.BEAM ASSY-RH U/O PN 205-030-006-33..........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-29	.BEAM ASSY-RH U/O PN 205-030-006-31..........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-47	.BEAM ASSY-RH U/O PN 205-030-006-43..........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-53	.BEAM ASSY-RH U/O PN 205-030-006-49..........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-59	.BEAM ASSY-RH U/O PN 205-030-006-55..........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-83	.BEAM ASSY-RH U/O PN 205-030-006-67..........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-006-89	.BEAM ASSY-RH U/O PN 205-030-006-85,-97, & -109	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHE,UHH,UHV,UHX		
66		XCFZZ		97499	205-030-006-131	.BEAM ASSY-RH U/O PN 205-030-006-129,-137, -141,& -147 ....UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-031-006-5	.BEAM ASSY-RH U/O PN 205-031-006-1...........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-031-006-17	.BEAM ASSY-RH U/O PN 205-031-006-13..........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-031-006-23	.BEAM ASSEMBLY-RH U/O PN 205-031-006-19......UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-031-006-33	.BEAM ASSY-RH U/O PN 205-031-006-31..........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-007-7	..SKIN INSTL-RH U/O PN 205-030-006-11........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-007-17	..SKIN INSTL-RH U/O PN 205-030-006-17........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-007-21	..SKIN INSTL-RH U/O PN 205-030-006-23,-39, & -41 ....UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-007-151	..SKIN INSTL-RH U/O PN 205-030-006-29........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-007-363	..SKIN INSTL-RH U/O PN 205-030-006-47........UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-007-367	..SKIN INSTL-RH U/O PN 205-030-006-53,-59, -83,-89,-131,& 205-031-006-5..................................UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-030-007-465	..SKIN INSTL-RH U/O PN 205-031-006-17,-23&-33 ....UHE,UHH,UHV,UHX	EA	1
66	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE.............................UHE,UHH,UHV,UHX	EA	V
66	2	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL.......................UHE,UHH,UHV,UHX	EA	V
66	3	MFOZZ	1560-00-991-0348	97499	205-030-007-98	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	4	MFOZZ	1560-00-991-0334	97499	205-030-007-132	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	5	MFOZZ	1560-00-991-0336	97499	205-030-007-134	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	6	MFOZZ	1560-00-991-0345	97499	205-030-007-272	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	7	MFOZZ	1560-00-991-0341	97499	205-030-007-233	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	8	PAOZZ	1560-00-987-5131	97499	205-030-007-297	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	9	PAOZZ	1560-00-987-5129	97499	205-030-007-295	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	10	PAOZZ	1560-00-987-5135	97499	205-030-007-299	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	11	PAOZZ	1560-00-987-5128	97499	205-030-007-266	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	12	PAOZZ	1560-00-987-5126	97499	205-030-007-262	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	13	PAOZZ	1560-00-987-5124	97499	205-030-007-256	...DOOR,SKIN INSTALLAT U/O PN 205-030-007-7,-17, & -21 ....UHE,UHH,UHV,UHX	EA	1
66	14	MFOZZ	1560-00-991-0342	97499	205-030-007-245	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	15	PAOZZ	1560-00-987-5122	97499	205-030-007-229	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	16	MFOZZ	1560-00-991-0337	97499	205-030-007-157	...COVER,SKIN INSTALLA.......................UHE,UHH,UHV,UHX	EA	1
66	17	PAOZZ	5325-00-281-1557	96906	MS35489-17	...GROMMET,NONMETALLIC.......................UHE,UHH,UHV,UHX	EA	1
66	18	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	6
66	19	MFOZZ	1560-00-991-0340	97499	205-030-007-180	...DOOR,SKIN INSTALLAT.......................UHE,UHH,UHV,UHX	EA	1
66	20	PAOZZ	5935-00-432-9340	96906	MS90298-2	...CONNECTOR,RECEPTACL.......................UHE,UHH,UHV,UHX	EA	1
66	21	PAOZZ	5325-00-543-2902	96906	MS35489-134	...GROMMET,NONMETALLIC.......................UHE,UHH,UHV,UHX	EA	1
66	22	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	...SCREW,MACHINE.............................UHE,UHH,UHV,UHX	EA	V
66	23	PAOZZ	1560-00-570-5310	97499	205-030-007-325	...DOOR,SKIN INSTALLAT U/O PN 205-030-007-21,-151, -363,& -367.......................................UHE,UHH,UHV,UHX	EA	1
66	24	PAOZZ	5310-00-734-1850	96906	MS21071L3	...NUT,SELF-LOCKING,PL.......................UHE,UHH,UHV,UHX	EA	5
66	25	MFOZZ	1560-00-678-8573	97499	205-030-007-337	...DOOR U/O PN 205-030-007-21,-151, -363,& -367 ....UHE,UHH,UHV,UHX	EA	1
66	26	PAOZZ	1010-00-113-5759	97499	205-031-210-9	...CHUTE,EJECTION............................UHE,UHH,UHV,UHX	EA	1
66	27	MFOZZ	1560-00-678-8578	97499	205-030-007-341	...DOOR......................................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
66	28	MFOZZ	1560-00-678-8569	97499	205-030-007-231	...DOOR......................................UHE,UHH,UHV,UHX	EA	1
66	29	MFOZZ	1560-00-678-8565	97499	205-030-007-155	...COVER.....................................UHE,UHH,UHV,UHX	EA	1
66		XDDZZ	1560-00-H34-2625	97499	205-031-282-2	...PANEL INSTL-RH USBL EFF 62-2106 THRU 62-2113 ....UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-031-282-34	...PANEL INSTL-RH USBL EFF 62-12351 THRU 69-15291 ....UHE,UHH,UHV,UHX	EA	1
66		XCFZZ		97499	205-031-282-68	...PANEL INSTL-RH USBL EFF 69-15292 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
66	30	XDDZZ	1560-00-938-8356	97499	205-031-282-36	....PANEL ASSEMBLY-RH U/O PN 205-031-282-2 & -34 ....UHE,UHH,UHV,UHX	EA	1
66	30	PAFFF	1560-00-176-1091	97499	205-031-282-70	....PANEL ASSEMBLY, LOWER-RH..................UHE,UHH,UHV,UHX	EA	1
66	31	PADZZ	5305-00-912-7307	96906	MS27039-1-06	....SCREW,MACHINE.............................UHE,UHH,UHV,UHX	EA	16
66	32	XDDZZ	1560-00-907-2254	97499	205-031-282-31	....DOOR,FUEL CELL U/O PN 205-031-282-2 & -34 ....UHE,UHH,UHV,UHX	EA	1
66	32	PADZZ	1560-00-177-4083	97499	205-031-282-65	....COVER,ACCESS U/O PN 205-031-282-68.......UHE,UHH,UHV,UHX	EA	1

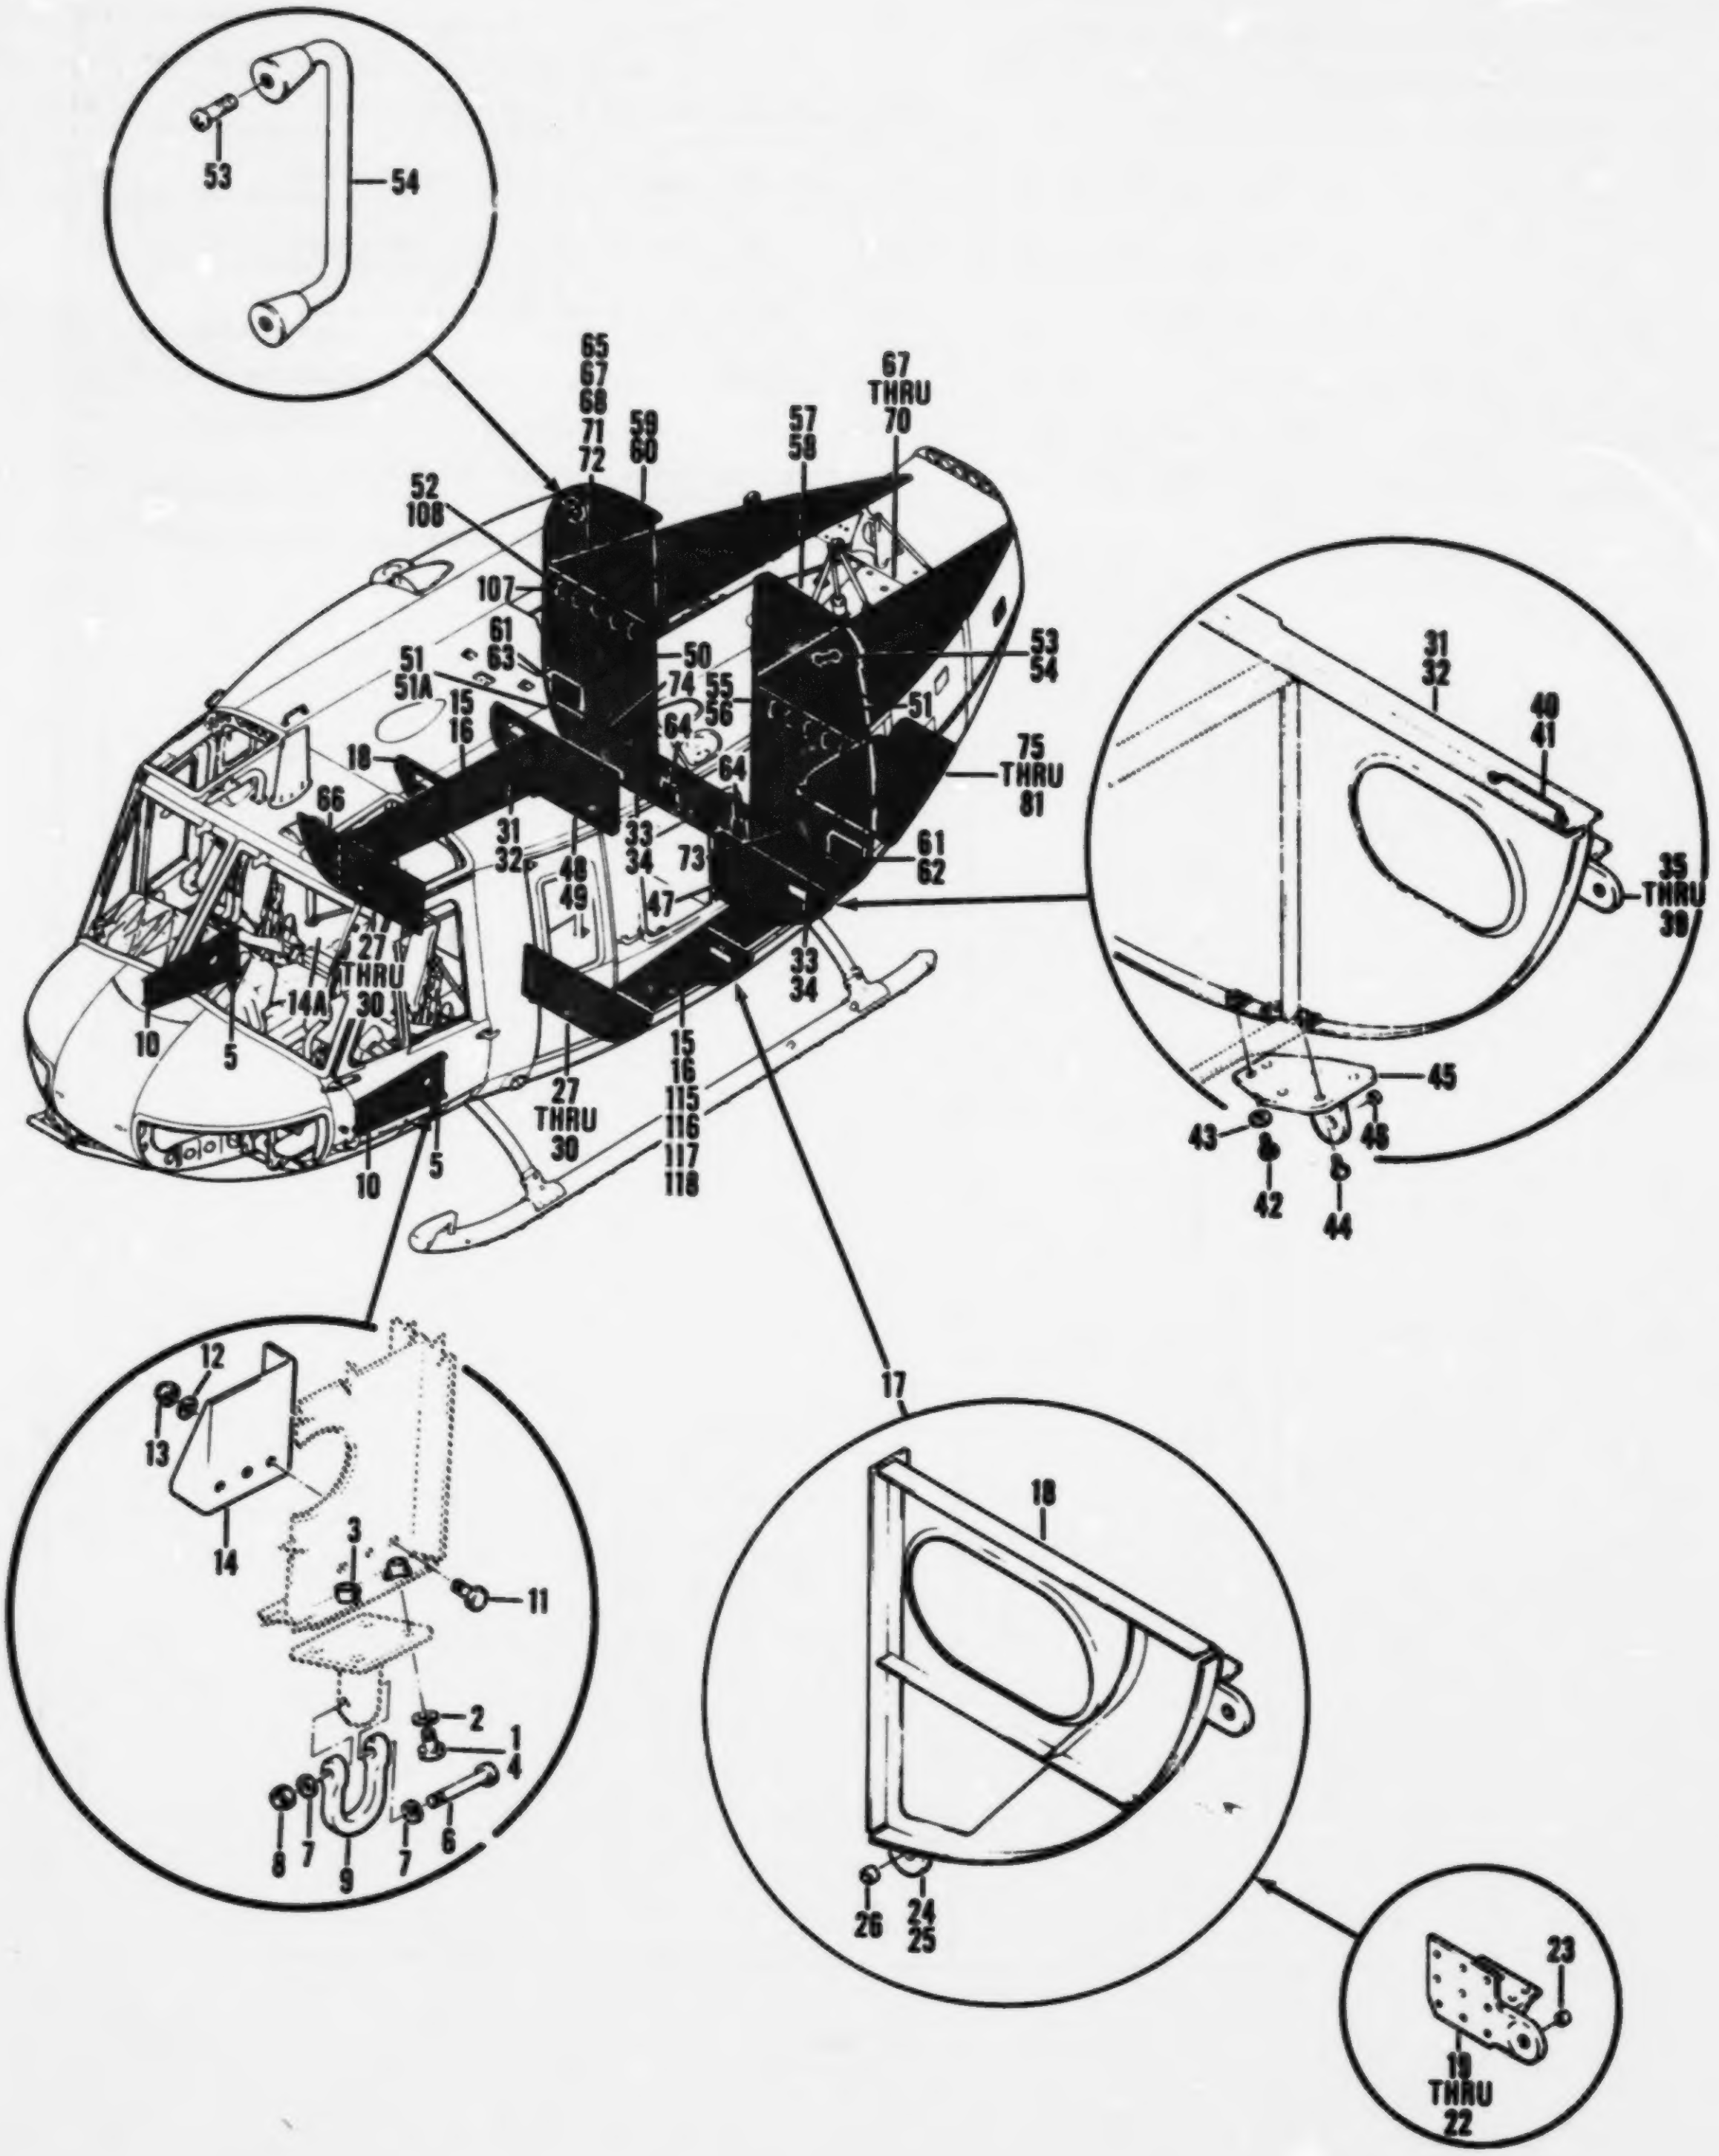
53
54
65
67
68
71
72
59
60
57
58
67
THRU
70
52
108
107
61
63
51
51A
15
16
18
66
50
74
55
56
64
64
53
54
51
75
THRU
81
31
32
33
34
73
48
49
47
61
62
27
THRU
30
14A
10
5
33
34
15
16
115
116
117
118
27
THRU
30
10
5
31
32
40
41
35
THRU
39
45
43
46
42
44
17
12
13
14
3
11
2
1
4
8
7
9
7
6
18
26
24
25
23
19
THRU
22

Figure 67. Fuselage Assembly, Structure AFT Section
(Sheet 1 of 3)

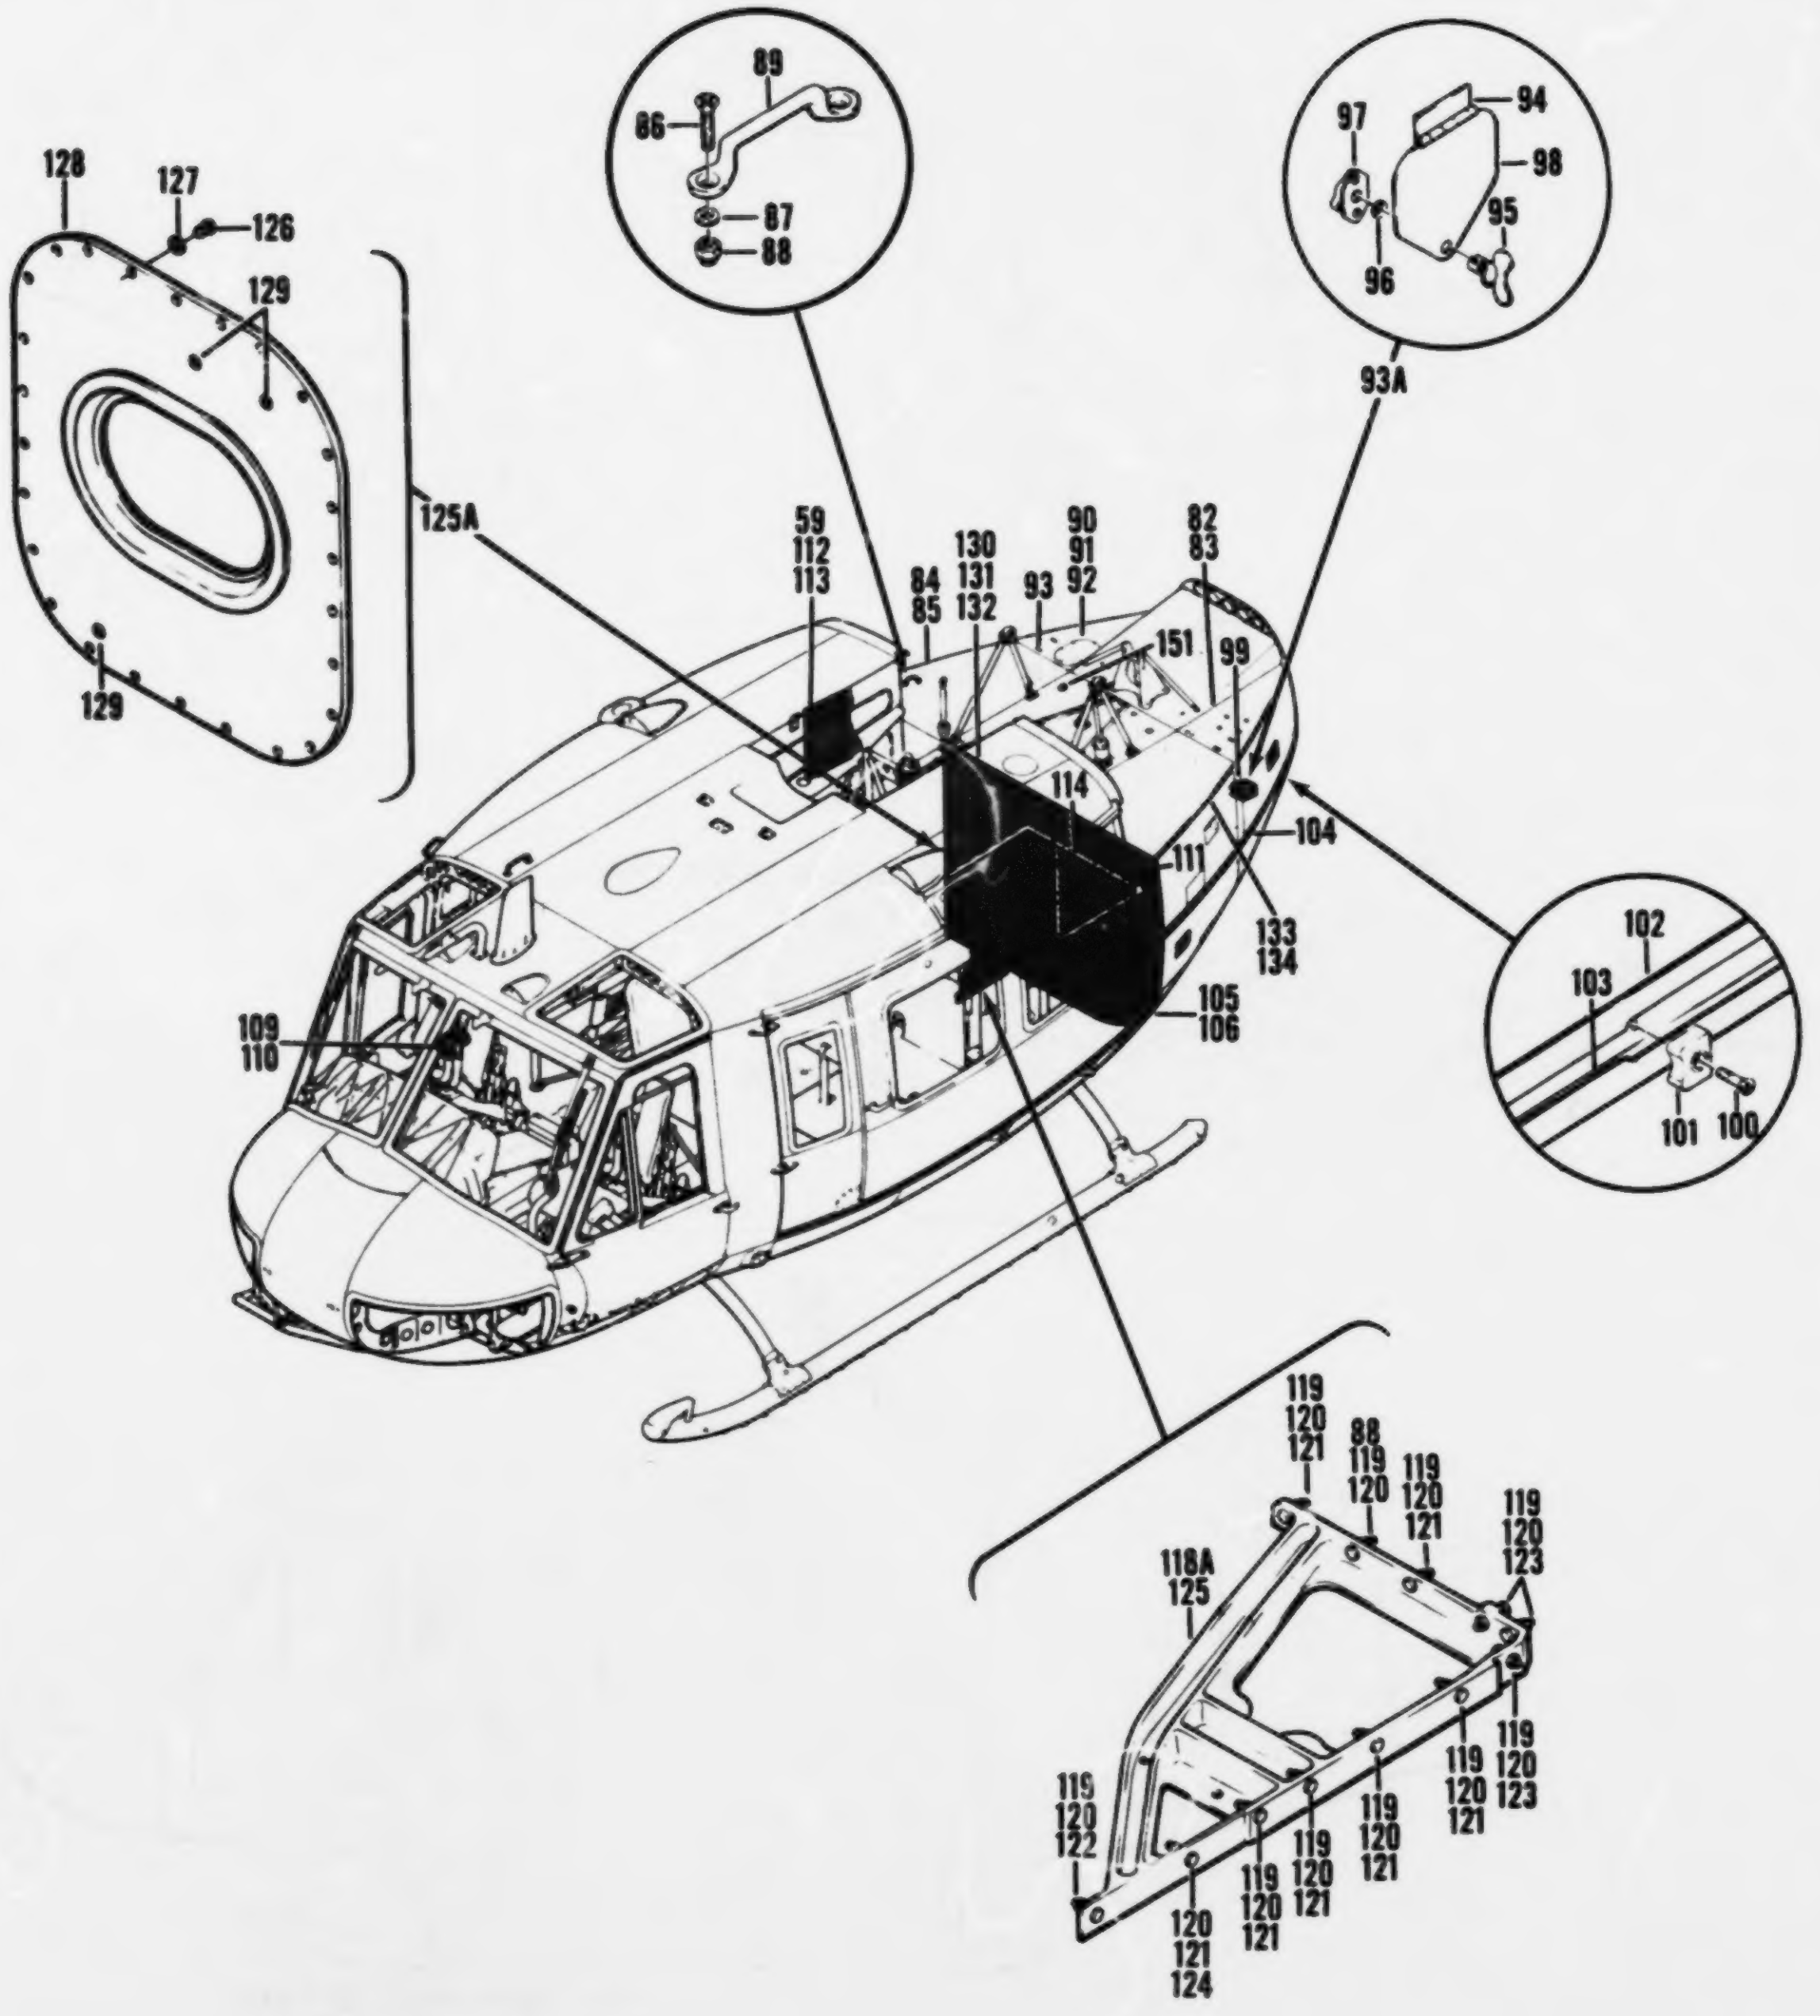
128
127
126
129
129
125A
89
86
87
88
97
94
98
95
96
93A
59
112
113
84
85
130
131
132
93
90
91
92
82
83
151
99
114
111
104
133
134
105
106
109
110
102
103
101
100
119
120
121
88
119
120
119
120
121
119
120
123
118A
125
119
120
122
120
121
124
119
120
121
119
120
121
119
120
121
119
120
121
119
120
123

Figure 67. Fuselage Assembly, Structure AFT Section
(Sheet 2 of 3)

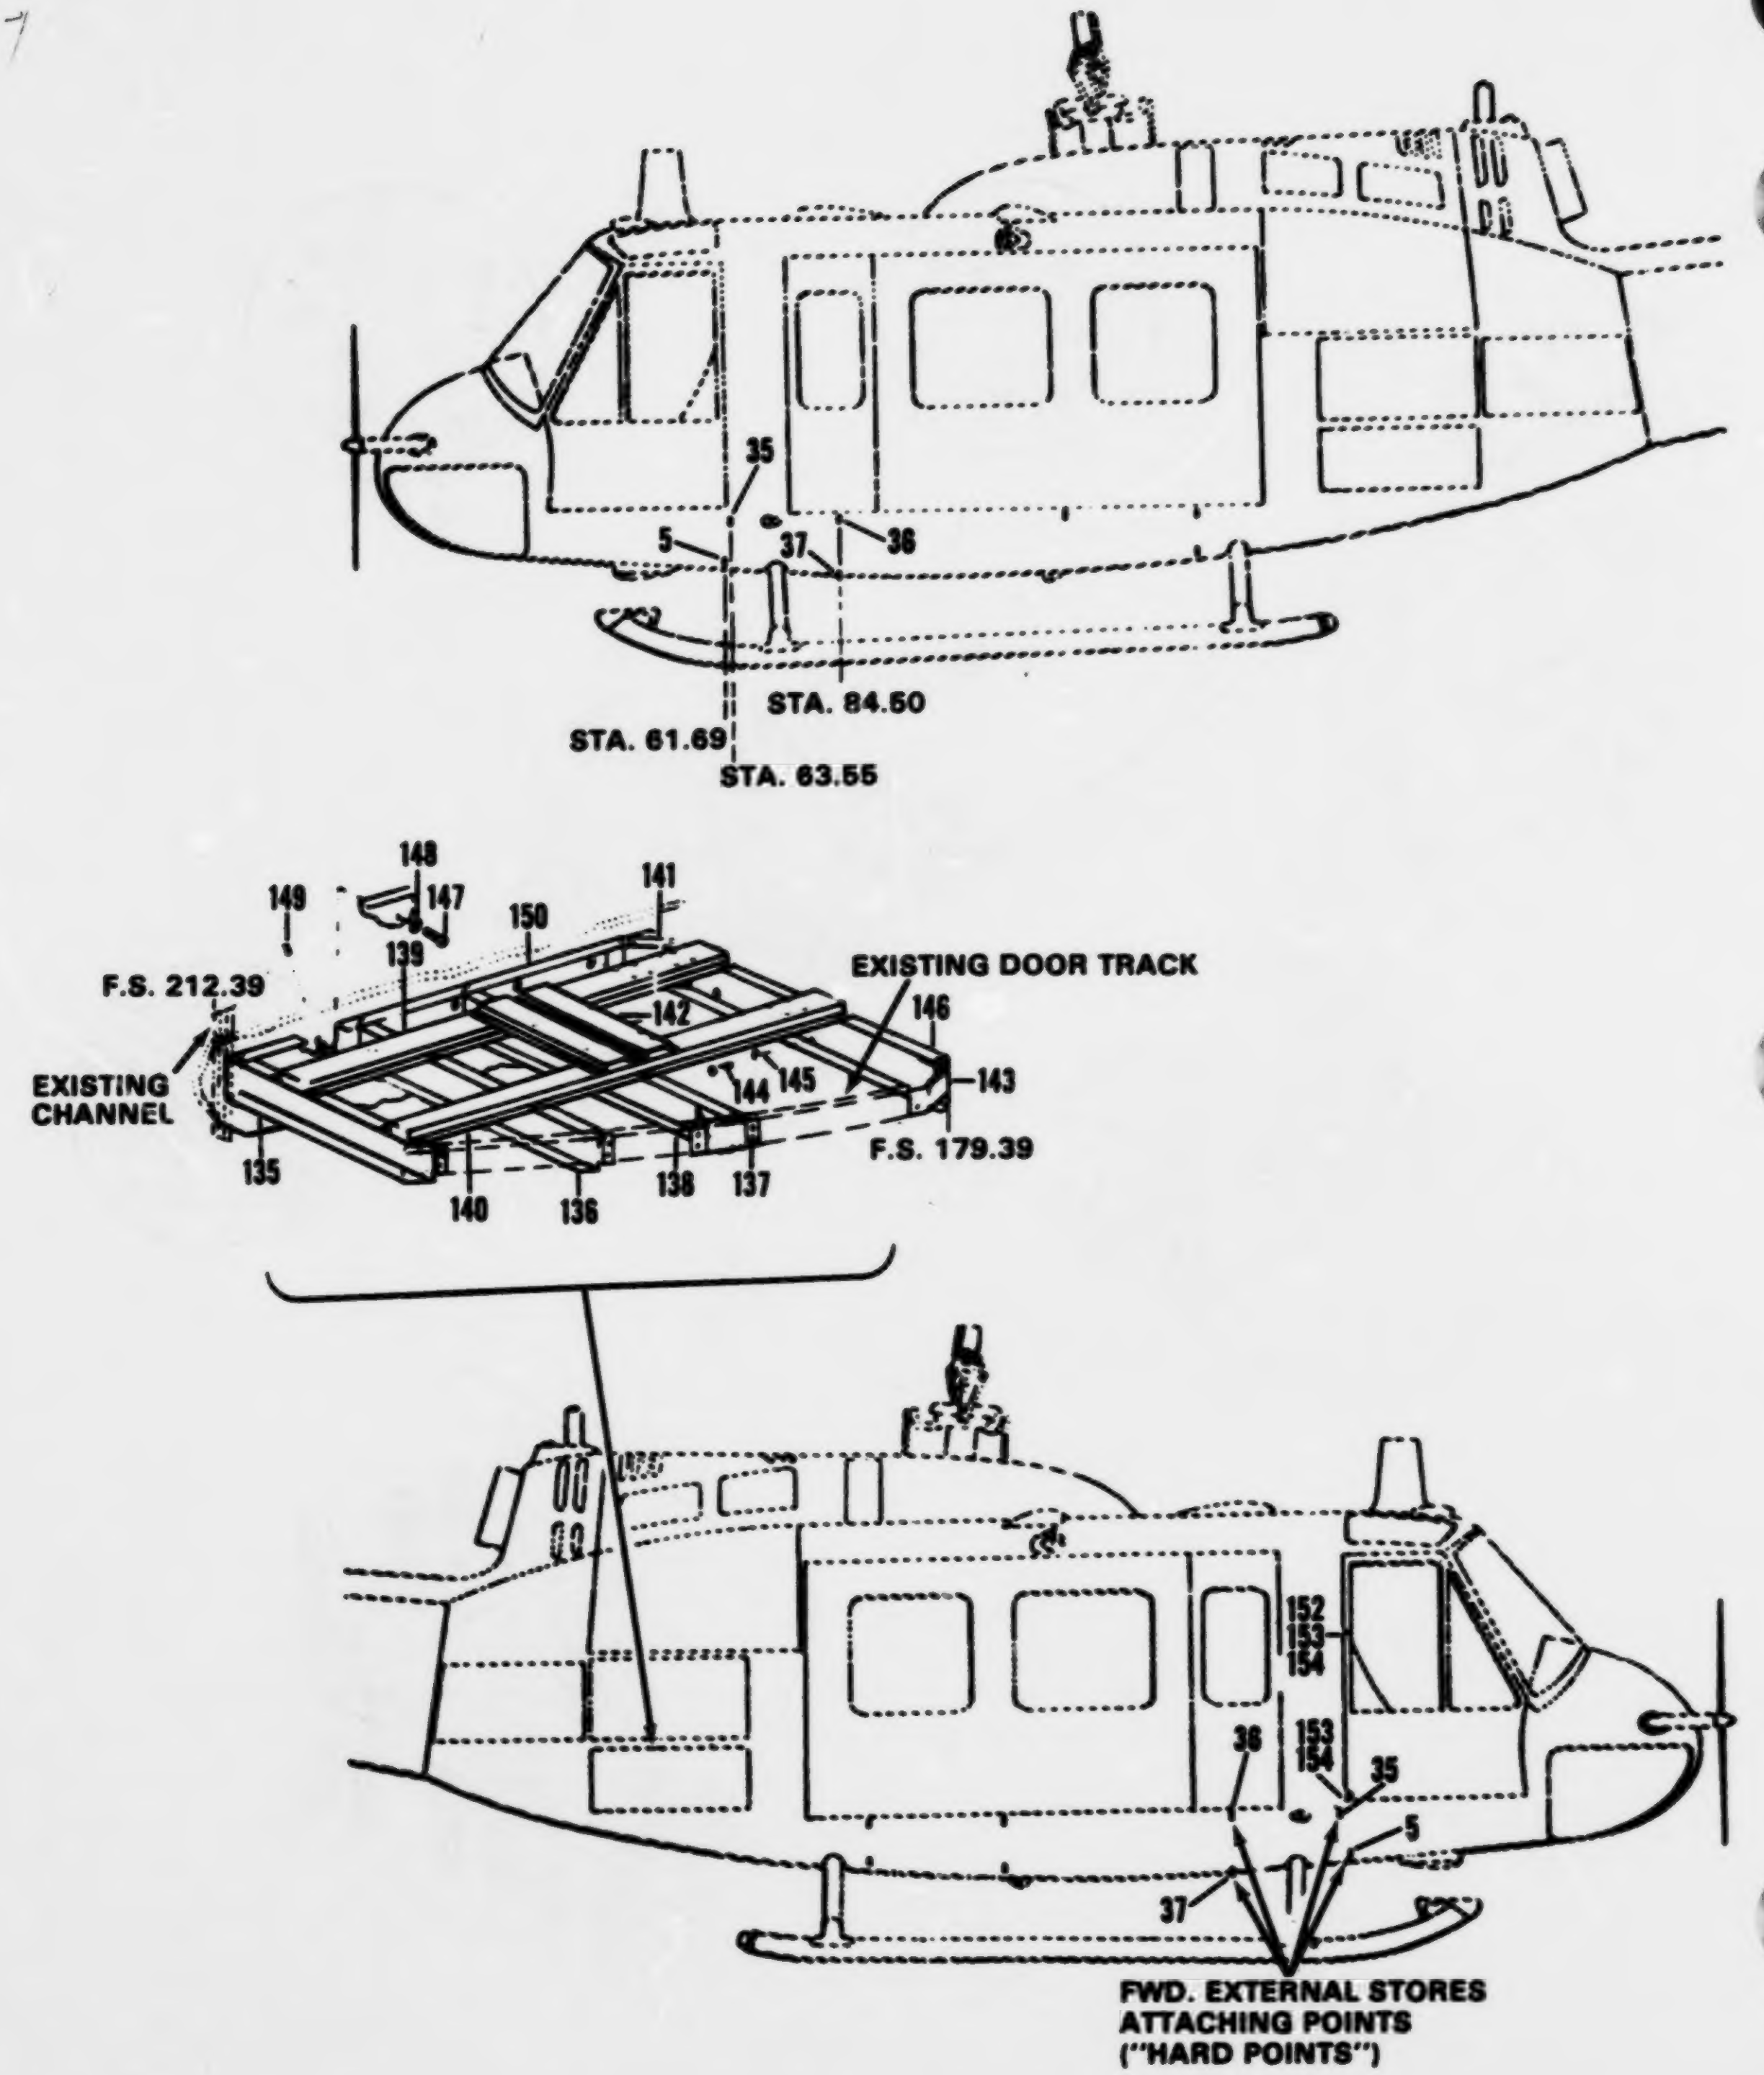
35
5
37
36
STA. 84.50
STA. 61.69
STA. 63.55
148
149
147
141
150
139
F.S. 212.39
EXISTING DOOR TRACK
142
146
143
144
145
EXISTING CHANNEL
135
140
136
138
137
F.S. 179.39
152
153
154
36
153
154
35
5
37
FWD. EXTERNAL STORES
ATTACHING POINTS
("HARD POINTS")

Figure 67. Fuselage Assembly, Structure AFT Section
(Sheet 3 of 3)

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
67		XCFZZ		97499	205-030-006-7	FUSELAGE ASSY USBL EFF 62-2106 THRU 62-2113 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-13	FUSELAGE ASSY USBL EFF 62-12351 THRU 62-12372 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-19	FUSELAGE ASSY USBL EFF 63-8739 THRU 63-8803 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-25	FUSELAGE ASSY USBL EFF 63-8804 THRU 63-8859 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-33	FUSELAGE ASSY USBL EFF 63-12956 THRU 63-13002 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-31	FUSELAGE ASSY USBL EFF 64-13492 THRU 64-13661 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-43	FUSELAGE ASSY USBL EFF 64-13662 THRU 64-13901 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-49	FUSELAGE ASSY USBL EFF 65-9565 THRU 65-12895 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-55	FUSELAGE ASSY USBL EFF 66-746 THRU 66-16033 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-67	FUSELAGE ASSY USBL EFF 66-16034 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.20 FOR NHA....................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-85	FUSELAGE ASSY USBL EFF 67-17145 THRU 67-17312 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-97	FUSELAGE ASSY USBL EFF 67-17313 THRU 67-17777 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-109	FUSELAGE ASSY USBL EFF 67-17778 THRU 68-15324 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-129	FUSELAGE ASSY USBL EFF 68-15325 THRU 68-15489 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-137	FUSELAGE ASSY USBL EFF 68-15490 THRU 68-15778 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-141	FUSELAGE ASSY USBL EFF 68-16050 THRU 68-16342 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-147	FUSELAGE ASSY USBLE EFF 68-16343 THRU 68-16625 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-006-1	FUSELAGE ASSY USBLE EFF 69-15000 THRU 69-15291 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-006-13	FUSELAGE ASSY USBLE EFF 69-15292 THRU 70-15932 SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-006-19	FUSELAGE ASSEMBLY,S USBLE EFF 70-16200 THRU 70-16518 SEE FIG.20 FOR NHA.................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-006-31	FUSELAGE ASSY USBLE EFF 71-20000 & SUBSEQUENT SEE FIG.20 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-9	.BEAM ASSY-LH U/O PN 205-030-006-7...........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-15	.BEAM ASSY-LH U/O PN 205-030-006-13..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-21	.BEAM ASSY-LH U/O PN 205-030-006-19..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-37	.BEAM ASSY-LH U/O PN 205-030-006-25..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-35	.BEAM ASSY-LH U/O PN 205-030-006-33..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-27	.BEAM ASSY-LH U/O PN 205-030-006-31..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-45	.BEAM ASSY-LH U/O PN 205-030-006-43..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-51	.BEAM ASSY-LH U/O PN 204-030-006-49..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-57	.BEAM ASSY-LH U/O PN 205-030-006-55..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-81	.BEAM ASSY-LH U/O PN 205-030-006-67..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-87	.BEAM ASSY-LH U/O PN 205-030-006-85..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
67		XCFZZ		97499	205-030-006-101	.BEAM ASSY-LH U/O PN 205-030-006-97..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-111	.BEAM ASSY-LH U/O PN 205-030-006-109,-129 & -137 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-143	.BEAM ASSY-LH U/O PN 205-030-006-141& -147 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-006-3	.BEAM ASSY-LH U/O PN 205-031-006-1..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-006-15	.BEAM ASSY-LH U/O PN 205-031-006-13..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-006-21	.BEAM ASSY-LH U/O PN 205-031-006-19..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-11	.BEAM ASSY-RH U/O PN 205-031-006-7..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-17	.BEAM ASSY-RH U/O PN 205-030-006-13..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-23	.BEAM ASSEMBLY-RH U/O PN 205-030-006-19......UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-39	.BEAM ASSEMBLY-RH U/O PN 205-030-006-25......UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-41	.BEAM ASSY-RH U/O PN 205-030-006-33..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-29	.BEAM ASSY-RH U/O PN 205-030-006-31..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-47	.BEAM ASSY-RH U/O 205-030-006-43............UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-53	.BEAM ASSY-RH U/O PN 205-030-006-49..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-59	.BEAM ASSY-RH U/O PN 205-030-006-55..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-83	.BEAM ASSY-RH U/O PN 205-030-006-67..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-89	.BEAM ASSY-RH U/O PN 205-030-006-85,-97, & -109 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-006-131	.BEAM ASSY-RH U/O PN 205-030-006-129,-137, -141,&-147 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-006-5	.BEAM ASSY-RH U/O PN 205-031-006-1..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-006-17	.BEAM ASSY-RH U/O PN 205-031-006-13..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-006-23	.BEAM ASSEMBLY-RH U/O PN 205-031-006-19......UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-006-33	.BEAM ASSEMBLY-RH U/O PN 205-031-006-31......UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-266-1	..FITTING INSTL,JACK AND MOORING-LH U/O PN 205-030-006-9,&-15..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-213-1	..FITTING INSTL,JACK AND MOORING-LH U/O PN 205-030-006-21,-27,-35,-37,-45,-57,-81,-87,-101,-111,-143 & 205-031-006-3,-15,-21 & -51..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-266-2	..FITTING INSTL,JACK AND MOORING-RH U/O PN 205-030-006-11&-17..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-213-2	..FITTING INSTL,JACK AND MOORING-RH U/O PN 205-030-006-23,-29,-39,-41,-47,-53,-59,-83,-89,-131 & 205-031-006-5,-17,-23 & -33..........UHE,UHH,UHV,UHX	EA	1
67	1	PAOZZ	5306-00-182-1958	88044	AN4H10A	...BOLT,MACHINE U/O PN 205-031-266-1 & -2....UHE,UHH,UHV,UHX	EA	4
67	2	PAOZZ	5310-00-515-7449	88044	AN960C416L	...WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
67	3	PAOZZ	5310-00-761-6830	96906	MS21073L4	...NUT,SELF-LOCKING,PL U/O PN 205-031-213-1 & -2 ....UHE,UHH,UHV,UHX	EA	4
67	4	XDOZZ		80205	NAS464-4A10	...BOLT,MACHINE U/O PN 205-031-213-1 & -2....UHE,UHH,UHV,UHX	EA	4
67	5	PAOOO	1730-00-408-0437	97499	205-031-213-11	...ADAPTER,AIRCRAFT JA -LH..........UHE,UHH,UHV,UHX	EA	1
67	5	PBOOO	1730-00-408-0436	97499	205-031-213-12	...ADAPTER,AIRCRAFT JA -RH..........UHE,UHH,UHV,UHX	EA	1
67	6	PAOZZ	5306-00-151-2621	88044	AN5-22A	....BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1
67	7	PAOZZ	5310-00-187-2399	88044	AN960PD516	....WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
67	8	PAOZZ	5310-00-807-1468	96906	MS21042-4	....NUT,SELF-LOCKING,EX WASHER HEXAGON.......UHE,UHH,UHV,UHX	EA	1
67	8	PAOZZ	5310-00-807-1476	96906	MS21042L5	....NUT,SELF-LOCKING,EX WASHER HEXAGON.......UHE,UHH,UHV,UHX	EA	1
67	9	PAOZZ	4030-00-977-6940	97499	204-031-393-1	....SHACKLE..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
67		XCFZZ		97499	205-030-740-7	..SUPPORT INSTL,-LH U/O PN 205-030-006-9 & -15 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-740-11	..SUPPORT INSTL,-LH U/O PN 205-030-006-21, -27,-35,-37,-45,-51,-57, -81,-87,-101,-111,-143, 205-031-006-3,-15,& -21 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-741-7	..SUPPORT INSTL,-RH U/O PN 205-030-006-11 & -17 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-741-11	..SUPPORT INSTL,-RH U/O PN 205-030-006-23, -29,-39,-41,-47,-53,-59, -83,-89,-131, 205-031-006-5,-17,-23&-33 ....UHE,UHH,UHV,UHX	EA	1
67	10	PBDDD	1560-00-252-2388	97499	205-030-740-13	...SUPPORT ASSY,FUSELA -LH U/O PN 205-030-740-11 ....UHE,UHH,UHV,UHX	EA	1
67	10	PBDDD	1560-00-176-1118	97499	205-030-741-13	...SUPPORT ASSY,TRACK -RH U/O PN 205-030-741-11 ....UHE,UHH,UHV,UHX	EA	1
67	11	PAOZZ	5306-00-282-4310	88044	AN3H6	....BOLT,MACHINE..............................UHE,UHH,UHV,UHX	EA	3
67	11	PAOZZ	5306-00-292-8252	88044	AN4H7A	....BOLT,MACHINE U/O PN 205-030-740-13 & 205-030-741-13 ....UHE,UHH,UHV,UHX	EA	4
67	12	PAOZZ	5310-00-167-0818	88044	AN960-10	....WASHER,FLAT..............................UHE,UHH,UHV,UHX	EA	3
67	12	PAOZZ	5310-00-141-1795	88044	AN960-416	....WASHER,FLAT U/O PN 205-030-740-13 & 205-030-741-13 ....UHE,UHH,UHV,UHX	EA	4
67	13	PAOZZ	5310-00-807-1474	96906	MS21042L3	....NUT,SELF-LOCKING,EX WASHER,HEXAGON.......UHE,UHH,UHV,UHX	EA	3
67	13	PAOZZ	5310-00-807-1468	96906	MS21042-4	....NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 205-030-740-13 & 205-030-741-13..............................UHE,UHH,UHV,UHX	EA	4
67	14	XBOZZ	1560-00-H25-5419	97499	205-031-721-1	....FITTING-LH..............................UHE,UHH,UHV,UHX	EA	1
67	14	PBOZZ	1560-00-228-1912	97499	205-031-248-3	....FITTING,SUPPORT,FUS -LH U/O PN 204-030-740-13 ....UHE,UHH,UHV,UHX	EA	1
67	14	PAOZZ	1560-00-082-0503	97499	205-031-247-1	....FITTING,SUPPORT,FUS U/O PN 205-030-740-13 ....UHE,UHH,UHV,UHX	EA	1
67	14	XBOZZ	1560-00-H25-5420	97499	205-031-721-2	....FITTING-RH..............................UHE,UHH,UHV,UHX	EA	1
67	14	PBOZZ	1560-00-781-9082	97499	205-031-248-2	....FITTING,JACK,INBOAR -RH U/O PN 205-030-741-13 ....UHE,UHH,UHV,UHX	EA	1
67	14	PAOZZ	1560-00-484-1043	97499	205-031-247-2	....FITTING,SUPPORT,FUS U/O PN 205-030-741-13 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-702-55	..BULKHEAD INSTL..............................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-702-57	...BULKHEAD ASSY..............................UHE,UHH,UHV,UHX	EA	1
67	14A	PBOZZ	1560-00-124-8056	97499	205-030-702-59	....WEB,AIRFRAME..............................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-321-1	..FLOOR INSTL-LH U/O PN 205-030-006-9 SEE FIG. 70 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-321-3	..FLOOR INSTL-LH U/O PN 205-030-006-15 SEE FIG.70 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-321-5	..FLOOR INSTL-LH U/O PN 205-030-006-21 & -37 SEE FIG.70 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-321-15	..FLOOR INSTL-LH U/O PN 205-030-006-35 SEE FIG.70 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-321-7	..FLOOR INSTL-LH U/O PN 205-030-006-27 SEE FIG.70 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-321-17	..FLOOR INSTL-LH U/O PN 205-030-006-45 SEE FIG.70 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-321-19	..FLOOR INSTL-LH U/O PN 205-030-006-51 SEE FIG.70 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-321-31	..FLOOR INSTL-LH U/O PN 205-030-006-87,-101,-111,143,205-031-006-3,-15,& -21 SEE FIG.70 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-320-1	..FLOOR INSTL-RH U/O PN 205-030-006-11 SEE FIG.70 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
67		XCFZZ		97499	205-031-320-3	..FLOOR INSTL-RH U/O PN 205-030-006-17 SEE FIG.70 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-320-5	..FLOOR INSTL-RH U/O PN 205-030-006-23&-39 SEE FIG 70 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-320-11	..FLOOR INSTL-RH U/O PN 205-030-006-41 SEE FIG.70 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-320-7	..FLOOR INSTL-RH U/O PN 205-030-006-29 SEE FIG.70 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-320-13	..FLOOR INSTL-RH U/O PN 205-030-006-47 SEE FIG.70 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-320-15	..FLOOR INSTL-RH U/O PN 205-030-006-53,-59,& -83 SEE FIG.70 FOR BREAKDOWN..................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-320-19	..FLOOR INSTL-RH U/O PN 205-030-006-89,-131,205-031-006-5,-17,-23,& -33 SEE FIG.70 FOR BREAKDOWN.........UHE,UHH,UHV,UHX	EA	1
67	15	PADDD	1560-00-106-5833	97499	205-030-209-19	..PANEL,INTERCOSTAL,F -LH....................UHE,UHH,UHV,UHX	EA	1
67	15	PADDD	1560-00-106-5834	97499	205-030-209-20	..PANEL,INTERCOSTAL,F -RH....................UHE,UHH,UHV,UHX	EA	1
67	16	PADZZ	1560-00-426-1356	97499	205-030-209-81	..SKIN,AIRCRAFT U/W PN 205-030-209-19........UHE,UHH,UHV,UHX	EA	1
67	16	PADZZ	1560-00-426-1355	97499	205-030-209-82	..SKIN,AIRCRAFT U/W PN 209-030-209-20........UHE,UHH,UHV,UHX	EA	1
67	17	XCFZZ		97499	205-030-204-5	..INTERCOSTAL INSTL -LH U/O PN 205-030-006-9 ....UHE,UHH,UHV,UHX	EA	1
67	17	XCFZZ		97499	205-030-204-7	..INTERCOSTAL INSTL -LH U/O PN 205-030-006-15,-21, -27,-35,-37,-45,-51,-57, -81,-87,-101,-111,-143, 205-031-006-3,-15,& -21..................................UHE,UHH,UHV,UHX	EA	1
67	17	XCFZZ		97499	205-030-204-6	..INTERCOSTAL INSTL RH U/O PN 205-030-006-11 ....UHE,UHH,UHV,UHX	EA	1
67	17	XCFZZ		97499	205-030-204-8	..INTERCOSTAL INSTL -RH U/O PN 205-030-006-17,-23, -29,-39,-41,-47,-53,-59, -83,-89,-131, 205-031-006-5,-17,-23&-33 ....UHE,UHH,UHV,UHX	EA	1
67	18	XCFZZ		97499	205-030-204-25	...INTERCOSTAL ASSY-LH U/O PN 205-030-204-5 ....UHE,UHH,UHV,UHX	EA	1
67	18	XCFZZ		97499	205-030-204-9	...INTERCOSTAL ASSY-LH U/O PN 205-030-204-7 ....UHE,UHH,UHV,UHX	EA	1
67	19	XCFZZ		97499	205-030-204-26	...INTERCOSTAL ASSY-RH U/O PN 205-030-204-6 ....UHE,UHH,UHV,UHX	EA	1
67	18	XCFZZ		97499	205-030-204-10	...INTERCOSTAL ASSY-RH U/O PN 205-030-204-8 ....UHE,UHH,UHV,UHX	EA	1
67	19	XBFFZ	1560-00-133-6167	97499	205-030-466-1	....FITTING ASSY,EXTERN -LH U/O PN 205-030-204-25 ....UHE,UHH,UHV,UHX	EA	1
67	20	PAFFF	1560-00-136-2401	97499	205-031-466-1	....SUPPORT,BEAM,FUSELA -LH U/O PN 205-030-204-9 ....UHE,UHH,UHV,UHX	EA	1
67	21	XBFFZ	1560-00-774-8632	97499	205-030-466-2	....FITTING ASSEMBLY -RH U/O PN 205-030-204-26 ....UHE,UHH,UHV,UHX	EA	1
67	22	PAFFF	1560-00-118-2196	97499	205-031-466-2	....SUPPORT,BEAM,FUSELA -RH U/O PN 205-030-204-10 ....UHE,UHH,UHV,UHX	EA	1
67	23	PAFZZ	3120-00-990-2634	97499	21-006-7-11	.....BUSHING,SLEEVE............................UHE,UHH,UHV,UHX	EA	1
67	24	XBFFZ	1560-00-181-3532	97499	205-030-208-5	...FITTING ASSY,EXTERN -LH U/O PN 205-030-204-5 ....UHE,UHH,UHV,UHX	EA	1
67	25	PBFFF	1560-00-136-5035	97499	205-031-208-1	...FITTING ASSY,FUSELA -LH U/O PN 205-030-204-7 ....UHE,UHH,UHV,UHX	EA	1
67	25	XBFFF	1560-00-H25-5334	97499	205-030-208-6	...FITTING ASSEMBLY-RH U/O PN 205-030-204-6 ....UHE,UHH,UHV,UHX	EA	1
67	25	PAFFF	1560-00-228-8908	97499	205-031-208-2	...FITTING ASSEMBLY,FU -RH U/O PN 205-030-204-8 ....UHE,UHH,UHV,UHX	EA	1
67	26	PAFZZ	3120-00-990-2634	97499	21-006-7-11	....BUSHING,SLEEVE............................UHE,UHH,UHV,UHX	EA	1
67	27	PBDDD	1560-00-106-5826	97499	205-031-235-17	..PANEL,BULKHEAD -LH..........................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
67	27	PBDDD	1560-00-106-5827	97499	205-031-235-18	..PANEL,BULKHEAD -RH........................UHE,UHH,UHV,UHX	EA	1
67	28	PADZZ	1560-00-426-1371	97499	205-031-235-29	..SKIN,AIRCRAFT U/W PN 205-031-235-17........UHE,UHH,UHV,UHX	EA	1
67	28	PADZZ	1560-00-426-1377	97499	205-031-235-30	..SKIN,AIRCRAFT U/W PN 205-031-235-18........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-778-1	..BULKHEAD INSTL-LH U/O PN 205-030-006-9,& -15 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-778-5	..BULKHEAD INSTL-LH U/O PN 205-030-006-21 THRU -143 & 205-031-006-3 THRU -21.............................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-780-1	..BULKHEAD INSTL-LH U/O PN 205-030-006-11,& -17 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-780-5	..BULKHEAD INSTL-RH U/O PN 205-030-006-23 THRU -131 & 205-031-006-5 THRU -33.............................UHE,UHH,UHV,UHX	EA	1
67	29	XDDDD		97499	205-031-778-7A	...BULKHEAD ASSY-LH U/O PN 205-031-778-1,& -5 ....UHE,UHH,UHV,UHX	EA	1
67	29	XDDDD		97499	205-031-780-7A	...BULKHEAD ASSY-RH U/O PN 205-031-780-1,& -5 ....UHE,UHH,UHV,UHX	EA	1
67	30	PBDDD	1560-00-105-6323	97499	205-031-245-7A	...BULKHEAD ASSEMBLY,A -LH U/O PN 205-031-245-1, & -5 ....UHE,UHH,UHV,UHX	EA	1
67	30	PBDDD	1560-00-077-4601	97499	205-031-246-3	...BULKHEAD ASSY,AIRCR -RH U/O PN 205-031-246-1 ....UHE,UHH,UHV,UHX	EA	1
67	31	XCFZZ		97499	205-031-246-1	..BULKHEAD INSTL-RH U/O PN 205-030-006-23 THRU -31 & 205-031-006-5 THRU -33...................................UHE,UHH,UHV	EA	1
67	31	XCFZZ		97499	205-031-245-1	..BULKHEAD INSTL-LH U/O PN 205-030-006-21 THRU -37 ....UHE,UHH,UHV	EA	1
67	31	XCFZZ		97499	205-031-245-5	..BULKHEAD INSTL-LH U/O PN 205-030-006-51 THRU -143,& 205-031-006-3 THRU -21,&-45...........................UHE,UHH,UHV	EA	1
67	31	XCFZZ		97499	205-030-709-11	..BULKHEAD INSTL-LH U/O PN 205-030-006-9.....UHE,UHH,UHV,UHX	EA	1
67	31	XCFZZ		97499	205-031-709-1	..BULKHEAD INSTL-LH U/O PN 205-030-006-15....UHE,UHH,UHV,UHX	EA	1
67	31	XCFZZ		97499	205-031-709-5	..BULKHEAD INSTL-LH U/O PN 205-030-006-21, -27,-35,-37,-45,-51,-57, & -81...............................UHE,UHH,UHV,UHX	EA	1
67	31	XCFZZ		97499	205-031-709-9	..BULKHEAD INSTL-LH U/O PN 205-030-006-87, -101,-111,-143, & 205-031-006-3..............................UHE,UHH,UHV,UHX	EA	1
67	31	XCFZZ		97499	205-031-709-13	..BULKHEAD INSTL-LH U/O PN 205-031-006-15 & -21 ....UHE,UHH,UHV,UHX	EA	1
67	31	XCFZZ		97499	205-030-709-12	..BULKHEAD INSTL-RH U/O PN 205-030-006-11....UHE,UHH,UHV,UHX	EA	1
67	31	XCFZZ		97499	205-031-709-2	..BULKHEAD INSTL-RH U/O PN 205-030-006-17....UHE,UHH,UHV,UHX	EA	1
67	31	XCFZZ		97499	205-031-709-6	..BULKHEAD INSTL-RH U/O PN 205-030-006-23, -29,-39,-41,-47,-53,-59, & -83...............................UHE,UHH,UHV,UHX	EA	1
67	31	XCFZZ		97499	205-031-709-10	..BULKHEAD INSTL-RH U/O PN 205-030-006-89, -131,& 205-031-006-5...UHE,UHH,UHV,UHX	EA	1
67	31	XCFZZ		97499	205-031-709-14	..BULKHEAD INSTL-RH U/O PN 205-031-006-17 -23,& -33 ....UHE,UHH,UHV,UHX	EA	1
67	32	XBDZZ	1560-00-181-5458	97499	205-030-709-13	...BULKHEAD ASSY,FUSEL -LH U/O PN 205-030-709-11 ....UHE,UHH,UHV,UHX	EA	1
67	32	XDDDD		97499	205-031-709-3	...BULKHEAD ASSY-LH U/O PN 205-031-709-1.....UHE,UHH,UHV,UHX	EA	1
67	32	XDDDD		97499	205-031-709-7	...BULKHEAD ASSY-LH U/O PN 205-031-709-5.....UHE,UHH,UHV,UHX	EA	1
67	32	XDDDD		97499	205-031-709-11	...BULKHEAD ASSY-LH U/O PN 205-031-709-9.....UHE,UHH,UHV,UHX	EA	1
67	32	XDDDD		97499	205-031-709-81	...BULKHEAD ASSY-LH U/O PN 205-031-709-13....UHE,UHH,UHV,UHX	EA	1
67	32	XDDDD		97499	205-030-709-14	...BULKHEAD ASSY-RH U/O PN 205-030-709-12....UHE,UHH,UHV,UHX	EA	1
67	32	XDDDD		97499	205-031-709-4	...BULKHEAD ASSY-RH U/O PN 205-031-709-2.....UHE,UHH,UHV,UHX	EA	1
67	32	XDDDD		97499	205-031-709-8	...BULKHEAD ASSY-RH U/O PN 205-031-709-6.....UHE,UHH,UHV,UHX	EA	1
67	32	XDDDD		97499	205-031-709-12	...BULKHEAD ASSY-RH U/O PN 205-031-709-10....UHE,UHH,UHV,UHX	EA	1
67	32	XDDDD		97499	205-031-709-82	...BULKHEAD ASSY-RH U/O PN 205-031-709-14....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
67	33	PADDD	1560-00-106-8632	97499	205-031-179-51	....PANEL,FUSELAGE,AIRC -LH..................UHE,UHH,UHV,UHX	EA	1
67	33	PADDD	1560-00-106-8633	97499	205-031-179-52	....PANEL,FUSELAGE,AIRC -RH..................UHE,UHH,UHV,UHX	EA	1
67	34	PADZZ	1560-00-427-8256	97499	205-031-179-57	....SKIN,AIRCRAFT............................UHE,UHH,UHV,UHX	EA	1
67	34	PADZZ	1560-00-426-1376	97499	205-031-179-58	....SKIN,AIRCRAFT............................UHE,UHH,UHV,UHX	EA	1
67	35	XDFFF		97499	205-031-212-1	....FITTING ASSY-LH U/O PN 205-031-778-7A....UHE,UHH,UHV,UHX	EA	1
67	35	XDFFF		97499	205-031-212-2	....FITTING ASSY-RH U/O PN 205-031-780-7A....UHE,UHH,UHV,UHX	EA	1
67	36	PAFFF	1560-00-133-7309	97499	205-031-466-6	....SUPPORT,BEAM,FUSELA U/O PN 205-031-245-7A ....UHE,UHH,UHV,UHX	EA	1
67	36	XDFFF		97499	205-031-466-5	....FITTING ASSY-RH U/O PN 205-031-246-3A....UHE,UHH,UHV,UHX	EA	1
67	37	XDFFF		97499	205-031-209-2	....FITTING ASSY-LH U/O PN 205-031-245-7A....UHE,UHH,UHV,UHX	EA	1
67	37	XDFFF		97499	205-031-209-1	....FITTING ASSY-RH U/O PN 205-031-246-3A....UHE,UHH,UHV,UHX	EA	1
67	38	XBFFZ	1560-00-133-6167	97499	205-030-466-1	....FITTING ASSY,EXTERN -LH U/O PN 205-030-709-13 ....UHE,UHH,UHV,UHX	EA	1
67	38	PAFFF	1560-00-136-2401	97499	205-031-466-1	....SUPPORT,BEAM,FUSELA -LH U/O PN 205-031-709-3,-7,& -11 ....UHE,UHH,UHV,UHX	EA	1
67	38	XBFFZ	1560-00-774-8632	97499	205-030-466-2	....FITTING ASSEMBLY -RH U/O PN 205-030-709-14 ....UHE,UHH,UHV,UHX	EA	1
67	38	PAFFF	1560-00-118-2196	97499	205-031-466-2	....SUPPORT,BEAM,FUSELA -RH U/O PN 205-031-709-4,-8,& -12 ....UHE,UHH,UHV,UHX	EA	1
67	39	PBFZZ	3120-00-412-9986	97499	21-007-9-11	.....BUSHING,SLEEVE U/O PN 205-031-212-1,& -2 & 205-031-466-5,-6 & 205-031-209-1,-2.........................UHE,UHH,UHV,UHX	EA	1
67	39	PAFZZ	3120-00-990-2634	97499	21-006-7-11	.....BUSHING,SLEEVE..........................UHE,UHH,UHV,UHX	EA	1
67	40	PAFZZ	1560-00-998-7619	97499	70-022-1	....HANGER,FUEL CELL.........................UHE,UHH,UHV,UHX	EA	4
67	41	PAFZZ	5310-00-072-4873	97499	140-001-5	....WASHER,FLAT U/O PN 205-031-709-11 & -12 ....UHE,UHH,UHV,UHX	EA	8
67	42	PAFZZ	5306-00-182-2016	88044	AN4H5A	...BOLT,MACHINE..............................UHE,UHH,UHV,UHX	EA	2
67	43	PAFZZ	5310-00-187-2354	88044	AN960PD416	...WASHER,FLAT...............................UHE,UHH,UHV,UHX	EA	2
67	44	PAFZZ	5305-00-059-3086	96906	MS24694S103	...SCREW,MACHINE.............................UHE,UHH,UHV,UHX	EA	4
67	45	XBFFZ	1560-00-176-1282	97499	205-030-202-5	...FITTING ASSY,EXTERN -LH U/O PN 205-030-709-11 ....UHE,UHH,UHV,UHX	EA	1
67	45	PBFFF	1560-00-179-0814	97499	205-031-202-1	...FITTING ASSEMBLY,EX -LH U/O PN 205-031-709-3,-7,&-11 ....UHE,UHH,UHV,UHX	EA	1
67	45	XBFFF	1560-00-H25-5332	97499	205-030-202-6	...FITTING ASSEMBLY-RH -U/O PN 205-030-709-12 ....UHE,UHH,UHV,UHX	EA	1
67	45	PAFFF	1560-00-179-0813	97499	205-031-202-2	...FITTING ASSEMBLY,EX -RH U/O PN 205-031-709-4,-8,& -12 ....UHE,UHH,UHV,UHX	EA	1
67	46	PAFZZ	3120-00-990-2634	97499	21-006-7-11	....BUSHING,SLEEVE...........................UHE,UHH,UHV,UHX	EA	1
67	47	PAFZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL U/O PN 205-031-709-1,-2, -5,-6,-9,& -10..UHE,UHH,UHV,UHX	EA	5
67	48	PAFZZ	5310-00-761-4221	96906	MS21073L3	...NUT,SELF-LOCKING,PL U/O PN 205-031-709-1,-2, -5,& -6 ....UHE,UHH,UHV,UHX	EA	5
67	49	PBFZZ	5340-00-290-4545	97499	100-046548A1	...BUTTON,PLUG U/O PN 205-031-709-13.........UHE,UHH,UHV,UHX	EA	1
67	50	PADDD	1560-00-097-8484	97499	205-030-200-31	..PANEL,FUSELAGE,AIRC -CENTER................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-407-17	..BULKHEAD INSTL-LH U/O PN 205-030-006-9 & -15 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-407-293	..BULKHEAD INSTL-LH U/O PN 205-030-006-21, -35,& -37 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-407-311	..BULKHEAD INSTL-LH U/O PN 205-030-006-27, -45,-51,-57,& -81 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-407-359	..BULKHEAD INSTL-LH U/O PN 205-030-006-87, -101,-111,-143, & 205-031-006-3.............................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
67		XCFZZ		97499	205-030-407-465	..BULKHEAD INSTL-LH U/O PN 205-031-006-15 & -21 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-407-19	..BULKHEAD INSTL-RH U/O PN 205-030-006-11 & -17 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-407-295	..BULKHEAD INSTL-RH U/O PN 205-030-006-23, -39,& -41 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-407-313	..BULKHEAD INSTL-RH U/O PN 205-030-006-29 & -47 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-407-327	..BULKHEAD INSTL-RH U/O PN 205-030-006-53, -59,-83,-89,-131, & 205-031-006-5..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-407-467	..BULKHEAD INSTL-RH U/O PN 205-031-006-17 -23,& -33 ....UHE,UHH,UHV,UHX	EA	1
67	51	MFOZZ	5330-00-761-2217	97499	205-030-407-317	...SEAL,RUBBER SPECIAL U/O PN 205-030-407-311,-313, & -327 ....UHE,UHH,UHV,UHX	EA	1
67	51A	PAOZZ	1560-00-126-2524	97499	205-030-407-538	...STRIP,BULKHEAD..........UHE,UHH,UHV,UHX	EA	1
67	52	PAFZZ	1560-00-978-7619	97499	70-022-1	...HANGER,FUEL CELL USBL EFF 62-2106 THRU 69-15291 ....UHE,UHH,UHV,UHX	EA	1
67	53	PAOZZ	5305-00-167-3635	88044	AN525-416-12	...SCREW, MACHINE..........UHE,UHH,UHV,UHX	EA	2
67	54	PAOZZ	1560-00-839-0540	97499	205-030-488-1	...HANDLE,BULKHEAD DOO..........UHE,UHH,UHV,UHX	EA	1
67	55	XBDDD	1560-00-069-3411	97499	205-030-407-21	...BULKHEAD ASSEMBLY,F -LH U/O PN 205-030-407-17 ....UHE,UHH,UHV,UHX	EA	1
67	56	PADDD	1560-00-176-1087	97499	205-030-407-473	...PANEL,FUSELAGE,AIRC -LH U/O PN 205-030-407-465 ....UHE,UHH,UHV,UHX	EA	1
67	57	PAFFF	1560-00-069-3381	97499	205-030-407-23	...BULKHEAD,ASSEMBLY F -LH U/O PN 205-030-407-17 ....UHE,UHH,UHV,UHX	EA	1
67	58	PAFZZ	1560-00-176-1085	97499	205-030-407-477	...PANEL,FUSELAGE,AIRC -LH U/O PN 205-030-407-465 ....UHE,UHH,UHV,UHX	EA	1
67	59	PADDD	1560-00-176-1086	97499	205-030-407-475	...PANEL,FUSELAGE,AIRC -RH U/O PN 205-030-407-467 ....UHE,UHH,UHV,UHX	EA	1
67	60	PAFFF	1560-00-069-3412	97499	205-030-407-25	...BULKHEAD ASSEMBLY,F -RH U/O PN 205-030-407-19,-295,&-313 ....UHF,UHH,UHV,UHX	EA	1
67	60	PAFFF	1560-00-069-3390	97499	205-030-407-329	...BULKHEAD ASSEMBLY,F -RH U/O PN 205-030-407-327 ....UHE,UHH,UHV,UHX	EA	1
67	61	PAFZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX..........UHE,UHH,UHV,UHX	EA	16
67	62	MFFZZ	1560-00-H27-7984	97499	205-961-102-25	...COVER,ACCESS-LH..........UHE,UHH,UHV,UHX	EA	1
67	63	MFFZZ	1560-00-H27-7983	97499	205-961-102-17	...COVER,ACCESS-RH..........UHE,UHH,UHV,UHX	EA	1
67	64	PBOZZ	1620-00-420-7851	97499	205-030-013-3	...SUPPORT,LANDING GEA..........UHE,UHH,UHV,UHX	EA	2
67	65	PAFZZ	5310-00-974-6614	80205	NAS1473A5	...NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	6
67		XCFZZ		97499	205-030-783-9	..BULKHEAD,INSTL..........UHE,UHH,UHV,UHX	EA	1
67	66	PBDDD	1560-00-106-4503	97499	205-030-783-11	...BULKHEAD ASSEMBLY,A..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-173-2	..FLOOR INSTL-RH..........UHE,UHH,UHV,UHX	EA	1
67	67	PAFZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	14
67	68	PAFZZ	5306-00-182-2056	88044	AN3H3A	...BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	4
67	69	PAFFF	1560-00-987-5171	97499	205-030-173-3	...FLOOR,AIRCRAFT -LH..........UHE,UHH,UHV,UHX	EA	1
67	70	PADZZ	1560-00-427-8293	97499	205-030-173-75	...SKIN,AIRCRAFT U/W PN 205-030-173-3..........UHE,UHH,UHV,UHX	EA	1
67	71	PAFFF	1560-00-987-5176	97499	205-030-173-4	...FLOOR,AIRCRAFT -RH..........UHF,UHH,UHV,UHX	EA	1
67	72	PADZZ	1560-00-426-1358	97499	205-030-173-76	...SKIN,AIRCRAFT U/W PN 205-030-173-4..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-172-1	..PANEL INSTL,FUEL CELL-LH USBL EFF 62-2106 THRU 69-15291 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-172-2	..PANEL INSTL,FUEL CELL-RH USBL EFF 62-2106 THRU 69-15291	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHE,UHH,UHV,UHX		
67		XCFZZ		97499	205-030-172-6	..PANEL INSTL,FUEL CELL-RH USBL EFF 69-15292 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
67	73	PBDZZ	1560-00-932-5127	97499	205-030-172-3	...PANEL,FUEL TANK -LH U/O PN 205-030-172-1 ....UHE,UHH,UHV,UHX	EA	1
67	73	PBDZZ	1560-00-176-1082	97499	205-030-172-7	...PANEL,FUEL TANK -LH U/O PN 205-030-172-5 ....UHE,UHH,UHV,UHX	EA	1
67	74	PBDZZ	1560-00-932-5126	97499	205-030-172-4	...PANEL,FUEL TANK -RH U/O PN 205-030-172-2 ....UHE,UHH,UHV,UHX	EA	1
67	74	PBDZZ	1560-00-176-1083	97499	205-030-172-8	...PANEL,FUEL TANK -RH U/O PN 205-030-172-6 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-199-1	..SHELF INSTL-LH U/O PN 205-030-006-9 & -15 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-199-33	..SHELF INSTL-LH U/O PN 205-030-006-21, -35,& -37 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-031-199-5	..SHELF INSTL-LH U/O PN 205-030-006-27, -45,-51,-57,-81,-87, -101, -111,-143,205-031-006-3, & -15..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-178-1	..SHELF INSTL-LH U/O PN 205-030-006-21.......UHE,UHH,UHV,UHX	EA	1
67	75	PAOZZ	5305-00-781-9057	88044	AN525-10R8	...SCREW,MACHINE..................................UHE,UHH,UHV,UHX	EA	22
67	76	PAFZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL............................UHE,UHH,UHV,UHX	EA	22
67	77	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON...............UHE,UHH,UHV,UHX	EA	1
67	78	XBOZZ	1560-00-110-4311	97499	205-031-199-3	...SHELF ASSEMBLY,FUSE U/O PN 205-031-199-1 ....UHE,UHH,UHV,UHX	EA	1
67	78	PAOZZ	1560-00-178-8506	97499	205-031-199-71	...SHELF,FUSELAGE U/O PN 205-031-199-33......UHE,UHH,UHV,UHX	EA	1
67	79	PBOFF	1560-00-415-6396	97499	205-030-178-3	...SUPPORT ASSY,MOUNT U/O PN 205-031-199-5 & 205-030-178-1 ....UHE,UHH,UHV,UHX	EA	1
67	79	PADFF	1560-00-415-6397	97499	205-030-178-5	...SUPPORT ASSY,MOUNT U/O PN 205-031-199-5 & 205-030-178-1 ....UHE,UHH,UHV,UHX	EA	1
67	80	PADZZ	5310-00-772-3720	96906	MS21075L3	....NUT,SELF-LOCKING,PL...........................UHE,UHH,UHV,UHX	EA	4
67	81	PAOZZ	5310-00-807-1474	96906	MS21042L3	....NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 205-030-178-5 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-280-5	..SERVICE DECK INSTL -LH U/O PN 205-030-006-9 & -15 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-280-27	..SERVICE DECK INSTL -LH U/O PN 205-030-006-21,-27, -35,-37, -45,-51,-57,-81, -87,-101,-111,-143, 205-031-006-3,-15,& -21 ....UHE,UHH,UHV,UHX	EA	1
67	82	PAFFF	1560-00-988-0163	97499	205-030-280-29	...DECK ASSEMBLY,LEFT.........................UHE,UHH,UHV,UHX	EA	1
67	83	PADZZ	1560-00-426-1351	97499	205-030-280-121	...SKIN,AIRCRAFT U/W PN 205-030-280-29.......UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-279-5	..SERVICE DECK INSTL -RH U/O PN 205-030-006-11,-17, -23,-29, -39,-41,& -47..................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-279-31	..SERVICE DECK INSTL -RH U/O PN 205-030-006-53,-59, -83,-89, -131, 205-031-006-5,-17,-23&-33...............UHE,UHH,UHV,UHX	EA	1
67	84	PAFFF	1560-00-988-0162	97499	205-030-279-33	...DECK ASSEMBLY,RIGHT........................UHE,UHH,UHV,UHX	EA	1
67	85	PADZZ	1560-00-426-1362	97499	205-030-279-107	...SKIN,AIRCRAFT U/W PN 205-030-279-33.......UHE,UHH,UHV,UHX	EA	1
67	86	PADZZ	5305-00-705-2388	96906	MS24694S60	....SCREW,MACHINE.................................UHE,UHH,UHV,UHX	EA	2
67	87	PAOZZ	5310-00-183-4406	88044	AN960PD10	....WASHER,FLAT...................................UHE,UHH,UHV,UHX	EA	2
67	88	PAOZZ	5310-00-807-1474	96906	MS21042L3	....NUT,SELF-LOCKING,EX WASHER,HEXAGON.......UHE,UHH,UHV,UHX	EA	2
67	89	PADZZ	5340-00-897-2542	76786	662R1-1 1-4	....LOOP,STRAP FASTE..............................UHE,UHH,UHV,UHX	EA	1
67	90	PAOZZ	5310-00-728-7716	96906	MS21069L3	....NUT,SELF-LOCKING,PL...........................UHE,UHH,UHV,UHX	EA	6
67	91	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE..................................UHE,UHH,UHV,UHX	EA	6
67	92	PAOZZ	1560-00-987-5231	97499	205-030-279-17	...COVER,ACCESS U/O PN 205-030-279-5.........UHE,UHH,UHV,UHX	EA	1
67	92	PAOZZ	1560-00-912-9984	97499	205-030-279-35	...COVER,ACCESS U/O PN 205-030-279-31........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
67	92	MFOZZ	1560-00-H27-7985	97499	205-961-102-33	...COVER,ACCESS................................UHE,UHH,UHV,UHX	EA	1
67	92	MFOZZ	1560-00-H27-7986	97499	205-961-102-35	...COVER,ACCESS................................UHE,UHH,UHV,UHX	EA	1
67	93	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL.........................UHE,UHH,UHV,UHX	EA	4
67	93A	XCFZZ		97499	205-030-539-3	..DOOR INSTL-LH U/O PN 205-030-006-9,-15,-21, -35,-37,-45,-51,-57,-81, -87,-101,-111,-143, 205-031-006-3,-15,& -21 ....UHE,UHH,UHV,UHX	EA	1
67	94	MFOZZ	1560-00-413-1434	97499	205-030-539-11	...HINGE.......................................UHE,UHH,UHV,UHX	EA	1
67	95	PAOZZ	5325-00-285-3278	72794	AWST5	...STUD,TURNLOCK...............................UHE,UHH,UHV,UHX	EA	1
67	96	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FAS.........................UHE,UHH,UHV,UHX	EA	1
67	97	PAOZZ	5325-00-298-7026	72794	R5	...RECEPTACLE,TURNL FASTENER...................UHE,UHH,UHV,UHX	EA	1
67	98	MFOZZ	1560-00-413-1452	97499	205-030-539-7	...DOOR..UHE,UHH,UHV,UHX	EA	1
67	99	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL.........................UHE,UHH,UHV,UHX	EA	2
67		XCFZZ		97499	205-030-294-1	..TRACK INSTL-LH U/O PN 205-030-006-9,-15, & -21 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-294-7	..TRACK INSTL-LH U/O PN 205-030-006-27, -35,-37,-45,-51,& -57.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-294-11	..TRACK INSTL-LH U/O PN 205-030-006-81, -87,-101,& -111 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-294-21	..TRACK INSTL-LH U/O PN 205-030-006-143 205-031-006-3,-15,& -21.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-294-2	..TRACK INSTL-RH U/O PN 205-030-006-11, -17,& -23 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-294-8	..TRACK INSTL-RH U/O PN 205-030-006-29, -39,-41,-47,-53,& -59.......................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-294-12	..TRACK INSTL-RH U/O PN 205-030-006-83,-89, -131,205-031-006-5,-17, -23 & -33.........................UHE,UHH,UHV,UHX	EA	1
67	100	PAOZZ	5305-00-705-1640	96906	MS24694S58	...SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	1
67	101	PAOZZ	5340-00-701-9917	97499	204-030-226-1	...BUMPER,RUBBER...............................UHE,UHH,UHV,UHX	EA	1
67	102	PBFZZ	5340-00-973-2266	97499	205-030-294-13	...PLATE,MENDING U/O PN 205-030-294-11 & -21 ....UHE,UHH,UHV,UHX	EA	1
67	103	XBFZZ	5340-00-450-6946	97499	205-030-294-14	...PLATE,MENDING U/O PN 205-030-294-12.......UHE,UHH,UHV,UHX	EA	1
67	104	PBOZZ	5340-00-931-4802	97499	205-030-293-1	...TRACK,SLIDING DOOR -LH.....................UHE,UHH,UHV,UHX	EA	1
67	104	PBOZZ	5340-00-988-0244	97499	205-030-293-2	...TRACK,SLIDING DOOR -RH.....................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-163-3	..BEAM ASSY-LH U/O PN 205-030-006-9 SEE FIG.71 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-163-5	..BEAM ASSY-LH U/O PN 205-030-006-15 SEE FIG.71 FOR BREAKDOWN................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-163-7	..BEAM ASSY-LH U/O PN 205-030-006-21,-35,& -37 SEE FIG.71 FOR BREAKDOWN............................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-163-283	..BEAM ASSY-LH U/O PN 205-030-006-27 SEE FIG.71 FOR BREAKDOWN................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-163-299	..BEAM ASSY-LH U/O PN 205-030-006-45 SEE FIG.71 FOR BREAKDOWN................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-163-309	..BEAM ASSY-LH U/O PN 205-030-006-51 SEE FIG.71 FOR BREAKDOWN................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-163-339	..BEAM ASSY-LH U/O PN 205-030-006-57,-81,-87,-101,-111,-143, & 205-031-006-3 SEE FIG.71 FOR BREAKDOWN......UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-163-537	..BEAM ASSY-LH U/O PN 205-031-006-15 SEE FIG.71 FOR BREAKDOWN................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-163-553	..BEAM ASSY-LH U/O PN 205-031-006-21 SEE FIG.71 FOR BREAKDOWN................................UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-164-3	..BEAM ASSY-RH U/O PN 205-030-006-11,& -17 SEE FIG.71 FOR	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						BREAKDOWN..........UHE,UHH,UHV,UHX		
67		XCFZZ		97499	205-030-164-5	..BEAM ASSY-RH U/O PN 205-030-006-23,-39,& -41 SEE FIG.71 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-164-7	..BEAM ASSY-RH U/O PN 205-030-006-29 SEE FIG.71 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-164-9	..BEAM ASSY-RH U/O PN 205-030-006-47 SEE FIG.71 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-164-285	..BEAM ASSY-RH U/O PN 205-030-006-53,-59,& -83 SEE FIG.71 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-164-317	..BEAM ASSY-RH U/O PN 205-030-006-83,-89,-131 & 205-031-006-5 SEE FIG.71 FORBREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-164-427	..BEAM ASSY-RH U/O PN 205-031-006-17 SEE FIG.71 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-164-441	..BEAM ASSY U/O PN 205-031-006-23 & -33 SEE FIG. 71 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-711-3	..BULKHEAD INSTL-LH U/O PN 205-030-006-9 & -15 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-711-75	..BULKHEAD INSTL U/O PN 205-030-006-21, -27,-35,-37,& -45 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-711-5	..BULKHEAD INSTL-LH U/O PN 205-030-006-51, -57,-81,& -87 ....UHE,UHH,UHV,UHX	EA	1
67	105	PBDZZ	1560-00-919-4624	97499	205-030-711-25	...STIFFENER,BULKHEAD..........UHE,UHH,UHV,UHX	EA	1
67	106	PBDZZ	1560-00-134-5182	97499	205-030-711-29	...SUPPORT,BULKHEAD..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-711-77	..BULKHEAD INSTL-RH U/O PN 205-030-006-53, -59,& -83 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-711-79	..BULKHEAD INSTL-RH U/O PN 205-030-006-83, -89,-131,& 205-031-006-5..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-711-117	..BULKHEAD INSTL-RH U/O PN 205-031-006-17 -23,& -33 ....UHE,UHH,UHV,UHX	EA	1
67	107	PAFFF	1560-00-071-8271	97499	205-030-402-19	...PANEL,FUSELAGE,AIRC..........UHE,UHH,UHV,UHX	EA	1
67	107	PBFFF	1560-00-176-1089	97499	205-030-402-47	...PANEL,FUEL TANK U/O PN 205-030-711-117....UHE,UHH,UHV,UHX	EA	1
67	108	PAFZZ	1560-00-998-7619	97499	70-022-1	....HANGER,FUEL CELL U/O PN 205-030-402-19 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-057-1	..STEP INSTL U/O PN 205-030-006-131, 205-031-006-5,-17,-23&-33..........UHE,UHH,UHV,UHX	EA	1
67	109	PAOZZ	1560-00-181-3807	97499	205-030-057-25	...STEP ASSEMBLY,ROOF..........UHE,UHH,UHV,UHX	EA	1
67	110	PBDZZ	5365-00-176-0702	97499	205-030-057-11	...SPACER,ACCESS RIGHT..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-191-1	..PANEL INSTL-LH UPPER..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-191-3	..PANEL INSTL-LH UPPER..........UHE,UHH,UHV,UHX	EA	1
67	111	PAFFF	1560-00-449-6561	97499	205-030-191-5	...PANEL,FUSELAGE UPPER-LH U/O PN 205-030-191-1 ....UHE,UHH,UHV,UHX	EA	1
67	112	PAFFF	1560-00-449-6562	97499	205-030-191-7	...PANEL,FUSELAGE UPPER-RH U/O PN 205-030-191-3 ....UHE,UHH,UHV,UHX	EA	1
67	113	PBFFF	1560-00-169-1766	97499	205-030-191-41	...PANEL,FUSELAGE,AIRC..........UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-396-9	.PANEL INSTL USBL EFF 62-2106 THRU 69-15291 ....UHE,UHH,UHV,UHX	EA	1
67		XCFZZ		97499	205-030-396-87	.PANEL INSTL USBL EFF 69-15292 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
67	114	PBDZZ	1560-00-176-1084	97499	205-030-396-89	..PANEL,FUEL TANK CENTER U/O PN 205-030-396-87 ....UHE,UHH,UHV,UHX	EA	1
67	115	AFFFF	1560-00-H04-4316	97499	205-030-385-19	..TRACK ASSEMBLY,CARG LOWER-LH..........UHE,UHH,UHV,UHX	EA	1
67	115	AFFFF	1560-00-H04-4317	97499	205-030-385-20	..TRACK ASSEMBLY,CARG LOWER-RH..........UHE,UHH,UHV,UHX	EA	1
67	116	MFFZZ	1560-00-513-7862	97499	205-030-385-17	...GUIDE U/O PN 205-030-385-19..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
67	116	XDFZZ		97499	205-030-385-18	...GUIDE U/O PN 205-030-385-20...............UHE,UHH,UHV,UHX	EA	1
67	117	MFFZZ	1560-00-148-2129	97499	205-030-385-21	...DOUBLER,CARGO DOOR...........................UHE,UHH,UHV,UHX	EA	1
67	118	PAFZZ	5340-00-104-2591	97499	205-030-385-13	...TRACK,SLIDING DOOR -LH U/O PN 205-030-385-19 ....UHE,UHH,UHV,UHX	EA	1
67	118	PBFZZ	5340-00-104-2590	97499	205-030-385-14	...TRACK,SLIDING DOOR -RH U/O PN 205-030-385-20 ....UHE,UHH,UHV,UHX	EA	1
67	118A	XCFZZ		97499	205-030-725-9	.SUPPORT INSTL USBL EFF 67-17145 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
67	119	PAFZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	12
67	120	PAFZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT...................................UHE,UHH,UHV,UHX	EA	12
67	121	PAFZZ	5306-00-274-2119	88044	AN3-5A	..BOLT,MACHINE..................................UHE,UHH,UHV,UHX	EA	7
67	122	PAFZZ	5306-00-656-0358	88044	AN3-6A	.BOLT,MACHINE...................................UHE,UHH,UHV,UHX	EA	2
67	123	PAFZZ	5306-00-151-0785	88044	AN3-7A	..BOLT,MACHINE..................................UHE,UHH,UHV,UHX	EA	3
67	124	PBFFF	1560-00-116-0708	97499	205-030-725-13	..SUPPORT ASSEMBLY USBL EFF 62-2106 THRU 66-8577 SEE FIG. 346 FOR SUPPORT ASSY...........................UHE,UHH,UHV,UHX	EA	1
67	125	PAFZZ	3120-00-625-0051	97499	22-007-19-19-18	...BUSHING,SLEEVE...............................UHE,UHH,UHV,UHX	EA	2
67	125A	XCFZZ		97499	205-030-711-113	.BULKHEAD INSTL CENTER..........................UHE,UHH,UHV,UHX	EA	1
67	126	PAFZZ	5305-00-944-5929	96906	MS27039-1-07	..SCREW,MACHINE.................................UHE,UHH,UHV,UHX	EA	26
67	127	PAFZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT...................................UHE,UHH,UHV,UHX	EA	26
67	128	PAFZZ	1560-00-182-9613	97499	205-030-519-1	..COVER,ACCESS..................................UHE,UHH,UHV,UHX	EA	1
67	129	PAFZZ	5340-00-849-4019	97499	80-004-2-6	...GROMMET,PLUG.................................UHE,UHH,UHV,UHX	EA	3
67	130	PAFZZ	5340-00-836-9466	29372	1704	..INSERT,SPECIAL................................UHE,UHH,UHV,UHX	EA	26
67	131	PBDDD	1560-00-133-7224	97499	205-030-403-27	..PANEL,FUSELAGE,AIRC -CENTER...................UHE,UHH,UHV,UHX	EA	1
67	132	PBDZZ	1560-00-106-8444	97499	205-961-156-39	..DOUBLER,FUEL CELL.............................UHE,UHH,UHV,UHX	EA	1
67	133	PBDZZ	5340-00-104-2592	97499	205-030-194-9	.TRACK,SLIDING DOOR -LH UPPER...................UHE,UHH,UHV,UHX	EA	1
67	133	PBDZZ	5340-00-183-5975	97499	205-030-194-10	.TRACK,SLIDING DOOR -RH UPPER...................UHE,UHH,UHV,UHX	EA	1
67	134	PAOZZ	5310-00-734-1885	96906	MS21071-4	.NUT,SELF-LOCKING,PL............................UHE,UHH,UHV,UHX	EA	2
67	134	PAOZZ	5310-00-728-7716	96906	MS21069L3	.NUT,SELF-LOCKING,PL............................UHE,UHH,UHV,UHX	EA	6
67		XCFZZ		20309	ES-F-212922	.INVERTER SHELF U/O 205-031-006-1 &-13....................UHE	EA	1
67	135	XDFZZ		20309	ES-D-212915-1	..CHANNEL ASSEMBLY.......................................UHE	EA	1
67	136	XDFZZ		20309	ES-D-212915-2	..CHANNEL ASSEMBLY.......................................UHE	EA	1
67	137	XDFZZ		20309	ES-C-212920	..GUSSET...UHE	EA	1
67	138	XDFZZ		20309	ES-D-212915-3	..CHANNEL ASSEMBLY.......................................UHE	EA	1
67	139	MFFZZ		20309	ES-C-212916-2	..BRACKET..UHE	EA	1
67	140	MFFZZ		20309	ES-C-212916-1	..BRACKET..UHE	EA	1
67	141	XDFZZ		20309	ES-C-212919	..GUSSET...UHE	EA	1
67	142	XDFZZ		20309	ES-D-220222	..BASE...UHE	EA	1
67	143	XDFZZ		20309	ES-C-212921	..GUSSET...UHE	EA	1
67	144	PAFZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE..UHE	EA	4
67	145	PAFZZ	5310-00-045-3296	96906	MS35338-43	..WASHER,LOCK..UHE	EA	4
67	146	MFFZZ		20309	ES-C-212917	..CHANNEL..UHE	EA	1
67	147	XDFZZ	5305-00-088-9044	96906	MS35207-260	..SCREW,MACHINE..UHE	EA	7
67	148	PAFZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT..UHE	EA	7
67	149	PAFZZ	5325-01-076-5127	29372	4655F1032-08-1	..INSERT...UHE	EA	7
67	150	MFFZZ		20309	ES-C-212919	..CHANNEL..UHE	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
67		XCFZZ		20309	ES-F-221368	.RADIO COMPARTMENT SEE FIG.5A FOR NHA................UHE,UHX	EA	1
67	151	PAOZZ	5325-01-076-5127	29372	465SF1032-08-1	..FASTENER,PANEL..UHE,UHX	EA	5
67		XCFZZ		20309	ES-F-220227-1	.ANTENNA INSTALLATIO SEE FIG.5A FOR NHA..............UHE,UHX	EA	1
67		XCFZZ		20309	ES-F-220227-2	.ANTENNA INSTALLATIO....................................UHE,UHX	EA	1
67	152	MFOZZ		20309	ES-B-220247	..ANGLE..UHE,UHX	EA	1
67	153	PAOZZ	5325-00-701-2552	29372	S102D10-04	..FASTENER,PANEL..UHE,UHX	EA	5
67	154	PAOZZ	5325-00-717-9697	29372	P102D10-0	..FASTENER,PANEL..UHE,UHX	EA	5

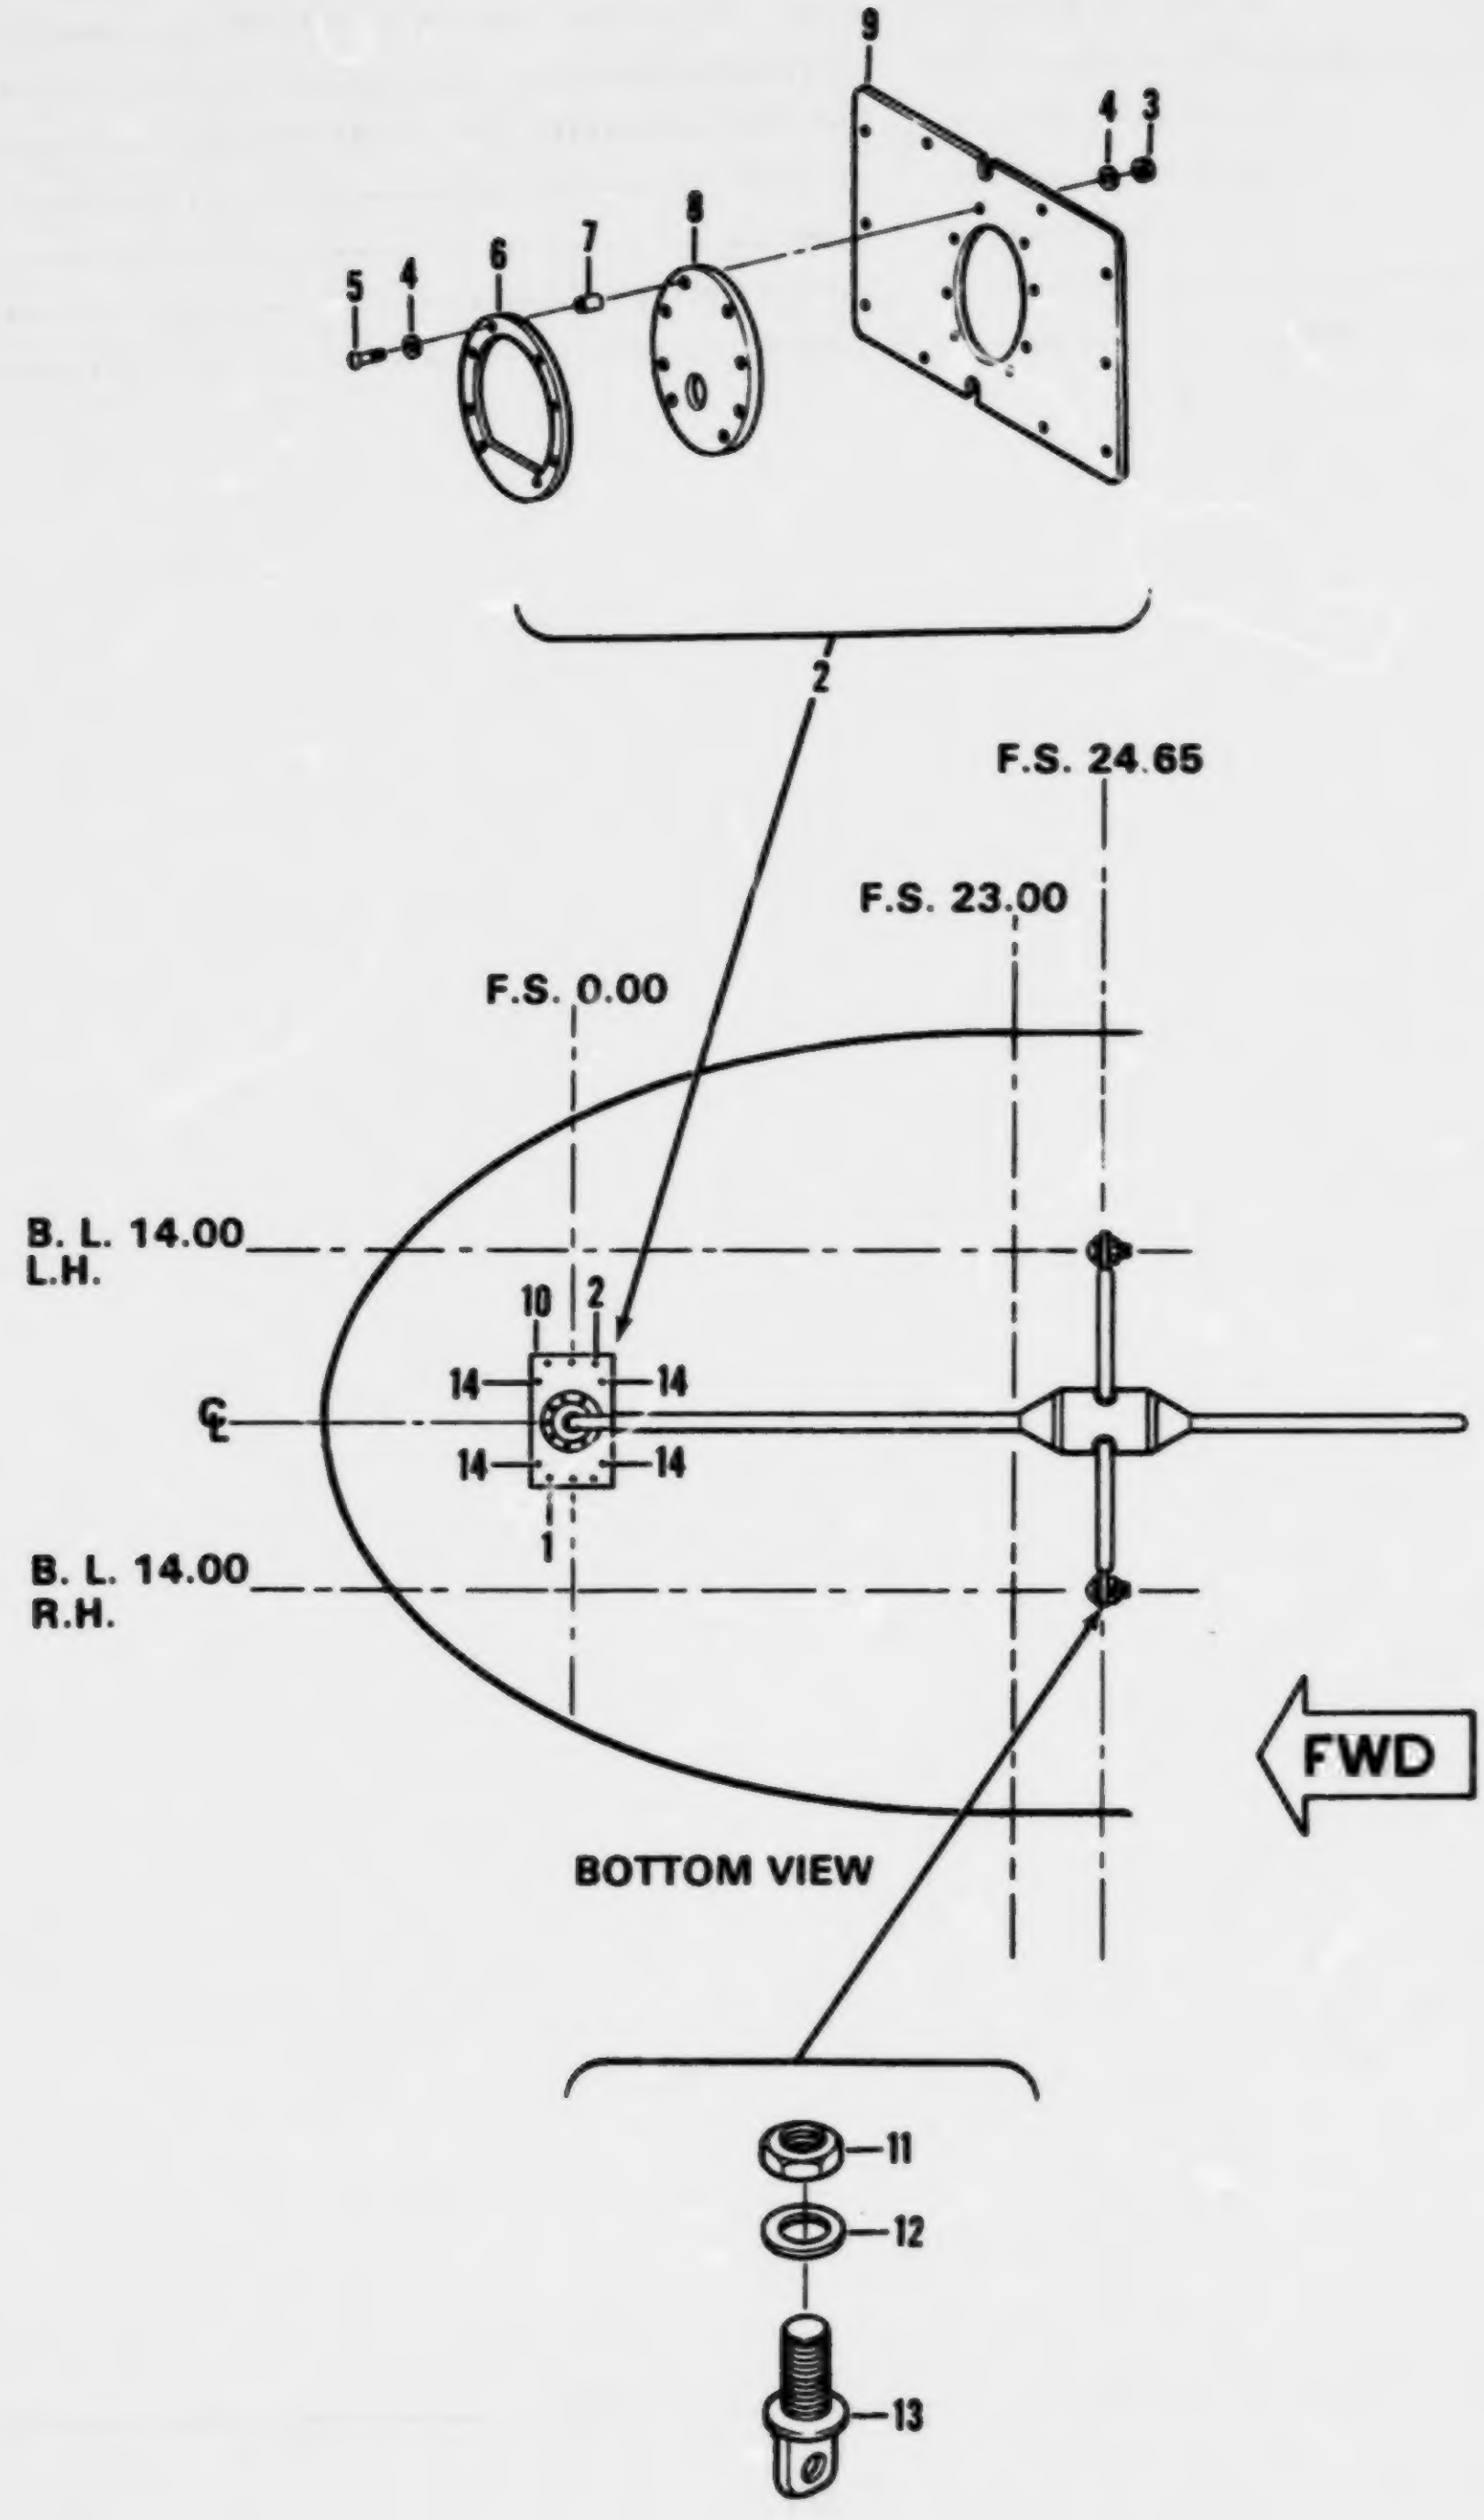
9
4
3
5
4
6
7
8
2
F.S. 24.65
F.S. 23.00
F.S. 0.00
B. L. 14.00
L.H.
10
2
14
14
℄
14
14
1
B. L. 14.00
R.H.
FWD
BOTTOM VIEW
11
12
13

Figure 67A. Antenna Installation (Sheet 1 of 2)

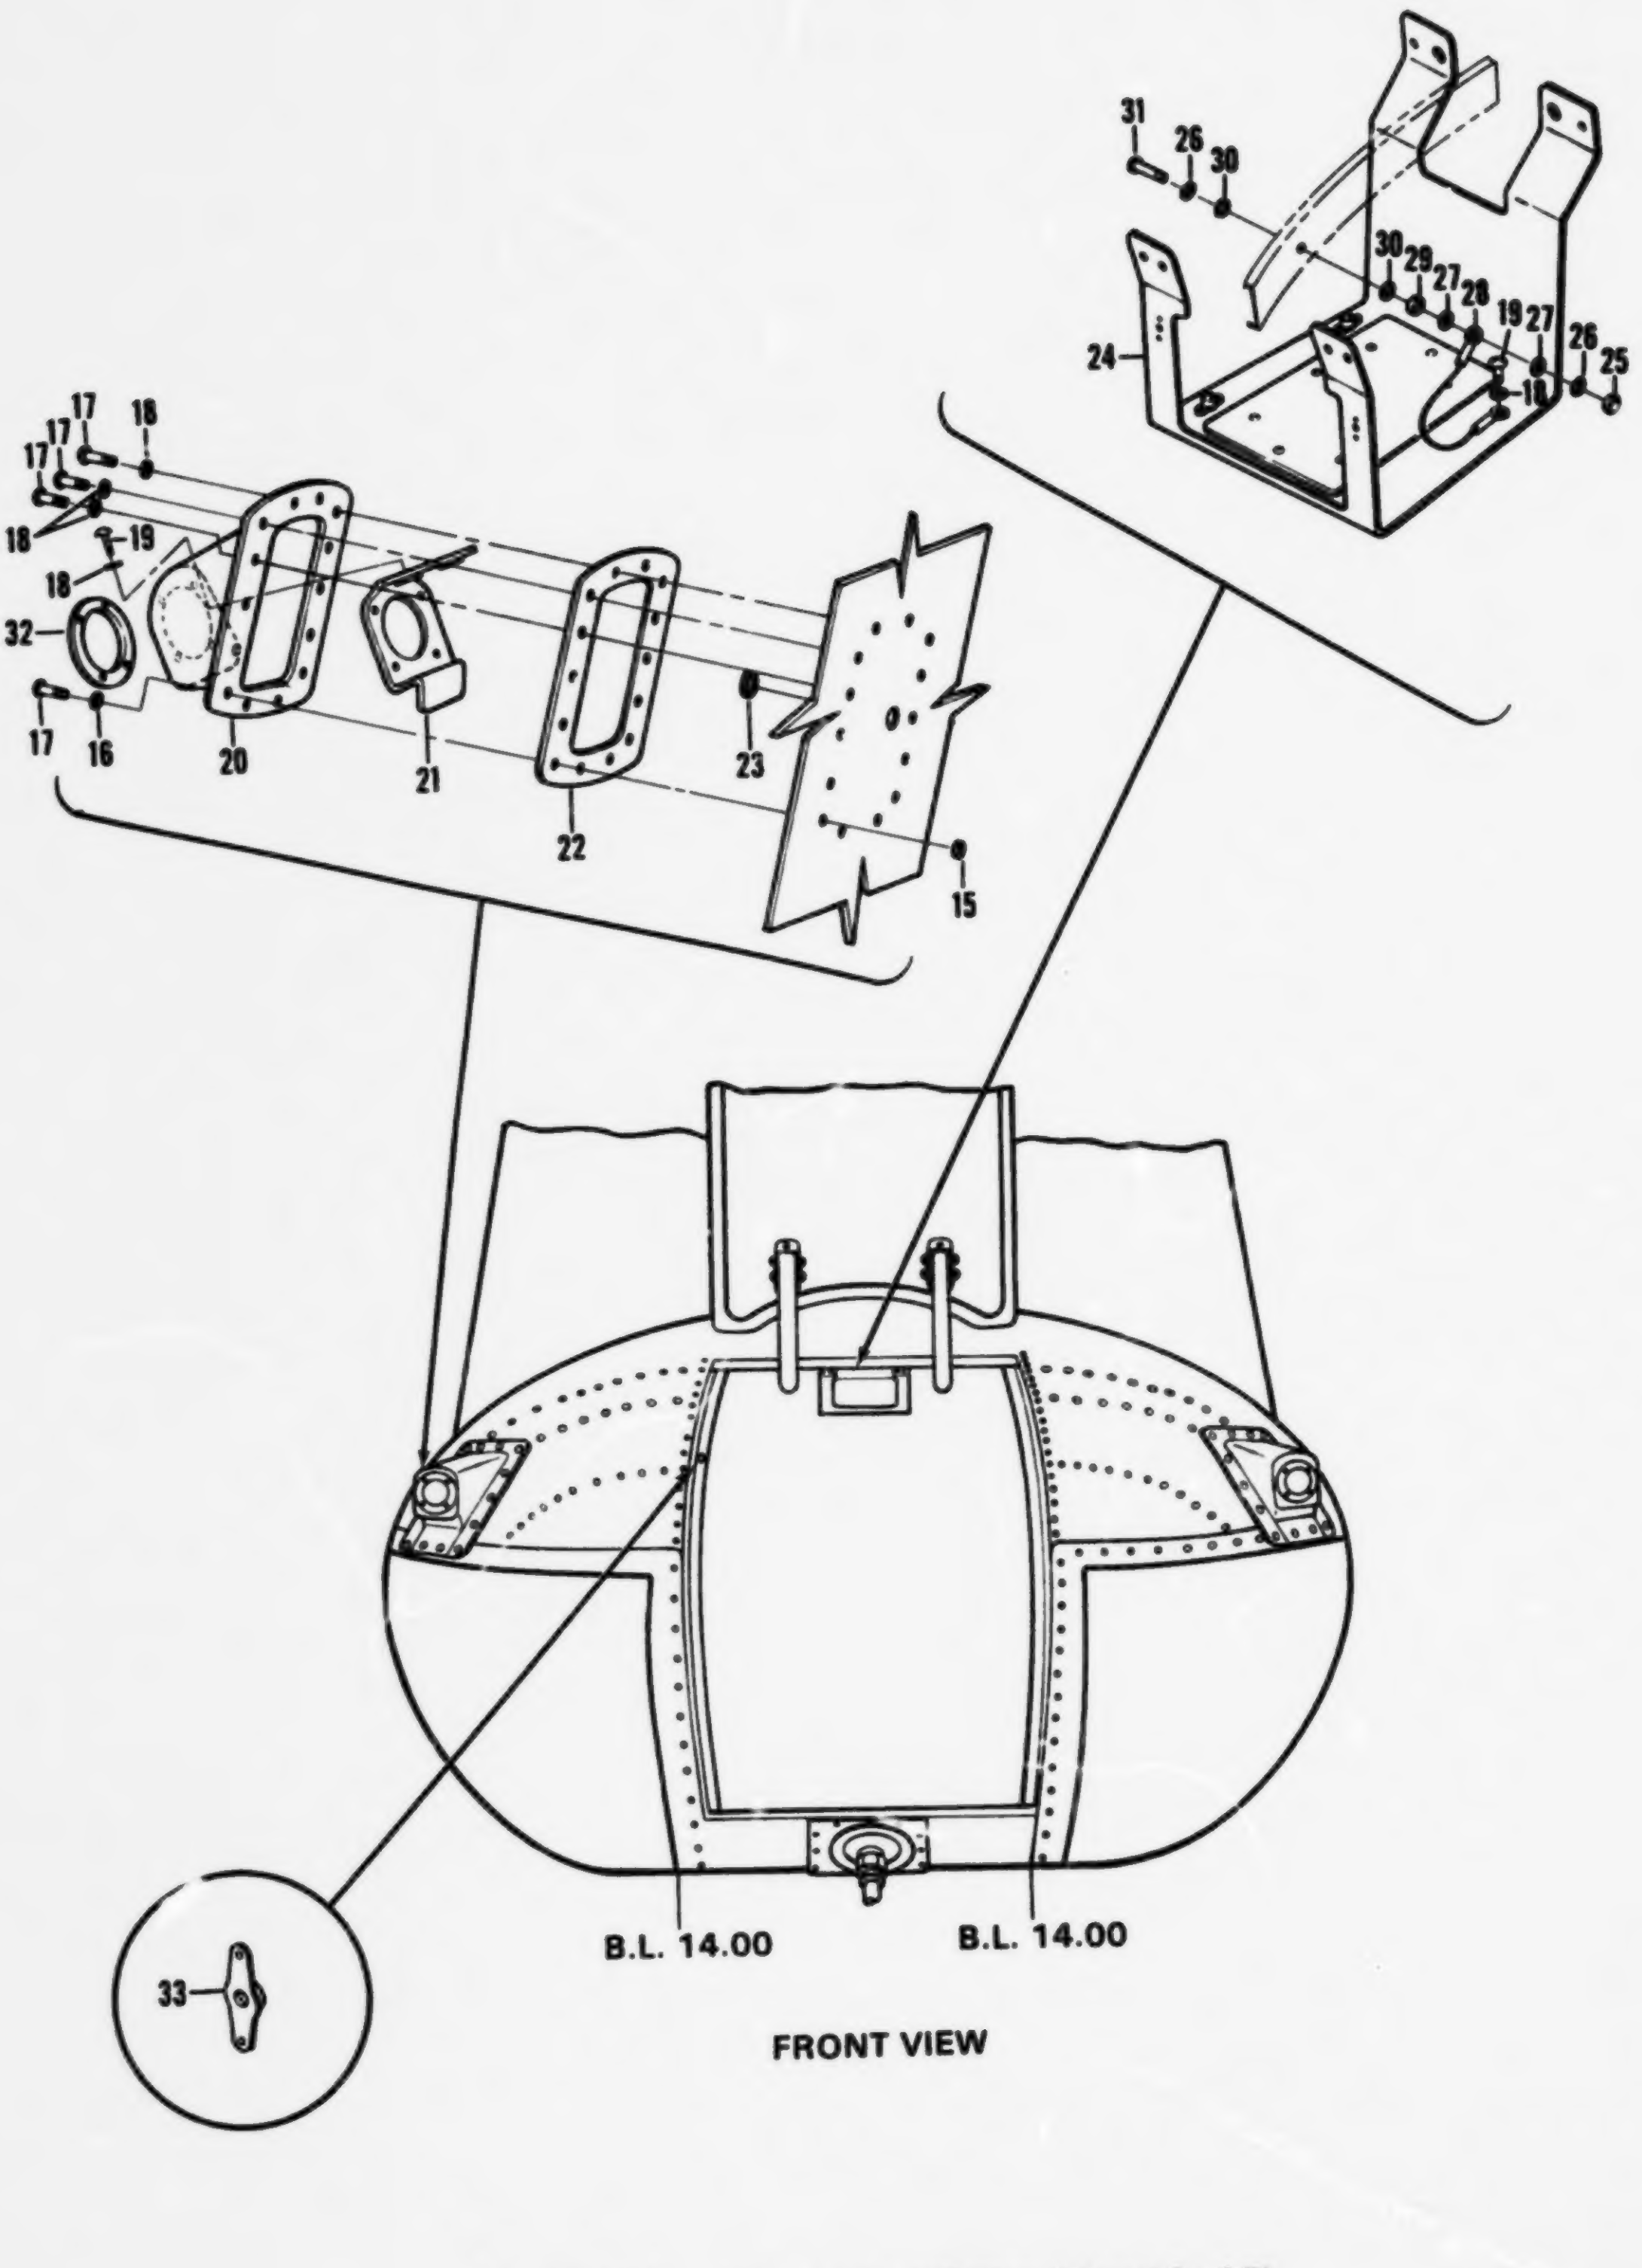
31
26
30
30
29
27
28
19
27
26
25
18
24
17
17
17
18
18
19
18
32
17
16
20
21
22
23
15
B.L. 14.00
B.L. 14.00
33
FRONT VIEW

Figure 67A. Antenna Installation (Sheet 2 of 2)

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
67A		XCFZZ		20309	ES-F-220377	ANTENNA INSTL SEE FIG.5A FOR NHA	UHE,UHX	EA	1
67A	1	PAOZZ	5305-00-180-0009	88044	AN525-10R7	.SCREW,MACHINE	UHE,UHX	EA	12
67A	2	AOOOO		20309	ES-D-220236	.COVER ASSEMBLY	UHE,UHX	EA	1
67A	3	PAOZZ	5310-00-857-5560	96906	MS21045L06	..NUT,SELF-LOCKING	UHE,UHX	EA	8
67A	4	PAOZZ	5310-00-107-2398	88044	AN960PD6L	..WASHER,FLAT	UHE,UHX	EA	16
67A	5	PAOZZ	5305-00-984-4989	96906	MS35206-229	..SCREW,MACHINE	UHE,UHX	EA	8
67A	6	MFOZZ		20309	ES-B-220235	..RING	UHE,UHX	EA	1
67A	7	PAOZZ	5365-00-684-5976	80205	NAS43DD1-7	..SPACER,SLEEVE	UHE,UHX	EA	8
67A	8	MFOZZ		20309	ES-B-220234	..SEAL	UHE,UHX	EA	1
67A	9	MFOZZ		20309	ES-C-220233	..COVER	UHE,UHX	EA	1
67A	10	XDFZZ		20309	ES-F-220229	.SUPPORT ASSEMBLY	UHE,UHX	EA	1
67A	11	PAOZZ	5310-00-857-4965	96906	MS21045L3	.NUT,SELF-LOCKING,HE	UHE,UHX	EA	2
67A	12	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHX	EA	4
67A	13	PAOZZ	5306-00-082-6750	88044	AN43BC7A	.BOLT,EYE	UHE,UHX	EA	2
67A	14	PAOZZ	5310-00-772-3720	96906	MS21075L3	.NUT,SELF-LOCKING PLATE	UHE,UHX	EA	4
67A		XCFZZ		20309	ES-F-220294	APR-39 ANTENNA INST SEE FIG.5A FOR NHA	UHE,UHX	EA	1
67A	15	PAOZZ	5310-00-877-5798	96906	MS21044D3	.NUT,SELF-LOCKING	UHE,UHX	EA	28
67A	16	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT	UHE,UHX	EA	22
67A	17	PAOZZ	5305-00-576-7810	88044	AN525D10R10	.SCREW,MACHINE	UHE,UHX	EA	28
67A	18	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHX	EA	7
67A	19	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE	UHE,UHV	EA	V
67A	20	MDOZZ		20309	ES-D-212999-1	.FAIRING-LH	UHE,UHX	EA	1
67A	20	MDOZZ		20309	ES-D-212999-2	.FAIRING-RH	UHE,UHX	EA	1
67A	21	XDOZZ		20309	ES-D-213000	.BRACKET	UHE,UHX	EA	2
67A	22	MFOZZ		20309	ES-C-213074	.GASKET	UHE,UHX	EA	2
67A	23	PAOZZ	5325-00-582-3601	96906	MS35489-38	.GROMMET,NONMETALLIC	UHE,UHX	EA	2
67A	24	XDOZZ		20309	ES-F-220104	.MOUNT ASSEMBLY	UHE,UHX	EA	1
67A	25	PAOZZ	5310-00-877-5797	96906	MS21044N3	.NUT,SELF-LOCKING	UHE,UHX	EA	1
67A	26	PAOZZ	5310-00-045-3296	96906	MS35338-43	.WASHER,LOCK	UHE,UHX	EA	2
67A	27	PAOZZ	5310-00-167-0825	88044	AN960-10L	.WASHER,FLAT	UHE,UHX	FA	2
67A	28	MFOZZ		20309	ES-B-220309-2	.JUMPER ASSEMBLY	UHE,UHX	EA	1
67A	29	PAOZZ	5310-00-934-9751	96906	MS35650-302	.NUT,PLAIN,HEXAGON	UHE,UHX	EA	1
67A	30	XDOZZ		88044	AN960D10	.WASHER,FLAT	UHE,UHX	EA	2
67A	31	PAOZZ	5305-00-995-3444	96906	MS35207-266	.SCREW,MACHINE	UHE,UHX	EA	1
67A	32	MFOZZ		20309	ES-C-220318	.SPACER	UHE,UHX	EA	2
67A	33	PAOZZ	5310-00-764-7282	96906	MS21047L3	.NUT,SELF-LOCKING	UHE,UHX	EA	1

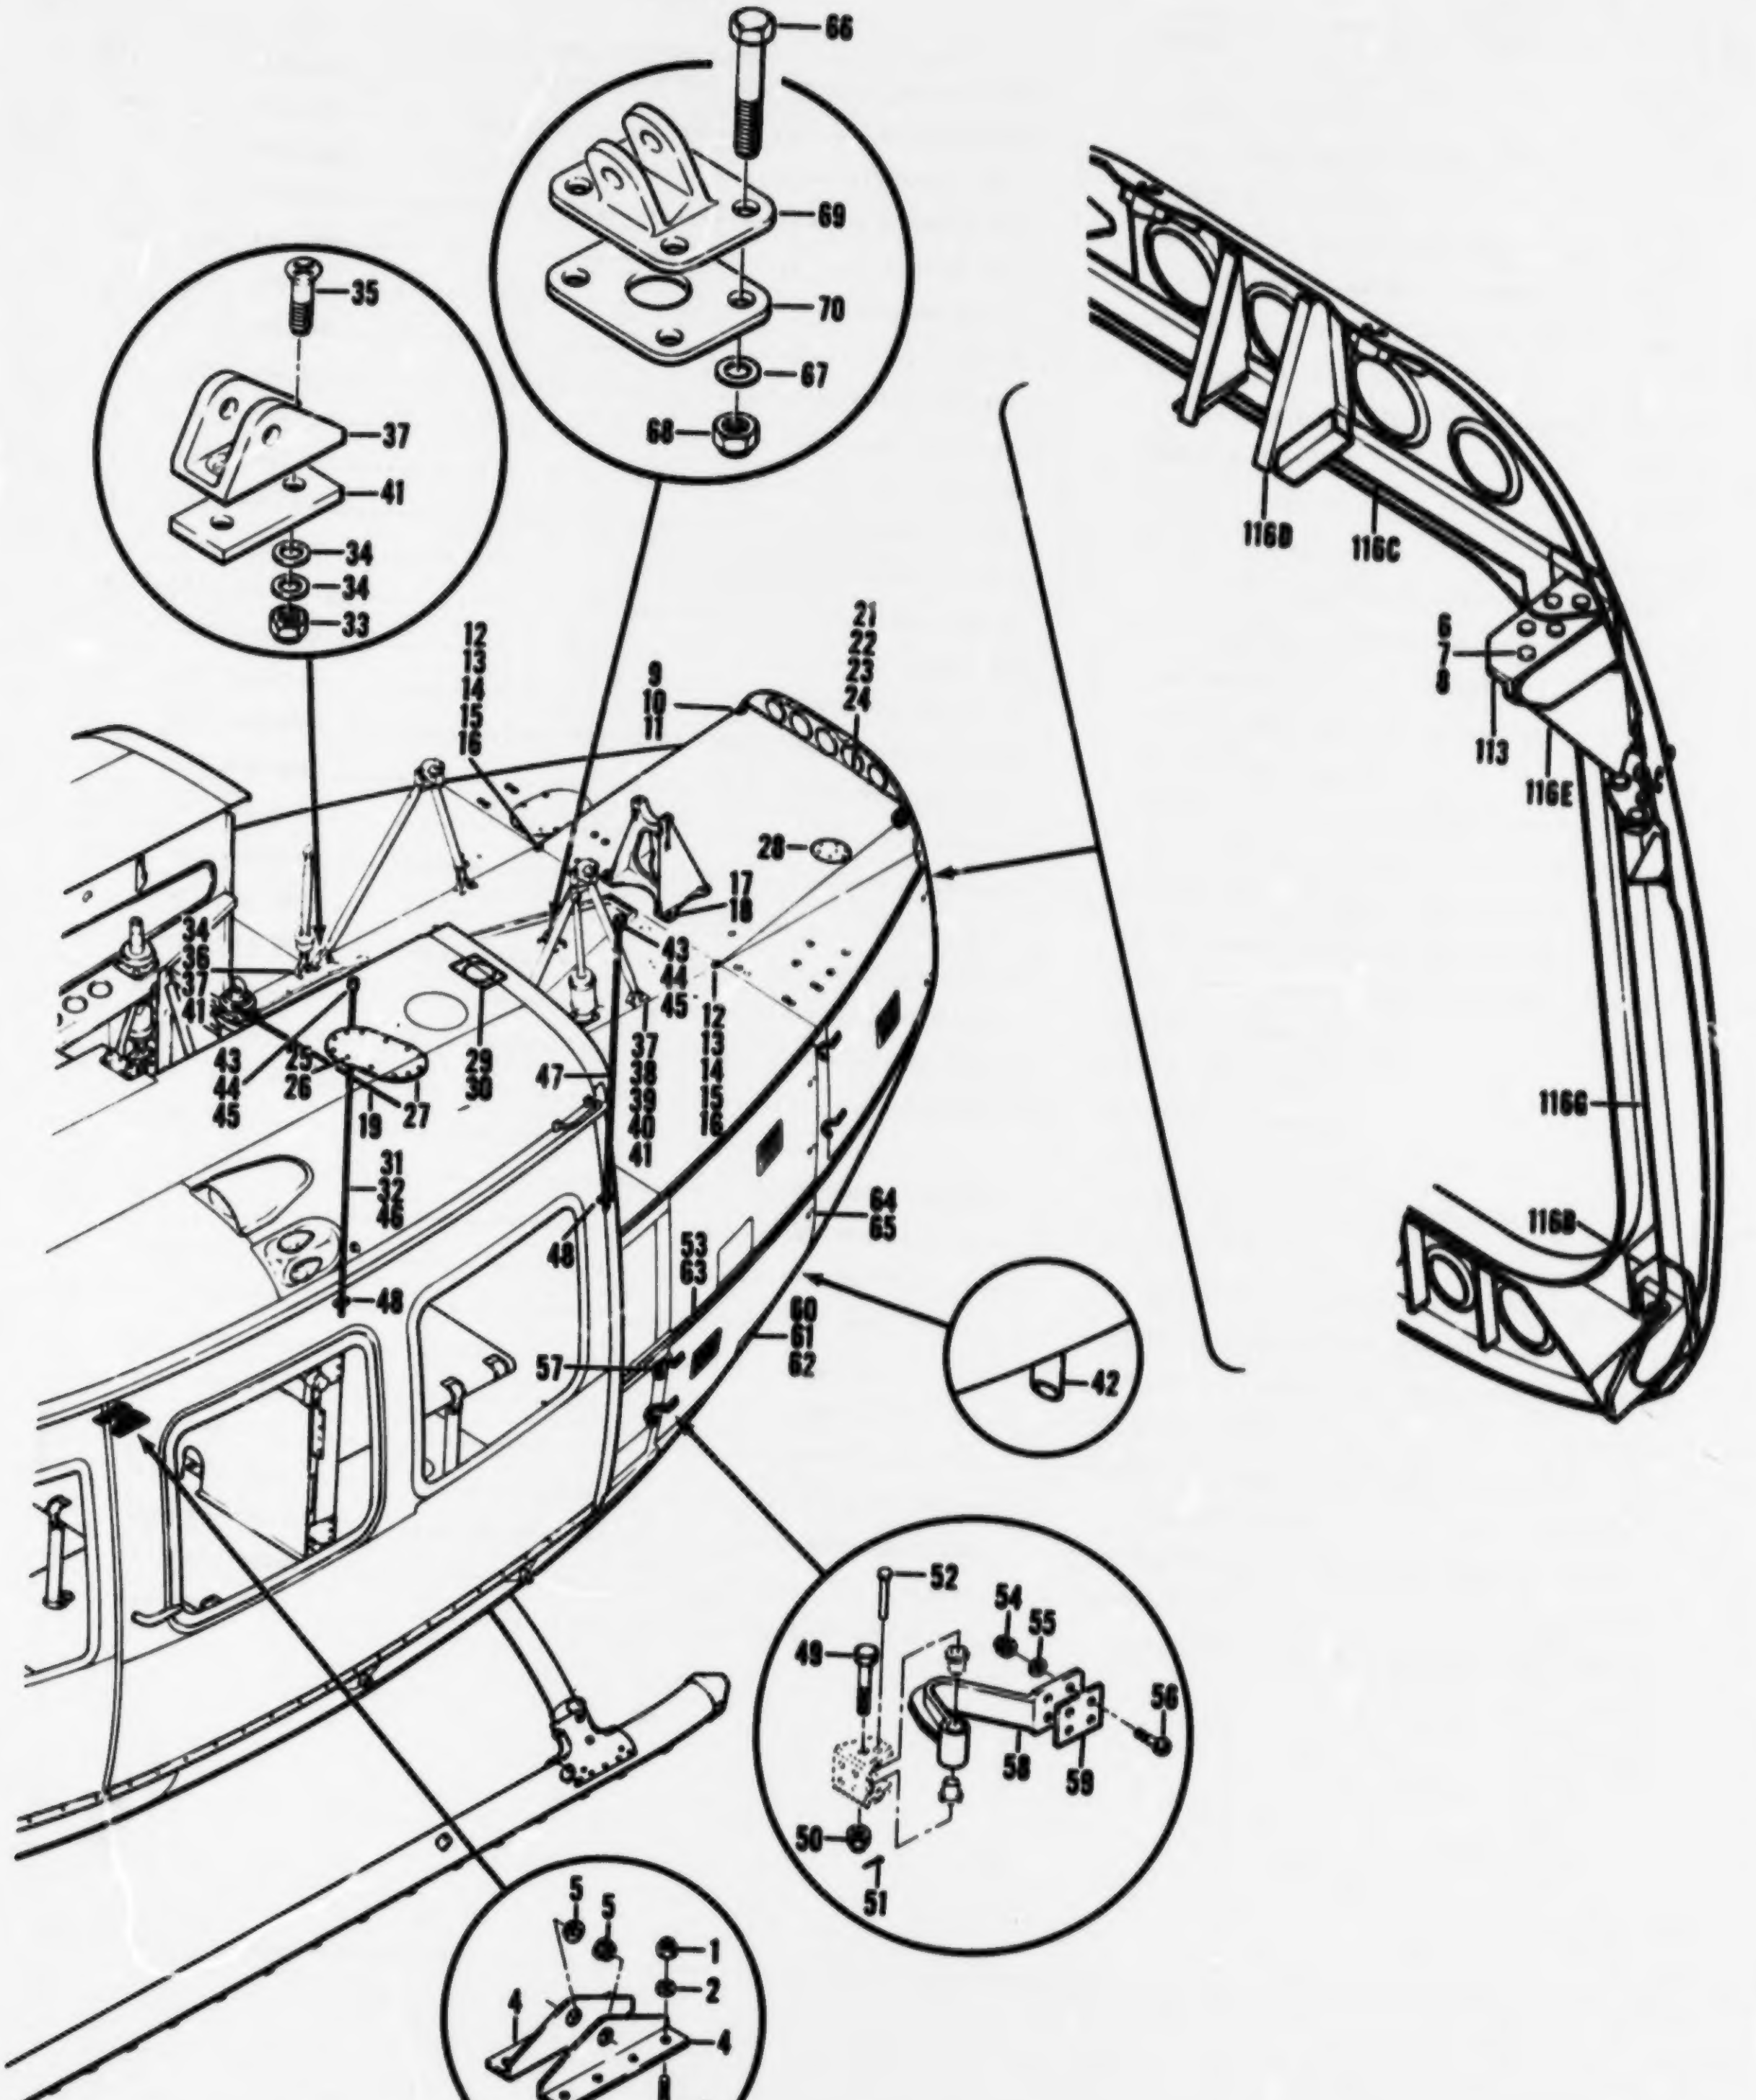
66
69
70
67
68
35
37
41
34
34
33
116D
116C
6
7
8
113
116E
116G
116B
12
13
14
15
16
9
10
11
21
22
23
24
28
17
18
43
44
45
12
13
14
15
16
34
36
37
41
43
44
45
25
26
19
27
29
30
37
38
39
40
41
47
31
32
46
48
48
53
63
64
65
60
61
62
57
42
52
54
55
49
56
58
59
50
51
5
5
1
2
4
4
3

Figure 68. Fuselage Assembly, Structure AFT Section (Sheet 1 of 3)

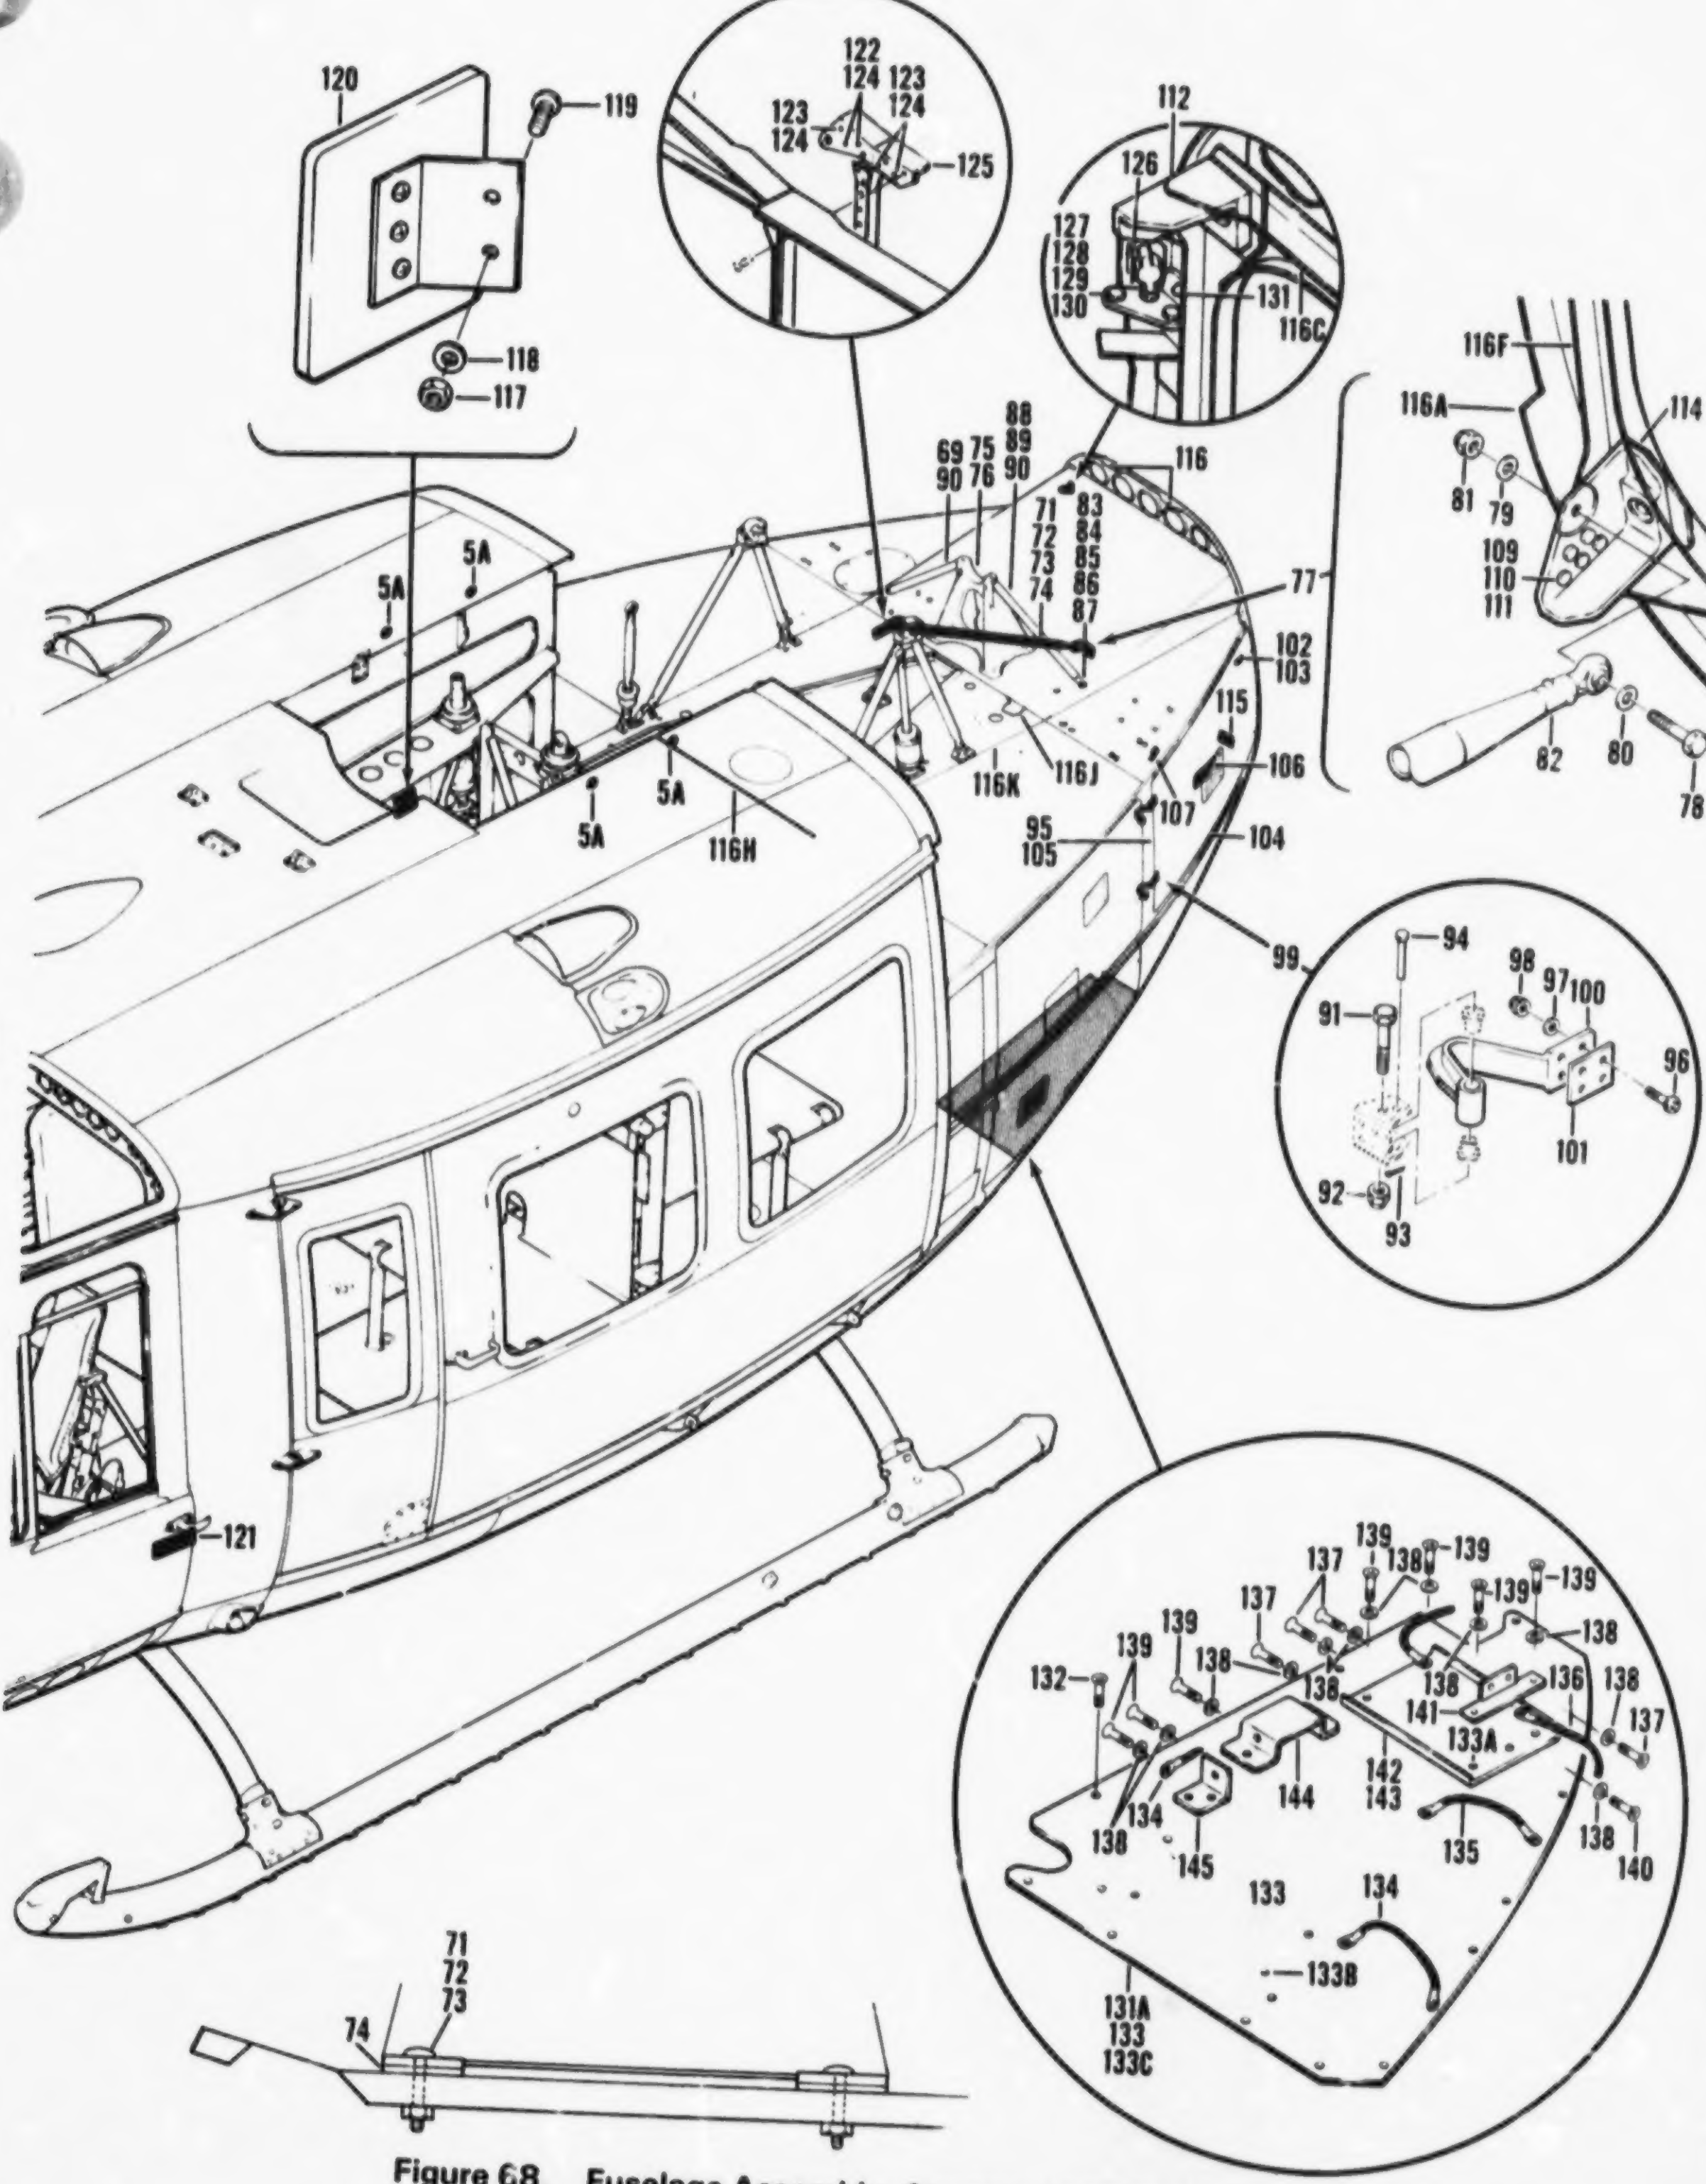
120
119
118
117
122
124 123
123
124
124
123
124
125
112
126
127
128
129
130
131
116C
116F
116A
114
81
79
109
110
111
82
80
78
88
89
90
69 75
90 76
116
71
72
73
74
83
84
85
86
87
77
102
103
115
106
5A
5A
5A
5A
116H
116K
116J
107
95
105
104
99
94
98
97
100
91
96
101
92
93
121
139
138
139
137
139
139
137
139
138
132
139
139
138
138
136
138
137
141
133A
142
143
144
134
138
145
135
138
140
133
134
133B
131A
133
133C
71
72
73
74

Figure 68. Fuselage Assembly, Structure AFT Section (Sheet 2 of 3)

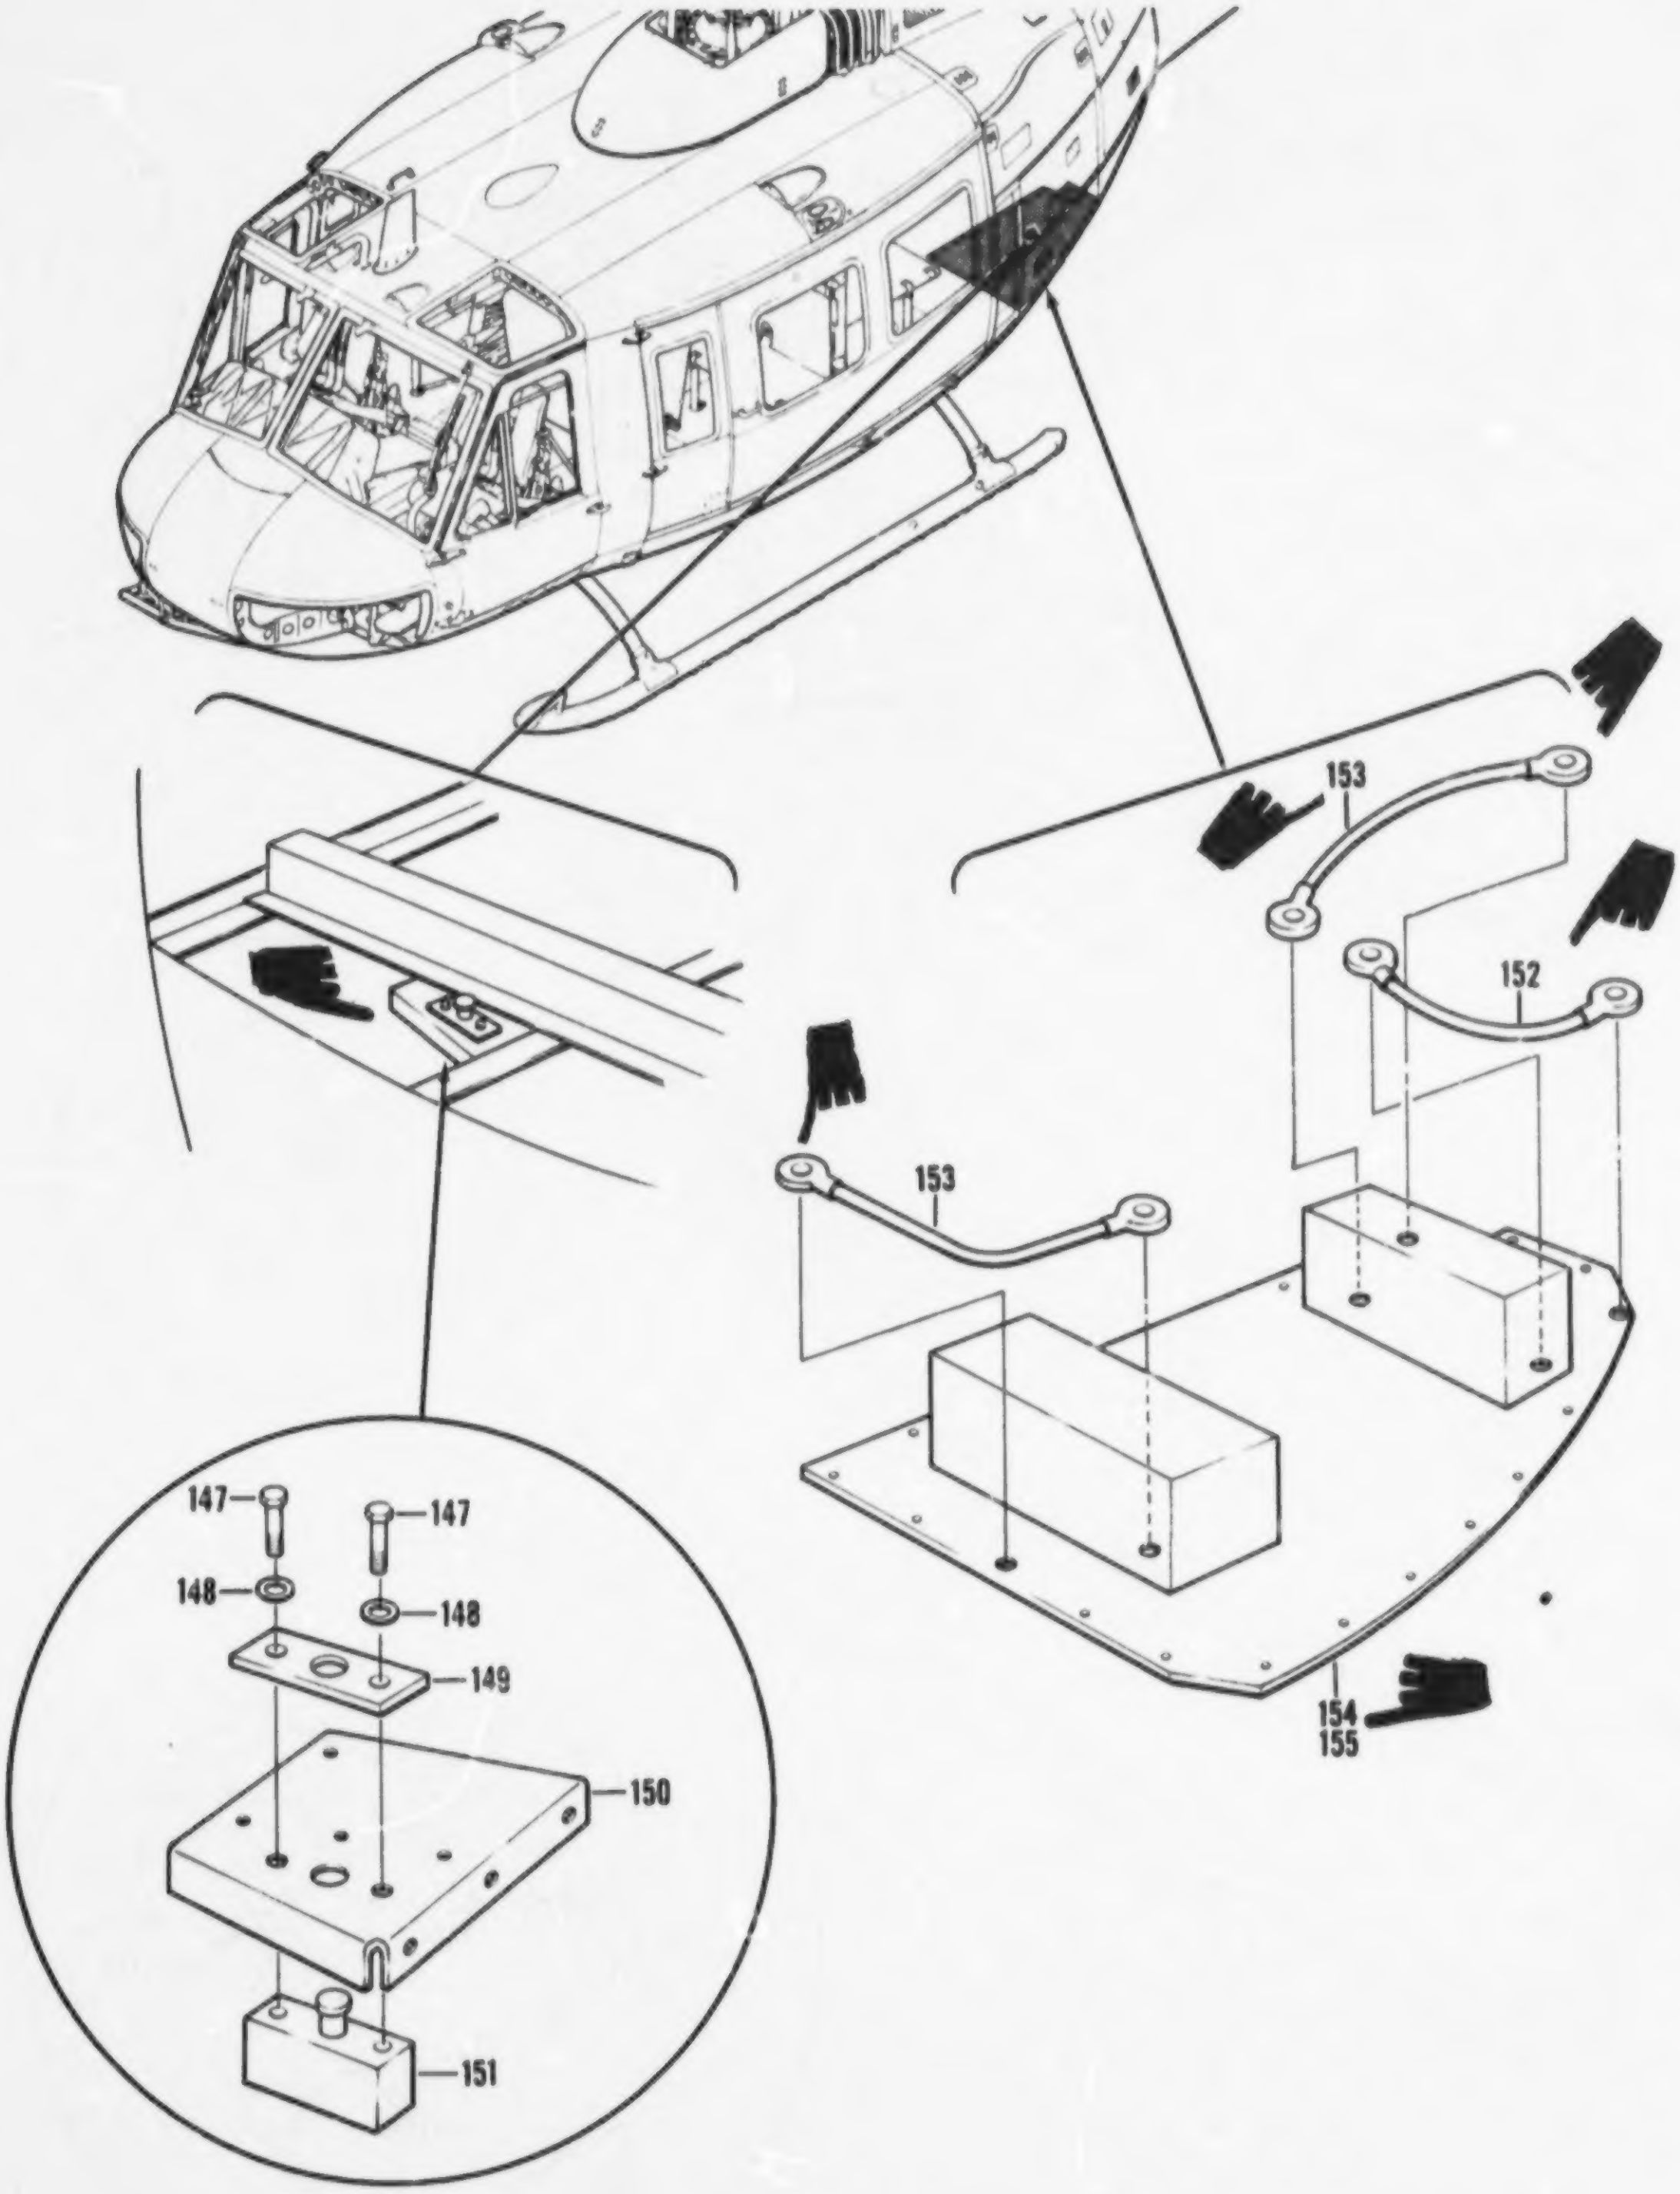
153
152
153
147
147
148
148
149
150
151
154
155

Figure 68. Fuselage Assembly, Structure AFT Section
(Sheet 3 of 3)

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
68		XCFZZ		97499	205-030-006-7	FUSELAGE ASSY USBL EFF 62-2106 THRU 62-2113 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-13	FUSELAGE ASSY USBL EFF 62-12351 THRU 62-12372 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-19	FUSELAGE ASSY USBL EFF 63-8739 THRU 63-8803 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-25	FUSELAGE ASSY USBL EFF 63-8804 THRU 63-8859 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-33	FUSELAGE ASSY USBL EFF 63-12956 THRU 63-13002 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-31	FUSELAGE ASSY USBL EFF 64-13492 THRU 64-13661 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-43	FUSELAGE ASSY USBL EFF 64-13662 THRU 64-13901 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-49	FUSELAGE ASSY USBL EFF 65-9565 THRU 65-12895 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-55	FUSELAGE ASSY USBL EFF 66-746 THRU 66-16033 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-67	FUSELAGE ASSY USBL EFF 66-16034 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-85	FUSELAGE ASSY USBL EFF 67-17145 THRU 67-17312 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-97	FUSELAGE ASSY USBL EFF 67-17313 THRU 67-17777 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-109	FUSELAGE ASSY USBL EFF 57-17778 THRU 68-15324 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-129	FUSELAGE ASSY USBL EFF 68-15325 THRU 68-15489 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-137	FUSELAGE ASSY USBL EFF 68-15490 THRU 68-15578 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-141	FUSELAGE ASSY USBL EFF 68-16050 THRU 68-16342 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-006-147	FUSELAGE ASSEMBLY,S USBL EFF 68-16343 THRU 58-16625 SEE FIG. 20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-031-006-1	FUSELAGE ASSY USBL EFF 69-15000 THRU 69-15291 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-031-006-13	FUSELAGE ASSY USBL EFF 69-15292 THRU 70-15932 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-031-006-19	FUSELAGE ASSY USBL EFF 70-16200 THRU 70-16518 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-031-006-31	FUSELAGE ASSY USBL EFF 71-20000 & SUBSEQUENT SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-275-1	.SUPPORT INSTL..........UHE,UHH,UHV,UHX	EA	1
68	1	PAOZZ	5310-00-263-2862	96906	MS21045C3	..NUT,SELF-LOCKING,HE HEXAGON..........UHE,UHH,UHV,UHX	EA	8
68	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	8
68	3	PAOZZ	5305-00-282-8470	88044	AN525-10R18	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	8
68	4	PAOZZ	1560-00-851-8950	97499	205-030-275-7	..SUPPORT,STRUCTURAL..........UHE,UHH,UHV,UHX	EA	2
68	5	PAOZZ	3120-00-528-5726	97499	22-006-15-11-16	..BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
68		XCFZZ		97499	205-031-197-1	.SERVICE DECK INSTL U/O PN 205-030-006-7 & -13 ....UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-031-197-9	.SERVICE DECK INSTL U/O PN 205-030-006-19,-25, -31,-33,&-43 ....UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-031-197-51	.SERVICE DECK INSTL U/O PN 205-030-006-49,-55, -67,-85,-97,-	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						109,-129, -137,-141,&-147....................UHE,UHH,UHV,UHX		
68		XCFZZ		97499	205-031-197-117	.SERVICE DECK INSTL U/O PN 205-031-006-1.....UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-031-197-137	.SERVICE DECK INSTL U/O PN 205-031-006-13 -19,& -31 ....UHE,UHH,UHV,UHX	EA	1
68	5A	PAOZZ	5325-00-290-8021	71286	244-22	..RECEPTACLE,TURNLOCK.........................UHE,UHH,UHV,UHX	EA	4
68	6	AFFFF		73197	HL3086-6-8	..RIVET ASSEMBLY-LH S.........................UHE,UHH,UHV,UHX	EA	5
68	7	PAFZZ	5320-00-797-1487	73197	HL30-6-8	...PIN-RIVET,THREADED.........................UHE,UHH,UHV,UHX	EA	1
68	8	PAFZZ	5320-00-869-1495	73197	HL1087PBW-6	...COLLAR,PIN-RIVET,TH........................UHE,UHH,UHV,UHX	EA	1
68	9	AFFFF		73197	HL20PB86-6-6	..RIVET ASSEMBLY-RH S.........................UHE,UHH,UHV,UHX	EA	4
68	10	PAFZZ	5320-00-864-6099	73197	HL20PB6-6	...FASTENER ASSEMBL...........................UHE,UHH,UHV,UHX	EA	1
68	11	PAFZZ	5320-00-869-1495	73197	HL1087PBW-6	...COLLAR,PIN-RIVET,TH........................UHE,UHH,UHV,UHX	EA	1
68	12	PAFZZ	5320-00-205-7776	80205	NAS529-6-5	..PIN-RIVET,GROOVED -LH & RH FWD ALTERNATE P/N HL20PB86-6-5 ....UHE,UHH,UHV,UHX	EA	10
68	13	PAFZZ	5320-00-223-6093	80205	NAS179-6	...COLLAR,GROOVED PIN- -LH,RH FWD............UHE,UHH,UHV,UHX	EA	10
68	14	AFFFF		73197	HL20PB86-6-5	..RIVET ASSY, LH & RH FWD.....................UHE,UHH,UHV,UHX	EA	10
68	15	PAFZZ	5320-00-864-6097	73197	HL20PB6-5	...PIN-RIVET,THREADED.........................UHE,UHH,UHV,UHX	EA	1
68	16	PAFZZ	5320-00-869-1495	73197	HL1087PBW-6	...COLLAR,PIN-RIVET,TH........................UHE,UHH,UHV,UHX	EA	1
68	17	PAFZZ	5325-00-671-7345	29372	P102D25-1	..FASTENER,PANEL..............................UHE,UHH,UHV,UHX	EA	2
68	18	PAFZZ	5325-00-076-1496	29372	S192F25-08	..FASTENER SLEEVE.............................UHE,UHH,UHV,UHX	EA	2
68	19	PBFZZ	1560-00-913-4047	97499	205-031-197-21	..STIFFENER,DECK PANE.........................UHE,UHH,UHV,UHX	EA	1
68	21	PAFFF	1560-00-179-4276	97499	205-031-197-127	..DECK ASSEMBLY,SERVI.........................UHE,UHH,UHV,UHX	EA	1
68	22	PADZZ	5320-00-241-1837	96906	MS20427M4-5	...RIVET,SOLID................................UHE,UHH,UHV,UHX	LB	V
68	23	PBDZZ	5320-00-579-6485	96906	MS20615-4M7	...RIVET,SOLID................................UHE,UHH,UHV,UHX	LB	V
68	24	PADZZ	5320-00-684-9911	96906	MS20615-4M5	...RIVET,SOLID................................UHE,UHH,UHV,UHX	LB	V
68	25	PAOZZ	5305-00-912-7307	96906	MS27039-1-08	..SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	12
68	26	PAOZZ	5310-00-905-5473	80205	NAS1474A3	..NUT,SELF-LOCKING,PL.........................UHE,UHH,UHV,UHX	EA	12
68	27	PAOZZ	1560-00-918-1901	97499	205-030-827-11	..COVER,ACCESS................................UHE,UHH,UHV,UHX	EA	1
68	28	MFOZZ	1560-00-919-1343	97499	205-031-137-1	..COVER,ACCESS,AIRCRA U/O PN 205-031-197-51 & -117 ....UHE,UHH,UHV,UHX	EA	1
68	29	XDOZZ		97499	205-061-413-1	..COVER,ACCESS U/O PN 205-031-197-51.........UHE,UHH,UHV,UHX	EA	1
68	30	PAOZZ	5330-00-965-6504	97499	205-060-436-1	..GASKET U/O PN 205-031-197-51...............UHE,UHH,UHV,UHX	EA	1
68	31	PAOZZ	5310-00-111-9394	96906	MS21086L4	..NUT,SELF-LOCKING,PL U/O PN 205-031-197-51,-117, & -137 ....UHE,UHH,UHV,UHX	EA	6
68	32	PAOZZ	5310-00-761-6830	96906	MS21073L4	..NUT,SELF-LOCKING,PL U/O PN 205-031-197-51, -117,& -137 ....UHE,UHH,UHV,UHX	EA	6
68	33	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
68	34	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	12
68	35	PAOZZ	5305-00-045-3180	96906	MS24694S101	.SCREW,MACHINE................................UHE,UHH,UHV,UHX	EA	V
68	36	PAOZZ	5305-00-282-0135	88044	AN525-416R8	.SCREW,MACHINE................................UHE,UHH,UHV,UHX	EA	2
68	37	PAOZZ	1560-00-967-3371	97499	205-060-135-1	.BRACKET,EYE,NONROTA SHAFT USBL EFF 62-2106 THRU 64-13810 ....UHE,UHH,UHV,UHX	EA	6
68	37	PAOZZ	1560-00-967-3371	97499	205-060-135-1	.BRACKET,EYE,NONROTA SHAFT USBL EFF 64-13811 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	5
68	38	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
68	39	PADZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	12
68	40	PBOZZ	5305-00-045-3180	96906	MS24694S101	.SCREW,MACHINE................................UHE,UHH,UHV,UHX	EA	6

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
68	41	PAOZZ	5340-00-067-9742	97499	205-060-137-3	.SHIM USBL EFF 62-2106 THRU 64-13810.........UHE,UHH,UHV,UHX	EA	6
68	41	PAOZZ	5340-00-067-9742	97499	205-060-137-3	.SHIM USBL EFF 64-13811 & SUBSEQUENT.........UHE,UHH,UHV,UHX	EA	5
68	42	PBOZZ	4710-00-176-9721	97499	205-030-196-9	.TUBE ASSEMBLY,METAL USBL EFF 69-15292 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
68	43	XCFZZ		97499	205-030-430-1	.DRAIN INSTL.................................UHE,UHH,UHV,UHX	EA	1
68	44	PAOZZ	4730-00-640-5099	96906	MS2190006	..NIPPLE,TUBE...............................UHE,UHH,UHV,UHX	EA	2
68	45	PCOZZ	5330-00-804-5695	96906	MS28778-6	..PACKING,PREFORMED........................,..UHE,UHH,UHV,UHX	EA	2
68	46	MFOZZ	1560-00-987-1400	97499	205-030-431-1	..TUBE ASSEMBLY,DRAIN.......................UHE,UHH,UHV,UHX	EA	1
68	47	MFOZZ	1560-00-987-1401	97499	205-030-432-1	..TUBE ASSEMBLY,DRAIN.......................UHE,UHH,UHV,UHX	EA	1
68	48	PAOZZ	5325-00-291-9366	96906	MS35489-11	..GROMMET,NONMETALLIC.......................UHE,UHH,UHV,UHX	EA	2
68		XCFZZ		97499	205-030-484-33	.DOOR INSTL-LH U/O PN 205-030-006-7,-13,19,-25,-31,-33,-43, & -49 SEE FIG.72FOR BREAKDOWN................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-028-1	.DOOR INSTL-LH U// PN 205-030-006-49,-55,-67,-85,-97,-109,-129,-137,-141,-147,205-031-006-1,-13,-19 & -31 SEE FIG.72 FOR BREAKDOWN...................................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-484-34	.DOOR INSTL-RH U/O PN 205-030-006-7,-13,-19,-25,-31,-33,-43, & -49 SEE FIG.72FOR BREAKDOWN................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-028-2	.DOOR INSTL-RH U/O PN 205-030-006-49,-55, & -67 SEE FIG.72 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-028-31	.DOOR INSTL-RH U/O PN 205-030-006-67,-83,-97,-109,-129,-137,-141,-147,205-031-006-1,-13,-19 & -31 SEE FIG. 72 FOR BREAKDOWN...................................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-487-29	.DOOR INSTL-RH U/O PN 205-030-006-7,-13,-19, -25,-31,-33,-43,& -49 USBL EFF 62-2106 THRU 65-9675........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-031-1	.DOOR INSTL-RH U/O PN 205-030-006-49,-55,-67, -85,-97,-109,-129,-137, -141,-147,205-031-006-1, -13,-19,& -31 USBL EFF 65-9676 & SUBSEQUENT............................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-485-33	.DOOR INSTL-LH U/O PN 205-030-006-7,-13,-19, -25,-31,-33,-43,& -49 USBL EFF 62-2106 THRU 65-9675........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-029-1	.DOOR INSTL-LH U/O PN 205-030-006-49,-55,-67, -85,-97,-109,-129,-137, -141,-147,205-031-006-1, -13,-19,& -31 USBL EFF 65-9676 & SUBSEQUENT............................UHE,UHH,UHV,UHX	EA	1
68	49	PAOZZ	5306-00-182-2006	88044	AN3H15A	..BOLT,MACHINE..............................UHE,UHH,UHV,UHX	EA	2
68	50	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	2
68	51	PAOZZ	5315-00-234-1856	96906	MS24665-155	..PIN,COTTER................................UHE,UHH,UHV,UHX	EA	2
68	52	PAOZZ	5315-00-812-3763	96906	MS20392-1C41	..PIN,STRAIGHT,HEA..........................UHE,UHH,UHV,UHX	EA	2
68	53	PAOOO	1560-01-135-3103	97499	205-030-029-103	..DOOR ASSEMBLY,AIRCR.......................UHH,UHV,UHE,UHX	EA	1
68	53	PBOOO	1560-00-400-2747	97499	205-030-031-9	..DOOR,ACCESS -RH...........................UHE,UHH,UHV,UHX	EA	1
68	54	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	8
68	55	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..............................UHE,UHH,UHV,UHX	EA	8
68	56	PAOZZ	5305-00-180-0014	88044	AN525-10R12	...SCREW,MACHINE............................UHE,UHH,UHV,UHX	EA	8
68	56	XDOZZ		96906	MS24694-56	...SCREW,MACHINE............................UHE,UHH,UHV,UHX	EA	8
68	57	PAOZZ	5340-00-943-0849	97499	205-030-033-3	...HINGE,ACCESS DOOR -LH....................UHE,UHH,UHV,UHX	EA	1
68	57	PAOZZ	5340-00-943-0852	97499	205-030-033-9	...HINGE,ACCESS DOOR -RH....................UHE,UHH,UHV,UHX	EA	1
68	58	PAOZZ	5340-00-943-2176	97499	205-030-033-5	...HINGE,ACCESS DOOR -LH.................... UHE,UHH,UHV,UHX	EA	1
68	58	PAOZZ	5340-00-943-0853	97499	205-030-033-7	...HINGE,ACCESS DOOR -RH.................. ..UHE,UHH,UHV,UHX	EA	1
68	59	PAOZZ	5365-00-967-7642	97499	120-062-1	...SHIM.....................................UHE,UHH,UHV,UHX	EA	2
68	60	MFOZZ	5315-00-200-3456	96906	MS20253-2-275	...PIN,STRAIGHT,HEA HEADLESS.................UHE,UHH,UHV,UHX	EA	1
68	61	PAOZZ	5360-00-964-6473	97499	205-030-353-1	...SPRING,HELICAL,TORS.......................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
68	62	MFOZZ	1560-00-869-6903	97499	205-030-029-5	...DOOR,ACCESS -LH U/O PN 205-030-029-9......UHE,UHH,UHV,UHX	EA	1
68	63	MFOZZ	1560-00-177-4002	97499	205-030-031-7	...DOOR,ACCESS -RH......UHE,UHH,UHV,UHX	EA	1
68	63	XAOOO		97499	205-030-029-11	...DOOR ASSEMBLY-LH......UHE,UHH,UHV,UHX	EA	1
68	63	XAOOZ		97499	205-030-485-41	...DOOR ASSY,FUSELAGE......UHE,UHH,UHV,UHX	EA	1
68	63	XAOOO		97499	205-030-031-11	...COVER ASSEMBLY-RH......UHE,UHH,UHV,UHX	EA	1
68	64	PAOZZ	5340-00-872-7937	83014	H605S063A123	....CATCH,FLUSH......UHE,UHH,UHV,UHX	EA	2
68	65	PAOZZ	5310-00-550-6009	96906	MS15795-704	....WASHER,FLAT......UHE,UHH,UHV,UHX	EA	8
68	66	PAOZZ	5306-00-182-2039	88044	AN4H23A	.BOLT,MACHINE......UHE,UHH,UHV,UHX	EA	4
68	67	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT......UHE,UHH,UHV,UHX	EA	4
68	68	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON......UHE,UHH,UHV,UHX	EA	4
68	69	PAOZZ	1560-00-072-4413	97499	205-060-139-1	.BRACKET,CLEVIS......UHE,UHH,UHV,UHX	EA	1
68	70	PAOZZ	5365-00-886-2140	97499	205-060-138-3	.SHIM......UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-236-1	.SUPPORT INSTL......UHE,UHH,UHV,UHX	EA	1
68	71	PAOZZ	5305-00-182-1369	88044	AN525-416R22	..SCREW,MACHINE......UHE,UHH,UHV,UHX	EA	4
68	72	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT......UHE,UHH,UHV,UHX	EA	8
68	73	PAOZZ	5310-00-807-1468	96906	MS21042-4	..NUT,SELF-LOCKING,EX......UHE,UHH,UHV,UHX	EA	4
68	74	PAOZZ	5365-00-967-7621	97499	205-030-424-1	..SHIM......UHE,UHH,UHV,UHX	EA	6
68	74	PAOZZ	5365-00-067-9743	97499	120-038-28-8	..SHIM......UHE,UHH,UHV,UHX	EA	3
68	75	PAFZZ	1560-00-987-5143	97499	205-030-236-3	..SUPPORT,FUSELAGE AS......UHE,UHH,UHV,UHX	EA	1
68	76	PAOZZ	5310-00-844-5081	80205	NAS1197-416	..WASHER,FLAT......UHE,UHH,UHV,UHX	EA	1
68	77	XCFZZ		97499	205-030-249-1	.TENSION ROD INSTL USBL EFF 62-2106 THRU 67-17557 ......UHE,UHH,UHV,UHX	EA	1
68	77	XCFZZ		97499	205-030-249-7	.TENSION ROD INSTL USBL EFF 67-17558 & SUBSEQUENT ......UHE,UHH,UHV,UHX	EA	1
68	78	PAOZZ	5306-00-292-8252	88044	AN4H7A	..BOLT,MACHINE......UHE,UHH,UHV,UHX	EA	2
68	79	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT......UHE,UHH,UHV,UHX	EA	2
68	80	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT......UHE,UHH,UHV,UHX	EA	2
68	81	PAOZZ	5310-00-807-1468	96906	MS21042-4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON......UHE,UHH,UHV,UHX	EA	2
68	82	PAOZZ	3040-00-179-6806	97499	205-030-249-9	..CONNECTING LINK,RIG......UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-831-1	.BRACE INSTL-LH U/O PN 205-030-006-7,-13,& -19 ......UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-831-11	.BRACE INSTL-LH U/O PN 205-030-006-25,-31,-33, & -43 ......UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-831-13	.BRACE INSTL-LH U/O PN 205-030-006-49,-55,-67, -85,-97,-109, -129,-137, -141,-147,205-031-006-1, -13,-19,& -31 ......UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-831-2	.BRACE INSTL-RH U/O PN 205-030-006-7,-13,& -19 ......UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-831-12	.BRACE INSTL-RH U/O PN 205-030-006-25,-31,-33, & -43 ......UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-831-14	.BRACE INSTL-RH U/O PN 205-030-006-49,-55,-67, -85,-97,-109, -129,-137, -141,-147,205-031-006-1, -13,-19,& -31 ......UHE,UHH,UHV,UHX	EA	1
68	83	PAOZZ	5306-00-182-1959	88044	AN4H11A	..BOLT,MACHINE......UHE,UHH,UHV,UHX	EA	1
68	84	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT......UHE,UHH,UHV,UHX	EA	1
68	85	PAOZZ	5365-00-728-3200	97499	120-038-32-9	..SHIM......UHE,UHH,UHV,UHX	EA	2
68	86	PAOZZ	5365-00-763-1020	97499	120-035-32-9	..SHIM......UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
68	87	PAOZZ	5310-00-807-1468	96906	MS21042-4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	1
68	88	PAOOO	1560-00-924-0407	97499	205-030-831-15	..BRACE ASSEMBLY,BEAR..........................UHE,UHH,UHV,UHX	EA	1
68	89	PAOZZ	5340-00-921-8491	97499	205-030-855-1	...CONNECTOR,ROD END..........................UHE,UHH,UHV,UHX	EA	1
68	90	PAOZZ	5310-00-167-1300	88044	AN316-6R	...NUT,PLAIN,HEXAGON..........................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-486-27	.DOOR INSTL-LH U/O PN 205-030-006-7,-13,-19, -25,-31,-33,-43,& -49 USBL EFF 62-2106 THRU 65-9675........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-030-1	.DOOR INSTL-LH U/O PN 205-030-006-49 & -55 USBL EFF 65-9676 THRU 66-816..................................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-030-7	.DOOR INSTL-LH U/O PN 205-030-006-55,-67,-85, -97,-109,-129, -137,-141, -147,205-031-006-1,-13,& -19,& -31 USBL EFF 66-817 & SUBSEQUENT.................................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-486-28	.DOOR INSTL-RH U/O PN 205-030-006-7,-13,-19, -25,-31,-33,-43,& -49 USBL EFF 62-2106 THRU 65-9675........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-030-2	.DOOR INSTL-RH U/O PN 205-030-006-49 & -55 USBL EFF 65-9676 THRU 66-816..................................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-030-8	.DOOR INSTL-RH U/O PN 205-030-006-55,-67,-85, -97,-109,-129, -137,-141, -147,205-031-006-1,-13,& -19 USBL EFF 66-817 & SUBSEQUENT.................................UHE,UHH,UHV,UHX	EA	1
68	91	PAOZZ	5306-00-182-2006	88044	AN3H15A	..BOLT,MACHINE................................UHE,UHH,UHV,UHX	EA	2
68	92	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	2
68	93	PAOZZ	5315-00-234-1856	96906	MS24665-155	..PIN,COTTER..................................UHE,UHH,UHV,UHX	EA	2
68	94	PAOZZ	5315-00-812-3763	96906	MS20392-1C41	..PIN,STRAIGHT,HEA HEADED.....................UHE,UHH,UHV,UHX	EA	2
68	95	PBOOO	1560-00-400-2749	97499	205-030-030-29	..DOOR,ACCESS -LH.............................UHE,UHH,UHV,UHX	EA	1
68	95	PBOOO	1560-00-400-2748	97499	205-030-030-30	..DOOR,ACCESS -RH.............................UHE,UHH,UHV,UHX	EA	1
68	96	XDOZZ	5305-00-925-7657	96906	MS27039-1-09	...SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	8
68	97	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	8
68	98	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	8
68	99	PAOZZ	5340-00-456-6033	97499	205-030-033-15	...HINGE......................................UHE,UHH,UHV,UHX	EA	1
68	99	PAOZZ	5340-00-443-1156	97499	205-030-033-16	...HINGE,FUSELAGE COMP........................UHE,UHH,UHV,UHX	EA	1
68	100	PAOZZ	5340-00-443-1157	97499	205-030-033-17	...HINGE,FUSELAGE COMP........................UHE,UHH,UHV,UHX	EA	1
68	100	XDOZZ		97499	205-030-033-18	...HINGE,ACCESSDOOR...........................UHE,UHH,UHV,UHX	EA	1
68	101	PAOZZ	5365-00-967-7642	97499	120-052-1	...SHIM.......................................UHE,UHH,UHV,UHX	EA	2
68	102	PAOZZ	5310-00-550-5009	96906	MS15795-704	...WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	8
68	103	PAOZZ	5340-00-872-7937	83014	H605S063A123	...CATCH,FLUSH................................UHE,UHH,UHV,UHX	EA	2
68	104	PAOZZ	1560-00-831-1007	97499	205-030-030-27	...SEAL,DOOR ASSEMBLY.........................UHE,UHH,UHV,UHX	EA	1
68	105	XAOOZ		97499	205-030-030-5	...DOOR ASSY,AFT -LH U/O PN 205-030-030-3....UHE,UHH,UHV,UHX	EA	1
68	105	XAOOO		97499	205-030-030-31	...COVER ASSEMBLY-LH U/O PN 205-030-030-29 ....UHE,UHH,UHV,UHX	EA	1
68	105	XAOOZ		97499	205-030-030-6	...DOOR ASSY -RH U/O PN 205-030-030-4........UHE,UHH,UHV,UHX	EA	1
68	105	XAOOO		97499	205-030-030-32	...COVER ASSEMBLY-RH U/O PN 205-030-030-30 ....UHE,UHH,UHV,UHX	EA	1
68	106	XBOZZ	1560-00-511-8218	97499	205-030-034-1	....LOUVER DOOR...............................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-060-835-1	.CLIP INSTL-LH................................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-060-835-2	.CLIP INSTL-RH................................UHE,UHH,UHV,UHX	EA	1
68	107	PAFZZ	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER.............UHE,UHH,UHV,UHX	EA	1
68	107	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK............................UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-713-17	.BULKHEAD INSTL U/O PN 205-030-006-7 & -13	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						........UHE,UHH,UHV,UHX		
68		XCFZZ		97499	205-030-713-23	.BULKHEAD INSTL U/O PN 205-030-006-19 & -25 ....UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-713-33	.BULKHEAD INSTL U/O PN 205-030-006-33........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-713-35	.BULKHEAD INSTL U/O PN 205-030-006-31,-43,-49, -55,-67,& -85 ....UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-713-53	.BULKHEAD INSTL U/O PN 205-030-006-97,-109, & -129 ....UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-713-63	.BULKHEAD INSTL U/O PN 205-030-006-137,-141, & -147 ....UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-713-65	.BULKHEAD INSTL U/O PN 205-031-006-1,-13,-19, & -31 ....UHE,UHH,UHV,UHX	EA	1
68	109	ADDDD		73197	HL20PB85-6-5	..RIVET ASSEMBLY 1/64 IN.OVERSIZE........UHE,UHH,UHV,UHX	EA	V
68	109	PADZZ	5320-00-864-6097	73197	HL20PB6-5	...PIN-RIVET,THREADED........UHE,UHH,UHV,UHX	EA	1
68	109	PADZZ	5320-00-869-1495	73197	HL1087PBW-6	...COLLAR,PIN-RIVET,TH........UHE,UHH,UHV,UHX	EA	1
68	109	ADDDD		73197	HL64PB87-6-5	..RIVET ASSEMBLY 1/64 IN.OVERSIZE........UHE,UHH,UHV,UHX	EA	V
68	109	PADZZ	5320-00-110-5716	73197	HL64PB6-5	...PIN-RIVET,THREAD........UHE,UHH,UHV,UHX	EA	1
68	109	PADZZ	5320-00-145-1780	73197	HL87W6	...COLLAR,PIN-RIVET,TH........UHE,UHH,UHV,UHX	EA	1
68	110	ADDDD		73197	HL20PB85-6-6	..RIVET ASSEMBLY........UHE,UHH,UHV,UHX	EA	V
68	110	PADZZ	5320-00-864-5099	73197	HL20PB6-6	...FASTENER ASSEMBL........UHE,UHH,UHV,UHX	EA	1
68	110	PADZZ	5320-00-869-1495	73197	HL1087PBW-6	...COLLAR,PIN-RIVET,TH........UHE,UHH,UHV,UHX	EA	1
68	110	ADDDD		73197	HL64PB87-6-6	..RIVET ASSEMBLY 1/64 IN.OVERSIZE........UHE,UHH,UHV,UHX	EA	V
68	110	PADZZ	5320-00-835-2216	73197	HL64PB6-6	...PIN-RIVET,THREADED........UHE,UHH,UHV,UHX	EA	1
68	110	PADZZ	5320-00-145-1780	73197	HL87W6	...COLLAR,PIN-RIVET,TH........UHE,UHH,UHV,UHX	EA	1
68	111	XDDDZ		73197	HL20PB85-5-7	..FASTENER ASSEMBL........UHE,UHH,UHV,UHX	EA	V
68	111	PADZZ	5320-00-869-4298	73197	HL20PB6-7	...PIN-RIVET,THREADED........UHE,UHH,UHV,UHX	EA	1
68	111	PADZZ	5320-00-869-1495	73197	HL1087PBW-6	...COLLAR,PIN-RIVET,TH........UHE,UHH,UHV,UHX	EA	1
68	111	ADDDD		73197	HL64PB87-6-7	..RIVET ASSEMBLY 1/64 IN.OVERSIZE........UHE,UHH,UHV,UHX	EA	V
68	111	PADZZ	5320-00-835-2195	73197	HL64PB6-7	...PIN-RIVET,THREADED........UHE,UHH,UHV,UHX	EA	1
68	111	PADZZ	5320-00-145-1780	73197	HL87W6	...COLLAR,PIN-RIVET,TH........UHE,UHH,UHV,UHX	EA	1
68	111	ADDDD		73197	HL21PB85-5-4	..RIVET ASSEMBLY........UHE,UHH,UHV,UHX	EA	2
68	111	PADZZ	5320-00-103-0732	73197	HL21PB5-4	...PIN-RIVET,THREADED........UHE,UHH,UHV,UHX	EA	1
68	111	PADZZ	5320-00-869-1496	73197	HL86PBW5	...COLLAR,PIN-RIVET........UHE,UHH,UHV,UHX	EA	1
68	112	PADZZ	1560-00-016-6341	97499	205-030-288-3	..SUPPORT,STRUCTURAL -RH UPPER........UHE,UHH,UHV,UHX	EA	1
68	113	PADZZ	1560-00-918-6349	97499	205-030-767-3	..FITTING,UPPER FUSEL -LH UPPER........UHE,UHH,UHV,UHX	EA	1
68	114	PADZZ	1560-00-110-4306	97499	205-030-848-3	..FITTING,TAIL COOM -RH LOWER........UHE,UHH,UHV,UHX	EA	1
68	114	PADZZ	1560-00-131-6436	97499	205-030-713-29	..PLATE,STRUCTURAL,AI........UHE,UHH,UHV,UHX	EA	1
68	114	PADZZ	1560-00-131-6437	97499	205-030-713-27	..PLATE,STRUCTURAL,AI........UHE,UHH,UHV,UHX	EA	1
68	115	PADZZ	1560-00-871-3330	97499	205-030-815-3	..FITTING,TAIL BOOM,L -LH........UHE,UHH,UHV,UHX	EA	1
68	116	PAOZZ	5325-00-298-7026	72794	R5	..RECEPTACLE,TURNL FASTENER........UHE,UHH,UHV,UHX	EA	4
68	116A	PBDZZ	1560-00-220-5302	97499	205-030-713-25	..FORMER........UHE,UHH,UHV,UHX	EA	1
68	116B	PBDZZ	1560-00-125-4247	97499	205-030-712-13	..PLATE,STRUCTURAL,AI........UHE,UHH,UHV,UHX	EA	1
68	116C	PBDZZ	5340-00-125-4246	97499	205-030-712-5	..BRACKET,ANGLE........UHE,UHH,UHV,UHX	EA	1
68	116D	PBDZZ	5340-00-131-6434	97499	205-030-713-13	..BRACKET,ANGLE........UHE,UHH,UHV,UHX	EA	1
68	116E	PBDZZ	1560-00-472-4522	97499	205-030-712-33	..ANGLE,BULKHEAD........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
68	116F	PBDZZ	1560-00-472-4520	97499	205-030-712-29	..ANGLE,BULKHEAD..........UHE,UHH,UHV,UHX	EA	1
68	116G	PBDZZ	1560-00-472-4519	97499	205-030-712-1	..ANGLE,BULKHEAD..........UHE,UHH,UHV,UHX	EA	1
68	116H	PADOD	1560-00-176-1448	97499	205-030-253-131	.BULKHEAD ASSY,AIRCR..........UHE,UHH,UHV,UHX	EA	1
68	116J	XDDZZ	1560-00-153-4243	97499	205-030-253-133	..PANEL ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
68		XCDFF		97499	205-030-254-109	.SHELF INSTL..........UHE,UHH,UHV,UHX	EA	1
68	116K	PBDZZ	1560-01-022-7227	97499	205-030-254-111	..SHELF ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-031-329-1	.MIRROR INSTL TRANSMISSION OIL..........UHE,UHH,UHV,UHX	EA	1
68	117	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	2
68	118	PAOZZ	5310-00-184-8966	88044	AN960PD8	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
68	119	PAOZZ	5305-00-281-8527	88044	AN525-832R8	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
68	120	PAOZZ	1680-00-738-5962	97499	205-031-329-3	..MIRROR ASSEMBLY,REA TRANSMISSION OIL..........UHE,UHH,UHV,UHX	EA	1
68	121	MFOZZ	7520-00-054-2155	97499	205-070-829-1	.STENCIL,MARKING..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-919-3	.MOUNT INSTL,PYLON U/O PN 205-030-006-73 & -13 SEE FIG.91 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-919-5	.MOUNT INSTL,PYLON U/O PN 205-030-006-19,-25,& -33 SEE.91 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-919-7	.MOUNT INSTL,PYLON U/O PN 205-030-006-31 & -43 SEE FIG.91 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-919-43	.MOUNT INSTL,PYLON U/O PN 205-030-006-49,-55,-67,-85,-97,-109,& -129 SEE FIG.91 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-919-53	.MOUNT INSTL,PYLON U/O PN 205-030-006-137,-141,-147, & 205-031-006-1 SEE FIG.91 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-919-65	.MOUNT INSTL,PYLON U/O PN 205-031-006-13 SEE FIG.91 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		97499	205-030-919-75	.MOUNT INSTL,PYLON U/O PN 205-031-006-19 & -31 SEE FIG.91 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
68	122	PAOZZ	5320-00-205-7320	80205	NAS529-6-7	.PIN-RIVET,GROOVED..........UHE,UHH,UHV,UHX	EA	2
68	123	PAOZZ	5320-00-205-7776	80205	NAS529-6-5	.PIN-RIVET,GROOVED..........UHE,UHH,UHV,UHX	EA	4
68	124	PAOZZ	5320-00-223-6093	80205	NAS179-6	.COLLAR,GROOVED PIN-..........UHE,UHH,UHV,UHX	EA	6
68	125	PAFZZ	5340-00-162-3658	97499	205-030-296-1	.BRACKET,ANGLE..........UHE,UHH,UHV,UHX	EA	1
68	126	PBFZZ	1560-00-413-1490	97499	205-030-307-1	.SUPPORT..........UHE,UHH,UHV,UHX	EA	1
68	126	PBFZZ	1560-00-413-1491	97499	205-030-307-2	.SUPPORT..........UHE,UHH,UHV,UHX	EA	1
68	127	PAFZZ	5306-00-274-2119	88044	AN3-5A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
68	128	PAFZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
68	129	PAFZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
68	130	PAFZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX..........UHE,UHH,UHV,UHX	EA	2
68	131	AFFFZ	5320-00-404-5679	73197	HL3472-8-3-12	.STUD,PIN-COLLAR ASY..........UHE,UHH,UHV,UHX	EA	1
68	131	PAFZZ	5320-00-298-6574	73197	HL34-8-3-12	..PIN-RIVET,STUD ASY..........UHE,UHH,UHV,UHX	EA	1
68	131A	PAFZZ	1560-00-235-1990	97499	205-031-249-57A	.SHELF ASSY,FUSELAGE..........UHE,UHH,UHV,UHX	EA	1
68		XCFZZ		20309	ES-F-220379	RADIO SHELF AND EQMT INSTL SEE FIG.5A FOR NHA..........UHE	EA	1
68	132	PAOZZ	5305-00-180-0009	88044	AN525-10R7	.SCREW,MACHINE..........UHE	EA	20
68	133	MFFFF		20309	ES-F-212924	.SHELF,EQUIPMENT..........UHE	EA	1
68	133C	PAOZZ		97499	205-031-199-7	SHELF FUSELAGE..........UHE,UHH,UHV	EA	1
68	133A	XDFZZ	5325-01-076-5127	29372	465SF1032-08-1	..FASTENER,PANEL..........UHE	EA	15
68	133B	PAFZZ	5325-01-075-1129	29372	465SF632-08-1	..FASTENER,PANEL..........UHE	EA	8
68	133C		1560-00-135-0599			..SHELF FUSELAGE..........UHE,UHH,UHV,UHX	EA	1
68	134	MOOZZ		20309	ES-B-220309-1	.BONDING JUMPER..........UHE	EA	3

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
68	135	MOOZZ		20309	ES-B-220309-4	.BONDING JUMPER....................................UHE	EA	1
68	136	MOOZZ		20309	ES-B-220309-2	.BONDING JUMPER....................................UHE	EA	1
68	137	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE.....................................UHE	EA	4
68	138	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.......................................UHE	EA	19
68	139	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE.....................................UHE	EA	15
68	140	PAOZZ	5305-00-957-7810	96906	MS24693S271	.SCREW,MACHINE.....................................UHE	EA	1
68	141	MFOZZ		20309	ES-B-212929	.ANGLE BRACKET.....................................UHE	EA	1
68	142	MFOZZ		20309	ES-B-212930	.ANGLE BRACKET.....................................UHE	EA	1
68	143	XDOZZ		20309	ES-D-212931	.MOUNTING PLATE....................................UHE	EA	1
68	144	XDOZZ		20309	ES-C-220264	.BRACKET ASSEMBLY..................................UHE	EA	1
68	145	MFOZZ		20309	ES-B-212949	.ANGLE BRACKET.....................................UHE	EA	1
68		XCFZZ		20309	ES-D-221640	CIRCUIT BREAKER 100 AMP INSTL SEE FIG.5B FOR NHA.........UHX	EA	1
68	147	PAOZZ	5305-00-054-6654	96906	MS51957-30	.SCREW,MACHINE.....................................UHX	EA	2
68	148	PAOZZ	5310-00-983-8483	96906	MS27183-5	.WASHER,FLAT.......................................UHX	EA	2
68	149	PBOZZ	9905-01-150-9867	20309	ES-D-221568-11	.PLATE,IDENTIFICATIO...............................UHX	EA	1
68	150	XDOZZ		20309	ES-C-221641	.SUPPORT...UHX	EA	1
68	151	PAOZZ	5925-01-204-6095	96906	MS25361-100V	.CIRCUIT BREAKER...................................UHX	EA	1
68	152	XCFZZ		20309	ES-F-221292	RADIO SHELF AND EQUIPMENT INSTL SEE FIG.5B FOR NHA.......UHX	EA	1
68	152	MOOZZ		20309	ES-B-220309-1	.CABLE ASSY,GROUND.................................UHX	EA	1
68	153	MOOZZ		20309	ES-B-220309-2	.CABLE ASSY,GROUND.................................UHX	EA	2
68	154	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE.....................................UHX	EA	15
68	155	PAOZZ	5310-00-880-5978	96906	MS15795-807	.WASHER,FLAT.......................................UHX	EA	15

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
68	142	MFOZZ		20309	ES-B-212930	.ANGLE BRACKET..........UHE,UHX	EA	1
68	143	XDOZZ		20309	ES-D-212931	.MOUNTING PLATE..........UHE,UHX	EA	1
68	144	XDOZZ		20309	ES-C-220264	.BRACKET ASSEMBLY..........UHE,UHX	EA	1
68	145	MFOZZ		20309	ES-B-212949	.ANGLE BRACKET..........UHE,UHX	EA	1
68	146	XCFZZ		20309	FS-D-221640	.CIRCUIT BREAKER 100..........UHX	EA	1
68	147	PAOZZ	5305-00-054-6654	96906	MS51957-30	.SCREW,MACHINE..........UHX	EA	2
68	148	PAOZZ	5310-00-983-8483	96906	MS27183-5	.WASHER,FLAT..........UHX	EA	2
68	149	PBOZZ	9905-01-150-9867	20309	ES-D-221568-11	.PLATE,IDENTIFICATIO..........UHX	EA	1
68	150	XDOZZ		20309	ES-C-221641	.SUPPORT..........UHX	EA	1
68	151	PAOZZ	5925-01-204-6095	96906	MS25361-100V	.CIRCUIT BREAKER 100..........UHX	EA	1
68	152	XCFZZ		20309	ES-F-221292	.RADIO SHELF AND..........UHX	EA	1
68	153	MOOZZ		20309	ES-B-220309-1	.CABLE ASSY,GROUND..........UHX	EA	1
68	154	PAOZZ	5940-00-143-4794	96906	MS25036-112	.TERMINAL,LUG..........UHX	EA	2
68	155	MOOZZ		20309	ES-B-220309-2	.BONDING JUMPER..........UHE,UHX	EA	1

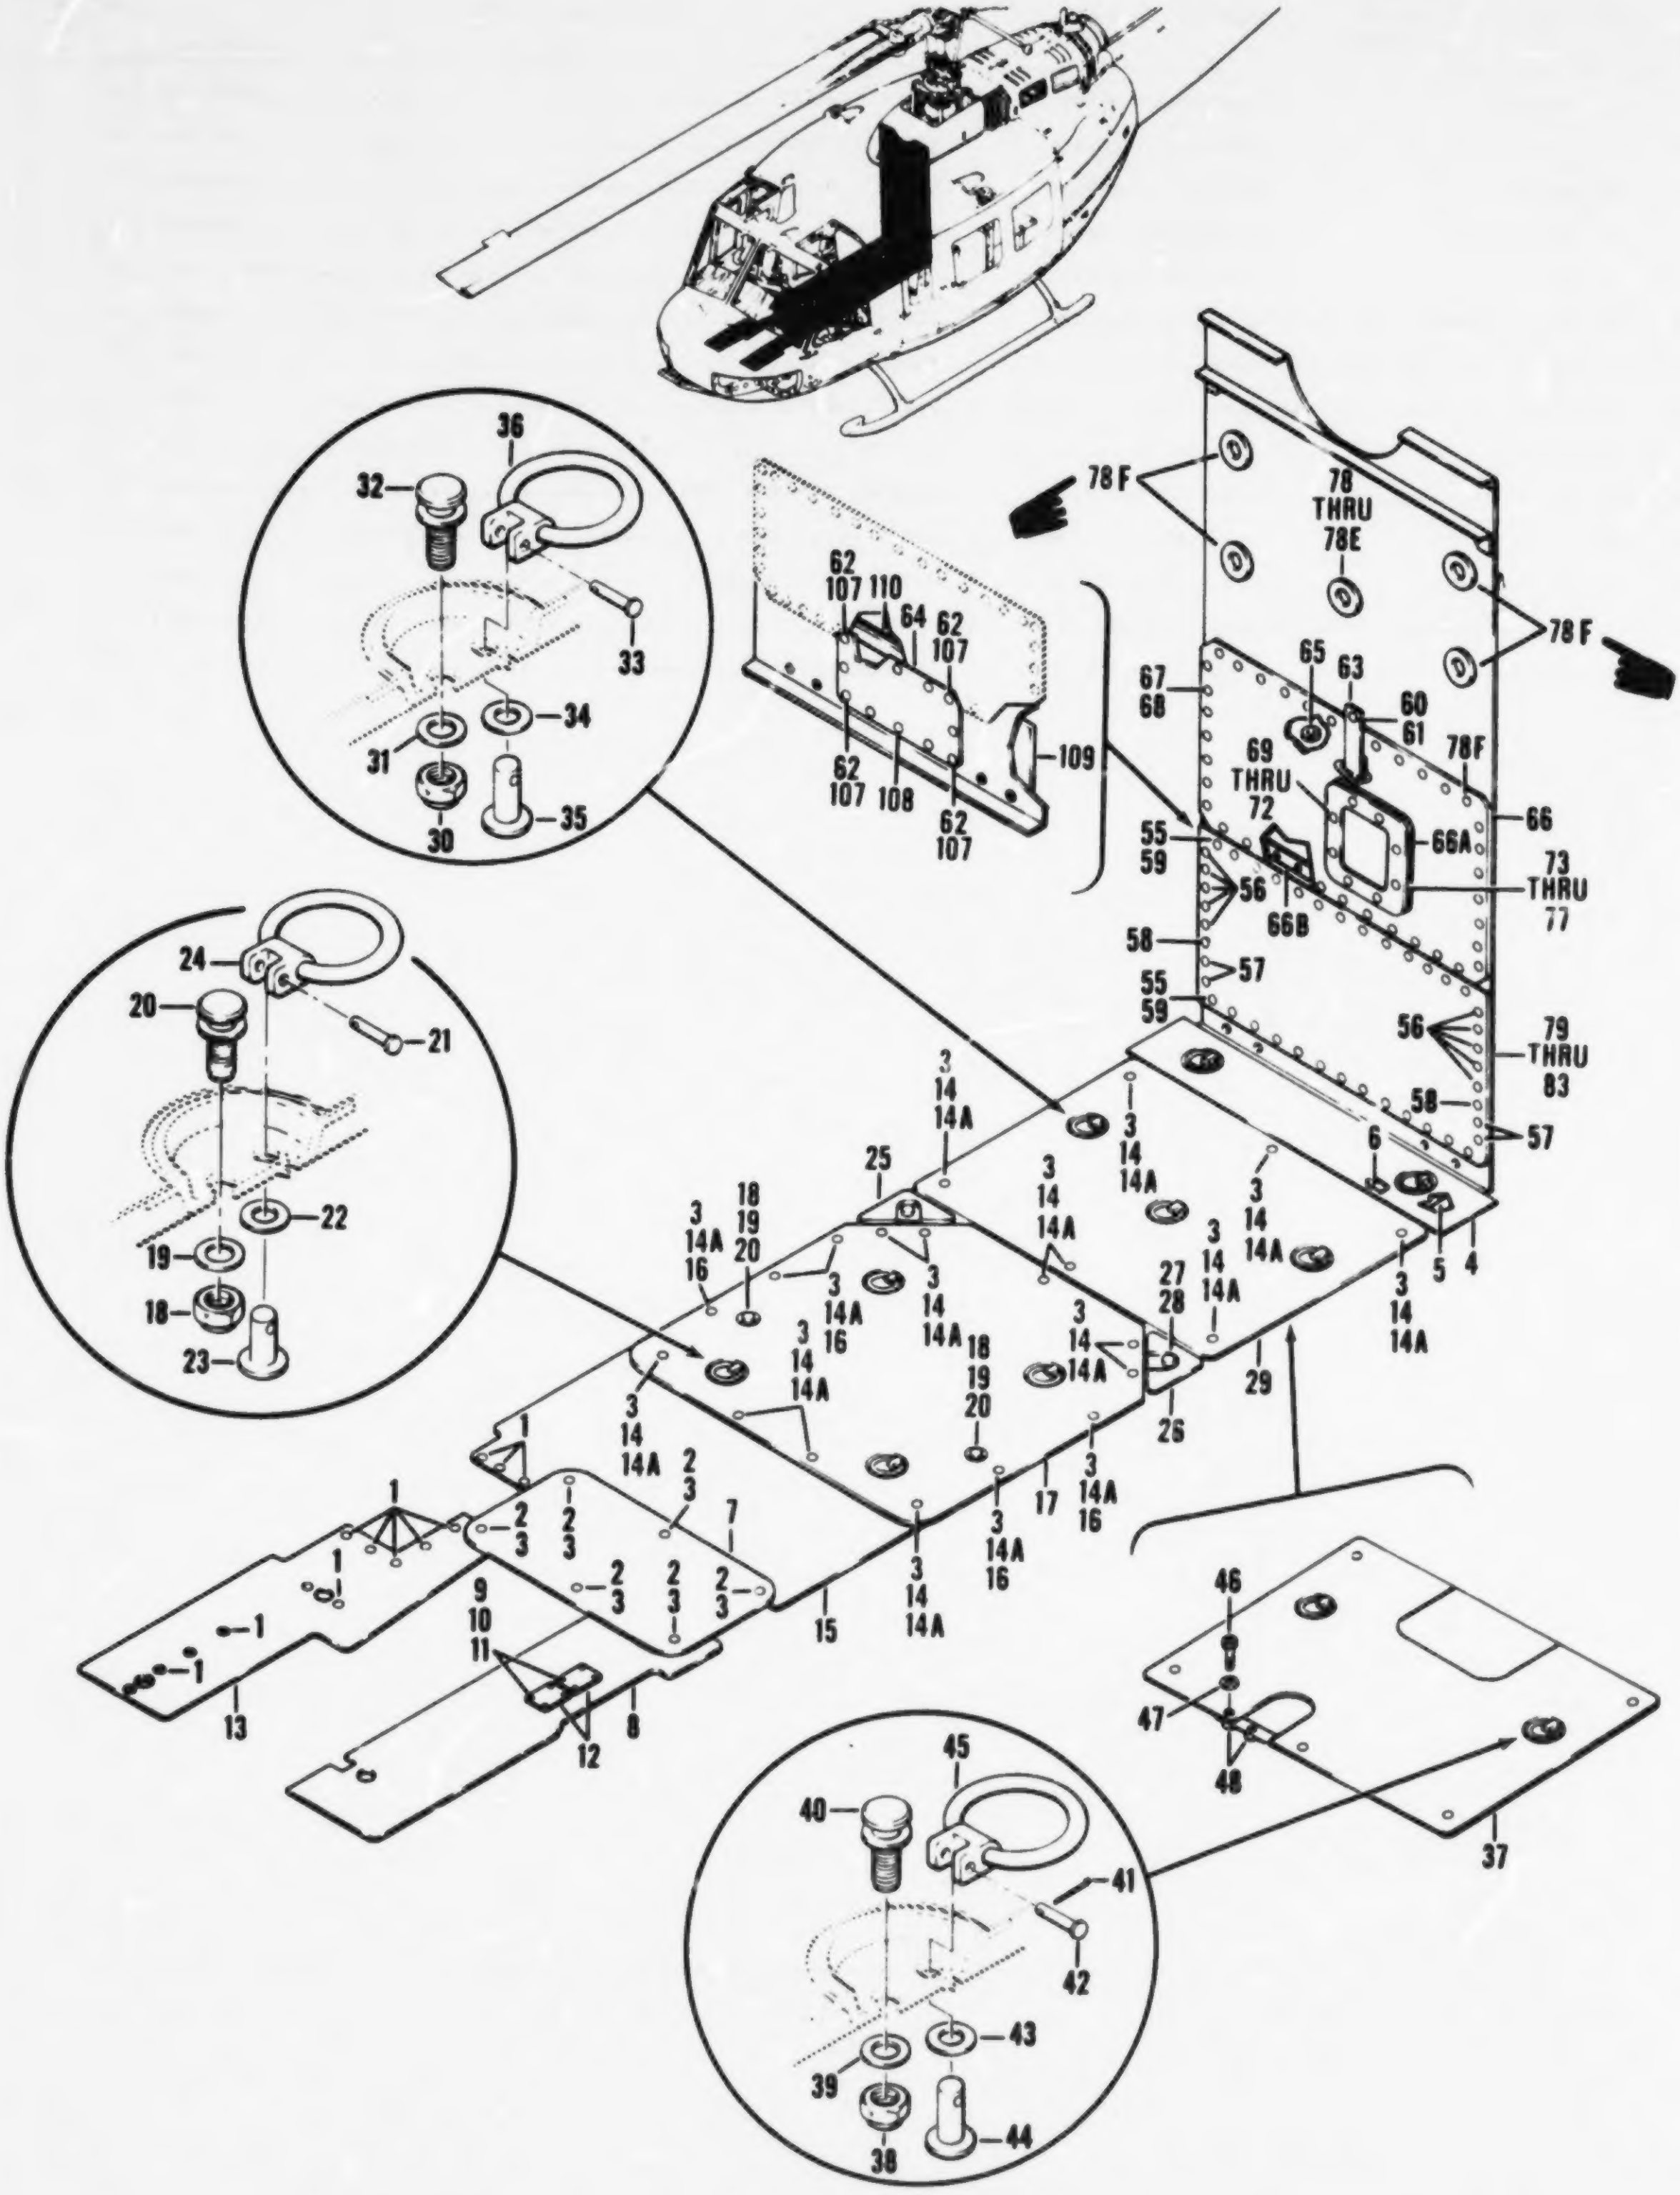
36
32
33
34
31
30
35
24
20
21
22
19
18
23
78F
78 THRU 78E
78F
62 107 110
64
62 107
67 68
65
63
60 61
78F
69 THRU 72
66
66A
62 107
108
62 107
109
55 59
56
66B
73 THRU 77
58
57
55 59
56
79 THRU 83
58
57
3 14 14A
25
18 19 20
3 14A 16
3 14 14A
3 14A 16
3 14 14A
3 14 14A
3 14 14A
18 19 20
3 14 14A
27 28
3 14 14A
6
5
4
3 14 14A
29
26
1
3 14 14A
2 3
7
1
2 3
2 3
2 3
2 3
2 3
17
3 14A 16
3 14A 16
3 14 14A
1
1
1
15
9 10 11
12
8
13
46
47
48
37
45
40
41
42
43
39
38
44

Figure 69. Fuselage Assembly, Structure (Sheet 1 of 2)

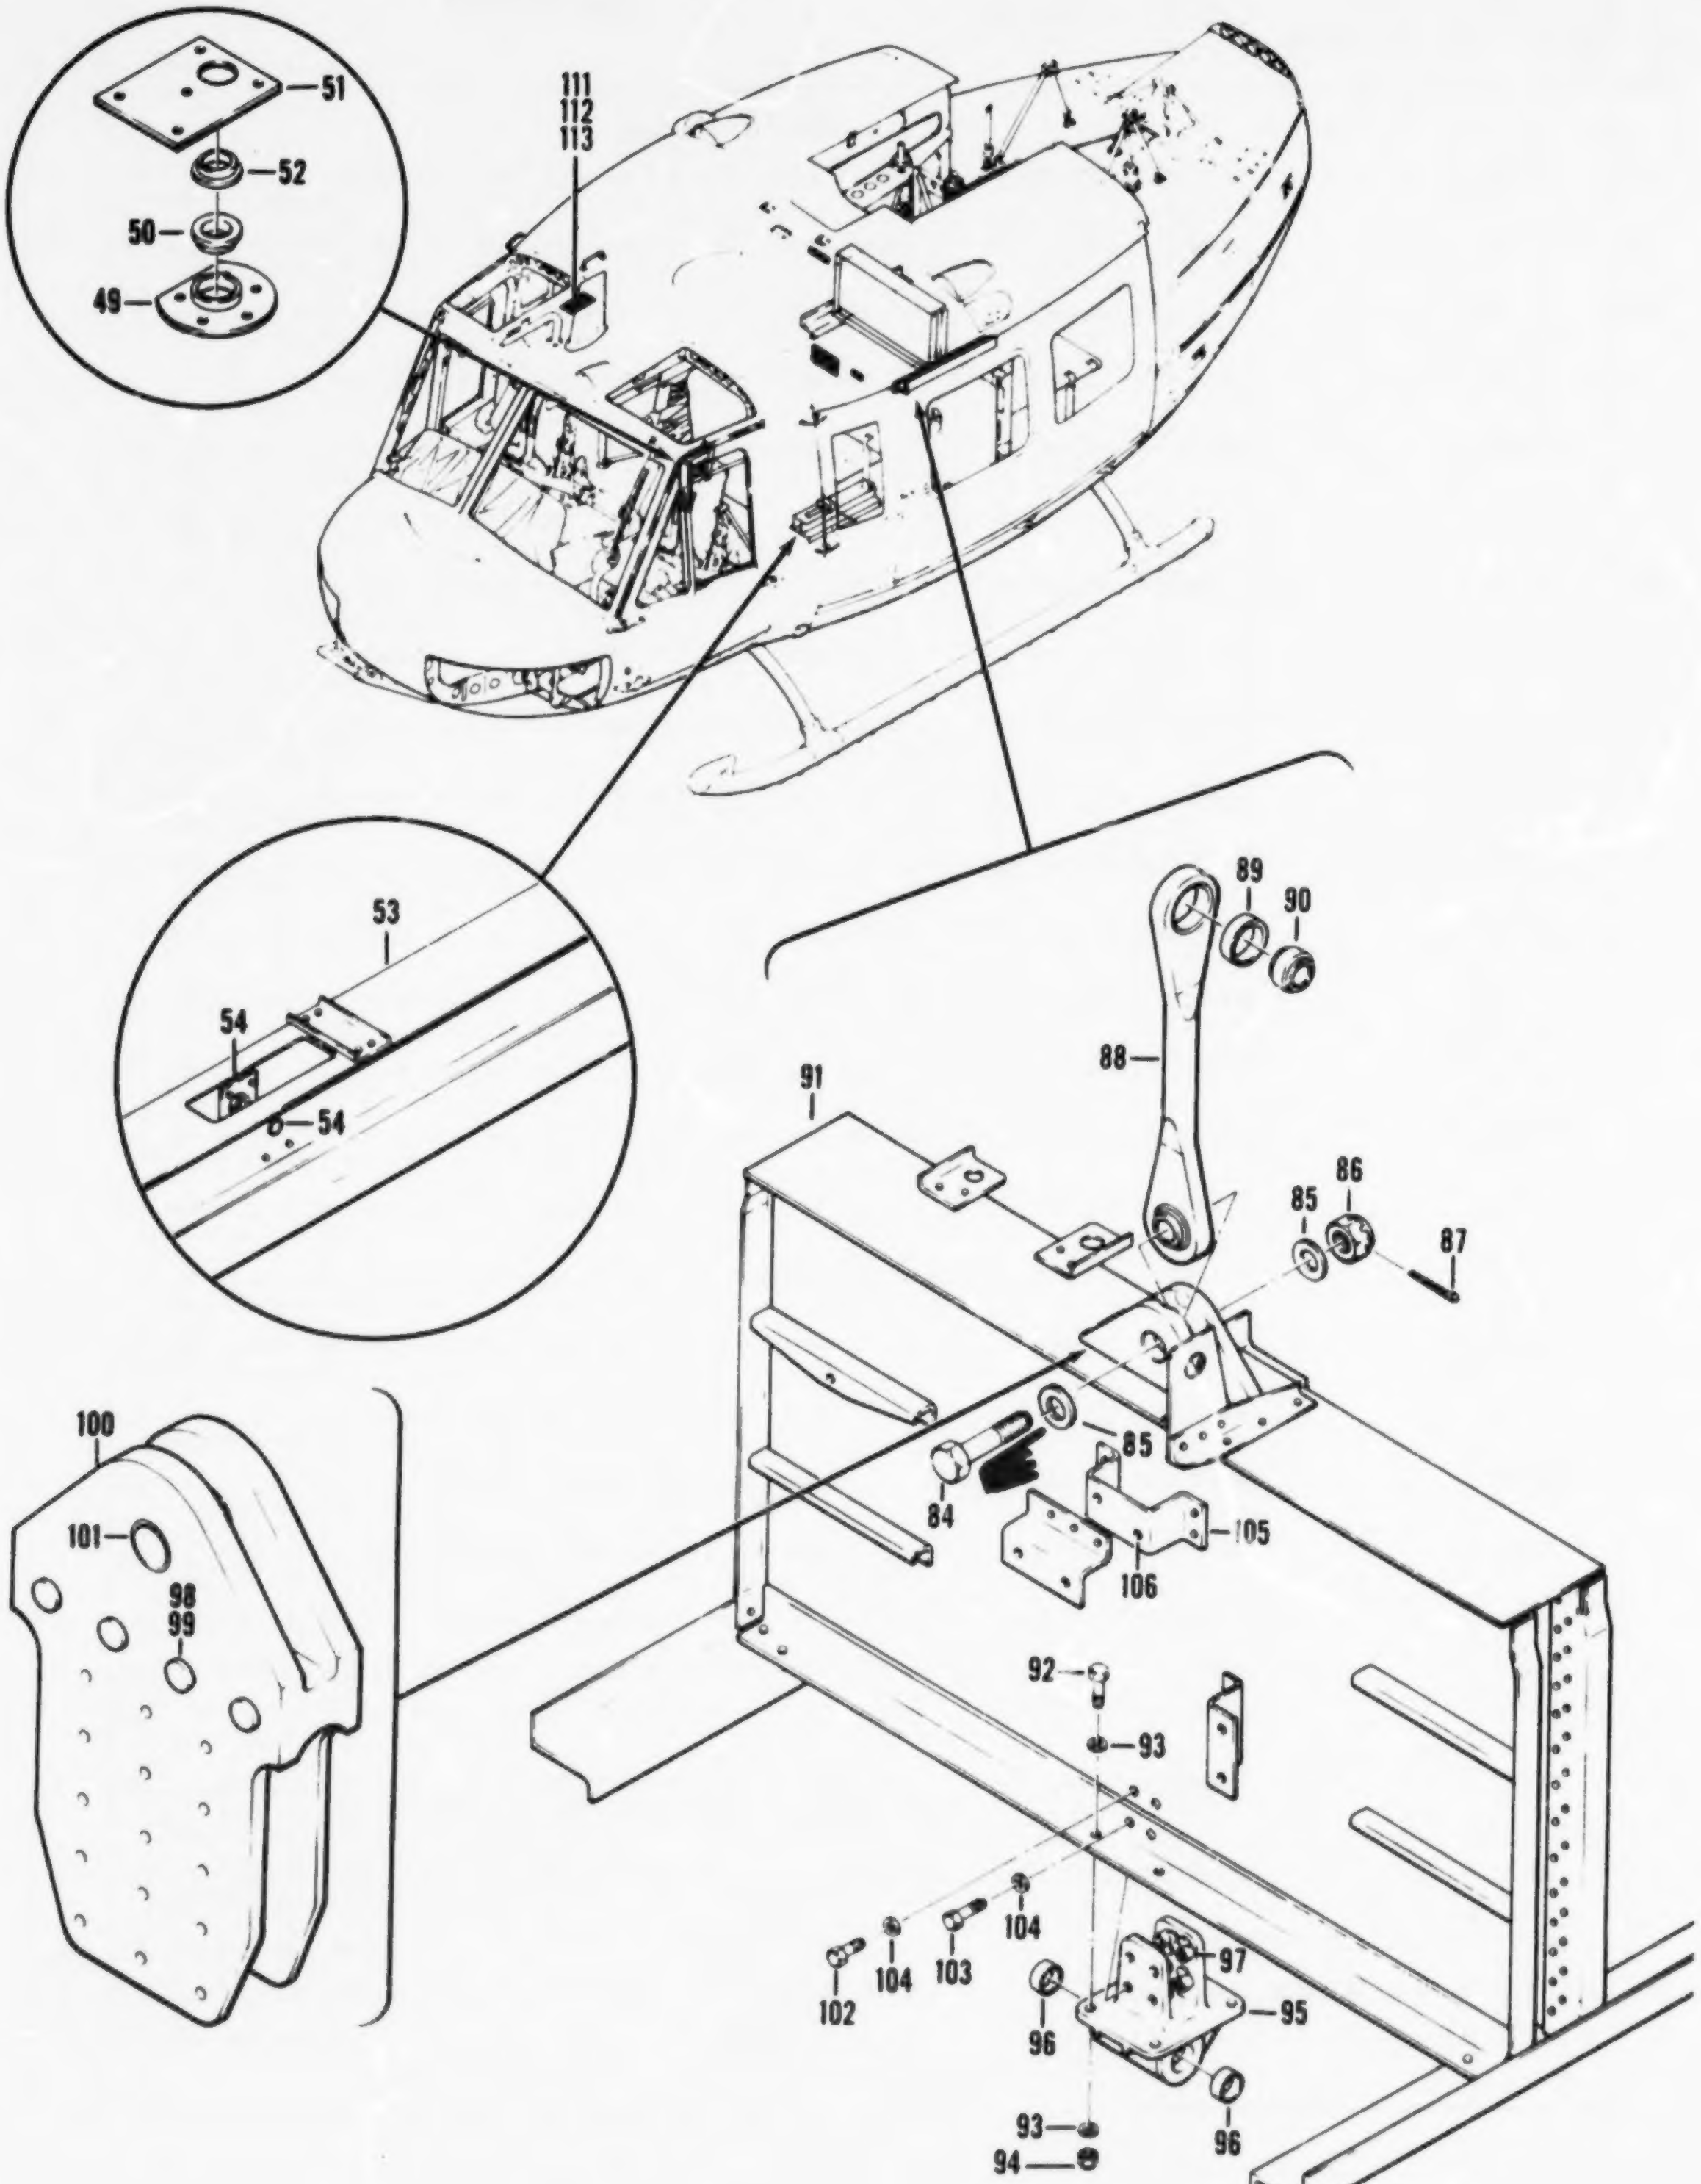
51
52
50
49
111
112
113
53
54
54
89
90
88
91
86
85
87
85
84
105
106
100
101
98
99
92
93
104
104
103
102
97
95
96
96
93
94

Figure 69. Fuselage Assembly, Structure (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
69		XCFZZ		97499	205-030-006-7	FUSELAGE ASSY USBL EFF 62-2106 THRU 62-2113 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-13	FUSELAGE ASSY USBL EFF 62-12351 THRU 62-12372 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-19	FUSELAGE ASSY USBL EFF 63-8739 THRU 63-8803 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-25	FUSELAGE ASSY USBL EFF 63-8804 THRU 63-8859 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-33	FUSELAGE ASSY USBL EFF 63-12956 THRU 63-13002 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-31	FUSELAGE ASSY USBL EFF 64-13492 THRU 64-13661 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-43	FUSELAGE ASSY USBL EFF 64-13662 THRU 64-13901 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-49	FUSELAGE ASSY USBL EFF 65-9565 THRU 65-12895 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-55	FUSELAGE ASSY USBL EFF 66-746 THRU 66-16033 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-67	FUSELAGE ASSY USBL EFF 66-16034 THRU 66-17144 SEE FIG.20 FOR NHA G.15 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-85	FUSELAGE ASSY USBL EFF 67-17145 THRU 67-17312 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-97	FUSELAGE ASSY USBL EFF 67-17313 THRU 67-17777 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-109	FUSELAGE ASSY USBL EFF 67-17778 THRU 68-15324 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-129	FUSELAGE ASSY USBL EFF 68-15325 THRU 68- 5489 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-137	FUSELAGE ASSY USBL EFF 68-15490 THRU 68-15778 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-141	FUSELAGE ASSY USBL EFF 68-16050 THRU 68-16342 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-006-147	FUSELAGE ASSEMBLY,S USBL EFF 68-16343 THRU 68-16625 SEE FIG. 20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-031-006-1	FUSELAGE ASSY USBL EFF 69-15000 THRU 69-15291 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-031-006-13	FUSELAGE ASSY USBL EFF 69-15292 THRU 70-15932 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-031-006-19	FUSELAGE ASSY USBL EFF 70-16200 THRU 70-16518 SEE FIG.20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-031-006-31	FUSELAGE ASSEMBLY,S USBL EFF 71-20000 & SUBSEQUENT SEE FIG. 20 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-031-322-1	.FLOOR INSTL U/O PN 205-030-006-7 & -13......UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-031-322-3	.FLOOR INSTL U/O PN 205-030-006-19 & -25.....UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-031-322-5	.FLOOR INSTL U/O PN 205-030-006-31,-33, & -43 ....UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-031-322-7	.FLOOR INSTL U/O PN 205-030-006-49,-55,-67, -85,-97,-109,-129,-137, -141,-147,205-031-006-1, & -13 USBL EFF 65-9565 THRU 69-15770..........UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-031-322-13	.FLOOR INSTL U/O PN 205-031-006-13,-19,&-31 USBL EFF 69-15771 & SUBSEQUENT..........UHE,UHH,UHV,UHX	EA	1
69	1	PAFZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	20
69	2	PAOZZ	5305-00-282-0135	88044	AN525-416R8	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	6
69	3	PAOZZ	5310-00-728-7717	96906	MS21069L4	..NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	26

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
69	4	PAOFF	1560-00-179-6253	97499	205-031-244-1A	..FLOOR,AIRCRAFT UHE,UHH,UHV,UHX	EA	1
69	5	XBDZZ	1560-00-181-3820	97499	205-031-243-1	..SUPPORT,CYCLIC CONT UHE,UHH,UHV,UHX	EA	1
69	6	XBDZZ	1560-00-181-3817	97499	205-031-243-2	..SUPPORT,CYCLIC CONT UHE,UHH,UHV,UHX	EA	1
69	7	PAOZZ	1550-00-921-8567	97499	205-030-314-1	..COVER,ACCESS UHE,UHH,UHV,UHX	EA	1
69	8	PBOFF	1560-00-176-1038	97499	205-030-322-61A	..FLOOR,AIRCRAFT -LH FWD UHE,UHH,UHV,UHX	EA	1
69	9	PAOZZ	5306-00-889-3000	96906	MS35206-230	...SCREW,MACHINE UHE,UHH,UHV,UHX	EA	8
69	10	PAOZZ	5310-00-187-2398	88044	AN960PD6L	...WASHER,FLAT UHE,UHH,UHV,UHX	EA	8
69	11	PAOZZ	5310-00-807-1472	96906	MS21042L06	...NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	8
69	12	XDOZZ	1560-00-994-5531	97499	204-031-322-59	...COVER,ACCESS UHE,UHH,UHV,UHX	EA	2
69	13	PAOFF	1560-00-181-4560	97499	205-030-322-73	..FLOOR,AIRCRAFT -RH FWD UHE,UHH,UHV,UHX	EA	1
69	14	PAOZZ	5306-00-182-2015	88044	AN4H4A	..BOLT,MACHINE UHE,UHH,UHV,UHX	EA	15
69	14A	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT UHE,UHH,UHV,UHX	EA	20
69	15	PAOFF	1560-00-442-1679	97499	205-031-258-5	..FLOOR,AIRCRAFT UHE,UHH,UHV,UHX	EA	1
69	16	PAOZZ	5306-00-182-2016	88044	AN4H5A	..BOLT,MACHINE UHE,UHH,UHV,UHX	EA	5
69	17	PBOFF	1560-00-909-7461	97499	205-031-324-5	..COVER ASSEMBLY,FLOO UHE,UHH,UHV,UHX	EA	1
69	18	PAOZZ	5310-00-807-1477	96906	MS21042L6	...NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	6
69	19	PAOZZ	5310-00-187-2400	88044	AN960PD616	...WASHER,FLAT UHE,UHH,UHV,UHX	EA	6
69	20	XDOZZ		00624	34113-30	...STUD,SNAPSLIDE FAST UHE,UHH,UHV,UHX	EA	6
69	21	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	...PIN,STRAIGHT,HEADED HEADED UHE,UHH,UHV,UHX	EA	4
69	22	PAOZZ	5310-00-187-2399	88044	AN960PD516	...WASHER,FLAT UHE,UHH,UHV,UHX	EA	4
69	23	PAOZZ	5315-00-412-9867	97499	100-051-1	...PIN,STRAIGHT,HEADED UHE,UHH,UHV,UHX	EA	4
69	24	PAOZZ	1680-00-802-3204	98313	FDA1886	...RING,DOOR ASSEMBLY, UHE,UHH,UHV,UHX	EA	4
69	25	PAOOO	1560-00-179-3992	97499	205-030-264-1	..GUSSET ASSEMBLY,CAB -LH UHE,UHH,UHV,UHX	EA	1
69	26	PBOOO	1560-00-179-6173	97499	205-030-264-2	..GUSSET ASSEMBLY,AIR -RH UHE,UHH,UHV,UHX	EA	1
69	27	PAOZZ	5310-00-167-1300	88044	AN316-6R	...NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	1
69	28	PAOZZ	5325-00-573-4036	99879	34113-2	...STUD UHE,UHH,UHV,UHX	EA	1
69	29	PAOFF	1560-00-072-1079	97499	205-031-326-3	..COVER,ACCESS UHE,UHH,UHV,UHX	EA	1
69	30	PAOZZ	5310-00-807-1477	96906	MS21042L6	...NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	3
69	31	PAOZZ	5310-00-187-2400	88044	AN960PD616	...WASHER,FLAT UHE,UHH,UHV,UHX	EA	3
69	32	XDOZZ		00624	34113-30	...STUD,SNAPSLIDE FAST UHE,UHH,UHV,UHX	EA	3
69	33	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	...PIN,STRAIGHT,HEADED HEADED UHE,UHH,UHV,UHX	EA	3
69	34	PAOZZ	5310-00-187-2399	88044	AN960PD516	...WASHER,FLAT UHE,UHH,UHV,UHX	EA	3
69	35	PAOZZ	5315-00-412-9867	97499	100-051-1	...PIN,STRAIGHT,HEADED UHE,UHH,UHV,UHX	EA	1
69	36	PAOZZ	1680-00-802-2204	98313	FDA1886	...RING,DOOR ASSEMBLY, UHE,UHH,UHV,UHX	EA	3
69	37	PAOFF	1560-00-735-7542	97499	205-031-140-1	..FLOOR,AIRCRAFT CENTER USE:WHEN SMOKE GENERATOR AUXILIARY EQUIPMENT KIT IS INSTALLED UHE,UHH,UHV,UHX	EA	1
69	38	PAOZZ	5310-00-807-1477	96906	MS21042L6	...NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	2
69	39	PAOZZ	5310-00-187-2400	88044	AN960PD616	...WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
69	40	XDOZZ		00624	34113-30	...STUD,SNAPSLIDE FAST UHH,UHV	EA	2
69	41	PAOZZ	5315-00-936-1234	96906	MS9245-22	...PIN,COTTER UHE,UHH,UHV,UHX	EA	2
69	42	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	...PIN,STRAIGHT,HEADED HEADED UHE,UHH,UHV,UHX	EA	2
69	43	PAOZZ	5310-00-187-2399	88044	AN960PD516	...WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
69	44	PAOZZ	5315-00-412-9867	97499	100-051-1	...PIN,STRAIGHT,HEADED UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
69	45	PAOZZ	1680-00-802-3204	98313	FDA1886	...RING,DOOR ASSEMBLY,..........................UHE,UHH,UHV,UHX	EA	2
69	46	PAOZZ	5306-00-182-2066	88044	AN3H3A	...BOLT,MACHINE..........................UHE,UHH,UHV,UHX	EA	1
69	47	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..........................UHE,UHH,UHV,UHX	EA	1
69	48	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL..........................UHE,UHH,UHV,UHX	EA	2
69		XCFZZ		97499	205-030-743-1	.SUPPORT INSTL..........................UHE,UHH,UHV,UHX	EA	1
69	49	XDFFZ	3120-00-128-6726	97499	205-030-500-1	..BEARING ASSY..........................UHE,UHH,UHV,UHX	EA	1
69	50	PAFZZ	3120-00-072-5073	97499	22-007-19-20-18	...BUSHING,SLEEVE..........................UHE,UHH,UHV,UHX	EA	1
69	51	XBFFZ	3130-00-128-6727	97499	205-030-500-3	..BEARING UNIT,BALL..........................UHE,UHH,UHV,UHX	EA	1
69	52	XDFZZ		97499	22-007-19-12-16	...BUSHING,SLEEVE..........................UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-774-1	.SUPPORT INSTL..........................UHE,UHH,UHV,UHX	EA	1
69	53	XCFZZ		97499	205-030-774-3	..SUPPORT ASSY..........................UHE,UHH,UHV,UHX	EA	1
69	54	PAFZZ	3120-00-990-4225	97499	22-007-19-13-18	...BUSHING,SLEEVE..........................UHE,UHH,UHV,UHX	EA	2
69		XCFZZ		97499	205-030-708-37	.BULKHEAD INSTL U/O PN 205-030-006-7 & -13 ....UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-708-55	.BULKHEAD INSTL U/O PN 205-030-006-19,-25,-31, -33,& -43 ....UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-708-3	.BULKHEAD INSTL U/O PN 205-030-006-49 & -55 ....UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-708-79	.BULKHEAD INSTL U/O PN 205-030-006-67,-85,-97, -109,-129,& -137..........................UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-708-125	.BULKHEAD INSTL U/O PN 205-030-006-141,-147, 205-031-006-1,-13,& -19..........................UHE,UHH,UHV,UHX	EA	1
69	55	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	26
69	56	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	10
69	57	PAOZZ	5305-00-180-0014	88044	AN525-10R12	..SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	4
69	58	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	2
69	59	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..........................UHE,UHH,UHV,UHX	EA	26
69	60	PAOZZ	5305-00-984-6195	96906	MS35206-247	..SCREW,MACHINE..........................UHE,UHH,UHV,UHX	EA	1
69	61	PAOZZ	5310-00-728-7715	96906	MS21069L08	.NUT,SELF-LOCKING,PL..........................UHE,UHH,UHV,UHX	EA	1
69	62	PAOZZ	5310-00-761-4221	96906	MS21073L3	..NUT,SELF-LOCKING,PL U/O PN 205-030-708-53 ....UHE,UHH,UHV,UHX	EA	4
69	63	PAOZZ	1680-00-913-5923	97499	205-070-790-1	..STRAP,WEBBING..........................UHE,UHH,UHV,UHX	EA	1
69	64	MFOZZ	1560-00-072-8329	97499	205-030-309-13	..COVER,PAN ARMAMENT U/O PN 205-030-708-3,-55,& -79 ....UHE,UHH,UHV,UHX	EA	1
69	65	PAOZZ	5325-00-987-5347	80539	1960-5-8-01	..RECEPTACLE,TURNLOCK..........................UHE,UHH,UHV,UHX	EA	23
69	66	PAOOO	1560-00-461-4365	97499	205-030-872-47	..COVER,ACCESS..........................UHE,UHH,UHV,UHX	EA	1
69	66A	MFOZZ		97499	205-030-872-21	...SEAL..........................UHE,UHH,UHV,UHX	EA	1
69	66B	MFOZZ		97499	205-030-872-23	...SEAL..........................UHE,UHH,UHV,UHX	EA	1
69	67	PAOZZ	5306-00-085-9859	56878	1915-5-3	...BOLT,SLEEVE..........................UHE,UHH,UHV,UHX	EA	37
69	68	PAOZZ	5365-00-830-2139	80539	1941-5	...RING,RETAINING..........................UHE,UHH,UHV,UHX	EA	37
69	69	PAOZZ	5325-00-770-9341	72794	A5T25	...STUD,TURNLOCK FASTE..........................UHE,UHH,UHV,UHX	EA	8
69	69	PAOZZ	5325-00-897-6757	72794	A5T26	...STUD,TURNLOCK FASTE..........................UHE,UHH,UHV,UHX	EA	5
69	70	XDOZZ	5310-00-075-9900	97499	140-001-1	...WASHER,FLAT U/O PN 205-030-872-47..........UHE,UHH,UHV,UHX	EA	8
69	71	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FAS FASTENER..........................UHE,UHH,UHV,UHX	EA	8
69	72	PAOZZ	5325-00-298-7026	72794	R5	...RECEPTACLE,TURNL FASTENER..........................UHE,UHH,UHV,UHX	EA	8
69	73	PAOZZ	1560-00-987-5220	97499	205-030-872-27	...WINDOW ASSEMBLY,DOO..........................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
69	74	MOOZZ		97499	205-961-155-3	...WINDOW,BULKHEAD DOO......................UHE,UHH,UHV,UHX	EA	1
69	75	PAOZZ	5310-00-807-1473	96906	MS21042L08	...NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	4
69	76	PAOZZ	5310-00-184-9002	88044	AN960PD8L	...WASHER,FLAT..............................UHE,UHH,UHV,UHX	EA	4
69	77	PAOZZ	5305-00-932-1921	96906	MS27039-0811	...SCREW,MACHINE............................UHE,UHH,UHV,UHX	EA	4
69	78	PAOZZ	1560-00-966-9363	97499	205-030-708-47	..WINDOW,OBSERVATION........................UHE,UHH,UHV,UHX	EA	1
69	78A	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL USE-AFT-CMPL-W MWO55-1520-210-30-42 ....UHH,UHV	EA	6
69	78B	PAOZZ	1560-01-057-3874	97499	205-030-722-1	..WINDOW,OBSERVATION USE-AFT-CMPL-W MWO55-1520-210-30-42 ....UHH,UHV	EA	1
69	78C	PAOZZ	5330-01-064-7833	97499	205-030-722-3	..GASKET USE-AFT-CMPL-W MWO55-1520-210-30-42.........UHH,UHV	EA	1
69	78D	PAOZZ	5305-00-925-9674	96906	MS27039-1-10	..SCREW,MACHINE USE-AFT-CMPL-W MWO55-1520-210-30-42 ....UHH,UHV	EA	6
69	78E	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT USE-AFT-CMPL-W MWO55-1520-210-30-42....UHH,UHV	HD	6
69	78F	PAOZZ	5310-00-619-1143	80539	4600H054F2	..NUT,SELF-LOCKING,PL.......................UHE,UHH,UHV,UHX	EA	5
69	79	PAOOO	1560-00-014-0447	97499	205-030-953-39	..DOOR ASSEMBLY U/O PN 205-030-708-37........UHE,UHH,UHV,UHX	EA	1
69	79	PAOOO	1560-00-072-1076	97499	205-030-953-25	..COVER,ACCESS U/O PN 205-030-708-55.........UHE,UHH,UHV,UHX	EA	1
69	79A	XCFZZ		20309	ES-F-221664	...CONNECTOR PANEL INSTL.SEE FIG.58 FOR NHA.............UHX	EA	1
69	80	PAOZZ	5330-00-872-1254	97499	205-030-953-41	...SEAL,RUBBER U/O PN 205-030-953-39.........UHE,UHH,UHV,UHX	EA	1
69	81	PAOZZ	5330-00-772-6874	97499	205-030-953-43	...SEAL,RUBBER STRIP U/O PN 205-030-953-25 ....UHE,UHH,UHV,UHX	EA	1
69	82	PAOZZ	5330-00-772-6873	97499	205-030-953-47	...SEAL,RUBBER STRIP USBL EFF 64-13492 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
69	83	PAOZZ	5330-00-796-5181	97499	205-030-953-49	...SEAL,RUBBER STRIP USBL EFF 64-13492 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	2
69	84	PAOZZ	5306-00-847-2226	80205	NAS1309-22D	.BOLT,SHEAR.................................UHE.UHH,UHV,UHX	EA	1
69	85	PAOZZ	5310-00-167-0824	88044	AN960-916	.WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	2
69	86	PAOZZ	5310-00-167-1290	88044	AN310-9	.NUT,PLAIN,CASTEL...........................UHE,UHH,UHV,UHX	EA	1
69	87	PBOZZ	5315-00-236-8359	96906	MS24665-370	.PIN,COTTER.................................UHE,UHH,UHV,UHX	EA	1
69	88	PAOZZ	1560-00-221-5691	97499	209-030-357-1	.LINK ASSEMBLY,LIFT.........................UHE,UHH,UHV,UHX	EA	1
69	89	PAOZZ	3120-00-670-5306	97499	204-030-909-11	..BUSHING,SLEEVE U/O PN 204-030-987-5........UHE,UHH,UHV,UHX	EA	2
69	90	PAOZZ	3120-00-133-6405	99528	RG9SS	..BEARING,PLAIN,SELF- ALIGNING...............UHE,UHH,UHV,UHX	EA	2
69		XCFZZ		97499	205-030-845-5	.LIFT BEAM INSTL U/O PN 205-030-006-7,-13, -19,-25,& -33 ....UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-845-9	.LIFT BEAM INSTL U/O PN 205-030-006-31 & -43 ....UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-845-101	.LIFT BEAM INSTL U/O PN 205-030-006-49.......UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-845-111	.LIFT BEAM INSTL U/O PN 205-030-006-55 & -67 ....UHE,UHH,UHV,UHX	EA	1
69		XCFZZ		97499	205-030-845-123	.LIFT BEAM INSTL U/O PN 205-030-006-85,-97, -109,-129,-137,-141,-147, 205-031-006-1,-13,-19,&-31..........UHE,UHH,UHV,UHX	EA	1
69	91	XBOOZ	1560-00-491-0742	97499	205-030-845-103	..BEAM ASSY,STRUCTURE U/O PN 205-030-845-101 ....UHE,UHH,UHV,UHX	EA	1
69	91	PBOOO	1560-00-103-5902	97499	205-030-845-125A	..BEAM ASSEMBLY,LIFT........................UHE,UHH,UHV,UHX	EA	1
69	92	PAFZZ	5306-00-141-4524	88044	AN173H6A	...BOLT,CLOSE TOLERANC......................UHE,UHH,UHV,UHX	EA	4
69	93	PAFZZ	5310-00-183-4406	88044	AN960PD10	...WASHER,FLAT..............................UHE,UHH,UHV,UHX	EA	8
69	94	PAFZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	4
69	95	PAFFF	1560-00-836-2209	97499	205-030-107-1	...FITTING ASSEMBLY,CA......................UHE,UHH,UHV,UHX	EA	1
69	96	PAFZZ	3120-00-133-6697	97499	21-010B15-12	....BUSHING,SLEEVE U/O PN 205-030-107-1......UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
69	97	PAFZZ	5310-00-761-6830	96906	MS21073L4	....NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	8
69	98	PAFZZ	5320-00-087-2166	73197	HL20-12-29	...PIN-RIVET,THREAD	UHE,UHH,UHV,UHX	EA	4
69	98	PAFZZ	5320-00-853-4929	73197	HL20PB10-29	...PIN-RIVET,THREAD	UHE,UHH,UHV,UHX	EA	4
69	99	PAFZZ	5320-00-121-3017	73197	HL86W12	...COLLAR,PIN-RIVET,TH THREADED	UHE,UHH,UHV,UHX	EA	4
69	99	PBFZZ	5320-00-853-4938	73197	HL86G10	...COLLAR,PIN-RIVET,TH	UHE,UHH,UHV,UHX	EA	4
69	100	PAFFF	1560-00-923-3613	97499	205-031-025-1	...FITTING ASSEMBLY,LI	UHE,UHH,UHV,UHX	EA	1
69	101	PAFZZ	3120-00-670-5319	97499	22-011-35-28-26	....BUSHINGSLEEVE	UHE,UHH,UHV,UHX	EA	2
69	102	PAFZZ	5306-00-166-2533	88044	AN174H6A	...BOLT,CLOSE TOLER TOLERENCE	UHE,UHH,UHV,UHX	EA	4
69	103	PAFZZ	5306-00-285-5325	88044	AN174H7A	...BOLT,CLOSE TOLER TOLERENCE	UHE,UHH,UHV,UHX	EA	4
69	104	PAFZZ	5310-00-184-9001	88044	AN960PD416L	...WASHER,FLAT	UHE,UHH,UHV,UHX	EA	8
69	105	PAFZZ	1560-00-137-2367	97499	205-030-845-93	...BRACKET,BEAM STRUCT STRUCTOR	UHE,UHH,UHV,UHX	EA	1
69	106	PAFZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	2
69	107	PAOZZ	5310-00-773-8657	96906	MS21056L3	.NUT,SELF-LOCKING,PL	UHX	EA	6
69	108	PAOZZ	5310-00-782-7094	96906	MS21048L3	.NUT,SELF-LOCKING,PL	UHX	EA	14
69	109	XDOZZ		20309	ES-D-221665	.DOUBLER	UHX	EA	1
69	110	XDOZZ		20309	ES-D-221666	.PAN ASSY	UHX	EA	1
69	111	XDOOO		20309	ES-C-221554	.PLATE,STRUCT,A/C	UHX	EA	1
69	112	PAOZZ	5310-00-777-5785	96906	MS21059L06	..NUT,SELF-LOCKING,PL	UHX	EA	6
69	113	XDOZZ		20309	ES-C-221554-1	..PLATE	UHX	EA	1

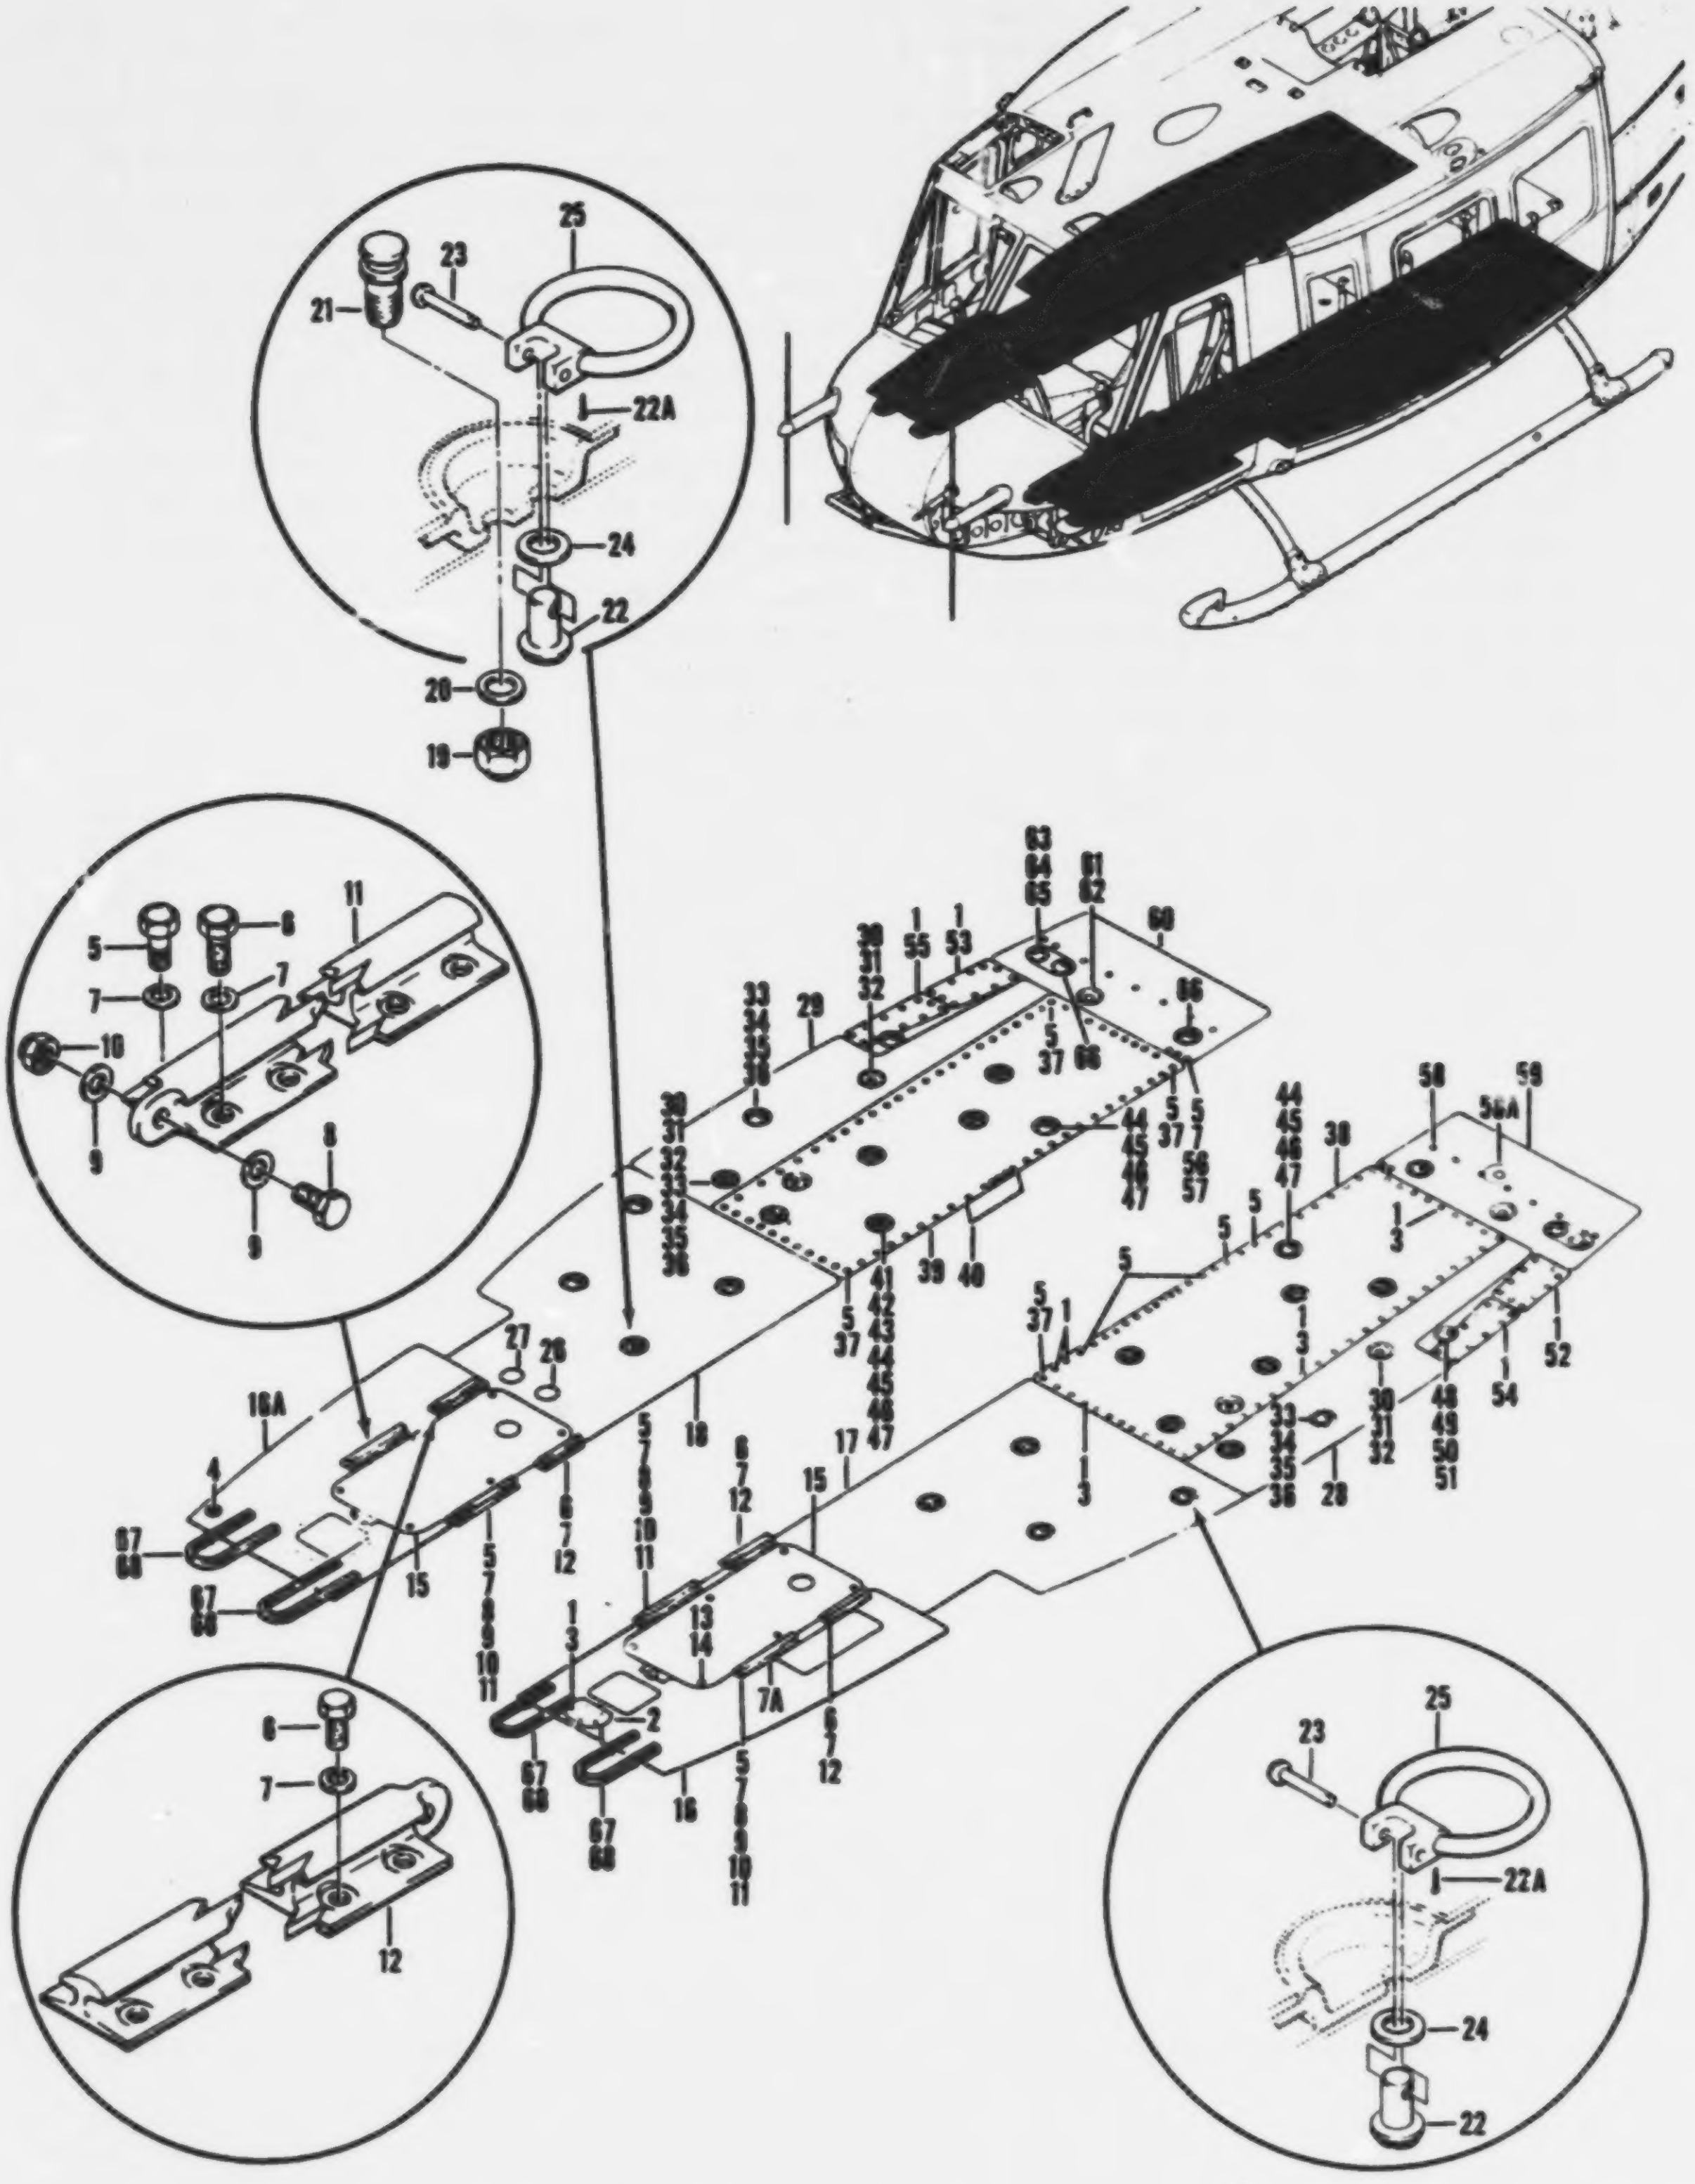
25
23
21
22A
24
22
20
19
11
5
6
7
10
9
8
63
64
65
61
62
60
30
31
32
55
53
33
34
35
36
29
66
5
37
44
45
46
47
56
57
58
59
56A
38
39
40
41
42
43
1
3
52
54
48
49
50
51
28
27
16A
4
67
68
15
18
17
12
13
14
7A
2
16

Figure 70. Floor Installation

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
70		XCFZZ		97499	205-031-321-1	FLOOR INSTALLATION- USBL EFF 62-2106 THRU 62-2113 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-321-3	FLOOR INSTL-LH USBL EFF 62-12351 THRU 62-12372 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-321-5	FLOOR INSTL-LH USBL EFF 63-8739 THRU 63-8859 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-321-15	FLOOR INSTL-LH USBL EFF 63-12956 THRU 63-13002 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-321-7	FLOOR INSTL-LH USBL EFF 64-13492 THRU 64-13661 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-321-17	FLOOR INSTL-LH USBL EFF 64-13662 THRU 64-13901 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-321-19	FLOOR INSTL-LH USBL EFF 65-9565 THRU 66-17144 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-321-31	FLOOR INSTL-LH USBL EFF 67-17145 & SUBSEQUENT SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-320-1	FLOOR INSTL-RH USBL EFF 62-2106 THRU 62-2113 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-320-3	FLOOR INSTL-RH USBL EFF 62-12351 THRU 62-12372 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-320-5	FLOOR INSTL-RH USBL EFF 63-8739 THRU 63-8859 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-320-11	FLOOR INSTL-RH USBL EFF 63-12956 THRU 63-13002 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-320-7	FLOOR INSTL-RH USBL EFF 64-13492 THRU 64-13661 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-320-13	FLOOR INSTL-RH USBL EFF 64-13662 THRU 64-13901 SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-320-15	FLOOR INSTL-RH USBL EFF 65-9565 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.67 FOR NHA....................UHE,UHH,UHV,UHX	EA	1
70		XCFZZ		97499	205-031-320-19	FLOOR INSTL-RH USBL EFF 67-17145 & SUBSEQUENT SEE FIG.67 FOR NHA......................................UHE,UHH,UHV,UHX	EA	1
70	1	PAOZZ	5305-00-781-9087	96906	MS27039-1-08	.SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	V
70	2	MFOZZ		97499	204-030-337-3	.COVER,ACCESS -LH...........................UHE,UHH,UHV,UHX	EA	1
70	3	PAOZZ	5310-00-728-7716	96906	MS21069L3	.NUT,SELF-LOCKING,PL........................UHE,UHH,UHV,UHX	EA	V
70	4	PAOZZ	5325-00-185-0012	96906	MS35489-39	.GROMMET,NONMETALLIC........................UHE,UHH,UHV,UHX	EA	1
70	5	XDCZZ		96906	MS27039-1-09	.SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	V
70	6	PAOZZ	5305-00-180-0014	88044	AN525-10R12	.SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	V
70	7	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT................................UHE,UHH,UHV,UHX	EA	V
70	7A	AOOOZ		97499	205-070-733-1	.TRACK ASSEMBLY.............................UHE,UHH,UHV,UHX	EA	2
70	8	PAOZZ	5306-00-182-2057	88044	AN3H4A	..BOLT,MACHINE..............................UHE,UHH,UHV,UHX	EA	1
70	9	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT...............................UHE,UHH,UHV,UHX	EA	2
70	10	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	4
70	11	PAOZZ	1560-00-967-1784	97499	205-070-733-3	..TRACK,FLOOR INSTALL.......................UHE,UHH,UHV,UHX	EA	4
70	12	PAOZZ	1560-00-967-1785	97499	205-070-734-5	.TRACK, SEAT, AFT, P........................UHE,UHH,UHV,UHX	EA	4
70	13	PAOZZ	5305-00-282-0135	88044	AN525-416R8	.SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	6
70	14	PAOZZ	5310-00-728-7717	96906	MS21069L4	.NUT,SELF-LOCKING,PL........................UHE,UHH,UHV,UHX	EA	75
70	15	PBOZZ	1560-00-878-0313	97499	205-031-327-1	.COVER,ACCESS USBL EFF 62-2106 THRU 64-13901 ....UHE,UHH,UHV,UHX	EA	1
70	15	PAOZZ	1560-00-915-6090	97499	205-030-198-1	.COVER,ACCESS USBL EFF 65-9565 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	1
70	16	PAOFF	1560-00-907-2256	97499	205-031-264-1	.FLOOR PANEL-LH FWD U/O 205-031-321-1,-3,-5,-7,-15,-19	EA	1

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHE,UHH,UHV,UHX		
70	16A	PAOFF		97499	205-031-260-1	.FLOOR PANEL-RH FWD U/D 205-030-320-1,-3,-5,-7,11,13,15,-19 ....UHE,UHH,UHV,UHX	EA	1
70	17	PAOFF	1560-00-075-0137	97499	205-031-263-1	.FLOOR,AIRCRAFT -LH U/D PN 205-031-321-1 & -3 ....UHE,UHH,UHV,UHX	EA	1
70	17	PAOFF	1560-00-844-7910	97499	205-031-332-67	.FLOOR,AIRCRAFT -LH U/D PN 205-031-321-5,-7,-15,-17,-19 & -31..UHE,UHH,UHV,UHX	EA	1
70	18	PAOFF	1560-00-066-5307	97499	205-031-263-2	.FLOOR,AIRCRAFT -RH U/D PN 205-031-320-1 & -3 ....UHE,UHH,UHV,UHX	EA	1
70	19	PAOFF	1560-00-826-5631	97499	205-031-332-69	.FLOOR,AIRCRAFT -RH..........................UHE,UHH,UHV,UHX	EA	1
70	19	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	2
70	20	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	2
70	21	PAOZZ	5325-00-195-0904	00624	34113-30	..STUD,SNAPSLIDE FAST.........................UHE,UHH,UHV,UHX	EA	2
70	22	PAOZZ	5315-00-412-9867	97499	100-051-1	..PIN,STRAIGHT..................................UHE,UHH,UHV,UHX	EA	6
70	22A	PAOZZ	5315-00-058-3164	96906	MS24665-148	..COTTER PIN....................................UHE,UHH,UHV,UHX	EA	6
70	23	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	..PIN,STRAIGHT,HEADED HEADED..................UHE,UHH,UHV,UHX	EA	6
70	24	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	6
70	25	PAOZZ	1680-00-802-3204	98313	FDA1886	..RING,DOOR ASSEMBLY..........................UHE,UHH,UHV,UHX	EA	6
70	26	PBOZZ	1560-00-445-4687	97499	204-030-036-3	..PLUG,FLOOR,AIRCRAFT U/D PN 205-031-332-73 ....UHE,UHH,UHV,UHX	EA	1
70	27	PAOZZ	1560-00-445-4684	97499	204-030-036-5	..PLUG,FLOOR,AIRCRAFT U/D PN 205-031-332-73 ....UHE,UHH,UHV,UHX	EA	1
70	28	PAOFF	1560-00-086-3567	97499	205-031-261-3	.FLOOR,AIRCRAFT-LH............................UHE,UHH,UHV,UHX	EA	1
70	29	PAOFF	1560-00-938-5972	97499	205-031-261-4	.FLOOR,AIRCRAFT-RH............................UHE,UHH,UHV,UHX	EA	1
70	30	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	2
70	31	PAOZZ	5310-00-187-[illegible]	88044	AN960PD616	..WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	2
70	32	PAOZZ	5325-00-195-0904	00624	34113-30	..STUD,SNAPSLIDE FAST.........................UHE,UHH,UHV,UHX	EA	1
70	33	PAOZZ	5315-00-412-9867	97499	100-051-1	..PIN,STRAIGHT,HEADED.........................UHE,UHH,UHV,UHX	EA	1
70	34	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	..PIN,STRAIGHT HEADED.........................UHE,UHH,UHV,UHX	EA	2
70	35	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	2
70	36	PAOZZ	1680-00-802-3204	98313	FDA1886	..RING,DOOR ASSEMBLY..........................UHE,UHH,UHV,UHX	EA	1
70	37	PAOZZ	5310-00-021-3884	96906	MS21086L3	.NUT,SELF-LOCKING,PL..........................UHE,UHH,UHV,UHX	EA	4
70	38	PAOFF	1560-00-909-7048	97499	205-031-257-3	.PANEL ASSEMBLY FLOOR-LH U/D PN 205-031-321-1,-3,-5,-7,-15,-17,-19,&-31..UHE,UHH,UHV,UHX	EA	1
70	39	PAOFF	1560-00-939-7624	97499	205-031-257-4	.FLOOR,AIRCRAFT-RH U/D PN 205-031-320-1,-3, -5,-7,-11,-13,-15,& -19..UHE,UHH,UHV,UHX	EA	1
70	40	PAFZZ	1560-00-401-3598	97499	205-031-257-74	..FILLER, FLOOR PANEL -RH......................UHE,UHH,UHV,UHX	EA	1
70	40	PAFZZ	1560-00-401-3597	97499	205-031-257-73	..FILLER, FLOOR PANEL..........................UHE,UHH,UHV,UHX	EA	1
70	41	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	6
70	42	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	6
70	43	PAOZZ	5325-00-195-0904	00624	34113-30	..STUD,SNAPSLIDE,FAST..........................UHE,UHH,UHX	CA	1
70	44	PAOZZ	5315-00-412-9867	97499	100-051-1	..PIN,STRAIGHT,HEADED.........................UHE,UHH,UHV,UHX	EA	1
70	45	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	..PIN,STRAIGHT HEADED.........................UHE,UHH,UHV,UHX	EA	6
70	46	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	6
70	47	PAOZZ	1680-00-802-3204	98313	FDA1886	..RING,DOOR ASSEMBLY..........................UHE,UHH,UHV,UHX	EA	8
70	48	PAOZZ	5315-00-412-9867	97499	100-051-1	.PIN,STRAIGHT,HEADED..........................UHE,UHH,UHV,UHX	EA	1
70	49	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	.PIN,STRAIGHT HEADED..........................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
70	50	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT.....................................UHE,UHH,UHV,UHX	EA	1
70	51	PAOZZ	1680-00-802-3204	98313	FDA1886	.RING,DOOR ASSEMBLY.............................UHE,UHH,UHV,UHX	EA	1
70	52	PAOZZ	1560-00-967-1832	97499	205-031-370-1	.COVER PLATE-LH.................................UHE,UHH,UHV,UHX	EA	1
70	53	PAOZZ	1560-00-967-1833	97499	205-031-370-2	.COVER PLATE-RH.................................UHE,UHH,UHV,UHX	EA	1
70	54	PAOZZ	1560-00-967-1834	97499	205-031-371-1	.COVER PLATE-LH.................................UHE,UHH,UHV,UHX	EA	1
70	55	PAOZZ	1560-00-967-1835	97499	205-031-371-2	.COVER PLATE-RH.................................UHE,UHH,UHV,UHX	EA	1
70	56	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	.SCREW,MACHINE U/O PN 205-031-320-19 & 205-031-321-31 ....UHE,UHH,UHV,UHX	EA	37
70	56	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE U/O PN 205-031-320-19 & 205-031-321-31 ....UHE,UHH,UHV,UHX	EA	3
70	57	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	3
70	57	PAOZZ	5310-00-734-1850	96906	MS21071L3	.NUT,SELF-LOCKING,PL U/O PN 205-031-320-19 & 205-031-321-31 ....UHE,UHH,UHV,UHX	EA	6
70	57	PAOZZ	5310-00-761-4221	96906	MS21073L3	.NUT,SELF-LOCKING,PL U/O PN 205-031-320-19 & 205-031-321-31 ....UHE,UHH,UHV,UHX	EA	3
70	58	PBOZZ	5305-00-984-6196	96906	MS35206-248	.SCREW,MACHINE..................................UHE,UHH,UHV,UHX	EA	8
70	58A	PAOZZ	5340-00-800-0354	61864	MS51156	.BUTTON,PLUG U/O PN 205-031-321-1,-3,-5,-7, -15,-17,-19,& -31..UHE,UHH,UHV,UHX	EA	1
70	59	PAOFF	1560-00-103-2416	97499	205-031-262-3A	.FLOOR,AIRCRAFT U/O PN 205-031-321-1,-3,-5,-7, -15,-17,& -19 ....UHE,UHH,UHV,UHX	EA	1
70	59	PAOFF	1560-00-828-8142	97499	205-031-262-5	.FLOOR,AIRCRAFT -LH U/O PN 205-031-321-31....UHE,UHH,UHV,UHX	EA	1
70	60	PAOFF	1560-00-103-2417	97499	205-031-262-4A	.PANEL ASSEMBLY-RH U/O PN 205-031-320-1,-3,-5,-7,-11,-13 & -15..UHE,UHH,UHV,UHX	EA	1
70	60	PAOFF	1560-00-828-8140	97499	205-031-262-6	.FLOOR,AIRCRAFT -RH U/O PN 205-031-320-19....UHE,UHH,UHV,UHX	EA	1
70	61	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT...................................UHE,UHH,UHV,UHX	EA	1
70	62	PAOZZ	5325-00-195-0904	00624	34113-30	..STUD,SNAPSLIDE,FAST...........................UHE,UHH,UHV,UHX	CA	1
70	63	PAOZZ	5315-00-412-9867	97499	100-051-1	..PIN,STRAIGHT,HEADED...........................UHE,UHH,UHV,UHX	EA	1
70	64	PAOZZ	5315-00-812-3750	96906	MS20392-1C17	..PIN,STRAIGHT HEADED...........................UHE,UHH,UHV,UHX	EA	3
70	65	PAOZZ	5310-00-1 7-2399	88044	AN960PD516	..WASHER,FLAT...................................UHE,UHH,UHV,UHX	EA	3
70	66	PAOZZ	1680-00-802-3204	98313	FDA1886	..RING,DOOR ASSEMBLY............................UHE,UHH,UHV,UHX	EA	3
70	67	XCFZZ		97499	205-030-316-1	HEEL REST INSTL PILOT AND CO-PILOT ANTI-TORQUE CONTROL SEE FIG 67 FOR NHA.....................................UHE,UHH,UHV,UHX	EA	1
70	68	PAFZZ	1560-00-181-3722	97499	205-030-058-1	.HEEL REST,PILOT AND CO-PILOT.................UHE,UHH,UHV,UHX	EA	4

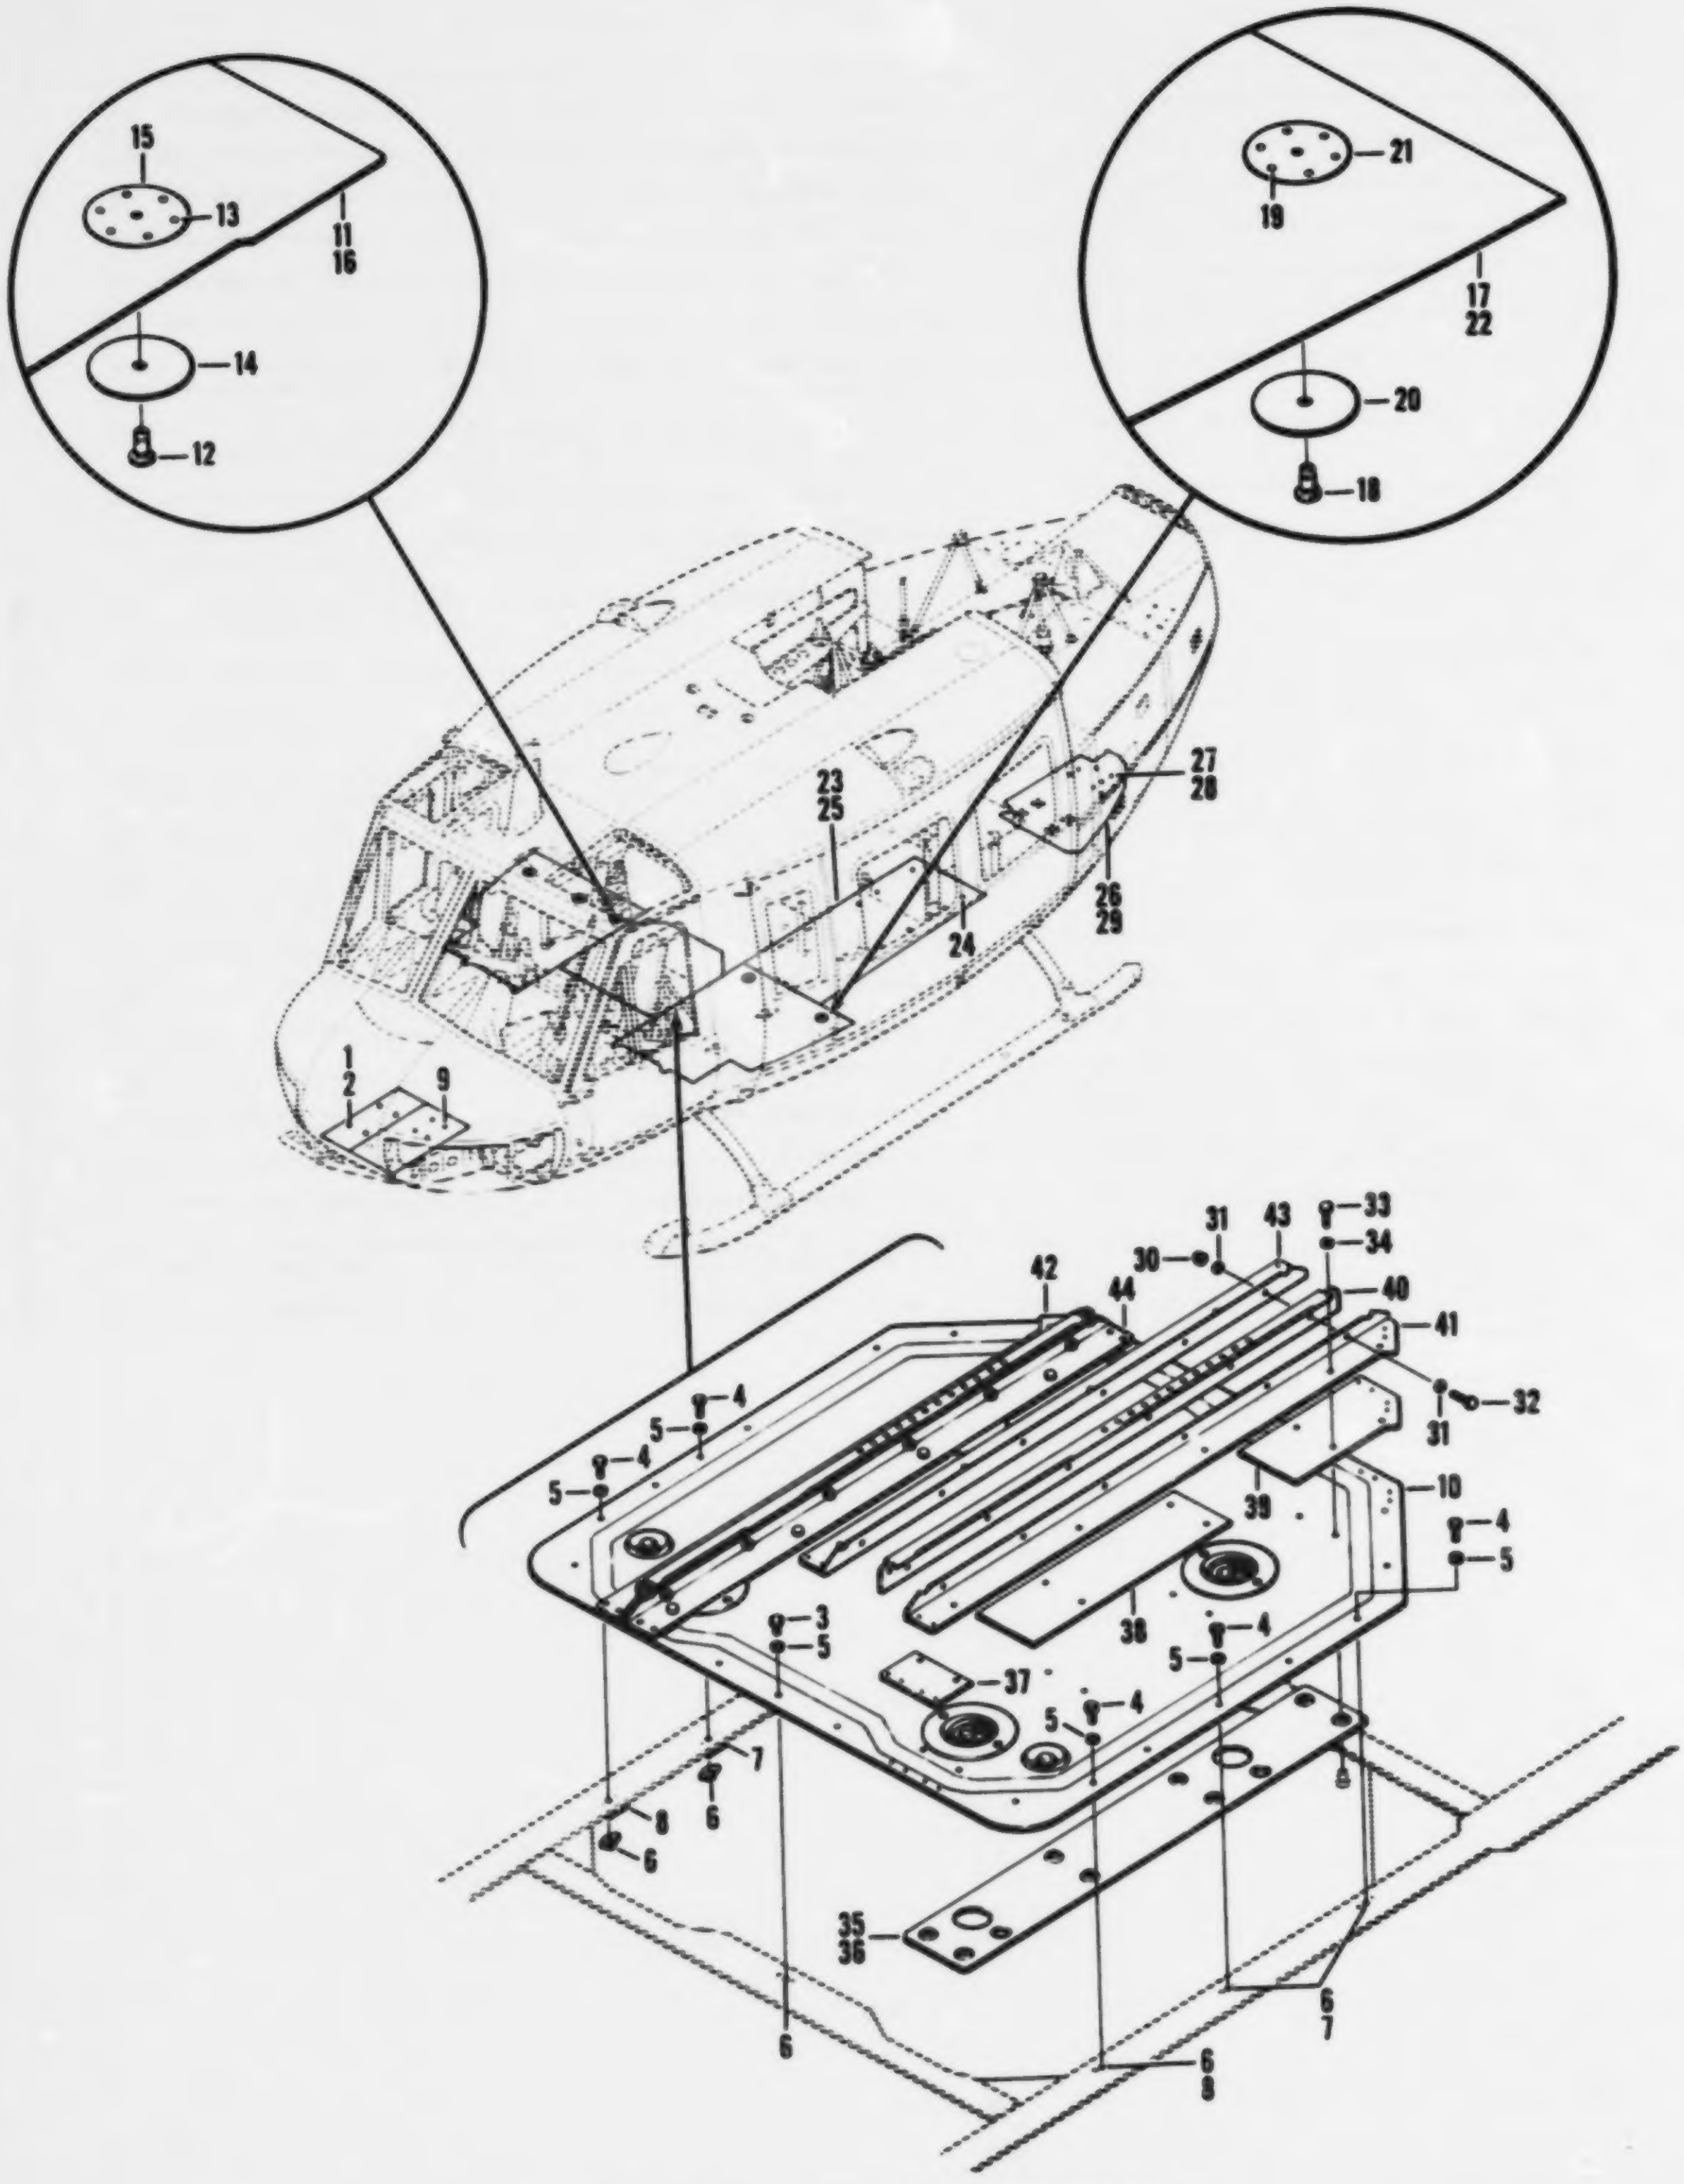
15
13
11
16
14
12
21
19
17
22
20
18
27
28
23
25
26
29
24
1
2
9
31
43
33
34
30
40
42
44
41
32
31
4
5
4
5
39
10
4
5
3
5
38
4
5
37
4
5
7
6
8
6
35
36
6
7
6
6
8

Figure 70A. Floor and Shelf Modification

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.							
						GROUP 02 AIRFRAME		
70A		XCOOF		20309	ES-D-221680	FLOOR AND SHELF MOD SEE FIG.5B FOR NHA....UHX	EA	REF
70A	1	PAFZZ		82831	P106F1032-04	.PLUG....UHX	EA	4
70A	2	PAFZZ		29372	S106D10-0	.FASTENER,PANEL....UHX	EA	4
70A	3	PAFZZ		88044	AN4C4A	.BOLT,MACHINE....UHX	EA	1
70A	4	PAFZZ		88044	AN4C5A	.BOLT,MACHINE....UHX	EA	5
70A	5	PAOZZ		96906	MS15795-809	.WASHER,FLAT....UHX	EA	6
70A	6	PAFZZ		80205	NAS679A4	.NUT,SELF-LOCKING,PL....UHX	EA	6
70A	7	MFFZZ		97499	205-030-322-27	.RADIUS BLOCK....UHX	EA	3
70A	8	MFFZZ		97499	205-030-322-29	.RADIUS BLOCK....UHX	EA	2
70A	9	PAFZZ		97393	SL2334-08A3	.INSERT,BLIND....UHX	EA	4
70A	10	MFOFF		20309	ES-D-221725	.PLATE,STRUCTURAL AI MF 1560-00-909-7461....UHX	EA	1
70A	11	AFOFF		20309	ES-F-221652	.FLOOR PANEL,RH MOD....UHX	EA	1
70A	12	PAFZZ		97393	SL1194-4-13	..FASTENER....UHX	EA	3
70A	13	PAFZZ		05693	CR3243-4-2	..RIVET,BLIND....UHX	EA	18
70A	14	MFFZZ		20309	ES-C-221661-1	..PLATE,DOUBLER....UHX	EA	3
70A	15	MFFZZ		20309	ES-C-221661-2	..PLATE,DOUBLER....UHX	EA	3
70A	16	PAOFF		97499	205-031-332-69	..FLOOR,AIRCRAFT SEE FIG.70 FOR BREAKDOWN....UHX	EA	1
70A	17	AFOFF		20309	ES-F-221653	.PANEL,FLOOR,LH MOD....UHX	EA	1
70A	18	PAFZZ		97393	SL1194-4-13	..FASTENER....UHX	EA	2
70A	19	PAFZZ		05693	CR3243-4-2	..RIVET,BLIND....UHX	EA	12
70A	20	MFFZZ		20309	ES-C-221661-1	..PLATE,DOUBLER....UHX	EA	2
70A	21	MFFZZ		20309	ES-C-221661-2	..PLATE,DOUBLER....UHX	EA	2
70A	22	PAOFF		97499	205-031-332-67	..FLOOR,AIRCRAFT SEE FIG. 70 FOR BREAKDOWN....UHX	EA	1
70A	23	AFOFF		20309	ES-F-221673	.PANEL,FLOOR,LH ASSY....UHX	EA	1
70A	24	PAFZZ		29372	60404-75-70	..FASTENER,STRUCTURAL....UHX	EA	6
70A	25	PAOFF		97499	205-031-257-3	..PANEL ASSEMBLY,FLOO SEE FIG.70 FOR BREAKDOWN....UHX	EA	1
70A	26	AFOFF		20309	ES-F-221698	.SHELF ASSY....UHX	EA	1
70A	27	PAFZZ		82831	P106F1032-06	..PLUG....UHX	EA	24
70A	28	PAFZZ		29372	S106D10-0	..SLEEVE....UHX	EA	24
70A	29	XCFZZ		97499	205-031-199-5	..SHELF INSTL-LH....UHX	EA	1
70A		AOOOO		20309	ES-D-221547	SEAT TRACK ASSY SEE FIG 5B FOR NHA....UHX	EA	1
70A	30	PAOZZ		96906	MS21044C3	.NUT,SELF-LOCKING,HE....UHX	EA	16
70A	31	PAOZZ		96906	MS15795-808	.WASHER,FLAT....UHX	EA	58
70A	32	PAOZZ		88044	AN3-7	.BOLT,MACHINE....UHX	EA	12
70A	33	PAOZZ		88044	AN3-6	.BOLT,MACHINE....UHX	EA	20
70A	34	PAOZZ		96906	MS15795-808	.WASHER,FLAT....UHX	EA	REF
70A	35	MDOZZ		20309	ES-D-221548-1	.PLATE,DOUBLER....UHX	EA	1
70A	36	MDOZZ		20309	ES-D-221548-10	.PLATE,DOUBLER....UHX	EA	18
70A	37	MDOZZ		20309	ES-D-221548-6	.SHIM....UHX	EA	2
70A	38	MDOZZ		20309	ES-D-221548-7	.SHIM....UHX	EA	2
70A	39	MDOZZ		20309	ES-D-221548-8	.SHIM....UHX	EA	2
70A	40	MDOZZ		20309	ES-D-221548-9	.TRACK....UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
70A	41	MDOZZ		20309	ES-D-221548-4	.ANGLE,TRACK MOUNTIN......................................UHX	EA	1
70A	42	MDOZZ		20309	ES-D-221548-5	.ANGLE,TRACK MOUNTIN......................................UHX	EA	1
70A	43	MDOZZ		20309	ES-D-221548-3	.ANGLE,TRACK MOUNTIN......................................UHX	EA	1
70A	44	MDOZZ		20309	ES-D-221548-2	.ANGLE,TRACK MOUNTIN......................................UHX	EA	1

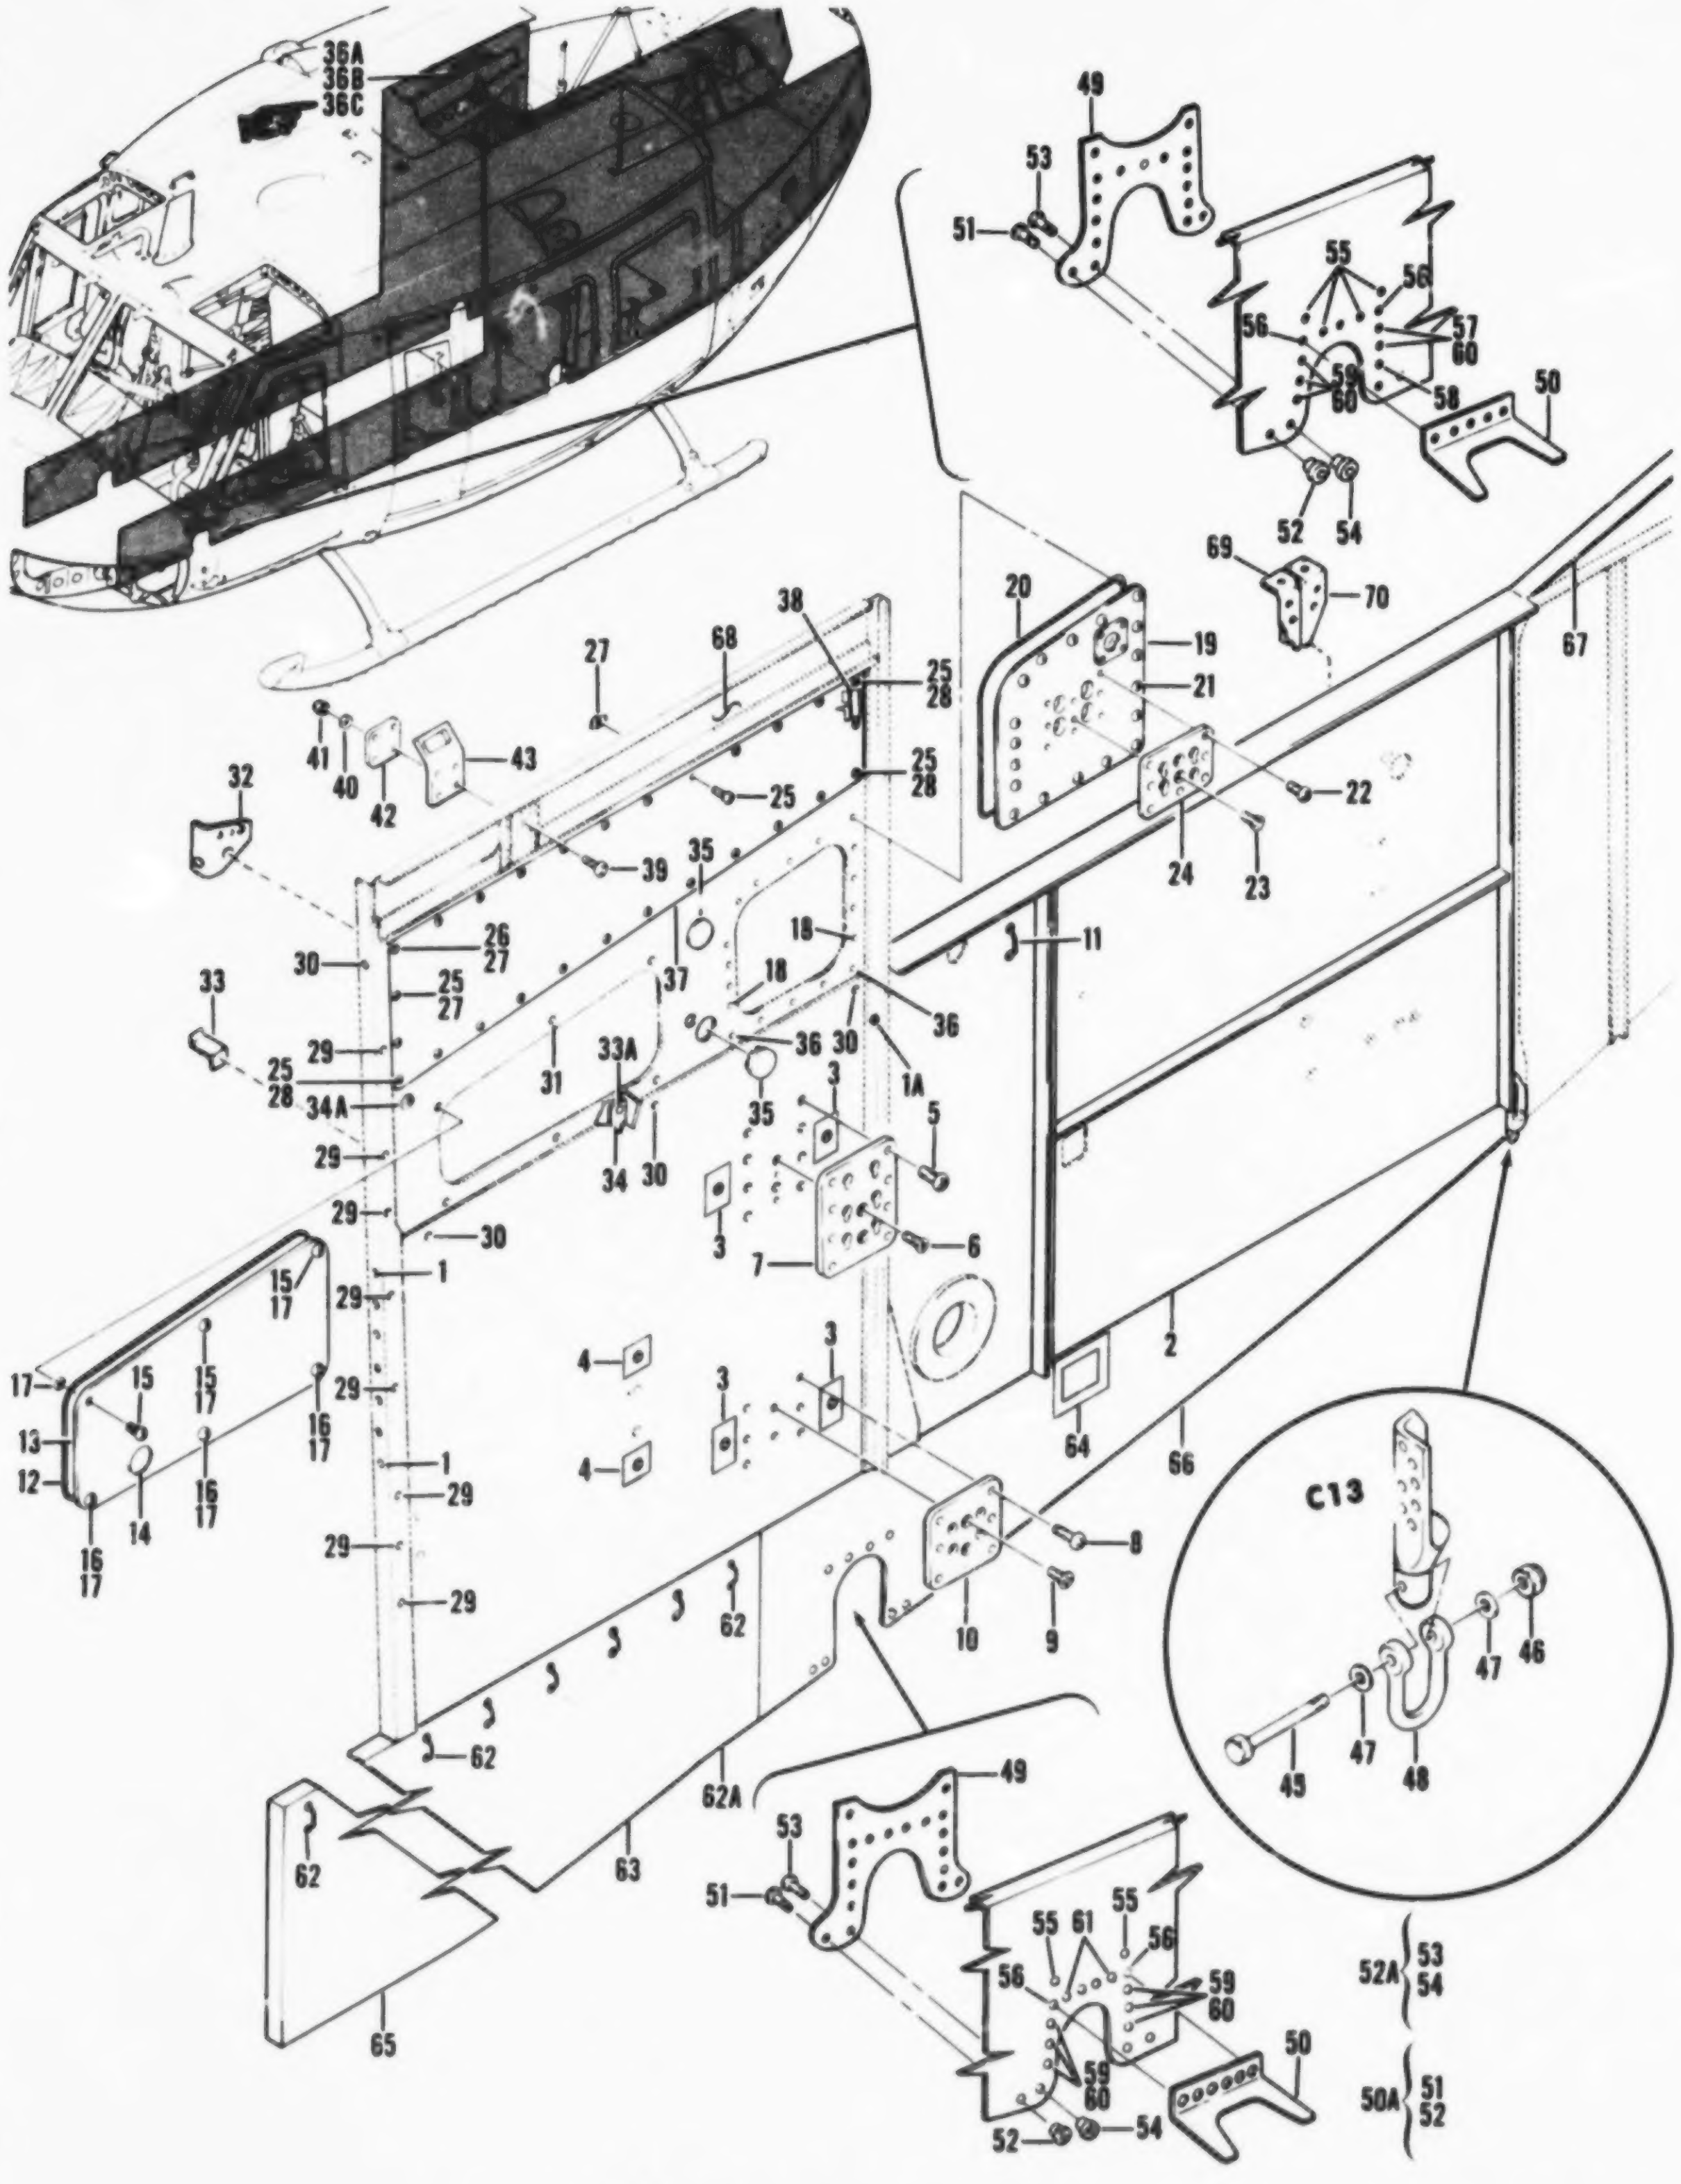
36A
36B
36C
49
53
51
55
56
56
57
60
59
60
58
50
52
54
69
70
67
20
19
21
22
24
23
38
25
28
27
68
25
28
41
40
42
43
25
32
39
35
18
18
11
30
26
27
37
25
27
33
29
25
28
34A
36
36
30
1A
31
33A
35
3
5
29
34
30
3
6
7
29
30
1
15
17
29
2
17
15
15
17
16
17
13
12
14
16
17
16
17
29
4
3
3
4
1
29
64
66
C13
29
8
29
10
9
62
62
62A
63
62
65
49
53
51
55
61
55
56
56
59
60
59
60
50
52
54
45
47
48
47
46
52A
53
54
50A
51
52

Figure 71. Beam Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
71		XCFZZ		97499	205-030-163-3	BEAM ASSY-LH USBL EFF 62-2106 THRU 62-2113 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-163-5	BEAM ASSY-LH USBL EFF 62-12351 THRU 62-12372 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-163-7	BEAM ASSY-LH USBL EFF 63-8739 THRU 63-13002 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-163-283	BEAM ASSY-LH USBL EFF 64-13492 THRU 64-13661 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-163-299	BEAM ASSY-LH USBL EFF 64-13662 THRU 64-13901 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-163-309	BEAM ASSY-LH USBL EFF 65-9565 THRU 65-12895 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-163-339	BEAM ASSY-LH USBL EFF 66-746 THRU 69-15291 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-163-537	BEAM ASSY-LH USBL EFF 69-15292 THRU 70-15932 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-163-553	BEAM ASSY-LH USBL EFF 70-16200 & SUBSEQUENT SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-164-3	BEAM ASSY-RH USBL EFF 62-2106 THRU 62-12372 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-164-5	BEAM ASSY-RH USBL EFF 63-8739 THRU 63-13002 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-164-7	BEAM ASSY-RH USBL EFF 64-13492 THRU 64-13661 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-164-9	BEAM ASSY-RH USBL EFF 64-13662 THRU 64-13901 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-164-285	BEAM ASSY-RH USBL EFF 65-9565 THRU 66-16306 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-164-317	BEAM ASSY-RH USBL EFF 66-16307 THRU 69-15291 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-164-427	BEAM ASSY-RH USBL EFF 69-15292 THRU 70-15932 SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71		XCFZZ		97499	205-030-164-441	BEAM ASSY-RH USBL EFF 70-16200 & SUBSEQUENT SEE FIG.67 FOR NHA....UHE,UHH,UHV,UHX	EA	1
71	1	PAOZZ	5340-00-987-5345	80539	1960-5-6-0	.RECEPTACLE....UHE,UHH,UHV,UHX	EA	7
71	1A	PAOZZ	5325-00-174-2923	88044	AN227-8	.STUD,SNAP FASTENER....UHE,UHH,UHV,UHX	EA	35
71	2	PADDD	1560-00-176-1088	97499	205-030-169-387	.PANEL,FUSELAGE,AIRC -LH U/W CRASHWORTHY FUEL SYSTEM ....UHE,UHH,UHV,UHX	EA	1
71	2	PADDD	1560-00-146-6609	97499	205-030-169-389	.PANEL,STRUCTURAL,AI -RH U/W CRASHWORTHY FUEL SYSTEM ....UHE,UHH,UHV,UHX	EA	1
71	3	MFOZZ	1560-00-034-3720	97499	100-057-1	..BACKUP PLATE ASSEMB....UHE,UHH,UHV,UHX	EA	4
71	4	MFOZZ	1560-00-034-3721	97499	100-057-5	..BACKUP PLATE ASSEMB....UHE,UHH,UHV,UHX	EA	2
71	5	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	..SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	8
71	6	PAOZZ	5305-00-719-5400	96906	MS24694S48	..SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	3
71	7	PAOZZ	1560-00-987-5161	97499	205-030-232-1	..PLATE,STRUCTURAL,AI....UHE,UHH,UHV,UHX	EA	1
71	8	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	..SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	6
71	9	PAOZZ	5305-00-719-5400	96906	MS24694S48	..SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	2
71	10	PAOZZ	1560-00-987-5162	97499	205-030-233-1	..PLATE,STRUCTURAL,AI....UHE,UHH,UHV,UHX	EA	1
71	11	PAOZZ	1560-00-998-7619	97499	70-022-1	..HANGER,FUEL CELL....UHE,UHH,UHV,UHX	EA	11
71	12	PAOZZ	5330-00-761-2219	97499	205-030-163-277	.SEAL,RUBBER STRIP -LH....UHE,UHH,UHV,UHX	EA	1
71	12	PAOZZ	5330-00-761-2218	97499	205-030-164-265	.SEAL,RUBBER STRIP -RH....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
71	13	PAOOO	1560-00-927-1250	97499	205-030-210-45	.COVER,ACCESS..........UHE,UHH,UHV,UHX	EA	1
71	13	PAOOO	1560-00-927-1258	97499	205-030-210-47	.COVER,ACCESS..........UHE,UHH,UHV,UHX	EA	1
71	14	PAOZZ	1560-00-475-5675	97499	205-030-210-25	..WINDOW,OBSERVATION U/O PN 205-030-210-45 ....UHE,UHH,UHV,UHX	EA	1
71	14	PAOZZ	1560-00-427-9906	97499	205-030-210-55	..WINDOW,OBSERVATION U/O PN 205-030-210-47 ....UHE,UHH,UHV,UHX	EA	1
71	15	PAOZZ	5325-00-281-1552	72794	A5T20	..STUD,TURNLOCK FA FASTENER..........UHE,UHH,UHV,UHX	EA	3
71	16	PAOZZ	5325-00-281-5044	72794	A5T30	..STUD,TURNLOCK FA FASTENER..........UHE,UHH,UHV,UHX	EA	3
71	17	PAOZZ	5325-00-141-4002	72794	GH5	..EYELET,TURNLOCK FAS FASTENER..........UHE,UHH,UHV,UHX	EA	6
71	18	PAOZZ	5325-00-987-5347	80539	1960-5-6-01	.RECEPTACLE,TURNLOCK..........UHE,UHH,UHV,UHX	EA	13
71	19	PAOOO	1560-00-987-5174	97499	205-030-219-19	.COVER,ACCESS -LH U/O PN 205-030-163-3,-5,-7,-283,299 -309,& -399..........UHE,UHH,UHV,UHX	EA	1
71	19	PAOOO	1560-00-987-5175	97499	205-030-219-20	.COVER,ACCESS -RH U/O PN 205-030-164,-3,-5,-7,-9,-285,& -317 ....UHE,UHH,UHV,UHX	EA	1
71	20	PAOZZ	5330-00-906-0282	97499	205-030-219-29	..SEAL,RUBBER..........UHE,UHH,UHV,UHX	EA	1
71	21	PAOZZ	5305-00-066-9669	56878	1915-5-3	..BOLT,SLEEVE..........UHE,UHH,UHV,UHX	EA	18
71	21	PAOZZ	5365-00-830-2139	80539	1941-5	..RING,RETAINING..........UHE,UHH,UHV,UHX	EA	18
71	22	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	6
71	23	PAOZZ	5305-00-957-7610	96906	MS24693S271	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
71	24	PAOZZ	1560-00-987-5162	97499	205-030-233-1	..PLATE,STRUCTURAL,AI..........UHE,UHH,UHV,UHX	EA	1
71	25	PAOZZ	5305-00-751-9057	96906	MS27039-1-08	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	24
71	26	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
71	27	PAOZZ	5310-00-726-7716	96906	MS21069L3	.NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	22
71	28	PAOZZ	5310-00-734-1860	96906	MS21071L3	.NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	3
71	29	PAOZZ	5310-00-994-7209	80205	NAS1474A4	.NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	9
71	30	PAOZZ	5310-00-619-1143	80539	4600H054F2	.NUT,SELF-LOCKING,PL U/O PN 205-030-163-3,-5,-309, -339,205-030-164-3,& -5..........UHE,UHH,UHV,UHX	EA	4
71	30	PAOZZ	5310-00-619-1143	80539	4600H054F2	.NUT,SELF-LOCKING,PL U/O PN 205-030-163-7,-283, -299,205-030-164-7,-9, -285,& -317..........UHE,UHH,UHV,UHX	EA	3
71	30	PAOZZ	5310-00-916-2452	80539	M14600H054	.NUT,SELF-LOCKING,PL U/O PN 205-030-163-7,-283, -299,205-030-164-7,-9, -285,& -317..........UHE,UHH,UHV,UHX	EA	1
71	31	PAOZZ	5325-00-298-7026	72794	R5	.RECEPTACLE,TURNL..........UHE,UHH,UHV,UHX	EA	6
71	32	XDOZZ	1560-00-148-6431	97499	205-030-474-1	.FITTING,CARGO TIE D..........UHE,UHH,UHV,UHX	EA	1
71	33	PAOZZ	1560-00-667-6801	97499	205-030-163-185	.SUPPORT,BEAM ASSEMB -LH..........UHE,UHH,UHV,UHX	EA	1
71	33	PAOZZ	1560-00-260-8529	97499	205-030-164-185	.SUPPORT,BEAM ASSEMB -RH..........UHE,UHH,UHV,UHX	EA	1
71	33A	PAOZZ	5305-00-082-6780	96906	MS27039-1-12	.SCREW,MACHINE U/O PN 205-030-164-285 & -317 ....UHE,UHH,UHV,UHX	EA	1
71	34	PAOZZ	1560-00-913-6923	97499	205-070-790-1	.STRAP,WEBBING U/O PN 205-030-163-309,-339, 205-030-164-285, & -317..........UHE,UHH,UHV,UHX	EA	1
71	34A	PAOZZ	5340-00-708-8933	61864	HS51026K2215	.BUTTON,PLUG..........UHE,UHH,UHV,UHX	EA	1
71	35	PAOZZ	5340-00-206-5266	61864	HS50725K2915	.BUTTON,PLUG..........UHE,UHH,UHV,UHX	EA	2
71	36	PAOZZ	5325-00-987-5346	80539	1960-5-6-1	.RECEPTACLE,TURNLOCK..........UHE,UHH,UHV,UHX	EA	5
71	36A	PAOZZ		88044	AN6-5A	.BOLT,MACHINE..........UHX	EA	2
71	36B	PAOZZ		88044	AN960C516	.WASHER,FLAT..........UHX	EA	2
71	36C	XDOZZ		20309	ES-C-221642	.HANDLE,BOW SEE FIG.6B FOR NHA..........UHX	EA	1
71	37	PAOOO	1560-00-987-5177	97499	205-031-221-1	.COVER,ACCESS -LH U/O PN 205-030-163-5,-7,-283,-299,-309, & -339..........UHE,UHH,UHV,UHX	EA	1
71	37	PAOOO	1560-00-987-5178	97499	205-031-221-2	.COVER,ACCESS -RH U/O PN 205-030-164-3,-5,-7,-9,-285, & -317 ....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
71	38	PAOZZ	5330-00-872-1255	97499	205-031-221-15	..SEAL,RUBBER....UHE,UHH,UHV,UHX	EA	1
71	39	PAOZZ	5305-00-180-0014	88044	AN525-10R12	.SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	4
71	40	PAOZZ	5310-00-183-4405	88044	AN960PD10	.WASHER,FLAT....UHE,UHH,UHV,UHX	EA	4
71	41	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX....UHE,UHH,UHV,UHX	EA	4
71	42	PAOZZ	1560-00-076-6038	97499	205-060-861-1	.PLATE,COWL LATCH....UHE,UHH,UHV,UHX	EA	1
71	43	PAOZZ	1560-00-968-4692	97499	205-060-859-1	.LATCH RETAINER,COWL....UHE,UHH,UHV,UHX	EA	1
71	44	PBOOO	1560-00-928-7042	97499	205-030-265-11	.FITTING ASSEMBLY, A -LH U/O PN 205-030-163-3,-5,-7,-283,-299,-309 & -339....UHE,UHH,UHV,UHX	EA	1
71	44	XDOOO		97499	205-030-265-12	.FITTING,JACK U/O PN 205-030-164-3,-5,-7,-9,-285,& -317....UHE,UHH,UHV,UHX	EA	1
71	45	PAOZZ	5305-00-151-2821	88044	AN5-22A	..BOLT,MACHINE....UHE,UHH,UHV,UHX	EA	1
71	46	PAOZZ	5310-00-807-1475	96906	MS21042L5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON U/W PN 204-031-393-1 ONLY....UHE,UHH,UHV,UHX	EA	1
71	47	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT U/W PN 204-031-393-1 ONLY....UHE,UHH,UHV,UHX	EA	2
71	48	PAOZZ	4030-00-977-6940	97499	204-031-393-1	..SHACKLE....UHE,UHH,UHV,UHX	EA	1
71	49	PAFZZ	1560-00-119-1179	97499	205-030-104-1	.SUPPORT FITTING,LAN -LH FWD....UHE,UHH,UHV,UHX	EA	1
71	49	PAFZZ	1560-00-947-6224	97499	205-030-105-1	.SUPPORT FITTING,LAN -LH AFT U/O PN 205-030-163-5,-7,-283,-299,-309,& -399....UHE,UHH,UHV,UHX	EA	1
71	49	PAFZZ	1560-00-119-1178	97499	205-030-104-2	.SUPPORT FITTING,LAN -RH FWD....UHE,UHH,UHV,UHX	EA	1
71	49	PAFZZ	1560-00-948-0445	97499	205-030-105-2	.SUPPORT FITTING,LAN -RH AFT U/O PN 205-030-164-3,-5,-7,-9,-285,& -287....UHE,UHH,UHV,UHX	EA	1
71	50	PAFZZ	1560-00-189-0332	97499	205-030-971-1	.BRACE, LANDING GEAR -FWD LH....UHE,UHH,UHV,UHX	EA	1
71	50	PAFZZ	1560-00-189-0331	97499	205-030-971-2	.SUPPORT,LANDING GEA -FWD RH....UHE,UHH,UHV,UHX	EA	1
71	50	PAFZZ	1560-00-937-2560	97499	205-030-970-1	.BRACE,LANDING GEAR -AFT LH & RH....UHE,UHH,UHV,UHX	EA	2
71	50A	AFFFF		73197	HL20PB86-6-6	.RIVET ASSEMBLY....UHE,UHH,UHV,UHX	EA	4
71	51	PAFZZ	5320-00-864-6099	73197	HL20PB6-6	..FASTENER ASSEMBL....UHE,UHH,UHV,UHX	EA	1
71	52	PAFZZ	5320-00-869-1495	73197	HL1087PBW-6	..COLLAR,PIN-RIVET,TH....UHE,UHH,UHV,UHX	EA	1
71	52A	XDFFZ		73197	HL20PB86-6-7	..FASTENER ASSEMBL....UHE,UHH,UHV,UHX	EA	4
71	53	PBFZZ	5320-00-869-4298	73197	HL20PB6-7	..PIN-RIVET,THREADED....UHE,UHH,UHV,UHX	EA	1
71	54	PAFZZ	5320-00-869-1495	73197	HL1087PBW-6	..COLLAR,PIN-RIVET,TH....UHE,UHH,UHV,UHX	EA	1
71	55	PAFZZ	5320-00-725-6927	96906	MS20615-5M7	.RIVET,SOLID....UHE,UHH,UHV,UHX	LB	7
71	56	PAFZZ	5320-00-818-0942	96906	MS20615-5M12	.RIVET,SOLID....UHE,UHH,UHV,UHX	LB	4
71	57	PAOZZ	5320-00-205-7776	80205	NAS529-6-5	.PIN-RIVET,GROOVED....UHE,UHH,UHV,UHX	EA	2
71	58	PAFZZ	5320-00-205-7685	80205	NAS529-6-6	.PIN-RIVET,GROOVED....UHE,UHH,UHV,UHX	EA	1
71	59	PAFZZ	5320-00-205-7320	80205	NAS529-6-7	.PIN-RIVET,GROOVED....UHE,UHH,UHV,UHX	EA	9
71	60	PAFZZ	5320-00-223-6093	80205	NAS179-6	.COLLAR,GROOVED PIN-....UHE,UHH,UHV,UHX	EA	12
71	61	PAFZZ	5320-00-255-1938	96906	MS20615-5M9	.RIVET,SOLID....UHE,UHH,UHV,UHX	LB	4
71	62	PAFZZ	1560-00-995-7619	97499	70-022-1	.HANGER,FUEL CELL -RH....UHE,UHH,UHV,UHX	EA	9
71	62A	PADZZ	1560-00-919-8741	97499	205-030-163-313	.PLUG BEAM ASSEMBLY, -LH....UHE,UHH,UHV,UHX	EA	1
71	63	PBDZZ	1560-00-927-9525	97499	205-030-161-4	.STRIP,BEAM ASSEMBLY....UHE,UHH,UHV,UHX	EA	1
71	64	PAFFF	1560-00-175-1419	97499	205-030-212-1	.SUPPORT,STRUCTURAL....UHE,UHH,UHV,UHX	EA	1
71	65	PADDD	1560-00-157-4999	97499	205-030-229-139	.PANEL,BEAM....UHE,UHH,UHV,UHX	EA	1
71	65	PADDD	1560-00-157-4998	97499	205-030-228-115	.PANEL,BEAM....UHE,UHH,UHV,UHX	EA	1
71	66	XBDZZ	1560-00-106-0083	97499	205-030-161-5	.CAP,BEAM,LOWER LH-LOWER....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
71	66	XBOZZ	1560-00-105-0064	97499	205-030-161-6A	.CAP,BEAM,LOWER -RH LOWER......................UHE,UHH,UHV,UHX	EA	1
71	67	MFFZZ		97499	205-030-163-231	.RADIUS BLOCK-LH..............................UHE,UHH,UHV,UHX	EA	1
71	67	MFFZZ		97499	205-030-164-215	.RADIUS BLOCK-RH..............................UHE,UHH,UHV,UHX	EA	1
71	68	PBOZZ	1560-00-183-5977	97499	205-030-163-177B	.WEB,BEAM,FUSELAGE -LH........................UHE,UHH,UHV,UHX	EA	1
71	69	PBOZZ	1560-00-168-5658	97499	205-030-409-1	.FITTING,ENGINE MOUN..........................UHE,UHH,UHV,UHX	EA	1
71	69	PBOZZ	1560-01-157-5414	97499	205-030-409-2	.FITTING......................................UHE,UHH,UHV,UHX	EA	1
71	70	PBOZZ	1560-00-168-5659	97499	205-030-409-3	.FITTING,ENGINE MOUN..........................UHE,UHH,UHV,UHX	EA	1
71	70	PBOZZ	1560-01-157-5415	97499	205-030-409-4	.FITTING..UHE	EA	1

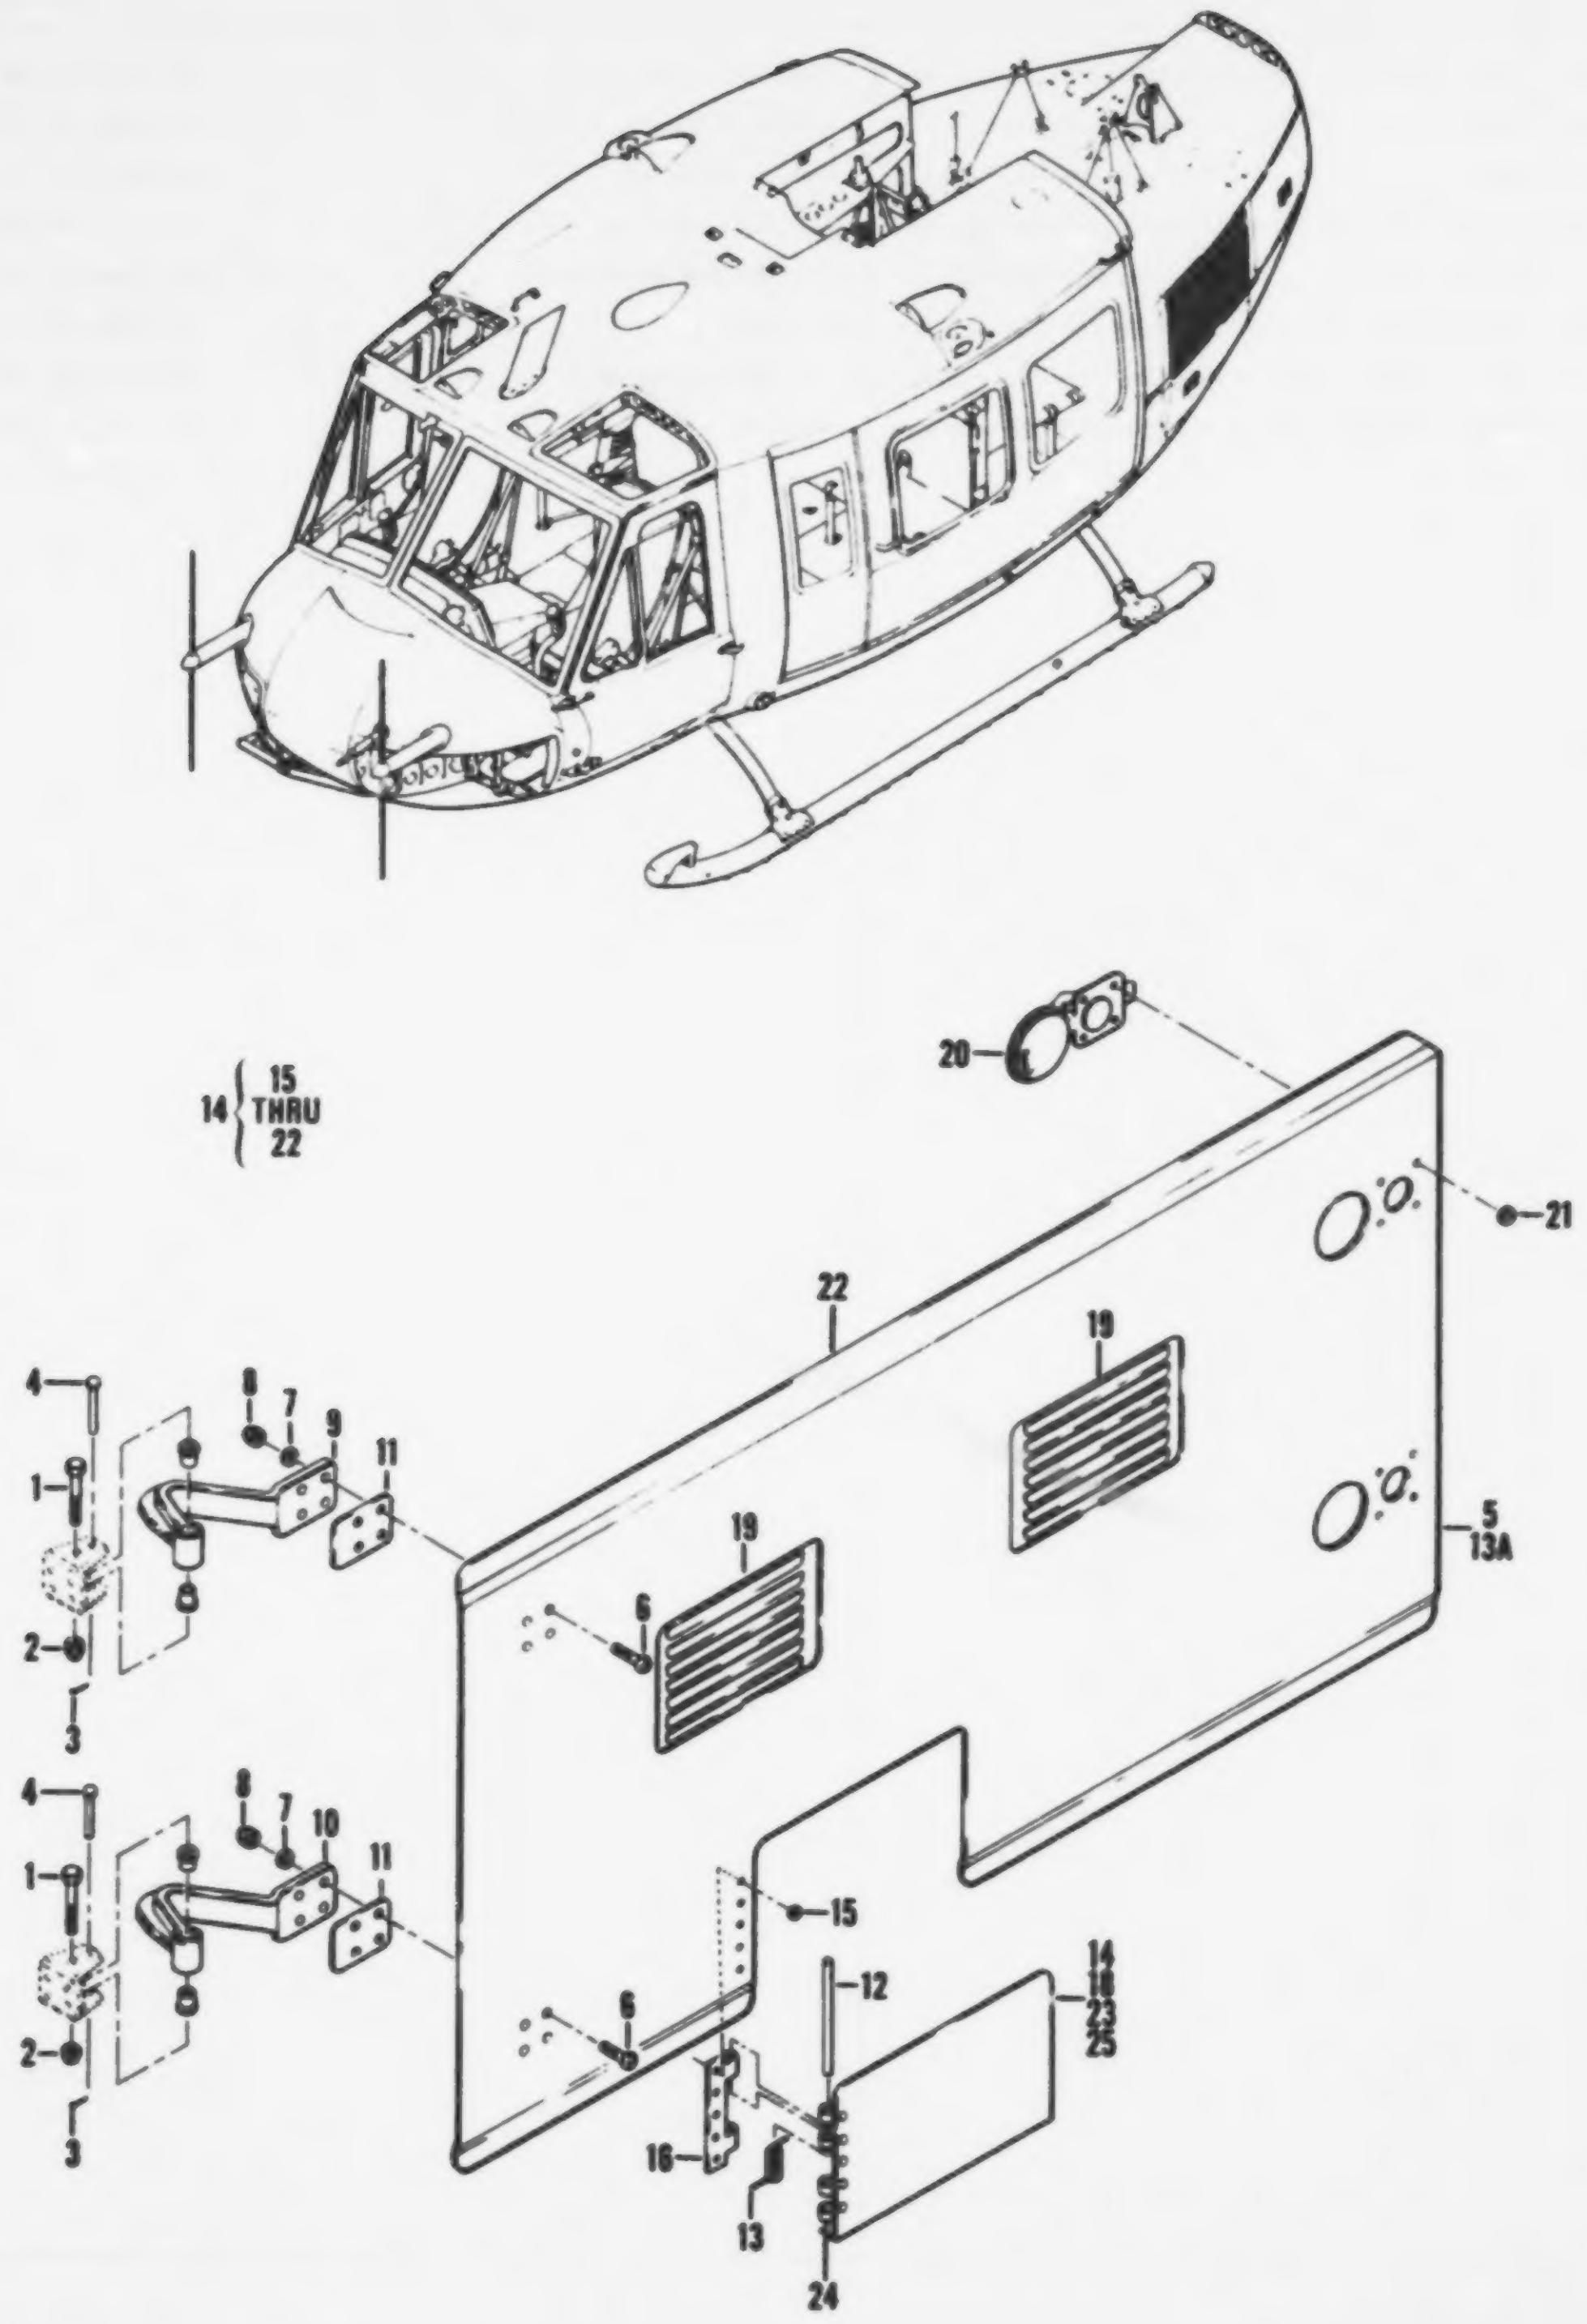
14 { 15 THRU 22
20
21
22
19
19
4
1
8
7
9
11
6
5
13A
2
3
4
1
8
7
10
11
15
12
14
18
23
25
6
2
3
16
13
24

Figure 72. Door Installation

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
72		XCFZZ		97499	205-030-484-33	DOOR INSTL-LH USBL EFF 62-2106 THRU 65-9675 SEE FIG.68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
72		XCFZZ		97499	205-030-028-1	DOOR INSTL-LH USBL EFF 65-9676 & SUBSEQUENT SEE FIG.68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
72		XCFZZ		97499	205-030-484-34	DOOR INSTL-RH USBL EFF 62-2106 THRU 65-9675 SEE FIG.68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
72		XCFZZ		97499	205-030-028-2	DOOR INSTL-RH USBL EFF 65-9676 THRU 66-16306 SEE FIG.68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
72		XCFZZ		97499	205-030-028-31	DOOR INSTL-RH USBL EFF 66-16307 & SUBSEQUENT SEE FIG.68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
72	1	PAOZZ	5306-00-182-2006	88044	AN3H15A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
72	2	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	2
72	3	PAOZZ	5315-00-234-1856	96906	MS24665-155	.PIN,COTTER..........UHE,UHH,UHV,UHX	EA	2
72	4	PAOZZ	5315-00-812-3763	96906	MS20392-1C41	.PIN,STRAIGHT, HEADED..........UHE,UHH,UHV,UHX	EA	2
72	5	PAOOO	9999-00-400-2751	97499	205-030-028-41	.DOOR,ACCESS -LH..........UHE,UHH,UHV,UHX	EA	1
72	5	PAOOO	9999-00-400-2750	97499	205-030-028-45	.DOOR,ACCESS -RH..........UHE,UHH,UHV,UHX	EA	1
72	6	PAOZZ	5305-00-180-0014	88044	AN525-10R12	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	8
72	7	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	8
72	8	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	8
72	9	PAOZZ	5340-00-943-0833	97499	205-030-033-1	..HINGE,ACCESS DOOR -LH UPPER..........UHE,UHH,UHV,UHX	EA	1
72	9	PAOZZ	5340-00-943-0851	97499	205-030-033-2	..HINGE,ACCESS DOOR -RH UPPER..........UHE,UHH,UHV,UHX	EA	1
72	10	PAOZZ	5340-00-943-0851	97499	205-030-033-2	..HINGE,ACCESS DOOR -LH LOWER..........UHE,UHH,UHV,UHX	EA	1
72	10	PAOZZ	5340-00-943-0833	97499	205-030-033-1	..HINGE,ACCESS DOOR -RH LOWER..........UHE,UHH,UHV,UHX	EA	1
72	11	PAOZZ	5365-00-967-7642	97499	120-062-1	..SHIM..........UHE,UHH,UHV,UHX	EA	2
72	12	MFOZZ	5315-00-200-3456	96906	MS20253-2-275	..PIN,STRAIGHT, HEADLESS..........UHE,UHH,UHV,UHX	EA	1
72	13	PAOZZ	5360-00-964-6473	97499	120-128-1	..SPRING,HELICAL,TORS..........UHE,UHH,UHV,UHX	EA	1
72	13A	XAOOO		97499	205-030-028-43	..DOOR ASSEMBLY-LH..........UHE,UHH,UHV,UHX	EA	1
72	13A	XAOOO		97499	205-030-028-47	..DOOR ASSEMBLY-RH..........UHE,UHH,UHV,UHX	EA	1
72	14	XAOOO		97499	205-030-484-35	..DOOR ASSEMBLY-LH..........UHE,UHH,UHV,UHX	EA	1
72	14	XAOOO		97499	205-030-484-36	..DOOR ASSEMBLY-RH..........UHE,UHH,UHV,UHX	EA	1
72	15	PAOZZ	5310-00-515-9371	88044	AN960PD3	...WASHER,FLAT U/O PN 205-030-484-35 & -36 ....UHE,UHH,UHV,UHX	EA	5
72	16	MFOZZ	1560-00-H25-5358	97499	205-030-484-17	...HINGE HALF U/O PN 205-030-484-35 & -36....UHE,UHH,UHV,UHX	EA	1
72	16	MFOZZ	5340-00-152-0676	97499	205-030-028-25	...HINGE,HALF U/O PN 205-030-028-8, -35,& -43 ....UHE,UHH,UHV,UHX	EA	1
72	17	MFOZZ	1560-00-H25-5357	97499	205-030-484-15	...HINGE HALF U/O PN 204-030-484-35 & -36....UHE,UHH,UHV,UHX	EA	1
72	18	PAOZZ	1560-00-966-6124	97499	205-030-484-21	...DOOR,ACCESS -LH U/O PN 204-030-484-35.....UHE,UHH,UHV,UHX	EA	1
72	19	XBOZZ	1560-00-511-8218	97499	205-030-034-1	...LOUVER U/O PN 205-030-028-8 & -35.........UHE,UHH,UHV,UHX	EA	2
72	20	PAOZZ	5340-00-872-7937	83014	M6055063A123	...CATCH,FLUSH..........UHE,UHH,UHV,UHX	EA	2
72	21	PAOZZ	5310-00-550-5009	96906	MS15795-704	...WASHER,FLAT U/O PN 205-030-484-35 & -36 ....UHE,UHH,UHV,UHX	EA	8
72	22	MOOZZ		97499	205-030-484-25	...SEAL,DOOR..........UHE,UHH,UHV,UHX	EA	1
72	22	MOOZZ	5330-00-469-5555	97499	205-030-028-29	...SEAL,RUBBER STRIP..........UHE,UHH,UHV,UHX	EA	1
72	23	MFOZZ	1560-00-413-1395	97499	205-030-028-5	..DOOR ASSEMBLY -LH..........UHE,UHH,UHV,UHX	EA	1
72	23	MFOZZ	1560-00-413-1396	97499	205-030-028-6	..DOOR ASSEMBLY -RH..........UHE,UHH,UHV,UHX	EA	1
72	24	MFOZZ	5340-00-152-0677	97499	205-030-028-27	...HINGE,HALF U/O PN 205-030-028-8 & -35.....UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
72	25	XAOZZ		97499	205-030-028-19	...DOOR U/O PN 205-030-028-5................UHE,UHH,UHV,UHX	EA	1
72	25	XAOZZ		97499	205-030-028-20	...DOOR,ACCESS..............................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
72	25	XAOZZ		97499	205-030-028-19	...DOOR U/O PN 205-030-028-5.................UHE,UHH,UHV,UHX	EA	1
72	25	XAOZZ		97499	205-030-028-20	...DOOR,ACCESS..............................UHE,UHH,UHV,UHX	EA	1

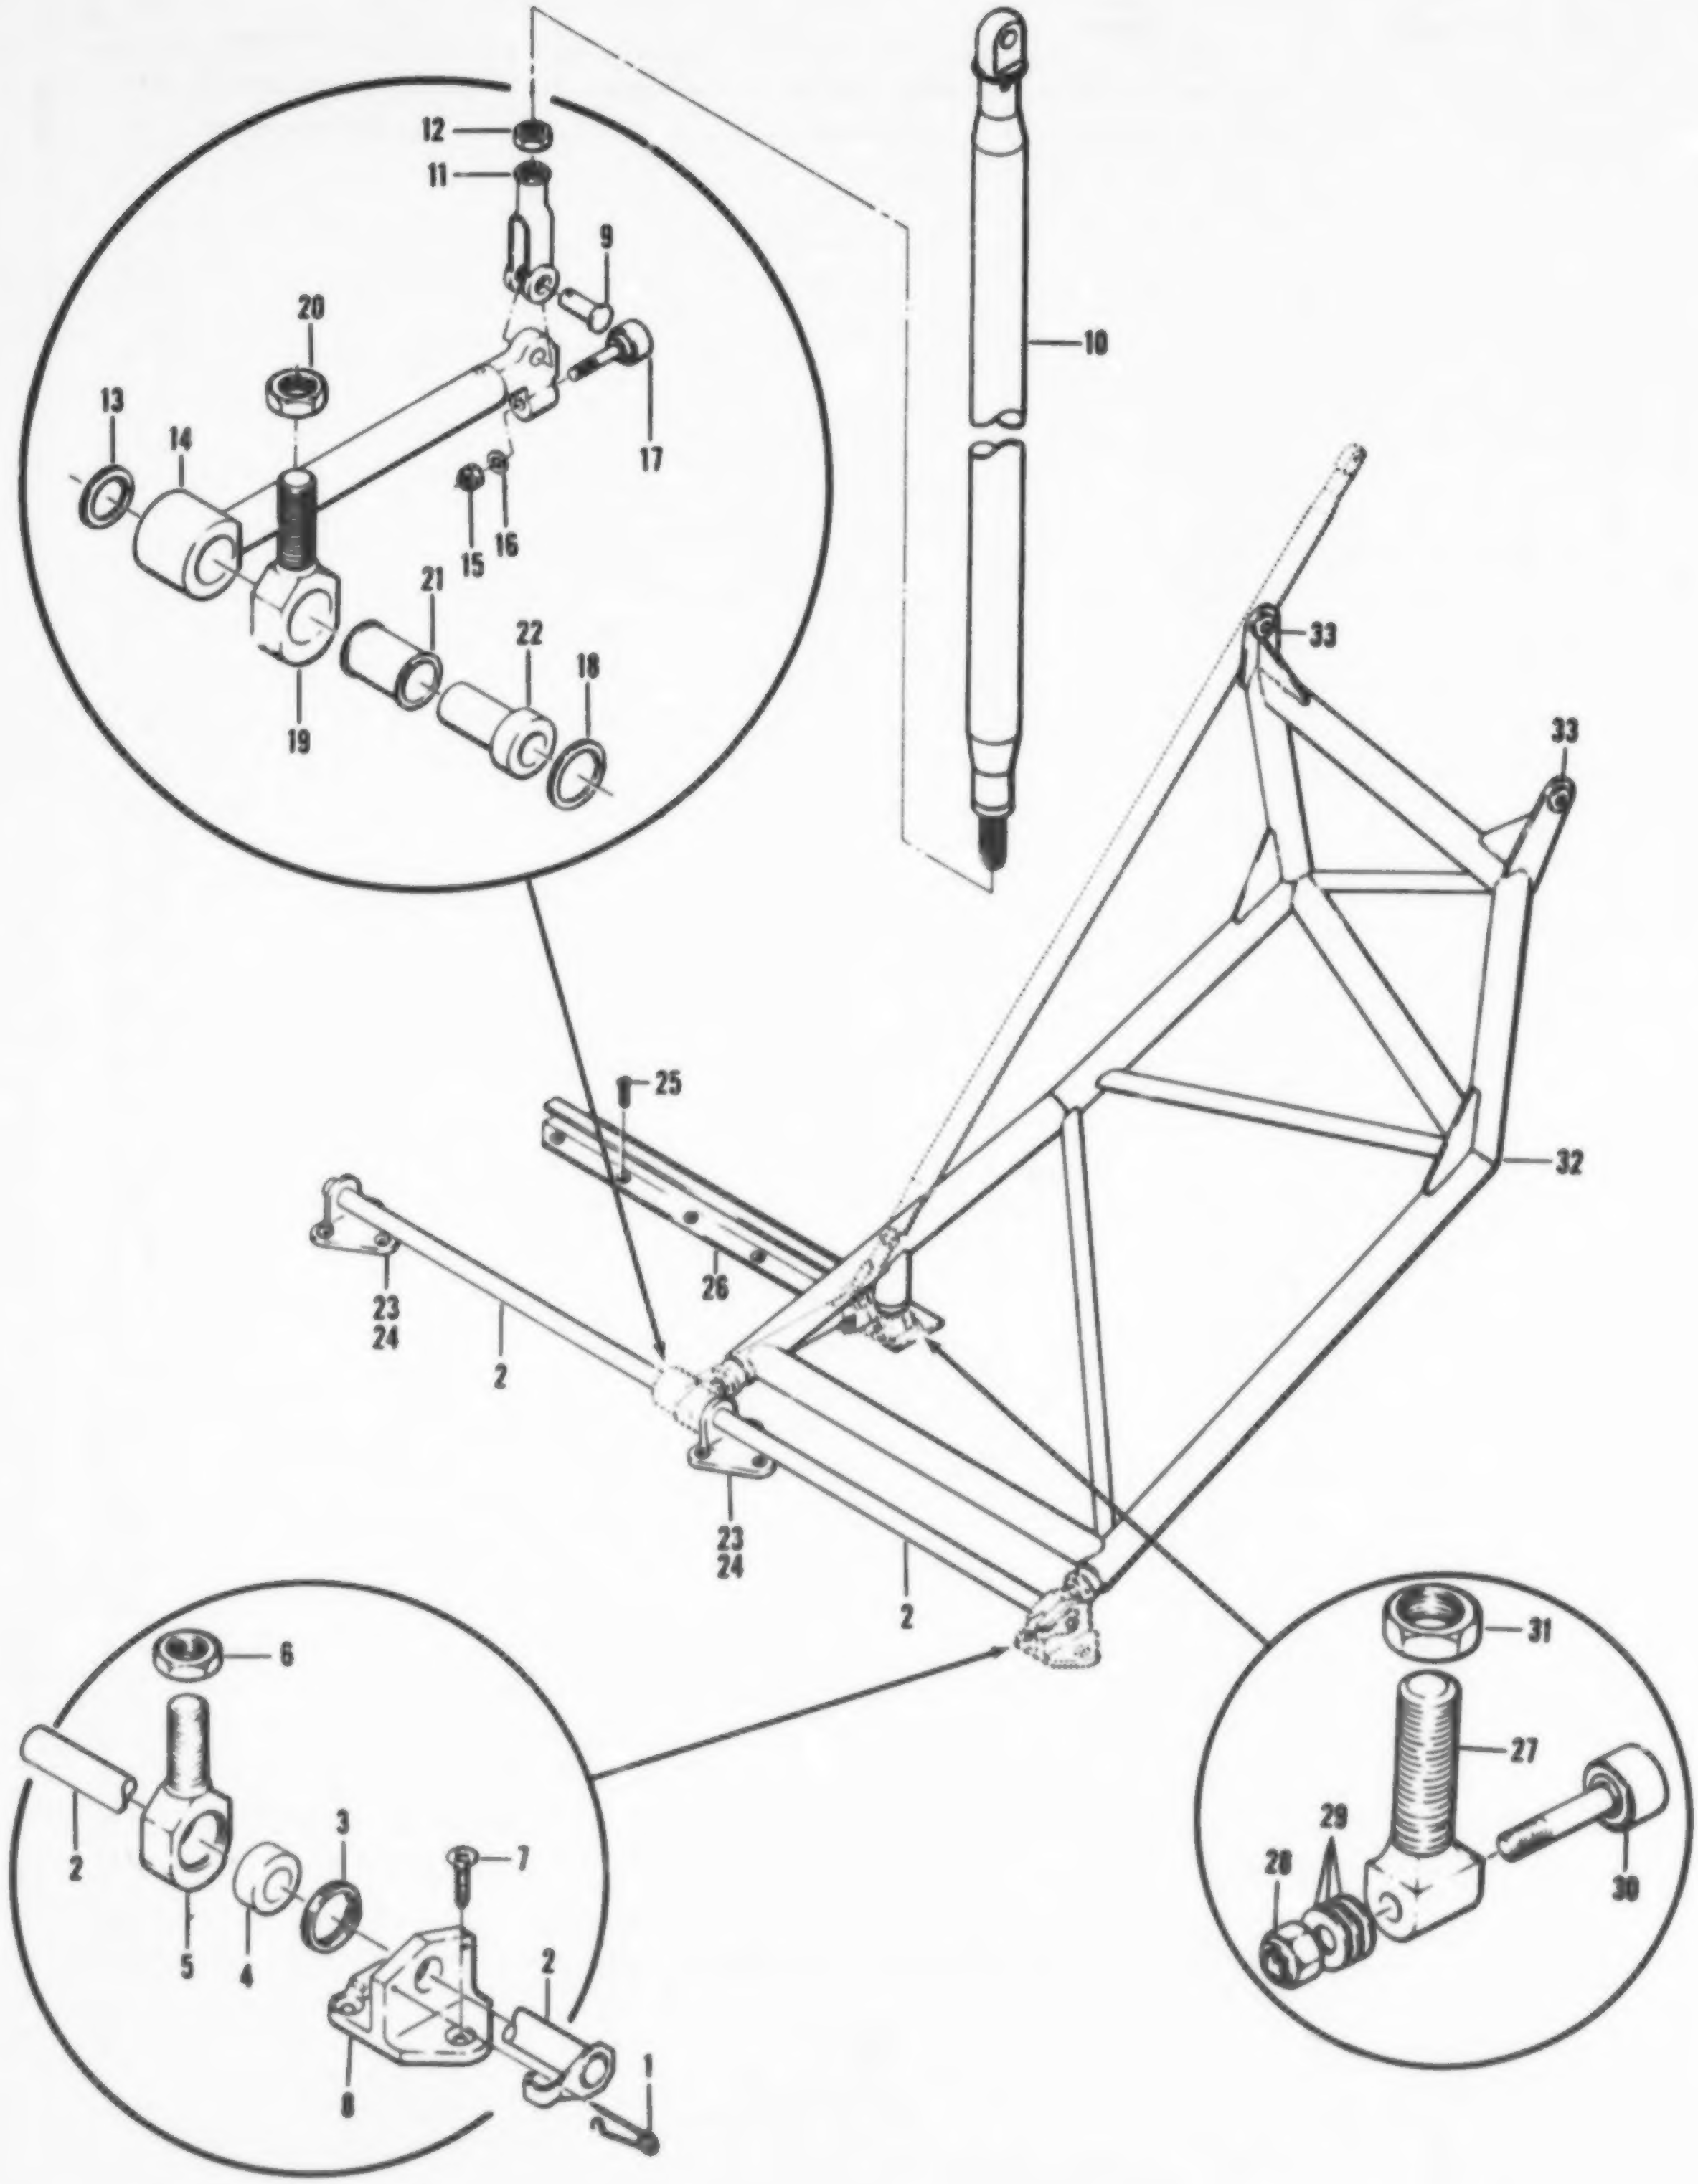
12
11
9
20
13
14
17
15
16
21
22
18
19
10
33
33
25
32
26
23
24
2
23
24
2
6
31
27
2
3
7
29
28
30
5
4
2
8
1

Figure 73. Cowl Installation, Forward

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
73		XCFZZ		97499	204-060-840-11	COWL INSTL,FWD-LH USBL EFF 60-3546 THRU 60-3619 SEE FIG.95 FOR NHA..........UHB	EA	1
73		XCFZZ		97499	204-060-840-15	COWL INSTL,FWD-LH USBL EFF 61-686 THRU 61-803 SEE FIG.95 FOR NHA..........UHB	EA	1
73		XCFZZ		97499	204-060-840-17	COWL INSTL,FWD-LH USBL EFF 62-1872 THRU 64-14100 SEE FIG.95 FOR NHA..........UHB	EA	1
73		XCFZZ		97499	204-060-840-14	COWL INSTL,FWD-RH USBL EFF 60-3546 THRU 60-3619 SEE FIG.95 FOR NHA..........UHB	EA	1
73		XCFZZ		97499	204-060-840-16	COWL INSTL,FWD-RH USBL EFF 61-686 THRU 61-803 SEE FIG.95 FOR NHA..........UHB	EA	1
73		XCFZZ		97499	204-060-840-18	COWL INSTL,FWD-RH USBL EFF 62-1872 THRU 62-12555 SEE FIG.95 FOR NHA..........UHB	EA	1
73		XCFZZ		97499	204-060-840-19	COWL INSTL,FWD-RH USBL EFF 63-8500 THRU 64-14100 SEE FIG.95 FOR NHA..........UHB	EA	1
73	1	PBOZZ	5315-00-223-6112	88044	AN416-2	.PIN,RETAINING..........UHB	EA	1
73	2	PAOZZ	1560-00-872-7866	97499	204-061-818-1	.TUBE ASSEMBLY,HINGE..........UHB	EA	1
73	3	XDOZZ		80756	RR87	.RING,RETAINING..........UHB	EA	1
73	4	PAOZZ	5970-00-670-8066	97499	204-060-848-3	.INSULATOR,BUSHING..........UHB	EA	1
73	5	PAOZZ	5340-00-961-8399	97499	204-060-847-5	.CONNECTOR,ROD END..........UHB	EA	1
73	6	PAOZZ	5310-00-282-7832	96906	MS24400D5	.NUT,PLAIN,HEXAGON..........UHB	EA	1
73	7	PAOZZ	5305-00-705-2388	96906	MS24694S60	.SCREW,MACHINE..........UHB	EA	3
73	8	PAOZZ	1560-00-757-8756	97499	204-060-844-3	.FITTING..........UHB	EA	1
73	8	PAOZZ	1560-00-758-3636	97499	204-060-893-1	.FITTING..........UHB	EA	1
73	9	PBOZZ	5315-00-063-7366	96906	MS20392-3C17	.PIN,STRAIGHT, HEADED..........UHB	EA	1
73	10	PAOOO	3040-00-181-5606	97499	204-060-855-9	.CONNECTING LINK,RIG STABILIZING..........UHB	EA	1
73	11	PAOZZ	5340-00-205-5766	80205	NAS170-5	..CLEVIS,ROD END..........UHB	EA	1
73	12	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON..........UHB	EA	1
73	13	XDOZZ		80756	RS81	.RING,RETAINING..........UHB	EA	1
73	14	PAOOO	1560-00-867-0513	97499	204-062-850-1	.ARM ASSEMBLY,STABIL..........UHB	EA	1
73	14	XADZZ		97499	204-060-851-3	..FITTING..........UHB	EA	1
73	15	PAOZZ	5310-00-285-2177	88044	AN320-3	..NUT,PLAIN,SLOTTED,H..........UHB	EA	1
73	16	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT..........UHB	EA	1
73	17	PAOZZ	3110-00-806-7443	60380	RS1C11	..CAM FOLLOWER,NEEDLE..........UHB	EA	1
73	17	PAOZZ	3110-00-682-4634	80205	NAS562-3-8	..CAM FOLLOWER,NEEDLE..........UHB	EA	1
73	18	XDOZZ		80756	RR87	.RING,RETAINING..........UHB	EA	1
73	19	PAOZZ	5340-00-961-8399	97499	204-060-847-5	.CONNECTOR,ROD END..........UHB	EA	1
73	20	PAOZZ	5310-00-282-7832	96906	MS24400D5	.NUT,PLAIN,HEXAGON..........UHB	EA	1
73	21	PAOZZ	3120-00-670-5308	97499	204-060-860-1	.BUSHING,SLEEVE..........UHB	EA	1
73	22	PAOZZ	5970-00-670-8065	97499	204-060-848-1	.INSULATOR,BUSHING..........UHB	EA	1
73	23	PAOZZ	5305-00-705-2388	96906	MS24694S60	.SCREW,MACHINE..........UHB	EA	6
73	24	PAOZZ	1560-00-793-8015	97499	204-062-845-1	.SUPPORT,STRUCTURAL..........UHB	EA	2
73	25	PAOZZ	5305-00-705-2388	96906	MS24694S60	.SCREW,MACHINE..........UHB	EA	11
73	26	PAOZZ	1560-00-675-3252	97499	204-060-854-1	.TRACK,ROLLER,COWL -LH U/O P/N 204-060-840-11 & -15......UHB	EA	1
73	26	PAOZZ	1560-00-072-8322	97499	204-061-822-1	.TRACK ASSEMBLY,ROLL U/O PN 204-060-840-17..........UHB	EA	1
73	26	PAOZZ	1560-00-675-3253	97499	204-060-854-2	.TRACK,ROLLER,COWL -RH U/O P/N 204-060-840-12,-14,& -16 ....UHB	EA	1
73	26	PAOZZ	1560-00-072-8323	97499	204-061-822-2	.TRACK ASSEMBLY,ROLL U/O PN 204-060-840-18 & -19.........UHB	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
73	27	PAOZZ	1560-00-775-7743	97499	204-060-853-3	.SUPPORT,ROLLER CONL USBL EFF CUH-1BB 60-3546 THRU 61-003 ....UHB	EA	1
73	27	PAOZZ	1560-00-072-8321	97499	204-061-820-1	.SUPPORT,ROLLER,CONL USBL EFF 62-1872 THRU 64-14100......UHB	EA	1
73	27	PAOZZ	5360-00-075-9329	97499	204-061-821-1	.SPRING,HELICAL,COMP U/O PN 204-060-040-17,-18,& -19.....UHB	EA	1
73	28	PAOZZ	5310-00-807-1467	96906	MS21042-3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHB	EA	1
73	29	PAOZZ	5310-00-163-4406	88044	AN960PD10	.WASHER,FLAT..........UHB	EA	3
73	30	PAOZZ	3110-00-806-7443	60380	RS1C11	.CAM FOLLOWER,NEEDLE..........UHB	EA	1
73	31	PAOZZ	5310-00-124-9110	88044	AN924-3D	.NUT,PLAIN,HEXAGON..........UHB	EA	1
73	32	PAODD	1560-00-072-8319	97499	204-060-843-61	.FRAME ASSEMBLY -LH..........UHB	EA	1
73	32	PAODD	1560-00-014-2036	97499	204-060-843-67	.FRAME ASSEMBLY,CONL -RH..........UHB	EA	1
73	33	PAOZZ	3120-00-670-5311	97499	21-00685-5-10	..BUSHING,SLEEVE..........UHB	EA	2
73	33	PAOZZ	3120-00-689-8251	97499	21-010815-5-16	..BUSHING,SLEEVE..........UHB	EA	1

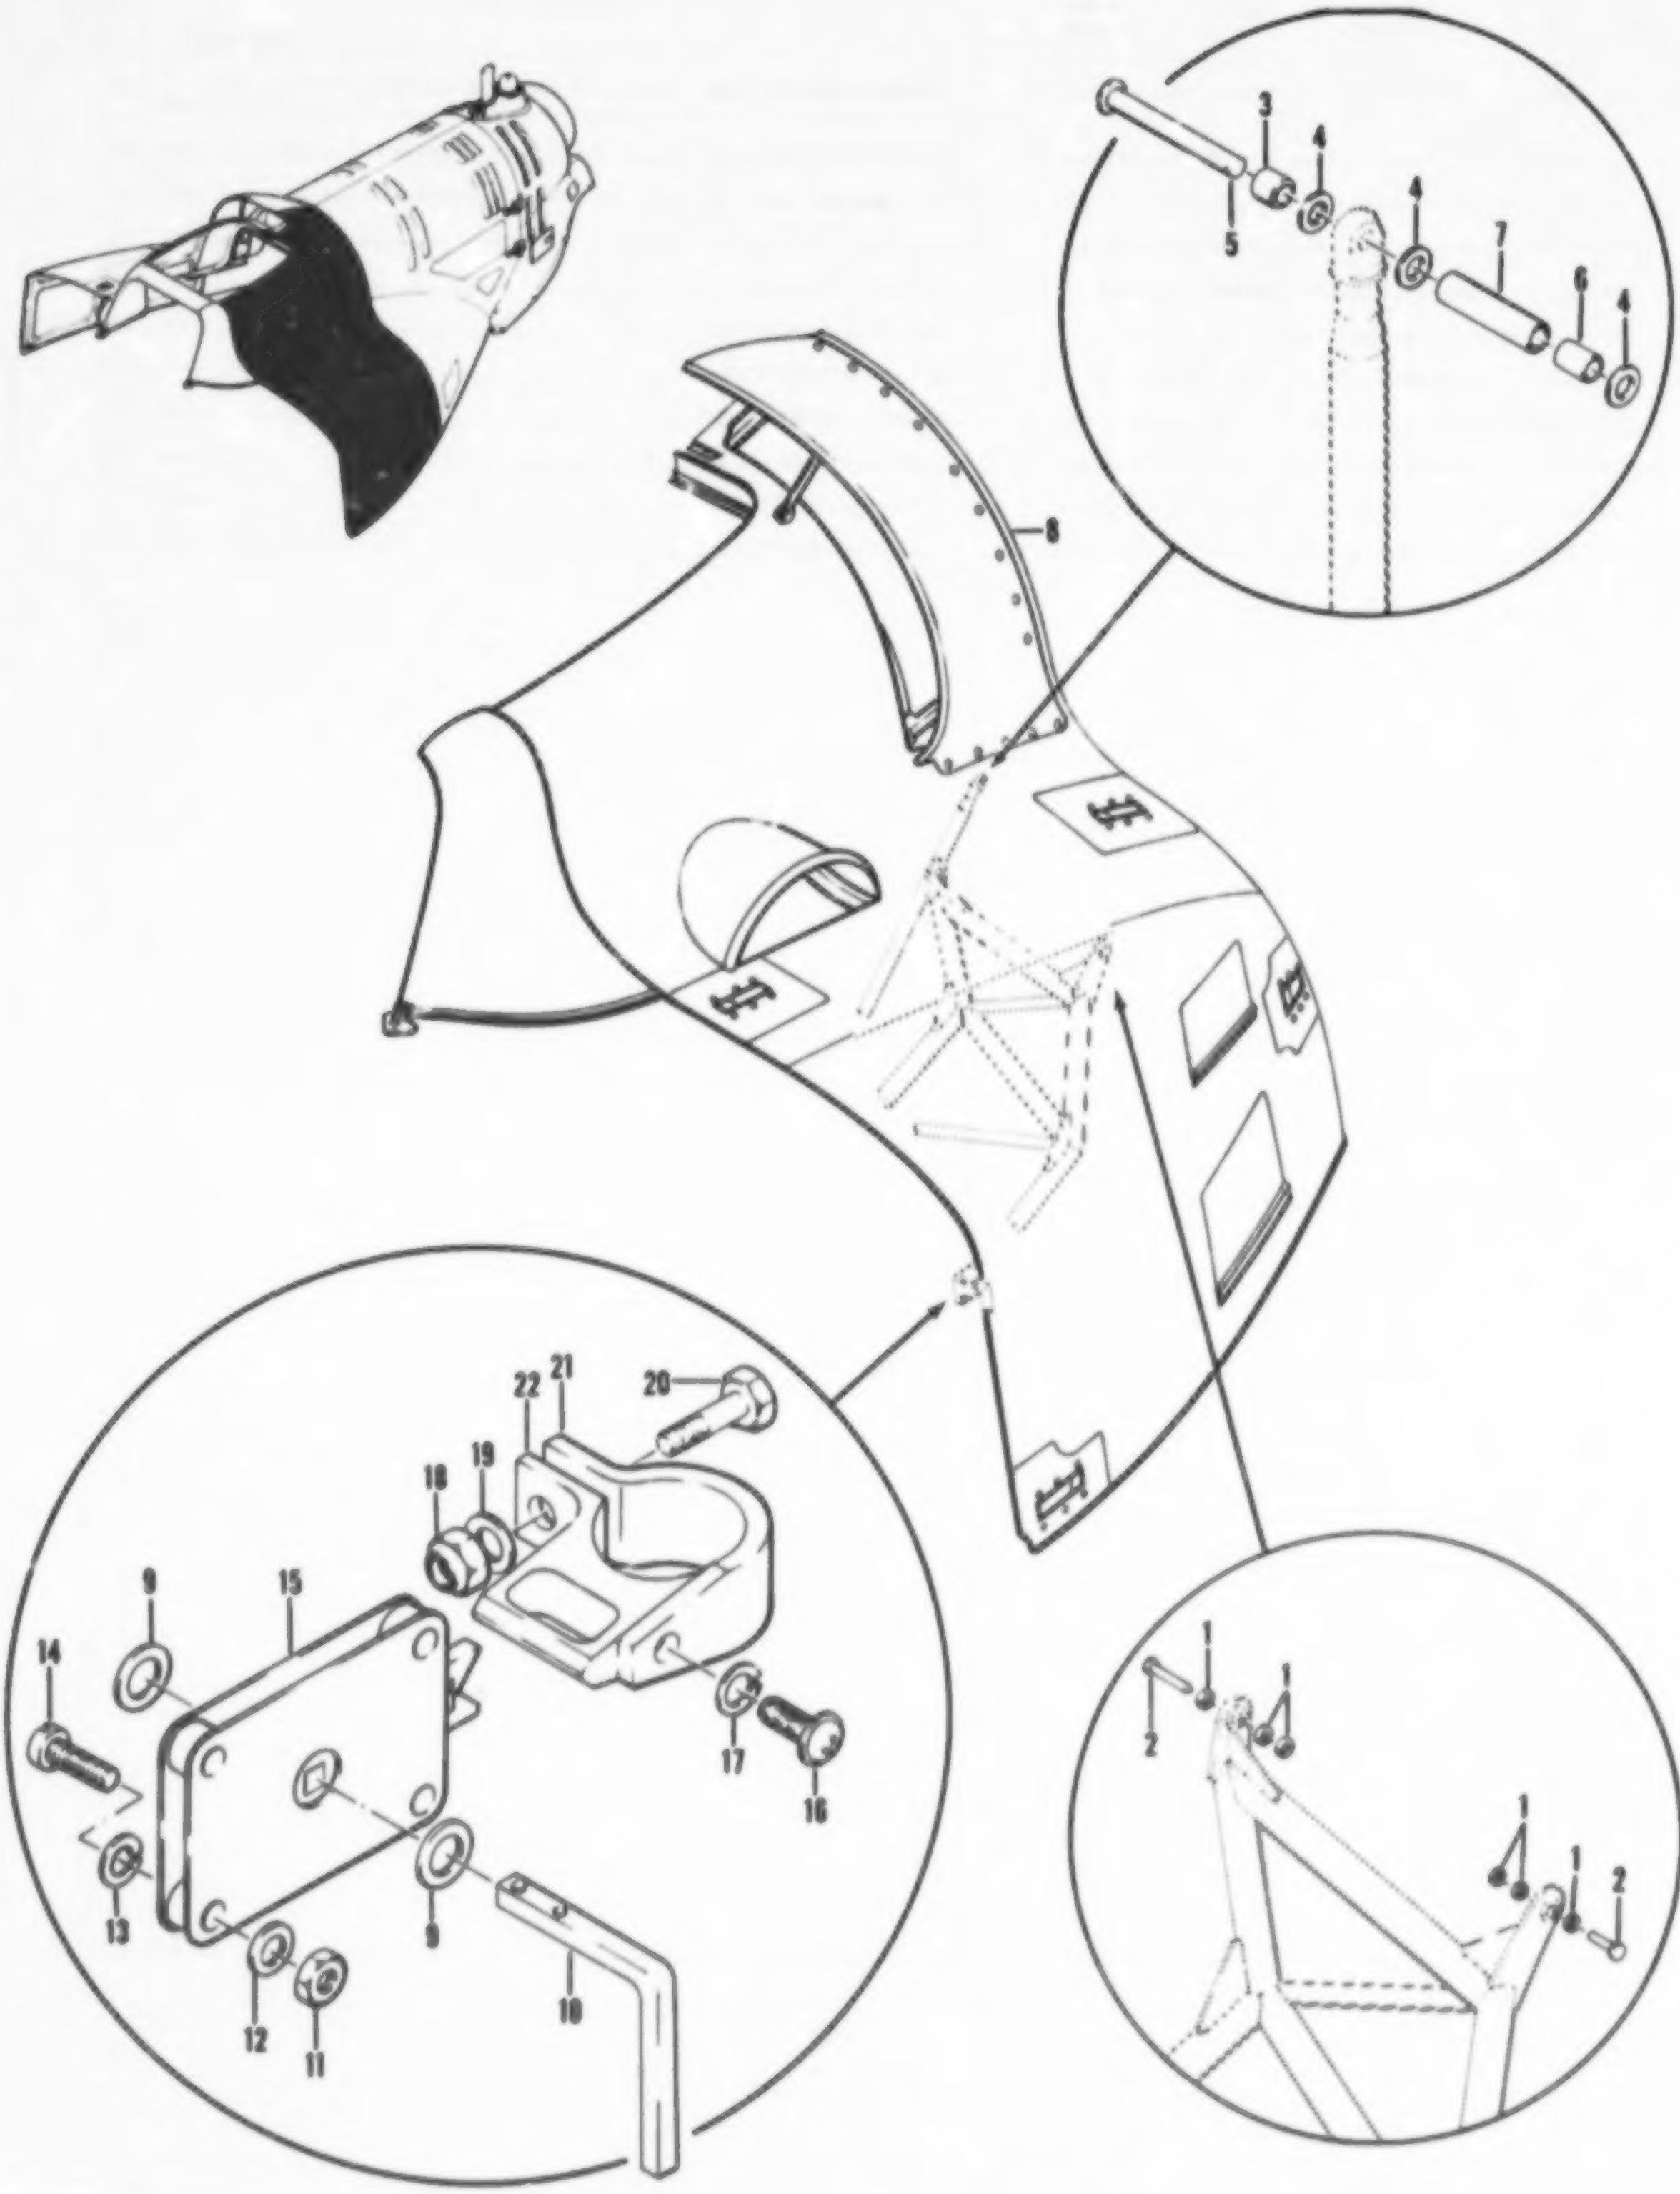
3
4
5
4
7
6
4
8
20
22
21
18
19
9
15
14
13
12
11
9
10
17
16
1
2
1
1
1
1
2

Figure 74. Cowl Installation, Forward

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
74		XCFZZ		97499	204-060-840-11	COWL INSTL,FWD-LH USBL EFF 60-3546 THRU 60-3619 SEE FIG.95 FOR NHA.....UHB	EA	1
74		XCFZZ		97499	204-060-840-15	COWL INSTL,FWD-LH USBL EFF 61-686 THRU 61-803 SEE FIG.95 FOR NHA.....UHB	EA	1
74		XCFZZ		97499	204-060-840-17	COWL INSTL,FWD-LH USBL EFF 62-1872 THRU 64-14100 SEE FIG.95 FOR NHA.....UHB	EA	1
74		XCFZZ		97499	204-060-840-14	COWL INSTL,FWD-RH USBL EFF 60-3546 THRU 60-3619 SEE FIG.95 FOR NHA.....UHB	EA	1
74		XCFZZ		97499	204-060-840-16	COWL INSTL,FWD-RH USBL EFF 61-686 THRU 61-803 SEE FIG.95 FOR NHA.....UHB	EA	1
74		XCFZZ		97499	204-060-840-18	COWL INSTL,FWD-RH USBL EFF 62-1872 THRU 62-12555 SEE FIG.95 FOR NHA.....UHB	EA	1
74		XCFZZ		97499	204-060-840-19	COWL INSTL,FWD-RH USBL EFF 63-8500 THRU 64-14100 SEE FIG.95 FOR NHA.....UHB	EA	1
74	1	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.....UHB	EA	6
74	2	PBOZZ	5315-00-811-1233	96906	MS20392-2C25	.PIN,STRAIGHT, HEADED.....UHB	EA	2
74	3	PAOZZ	5365-00-980-5791	80205	NAS43DD4-16	.SPACER,SLEEVE.....UHB	EA	1
74	4	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT.....UHB	EA	3
74	5	PBOZZ	5315-00-081-7046	96906	MS20392-3C89	.PIN,STRAIGHT, HEADED.....UHB	EA	1
74	6	PAOZZ	5365-00-633-5554	80205	NAS43DD4-28	.SPACER,SLEEVE U/O PN 204-060-840-11 & -14.....UHB	EA	1
74	6	PAOZZ	5365-00-819-7012	80205	NAS43DD4-38	.SPACER,SLEEVE U/O PN 204-060-840-15,-16,-17, -18,& -19 .....UHB	EA	1
74	7	PAOZZ	5365-00-594-6058	80205	NAS43DD4-87	.SPACER,SLEEVE.....UHB	EA	1
74	8	PBOFF	1560-00-115-4928	97499	204-060-881-37	.COWLING-LH USE-AFT-COMPL-W MWO 55-1520-211-30/35 SEE FIG.78 FOR BREAKDOWN.....UHB	EA	1
74	8	PAODD	1560-00-151-4063	97499	204-060-881-39	.COWLING-RH SEE FIG.78 FOR BREAKDOWN.....UHB	EA	1
74	9	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT.....UHB	EA	2
74	10	PAOZZ	1560-00-701-0542	97499	204-060-839-1	.HANDLE,COWL LATCH.....UHB	EA	1
74	11	PAOZZ	5310-00-176-8131	88044	AN340-5	.NUT,PLAIN,HEXAGON.....UHB	EA	4
74	12	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT.....UHB	EA	4
74	13	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK.....UHB	EA	4
74	14	PAOZZ	5305-00-174-0608	88044	AN500A5-8	.SCREW, MACHINE.....UHB	EA	4
74	14	PAOZZ	5305-00-282-4112	88044	AN500A5-10	.SCREW,MACHINE U/O PN 204-060-840-19.....UHB	EA	4
74	15	PAOZZ	5340-00-391-7670	80477	AR26-2	.CATCH ASSEMBLY.....UHB	EA	1
74	16	PAOZZ	5305-00-281-8527	88044	AN525-832R8	.SCREW,MACHINE.....UHB	EA	1
74	17	PAOZZ	5310-00-045-3299	96906	MS35338-42	.WASHER,LOCK.....UHB	EA	1
74	18	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE.....UHB	EA	1
74	19	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT.....UHB	EA	1
74	20	PAOZZ	5306-00-182-2098	88044	AN3H5A	.BOLT,MACHINE.....UHB	EA	1
74	21	PAOZZ	1560-00-675-3246	97499	204-060-829-3	.CLAMP,COWL.....UHB	EA	1
74	21	PAOZZ	1560-00-675-3246	16978	3047	.CLAMP,COWL.....UHB	EA	1
74	22	PAOZZ	1560-00-675-3247	97499	204-060-829-5	.CLAMP,HALF COWL.....UHB	EA	1

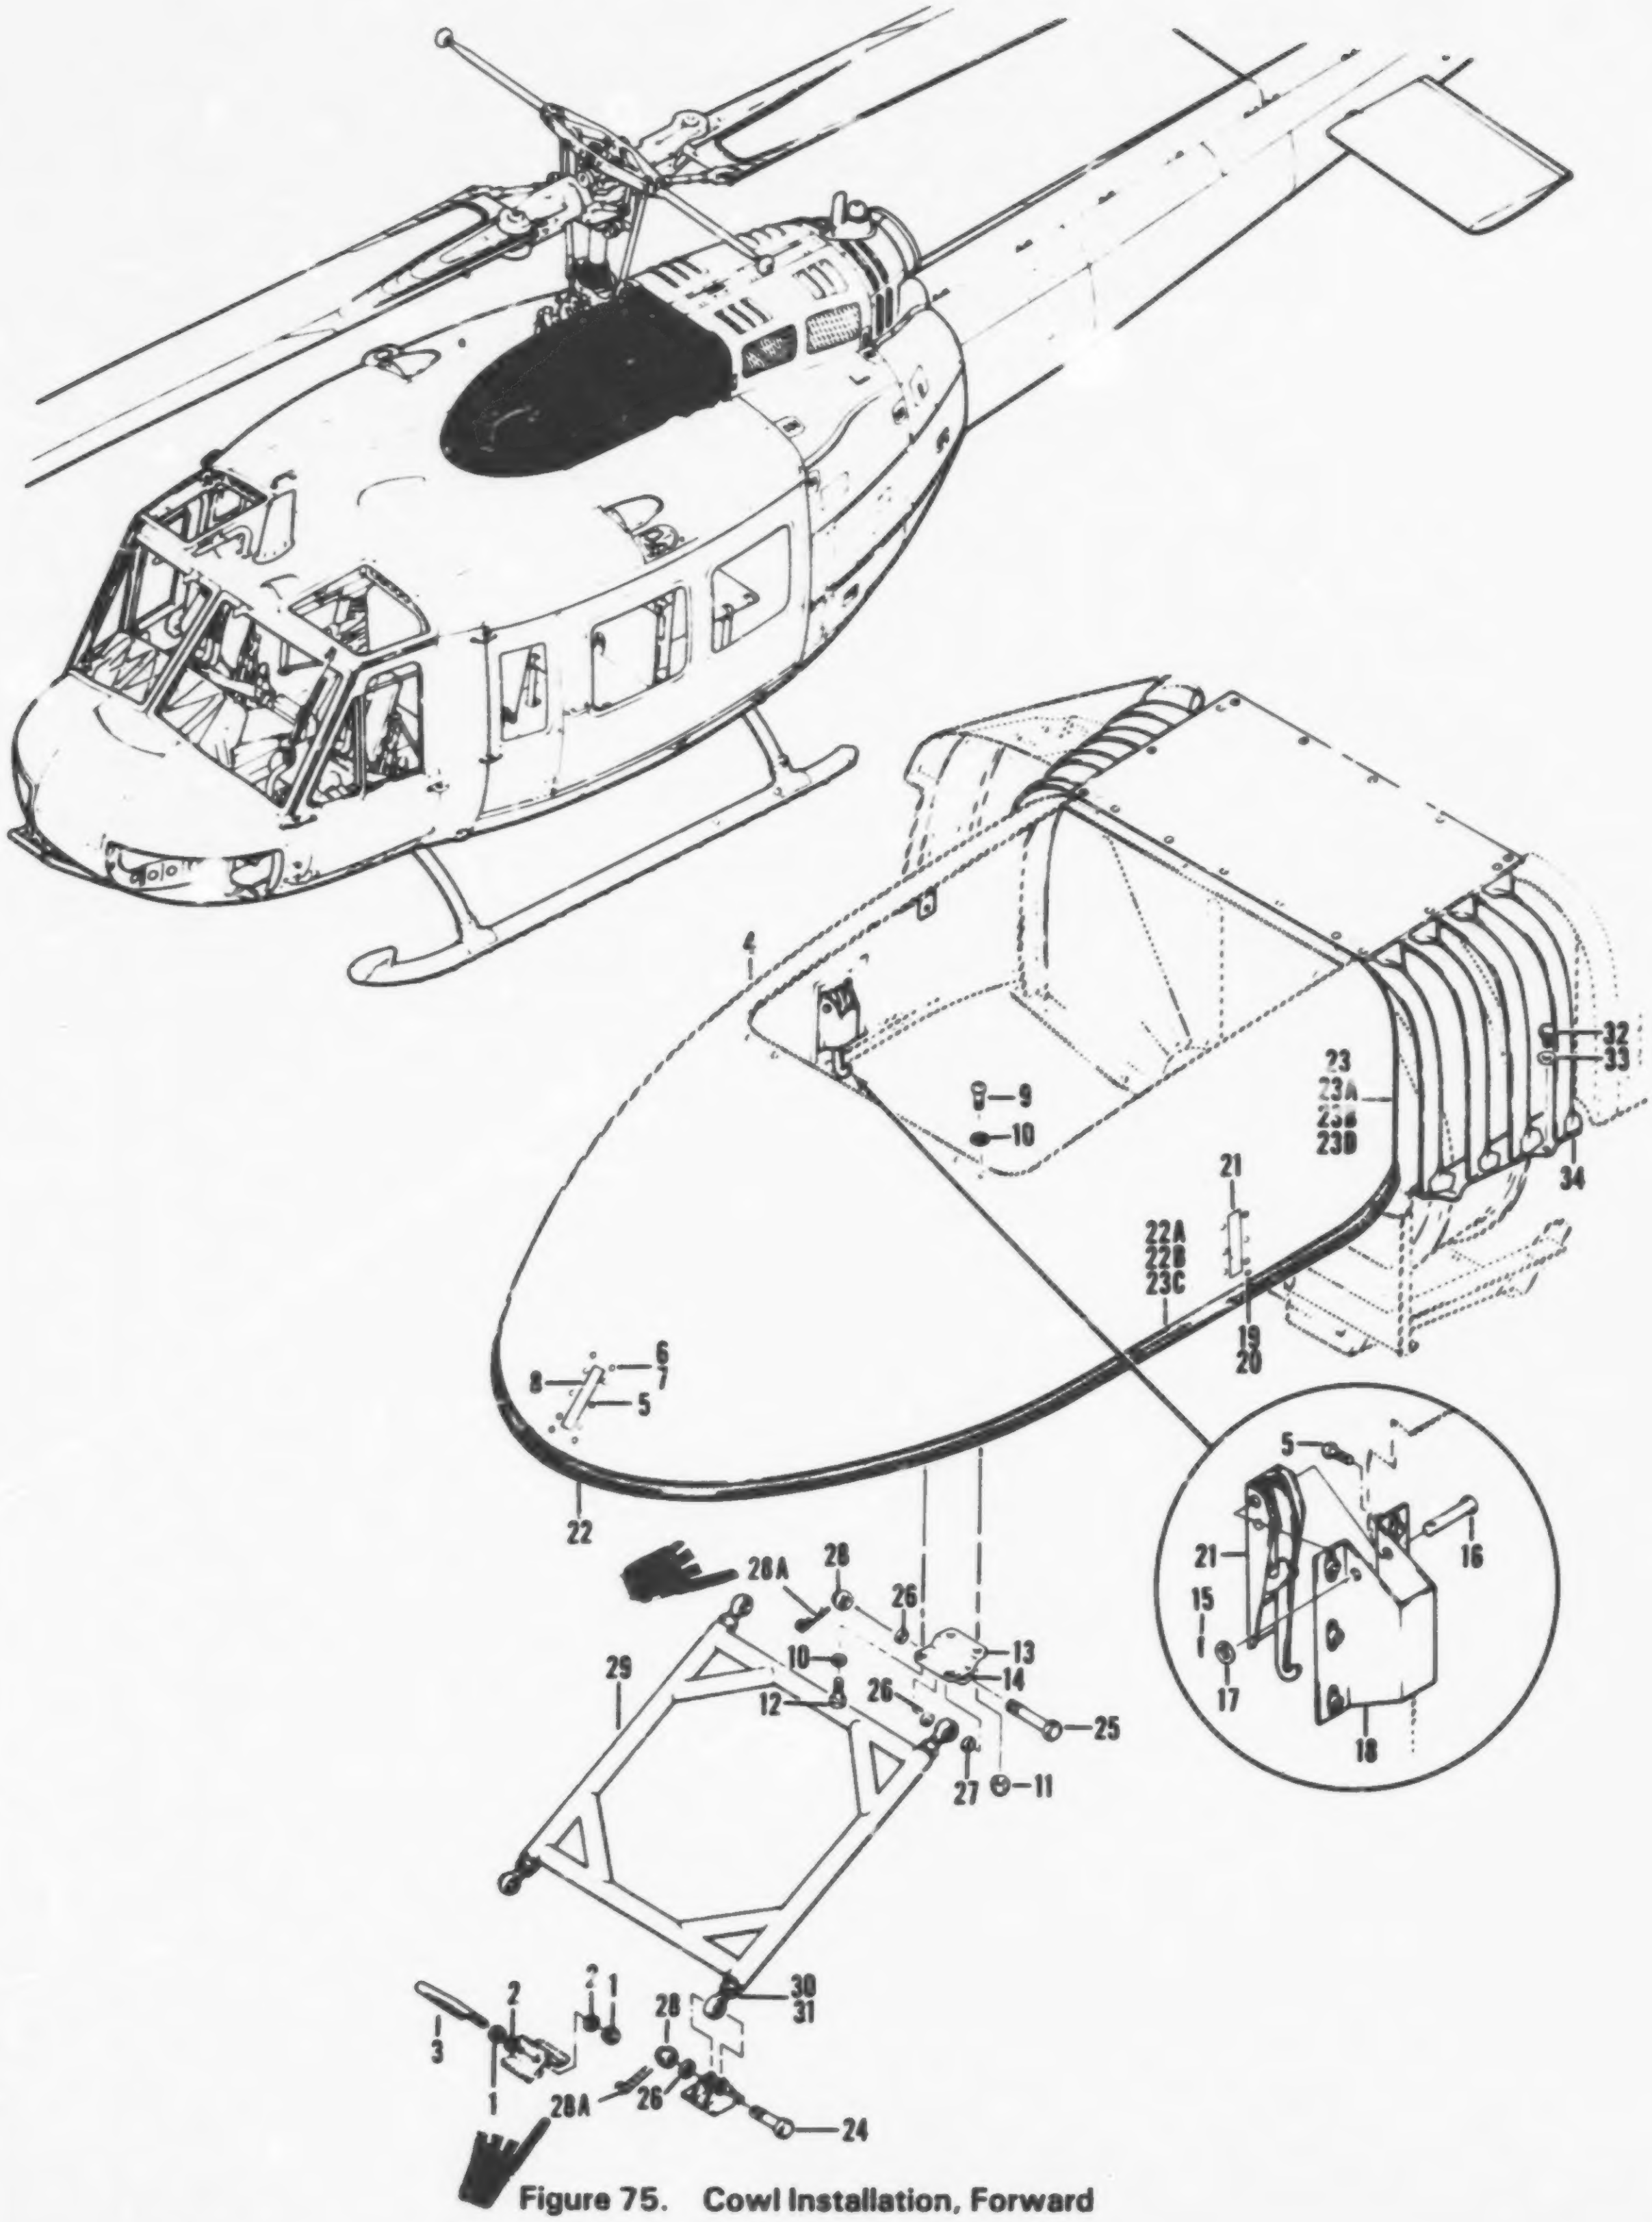
4
32
33
9
10
23
23A
23B
23D
34
21
22A
22B
23C
19
20
6
7
8
5
22
5
16
21
15
17
18
28A
28
26
13
14
29
10
12
26
25
27
11
30
31
2
2
1
3
1
28
28A
26
24

Figure 75. Cowl Installation, Forward

(1) ILLUSTRATION (a) FIG. NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
75		XCFZZ		97499	205-060-800-5	COWL INSTL USBL EFF 62-2106 THRU 62-2113 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
75		XCFZZ		97499	205-060-800-7	COWL INSTL USBL EFF 62-12351 THRU 62-12372 SEE FIG 96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
75		XCFZZ		97499	205-060-800-9	COWL INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
75		XCFZZ		97499	205-060-800-11	COWL INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
75		XCFZZ		97499	205-060-800-13	COWL INSTL USBL EFF 65-9565 THRU 66-16867 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
75		XCFZZ		97499	205-060-800-23	COWL INSTL USBL EFF 66-16868 THRU 6617144 & 66-8574 THRU 66-8577 SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
75		XCFZZ		97499	205-060-800-21	COWL INSTL USBL EFF 67-17145 & SUBSEQUENT SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
75	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
75	2	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
75	3	PAOZZ	5306-00-052-6318	97499	205-060-830-1	.BOLT,U..........UHE,UHH,UHV,UHX	EA	1
75	4	PAOOO	1560-00-923-2879	97499	205-060-805-21	.FAIRING ASSEMBLY TRANSMISSON..........UHE,UHH,UHV,UHX	EA	1
75	5	PAOZZ	5305-00-281-8527	88044	AN525-832R8	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	12
75	6	PAOZZ	5305-00-281-8526	88044	AN525-832R6	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	4
75	7	PAOZZ	5310-00-807-1473	96906	MS21042L08	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
75	8	PAOZZ	5340-00-072-8315	83014	H38K613	..LATCH ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
75	9	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	4
75	10	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
75	11	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
75	12	PAOZZ	5306-00-515-9167	80205	NAS464P3A3	..BOLT,SHEAR..........UHE,UHH,UHV,UHX	EA	4
75	13	PAOOO	1560-00-967-1741	97499	205-060-814-1	..SUPPORT,POWER PLANT..........UHE,UHH,UHV,UHX	EA	2
75	14	PAOZZ	3120-00-990-2581	97499	21-00687-5-4	...BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	2
75	15	PAOZZ	5315-00-234-1856	96906	MS24665-155	..PIN,COTTER..........UHE,UHH,UHV,UHX	EA	2
75	16	PBOZZ	5315-00-811-1245	96906	MS20392-2C35	..PIN,STRAIGHT,HEADED HEADED..........UHE,UHH,UHV,UHX	EA	2
75	17	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
75	18	MOOZZ	1560-00-963-1071	97499	205-060-838-1	..SUPPORT ASSEMBLY,LA..........UHE,UHH,UHV,UHX	EA	2
75	19	PAOZZ	5325-00-174-2923	88044	AN227-8	..STUD,SNAP FASTENER..........UHE,UHH,UHV,UHX	EA	2
75	20	PAOZZ	5325-00-276-4969	88044	AN227-9	..POST,SNAP FASTENER..........UHE,UHH,UHV,UHX	EA	2
75	21	PAOZZ	5340-00-753-0618	83014	H287-1	..LATCH ASSEMBLY..........UHE,UHH,UHV,UHX	EA	2
75	22	PAOZZ	5330-00-963-5798	97499	205-060-805-15	..SEAL,RUBBER SPECIAL..........UHE,UHH,UHV,UHX	EA	1
75	22A	MFOZZ		97499	205-060-805-35	..RETAINER,LOWER..........UHE,UHH,UHV,UHX	EA	1
75	22B	MFOZZ		97499	205-060-805-36	..RETAINER,LOWER..........UHE,UHH,UHV,UHX	EA	1
75	23	MOOZZ	5330-00-963-5797	97499	205-060-805-13	..SEAL,RUBBER SPECIAL..........UHE,UHH,UHV,UHX	EA	2
75	23A	MFOZZ		97499	205-060-805-37	..RETAINER,AFT..........UHE,UHH,UHV,UHX	EA	1
75	23B	MFOZZ		97499	205-060-805-38	..RETAINER,AFT..........UHE,UHH,UHV,UHX	EA	1
75	23C	MFOZZ		97499	205-060-805-39	..SEAL..........UHE,UHH,UHV,UHX	EA	2
75	23D	MFOZZ		97499	205-060-805-41	..SEAL..........UHE,UHH,UHV,UHX	EA	1
75	24	PAOZZ	5306-00-182-1531	88044	AN4H13	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
75	25	PAOZZ	5306-00-638-8223	88044	AN4H16	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
75	26	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	6

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
75	27	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT....................................UHE,UHH,UHV,UHX	EA	2
75	28	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,PLAIN,SLOTTED,H............................UHE,UHH,UHV,UHX	EA	4
75	28A	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER................................UHE,UHH,UHV,UHX	EA	4
75	29	PAOOO	1560-00-963-1072	97499	205-060-842-1	.HINGE ASSEMBLY,TRAN............................UHE,UHH,UHV,UHX	EA	1
75	30	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGON.............................UHE,UHH,UHV,UHX	EA	4
75	31	PAOZZ	3120-00-085-2361	99862	TCL001SE87	..BEARING,PLAIN,ROD E...........................UHE,UHH,UHV,UHX	EA	4
75	32	PAOZZ	5306-00-182-2014	88044	AN4H3A	..BOLT,MACHINE..................................UHE,UHH,UHV,UHX	EA	4
75	33	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT...................................UHE,UHH,UHV,UHX	EA	4
75	34	PAOOO	2945-00-027-3025	97499	205-060-280-5	..FILTER ASSEMBLY,ENG -LH SEE FIG.99 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1
75	34	PAOOO	2945-00-027-3022	97499	205-060-280-6	..FILTER ASSEMBLY,ENG -RH SEE FIG.99 FOR BREAKDOWN..UHE,UHH,UHV,UHX	EA	1

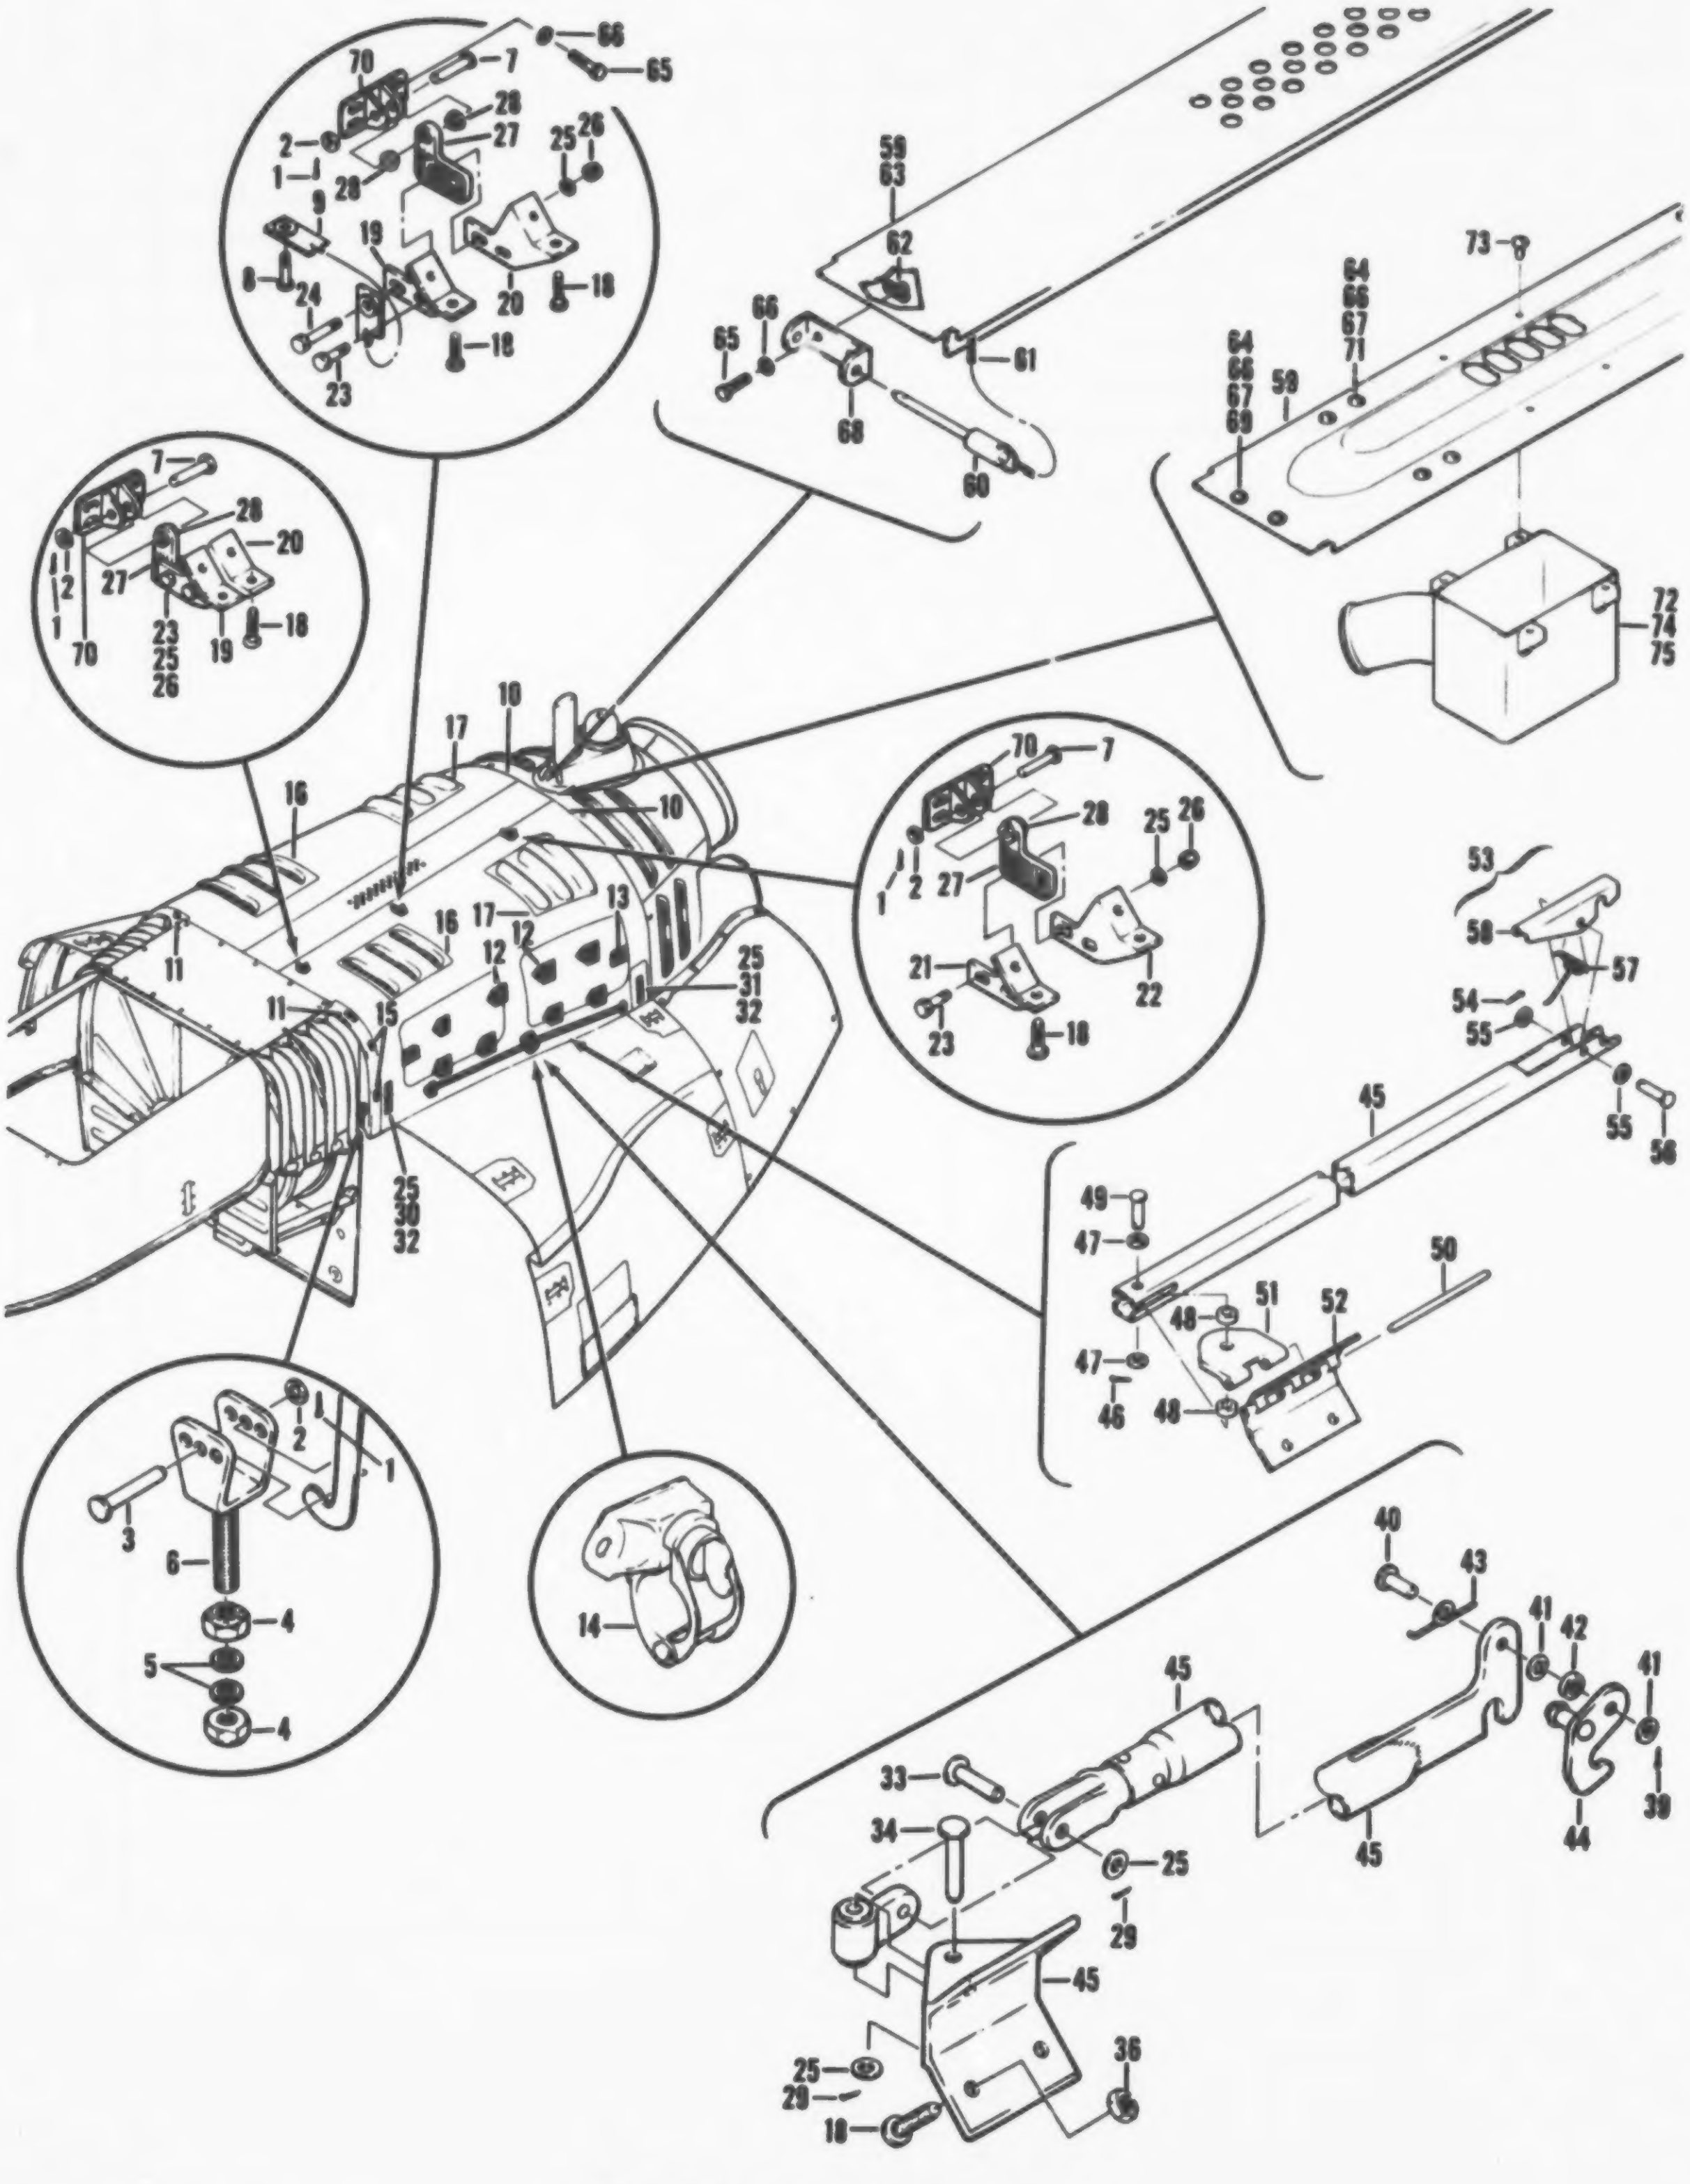
66
65
7
70
28
27
2
1
25
26
28
9
19
8
24
20
18
18
23
59
63
62
66
65
61
68
60
73
64
66
67
71
64
66
67
69
59
72
74
75
7
28
20
12
1
70
27
23
25
26
19
18
10
17
10
16
16
17
12
12
13
11
11
15
25
31
32
25
30
32
70
7
28
25
26
1
2
27
21
22
23
18
53
58
57
54
55
55
56
45
49
47
50
51
52
48
47
46
48
2
1
3
6
4
5
4
14
40
43
41
42
41
45
33
34
25
29
45
44
39
45
45
25
29
18
36

Figure 76. Cowl Installation

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
76		XCFZZ		97499	205-060-800-5	COWL INSTL USBL EFF 62-2106 THRU 62-2113 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
76		XCFZZ		97499	205-060-800-7	COWL INSTL USBL EFF 62-12351 THRU 62-12372 SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
76		XCFZZ		97499	205-060-800-9	COWL INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
76		XCFZZ		97499	205-060-800-11	COWL INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
76		XCFZZ		97499	205-060-800-13	COWL INSTL USBL EFF 65-9565 THRU 66-16867 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
76		XCFZZ		97499	205-060-800-23	COWL INSTL USBL EFF 66-16868 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
76		XCFZZ		97499	205-060-800-21	COWL INSTL USBL EFF 67-17145 AND SUBSEQUENT SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
76	1	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER..........UHE,UHH,UHV,UHX	EA	8
76	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	8
76	3	PAOZZ	5315-00-811-1255	96906	MS20392-2C31	.PIN,STRAIGHT, HEADED..........UHE,UHH,UHV,UHX	EA	2
76	4	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX..........UHE,UHH,UHV,UHX	EA	4
76	5	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
76	6	PAOZZ	5340-00-073-5438	97499	205-060-863-1	.CLEVIS,ROD END..........UHE,UHH,UHV,UHX	EA	2
76	7	PBOZZ	5315-00-811-1241	96906	MS20392-2C17	.PIN,STRAIGHT,HEADED..........UHE,UHH,UHV,UHX	EA	6
76	8	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE U/O PN 205-060-800-5,-7,& -9 ....UHF,UHH,UHV,UHX	EA	2
76	9	PAOZZ	1560-00-966-7513	97499	205-060-850-1	.STRAP ASSEMBLY,COWL U/O PN 205-060-800-5,-7,& -9 ....UHE,UHH,UHV,UHX	EA	2
76	10	PBOFF	1560-00-968-4659	97499	205-060-807-1	.COWLING,UPPER-LH U/O PN 205-060-800-5 & -7 SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED..........UHE,UHH,UHV,UHX	EA	1
76	10	PBOFF	1560-00-757-7118	97499	205-060-807-5	.COWLING -UPPER LH U/O PN 205-060-800-9,-11,& -13 USBLE EFF 63-8739 THRU 65-9810 SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED..........UHE,UHH,UHV,UHX	EA	1
76	10	PBOOO	1560-00-785-5025	97499	205-060-807-93	.COWLING -UPPER LH SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED..........UHH,UHV	EA	1
76	10	PROFF	1560-00-968-4660	97499	205-060-807-2	.COWLING -UPPER RH SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED..........UHE,UHH,UHV,UHX	EA	1
76	10	PBOFF	1560-00-757-7130	97499	205-060-807-6	.COWLING -UPPER RH U/O PN 205-060-800-9,-11 & -15 USBL EFF 63- 8739 THRU 65-9810 SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED..........UHE,UHH,UHV,UHX	EA	1
76	10	PBOOO	1560-00-785-5020	97499	205-060-807-94	.COWLING -UPPER RH SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED..........UHH,UHV	EA	1
76	10	XAOFF		97499	205-060-807-11	..COWL ASSEMBLY SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED ....UHE,UHH,UHV,UHX	EA	1
76	10	XAOFF		97499	205-060-807-21	..COWL ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
76	10	XAOFF		97499	205-060-807-25	..COWL ASSEMBLY SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED ....UHE,UHH,UHV,UHX	EA	1
76	10	XAOFF		97499	205-060-807-27	..COWL ASSEMBLY SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED. ....LLED..........UHE,UHH,UHV,UHX	EA	1
76	10	XAOFF		97499	205-060-807-12	..COWL ASSEMBLY SEE FIG.430 IF HEAT SUPPPRESSOR IS INSTALLED. ....LLED..........UHE,UHH,UHV,UHX	EA	1
76	10	XAOFF		97499	205-060-807-22	..COWL ASSEMBLY SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED 7A IF HEAT SUPPRESSOR IS INSTALLED..........UHE,UHH,UHV,UHX	EA	1
76	10	XAOFF		97499	205-060-807-26	..COWL ASSEMBLY SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED. ....LLEF ....UHE,UHH,UHV,UHX	EA	1
76	10	XAOFF		97499	205-060-807-28	..COWL ASSEMBLY SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED. ....ALLED..........UHE,UHH,UHV,UHX	EA	1
76	11	PAOZZ	5330-00-948-9912	97499	205-060-807-81	...SEAL,RUBBER CHANNEL U/O PN 205-060-807-25,-26, -27,& -28	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						....UHE,UHH,UHV,UHX		
76	12	PAOZZ	5975-00-345-1228	19500	22466	...CLAMP,CABLE..............................UHE,UHH,UHV,UHX	EA	23
76	13	PAOZZ	5975-00-670-4795	19500	23541	...BUSHING,CABLE CLAMP U/O PN 205-060-807-27 & -28 ....UHE,UHH,UHV,UHX	EA	32
76	14	PAOZZ	5340-00-970-8588	71286	7C1-10W	...CLAMP....................................UHE,UHH,UHV,UHX	EA	1
76	15	PAOZZ	5325-00-174-2923	88044	AN227-8	...STUD,SNAP FASTENER.......................UHE,UHH,UHV,UHX	EA	2
76	16	PAFZZ	1560-00-483-1274	97499	205-060-807-13	...LOUVER ASSY,COWL -LH FWD.................UHE,UHH,UHV,UHX	EA	1
76	16	XAFZZ		97499	205-060-807-45	....LOUVER,COWL -LH FWD.....................UHE,UHH,UHV,UHX	EA	1
76	16	PAFZZ	1560-00-483-1275	97499	205-060-807-14	...LOUVER ASSY,COWL -RH FWD.................UHE,UHH,UHV,UHX	EA	1
76	16	XAFZZ		97499	205-060-807-46	....LOUVER,COWL -RH FWD.....................UHE,UHH,UHV,UHX	EA	1
76	17	PAFZZ	1560-00-483-1276	97499	205-060-807-15	...LOUVER ASSY,COWL -LH REAR................UHE,UHH,UHV,UHX	EA	1
76	17	XAFZZ		97499	205-060-807-49	....LOUVER,COWL -LH REAR....................UHE,UHH,UHV,UHX	EA	1
76	17	PAFZZ	1560-00-483-1277	97499	205-060-807-16	...LOUVER ASSY,COWL -RH REAR................UHE,UHH,UHV,UHX	EA	1
76	17	XAFZZ		97499	205-060-807-50	....LOUVER,COWL -RH REAR....................UHE,UHH,UHV,UHX	EA	1
76	18	XOOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE.............................UHE,UHH,UHV,UHX	EA	12
76	19	PAOZZ	1560-00-963-1062	97499	205-060-818-1	..SUPPORT,STRUCTURAL........................UHE,UHH,UHV,UHX	EA	2
76	20	PAOZZ	1560-00-963-1063	97499	205-060-818-2	..SUPPORT,STRUCTURAL........................UHE,UHH,UHV,UHX	EA	2
76	21	PAOZZ	1560-00-963-1064	97499	205-060-819-1	..SUPPORT,STRUCTURAL........................UHE,UHH,UHV,UHX	EA	1
76	22	PAOZZ	1560-00-963-1065	97499	205-060-819-2	..SUPPORT,STRUCTURAL........................UHE,UHH,UHV,UHX	EA	1
76	23	PAOZZ	5306-00-182-2060	88044	AN3H7A	..BOLT,MACHINE..............................UHE,UHH,UHV,UHX	EA	5
76	24	PAOZZ	5306-00-182-2061	88044	AN3H10A	..BOLT,MACHINE..............................UHE,UHH,UHV,UHX	EA	1
76	25	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT...............................UHE,UHH,UHV,UHX	EA	6
76	26	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	6
76	27	PAOFF	1560-00-963-1066	97499	205-060-820-1	..HINGE HALF,SERRATED.......................UHE,UHH,UHV,UHX	EA	3
76	28	PAFZZ	3120-00-050-8874	97499	22-005811-9-14	...BUSHING,SLEEVE...........................UHE,UHH,UHV,UHX	EA	2
76	29	PAOZZ	5315-00-815-1405	96906	MS24665-151	..PIN,COTTER................................UHE,UHH,UHV,UHX	EA	4
76	30	PBOZZ	5315-00-812-3764	96906	MS20392-2C41	..PIN,STRAIGHT, HEADED......................UHE,UHH,UHV,UHX	EA	1
76	31	PAOZZ	5315-00-811-1256	96906	MS20392-2C39	..PIN,STRAIGHT, HEADED......................UHE,UHH,UHV,UHX	EA	1
76	32	PAOZZ	5340-00-753-0618	83014	H287-1	..LATCH ASSEMBLY............................UHE,UHH,UHV,UHX	EA	2
76	33	PBOZZ	5315-00-811-1241	96906	MS20392-2C17	...PIN,STRAIGHT, HEADED.....................UHE,UHH,UHV,UHX	EA	1
76	34	PAOZZ	5315-00-812-3765	96906	MS20392-2C33	...PIN,STRAIGHT, HEADED.....................UHE,UHH,UHV,UHX	EA	1
76	36	PAOZZ	5310-00-772-3720	96906	MS21075L3	...NUT,SELF-LOCKING,PL......................UHE,UHH,UHV,UHX	EA	4
76	39	PAOZZ	5315-00-815-1405	96906	MS24665-151	...PIN,COTTER...............................UHE,UHH,UHV,UHX	EA	1
76	40	PBOZZ	5315-00-951-2395	96906	MS20392-2C13	...PIN,STRAIGHT,HEADED......................UHE,UHH,UHV,UHX	EA	1
76	41	PAOZZ	5310-00-167-0818	88044	AN960-10	...WASHER,FLAT..............................UHE,UHH,UHV,UHX	EA	2
76	42	PAOZZ	5365-00-822-5180	80205	NAS42DD6-8	...SPACER,SLEEVE............................UHE,UHH,UHV,UHX	EA	1
76	43	PAOZZ	5340-00-074-1232	97499	205-060-874-1	...SPRING...................................UHE,UHH,UHV,UHX	EA	1
76	44	PAOZZ	1560-00-966-7512	97499	205-060-848-1	...HOOK,UPPER COWL..........................UHE,UHH,UHV,UHX	EA	1
76	45	PAOOO	1560-00-999-2272	97499	205-060-802-1	..ROD ASSEMBLY,BRACE........................UHE,UHH,UHV,UHX	EA	1
76	46	PAOZZ	5315-00-234-1856	96906	MS24665-155	...PIN,COTTER...............................UHE,UHH,UHV,UHX	EA	1
76	47	PAOZZ	5310-00-167-0801	88044	AN960C10	...WASHER,FLAT..............................UHE,UHH,UHV,UHX	EA	2
76	48	PAOZZ	5365-00-622-1810	80205	NAS43DD3-8	...SPACER,SLEEVE............................UHE,UHH,UHV,UHX	EA	2
76	49	PAOZZ	5315-00-052-7663	88044	AN121657	...PIN,STRAIGHT, HEADED.....................UHE,UHH,UHV,UHX	EA	1
76	50	MFOZZ	5315-00-945-5747	96906	MS20253P2-275	...PIN,STRAIGHT, HEADLESS...................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
76	51	MFOZZ	5340-00-950-3243	97499	205-060-802-11	...LEAF,BUTT HINGE..........................UHE,UHH,UHV,UHX	EA	1
76	52	MFOZZ	5340-00-947-9873	97499	205-060-802-13	...LEAF,BUTT HINGE..........................UHE,UHH,UHV,UHX	EA	2
76	53	XAODO		97499	205-060-802-3	...BRACE ASSEMBLY...........................UHE,UHH,UHV,UHX	EA	1
76	54	PAOZZ	5315-00-234-1856	96906	MS24665-155	....PIN,COTTER..............................UHE,UHH,UHV,UHX	EA	1
76	55	PAOZZ	5310-00-702-1349	96906	MS15795-804	....WASHER,FLAT.............................UHE,UHH,UHV,UHX	EA	2
76	56	PAOZZ	5315-00-842-9839	88044	AN121606	....PIN,STRAIGHT, HEADED....................UHE,UHH,UHV,UHX	EA	1
76	57	PAOZZ	5360-00-955-9669	97499	205-060-802-9	....SPRING,HELICAL,TORS.....................UHE,UHH,UHV,UHX	EA	1
76	58	PAOZZ	5340-00-957-7607	97499	205-060-802-7	....LATCH,BRACE ASSEMBL.....................UHE,UHH,UHV,UHX	EA	1
76		XCFZZ		97499	205-060-811-5	.BEAM INSTL U/O PN 205-060-800-5,-7,& -9.....UHE,UHH,UHV,UHX	EA	1
76		XCFZZ		97499	205-060-801-1	.BEAM INSTL U/O PN 205-060-800-11,-13,-21, & -23 ....UHE,UHH,UHV,UHX	EA	1
76	59	PBOFF	1560-00-965-0194	97499	205-060-801-11	..BEAM ASSEMBLY,FIREW.......................UHF,UHH,UHV,UHX	EA	1
76	59	PAOZZ	1560-00-757-7111	97499	205-060-801-3	...BEAM,FIREWALL,FORWA......................UHE,UHH,UHV,UHX	EA	1
76	60	PAOZZ	5340-00-951-6903	80205	NAS1354D57S29	...PIN,QUICK RELEASE........................UHE,UHH,UHV,UHX	EA	2
76	61	PAOZZ	4010-00-981-3150	80205	NAS1455-00-5	...CHAIN,WELDLESS...........................UHE,UHH,UHV,UHX	EA	2
76	61	PAOZZ	4010-00-757-2931	86831	RS139-5	...CHAIN ASSEMBLY U/O PN 205-060-801-11......UHE,UHH,UHV,UHX	EA	2
76	62	PAOZZ	5310-00-772-3720	96906	MS21075L3	...NUT,SELF-LOCKING,PL......................UHE,UHH,UHV,UHX	EA	28
76	63	PAOZZ	5310-00-623-9989	80205	NAS1031A3	...NUT,SELF-LOCKING,PL......................UHE,UHH,UHV,UHX	EA	2
76	64	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	...SCREW,MACHINE............................UHE,UHH,UHV,UHX	EA	20
76	65	PAOZZ	5306-00-182-2059	88044	AN3H6A	...BOLT,MACHINE.............................UHE,UHH,UHV,UHX	EA	28
76	66	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT..............................UHE,UHH,UHV,UHX	EA	28
76	67	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	16
76	68	PAOZZ	1560-00-967-1809	97499	205-060-816-1	...BRACKET,CLEVIS U/O PN 205-060-811-5.......UHE,UHH,UHV,UHX	EA	2
76	69	PAOZZ	1560-00-757-7141	97499	205-060-837-1	...BRACKET,FORWARD AND U/O PN 205-060-801-11 ....UHE,UHH,UHV,UHX	EA	1
76	70	PAOZZ	1560-00-967-1810	97499	205-060-817-1	...BRACKET,CLEVIS U/O PN 205-060-811-5.......UHE,UHH,UHV,UHX	EA	6
76	71	PAOZZ	1560-00-757-7128	97499	205-060-836-1	...BRACKET,HINGE BEAM U/O PN 205-060-801-11 ....UHE,UHH,UHV,UHX	EA	1
76	72	PAOZZ	1560-00-073-3303	97499	205-060-476-7	...INLET DUCT ASSEMBLY......................UHE,UHH,UHV,UHX	EA	1
76	73	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	...SCREW,MACHINE............................UHE,UHH,UHV,UHX	EA	4
76	74	PAODO	1560-00-757-7110	97499	205-060-801-5	...PLENUM ASSEMBLY U/O PN 205-060-801-11.....UHE,UHH,UHV,UHX	EA	1
76	75	PAOZZ	5310-00-803-2552	80205	NAS1033A3	....NUT,SELF-LOCKING,PL.....................UHE,UHH,UHV,UHX	EA	4

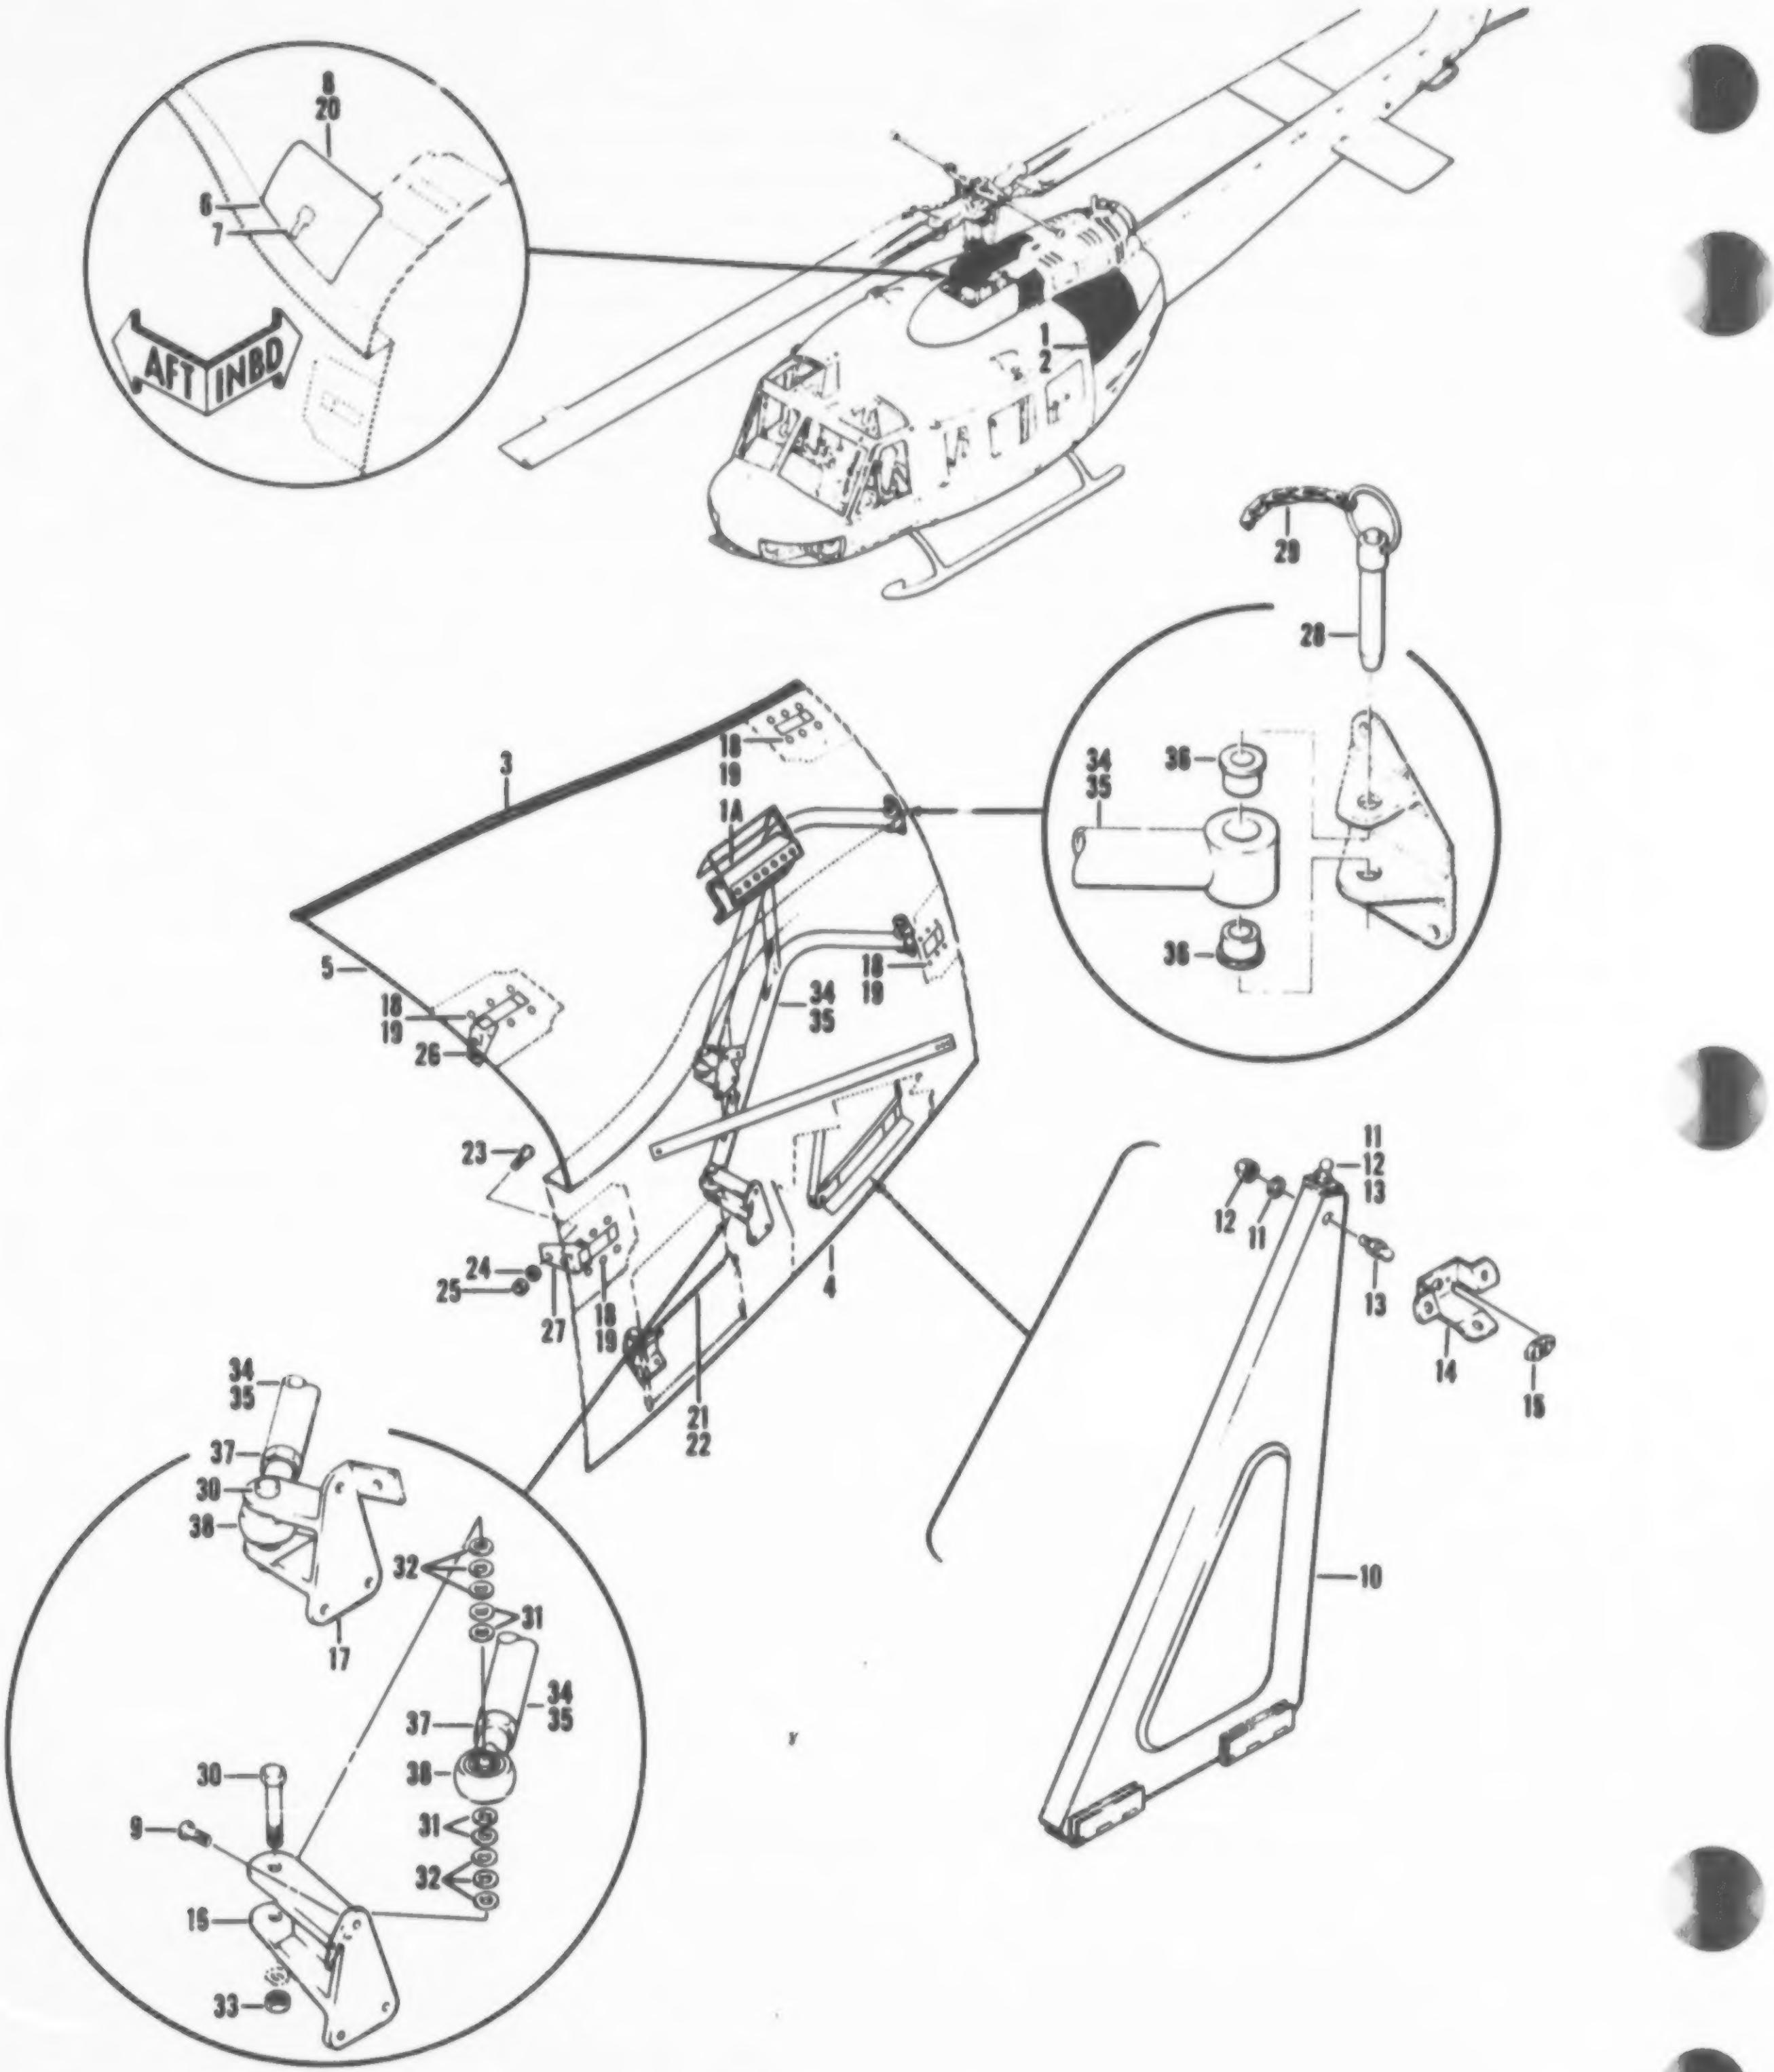
8
20
6
7
AFT
INBD
1
2
29
28
34
35
36
36
3
18
19
1A
5
18
19
26
34
35
18
19
23
24
25
27
18
19
4
21
22
11
12
13
12
11
13
14
15
10
34
35
37
30
38
17
32
31
34
35
37
38
30
9
31
32
16
33

Figure 77. Cowl Installation

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
77		XCFZZ		97499	205-060-800-5	COWL INSTL USBL EFF 62-2106 THRU 62-2113 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
77		XCFZZ		97499	205-060-800-7	COWL INSTL USBL EFF 62-12351 THRU 62-12372 SEE FIG.96 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
77		XCFZZ		97499	205-060-800-9	COWL INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
77		XCFZZ		97499	205-060-800-11	COWL INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG.96 FOR NHA.......................................UHE,UHH,UHV,UHX	EA	1
77		XCFZZ		97499	205-060-800-13	COWL INSTL USBL EFF 65-9565 THRU 66-16867 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
77		XCFZZ		97499	205-060-800-23	COWL INSTL USBL EFF 66-16868 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.96 FOR NHA....................UHE,UHH,UHV,UHX	EA	1
77		XCFZZ		97499	205-060-800-21	COWL INSTL USBL EFF 67-17145 & SUBSEQUENT SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
77	1	PAOFF	1560-00-073-0337	97499	205-060-826-1	.COWL ASSEMBLY,LOWER -LH.....................UHE,UHH,UHV,UHX	EA	1
77	1	PAOFF	1560-00-115-4913	97499	205-060-826-135	.COWL ASSEMPLY,ENGIN LOWER-RH RPLS-- 1560-00-073-0338 PN 205-060-826-2 & 1560-00-831-1105 PN 205-060-826-3 ....UHE,UHH,UHV,UHX	EA	1
77	1	XAOFZ		97499	205-060-826-11	..COWL ASSEMBLY U/O PN 205-060-826-1.........UHE,UHH,UHV,UHX	EA	1
77	1	XAOFZ		97499	205-060-826-12	..COWL ASSEMBLY U/O PN 205-060-826-2.........UHE,UHH,UHV,UHX	EA	1
77	1	XAOFF		97499	205-060-826-109	..COWL ASSEMBLY J/O PN 205-060-826-3.........UHE,UHH,UHV,UHX	EA	1
77	1	XAOFF		97499	205-060-826-137	..COWL ASSEMBLY U/O PN 205-060-826-135.......UHE,UHH,UHV,UHX	EA	1
77	1A	MFOZZ	1560-00-H06-2859	97499	205-060-826-79	...GRIP,COWL.................................UHE,UHH,UHV,UHX	EA	1
77	2	PAOZZ	1560-00-073-2198	97499	205-060-826-13	...DOOR,ACCESS U/O PN 205-060-826-11.........UHE,UHH,UHV,UHX	EA	1
77	2	PAOZZ	1560-00-828-8138	97499	205-060-826-115	...DOOR,ACCESS U/O PN 205-060-826-12 & -109 ....UHE,UHH,UHV,UHX	EA	1
77	3	MFOZZ		97499	205-060-826-81	...NONMETALLIC SEAL..........................UHE,UHH,UHV,UHX	EA	1
77	4	MFOZZ	5330-00-842-3206	97499	205-060-826-83	...GASKET....................................UHE,UHH,UHV,UHX	EA	1
77	5	MFOZZ	5330-00-842-3205	97499	205-060-826-85	...GASKET....................................UHE,UHH,UHV,UHX	EA	1
77	6	PAOOO	1560-00-073-0339	97499	205-060-826-15	..DOOR,ACCESS U/O PN 205-060-826-2 & -3......UHE,UHH,UHV,UHX	EA	1
77	7	PAOZZ	5340-00-598-0399	83014	H5000-2-064-091	...CATCH, FLUSH..............................UHE,UHH,UHV,UHX	EA	1
77	8	PAOZZ	5360-00-831-1458	97499	204-060-887-1	..SPRING,HELICAL,TORS........................UHE,UHH,UHV,UHX	EA	1
77	9	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	8
77	10	AOOOZ	1560-00-413-1505	97499	205-060-860-1	..SUPPORT ASSEMBLY U/O PN 205-060-826-1......UHE,UHH,UHV,UHX	EA	1
77	10	AOOOZ	1560-00-413-1506	97499	205-060-860-2	..SUPPORT ASSEMBLY U/O PN 205-060-826-2 & -3 ....UHE,UHH,UHV,UHX	EA	1
77	10	MFOZZ	1560-00-413-1507	97499	205-060-860-3	...SUPPORT ASSEMBLY U/O PN 205-060-860-1.....UHE,UHH,UHV,UHX	EA	1
77	10	MFOZZ	1560-00-489-2246	97499	205-060-860-4	...SUPPORT ASSEMBLY U/O PN 205-060-860-2.....UHE,UHH,UHV,UHX	EA	1
77	11	PAOZZ	5310-00-188-7721	88044	AN960PD6	...WASHER,FLAT...............................UHE,UHH,UHV,UHX	EA	2
77	12	PAOZZ	5310-00-857-5560	96906	MS21045L06	...NUT,SELF-LOCKING,HE.......................UHE,UHH,UHV,UHX	EA	2
77	13	PAOZZ	5340-00-950-4233	78553	P116-499-10-24A	...STUD FRICTION.............................UHE,UHH,UHV,UHX	EA	2
77	14	MFOZZ	1560-00-073-6581	97499	205-060-862-1	..BRACKET ASSEMBLY...........................UHE,UHH,UHV,UHX	EA	1
77	15	PAOZZ	5340-00-634-7350	78553	A1663-022-24A	...RECEPTACLE,FRICT CATCH STUD...............UHE,UHH,UHV,UHX	EA	1
77	16	PAOZZ	1560-00-966-6097	97499	205-060-855-1	..SUPPORT,HINGE,LOWER -LH....................UHE,UHH,UHV,UHX	EA	1
77	16	PAOZZ	1560-00-966-6098	97499	205-060-855-2	..SUPPORT,HINGE,LOWER -RH....................UHE,UHH,UHV,UHX	EA	1
77	17	PAOZZ	1560-00-966-6099	97499	205-060-856-1	..SUPPORT,HINGE,COWL -LH UPPER...............UHE,UHH,UHV,UHX	EA	1
77	17	PAOZZ	1560-00-966-6100	97499	205-060-856-2	..SUPPORT,HINGE,COWL -RH-UPPER...............UHE,UHH,UHV,UHX	EA	1
77	18	PAOZZ	5305-00-281-8527	88044	AN525-832R8	..SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	24

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
77	19	PAOZZ	5340-00-072-8315	83014	H38K613	..LATCH ASSEMBLY................................UHE,UHH,UHV,UHX	EA	4
77	20	XBOZZ		96906	MS20253P2-387	..PIN,STRAIGHT, HEADLESS........................UHE,UHH,UHV,UHX	EA	1
77	21	MFOZZ	5315-00-927-7400	96906	MS20253P2-538	..PIN,HINGE.....................................UHE,UHH,UHV,UHX	EA	1
77	22	PAOZZ	5340-00-829-8673	97499	204-060-869-1	..SPRING..UHE,UHH,UHV,UHX	EA	2
77	23	PAOZZ	5306-00-182-2059	88044	AN3H6A	.BOLT,MACHINE...................................UHE,UHH,UHV,UHX	EA	8
77	24	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT USBL EFF 67-18897 & SUBSEQUENT,61-2728,66-18881 THRU 66-18896 USE AFTER MODERNIZATION PROGRAM ....UHE,UHH,UHV,UHX	EA	8
77	25	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX USBL EFF 61-2728,66-18881 THRU 66-18896,67-18897 & SUBSEQUENT....................UHE,UHH,UHV,UHX	EA	8
77	26	PAOZZ	1560-00-963-1067	97499	205-060-821-1	.FITTING,COWL LATCH -LH.........................UHE,UHH,UHV,UHX	EA	2
77	27	PAOZZ	1560-00-963-1068	97499	205-060-821-3	.FITTING,COWL LATCH -RH USBL EFF 61-2778,66-18881 THRU 66-18896,67-18897 & SUB...........................UHE,UHH,UHV,UHX	EA	2
77	28	PAOZZ	5340-00-200-3713	96906	MS17990-415	.PIN,QUICK RELEASE..............................UHE,UHH,UHV,UHX	EA	4
77	29	XDOZZ		97499	25C10-1A6	.CHAIN,WELDLESS.................................UHE,UHH,UHV,UHX	FT	4
77	30	PACZZ	5306-00-182-1912	88044	AN4H17	.BOLT,MACHINE...................................UHE,UHH,UHV,UHX	EA	4
77	31	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT....................................UHE,UHH,UHV,UHX	EA	8
77	32	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT USBL EFF 61-2728,66-18881 THRU 66-18896,67-18897 & SUBSEQUENT..............................UHE,UHH,UHV,UHX	EA	12
77	33	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,PLAIN,SLOTTED,H USBL EFF 61-2728,66-18881 THRU 66-18896,67-18897 & SUBSEQUENT,68-16990 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	4
77	34	PAOOO	1560-00-963-1073	97499	205-060-843-1	.HINGE ASSEMBLY,ENGI USBL EFF 61-2728,66-18881 THRU 66-18896,67-18897 & SUBSEQUENT,68-16990 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	2
77	35	XAOOZ		97499	205-060-843-3	..WELD ASSEMBLY.................................UHE,UHH,UHV,UHX	EA	1
77	36	PAOZZ	3120-00-052-6760	97499	22-006815-32-16	...BUSHING,SLEEVE...............................UHE,UHH,UHV,UHX	EA	4
77	37	PAOZZ	5310-00-153-5569	88044	AN316-9R	..NUT,PLAIN,HEXAGON.............................UHE,UHH,UHV,UHX	EA	2
77	38	PAOZZ	3120-00-055-2342	99862	TCL001SE89	..BEARING,PLAIN,ROD E...........................UHE,UHH,UHV,UHX	EA	2

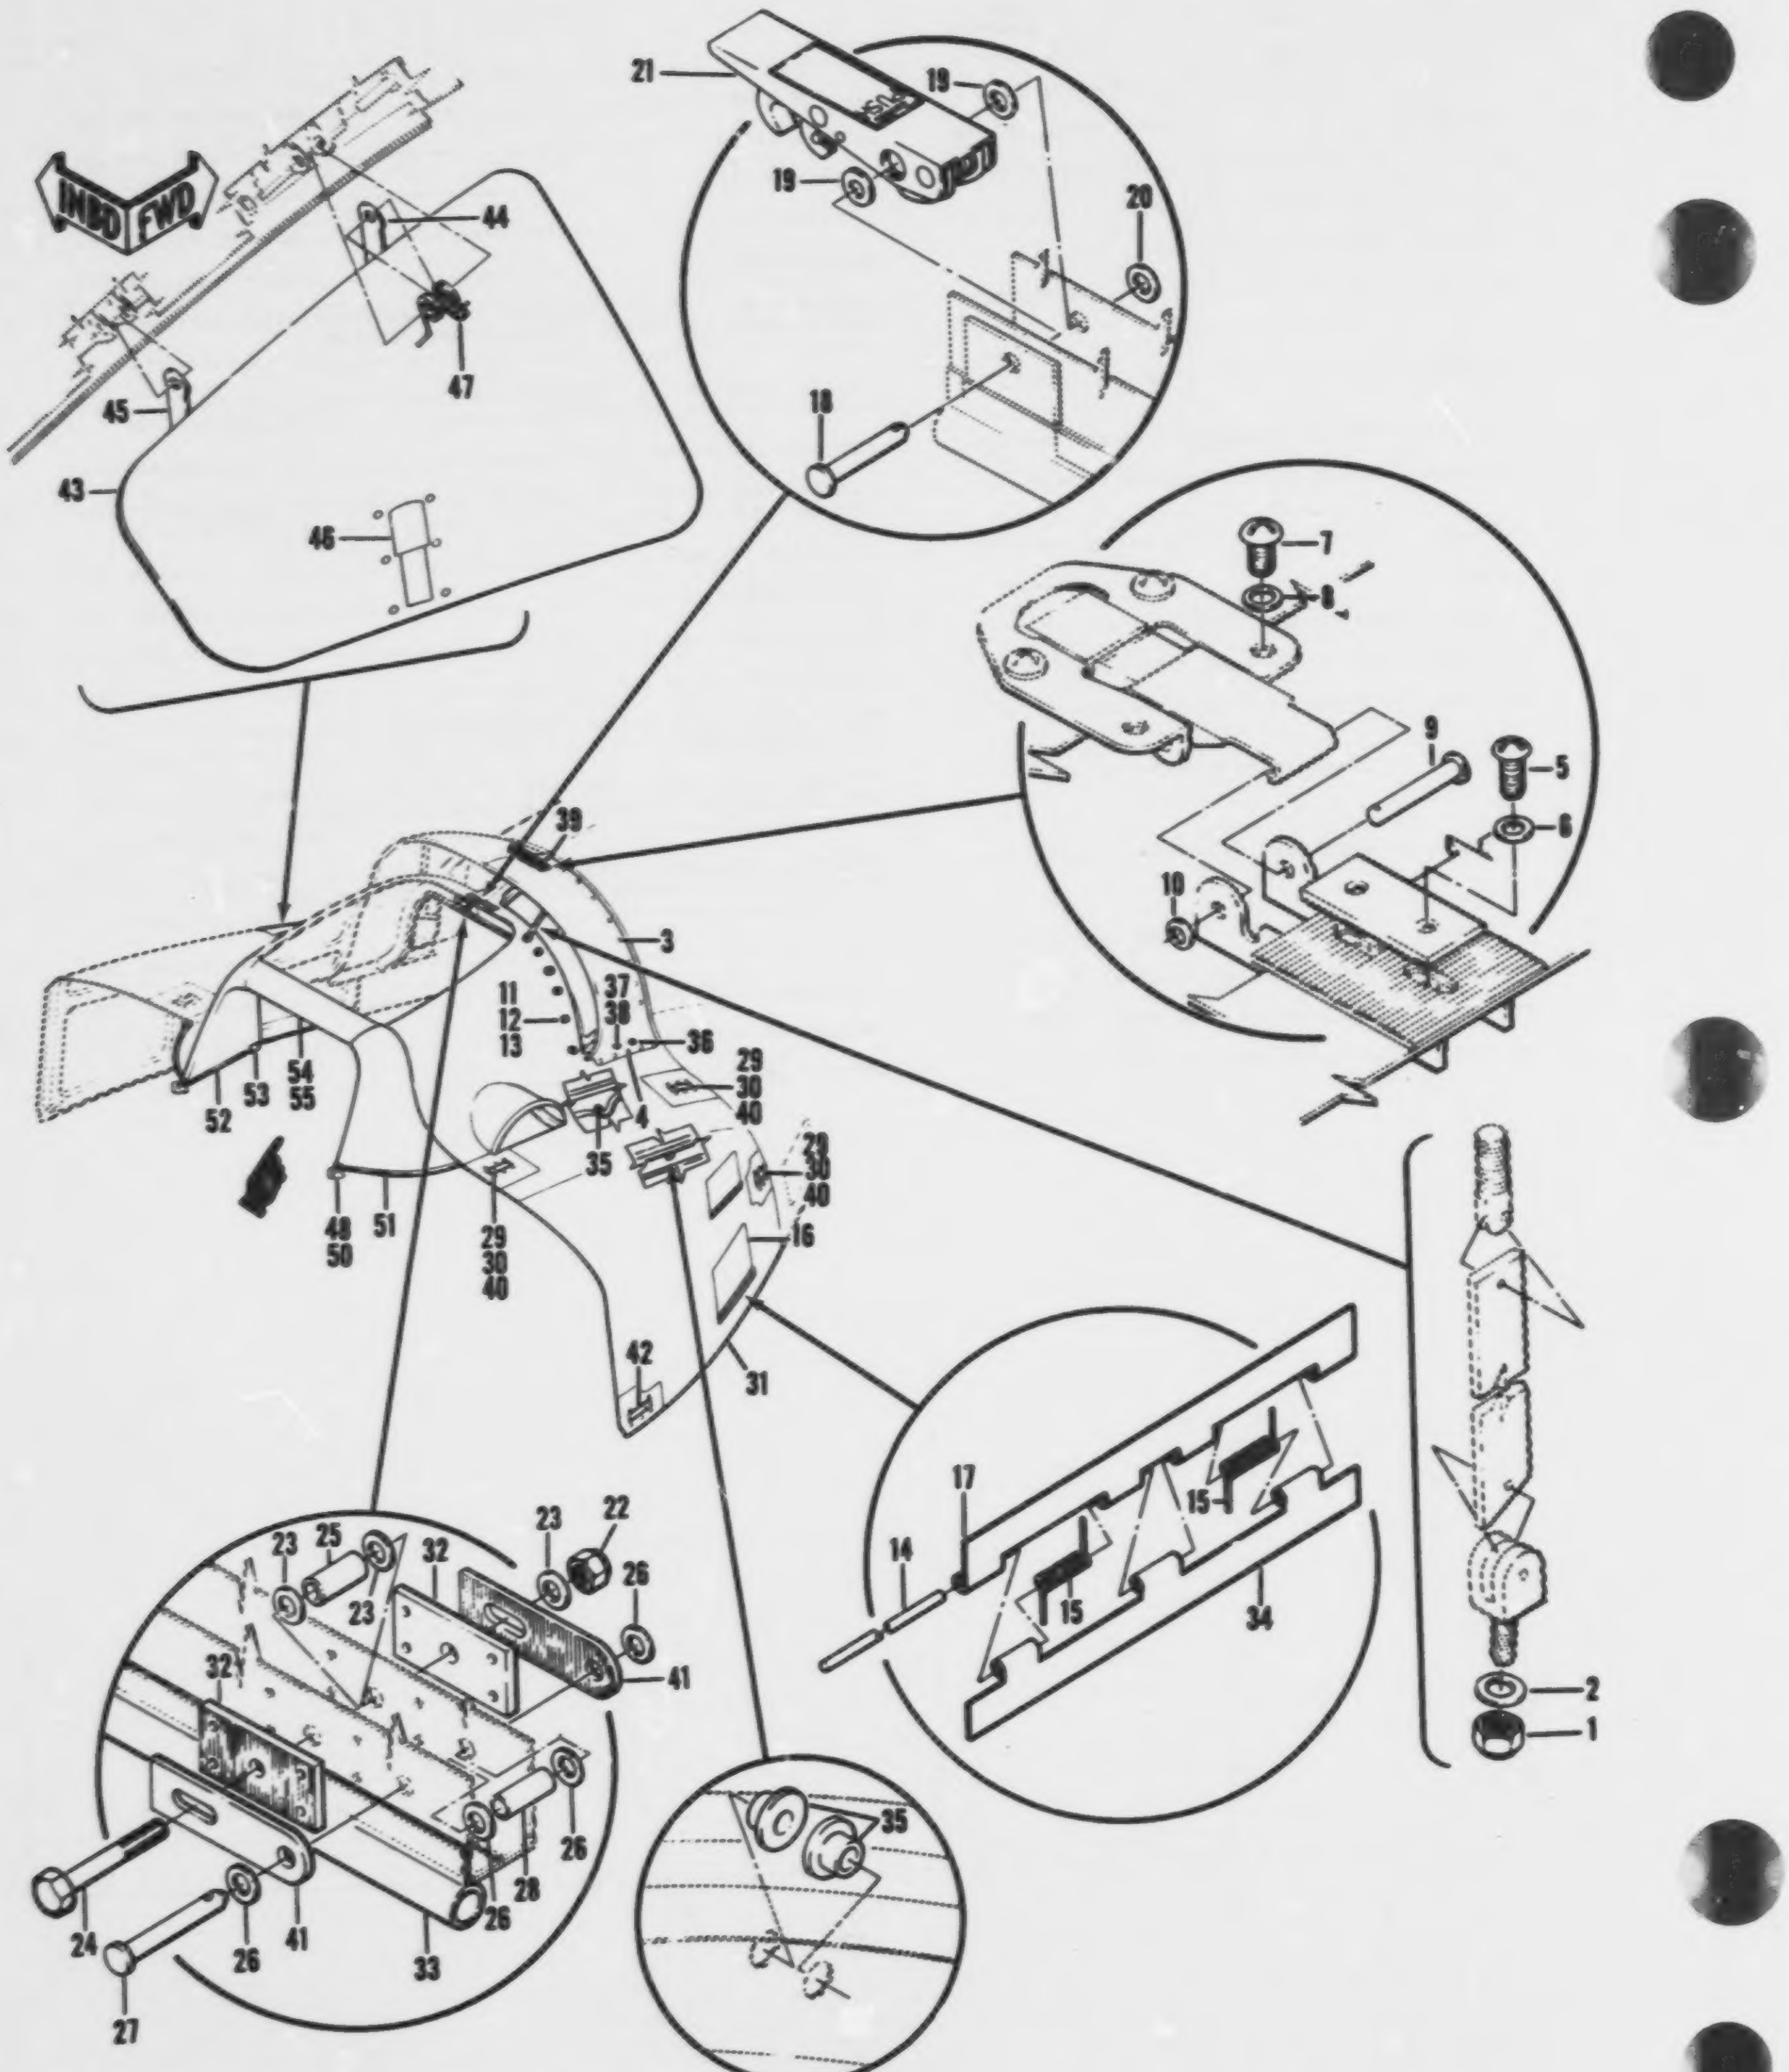
INBD
FWD
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
50
51
52
53
54
55

Figure 78. Cowl Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
78		PBOFF	1560-00-115-4928	97499	204-060-881-37	COWL ASSEMBLY SEE FIG.74 FOR NHA........................UHB	EA	1
78		PAODO	1560-00-151-4063	97499	204-060-881-39	COWL ASSEMBLY SEE FIG.74 & 80 FOR NHA............UHB,UHC,UHM	EA	1
78	1	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE..............................UHB,UHC,UHM	EA	1
78	2	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT......................................UHB,UHC,UHM	EA	1
78	3	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE....................................UHB,UHC,UHM	EA	20
78	4	PAOZZ	5325-00-276-4931	88044	AN227-10-10	.STUD,SNAP FASTEN.................................UHB,UHC,UHM	EA	3
78		XCODO		97499	204-060-933-117	.SCOOP ASSY,..UHM	EA	1
78		XCODO		97499	204-060-933-118	.SCOOP ASSY...UHM	EA	1
78	5	PAOZZ	5305-00-054-6670	96906	MS51957-45	..SCREW,MACHINE...UHB	EA	2
78	6	PAOZZ	5310-00-184-9002	88044	AN960PD8L	..WASHER,FLAT U/O PN 204-060-933-117......................UHB	EA	2
78	7	PAOZZ	5305-00-054-6652	96906	MS51957-28	..SCREW,MACHINE...................................UHB,UHC,UHM	EA	4
78	8	PAOZZ	5310-00-531-9514	88044	AN960C6	..WASHER,FLAT U/O PN 204-060-933-118..............UHB,UHC,UHM	EA	4
78	9	PAOZZ	5315-00-081-7027	96906	MS20392-1C27	..PIN,STRAIGHT, HEADED-LH.................................UHB	EA	1
78	10	PAOZZ	5310-00-550-5009	96906	MS15795-704	..WASHER,FLAT U/O PN 204-060-933-117......................UHB	EA	1
78	11	PAOZZ	5325-00-285-6297	88044	AN227-1086	.STUD,SNAP FASTEN...UHB	EA	5
78	12	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..UHB	EA	4
78	13	PAOZZ	5310-00-807-1474	80205	NAS679A3	.NUT,SELF-LOCKING...UHB	EA	4
78	14	MFOZZ	5315-00-080-7214	96906	MS20253-2-538	.PIN,STRAIGHT, HEADLESS -LH.......................UHB,UHC,UHM	EA	1
78	15	PAOZZ	5340-00-829-8673	97499	204-060-869-1	.SPRING...UHB,UHC,UHM	EA	2
78	16	MFOZZ	1560-00-847-7434	97499	204-060-881-13	.DOOR ASSEMBLY,COWLI -LH USBL EFF 59-2603 & SUB...........UHB	EA	1
78	16	MFOZZ	1560-00-757-8758	97499	204-060-881-14	.DOOR ASSEMBLY,RH.................................UHB,UHC,UHM	EA	1
78	17	MFOZZ	5340-00-178-8020	97499	204-060-881-225	..HINGE,HALF......................................UHB,UHC,UHM	EA	1
78	18	PAOZZ	5315-00-080-0484	96906	MS20392-2C43	.PIN,STRAIGHT, HEADED-LH SIDE.............................UHB	EA	1
78	19	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..UHB	EA	2
78	20	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..UHB	EA	1
78	21	PAOZZ	5340-00-931-8343	83014	H40K832	.CATCH,FLUSH..UHB	EA	1
78	22	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE..............................UHB,UHC,UHM	EA	1
78	23	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT......................................UHB,UHC,UHM	EA	3
78	24	PAOZZ	5306-00-151-2308	88044	AN23-29	.BOLT,CLEVIS -RH..................................UHB,UHC,UHM	EA	1
78	25	PAOZZ	5365-00-838-0591	80205	NAS43DD3-67	.SPACER,SLEEVE -RH................................UHB,UHC,UHM	EA	1
78	26	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT......................................UHB,UHC,UHM	EA	4
78	27	PBOZZ	5315-00-080-0487	96906	MS20392-2C51	.PIN,STRAIGHT,HEADED..............................UHB,UHC,UHM	EA	1
78	28	PAOZZ	5365-00-806-8711	80205	NAS43DD3-65	.SPACER,SLEEVE -RH................................UHB,UHC,UHM	EA	1
78	29	PAOZZ	5305-00-891-1775	88044	AN525-832R10	.SCREW,MACHINE....................................UHB,UHC,UHM	EA	10
78	29	PAOZZ	5305-00-281-8526	88044	AN525-832R6	.SCREW,MACHINE....................................UHB,UHC,UHM	EA	6
78	30	PAOZZ	5340-00-072-8316	83014	H38K614	.LATCH ASSEMBLY,COWL..............................UHB,UHC,UHM	EA	3
78	30	PAOZZ	5340-00-989-0750	83014	H38K847	.CATCH,FLUSH U/O PN 204-060-881-39................UHB,UHC,UHM	EA	1
78	31	XAOFF		97499	204-060-881-27	.COWL ASSY,TRANS..UHB	EA	1
78	31	XAOFF		97499	204-060-881-28	.COWL ASSY,TRANS..................................UHB,UHC,UHM	EA	1
78	32	PAOZZ	1560-00-767-8022	97499	204-060-928-1	..PLATE,STRUCTURAL -RH............................UHB,UHC,UHM	EA	2
78	33	PAOZZ	1560-00-796-4219	97499	204-060-881-227	..SEAL,ENGINE COWLING.............................UHB,UHC,UHM	EA	1
78	34	MFOZZ	1560-00-H02-9790	97499	204-060-881-623	..HINGE...UHB,UHC,UHM	EA	1
78	35	PAOZZ	3120-00-670-5325	97499	22-005811-11-14	..BUSHING,SLEEVE..................................UHB,UHC,UHM	EA	4

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
78	36	PAOZZ	5310-00-623-5989	80205	NAS1031A3	..NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	20
78	37	PAOZZ	5310-00-680-6275	80205	NAS1032A3	..NUT,SELF-LOCKING,PL..........................UHB,UHC,UHM	EA	1
78	38	PAOZZ	5325-00-285-6297	88044	AN227-1086	..STUD,SNAP FASTENER..................................UHB	EA	3
78	39	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE.......................................UHB	EA	20
78	40	PAOZZ	5310-00-734-1859	96906	MS21071L08	..NUT,SELF-LOCKING,PL.................................UHB	EA	18
78	41	PAOZZ	1560-00-767-8023	97499	204-060-929-1	.PLATE,TRANSMISSION COWL ADJUSTMENT -RH SIDE ONLY ....UHB,UHC,UHM	EA	2
78	42	PAOZZ	5340-00-072-8315	83014	H38K613	.LATCH ASSEMBLY..................................UHB,UHC,UHM	EA	1
78	43	MFOZZ	1560-00-757-8757	97499	204-060-881-12	.DOOR ASSEMBLY,COWLI -RH ONLY....................UHB,UHC,UHM	EA	1
78	44	MFOZZ		97499	204-060-881-245	..HINGE..UHB,UHC,UHM	EA	1
78	45	MFOZZ	1560-00-H24-5336	97499	204-060-881-247	..HINGE..UHB,UHC,UHM	EA	1
78	46	PAOZZ	5340-00-598-0399	83014	H5000-2-064-091	..CATCH, FLUSH...................................UHB,UHC,UHM	EA	1
78	47	PAOZZ	5360-00-831-1460	97499	204-060-951-1	.SPRING,HELICAL,TORS.............................UHB,UHC,UHM	EA	2
78	48	PAOZZ	5315-00-811-1265	96906	MS20392-1C15	.PIN,STRAIGHT, HEADED............................UHB,UHC,UHM	EA	2
78		PAOFF	1560-00-675-3249	97499	204-060-830-101	DUCT ASSEMBLY SEE FIG.95 FOR NHA.................UHB,UHC,UHM	EA	1
78	50	PAOZZ	1560-00-767-8025	97499	204-060-943-1	.FLAP HINGE,COWLING -LH..........................UHB,UHC,UHM	EA	1
78	50	PAOZZ	1560-00-767-8026	97499	204-060-943-2	.FLAP HINGE,COWLING -RH..........................UHB,UHC,UHM	EA	1
78	51	PAOZZ	1560-00-676-6140	97499	204-060-830-27	.BUMPER,TRANSMISSION.............................UHB,UHC,UHM	EA	2
78	52	PAOZZ	1615-00-676-6141	97499	204-060-830-29	.BUMPER,TRANSMISSION.............................UHB,UHC,UHM	EA	2
78	53	PAOZZ	5310-00-803-2552	80205	NAS1033A3	.NUT,SELF-LOCKING,PL.............................UHB,UHC,UHM	EA	2
78	54	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT.....................................UHB,UHC,UHM	EA	14
78	55	PAOZZ	5310-00-515-9371	88044	AN960PD3	.WASHER,FLAT.....................................UHB,UHC,UHM	EA	144

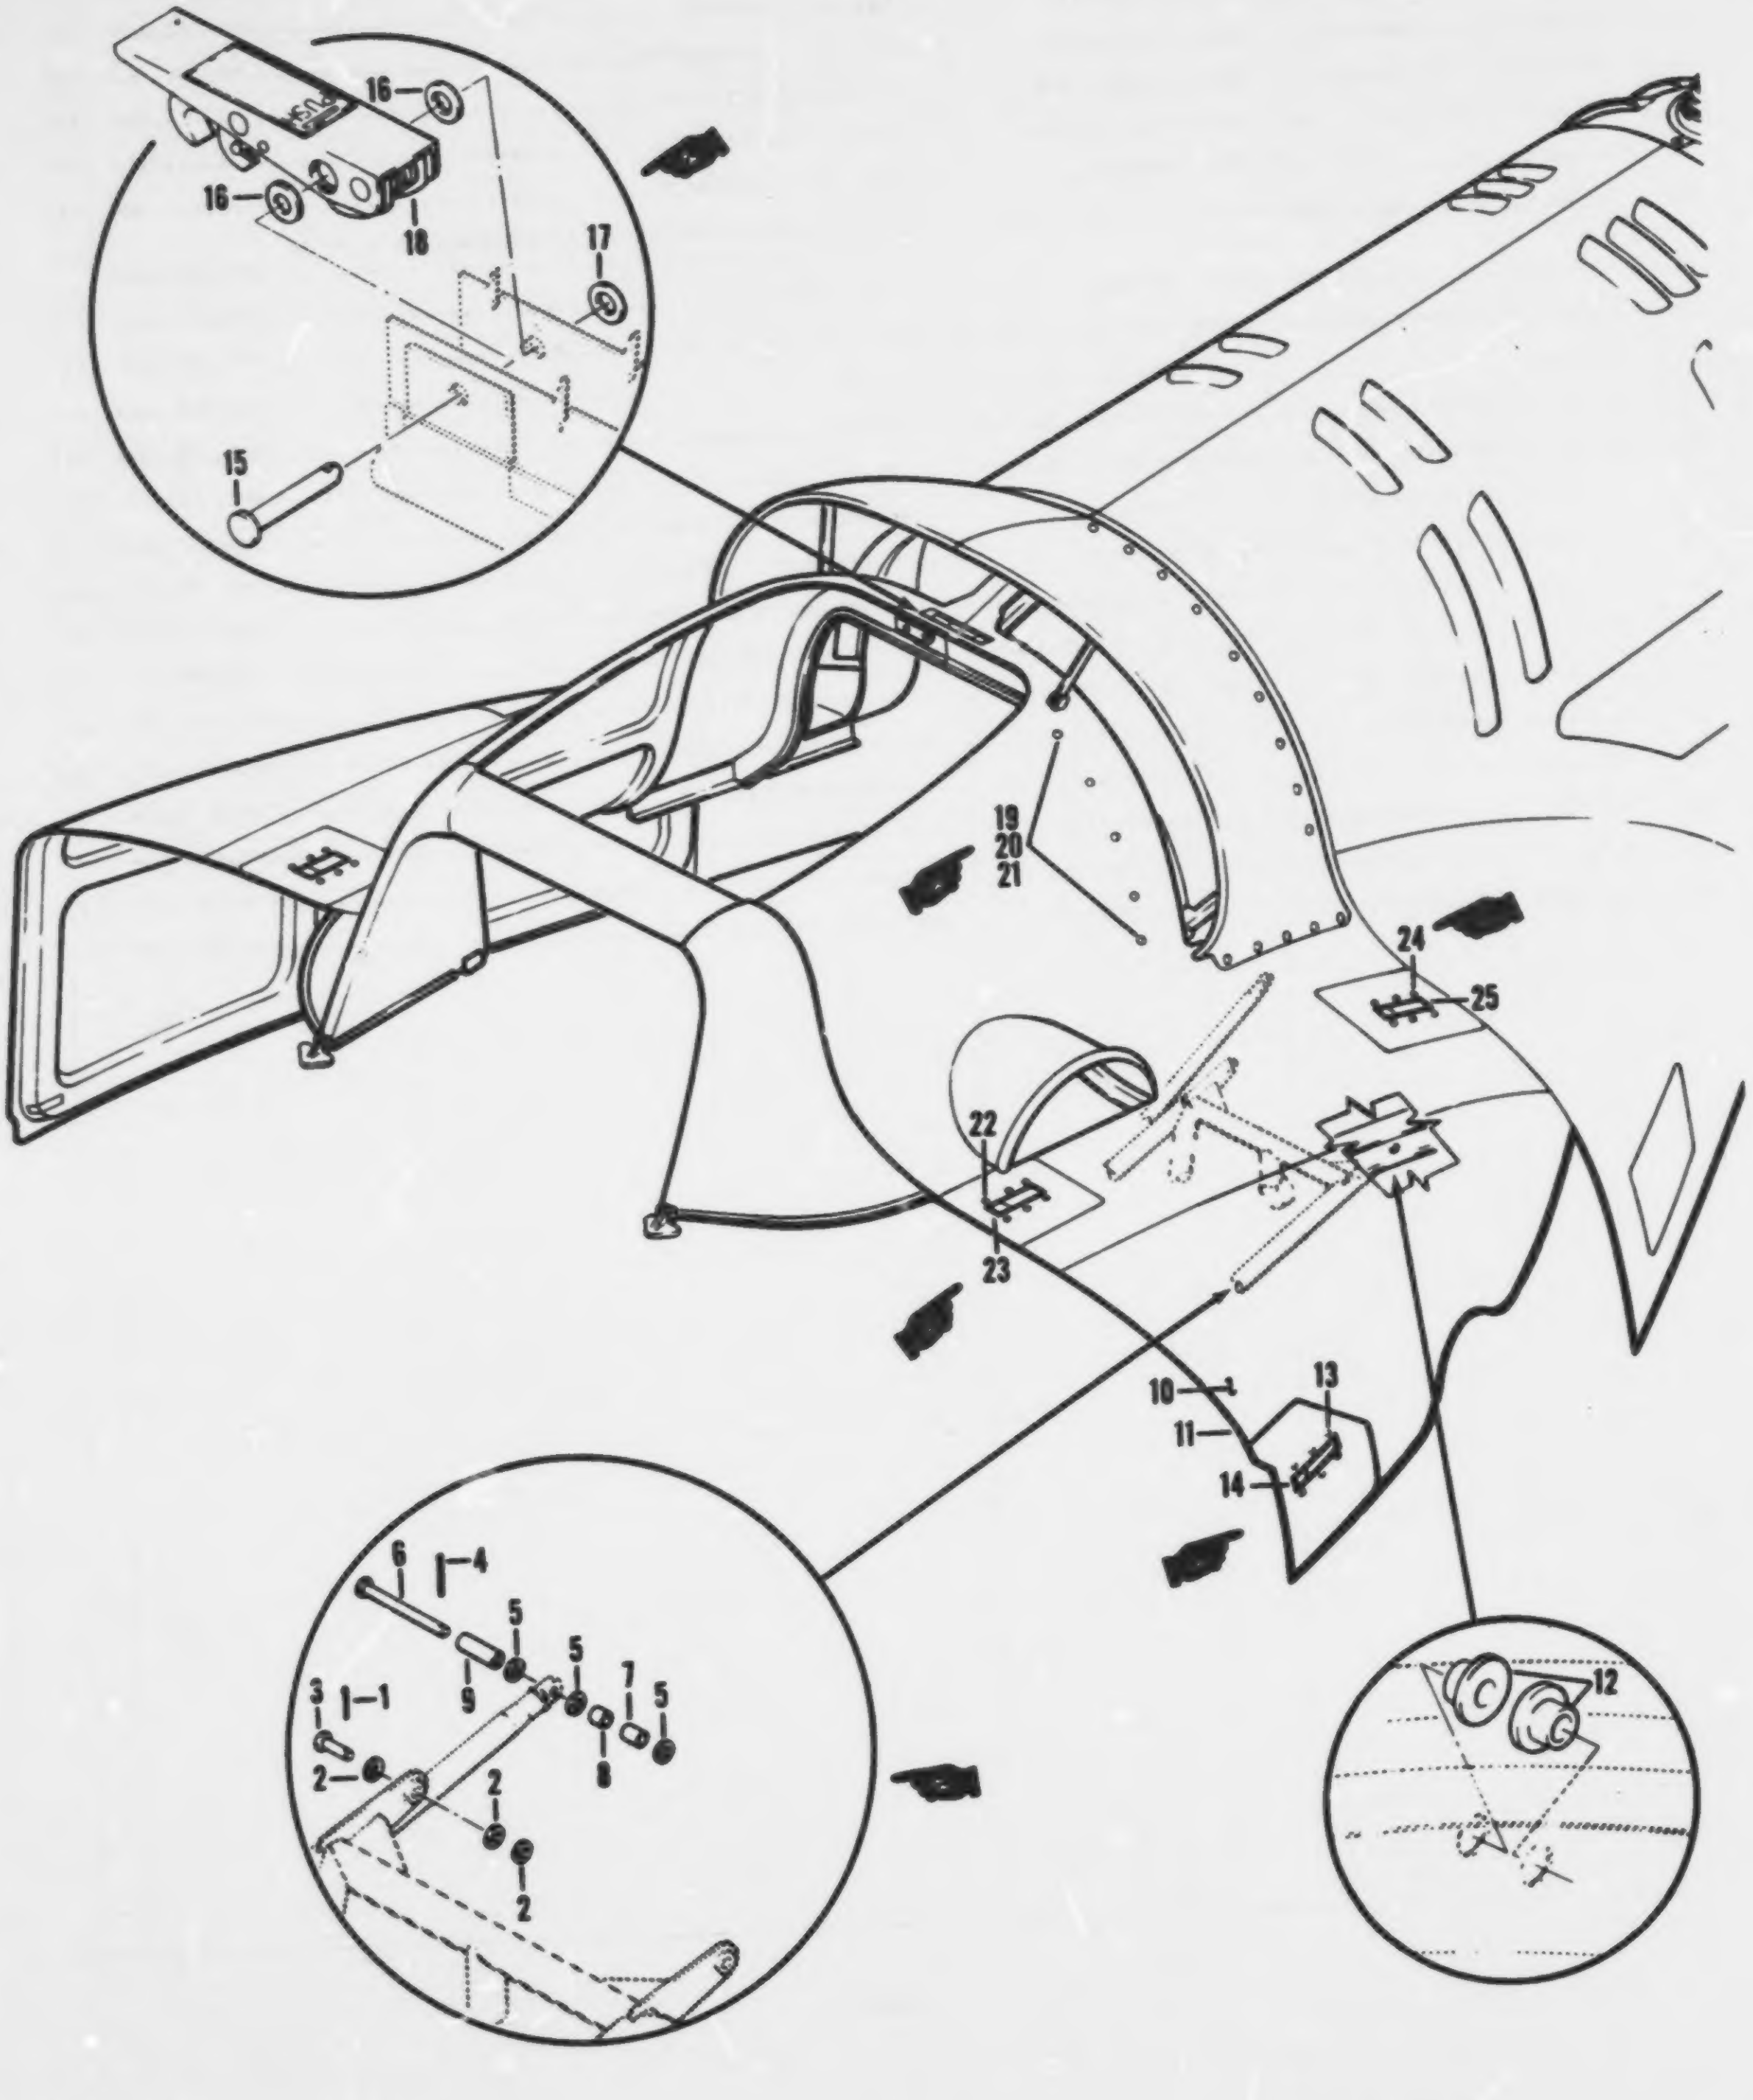
16
16
18
17
15
19
20
21
24
25
22
23
10
11
13
14
6
4
5
5
9
3
1
7
5
2
8
2
2
12

Figure 79. Cowl Installation, Forward Left-Hand
(Sheet 1 of 3)

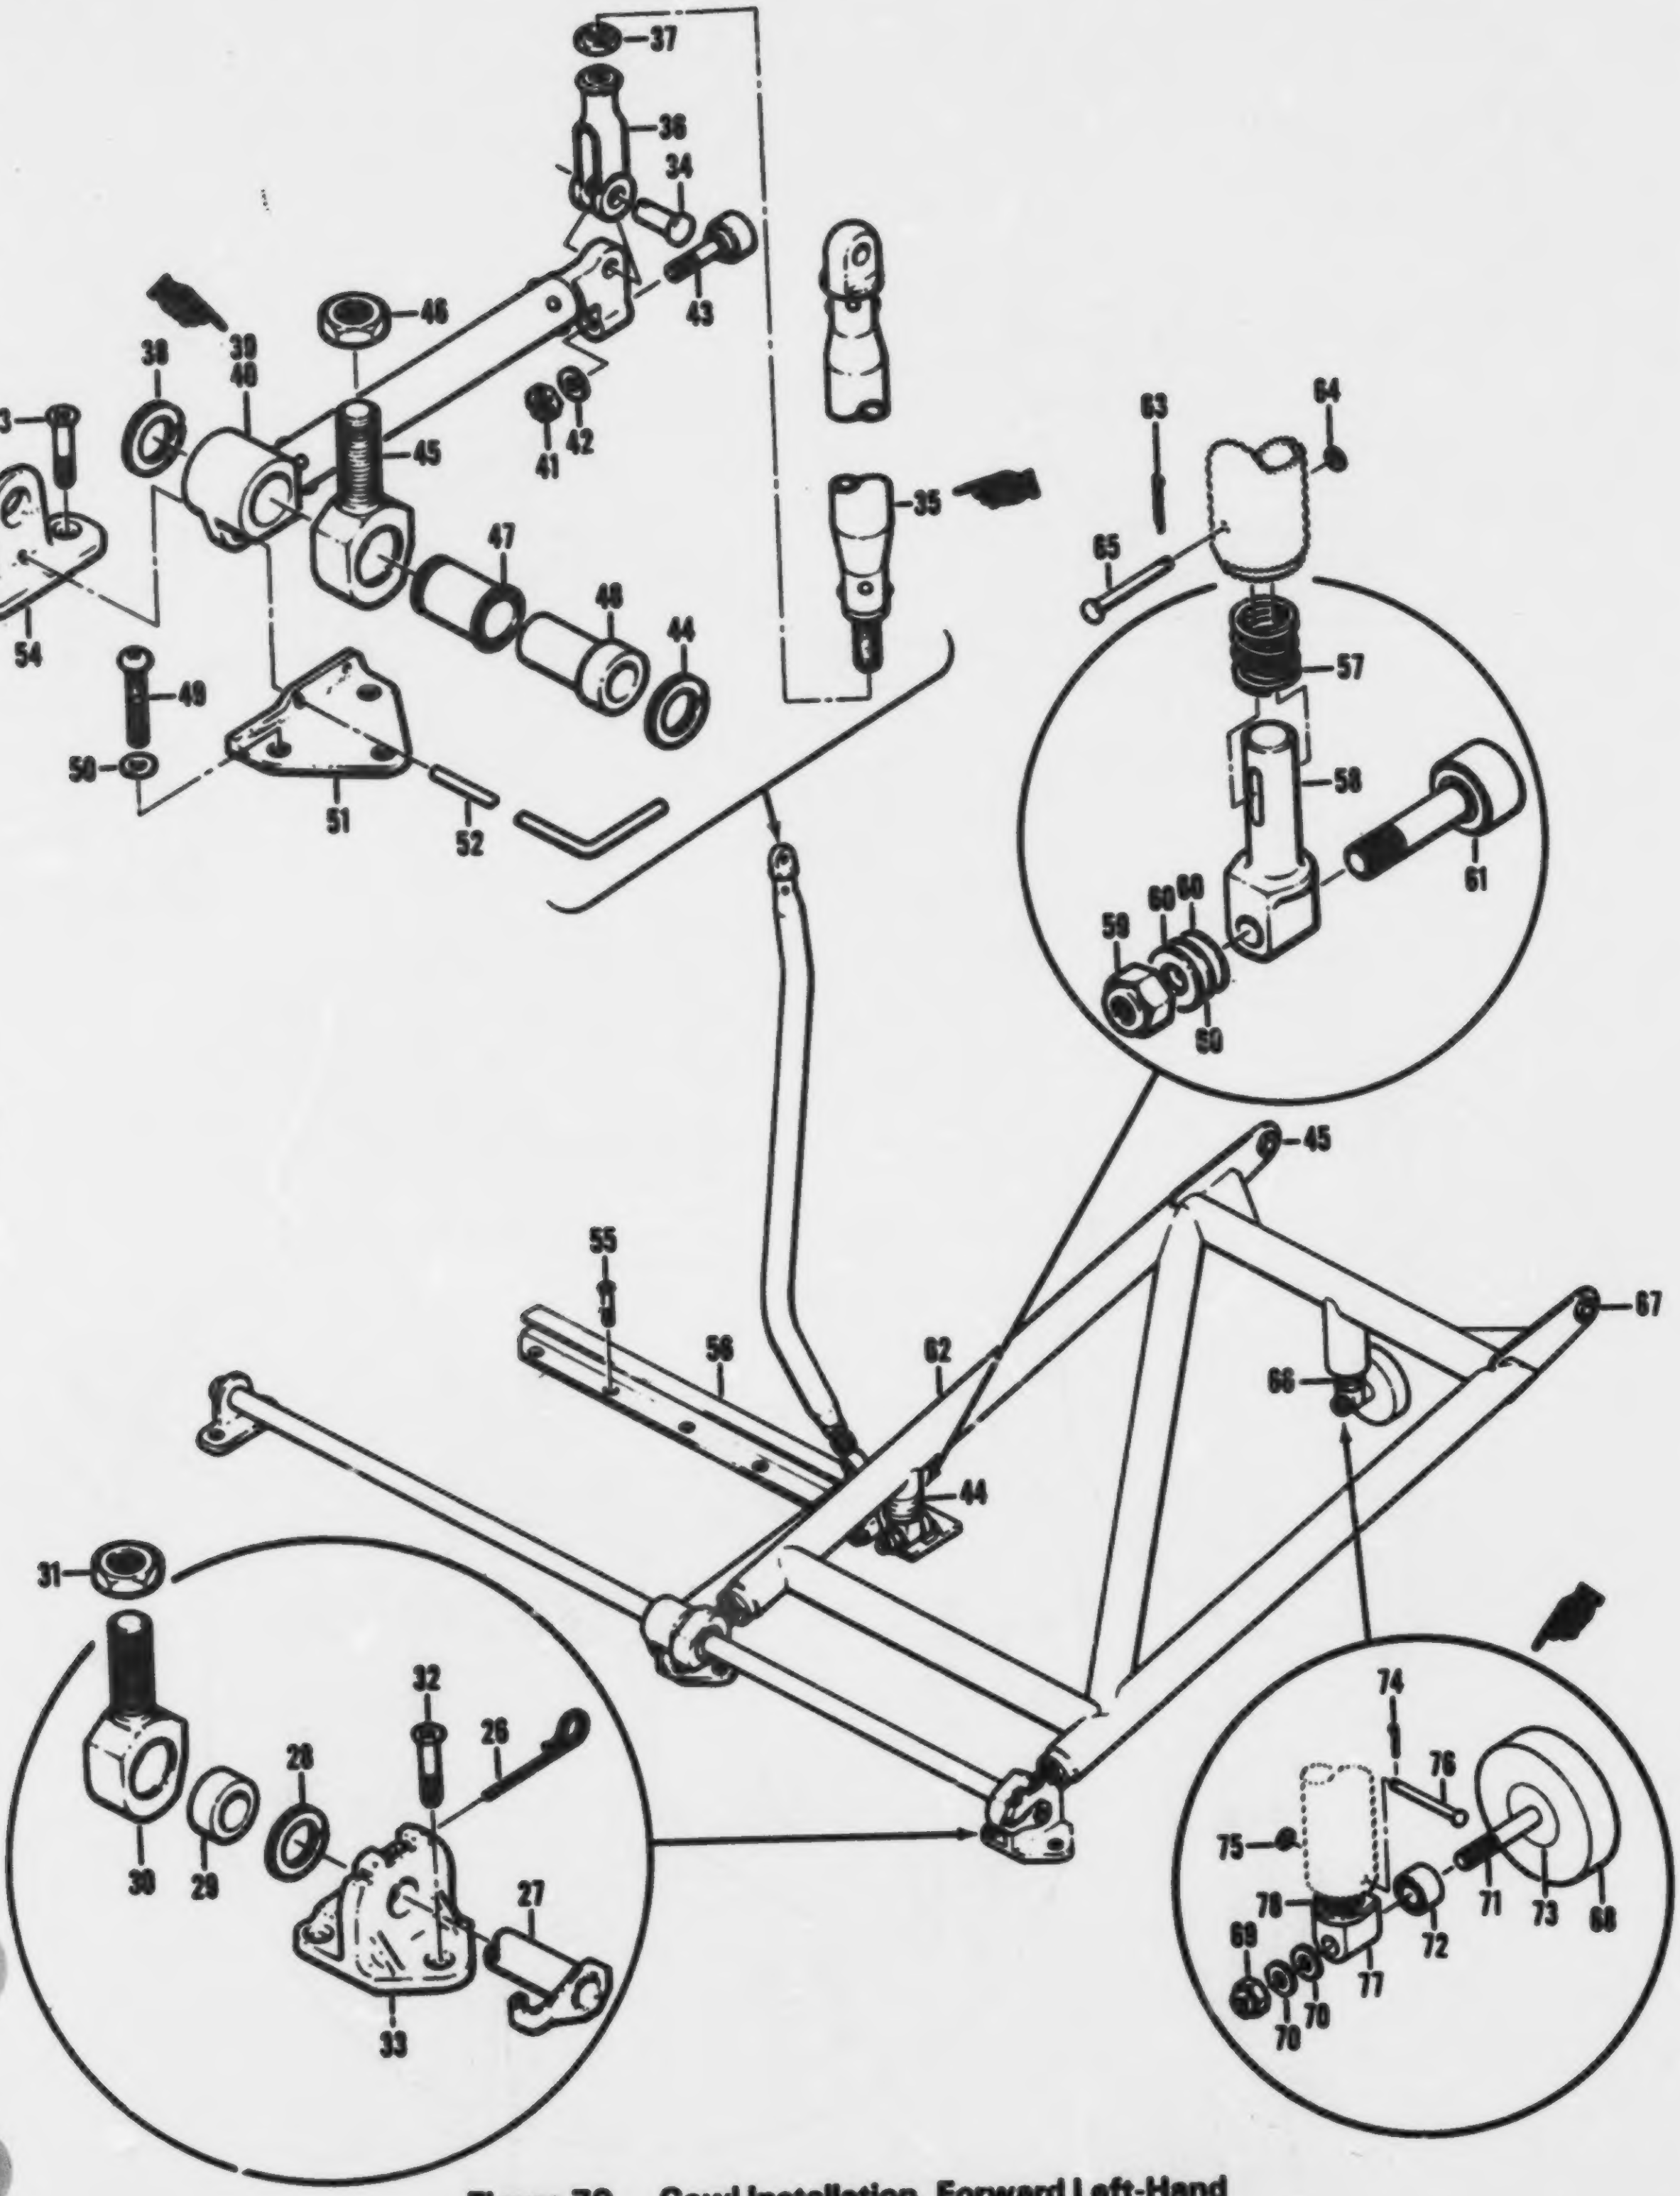
37
36
34
43
46
39
40
38
53
45
41
42
35
63
64
65
47
48
54
44
49
57
50
51
52
58
61
59
60
60
60
60
45
55
67
56
62
66
44
31
74
32
26
76
28
75
30
29
27
71
73
68
78
72
69
77
70
70
70
33

Figure 79. Cowl Installation, Forward Left-Hand
(Sheet 2 of 3)

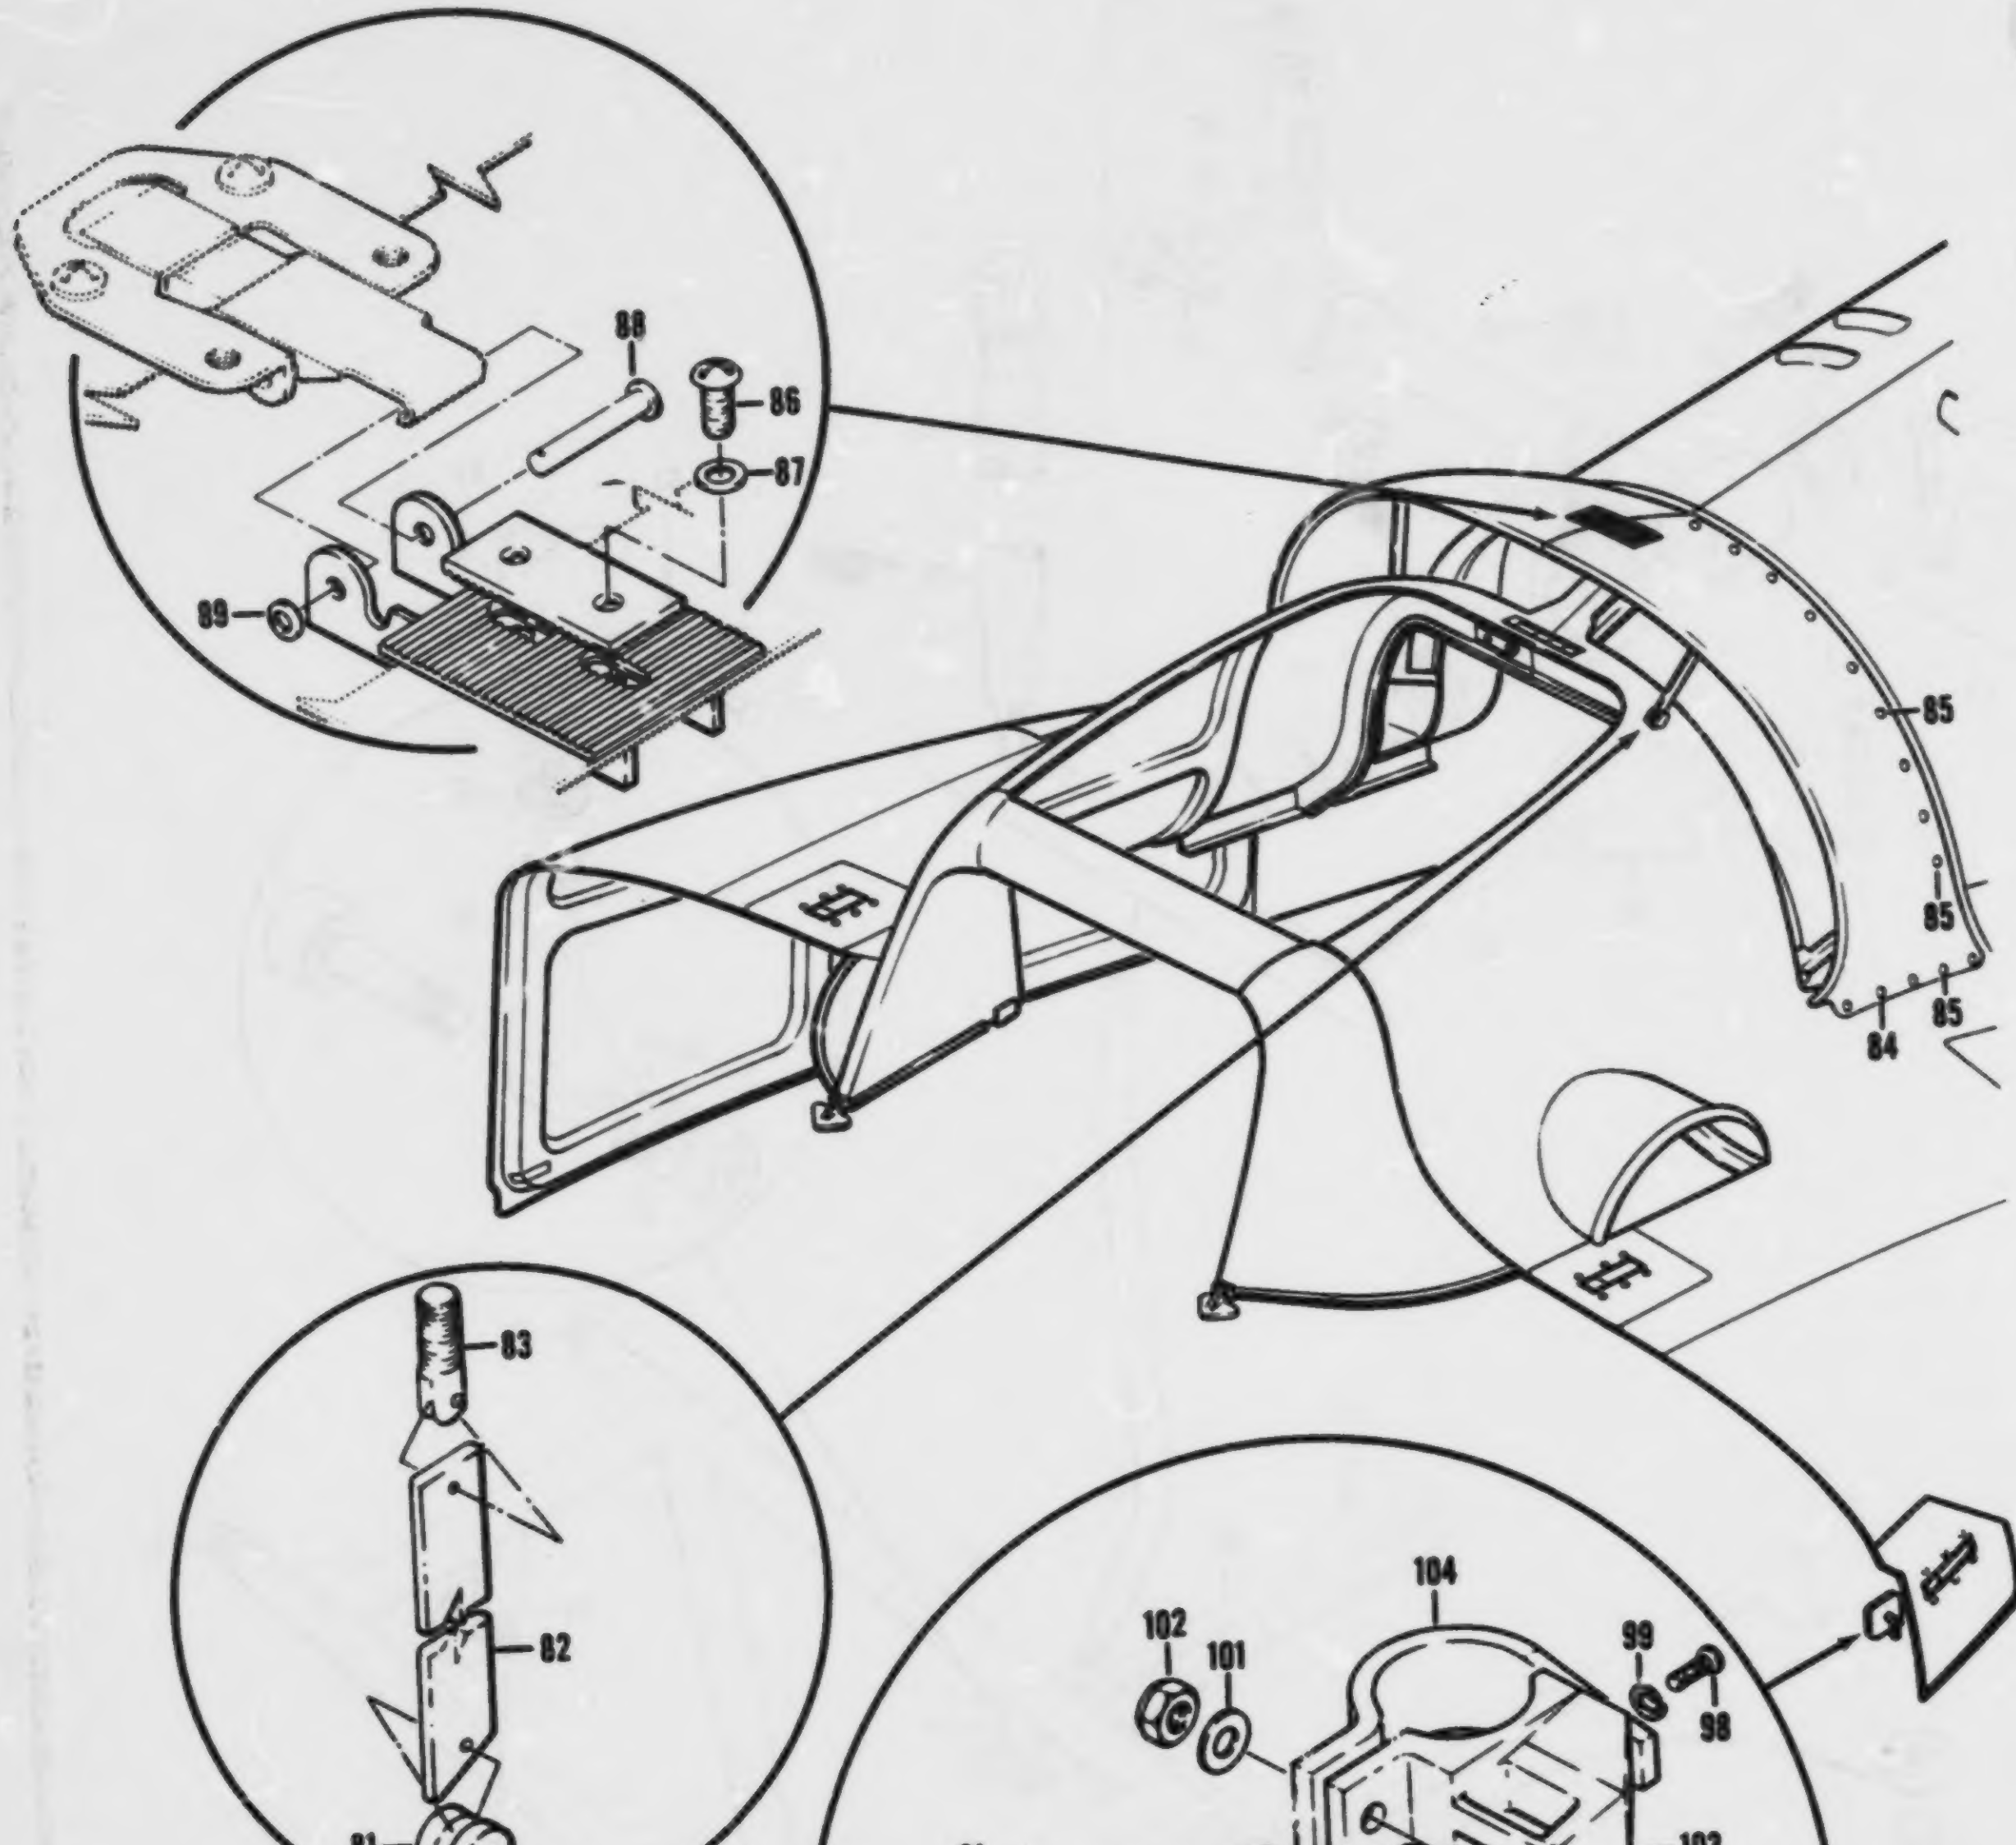
88
86
87
89
85
85
85
84
83
82
81
104
102
101
99
98
103
90
91
97
96
100
95
92
94
93

Figure 79. Cowl Installation, Forward Left-Hand (Sheet 3 of 3)

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
79		XCFZZ		97499	204-062-840-1	COWL INSTL,FORWARD LEFT-HAND USBL EFF 64-14101 & SUBSEQUENT SEE FIG.95 FOR NHA	UHM	EA	1
79	1	PAOZZ	5315-00-234-1856	96906	MS24665-155	.PIN,COTTER	UHM	EA	2
79	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHM	EA	6
79	3	PBOZZ	5315-00-811-1233	96906	MS20392-2C25	.PIN,STRAIGHT, HEADED	UHM	EA	2
79	4	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER	UHM	EA	1
79	5	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHM	EA	3
79	6	PBOZZ	5315-00-081-7046	96906	MS20392-3C89	.PIN,STRAIGHT, HEADED	UHM	EA	1
79	7	PAOZZ	5365-00-819-7012	80205	NAS43DD4-38	.SPACER,SLEEVE	UHM	EA	1
79	8	PAOZZ	5365-00-633-5554	80205	NAS43DD4-28	.SPACER,SLEEVE	UHM	EA	1
79	9	PAOZZ	5365-00-594-6058	80205	NAS43DD4-87	.SPACER,SLEEVE	UHM	EA	1
79	10	PAOOD	1560-00-151-4081	97499	204-062-881-7	.COWLING -LH	UHM	EA	1
79	11	XAOFF		97499	204-062-881-5	..COWL ASSEMBLY, TRANSMISSION	UHM	EA	1
79	12	PAOZZ	3120-00-670-5325	97499	22-005811-11-14	...BUSHING,SLEEVE	UHM	EA	4
79	13	PAOZZ	5305-00-889-2994	96906	MS24694S3	...SCREW,MACHINE	UHM	EA	6
79	14	PAOZZ	5340-00-072-8315	83014	H38K613	...LATCH ASSEMBLY	UHM	EA	1
79	15	PAOZZ	5315-00-080-0484	96906	MS20392-2C43	...PIN,STRAIGHT,HEADED	UHM	EA	1
79	16	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT	UHM	EA	6
79	17	PAOZZ	5310-00-183-4406	88044	AN960PD10	...WASHER,FLAT	UHM	EA	2
79	18	PAOZZ	5340-00-931-8343	83014	H40K832	...CATCH,FLUSH	UHM	EA	1
79	19	PAOZZ	5310-00-550-5009	96906	MS15795-704	...WASHER,FLAT	UHM	EA	5
79	20	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHM	EA	5
79	21	PAOZZ	5325-00-285-6297	88044	AN227-1086	...STUD,SNAP FASTEN	UHM	EA	5
79	22	PAOZZ	5305-00-281-8527	88044	AN525-832R8	...SCREW,MACHINE	UHM	EA	6
79	23	PAOZZ	5340-00-989-0750	83014	H38K847	...CATCH,FLUSH	UHM	EA	1
79	24	PAOZZ	5305-00-281-8526	88044	AN525-832R6	...SCREW,MACHINE	UHM	EA	12
79	25	PAOZZ	5340-00-072-8316	83014	H38K614	...LATCH ASSEMBLY	UHM	EA	2
79	26	PAOZZ	5315-00-209-6953	88044	AN415-1-2	.PIN,LOCK	UHM	EA	1
79	27	PAOZZ	1560-00-760-9633	97499	204-062-846-1	.TUBE ASSEMBLY,FUSEL	UHM	EA	1
79	28	XOOZZ		80756	RR87	.RING,RETAINING	UHM	EA	1
79	29	PAOZZ	5970-00-670-8066	97499	204-060-848-3	.INSULATOR,BUSHING	UHM	EA	1
79	30	PAOZZ	5340-00-961-8399	97499	204-060-847-5	.CONNECTOR,ROD END	UHM	EA	1
79	31	PAOZZ	5310-00-282-7832	96906	MS24400D5	.NUT,PLAIN,HEXAGON	UHM	EA	1
79	32	PAOZZ	5305-00-719-5401	96906	MS24694S49	.SCREW,MACHINE	UHM	EA	3
79	33	PAOZZ	1560-00-757-8756	97499	204-060-844-3	.BRACKET,COWL HINGE	UHM	EA	1
79	34	PBOZZ	5315-00-063-7366	96906	MS20392-3C17	.PIN,STRAIGHT, HEADED	UHM	EA	1
79	35	PAOOO	1560-00-181-5610	97499	204-062-880-7	.BRACE,COWL,STABILIZ	UHM	EA	1
79	36	PAOZZ	5340-00-881-0020	96906	MS27975-1	..CLEVIS,ROD END U/O PN 204-062-880-1	UHM	EA	1
79	36	PAOZZ	5340-00-205-5766	80205	NAS170-5	..CLEVIS,ROD END U/O PN 204-062-880-7	UHM	EA	1
79	37	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON	UHM	EA	1
79	38	XOOZZ		80756	RS81	.RING,RETAINING	UHM	EA	1
79	39	PAOOO	1560-00-867-0513	97499	204-062-850-1	.ARM ASSEMBLY,STABIL	UHM	EA	1
79	40	XAOZZ		97499	204-062-851-1	..FITTING	UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
79	41	PAOZZ	5310-00-285-2177	88044	AN320-3	..NUT,PLAIN,SLOTTED HEXAGON............................	UHM	EA	1
79	42	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..	UHM	EA	1
79	43	PAOZZ	3110-00-806-7443	60380	RS1C11	..CAM FOLLOWER,NEEDLE....................................	UHM	EA	1
79	44	XDOZZ		80756	RR87	.RING,RETAINING..	UHM	EA	1
79	45	PAOZZ	5340-00-961-8399	97499	204-060-947-5	.CONNECTOR,ROD END.....................................	UHM	EA	1
79	46	PAOZZ	5310-00-282-7832	96906	MS2440005	.NUT,PLAIN,HEXAGON.......................................	UHM	EA	1
79	47	PAOZZ	3120-00-670-5308	97499	204-060-860-1	.BUSHING,SLEEVE..	UHM	EA	1
79	48	PAOZZ	5970-00-670-8065	97499	204-060-848-1	.INSULATOR,BUSHIN..	UHM	EA	1
79	49	PAOZZ	5305-00-995-3442	96906	MS35207-268	.SCREW,MACHINE...	UHM	EA	3
79	50	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT...	UHM	EA	3
79	51	PAOZZ	1560-00-867-0512	97499	204-062-876-1	.SUPPORT,STRUCTURAL FORWARD COWL.......................	UHM	EA	1
79	52	PAOZZ	1560-00-869-8983	97499	204-062-877-1	.PIN,ARM STABILIZING FORWARD COWL......................	UHM	EA	1
79	53	PAOZZ	5305-00-705-2388	96906	MS24694S60	.SCREW,MACHINE...	UHM	EA	3
79	54	PAOZZ	1560-00-793-8015	97499	204-062-845-1	.SUPPORT,STRUCTURAL FORWARD COWL.......................	UHM	EA	1
79	55	PAOZZ	5305-00-719-5401	96906	MS24694S49	.SCREW,MACHINE...	UHM	EA	9
79	56	PAOZZ	1560-00-793-6743	97499	204-062-854-1	.TRACK ASSEMBLY, FORWARD COWL..........................	UHM	EA	1
79	57	PAOZZ	5360-00-075-9325	97499	204-061-821-1	.SPRING,HELICAL,COMP.....................................	UHM	EA	2
79	58	PAOZZ	1560-00-793-6264	97499	204-061-820-3	.SUPPORT,ROLLER,COWL.....................................	UHM	EA	1
79	59	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.................	UHM	EA	1
79	60	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT...	UHM	EA	3
79	61	PAOZZ	3110-00-806-7443	60380	RS1C11	.CAM FOLLOWER,NEEDLE.....................................	UHM	EA	1
79	62	PAOOO	1560-00-796-1250	97499	204-062-843-1	.FRAME ASSEMBLY, FORWARD.................................	UHM	EA	1
79	63	PAOZZ	5315-00-234-1856	96906	MS24665-155	..PIN,COTTER...	UHM	EA	1
79	64	PAOZZ	5310-00-550-5009	96906	MS15795-704	..WASHER,FLAT..	UHM	EA	1
79	65	PAOZZ	5315-00-080-1942	96906	MS20392-1C33	..PIN,STRAIGHT, HEADED...................................	UHM	EA	1
79	66	XDOZZ		97499	21-010B15-5-32	..BUSHING,SLEEVE...	UHM	EA	1
79	66	PAOZZ	3120-00-689-8251	97499	21-010B15-5-16	..BUSHING,SLEEVE...	UHM	EA	2
79	67	PAOZZ	3120-00-670-5311	97499	21-006R5-5-10	..BUSHING,SLEEVE...	UHM	EA	2
79	68	PAOOO	1560-00-760-9635	06004	WD6009	.WHEEL,COWL,FORWARD......................................	UHM	EA	1
79	69	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.................	UHM	EA	1
79	70	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT...	UHM	EA	2
79	71	PAOZZ	5306-00-799-5733	97499	204-062-827-1	.BOLT,SHOULDER...	UHM	EA	1
79	72	PAOZZ	3120-00-517-8477	70901	AA304-35	.BEARING,SLEEVE..	UHM	EA	1
79	73	PAOZZ	3120-00-997-7019	70417	T600-1	.BEARING,WASHER,THRU.....................................	UHM	EA	1
79	74	PAOZZ	5315-00-234-1856	96906	MS24665-155	.PIN,COTTER..	UHM	EA	1
79	75	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT...	UHM	EA	1
79	76	PAOZZ	5315-00-080-1942	96906	MS20392-1C33	.PIN,STRAIGHT, HEADED....................................	UHM	EA	1
79	77	PAOZZ	1560-00-793-6264	97499	204-061-820-3	.SUPPORT,ROLLER,COWL.....................................	UHM	EA	1
79	77	PAOZZ	1560-00-922-8268	97499	204-061-820-5	.SUPPORT,ROLLER,COWL.....................................	UHM	EA	1
79	78	PAOZZ	5360-00-075-9325	97499	204-061-821-1	.SPRING,HELICAL,COMP.....................................	UHM	EA	1
79	81	PAOZZ	5340-00-675-3264	97499	204-060-950-1	.CLEVIS,ROD END..	UHM	EA	1
79	82	PAOZZ	1560-00-675-3263	97499	204-060-941-1	.STRUT,ENGINE AIR IN.....................................	UHM	EA	1
79	83	PAOZZ	5340-00-690-8743	97499	204-060-940-1	.CLEVIS,ROD END..	UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
79	84	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHM	EA	12
79	85	PAOZZ	5325-00-276-4931	88044	AN227-10-10	.STUD,SNAP FASTENER	UHM	EA	1
79	86	PBOZZ	5305-00-054-6670	96906	MS51957-45	..SCREW,MACHINE	UHM	EA	2
79	87	PAOZZ	5310-00-184-8966	88044	AN960PD8	..WASHER,FLAT	UHM	EA	2
79	88	PAOZZ	5315-00-081-7027	96906	MS20392-1C27	..PIN,STRAIGHT,HEADED	UHM	EA	1
79	89	PAOZZ	5310-00-550-5009	96906	MS15795-704	..WASHER,FLAT	UHM	EA	1
79	90	PAOZZ	5315-00-935-1234	96906	MS9245-22	.PIN,COTTER	UHM	EA	1
79	91	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHM	EA	1
79	92	PAOZZ	1560-00-701-0542	97499	204-060-839-1	.HANDLE,COWL LATCH	UHM	EA	1
79	93	PAOZZ	5310-00-176-8131	88044	AN340-5	.NUT,PLAIN,HEXAGO	UHM	EA	4
79	94	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT	UHM	EA	4
79	95	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK	UHM	EA	4
79	96	PBOZZ	5305-00-174-0608	88044	AN500A5-8	.SCREW, MACHINE	UHM	EA	4
79	97	PAOZZ	5325-00-391-7670	80477	AR26-2	.CATCH ASSEMBLY	UHM	EA	1
79	98	PAOZZ	5305-00-145-7011	88044	AN503-8-8	.SCREW,MACHINE	UHM	EA	1
79	99	PAOZZ	5310-00-045-3299	96906	MS35338-42	.WASHER,LOCK	UHM	EA	1
79	100	PAOZZ	5306-00-182-2058	88044	AN3H5A	.BOLT,MACHINE	UHM	EA	1
79	101	PAOZZ	5306-00-182-2058	88044	AN3H5A	.BOLT,MACHINE	UHM	EA	1
79	102	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHM	EA	1
79	103	PAOZZ	1560-00-793-6731	97499	204-062-842-1	.CLAMP,COWL HALF FORWARD	UHM	EA	1
79	104	PAOZZ	1560-00-675-3246	97499	204-060-829-3	.CLAMP,COWL	UHM	EA	1

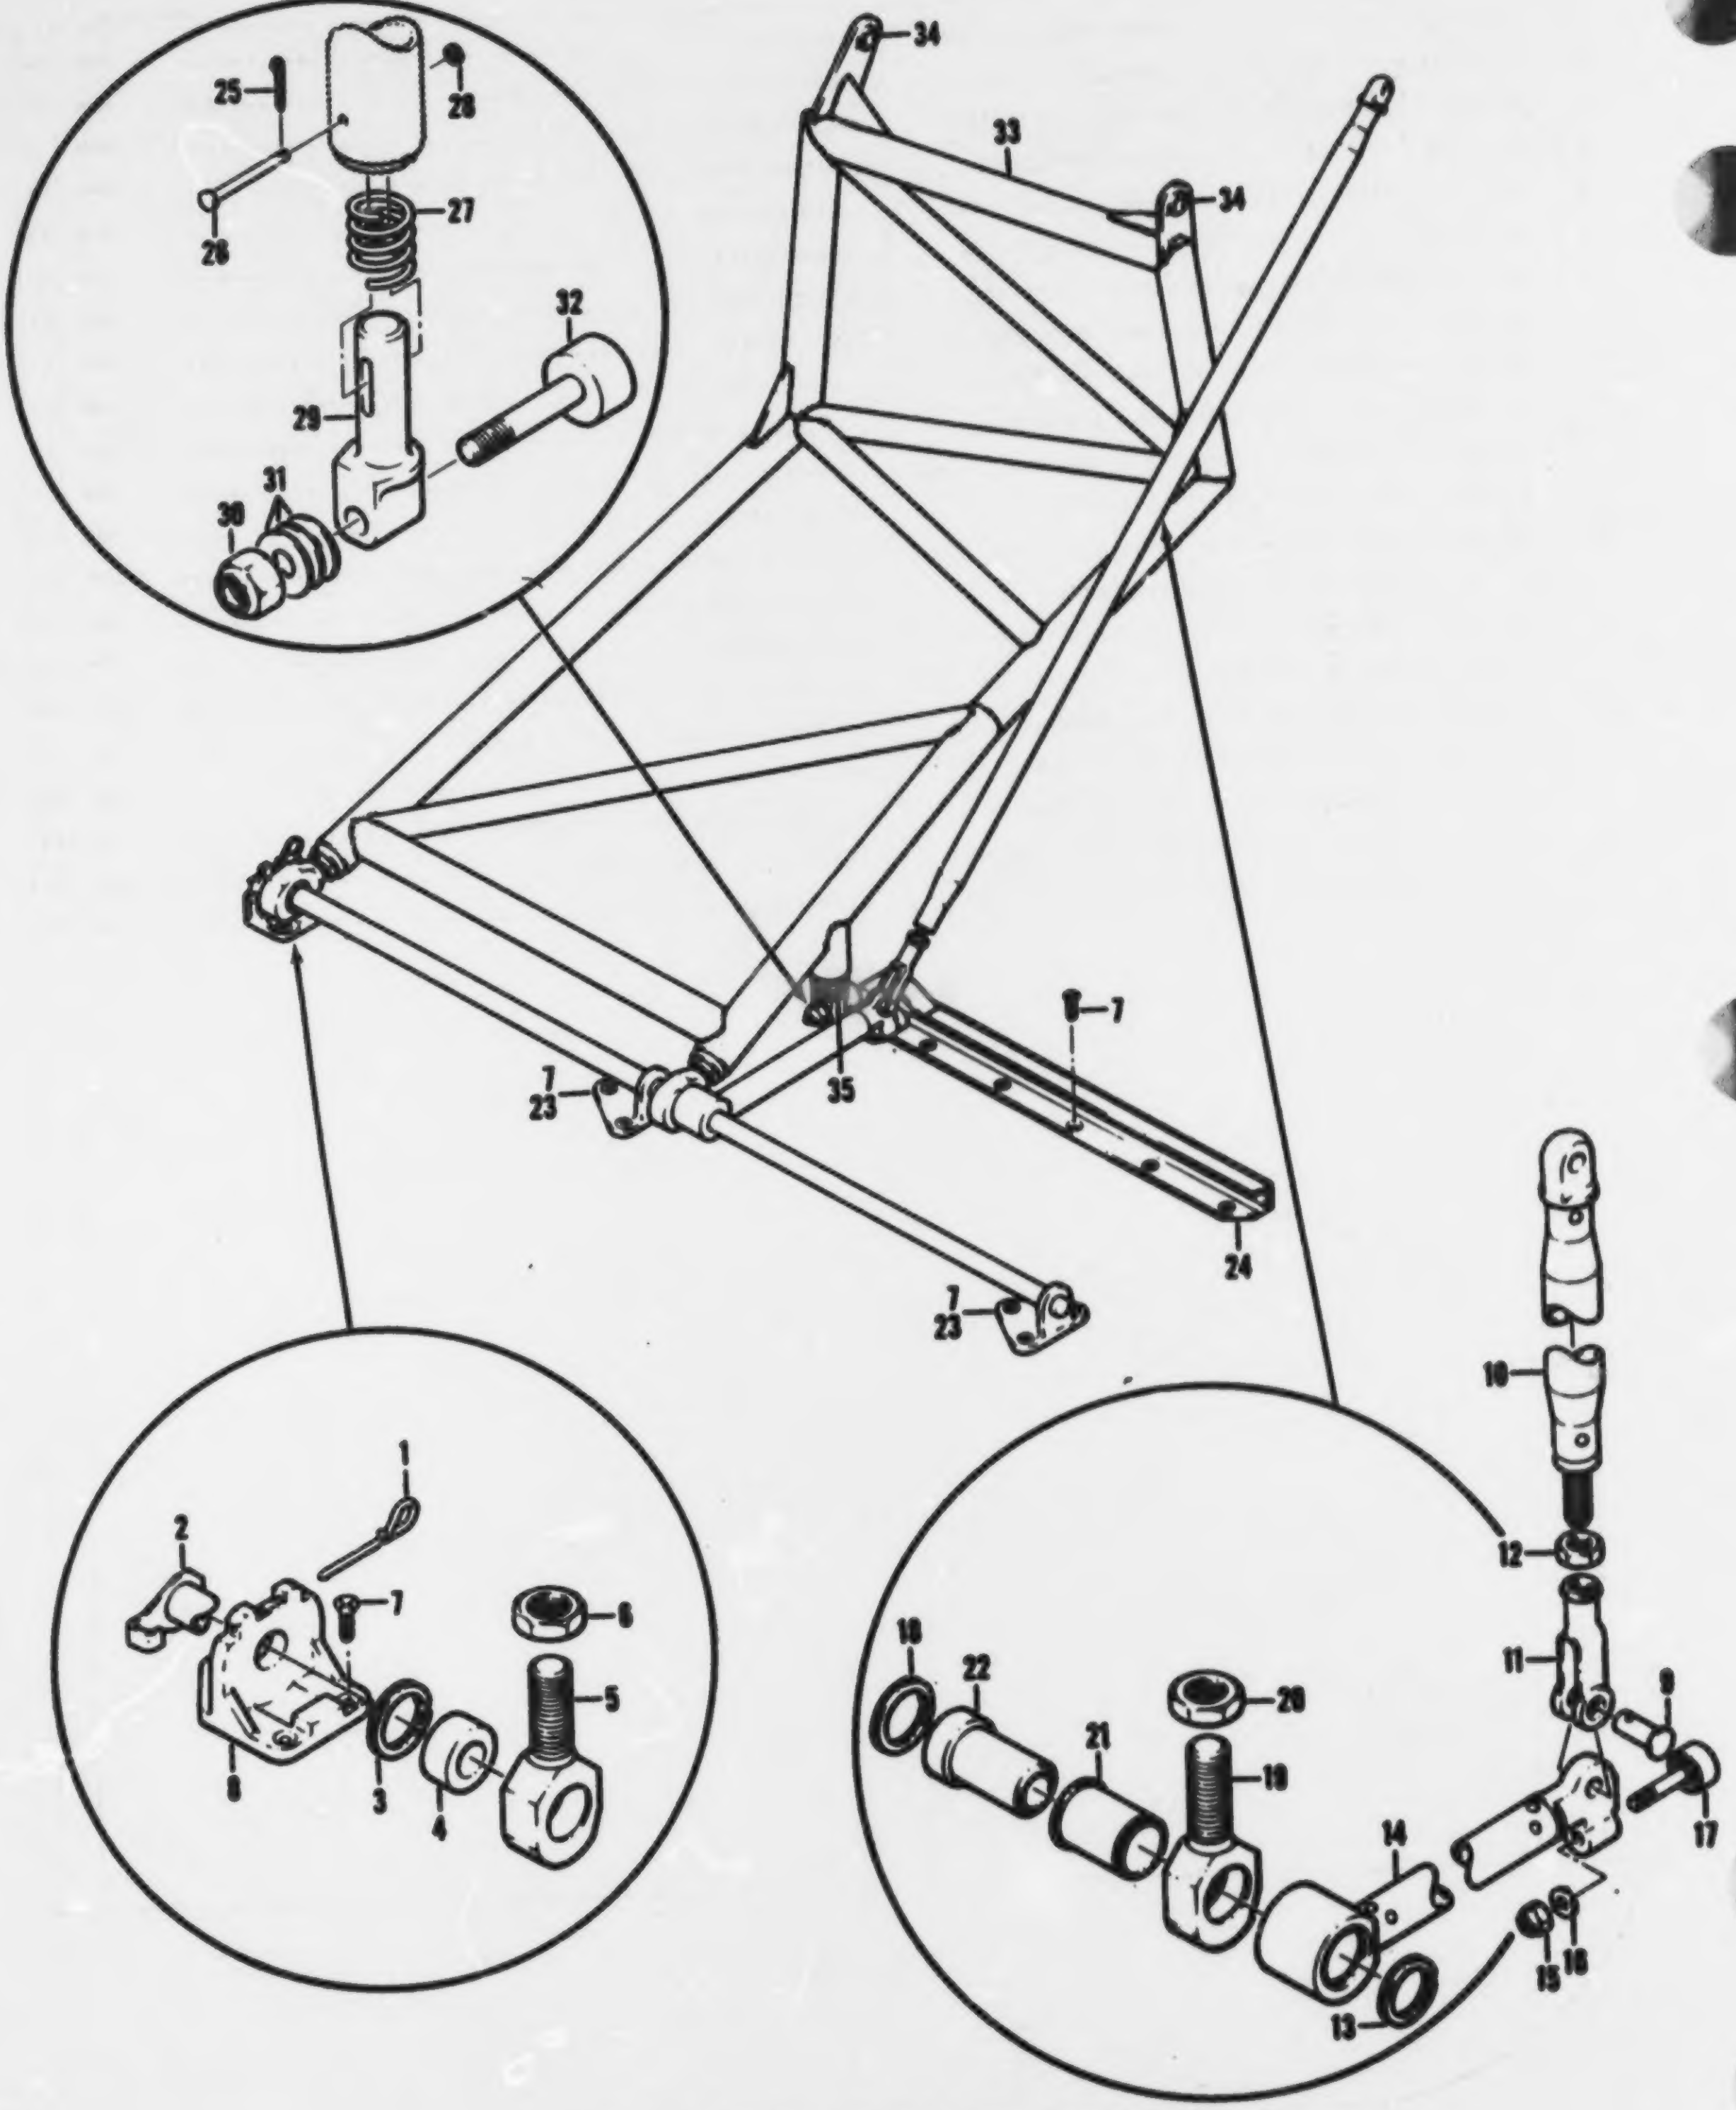
34
25
28
33
34
27
26
32
29
31
30
7
7
23
35
24
7
23
10
1
2
7
6
5
8
3
4
12
18
22
20
11
9
21
19
14
17
15
16
13

Figure 80. Cowl Installation, Forward Right-Hand (Sheet 1 of 2)

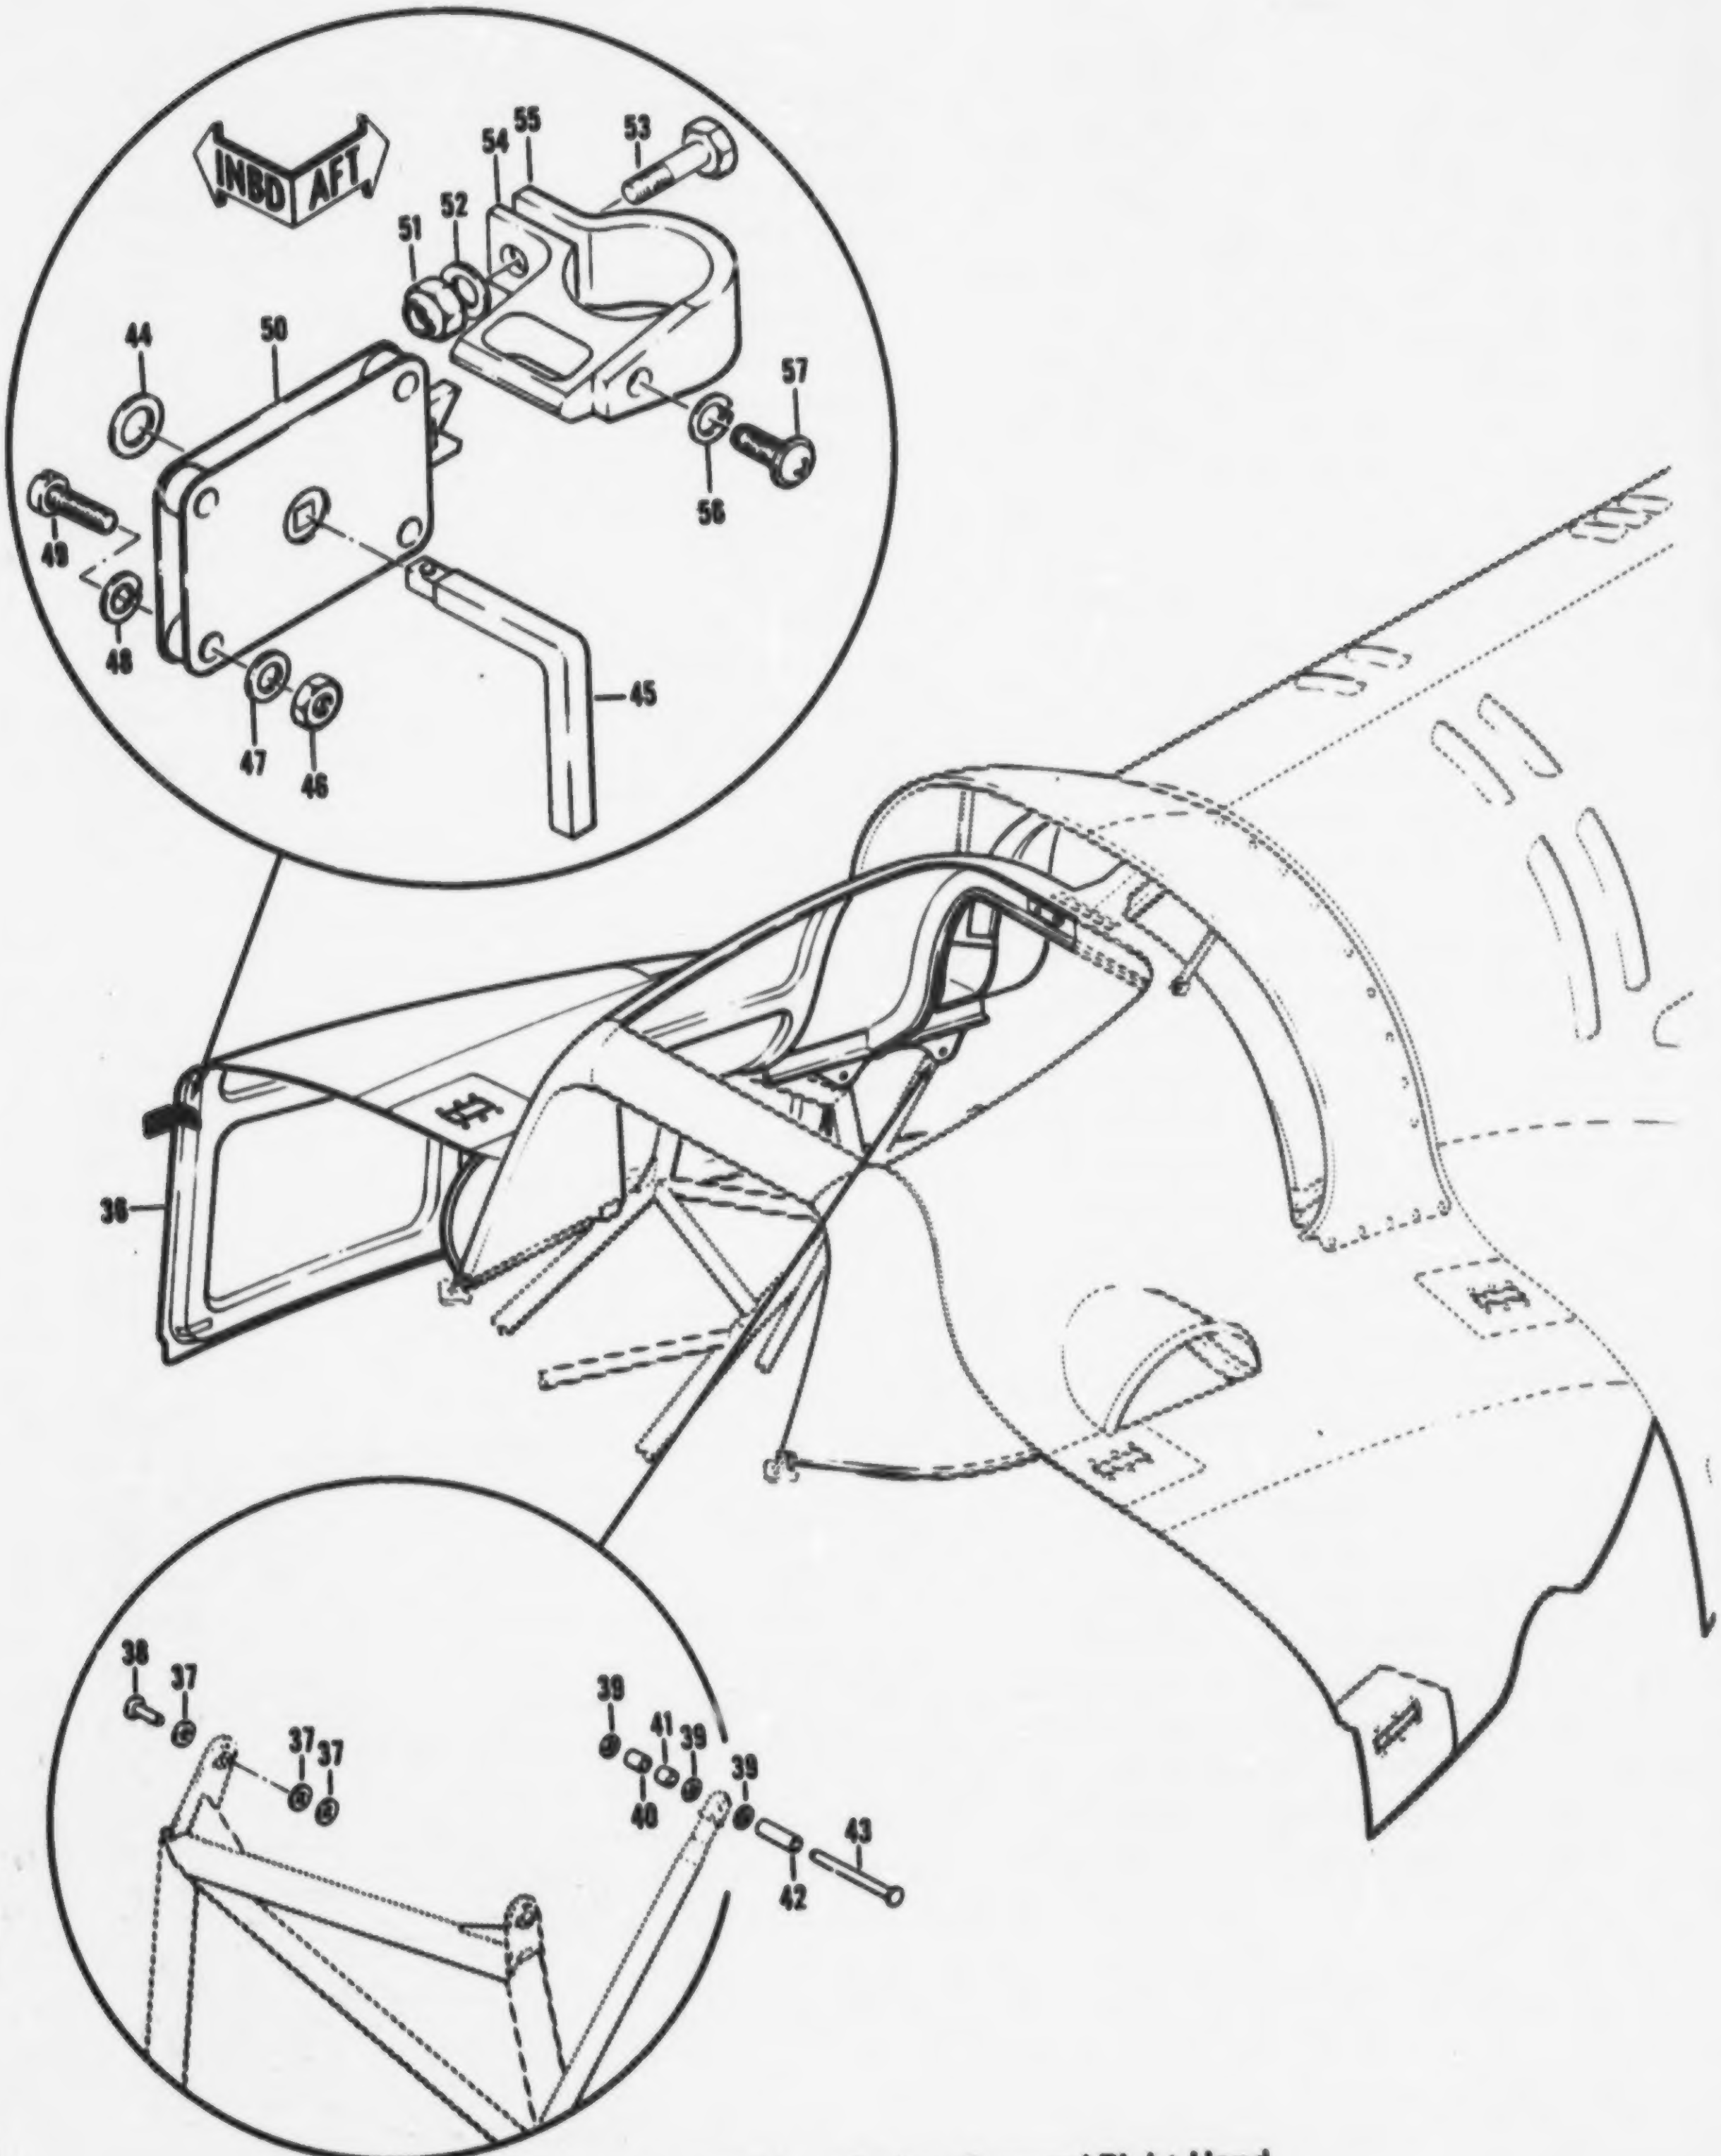
INBD
AFT
55
54
53
52
51
50
44
57
56
49
48
47
46
45
36
38
37
37
37
39
41
39
39
40
43
42

Figure 80. Cowl Installation, Forward Right-Hand (Sheet 2 of 2)

SECTION II

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME			
80		XCFZZ		97499	204-062-840-2	COWL INSTL,FORWARD RIGHT-HAND USBL EFF 64-14101 & SUBSEQUENT SEE FIG.95 FOR NHA..	UHM	EA	1
80	1	PAOZZ	5315-00-209-6953	88044	AN415-1-2	.PIN,LOCK..	UHM	EA	1
80	2	PAOZZ	1560-00-872-7866	97499	204-061-818-1	.TUBE ASSEMBLY,HINGE.......................................	UHM	EA	1
80	3	XOOZZ		80756	RR87	.RING,RETAINING..	UHM	EA	1
80	4	PAOZZ	5970-00-670-8066	97499	204-060-848-3	.INSULATOR,BUSHING...	UHM	EA	1
80	5	PAOZZ	5340-00-961-8399	97499	204-060-847-5	.CONNECTOR,ROD END...	UHM	EA	1
80	6	PAOZZ	5310-00-282-7832	96906	MS24400D5	.NUT,PLAIN,HEXAGON...	UHM	EA	1
80	7	PAOZZ	5305-00-719-5401	96906	MS24694S49	.SCREW,MACHINE...	UHM	EA	20
80	8	PAOZZ	1560-00-758-3636	97499	204-060-893-1	.BRACKET,COWL HINGE..	UHM	EA	1
80	9	PBOZZ	5315-00-063-7366	96906	MS20392-3C17	.PIN,STRAIGHT, HEADED......................................	UHM	EA	1
80	10	PAOOO	3040-00-181-5606	97499	204-060-855-9	.CONNECTING LINK,RIG.......................................	UHM	EA	1
80	11	PAOZZ	5340-00-881-0020	96906	MS27975-1	..CLEVIS,ROD END...	UHM	EA	1
80	11	PAOZZ	5340-00-205-5766	80205	NAS170-5	..CLEVIS,ROD END...	UHM	EA	1
80	12	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON..	UHM	EA	1
80	13	XOOZZ		80756	RS91	.RING,RETAINING..	UHM	EA	1
80	14	PAOZZ	1560-00-675-3251	97499	204-060-850-5	.ARM ASSEMBLY,COWL...	UHM	EA	1
80	15	PAOZZ	5310-00-285-2177	88044	AN320-3	..NUT,PLAIN,SLOTTED HEXAGON................................	UHM	EA	1
80	16	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT..	UHM	EA	1
80	17	PAOZZ	3110-00-806-7443	60380	RS1C11	..CAM FOLLOWER,NEEDLE......................................	UHM	EA	1
80	18	XOOZZ		80756	RR87	.RING,RETAINING..	UHM	EA	1
80	19	PAOZZ	5340-00-961-8399	97499	204-060-847-5	.CONNECTOR,ROD END...	UHM	EA	1
80	20	PAOZZ	5310-00-282-7832	96906	MS24400D5	.NUT,PLAIN,HEXAGON...	UHM	EA	1
80	21	PAOZZ	3120-00-670-5308	97499	204-060-860-1	.BUSHING,SLEEVE..	UHM	EA	1
80	22	PAOZZ	5970-00-670-8065	97499	204-060-848-1	.INSULATOR,BUSHIN..	UHM	EA	1
80	23	PAOZZ	1560-00-796-4229	97499	204-060-845-3	.BRACKET,COWL..	UHM	EA	2
80	24	PAOZZ	1560-00-072-8323	97499	204-061-822-2	.TRACK ASSEMBLY,ROLL FORWARD COWL..........................	UHM	EA	1
80	25	PAOZZ	5315-00-234-1856	96906	MS24665-155	.PIN,COTTER..	UHM	EA	1
80	26	PAOZZ	5315-00-080-1942	96906	MS20392-1C33	.PIN,STRAIGHT, HEADED......................................	UHM	EA	1
80	27	PAOZZ	5360-00-075-9325	97499	204-061-821-1	.SPRING,HELICAL,COMP.......................................	UHM	EA	1
80	28	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT...	UHM	EA	1
80	29	PAOZZ	1560-00-072-8321	97499	204-061-820-1	.SUPPORT,ROLLER,COWL.......................................	UHM	EA	1
80	30	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........................	UHM	EA	1
80	31	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT...	UHM	EA	3
80	32	PAOZZ	3110-00-806-7443	60380	RS1C11	.CAM FOLLOWER,NEEDLE.......................................	UHM	EA	1
80	33	PAOOO	1560-00-014-2036	97499	204-060-843-67	.FRAME ASSEMBLY,COWL.......................................	UHM	EA	1
80	34	PAOZZ	3120-00-689-8251	97499	21-010815-5-16	..BUSHING,SLEEVE...	UHM	EA	1
80	35	PAOZZ	3120-00-670-5311	97499	21-00685-5-10	..BUSHING,SLEEVE...	UHM	EA	1
80	36	PAOOO	1560-00-151-4063	97499	204-060-881-39	.COWLING SEE FIG 78 FOR BREAKDOWN..........................	UHM	EA	1
80	37	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT...	UHM	EA	6
80	38	PBOZZ	5315-00-811-1233	96906	MS20392-2C25	.PIN,STRAIGHT, HEADED......................................	UHM	EA	2
80	39	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT...	UHM	EA	3
80	40	PAOZZ	5365-00-819-7012	80205	NAS43DD4-38	.SPACER,SLEEVE...	UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
80	41	PAOZZ	5365-00-633-5554	80205	NAS43DD4-28	.SPACER,SLEEVE	UHM	EA	1
80	42	PAOZZ	5365-00-594-6058	80205	NAS43DD4-87	.SPACER,SLEEVE	UHM	EA	1
80	43	PBOZZ	5315-00-081-7046	96906	MS20392-3C89	.PIN,STRAIGHT, HEADED	UHM	EA	1
80	44	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHM	EA	1
80	45	PAOZZ	1560-00-701-0542	97499	204-060-839-1	.HANDLE,COWL LATCH	UHM	EA	1
80	46	PAOZZ	5310-00-176-8131	88044	AN340-5	.NUT,PLAIN,HEXAGO	UHM	EA	4
80	47	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT	UHM	EA	4
80	48	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK	UHM	EA	4
80	49	PBOZZ	5305-00-174-0608	88044	AN500A5-8	.SCREW, MACHINE	UHM	EA	4
80	50	PAOZZ	5325-00-391-7670	80477	AR26-2	.CATCH ASSEMBLY	UHM	EA	1
80	51	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHM	EA	1
80	52	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHM	EA	2
80	53	PAOZZ	5306-00-182-2058	88044	AN3H5A	.BOLT,MACHINE	UHM	EA	1
80	54	PAOZZ	1560-00-675-3247	97499	204 060-829-5	.CLAMP,HALF COWL	UHM	EA	1
80	55	PAOZZ	1560-00-675-3246	97499	204-060-829-3	.CLAMP,COWL	UHM	EA	1
80	56	PAOZZ	5310-00-045-3299	96906	MS35338-42	.WASHER,LOCK	UHM	EA	1
80	57	PAOZZ	5305-00-145-7011	88044	AN503-8-8	.SCREW,MACHINE	UHM	EA	1

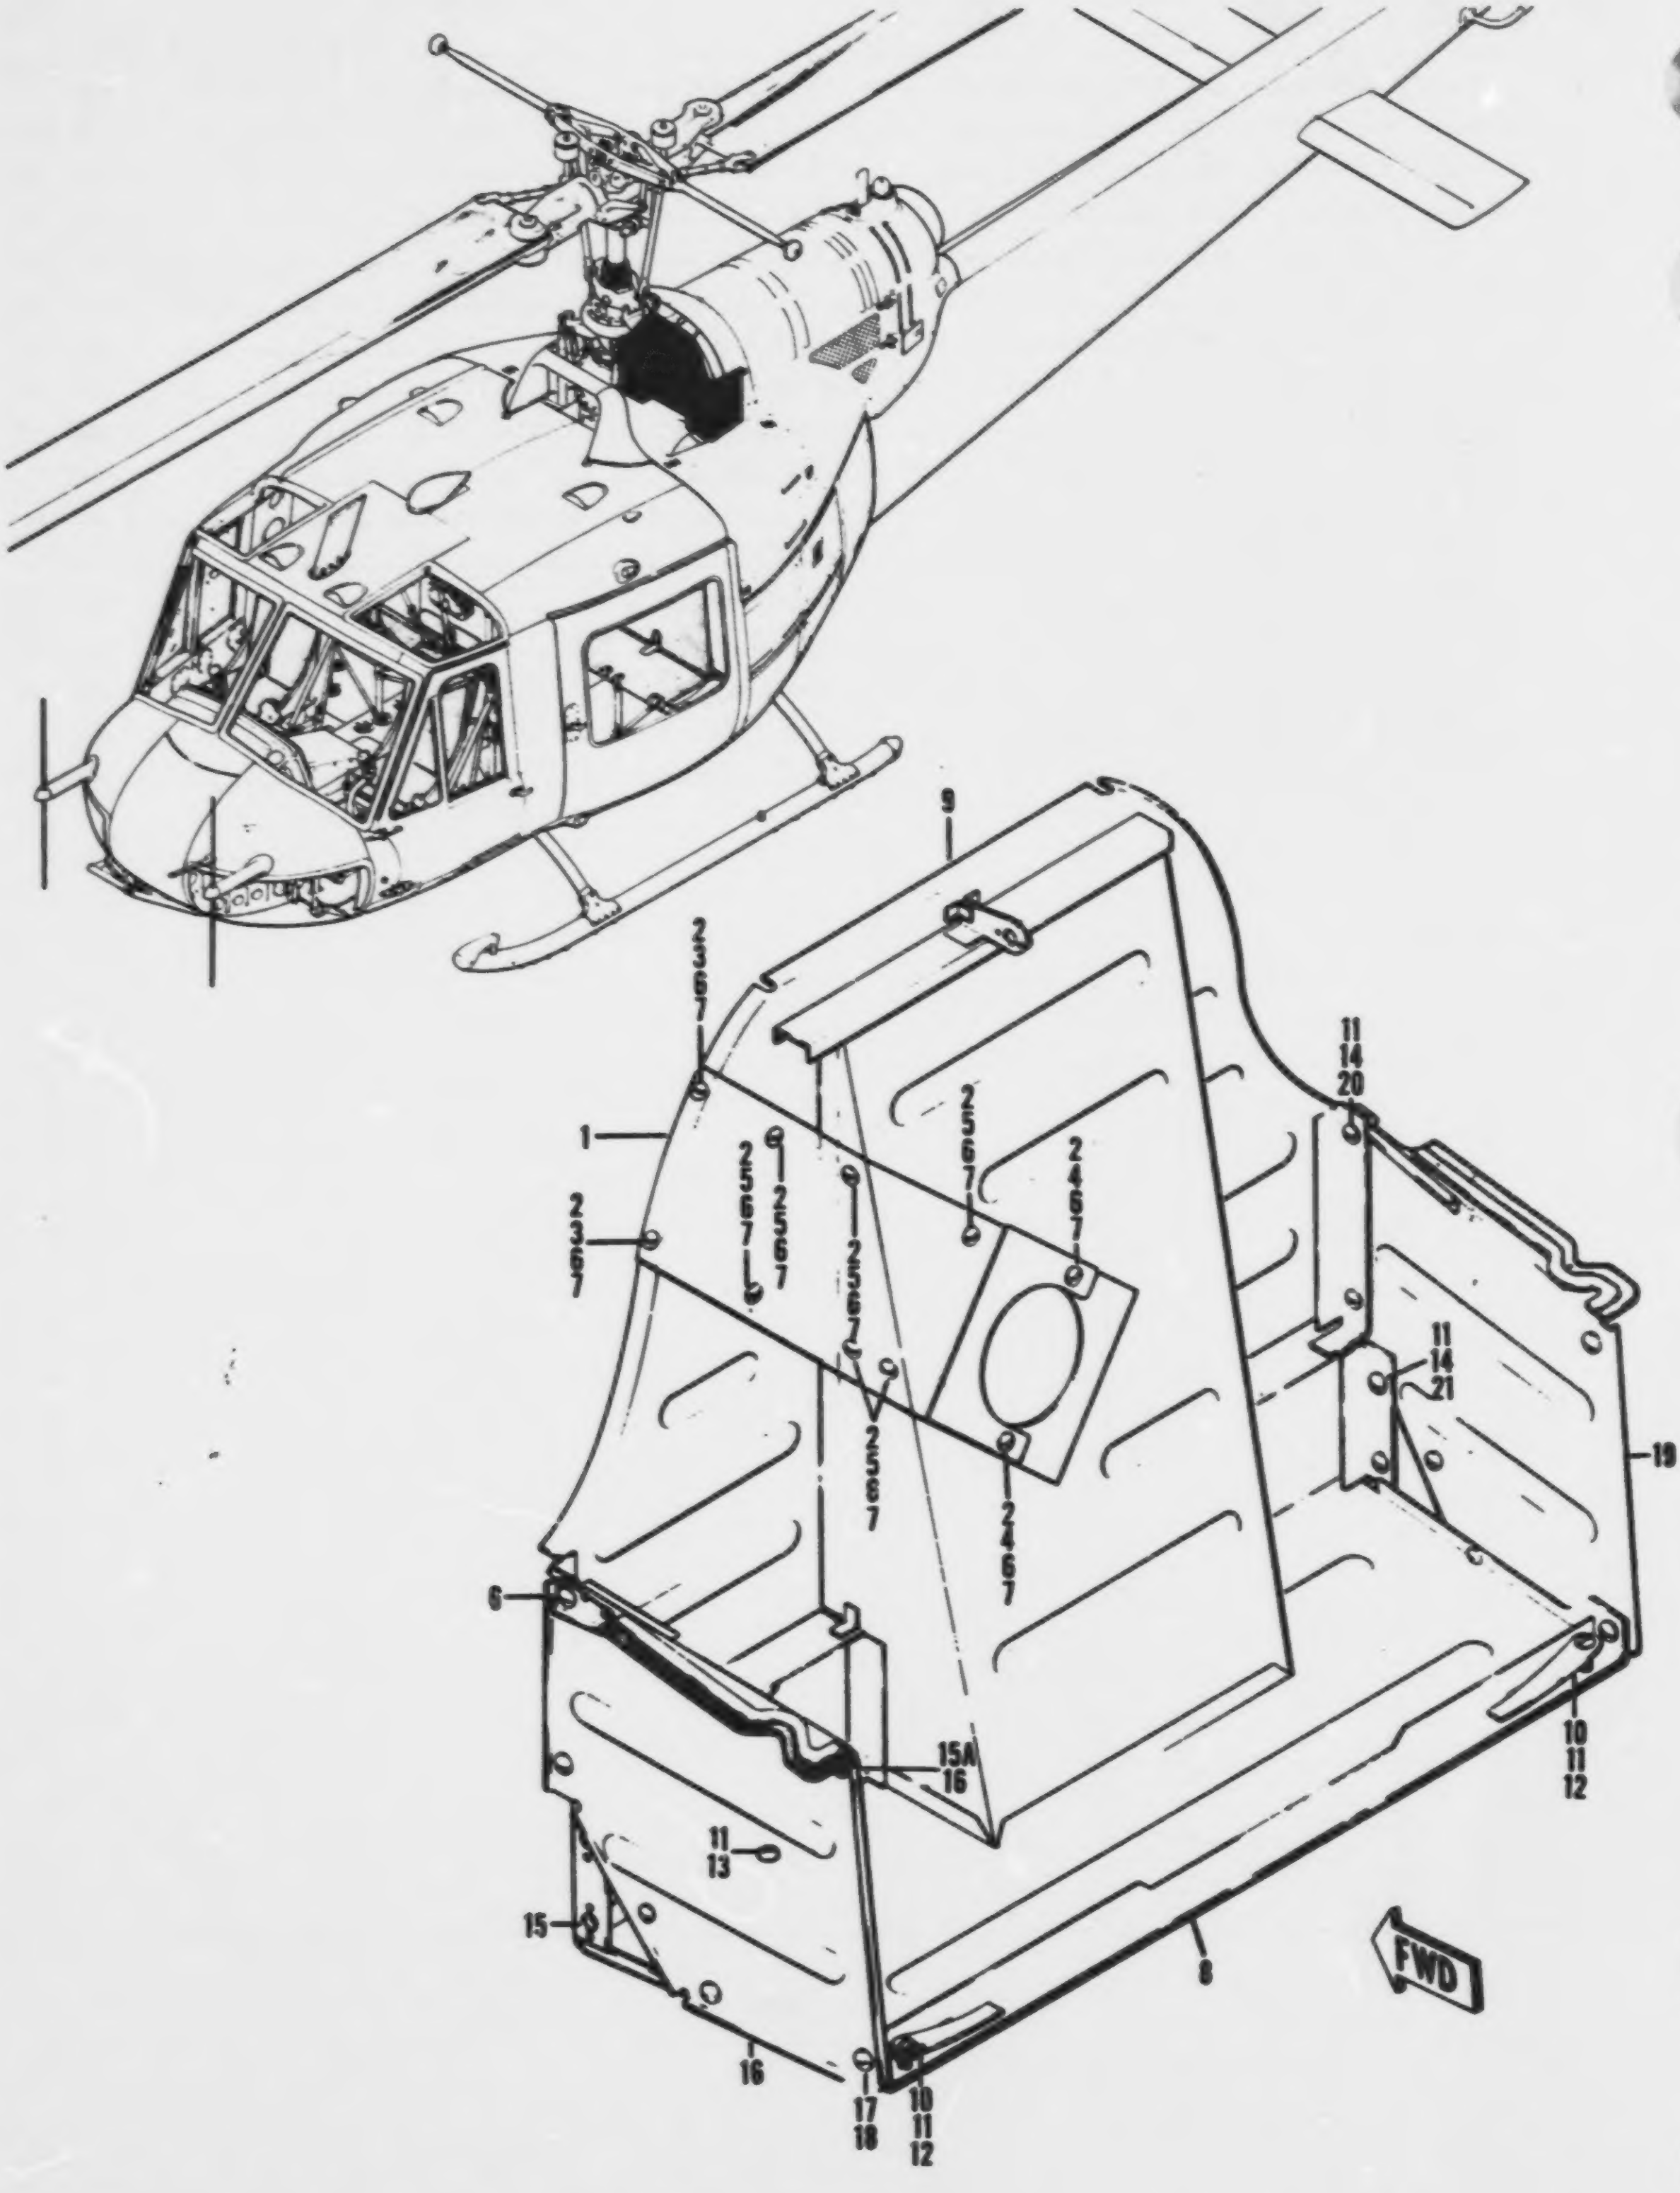
9
2 3 6 7
1
2 3 6 7
2 5 6 7
2 5 6 7
2 5 6 7
2 5 6 7
2 4 6 7
2 5 6 7
2 4 6 7
11 14 20
11 14 21
19
6
15A 16
10 11 12
11 13
15
8
FWD
16
17 18
10 11 12

Figure 81. Baffle Assembly, Engine Air Induction

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
81		PBOOO	1560-00-150-8918	97499	204-060-211-125	BAFFLE ASSEMBLY,IND USE-AFT-CMPL-W MWO 55-1500-219-30/1 USBL EFF 60-3546 THRU 62-12555 SEE FIG.95 FOR NHA...............UHB	EA	1
81	1	PAOZZ	1560-00-738-8361	97499	204-060-211-3	.COVER,ACCESS..UHB	EA	1
81	2	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK..UHB	EA	10
81	3	PAOZZ	5325-00-619-6502	72794	A3 1-2T5	..STUD,TURNLOCK FA...UHB	EA	2
81	4	PAOZZ	5325-00-281-5079	72794	A3 1-2T10	..STUD, TURNLOCK F...UHB	EA	2
81	5	PAOZZ	5325-00-281-5067	72794	A3 1-2T8	..STUD,TURNLOCK FA...UHB	EA	6
81	6	PAOOO	5325-00-298-7027	72794	RF3 1-2	..RECEPTACLE,TURNLOCK FASTENER.............................UHB	EA	10
81	7	PAOZZ	5365-00-720-3191	72794	RF3 1-2 5	...SPACER..UHB	EA	20
81	8	XAOOO		97499	204-060-211-127	.FLOOR ASSEMBLY..UHB	EA	1
81	9	XAOOO		97499	204-060-211-55	.BAFFLE ASSEMBLY...UHB	EA	1
81	10	MFOZZ	1560-00-H24-5329	97499	204-060-206-1	..SPRING...UHB	EA	2
81	11	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK FASTENER.................................UHB	EA	10
81	12	PAOZZ	5325-00-281-5077	72794	A3 1-2T16	..STUD,TURNLOCK FA...UHB	EA	2
81	13	PAOZZ	5325-00-281-5081	72794	A3 1-2T9	..STUD,TURNLOCK FA...UHB	EA	2
81	14	PAOZZ	5325-00-619-6502	72794	A3 1-2T5	..STUD,TURNLOCK FA...UHB	EA	4
81	15	PAOOO	5325-00-298-7027	72794	RF3 1-2	..RECEPTACLE,TURNLOCK FASTENER.............................UHB	EA	4
81	15A	PAOZZ	5365-00-720-3191	72794	RF3 1-2 5	...SPACER..UHB	EA	4
81	16	PAOOO	1560-00-873-2272	97499	204-060-212-17	.PANEL,ENGINE BAFFLE -LH SEE FIG.95 FOR NHA.............UHB	EA	1
81	17	PAOZZ	5325-00-281-5081	72794	A3 1-2T9	..STUD,TURNLOCK FA...UHB	EA	6
81	18	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK FASTENER.................................UHB	EA	6
81	19	PAOOO	1560-00-873-2273	97499	204-060-212-18	.PANEL,ENGINE BAFFLE -RH SEE FIG.95 FOR NHA.............UHB	EA	1
81	20	PAOOO	5325-00-298-7027	72794	RF3 1-2	..RECEPTACLE,TURNLOCK FASTENER.............................UHB	EA	6
81	21	PAOZZ	5365-00-720-3191	72794	RF3 1-2 5	...SPACER..UHB	EA	6

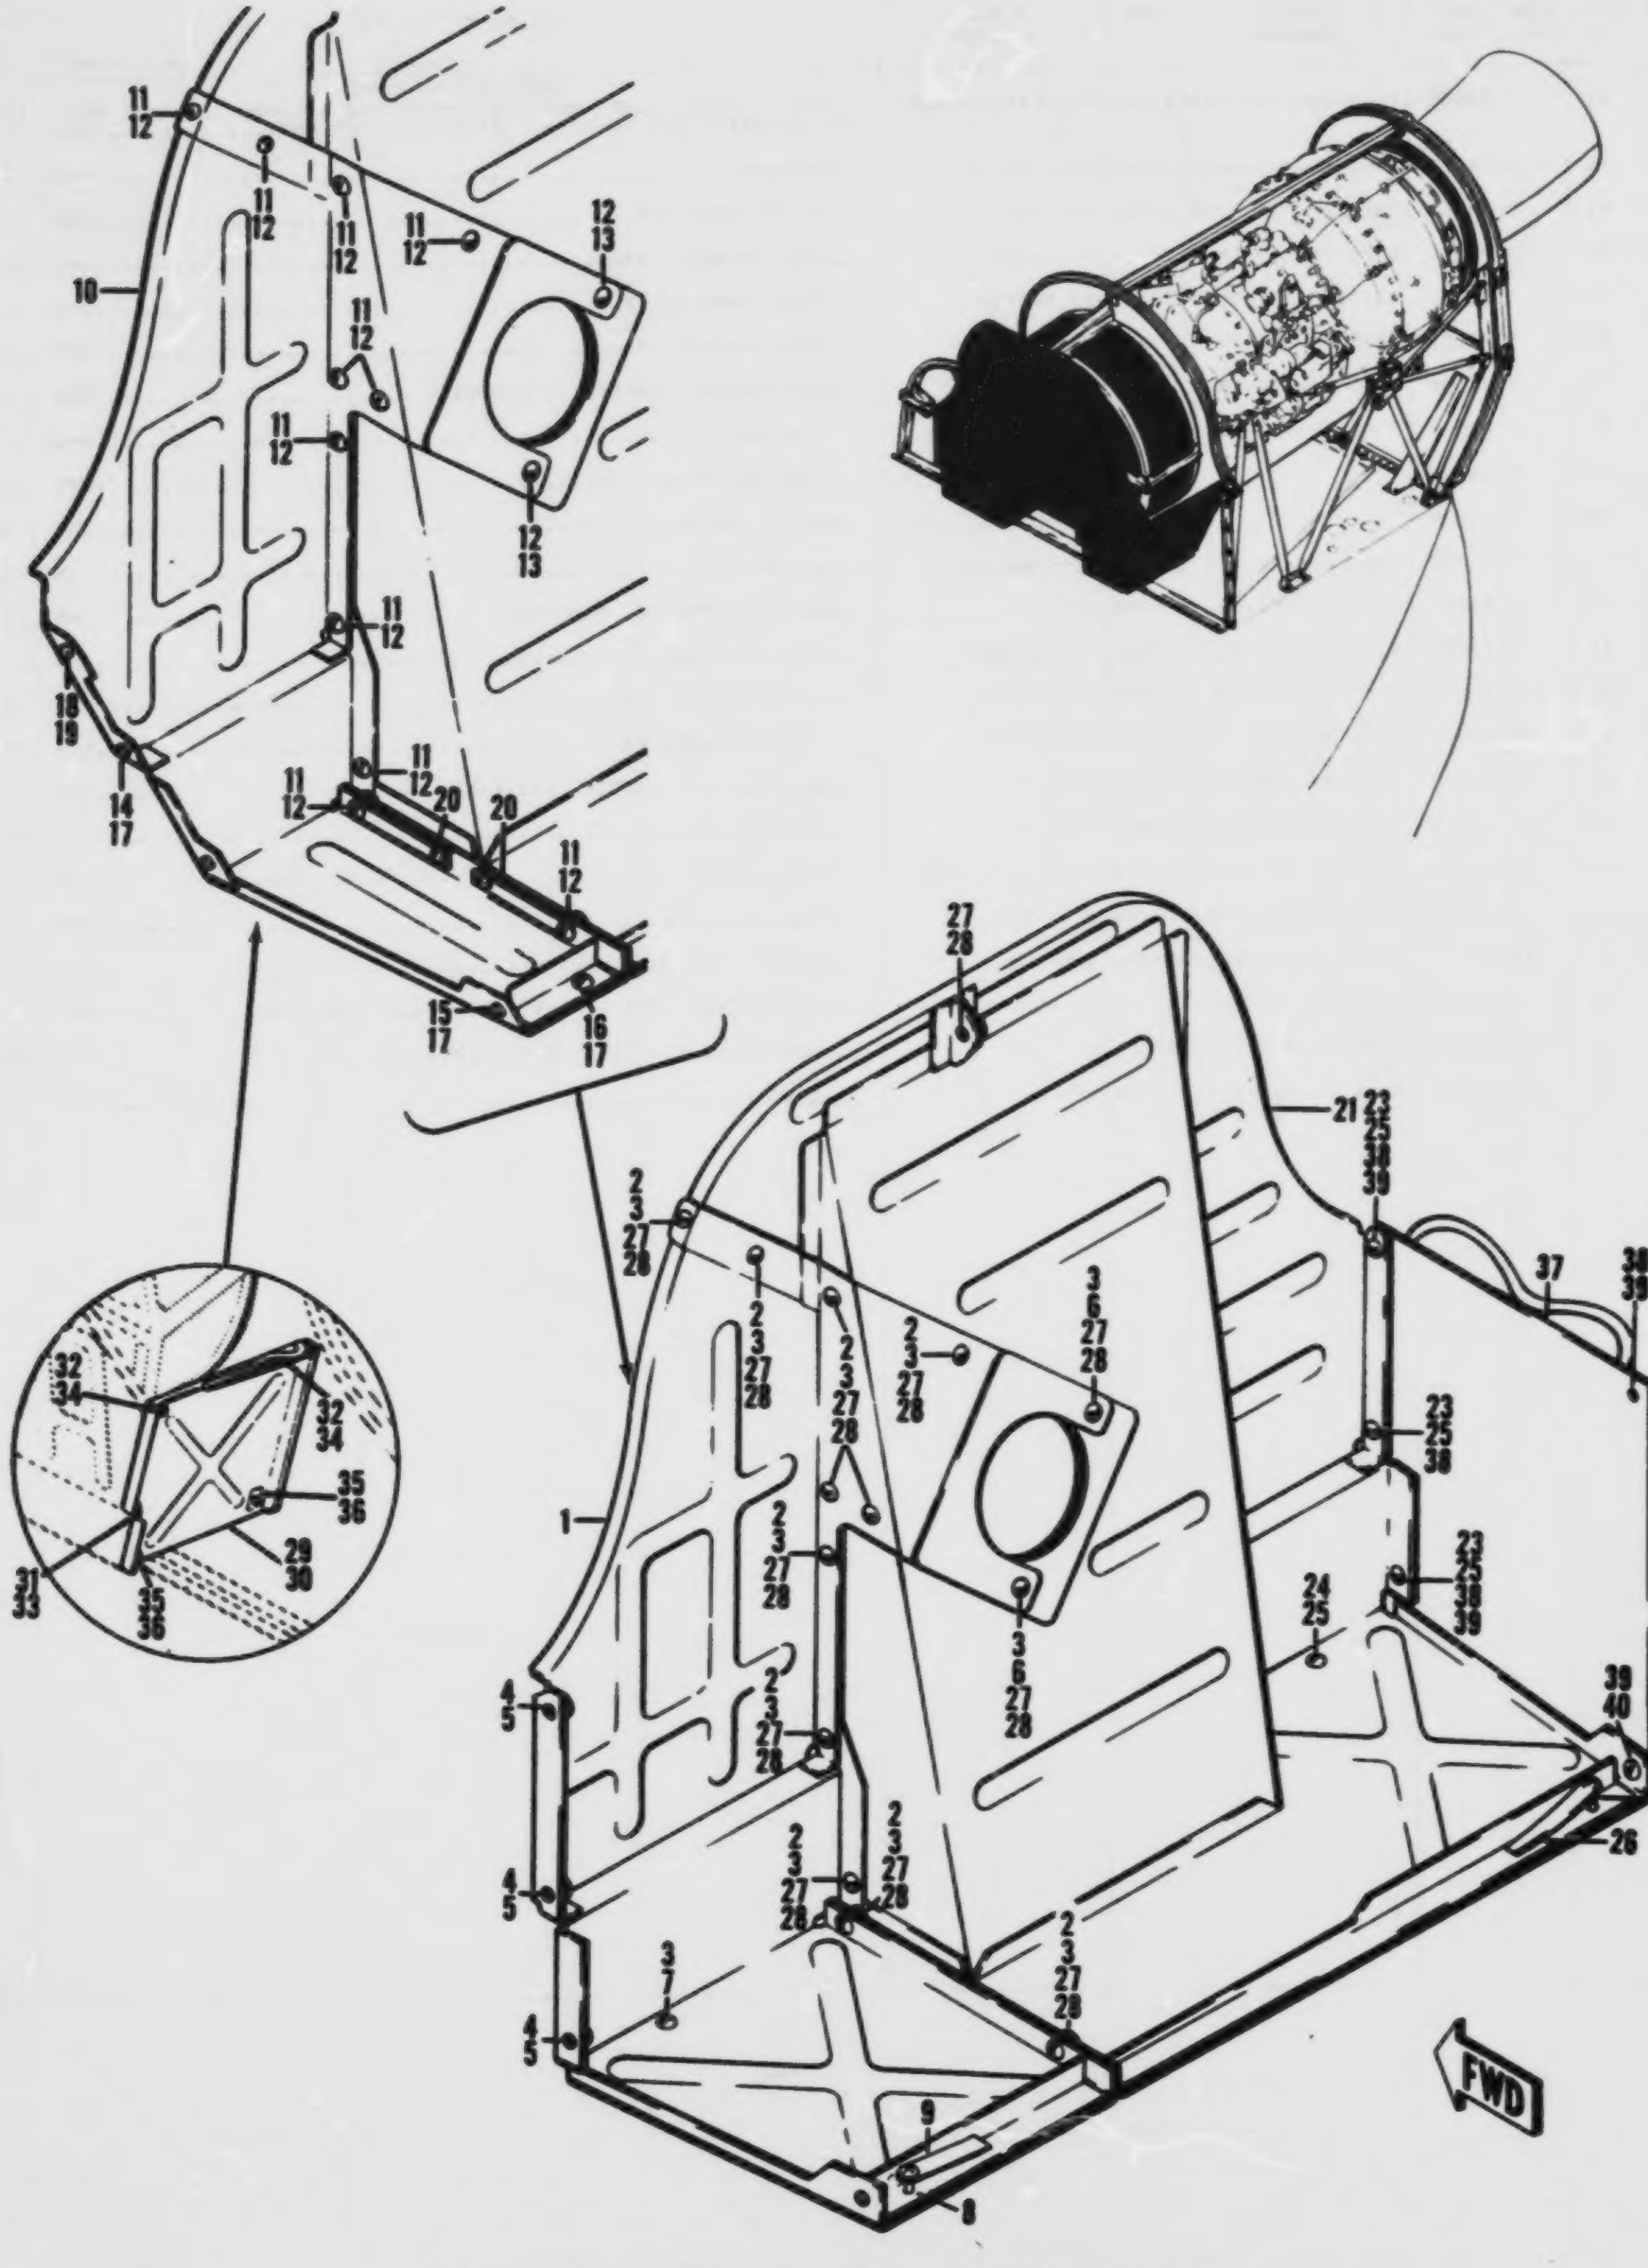
11 12
11 12
11 12
11 12
12 13
10
11 12
11 12
12 13
11 12
18 19
14 17
11 12
11 12
20
20
11 12
15 17
16 17
27 28
21
23 25 38 39
2 3 27 28
2 3 27 28
2 3 27 28
2 3 27 28
3 6 27 28
37
38 39
23 25 38
1
2 3 27 28
23 25 38 39
24 25
3 6 27 28
2 3 27 28
39 40
4 5
22 25
26
4 5
2 3 27 28
2 3 27 28
2 3 27 28
3 7
4 5
9
8
FWD
32 34
32 34
35 36
29 30
31 33
35 36

Figure 82. Baffle Assembly, Engine Air Induction

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
82		A0000	1560-00-H04-2800	97499	204-060-218-49	BAFFLE ASSEMBLY,IND SEE FIG.95 FOR NHA................	UHM	EA	1
82	10	PAOOO	1560-00-150-9018	97499	204-060-218-51	.BAFFLE ASSY,AIRCRAF U/O PN 204-060-218-49..	UHM	EA	1
82	11	PAOZZ	5325-00-281-5081	72794	A3 1-2T9	..STUD,TURNLOCK FA.....................................	UHM	EA	11
82	12	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK FASTENER...........................	UHM	EA	13
82	13	PAOZZ	5325-00-281-5078	72794	A3 1-2T12	..STUD,TURNLOCK FA.....................................	UHM	EA	2
82	14	PAOZZ	5325-00-515-9154	72794	A5T8	..STUD,TURNLOCK FA.....................................	UHM	EA	2
82	15	PAOZZ	5325-00-764-9158	72794	AW5T6	..STUD,TURNLOCK FA.....................................	UHM	EA	1
82	16	PAOZZ	5325-00-281-1916	72794	A5T9	..STUD,TURNLOCK FA.....................................	UHM	EA	1
82	17	PAOZZ	5325-00-141-4002	72794	GH5	..EYELET,TURNLOCK FAS..................................	UHM	EA	4
82	18	PAOOO	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER.......................	UHM	EA	1
82	19	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK FASTENER..........................	UHM	EA	2
82	20	MFOZZ	1560-00-H24-5329	97499	204-060-206-1	..SPRING..	UHM	EA	2
82	21	PAOOO	1560-00-019-0291	97499	204-060-218-5	.BAFFLE ASSEMBLY,AIR..................................	UHM	EA	1
82	22	PAOZZ	5325-00-281-5077	72794	A3 1-2T16	..STUD,TURNLOCK FA..................................	UHM	EA	1
82	23	PAOZZ	5325-00-281-5081	72794	A3 1-2T9	..STUD,TURNLOCK FA..................................	UHM	EA	3
82	24	PAOZZ	5325-00-281-5078	72794	A3 1-2T12	..STUD,TURNLOCK FA..................................	UHM	EA	2
82	25	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK FASTENER.........................	UHM	EA	6
82	26	MFOZZ	1560-00-H24-5329	97499	204-060-206-1	..SPRING...	UHM	EA	1
82	27	PAOOO	5325-00-298-7027	72794	RF3 1-2	..RECEPTACLE,TURNLOCK FASTENER....................	UHM	EA	14
82	28	PAOZZ	5365-00-720-3191	72794	RF3 1-2 5	...SPACER..	UHM	EA	28
82	30	PAOOO	1560-00-869-8988	97499	204-060-219-1	COVER,ACCESS SEE FIG 95 FOR NHA.....................	UHM	EA	1
82	32	PAOZZ	5325-00-515-9153	72794	A5T6	.STUD,TURNLOCK FA U/O PN 204-060-219-1...............	UHM	EA	2
82	34	PAOZZ	5325-00-141-4002	72794	GH5	.EYELET,TURNLOCK FAS U/O PN 204-060-219-1............	UHM	EA	2
82	35	PAOOO	5325-00-432-9810	72794	RF5	.RECEPTACLE,TURNLOCK FASTNER U/O PN 204-060-219-1....	UHM	EA	3
82	36	PAOZZ	5325-00-432-9964	72794	RF5-5	..EYELET,TURNLOCK FASTENER..........................	UHM	EA	6
82	37	PAOOO	1560-00-019-0289	97499	204-060-212-24	PANEL,ENGINE BAFFLE -RH U/W PN 204-060-218-5 SEE FIG 95 FOR NHA...	UHM	EA	1
82	38	PAOOO	5325-00-298-7027	72794	RF3 1-2	.RECEPTACLE,TURNLOCK FASTENER.......................	UHM	EA	5
82	39	PAOZZ	5365-00-720-3191	72794	RF3 1-2 5	..SPACER...	UHM	EA	10

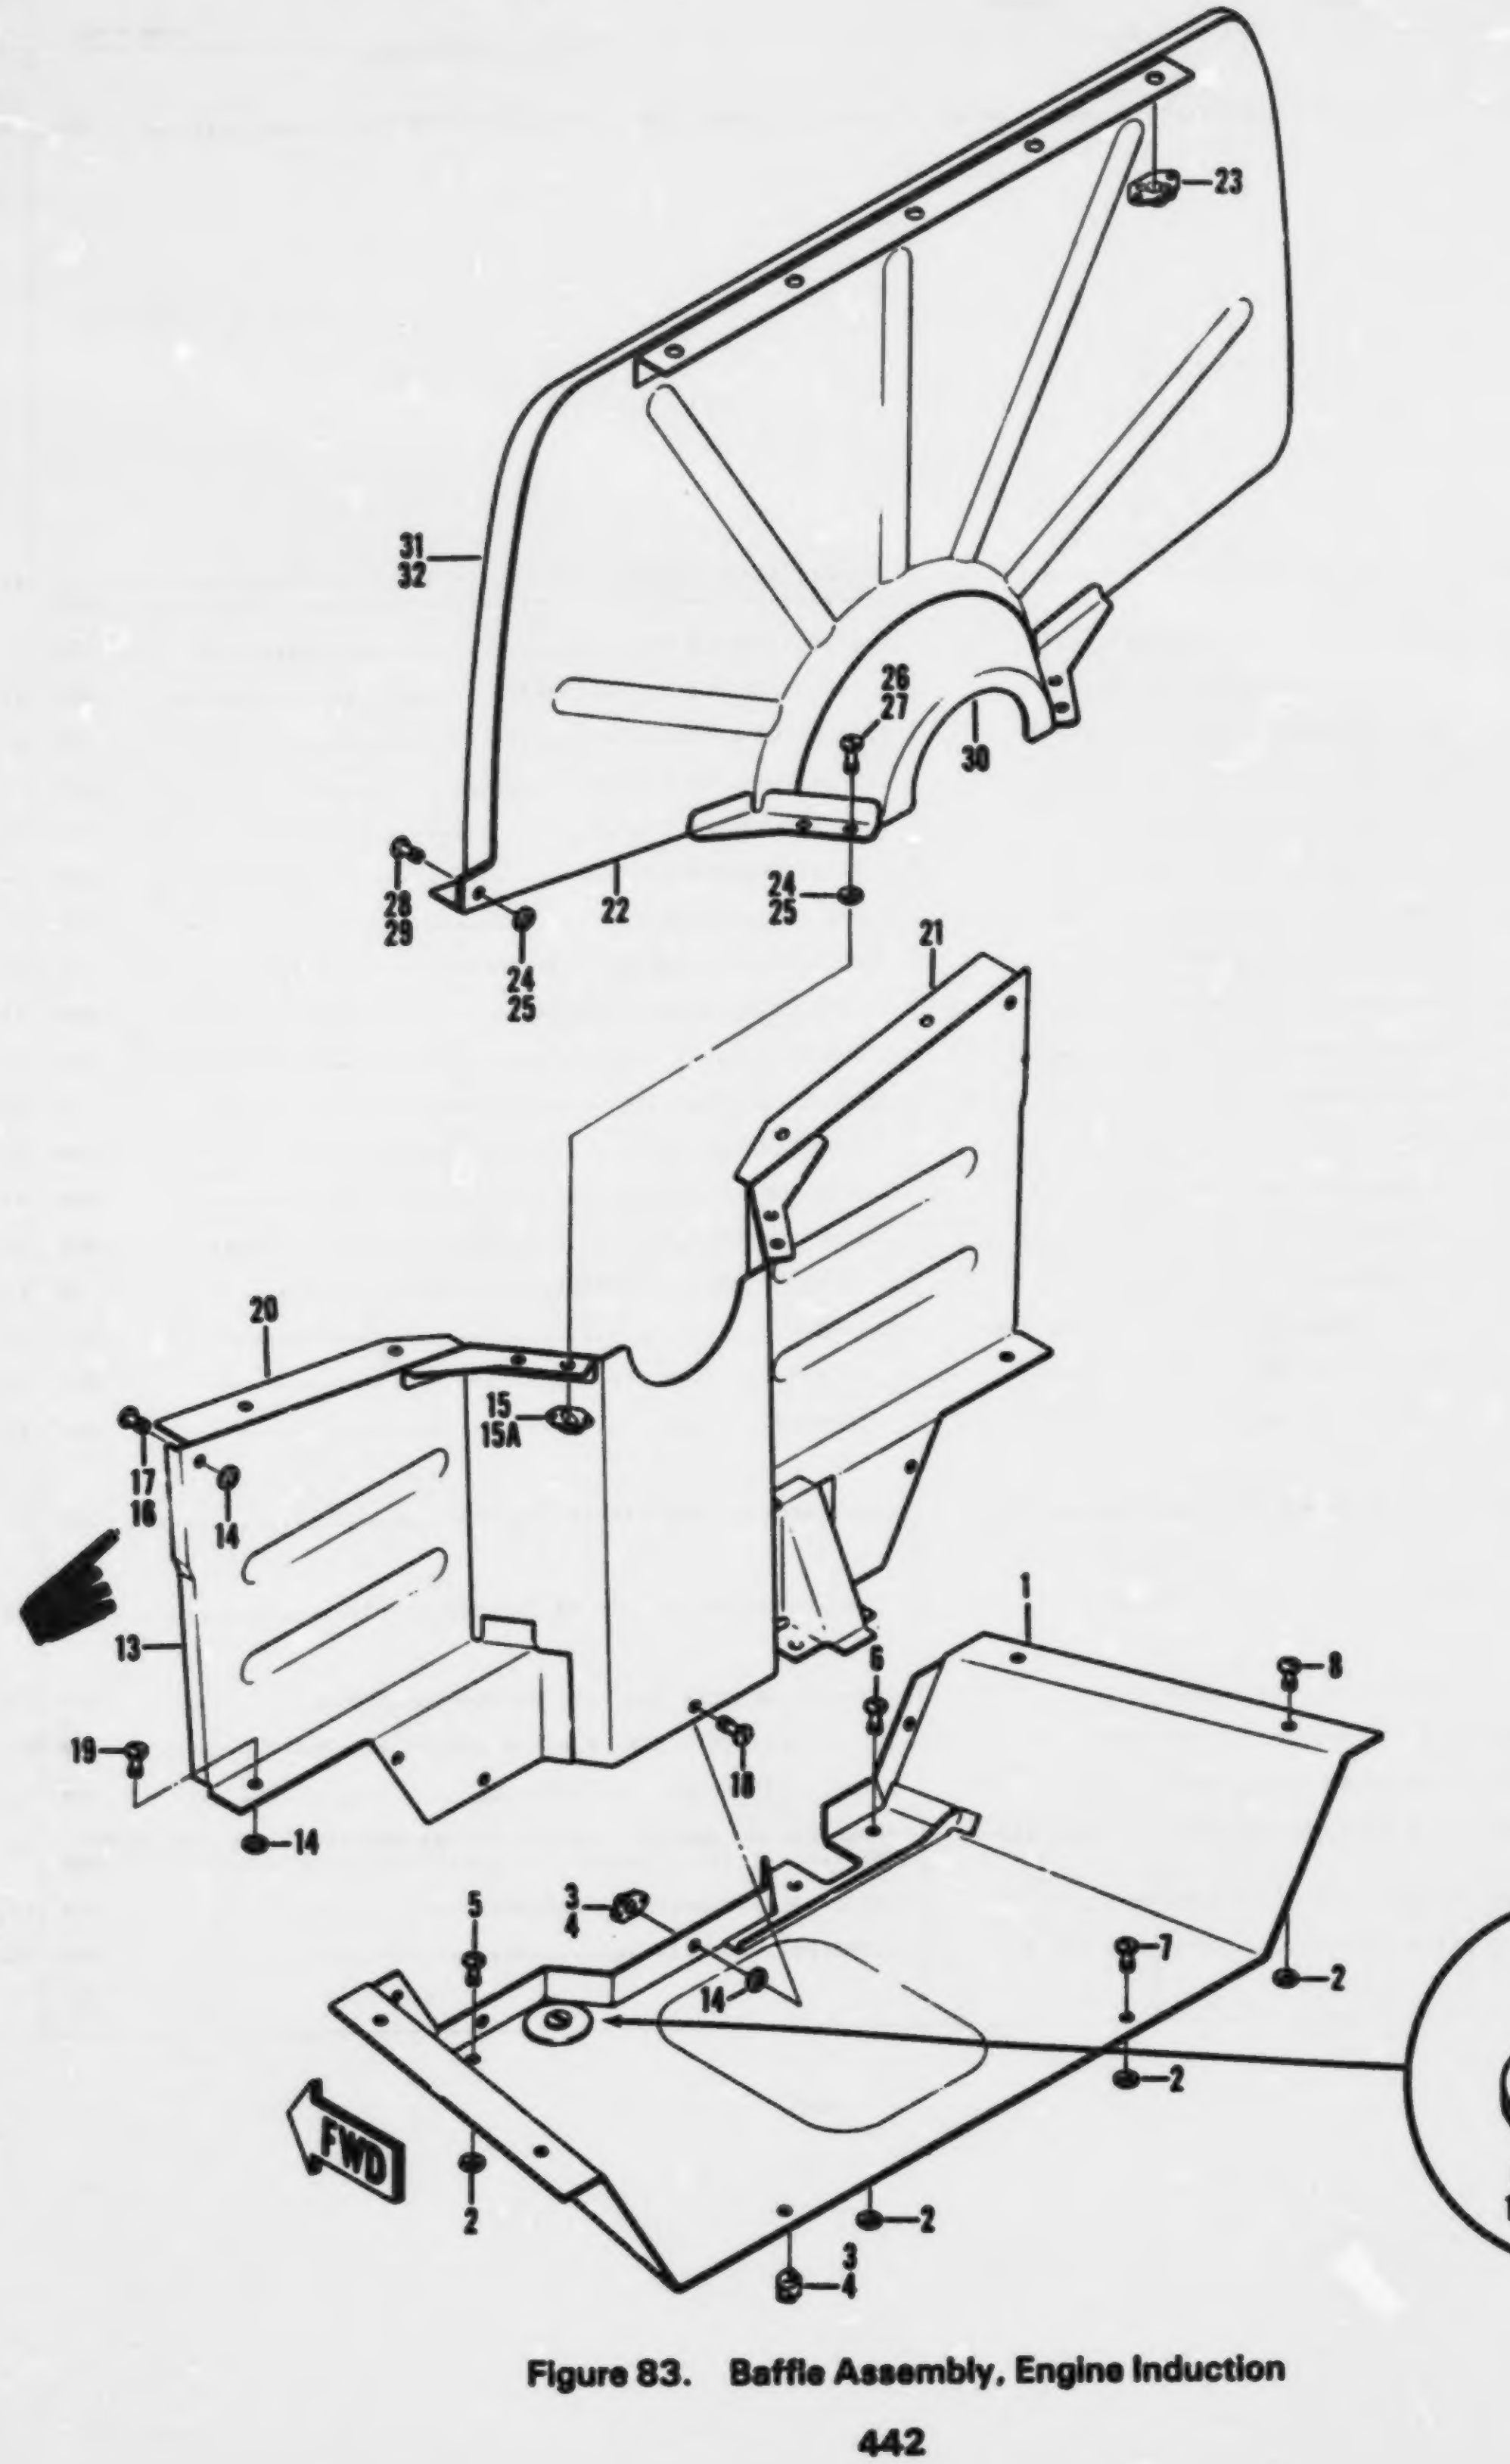
23
31
32
26
27
30
28
29
22
24
25
24
25
21
20
15
15A
17
16
14
13
19
14
18
6
1
8
5
3
4
14
7
2
2
11
FWD
2
2
3
4
9
10
12

Figure 83. Baffle Assembly, Engine Induction

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME			
83		A0000		97499	205-060-205-1	BAFFLE ASSEMBLY,IND ASSEMBLY USBL EFF 62-2106 THRU 62-12372 SEE FIG. 96 FOR NHA	UHE,UHH,UHV,UHX	EA	1
83		A0000		97499	205-060-205-51	BAFFLE ASSEMBLY,IND USBL-EFF 63-8739 THRU 64-13901 SEE FIG. 96 FOR NHA	UHE,UHH,UHV,UHX	EA	1
83		A0000		97499	205-060-205-135	INDUCTION BAFFLE ASSY USBL-EFF 65-9365 & SUBSEQUENT SEE FIG. 96 FOR NHA	UHE,UHH,UHV UHX	EA	1
83	1	PA000	1560-00-150-8917	97499	205-060-205-139	.PAN ASSEMBLY BAFFLE U/O PN 205-060-205-1 & -51	UHE,UHH,UHV,UHX	EA	1
83	1	PA000	1560-00-181-5270	97499	205-060-205-143	.PAN ASSEMBLY, INDUCT U/O PN 205-060-205-135	UHE,UHH,UHV,UHX	EA	1
83	2	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	10
83	3	PA000	5325-00-298-7027	72794	RF3 1-2	..RECEPTACLE,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	5
83	4	PAOZZ	5365-00-720-3191	72794	RF3 1-2 5	...SPACER	UHE,UHH,UHV,UHX	EA	1
83	5	PAOZZ	5325-00-281-5074	72794	A3 1-2T13	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	1
83	6	PAOZZ	5325-00-281-5077	72794	A3 1-2T16	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	1
83	6	PAOZZ	5325-00-281-5074	72794	A3 1-2T13	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	2
83	6	PAOZZ	5325-00-281-5077	72794	A3 1-2T16	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	2
83	7	PAOZZ	5325-00-281-5066	72794	A3 1-2T7	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	4
83	7	PAOZZ	5325-00-281-5067	72794	A3 1-2T8	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	4
83	7	PAOZZ	5325-00-281-5078	72794	A3 1-2T12	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	4
83	8	PAOZZ	5325-00-281-5081	72794	A3 1-2T9	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	4
83	8	PAOZZ	5325-00-281-5079	72794	A3 1-2T10	..STUD, TURNLOCK F	UHE,UHH,UHV,UHX	EA	4
83	8	PAOZZ	5325-00-286-2592	72794	A3 1-2T14	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	4
83		XCFZZ		97499	204-060-224-1	..PLUG INSTL	UHE,UHH,UHV,UHX	EA	1
83	9	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	...SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
83	10	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
83	11	PAOZZ	1560-00-181-5130	97499	204-060-224-3	...PLUG ASSEMBLY BAFFL	UHE,UHH,UHV,UHX	EA	1
83	12	MFOZZ	1560-00-H04-0339	97499	204-060-224-9	...PLATE	UHE,UHH,UHV,UHX	EA	1
83	13	PA000	1560-01-063-3686	81996	1560-UH1-984-3	.BAFFLE ASSY,LOWER	UHE,UHH,UHV,UHX	EA	1
83	14	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK	UHE,UHH,UHV,UHX	EA	9
83	15	PA000	5325-00-298-7027	72794	RF3 1-2	..RECEPTACLE,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	8
83	15A	PAOZZ	5365-00-720-3191	72794	RF3 1-2 5	...SPACER	UHE,UHH,UHV,UHX	EA	1
83	16	PAOZZ	5325-00-281-5079	72794	A3 1-2T10	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	2
83	17	PAOZZ	5325-00-281-5074	72794	A3 1-2T13	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	2
83	17	PAOZZ	5325-00-281-5077	72794	A3 1-2T16	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	2
83	18	PAOZZ	5325-00-281-5066	72794	A3 1-2T7	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	4
83	18	PAOZZ	5325-00-281-5081	72794	A3 1-2T9	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	5
83	19	PAOZZ	5325-00-281-5081	72794	A3 1-2T9	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	2
83	19	PAOZZ	5325-00-281-5077	72794	A3 1-2T16	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	2
83	20	MDFZZ	1560-00-H01-6830	97499	205-060-205-19	..ANGLE-LH	UHE,UHH,UHV,UHX	EA	1
83	21	MDFZZ	1560-00-H01-6831	97499	205-060-205-20	..ANGLE-RH	UHE,UHH,UHV,UHX	EA	1
83	22	PA000	1560-01-063-3690	81996	1560-UH1-984-11	.BAFFLE ASSY,UPPER	UHE,UHH,UHV,UHX	EA	1
83	23	PA000	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	5
83	24	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	5
83	25	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	10
83	26	PAOZZ	5325-00-281-5067	72794	A3 1-2T8	..STUD,TURNLOCK FA	UHE,UHH,UHV,UHX	EA	8

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
83	27	PAOZZ	5325-00-281-5078	72794	A3 1-2T12	..STUD,TURNLOCK FA..............................UHE,UHH,UHV,UHX	EA	8
83	28	PAOZZ	5325-00-281-5074	72794	A3 1-2T13	..STUD,TURNLOCK FA..............................UHE,UHH,UHV,UHX	EA	2
83	29	PAOZZ	5325-00-281-5077	72794	A3 1-2T16	..STUD,TURNLOCK FA..............................UHE,UHH,UHV,UHX	EA	2
83	30	PAOZZ	1560-00-435-7904	97499	205-060-205-33	..CONE,BAFFLE....................................UHE,UHH,UHV,UHX	EA	1
83	31	PAOZZ	1560-01-129-1296	97499	205-060-205-31	.ANGLE,INDUCTION BAFFLE-LH.....................UHE,UHH,UHV,UHX	EA	1
83	32	PAOZZ	1560-01-129-1297	97499	205-060-205-32	.ANGLE,INDUCTION BAFFLE-RH.....................UHE,UHH,UHV,UHX	EA	1

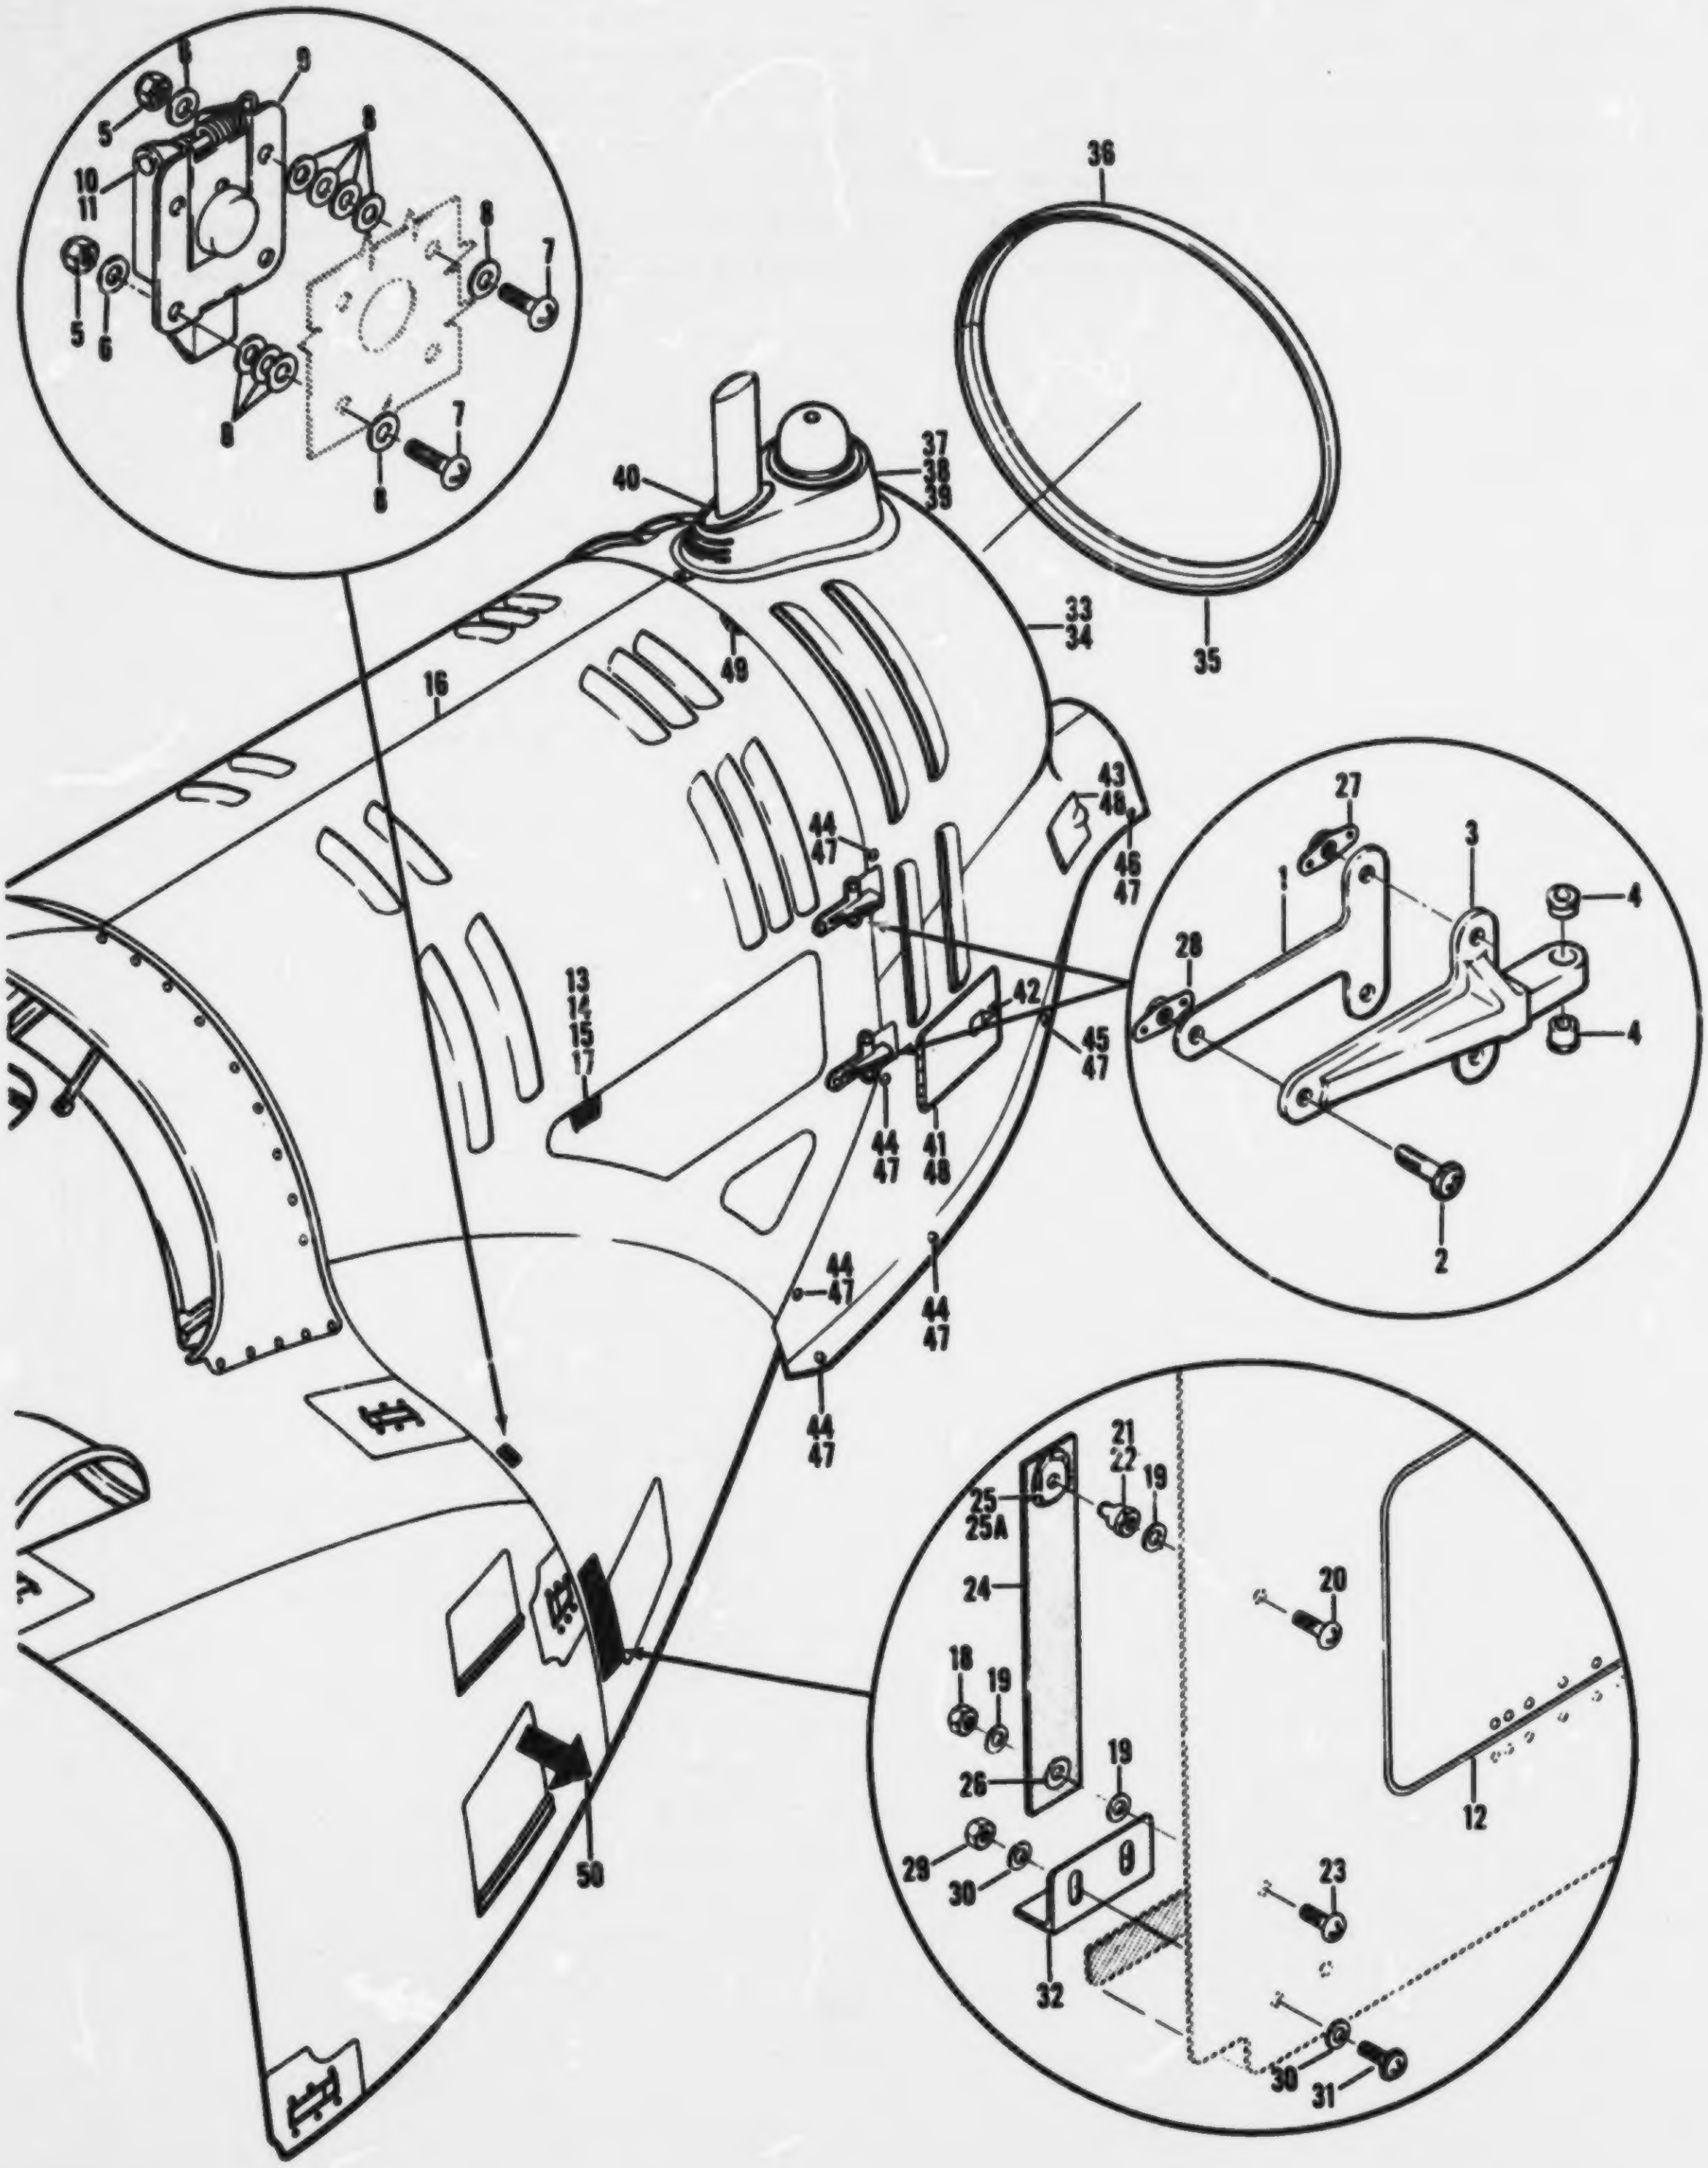
6
9
5
10
11
8
8
7
5
6
8
7
8
36
37
38
39
40
33
34
35
49
16
43
48
44
47
46
47
27
3
4
1
28
4
13
14
15
17
42
45
47
44
47
41
48
2
44
47
44
47
44
47
21
22
19
25
25A
24
20
18
19
26
19
12
29
30
23
32
30
31
50

Figure 84. Cowl Assembly, Engine

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME			
84		PBOFF	1560-00-675-3254	97499	204-060-882-7	COWL ASSEMBLY SEE FIG.95 FOR NHA..........................		EA	1
84		PAOFF	1560-00-869-8989	97499	204-060-882-121	COWL ASSEMBLY SEE FIG.95 FOR NHA....................	UHM	EA	1
84		PAOFF	1560-00-675-3255	97499	204-060-882-8	COWL ASSEMBLY SEE FIG 95 FOR NHA................	UHM	EA	1
84	1	PAOZZ	5365-00-767-8017	97499	204-060-882-29	.SHIM...	UHM	EA	2
84	2	XDOZZ		96906	MS27039-1-09	.SCREW,MACHINE....................................	UHM	EA	6
84	3	PAOOO	1560-00-069-8553	97499	204-060-948-1	.HINGE,COWL.......................................	UHM	EA	2
84	4	PAOZZ	3120-00-225-4679	97499	204-060-808-5	..BUSHING,SLEEVE..................................	UHM	EA	2
84	5	PBOZZ	5310-00-857-5558	96906	MS21045L04	.NUT,SELF-LOCKING,HE..............................	UHM	EA	4
84	6	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT......................................	UHM	EA	4
84	7	PBOZZ	5305-00-054-5651	96906	MS51957-17	.SCREW,MACHINE....................................	UHM	EA	4
84	8	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT......................................	UHM	EA	18
84	9	PAOZZ	5340-00-690-7276	83014	H4050S125	.LATCH ASSEMBLY...................................	UHM	EA	1
84	10	MFOZZ		96906	MS20253-2-538	.PIN,STRAIGHT,HEA.................................	UHM	EA	1
84	11	PAOZZ	5340-00-829-8673	97499	204-060-869-1	.SPRING...	UHM	EA	2
84	12	MFOZZ		97499	204-060-882-105	.DOOR-LH U/O PN 204-060-882-7.....................	UHM	EA	1
84	12	MFOZZ		97499	204-060-882-111	.DOOR,ACCESS-LH U/O PN 204-060-882-7.............	UHM	EA	1
84	12	MFOZZ		97499	204-060-882-106	.DOOR-RH U/O PN 204-060-882-8.....................	UHM	EA	1
84	12	MFOZZ		97499	204-060-882-112	.DOOR ASSY-RH U/O PN 204-060-882-8...............	UHM	EA	1
84	13	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING,EX..		EA	4
84	14	PAOZZ	5310-00-184-8966	88044	AN960PD8	.WASHER,FLAT..		EA	4
84	15	PAOZZ	5305-00-281-8527	88044	AN525-832R8	.SCREW,MACHINE..		EA	4
84	16	XAOFZ		97499	204-060-882-13	.COWL ASSY,ENGINE -LH...		EA	1
84	16	XAOFF		97499	204-060-882-117	.COWL ASSY,ENGINE -LH...		EA	1
84	16	XAOFF		97499	204-060-882-123	.COWL ASSY,ENGINE -LH..................................	UHM	EA	1
84	16	XAOFF		97499	204-060-882-118	.COWL ASSY,ENGINE -RH..............................	UHM	EA	1
84	17	PAOZZ	5975-00-345-1228	19500	22466	..CLAMP,CABLE......................................	UHM	EA	20
84	18	PAOZZ	5310-00-857-5560	96906	MS21045L06	..NUT,SELF-LOCKING,HE..............................	UHM	EA	1
84	19	PAOZZ	5310-00-188-7721	88044	AN960PD6	..WASHER,FLAT......................................	UHM	EA	3
84	20	PAOZZ	5305-00-984-4988	96906	MS35206-228	..SCREW,MACHINE....................................	UHM	EA	1
84	21	PAOZZ	5325-00-276-5867	88044	AN227-228	..STUD,SNAP FASTEN U/O PN 204-060-882-123............	UHM	EA	1
84	22	PAOZZ	5310-00-616-8896	80205	NAS680A08K	..NUT,SELF-LOCKING,PL....................................	UHM	EA	2
84	22	PAOZZ	5310-00-764-1758	96906	MS21071L08K	..NUT,SELF-LOCKING,PL....................................	UHM	EA	4
84	23	PAOZZ	5305-00-889-3000	96906	MS35206-230	..SCREW,MACHINE....................................	UHM	EA	1
84	24	PAOOO	1560-00-701-9889	97499	204-060-956-1	..STRAP ASSY,COWL HOLD OPEN........................	UHM	EA	1
84	25	PAOZZ	5325-00-291-8359	88044	AN227-15S	...SOCKET,SNAP FAST................................	UHM	EA	1
84	25A	PAOZZ	5325-00-276-4282	96906	MS27977-3N	...CLINCH PLATE,SNA................................	UHM	EA	1
84	26	PAOZZ	5325-00-291-0302	96906	MS20230B20	...GROMMET,METALLIC................................	UHM	EA	1
84	27	PAOZZ	5310-00-623-5989	80205	NAS1031A3	..NUT,SELF-LOCKING,PL..............................	UHM	EA	4
84	28	PAOZZ	5310-00-680-6275	80205	NAS1032A3	..NUT,SELF-LOCKING,PL..............................	UHM	EA	2
84	29	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX...............................	UHM	EA	2
84	30	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT.......................................	UHM	EA	4
84	31	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	.SCREW,MACHINE.....................................	UHM	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
84	32	MOOZZ		97499	204-060-882-109	.BRACKET,ANGLE U/O P/N 204-060-882-7......................		EA	1
84	32	MOOZZ		97499	204-060-882-110	.BRACKET ANGLE U/O PN 204-060-882-8...............	UHM	EA	1
84	33	XCFZZ		97499	204-060-883-233	.FAIRING ASSY ENGINE TAIL PIPE USBL EFF 60-3546 THRU 60-3619 SEE FIG.95 FORNHA...		EA	1
84	33	XCFZZ		97499	204-060-883-235	.FAIRING ASSY ENGINE TAIL PIPE USBL EFF 61-686 THRU 61-803 SEE FIG.95 FOR NHA..		EA	1
84	33	XCFZZ		97499	204-060-883-243	.FAIRING ASSY ENGINE TAIL PIPE USBL EFF<UH-B> 62-1872 THRU 64-141000 & <UH-1C> 64-14101 THRU 64-14191 SEE FIG. 95 FOR NHA...	UHM	EA	1
84	33	XCFZZ		97499	204-061-828-1	.FAIRING ASSY ENGINE TAIL PIPE USBL EFF 65-9416 & SUBSEQUENCE SEE FIG.95 FOR NHA.........................	UHM	EA	1
84	34	PBOFF	1560-00-875-7990	97499	204-060-883-237	..FAIRING,FUSELAGE,AI U/O PN 204-060-833-233 & -235......		EA	1
84	34	PAOFF	1560-00-911-8603	97499	204-061-828-5	..FAIRING,FUSELAGE,AI U/O PN 204-060-883-243 & 204-061-828-1	UHM	EA	1
84	35	PBDZZ	1560-00-421-1819	97499	204-060-883-229	...STIFFENER,FAIRING A LOWER......................	UHM	EA	1
84	36	PBDZZ	1560-00-400-2795	97499	204-060-883-227	...STIFFENER,FAIRING,T UPPER......................	UHM	EA	1
84	37	PAFZZ	1560-00-876-8759	97499	204-060-883-239	...BRACKET,TAILPIPE FA U/O PN 204-060-883-237............	UHB	EA	1
84	37	XDFZZ		97499	204-060-883-247	...BRACKET,ENGINE COWL...........................	UHM	EA	1
84	38	PAFFF	1560-00-911-8604	97499	204-061-829-1	...SUPPORT,ANTI COLLIS U/O PN 204-061-828-5......	UHM	EA	1
84	39	PAFZZ	5310-00-989-7773	80205	NAS1068A06	....NUT,SELF-LOCKING,PL..........................	UHM	EA	5
84	40	MFFZZ		97499	204-060-883-241	...PLATE U/O PN 204-060-883-237.........................		EA	1
84	41	PAOOO	1560-00-911-8602	97499	204-061-828-9	...DOOR,ACCESS...................................	UHM	EA	2
84	42	PAOZZ	5340-00-663-2313	83014	H5000-032-051	....CATCH,FLUSH..................................	UHM	EA	1
84	43	PAOZZ	1560-00-767-8020	97499	204-060-883-211	...DOOR ASSY,FAIRING -LH.........................	UHM	EA	1
84	43	PAOZZ	1560-00-767-8021	97499	204-060-883-212	...DOOR ASSY,FAIRING -RH.........................	UHM	EA	1
84	44	PAOZZ	5325-00-282-0615	72794	A5T16	...STUD,TURNLOCK FA..............................	UHM	EA	10
84	45	PAOZZ	5325-00-770-9340	72794	A5T14	...STUD, TURNLOCK,...............................	UHM	EA	2
84	46	PAOZZ	5325-00-281-5072	72794	A5T12	...STUD,TURNLOCK FA..............................	UHM	EA	2
84	47	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FAS...........................	UHM	EA	15
84	48	PAOZZ	5360-00-831-1458	97499	204-060-887-1	...SPRING,HELICAL,TORS...........................	UHM	EA	4
84	49	PAOZZ	5340-00-400-2794	97499	204-060-883-33	...BRACKET,DOUBLE ANGL...........................	UHM	EA	1
84	50	MFOZZ		97499	204-070-845-1	.STENCIL,MARKING.................................	UHM	EA	2

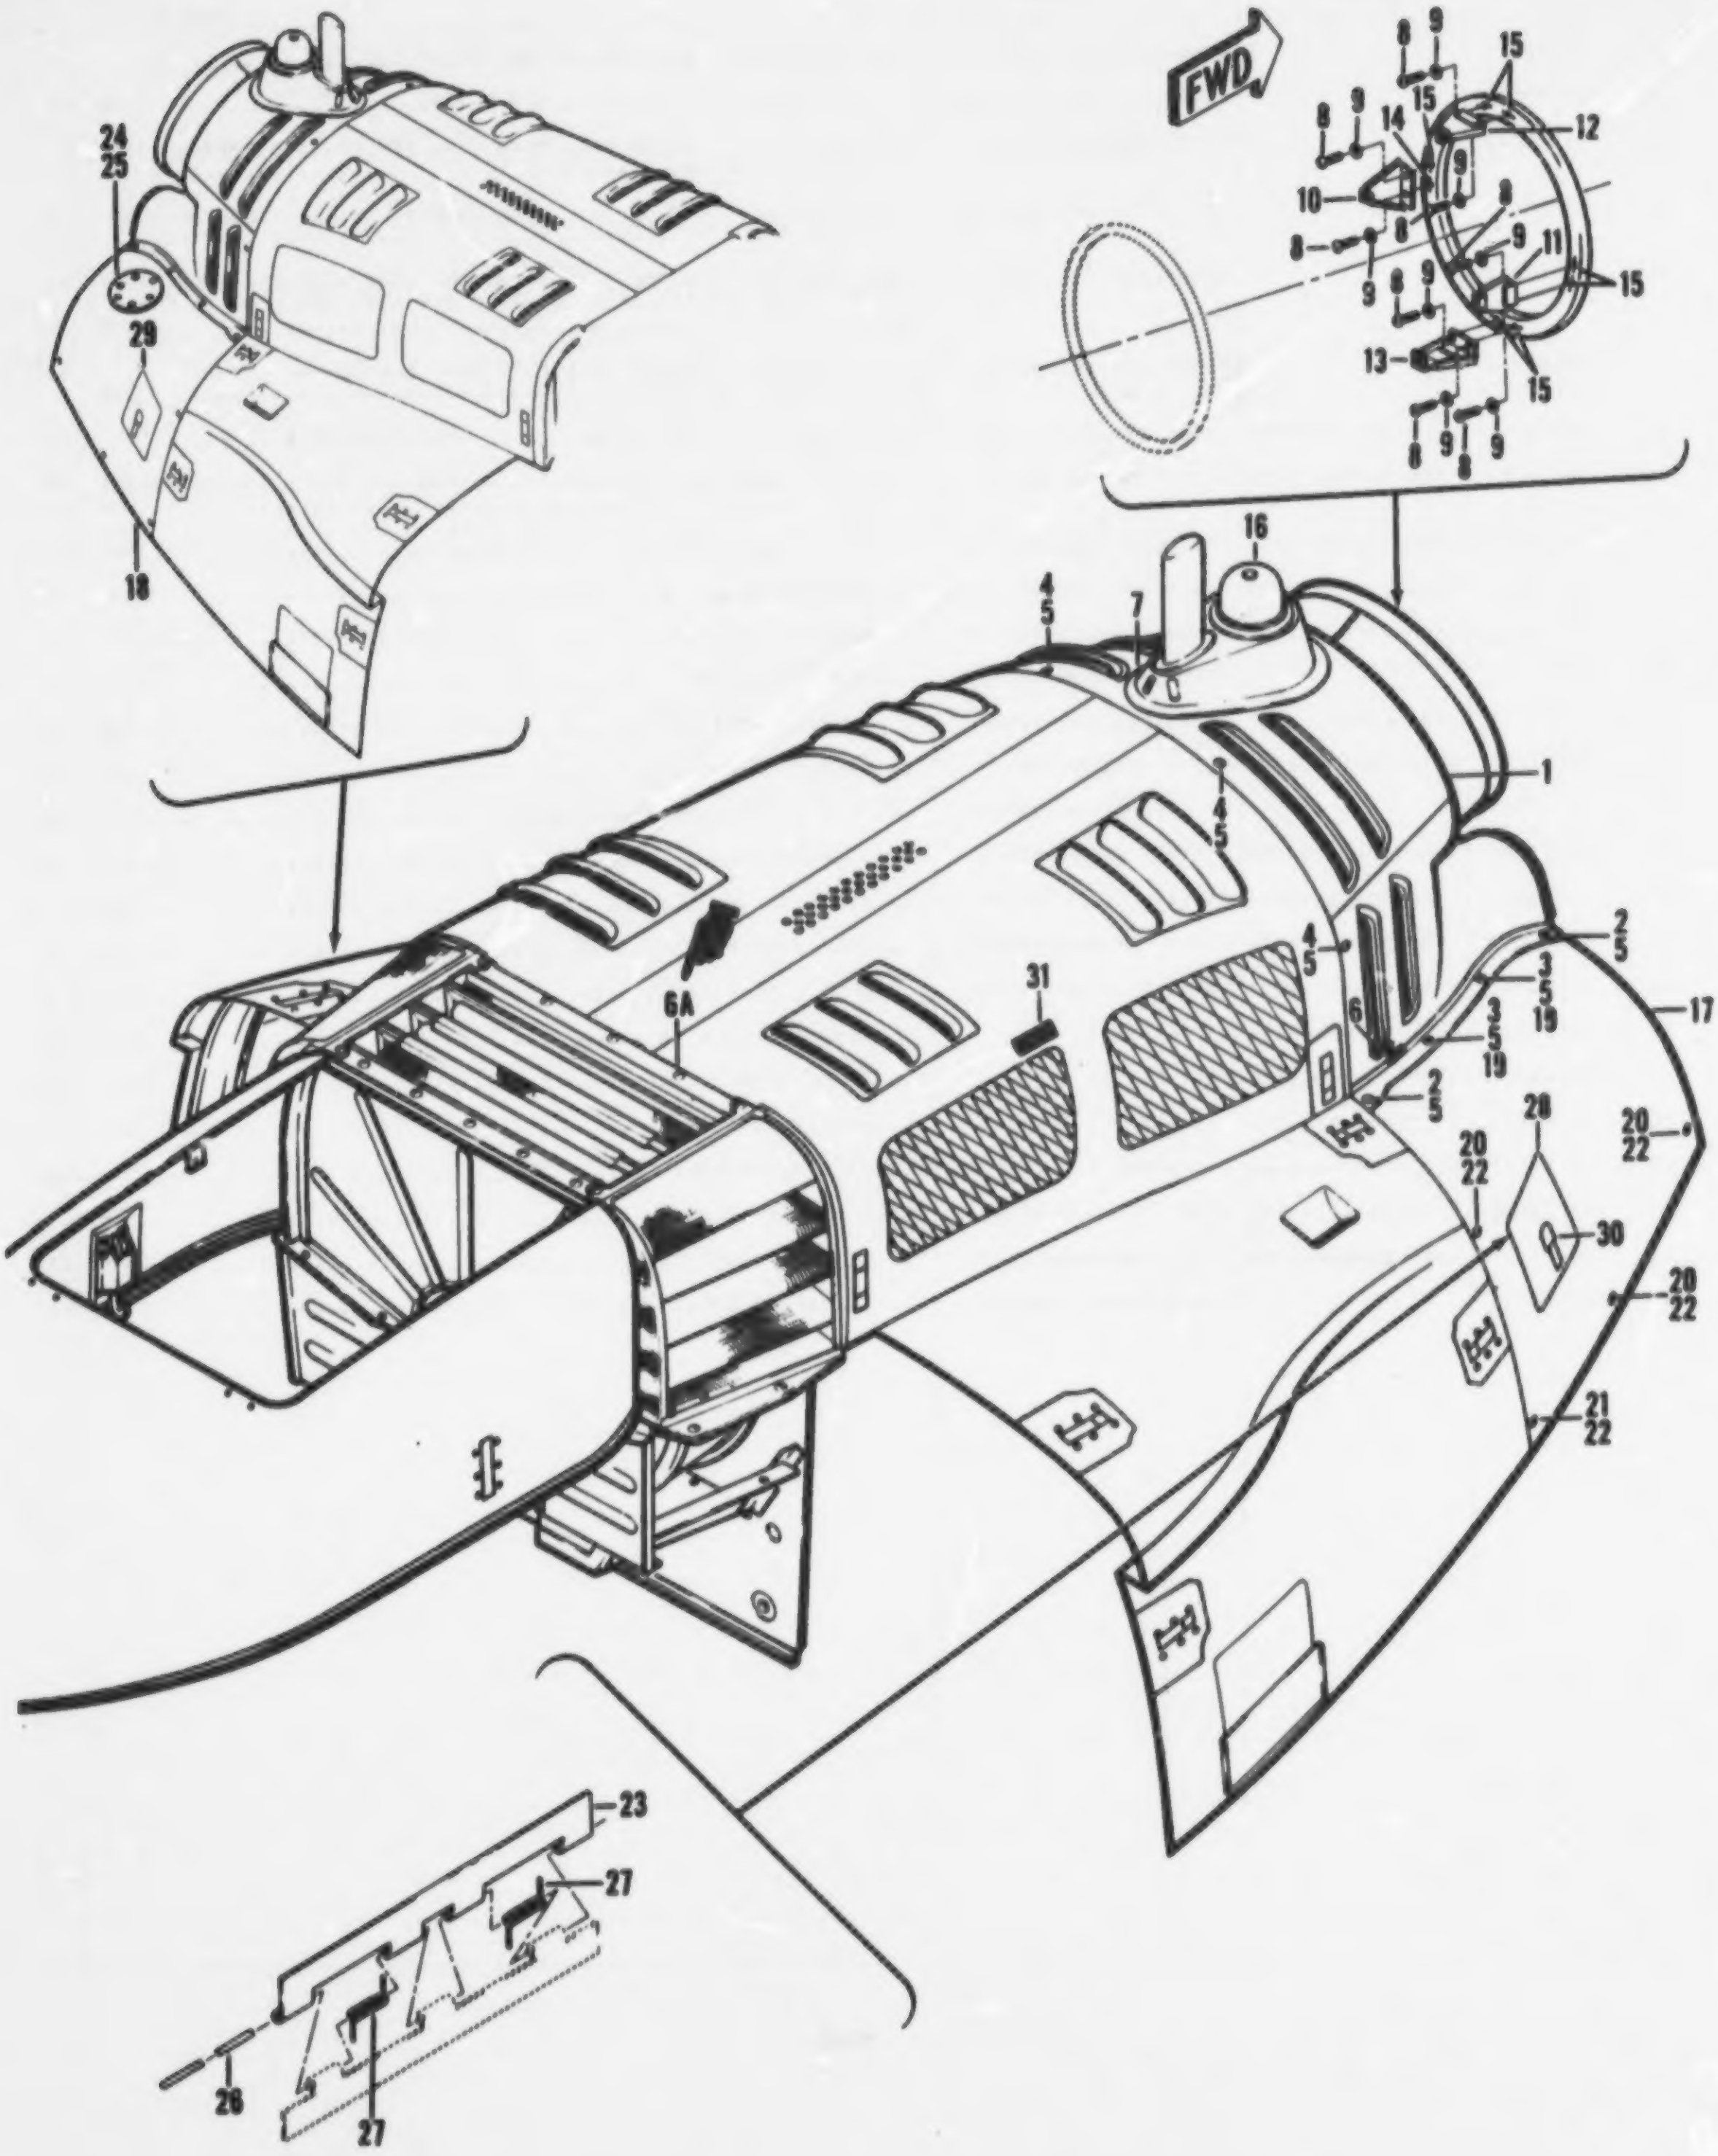
FWD
8
9
15
15
12
8
9
14
10
9
8
8
8
9
11
9
15
8
9
13
15
8
9
8
9
24
25
29
18
16
4
5
7
1
4
5
6A
31
4
5
6
2
5
3
5
19
17
3
5
19
2
5
28
20
22
20
22
30
20
22
21
22
23
27
26
27

Figure 85. Cowl Installation

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
85		XCFZZ		97499	205-060-800-5	COWL INSTL USBL EFF 62-2106 THRU 62-2113 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
85		XCFZZ		97499	205-060-800-7	COWL INSTL USBL EFF 62-12351 THRU 62-12372 SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
85		XCFZZ		97499	205-060-800-9	COWL INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
85		XCFZZ		97499	205-060-800-11	COWL INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
85		XCFZZ		97499	205-060-800-13	COWL INSTL USBL EFF 65-9565 THRU 66-16867 SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
85		XCFZZ		97499	205-060-800-23	COWL INSTL USBL EFF 66-16868 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.96 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
85		XCFZZ		97499	205-060-800-21	COWL INSTL USBL EFF 67-17145 & SUBSEQUENT SEE FIG.96 FOR NHA ....UHE,UHH,UHV,UHX	EA	1
85	1	XCFZZ		97499	205-060-877-1	.FAIRING ASSY TAIL PIPE-UPPER U/O PN 205-060-800-13,-21&23 ....UHE,UHH,UHV,UHX	EA	1
85	1	PBOFF	1560-00-919-7993	97499	205-060-877-3	..FAIRING ASSEMBLY,TA TAILPIPE USE WHEN SMOKE GENERATOR AUX EQUIP KIT IS INSTALLED..........UHE,UHH,UHV,UHX	EA	1
85	2	PAOZZ	5325-00-281-4399	72794	A5T19	...STUD,TURNLOCK FASTENER..........UHE,UHH,UHV,UHX	EA	4
85	3	PAOZZ	5325-00-639-6283	72794	A5T13	...STUD,TURNLOCK FASTENER..........UHE,UHH,UHV,UHX	EA	4
85	4	PAOZZ	5325-00-282-0615	72794	A5T16	...STUD,TURNLOCK FASTENER..........UHE,UHH,UHV,UHX	EA	4
85	5	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FAS FASTENER..........UHE,UHH,UHV,UHX	EA	12
85	6	PAOZZ	5340-00-514-1339	88044	AN743Z13	...BRACKET,ANGLE..........UHE,UHH,UHV,UHX	EA	1
85	6A	PBDZZ	1560-00-420-0926	97499	205-060-877-36	...VENT,COWLING RT..........UHE,UHH,UHV,UHX	EA	1
85	6A	PBDZZ	1560-00-420-0931	97499	205-060-877-37	...VENT,COWLING LT..........UHE,UHH,UHV,UHX	EA	1
85	6A	PBDZZ	1560-00-420-0929	97499	205-060-877-38	...VENT,COWLING RT..........UHE,UHH,UHV,UHX	EA	1
85	6A	PBDZZ	1560-00-420-0927	97499	205-060-877-39	...VENT,COWLING LT..........UHE,UHH,UHV,UHX	EA	1
85	6A	PBDZZ	1560-00-420-0928	97499	205-060-877-40	...VENT,COWLING RT..........UHE,UHH,UHV,UHX	EA	1
85	6A	PBDZZ	1560-00-420-0930	97499	205-060-877-41	...VENT,COWLING LT..........UHE,UHH,UHV,UHX	EA	1
85	7	PAOZZ	1560-00-920-7209	97499	205-060-878-1	...SUPPORT,COWL..........UHE,UHH,UHV,UHX	EA	1
85	8	PAOZZ	5306-00-182-2057	88044	AN3H4A	...BOLT,MACHINE USE:WHEN SMOKE GENERATOR AUXILIARY EQUIPMENT KIT IS INSTALLED..........UHE,UHH,UHV,UHX	EA	8
85	9	PAOZZ	5310-00-167-0801	88044	AN960C10	...WASHER,FLAT USE:WHEN SMOKE GENERATOR AUXILIARY EQUIPMENT KIT IS INSTALLED..........UHE,UHH,UHV,UHX	EA	8
85	10	XBOZZ	1680-00-H23-6044	97499	205-060-349-1	...BRACKET ASSEMBLY-LH..........UHE,UHH,UHV,UHX	EA	1
85	11	XBOZZ	1680-00-H23-6042	97499	205-060-347-1	...BRACKET ASSEMBLY-RH USE:WHEN SMOKE GENERATOR AUXILIARY EQUIPMENT KIT IS INSTALLED..........UHE,UHH,UHV,UHX	EA	1
85	12	XBOZZ	1680-00-H23-6041	97499	205-060-346-1	...BRACKET ASSEMBLY -TOP USE WHEN SMOKE GENERATOR AUXILIARY EQUIPMENT KIT IS INSTALLED..........UHE,UHH,UHV,UHX	EA	1
85	13	XBOZZ	1680-00-H23-6043	97499	205-060-348-1	...BRACKET ASSEMBLY BOTTOM USE WHEN SMOKE GENERATOR AUX EQUIP KIT IS INSTALLED..........UHE,UHH,UHV,UHX	EA	1
85	14	PAOZZ	5310-00-734-1850	96906	MS21071L3	...NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	1
85	15	PAOZZ	5310-00-728-7716	96906	MS21069L3	...NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	7
85	16	XCFZZ		97499	205-075-105-5	..ELECTRICAL INSTL SEE FIG.282 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
85	17	PAOFF	1560-00-963-1057	97499	205-060-810-1	.PANEL,FUSELAGE,AIRC SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED..........UHE,UHH,UHV,UHX	EA	1
85	18	PBOFF	1560-00-963-1058	97499	205-060-810-2	.PANEL,FUSELAGE,AIRC SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED..........UHE,UHH,UHV,UHX	EA	1
85	19	PAOOO	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER..........UHE,UHH,UHV,UHX	EA	2
85	19	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK FASTENER..........UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
85	20	PAOZZ	5325-00-282-0615	72794	A5T16	..STUD,TURNLOCK FASTENER......................UHE,UHH,UHV,UHX	EA	3
85	21	PAOZZ	5325-00-281-4399	72794	A5T19	..STUD,TURNLOCK FASTENER......................UHE,UHH,UHV,UHX	EA	1
85	22	PAOZZ	5325-00-141-4002	72794	GH5	..EYELET,TURNLOCK FAS FASTENER..............UHE,UHH,UHV,UHX	EA	4
85	23	MFOZZ	5340-00-H05-2645	08044	AN257-2-650	...LEAF,BUTT HINGE..............................UHE,UHH,UHV,UHX	EA	1
85	24	PAOZZ	5310-00-728-7715	96906	MS21069L08	...NUT,SELF-LOCKING,PL..........................UHE,UHH,UHV,UHX	EA	5
85	25	PAOZZ	5305-00-281-8527	88044	AN525-832R8	..SCREW,MACHINE U/O PN 205-060-810-2.........UHE,UHH,UHV,UHX	EA	5
85	26	MFOZZ	5315-00-993-5483	96906	MS20253-2-600	..PIN,STRAIGHT, HEADLESS......................UHE,UHH,UHV,UHX	EA	1
85	27	PAOZZ	5360-00-831-1458	97499	204-060-887-1	..SPRING,HELICAL,TORS..........................UHE,UHH,UHV,UHX	EA	2
85	28	MFOZZ	1560-00-963-1059	97499	205-060-810-15	..DOOR ACCESS-LH................................UHE,UHH,UHV,UHX	EA	1
85	29	MFOZZ	1560-00-963-1060	97499	205-060-810-16	..DOOR ACCESS-RH................................UHE,UHH,UHV,UHX	EA	1
85	30	PAOZZ	5340-00-598-2806	83014	H5000-2-032-064	...CATCH,FLUSH...................................UHE,UHH,UHV,UHX	EA	1
85	31	MFOZZ	1560-00-980-9475	97499	205-070-226-1	..STENCIL..UHE,UHH,UHV,UHX	EA	2

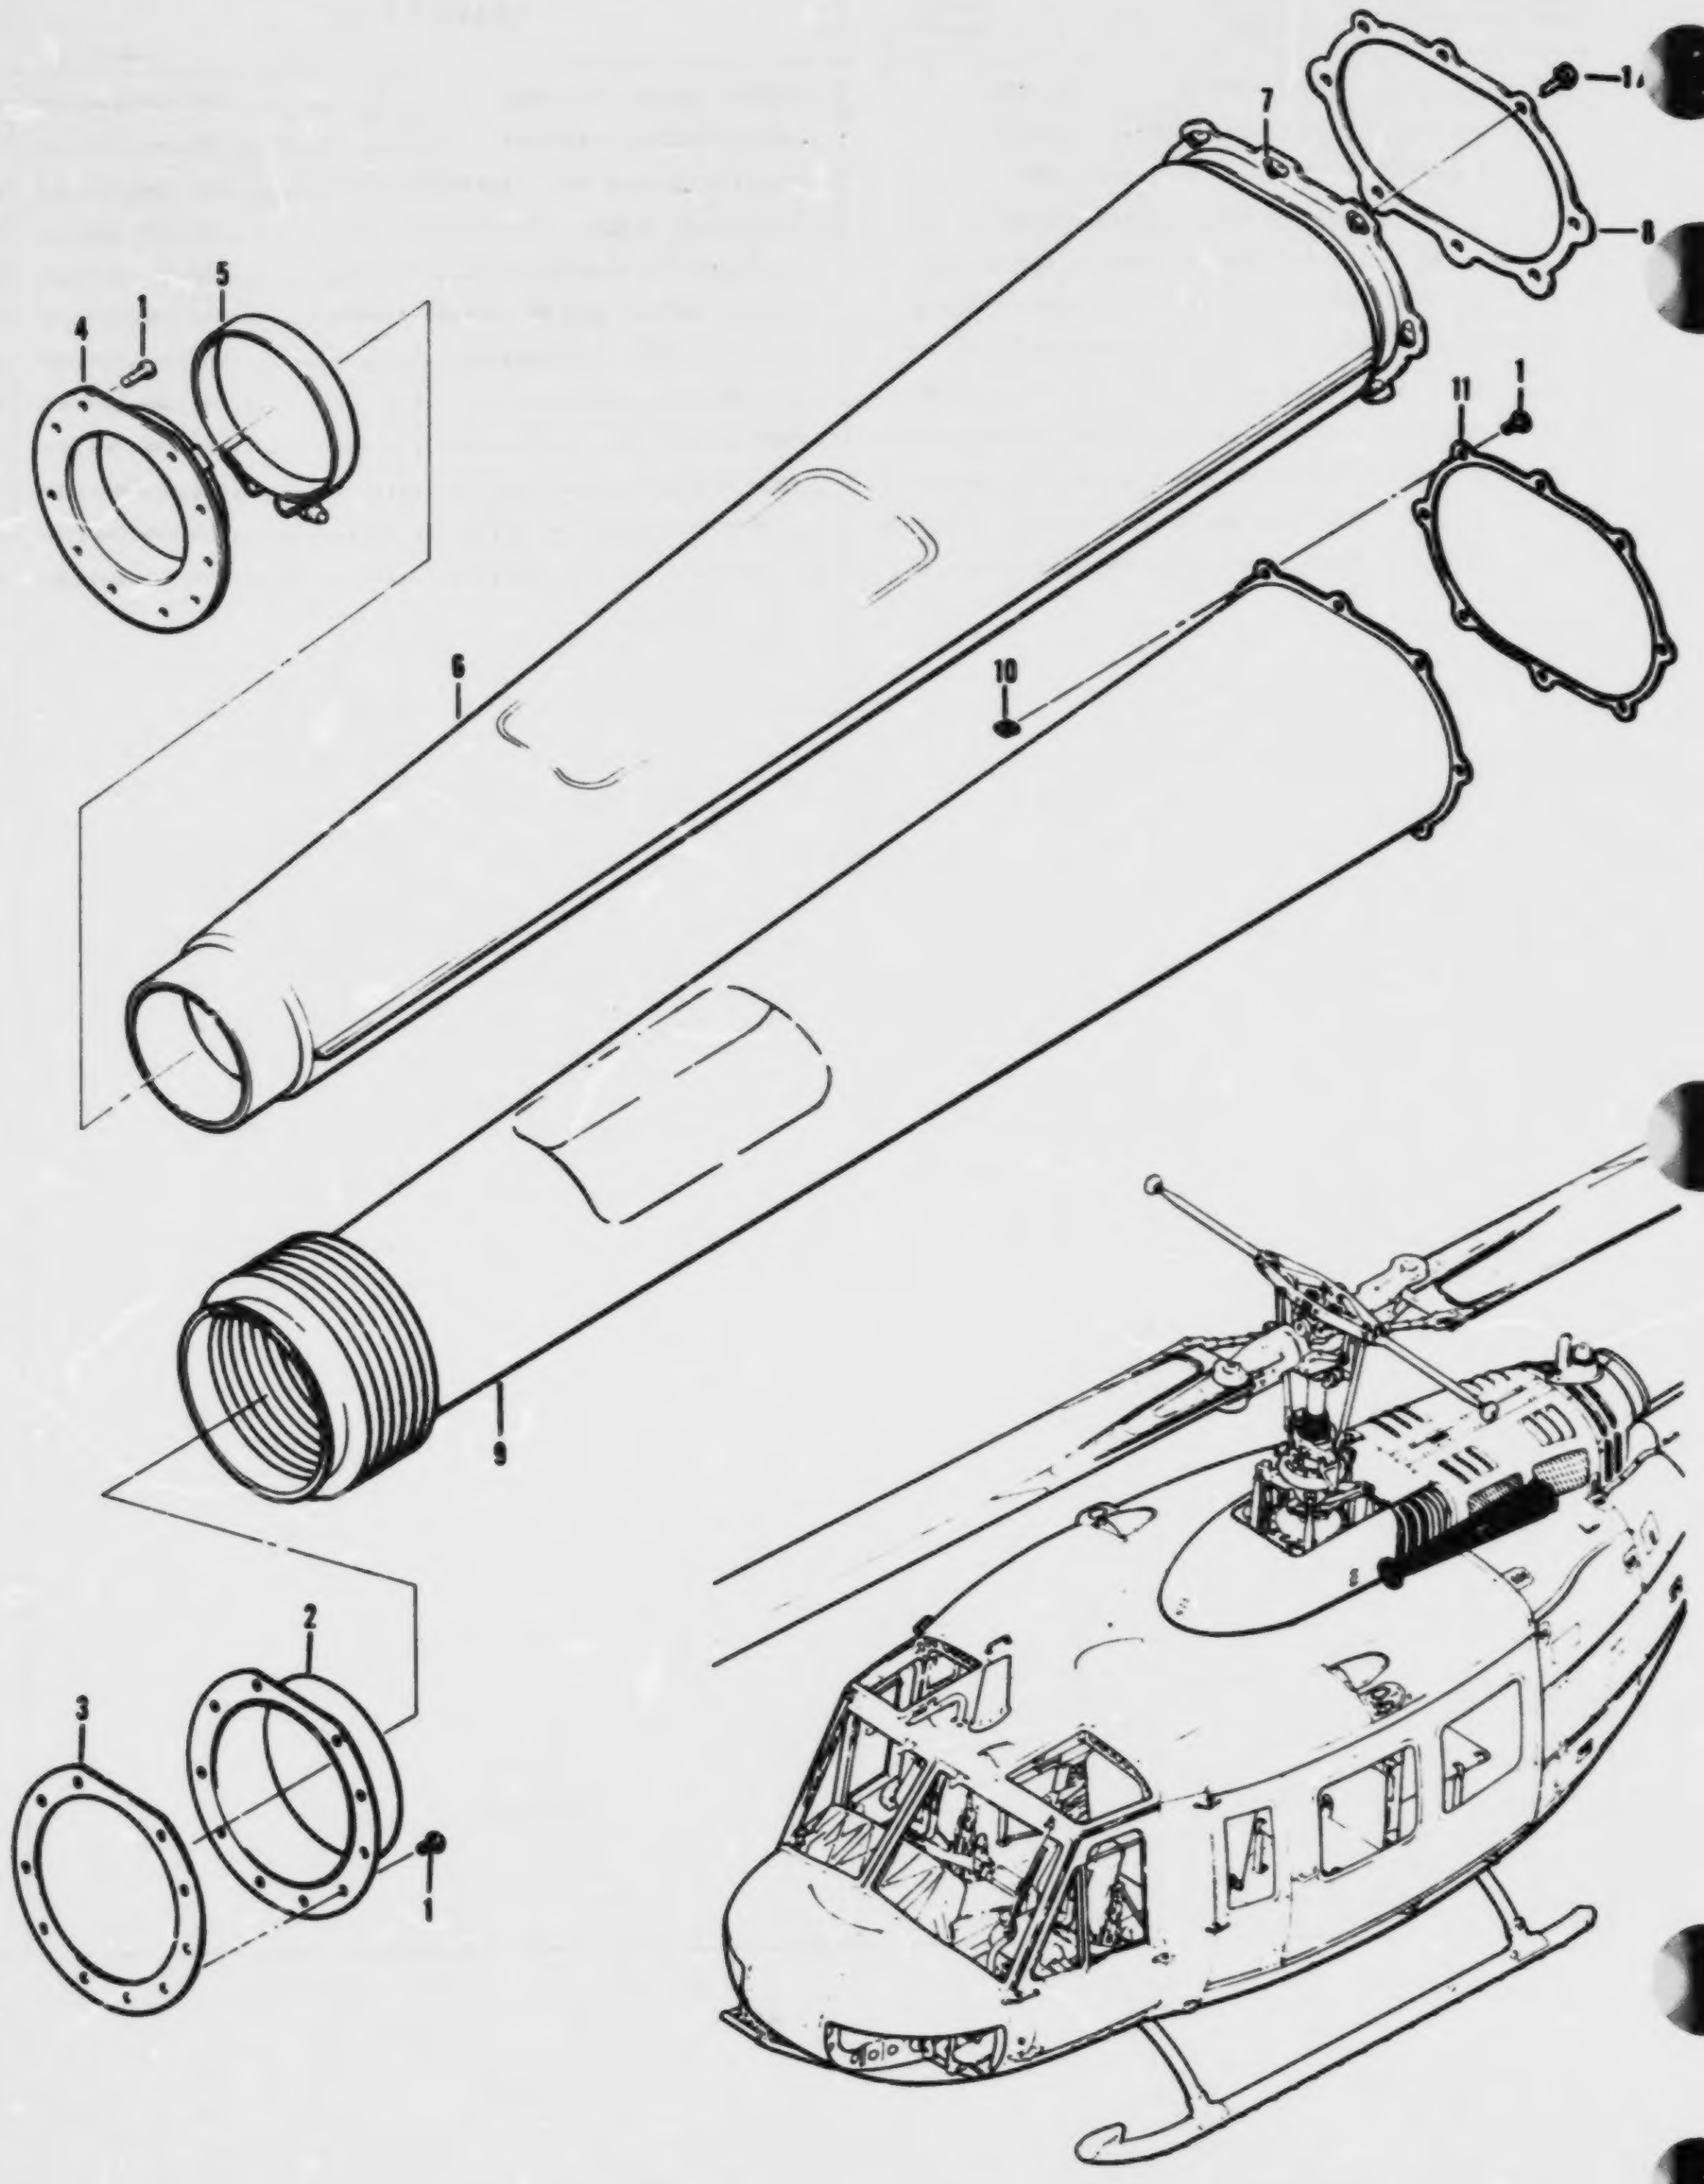
7
1
8
5
1
4
11
1
6
10
9
2
3
1

Figure 86. Fireshield Installation, Tail Rotor Driveshaft

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
86		XCFZZ		97499	205-060-906-1	FIRESHIELD INSTL TAIL ROTOR DRIVE SHAFT USBL EFF 62-2106 THRU 65-9675 SEE FIG. 96 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
86		XCFZZ		97499	205-060-921-1	FIRESHIELD INSTL TAIL ROTOR DRIVE SHAFT USBL EFF 65-9676 & SUBSEQUENT SEE FIG. 96 FOR NHA..........................UHE,UHH,UHV,UHX	EA	1
86	1	PAOZZ	5305-00-281-8527	88044	AN525-832R8	.SCREW,MACHINE U/O PN 205-060-906-5....................UHE,UHH,UHV,UHX	EA	18
86	1	PAOZZ	5305-00-685-7248	00724	23-00620-009	.SCREW,MACHINE U/O PN 205-060-922-33...................UHE,UHH,UHV,UHX	EA	18
86	2	PAOZZ	1560-00-992-6521	97499	205-060-906-3	.TUBE ASSEMBLY, FIRES U/O PN 205-060-906-1...........UHE,UHH,UHV,UHX	EA	1
86	3	PAOZZ	5330-00-961-4431	97499	205-060-906-11	..GASKET U/O PN 205-060-906-3..........................UHE,UHH,UHV,UHX	EA	1
86	4	PAOZZ	1560-00-939-7592	97499	205-060-923-1	.BOOT, TAIL ROTOR SHA U/O PN 205-060-921-1...........UHE,UHH,UHV,UHX	EA	1
86	5	PAOZZ	5340-00-919-4664	94581	U12-075-500SH	.CLAMP,LOOP U/O PN 205-060-921-1.....................UHE,UHH,UHV,UHX	EA	1
86	6	PAOFF	1615-00-400-7300	97499	205-060-922-33	.HEATSHIELD,DRIVE U/O PN 205-060-921-1...............UHE,UHH,UHV,UHX	EA	1
86	7	PAOZZ	5310-00-771-7406	96906	MS21076L3	..NUT,SELF-LOCKING,PL U/O PN 205-060-922-33 ....UHE,UHH,UHV,UHX	EA	8
86	8	PAOZZ	5330-00-961-4432	97499	205-060-924-1	.GASKET U/O PN 205-060-921-1...........................UHE,UHH,UHV,UHX	EA	1
86	9	PAOZZ	1560-00-992-6520	97499	205-060-906-5	.TUBE ASSEMBLY U/O PN 205-060-906-1...................UHE,UHH,UHV,UHX	EA	1
86	10	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL U/O PN 205-060-906-5 ....UHE,UHH,UHV,UHX	EA	8
86	11	PAOZZ	5330-00-961-4432	97499	205-060-906-19	..GASKET U/O PN 205-060-906-5..........................UHE,UHH,UHV,UHX	EA	1

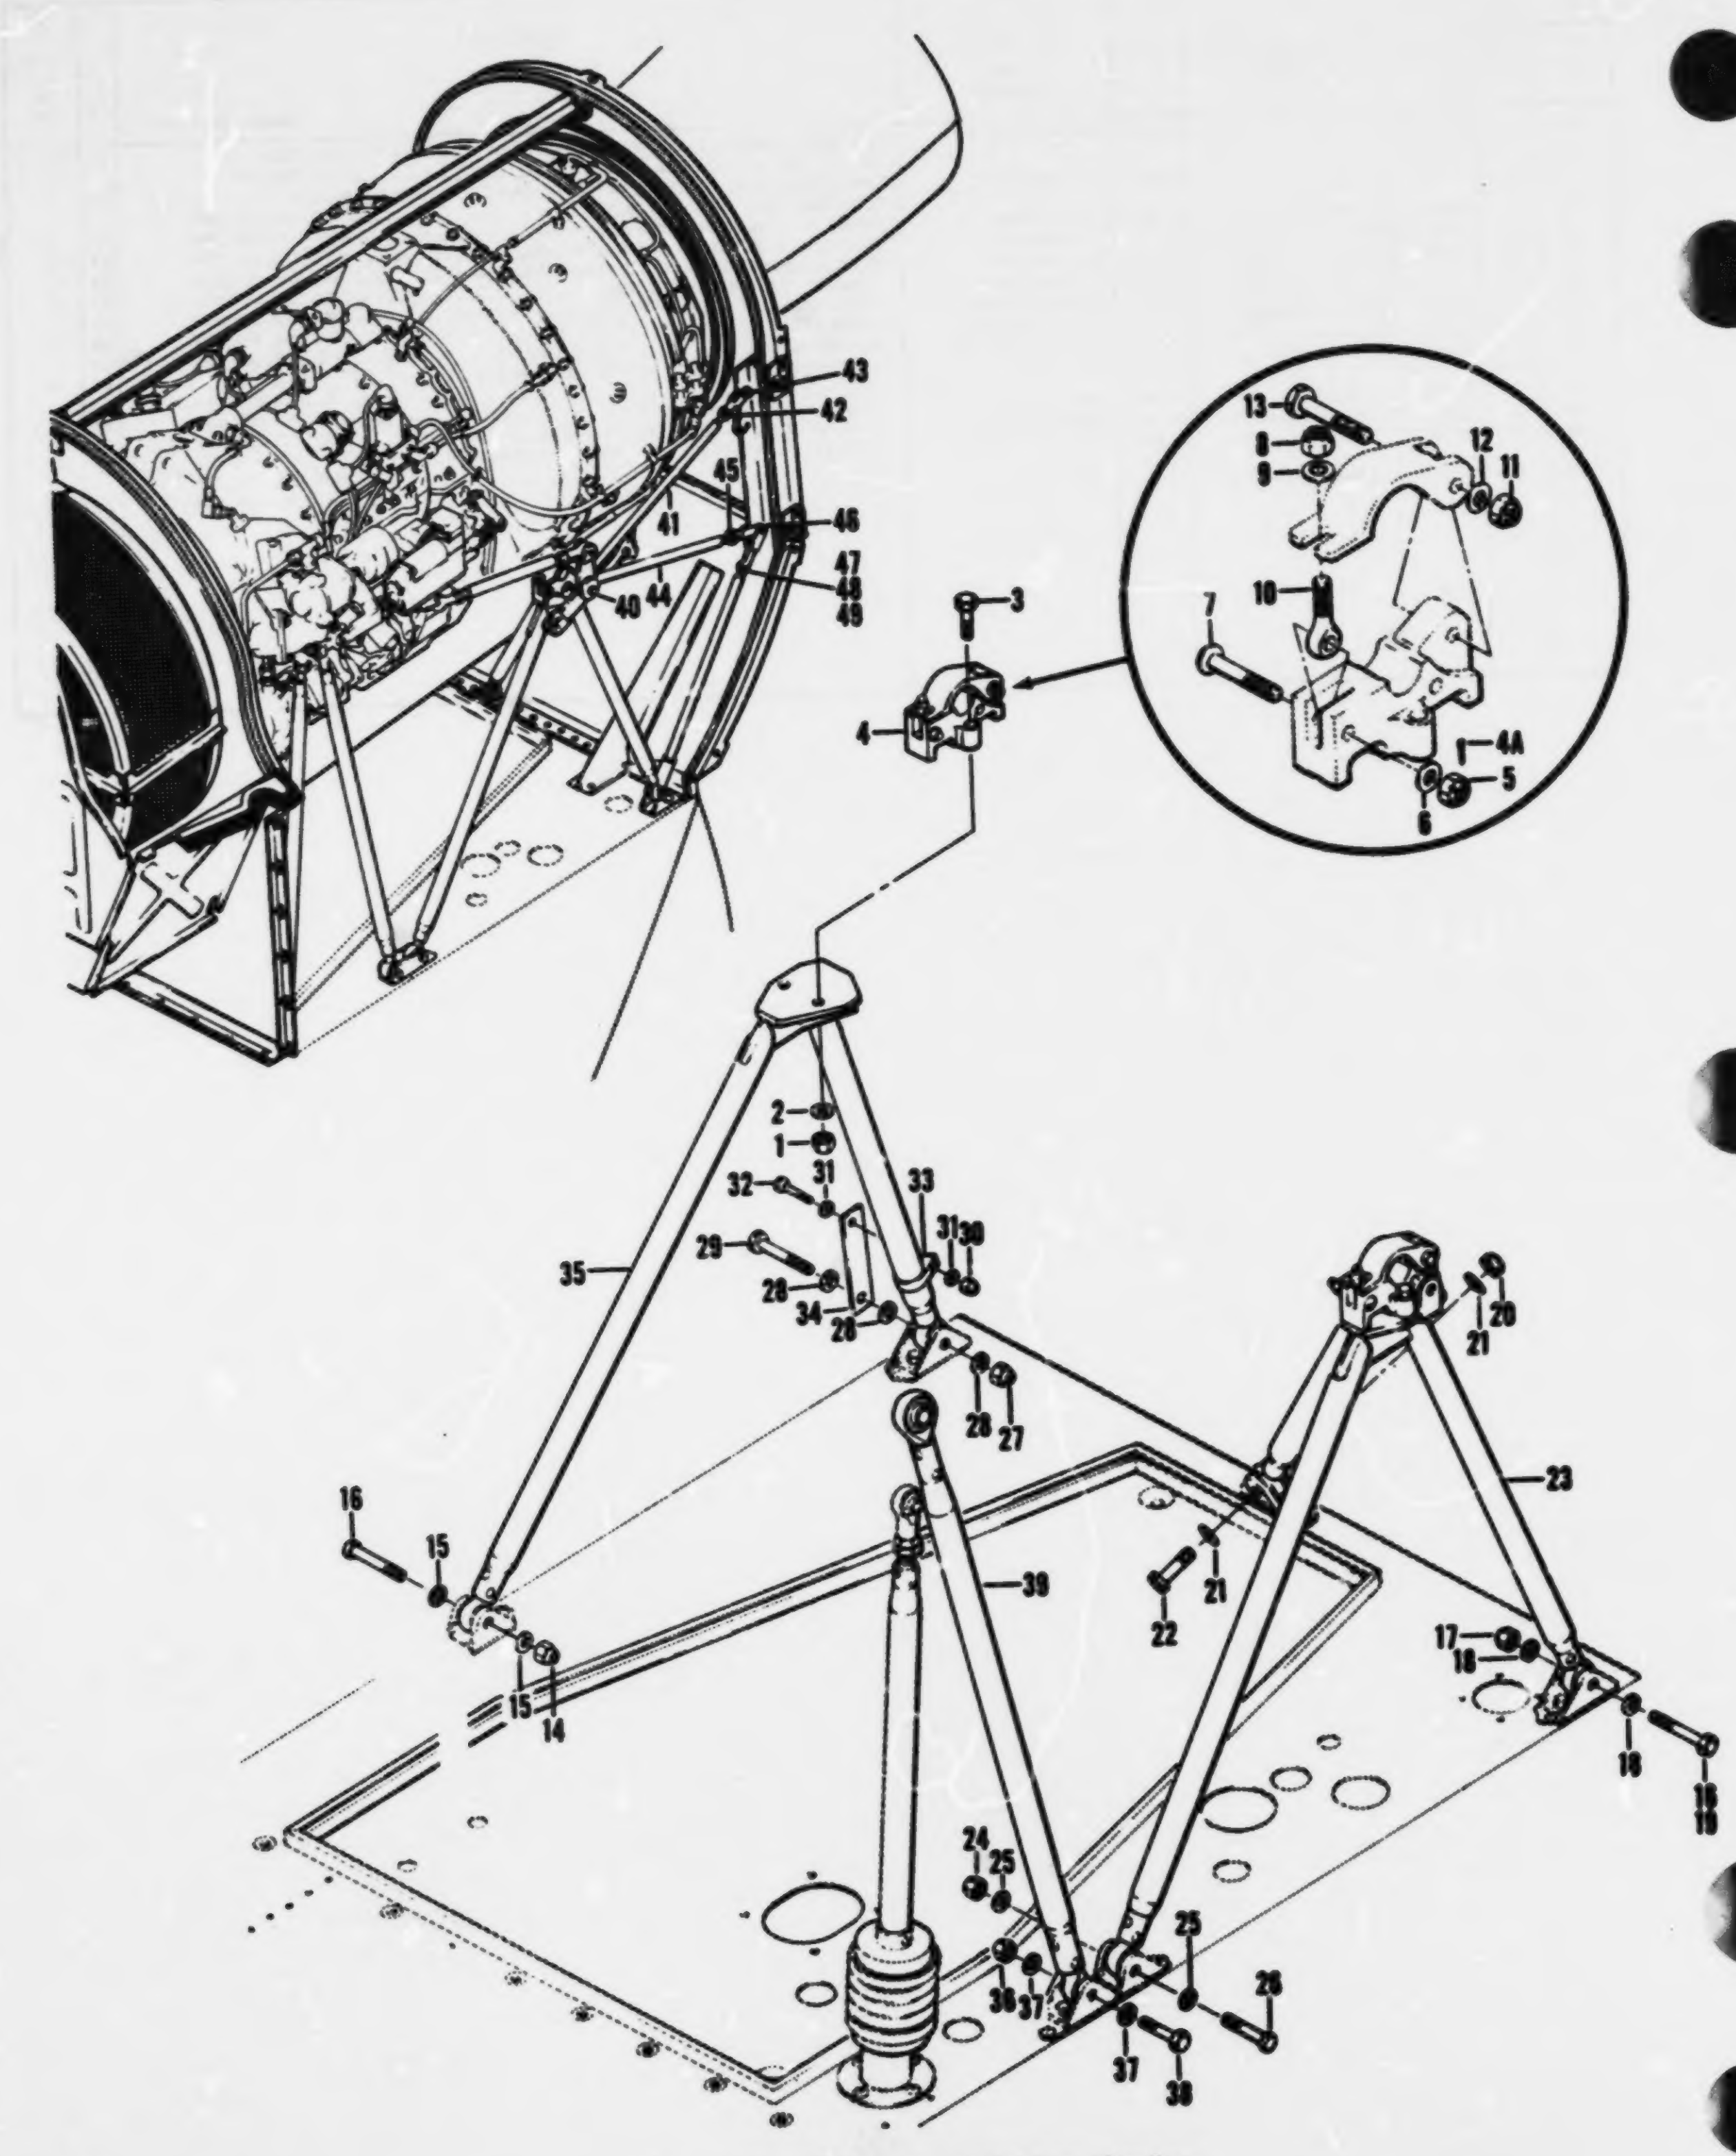
43
42
45
41
46
47
48
49
40
44
13
8
9
12
11
10
7
4A
5
6
3
4
2
1
32
31
33
31
30
29
35
28
34
28
20
21
28
27
23
16
15
39
21
22
15
14
17
18
18
19
24
25
25
26
36
37
37
38

Figure 87. Mount Installation, Engine

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
87		XCFZZ		97499	204-060-160-1	MOUNT INSTL,ENGINE USBL EFF 60-3546 THRU 60-3619 SEE FIG.6 FOR NHA..........UHB	EA	1
87		XCFZZ		97499	204-060-160-3	MOUNT INSTL,ENGINE USBL EFF 61-686 THRU 61-803 SEE FIG.6 FOR NHA..........UHB	EA	1
87		XCFZZ		97499	204-060-160-5	MOUNT INSTL,ENGINE USBL EFF <UH-1B> 62-1872 THRU 64-14100 <UH-1C> 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA ....UHB,UHC,UHM	EA	1
87		XCFZZ		97499	204-060-160-7	MOUNT INSTL,ENGINE USBL EFF 65-9416 & SUBSEQUENT SEE FIG.6 FOR NHA..........UHC,UHM	EA	1
87		XCFZZ		97499	205-060-100-3	MOUNT INSTL,ENGINE USBL EFF 62-2106 THRU 64-13901 SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
87		XCFZZ		97499	205-060-100-5	MOUNT INSTL,ENGINE USBL EFF 65-9565 & SUBSEQUENT SEE FIG.7 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
87	1	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
87	2	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
87	3	PAOZZ	5306-00-156-2537	88044	AN174H12A	.BOLT,CLOSE TOLERANC..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
87	4	PAOOO	1560-00-409-9146	97499	204-060-102-11	.SUPPORT,STRUCTURAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	SE	2
87	4A	PAOZZ	5315-00-234-1854	96906	MS24665-153	..PIN,COTTER..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	5	PAOZZ	5310-00-167-1285	88044	AN310-4	..NUT,PLAIN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	6	PAOZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	7	PAOZZ	5306-00-156-2703	88044	AN24-19	..BOLT,CLEVIS..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	8	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING, EXTENDED WASHER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	9	PAOZZ	5310-00-809-4058	96906	MS27183-10	..WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	10	PAOZZ	5306-00-670-8063	97499	204-060-123-1	..BOLT,EYE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	11	PAOZZ	5310-00-167-1285	88044	AN310-4	..NUT,PLAIN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	12	PAOZZ	5310-00-167-0835	88044	AN960-416L	..WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	13	PAOZZ	5306-00-145-7659	88044	AN174H12	..BOLT,CLOSE TOLER..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	14	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	15	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
87	16	XDOZZ		88044	AN174H13A	.BOLT,CLOSE TOLER..........UHB,UHC,UHM	EA	1
87	16	PAOZZ	5306-00-156-2537	88044	AN174H12A	.BOLT,CLOSE TOLERANC..........UHE,UHH,UHV,UHX	EA	2
87	17	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	18	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
87	18	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
87	19	PAOZZ	5306-00-141-4512	88044	AN174H21A	.BOLT,CLOSE TOLERANC..........UHB,UHC,UHM	EA	1
87	20	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN..........UHB,UHC,UHM	EA	1
87	20	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING, EXTENDED WASHER..........UHE,UHH,UHV,UHX	EA	1
87	21	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
87	22	PAOZZ	5306-00-145-7659	88044	AN174H12	.BOLT,CLOSE TOLERANCE..........UHB,UHC,UHM	EA	1
87	22	PAOZZ	5306-00-156-2537	88044	AN174H12A	.BOLT,CLOSE TOLERANC..........UHE,UHH,UHV,UHX	EA	2
87	23	PAOZZ	1560-00-731-8021	97499	204-060-157-1	.TRIPOD ASSEMBLY..........UHB,UHC,UHM	EA	1
87	23	PAOZZ	1560-00-967-1751	97499	205-060-105-1	.TRIPOD ASSEMBLY,ENG..........UHE,UHH,UHV,UHX	EA	1
87	24	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING EXTENDED WASHER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	25	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
87	26	XDOZZ		88044	AN174H13A	.BOLT,CLOSE TOLERANCE..........UHB,UHC,UHM	EA	1
87	26	PAOZZ	5306-00-156-2537	88044	AN174H12A	.BOLT,CLOSE TOLERANC..........UHE,UHH,UHV,UHX	EA	1
87	27	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING EXTENDED WASHER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	28	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
87	29	PAOZZ	5306-00-141-4512	88044	AN174H21A	.BOLT,CLOSE TOLERANC..........UHB,UHC,UHM	EA	1
87	29	XDOZZ		88044	AN174H13A	.BOLT,CLOSE TOLERANCE..........UHE,UHH,UHV,UHX	EA	1
87	30	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING EXTENDED WASHER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	31	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
87	32	PAOZZ	5306-00-182-2063	88044	AN3H12A	.BOLT,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	33	PAOZZ	5340-00-593-3392	97499	45C20AAD12	.CLAMP,LOOP..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	34	PAOZZ	5360-00-731-8070	97499	204-060-162-1	.SPRING,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	35	PAOZZ	1560-00-731-8011	97499	204-060-155-1	.BIPOD ASSEMBLY,ENGI..........UHB,UHC,UHM	EA	1
87	35	PAOZZ	1560-00-967-1752	97499	205-060-106-1	.BIPOD ASSEMBLY,ENGI..........UHE,UHH,UHV,UHX	EA	1
87	36	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING EXTENDED WASHER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
87	37	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
87	38	XDOZZ		88044	AN174H13A	.BOLT,CLOSE TOLERANCE..........UHB,UHC,UHM	EA	1
87	38	PAOZZ	5306-00-156-2537	88044	AN174H12A	.BOLT,CLOSE TOLERANC..........UHE,UHH,UHV,UHX	EA	1
87	39	PAOZZ	3040-00-873-2269	97499	204-060-158-5	.CONNECTING LINK RIGID..........UHB,UHC,UHM	EA	1
87	39	PAOZZ	3040-00-078-9698	97499	205-060-107-1	.CONNECTING LINK RIGID..........UHE,UHH,UHV,UHX	EA	1
87	40	PAOZZ	5315-00-811-1241	96906	MS20392-2C17	.PIN,STRAIGHT HEADED..........UHB	EA	2
87	41	PAOOO	1560-00-602-3427	97499	204-060-837-1	.SUPPORT,COWL HINGE..........UHB,UHC,UHM	EA	2
87	41	XAOZZ		97499	204-060-837-3	..TUBE..........UHB,UHC,UHM	EA	1
87	42	PAOZZ	5310-00-282-4777	88044	AN316C4R	..NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1
87	43	PAOZZ	5340-00-257-3765	96906	MS27975-2	..CLEVIS,ROD END..........UHB,UHC,UHM	EA	1
87	44	PAOOO	3040-00-831-1456	97499	204-060-838-1	.CONNECTING LINK,RIG..........UHB,UHC,UHM	EA	2
87	44	XAOZZ		97499	204-060-838-3	..TUBE ASSEMBLY..........UHB,UHC,UHM	EA	1
87	45	PAOZZ	5310-00-282-4777	88044	AN316C4R	..NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1
87	46	PAOZZ	5340-00-257-3765	96906	MS27975-2	..CLEVIS,ROD END..........UHB,UHC,UHM	EA	1
87	47	PAOOO	1560-00-675-3257	97499	204-060-897-7	.TUBE ASSEMBLY,HINGE..........UHB,UHC,UHM	EA	2
87	48	PAOZZ	5340-00-767-8027	97499	204-060-949-1	..CLEVIS,ROD END..........UHB,UHC,UHM	EA	1
87	49	PAOZZ	5310-00-282-4777	88044	AN316C4R	..NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1

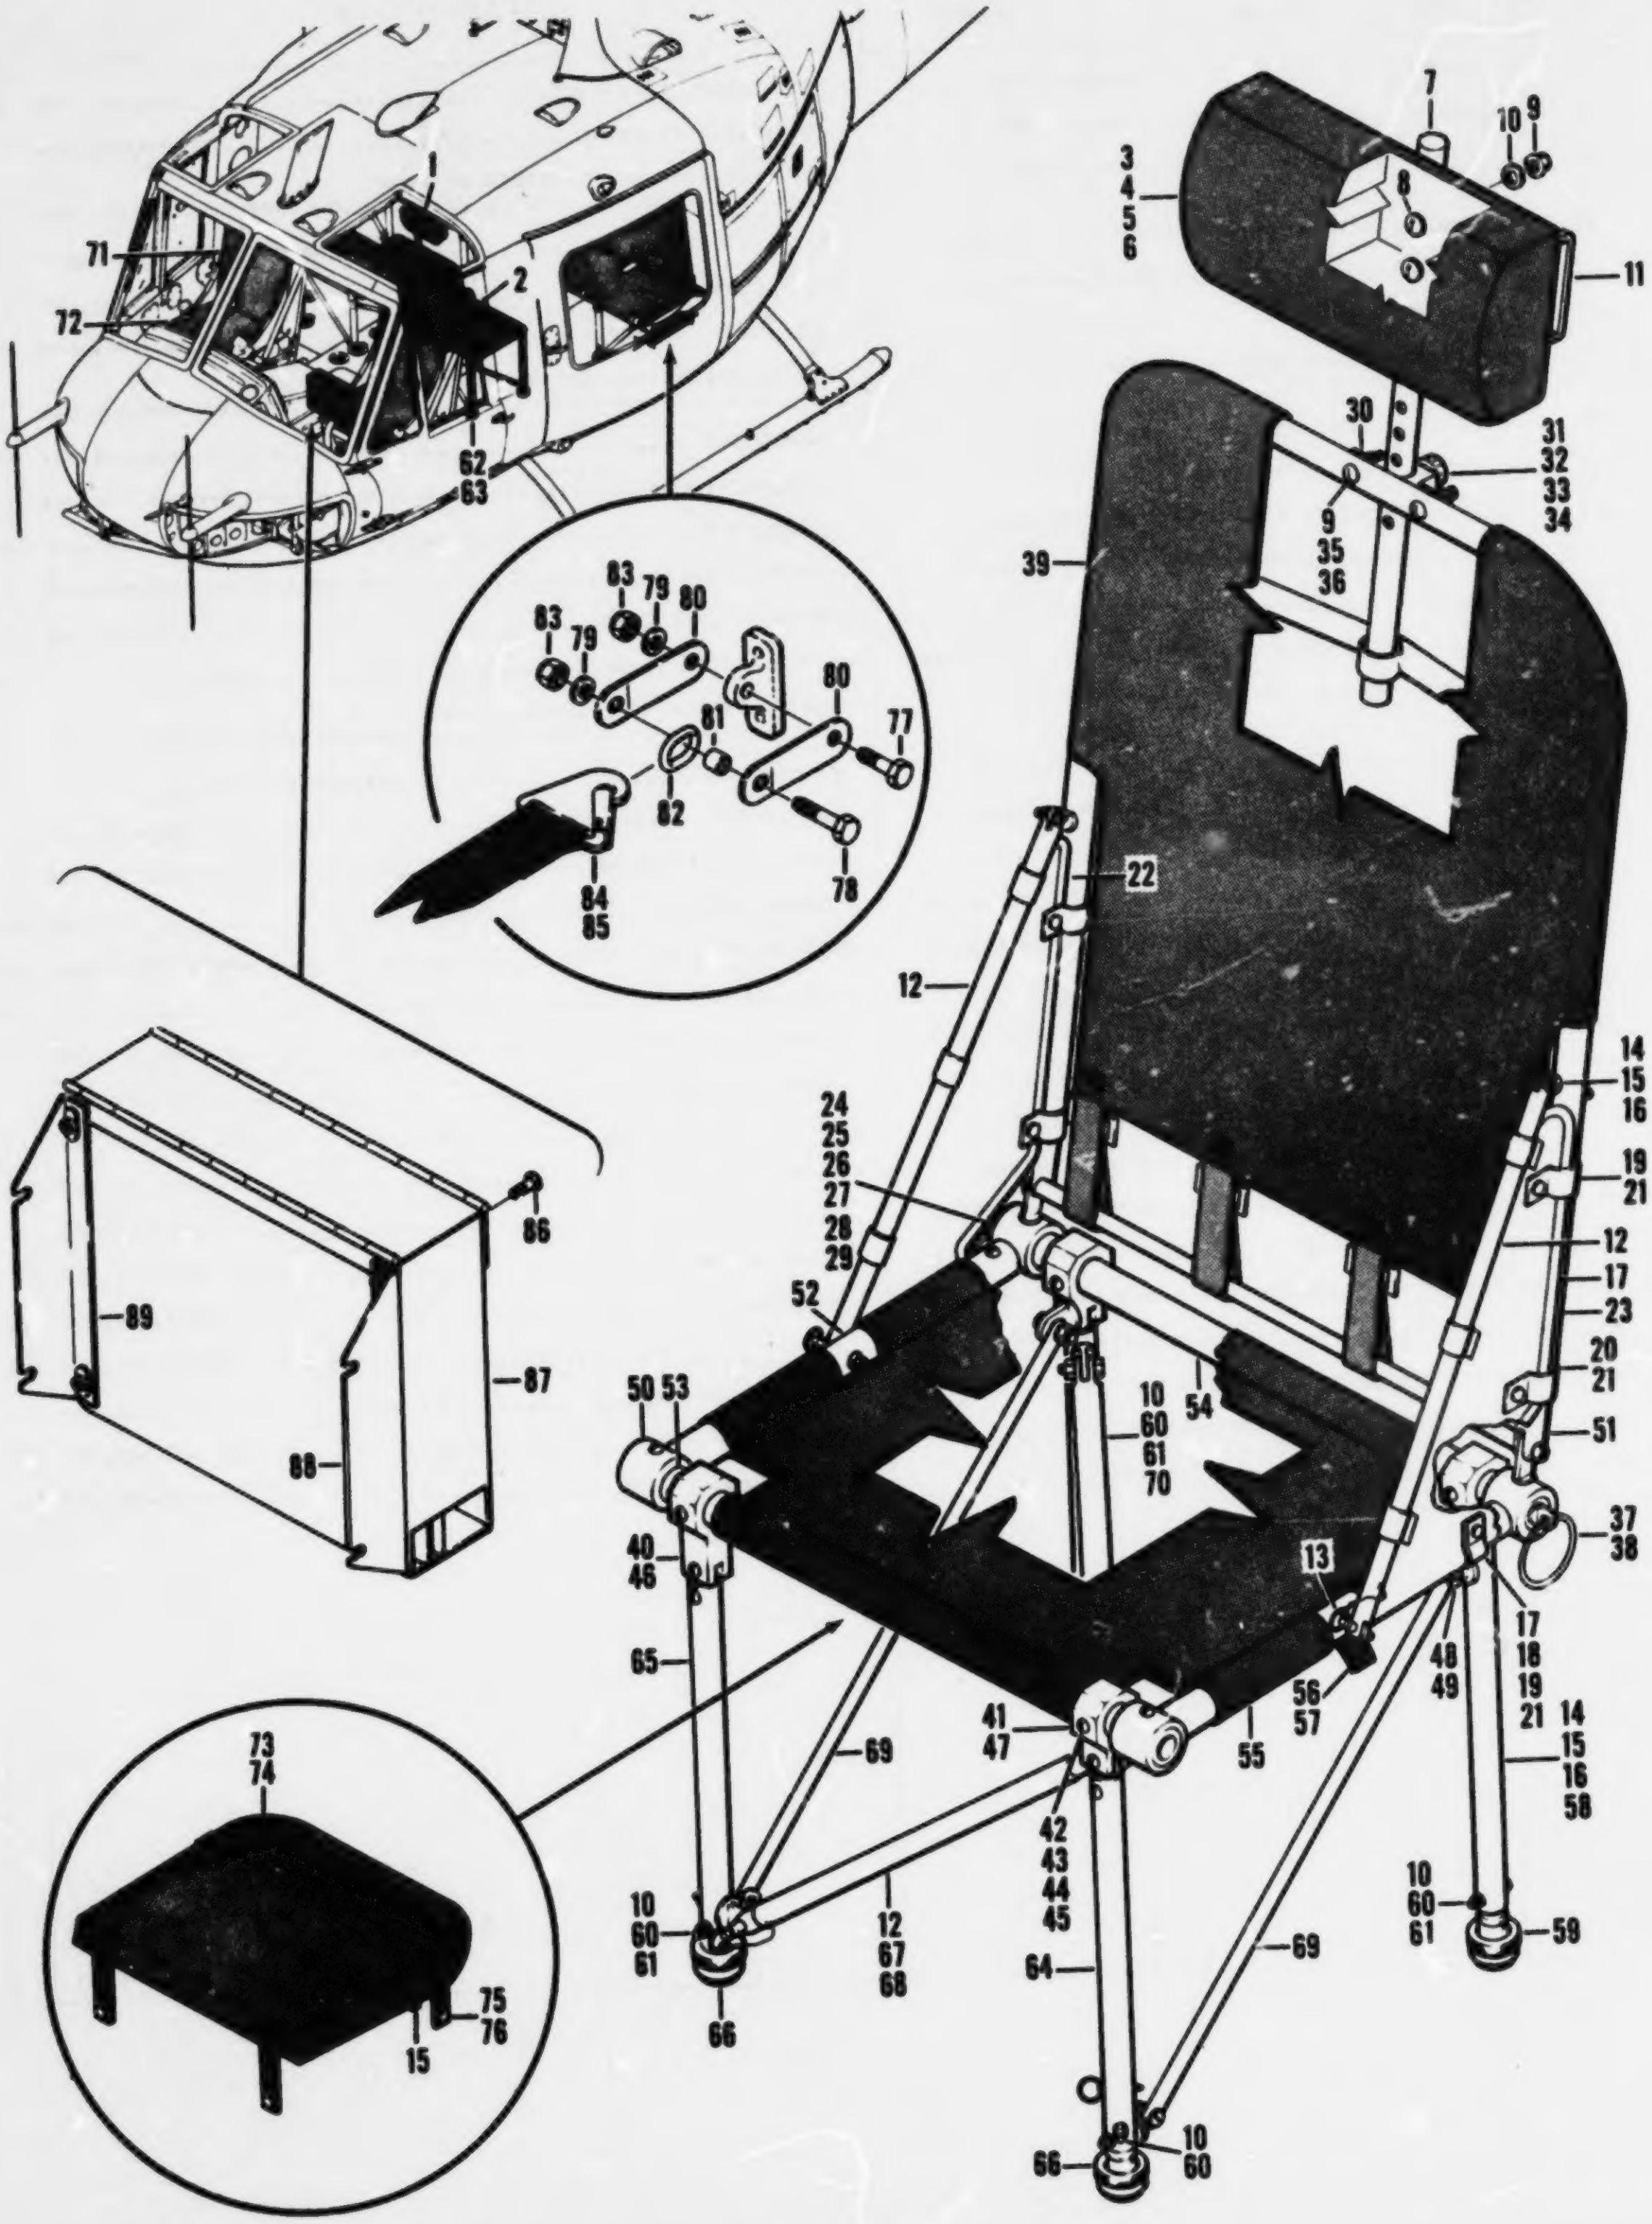
1
2
71
72
62
63
3
4
5
6
7
10
9
8
11
30
31
32
33
34
9
35
36
39
83
79
80
83
79
80
81
77
82
78
84
85
22
12
86
89
87
88
14
15
16
19
21
24
25
26
27
28
29
12
17
23
52
20
21
50
53
10
60
61
70
54
51
37
38
40
46
13
65
48
49
17
18
19
21
14
15
16
58
41
47
56
57
55
69
42
43
44
45
73
74
10
60
61
12
67
68
10
60
61
59
69
64
75
76
15
66
66
10
60

Figure 88. Loose Equipment Installation, Installed

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 02 AIRFRAME		
88		XCFZZ		97499	204-070-004-19	LOOSE EQUIPMENT INS INSTALLED USBL EFF 60-3546 THRU 61-719 & 61-736 THRU 61-803 SEE FIG.4 FOR NHA........UHB	EA	1
88		XCFZZ		97499	204-070-004-33	LOOSE EQUIP INSTL INSTALLED USBL EFF 60-3546 THRU 61-719 & 61-736 THRU 61-803 SEE FIG.4 FOR NHA........UHB	EA	1
88		XCFZZ		97499	204-070-004-29	LOOSE EQUIP INSTL INSTALLED USBL EFF 62-1872 THRU 62-1921 SEE FIG.4 FOR NHA........UHB	EA	1
88		XCFZZ		97499	204-070-004-55	LOOSE EQUIP INSTL INSTALLED USBL EFF 62-1922 THRU 62-1996 SEE FIG.4 FOR NHA........UHB	EA	1
88		XCFZZ		97499	204-070-004-67	LOOSE EQUIP INSTL INSTALLED USBL EFF 62-1997 THRU 62-12555 SEE FIG.4 FOR NHA........UHB	EA	1
88		XCFZZ		97499	204-070-004-45	LOOSE EQUIP INSTL INSTALLED USBL EFF 63-8500 THRU 63-8658 SEE FIG.4 FOR NHA........UHB	EA	1
88		XCFZZ		97499	204-070-004-85	LOOSE EQUIP INSTL INSTALLED USBL EFF 63-8659 THRU 64-14191 SEE FIG.4 FOR NHA........UHB,UHC,UHM	EA	1
88		XCFZZ		97499	204-070-004-103	LOOSE EQUIP INSTL INSTALLED USBL EFF 65-9416 & SUBSEQUENT SEE FIG.4 FOR NHA........UHC,UHM	EA	1
88	1	XCFZZ		97499	204-070-042-1	SEAT INSTL USBL EFF 60-3546 THRU 61-803........UHB	EA	1
88	1	XCFZZ		97499	204-070-590-1	SEAT INSTL USBL EFF 62-1872 THRU 63-8658........UHB	EA	1
88	1	XCFZZ		97499	204-070-590-3	SEAT INSTL USBL EFF 63-8659&SUBSEQUENT........UHB,UHC,UHM	EA	1
88	2	PAOOO	1680-00-215-4315	97499	204-070-023-5	.SEAT,AIRCRAFT........UHB,UHC,UHM	EA	1
88	2	PAOOO	1680-00-215-4315	15814	A7536-20	.SEAT,AIRCRAFT........UHB,UHC,UHM	EA	1
88	3	PAOOO	1680-00-404-0855	15814	A6565-10	..HEADREST ASSEMBLY........UHB,UHC,UHM	EA	1
88	4	XBOOZ	1680-00-181-4914	15814	A6609-10	...CUSHION,HEADREST........UHB,UHC,UHM	EA	1
88	5	XBOZZ	1680-00-795-0920	15814	A6609-3	....DRAWSTRING,HEADREST........UHB,UHC,UHM	EA	1
88	6	PAOZZ	1680-00-902-5205	15814	A6609-4	....CUSHION COVER, HEADREST........UHB,UHC,UHM	EA	1
88	7	XBOZZ	1680-00-H23-3891	15814	A6608	...TUBE,ADJUSTING HEADREST........UHB,UHC,UHM	EA	1
88	8	PAOZZ	5306-00-151-1971	88044	AN23-19	...BOLT,CLEVIS........UHB,UHC,UHM	EA	2
88	9	PAOZZ	5310-00-877-5797	96906	MS21044N3	...NUT,SELF-LOCKING HEXAGON........UHB,UHC,UHM	EA	V
88	10	PAOZZ	5310-00-167-0753	88044	AN960PD10L	...WASHER,FLAT........UHB,UHC,UHM	EA	V
88	11	XBOZZ	1680-00-H23-3896	15814	A6611	...EXTRUSION HEADREST........UHB,UHC,UHM	EA	1
88	12	XBOOO	1680-00-H05-5013	15814	A6962	..BRACE TUBE,BACK U/O PN A7536-20........UHB,UHC,UHM	EA	1
88	13	PBOZZ	5340-00-840-4562	80205	NAS1354S7S08	...PIN,QUICK RELEASE........UHB	EA	V
88	14	PAOZZ	5306-00-271-6885	88044	AN43B12	..BOLT,EYE........UHB,UHC,UHM	EA	V
88	15	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT........UHB,UHC,UHM	EA	V
88	16	PAOZZ	5310-00-903-8282	96906	MS21083N4	..NUT,SELF-LOCKING HEXAGON........UHB,UHC,UHM	EA	V
88	17	PAOOO	1680-00-122-5230	15814	A7730-30	..GUARD ASSY,PASSENGE........UHB,UHC,UHM	EA	1
88	18	PAOZZ	5325-00-276-4953	88044	AN227-6	...CAP,SNAP FASTENER FASTENER........UHB,UHC,UHM	EA	V
88	19	PAOZZ	5325-00-285-6250	88044	AN227-7B	...SOCKET,SNAP FASTENER........UHB,UHC,UHM	EA	V
88	20	PAOZZ	5325-00-174-2923	88044	AN227-8	...STUD,SNAP FASTENER FASTENER........UHB,UHC,UHM	EA	V
88	21	PAOZZ	5325-00-276-4978	96906	MS27980-8B	...POST,SNAP FASTENER........UHB,UHC,UHM	EA	V
88	22	PAOZO	1680-00-122-5232	15814	A7730-40	..GUARD ASSY,PASSENGE........UHB,UHC,UHM	EA	1
88	23	XBOZZ	1680-00-157-6642	15814	A6564-10	..FRAME ASSY,SEAT BACK........UHB,UHC,UHM	EA	1
88	24	XBOZZ	1680-00-212-0746	15814	A6570	..SUPPORT,BACK,SEAT........UHB,UHC,UHM	EA	1
88	25	PAOZZ	5306-00-151-3535	88044	AN25-21A	..BOLT,CLEVIS........UHB,UHC,UHM	EA	2
88	26	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT........UHB,UHC,UHM	EA	2
88	27	XBOZZ	1680-00-H23-3895	15814	A6610	..SPREADER ASSEMBLY........UHB,UHC,UHM	EA	1
88	28	PAOZZ	5306-00-156-2525	88044	AN23-23A	..BOLT,CLEVIS........UHB,UHC,UHM	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
88	29	PAOZZ	5305-00-057-9612	96906	MS24621-30	..SCREW,TAPPING THREAD..........................UHB,UHC,UHM	EA	5
88	30	XBOOO	1680-00-H05-4987	15814	A6550	..HEADREST FITTING ADJUSTMENT...................UHB,UHC,UHM	EA	1
88	31	XAOZZ		15814	3551	...KNOB...UHB,UHC,UHM	EA	1
88	32	XAOZZ		15814	3550	...PLUNGER......................................UHB,UHC,UHM	EA	1
88	33	XAOZZ		15814	AC1667	...SPRING.......................................UHB,UHC,UHM	EA	1
88	34	XAOZZ		15814	A6004	...BOSS...UHB,UHC,UHM	EA	1
88	35	PAOZZ	5306-00-156-2527	88044	AN23-25A	..BOLT,CLEVIS...................................UHB,UHC,UHM	EA	2
88	36	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT...................................UHB,UHC,UHM	EA	6
88	37	XBOZZ	1680-00-165-4673	15814	A6569-10	..PLUG AND RING ASSY............................UHB,UHC,UHM	EA	1
88	38	XBOZZ	1680-00-212-0751	15814	A6569-20	..PLUG AND RING ASSEM...........................UHB,UHC,UHM	EA	1
88	39	PAOZZ	1680-00-924-8656	15814	A6567-60	..PANEL ASSEMBLY,SEAT U/O PN A7536-20...........UHB,UHC,UHM	EA	1
88	40	XBOOO	1680-00-H23-3866	15814	A8071	..LEG BRACKET-LH FRON...........................UHB,UHC,UHM	EA	1
88	41	XBOOO	1680-00-H23-3862	15814	A8072	..LEG BRACKET-RH FRON...........................UHB,UHC,UHM	EA	1
88	42	XAOZZ		15814	3551	...KNOB...UHB,UHC,UHM	EA	1
88	43	XAOZZ		15814	3550	...PLUNGER......................................UHB,UHC,UHM	EA	1
88	44	XAOZZ		15814	AC1667	...SPRING.......................................UHB,UHC,UHM	EA	1
88	45	XAOZZ		15814	A6004	...BOSS...UHB,UHC,UHM	EA	1
88	46	XAOZZ		15814	A6547	...LEG BRACKET U/O PN U/O PN A8071..............UHB,UHC,UHM	EA	1
88	47	XAOZZ		15814	A6545	...LEG,BRACKET U/O PN A8072.....................UHB,UHC,UHM	EA	1
88	48	XBOZZ	1680-00-215-0904	15814	A6546	..LEG BRACKET,SEAT -RH REAR.....................UHB,UHC,UHM	EA	1
88	49	XBOZZ	1680-00-213-5337	15814	A6548	..LEG BRACKET,SEAT -LH REAR.....................UHB,UHC,UHM	EA	1
88	50	XBOZZ	1680-00-213-5340	15814	A7534-10	..BRACKET,SPREADER SEAT.........................UHB,UHC,UHM	EA	2
88	51	XBOZZ	1680-00-213-5336	15814	A7534-20	..BRACKET,SPREADER SEAT.........................UHB,UHC,UHM	EA	2
88	52	XBOZZ	1680-00-213-5339	15814	A6560	..TUBE,SPREADER,SEAT............................UHB,UHC,UHM	EA	2
88	53	XBOZZ	1680-00-213-5352	15814	A6561	..BEAM,FRONT,SEAT...............................UHB,UHC,UHM	EA	1
88	54	XBOZZ	1680-00-213-5338	15814	A6562	..BEAM,REAR,SEAT................................UHB,UHC,UHM	EA	1
88	55	PAOOO	1680-00-924-8672	15814	A6568-20	..PANEL ASSEMBLY,SEAT U/O PN A7536-20...........UHB,UHC,UHM	EA	1
88	56	PAOZZ	5325-00-276-4953	88044	AN227-6	...CAP,SNAP FASTENER............................UHB,UHC,UHM	EA	4
88	57	PAOZZ	5325-00-285-6250	88044	AN227-7B	...SOCKET,SNAP FASTENE..........................UHB,UHC,UHM	EA	4
88	58	XBOOO	1680-00-H23-3871	15814	A6554	..LEG ASSEMBLY -RH REAR.........................UHB,UHC,UHM	EA	1
88	59	PAOZZ	1680-00-592-4878	96906	MS22034-2	...ADAPTER QUICK DISCO..........................UHB,UHC,UHM	EA	1
88	60	PAOZZ	5306-00-151-0781	88044	AN3-13A	...BOLT,MACHINE.................................UHB,UHC,UHM	EA	1
88	61	PAOZZ	5310-00-183-4406	88044	AN960PD10	...WASHER,FLAT..................................UHB,UHC,UHM	EA	1
88	62	XBOOO	1680-00-H23-3872	15814	A6555	..LEG ASSEMBLY -LH REAR.........................UHB,UHC,UHM	EA	1
88	63	PAOZZ	1680-00-592-4878	96906	MS22034-2	...ADAPTER QUICK DISCO..........................UHB,UHC,UHM	EA	1
88	64	XBOOO	1680-00-H05-4990	15814	A6556	..LEG ASSEMBLY -RH FRONT........................UHB,UHC,UHM	EA	1
88	65	XBOOO	1680-00-H05-4991	15814	A6557	..LEG ASSEMBLY -LH FRONT........................UHB,UHC,UHM	EA	1
88	66	PAOZZ	1680-00-592-4878	96906	MS22034-2	...ADAPTER QUICK DISCO..........................UHB,UHC,UHM	EA	1
88	67	XBOOO	1680-00-H05-4994	15814	A6558	..BRACE TUBE ASSEMBLY...........................UHB,UHC,UHM	EA	1
88	68	XBOZZ	1680-00-H05-4995	15814	A6558-1	...BRACE TUBE...................................UHB,UHC,UHM	EA	1
88	69	XBOZZ	1680-00-H05-4998	15814	A6559	..BRACE TUBE,LEG -LH AND -RH....................UHB,UHC,UHM	EA	2
88	70	XBOZZ	1680-00-H23-6709	15814	A6877-10	..DIAGONAL BRACE ASSEMBLY.......................UHB,UHC,UHM	EA	1
88	71	PAOOO	1680-00-674-1958	97499	204-070-716-3	.CUSHION ASSY,PILOT.............................UHB,UHC,UHM	EA	2

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
88	72	PAOOO	1680-00-674-1959	97499	204-070-717-9	.CUSHION,SEAT,AIRCRA............................UHB,UHC,UHM	EA	2
88	72	PAOOO	1680-00-073-3289	97499	204-071-557-1	.CUSHION,SEAT,BOTTOM U/O PN 204-070-004-33,45,& -67......UHB	EA	1
88	73	PAOOO	1680-00-675-1213	97499	204-070-741-1	.CUSHION,AIRCRAFT SE U/O PN 204-070-004-19 & -33.........UHB	EA	1
88	74	XAOOZ		97499	204-070-741-3	..COVER ASSY,AIRCRAFT.......................................UHB	EA	4
88	75	PAOZZ	5325-00-107-3005	96906	MS27983-7	...SOCKET,SNAP FASTENE FASTENER............................UHB	EA	4
88	76	PAOZZ	5325-00-276-4953	88044	AN227-6	...CAP,SNAP FASTENER...UHB	EA	1
88		XCFZZ		97499	204-070-052-1	.BELT INSTL U/O PN 204-070-004-19,-29,-33, & -55.........UHB	EA	1
88		XCFZZ		97499	204-070-052-3	.BELT INSTL U/O PN 204-070-004-45,-67,-85, & -103 ....UHB,UHC,UHM	EA	1
88	77	PAOZZ	5306-00-180-2749	88044	AN5H10	..BOLT,MACHINE.......................................UHB,UHC,UHM	EA	6
88	78	PAOZZ	5306-00-180-2750	88044	AN5H11	..BOLT,MACHINE U/O PN 204-070-052-1.........................UHB	EA	6
88	78	PAOZZ	5306-00-180-2751	88044	AN5H12	..BOLT,MACHINE U/O PN 204-070-052-3..............UHB,UHC,UHM	EA	6
88	79	PAOZZ	5310-00-167-0803	88044	AN960C516	..WASHER,FLAT...UHB,UHC,UHM	EA	12
88	80	MFOZZ	1560-00-732-1692	97499	204-070-054-1	..LINK...UHB,UHC,UHM	EA	12
88	81	PAOZZ	5365-00-905-2509	80205	NAS43HT5-44	..SPACER,SLEEVE U/O PN 204-070-052-3............UHB,UHC,UHM	EA	6
88	82	PAOZZ	5365-00-057-3871	97499	204-070-595-5	..RING,CONNECTING,ROU U/O PN 204-070-052-3.......UHB,UHC,UHM	EA	6
88	83	PAOZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX..........................UHB,UHC,UHM	EA	12
88	84	PAOZZ	1680-01-128-4488	98750	56E589-10	..BELT,AIRCRAFT SAFET..........................UHB,UHC,UHM	EA	7
88	85	PAOZZ	1680-00-853-5464	98750	65034083-7	...SPRING,WEBBING RETARDER USE-AFT-CMPL-W MWO 55-1680-200-20/2...UHB,UHC,UHM	EA	1
88	86	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE.......................................UHB,UHC,UHM	EA	4
88	87	PAOZZ	1680-00-898-0318	88044	AN3011-1A	.CASE,FLIGHT REPORT............................UHB,UHC,UHM	EA	1
88	88	MFOZZ	1560-00-885-3539	97499	204-070-255-1	.BRACKET ASSEMBLY..UHB	EA	1
88	89	MFOZZ	1560-00-034-3717	97499	204-070-255-5	.BRACKET ASSEMBLY..UHB	EA	1
88	89	MFOZZ	1560-00-939-7641	97499	204-070-255-14	.BRACKET ASSEMBLY.............................UHB,UHC,UHM	EA	1

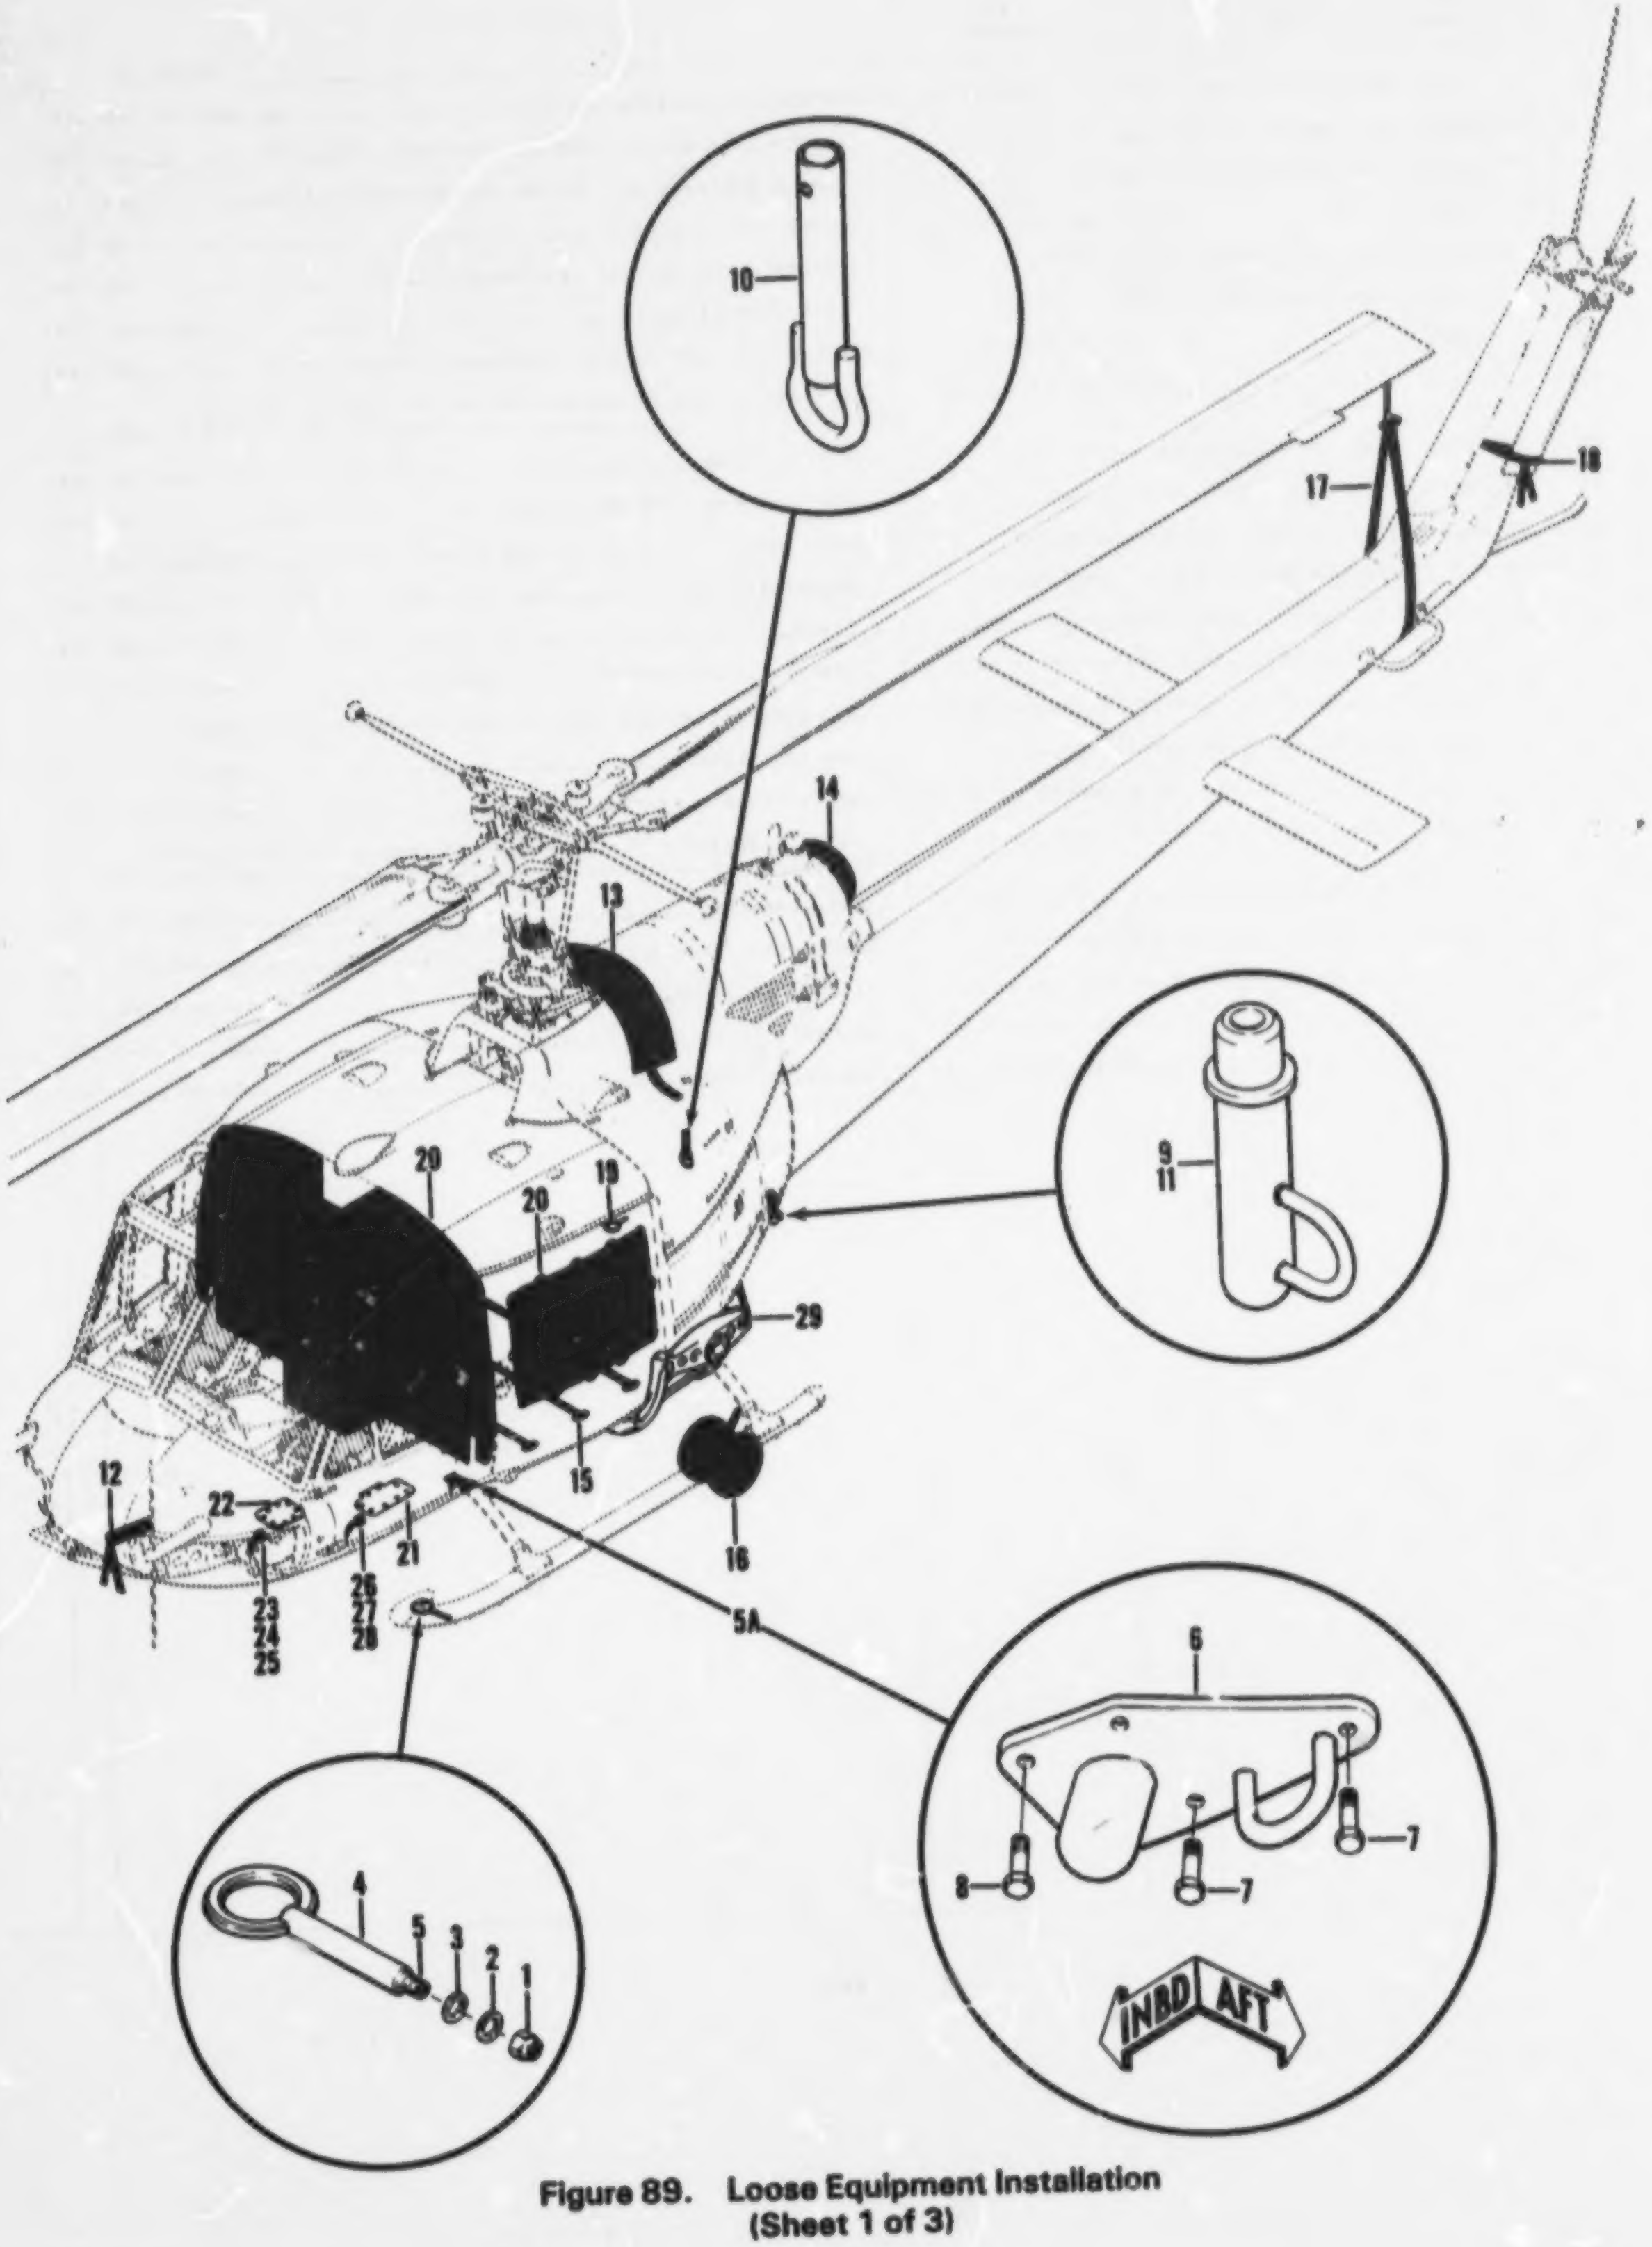

10
17
18
14
13
29
20
19
9
11
29
12
22
15
16
21
23
24
25
26
27
28
5A
6
8
7
7
4
5
3
2
1
INBD
AFT

Figure 89. Loose Equipment Installation (Sheet 1 of 3)

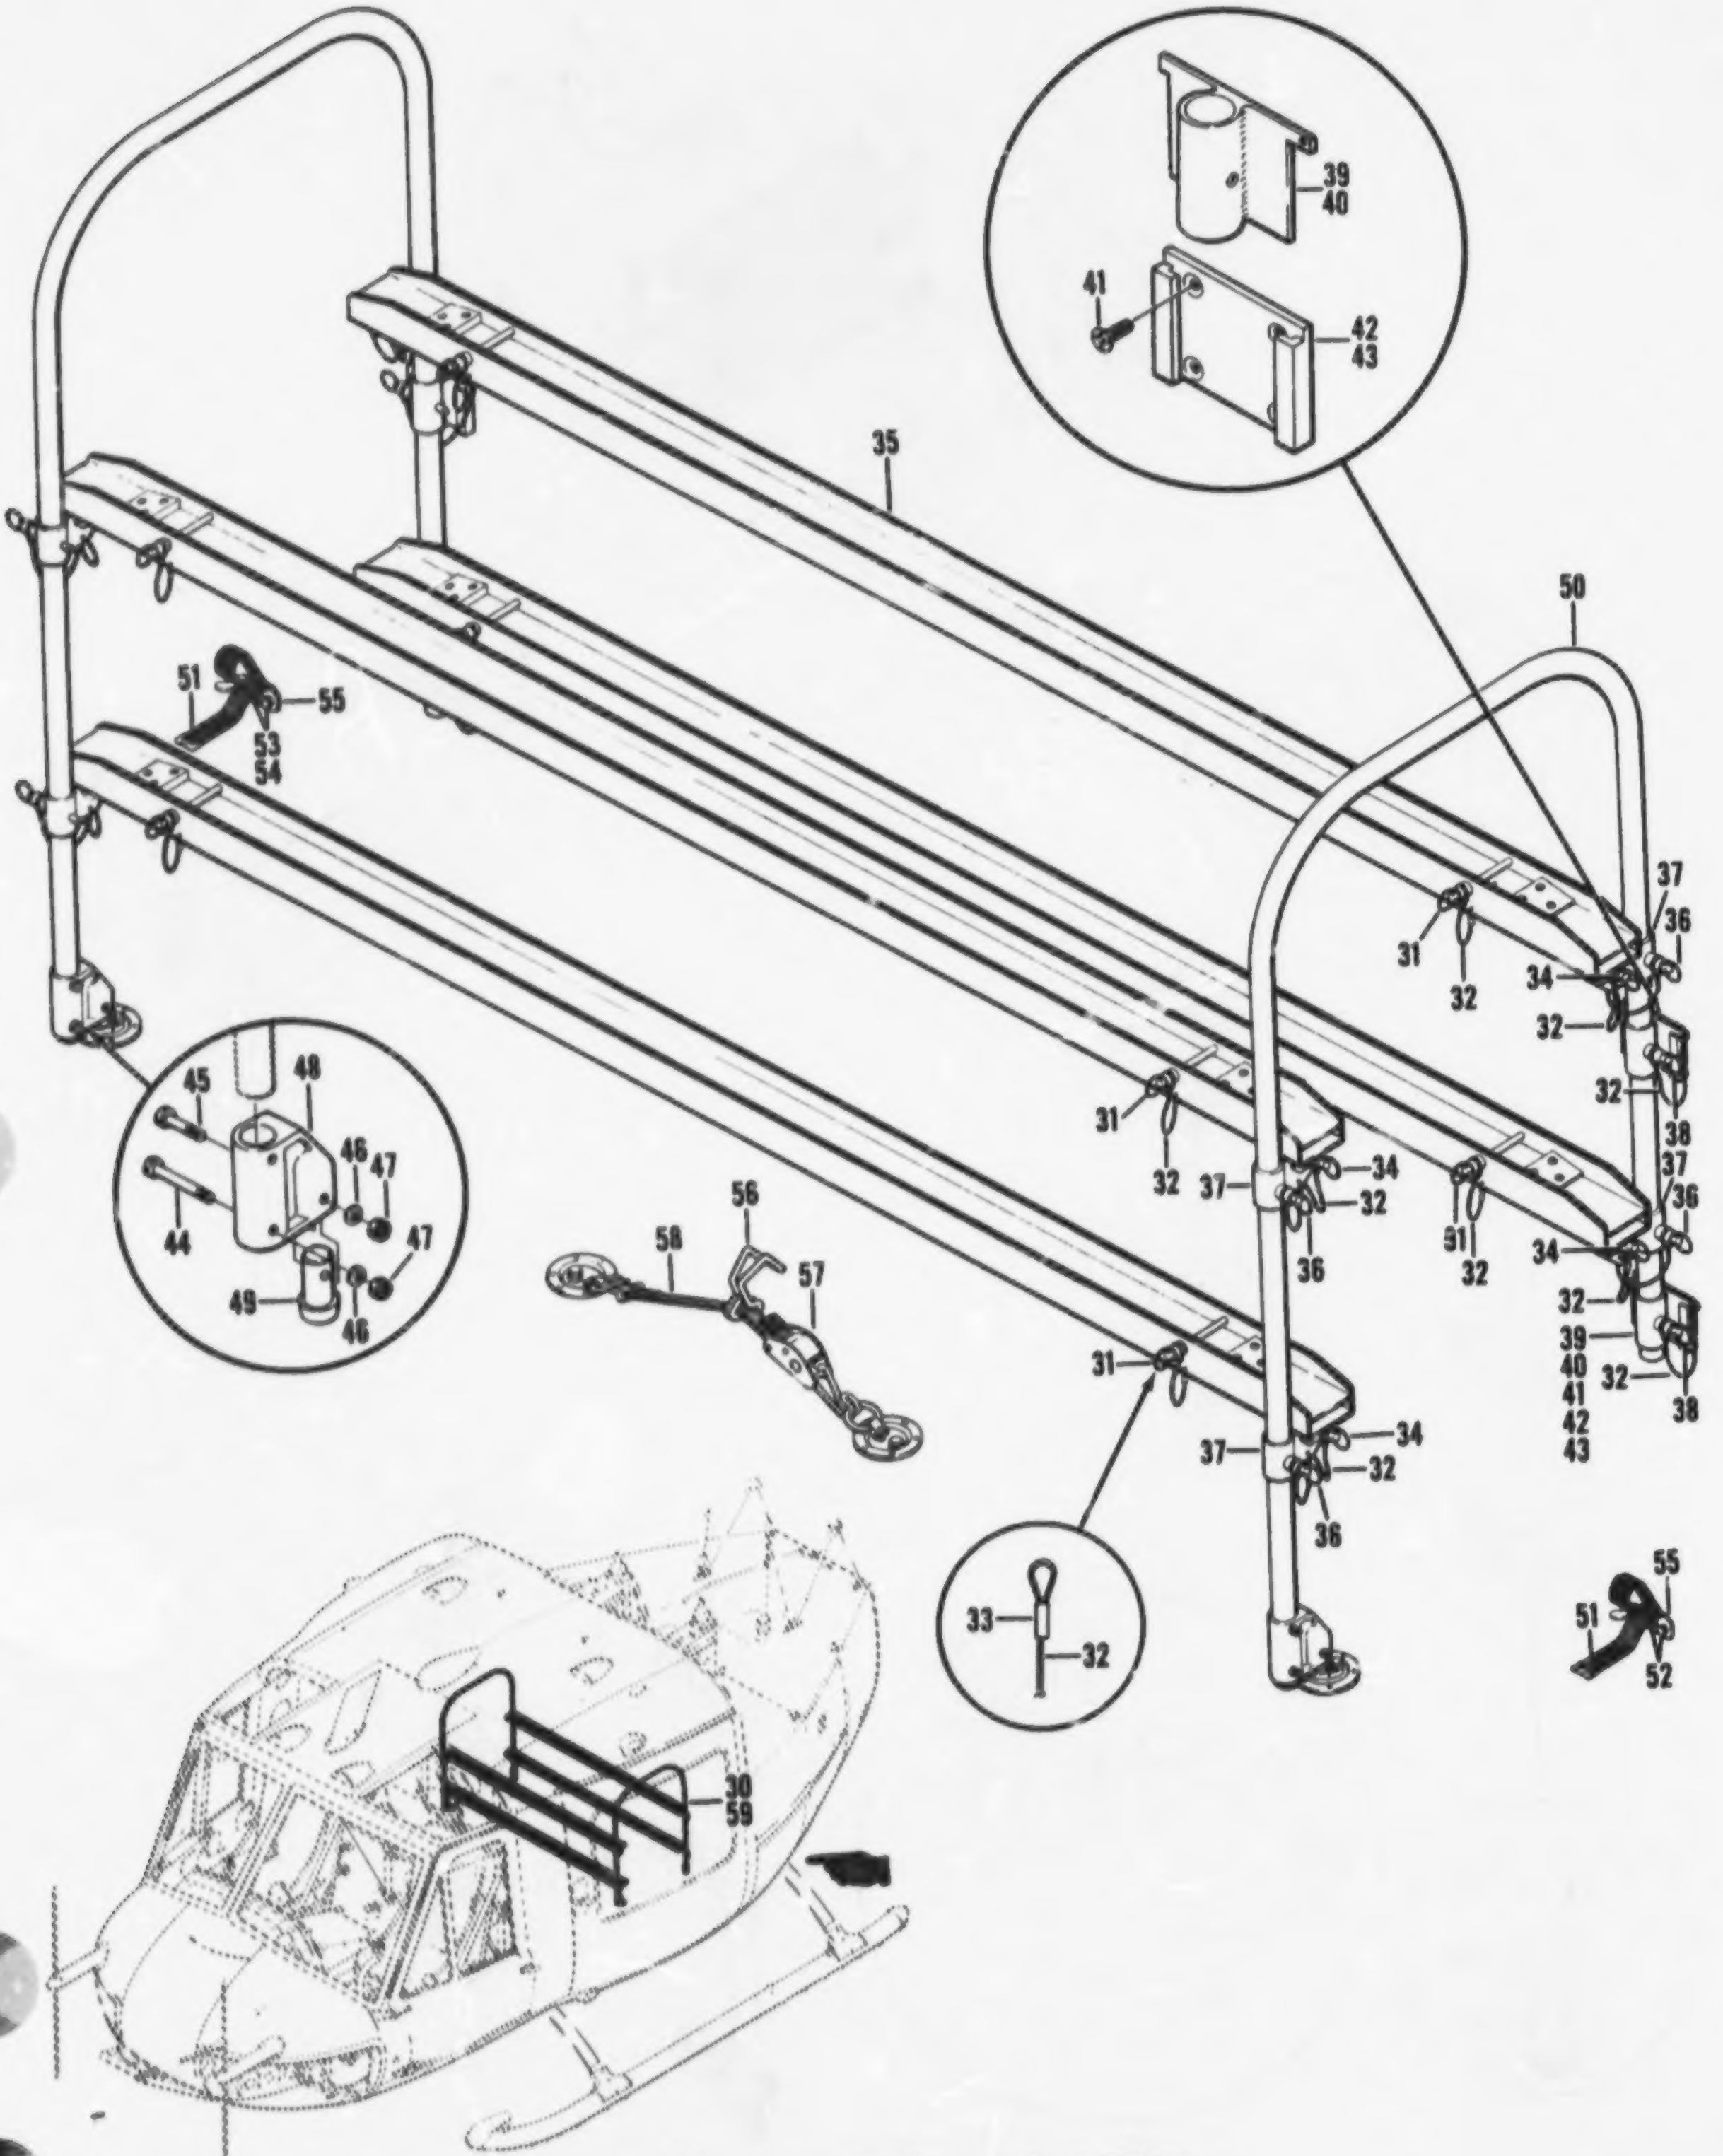
35
39
40
41
42
43
50
51
55
53
54
37
36
31
32
34
32
32
38
37
36
45
48
46
47
44
47
49
46
56
58
57
31
32
37
34
32
36
31
32
34
32
39
40
41
42
43
32
38
31
37
34
32
36
33
32
55
51
52
30
59

Figure 89. Loose Equipment Installation (Sheet 2 of 3)

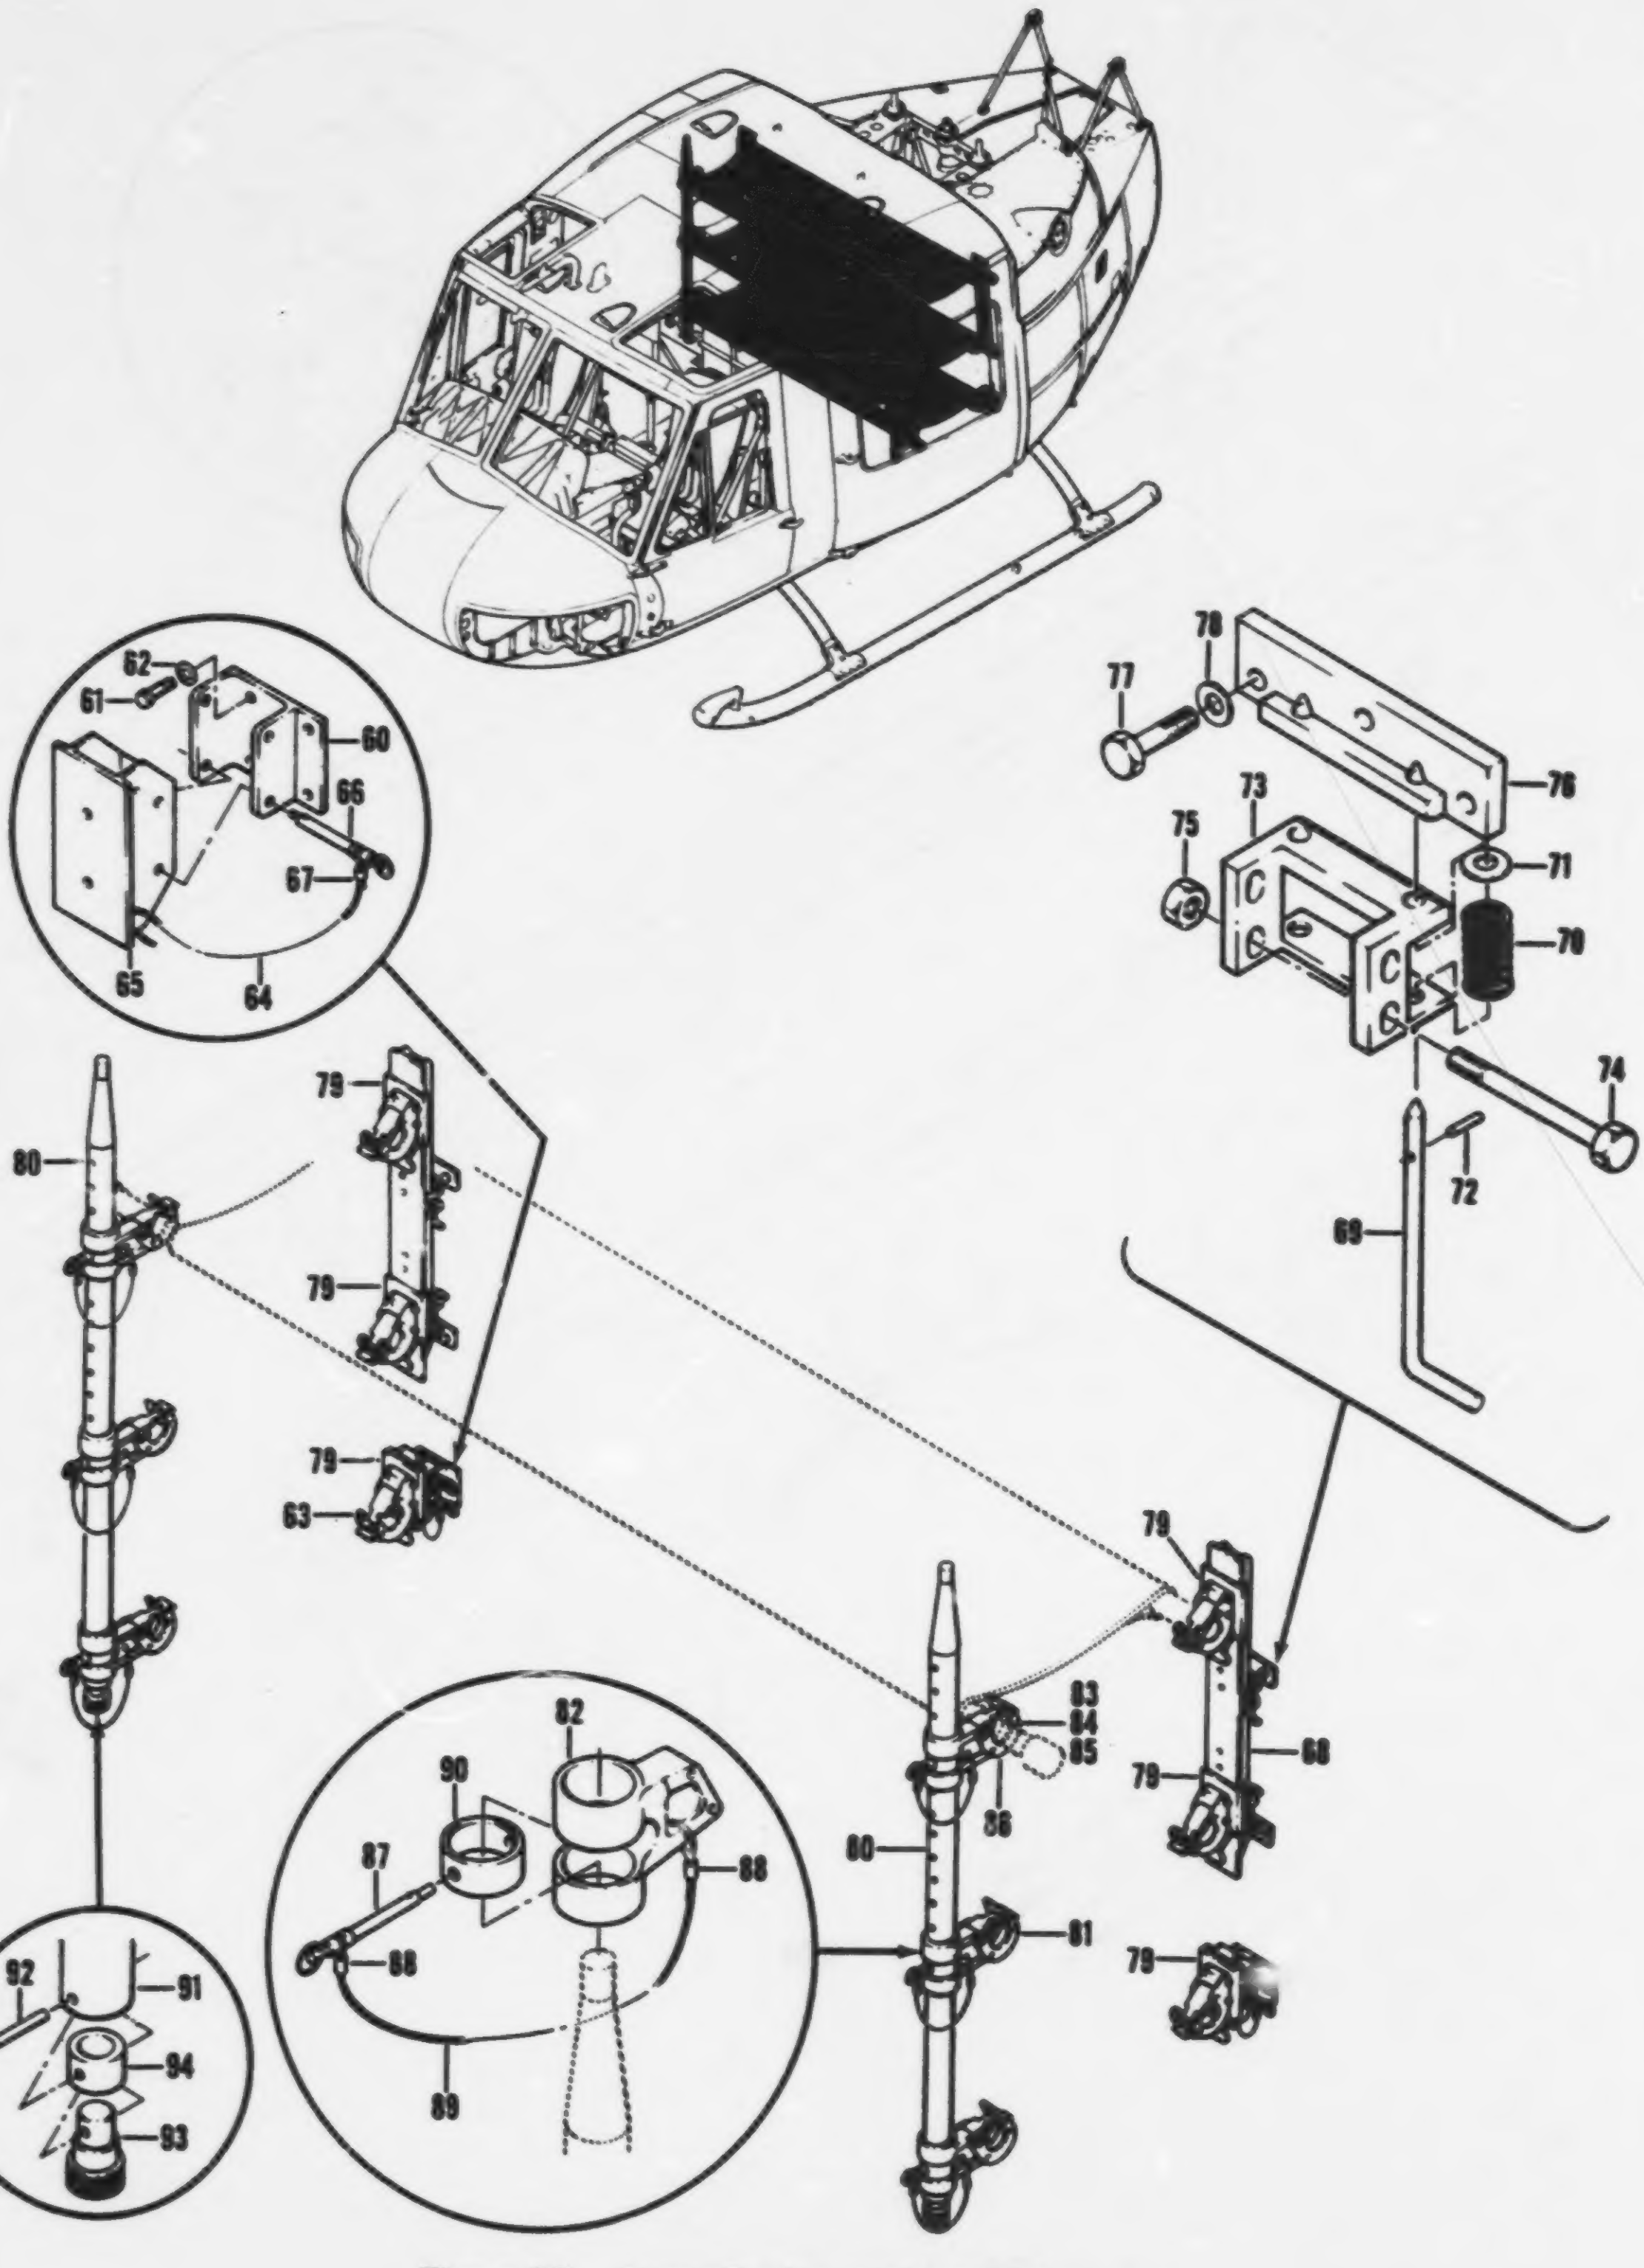
62
61
60
66
67
65
64
78
77
76
73
75
71
70
74
72
69
79
80
79
79
63
79
83
84
85
86
68
79
80
81
79
82
90
87
88
88
89
92
91
94
93

Figure 89. Loose Equipment Installation
(Sheet 3 of 3)

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
89		XCFZZ		97499	204-070-004-17	LOOSE EQUIP INSTL PACKAGED USBL EFF 60-3546 THRU 60-3590 ....UHB	EA	1
89		XCFZZ		97499	204-070-004-25	LOOSE EQUIP INSTL PACKAGED USBL EFF 60-3591 THRU 60-3619 ....UHB	EA	1
89		XCFZZ		97499	204-070-004-27	LOOSE EQUIP INSTL PACKAGED USBL EFF 61-686 THRU 61-719 & 61-736 THRU 61-753....UHB	EA	1
89		XCFZZ		97499	204-070-004-41	LOOSE EQUIP INSTL PACKAGED USBL EFF 61-720 THRU 61-735 ....UHB	EA	1
89		XCFZZ		97499	204-070-004-39	LOOSE EQUIP INSTL PACKAGED USBL EFF 61-754 THRU 61-781 ....UHB	EA	1
89		XCFZZ		97499	204-070-004-57	LOOSE EQUIP INSTL PACKAGED USBL EFF 61-782 THRU 61-803 ....UHB	EA	1
89		XCFZZ		97499	204-070-004-31	LOOSE EQUIP INSTL PACKAGED USBL EFF 62-1872 THRU 62-1996 ....UHB	EA	1
89		XCFZZ		97499	204-070-004-69	LOOSE EQUIP INSTL PACKAGED USBL EFF 62-1997 THRU 62-12555 ....UHB	EA	1
89		XCFZZ		97499	204-070-004-43	LOOSE EQUIP INSTL PACKAGED USBL EFF 63-8500 THRU 64-14100 ....UHB	EA	1
89		XCFZZ		97499	204-070-004-99	LOOSE EQUIP INSTL PACKAGED USBL EFF 64-14101 THRU 64-14191 ....UHC,UHM	EA	1
89		XCFZZ		97499	204-070-004-101	LOOSE EQUIP INSTL PACKAGED USBL EFF 65-9416 & SUBSEQUENT ....UHC,UHM	EA	1
89	1	PAOZZ	5310-00-926-1852	96906	MS21083N6	.NUT,SELF-LOCKING,HE....UHB,UHC,UHM	EA	2
89	2	PAOZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER, FLAT....UHB,UHC,UHM	EA	2
89	3	PAOZZ	5310-00-183-4362	88044	AN960PD1016L	.WASHER,FLAT....UHB,UHC,UHM	EA	2
89	4	PAODO	1560-00-674-4211	97499	204-050-104-1	.FITTING ASSY,TOW....UHB,UHC,UHM	EA	2
89	5	PAOZZ	5305-00-253-5612	96906	MS21318-15	..SCREW,DRIVE....UHB,UHC,UHM	EA	1
89	5A	XCFZZ		97499	204-030-182-9	.FITTING INSTL JACK AND MOORING-LH....UHB,UHC,UHM	EA	1
89	5A	XCFZZ		97499	204-030-182-10	.FITTING INSTL JACK AND MOORING-RH....UHB,UHC,UHM	EA	1
89	6	PAOZZ	1560-00-670-5898	97499	204-030-182-1	..SUPPORT,MOORING U/O PN 204-030-182-9....UHB,UHC,UHM	EA	1
89	6	PAOZZ	1560-00-671-4430	97499	204-030-182-2	..FITTING,JACK AND MOORING U/O PN 204-030-182-10 ....UHB,UHC,UHM	EA	1
89	7	PAOZZ	5306-00-182-2059	88044	AN3H6A	..BOLT,MACHINE....UHB,UHC,UHM	EA	2
89	8	PAOZZ	5306-00-182-2058	88044	AN3H5A	..BOLT,MACHINE....UHB,UHC,UHM	EA	3
89	9	PAOZZ	1680-00-895-9341	97499	204-030-123-3	.FITTING ASSY JACKIN U/O PN 204-070-004-17,-25, -27,-39,-41, & -57....UHB	EA	1
89	10	PAOZZ	1560-00-673-7708	97499	204-030-124-1	.SUPPORT,MOORING U/O PN 204-070-004-17,-25, -27,-39,-41,& -57....UHB	EA	1
89	11	PAOZZ	1680-00-895-9341	97499	204-030-123-3	.FITTING ASSY JACKIN U/O PN 204-070-004-31,-43, -69,-99,& -101....UHB,UHC,UHM	EA	2
89	12	PAOZZ	1730-00-674-1946	97499	204-070-470-1	.COVER PITOT TUBE SEE FUNCTIONAL GROUP 82 FOR DETAILS ....UHB,UHC,UHM	EA	1
89	12	PAOZZ	1730-00-137-5989	97499	204-070-470-5	.COVER,PITOT TUBE SEE FIG.223 FOR NHA P/N 204-072-195-1 ....UHC,UHM	EA	1
89	13	PAOZZ	1730-00-674-1945	97499	204-070-469-1	.COVER ASSY COWLING SEE FUNCTIONAL GROUP 82 FOR DETAILS ....UHB,UHC,UHM	EA	1
89	14	PAOZZ	1730-00-675-3215	97499	204-070-464-1	.COVER,ENGINE EXHAUS SEE FUNCTIONAL GROUP 82 FOR DETAILS ....UHB,UHC,UHM	EA	1
89	15	PAOZZ	1670-00-088-6176	97499	204-070-536-1	.NET,CARGO TIE DOWN, USBL EFF 61-754 & SUBSEQUENT ....UHB,UHC,UHM	EA	1
89	16	PAOFF	1730-00-980-9552	97499	204-050-200-5	.TRUCK GROUND HANDL SEE FUNCTIONAL GROUP 83 FOR DETAILS ....UHB,UHC,UHM	EA	2
89	17	PAOZZ	1730-00-051-3227	56048	SW4737-1	.TIE DOWN ASSEMBLY SEE FUNCTIONAL GROUP 83 FOR DETAILS	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHB,UHC,UHM		
89	18	PAOZZ	1680-00-967-1821	97499	204-070-450-19	.STRAP,WEBBING,TAIL SEE FUNCTIONAL GROUP 83 FOR DETAILS ....UHB,UHC,UHM	EA	1
89	19	PAOZZ	5306-00-075-9380	97499	205-070-725-5	.BOLT,RING U/O PN 204-070-004-31 & -69...................UHB	EA	6
89	20	XCFZZ		97499	204-070-901-15	.CURTAIN INSTL BLACKOUT U/O PN 204-070-004-17,-25, -27,-31,-39,-41,-57,& -69SEE FIG.425 FOR BREAKDOWN..................UHB	EA	1
89	20	PBOOO	1680-00-788-1524	97499	204-070-901-17	.CURTAIN,BLACKOUT U/O PN 204-070-004-43,-99 & -101 SEE FIG. 425 FOR BREAKDOWN................................UHB,UHC,UHM	EA	1
89	21	PAOZZ	1560-00-983-2484	97499	204-031-321-53	.DOOR,ACCESSORY USBL EFF <UH-1C> 64-14101 THRU 65-9421 ....UHB,UHC,UHM	EA	1
89	22	PAOZZ	1560-00-671-5874	97499	204-030-321-45	.COVER,ACCESS U/O PN 204-070-004-17, -25,-27,-39,-41,& -57 ....UHB	EA	1
89	22	PAOZZ	1560-00-953-4978	97499	204-031-321-55	.COVER,ACCESS U/O PN 204-070-004-31,-43,-69, -99,& -101 ....UHB,UHC,UHM	EA	1
89	23	AOOOZ	1560-00-731-8929	97499	204-075-405-15	.CABLE ASSEMBLY U/O PN 204-070-004-17, -25,-27,-31,-39,-41,& -57..UHB	EA	1
89	23	AOOOZ	1560-00-075-3376	97499	204-075-939-15	.CABLE ASSEMBLY U/O PN 204-070-004-43,-69,-99, & -101 ....UHB,UHC,UHM	EA	1
89	24	PAOZZ	5935-00-972-8948	77820	10-214620-27P	..CONNECTOR,PLUG,ELEC U/O PN 204-075-405-15..............UHB	EA	1
89	24	PBOZZ	5935-00-725-4583	96906	MS3108R20-27P	..CONNECTOR,PLUG,E U/O PN 204-075-939-15.........UHB,UHC,UHM	EA	1
89	25	XDOZZ		97499	85T4-7-2	..INSULATION TUBE................................UHB,UHC,UHM	FT	2
89	26	AOOOZ	1560-00-731-9002	97499	204-075-426-7	.CABLE ASSEMBLY..................................UHB,UHC,UHM	EA	1
89	27	PBOZZ	5935-00-834-4904	96906	MS3106R18-1P	..CONNECTOR,PLUG,ELEC............................UHB,UHC,UHM	EA	1
89	28	XDOZZ		97499	85T4-7-2	..INSULATION TUBE................................UHB,UHC,UHM	FT	4
89	29	AOOOO	1560-00-H26-4793	97499	204-706-035-5	.EXTERNAL STORES RAC SEE FIG.428 FOR BREAKDOWN.......UHC,UHM	EA	1
89	30	PBOZO	1680-00-868-5754	97499	204-070-068-1	.INSTALLATION KIT,LI USBL EFF 60-3546 THRU 60-3590.......UHB	EA	1
89	30	PBOZO	1680-00-868-5756	97499	204-070-068-3	.INSTALLATION KIT,LI USBL EFF 60-3591 THRU 61-753........UHB	EA	1
89	30	PBOZO	1680-00-868-5755	97499	204-070-068-5	.INSTALLATION KIT,LI USBL EFF 61-754 THRU 61-781.........UHB	EA	1
89	30	XCFZZ		97499	204-070-068-7	.INSTALLATION,LITTER USBL EFF 61-782 THRU 61-803.........UHB	EA	1
89	31	XDOZZ		80205	NAS1355DS7S31	..PIN,QUICK RELEASE......................................UHB	EA	8
89	32	MFOZZ	1560-00-H24-1933	97499	204-070-068-11	..CABLE..UHB	EA	V
89	33	PAOZZ	4030-00-431-5536	76691	28-1C	..SWAGING SLEEVE,WIRE....................................UHB	EA	V
89	34	PBOZZ	5340-00-840-4562	80205	NAS1354S7S08	..PIN,QUICK RELEASE......................................UHB	EA	8
89	35	XBOZZ	1680-00-066-0289	97499	204-070-064-17	..RAIL,AIRCRAFT LITTE U/O PN 204-070-068-7...............UHB	EA	4
89	36	PAOZZ	5340-00-823-5243	80205	NAS1354DS7S17	..PIN,QUICK RELEAS.......................................UHB	EA	8
89	37	XBOZZ	1680-00-860-0658	97499	204-070-065-1	..SUPPORT,LITTER RAIL....................................UHB	EA	8
89	38	PAOZZ	5340-00-200-3713	96906	MS17990-415	..PIN,QUICK RELEASE......................................UHB	EA	4
89	39	XBOZZ	1680-00-860-0631	97499	204-070-061-1	..FITTING ASSY,LITTER U/O PN 204-070-068-1,-3.-5,-7......UHB	EA	4
89	40	PAOZZ	1680-00-992-4613	97499	204-070-061-7	..FITTING ASSY,LITTER U/O PN 204-070-068-5 & PN 204-070-068-7..UHB	EA	2
89	41	PAOZZ	5305-00-043-2684	96906	MS24694S95	..SCREW,MACHINE..UHB	EA	V
89	42	PAOZZ	1680-00-860-0630	97499	204-070-074-1	..SUPPORT,LITTER U/O PN 204-070-068-1,-3,-5,-7...........UHB	EA	4
89	43	PAOZZ	1560-00-992-4614	97499	204-070-074-3	..CHANNEL,LITTER SUPP U/O PN 204-070-068-5 & PN 204-070-068-7..UHB	EA	1
89	44	PAOZZ	5306-00-182-1966	88044	AN4H20A	..BOLT,MACHINE...UHB	EA	4

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
89	45	PAOZZ	5306-00-182-1963	88044	AN4H15A	..BOLT,MACHINE..UHB	EA	2
89	46	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT...UHB	EA	6
89	47	PAOZZ	5310-00-877-5796	96906	MS21044N4	..NUT,SELF-LOCKING,HE...UHB	EA	6
89	48	XBOZZ	1680-00-855-9522	97499	204-070-066-1	..FITTING,STANCHION...UHB	EA	2
89	49	PAOZZ	1680-00-592-4879	96906	MS22034-1	..FITTING ASSY,FLOOR..UHB	EA	2
89	50	XBOZZ	1680-00-860-0629	97499	204-070-067-1	..STANCHION,LITTER SUPPORT......................................UHB	EA	2
89	51	PAOZZ	1680-00-860-0626	97499	204-070-072-1	..STRAP,WEBBING U/O PN 204-070-068-3,-5,& -7.............UHB	EA	1
89	52	PAOZZ	5306-00-151-1427	88044	AN4-5A	..BOLT,MACHINE U/O PN 204-070-068-3,-5,& -7..............UHB	EA	2
89	53	PAOZZ	5306-00-182-2017	88044	AN4H6A	..BOLT,MACHINE U/O PN 204-070-068-3,-5,& -7..............UHB	EA	2
89	54	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT U/O PN 204-070-068-3,-5,& -7...............UHB	EA	2
89	55	PAOZZ	1680-00-860-0627	97499	204-070-070-1	..BRACKET,LITTER RETA U/O PN 204-070-068-3,-5,& -7.......UHB	EA	2
89	56	PAOZZ	1680-00-860-0628	97499	204-070-069-1	..HOOK,LITTER TIE DOW U/O PN 204-070-068-3,-5,& -7.......UHB	EA	1
89	57	PAOZZ	1680-00-860-0633	80205	NAS1211G10	..FITTING,TIE DOWN ST U/O PN 204-070-068-3,-5,& -7.......UHB	EA	1
89	58	PAOZZ	1680-00-917-7067	80205	NAS1212R100J18	..STRAP,WEBBING U/O PN 204-070-068-3,-5,& -7.............UHB	EA	1
89	59	PAOOO	1680-00-798-1526	97499	204-070-090-1	.LITTER INSTALLATION USBL EFF UH-1B 62-1872 & SUBSEQUENT SEE FIG.4 FOR NHA.................................UHB,UHC,UHM	EA	1
89	60	PAOZZ	1560-00-967-7674	97499	204-072-081-1	..BRACKET,LITTER..................................UHB,UHC,UHM	EA	1
89	61	PAOZZ	5306-00-182-2017	88044	AN4H6A	..BOLT,MACHINE....................................UHB,UHC,UHM	EA	8
89	62	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT.....................................UHB,UHC,UHM	EA	8
89	63	AOOOZ	1560-00-226-1785	97499	204-070-090-3	..LITTER TRACK ASSEMB.............................UHB,UHC,UHM	EA	2
89	64	PAOZZ	4010-00-222-4482	97499	204-070-090-11	...ROPE,WIRE......................................UHB,UHC,UHM	FT	1
89	65	PAOZZ	1560-00-980-1846	97499	204-070-080-1	...LITTER TRACK,LOWER.............................UHB,UHC,UHM	EA	1
89	66	PAOZZ	5340-00-950-6470	80205	NAS1354DS7S25	...PIN,QUICK RELEAS...............................UHB,UHC,UHM	EA	2
89	67	PAOZZ	4030-00-431-5536	76691	28-1C	...SWAGING SLEEVE,WIRE............................UHB,UHC,UHM	EA	2
89	68	PAOOO	1560-00-980-1853	97499	204-070-086-1	...LITTER TRACK ASSEMB............................UHB,UHC,UHM	EA	2
89	69	PAOZZ	1560-00-980-1848	97499	204-070-082-1	...PIN,LITTER TRACK...............................UHB,UHC,UHM	EA	4
89	70	PAOZZ	5360-00-987-6709	97499	204-070-083-1	...SPRING,HELICAL,COMP............................UHB,UHC,UHM	EA	4
89	71	PAOZZ	5310-00-187-2354	88044	AN960PD416	...WASHER,FLAT....................................UHB,UHC,UHM	EA	4
89	72	PAOZZ	5315-00-844-5644	96906	MS16562-194	...PIN,SPRING.....................................UHB,UHC,UHM	EA	4
89	73	PAOZZ	1560-00-980-1850	97499	204-070-085-1	...BRACKET,LITTER TRAC............................UHB,UHC,UHM	EA	2
89	74	PAOZZ	5306-00-151-1408	88044	AN4-30A	...BOLT,MACHINE...................................UHB,UHC,UHM	EA	4
89	75	PAOZZ	5310-00-857-5557	96906	MS21045L4	...NUT,SELF-LOCKING,HE WASHER,HEXAGON.............UHB,UHC,UHM	EA	4
89	76	PAOZZ	5340-00-980-1849	97499	204-070-084-1	..BRACKET,ANGLE...................................UHB,UHC,UHM	EA	4
89	77	PAOZZ	5306-00-515-8064	88044	AN4-7A	..BOLT,MACHINE....................................UHB,UHC,UHM	EA	12
89	78	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER,FLAT.....................................UHB,UHC,UHM	EA	12
89	79	PAOZZ	1680-00-978-2160	98313	FDC3835-30	..BRACKET,LITTER SUPP.............................UHB,UHC,UHM	EA	6
89	80	AOOOZ	1680-00-176-0989	97499	204-070-090-7	..SUPPORT,LITTER..................................UHB,UHC,UHM	EA	2
89	81	AOOOZ	1560-00-226-1786	97499	204-070-090-5	...BRACKET ASSEMBLY...............................UHB,UHC,UHM	EA	3
89	82	PAOZZ	1560-00-980-1854	97499	204-070-088-1	....BRACKET, LITTER SUP...........................UHB,UHC,UHM	EA	1
89	83	PAOZZ	5306-00-151-2305	88044	AN23-26	....BOLT,CLEVIS...................................UHB,UHC,UHM	EA	2
89	84	PAOZZ	5310-00-167-0753	88044	AN960PD10L	....WASHER,FLAT...................................UHB,UHC,UHM	EA	2
89	85	PAOZZ	5310-00-807-1474	96906	MS21042L3	....NUT,SELF-LOCKING,EX...........................UHB,UHC,UHM	EA	2
89	86	PAOZZ	1680-00-978-2161	98313	FDC3835-31	....BRACKET,LITTER SUPP...........................UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
89	87	PAOZZ	5340-00-950-6471	80205	NAS1354DS7S20	....PIN,QUICK RELEASE.............................UHB,UHC,UHM	EA	1
89	88	PAOZZ	4030-00-431-5536	76691	28-1C	....SWAGING SLEEVE,WIRE...........................UHB,UHC,UHM	EA	2
89	89	PAOZZ	4010-00-222-4482	97499	204-070-090-11	....ROPE,WIRE.....................................UHB,UHC,UHM	FT	2
89	90	PAOZZ	5365-00-980-1915	97499	204-070-089-1	....SPACER,SLEEVE.................................UHB,UHC,UHM	EA	1
89	91	PBOOO	1560-00-980-1856	97499	204-070-094-1	...STANCHION ASSEMBLY, SUPPORT....................UHB,UHC,UHM	EA	1
89	92	PAOZZ	5315-00-889-2607	96906	MS16562-261	....PIN,SPRING....................................UHB,UHC,UHM	EA	1
89	93	PAOZZ	1680-00-592-4878	96906	MS22034-2	....ADAPTER QUICK DISCO...........................UHB,UHC,UHM	EA	1
89	94	PAOZZ	5365-00-980-1914	97499	204-070-091-1	....SPACER,SLEEVE.................................UHB,UHC,UHM	EA	1

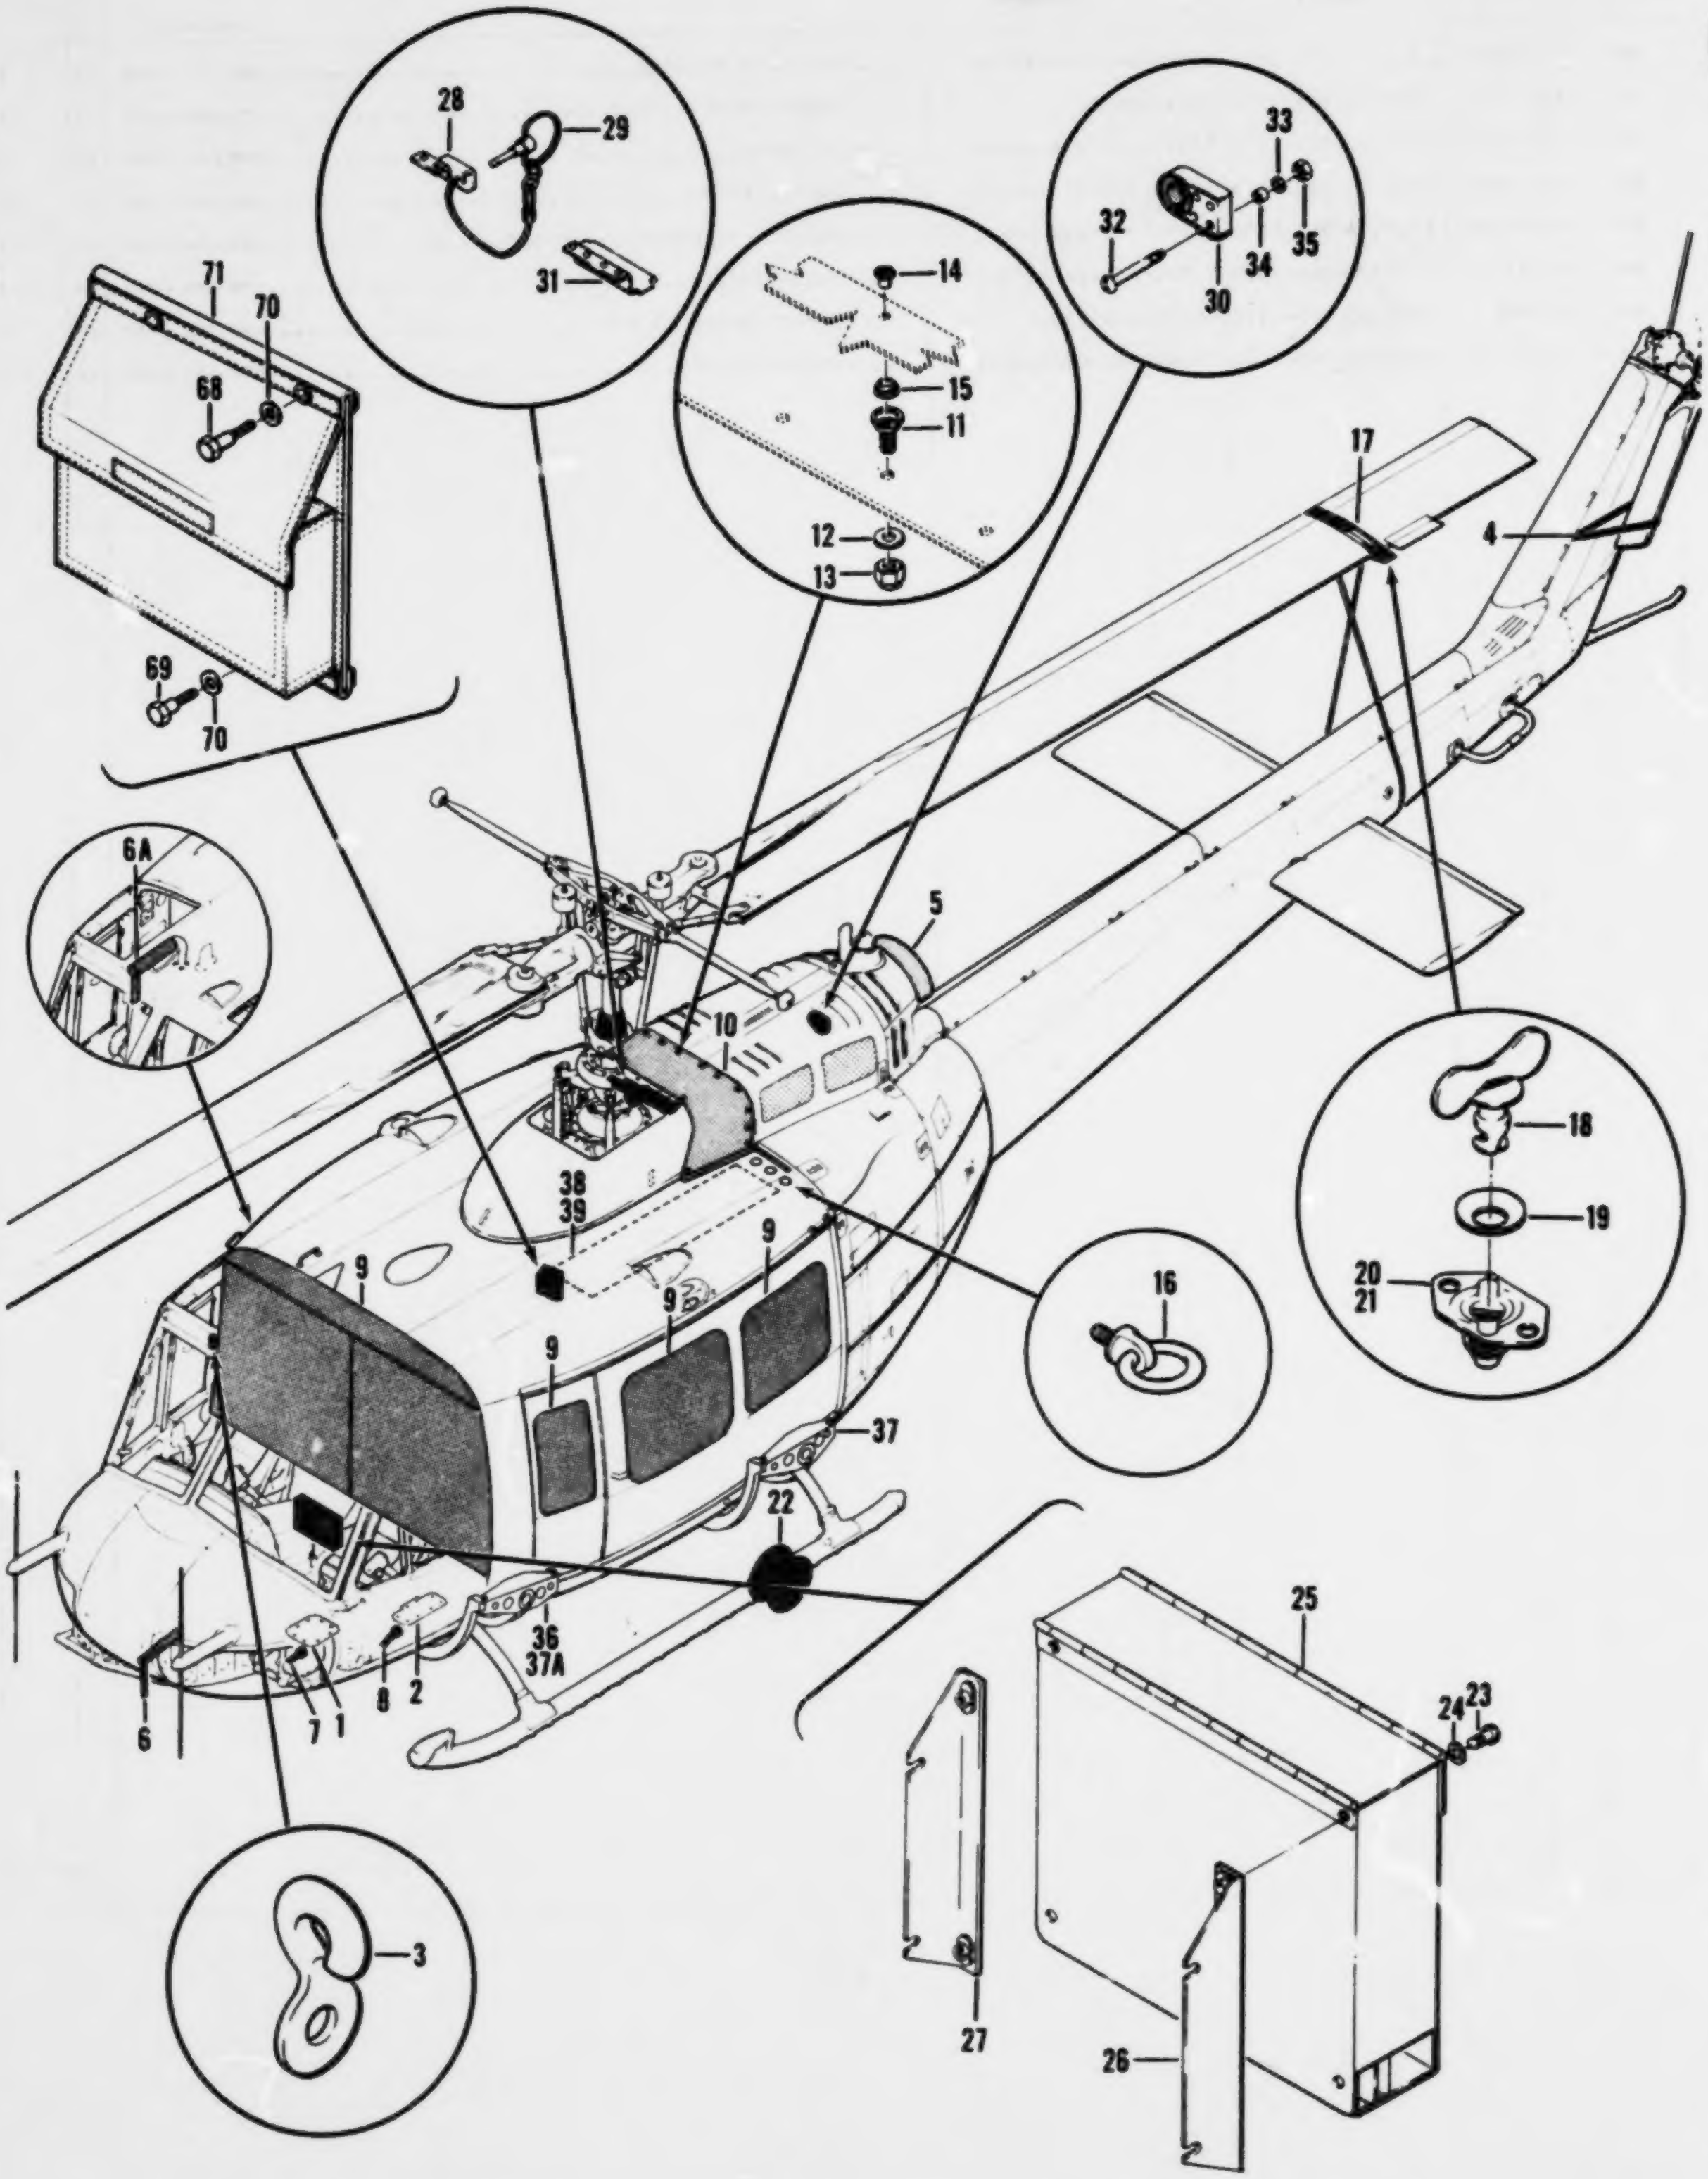
28
29
31
33
32
35
34
30
14
15
11
12
13
71
70
68
69
70
17
4
6A
5
10
38
39
9
9
9
9
16
18
19
20
21
37
22
36
37A
6
7
1
8
2
25
24
23
3
27
26

Figure 90. Loose Equipment Installation, Installed and Packaged (Sheet 1 of 2)

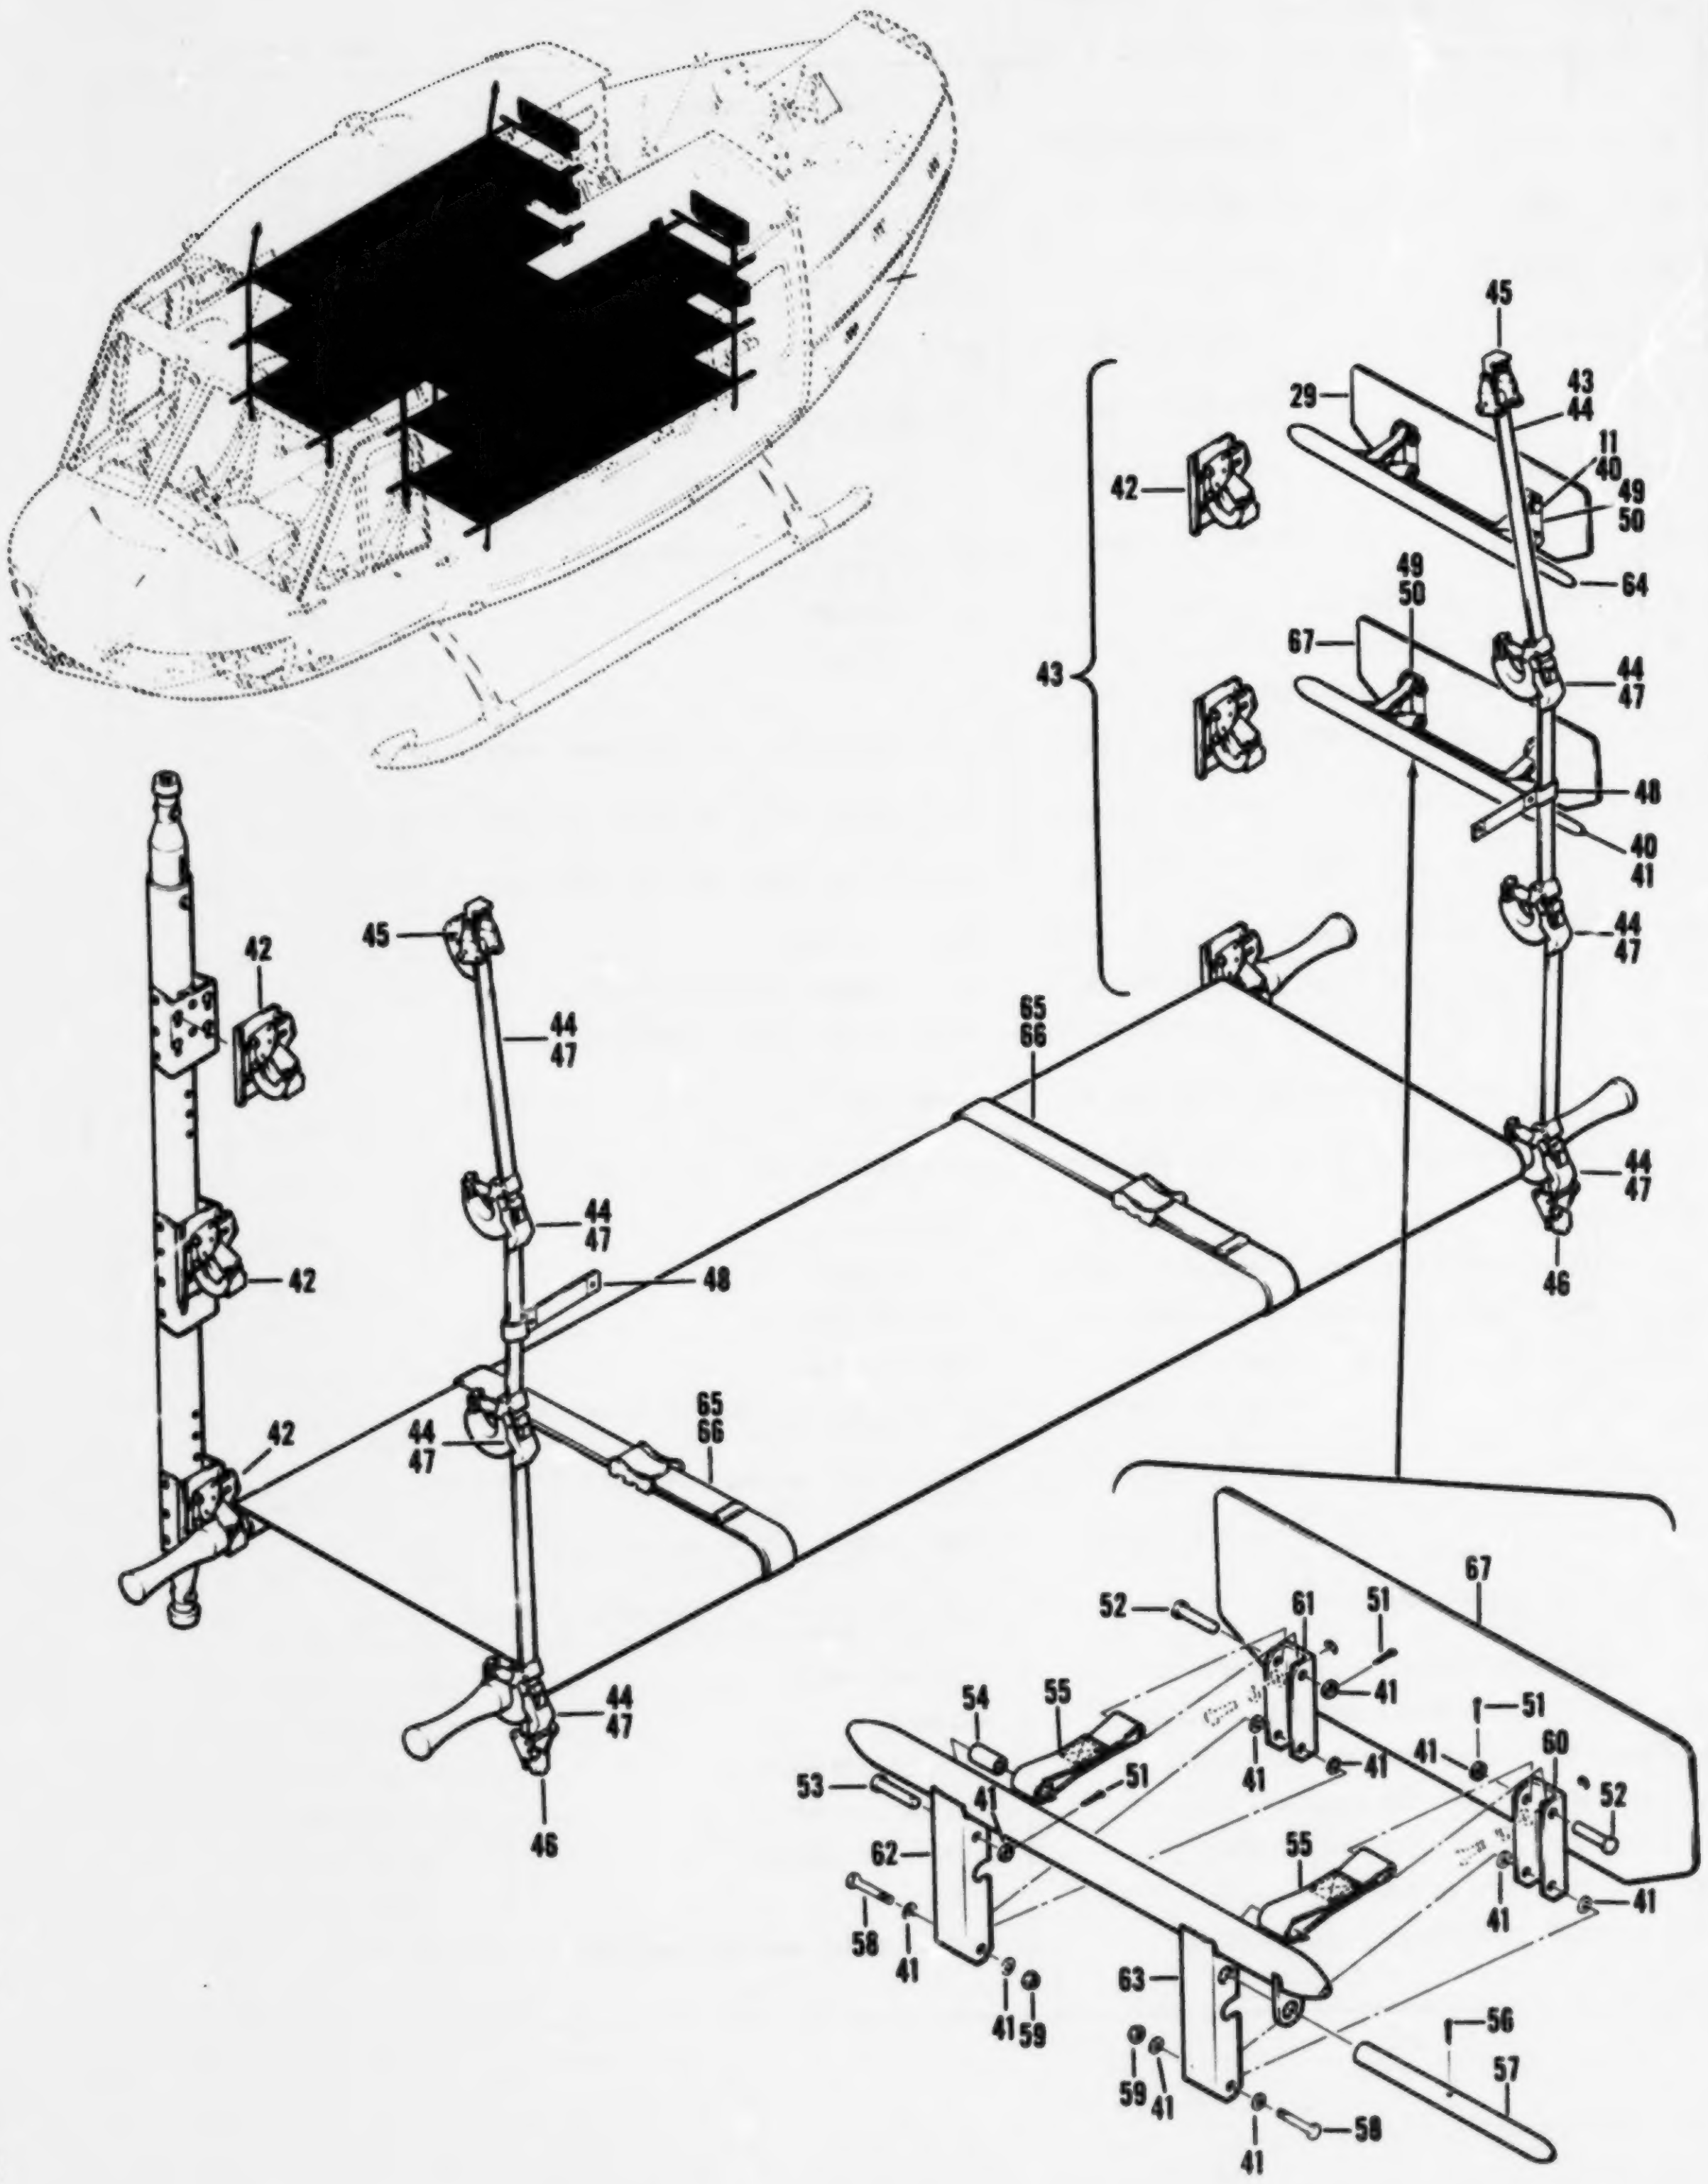
45
43
44
29
11
40
49
50
42
64
49
50
67
44
47
43
48
40
41
44
47
45
42
44
47
65
66
44
47
46
42
44
47
48
42
44
47
65
66
44
47
46
67
52
61
51
41
54
55
51
41
41
51
41
60
53
41
52
62
55
41
41
58
41
41
59
63
56
59
41
57
58
41

Figure 90. Loose Equipment Installation, Installed and Packaged (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
90		XCOZZ		97499	205-070-001-7	LOOSE EQUIP INSTL PACKAGED USBL EFF 62-2106 THRU 62-12372 SEE FIG.5 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
90		XCOZZ		97499	205-070-001-9	LOOSE EQUIP INSTL PACKAGED USBL EFF 63-8739 THRU 63-8859 SEE FIG.5 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
90		XCOZZ		97499	205-070-001-11	LOOSE EQUIP INSTL PACKAGED USBL EFF 63-12966 THRU 63-13002 SEE FIG.5 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
90		XCOZZ		97499	205-070-001-13	LOOSE EQUIP INSTL PACKAGED USBL EFF 64-13492 THRU 64-13901 SEE FIG.5 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
90		XCOZZ		97499	205-070-001-17	LOOSE EQUIP INSTL PACKAGED USBL EFF 65-9565 THRU 65-12896 SEE FIG.5 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
90		XCOZZ		97499	205-070-001-25	LOOSE EQUIP INSTL PACKAGED USBL EFF 66-746 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.5 FOR NHA........UHE,UHH,UHV,UHX	EA	1
90		XCOZZ		97499	205-070-001-27	LOOSE EQUIP INSTL PACKAGED USBL EFF 67-17145 & SUBSEQUENT SEE FIG.5 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
90	1	PAOZZ	1560-00-983-2484	97499	204-031-321-53	.DOOR,ACCESSORY..........UHE,UHH,UHV,UHX	EA	1
90	2	PAOZZ	1560-00-671-5874	97499	204-030-321-45	.COVER,ACCESS..........UHE,UHH,UHV,UHX	EA	1
90	3	MFOZZ	1560-00-075-3375	97499	205-061-566-1	.HOOK..........UHE,UHH,UHV,UHX	EA	4
90	4	PAOZZ	1680-00-967-1821	97499	204-070-450-19	.STRAP,WEBBING,TAIL SEE FUNCTIONAL GROUP 83 FOR DETAILS ....UHE,UHH,UHV,UHX	EA	1
90	5	PAOZZ	1730-00-675-3215	97499	204-070-464-1	.COVER,AIRCRAFT GROU SEE FUNCTIONAL GROUP 82 FOR DETAILS ....UHE,UHH,UHV,UHX	EA	1
90	6	PAOZZ	1730-00-674-1946	97499	204-070-470-1	.COVER,AIRCRAFT GROU SEE FUNCTIONAL GROUP 83 FOR DETAILS ....UHE,UHH,UHV,UHX	EA	1
90	6A	PAOZZ	1730-00-137-5989	97499	204-070-470-5	.COVER,PITOT TUBE..........UHE,UHH,UHV,UHX	EA	1
90	7	AOOOZ	1560-00-731-8929	97499	204-075-405-15	.CABLE ASSEMBLY U/O PN 205-070-001-7..........UHE,UHH,UHV,UHX	EA	1
90	7	AOOOZ	1560-00-075-3376	97499	204-075-939-15	.CABLE ASSEMBLY U/O PN 205-070-001-9,-11,& -13 ....UHE,UHH,UHV,UHX	EA	1
90	7	PAOZZ	5935-00-506-5540	96906	MS3456W20-27P	..CONNECTOR,PLUG,ELEC U/O PN 204-075-405-15 ....UHE,UHH,UHV,UHX	EA	1
90	7	PBOZZ	5935-00-725-4583	96906	MS3108R20-27P	..CONNECTOR,PLUG,ELEC U/O PN 204-075-939-15 ....UHE,UHH,UHV,UHX	EA	1
90	7	XDOZZ		97499	85T4-7-2	..INSULATION TUBE..........UHE,UHH,UHV,UHX	FT	2
90	8	AOOOZ	1560-00-731-9002	97499	204-075-426-7	.CABLE ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
90	8	PBOZZ	5935-00-834-4904	96906	MS3106R18-1P	..CONNECTOR,PLUG,ELEC..........UHE,UHH,UHV,UHX	EA	1
90	8	XDOZZ		97499	85T4-7-2	..INSULATION TUBE..........UHE,UHH,UHV,UHX	FT	4
90	9	XCOZZ		97499	205-070-650-5	.CURTAIN INSTL BLACKOUT U/O PN 205-070-001-7,-9,& -11 SEE FIG.426 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
90	9	XCOZZ		97499	205-070-650-7	.CURTAIN INSTL BLACKOUT U/O PN 205-070-001-13 SEE FIG.46 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
90	10	XDOZZ		97499	205-070-675-7	.COVER ASSEMBLY U/O PN:205-070-001-7,-9,-11,-13,&:-17:SEE FUNCTIONAL GROUP 40FOR DETAILS..........UHE,UHH,UHV,UHX	EA	1
90	10	PAOOO	1730-00-841-9919	97499	205-070-675-11	.COVER,AIRCRAFT GROU U/O PN 205-070-001-25 & -27 SEE FUNCTIONAL GROUP 83 FOR DETAILS..........UHE,UHH,UHV,UHX	EA	1
90	11	PAOZZ	5325-00-174-2924	96906	MS27980-11N	..STUD,SNAP FASTEN..........UHE,UHH,UHV,UHX	EA	16
90	12	PAOZZ	5310-00-184-8966	88044	AN960PD8	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	16
90	13	PAOZZ	5310-00-734-1885	96906	MS21071-4	..NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	16
90	14	PAOZZ	5325-00-276-4953	88044	AN227-6	..CAP,SNAP FASTENER..........UHE,UHH,UHV,UHX	EA	16
90	15	PAOZZ	5325-00-276-4946	88044	AN227-7	..SOCKET,SNAP FASTENE..........UHE,UHH,UHV,UHX	EA	15
90	16	PAOZZ	5306-00-075-9380	97499	205-070-725-5	.BOLT,RING..........UHE,UHH,UHV,UHX	EA	16
90	17	PAOZZ	1730-00-126-9108	55048	SW1961-1	.TIE DOWN,ROTARY WIN SEE FUNCTIONAL GROUP 82 FOR DETAILS	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						....UHE,UHH,UHV,UHX		
90	18	PAOZZ	5325-00-720-8914	72794	AW5T13	..STUD,TURNLOCK FA..........................UHE,UHH,UHV,UHX	EA	1
90	19	PAOZZ	5325-00-141-4002	72794	GH5	..EYELET,TURNLOCK FAS........................UHE,UHH,UHV,UHX	EA	1
90	20	PAOZZ	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER...............UHE,UHH,UHV,UHX	EA	1
90	21	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK...........................UHE,UHH,UHV,UHX	EA	1
90	22	PAOFF	1730-00-980-9552	97499	204-050-200-5	.TRUCK,HELICOPTER,GR -GROUND HANDLING U/O PN 205-070-001-7,-9,-11,& -13 SEE FUNCTIONAL GROUP 83 FOR DETAILS ....UHE,UHH,UHV,UHX	EA	2
90		XCOZZ		97499	204-070-254-1	CASE INSTL MAP AND DATA USBL EFF 62-2106 THRU 63-13002 SEE FIG.7 FOR NHA..........................UHE,UHH,UHV,UHX	EA	1
90		XCOZZ		97499	204-070-254-5	CASE INSTL MAP AND DATA USBL EFF 64-13492 THRU 67-19537 SEE FIG.7 FOR NHA..........................UHE,UHH,UHV,UHX	EA	1
90		XCOZZ		97499	204-070-254-7	CASE INSTL MAP AND DATA USBL EFF 68-15214 THRU 68-15324 SEE FIG.7 FOR NHA..........................UHE,UHH,UHV,UHX	EA	1
90		XCOZZ		97499	204-070-254-9	CASE INSTL MAP AND DATA USBL EFF 68-15325 & SUBSEQUENT SEE FIG.7 FOR NHA..........................UHE,UHH,UHV,UHX	EA	1
90	23	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	4
90	23	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	4
90	24	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.................................UHE,UHH,UHV,UHX	EA	4
90	25	PAOZZ	1680-00-898-0318	88044	AN8011-1A	.CASE,FLIGHT REPORT U/O PN 204-070-254-1 & -5 ....UHE,UHH,UHV,UHX	EA	1
90	25	PAOZZ	1680-00-198-8613	97499	30-012-1	.CASE,FLIGHT REPORT U/O PN 204-070-254-7 & 9 ....UHE,UHH,UHV,UHX	EA	1
90	26	MFOZZ	1560-00-885-3539	97499	204-070-255-1	.BRACKET ASSEMBLY U/O PN 204-070-254-1.......UHE,UHH,UHV,UHX	EA	1
90	26	MFOZZ	1560-00-939-7642	97499	204-070-255-13	.BRACKET ASSEMBLY,FU U/O PN 204-070-254-5....UHE,UHH,UHV,UHX	EA	1
90	27	MFOZZ	1560-00-885-3540	97499	204-070-255-2	.BRACKET ASSEMBLY U/O PN 204-070-254-1.......UHE,UHH,UHV,UHX	EA	1
90	27	MFOZZ	1560-00-939-7641	97499	204-070-255-14	.BRACKET ASSEMBLY,FU U/O PN 204-070-254-5....UHE,UHH,UHV,UHX	EA	1
90	28	PAOOO	1560-00-967-7623	97499	205-070-940-1	.BRACKET ASSEMBLY............................UHE,UHH,UHV,UHX	EA	1
90	29	PAOZZ	5340-00-958-1323	80205	NAS1353DS7S04D	..PIN,QUICK RELEAS...........................UHE,UHH,UHV,UHX	EA	1
90	30	PAOZZ	1560-00-967-7622	97499	205-070-941-1	.CLAMP,MIRROR STOWAG.........................UHE,UHH,UHV,UHX	EA	1
90	31	MFOZZ		97499	205-070-942-1	.BRACKET.....................................UHE,UHH,UHV,UHX	EA	1
90	32	PAOZZ	5305-00-889-3001	96906	MS35206-231	.SCREW,MACHINE...............................UHE,UHH,UHV,UHX	EA	4
90	33	PAOZZ	5310-00-188-7721	88044	AN960PD6	.WASHER,FLAT.................................UHE,UHH,UHV,UHX	EA	4
90	34	PAOZZ	5365-00-302-8098	80205	NAS43DD1-16	.SPACER,SLEEVE...............................UHE,UHH,UHV,UHX	EA	4
90	35	PAOZZ	5310-00-878-3291	96906	MS21043-06	.NUT,SELF-LOCKING,EX EXTENDED WASHER HEXAGON ....UHE,UHH,UHV,UHX	EA	4
90	36	PBOZZ	1560-00-867-8954	97499	205-706-013-3	.INSTALLATION KIT,AU EQUIPMENT-LH USBL EFF 63-12956 THRU 64-13901 SEE FIG.429 FOR BREAKDOWN..............UHE,UHH,UHV,UHX	EA	1
90	36	PBOZZ	1560-00-867-8955	97499	205-706-013-4	.INSTALLATION KIT,AU EQUIPMENT-RH USBL EFF 63-12956 THRU 64-13901 SEE FIG.429 FOR BREAKDOWN..............UHE,UHH,UHV,UHX	EA	1
90	36	PBOZZ	1560-00-906-6416	97499	205-706-013-11	.INSTALLATION KIT,AU EQUIPMENT USBL EFF 65-9565 & SUBSEQUENT SEE FIG.429 FOR BREAKDOWN......................UHE,UHH,UHV,UHX	EA	1
90	37	PBODO	1560-00-867-8956	97499	205-706-013-5	.INSTALLATION KIT,AU EQUIPMENT-AFT U/O PN 205-070-001-11,-13 & -17 SEE FIG.429 FORBREAKDOWN...............UHE,UHH,UHV,UHX	EA	1
90		PAOZZ	1680-00-169-0656	81996	1080EG033	.HARNESS,AIRCRAFT SA SAFETY,SHOULDER.........UHE,UHH,UHV,UHX	EA	1
90		XCOZZ		97499	205-070-001-3	LOOSE EQUIP INSTL INSTALLED USBL EFF 62-2106 THRU 62-12372 SEE FIG.5 FOR NHA.........................UHE,UHH,UHV,UHX	EA	1
90		XCOZZ		97499	205-070-001-5	LOOSE EQUIP INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.5 FOR NHA.................................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
90		XCOZZ		97499	205-070-001-15	LOOSE EQUIP INSTL INSTALLED USBL EFF 64-13492 & SUBSEQUENT SEE FIG.5 FOR NHA............................UHE,UHH,UHV,UHX	EA	1
90	37A	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE STORED IN DOOR POST...........UHE,UHH,UHV,UHX	EA	4
90	37A	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT STORED IN DOOR POST............UHE,UHH,UHV,UHX	EA	40
90	37A	PAOZZ	5365-00-057-4555	80205	NAS42HT8-14	.SPACER,SLEEVE STORED IN DOOR POST..........UHE,UHH,UHV,UHX	EA	4
90	37A	PAOZZ	5325-00-728-9974	53037	VBP69050	.STUD,POSITIVE LOCK USBL EFF:62-2106:THRU:63-8814:STORED IN DOOR POST..................................UHE,UHH,UHV,UHX	EA	1
90	37A	PAOZZ	5325-00-728-9974	53037	VBP69050	.STUD,POSITIVE LOCK USBL EFF:63-8815:&:SUBSEQUENT:STORED IN DOOR POST..................................UHE,UHH,UHV,UHX	EA	1
90	37A	PAOZZ	5325-00-774-9430	21024	A121-1-13	.STUD,POSITIVE LO USBL EFF 63-8815 & SUBSEQUENT ....UHE,UHH,UHV,UHX	EA	2
90	38	XCFZZ		97499	205-070-705-5	.LITTER INSTL USBL EFF 63-8804 THRU 63-13002 SEE FIG.7 FOR NHA...UHH,UHV	EA	1
90	39	PAOOO	1680-00-788-8667	97499	205-070-705-11	.INSTALLATION KIT,LI USBL EFF 64-13942 & SUBSEQUENT SEE FIG. 7 FOR NHA...UHH,UHV	EA	1
90	40	PAOZZ	5306-00-151-1427	88044	AN4-5A	..BOLT,MACHINE..................................UHH,UHV	EA	8
90	41	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT....................................UHH,UHV	EA	V
90	42	PAOZZ	1680-00-758-0184	97499	205-070-729-5	..BRACKET ASSEMBLY,LI SUPPORT....................UHH,UHV	EA	12
90	43	AOOOZ	1680-00-945-9879	97499	205-070-765-11	..STRAP ASSEMBLY,LITT............................UHH,UHV	EA	4
90	44	PAOZZ	1680-00-764-5859	97499	205-070-765-7	...STRAP,WEBBING.................................UHH,UHV	EA	1
90	45	PAOZZ	1680-00-016-2862	98313	FDC3120M2	...FITTING ASSY,STUD.............................UHH,UHV	EA	1
90	46	PAOZZ	1680-00-016-2861	98313	FDC3140M3	...FITTING,LITTER................................UHH,UHV	EA	1
90	47	PAOZZ	1680-00-758-0238	98313	FDC3835-7M	...BRACKET ASSEMBLY,LI...........................UHH,UHV	EA	3
90	48	MFOZZ	1680-00-225-5085	97499	205-070-656-1	...STRAP,WEBBING.................................UHH,UHV	EA	1
90	49	AOOOZ	1680-00-133-7382	97499	205-070-770-1	..SUSPENSION INSTL...............................UHH,UHV	EA	2
90	50	AOOOZ	1680-00-235-9803	97499	205-070-770-2	..SUPPORT,LITTER RH..............................UHH,UHV	EA	2
90	51	PAOZZ	5315-00-829-1480	96906	MS24665-208	...PIN,COTTER....................................UHH,UHV	EA	V
90	52	PAOZZ	5315-00-064-2701	96906	MS20392-3C37	...PIN,STRAIGHT,HEADED...........................UHH,UHV	EA	2
90	53	PAOZZ	5315-00-770-9181	96906	MS20392-3C39	...PIN,STRAIGHT,HEADED...........................UHH,UHV	EA	1
90	54	PAOZZ	5365-00-089-2911	80205	NAS43DD4-63	...SPACER,SLEEVE.................................UHH,UHV	EA	1
90	55	MFOZZ	1680-00-769-2375	97499	205-070-772-1	...STRAP,WEBBING.................................UHH,UHV	EA	2
90	56	PAOZZ	5315-00-059-0157	96906	MS24665-210	..PIN,COTTER.....................................UHH,UHV	EA	1
90	57	PAOZZ	1680-00-868-2707	97499	205-070-774-1	..BEAM,LITTER GUIDE..............................UHH,UHV	EA	1
90	58	PAOZZ	5306-00-182-1963	88044	AN4H15A	..BOLT,MACHINE...................................UHH,UHV	EA	2
90	59	PAOZZ	5310-00-877-5796	96906	MS21044N4	..NUT,SELF-LOCKING,HE............................UHH,UHV	EA	2
90	60	PAOZZ	1560-00-758-5700	97499	205-070-773-1	..SUPPORT,LITTER GUID............................UHH,UHV	EA	1
90	61	PAOZZ	1560-00-736-0598	97499	205-070-773-3	..SUPPORT,LITTER GUID............................UHH,UHV	EA	1
90	62	PAOZZ	1560-00-736-0582	97499	205-070-771-1	..BRACKET ASSEMBLY LITTER U/O PN 205-070-770-1.......UHH,UHV	EA	1
90	63	PAOZZ	1560-00-736-0583	97499	205-070-771-2	..BRACKET ASSEMBLY LITTER U/O PN 205-070-770-2.......UHH,UHV	EA	1
90	64	PAOZZ	5340-00-107-6224	96906	MS20253P4-4800	..ROD,STRAIGHT,HEADLE............................UHH,UHV	EA	1
90	65	PAOZZ	1680-00-787-4299	97499	204-070-032-3	..BELT,AIRCRAFT SAFET U/O PN 205-070-705-11..........UHH,UHV	EA	2
90	66	PAOZZ	1680-00-069-9520	97499	205-070-722-1	..STRAP,WEBBING U/O PN 205-070-705-11................UHH,UHV	EA	12
90	67	MFOZZ	1560-00-760-3316	97499	205-070-769-1	..PLATE,AIRCRAFT.................................UHH,UHV	EA	4
90		XCOZZ		20309	ES-F-221558	STORAGE BAG INSTL SEE FIG 58 FOR NHA.....................UHX	EA	1
90	68	PAOZZ		20309	ES-C-221560-1	.SCREW,SHOULDER..UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
90	69	PAOZZ		20309	ES-C-221660-2	.SCREW,SHOULDER..UHX	EA	2
90	70	PAOZZ		96906	MS15795-816	.WASHER,PLAIN..UHX	EA	4
90	71	PAOZZ		20309	ES-F-221669	.BAG ASSY..UHX	EA	1

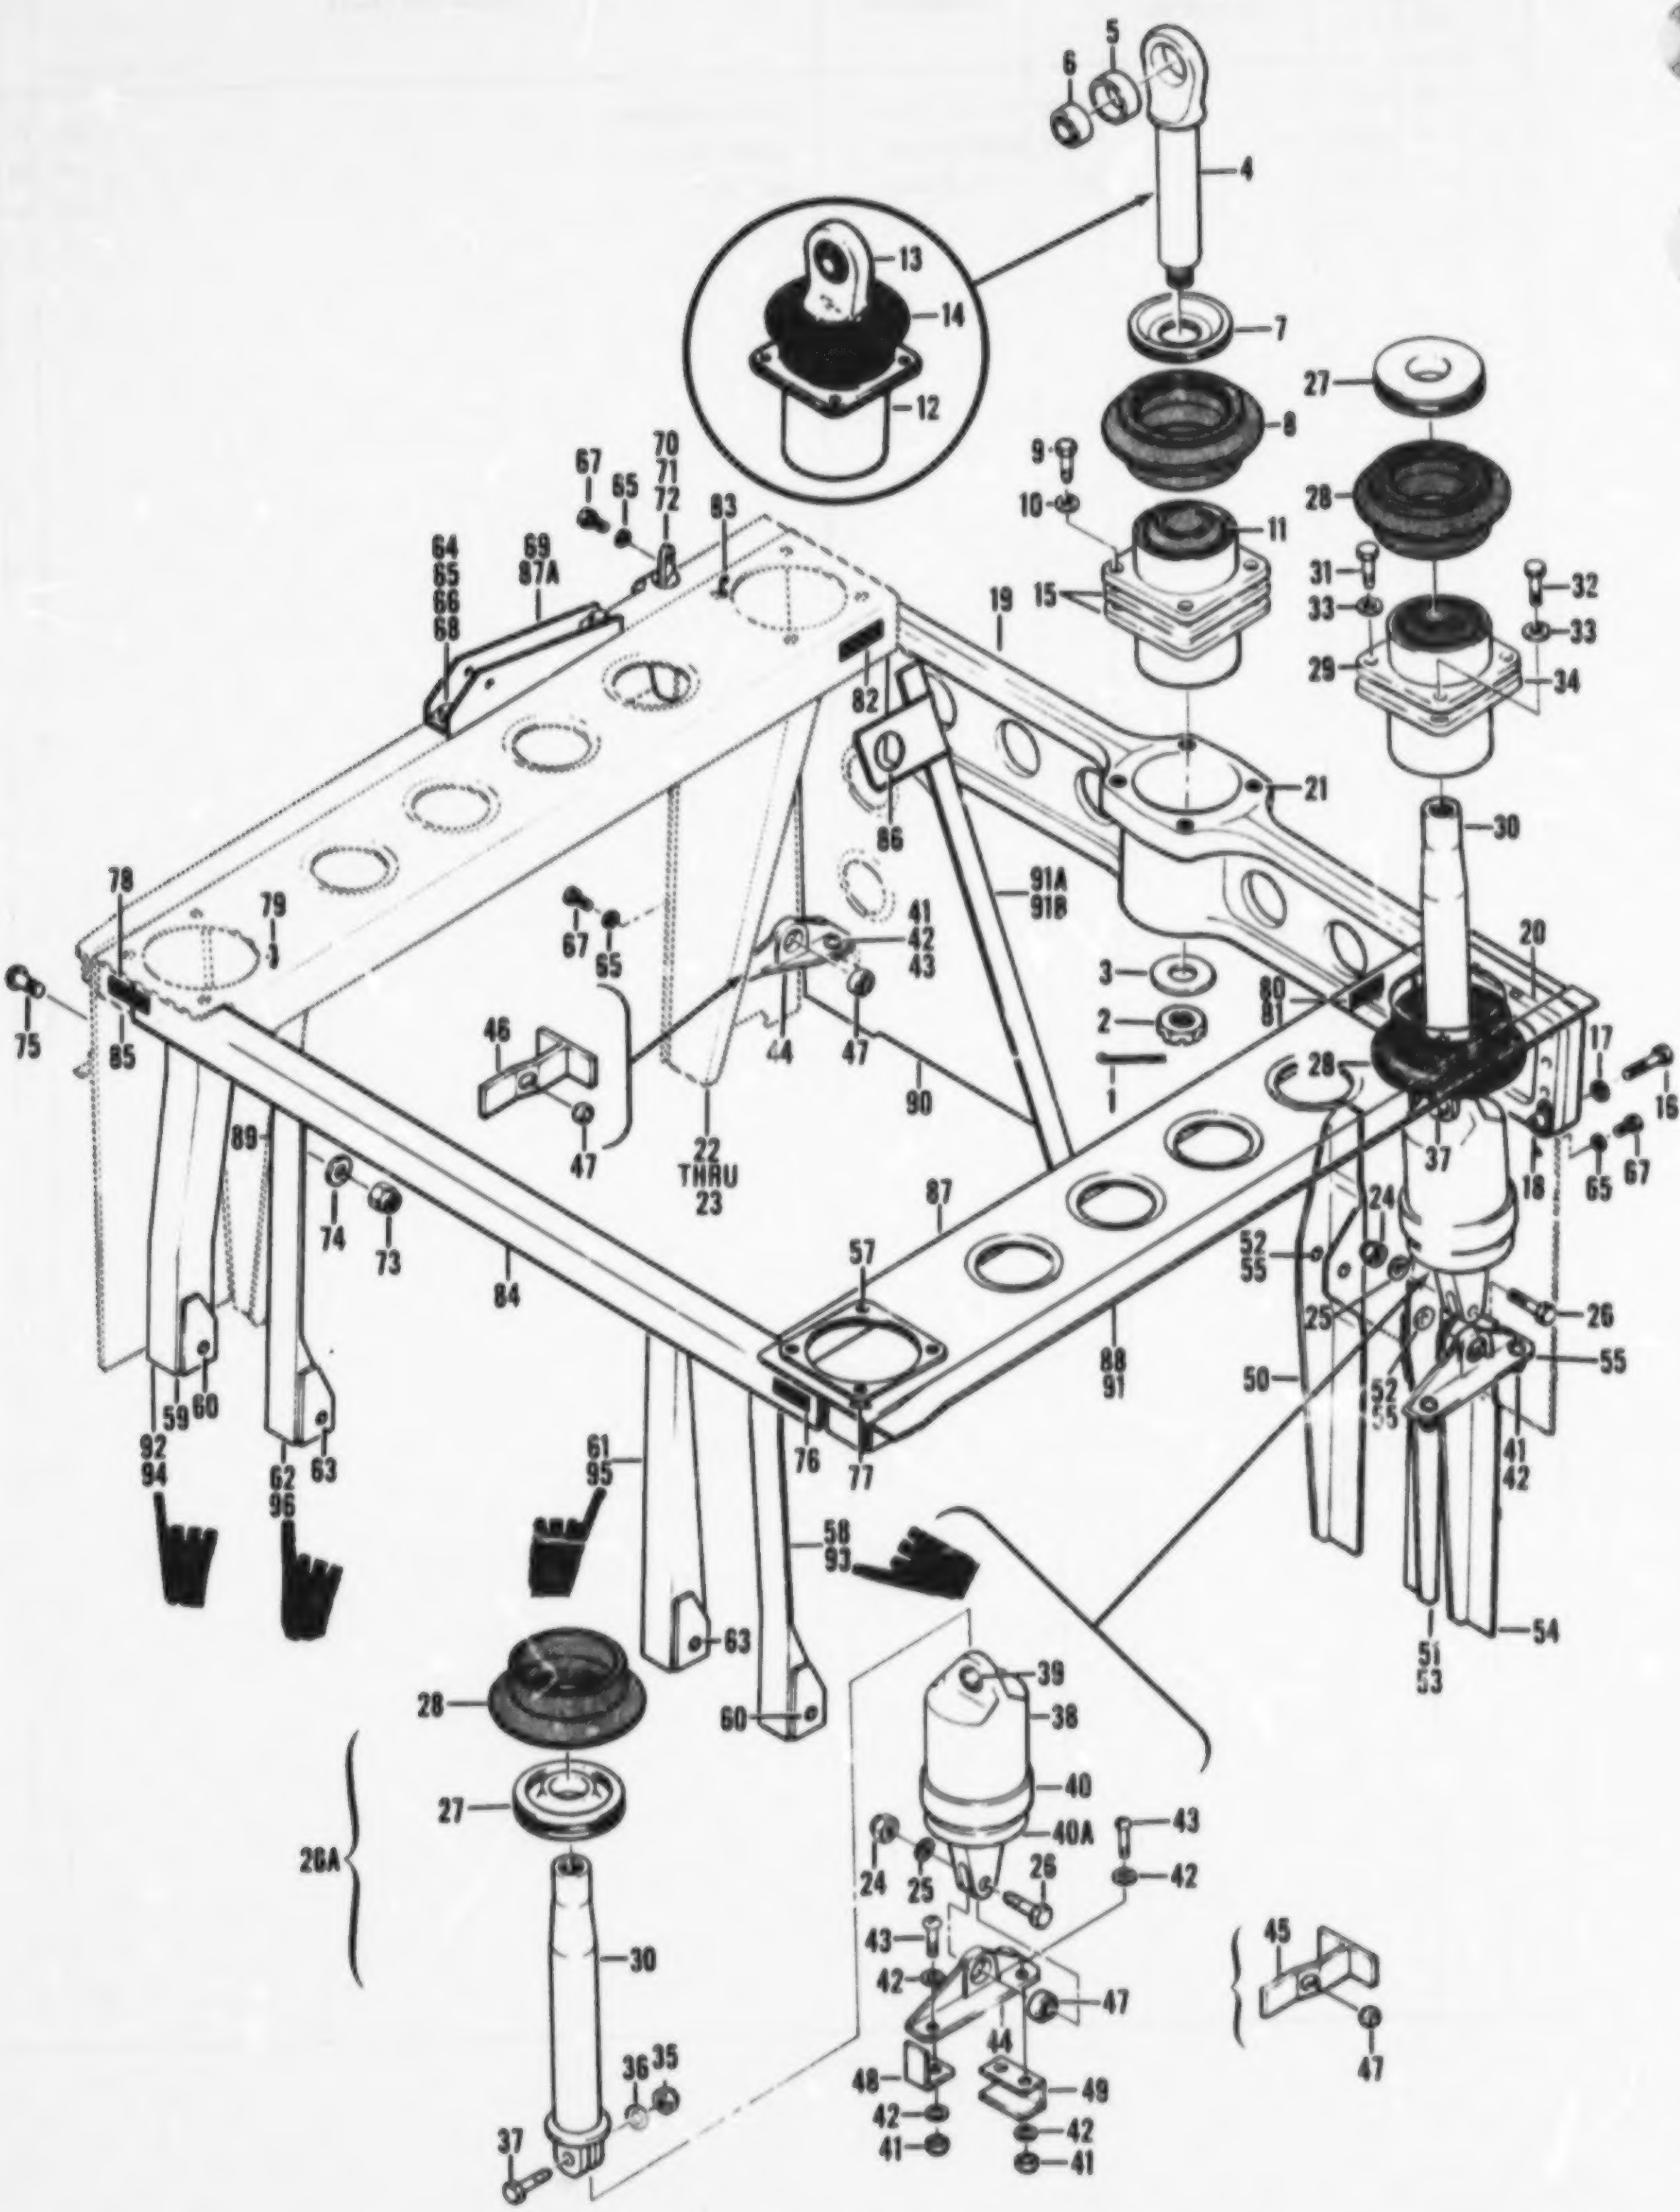
5
6
4
13
14
12
7
27
8
9
10
28
11
70
71
72
67
65
83
64
65
66
68
69
87A
15
19
31
32
33
33
29
34
82
21
86
30
78
79
91A
91B
41
42
43
67
65
20
3
75
85
2
80
81
46
44
47
17
1
28
16
90
89
47
22
THRU
23
37
18
65
67
87
74
73
24
52
55
84
57
26
25
88
91
50
55
52
55
41
42
59
60
92
94
62
96
63
61
95
76
77
58
93
51
53
54
63
28
39
38
60
40
27
40A
43
28A
24
25
26
42
45
43
42
47
30
44
47
36
35
48
49
42
42
41
41
37

Figure 91. Pylon Mount Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 AIRFRAME		
91		XCFZZ		97499	204-031-919-75	MOUNT INSTL,PYLON USBL EFF 64-14101 & SUBSEQUENT SEE FIG.57 FOR NHA.......... UHM	EA	1
91		XCFZZ		97499	205-030-919-3	MOUNT INSTL,PYLON USBL EFF 62-2106 THRU 62-12372 SEE FIG.68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
91		XCFZZ		97499	205-030-919-5	MOUNT INSTL,PYLON USBL EFF 63-8739 THRU 63-13002 SEE FIG.68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
91		XCFZZ		97499	205-030-919-7	MOUNT INSTL,PYLON USBL EFF 64-13492 THRU 64-13901 SEE FIG.68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
91		XCFZZ		97499	205-030-919-43	MOUNT INSTL,PYLON USBL EFF 65-9565 THRU 6815489 SEE FIG.68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
91		XCFZZ		97499	205-030-919-53	MOUNT INSTL,PYLON USBL EFF 68-5490 THRU 69-1521 SEE FIG.68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
91		XCFZZ		97499	205-030-919-65	MOUNT INSTL,PYLON USBL EFF 69-15292 THRU 70-15932 SEE FIG.68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
91		XCFZZ		97499	205-030-919-75	MOUNT INSTL,PYLON USBL EFF 700-16200 AND SUBSEQUENT SEE FIG. 68 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
91	1	PBOZZ	5315-00-285-7161	96906	MS24665-377	.PIN,COTTER..........UHE,UHH,UHV,UHX	EA	1
91	2	PAOZZ	5310-00-176-8113	88044	AN320-9	.NUT,PLAIN,SLOTTED,H..........UHE,UHH,UHV,UHX	EA	1
91	3	PAOZZ	5310-00-843-0336	97499	140-010-1	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
91	4	PAOFF	5306-00-179-6308	97499	204-031-244-5	.BEARING,PLAIN,ROD E..........UHE,UHH,UHV,UHX	EA	1
91	5	PAFZZ	3120-00-670-5306	97499	204-030-909-11	..BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	1
91	6	PAFZZ	3120-00-861-7115	02756	HSB09SS	..BEARING,PLAIN,SELF- ALIGNING..........UHE,UHH,UHV,UHX	EA	1
91	7	PAOZZ	5310-00-738-8385	97499	140-011-1	.WASHER,RECESSED..........UHE,UHH,UHV,UHX	EA	1
91	8	PAOZZ	1560-00-633-0856	97499	204-030-922-3	.BOOT,DUST AND MOIST..........UHE,UHH,UHV,UHX	EA	1
91	9	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE.......... UHE,UHH,UHM,UHV,UHX	EA	4
91	10	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT.......... UHE,UHH,UHM,UHV,UHX	EA	4
91	11	PAOZZ	5340-00-739-4568	97499	204-031-927-5	.MOUNT,RESILIENT..........UHE,UHH,UHV,UHX	EA	1
91	12	PAOFF	1560-00-903-1018	76005	J12292-1	.MOUNT,IDLER,PYLON..........UHM	EA	1
91	13	PAFZZ	3120-00-861-7115	02756	HSB09SS	..BEARING,PLAIN,SELF- ALIGNING..........UHM	EA	1
91	14	PAOZZ	1615-00-474-9686	76005	J12315-2	..BOOT,DUST AND MOIST..........UHM	EA	1
91	15	PAOZZ	5365-00-806-2432	97499	204-030-931-5	.SHIM.......... UHE,UHH,UHM,UHV,UHX	EA	2
91	16	PAFZZ	5306-00-132-1960	88044	AN4H12A	.BOLT,MACHINE..........UHM	EA	8
91	16	PAFZZ	5306-00-132-2063	88044	AN3H12A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	8
91	17	PAFZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	8
91	17	PAFZZ	5310-00-187-2364	88044	AN960PD416	.WASHER,FLAT..........UHM	EA	8
91	18	PAFZZ	5310-00-764-7282	96906	MS21047L3	.NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	8
91	18	PAFZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX..........UHM	EA	8
91	19	PAFZZ	1560-00-757-2868	97499	204-031-246-9	.SUPPORT,STRUCTURAL U/O PN 204-031-919-65....UHE,UHH,UHV,UHX	EA	1
91	19	PAFZZ	1560-00-133-6224	97499	209-031-344-1	.FITTING ASSEMBLY,MD..........UHM	EA	1
91	20	PAFZZ	1560-00-916-8324	97499	205-030-919-39	.SHIM,PYLON SUPPORT.......... UHE,UHH,UHM,UHV,UHX	EA	4
91	21	PAFZZ	5340-00-290-4497	96906	MS124736	..INSERT,SCREW THREAD THREAD.......... UHE,UHH,UHM,UHV,UHX	EA	4
91	22	PAOOO	5325-00-298-7027	72794	RF3 1-2	.RECEPTACLE,TURNLOCK.......... UHE,UHH,UHM,UHV,UHX	EA	4
91	22A	MFOZZ		97499	205-030-919-33	..CLIP..........UHE,UHH,UHX	EA	2
91	22B	PAOZZ	5320-00-117-6939	96906	MS20426AD3-5	..RIVET,SOLID..........UHE,UHH,UHX	EA	4
91	23	PAOZZ	5365-00-720-3191	72794	RF3 1-2 5	..SPACER,SLEEVE.......... UHE,UHH,UHM,UHV,UHX	EA	1
91	24	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX.......... UHE,UHH,UHM,UHV,UHX	EA	2

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
91	25	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT... UHM,UHV	EA	2
91	26	PAOZZ	5306-00-182-1958	88044	AN4H10A	.BOLT,MACHINE...UHE,UHH,UHV,UHX	EA	2
91	26A	AOOOZ		97499	204-031-928-5	.MOUNT ASSEMBLY... UHE,UHH,UHM,UHV,UHX	EA	4
91	27	PAOZZ	1560-00-891-1391	97499	204-030-930-19	..BUSHING ASSEMBLY PY... UHE,UHH,UHM,UHV,UHX	EA	2
91	28	PAOZZ	1560-00-633-0856	97499	204-030-922-3	..BOOT,DUST AND MOIST... UHE,UHH,UHM,UHV,UHX	EA	2
91	29	PAOZZ	5340-00-739-4569	97499	204-031-927-7	..MOUNT,RESILIENT... UHE,UHH,UHM,UHV,UHX	EA	1
91	30	PAOZZ	5306-00-738-8384	97499	204-030-362-7	..BOLT,ISOLATION MOUN... UHE,UHH,UHM,UHV,UHX	EA	1
91	31	PAOZZ	5306-00-151-2414	88044	AN175-10A	.BOLT,CLOSE TOLERANC... UHM	EA	12
91	31	PAOZZ	5306-00-144-4041	88044	AN175H10A	.BOLT,CLOSE TOLERANC...UHE,UHH,UHV,UHX	EA	4
91	31	PAOZZ	5306-00-144-4043	88044	AN175H12A	.BOLT,CLOSE TOLERANC FWD HOLE,FWD MOUNT...UHE,UHH,UHV,UHX	EA	4
91	32	PAOZZ	5306-00-680-6306	88044	AN175H11A	.BOLT,CLOSE TOLERANC... UHM	EA	4
91	32	PAOZZ	5306-00-680-6306	88044	AN175H11A	.BOLT,CLOSE TOLERANC...UHE,UHH,UHV,UHX	EA	8
91	33	PAOZZ	5310-00-167-0836	88044	AN960-516L	.WASHER,FLAT... UHE,UHH,UHM,UHV,UHX	EA	16
91	34	PAOZZ	5365-00-807-2966	97499	100-055-3	.SPACER,PLATE... UHE,UHH,UHM,UHV,UHX	EA	2
91	35	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX... UHE,UHH,UHM,UHV,UHX	EA	2
91	36	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT... UHE,UHH,UHM,UHV,UHX	EA	2
91	37	PAOZZ	5306-00-182-1959	88044	AN4H11A	.BOLT,MACHINE... UHE,UHH,UHM,UHV,UHX	EA	2
91	38	PAOOO	1560-00-839-6863	97499	204-031-920-3	.DAMPER,PYLON,SUPPOR...UHE,UHH,UHM,UHV,UHX	EA	2
91	39	PAOZZ	3120-00-540-5077	73134	LS4	..BEARING,PLAIN,SELF- ALIGNING... UHE,UHH,UHM,UHV,UHX	EA	1
91	40	PAOZZ	1615-00-177-1959	76005	J9993-3	..BOOT,DUST AND MOIST... UHE,UHH,UHM,UHV,UHX	EA	1
91	40A	PAOZZ	1650-01-121-5282	76005	J-16656-1	..PARTSKIT,DAMPER...UHE,UHH,UHM,UHV,UHX	EA	1
91	41	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON ...UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
91	42	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT... UHE,UHH,UHM,UHV,UHX	EA	30
91	43	XDOZZ		96906	MS27039-1-09	.SCREW,MACHINE... UHE,UHH,UHM,UHV,UHX	EA	5
91	43	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE... UHE,UHH,UHM,UHV,UHX	EA	1
91	44	PAOZZ	1615-00-075-0286	97499	204-031-275-1	.MOUNT ASSEMBLY... UHM	EA	1
91	44	PAOZZ	1560-00-072-1077	97499	205-031-251-1	.DAMPER MOUNT ASSEMB -LH...UHE,UHH,UHV,UHX	EA	1
91	44	PAOZZ	1615-00-075-0287	97499	204-031-275-2	.MOUNT ASSEMBLY -RH... UHM	EA	1
91	44	PAOZZ	1560-00-072-1076	97499	205-031-251-2	.DAMPER MOUNT ASSEMB -RH...UHE,UHH,UHV,UHX	EA	1
91	45	PAOFF	1560-00-415-6394	97499	205-031-151-1	.SUPPORT,DAMPER MOUN USBL EFF 70-16200 & SUBSEQUENT ...UHE,UHH,UHV,UHX	EA	1
91	46	PAOFF	1560-00-415-6395	97499	205-031-151-2	.SUPPORT,DAMPER MOUN USBL EFF 70-16200 AND SUBSEQUENT ...UHE,UHH,UHV,UHX	EA	1
91	47	PAFZZ	3120-00-540-5077	73134	LS4	..BEARING,PLAIN,SELF- ALIGNING... UHE,UHH,UHM,UHV,UHX	EA	1
91	48	MFOZZ		97499	204-031-919-37	.CLIP,SUPPORT PYLON- -LH... UHM	EA	1
91	48	MFOZZ		97499	205-030-919-37	.BRACKET,PYLON SUPPO -LH...UHE,UHH,UHV,UHX	EA	1
91	48	MFOZZ		97499	204-031-919-38	.CLIP,SUPPORT,PYLON -RH... UHM	EA	1
91	48	MFOZZ		97499	205-030-919-38	.CLIP,SUPPORT PYLON- -RH...UHE,UHH,UHV,UHX	EA	1
91	49	PAOZZ	5340-00-089-8575	97499	204-031-919-43	.CLIP,RETAINING -LH... UHM	EA	1
91	49	PAOZZ	5340-00-089-8577	97499	205-030-163-187	.CLIP,RETAINING -LH...UHE,UHH,UHV,UHX	EA	1
91	49	PAOZZ	5340-00-089-8576	97499	204-031-919-45	.CLIP,RETAINING -RH... UHM	EA	1
91	49	PAOZZ	1560-00-871-3333	97499	205-030-164-187	.CLIP,BEAM ASSEMBLY -RH...UHE,UHH,UHV,UHX	EA	1
91	50	PBFFF	1560-00-927-9523	97499	204-031-145-1	.SUPPORT ASSEMBLY,PY...UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
91	50	PBFFF	1560-00-439-3707	97499	205-030-361-3	.SUPPORT ASSEMBLY,AH	UHE,UHH,UHV,UHX	EA	1
91	52	PAFZZ	3120-00-555-5567	97499	22-006-15-18-16	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	2
91	52	XDFZZ		97499	22-007-20-19-18	..BUSHING,SLEEVE U/O PN 204-031-145-1	UHM	EA	2
91	53	XDFZZ	1560-00-927-9524	97499	204-031-148-1	.SUPPORT ASSEMBLY PY	UHM	EA	1
91	53	PAFZZ	1560-00-181-5438	97499	205-030-361-1	.SUPPORT ASSEMBLY,PY	UHE,UHH,UHV,UHX	EA	1
91	54	PBFFF	1550-00-927-9512	97499	204-031-149-1	.SUPPORT ASSEMBLY,PY	UHM	EA	1
91	54	PBFFF	1560-00-439-0221	97499	205-030-359-1	.SUPPORT ASSEMBLY,PY	UHE,UHH,UHV,UHX	EA	1
91	55	PAFZZ	3120-00-555-5557	97499	22-006-15-18-16	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
91	56	PAFZZ	3120-00-662-4357	97499	22-006-15-19-16	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
91	55	XDFZZ		97499	22-007-20-19-18	..BUSHING,SLEEVE U/O PN 204-031-148-1 & PN 204-031-149-1	UHM	EA	1
91	57	PAFZZ	5365-00-898-6885	97499	100-055-1	.SPACER,PLATE	UHE,UHH,UHM,UHV,UHX	EA	2
91	58	PBFFF	1560-00-929-8500	97499	204-031-146-1	.SUPPORT ASSEMBLY,PY -LH	UHM	EA	1
91	59	PBFFF	1560-00-929-8499	97499	204-031-146-2	.SUPPORT ASSEMBLY,PY	UHM	EA	1
91	60	XDFZZ		97499	22-007-20-18-18	..BUSHING.SLEEVE	UHM	EA	2
91	61	PBFFF	1560-00-929-5804	97499	204-031-147-1	.SUPPORT ASSEMBLY,PY -LH	UHM	EA	1
91	62	PBFFF	1560-00-931-1073	97499	204-031-147-2	.SUPPORT ASSEMBLY,PY -RH	UHM	EA	1
91	63	XDFZZ		97499	22-007-20-18-18	..BUSHING,SLEEVE	UHM	EA	2
91	65	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHM	EA	11
91	66	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE	UHM	EA	6
91	67	PAOZZ	5306-00-182-2016	88044	AN4H5A	.BOLT,MACHINE	UHM	EA	5
91	68	MDOZZ	1560-00-869-8945	97499	204-030-919-39	.BLOCK,RADIUS,PYLON	UHM	EA	3
91	69	PAOZZ	1560-00-997-6666	97499	204-030-919-38	.CHANNEL,PYLON SUPPO -RH	UHM	EA	1
91	70	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT.SELF-LOCKING,EX	UHM	EA	1
91	71	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT	UHM	EA	1
91	72	PAOZZ	5306-00-900-1029	88044	AN46C7A	.BOLT,EYE	UHM	EA	1
91	73	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX	UHM	EA	2
91	74	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT	UHM	EA	2
91	75	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHM	EA	2
91	76	PBFZZ	1560-00-924-5766	97499	204-031-803-1	.SUPPORT,PYLON	UHM	EA	1
91	76	PBFZZ	1560-00-923-2783	97499	205-030-803-1	.FITTING ASSEMBLY,SU SUPPORT	UHE,UHH,UHV,UHX	EA	1
91	77	PAFZZ	5310-00-728-7718	96906	MS21069L5	.NUT,SELF-LOCKING,PL	UHM	EA	4
91	77	PAFZZ	5310-00-766-6654	96906	MS21073L5	.NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	4
91	78	PBFZZ	1560-00-924-5764	97499	204-031-803-3	.SUPPORT,PYLON	UHM	EA	1
91	78	PBFZZ	1560-00-923-2784	97499	205-030-803-3	.FITTING ASSEMBLY,SU	UHE,UHH,UHV,UHX	EA	1
91	79	PAFZZ	5310-00-728-7718	96906	MS21069L5	.NUT,SELF-LOCKING,PL	UHM	EA	4
91	79	PAFZZ	5310-00-766-6654	96906	MS21073L5	.NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	4
91	80	PBFZZ	1560-00-924-5763	97499	204-031-803-5	.SUPPORT,PYLON	UHM	EA	1
91	80	PBFZZ	1560-00-923-2786	97499	205-030-803-5	.FITTING ASSEMBLY,SU	UHE,UHH,UHV,UHX	EA	1
91	81	PAFZZ	5310-00-728-7718	96906	MS21069L5	.NUT,SELF-LOCKING,PL	UHM	EA	2
91	81	PAFZZ	5310-00-766-6654	96906	MS21073L5	.NUT,SELF-LOCKING,PL	UHM	EA	2
91	81	PAFZZ	5310-00-766-6654	96906	MS21073L5	.NUT,SELF-LOCKING,PL	UHE,UHH,UHV,UHX	EA	4
91	82	PBFZZ	1560-00-924-5767	97499	204-031-803-7	.SUPPORT,PYLON	UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
91	82	PBFZZ	1560-00-923-2787	97499	205-030-803-7	.FITTING ASSEMBLY,SU..........UHE,UHH,UHV,UHX	EA	1
91	83	PAFZZ	5310-00-766-6654	96906	MS21073L5	.NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	4
91	84	PBDZZ	1560-00-476-5574	97499	204-031-919-25	.ANGLE,PYLON.......... UHM	EA	1
91	85	PBDZZ	1560-00-476-5573	97499	204-031-919-27	.FILLER,PYLON.......... UHM	EA	1
91	86	PADZZ	1560-00-476-5572	97499	204-031-919-33	.BRACKET,PYLON.......... UHM	EA	1
91	87	PBO	1560-00-476-5575	97499	204-031-919-63	.WEB,PYLON..........UHM	EA	1
91	87	PADZZ	1560-00-132-1061	97499	205-030-919-41	.CHANNEL,SUPPORT,PYL -LH..........UHE,UHH,UHV,UHX	EA	1
91	87	PADZZ	1560-00-181-3526	97499	205-030-919-42	.CHANNEL,SUPPORT,PYL -RH..........UHE,UHH,UHV,UHX	EA	1
91	87A	PBDZZ	1560-00-994-6001	97499	204-031-919-84	.CHANNEL,SUPPORT.......... UHM	EA	1
91	88	PBDZZ	1560-00-476-5571	97499	204-031-919-57	.STIFFENER,AIRCRAFT..........UHM	EA	1
91	89	PBDZZ	1560-00-476-9498	97499	204-031-918-3	.ANGLE,SUPPORT,PYLON.......... UHM	EA	1
91	90	PADZZ	1560-00-132-1060	97499	205-030-919-12	.WEB, SUPPORT, PYLON..........UHE,UHH,UHV,UHX	EA	1
91	91	PADZZ	1560-00-238-4777	97499	204-030-063-3	.PANEL ASSY,PYLON SU SUPPORT..........UHM	EA	1
91	91A	PBDZZ	1560-00-120-0881	97499	204-031-919-11	.STIFFENER,PYLON SUP.......... UHM	EA	1
91	91B	PBDZZ	1560-00-120-0880	97499	204-031-919-12	.STIFFENER,PYLON SUP.......... UHM	EA	1
91	92	XDDZZ		97499	205-030-919-17	SUPPORT,PYLON MOUNT LH..........UHE,UHH,UHV,UHX	EA	1
91	92	PADZZ	1560-00-181-5437	97499	205-030-919-18	.SUPPORT,PYLON MOUNT RH..........UHE,UHH,UHV,UHX	EA	1
91		XCFZZ		97499	205-030-708-125	BULKHEAD INSTL SEE FIG.69 FOR NHA..........UHE,UHH,UHV,UHX	EA	1
91	93	PADZZ	1560-00-126-2521	97499	205-030-358-7	..SUPPORT ASSEMBLY,PY PYLON..........UHE,UHH,UHV,UHX	EA	1
91	94	PADZZ	1560-00-124-8064	97499	205-030-358-8	..SUPPORT ASSEMBLY,PY PYLON..........UHE,UHH,UHV,UHX	EA	1
91	95	PADZZ	1560-00-133-7333	97499	205-030-360-7	..SUPPORT ASSEMBLY,PY PYLON..........UHE,UHH,UHV,UHX	EA	1
91	96	PBDZZ	1560-00-442-1793	97499	205-030-360-8	..SUPPORT ASSEMBLY,PY PYLON..........UHE,UHH,UHV,UHX	EA	1

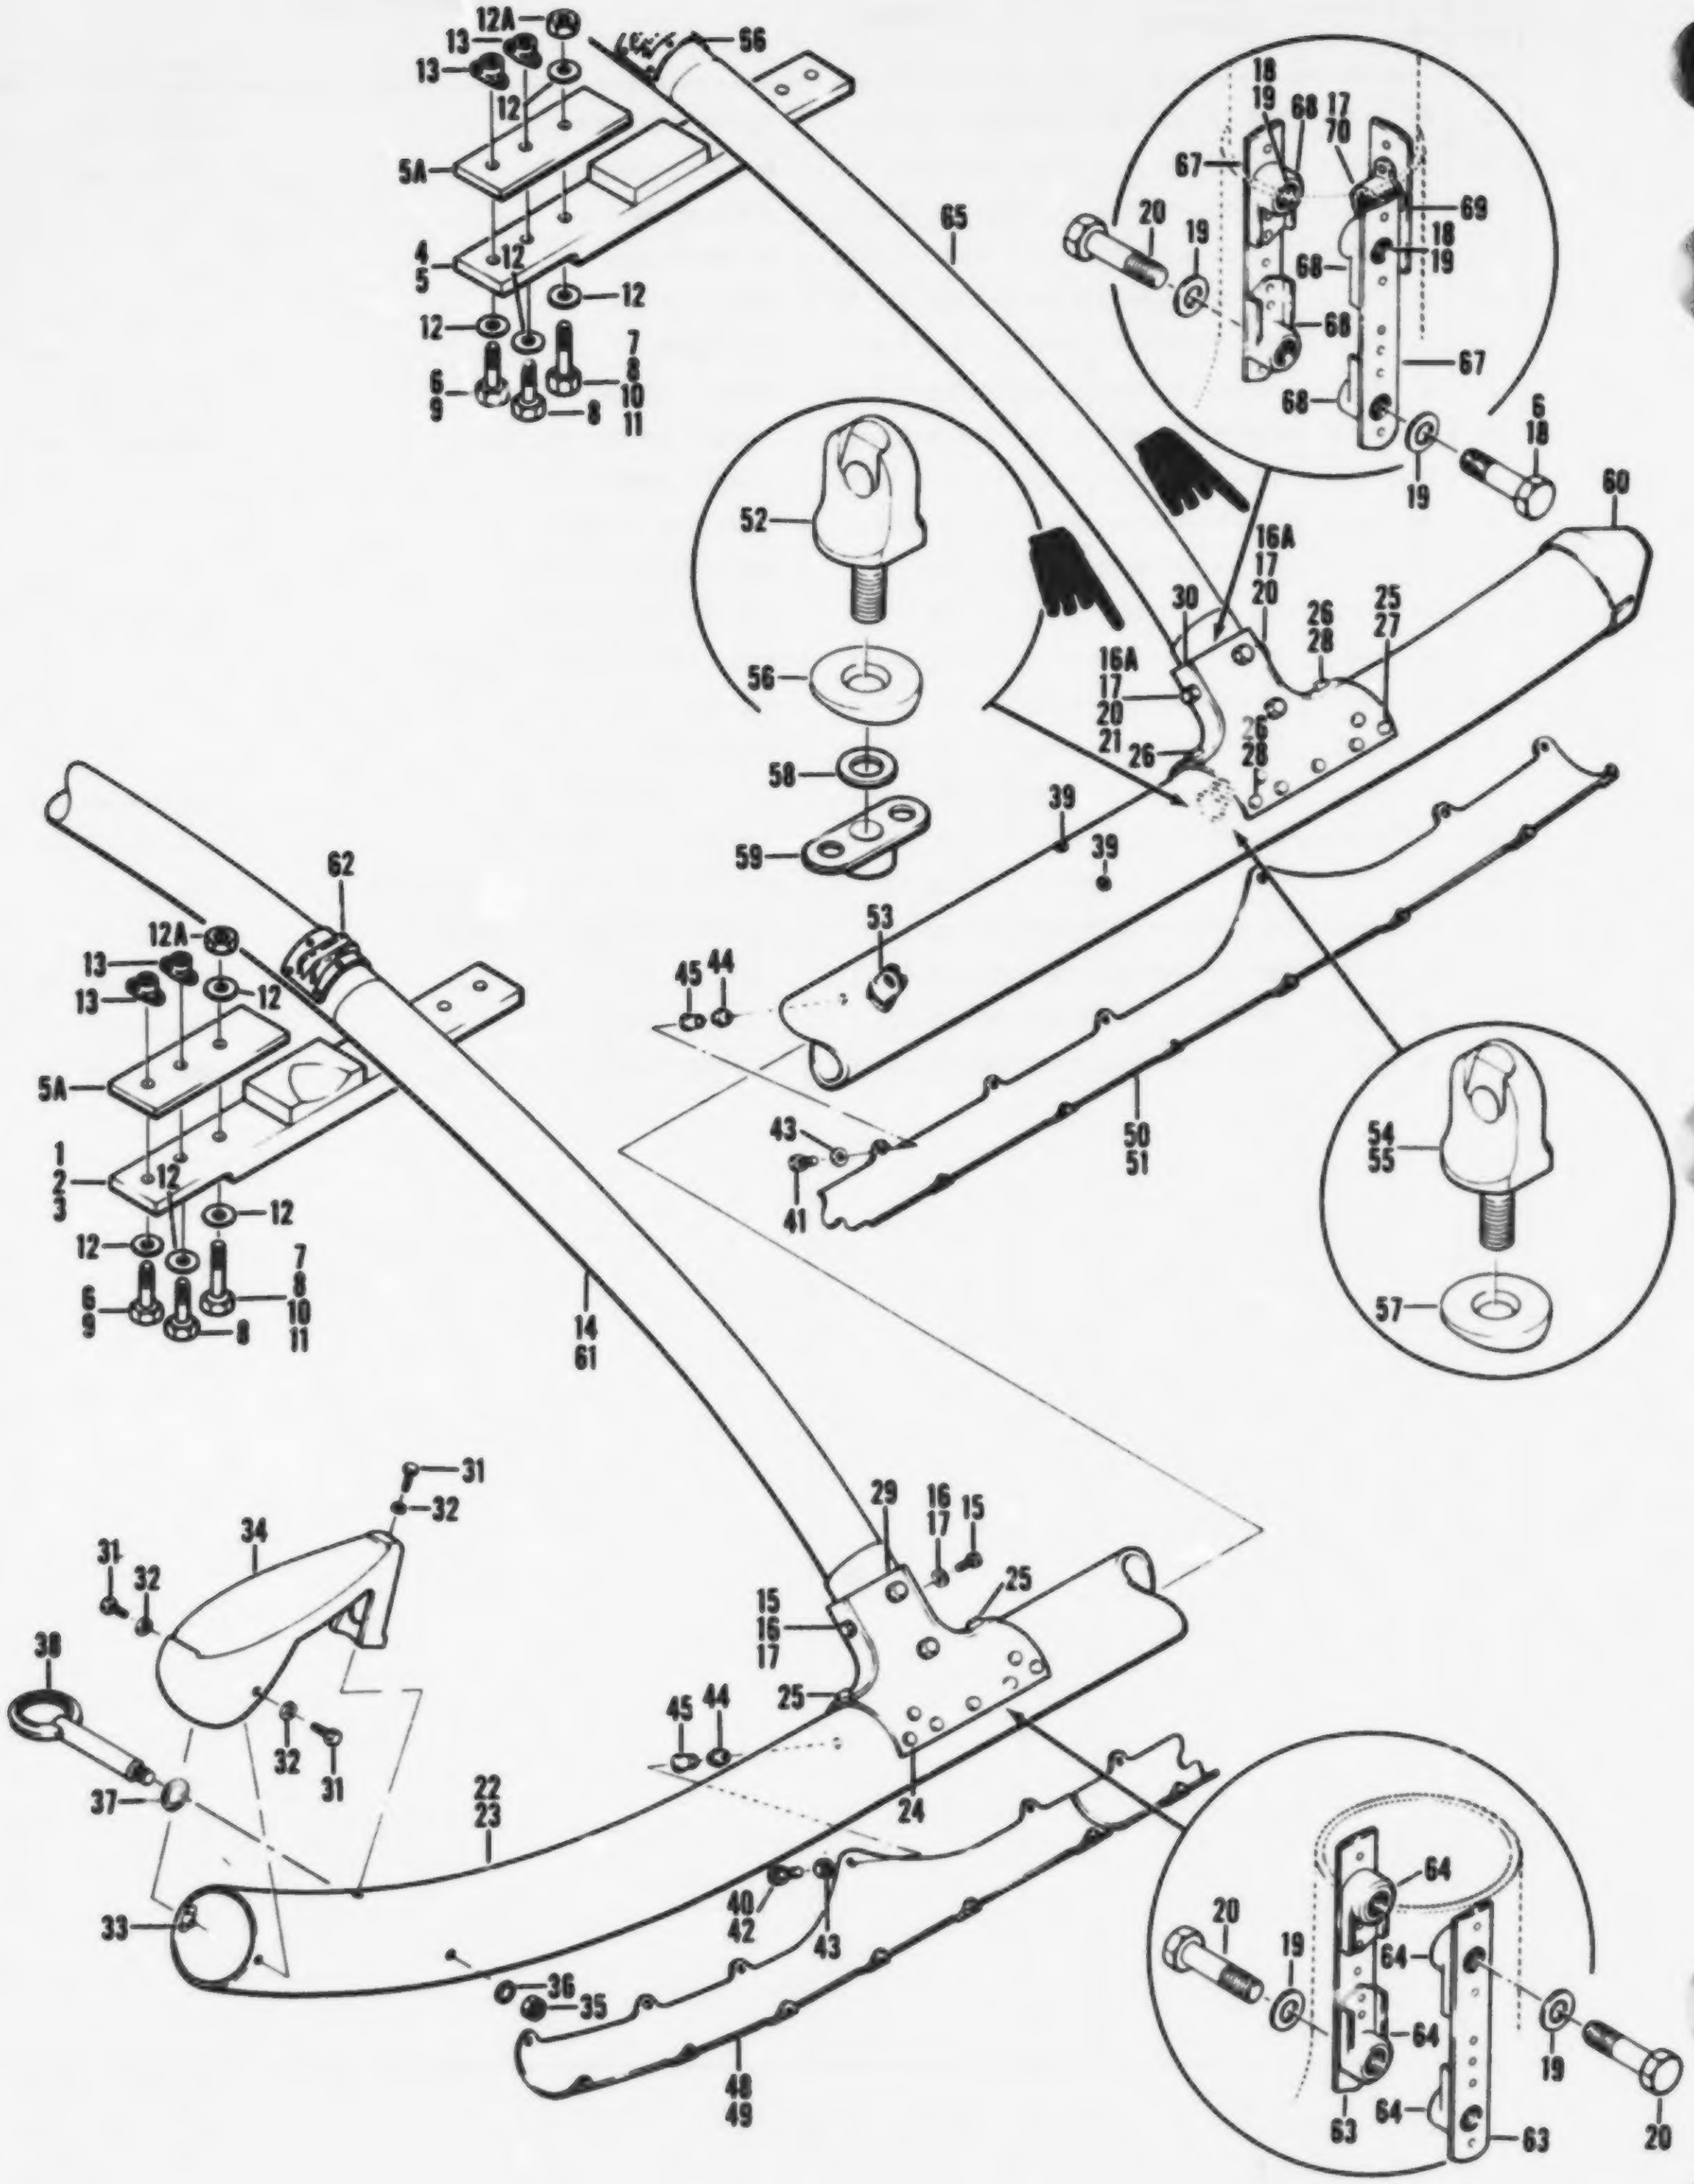
12A
13
13
12
5A
4
5
12
12
12
7
8
6
9
8
10
11
56
65
18
19
68
17
70
67
69
20
19
68
18
19
68
67
68
6
18
19
60
52
56
58
59
30
16A
17
20
16A
17
20
21
26
26
28
26
28
25
27
39
39
53
45
44
43
41
50
51
54
55
57
62
12A
13
13
12
5A
1
2
3
12
12
12
7
8
6
9
8
10
11
14
61
31
32
34
31
32
38
29
16
17
15
15
16
17
25
25
45
44
32
31
37
22
23
24
33
40
42
43
36
35
48
49
20
19
64
64
64
63
64
63
19
20

Figure 92. Landing Gear Assembly Skid

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 03 ALIGHTING GEAR			
92	1	PAOZZ	1560-00-872-6766	97499	204-030-291-15	SUPPORT,STRUCTURAL - LH,FWD	UHM	EA	1
92	2	PAOZZ	1560-00-834-6636	97499	205-030-291-9	SUPPORT,STRUCTURAL - LH,FWD	UHE,UHH,UHV,UHX	EA	1
92	3	PAOZZ	1560-00-872-6765	97499	204-030-291-16	SUPPORT,STRUCTURAL - RH,FWD	UHM	EA	1
92	3	PAOZZ	1560-00-834-6637	97499	205-030-291-10	SUPPORT,STRUCTURAL - RH,FWD	UHE,UHH,UHV,UHX	EA	1
92	4	PAOZZ	1560-00-872-6764	97499	204-031-292-9	SUPPORT,STRUCTURAL - LH,AFT	UHM	EA	1
92	4	PAOZZ	1560-00-834-6624	97499	205-030-292-11	SUPPORT,STRUCTURAL - LH,AFT	UHE,UHH,UHV,UHX	EA	1
92	5	PAOZZ	1560-00-872-6763	97499	204-031-292-10	SUPPORT,STRUCTURAL - RH,AFT	UHM	EA	1
92	5	PAOZZ	1560-00-834-6623	97499	205-030-292-12	SUPPORT,STRUCTURAL - RH,AFT	UHE,UHH,UHV,UHX	EA	1
92	5A	MFOZZ		81996	1560-UH1-981	.SHIM	UHE,UHH,UHM,UHV,UHX	EA	8
92	6	PAOZZ	5306-00-285-5326	88044	AN174H11A	.BOLT,CLOSE TOLERANC (REF FIG. 15)		EA	24
92	7	PAOZZ	5306-00-206-4911	88044	AN174H15A	.BOLT,CLOSE TOLERANC U/W PN 204-030-008-23 THRU -41, & 204-031-003-1 THRU -35	UHM	EA	4
92	8	PAOZZ	5306-00-151-1424	88044	AN4-10A	.BOLT,MACHINE U/W PN 204-032-003-1,-9,-11, & -17	UHM	EA	6
92	8	PAOZZ	5306-00-151-1423	88044	AN4-11A	.BOLT,MACHINE U/W PN 204-032-003-1,-9,-11, & -17	UHM	EA	10
92	8	PAOZZ	5306-00-151-1421	88044	AN4-13A	.BOLT,MACHINE U/W PN 204-032-003-1,-9,-11, & -17	UHM	EA	4
92	9	PAOZZ	5306-00-151-1418	88044	AN4-16A	.BOLT,MACHINE U/W PN 204-032-003-1,-9,-11, & -17	UHM	EA	4
92	10	PAOZZ	5306-00-151-1421	88044	AN4-13A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	8
92	11	PAOZZ	5306-00-151-1423	88044	AN4-11A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	16
92	12	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT	UHM	EA	32
92	12	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	32
92	12A	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX	UHE,UHH,UHM,UHV,UHX	EA	8
92	13	PAOZZ	5310-00-728-7717	96906	MS21069L4	.NUT,SELF-LOCKING,PL	UHE,UHH,UHM,UHV,UHX	EA	16
92	14	AOOOO		97499	204-050-152-87	LANDING GEAR ASSEMB SEE FIG 19 FOR NHA	UHM	EA	1
92	14	AOOOO		97499	205-050-152-57	LANDING GEAR ASSEMB SEE FIG. 7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
92	15	PAOZZ	5306-00-515-8064	88044	AN4-7A	.BOLT,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	4
92	16	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	4
92	16A	PAOZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	4
92	17	PAOZZ	5310-00-728-7717	96906	MS21069L4	.NUT,SELF-LOCKING,PL	UHM	EA	4
92	18	PAOZZ	5306-00-531-8979	88044	AN6-7A	.BOLT,MACHINE	UHM	EA	12
92	18	PAOZZ	5306-00-531-8979	88044	AN6-7A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	6
92	19	PAOZZ	5310-01-011-4055	88044	AN960KC616L	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	16
92	19	PAOZZ	5310-00-307-1568	81352	AN960KC616	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
92	20	PAOZZ	5306-00-208-3636	88044	AN6-10A	.BOLT,MACHINE	UHM	EA	4
92	20	PAOZZ	5306-00-208-3636	88044	AN6-10A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	14
92	21	PAOZZ	5306-00-151-1424	88044	AN4-10A	.BOLT,MACHINE	UHM	EA	4
92	22	PAOOO	1560-00-738-8356	97499	204-050-152-13	.TUBE ASSEMBLY-LH USBL EFF 60-3546 THRU 60-3619		EA	1
92	22	PAOOO	1620-00-763-1851	97499	204-050-152-91	.SKID TUBE ASSY-LH U/O PN 204-050-152-87	UHM	EA	1
92	22	PAOOO	1620-00-795-0678	97499	205-050-152-59	.SKID TUBE ASSY-LH	UHE,UHH,UHV,UHX	EA	1
92	23	PAOOO	1560-00-738-8357	97499	204-050-152-14	.TUBE ASSEMBLY-RH USBL EFF 60-3546 THRU 60-3619		EA	1
92	23	PAOOO	1630-00-759-4838	97499	204-050-152-92	.SKID TUBE ASSY-RH U/O PN 204-050-152-87	UHM	EA	1
92	23	PAOOO	1620-00-794-2624	97499	205-050-152-60	.SKID TUBE ASSY-RH	UHE,UHH,UHV,UHX	EA	1
92	24	PAOZZ	5320-00-484-1832	29666	OSR10B	..RIVET,BLIND	UHM	EA	1
92	25	PAOZZ	5320-00-916-2581	29666	OSR10C	..RIVET,BLIND	UHE,UHH,UHM,UHV,UHX	EA	1
92	26	PAOZZ	5320-00-975-4156	29666	OSR10G	..RIVET,BLIND	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
92	27	PAOZZ	5320-00-916-2580	29666	OSR10F	..RIVET,BLIND..	UHM	EA	1
92	28	PAOZZ	5320-00-443-6177	29666	OSR10D	..RIVET,BLIND....................	UHE,UHH,UHM,UHV,UHX	EA	1
92	29	PAOZZ	1630-00-070-7843	97499	204-050-152-85	..SADDLE,INBOARD SKID..............................	UHM	EA	1
92	29	PAOZZ	1630-00-572-9163	97499	205-050-152-53	..SADDLE ASSEMBLY, SKI .FWD....................	UHE,UHH,UHV,UHX	EA	1
92	30	PAOZZ	1630-00-070-7844	97499	204-050-152-93	.. SADDLE,INBOARD SKID	UHM	EA	1
92	30	PAOZZ	1620-00-012-4603	97499	205-050-152-55	..SADDLE ASSEMBLY, SKI-AFT....................	UHE,UHH,UHV,UHX	EA	1
92	31	PAOZZ	5306-00-192-2058	88044	AN3H5A	..BOLT,MACHINE....................	UHE,UHH,UHM,UHV,UHX	EA	3
92	32	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT.....................	UHE,UHH,UHM,UHV,UHX	EA	3
92	33	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL............	UHE,UHH,UHM,UHV,UHX	EA	3
92	34	PAOZZ	1560-00-674-4216	97499	204-050-149-1	..STEP,SKID LANDING G............	UHE,UHH,UHM,UHV,UHX	EA	1
92	35	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX..........................	UHE,UHH,UHV,UHX	EA	1
92	36	PAOZZ	5310-00-187-2395	88044	AN960PD616L	..WASHER, FLAT..................................	UHE,UHH,UHV,UHX	EA	1
92	37	PAOZZ	5310-00-183-4362	88044	AN960PD1016L	..WASHER,FLAT...................................	UHE,UHH,UHV,UHX	EA	1
92	38	PAOZO	1560-00-674-4211	97499	204-050-104-1	..FITTING ASSEMBLY,TO..........................	UHE,UHH,UHV,UHX	EA	1
92	39	PAOZZ	5340-00-592-0792	70485	709	..BUMPER,RUBBER.................	UHE,UHH,UHM,UHV,UHX	EA	2
92	40	PAOZZ	5306-00-722-0393	88044	AN3-4A	..BOLT,MACHINE....................................	UHM	EA	36
92	41	PAOZZ	5306-00-274-2119	88044	AN3-5A	..BOLT,MACHINE.....................................	UHM	EA	7
92	42	PAOZZ	5306-00-722-0393	88044	AN3-4A	..BOLT,MACHINE....................................	UHE,UHH,UHV,UHX	EA	40
92	43	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT....................	UHE,UHH,UHM,UHV,UHX	EA	40
92	44	PAOZZ	5310-00-703-8309	73197	88341-1032	..NUT,EXPANDER....................	UHE,UHH,UHM,UHV,UHX	EA	40
92	45	PAOZZ	3120-00-708-3004	73197	BN330-1032-2	..BUSHING,SLEEVE..................................	UHM	EA	40
92	48	PAOZZ	1630-00-689-9996	97499	204-050-241-3	..SHOE,LANDING SKID -LH,FWD U/O UHB TRAINER......	UHM	EA	1
92	48	PAOZZ	1620-00-969-9210	97499	205-050-174-35	..SHOE ASSEMBLY -LH FWD..........................	UHE,UHH,UHV,UHX	EA	1
92	49	PAOZZ	1630-00-689-9997	97499	204-050-241-4	..SHOE,LANDING SKID -RH,FWD U/O UHB TRAINER.....	UHM	EA	1
92	49	PAOZZ	1620-00-967-1803	97499	205-050-174-36	..SHOE,ASSY,SKID -RH,FWD.........................	UHE,UHH,UHV,UHX	EA	1
92	50	PAOZZ	1630-00-689-9995	97499	204-050-241-5	..SHOE,LANDING SKID -LH,AFT U/O UHB TRAINER......	UHM	EA	1
92	50	PAOZZ	1620-00-967-1806	97499	205-050-174-33	..SHOE,ASSY,SKID -LH,AFT.........................	UHE,UHH,UHV,UHX	EA	1
92	51	PAOZZ	1630-00-689-9994	97499	204-050-241-6	..SHOE,LANDING SKID -RH,AFT U/O UHB TRAINER.....	UHM	EA	1
92	51	PAOZZ	1620-00-967-1804	97499	205-050-174-34	..SHOE ASSEMBLY...............................	UHE,UHH,UHV,UHX	EA	1
92	52	PAOZZ	5306-00-677-9843	97499	204-050-142-1	..BOLT,EYE......................................	UHM	EA	1
92	52	PAOZZ	5306-00-883-4462	97499	204-050-143-3	..BOLT,EYE....................................	UHE,UHH,UHV,UHX	EA	1
92	53	PAOZZ	5310-00-678-5451	97499	204-050-139-1	..WASHER,SADDLE..................................	UHM	EA	1
92	53	PAOZZ	5310-00-888-9553	97499	204-050-205-5	..WASHER,CONCAVE.............................	UHE,UHH,UHV,UHX	EA	1
92	54	PAOZZ	5306-00-677-9844	97499	204-050-143-1	..BOLT,EYE..		EA	1
92	55	PAOZZ	5306-00-883-4462	97499	204-050-143-3	..BOLT,EYE......................	UHE,UHH,UHM,UHV,UHX	EA	1
92	56	PAOZZ	5310-00-678-5451	97499	204-050-139-1	..WASHER,SADDLE.....................................		EA	1
92	57	PAOZZ	5310-00-888-9553	97499	204-050-205-5	..WASHER,CONCAVE................	UHE,UHH,UHM,UHV,UHX	EA	1
92	58	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT..		EA	1
92	58	PAOZZ	5310-00-167-0751	88044	AN960PD816	..WASHER,FLAT....................................	UHM	EA	1
92	59	XDOZZ		80205	NAS1031A8	..NUT,SELF-LOCKING,PL.............	UHE,UHH,UHM,UHV,UHX	EA	2
92	60	PAOZZ	1630-00-070-7850	97499	204-050-227-1	..CAP,SKID TUBE..................	UHE,UHH,UHM,UHV,UHX	EA	1
92	61	PACOO	1560-00-737-6601	97499	204-050-152-35	..CROSSTUBE ASSEMBLY...........................	UHM	EA	1
92	61	PACOO	1620-00-076-9036	97499	205-050-152-49	..CROSSTUBE ASSY............................	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
92	62	PAOZZ	1560-00-848-5046	97499	204-050-011-13	..SUPPORT,LANDING GEAR-FWD...................... UHM	EA	2
92	62	PAOZZ	1560-00-848-5043	97499	204-050-011-9	..SUPPORT,LANDING GEAR-FWD.................UHE,UHM,UHV,UHX	EA	2
92	63	PAOZZ	1560-00-898-0002	97499	90-018-1	..NUT ASSEMBLY,SKID G........... UHE,UHM,UHM,UHV,UHX	EA	4
92	64	PAOZZ	5310-00-773-8649	96906	MS21051L6	...NUT,SELF-LOCKING,PL........... UHE,UHM,UHM,UHV,UHX	EA	2
92	65	PAOOO	1620-00-886-1283	97499	204-050-152-55	.CROSS TUBE ASSY,LAN............................ .UHM	EA	1
92	65	PAOOO	1620-00-967-7624	97499	205-050-152-41	.CROSSTUBE,SKID LAND.......................UHE,UHM,UHV,UHX	EA	1
92	66	PAOZZ	1560-00-848-5047	97499	204-050-011-19	..SUPPORT,LANDING GEAR-AFT...................... ,UHM	EA	2
92	66	PAOZZ	1560-00-848-5045	97499	204-050-011-17	..SUPPORT,LANDING GEAR-AFT................UHE,UHM,UHV,UHX	EA	2
92	67	PAOZZ	1560-00-898-0002	97499	90-018-1	..NUT ASSEMBLY,SKID G........... UHE,UHM,UHM,UHV,UHX	EA	4
92	68	PAOZZ	5310-00-773-8649	96906	MS21051L6	...NUT,SELF-LOCKING,PL........... UHE,UHM,UHM,UHV,UHX	EA	2
92	69	PAOZZ	5310-00-888-9552	97499	90-019-1	..NUT U/O PN 204-050-152-55...... UHE,UHM,UHM,UHV,UHX	EA	4
92	70	PAOZZ	5310-00-728-7719	96906	MS21069L6	...NUT,SELF-LOCKING,PL......................UHE,UHM,UHV,UHX	EA	1

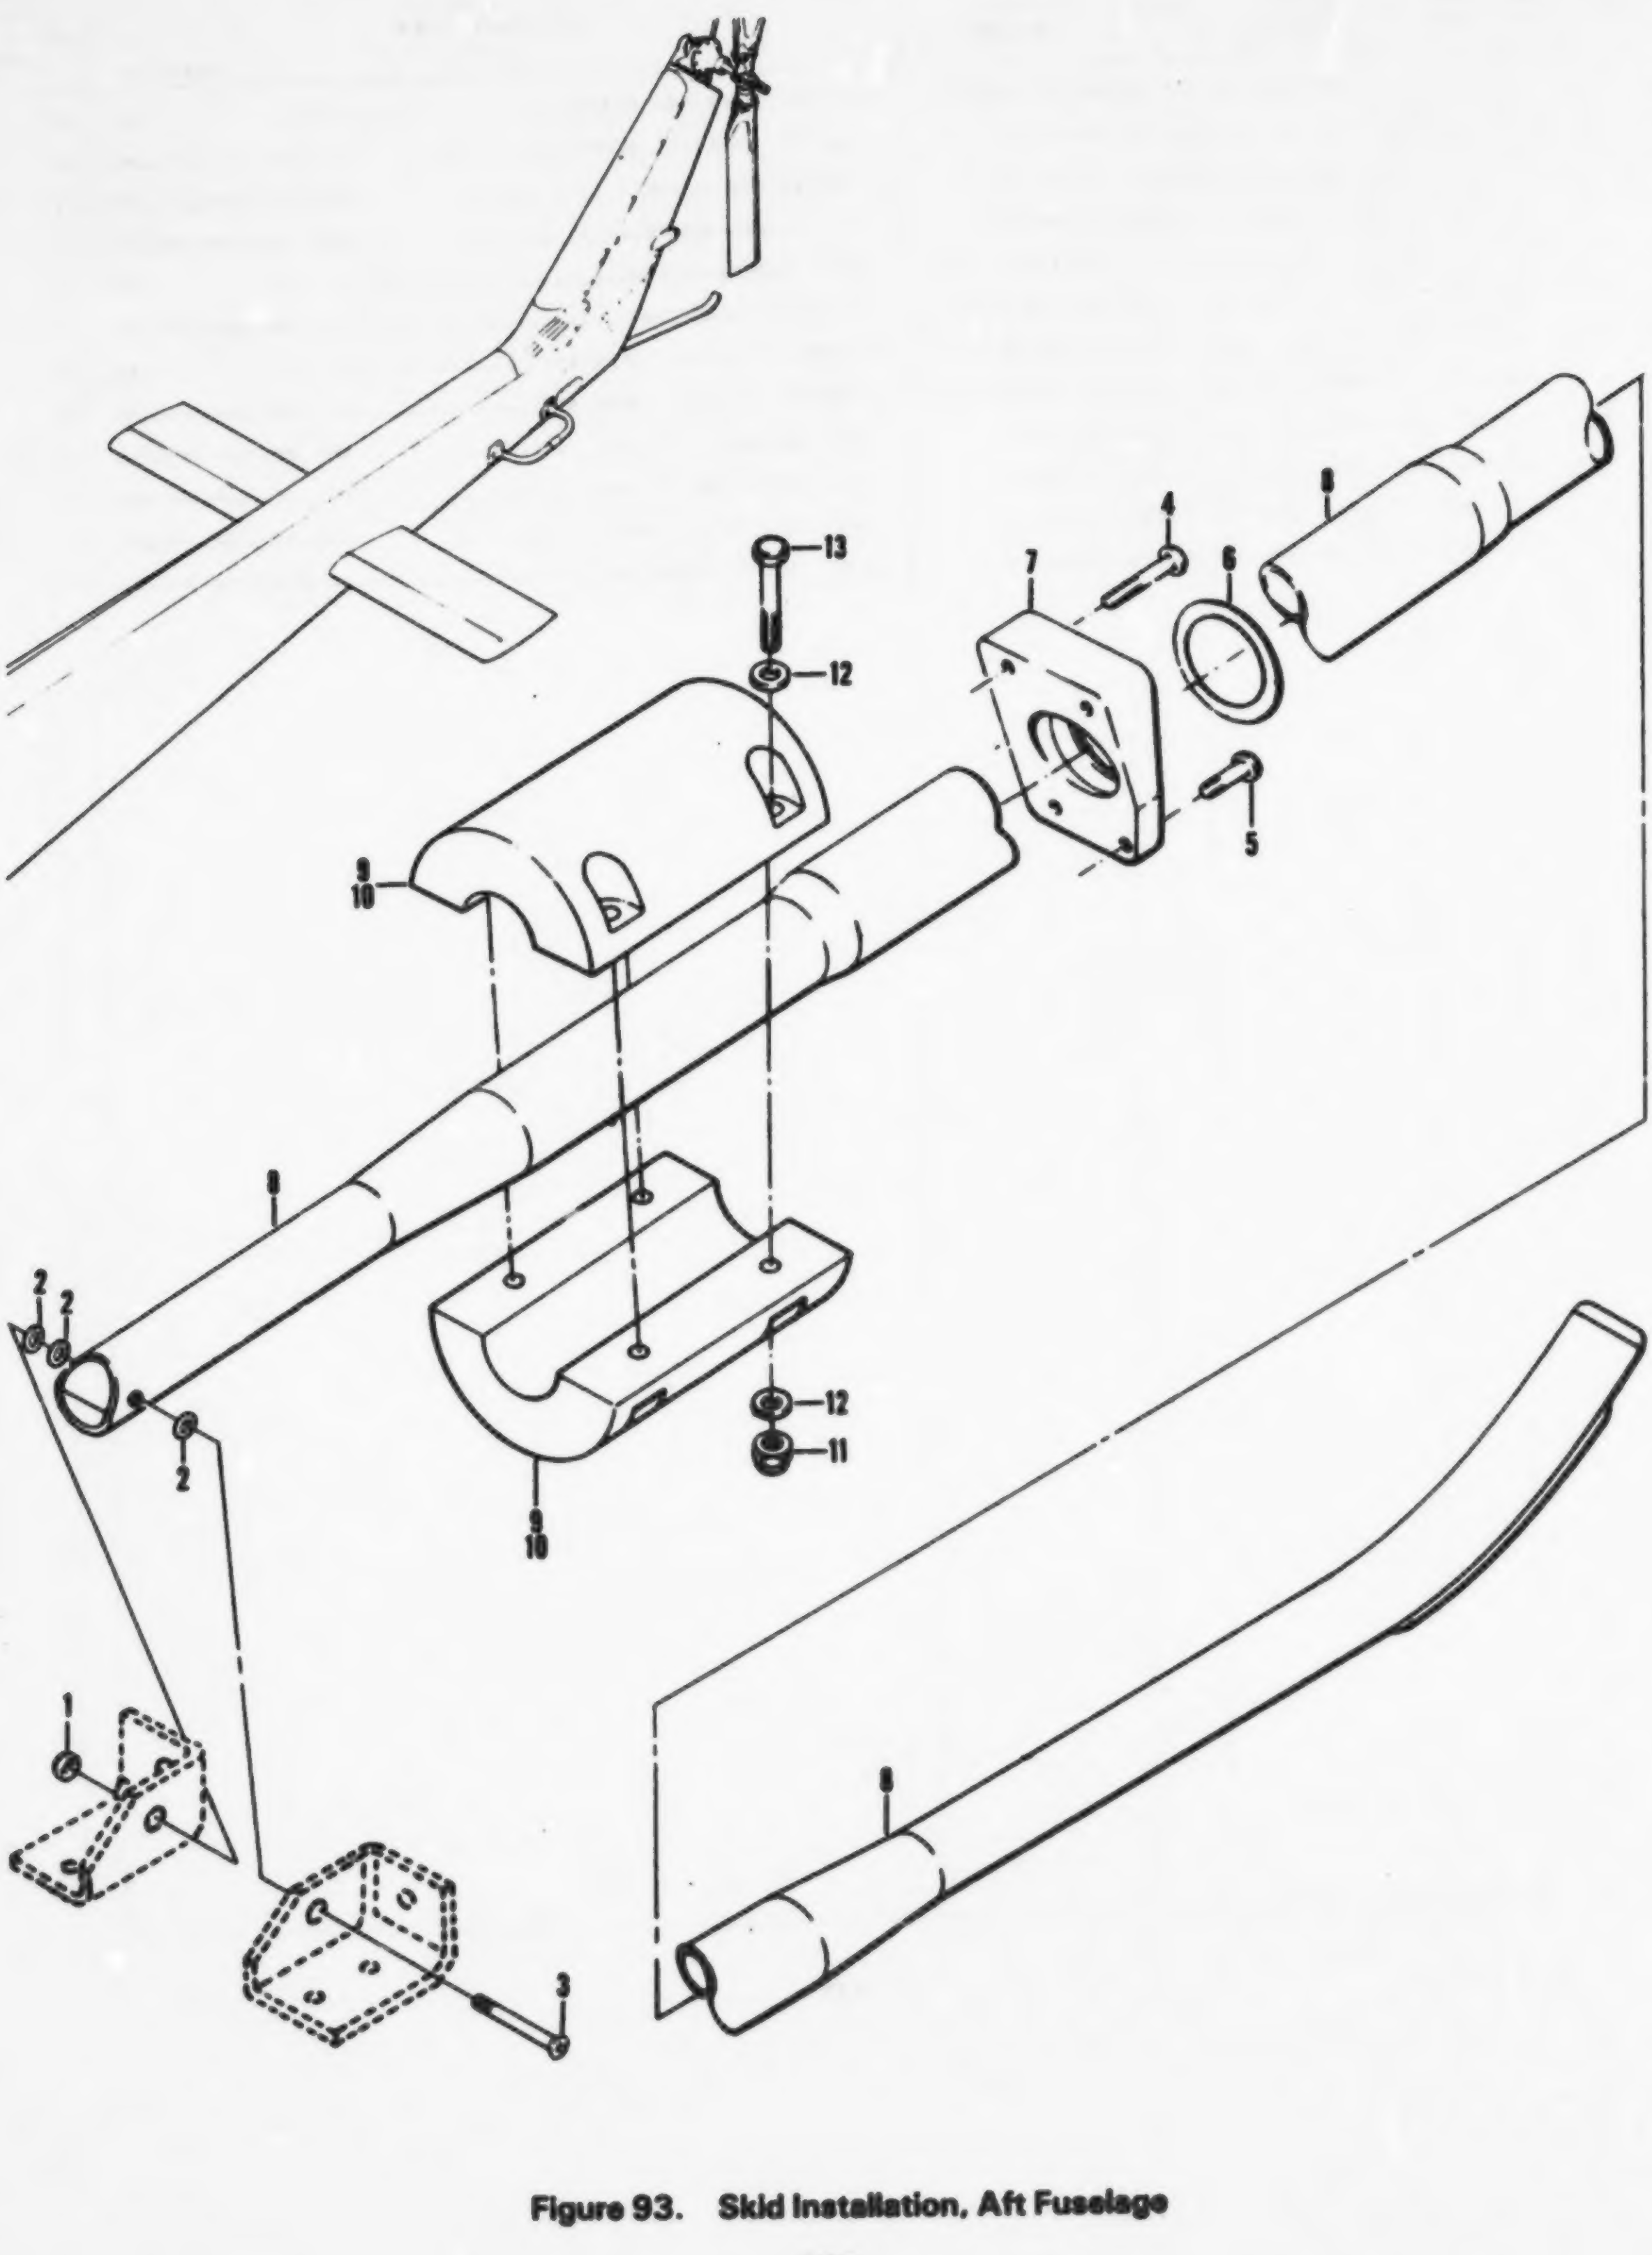
13
12
4
7
6
8
9
10
5
8
2
2
2
12
11
9
10
1
3
8

Figure 93. Skid Installation, Aft Fuselage

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 03 ALIGHTING GEAR		
93		XCOZZ		97499	204-030-947-1	SKID INSTL-TAIL SEE FIG.9,& 15 FOR NHA ....UHB,UHE,UHH,UHV,UHX	EA	1
93		XCOZZ		97499	204-030-947-13	SKID INSTL-TAIL U/W PN 204-080-800-447,-451,-471 & -473 SEE FIG.12 FOR NHA....................................UHB,UHC,UHM	EA	1
93	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
93	2	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
93	3	XDOZZ	5305-00-182-1365	88044	AN525-10R26	.SCREW,MACHINE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
93	4	PAOZZ	5305-00-945-0539	96906	MS27039-1-22	.SCREW,MACHINE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
93	5	PAOZZ	5305-00-925-7863	96906	MS27039-1-16	.SCREW,MACHINE...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
93	6	PCOZZ	5330-00-585-1067	96906	MS29561-325	.PACKING PREFORME................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
93	7	PAOZZ	1560-00-765-6253	97499	204-030-946-1	.BLOCK SUPPORT,SKID U/O PN 204-030-947-1 ....UHB,UHE,UHH,UHV,UHX	EA	1
93	7	PAOZZ	1560-00-871-8667	97499	204-031 099-1	.BLOCK,SUPPORT,BOOM U/O PN 204-030-947-13........UHB,UHC,UHM	EA	1
93	8	PAOOO	1560-00-649-8266	97499	204-030-947-3	.TUBE ASSY,SKID TAIL..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
93	9	PAOZZ	1680-00-879-1441	81996	1560UH1-347-3	..WEIGHT,BALLAST ,35 LB USE TO COMPENSATE FOR HEAVY FRONT ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
93	10	PAOZZ	1680-00-879-1442	81996	1560UH1-347-5	..WEIGHT,BALLAST ,50 LB USE TO COMPENSATE FOR HEAVY FRONT ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
93	11	PAOZZ	5310-00-877-5795	96906	MS21044N8	..NUT,SELF-LOCKING,HE.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
93	12	PAOZZ	5310-00-167-0823	88044	AN960-816	..WASHER,FLAT.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
93	13	PAOZZ	5306-00-582-6906	88044	AN8H27	..BOLT,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4

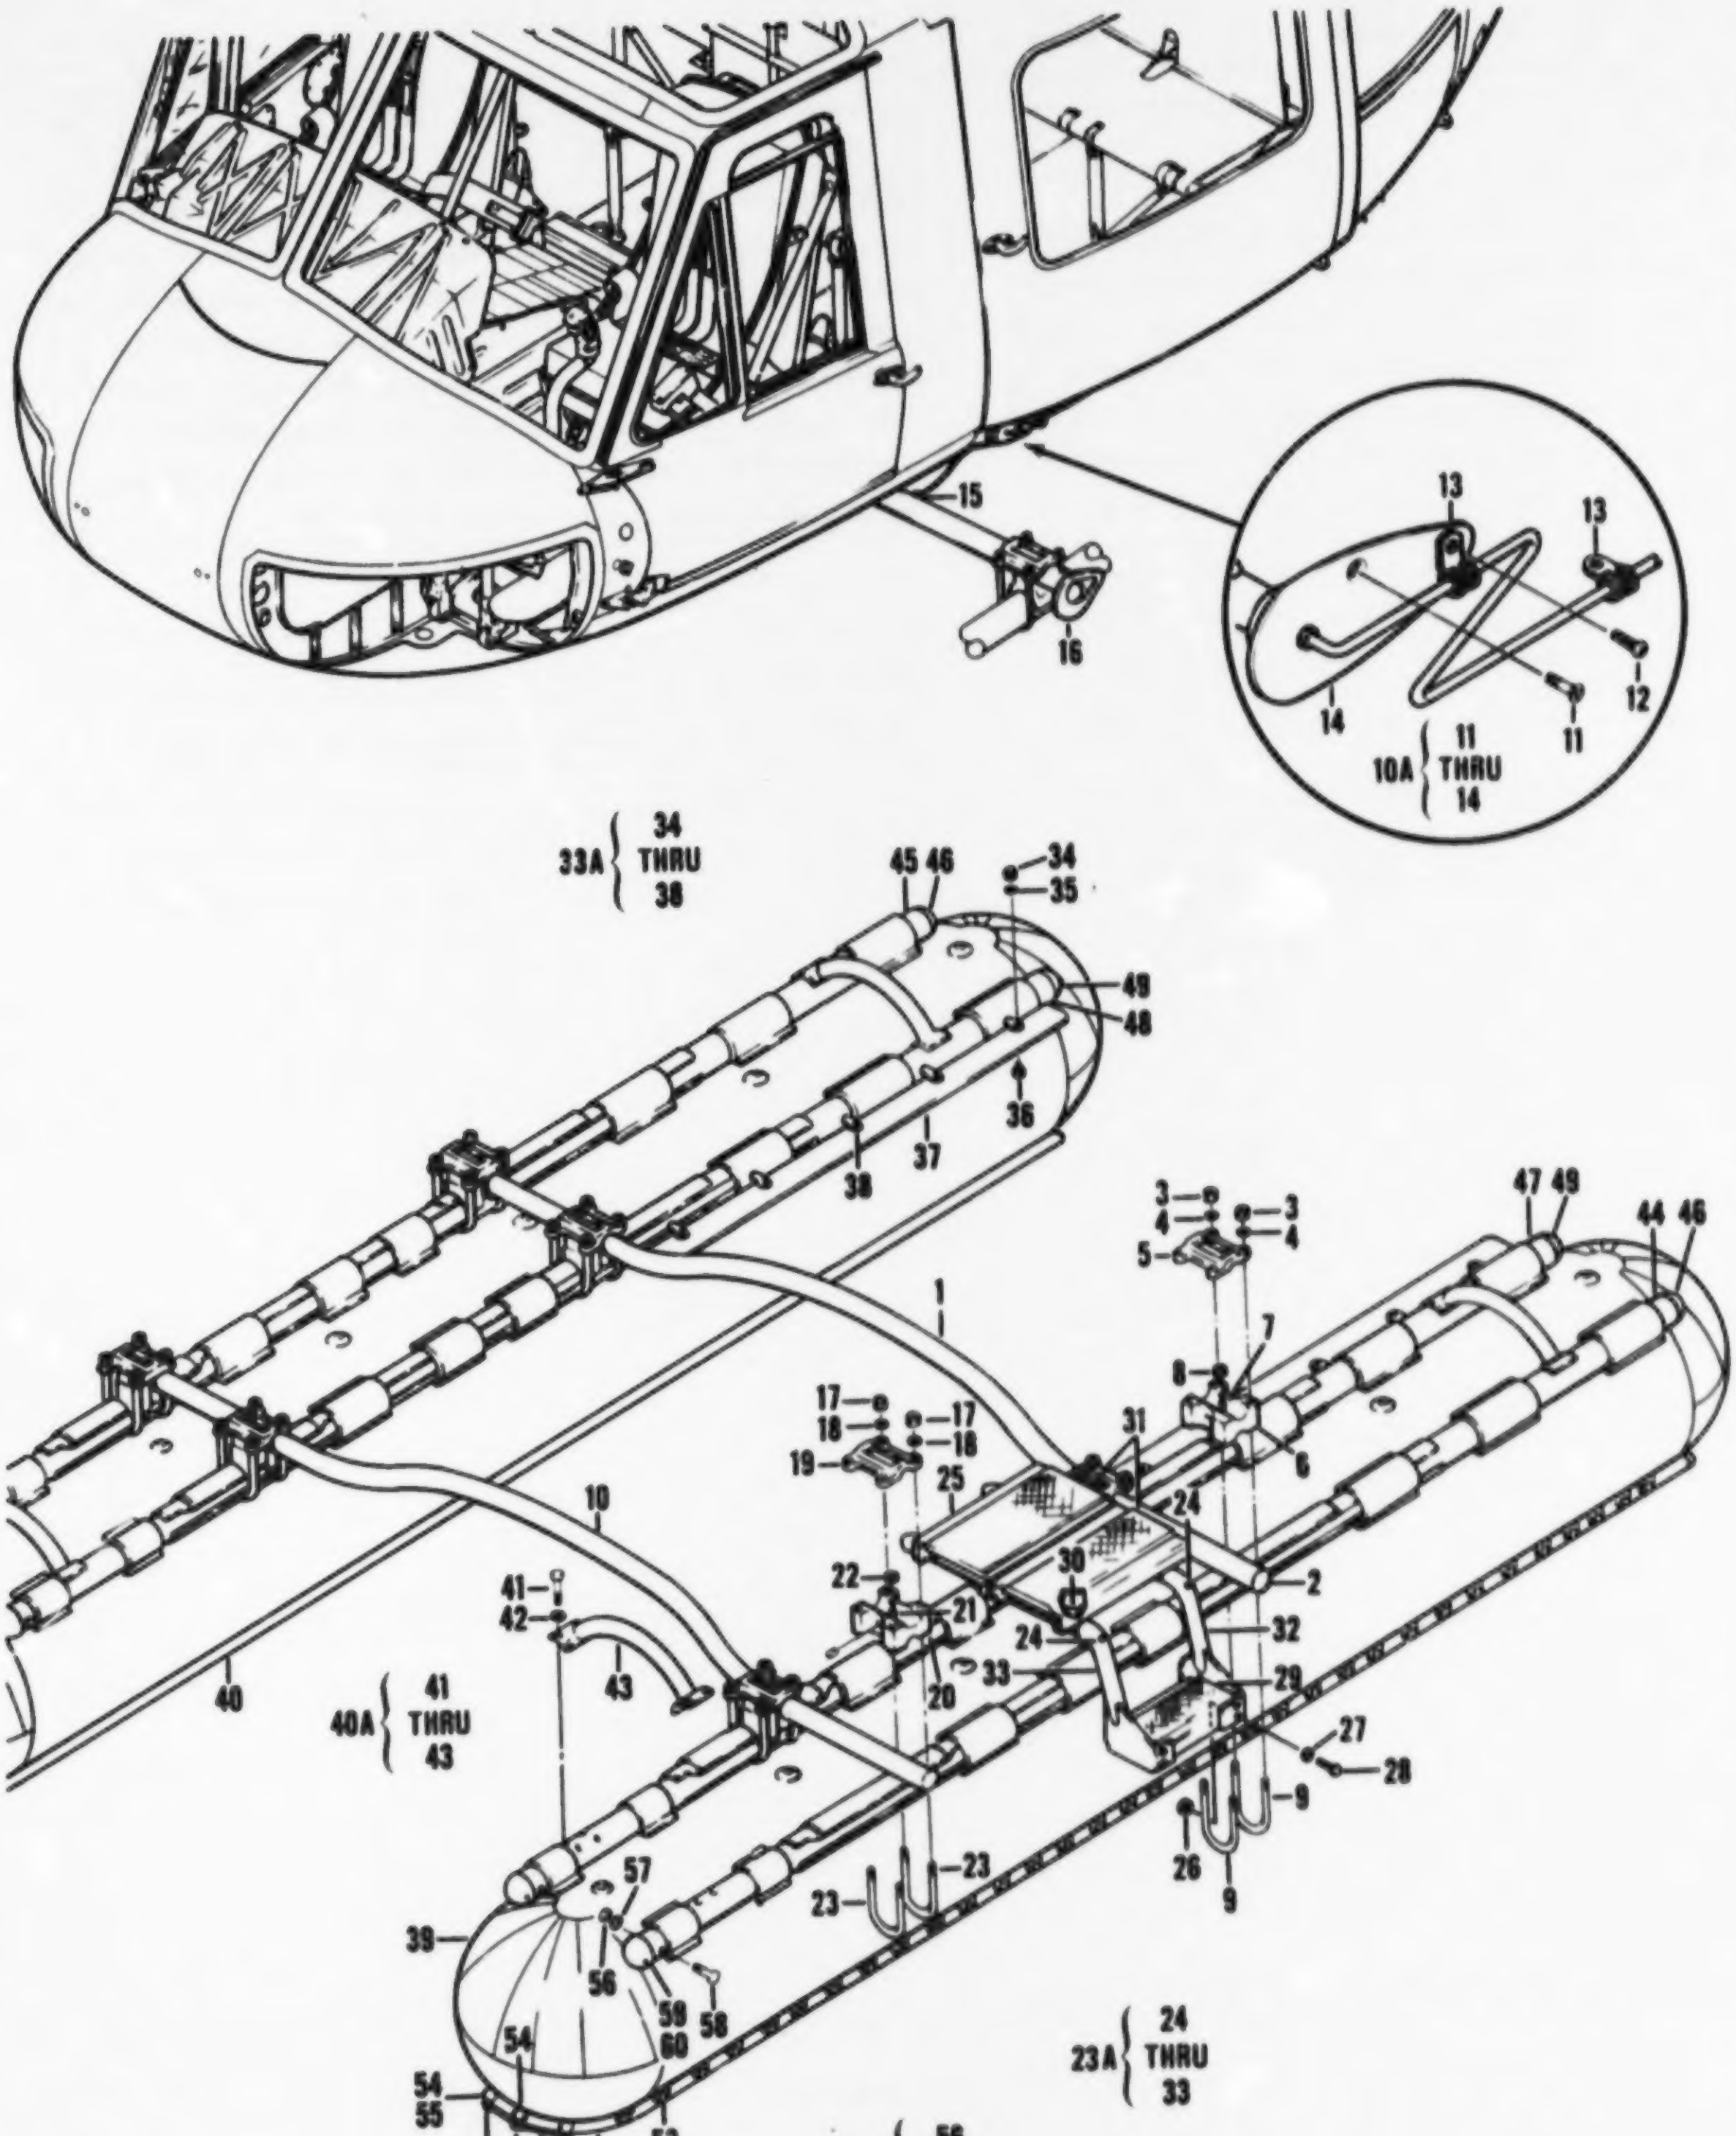
15
16
13
13
14
12
11
11
10A { 11 THRU 14
33A { 34 THRU 38
45 46
34
35
49
48
36
37
38
3
4
3
4
5
47 49
44 46
1
7
8
6
31
17
18
17
18
19
25
24
10
30
2
22
21
41
42
24
32
33
29
20
43
40
40A { 41 THRU 43
27
28
9
26
9
23
23
57
39
56
59
60
58
54
54
55
53
51
50
52
51
54
55
23A { 24 THRU 33
55A { 56 THRU 60

Figure 94. Float Gear Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 03 ALIGHTING GEAR		
94		PBOZZ	1630-00-054-8673	97499	204-706-053-57	INSTALLATION KIT FLOAT GEAR.....................UHB,UHC,UHM	EA	1
94	1	XBOOZ	1630-00-014-4565	97499	204-706-053-5	.CROSS TUBE ASSEMBLY -AFT.....................UHB,UHC,UHM	EA	1
94	2	PBOZZ	5340-00-105-9454	71468	025-0504-000	..CAP,PROTECTIVE,DUST.....................UHB,UHC,UHM	EA	1
94	3	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX HEXAGON.....................UHB,UHC,UHM	EA	16
94	4	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT.....................UHB,UHC,UHM	EA	16
94	5	XBOZZ	1630-00-H00-0873	97499	204-050-238-3	.SADDLE,FLOAT GEAR.....................UHB,UHC,UHM	EA	4
94	6	XBOZZ	1630-00-H00-0875	97499	204-050-237-3	.SUPPORT ASSEMBLY.....................UHB,UHC,UHM	EA	4
94	6	XAOZZ		97499	204-050-237-7	..SUPPORT.....................UHB,UHC,UHM	EA	1
94	7	XAOZZ		97499	204-050-237-9	..PIN,STRAIGHT HEADLESS.....................UHB,UHC,UHM	EA	1
94	8	PCOZZ	5330-00-582-2133	96906	MS28775-011	.PACKING,PREFORMED.....................UHB,UHC,UHM	EA	4
94	9	XBOZZ	5306-00-102-3980	97499	204-050-239-1	.BOLT,U.....................UHB,UHC,UHM	EA	8
94	10	XBOOZ	1630-00-014-4571	97499	204-706-053-3	.CROSS TUBE ASSEMBLY -FWD.....................UHB,UHC,UHM	EA	1
94	10A	XCOZZ		97499	204-075-558-1	..LIGHT INSTL.....................UHB,UHC,UHM	EA	1
94	11	PAOZZ	5305-00-957-7817	96906	MS24693S26	...SCREW,MACHINE.....................UHB,UHC,UHM	EA	1
94	12	PAOZZ	5305-00-984-4989	96906	MS35206-229	...SCREW,MACHINE.....................UHB,UHC,UHM	EA	1
94	13	PAOZZ	5340-00-990-9297	81996	EAB700D2	...CLAMP,LOOP -FWD.....................UHB,UHC,UHM	EA	2
94	14	XDOZZ		72914	31-0441-7	...ADAPTER,POSITION.....................UHB,UHC,UHM	EA	1
94	15	PAOZZ	5325-00-270-8886	96906	MS35489-62	..GROMMET,NONMETALLIC.....................UHB,UHC,UHM	EA	2
94		XCOZZ		97499	204-706-059-9	.BRACKET INSTL.....................UHB,UHC,UHM	EA	1
94	16	XBOZZ	3120-00-891-6472	97499	204-706-059-11	...BUSHING,SLEEVE.....................UHB,UHC,UHM	EA	1
94	17	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING HEXAGON.....................UHB,UHC,UHM	EA	16
94	18	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT.....................UHB,UHC,UHM	EA	16
94	19	XBOZZ	1630-00-438-6741	97499	204-050-238-1	.SADDLE,FLOAT KIT.....................UHB,UHC,UHM	EA	4
94	20	XBOZZ	1630-00-H00-0874	97499	204-050-237-1	.SUPPORT ASSEMBLY.....................UHB,UHC,UHM	EA	4
94	20	XAOZZ		97499	204-050-237-5	..SUPPORT.....................UHB,UHC,UHM	EA	1
94	21	XAOZZ		97499	204-050-237-9	..PIN,STRAIGHT HEADLESS.....................UHB,UHC,UHM	EA	1
94	22	PCOZZ	5330-00-582-2133	96906	MS28775-011	.PACKING,PREFORMED.....................UHB,UHC,UHM	EA	4
94	23	XBOZZ	5306-00-113-5800	97499	204-050-239-3	.BOLT,U.....................UHB,UHC,UHM	EA	8
94	23A	XCOZZ		97499	204-050-012-1	.STEP INSTL.....................UHB,UHC,UHM	EA	1
94	24	PBOZZ	5306-00-151-1414	88044	AN4-22A	..BOLT,MACHINE.....................UHB,UHC,UHM	EA	8
94	25	XBOOZ	1680-00-239-3794	97499	204-050-012-15	..STEP ASSY,FLOAT KIT.....................UHB,UHC,UHM	EA	2
94	26	PAOZZ	5310-00-807-1474	96906	MS21042L3	...NUT,SELF-LOCKING,EX HEXAGON.....................UHB,UHC,UHM	EA	6
94	27	PAOZZ	5310-00-167-0834	88044	AN960-10L	...WASHER,FLAT.....................UHB,UHC,UHM	EA	6
94	28	PAOZZ	5305-00-925-7857	96906	MS27039-1-09	...SCREW,MACHINE.....................UHB,UHC,UHM	EA	3
94	28	PAOZZ	5305-00-702-0609	96906	MS24694S50	...SCREW,MACHINE.....................UHB,UHC,UHM	EA	3
94	29	XBOZZ	9540-00-239-3799	97499	204-050-012-7	...ALUMINUM CHANNEL.....................UHB,UHC,UHM	EA	1
94	30	PAOZZ	5305-00-925-9682	96906	MS27039-1-11	...SCREW,MACHINE.....................UHB,UHC,UHM	EA	8
94	31	XBOZZ	9540-00-239-3793	97499	204-050-012-13	...ALUMINUM CHANNEL.....................UHB,UHC,UHM	EA	2
94	32	XDOZZ	1630-00-438-2080	97499	204-050-012-21	...SUPPORT ASSY,FLOAT.....................UHB,UHC,UHM	EA	1
94	33	XDOZZ	1630-00-438-2081	97499	204-050-012-22	...SUPPORT ASSY,FLOAT.....................UHB,UHC,UHM	EA	1
94	33A	XCOZZ		97499	204-020-103-1	.SPOILER INSTL LH.....................UHB,UHC,UHM	EA	1
94	33A	XCOZZ		97499	204-020-103-2	.SPOILER INSTL RH.....................UHB,UHC,UHM	EA	1
94	34	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX ,HEXAGON.....................UHB,UHC,UHM	EA	6

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
94	35	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT......UHB,UHC,UHM	EA	6
94	36	PAOZZ	5305-00-206-1201	88044	AN525-10R14	..SCREW, MACHINE......UHB,UHC,UHM	EA	6
94	37	XBOZZ	1630-00-H00-0927	97499	204-020-104-1	..PANEL ASSEMBLY......UHB,UHC,UHM	EA	1
94	38	XBOZZ	5340-00-479-3113	97499	204-020-105-1	..CLEVIS,ROD END......UHB,UHC,UHM	EA	6
94	39	AOOOZ	1630-00-014-4560	97499	204-706-053-59	.BAG ASSEMBLY,FLOAT......UHB,UHC,UHM	EA	1
94	40	AOOOZ	1630-00-014-4559	97499	204-706-053-60	.BAG ASSEMBLY,FLOAT......UHB,UHC,UHM	EA	1
94	40	PBOOO	1630-00-176-1109	97499	204-050-240-3	..BAG,FLOAT......UHB,UHC,UHM	EA	1
94	40A	XCOZZ		97499	204-050-013-1	..SPREADER BAR INSTL......UHB,UHC,UHM	EA	1
94	41	PAOZZ	5306-00-182-2017	88044	AN4H6A	...BOLT,MACHINE......UHB,UHC,UHM	EA	8
94	42	PAOZZ	5310-00-167-0835	88044	AN960-416L	...WASHER,FLAT......UHB,UHC,UHM	EA	8
94	43	XBOZZ	1630-00-014-8316	97499	204-050-013-3	...BAR ASSY SPREADER......UHB,UHC,UHM	EA	2
94	44	XOOOZ	1630-00-247-0754	97499	204-706-053-65	..TUBE ASSEMBLY, LH,OUTBOARD......UHB,UHC,UHM	EA	1
94	45	PBOOO	1630-00-247-0255	97499	204-706-053-66	..TUBE ASSEMBLY, SUPPORT-RH OUTBOARD......UHB,UHC,UHM	EA	1
94	46	PAOZZ	1630-00-070-7850	97499	204-050-227-1	...CAP,SKID TUBE......UHB,UHC,UHM	EA	1
94	47	XBOOZ	1630-00-014-4558	97499	204-706-053-61	..TUBE ASSEMBLY, SUPPORT INBOARD,LH INBOARD......UHB,UHC,UHM	EA	1
94	48	XBOOZ	1630-00-014-4551	97499	204-706-053-62	..TUBE ASSEMBLY,SUPPO SUPPORT INBOARD,RH ......UHB,UHC,UHM	EA	1
94	49	PAOZZ	1630-00-070-7850	97499	204-050-227-1	...CAP,SKID TUBE......UHB,UHC,UHM	EA	2
94	50	PAOZZ	5305-00-167-3635	88044	AN525-416-12	..SCREW, MACHINE......UHB,UHC,UHM	EA	1
94	51	PAOZZ	5305-00-292-3181	88044	AN525-416R11	..SCREW,MACHINE......UHB,UHC,UHM	EA	2
94	52	XBOZZ	1630-00-H00-0979	97499	204-706-053-41	..STRAP,METAL......UHB,UHC,UHM	EA	2
94	53	PAOZZ	5305-00-558-8934	88044	AN525D10R8	..SCREW,MACHINE......UHB,UHC,UHM	EA	210
94	54	XBOOZ	1630-00-014-4529	97499	204-706-053-9	..SKID TUBE ASSEMBLY......UHB,UHC,UHM	EA	3
94	55	XBOZZ	1630-00-H00-0925	97499	204-050-253-1	...CAP,SKID TUBE......UHB,UHC,UHM	EA	2
94	55A	XCOZZ		97499	204-050-007-1	.BALLAST INSTL......UHB,UHC,UHM	EA	1
94	55A	XCOZZ		97499	204-050-007-2	.BALLAST INSTL......UHB,UHC,UHM	EA	1
94	55A	XCOZZ		97499	204-050-007-3	.BALLAST INSTL......UHB,UHC,UHM	EA	1
94	56	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,EXTENDED WASHER ,HEXAGON......UHB,UHC,UHM	EA	1
94	57	PAOZZ	5310-00-167-0821	88044	AN960-616	..WASHER,FLAT......UHB,UHC,UHM	EA	1
94	58	PAOZZ	5306-00-167-3707	88044	AN6-45	..BOLT,MACHINE......UHB,UHC,UHM	EA	1
94	59	XBOZZ	1680-00-239-3713	97499	204-050-006-1	..PLUG,BALLAST U/O PN 205-050-007-1 & -2......UHB,UHC,UHM	EA	1
94	60	XBOZZ	1630-00-H00-0903	97499	204-050-006-3	..PLUG,BALLAST U/O PN 204-050-007-3......UHB,UHC,UHM	EA	1

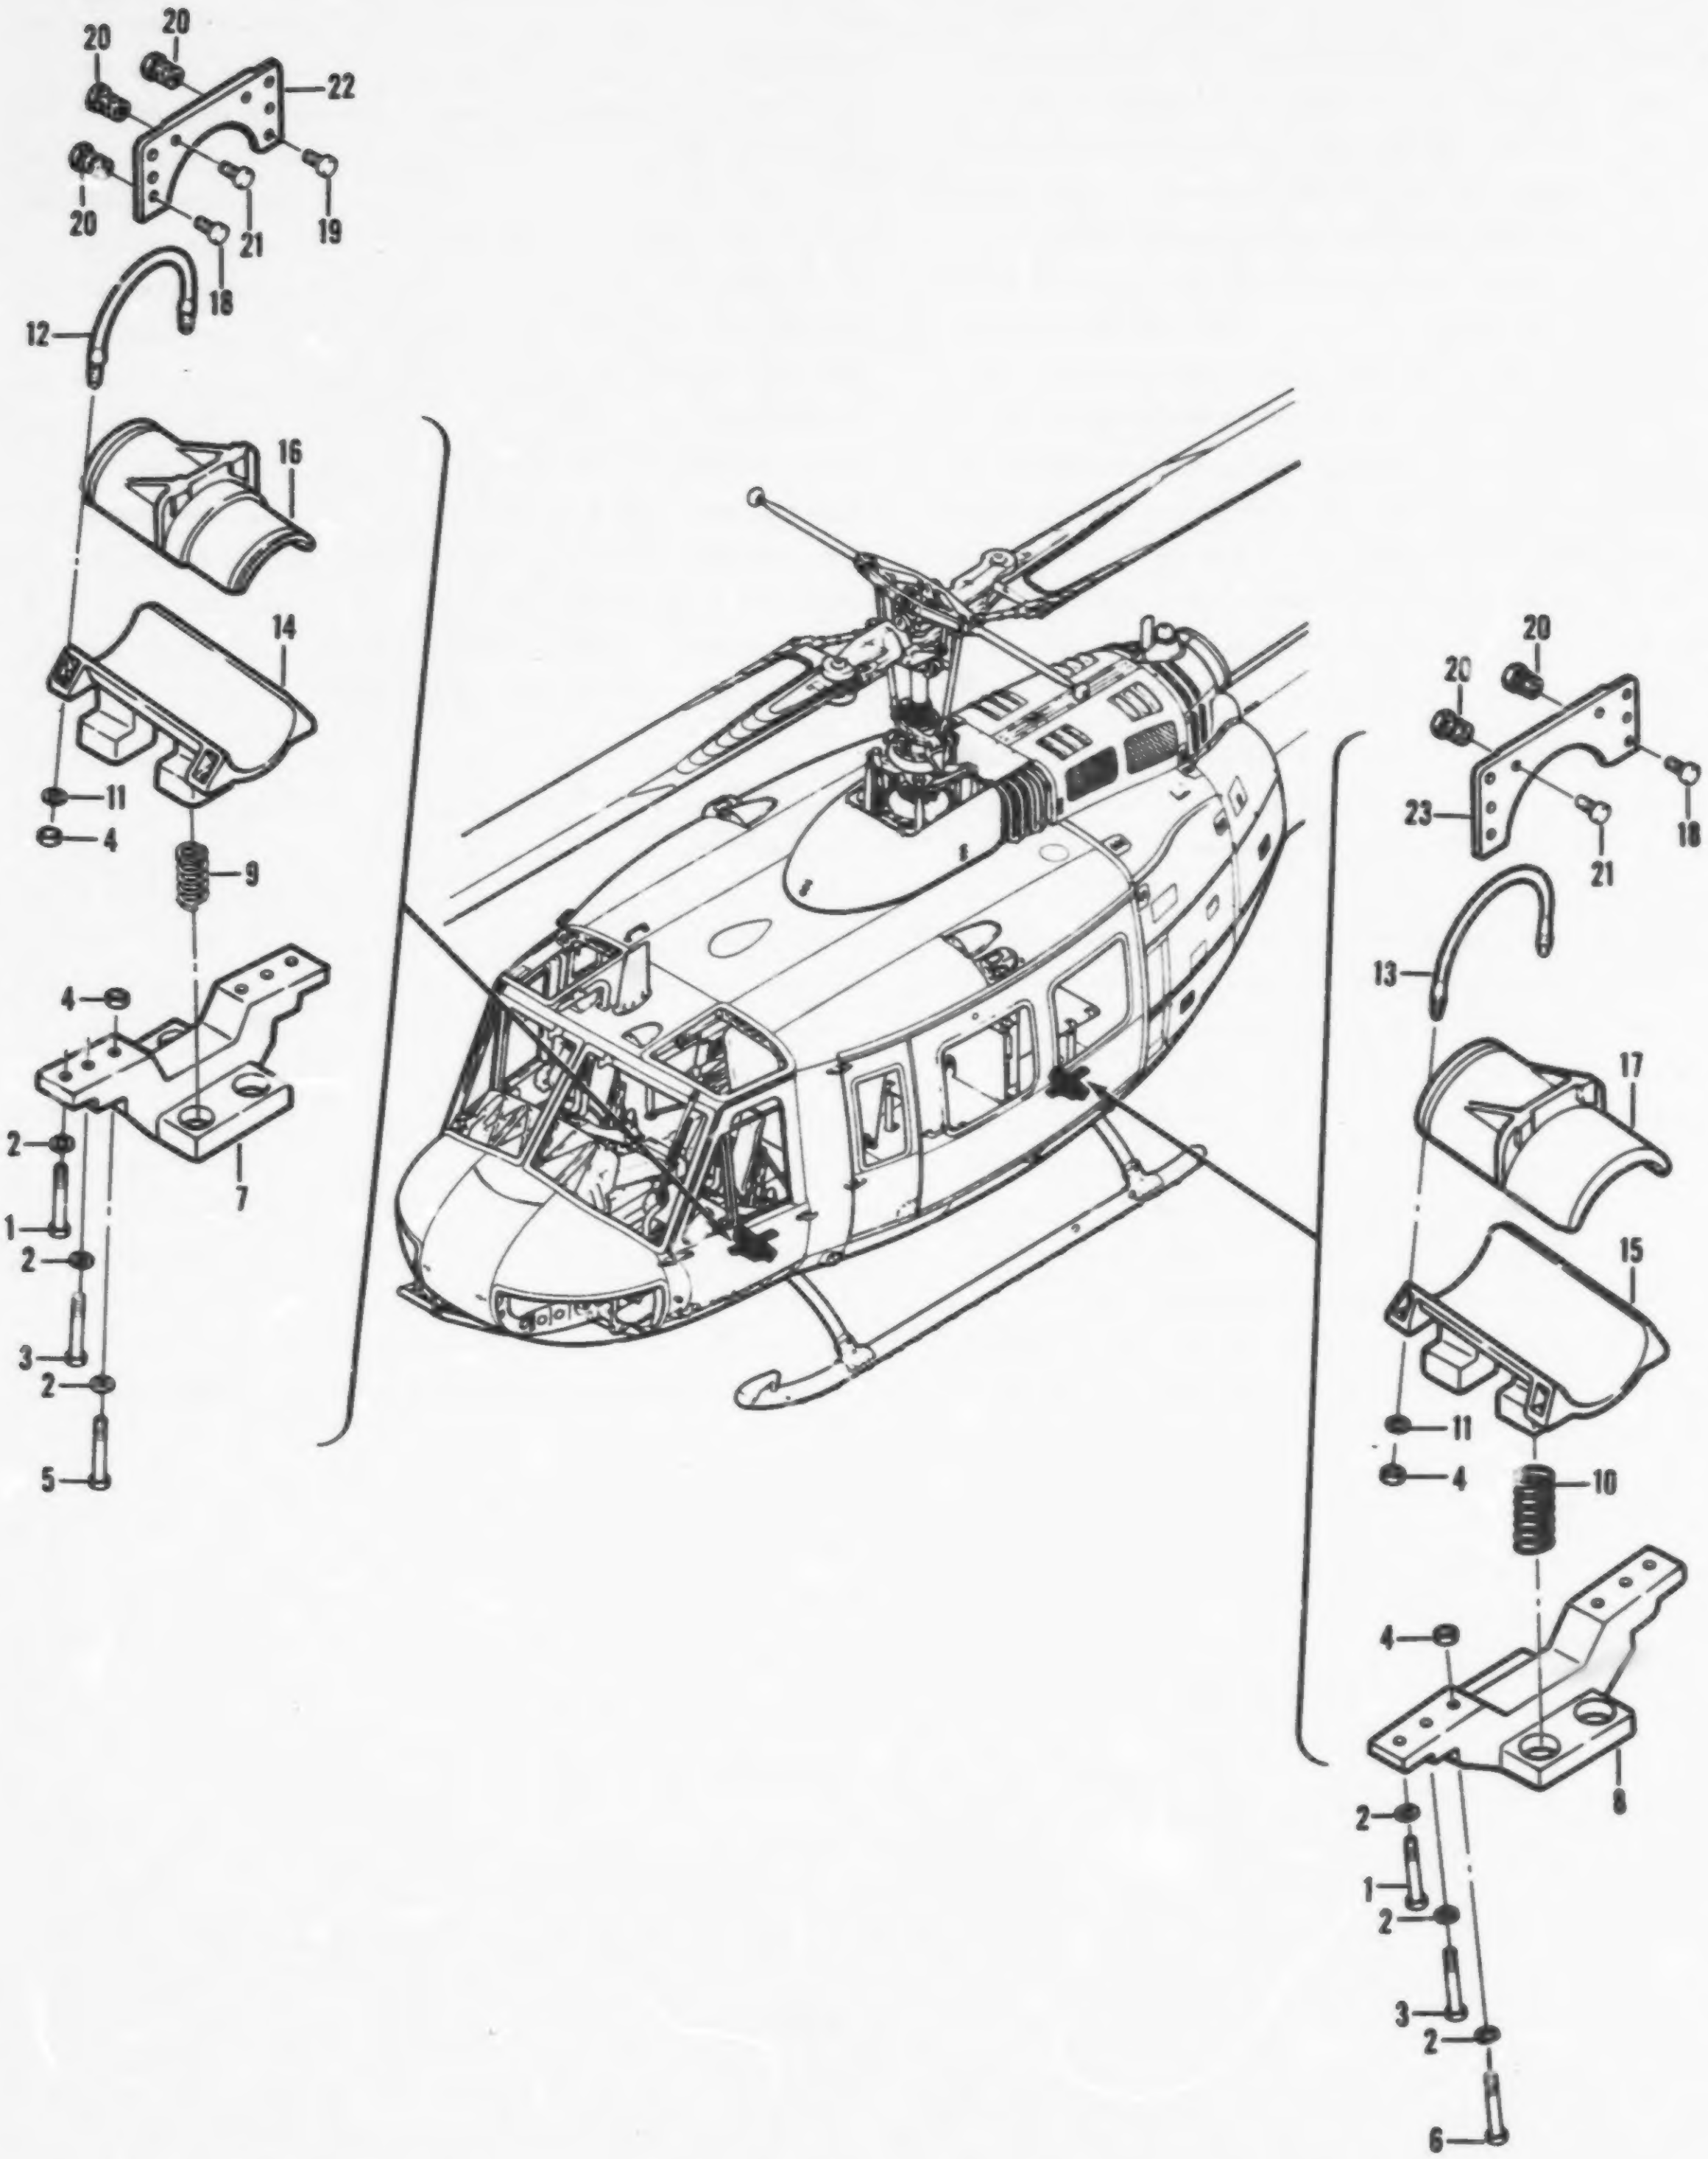
20
20
22
20
20
21
19
21
18
12
16
14
11
4
9
4
7
2
1
2
3
2
5
20
20
23
18
21
13
17
15
11
4
10
4
8
2
1
2
3
2
6

Figure 94A. Landing Gear Isolation Kit

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 03 ALIGHTING GEAR		
94A		PBOZZ	1560-01-067-6526	97499	212-706-059-101	LANDING GEAR, ISOLATION KIT..........UHH,UHV	EA	1
94A	1	PAOZZ	5306-00-151-1422	88044	AN4-12A	.BOLT,MACHINE..........UHH,UHV	EA	8
94A	2	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHH,UHV	EA	24
94A	3	PAOZZ	5306-00-151-1419	88044	AN4-15A	.BOLT,MACHINE..........UHH,UHV	EA	8
94A	4	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT..........UHH,UHV	EA	24
94A	5	PAOZZ	5306-00-151-1414	88044	AN4-22A	.BOLT,MACHINE..........UHH,UHV	EA	4
94A	6	PAOZZ	5306-00-151-1415	88044	AN4-21A	.BOLT,MACHINE..........UHH,UHV	EA	4
94A	7	PBOZZ	1620-01-094-2222	97499	212-030-628-1	.CAP,LANDING GEAR ISOLATION LH..........UHH,UHV	EA	1
94A	7	PBOZZ		97499	212-030-628-2	.CAP,LANDING GEAR ISOLATION RH..........UHH,UHV	EA	1
94A	8	PBOZZ	1620-01-088-8492	97499	212-030-627-1	.CAP,LANDING GEAR ISOLATION LH..........UHH,UHV	EA	1
94A	8	PBOZZ	1620-01-088-8493	97499	212-030-627-2	.CAP,LANDING GEAR ISOLATION RH..........UHH,UHV	EA	1
94A	9	PAOZZ	5360-01-058-7371	84830	LC-098K-1	.SPRING,HELICAL,COMP..........UHH,UHV	EA	8
94A	10	PAOZZ	5360-01-N94-3300	84830	LC-112L-1	.SPRING,HELICAL,COMP..........UHH,UHV	EA	8
94A	11	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHH,UHV	EA	16
94A	12	PBOZZ	5306-01-091-6132	97499	205-050-134-1	.BOLT,U..........UHH,UHV	EA	4
94A	13	PBOZZ	5306-01-087-3122	97499	205-050-134-3	.BOLT,U..........UHH,UHV	EA	4
94A	14	PBOZZ	1620-01-094-2261	97499	212-050-210-1	.SUPPORT,LANDING GEA..........UHH,UHV	EA	2
94A	15	PBOZZ	1620-01-084-2260	97499	212-050-209-1	.SUPPORT,LANDING GEA..........UHH,UHV	EA	2
94A	16	PBOZZ	1620-01-084-2220	97499	212-050-212-1	.RETAINER,LANDING GE..........UHH,UHV	EA	2
94A	17	PBOZZ	1620-01-084-2221	97499	212-050-211-1	.RETAINER,LANDING GE..........UHH,UHV	EA	2
94A	18	PAOZZ	5320-00-103-0727	73197	HL20PB6-9	.PIN-RIVET,THREAD..........UHH,UHV	EA	18
94A	19	PAOZZ	5320-00-103-3073	73197	HL20PB6-11	.PIN..........UHH,UHV	EA	6
94A	20	PAOZZ	5320-00-869-1495	73197	HL86PBW6	.COLLAR,PIN-RIVET,TH..........UHH,UHV	EA	32
94A	21	PAOZZ	5320-00-757-5504	73197	HL21PB6-5	.PIN-RIVET,THREAD..........UHH,UHV	EA	8
94A	22	PBOZZ	1620-01-084-2224	97499	205-030-341-3	.SUPPORT,LANDING GEA LH..........UHH,UHV	EA	1
94A	22	PBOZZ	1620-01-084-2225	97499	205-030-341-4	.SUPPORT,LANDING GEA RH..........UHH,UHV	EA	1
94A	23	PBOZZ	1620-01-088-8494	97499	205-030-342-3	.SUPPORT,LANDING GEA..........UHH,UHV	EA	1
94A	23	PBOZZ	1620-01-084-2223	97499	205-030-342-4	.SUPPORT,LANDING GEA..........UHH,UHV	EA	1

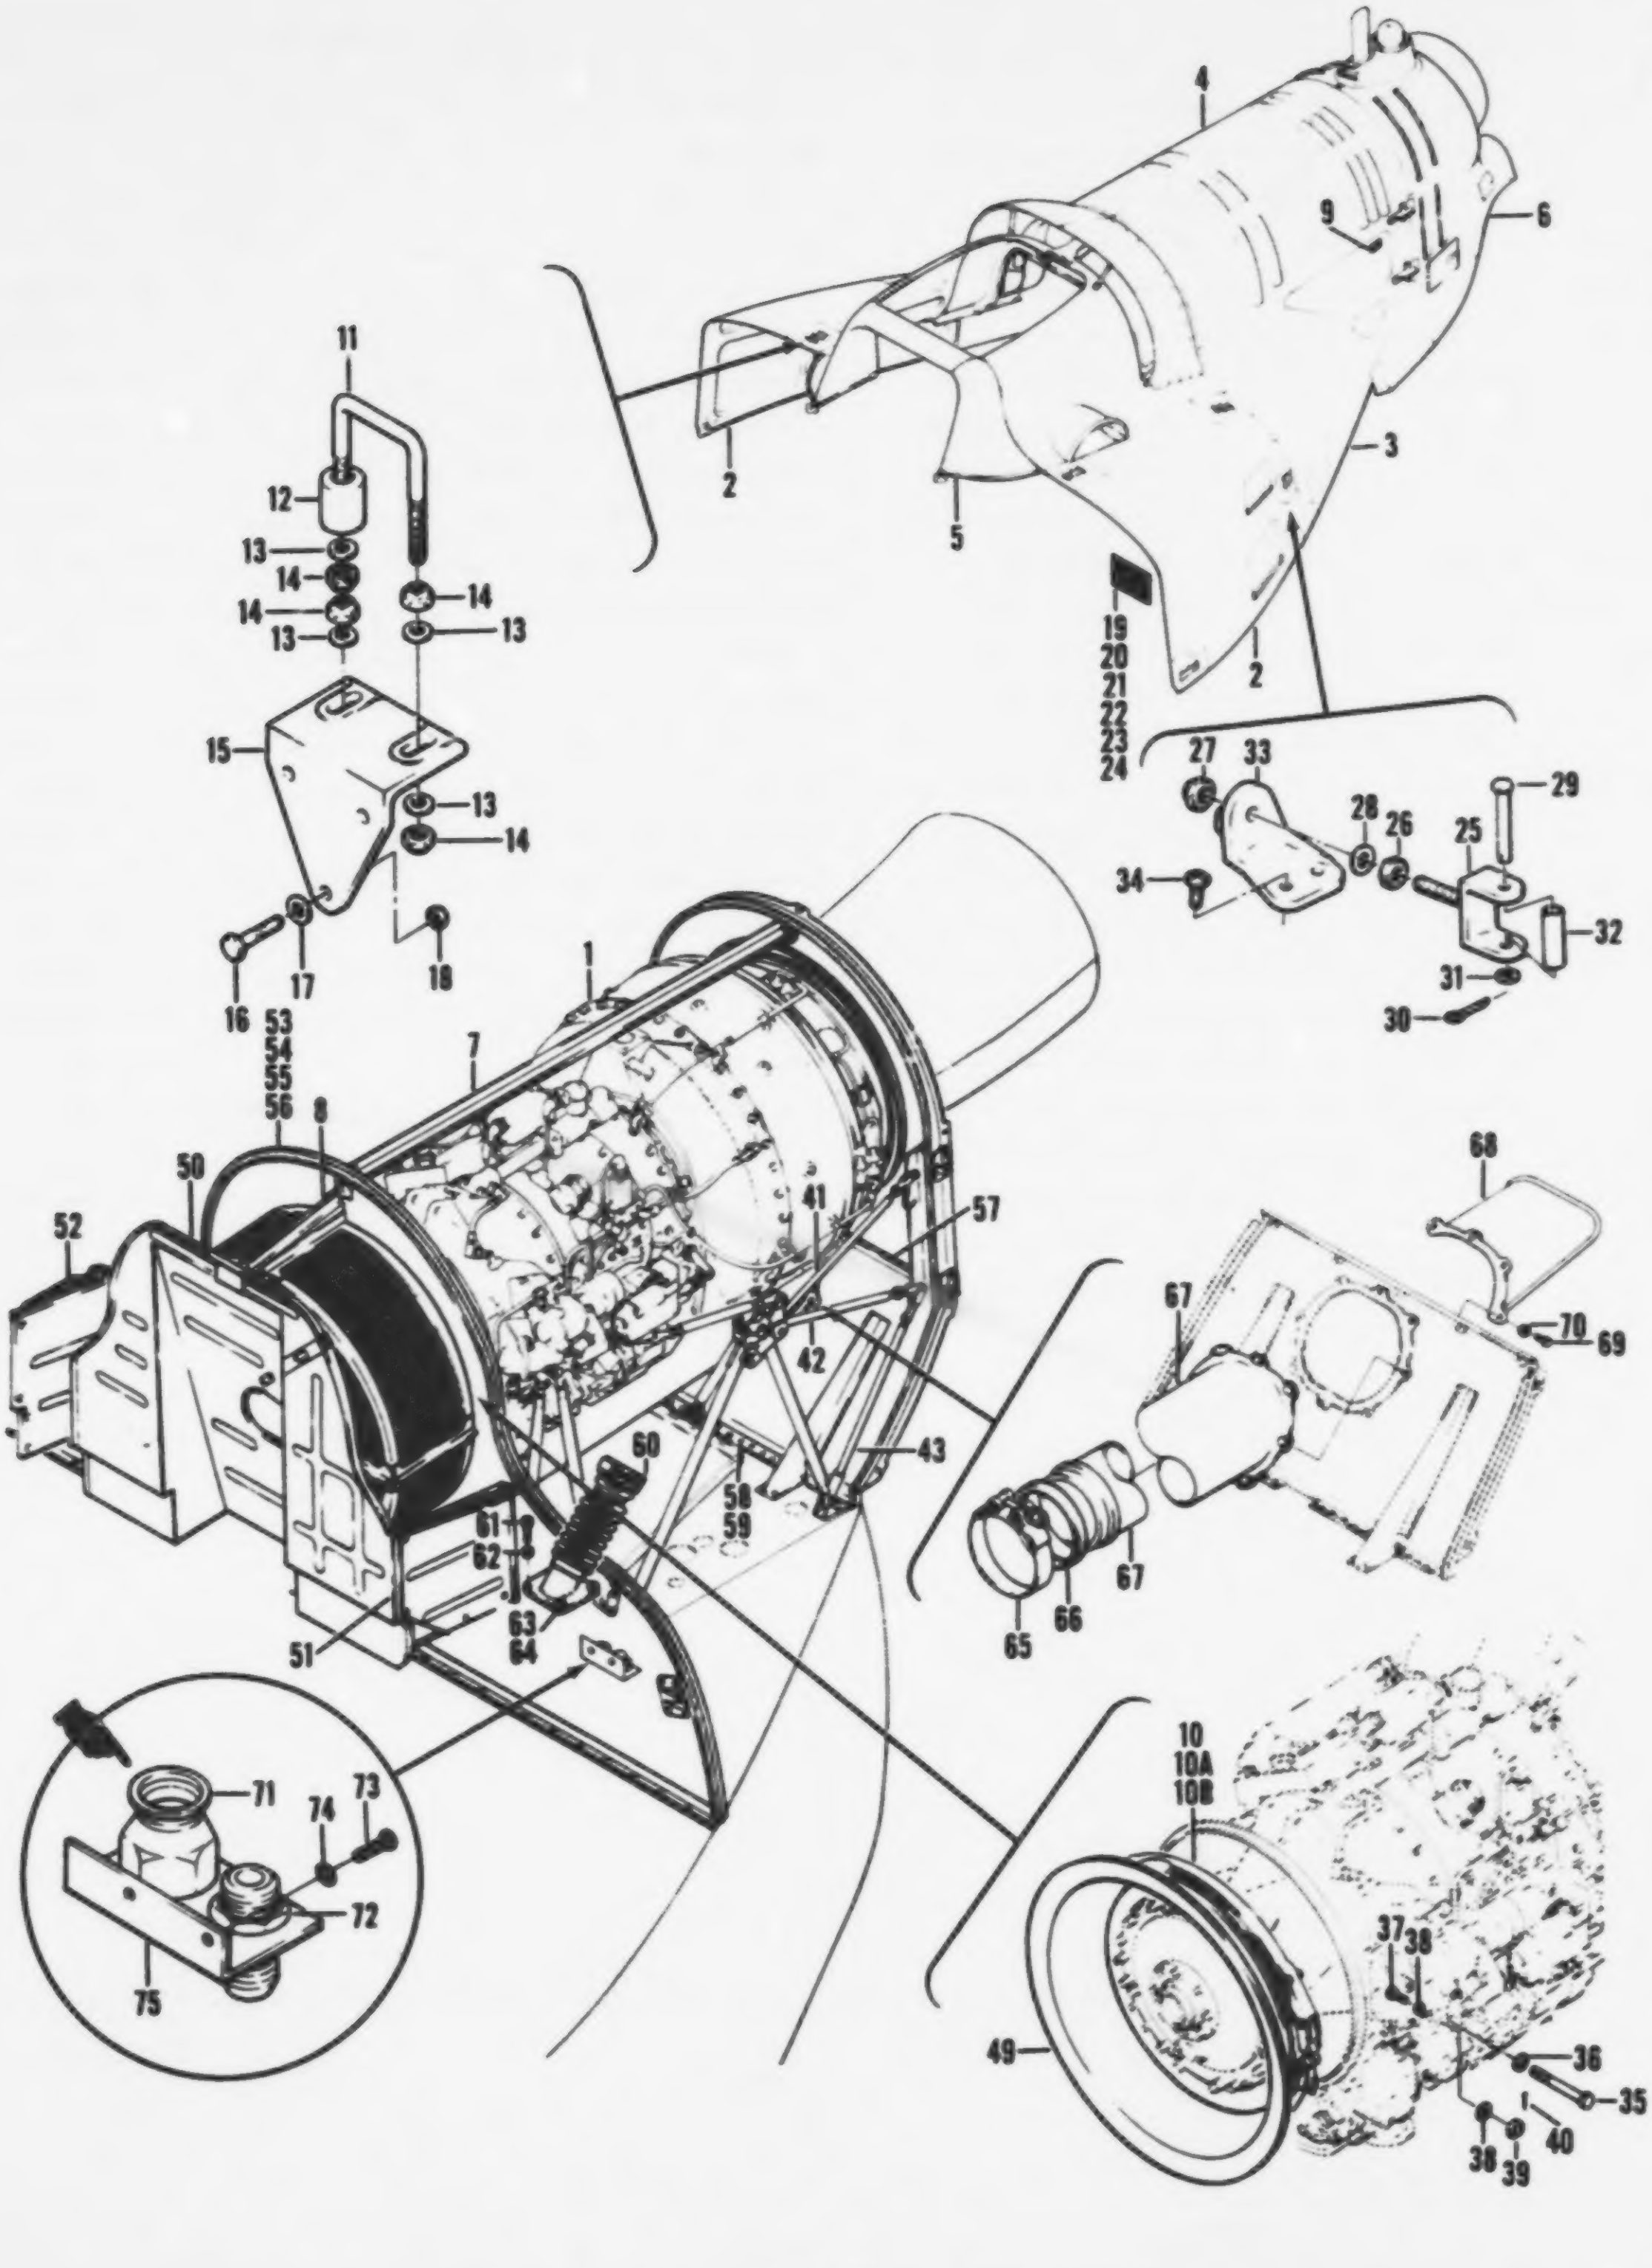
4
9
6
2
5
3
19
20
21
22
23
24
2
27
33
28
26
25
29
34
32
31
30
11
12
13
14
14
13
14
13
15
13
14
16
17
18
1
53
54
55
56
7
8
50
52
41
57
42
43
60
58
59
61
62
63
64
51
68
67
70
69
65
66
67
10
10A
10B
71
73
74
72
75
37
38
36
35
40
38
39
49

Figure 95. Power Plant Installation (Sheet 1 of 2)

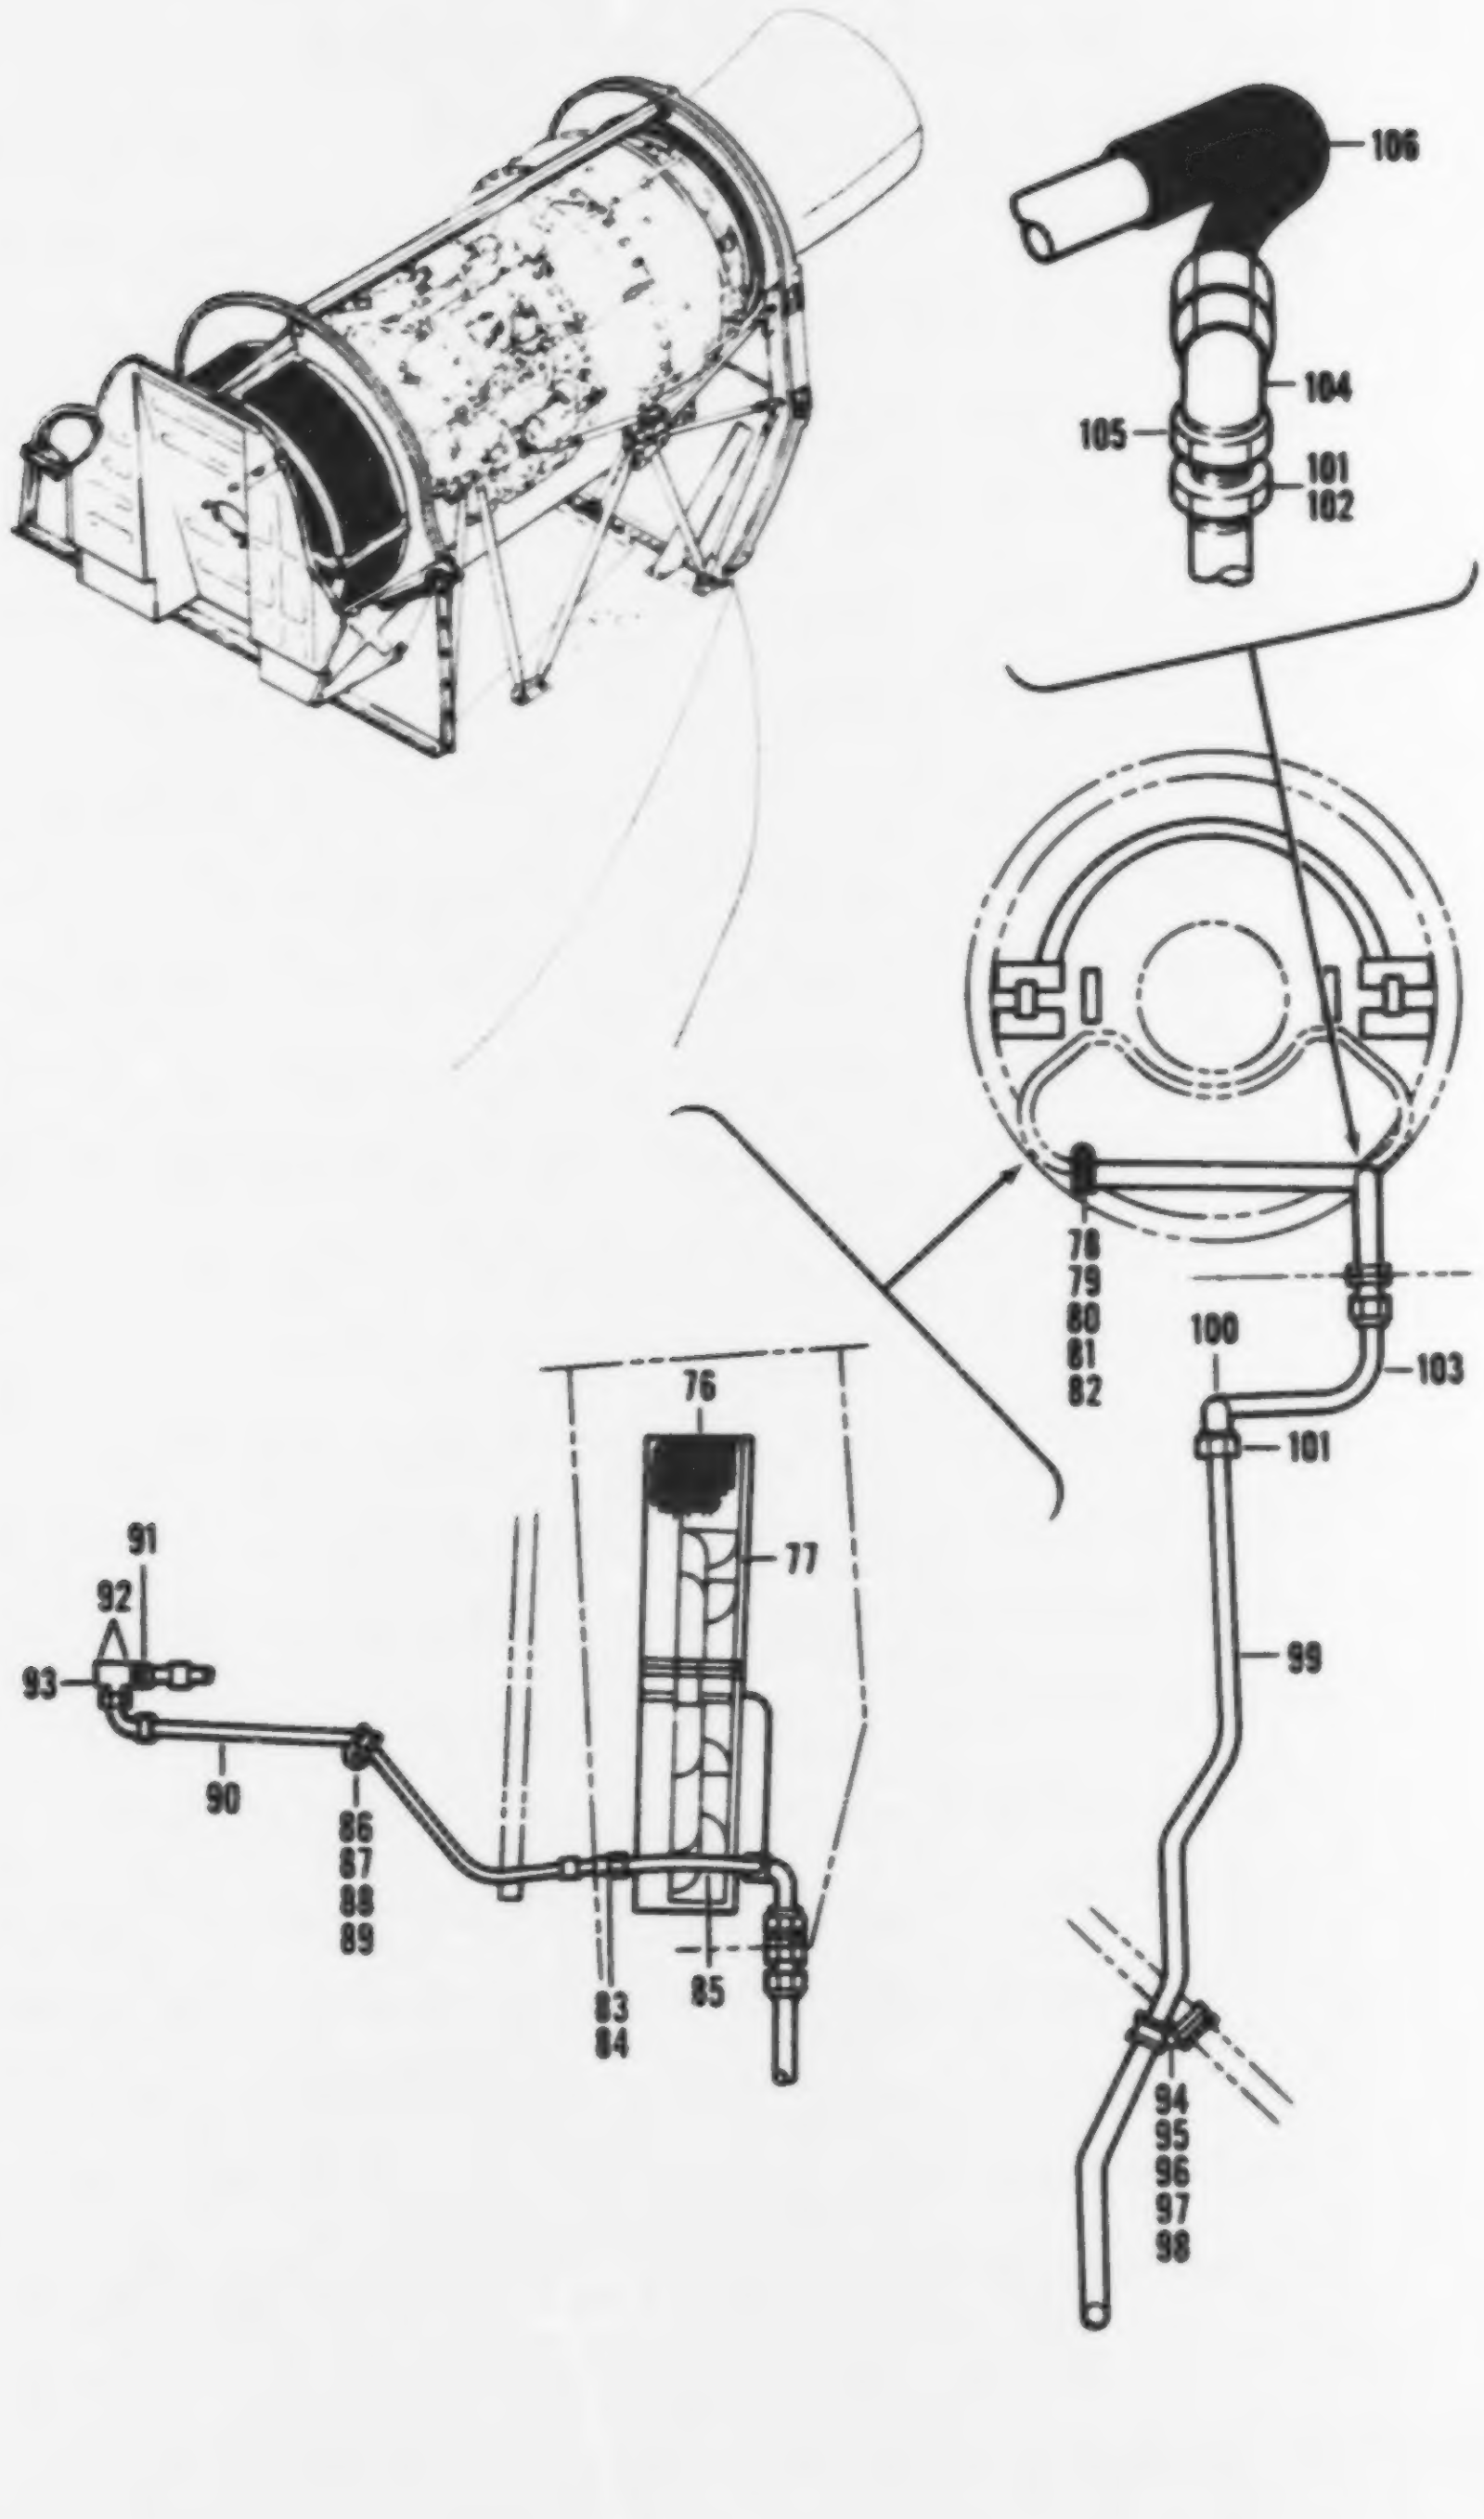
106
104
105
101
102
78
79
80
81
82
100
103
101
76
77
91
92
93
90
86
87
88
89
83
84
85
99
94
95
96
97
98

Figure 95. Power Plant Installation (Sheet 2 of 2)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 04 POWER PLANT INSTALLATION		
95		XCOZZ		97499	204-200-012-1	POWER PLANT INSTL USBL EFF 60-3546 THRU 60-3619 SEE FIG.4 FOR NHA.......UHB	EA	1
95		XCOZZ		97499	204-200-012-3	POWER PLANT INSTL USBL EFF 61-686 THRU 61-740 SEE FIG.4 FOR NHA.......UHB	EA	1
95		XCOZZ		97499	204-200-012-5	POWER PLANT INSTL USBL EFF 61-741 THRU 61-803 SEE FIG.4 FOR NHA.......UHB	EA	1
95		XCOZZ		97499	204-200-012-7	POWER PLANT INSTL USBL EFF 62-1872 THRU 62-1915 SEE FIG.4 FOR NHA.......UHB	EA	1
95		XCOZZ		97499	204-200-012-15	POWER PLANT INSTL USBL EFF 62-1916 THRU 62-12555 SEE FIG 4 FOR NHA.......UHB	EA	1
95		XCOZZ		97499	204-200-012-17	POWER PLANT INSTL USBL EFF 63-8500 THRU 63-12952 SEE FIG.4 FOR NHA.......UHB	EA	1
95		XCOZZ		97499	204-200-012-31	POWER PLANT INSTL USBL EFF 64-13902 & SUBSEQUENT SEE FIG.4 FOR NHA.......UHB	EA	1
95		XCOZZ		97499	204-200-012-41	POWER PLANT INSTL USBL EFF 64-14101 THRU 64-14191 SEE FIG.4 FOR NHA.......UHC,UHM	EA	1
95		XCOZZ		97499	204-200-012-47	POWER PLANT INSTL USBL EFF 65-9416 THRU 65-12772 SEE FIG 4 FOR NHA.......UHC,UHM	EA	1
95		XCOZZ		97499	204-200-012-53	POWER PLANT INSTL USBL EFF 66-492 & SUBSEQUENT SEE FIG 4 FOR NHA.......UHC,UHM	EA	1
95	1	AFOFF		97499	204-060-005-1	.ENGINE ASSEMBLY U/O PN 204-200-012-1 SEE FIG 97 FOR BREAKDOWN.......UHB	EA	1
95	1	AFOFF		97499	204-060-005-3	.ENGINE ASSEMBLY U/O PN 204-200-012-5 SEE FIG 97 FOR BREAKDOWN.......UHB	EA	1
95	1	AFOFF		97499	204-060-005-5	.ENGINE ASSEMBLY U/O PN 204-200-012-7 SEE FIG 97 FOR BREAKDOWN.......UHB	EA	1
95	1	AFOFF		97499	204-060-005-13	.ENGINE ASSEMBLY U/O PN 204-200-012-15 SEE FIG 97 FOR BREAKDOWN.......UHB	EA	1
95	1	AFOFF		97499	204-061-005-1	.ENGINE ASSEMBLY U/O PN 204-200-012-17 SEE FIG 97 FOR BREAKDOWN.......UHB	EA	1
95	1	AFOFF		97499	204-061-005-9	.ENGINE ASSEMBLY U/O PN 204-200-012-31,-41 SEE FIG 97 FOR BREAKDOWN.......UHB,UHC,UHM	EA	1
95	1	AFOFF		97499	204-061-005-13	.ENGINE ASSEMBLY U/O PN 204-200-012-47 SEE FIG 97 FOR BREAKDOWN.......UHC,UHM	EA	1
95	1	AFOFF		97499	204-061-005-17	.ENGINE ASSEMBLY U/O PN 204-200-012-53 SEE FIG 97 FOR BREAKDOWN.......UHC,UHM	EA	1
95	2	XCFZZ		97499	204-060-840-11	.COWL INSTL,FWD-LH U/O PN 204-200-012-1 SEE FIG 73&74 FOR BREAKDOWN.......UHB	EA	1
95	2	XCFZZ		97499	204-060-840-15	.COWL INSTL,FWD-LH U/O PN 204-200-012-3,-5 SEE FIG 73&74 FOR BREAKDOWN.......UHB	EA	1
95	2	XCFZZ		97499	204-060-840-17	.COWL INSTL,FWD-LH U/O PN 204-200-012-7,-15,-17 & -31 SEE FIG.73 & 74 FOR BREAKDOWN.......UHB	EA	1
95	2	XCFZZ		97499	204-062-840-1	.COWL INSTL,FWD-LH. U/O PN 204-200-012-41,-47,&-53 SEE FIG 79 FOR BREAKDOWN.......UHC,UHM	EA	1
95	2	XCFZZ		97499	204-060-840-14	.COWL INSTL,FWD-RH U/O PN 204-200-012-1 SEE FIG 73&74 FOR BREAKDOWN.......UHB	EA	1
95	2	XCFZZ		97499	204-060-840-16	.COWL INSTL,FWD-RH U/O PN 204-200-012-3,-5 SEE FIG 73&74 FOR BREAKDOWN.......UHB	EA	1
95	2	XCFZZ		97499	204-060-840-18	.COWL INSTL,FWD-RH U/O PN 204-200-012-7,&-15 SEE FIG 73&74 FOR BREAKDOWN.......UHB	EA	1
95	2	XCFZZ		97499	204-060-840-19	.COWL INSTL,FWD-RH U/O PN 204-200-012-17&-31 SEE FIG 73&74 FOR BREAKDOWN.......UHB	EA	1
95	2	XCFZZ		97499	204-062-840-2	.COWL INSTL,FWD-RH U/O PN 204-200-012-41,-47,&-53 SEE FIG 80 FOR BREAKDOWN.......UHC,UHM	EA	1
95	3	PAOFF	1560-00-675-3254	97499	204-060-882-7	.COWL ASSY,ENGINE-LH U/O PN 204-200-012-1,-3,-5,-7,-15,-17,&	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						-31 SEE FIG. 84 FOR BREAKDOWN........UHB		
95	3	PAOFF	1560-00-869-8989	97499	204-060-882-121	.COWL ASSY,ENGINE-LH U/O PN 204-200-012-41,-47,&-53 SEE FIG 84 FOR BREAKDOWN........UHC,UHM	EA	1
95	4	PAOFF	1560-00-675-3255	97499	204-060-882-8	.COWL ASSY,ENGINE-RH SEE FIG 84 FOR BREAKDOWN....UHB,UHC,UHM	EA	1
95	5	PAOFF	1560-00-675-3248	97499	204-060-830-101	.DUCT ASSY SEE FIG.78 FOR BREAKDOWN........UHB,UHC,UHM	EA	1
95	6	XCFZZ		97499	204-060-883-233	.FAIRING ASSY ENGINE TAIL PIPE U/O PN 204-200-012-1 SEE FIG. 84 FOR BREAKDOWN........UHB	EA	1
95	6	XCFZZ		97499	204-060-883-235	.FAIRING ASSY ENGINE TAIL PIPE U/O PN 204-200-012-3&-5 SEE FIG.84 FOR BREAKDOWN........UHB	EA	1
95	6	XCFZZ		97499	204-060-883-243	.FAIRING ASSY ENGINE TAIL PIPE U/O PN 204-200-012-7,-15,-17,-31&-41 SEE FIG.84 FOR BREAKDOWN........UHB,UHC,UHM	EA	1
95	6	XCFZZ		97499	204-061-828-1	.FAIRING ASSY ENGINE TAIL PIPE U/O PN 204-200-012-47&-53 SEE FIG 84 FOR BREAKDOWN........UHC,UHM	EA	1
95	7	XCFZZ		97499	204-060-819-1	.BEAM INSTL SEE FIG.101 FOR BREAKDOWN........UHB,UHC,UHM	EA	1
95	8	MFOZZ	1560-00-731-8921	97499	204-060-213-1	.BRACE ASSY U/O PN 204-200-012-1,-3, -5,-7,& -15........UHB	EA	1
95	8	MFOZZ	1560-00-021-3619	97499	204-060-213-5	.BRACE ASSY U/O PN 204-200-012-17,-31, -41,-47 & -53........UHB,UHC,UHM	EA	1
95	9	XCFZZ		97499	204-060-904-1	.DETECTION INSTL ENGINE FIRE-LH SEE FIG.384 FOR BREAKDOWN........UHB,UHC,UHM	EA	1
95	9	XCFZZ		97499	204-060-904-2	.DETECTION INSTL ENGINE FIRE-RH SEE FIG.384 FOR BREAKDOWN........UHB,UHC,UHM	EA	1
95	10	PAOOO	5340-00-077-2121	94581	S4409-1950M	.COUPLING,CLAMP,GROO........UHB	EA	1
95	10A	PAOZZ	5310-00-198-4735	72962	Z1200-048	..NUT,SELF-LOCKING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
95	10B	PAOZZ	5315-00-223-6113	88044	AN416-1	..PIN,RETAINING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
95	11	PAOZZ	5306-00-938-1747	97499	204-062-839-3	.BOLT,U U/O PN 204-200-012-31,-41, -47 & -53.....UHB,UHC,UHM	EA	2
95	12	PAOZZ	1560-00-866-7747	97499	204-062-957-1	.BUSHING,COWL U/O PN 204-200-012-31,-41, -47 & -53........UHB,UHC,UHM	EA	2
95	13	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT........UHB,UHC,UHM	EA	10
95	14	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHB,UHC,UHM	EA	8
95	15	PAOZZ	5340-00-868-7382	97499	204-062-836-1	.BRACKET,ANGLE U/O PN 204-200-012-31,-41, -47 & -53........UHB,UHC,UHM	EA	2
95	16	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE........UHB,UHC,UHM	EA	3
95	17	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT........UHB,UHC,UHM	EA	3
95	18	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHB,UHC,UHM	EA	3
95	19	PAOZZ	1560-00-757-8762	97499	204-060-934-5	.BRACKET,COWL LATCH........UHC,UHM	EA	1
95	20	PAOZZ	5365-00-792-5089	97499	204-060-936-3	.SPACER,PLATE........UHC,UHM	EA	1
95	21	PAOZZ	5306-00-182-1855	88044	AN3CH6A	.BOLT,MACHINE........UHC,UHM	EA	3
95	22	PAOZZ	5310-00-077-2114	97499	204-060-927-1	.WASHER,FLAT........UHC,UHM	EA	3
95	23	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT........UHC,UHM	EA	3
95	24	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHC,UHM	EA	3
95	25	PAOZZ	5340-00-880-6915	97499	204-062-841-1	.CLEVIS,ROD END........UHC,UHM	EA	1
95	26	PAOZZ	5310-00-167-1344	88044	AN315-4R	.NUT,PLAIN,HEXAGON........UHC,UHM	EA	1
95	27	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHC,UHM	EA	1
95	28	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT........UHC,UHM	EA	1
95	29	PBOZZ	5315-00-812-3764	96906	MS20392-2C41	.PIN,STRAIGHT,HEADED........UHC,UHM	EA	1
95	30	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER........UHC,UHM	EA	1
95	31	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT........UHC,UHM	EA	1

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION		(7) U/M	(8) QTY INC IN UNIT
(a) FIG. NO.	(b) ITEM NO.						USABLE ON CODE		
95	100	PAOZZ	4730-00-804-1936	96906	MS24401D16	.ELBOW,TUBE	UHB,UHC,UHM	EA	1
95	101	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT,PLAIN,HEXAGON	UHB,UHC,UHM	EA	2
95	102	PAOZZ	5310-00-595-6902	88044	AN960PD216L	.WASHER,FLAT	UHB,UHC,UHM	EA	1
95	103	MFOZZ	4710-00-177-0263	97499	204-061-234-1	.TUBE ASSEMBLY,METAL	UHB,UHC,UHM	EA	1
95	104	PAOZZ	4730-00-194-1057	88044	AN839-16D	.ELBOW,TUBE TO HOSE	UHB,UHC,UHM	EA	1
95	105	PAOZZ	5310-00-183-4356	88044	AN960PD216	.WASHER,FLAT	UHB,UHC,UHM	EA	1
95	106	PAOZZ	4720-00-182-9085	97499	205-061-239-1	.HOSE,NONMETALLIC	UHB,UHC,UHM	EA	1
95		PAOZZ	1560-00-071-8236	81996	1560UH1-697-1	CONVERSION KIT, AIRCRAFT THIS KIT USED FOR CONVERSION OF UH-1C WITH 200A STARTER GEN TO UH-1M THIS KIT IS TO BE USED ONLY FOR ARMY OWNED AIRCRAFT AND/OR OPERATED AIRCRAFT EXCLUSIVE OF AIR FORCE,NAVY,	UHC	EA	1
95		PAOZZ	1560-00-071-8237	81996	1560UH1-697-2	.CONVERSION KIT, AIRCRAFT THIS KIT USED FOR CONVERSION OF UH-1C WITH 300A STARTERGEN TO UH-1M THIS KIT IS TO BE USED ONLY FOR ARMY OWNED AIRCRAFT AND/OR OPERATED AIRCRAFT EXCLUSIVE OF AIR FORCE,NAVY	UHC	EA	1

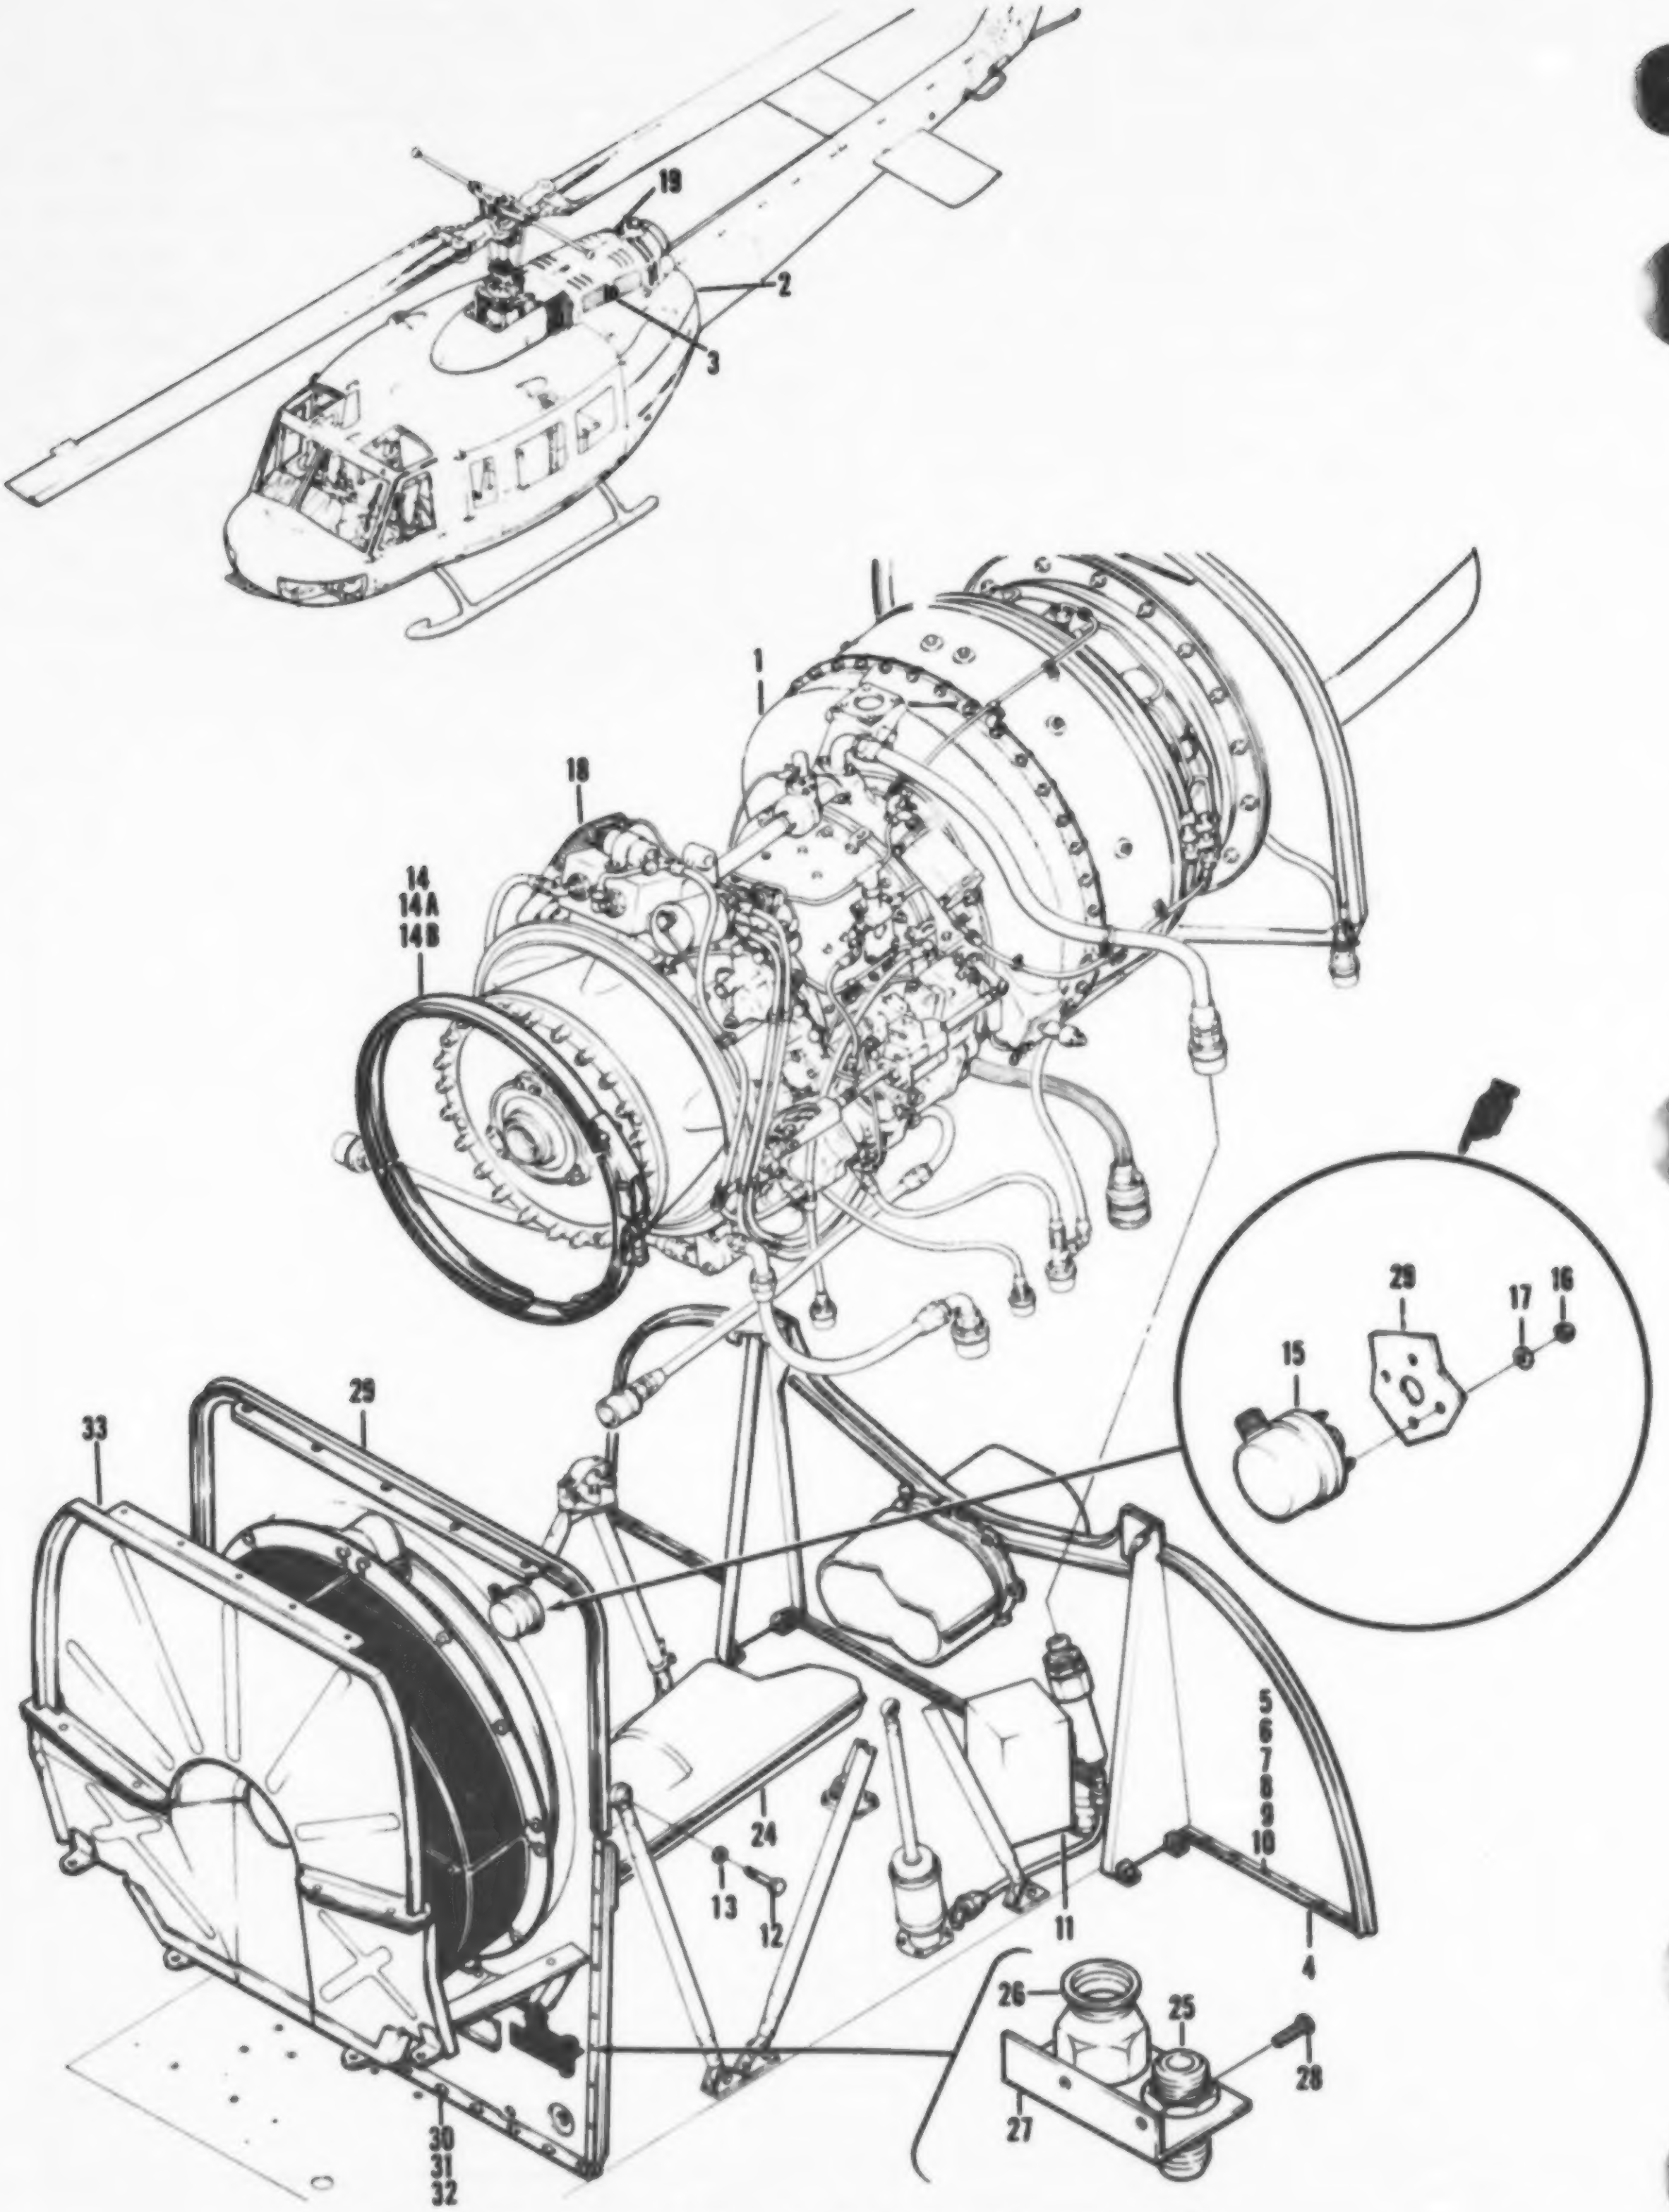
19
2
3
1
18
14
14A
14B
29
17
16
15
33
29
5
6
7
8
9
10
24
13
12
11
4
26
25
28
27
30
31
32

Figure 96. Power Plant Installation (Sheet 1 of 2)

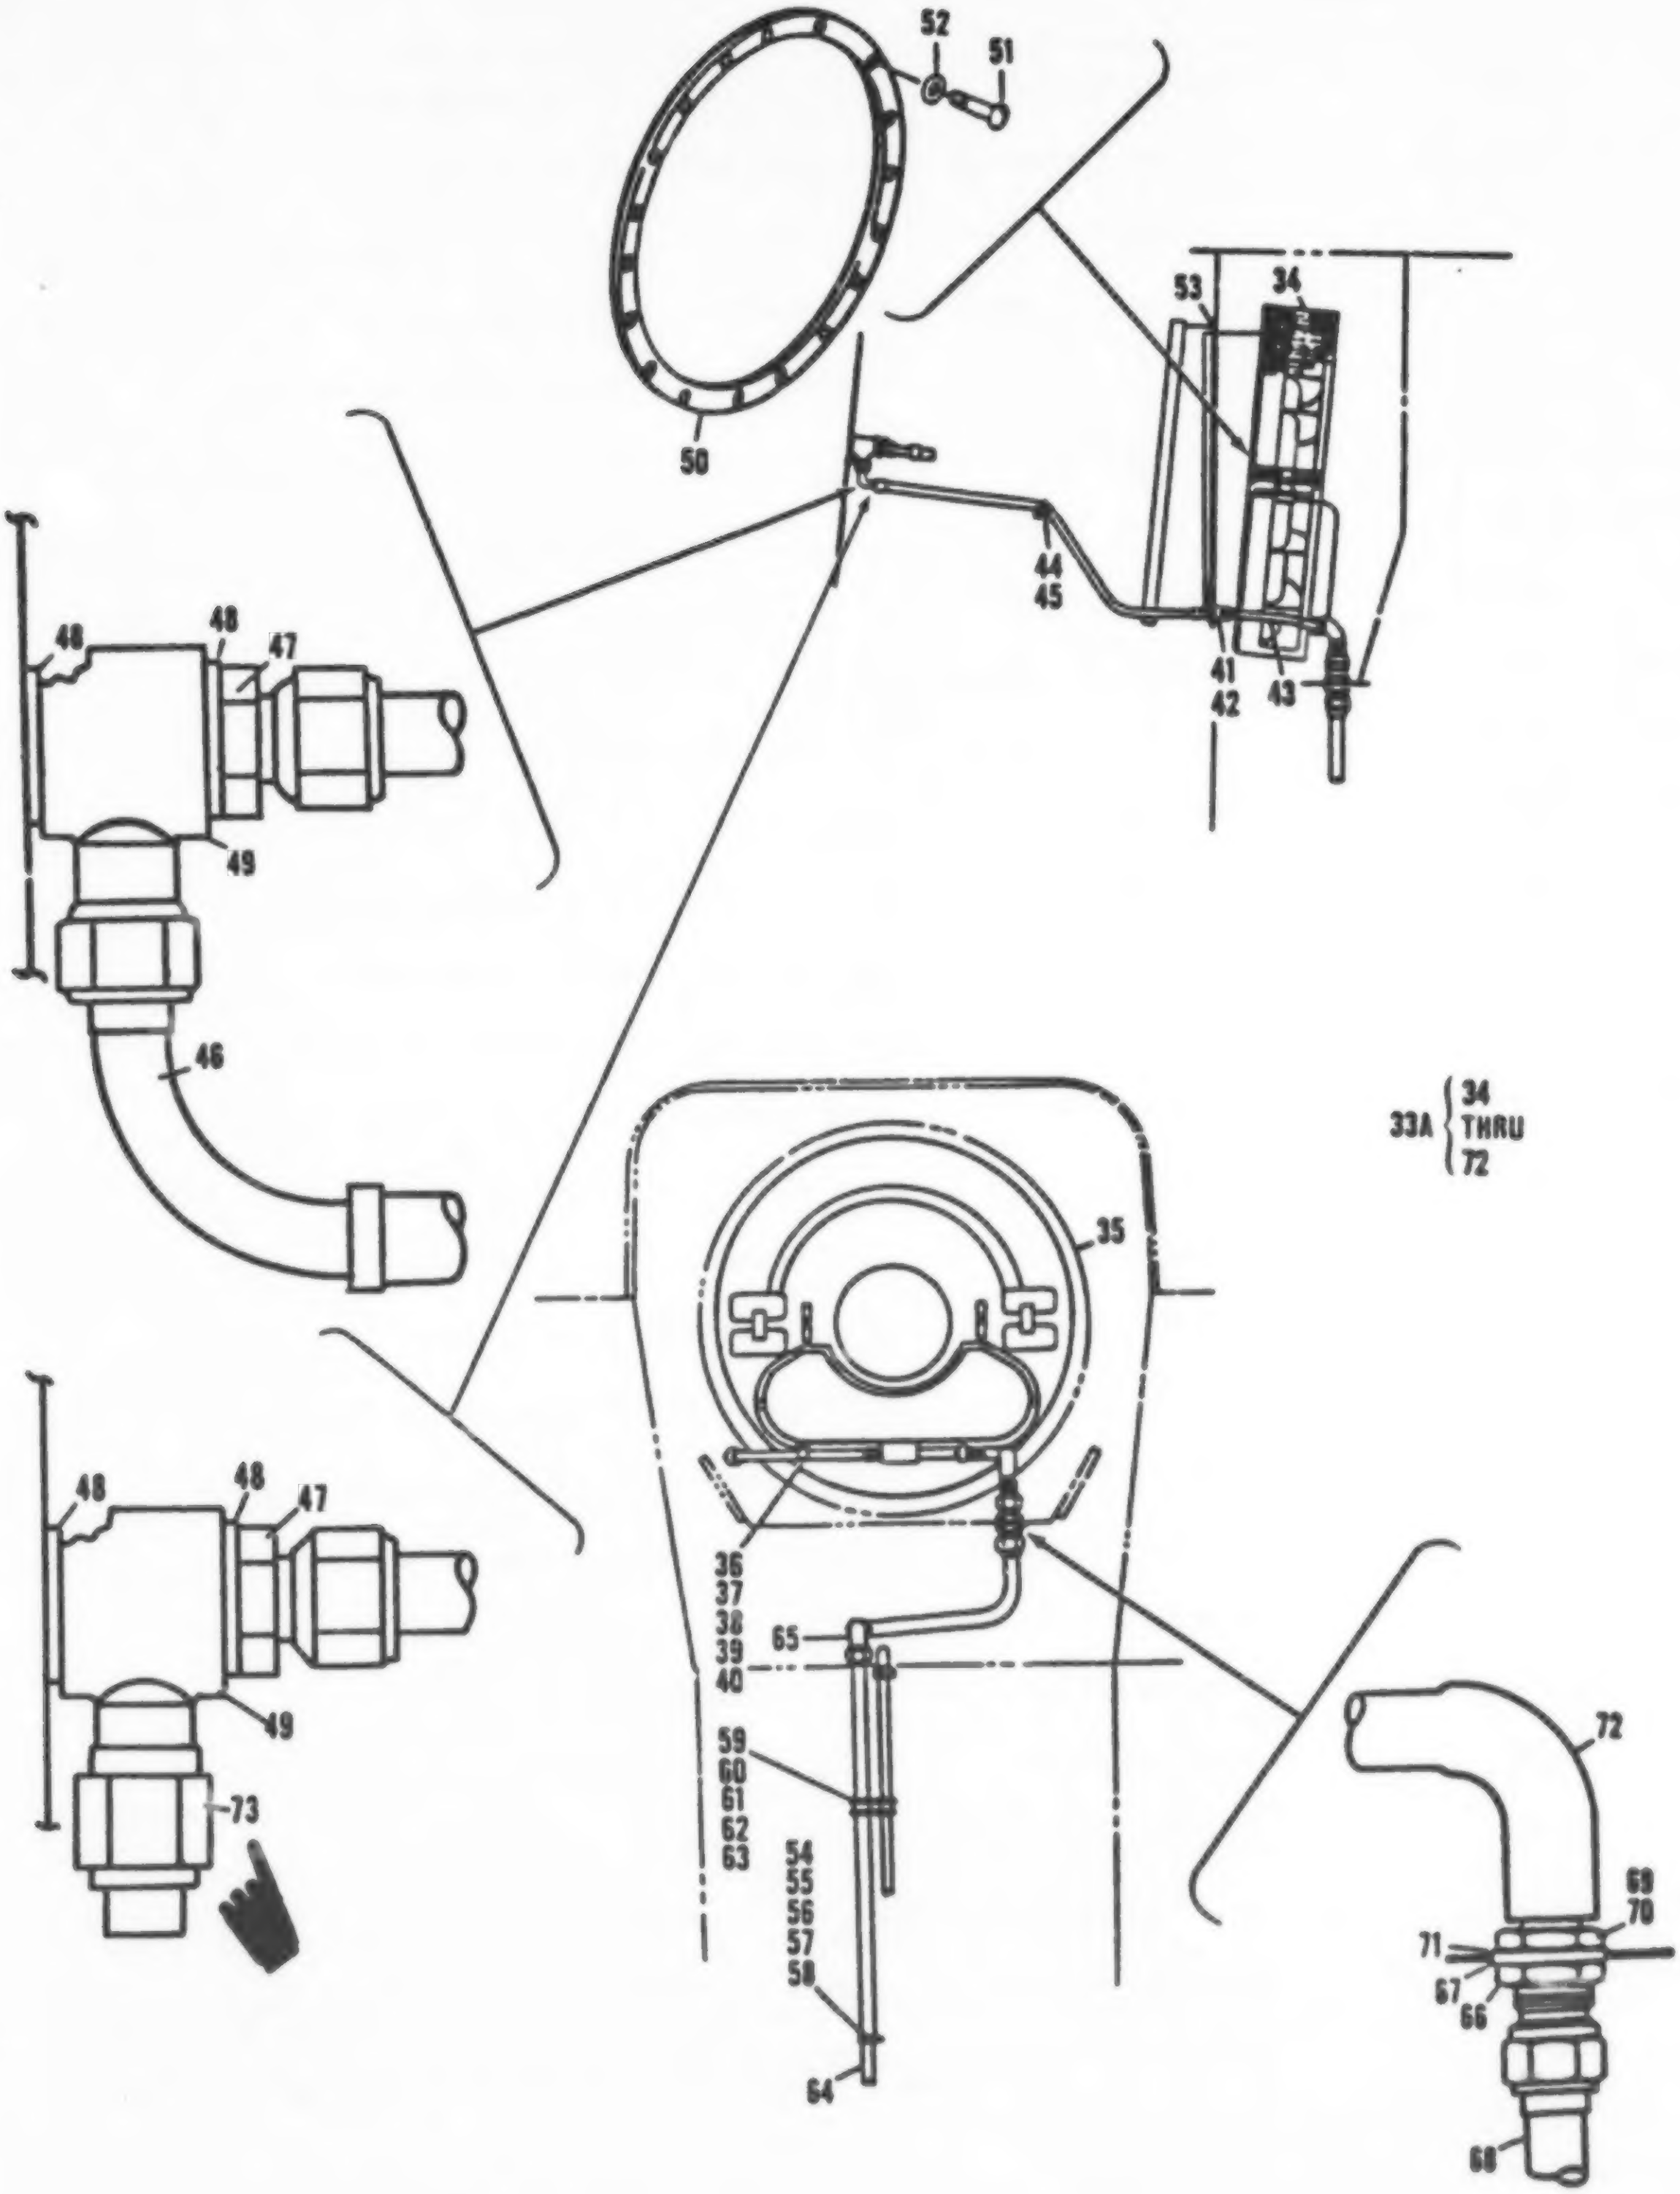
52
51
50
53
34
44
45
41
42
43
48
48
47
49
46
33A
34
THRU
72
35
48
48
47
49
73
36
37
38
39
40
65
59
60
61
62
63
54
55
56
57
58
64
72
69
70
71
67
66
68

Figure 96. Power Plant Installation (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
96		XCFZZ		97499	205-200-004-7	POWER PLANT INSTL USBL EFF 62-2106 THRU 62-2113 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-9	POWER PLANT INSTL USBL EFF 62-12351 THRU 62-12372 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-11	POWER PLANT INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-13	POWER PLANT INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-15	POWER PLANT INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-17	POWER PLANT INSTL USBL EFF 66-746 THRU 66-16867 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-27	POWER PLANT INSTL USBL EFF 66-16868 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.5 FOR NHA...............UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-29	POWER PLANT INSTL USBL EFF 67-17145 THRU 67-19537 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-33	POWER PLANT INSTL USBL EFF 68-15214 THRU 68-15778 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-39	POWER PLANT INSTL USBL EFF 68-16050 THRU 68-16625 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-43	POWER PLANT INSTL USBL EFF 69-15000 THRU 69-15291 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-41	POWER PLANT INSTL USBL EFF 69-15292 THRU 70-16518 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-49	POWER PLANT INSTL USBL EFF 71-20000 THRU 71-20339 SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96		XCFZZ		97499	205-200-004-51	POWER PLANT INSTL USBL EFF 72-21465 & SUBSEQUENT SEE FIG.5 FOR NHA..............................UHE,UHH,UHV,UHX	EA	1
96	1	AFOFF		97499	205-061-001-3	.ENGINE ASSEMBLY U/O PN 205-200-004-13 SEE FIG.98 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	1	AFOFF		97499	205-061-001-5	.ENGINE ASSEMBLY U/O PN 205-200-004-15 SEE FIG.98 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	1	AFOFF		97499	205-061-001-7	.ENGINE ASSEMBLY U/O PN 205-200-004-17 SEE FIG.98 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	1	AFOFF		97499	205-061-001-15	.ENGINE ASSEMBLY U/O PN 205-200-004-27 SEE FIG.98 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	1	AFOFF		97499	205-061-001-17	.ENGINE ASSEMBLY U/O PN 205-200-004-33,-39 & -43 SEE FIG.98 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	1	AFOFF		97499	205-061-001-21	.ENGINE ASSEMBLY U/O PN 205-200-004-41 SEE FIG.98 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	1	AFOFF		97499	205-061-001-25	.ENGINE ASSEMBLY U/O PN 205-200-004-49 SEE FIG.98 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	1	AFOFF		97499	205-061-001-29	.ENGINE ASSEMBLY U/O PN 205-200-004-51 SEE FIG.98 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	2	XCFZZ		97499	205-060-800-5	.COWL INSTL U/O PN 205-200-004-7 SEE FIG.75,-76,-77 & -99 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	2	XCFZZ		97499	205-060-800-7	.COWL INSTL U/O PN 205-200-004-9 SEE FIG.75,-76,-77 & -99 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	2	XCFZZ		97499	205-060-800-9	.COWL INSTL U/O PN 205-200-004-9 SEE FIG.75,-76,-77 & -99 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	2	XCFZZ		97499	205-060-800-11	.COWL INSTL U/O PN 205-200-004-13 SEE FIG.75,-76,-77 & -99 FOR BREAKDOWN.............................. UHE,UHH,UHV,UHX	EA	1
96	2	XCFZZ		97499	205-060-800-13	.COWL INSTL U/O PN 205-200-004-15 SEE FIG.75,-76,-77 & -99 FOR BREEKDOWN..............................UHE,UHH,UHV,UHX	EA	1
96	2	XCFZZ		97499	205-060-800-23	.COWL INSTL U/O PN 205-200-004-27 SEE FIG.75,-76,-77 & 99 FOR BREAKDOWN..............................UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
96	2	XCFZZ		97499	205-060-800-21	.COWL INSTL U/O PN 205-200-004-29,-33,-39,-41,-43,-49 & -51 SEE FIG.75,76,77 & 99 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	3	PAOZZ	1560-00-992-6501	97499	205-060-907-5	.SHIELD ASSEMBLY,AIR..........UHE,UHH,UHV,UHX	EA	1
96	4	PAOFF	1560-00-992-6502	97499	205-060-907-1	.FIREWALL ASSY, -AFT SEE FIG.104 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	5	PAOZZ	5305-00-059-3659	96906	MS51958-63	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	36
96	6	PAOZZ	5305-00-059-3661	96906	MS51958-65	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	4
96	7	PAOZZ	5305-00-059-3660	96906	MS51958-64	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	7
96	8	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	43
96	9	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
96	10	PAOZZ	5365-00-059-4740	97499	120-008C23E7	.SHIM..........UHE,UHH,UHV,UHX	EA	16
96	11	XCFZZ		97499	205-060-403-1	.VALVE INSTL U/O PN 205-200-004-7,-9,& -11 SEE FIG.385 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	11	XCFZZ		97499	205-060-403-3	.VALVE INSTL U/O PN 205-200-004-13,-15,& -17 SEE FIG.385 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	11	XCFZZ		97499	205-030-404-1	.BLEED AIR INSTL U/O PN 205-200-004-27,-29 -33,-39,& -43 SEE FIG.385 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	11	XCFZZ		97499	205-060-404-5	.BLEED AIR INSTL U/O PN 205-200-004-41,-49, & -51 SEE FIG. 385 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	12	PAOZZ	5306-00-674-4219	97499	204-060-133-1	.BOLT,SHOULDER..........UHE,UHH,UHV,UHX	EA	1
96	13	PAOZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
96	14	PAOOO	5340-00-077-2121	94581	54409-1950M	.COUPLING,CLAMP,GROO..........UHE,UHH,UHV,UHX	EA	1
96	14A	PAOZZ	5315-00-223-6113	88044	AN415-1	..PIN,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
96	14B	PAOZZ	5310-00-198-4735	72962	Z1200-04[illegible]	..NUT,SELF-LOCKING,SL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
96	15	PAOZZ	5930-00-871-8780	09049	42D128	.SWITCH,PRESSURE..........UHE,UHH,UHV,UHX	EA	1
96	16	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
96	17	PAOZZ	5310-00-531-9514	88044	AN960C6	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
96	18	XCFZZ		97499	205-060-401-3	.STARTER-GEN INSTL USBL EFF 62-2106 THRU 67-19537 SEE FIG. 287 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	19	XCFZZ		97499	205-060-950-1	.DETECTION INSTL ENGINE FIRE-LH U/O PN 205-200-004-7,-9,-11, -13,-15,-17&-27 SEE FIG.385 FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
96	19	XCFZZ		97499	205-060-950-2	.DETECTION INSTL ENGINE FIRE-RH U/O PN 205-200-004-7,-9,-11, -13,-15,-17&-27 SEE FIG.385 FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
96	19	XCFZZ		97499	205-060-950-3	.DETECTION INSTL ENGINE FIRE-LH U/O PN 205-200-004-29,-33,-39,-41,-43,-49&-51 SEE FIG.385 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	19	XCFZZ		97499	205-060-950-4	.DETECTION INSTL ENGINE FIRE-RH U/O PN 205-200-004-29,-33,-39,-41,-43,-49&-51 SEE FIG.385 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	24	XCFZZ		97499	205-060-906-1	.FIRESHIELD INSTL U/O PN 205-200-004-7,-9, -11,-13 & -15 SEE FIG. 86 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	24	XCFZZ		97499	205-060-921-1	.FIRESHIELD INSTL U/O PN 205-200-004-15,-17, -27,-29,-33,-39,-41,-43, -49,& -51 SEE FIG.86 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	25	PAOZZ	4730-00-684-7446	96906	MS24399D24	.REDUCER,TUBE U/O PN 205-200-004-7,-9, -11,& -13..........UHE,UHH,UHV,UHX	EA	1
96	26	PAOZZ	1680-00-967-7575	97499	205-060-409-1	.FITTING,BLEED AIR U/O PN 205-200-004-7,-9, -11 & -13..........UHE,UHH,UHV,UHX	EA	1
96	27	PAOZZ	1560-00-072-8332	97499	205-060-496-1	.BRACKET,BLEED AIR M U/O PN 205-200-004-7,-9, -11,& -13..........UHE,UHH,UHV,UHX	EA	1
96	28	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	2
96	29	PAOFF	1560-00-160-8902	97499	205-060-908-119	.FIREWALL ASSEMBLY U/O PN 205-200-004-7,-9,-11 & -13 SEE	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						FIG. 103 FOR BREAKDOWN..........UHE,UHH,UHV,UHX		
96	29	PBOFF	1560-00-150-8911	97499	205-060-908-125	.FIREWALL ASSEMBLY U/O PN 205-200-004-15 SEE FIG. 103 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	29	PAOFF	1560-00-181-5266	97499	205-060-908-117	.FIREWALL ASSY. SEE FIG. 103 FOR BREAKDOWN....UHE,UHH,UHV,UHX	EA	1
96	30	PAOZZ	5305-00-059-3659	96906	MS51958-63	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	11
96	31	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	18
96	32	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	18
96	33	AOOOZ	1560-00-992-6606	97499	205-060-205-1	.INDUCTION BAFFLE ASSY U/O PN 205-200-004-7,-9 SEE FIG. 83 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	33	AOOOZ	1560-00-789-4948	97499	205-060-205-51	.INDUCTION BAFFLE ASSY U/O PN 205-200-004-11 & -13 SEE FIG. 83 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	33	AOOOO		97499	205-060-205-135	.INDUCTION BAFFLE ASSY U/O PN 205-200-004-15,-17,-27,-29,-33,-39,-41 & -43 SEE FIG. 83 FOR BREAKDOWN.....UHE,UHH,UHV,UHX	EA	1
96	33A	XCFZZ		97499	205-061-212-1	.SEPARATOR INSTL PARTICLE U/O PN 205-200-004-39 USBL EFF 68-16050 THRU 68-16625..........UHE,UHH,UHV,UHX	EA	1
96	33A	XCFZZ		97499	205-061-212-7	.SEPARATOR INSTL PARTICLE USBL EFF 69-15000 & SUBSEQUENT..........UHE,UHH,UHV,UHX	EA	1
96	34	AOOOF	1560-00-167-8113	91547	1-010-680-01	..SCREEN ASSEMBLY,AIR SEE FIG. 106 & 107 FOR BREAKDOWN..........UHE,UHH,UHV,UHX	EA	1
96	35	XDOFF	2945-00-109-4678	91547	1-010-500-08	..PARTICLE SEPARATOR,..........UHE,UHH,UHV,UHX	EA	1
96	36	PAOZZ	5310-00-807-1467	96906	MS21042-3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
96	37	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
96	38	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
96	39	PAOZZ	5340-00-533-3515	81996	EAB700-8	..CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
96	40	MFOZZ	1560-00-073-6596	97499	20-032-1	..BRACKET,ENGINE..........UHE,UHH,UHV,UHX	EA	1
96	41	PAOZZ	5310-00-079-1967	88044	AN924-4J	..NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
96	42	PAOZZ	5310-00-167-0805	88044	AN960C716	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
96	43	PAOZZ	4720-00-457-6716	97499	70-031A150-000	..HOSE ASSEMBLY,METAL..........UHE,UHH,UHV,UHX	EA	1
96	44	PAOZZ	5306-00-151-0779	88044	AN3-15A	..BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	1
96	45	PAOZZ	5340-00-993-6244	81996	EAB700D10	..CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
96	46	PAOZZ	4720-00-410-5860	97499	209-060-225-1	..HOSE ASSY..........UHE,UHH,UHV,UHX	EA	1
96	47	PAOZZ	4730-00-277-6295	88044	AN774-6	..BOLT,FLUID PASSAGE..........UHE,UHH,UHV,UHX	EA	1
96	48	PAOZZ	5310-00-196-6678	88044	AN901-6A	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
96	49	PAOZZ	4730-00-277-9761	88044	AN776-6	..CONNECTOR,MULTIPLE, FLUID..........UHE,UHH,UHV,UHX	EA	1
96	50	PAOFF	1560-00-716-8596	97499	204-060-868-1	..RING ASSY,ENGINE..........UHE,UHH,UHV,UHX	EA	1
96	51	PBOZZ	5305-00-180-0011	88044	AN525-10R9	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	18
96	52	PAOZZ	5310-00-167-0812	88044	AN960C10L	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	18
96	53	PAOZZ	5365-00-477-4009	97499	204-060-815-71	..SPACER,PLATE..........UHE,UHH,UHV,UHX	EA	1
96	54	PAOZZ	5310-00-807-1467	96906	MS21042-3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
96	55	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
96	56	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
96	57	PAOZZ	5340-00-514-1230	96906	MS21919WDG25	..CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
96	58	PAOZZ	5340-00-989-4573	81996	EAB700D16	..CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
96	59	PAOZZ	5310-00-807-1467	96906	MS21042-3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
96	60	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
96	61	PAOZZ	5305-00-989-7434	96906	MS35207-263	..SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.							
96	62	PAOZZ	5340-00-187-6023	96906	MS21122-6	. . CLAMP, LOOP . . . . UHE, UHH, UHV, UHX	EA	1
96	63	PAOZZ	5340-00-989-4573	81996	EAB7000D16	. . CLAMP, LOOP . . . . UHE, UHH, UHV, UHX	EA	1
96	64	MFOZZ		97499	205-061-214-1	. . TUBE ASSEMBLY, METAL . . . . UHE, UHH, UHV, UHX	EA	1
96	65	PAOZZ	4730-00-804-1936	96906	MS24401D16	. . ELBOW, TUBE . . . . UHE, UHH, UHV, UHX	EA	1
96	66	PAOZZ	5310-00-949-6143	88044	AN924-16D	. . NUT, PLAIN, HEXAGON . . . . UHE, UHH, UHV, UHX	EA	1
96	67	PAOZZ	5310-00-183-4356	88044	AN960PD2116	. . WASHER, FLAT . . . . UHE, UHH, UHV, UHX	EA	1
96	68	MFOZZ		97499	205-061-213-1	. . TUBE ASSEMBLY. . . . . UHE, UHH, UHV, UHX	EA	1
96	69	PBOZZ	4730-00-810-8828	96906	MS24393D16	. . NIPPLE, TUBE U/O PN 205-061-212-1 . UHE, UHH, UHV, UHX	EA	1
96	70	PAOZZ	4730-00-231-1313	88044	AN807-16D	. . ADAPTER, STRAIGHT, TUBE TO HOSE UHE,UHH, UHV, UHX	EA	1
96	71	PAOZZ	5310-00-598-6902	88044	AN960PD2116L	. . WASHER, FLAT . . . . UHE, UHH, UHV, UHX	EA	1
96	72	PAOZZ	4720-00-182-9085	97499	205-061-239-1	. . HOSE, NONMETALLIC . . . . UHE, UHH, UHV, UHX	EA	1
96	73	PAOZZ	4730-00-203-3136	88044	AN929-6J	. CAP,TUBE (AIRCRAFT WITH IMPROVED PARTICLE SEPARATOR) . . . . EHH, EHX, UHH, UHV	EA	1

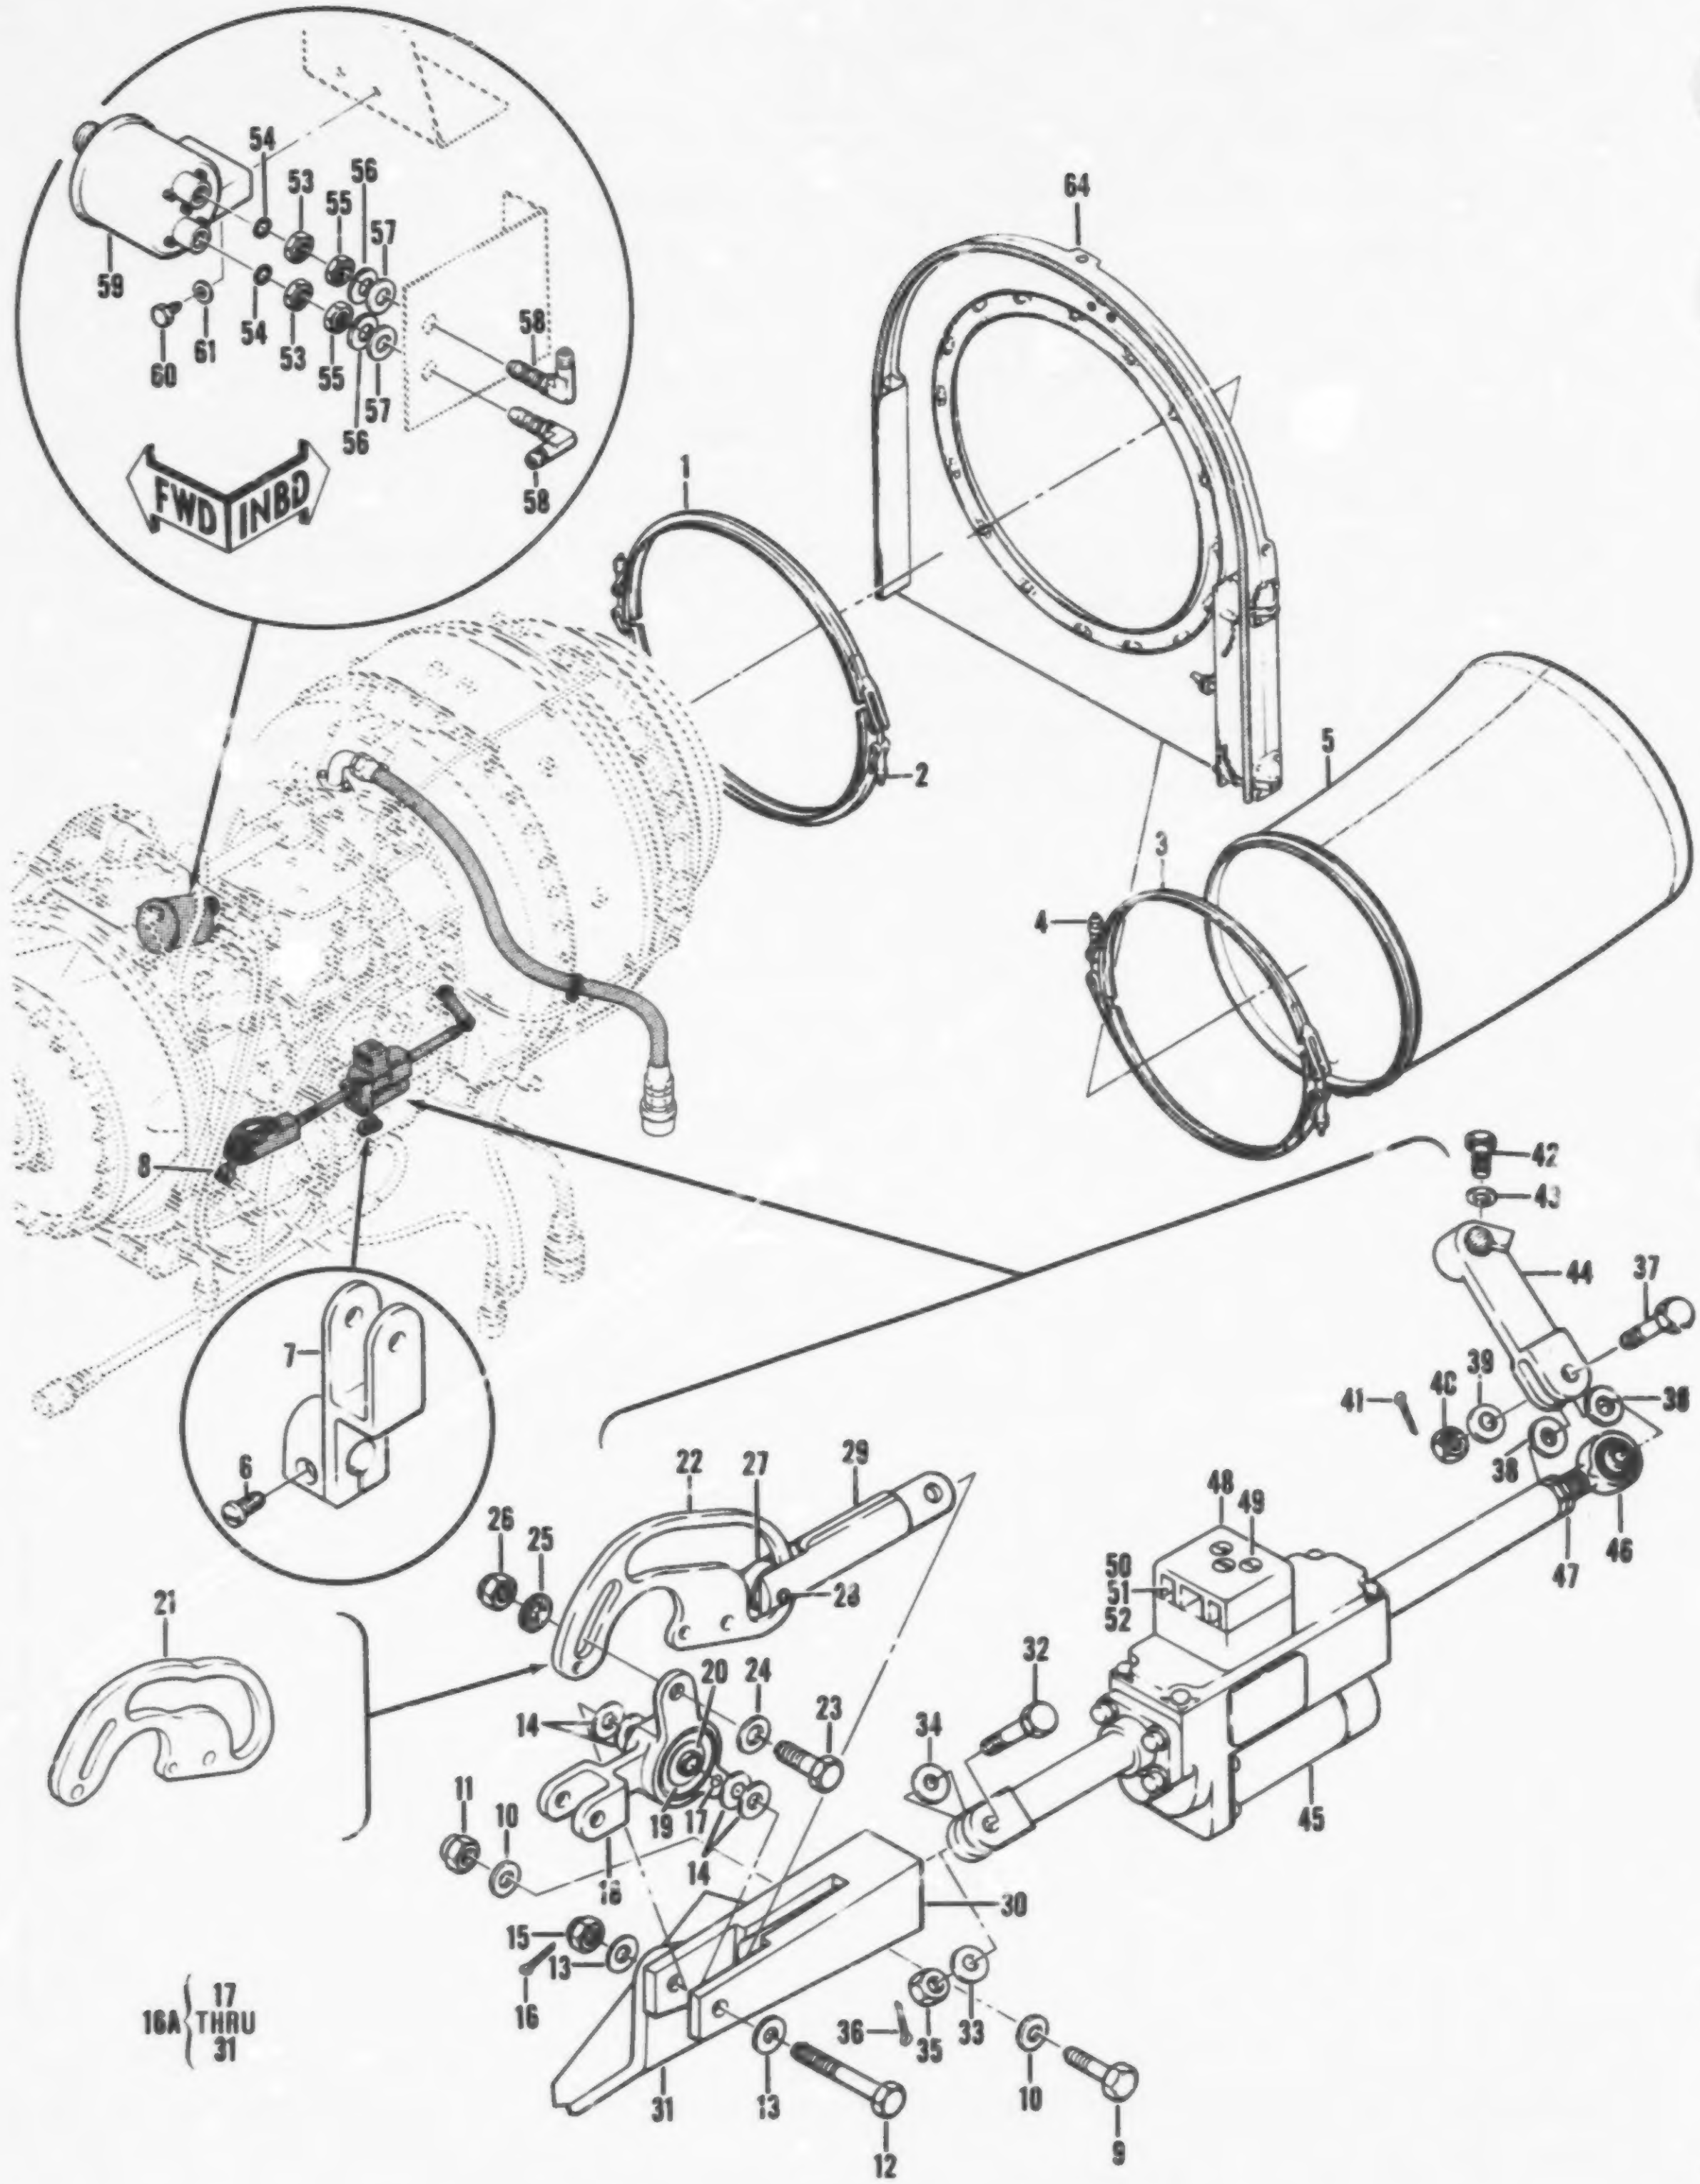
54
53
56
55
57
59
61
60
54
53
55
57
56
58
58
FWD
INBD
64
1
2
5
3
4
8
7
6
42
43
44
37
39
40
41
38
38
46
47
48
49
50
51
52
22
27
29
26
25
28
21
20
24
23
14
32
34
11
10
19
17
18
14
45
30
15
13
16
16A
17
THRU
31
36
35
33
10
31
13
12
9

Figure 97. Engine Assembly (Sheet 1 of 3)

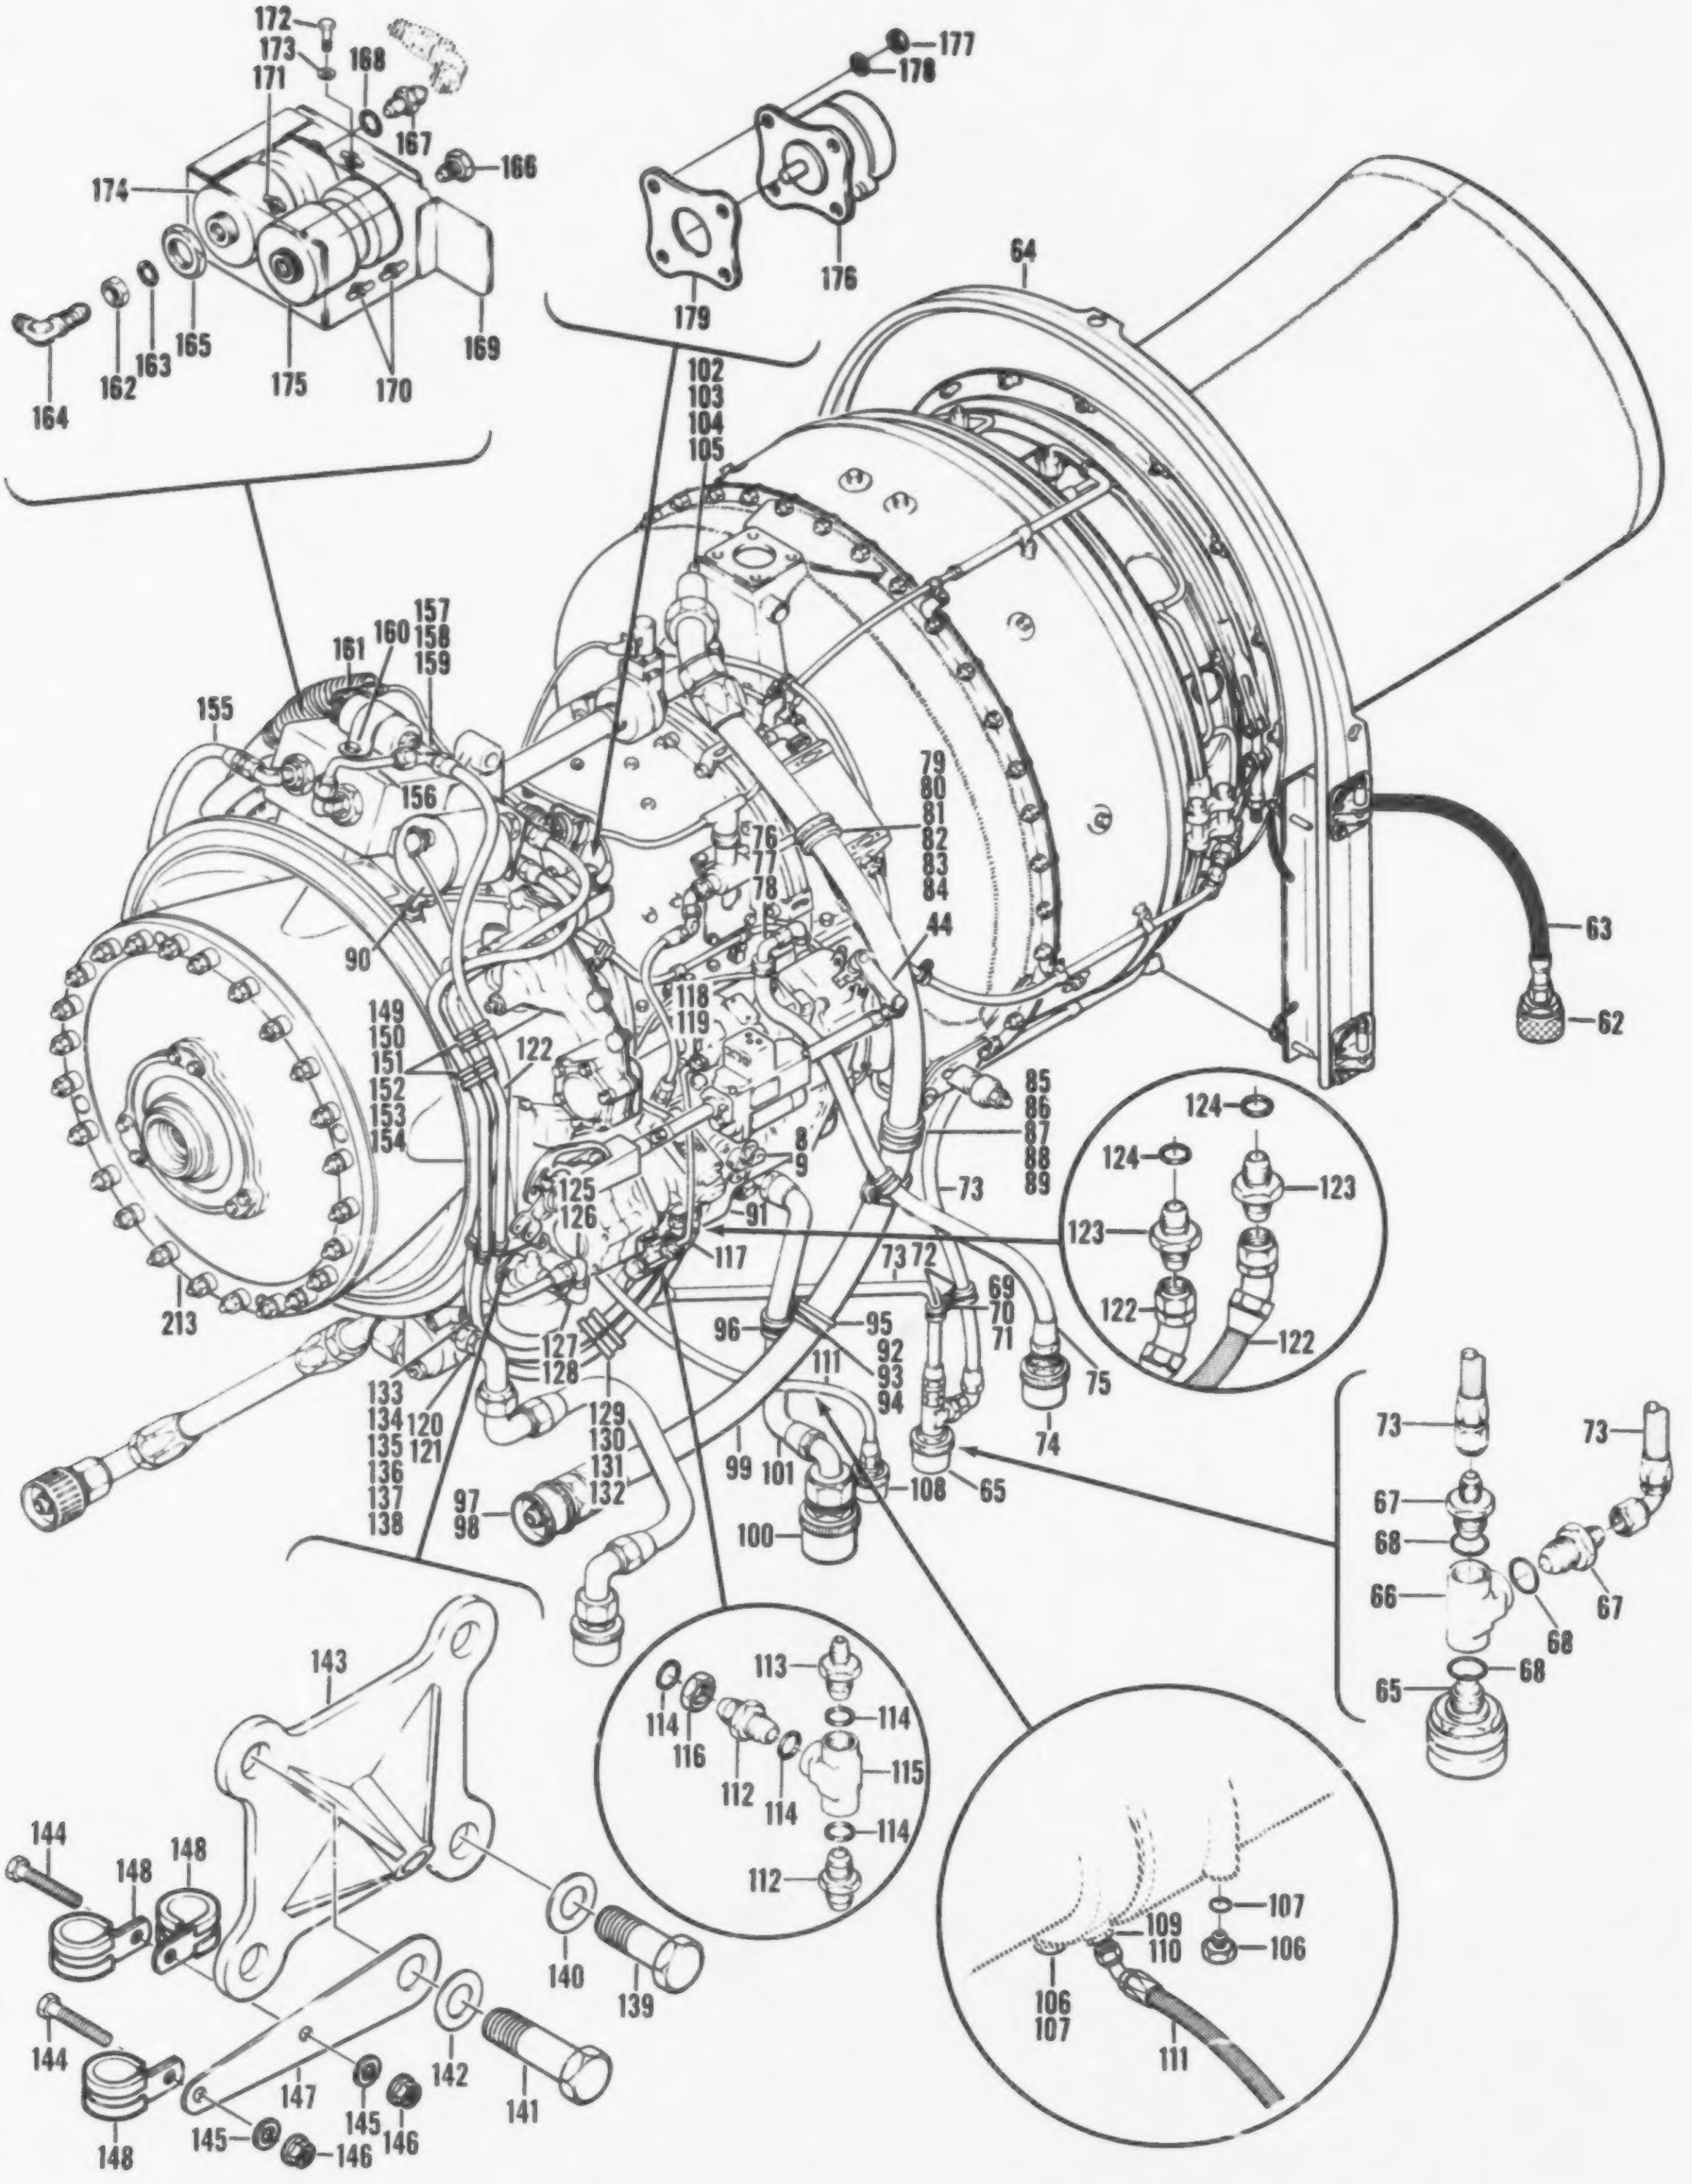
172
173
171
168
167
166
174
164
162
163
165
175
170
169
177
178
176
179
102
103
104
105
64
161
160
157
158
159
155
156
79
80
81
82
83
84
76
77
78
44
63
62
90
149
150
151
152
153
154
122
118
119
85
86
87
88
89
124
124
123
123
8
9
73
125
126
91
117
123
122
122
213
73
72
69
70
71
96
95
92
93
94
111
75
74
127
128
133
134
135
136
137
138
120
121
129
130
131
132
97
98
99
101
100
108
65
73
73
67
68
66
67
68
68
65
143
113
114
114
116
112
114
115
114
112
107
109
110
106
106
107
111
144
148
148
140
139
144
147
142
141
145
146
148
145
146

Figure 97. Engine Assembly (Sheet 2 of 3)

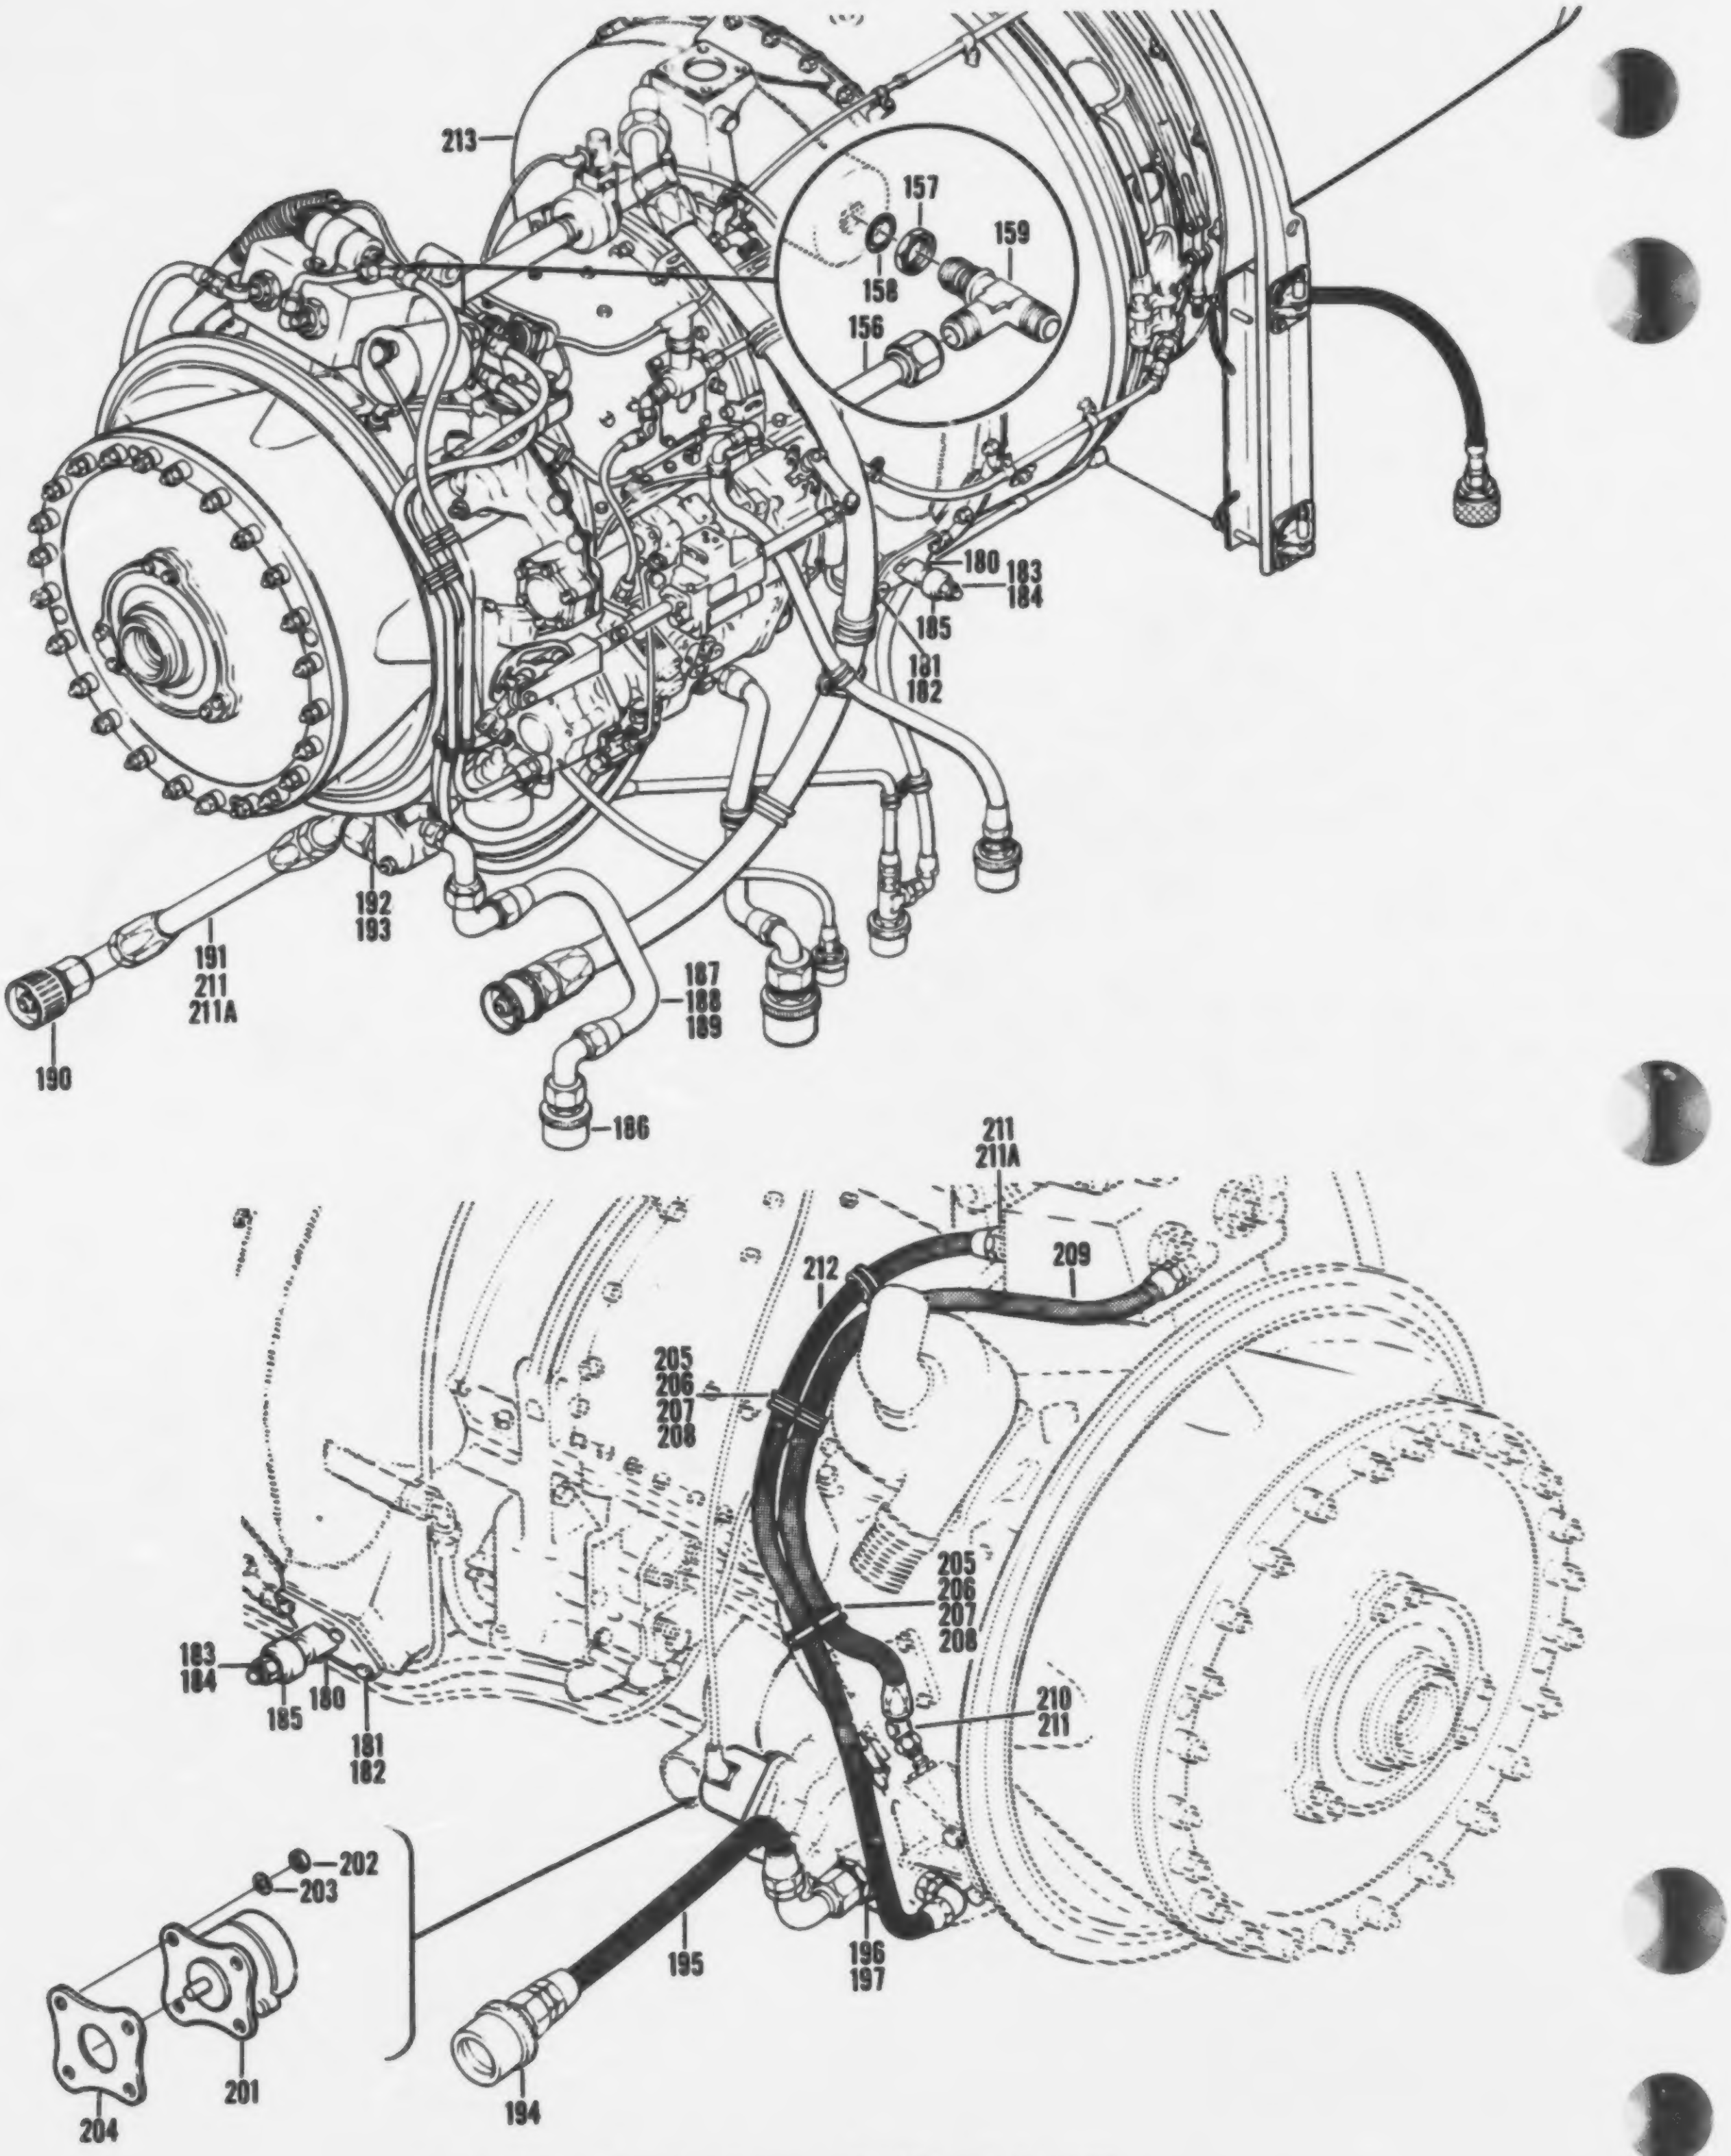
213
157
159
158
156
180
183
184
185
181
182
192
193
191
211
211A
190
187
188
189
186
211
211A
209
212
205
206
207
208
205
206
207
208
183
184
185
180
181
182
210
211
202
203
195
196
197
201
204
194

Figure 97. Engine Assembly (Sheet 3 of 3)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
97		AFOFF		97499	204-060-005-3	ENGINE ASSEMBLY USBL EFF 61-741 THRU 61-803 SEE FIG.95 FOR NHA.........UHB	EA	1
97		AFOFF		97499	204-061-005-9	ENGINE ASSEMBLY USBL EFF UH-1B 64-13902 & SUBSEQUENT,UH-1C 64-14101 THRU 64-14191 SEE FIG.95 FOR NHA.........UHB,UHC,UHM	EA	1
97		AFOFF		97499	204-061-005-13	ENGINE ASSEMBLY USBL EFF 65-9416 THRU 65-12772 SEE FIG.95 FOR NHA.........UHC,UHM	EA	1
97		AFOFF		97499	204-061-005-17	ENGINE ASSEMBLY USBL EFF 66-492 & SUBSEQUENT SEE FIG.95 FOR NHA.........UHC,UHM	EA	1
97	1	PA000	5340-00-658-6171	98625	19131-1812M	.COUPLING,CLAMP GROOVED.........UHB,UHC,UHM	EA	1
97	2	PAOZZ	5310-00-198-4759	72962	Z1200-054	..NUT,SELF-LOCKING,HE.........UHB,UHC,UHM	EA	2
97	3	PA000	5340-00-658-6170	98625	19131-1537M	.CLAMP ASSY.........UHB,UHC,UHM	EA	1
97	4	PAOZZ	5310-00-198-4759	72962	Z1200-054	..NUT,SELF-LOCKING,HE.........UHB,UHC,UHM	EA	2
97	5	PAOFF	1560-00-831-1446	97499	204-060-302-19	.PIPE,EXHAUST.........UHB,UHC,UHM	EA	1
97	6	PAOZZ	5305-00-150-9211	88044	AN502-10-10	.SCREW,MACHINE.........UHB,UHC,UHM	EA	1
97	7	PAOZZ	2995-00-731-8971	97499	204-060-729-1	.ARM.........UHB,UHC,UHM	EA	1
97	8	PA000	2995-00-974-9854	97499	204-060-787-3	.CAMBOX ASSEMBLY DROOP COMPENSATOR.........UHB,UHC	EA	1
97	8	PA000	2995-00-927-3549	97499	204-060-787-9	.CAMBOX ASSEMBLY DROOP COMPENSATOR.........UHM	EA	1
97	9	PAOZZ	5306-00-292-8282	88044	AN173H7A	..BOLT,CLOSE TOLERANC.........UHB,UHC,UHM	EA	1
97	9	PAOZZ		88044	AN173-17A	..BOLT,CLOSE TOLERANC.........UHB,UHC,UHM	EA	1
97	10	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT.........UHB,UHC,UHM	EA	5
97	11	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHB,UHC,UHM	EA	1
97	12	PAOZZ	5306-00-180-2744	88044	AN173-15	..BOLT,CLOSE TOLERANC.........UHB,UHC,UHM	EA	1
97	13	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT.........UHB,UHC,UHM	EA	2
97	14	PAOZZ	5365-00-980-1913	97499	120-008C11-7	..SHIM.........UHB,UHC,UHM	EA	4
97	15	PAOZZ	5310-00-285-2177	88044	AN320-3	..NUT,PLAIN,SLOTTED.........UHB,UHC,UHM	EA	1
97	16	PAOZZ	5315-00-234-1856	96906	MS24665-155	..PIN,COTTER.........UHB,UHC,UHM	EA	1
97	16A	A0000		97499	204-060-787-7	..CAM BOX ASSEMBLY.........UHB,UHC	EA	1
97	16A	A0000	2995-00-239-3669	97499	204-060-787-5	..CAM BOX ASSEMBLY.........UHM	EA	1
97	17	PAOZZ	5320-00-117-6953	96906	MS20426AD4-8	...RIVET,SOLID.........UHB,UHC,UHM	LB	1
97	18	PA000	2995-00-898-8953	97499	204-060-779-1	...BELL CRANK ASSEMBLY.........UHB,UHC,UHM	EA	1
97	19	PAOZZ	3110-00-042-4568	96906	MS27644-3	....BEARING,BALL,AIRFRA.........UHB,UHC,UHM	EA	1
97	20	PAOZZ	3120-00-891-8445	97499	23S5-3A	....BUSHING,SLEEVE.........UHB,UHC,UHM	EA	1
97	21	PAOZZ	2915-00-980-1845	97499	204-061-709-1	...CAM DROOP COMPENSATOR.........UHB,UHC	EA	1
97	22	PAOZZ	1560-00-898-0008	97499	204-061-705-1	...CAM DROOP COMPENSATOR.........UHM	EA	1
97	23	PAOZZ	5306-00-141-4524	88044	AN173H5A	..BOLT,CLOSE TOLERANC.........UHB,UHC,UHM	EA	1
97	24	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT.........UHB,UHC,UHM	EA	1
97	25	PAOZZ	1560-00-757-1681	97499	204-060-784-1	..WASHER,SERRATED.........UHB,UHC,UHM	EA	1
97	26	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHB,UHC,UHM	EA	1
97	27	PAOZZ	3110-00-027-8758	96906	MS27641-3	..BEARING,BALL,AIRFRA.........UHB,UHC,UHM	EA	1
97	28	PAOZZ	5315-00-834-3828	97499	204-060-785-1	..PIN,STRAIGHT HEADLESS.........UHB,UHC,UHM	EA	1
97	29	PAOZZ	1680-00-993-5195	97499	204-060-783-7	..SLIDER,DROOP COMPENSATOR.........UHB,UHC,UHM	EA	1
97	30	PAOZZ	1560-00-895-4435	97499	204-060-778-1	..HOUSING,DROOP COMPENSATOR.........UHB,UHC,UHM	EA	1
97	31	PAOZZ	1560-00-849-4193	97499	204-060-786-1	..BRACKET,DROOP COMPE.........UHB,UHC,UHM	EA	1
97	32	PAOZZ	5306-00-263-3514	80205	NAS464-4-9	.BOLT,SHEAR.........UHB,UHC,UHM	EA	1

SECTION II

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
97	33	PAOZZ	5310-00-531-9515	88044	AN960C416	.WASHER,FLAT	UHM	EA	1
97	34	PAOZZ	5310-00-141-3139	78189	3539-14-2	.WASHER,SPRING TENSION	UHM	EA	1
97	35	PAOZZ	5310-00-721-4434	88044	AN320C4	.NUT,PLAIN,SLOTTED HEXAGON	UHM	EA	1
97	36	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER	UHM	EA	1
97	37	PAOZZ	5306-00-680-6546	80205	NAS1003-10	.BOLT,MACHINE	UHM	EA	1
97	38	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT	UHM	EA	2
97	39	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT	UHM	EA	1
97	40	PAOZZ	5310-00-264-1240	88044	AN320C3	.NUT,PLAIN,SLOTTED HEXAGON	UHM	EA	1
97	41	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER	UHM	EA	1
97	42	PAOZZ	5306-00-182-1854	88044	AN3CH5A	.BOLT,MACHINE	UHM	EA	1
97	43	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT	UHM	EA	1
97	44	PAOZZ	2995-00-893-1216	97499	204-060-765-7	.LEVER ASSEMBLY MECHANICAL LINEAR	UHM	EA	1
97	45	PAOFF	2995-00-990-3163	97499	204-060-762-1	.ACTUATOR,ELECTRO- MECHANICAL LINEAR	UHM	EA	1
97	45	PAOFF	2995-00-003-5906	70210	540264-2-1	.ACTUATOR,LINEAR SEE FIG 108 FOR BREAKDOWN	UHM	EA	1
97	45	PAOFF	2995-00-134-4683	83777	700103G2	.ACTUATOR,LINEAR SEE FIG 109 FOR BREAKDOWN	UHM	EA	1
97	45	PAOFF	2995-00-990-3163	25140	65A124	.ACTUATOR,LINEAR SEE FIG 110 FOR BREAKDOWN	UHM	EA	1
97	45	PAOFF	2995-00-990-3163	05624	SYLC9190-10	.ACTUATOR,LINEAR SEE FIG 110A FOR BREAKDOWN	UHM	EA	1
97	46	PAOZZ	3120-00-874-2676	05624	CYRB251	..BEARING,PLAIN,ROD END U/O PN SYLC9190-10	UHM	EA	1
97	47	PAOZZ	5310-00-870-0745	05624	DYRF14	..NUT,PLAIN,HEXAGON U/O PN SYLC9190-10	UHM	EA	1
97	48	PAOZZ	5940-00-879-7074	05624	SYLC526	..COVER,TERMINAL BOARD U/O PN SYLC9190-10	UHM	EA	1
97	49	PAOZZ	5305-00-941-6403	96906	MS35275-208	..SCREW,MACHINE	UHM	EA	2
97	50	PAOZZ	5310-00-579-5554	96906	MS35333-35	..WASHER,LOCK	UHM	EA	2
97	51	PAOZZ	5310-00-815-4847	97942	1JA2699H12	..NUT,PLAIN,HEXAGON U/O PN SYLC9190-10	UHM	EA	3
97	52	PAOZZ	5310-00-579-0079	96906	MS35333-37	..WASHER,LOCK U/O PN SYLC9190-10	UHM	EA	3
97	53	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON	UHM	EA	2
97	54	PAOZZ	5330-00-263-8028	96906	MS29512-04	.PACKING,PREFORMED	UHM	EA	2
97	55	PBOZZ	5310-00-733-8399	97499	204-060-U56-1	.NUT,PLAIN,HEXAGON	UHM	EA	2
97	56	PAOZZ	5310-00-167-0805	88044	AN960C716	.WASHER,FLAT	UHM	EA	2
97	57	PAOZZ	5310-00-275-0616	88044	AN960C716L	.WASHER,FLAT	UHM	EA	2
97	58	PAOZZ	4730-00-720-0288	96906	MS24394-4	.ELBOW,TUBE	UHM	EA	2
97	59	PAOZZ	5930-00-076-9835	97499	204-060-008-1	.SWITCH,PRESSURE	UHM	EA	1
97	60	PAOZZ	5306-00-182-2015	88044	AN4H4A	.BOLT,MACHINE	UHM	EA	2
97	61	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT	UHM	EA	2
97	62	PAOZZ	4730-00-773-2619	00624	3755-4	.COUPLING HALF,QUICK DISCONNECT	UHM	EA	1
97	63	PAOZZ	2840-00-939-7586	78570	S21704-1400W	.HOSE ASSEMBLY TURBINE	UHM	EA	1
97	64	PBOFF	1560-00-602-3428	97499	204-060-884-1	.FIREWALL ASSY,AFT SEE FIG. 101 FOR BREAKDOWN	UHM	EA	1
97	65	PAOZZ	4730-00-773-2620	00624	3755-6	.COUPLING HALF,QUICK DISCONNECT	UHM	EA	1
97	66	PAOZZ	4730-00-277-5026	88044	AN938D6	.TEE,BOSS	UHM	EA	1
97	67	XDOZZ		88044	AN919-6	.REDUCER,TUBE	UHM	EA	2
97	68	PCOZZ	5330-00-263-8030	96906	MS29512-06	.PACKING,PREFORMED	UHM	EA	3
97	69	PAOZZ	5306-00-182-2067	88044	AN3H4A	.BOLT,MACHINE	UHM	EA	1
97	70	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHM	EA	1

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.							
97	71	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.............UHB,UHC,UHM	EA	1
97	72	PAOZZ	5340-00-989-4570	81996	EAB700D13	.CLAMP,LOOP.............UHB,UHC,UHM	EA	2
97	72	PAOZZ	5340-00-990-9301	81996	EAB700D7	.CLAMP,LOOP.............UHB,UHC,UHM	EA	2
97	73	MFOZZ		96906	MS8000E190C	.HOSE ASSEMBLY.............UHB,UHC,UHM	EA	2
97	74	PAOZZ	4730-00-773-2619	00624	3755-4	.COUPLING HALF,QUICK DISCONNECT.............UHB,UHC,UHM	EA	1
97	75	MFOZZ		00624	640309-4-0250	.HOSE ASSEMBLY U/O PN 204-060-005-3.............UHB	EA	1
97	75	MFOZZ	4720-00-176-4592	96906	MS8000E250C	.HOSE ASSEMBLY NONMETALLIC.............UHB,UHC,UHM	EA	1
97	76	PAOZZ	4730-00-720-0288	96906	MS24394-4	.ELBOW,TUBE.............UHB,UHC,UHM	EA	1
97	77	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON.............UHB,UHC,UHM	EA	V
97	78	PCOZZ	5330-00-166-5994	96906	MS29512-04	.PACKING,PREFORMED.............UHB,UHC,UHM	EA	1
97	79	PAOZZ	5306-00-151-0778	88044	AN3-16A	.BOLT,MACHINE.............UHB,UHC,UHM	EA	1
97	80	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.............UHB,UHC,UHM	EA	1
97	81	PAOZZ	5365-00-732-5027	80205	NAS43HT3-82	.SPACER,SLEEVE.............UHB,UHC,UHM	EA	1
97	82	PAOZZ	5340-00-721-8182	88044	AN743-13	.BRACKET,ANGLE.............UHB,UHC,UHM	EA	1
97	83	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.............UHB,UHC,UHM	EA	1
97	84	PAOZZ	5340-00-989-4575	81996	EAB700D21	.CLAMP,LOOP.............UHB,UHC,UHM	EA	1
97	85	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE.............UHB,UHC,UHM	EA	1
97	86	PAOZZ	2915-00-625-0075	97499	204-060-014-1	.CLIP,ELECTRICAL.............UHB,UHC,UHM	EA	1
97	87	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.............UHB,UHC,UHM	EA	1
97	88	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.............UHB,UHC,UHM	EA	1
97	89	PAOZZ	5340-00-989-4575	81996	EAB700D21	.CLAMP,LOOP.............UHB,UHC,UHM	EA	1
97	90	XCFZZ		97499	204-075-020-1	.ELECTRICAL INSTL U/O PN 204-060-005-3 SEE FIG.279 FOR BREAKDOWN.............UHB	EA	1
97	90	XCFZZ		97499	204-075-042-5	.ELECTRICAL INSTL USBL EFF (UH-1B) 63-8500 & SUBSEQUENT,(UH-1C) 64-14101 THRU 65-9524 SEE FIG.280 FOR BREAKDOWN.............UHB,UHC,UHM	EA	1
97	90	XCFZZ		97499	204-075-042-7	.ELECTRICAL INSTL USBL-EFF 65-9525 & SUBSEQUENT SEE FIG.280 FOR BREAKDOWN.............UHC,UHM	EA	1
97	91	XCFZZ		97499	204-060-457-1	.STARTER INSTL U/O PN 204-060-005-1,-3,-5, & -13,PN 204-061-005-1 & -9 SEE FIG.286 FOR BREAKDOWN.............UHB	EA	1
97	91	XCFZZ		97499	204-060-457-5	.STARTER INSTL U/O PN 204-061-005-13 SEE FIG.286 FOR BREAKDOWN.............UHC,UHM	EA	1
97	91	XCFZZ		97499	204-060-457-9	.STARTER INSTL U/O PN 204-061-005-17 SEE FIG.286 FOR BREAKDOWN.............UHC,UHM	EA	1
97	92	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE.............UHB,UHC,UHM	EA	1
97	93	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.............UHB,UHC,UHM	EA	1
97	94	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.............UHB,UHC,UHM	EA	1
97	95	PAOZZ	5340-00-989-4575	81996	EAB700D21	.CLAMP,LOOP.............UHB,UHC,UHM	EA	1
97	96	PAOZZ	5340-00-989-4570	81996	EAB700D13	.CLAMP,LOOP.............UHB,UHC,UHM	EA	1
97	96	PAOZZ	5340-00-548-7757	81996	EAB700-23	.CLAMP,LOOP.............UHB,UHC,UHM	EA	1
97	96	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP.............UHB,UHC,UHM	EA	1
97	97	PA000	4730-00-991-8552	00624	375525-16	.COUPLING HALF, QUICK DISCONNECT.............UHB,UHC,UHM	EA	1
97	98	PCOZZ	5330-00-729-4992	96906	MS28775-027	..PACKING,PREFORMED.............UHB,UHC,UHM	EA	1
97	99	PAOZZ	4720-00-738-5877	78570	S34716-4300W110	.HOSE ASSEMBLY,METAL.............UHB,UHC,UHM	EA	1
97	100	PAOZZ	4730-00-076-0561	00624	AE93532J	.COUPLING HALF,SELFS.............UHB,UHC,UHM	EA	1
97	101	MFOZZ		96906	MS8000J140E225	.HOSE ASSEMBLY U/O PN 204-060-005-1 & -3.............UHB	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
97	101	MFOZZ		96906	MS8000J140F197	.HOSE ASSEMBLY..........UHB,UHC,UHM	EA	1
97	102	PAOZZ	5306-00-180-2779	88044	AN4CH5A	.BOLT,MACHINE..........UHB,UHC,UHM	EA	4
97	103	PAOZZ	5310-00-531-9515	88044	AN960C416	.WASHER,FLAT..........UHB,UHC,UHM	EA	4
97	104	PAOZZ	5330-00-078-3882	97499	204-060-485-1	.GASKET..........UHB,UHC,UHM	EA	1
97	105	PAOZZ	4730-00-034-3722	00624	500516-16C	.ELBOW,FLANGE TO TUB..........UHB,UHC,UHM	EA	1
97	106	PAOZZ	5365-00-837-8169	96906	MS24391-4L	.PLUG,MACHINE THREAD..........UHB,UHC,UHM	EA	2
97	107	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED..........UHB,UHC,UHM	EA	2
97	108	PAOZZ	4730-00-773-2623	00624	375504-4	.COUPLING HALF,QUICK DISCONNECT..........UHB,UHC,UHM	EA	1
97	109	MFOZZ	4730-00-901-8174	97499	110-033-1	.REDUCER,TUBE..........UHB,UHC,UHM	EA	1
97	109	PAOZZ	4730-00-828-9974	96906	MS24399D2	.REDUCER,TUBE..........UHB,UHC,UHM	EA	1
97	110	PCOZZ	5330-00-579-7548	80205	NAS617-2	.PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
97	111	MFOZZ	4720-00-941-5022	96906	MS8000E1408	.HOSE ASSY NONMETALLIC..........UHB,UHC,UHM	EA	1
97	112	PBOZZ	4730-00-684-6911	96906	MS24392-4	.NIPPLE,TUBE..........UHB,UHC,UHM	EA	3
97	113	PAOZZ	4730-00-720-0987	96906	MS24393-4	.NIPPLE,TUBE..........UHB,UHC,UHM	EA	1
97	114	PCOZZ	5330-00-166-5994	96906	MS29512-04	.PACKING,PREFORMED..........UHB,UHC,UHM	EA	4
97	115	PAOZZ	4730-00-278-2780	88044	AN938-4	.TEE,BOSS..........UHB,UHC,UHM	EA	1
97	116	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1
97	117	MFOZZ	4710-00-831-1439	97499	204-060-082-1	.TUBE ASSEMBLY,METAL..........UHB,UHC,UHM	EA	1
97	118	PAOZZ	4730-00-235-1498	88044	AN919-2	.REDUCER,TUBE..........UHB,UHC,UHM	EA	1
97	119	PCOZZ	5330-00-263-8011	96906	MS29512-03	.PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
97	120	PAOZZ	4730-00-886-1400	00624	502383-10C	.ELBOW,TUBE TO BOSS..........UHB,UHC,UHM	EA	1
97	121	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
97	122	MFOZZ		00624	245-640313F0330	.HOSE ASSEMBLY U/O PN 204-060-005-1 & -3..........UHB	EA	1
97	122	MFOZZ	4720-00-855-9069	00624	210-640313F0347	.HOSE ASSEMBLY U/O PN 204-060-005-1 & -3..........UHB	EA	1
97	122	MFOZZ	4720-00-068-0419	97499	70-009F245Z347	.HOSE ASSY NONMETALLIC U/O PN 204-060-005-5,-13 & 204-061-005-1,-9,-13 & -17..........UHB,UHC,UHM	EA	2
97	123	PAOZZ	4730-00-675-3239	97499	204-060-670-1	.RESTRICTOR,FLUID FLOW..........UHB,UHC,UHM	EA	2
97	124	PCOZZ	5330-00-263-8028	96906	MS29512-04	.PACKING,PREFORMED..........UHB,UHC,UHM	EA	2
97	125	PAOZZ	4730-00-720-0288	96906	MS24394-4	.ELBOW,TUBE..........UHB,UHC,UHM	EA	1
97	126	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1
97	127	PAOZZ	4730-00-939-7395	97499	204-060-031-15	.ELBOW,TUBE..........UHB,UHC,UHM	EA	1
97	128	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
97	129	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE..........UHB,UHC,UHM	EA	1
97	130	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	1
97	131	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHB,UHC,UHM	EA	1
97	132	PAOZZ	5340-00-989-4570	81996	EAB700013	.CLAMP,LOOP..........UHB,UHC,UHM	EA	2
97	133	PAOZZ	5306-00-182-2063	88044	AN3H12A	.BOLT,MACHINE..........UHB,UHC,UHM	EA	1
97	134	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	1
97	135	PAOZZ	5365-00-294-0680	80205	NAS43D03-48	.SPACER,SLEEVE..........UHB,UHC,UHM	EA	1
97	136	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHB,UHC,UHM	EA	1
97	137	PAOZZ	5340-00-989-4570	81996	EAB700013	.CLAMP,LOOP..........UHB,UHC,UHM	EA	1
97	138	PAOZZ	5340-00-533-3515	81996	EAB700-8	.CLAMP,LOOP..........UHB,UHC,UHM	EA	1
97	138	XDOZZ	5340-00-989-4569	81996	EAB70009	.CLAMP,LOOP U/O PN 204-060-005-3..........UHB	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
97	138	PBOZZ	5340-00-533-3558	81996	EAB700-11	.CLAMP,LOOP.....UHB,UHC,UHM	EA	1
97	139	PAOZZ	5306-00-582-9020	88044	AN8CH6	.BOLT,MACHINE.....UHB,UHC,UHM	EA	2
97	140	PAOZZ	5310-00-167-0839	88044	AN960-816L	.WASHER,FLAT.....UHB,UHC,UHM	EA	2
97	141	PAOZZ	5306-00-582-6911	88044	AN8CH10	.BOLT,MACHINE.....UHB,UHC,UHM	EA	2
97	142	PAOZZ	5310-00-167-0823	88044	AN960-816	.WASHER,FLAT.....UHB,UHC,UHM	EA	2
97	143	PAOZZ	2995-00-731-7957	97499	204-060-161-1	.TRUNNION,LEFT HAND.....UHB,UHC,UHM	EA	1
97	144	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE.....UHB,UHC,UHM	EA	2
97	145	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.....UHB,UHC,UHM	EA	2
97	146	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.....UHB,UHC,UHM	EA	2
97	147	MFOZZ	1560-00-975-7133	97499	205-060-020-7	.BRACKET.....UHB,UHC,UHM	EA	1
97	147	PAOZZ	1560-00-875-7995	97499	204-060-191-1	.BRACKET,SUPPORT.....UHB,UHC,UHM	EA	1
97	147	PAOZZ	2915-00-967-1740	97499	205-060-020-5	.SUPPORT,ENGINE ASSY.....UHB,UHC,UHM	EA	1
97	148	PAOZZ	5340-00-989-4570	81996	EAB700D13	.CLAMP,LOOP.....UHB,UHC,UHM	EA	3
97	148	PAOZZ	5340-00-990-9301	81996	EAB700D7	.CLAMP,LOOP.....UHB,UHC,UHM	EA	3
97	149	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE.....UHB,UHC,UHM	EA	3
97	150	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.....UHB,UHC,UHM	EA	3
97	151	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.....UHB,UHC,UHM	EA	3
97	152	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE.....UHB,UHC,UHM	EA	1
97	152	PAOZZ	5340-00-721-8182	88044	AN743-13	.BRACKET,ANGLE.....UHB	EA	1
97	153	MFOZZ	5340-00-912-1903	97499	20-032-2	.BRACKET,ANGLE.....UHB,UHC,UHM	EA	1
97	154	PAOZZ	5340-00-989-4570	81996	EAB700D13	.CLAMP,LOOP.....UHB,UHC,UHM	EA	4
97	154	PAOZZ	5340-00-990-9301	81996	EAB700D7	.CLAMP,LOOP.....UHB,UHC,UHM	EA	4
97	155	MFOZZ	4720-00-740-6463	00624	640309-4-0277	.HOSE ASSEMBLY U/O PN 204-060-005-1 & -3.....UHB	EA	1
97	155	MFOZZ		96906	MS87028E331C	.HOSE ASSEMBLY U/O PN 204-060-005-5 & -13.....UHB	EA	1
97	155	XDOZZ		96906	MS8000E340C	.HOSE ASSY NONMETALLIC U/O PN 204-061-005-1,-9,-13 & -17.....UHB,UHC,UHM	EA	1
97	156	MFOZZ	4710-00-738-8359	97499	204-060-098-1	.TUBE ASSEMBLY,METAL.....UHB,UHC,UHM	EA	1
97	157	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON.....UHB,UHC,UHM	EA	1
97	158	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED.....UHB,UHC,UHM	EA	1
97	159	PAOZZ	4730-00-804-9310	96906	MS24390-4	.TEE,TUBE.....UHB,UHC,UHM	EA	1
97	160	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE.....UHB,UHC,UHM	EA	2
97	161	PAOZZ	5930-01-106-9351	97499	204-060-541-101	.SWITCH,PRESSURE.....UHB,UHC,UHM	EA	1
97	162	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON.....UHB,UHC,UHM	EA	2
97	163	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED.....UHB,UHC,UHM	EA	2
97	164	PAOZZ	4730-00-720-0288	96906	MS24394-4	.ELBOW,TUBE.....UHB,UHC,UHM	EA	2
97	165	MFOZZ	5310-00-601-7515	43999	270-580292-12	.NUT,PLAIN,HEXAGON.....UHB,UHC,UHM	EA	2
97	166	PAOZZ	1560-00-716-8554	97499	100-016-1	.PLUG,VENTILLATION.....UHB,UHC,UHM	EA	1
97	167	PAOZZ	4730-00-720-0987	96906	MS24393-4	.NIPPLE,TUBE.....UHB,UHC,UHM	EA	1
97	168	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED.....UHB,UHC,UHM	EA	1
97	169	PAOOO	2995-00-738-8358	97499	204-060-093-1	.SUPPORT ASSEMBLY.....UHB,UHC,UHM	EA	1
97	170	PAOZZ	5310-00-771-7348	96906	MS21048-3	..NUT,SELF-LOCKING,PL.....UHB,UHC,UHM	EA	2
97	171	PAOZZ	5310-00-771-7349	96906	MS21048-4	..NUT,SELF-LOCKING,PL.....UHB,UHC,UHM	EA	4
97	172	PAOZZ	5306-00-582-9020	88044	AN8CH6	.BOLT,MACHINE.....UHB,UHC,UHM	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
97	173	PAOZZ	5310-00-167-0806	88044	AN960C816	.WASHER,FLAT....................UHB,UHC,UHM	EA	4
97	174	PAOZZ	6620-00-553-8854	19500	218-50A	.TRANSMITTER,PRESSUR TORQUEMETER OIL-AERNO 61-2487 50 PSI ....UHB,UHC	EA	1
97	175	PAOZZ	6620-00-067-4946	81349	TRU66A	TRANSMITTER,PRESSUR OIL-AERNO 61-2497 100 PSI QTY 2 REQUIRED ON UH-1M....................UHB,UHC,UHM	EA	1
97	176	PAOZZ	6620-00-585-1503	25140	22A554	.GENERATOR,TACHOMETE....................UHB,UHC,UHM	EA	1
97	177	PAOZZ	5310-00-982-4988	96906	MS21045C4	.NUT,SELF-LOCKING,HE....................UHB,UHC,UHM	EA	4
97	178	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT....................UHB,UHC,UHM	EA	4
97	179	PAOZZ	5330-00-023-7623	96906	MS9134-01	.GASKET....................UHB,UHC,UHM	EA	1
97	180	PAOZZ	2995-00-775-7747	97499	204-060-152-1	.FITTING ASSY,ENGINE MOUNTING....................UHB,UHC,UHM	EA	2
97	181	PAOZZ	5306-00-725-6614	88044	AN6CH6	.BOLT,MACHINE....................UHB,UHC,UHM	EA	8
97	182	PAOZZ	5310-00-183-4355	88044	AN960C616L	.WASHER,FLAT....................UHB,UHC,UHM	EA	8
97	183	PAOZZ	5310-00-881-0943	96906	MS21043-6	.NUT,SELF-LOCKING,EX....................UHB,UHC,UHM	EA	2
97	184	PAOZZ	5310-00-167-0804	88044	AN960C616	WASHER,FLAT....................UHB,UHC,UHM	EA	2
97	185	PAOZZ	3120-00-878-4389	97499	204-061-100-1	.BEARING,PLAIN,SELF- ALIGNING....................UHB,UHC,UHM	EA	2
97	186	PAOZZ	4730-00-773-2621	00624	375504-12	.COUPLING HALF,QUICK DISCONNECT....................UHB,UHC,UHM	EA	1
97	187	MFOZZ		96906	MS8000K200F096	.HOSE ASSEMBLY U/O PN 204-060-005-1 & -3....................UHB	EA	1
97	188	XDOZZ		00624	900591A24C	.CLAMP,HOSE....................UHB,UHC,UHM	EA	2
97	189	MFOZZ		96906	MS8000K106M135	.HOSE ASSEMBLY....................UHB,UHC,UHM	EA	1
97	190	PAOZZ	4730-00-773-2622	00624	375504-16	.COUPLING HALF,QUICK DISCONNECT....................UHB,UHC,UHM	EA	1
97	191	MFOZZ		96906	MS8000M140M260	.HOSE ASSEMBLY....................UHB,UHC,UHM	EA	1
97	192	XDOZZ		97499	204-060-045-1	.ADAPTER,STRAIGHT....................UHB,UHC,UHM	EA	1
97	193	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED....................UHB,UHC,UHM	EA	1
97	194	PAOZZ	4730-00-773-2621	00624	375504-12	.COUPLING HALF,QUICK DISCONNECT....................UHB,UHC,UHM	EA	1
97	195	MFOZZ		96906	MS8000K113K	.HOSE ASSEMBLY....................UHB,UHC,UHM	EA	1
97	196	PAOZZ	4730-00-684-6914	96906	MS24392D12	.NIPPLE,TUBE....................UHB,UHC,UHM	EA	1
97	197	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED....................UHB,UHC,UHM	EA	1
97	201	PAOZZ	6620-00-585-1503	25140	22A554	.GENERATOR,TACHOMETE AERNO 61-8732....................UHB,UHC,UHM	EA	1
97	202	PAOZZ	5310-00-982-4988	96906	MS21045C4	.NUT,SELF-LOCKING,HE....................UHB,UHC,UHM	EA	4
97	203	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT....................UHB,UHC,UHM	EA	4
97	204	PAOZZ	5330-00-023-7623	96906	MS9134-01	.GASKET....................UHB,UHC,UHM	EA	1
97	205	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE....................UHB,UHC,UHM	EA	2
97	206	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT....................UHB,UHC,UHM	EA	2
97	207	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....................UHB,UHC,UHM	EA	4
97	208	PAOZZ	5340-00-989-4570	81996	EAB700D13	.CLAMP,LOOP....................UHB,UHC,UHM	EA	4
97	209	MFOZZ		96906	MS8000E250B	.HOSE ASSEMBLY....................UHB,UHC,UHM	EA	1
97	210	PAOZZ	4730-00-831-1438	97499	204-060-068-1	.RESTRICTOR ASSEMBLY....................UHB,UHC,UHM	EA	1
97	210	PAOZZ	4730-00-720-0987	96906	MS24393-4	.NIPPLE,TUBE....................UHB,UHC,UHM	EA	1
97	211	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED....................UHB,UHC,UHM	EA	4
97	211A	PAOZZ	4730-00-684-6911	96906	MS24392-4	.NIPPLE,TUBE....................UHB,UHC,UHM	EA	2
97	212	MFOZZ	4720-00-897-2536	00624	180-640307F0290	.HOSE ASSEMBLY U/O PN 204-060-005-1 & -3....................UHB	EA	1
97	212	XDOZZ	4720-00-868-6990	96906	MS8000E300E167	.HOSE ASSY, NONMETALLIC....................UHB,UHC,UHM	EA	1
97	213	PAODD	2840-00-102-3968	91547	1-000-080-13	.ENGINE,AIRCRAFT,TUR T53-L-11D SEE TM55-2840-229-23P FOR BREAKDOWN -34P/NAVAIR 02B-15AC-4 FOR BREAKDOWN........UHB,UHC	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
97	213	PAODO	2840-00-134-4803	91547	1-000-060-10	ENGINE,AIRCRAFT,TUR T53-L-13B SEE TM55-2840-229-23P FOR BREAKDOWN.......... UHM	EA	1

PAGE 16 OF REPORT-NO 5459-405 08-02-84

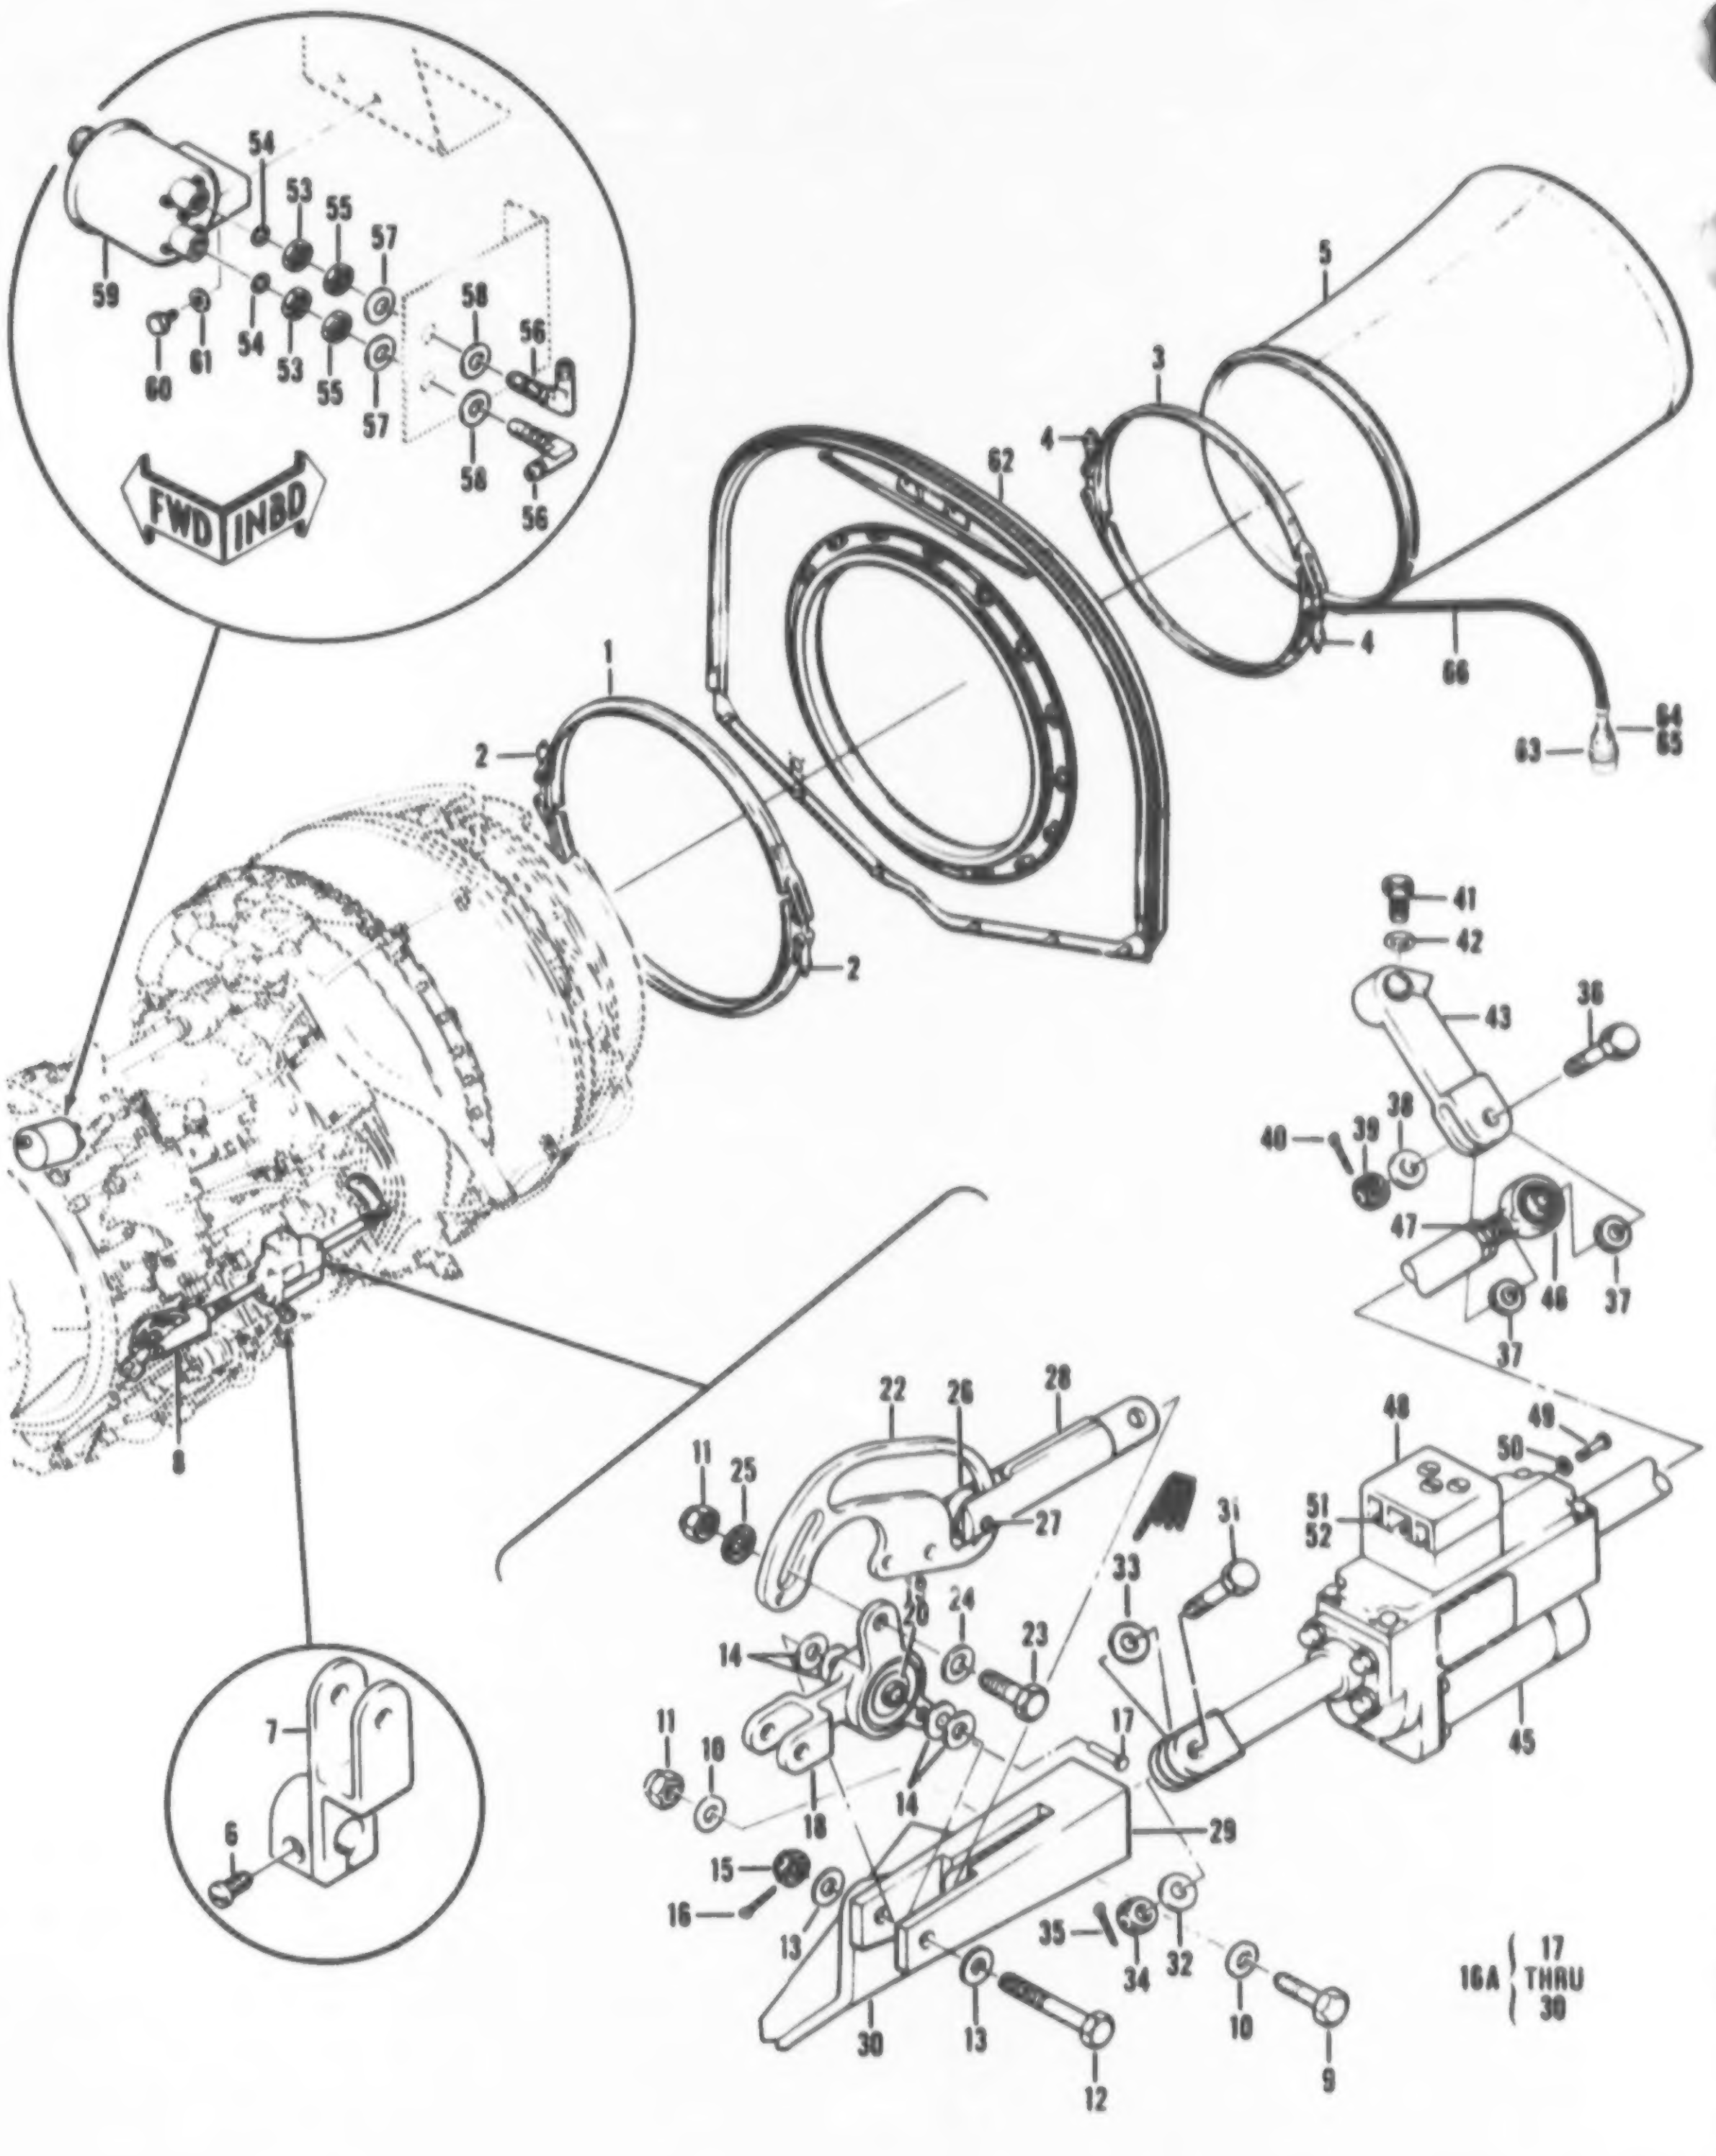
54
53
55
57
59
58
56
60
61
54
53
55
57
58
56
FWD
INBD
5
3
4
62
4
66
64
65
63
1
2
2
41
42
43
36
40
39
38
47
46
37
37
8
22
26
28
11
25
27
31
48
49
50
51
52
33
19
20
24
23
14
7
11
10
18
14
17
45
6
29
15
16
13
35
34
32
10
30
13
12
9
16A
17
THRU
30

Figure 98. Engine Assembly (Sheet 1 of 3)

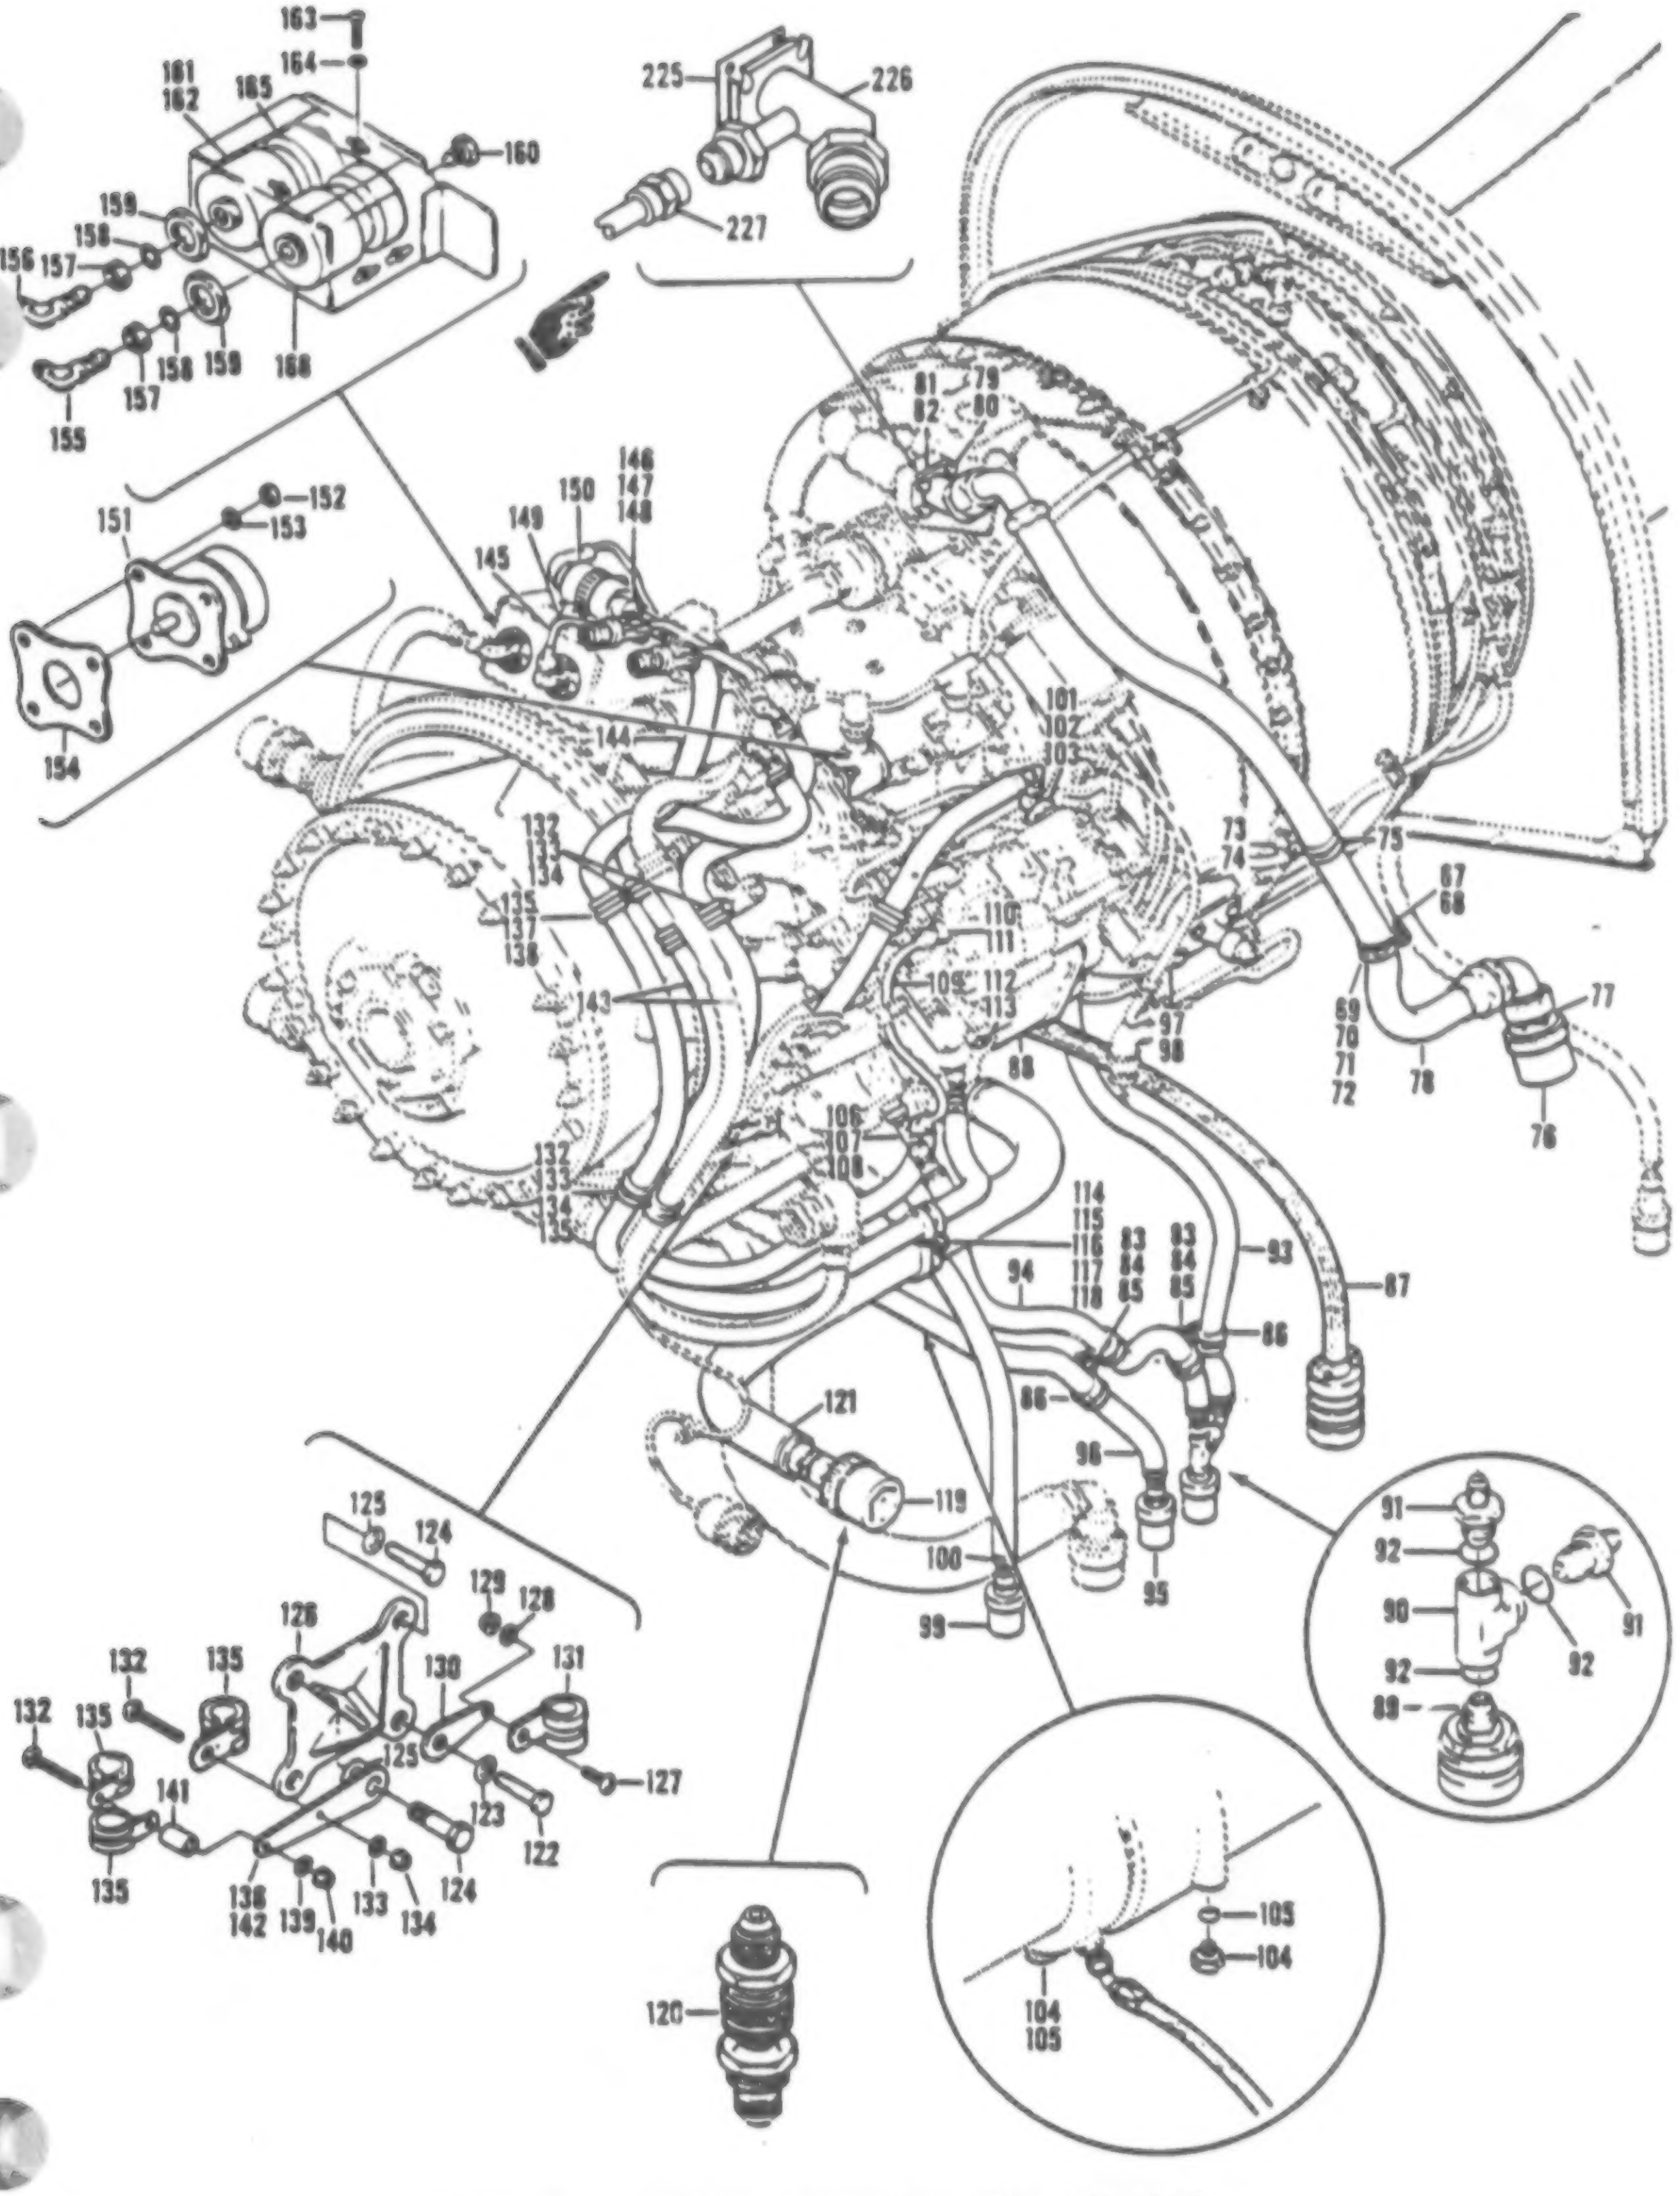
163
164
161
162
165
160
159
158
156
157
159
158
157
168
155
225
226
227
146
147
148
150
149
145
151
152
153
154
81
82
79
80
144
101
102
103
132
133
134
135
137
138
73
74
75
67
68
110
111
109
112
113
143
97
98
88
69
70
71
72
78
77
76
106
107
108
132
133
134
135
114
115
116
117
118
83
84
85
83
84
85
93
87
94
86
86
121
96
119
100
95
99
91
92
91
90
92
92
89
125
124
129
128
126
132
135
130
131
132
135
125
127
141
123
122
135
136
142
139
140
133
134
124
105
104
104
105
120

Figure 98. Engine Assembly (Sheet 2 of 3)

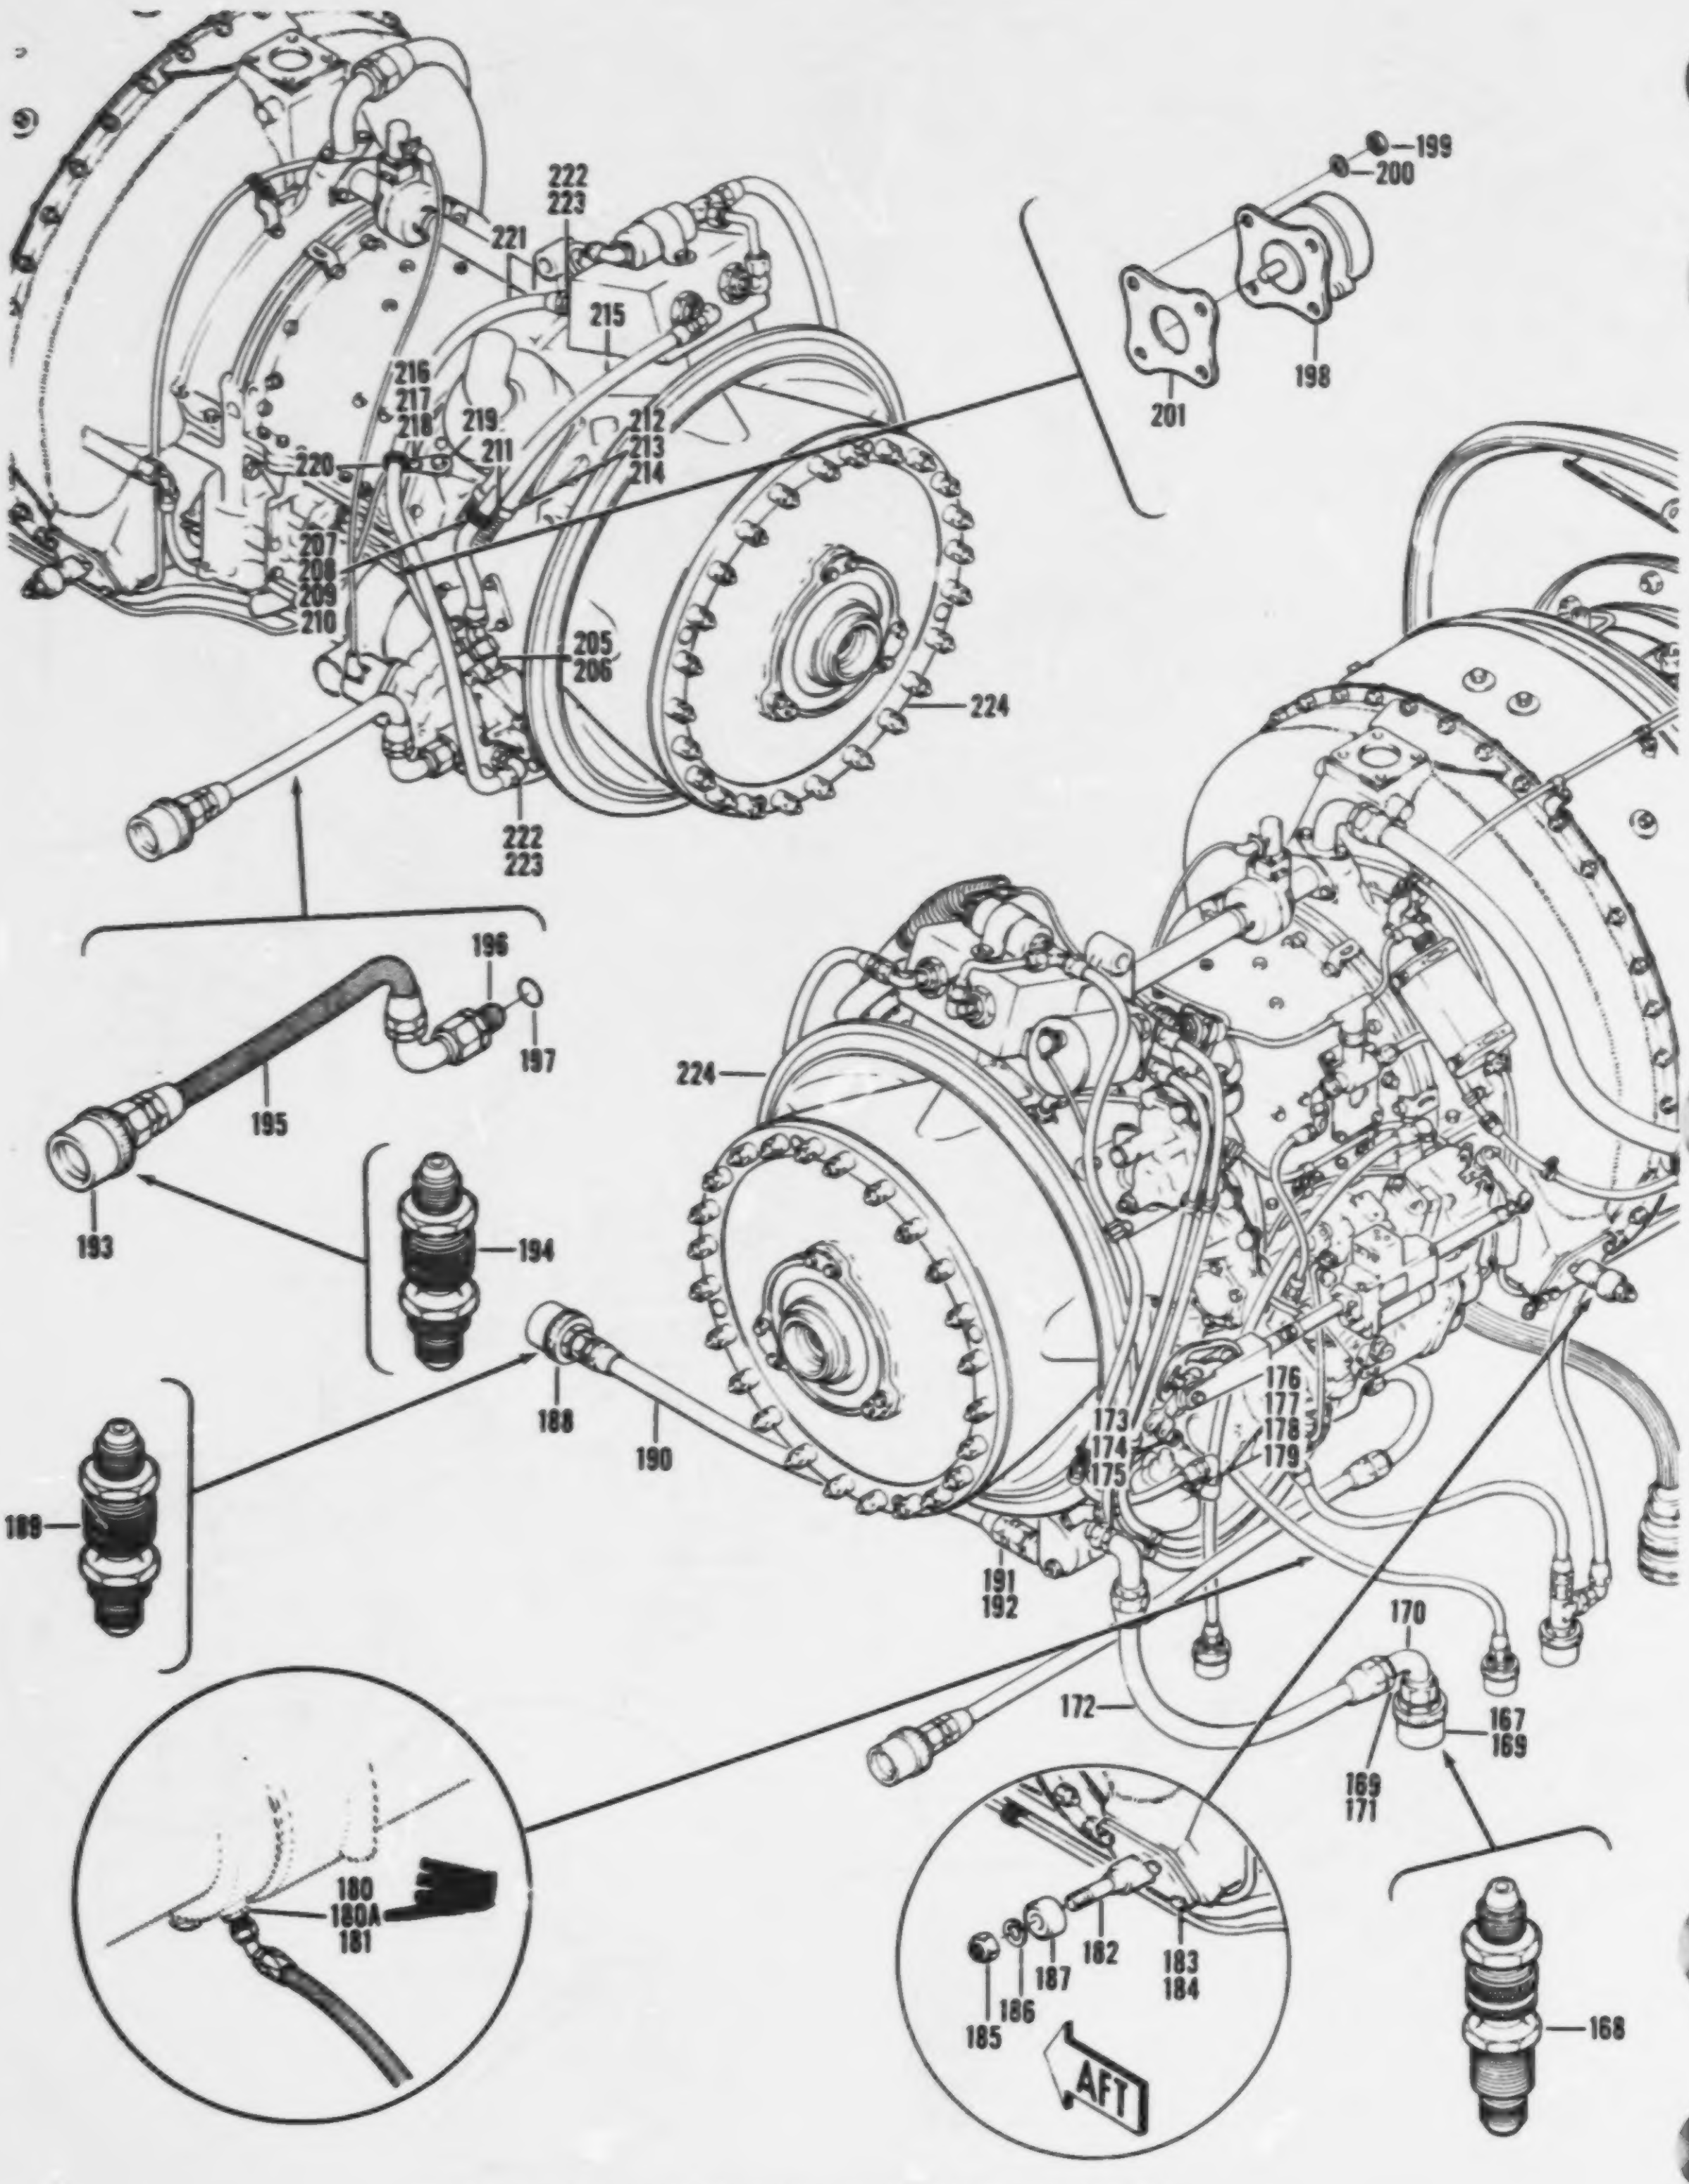
199
200
222
223
221
215
198
201
216
217
218
219
211
212
213
214
220
207
208
209
210
205
206
224
222
223
196
197
195
193
194
224
188
190
189
176
177
178
179
173
174
175
191
192
170
172
167
169
169
171
180
180A
181
182
183
184
185
186
187
AFT
168

Figure 98. Engine Assembly (Sheet 3 of 3)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 04 POWER PLANT		
98		AFOFF		97499	205-061-001-3	ENGINE ASSEMBLY USBL EFF 64-13492 THRU 64-13901 SEE FIG.96 FOR NHA....UHE,UHH,UHV,UHX	EA	1
98		AFOFF		97499	205-061-001-5	ENGINE ASSEMBLY USBL EFF 65-9565 THRU 66-12895 SEE FIG.96 FOR NHA....UHE,UHH,UHV,UHX	EA	1
98		AFOFF		97499	205-061-001-7	ENGINE ASSEMBLY USBL EFF 66-746 THRU 66-16867 SEE FIG.96 FOR NHA....UHE,UHH,UHV,UHX	EA	1
98		AFOFF		97499	205-061-001-15	ENGINE ASSEMBLY USBL EFF 66-16868 THRU 67-19537 SEE FIG.96 FOR NHA....UHE,UHH,UHV,UHX	EA	1
98		AFOFF		97499	205-061-001-17	ENGINE ASSEMBLY USBL EFF 68-15214 THRU 69-15291 SEE FIG.96 FOR NHA....UHE,UHH,UHV,UHX	EA	1
98		AFOFF		97499	205-061-001-21	ENGINE ASSEMBLY USBL EFF 69-15292 THRU 70-16518 SEE FIG.96 FOR NHA....UHE,UHH,UHV,UHX	EA	1
98		AFOFF		97499	205-061-001-25	ENGINE ASSEMBLY USBL EFF 71-20000 THRU 71-20339 SEE FIG.96 FOR NHA....UHE,UHH,UHV,UHX	EA	1
98		AFOFF		97499	205-061-001-29	ENGINE ASSEMBLY USBL EFF 72-21465 & SUBSEQUENT SEE FIG.96 FOR NHA....UHE,UHH,UHV,UHX	EA	1
98	1	PA000	5340-00-658-6171	00624	19131-1812M	.COUPLING,CLAMP,GROO GROOVED....UHE,UHH,UHV,UHX	EA	1
98	2	PAOZZ	5310-00-198-4759	72962	Z1200-054	..NUT,SELF-LOCKING,HE....UHE,UHH,UHV,UHX	EA	2
98	3	PA000	5340-00-658-6170	98625	19131-1537M	.CLAMP ASSEMBLY....UHE,UHH,UHV,UHX	EA	1
98	4	PAOZZ	5310-00-198-4759	72962	Z1200-054	..NUT,SELF-LOCKING,HE....UHE,UHH,UHV,UHX	EA	2
98	5	PAOFF	2990-00-767-9212	97499	204-060-302-13	.TAIL PIPE ASSY SEE FIG.430 IF HEAT SUPPRESSOR IS INSTALLED ....UHE,UHH,UHV,UHX	EA	1
98	6	PAOZZ	5305-00-150-9211	88044	AN502-10-10	.SCREW,MACHINE....UHE,UHH,UHV,UHX	EA	1
98	7	PAOZZ	2995-00-731-8971	97499	204-060-729-1	.ARM....UHE,UHH,UHV,UHX	EA	1
98	8	PAOFF	2995-00-927-3549	97499	204-060-787-9	.CAMBOX ASSY,DROOP C COMPENSATOR....UHE,UHH,UHV,UHX	EA	1
98	9	PAOZZ	5306-00-292-8282	88044	AN173H7A	..BOLT,CLOSE TOLERANC....UHE,UHH,UHV,UHX	EA	1
98	9	PAOZZ	5306-00-182-1520	88044	AN173-7A	..BOLT,CLOSE TOLERANC....UHE,UHH,UHV,UHX	EA	1
98	10	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT....UHE,UHH,UHV,UHX	EA	5
98	11	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHE,UHH,UHV,UHX	EA	2
98	12	PAOZZ	5306-00-180-2744	88044	AN173-15	..BOLT,CLOSE TOLERANC....UHE,UHH,UHV,UHX	EA	1
98	13	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT....UHE,UHH,UHV,UHX	EA	2
98	14	PAOZZ	5365-00-980-1913	97499	120-008C11-7	.SHIM....UHE,UHH,UHV,UHX	EA	4
98	15	PAOZZ	5310-00-285-2177	88044	AN320-3	..NUT,PLAIN,SLOTTED,H....UHE,UHH,UHV,UHX	EA	1
98	16	PAOZZ	5315-00-234-1856	96906	MS24665-155	..PIN,COTTER....UHE,UHH,UHV,UHX	EA	1
98	16A	A0000	2995-00-239-3669	97499	204-060-787-5	..CAM BOX ASSEMBLY....UHE,UHH,UHV,UHX	EA	1
98	17	PAOZZ	5320-00-117-6953	96906	MS20426AD4-8	...RIVET,SOLID....UHE,UHH,UHV,UHX	LB	1
98	18	PA000	2995-00-898-8953	97499	204-060-779-1	...BELL CRANK....UHE,UHH,UHV,UHX	EA	1
98	19	PAOZZ	3110-00-042-4568	96906	MS27644-3	....BEARING,BALL,AIRFRA....UHE,UHH,UHV,UHX	EA	1
98	20	PAOZZ	3120-00-891-8445	97499	2355-3A	....BUSHING,SLEEVE....UHE,UHH,UHV,UHX	EA	1
98	22	PAOZZ	1560-00-898-0008	97499	204-061-705-1	...CAM,CONTROL....UHE,UHH,UHV,UHX	EA	1
98	23	PAOZZ	5306-00-141-4524	88044	AN173H6A	..BOLT,CLOSE TOLERANC....UHE,UHH,UHV,UHX	EA	1
98	23	PAOZZ	5306-00-182-1519	88044	AN173-6A	..BOLT,MACHINE....UHE,UHH,UHV,UHX	EA	1
98	24	PAOZZ	5310-00-187-2354	88044	AN960PD10	..WASHER,FLAT....UHE,UHH,UHV,UHX	EA	1
98	25	PAOZZ	1560-00-757-1681	97499	140-027-1D	..WASHER, SERRATED....UHE,UHH,UHV,UHX	EA	1
98	26	PAOZZ	3110-00-027-8758	96906	MS27641-3	..BEARING,BALL,AIRFRA....UHE,UHH,UHV,UHX	EA	1
98	27	PAOZZ	5315-00-834-3828	97499	204-060-785-1	..PIN,STRAIGHT,HEADLE HEADLESS....UHE,UHH,UHV,UHX	EA	1

best copy available

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
98	28	PAOZZ	1680-00-993-5195	97499	204-060-783-7	..SLIDER,DROOP COMPEN	UHE,UHH,UHV,UHX	EA	1
98	29	PAOZZ	1560-00-895-4435	97499	204-060-778-1	..HOUSING,DROOP COMPE	UHE,UHH,UHV,UHX	EA	1
98	30	PAOZZ	1560-00-849-4193	97499	204-060-786-1	..BRACKET,DROOP COMPE	UHE,UHH,UHV,UHX	EA	1
98	31	PAOZZ	5306-00-639-2326	80205	NAS464P4-9	.BOLT,SHEAR	UHE,UHH,UHV,UHX	EA	1
98	32	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
98	33	PAOZZ	5310-00-141-3139	78189	3539-14-2	.WASHER,SPRING TENSI	UHE,UHH,UHV,UHX	EA	1
98	34	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,PLAIN,SLOTTED,H	UHE,UHH,UHV,UHX	EA	1
98	35	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER	UHE,UHH,UHV,UHX	EA	1
98	36	PAOZZ	5306-00-680-6546	80205	NAS1003-10	.BOLT,MACHINE USE IN LIEU OF AN173-10.	UHE,UHH,UHV,UHX	EA	1
98	37	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
98	38	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
98	39	PAOZZ	5310-00-264-1240	88044	AN320C3	.NUT,PLAIN,SLOTTED,H	UHE,UHH,UHV,UHX	EA	1
98	40	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER	UHE,UHH,UHV,UHX	EA	1
98	41	PAOZZ	5306-00-182-1854	88044	AN3CH5A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
98	42	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
98	43	PAOZZ	2995-00-893-1216	97499	204-060-765-7	.LEVER ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
98	45	PAOFF	2995-00-990-3163	97499	204-060-762-1	.ACTUATOR,ELECTRO-ME MECHANICAL LINEAR	UHE,UHH,UHV,UHX	EA	1
98	45	PAOFF	2995-00-990-3163	70210	540264-2-1	.ACTUATOR,ELECTRO-ME SEE FIG. 108 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
98	45	PAOFF	2995-00-990-3163	83777	700103G2	.ACTUATOR,ELECTRO-ME SEE FIG. 109 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
98	45	PAOFF	2995-00-990-3163	25140	65A124	.ACTUATOR,ELECTRO-ME SEE FIG. 110 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
98	45	PAOFF	2995-00-990-3163	05624	SYLC9190-10	.ACTUATOR,ELECTRO-ME SEE FIG. 110A FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
98	46	PAOZZ	3120-00-874-2676	05624	CYRB251	..BEARING,PLAIN,ROD E END U/O PN SYLC9190-10	UHE,UHH,UHV,UHX	EA	1
98	47	PAOZZ	5310-00-870-0745	05624	DYRF14	..NUT,PLAIN,HEXAGON U/O PN SYLC9190-10	UHE,UHH,UHV,UHX	EA	1
98	48	PAOZZ	5940-00-879-7074	05624	SYLC526	..1COVER,TERMINAL BOA BOARD U/O PN SYLC9190-10	UHE,UHH,UHV,UHX	EA	1
98	49	PAOZZ	5305-00-941-6403	96906	MS35275-208	..SCREW,MACHINE U/O PN SYLC9190-10	UHE,UHH,UHV,UHX	EA	2
98	50	PAOZZ	5310-00-579-5554	96906	MS35333-35	..WASHER,LOCK U/O PN SYLC9190-10	UHE,UHH,UHV,UHX	EA	2
98	51	PAOZZ	5310-00-815-4847	97942	1JA2699H12	..NUT,PLAIN,HEXAGON U/O PN SYLC9190-10	UHE,UHH,UHV,UHX	EA	3
98	52	PAOZZ	5310-00-579-0079	96906	MS35333-37	..WASHER,LOCK U/O PN SYLC9190-10	UHE,UHH,UHV,UHX	EA	3
98	53	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	2
98	54	PAOZZ	5330-00-258-8028	96906	MS29512-04	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
98	55	PBOZZ	5310-00-733-8399	97499	204-060-056-1	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	2
98	56	PAOZZ	4730-00-720-0288	96906	MS24394-4	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	2
98	57	PAOZZ	5310-00-167-0805	88044	AN960C716	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
98	58	PAOZZ	5310-00-938-8386	96906	MS9549-13	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
98	59	PAOZZ	5930-00-076-9835	97499	204-060-008-1	.SWITCH,PRESSURE	UHE,UHH,UHV,UHX	EA	1
98	60	PAOZZ	5306-00-182-2015	88044	AN4H4A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
98	61	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
98	62	PAOFF	1560-00-076-7296	97499	205-060-909-25	.FIREWALL ASSEMBLY -AFT SEE FIG. 105 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
98	63	PAOZZ	4730-00-773-2620	00624	3755-8	.COUPLING HALF,QUICK DISCONNECT	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
98	64	XDOZZ		96906	MS29512-04	.PACKING,PREFORMED............UHE,UHH,UHV,UHX	EA	1
98	65	PAOZZ	4730-00-684-6917	96906	MS2439806-4	.ADAPTER,STRAIGHT............UHE,UHH,UHV,UHX	EA	1
98	66	PAOZZ	4720-00-915-5850	96142	108358-0202	.HOSE ASSEMBLY,METAL............UHE,UHH,UHV,UHX	EA	1
98	67	PAOZZ	5305-00-271-7746	88044	AN115807	.SCREW,MACHINE U/O PN 205-060-001-5,205-061-001-1,-3,& -5 ....UHE,UHH,UHV,UHX	EA	1
98	68	MFOZZ	1560-00-073-6596	97499	20-032-1	.BRACKET,ENGINE U/O PN 205-060-001-5,205-061-001-1,-3,& -5 ....UHE,UHH,UHV,UHX	EA	1
98	69	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE U/O PN 205-060-001-5,205-061-001-1,-3,& -5 ....UHE,UHH,UHV,UHX	EA	1
98	70	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 205-060-001-5,205-061-001-1,-3,& -5 ....UHE,UHH,UHV,UHX	EA	2
98	71	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 205-060-001-5, 205-061-001,-3,& -5............UHE,UHH,UHV,UHX	EA	1
98	72	PAOZZ	5340-00-151-6003	96906	MS21122-21	.CLAMP,LOOP U/O PN 205-060-001-5,205-061-001-1,-3,& -5 ....UHE,UHH,UHV,UHX	EA	1
98	73	PAOZZ	5305-00-688-2342	03538	N60P16018C6	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	1
98	74	PAOZZ	5365-00-808-2527	80205	NAS43DD3-40	.SPACER,SLEEVE............UHE,UHH,UHV,UHX	EA	1
98	75	PAOZZ	5340-00-181-6003	90696	MS21122-21	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	1
98	76	PAOZZ	4730-00-991-8552	00624	375525-16	.COUPLING HALF,QU DISCONNECT............UHE,UHH,UHV,UHX	EA	1
98	77	PCOZZ	5330-00-729-4992	96906	MS28775-027	..PACKING,PREFORME............UHE,UHH,UHV,UHX	EA	1
98	78	PAOZZ	2995-00-910-7514	16619	15210	.HOSE,AIR BLEED............UHE,UHH,UHV,UHX	EA	1
98	79	PAOZZ	5306-00-180-2779	88044	AN4CH5A	.BOLT,MACHINE............UHE,UHH,UHV,UHX	EA	4
98	80	PAOZZ	5310-00-531-9515	88044	AN960C416	.WASHER,FLAT............UHE,UHH,UHV,UHX	EA	4
98	81	PAOZZ	5330-00-078-3882	97499	204-060-485-1	.GASKET............UHE,UHH,UHV,UHX	EA	1
98	82	PAOZZ	4730-00-034-3722	00624	500616-16C	.ELBOW,FLANGE TO TUB............UHE,UHH,UHV,UHX	EA	1
98	83	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE............UHE,UHH,UHV,UHX	EA	2
98	84	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT............UHE,UHH,UHV,UHX	EA	2
98	85	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON............UHE,UHH,UHV,UHX	EA	2
98	86	PAOZZ	5340-00-151-5999	96906	MS21122-12	.CLAMP,LOOP............UHE,UHH,UHV,UHX	EA	4
98	87	XCFZZ		97499	205-075-004-1	.ELECTRICAL INSTL U/O PN 205-060-001-5 SEE FIG.281 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
98	87	XCFZZ		97499	205-075-010-1	.ELECTRICAL INSTL USBL EFF 63-8739 THRU 65-9810 SEE FIG.281 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
98	87	XCFZZ		97499	205-075-010-3	.ELECTRICAL INSTL USBL EFF 65-9811 THRU 66-16867 SEE FIG.281 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
98	87	XCFZZ		97499	205-075-010-5	.ELECTRICAL INSTL U/O PN 205-061-001-15,-17, & -21 SEE FIG. 281 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
98	87	XCFZZ		97499	205-075-010-7	.ELECTRICAL INSTL U/O PN 205-061-001-25 &-29 SEE FIG.281 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
98	88	XCFZZ		97499	205-060-401-11	.STARTER INSTL USBL EFF 67-17492 & SUBSEQUENT SEE FIG.288 FOR BREAKDOWN............UHE,UHH,UHV,UHX	EA	1
98	89	PAOZZ	4730-00-773-2620	00624	3755-6	.COUPLING HALF,QUICK DISCONNECT............UHE,UHH,UHV,UHX	EA	1
98	90	PAOZZ	4730-00-277-6026	88044	AN93806	.TEE,BOSS............UHE,UHH,UHV,UHX	EA	1
98	91	XDOZZ		88044	AN919-6	.REDUCER,TUBE............UHE,UHH,UHV,UHX	EA	2
98	92	PCOZZ	5330-00-253-8030	96906	MS29512-06	.PACKING,PREFORMED............UHE,UHH,UHV,UHX	EA	3
98	93	XDOZZ		96906	MS8000E250C	.HOSE ASSEMBLY,NONME............UHE,UHH,UHV,UHX	EA	1
98	94	MFOZZ		96906	MS8000E150B	.HOSE ASSEMBLY,RUBBE............UHE,UHH,UHV,UHX	EA	1
98	95	PAOZZ	4730-00-773-2623	00624	375504-4	.COUPLING HALF,QUICK DISCONNECT............UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
98	96	MFOZZ	4720-00-276-9470	96906	MS8000E160B	.HOSE ASSEMBLY,NONME..........UHE,UHH,UHV,UHX	EA	1
98	97	PAOZZ	2915-00-967-1739	97499	205-060-020-3	.SUPPORT,ENGINE ASSE..........UHE,UHH,UHV,UHX	EA	1
98	98	PAOZZ	2915-00-625-0075	97499	204-060-014-1	.CLIP,ELECTRIC..........UHE,UHH,UHV,UHX	EA	1
98	99	PAOZZ	4730-00-773-2619	00624	3755-4	.COUPLING HALF,QUICK DISCONNECT..........UHE,UHH,UHV,UHX	EA	1
98	100	MFOZZ		96906	MS8000E324C	.HOSE ASSEMBLY..........UHE,UHH,UHV,UHX	EA	1
98	101	PAOZZ	4730-00-720-0288	96906	MS24394-4	.ELBOW,TUBE..........UHE,UHH,UHV,UHX	EA	1
98	102	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
98	103	XDOZZ		96906	MS29512-04	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	1
98	104	PAOZZ	5365-00-837-8169	96906	MS24391-4L	.PLUG,MACHINE THREAD..........UHE,UHH,UHV,UHX	EA	2
98	105	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	2
98	106	PAOZZ	4730-00-804-9310	96906	MS24390-4	.TEE,TUBE..........UHE,UHH,UHV,UHX	EA	1
98	107	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
98	108	XDOZZ		96906	MS29512-04	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	1
98	109	MFOZZ	4710-00-831-1439	97499	204-060-082-1	.TUBE ASSEMBLY,METAL..........UHE,UHH,UHV,UHX	EA	1
98	110	PAOZZ	4730-00-235-1498	88044	AN919-2	.REDUCER,TUBE..........UHE,UHH,UHV,UHX	EA	1
98	111	PCOZZ	5330-00-263-8011	96906	MS29512-03	.PACKING,PREFORME..........UHE,UHH,UHV,UHX	EA	1
98	112	PAOZZ	4730-00-675-3239	97499	204-060-670-1	.RESTRICTOR,FLUID FL..........UHE,UHH,UHV,UHX	EA	2
98	113	PCOZZ	5330-00-263-8028	96906	MS29512-04	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	2
98	114	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
98	115	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
98	116	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
98	117	PAOZZ	5340-00-993-1470	81996	EAB700D18	.CLAMP,LOOP U/O PN 205-060-001-5, 205-061-001-1,-3,-5,-7, -15,& -17..........UHE,UHH,UHV,UHX	EA	1
98	117	XDOZZ		96906	MS21104D26	.CLAMP,LOOP U/O PN 205-061-001-21,-25, & -29 ....UHE,UHH,UHV,UHX	EA	1
98	118	PAOZZ	5340-00-151-5999	96906	MS21122-12	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
98	119	PAOZZ	4730-00-076-0561	00624	AE93532J	.COUPLING HALF,QUICK QUICK DISCONNECT USBL EFF 62-2106 THRU 71-20339..........UHE,UHH,UHV,UHX	EA	1
98	120	PAOZZ	4730-00-100-4341	97499	205-063-602-1	.COUPLING ASSEMBLY,Q AFTER COMPLIANCE WITH MWO 55-1520-210-30-39,COUPLING ASSY FORAFTER COMPLIANCE WITH MWO 55-1520-210-30-39,COUPLING ASSY FOR72-21465 AND SUB IS USED ON ALL AIRCRAFT..........UHE,UHH,UHV,UHX	EA	1
98	121	MFOZZ		96906	MS87028J166F	.HOSE ASSY, NONMETALLIC U/O PN 205-060-001-5 ....UHE,UHH,UHV,UHX	EA	1
98	121	MFOZZ	4720-00-181-8813	96906	MS8000J220C	.HOSE ASSEMBLY,NONME NONMETALLIC U/O PN 205-061-001-1,-3,-5, -7,-15 & -17..........UHE,UHH,UHV,UHX	EA	1
98	121	PAOZZ	4720-00-182-8962	97499	205-062-650-15	.HOSE ASSEMBLY,NONME NONMETALLIC U/O PN 205-061-001-21,-25 & -29..........UHE,UHH,UHV,UHX	EA	1
98	122	PAOZZ	5306-00-582-9020	88044	AN8CH6	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
98	123	PAOZZ	5310-00-167-0839	88044	AN960-816L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
98	124	PAOZZ	5306-00-582-6911	88044	AN8CH10	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
98	125	PAOZZ	5310-00-167-0823	88044	AN960-816	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	2
98	126	PAOZZ	2995-00-731-7957	97499	204-060-161-1	.TRUNNION,LEFT HAND..........UHE,UHH,UHV,UHX	EA	1
98	127	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
98	128	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
98	129	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
98	130	PAOZZ	2915-00-967-1738	97499	205-060-020-1	.SUPPORT,ENGINE ASSE..........UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
98	131	PAOZZ	5340-00-151-6000	96906	MS21122-10	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	1
98	132	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	4
98	132	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
98	133	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
98	134	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
98	135	PAOZZ	5340-00-151-5999	96906	MS21122-12	.CLAMP,LOOP..........UHE,UHH,UHV,UHX	EA	9
98	136	PAOZZ	2915-00-967-1740	97499	205-060-020-5	.SUPPORT,ENGINE ASSE..........UHE,UHH,UHV,UHX	EA	1
98	137	MFOZZ	1560-00-073-6595	97499	20-032-1	.BRACKET,ENGINE..........UHE,UHH,UHV,UHX	EA	2
98	138	PAOZZ	5305-00-688-2342	03538	N80P16018C6	.SCREW,MACHINE..........UHE,UHH,UHV,UHX	EA	1
98	139	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	1
98	140	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
98	141	PAOZZ	5365-00-808-2527	80205	NAS43DD3-40	.SPACER,SLEEVE..........UHE,UHH,UHV,UHX	EA	1
98	142	MFOZZ	1560-00-975-7133	97499	205-060-020-7	.BRACKET..........UHE,UHH,UHV,UHX	EA	1
98	143	XDOZZ		97499	70-009F245Z347	.HOSE ASSY NONMETALLIC..........UHE,UHH,UHV,UHX	EA	2
98	144	XDOZZ		96906	MS8000E340C	.HOSE ASSY NONMETALLIC..........UHE,UHH,UHV,UHX	EA	1
98	145	MFOZZ	4710-00-738-8359	97499	204-060-098-1	.TUBE ASSEMBLY,METAL..........UHE,UHH,UHV,UHX	EA	1
98	146	PAOZZ	4730-00-804-9310	96906	MS24390-4	.TEE,TUBE..........UHE,UHH,UHV,UHX	EA	1
98	147	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	1
98	148	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	1
98	149	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	2
98	150	PAOZZ	5930-01-106-9351	97499	204-060-541-101	.SWITCH,PRESSURE..........UHE,UHH,UHV,UHX	EA	1
98	151	PAOZZ	6620-00-585-1503	25140	22A554	.GENERATOR,TACHOMETE AERNO 61-8732..........UHE,UHH,UHV,UHX	EA	1
98	152	PAOZZ	5310-00-982-4988	96906	MS21045C4	.NUT,SELF-LOCKING,HE..........UHE,UHH,UHV,UHX	EA	4
98	153	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
98	154	PAOZZ	5330-00-023-7623	96906	MS9134-01	.GASKET..........UHE,UHH,UHV,UHX	EA	1
98	155	PAOZZ	4730-00-720-0288	96906	MS24394-4	.ELBOW,TUBE..........UHE,UHH,UHV,UHX	EA	1
98	156	PAOZZ	4730-00-720-0288	96906	MS24394-4	.ELBOW,TUBE..........UHE,UHH,UHV,UHX	EA	1
98	157	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	2
98	158	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	2
98	159	MFOZZ	5310-00-601-7515	43999	270-580292-12	.NUT,PLAIN,HEXAGON..........UHE,UHH,UHV,UHX	EA	2
98	160	PAOZZ	1560-00-716-8554	97499	100-016-1	.PLUG,VENTILATION..........UHE,UHH,UHV,UHX	EA	1
98	161	PAOOO	2995-00-738-8358	97499	204-060-093-1	.SUPPORT ASSEMBLY,PR..........UHE,UHH,UHV,UHX	EA	1
98	162	PAOZZ	5310-00-771-7348	96906	MS21048-3	..NUT,SELF-LOCKING,PL..........UHE,UHH,UHV,UHX	EA	2
98	163	PAOZZ	5306-00-582-9020	88044	AN8CH6	.BOLT,MACHINE..........UHE,UHH,UHV,UHX	EA	4
98	164	PAOZZ	5310-00-167-0806	88044	AN960C816	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	4
98	165	PAOZZ	6620-00-067-4946	81349	TRU66A	.TRANSMITTER,PRESSUR TORQUEMETER OIL 100 PSI ....UHE,UHH,UHV,UHX	EA	1
98	166	PAOZZ	6620-00-067-4946	81349	TRU66A	.TRANSMITTER,PRESSUR ENGINE OIL 100 PSI.....UHE,UHH,UHV,UHX	EA	1
98	167	PAOZZ	4730-00-773-2621	00624	375504-12	.COUPLING HALF,QUICK USBL EFF 62-2106 THRU 71-20339 ....UHE,UHH,UHV,UHX	EA	1
98	168	PAOZZ	4730-00-100-4344	97499	205-063-602-5	.COUPLING ASSEMBLY,Q DISCONNECT USBL EFF 72-21465 & SUBSEQUENT AFTER COMPLIANCE WITH MWO 55-1520-210-30-39,COUPLING ASSY FOR72-21465 AND SUB IS USED ON ALL AIRCRAFT..........UHE,UHH,UHV,UHX	EA	1
98	169	PCOZZ	5330-00-846-0500	96906	MS9241-119	.PACKING,PREFORMED..........UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
98	170	PAOZZ	4730-00-277-2461	88044	AN939D12	.ELBOW,BOSS...UHE,UHH,UHV,UHX	EA	1
98	171	PAOZZ	4730-00-684-6914	96906	MS24392D12	.NIPPLE,TUBE...UHE,UHH,UHV,UHX	EA	1
98	172	PAOZZ	4720-00-148-8602	97499	205-062-650-23	.HOSE ASSEMBLY,NONME NONMETALLIC U/O PN 205-061-001-29 ...UHE,UHH,UHV,UHX	EA	1
98	173	PAOZZ	4730-00-886-1400	00624	502383-10C	.ELBOW,TUBE TO BOSS U/O PN 205-061-001-3,-5,-7,-15,-17 AND -21...UHE,UHH,UHV,UHX	EA	1
98	174	PBOZZ	4730-00-805-5100	96906	MS24399D21	.REDUCER,TUBE U/O PN 205-061-001-25 &-29...UHE,UHH,UHV,UHX	EA	1
98	175	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORME...UHE,UHH,UHV,UHX	EA	1
98	176	PAOZZ	4730-00-939-7395	97499	204-060-031-15	.ELBOW,TUBE...UHE,UHH,UHV,UHX	EA	1
98	177	PBOZZ	4730-00-720-0288	96906	MS24394-4	.ELBOW,TUBE...UHE,UHH,UHV,UHX	EA	1
98	178	PAOZZ	5310-00-208-5769	88044	AN924-4	.NUT,PLAIN,HEXAGON...UHE,UHH,UHV,UHX	EA	1
98	179	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED...UHE,UHH,UHV,UHX	EA	1
98	180	MFOZZ		97499	110-033-1	.REDUCER,TUBE...UHE,UHH,UHV,UHX	EA	1
98	180A	PCOZZ	5330-00-579-7548	80205	NAS617-2	.PACKING,PREFORME...UHE,UHH,UHV,UHX	EA	1
98	181	MFOZZ	4720-00-276-9470	96906	MS8000E1608	.HOSE ASSEMBLY,NONME...UHE,UHH,UHV,UHX	EA	1
98	182	PAOZZ	2995-00-775-7747	97499	204-060-152-1	.FITTING ASSEMBLY MOUNTING...UHE,UHH,UHV,UHX	EA	2
98	183	PAOZZ	5306-00-725-6614	88044	AN6CH6	.BOLT,MACHINE...UHE,UHH,UHV,UHX	EA	8
98	183	PAOZZ	5306-00-207-9786	88044	AN6CH5	.BOLT,MACHINE U/W T53-L-13B ENGINE WHEN PN AN6CH6 BOLTS BOTTOM OUT...UHE,UHH,UHV,UHX	EA	8
98	184	PAOZZ	5310-00-183-4355	88044	AN960C616L	.WASHER,FLAT...UHE,UHH,UHV,UHX	EA	8
98	185	PAOZZ	5310-00-881-0943	96906	MS21043-6	.NUT,SELF-LOCKING,EX EXTENDED WASHER,HEXAGON ...UHE,UHH,UHV,UHX	EA	2
98	186	PAOZZ	5310-00-167-0804	88044	AN960C616	.WASHER,FLAT...UHE,UHH,UHV,UHX	EA	2
98	187	PAOZZ	3120-00-878-4389	97499	204-061-100-1	.BEARING,PLAIN,SELF- ALIGNING...UHE,UHH,UHV,UHX	EA	2
98	188	PAOZZ	4730-00-773-2622	00624	375504-16	.COUPLING HALF,QUICK USBL EFF 62-2106 THRU 71-20339 ...UHE,UHH,UHV,UHX	EA	1
98	189	PAOZZ	4730-00-100-4342	97499	205-063-602-3	.COUPLING ASSEMBLY,Q DISCONNECT USBL EFF 72-21465 & SUBSEQUENT AFTER COMPLIANCE WITH MWO 55-1520-210-30-39,COUPLING ASSY FOR72-21465 AND SUB IS USED ON ALL AIRCRAFT...UHE,UHH,UHV,UHX	EA	1
98	190	PAOZZ	4720-00-182-8966	97499	205-062-650-17	.HOSE ASSEMBLY,NONME NONMETALLIC...UHE,UHH,UHV,UHX	EA	1
98	191	XDOZZ		97499	204-060-045-1	.ADAPTER,STRAIGHT, TUBE...UHE,UHH,UHV,UHX	EA	1
98	192	PCOZZ	5330-00-846-0500	96906	MS9241-119	.PACKING,PREFORMED...UHE,UHH,UHV,UHX	EA	1
98	193	PAOZZ	4730-00-773-2621	00624	375504-12	.COUPLING HALF,QUICK USBL EFF 62-2106 THRU 71-20339 ...UHE,UHH,UHV,UHX	EA	1
98	194	PAOZZ	4730-00-100-4341	97499	205-063-602-1	.COUPLING ASSEMBLY,Q DISCONNECT USBL EFF 72-21465 & SUBSEQUENT...UHE,UHH,UHV,UHX	EA	1
98	195	MFOZZ		96906	MS8000K1308	.HOSE ASSEMBLY USBL EFF 62-2106 THRU 71-20339 ...UHE,UHH,UHV,UHX	EA	1
98	196	MFOZZ		97499	70-009L000G116	.HOSE ASSEMBLY,NONME NONMETALLIC USBL EFF 72-21465 & SUBSEQUENT...UHE,UHH,UHV,UHX	EA	1
98	196	PAOZZ	4730-00-684-6914	96906	MS24392D12	.NIPPLE,TUBE...UHE,UHH,UHV,UHX	EA	1
98	197	PCOZZ	5330-00-846-0500	96906	MS9241-119	.PACKING,PREFORMED...UHE,UHH,UHV,UHX	EA	1
98	198	PAOZZ	6620-00-585-1503	25140	22A564	.GENERATOR,TACHOMETE AERNO 61-8732...UHE,UHH,UHV,UHX	EA	1
98	199	PAOZZ	5310-00-982-4988	96906	MS21045C4	.NUT,SELF-LOCKING,HE...UHE,UHH,UHV,UHX	EA	4
98	200	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT...UHE,UHH,UHV,UHX	EA	4
98	201	PAOZZ	5330-00-023-7623	96906	MS9134-01	.GASKET...UHE,UHH,UHV,UHX	EA	1
98	205	PAOZZ	4730-00-831-1438	97499	204-060-068-1	.RESTRICTOR ASSEMBLY...UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
98	208	PAOZZ	5310-00-167-0753	88044	AN960PD10L	. WASHER, FLAT .... UHE, UHH, UHV, UHX	EA	2
98	209	PAOZZ	5310-00-807-1474	96906	MS21042L3	. NUT, SELF-LOCKING, EX WASHER, HEXAGON .... UHE, UHH, UHV, UHX	EA	2
98	210	PAOZZ	5340-00-598-8251	88044	AN743-12	. BRACKET, ANGLE .... UHE, UHH, UHV, UHX	EA	1
98	211	PAOZZ	5340-00-548-8035	81996	EAB700-32	. CLAMP, SUPPORT .... UHE, UHH, UHV, UHX	EA	1
98	212	PAOZZ	5340-00-151-5999	81996	MS21122-12	. CLAMP, LOOP .... UHE, UHH, UHV, UHX	EA	1
98	213	PAOZZ	5305-00-059-3660	96906	MS51958-64	. SCREW, MACHINE .... UHE, UHH, UHV, UHX	EA	2
98	214	PAOZZ	5305-00-059-3661	96906	MS51958-65	. SCREW, MACHINE .... UHE, UHH, UHV, UHX	EA	2
98	215	MFOZZ		96906	MS8000E210C	. HOSE ASSEMBLY, NONMETALLIC .... UHE, UHH, UHV, UHX	EA	1
98	216	PAOZZ	5305-00989-7434	96906	MS35207-263	. SCREW, MACHINE .... UHE, UHH, UHV, UHX	EA	1
98	217	PAOZZ	5310-00-167-0753	88044	NA960PD10L	. WASHER, FLAT .... UHE, UHH, UHV, UHX	EA	1
98	218	PAOZZ	5310-00-807-1474	96906	MS21042L3	. NUT, SELF-LOCKING, EX WASHER, HEXAGON .... UHE, UHH, UHV, UHX	EA	1
98	219	PAOZZ	2915-00-967-1739	97499	205-060-020-3	. SUPPORT, ENGINE .... UHE, UHH, UHV, UHX	EA	1
98	220	PAOZZ	5340-00-990-9301	81996	EAB700D7	. CLAMP, LOOP .... UHE, UHH, UHV, UHX	EA	1
98	221	MFOZZ		96906	MS8000E320E170	. HOSE ASSEMBLY .... UHE, UHH, UHV, UHX	EA	1
98	222	PBOZZ	4730-00-684-6911	96906	MS24392-4	. NIPPLE, TUBE .... UHE, UHH, UHV, UHX	EA	2
98	223	PCOZZ	5330-00-631-2070	80205	NAS617-4	. PACKING, PREFORMED .... UHE, UHH, UHV, UHX	EA	2
98	224	PAODD	2840-00-134-4803	91547	1-000-060-22	. ENGINE, AIRCRAFT, TUR T53-L-13B SEE TM55-2840-229-23P FOR BREAKDOWN .... UHE, UHH, UHV, UHX	EA	1
98	225	PAOZZ	5330-00-078-3852	60047	204-060-485-1	. GASKET (AIRCRAFT WITH IMPROVED PARTICLE SEPARATOR) .... EHH, EHX, UHH, UHV	EA	1
98	226	PAOZZ	2995-01-291-7263	60047	CC00553-1D51A	. ELBOW, FLANGE TO TUBE (AIRCRAFT WITH IMPROVED PARTICLE SEPARATOR) .... EHH, EHX, UHH, UHV	EA	1
98	227	PAOZZ		60047	CC00553-1D5A	. HOSE, BLEED AIR (AIRCRAFT WITH IMPROVED PARTICLE SEPARATOR) .... EHX, EHX, UHH, UHV	EA	1

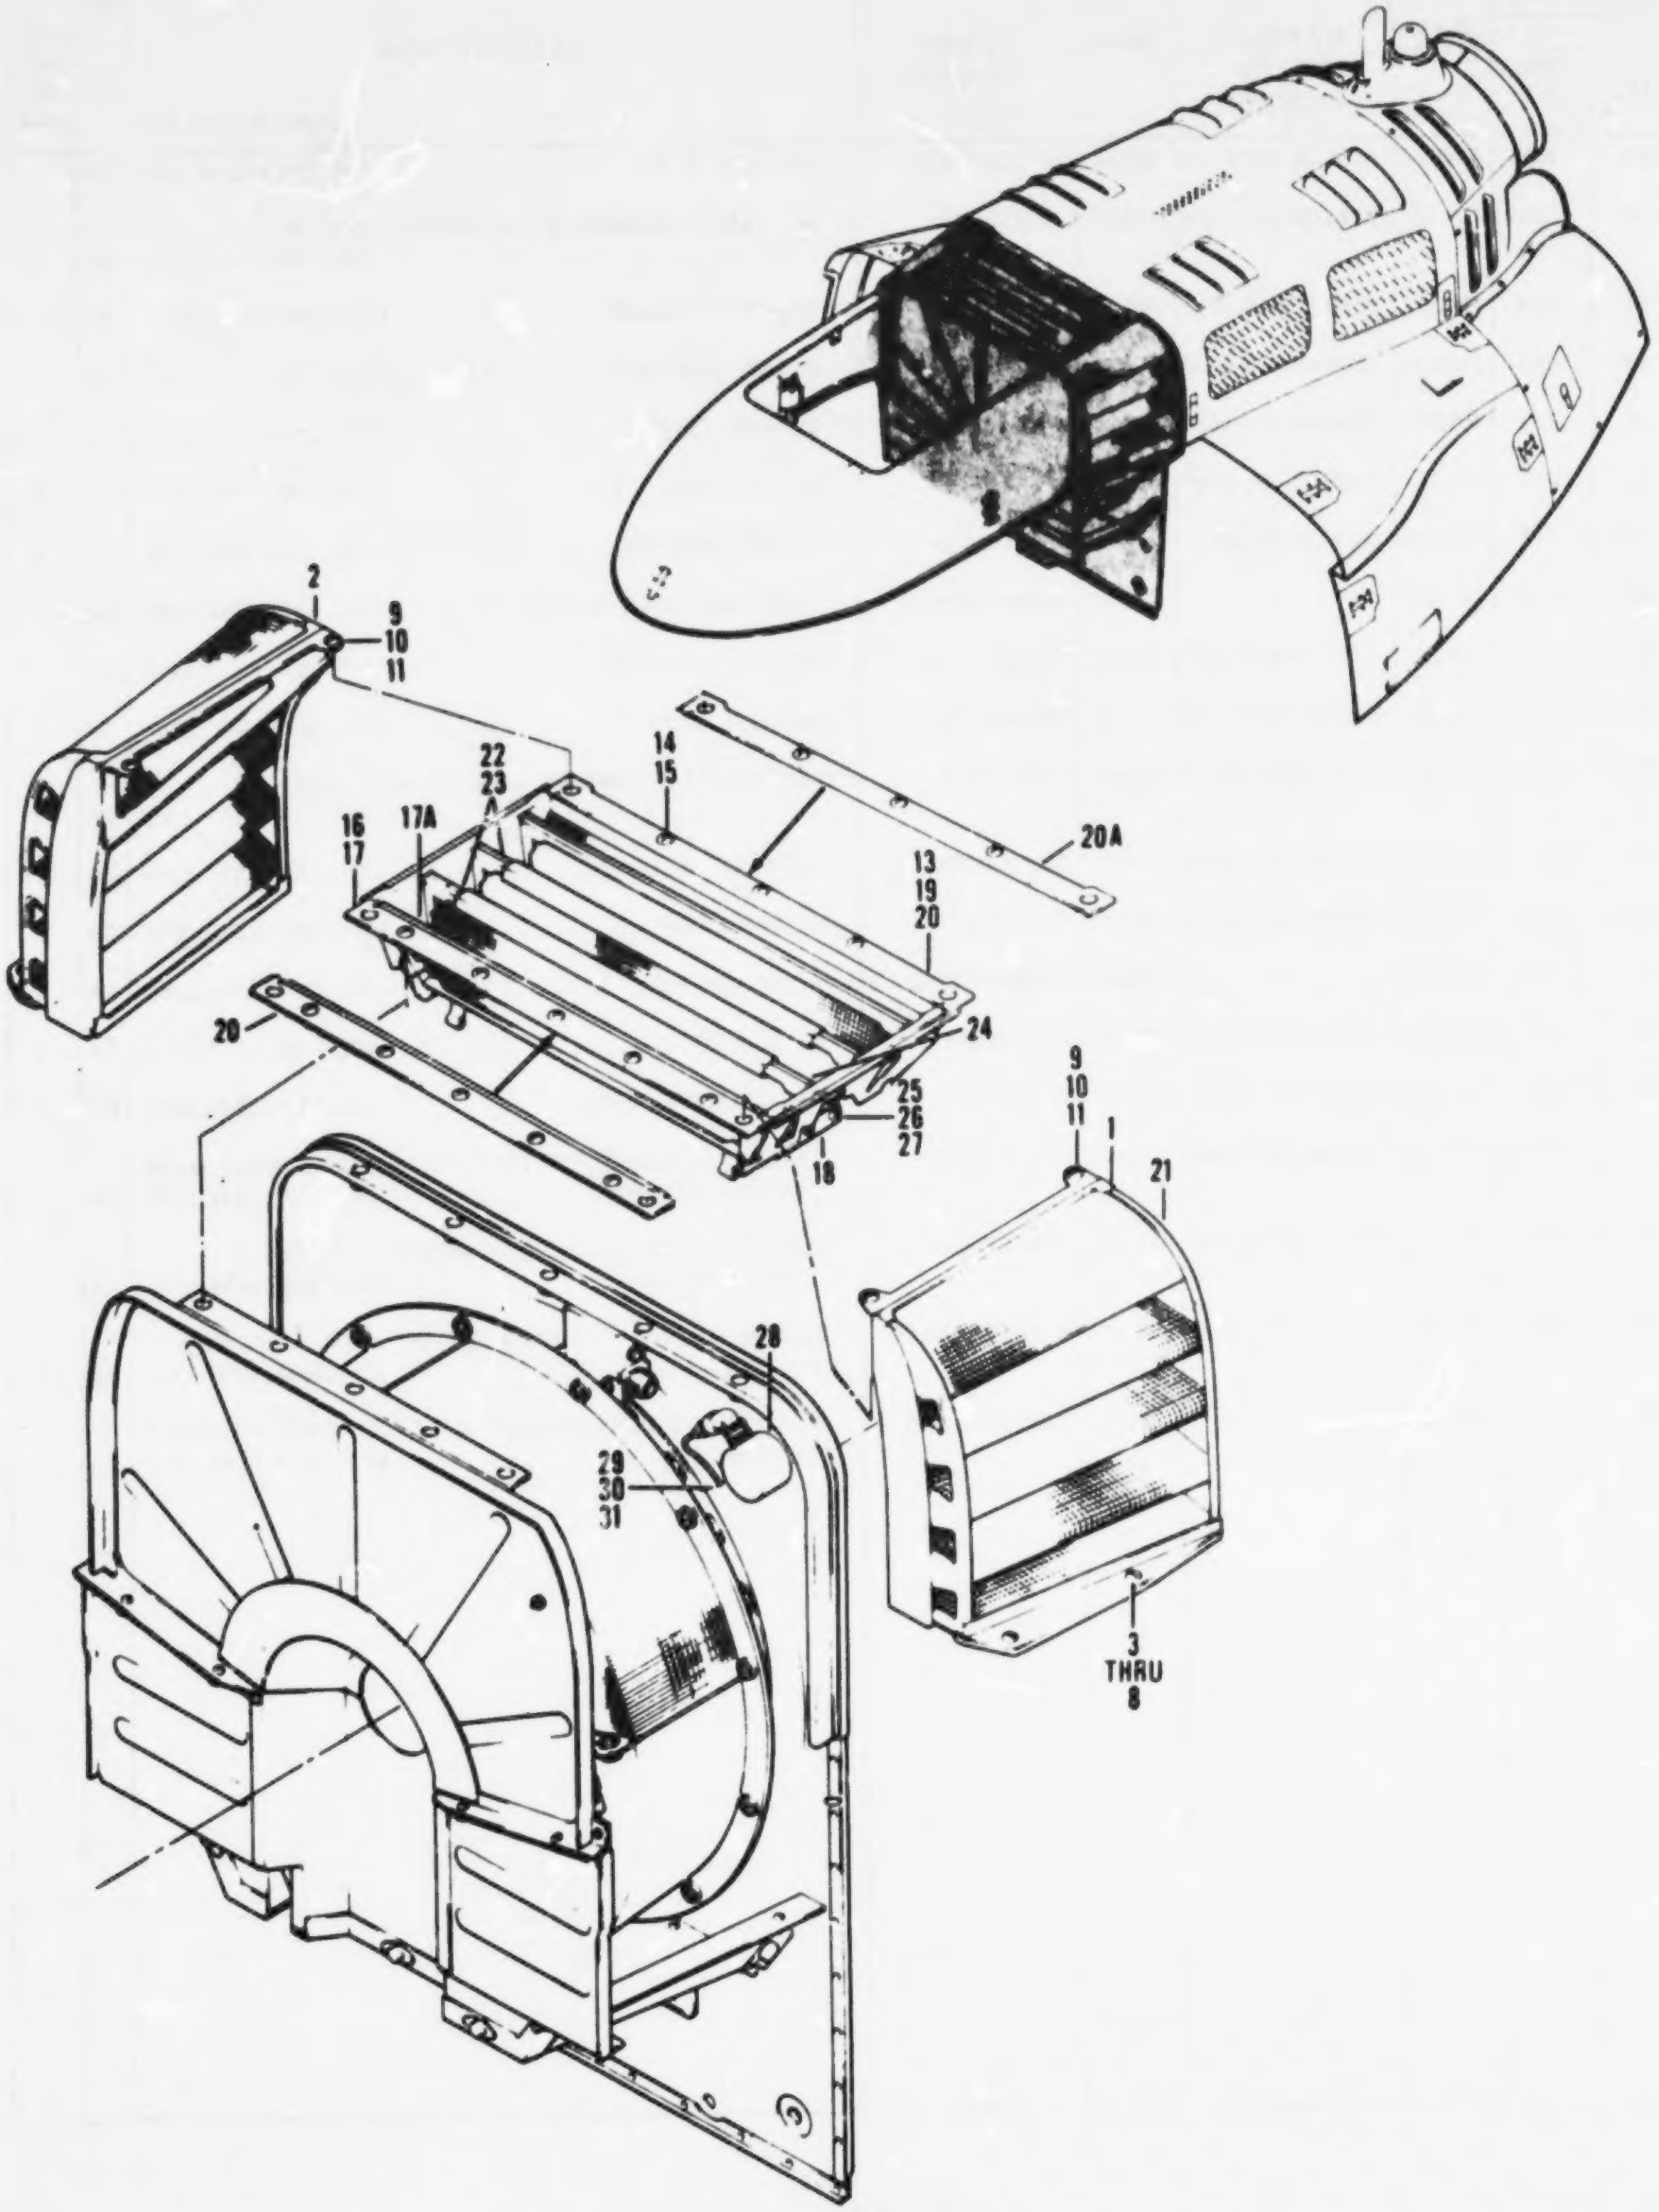
2
9
10
11
22
23
14
15
16
17
17A
20A
13
19
20
20
24
25
26
27
18
9
10
11
1
21
28
29
30
31
3
THRU
8

Figure 99. Cowl Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
99		XCFZZ		97499	205-060-800-5	COWL INSTL USBL EFF 62-2106 THRU 62-2113 SEE FIG.96 FOR NHA UHE,UHH,UHV,UHX	EA	1
99		XCFZZ		97499	205-060-800-7	COWL INSTL USBL EFF 62-12351 THRU 62-12372 SEE FIG.96 FOR NHA UHE,UHH,UHV,UHX	EA	1
99		XCFZZ		97499	205-060-800-9	COWL INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.96 FOR NHA UHE,UHH,UHV,UHX	EA	1
99		XCFZZ		97499	205-060-800-11	COWL INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG.96 FOR NHA UHE,UHH,UHV,UHX	EA	1
99		XCFZZ		97499	205-060-800-13	COWL INSTL USBL EFF 65-9565 THRU 66-16867 SEE FIG.96 FOR NHA UHE,UHH,UHV,UHX	EA	1
99		XCFZZ		97499	205-060-800-23	COWL INSTL USBL EFF 66-16868 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.96 FOR NHA UHE,UHH,UHV,UHX	EA	1
99		XCFZZ		97499	205-060-800-21	COWL INSTL USBL EFF 67-17145 & SUBSEQUENT SEE FIG.96 FOR NHA UHE,UHH,UHV,UHX	EA	1
99	1	PA000	2945-00-027-3025	97499	205-060-280-5	.FILTER ASSY,ENGINE -LH UHE,UHH,UHV,UHX	EA	1
99	2	PA000	2945-00-027-3022	97499	205-060-280-6	.FILTER ASSY,ENGINE -RH UHE,UHH,UHV,UHX	EA	1
99	3	PAOZZ	5325-00-757-2930	71286	4055-11	..STUD ASSY,TURNLOCK UHE,UHH,UHV,UHX	EA	2
99	4	PAOZZ	5306-00-182-2016	88044	AN4H5A	..BOLT,MACHINE UHE,UHH,UHV,UHX	EA	4
99	5	MFOZZ		97499	205-706-025-11	..WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
99	5	PAOZZ	5310-00-167-0766	88044	AN970-4	..WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
99	5	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT UHE,UHH,UHV,UHX	EA	4
99	6	PAOZZ	5365-00-598-1474	71286	R4G	..RING,RETAINING UHE,UHH,UHV,UHX	EA	2
99	7	PAOZZ	5325-00-282-2047	71286	4002-0	..EYELET,TURNLOCK FASTENER UHE,UHH,UHV,UHX	EA	2
99	8	MFOZZ		97499	205-060-280-23	..GROMMET UHE,UHH,UHV,UHX	EA	2
99	9	PAOZZ	5325-00-285-3405	72794	A5T15	..STUD,TURNLOCK FASTENER UHE,UHH,UHV,UHX	EA	2
99	10	PAOZZ	5325-00-141-4002	72794	GH5	..EYELET,TURNLOCK FASTENER UHE,UHH,UHV,UHX	EA	2
99	11	MFOZZ		97499	205-061-234-1	..SEAL,FORWARD SIDE FILTER U/O PN 205-060-280-5 & -6 UHE,UHH,UHV,UHX	EA	1
99	13	PA000	2945-00-027-3016	97499	205-060-254-27	.FILTER ASSY,ENGINE TOP UHE,UHH,UHV,UHX	EA	1
99	13	XA000		97499	205-060-254-29	..FILTER ASSEMBLY UHE,UHH,UHV,UHX	EA	1
99	14	PAOZZ	5325-00-281-1916	72794	A5T9	...STUD,TURNLOCK FASTENER UHE,UHH,UHV,UHX	EA	8
99	15	PAOZZ	5325-00-141-4002	72794	GH5	...EYELET,TURNLOCK FASTENER UHE,UHH,UHV,UHX	EA	8
99	16	PA000	5325-00-432-9810	72794	RF5	...RECEPTACLE,TURNLOCK FASTENER UHE,UHH,UHV,UHX	EA	2
99	17	PAOZZ	5325-00-432-9964	72794	RF5-5	....EYELET,TURNLOCK UHE,UHH,UHV,UHX	EA	2
99	17A	MFOZZ		97499	205-060-254-9	..SEAL,HINGE UHH,UHV,UHE,UHX	EA	3
99	18	MFOZZ		97499	205-706-029-15	.CONNECTING LINK UHE,UHH,UHV,UHX	EA	1
99	19	MOOZZ		97499	205-706-029-11	.SEAL ASSEMBLY UHE,UHH,UHV,UHX	EA	2
99	20	PAOZZ	5330-00-139-4991	97499	205-060-254-7	..SEAL, SPECIAL UHE,UHH,UHV,UHX	EA	1
99	20A	PAOZZ	5330-01-226-0512	97499	205-060-254-5	..SEAL, SPECIAL UHE,UHH,UHV,UHX	EA	1
99	21	PAOZZ	9390-00-872-1265	97499	205-706-025-13	.NONMETALLIC CHANNEL UHE,UHH,UHV,UHX	EA	4
99	22	MFOZZ		97499	205-706-025-15	.ALUMINUM ALLOY CHANNEL UHE,UHH,UHV,UHX	EA	3
99	23	MFOZZ		97499	205-060-204-1	.ALUMINUM ALLOY CHANNEL UHE,UHH,UHV,UHX	EA	2
99	24	MFOZZ		97499	205-060-202-1	.BRACKET,ENGINE AIR FILTER UHE,UHH,UHV,UHX	EA	2
99	25	PAOZZ	5305-00-948-3239	96906	MS27039C1-16	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	4
99	26	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	4
99	27	PAOZZ	5310-00-844-3302	96906	MS21043-3	.NUT,PLAIN,EXTENDED UHE,UHH,UHV,UHX	EA	4
99	28	PAOZZ	5930-00-871-8780	09049	42D128	.SWITCH,PRESSURE UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
99	29	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHE,UHH,UHV,UHX	EA	4
99	30	PAOZZ	5310-00-531-9514	88044	AN960C6	.WASHER,FLAT..................................UHE,UHH,UHV,UHX	EA	4
99	31	AOOOZ	1560-00-871-8864	97499	205-075-420-15	.CABLE ASSEMBLY,AIR SEE FIG.226 FOR COMPONENTS ....UHE,UHH,UHV,UHX	EA	1
99	31	AOOOZ	6150-00-903-4572	97499	205-075-420-13	.CABLE ASSEMBLY,SPEC SEE FIG.274 FOR COMPONENTS ....UHE,UHH,UHV,UHX	EA	1
99	31	AOOOZ	6150-00-916-2602	97499	205-075-434-9	.CABLE ASSEMBLY SEE FIG.245 FOR COMPONENTS ....UHE,UHH,UHV,UHX	EA	1

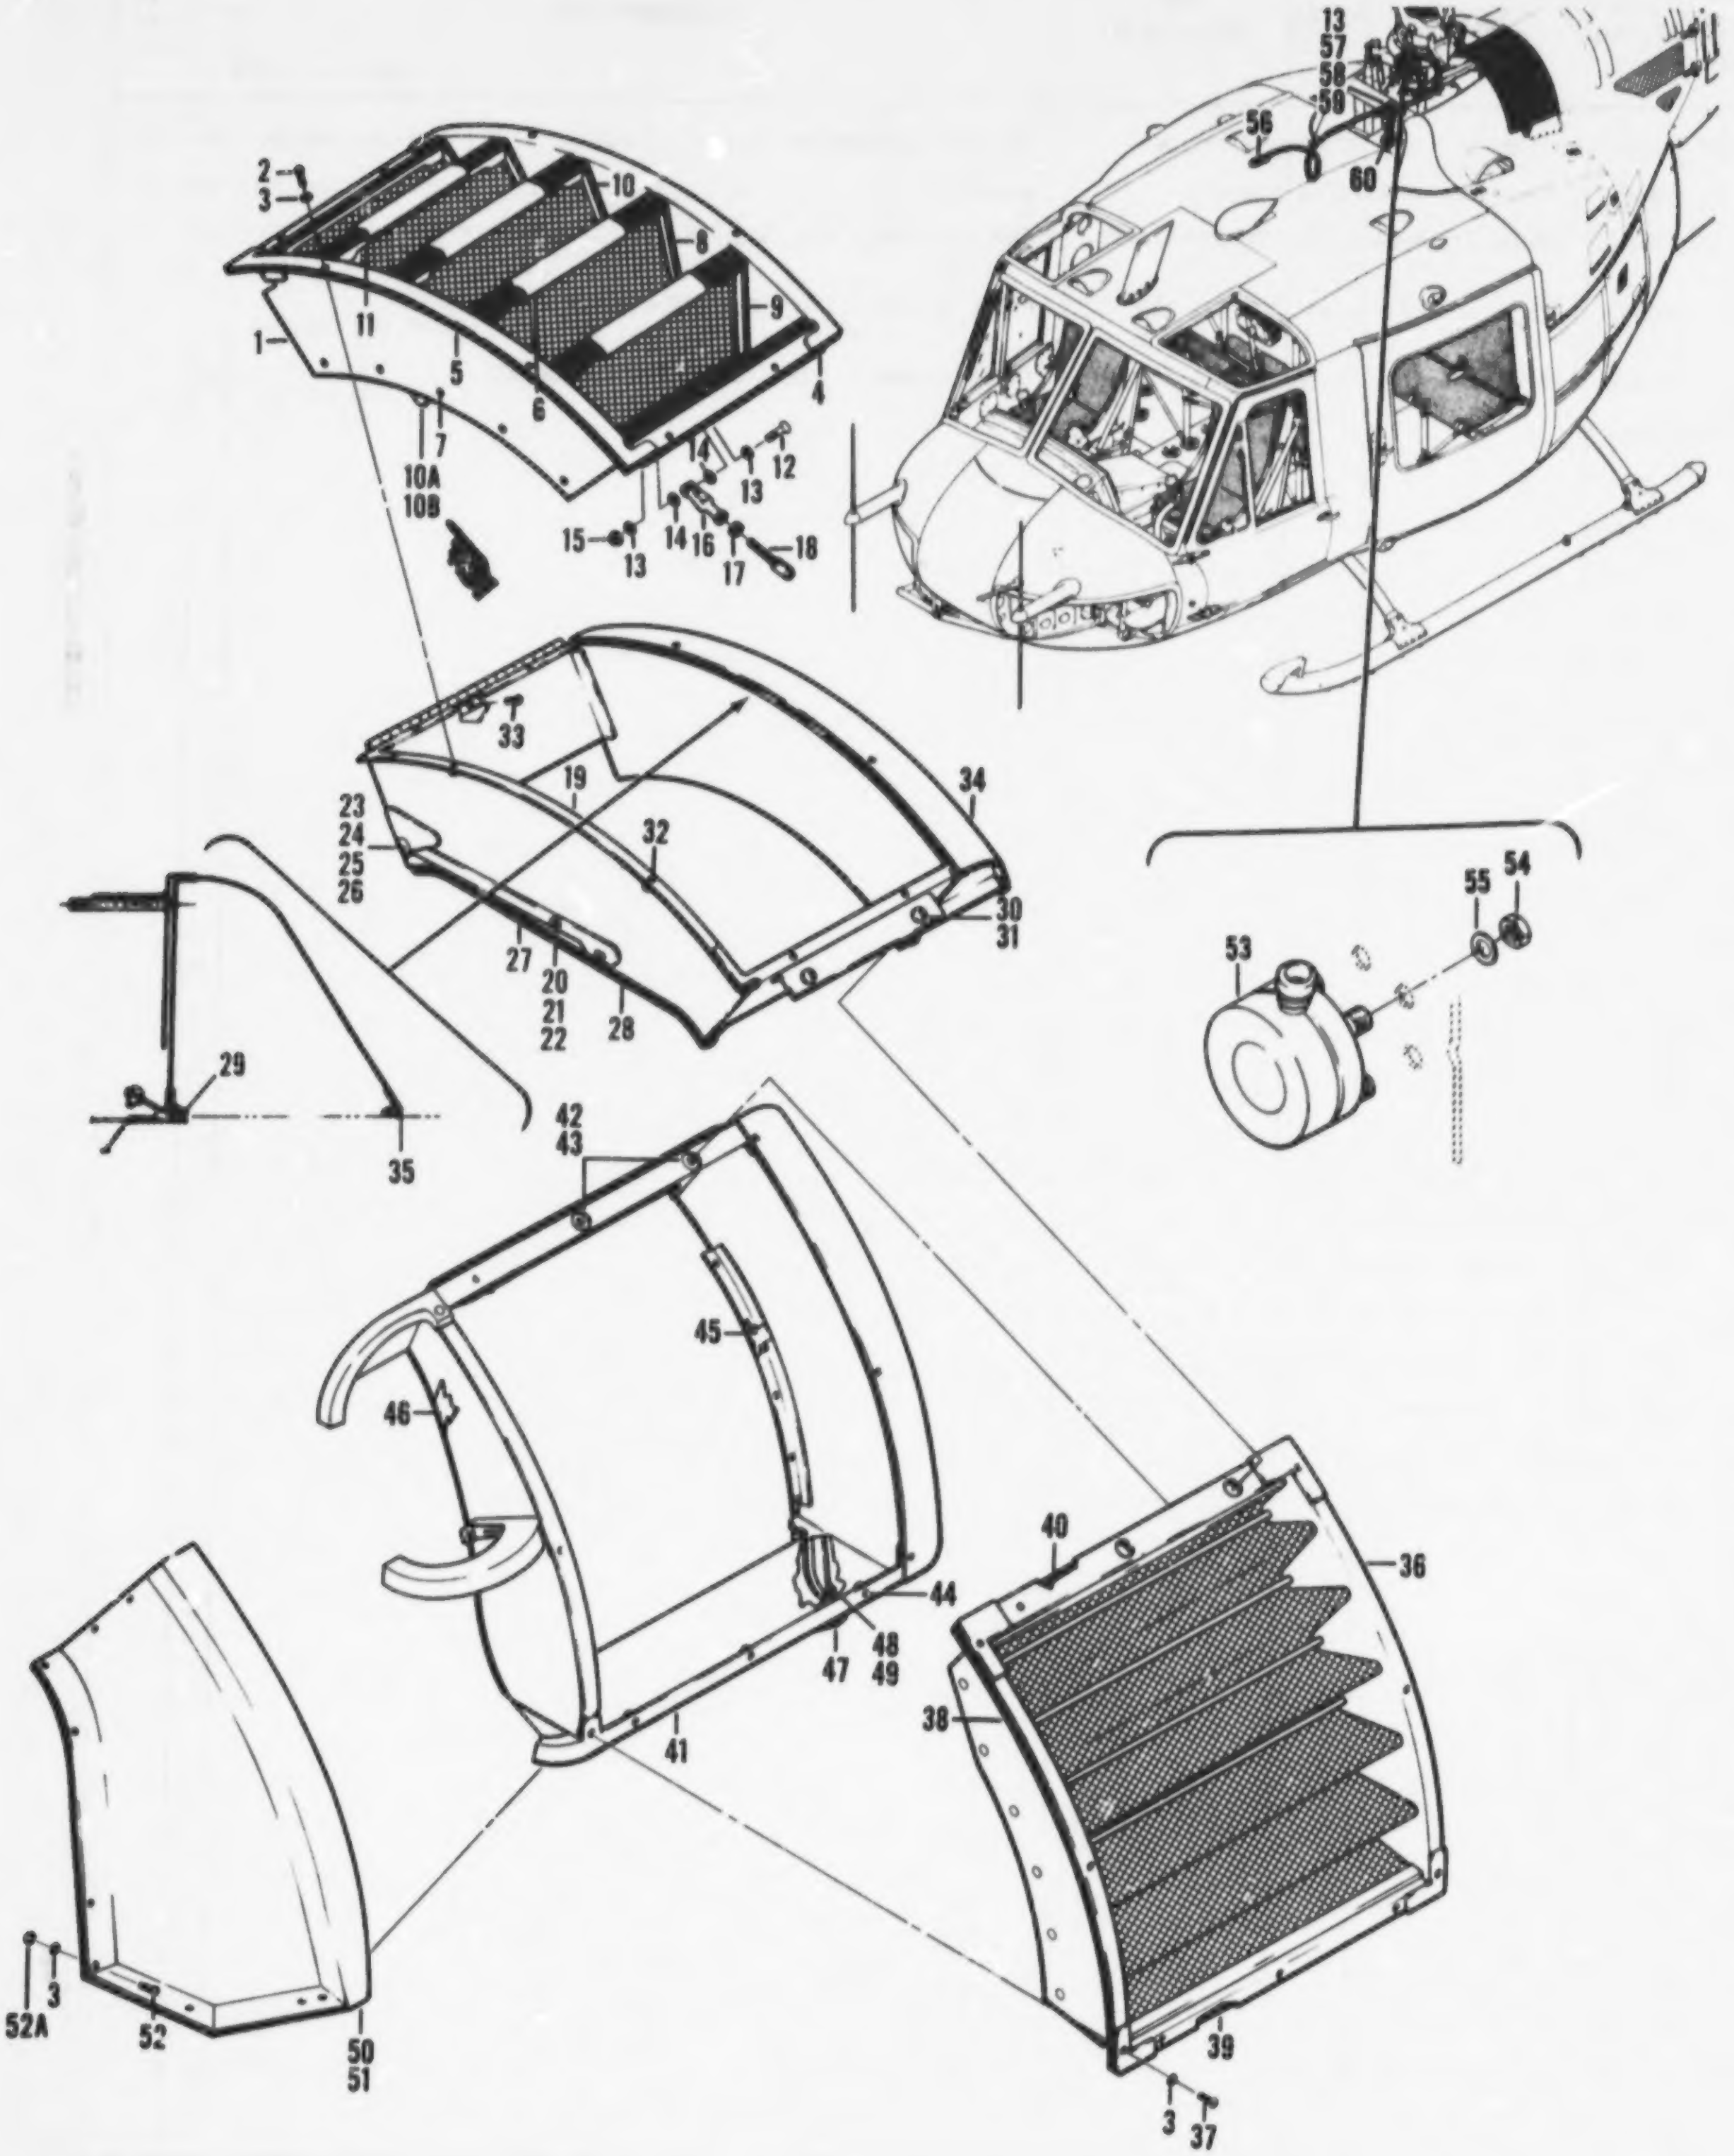
13
57
58
59
56
60
2
3
10
8
9
11
1
5
6
4
7
10A
10B
14
12
13
15
13
14
16
17
18
33
19
34
23
24
25
26
32
30
31
27
20
21
22
28
29
35
53
55
54
42
43
45
46
44
47
48
49
41
40
36
38
39
3
37
52A
3
52
50
51

Figure 100. Engine Filter Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
100		XCFZZ		97499	204-706-083-3	ENGINE FILTER INSTL	UHB,UHC,UHM	EA	1
100	1	PA000	1560-00-839-0655	97499	204-061-240-1	.SCREEN ASSEMBLY,AIR TOP	UHB,UHC,UHM	EA	1
100	2	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE	UHB,UHC,UHM	EA	8
100	3	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT	UHB,UHC,UHM	EA	V
100	4	MFOZZ		97499	204-061-240-17	..SEAL	UHB,UHC,UHM	EA	2
100	5	MFOZZ		97499	204-061-240-19	..SEAL	UHB,UHC,UHM	EA	2
100	6	MFOZZ		97499	204-061-254-1	..CLAMP,TOP SCREEN	UHB,UHC,UHM	EA	4
100	7	MFOZZ		96906	MS20253P2-1067	..HINGE,PIN	UHB,UHC,UHM	EA	5
100	8	PA000	1560-00-839-0444	97499	204-061-257-5	..DOOR ASSY,AIR INLET INLET	UHB,UHC,UHM	EA	5
100	9	PA000	1560-00-839-0442	97499	204-061-257-1	..DOOR ASSY,AIR INLET INLET	UHB,UHC,UHM	EA	4
100	10	PA000	1560-00-839-0440	97499	204-061-257-3	..DOOR ASSY,AIR INLET INLET	UHB,UHC,UHM	EA	1
100	10A	MFOZZ		97499	204-061-257-7	...HINGE HALF HINGE HALF U/O PN 204-061-251-1,-3	UHB,UHC,UHM	EA	1
100	10B	MFOZZ		97499	204-061-257-9	...HINGE HALF HINGE HALF U/O P/N 204-061-257-5	UHB,UHC,UHM	EA	1
100	11	MFOZZ		97499	204-061-257-11	...SEAL	UHB,UHC,UHM	EA	1
100	12	PAOZZ	5306-00-151-1969	88044	AN23-17	.BOLT,CLEVIS	UHB,UHC,UHM	EA	2
100	13	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHB,UHC,UHM	EA	8
100	14	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT	UHB,UHC,UHM	EA	4
100	15	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	13
100	16	PAOZZ	5340-00-838-1591	96906	MS27975-4	.CLEVIS,ROD END	UHB,UHC,UHM	EA	1
100	17	PAOZZ	5310-00-208-7589	88044	AN316-4R	.NUT,PLAIN,HEXAGON	UHB,UHC,UHM	EA	1
100	18	MFOZZ		97499	204-061-288-1	.EYEBOLT	UHB,UHC,UHM	EA	1
100	19	PA000	1560-00-839-6794	97499	204-061-246-1	.FRAME ASSEMBLY,AIR	UHB,UHC,UHM	EA	1
100	20	PAOZZ	5325-00-282-7466	72794	R3 1-2	..RECEPTACLE,TURNLOCK FASTENER	UHB,UHC,UHM	EA	1
100	21	PAOZZ	5325-00-281-5207	72794	AW3 1-2T9	..STUD,TURNLOCK FASTENER	UHB,UHC,UHM	EA	1
100	22	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK	UHB,UHC,UHM	EA	1
100	23	PAOZ7	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	1
100	24	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT	UHB,UHC,UHM	EA	1
100	25	XBOZZ	5310-00-806-9997	80205	NAS43DD4-5	..WASHER,FLAT	UHB,UHC,UHM	EA	1
100	26	PAOZZ	5305-00-993-2738	96906	MS35207-280	..SCREW,MACHINE	UHB,UHC,UHM	EA	1
100	27	MFOZZ		97499	204-061-289-1	..STOP,SCREEN ASSY	UHB,UHC,UHM	EA	1
100	28	MFOZZ		97499	204-061-246-9	..SEAL	UHB,UHC,UHM	EA	1
100	29	MFOZZ		97499	204-061-246-5	..SEAL	UHB,UHC,UHM	EA	1
100	30	PAOZZ	5325-00-281-1550	72794	A5T16	..STUD,TURNLOCK FASTENER	UHB,UHC,UHM	EA	2
100	31	PAOZZ	5325-00-141-4002	72794	GH5	..EYELET,TURNLOCK FASTENER	UHB,UHC,UHM	EA	2
100	32	PAOZZ	5310-00-623-5989	80205	NAS1031A3	..NUT,SELF-LOCKING, PLATE	UHB,UHC,UHM	EA	8
100	33	PAOZZ	5305-00-702-0609	96906	MS24694S50	..SCREW,MACHINE	UHB,UHC,UHM	EA	3
100	34	XA000		97499	204-061-242-1	..FAIRING ASSY,UPPER	UHB,UHC,UHM	EA	1
100	35	MFOZZ		97499	204-061-242-9	...SEAL,FAIRING	UHB,UHC,UHM	EA	1
100	36	PA000	1560-00-839-6747	97499	204-061-244-1	.SCREEN ASSEMBLY,AIR -LH	UHB,UHC,UHM	EA	1
100	36	PAOZZ	1560-00-839-6748	97499	204-061-244-3	.SCREEN ASSEMBLY,AIR -RH	UHB,UHC,UHM	EA	1
100	37	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	..SCREW,MACHINE	UHB,UHC,UHM	EA	22

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
100	38	MFOZZ		97499	204-061-244-23	..SEAL....UHB,UHC,UHM	EA	2
100	39	MFOZZ		97499	204-061-244-25	..SEAL....UHB,UHC,UHM	EA	1
100	40	MFOZZ		97499	204-061-244-27	..SEAL....UHB,UHC,UHM	EA	1
100	41	PB000	1560-00-839-0452	97499	204-061-251-1	.FRAME ASSY,SCREEN, -LH....UHB,UHC,UHM	EA	1
100	41	PA000	1560-00-839-0447	97499	204-061-251-3	.FRAME ASSY,SCREEN, -RH....UHB,UHC,UHM	EA	1
100	42	PA000	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER U/O PN 204-061-251-1 ....UHB,UHC,UHM	EA	2
100	43	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK U/O PN 204-061-251-1....UHB,UHC,UHM	EA	4
100	44	PAOZZ	5310-00-803-2552	80205	NAS1033A3	..NUT,SELF-LOCKING, PLATE....UHB,UHC,UHM	EA	1
100	44	PAOZZ	5310-00-623-5989	80205	NAS1031A3	..NUT,SELF-LOCKING,PL PLATE....UHB,UHC,UHM	EA	16
100	45	MFOZZ		97499	204-061-251-21	..SEAL,FRAME ASSEMBLY....UHB,UHC,UHM	EA	2
100	46	MFOZZ		97499	204-061-251-19	..SEAL,FRAME ASSEMBLY....UHB,UHC,UHM	EA	1
100	46	MFOZZ		97499	204-061-251-13	..SEAL,FRAME ASSEMBLY....UHB,UHC,UHM	EA	1
100	46	MFOZZ		97499	204-061-251-17	..SEAL,FRAME ASSEMBLY....UHB,UHC,UHM	EA	1
100	46	MFOZZ		97499	204-061-251-15	..SEAL,FRAME ASSEMBLY....UHB,UHC,UHM	EA	1
100	47	MFOZZ		97499	204-061-251-23	..SEAL,FRAME ASSEMBLY....UHB,UHC,UHM	EA	1
100	48	XA000		97499	204-061-279-1	..RIB ASSEMBLY-LH....UHB,UHC,UHM	EA	1
100	48	XA000		97499	204-061-279-2	..RIB ASSEMBLY-RH....UHB,UHC,UHM	EA	1
100	49	MFOZZ		97499	204-061-279-3	...SEAL,RIB ASSEMBLY U/O PN 204-061-279-1....UHB,UHC,UHM	EA	1
100	49	MFOZZ		97499	204-061-279-4	...SEAL,RIB ASSEMBLY U/O PN 204-061-279-2....UHB,UHC,UHM	EA	1
100	50	PA000	1560-00-639-0647	97499	204-061-278-1	.FAIRING ASSY,-LH....UHB,UHC,UHM	EA	1
100	50	PA000	1560-00-839-0650	97499	204-061-278-2	.FAIRING ASSY,-RH....UHB,UHC,UHM	EA	1
100	51	MFOZZ		97499	204-061-278-5	..SEAL,FAIRING....UHB,UHC,UHM	EA	1
100	51	MFOZZ		97499	204-061-278-7	..SEAL,FAIRING....UHB,UHC,UHM	EA	1
100	52	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	.SCREW,MACHINE....UHB,UHC,UHM	EA	20
100	52A	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHB,UHC,UHM	EA	10
100	53	PAOZZ	5930-00-898-9800	09049	42D173	.SWITCH,ELECTRICAL....UHB,UHC,UHM	EA	1
100	54	PAOZZ	5310-00-807-1472	96906	MS21042L06	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHB,UHC,UHM	EA	4
100	55	PAOZZ	5310-00-531-9514	88044	AN960C6	WASHER,FLAT....UHB,UHC,UHM	EA	4
100	56	A0000		97499	205-075-434-13	.CABLE ASSEMBLY SEE FIG.245 FOR COMPONENTS....UHB,UHC,UHM	EA	1
100	57	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE....UHB,UHC,UHM	EA	4
100	58	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....UHB,UHC,UHM	EA	1
100	59	PAOZZ	5340-00-990-9297	81996	EAB70002	.CLAMP,LOOP....UHB,UHC,UHM	EA	1
100	60	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE....UHB,UHC,UHM	EA	1

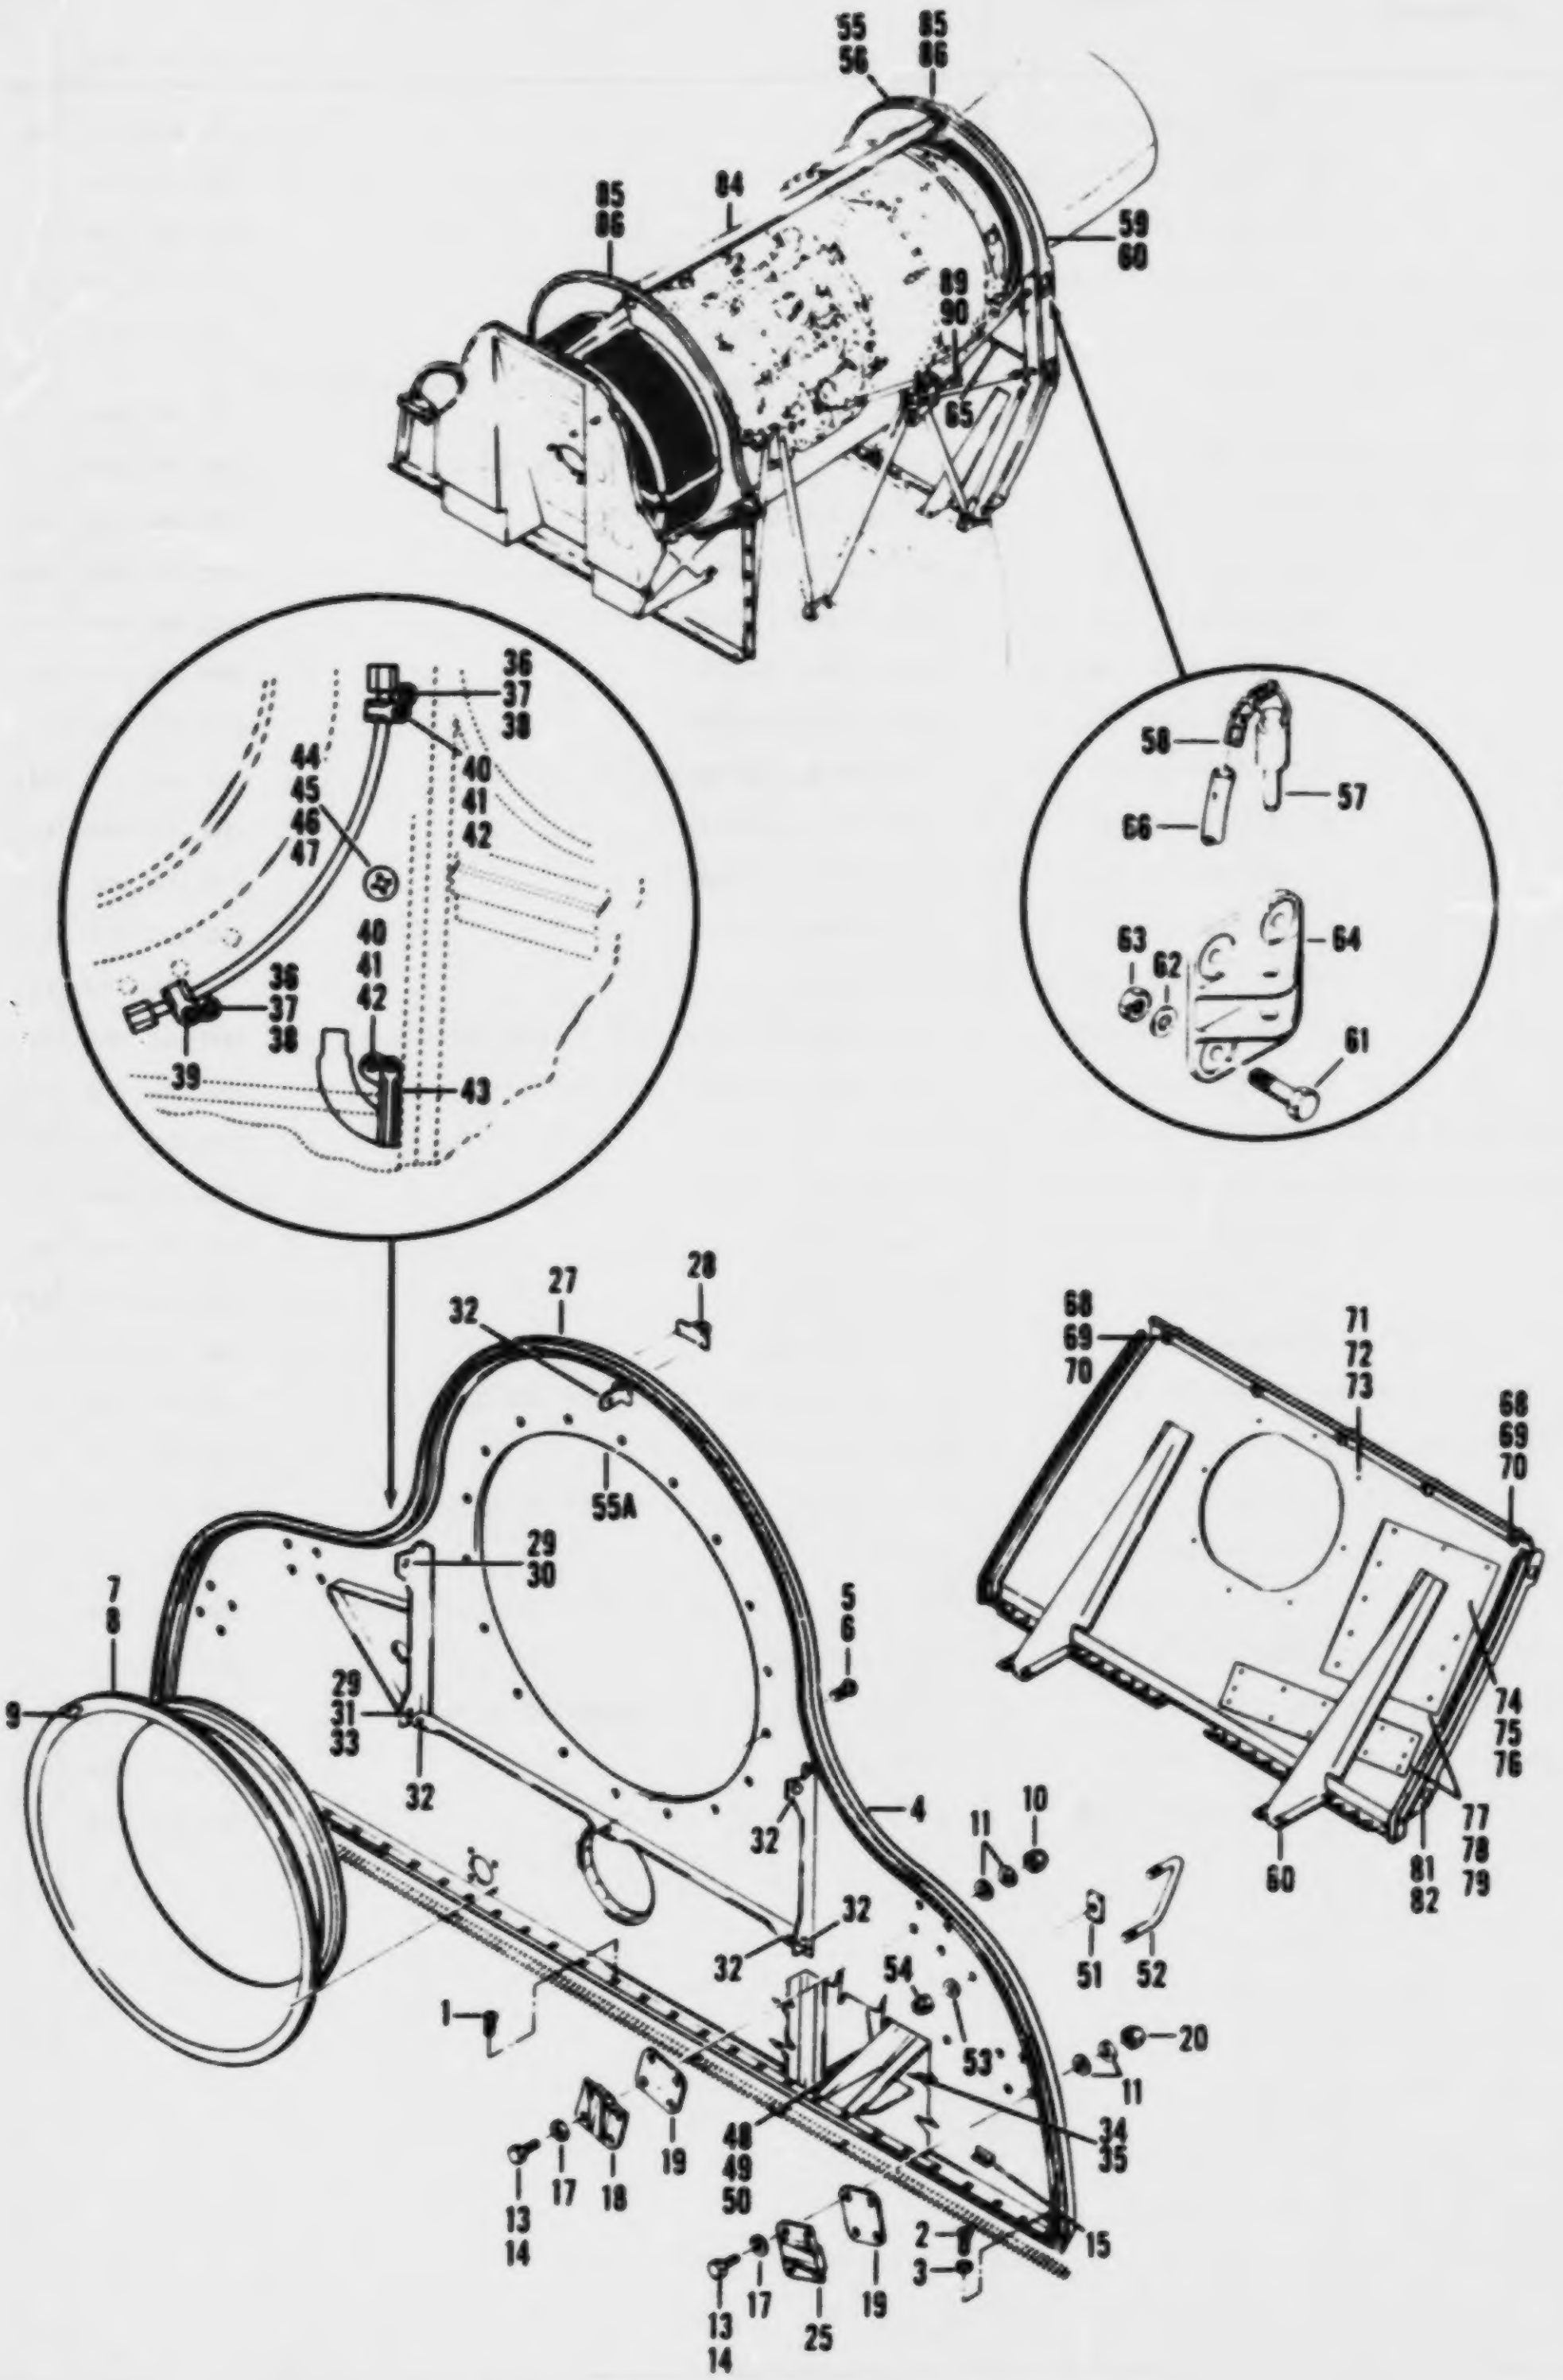
55
56
85
86
85
86
84
59
60
89
90
65
36
37
38
40
41
42
44
45
46
47
40
41
42
36
37
38
39
43
58
57
66
63
62
64
61
27
28
32
55A
29
30
7
8
9
29
31
33
32
5
6
4
32
10
11
32
32
54
53
1
51
52
20
11
34
35
48
49
50
19
18
17
13
14
15
2
3
17
25
19
13
14
68
69
70
71
72
73
68
69
70
74
75
76
77
78
79
81
82
60

Figure 101. Firewall Assembly Forward

(1) ILLUSTRATION (A) F.G. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
101		PBOFF	1560-00-150-8913	97499	204-060-815-205	FIREWALL ASSY,FWD SEE FIG.95 FOR NHA	UHB	EA	1
101		PBOFF	1560-00-150-8916	97499	204-060-815-207	FIREWALL ASSY,FWD SEE FIG.95 FOR NHA	UHB	EA	1
101		PBOFF	1560-00-150-8901	97499	204-060-815-213	FIREWALL ASSY,FWD SEE FIG 102 FOR BALANCE OF BREAKDOWN SEE FIG.95 FOR NHA	UHC,UHM	EA	1
101	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHB	EA	37
101	2	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHB	EA	2
101	3	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT	UHB	EA	2
101	4	PAOZZ	9905-00-052-8033	97499	204-060-589-1	PLATE,INSTRUCTION	UHB	EA	1
101	5	PAOZZ	5305-00-059-3660	96906	MS51958-64	.SCREW,MACHINE	UHB,UHC,UHM	EA	18
101	6	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT	UHB,UHC,UHM	EA	18
101	7	PAOOO	1560-00-716-8596	97499	204-060-868-1	.RING ASSY,ENGINE	UHB,UHC,UHM	EA	1
101	8	MOOZZ		97499	204-060-868-5	..GASKET	UHB,UHC,UHM	EA	3
101	9	PAOZZ	5310-00-623-5989	80205	NAS1031A3	..NUT,SELF-LOCKING,PL	UHB,UHC,UHM	EA	18
101	10	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON	UHB	EA	8
101	11	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT	UHB	EA	8
101	13	PAOZZ	5306-00-182-2059	88044	AN3H6A	.BOLT,MACHINE	UHB	EA	8
101	14	PAOZZ	5306-00-182-1856	88044	AN3CH7A	.BOLT,MACHINE U/O PN 204-060-815-145,-147	UHB,UHC,UHM	EA	2
101	15	PAOZZ	1560-00-056-2311	97499	204-060-499-1	.BRACKET,REDUCER TUB	UHB,UHC,UHM	EA	1
101	17	PAOZZ	5310-00-077-2114	97499	204-060-927-1	.WASHER,FLAT	UHB	EA	8
101	18	PAOZZ	1560-00-675-3261	97499	204-060-934-3	.BRACKET,COWL LATCH	UHB	EA	2
101	19	PAOZZ	1560-00-675-3262	97499	204-060-936-1	.PLATE, FITTING, COW	UHB	EA	2
101	20	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB	EA	8
101	25	PAOZZ	1560-00-675-3260	97499	204-060-934-1	.BRACKET,COWL LATCH	UHB	EA	2
101	27	XAOFF		97499	204-060-815-203	.FIREWALL ASSY,FWD U/O PN 204-060-815-205 & -207	UHB	EA	1
101	27	XAOFF		97499	204-060-815-211	.FIREWALL ASSY,FWD U/O PN 204-060-815-213 SEE FIG.102 FOR BALANCE OF BREAKDOWN	UHC,UHM	EA	1
101	28	PAOZZ	1560-00-768-2439	97499	204-060-807-1	..BRACKET,FIREWALL	UHB	EA	1
101	29	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK FASTENER	UHB	EA	2
101	30	PAOZZ	5325-00-281-5081	72794	A3 1-2T9	..STUD,TURNLOCK FASTENER	UHB	EA	1
101	31	PAOZZ	5325-00-281-5074	72794	A3 1-2T13	..STUD,TURNLOCK FASTENER	UHB	EA	1
101	32	PAOOO	5325-00-298-7027	72794	RF3 1-2	..RECEPTACLE,TURNLOCK	UHB	EA	5
101	33	PAOZZ	5365-00-720-3191	72794	RF3 1-2 5	...SPACER	UHB	EA	5
101	34	XDOZZ		97499	204-060-965-1	..STIFFENER-LH	UHB	EA	1
101	35	PBOZZ	1560-00-065-2065	97499	204-060-965-2	..STIFFENER-RH	UHB	EA	1
101	36	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	..SCREW,MACHINE	UHB,UHC,UHM	EA	2
101	37	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT	UHB,UHC,UHM	EA	2
101	38	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	2
101	39	PAOZZ	5340-00-817-1413	71286	7C1-8W	..CLAMP,LOOP	UHB,UHC,UHM	EA	2
101	40	PAOZZ	5305-00-925-9674	96906	MS27039-1-10	..SCREW,MACHINE	UHB,UHC,UHM	EA	1
101	41	PBOZZ	5310-00-177-7746	97499	140-009813T64	..WASHER,FLAT	UHB,UHC,UHM	EA	1
101	42	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	1
101	43	PAOZZ	5340-00-073-4730	71286	7C1-24W	..CLAMP ASSEMBLY	UHB,UHC,UHM	EA	1
101	44	PAOZZ	5305-00-944-5929	96906	MS27039-1-07	..SCREW,MACHINE	UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
101	45	PAOZZ	5310-00-167-0765	88044	AN970-3	WASHER, FLAT	UHM	EA	2
101	46	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER, FLAT	UHM	EA	1
101	47	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT, SELF-LOCKING, EX WASHER, HEXAGON	UHM		
101	55	PBOFF	1560-00-602-3428	97499	204-060-884-1	FIREWALL ASSY, AFT SEE FIG 97 FOR NHA	UHM	EA	1
101	55A	PAOZZ	5310-00-782-7094	96906	MS21048L3	. NUT, SELF-LOCKING, PLATE	UHM	EA	16
101	56	XAOFF		97499	204-060-884-3	FIREWALL ASSY, ENGINE UPPER AFT	UHM	EA	1
101	57	PBOZZ	5340-00-890-0103	96906	MS17990-409	PIN, QUICK RELEAS	UHM	EA	8
101	58	MCOZZ		97499	25C10-1A6	CHAIN, WELDLESS	UHM	EA	8
101	59	PAOOO	5325-00-432-9810	72794	RF5	RECEPTACLE, TURNLOCK FASTENER	UHM	EA	3
101	60	PAOZZ	5325-00-432-9964	72794	RF5-5	.EYELET, TURNLOCK	UHM	EA	3
101	61	PAOZZ	5306-00-182-2059	88044	AN3H6A	BOLT, MACHINE	UHM	EA	16
101	62	PAOZZ	5310-00-167-0801	88044	AN960C10	WASHER, FLAT	UHM	EA	16
101	63	PAOZZ	5310-00-059-9263	96906	MS21046C3	NUT, SELF-LOCKING, HE	UHM	EA	16
101	64	PAOZZ	1560-00-977-7477	97499	204-060-944-1	BRACKET, AFT FIREWAL	UHM	EA	4
101	65	PAOZZ	5325-00-291-0388	61864	99833P130	RECEPTACLE, TURNLOCK FASTENER	UHM	EA	5
101	66	MOOZZ		97499	85T4-2-10	TUBE	UHM	EA	4
101		PAOFF	1560-00-918-1894	97499	204-060-817-35	FIREWALL ASSEMBLY, LOWER AFT SEE FIG 95 FOR NHA	UHM	EA	1
101	68	PAOZZ	5315-00-449-2945	76530	99836	PIN, GROOVED, HEADLES	UHM	EA	2
101	69	PAOZZ	5310-00-772-6549	76530	294119-06	WASHER, FLAT	UHM	EA	2
101	70	PAOZZ	5325-00-281-4915	76530	98292-3-300	STUD, TURNLOCK FASTE	UHM	EA	2
101	71	PAOZZ	5315-00-449-2945	76530	99836	PIN, GROOVED, HEADLES	UHM	EA	3
101	72	PAOZZ	5310-00-772-6549	76530	294119-06	WASHER, FLAT	UHM	EA	3
101	73	PAOZZ	5325-00-202-3045	76530	98292-2-170	STUD, TURNLOCK, FASTENER	UHM	EA	3
101	74	PAOZZ	5305-00-059-3659	96906	MS51958-63	SCREW, MACHINE	UHM	EA	23
101	75	PAOZZ	5310-00-167-0812	88044	AN960C10L	WASHER, FLAT	UHM	EA	23
101	76	PAOZZ	5310-00-844-3302	96906	MS21043-3	NUT, PLAIN, EXTENDED	UHM	EA	23
101	77	XDOZZ	1560-00-911-8605	97499	204-060-817-39	COVER ASSEMBLY, FIRE	UHM	EA	1
101	78	XBOZZ	5330-00-946-4879	97499	204-060-817-47	.GASKET	UHM	EA	1
101	79	XDOZZ	5330-00-946-4878	97499	204-060-817-49	.GASKET	UHM	EA	1
101	80	XAOFF		97499	204-060-817-37	FIREWALL ASSEMBLY	UHM	EA	1
101	81	PAOOO	5325-00-432-9810	72794	RF5	.RECEPTACLE, TURNLOCK FASTENER	UHM	EA	4
101	82	PAOZZ	5325-00-432-9964	72794	RF5-5	. EYELET, TURNLOCK	UHM	EA	4
101		XCFZZ		97499	204-060-819-1	BEAM INSTL, FWD & AFT FIREWALL SEE FIG 95 FOR NHA	UHM	EA	1
101	84	PAOOO	1560-00-675-3245	97499	204-060-819-3	BEAM ASSY, FIREWALL	UHM	EA	1
101	85	PAOZZ	5340-00-205-5546	96906	MS17990-403	.PIN, QUICK RELEASE	UHM	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
101	85	MOOZZ		80205	NAS1455-00-4	..CHAIN,WELDLESS..........UHB,UHC,UHM	EA	2
101		PAOFF	1560-00-831-1456	97499	204-060-818-3	FIRESHIELD ASSEMBLY SEE FIG.95 FOR NHA..........UHB,UHC,UHM	EA	1
101	89	PAOZZ	5330-00-675-3244	97499	204-060-818-9	.GASKET..........UHB,UHC,UHM	EA	1
101	90	PAOZZ	5310-00-771-7348	96906	MS21048-3	.NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	8

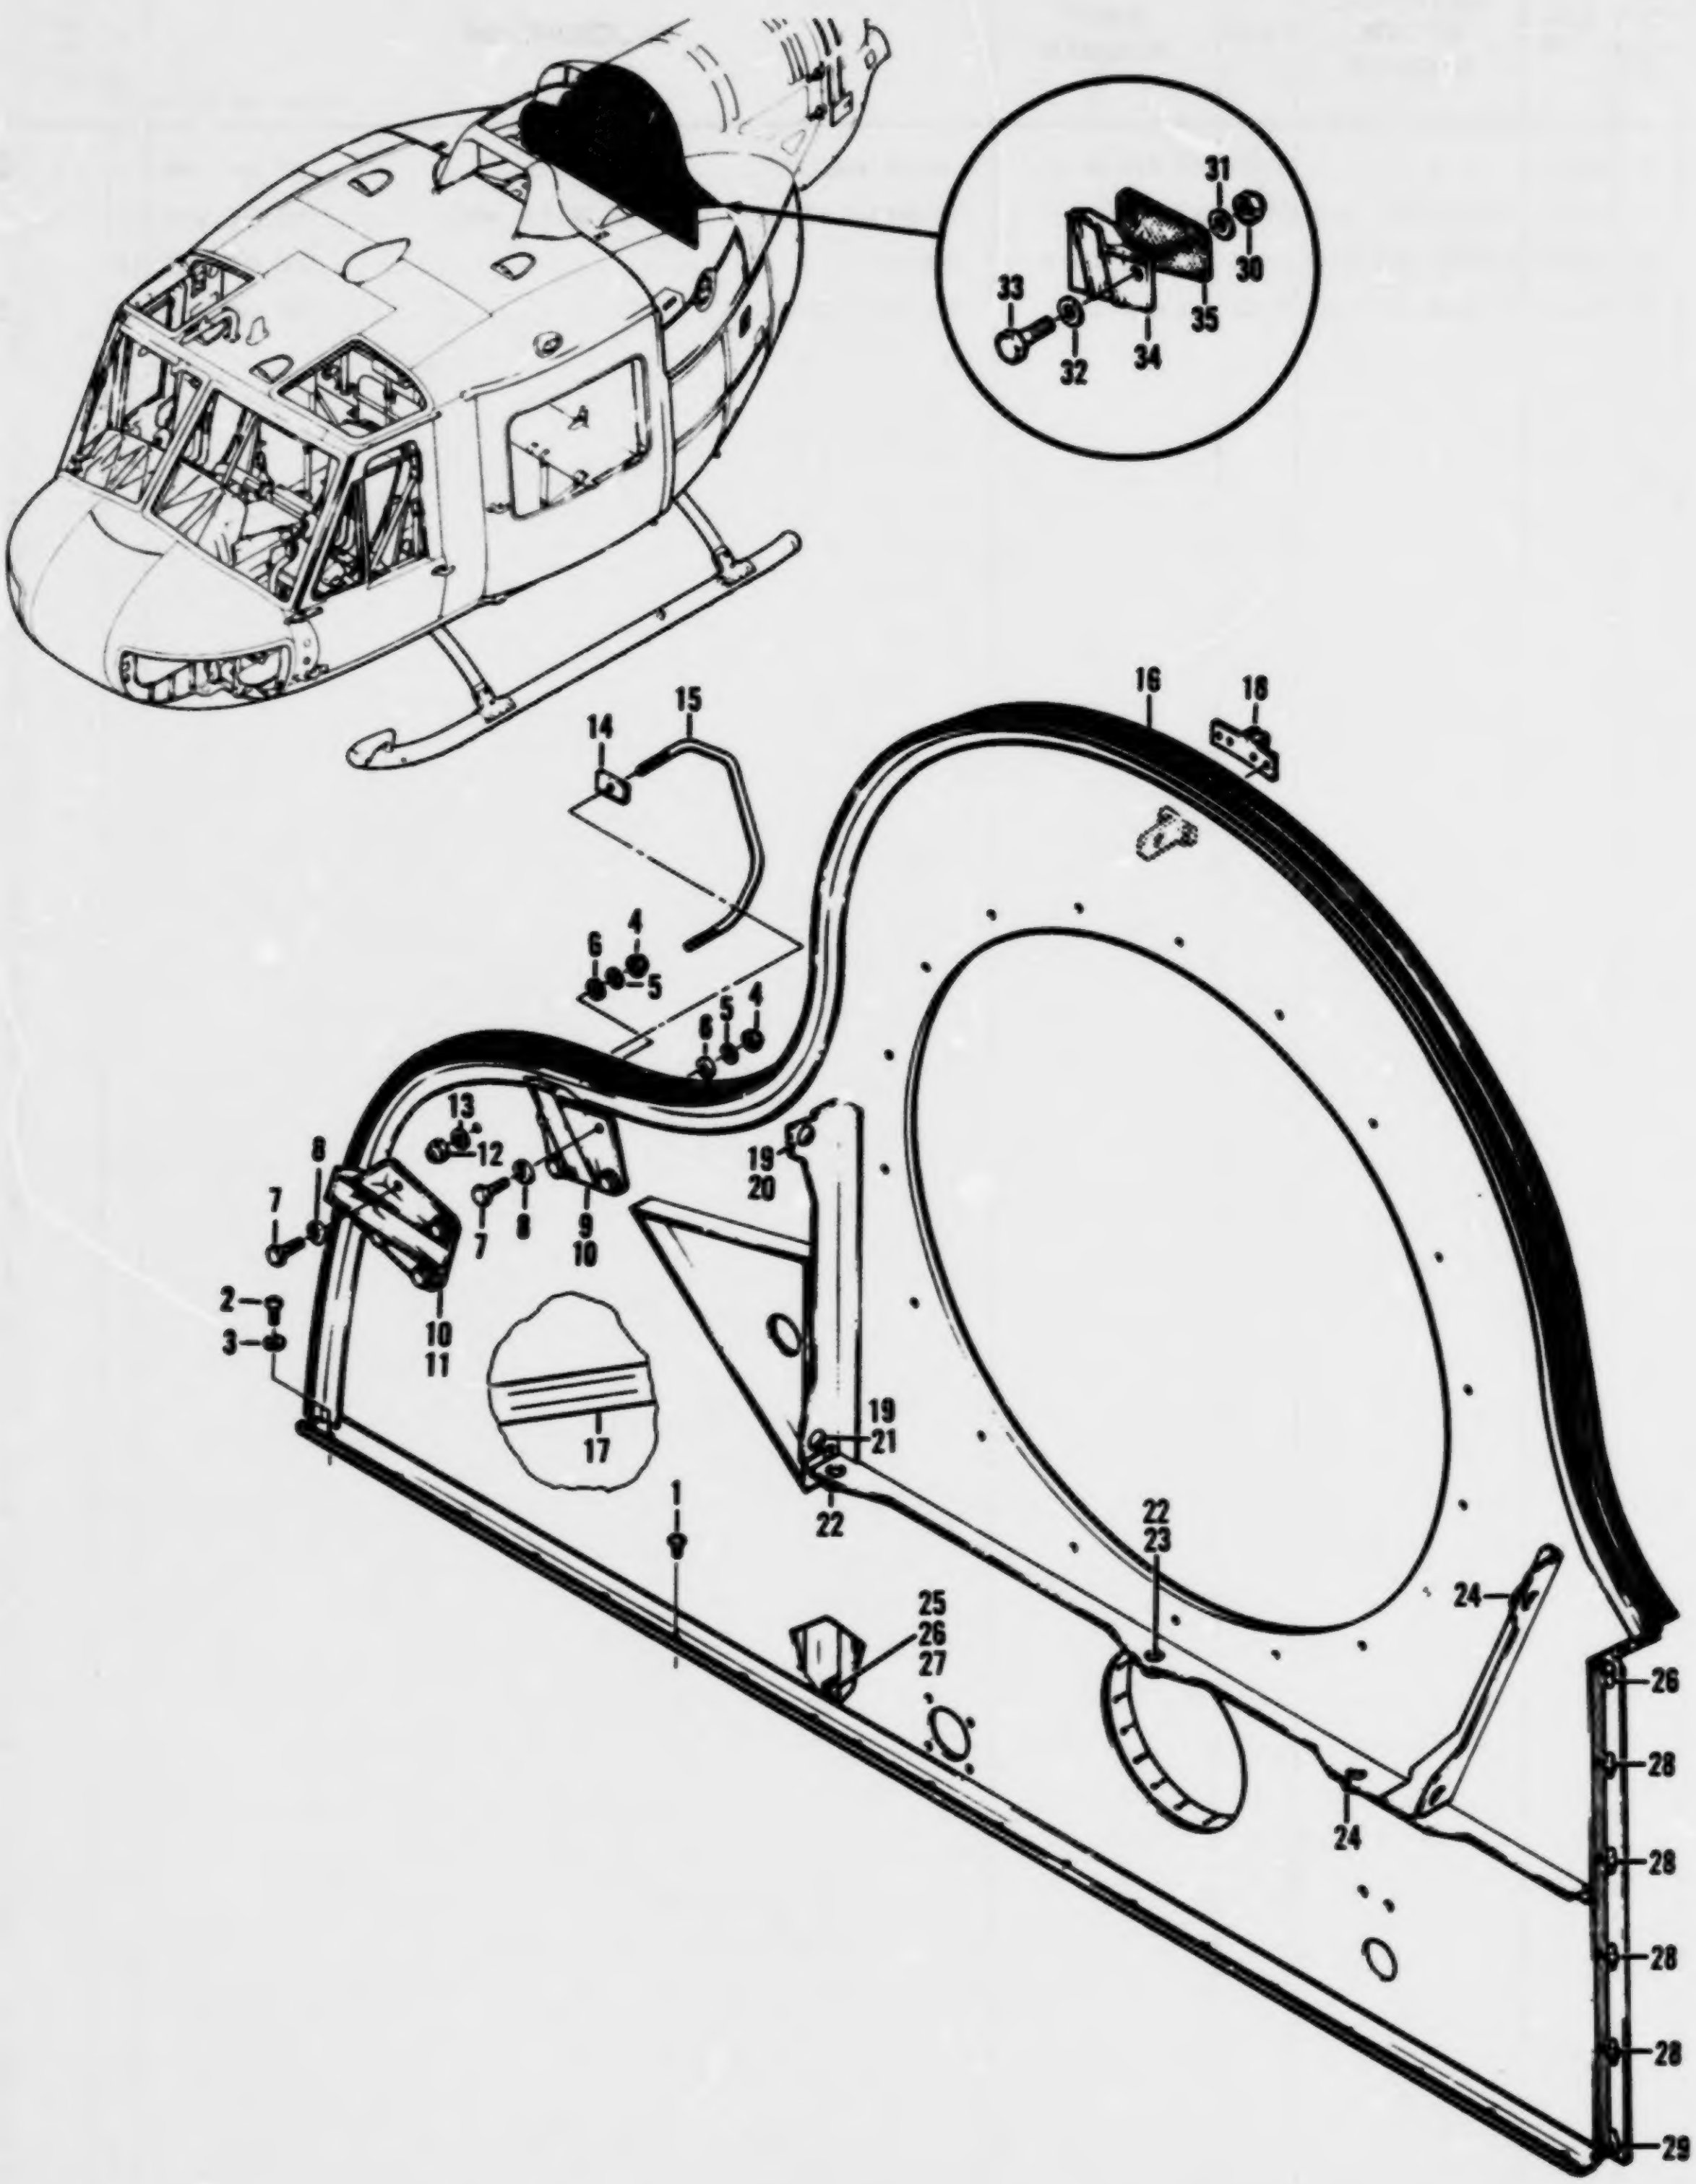
31
30
33
35
32
34
16
18
15
14
4
6
5
5
4
6
13
12
8
7
8
9
10
19
20
7
2
3
10
11
17
19
21
22
1
22
23
24
25
26
27
26
28
24
28
28
28
29

Figure 102. Firewall Assembly, Power Plant

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
102		PBOFF	1560-00-150-8901	97499	204-060-815-213	FIREWALL ASSY,FWD SEE FIG.95 FOR NHA ....UHC,UHM	EA	1
102	1	PAOZZ	5305-0C-781-9057	96906	MS27039-1-08	.SCREW,MACHINE ....UHC,UHM	EA	32
102	2	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE ....UHC,UHM	EA	1
102	3	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT ....UHC,UHM	EA	1
102	4	PAOZZ	5310-00-844-3302	96906	MS21043-3	.NUT,PLAIN,EXTENDED ....UHC,UHM	EA	8
102	5	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT ....UHC,UHM	EA	8
102	6	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT ....UHC,UHM	EA	8
102	7	PAOZZ	5306-00-182-1855	88044	AN3CH6A	.BOLT,MACHINE ....UHC,UHM	EA	8
102	8	PAOZZ	5310-00-077-2114	97499	204-060-927-1	.WASHER,FLAT ....UHC,UHM	EA	8
102	9	PAOZZ	1560-00-675-3261	97499	204-060-934-3	.BRACKET,COWL LATCH ....UHC,UHM	EA	1
102	10	PAOZZ	1560-00-675-3260	97499	204-060-934-1	.BRACKET,COWL LATCH ....UHC,UHM	EA	1
102	11	PAOZZ	1560-00-675-3262	97499	204-060-936-1	.PLATE,FITTING ....UHC,UHM	EA	2
102	12	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHC,UHM	EA	2
102	13	PAOZZ	5310-00-167-0767	88044	AN970-5	.WASHER,FLAT ....UHC,UHM	EA	2
102	14	PAOZZ	5310-00-072-4914	97499	204-060-964-1	.NUT ....UHC,UHM	EA	2
102	15	XDOZZ	5340-00-866-6115	97499	204-060-963-3	.HANDLE,BOW ....UHC,UHM	EA	1
102	16	XAOFF		97499	204-060-815-211	.FIREWALL ASSY ....UHC,UHM	EA	1
102	17	PBOZZ	1560-00-065-2066	97499	204-060-965-2	..STIFFENER-RH ....UHC,UHM	EA	1
102	18	PAOZZ	1560-00-768-2439	97499	204-060-807-1	..BRACKET,FIREWALL ....UHC,UHM	EA	1
102	19	PAOZZ	5325-00-281-4969	72794	GH3-1-2	..EYELET,TURNLOCK ....UHC,UHM	EA	2
102	20	PAOZZ	5325-00-281-5081	72794	A3 1-2T9	..STUD,TURNLOCK FASTENER ....UHC,UHM	EA	1
102	21	PAOZZ	5325-00-281-5074	72794	A3 1-2T13	..STUD,TURNLOCK FASTENER ....UHC,UHM	EA	1
102	22	PAOOO	5325-00-298-7027	72794	RF3 1-2	..RECEPTACLE,TURNLOCK FASTENER ....UHC,UHM	EA	2
102	23	PAOZZ	5365-00-720-3191	72794	RF3 1-2 5	...SPACER ....UHC,UHM	EA	2
102	24	PAOOO	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER ....UHC,UHM	EA	2
102	25	PAOZZ	5306-00-180-2769	88044	AN3CH3A	..BOLT,MACHINE ....UHC,UHM	EA	8
102	26	PAOZZ	5310-00-167-0812	88044	AN960C10L	..WASHER,FLAT ....UHC,UHM	EA	8
102	27	PAOZZ	5310-00-844-3302	96906	MS21043-3	..NUT,PLAIN,EXTENDED ....UHC,UHM	EA	8
102	28	PAOZZ	5310-00-762-6148	96906	MS21070-3	..NUT,SELF-LOCKING, PLATE ....UHC,UHM	EA	4
102	29	PAOZZ	5310-00-779-3601	96906	MS21062-3	..NUT,SELF-LOCKING, PLATE ....UHC,UHM	EA	4
102	30	PAOZZ	5310-00-844-3302	96906	MS21043-3	.NUT,PLAIN,EXTENDED ....UHC,UHM	EA	3
102	31	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT ....UHC,UHM	EA	3
102	32	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT ....UHC,UHM	EA	3
102	33	PAOZZ	5306-00-182-1855	88044	AN3CH6A	.BOLT,MACHINE ....UHC,UHM	EA	3
102	34	PAOZZ	1560-00-757-8762	97499	204-060-934-5	.BRACKET,COWL LATCH ....UHC,UHM	EA	1
102	35	PAOZZ	5365-00-792-5089	97499	204-060-936-3	.SPACER,PLATE ....UHC,UHM	EA	1

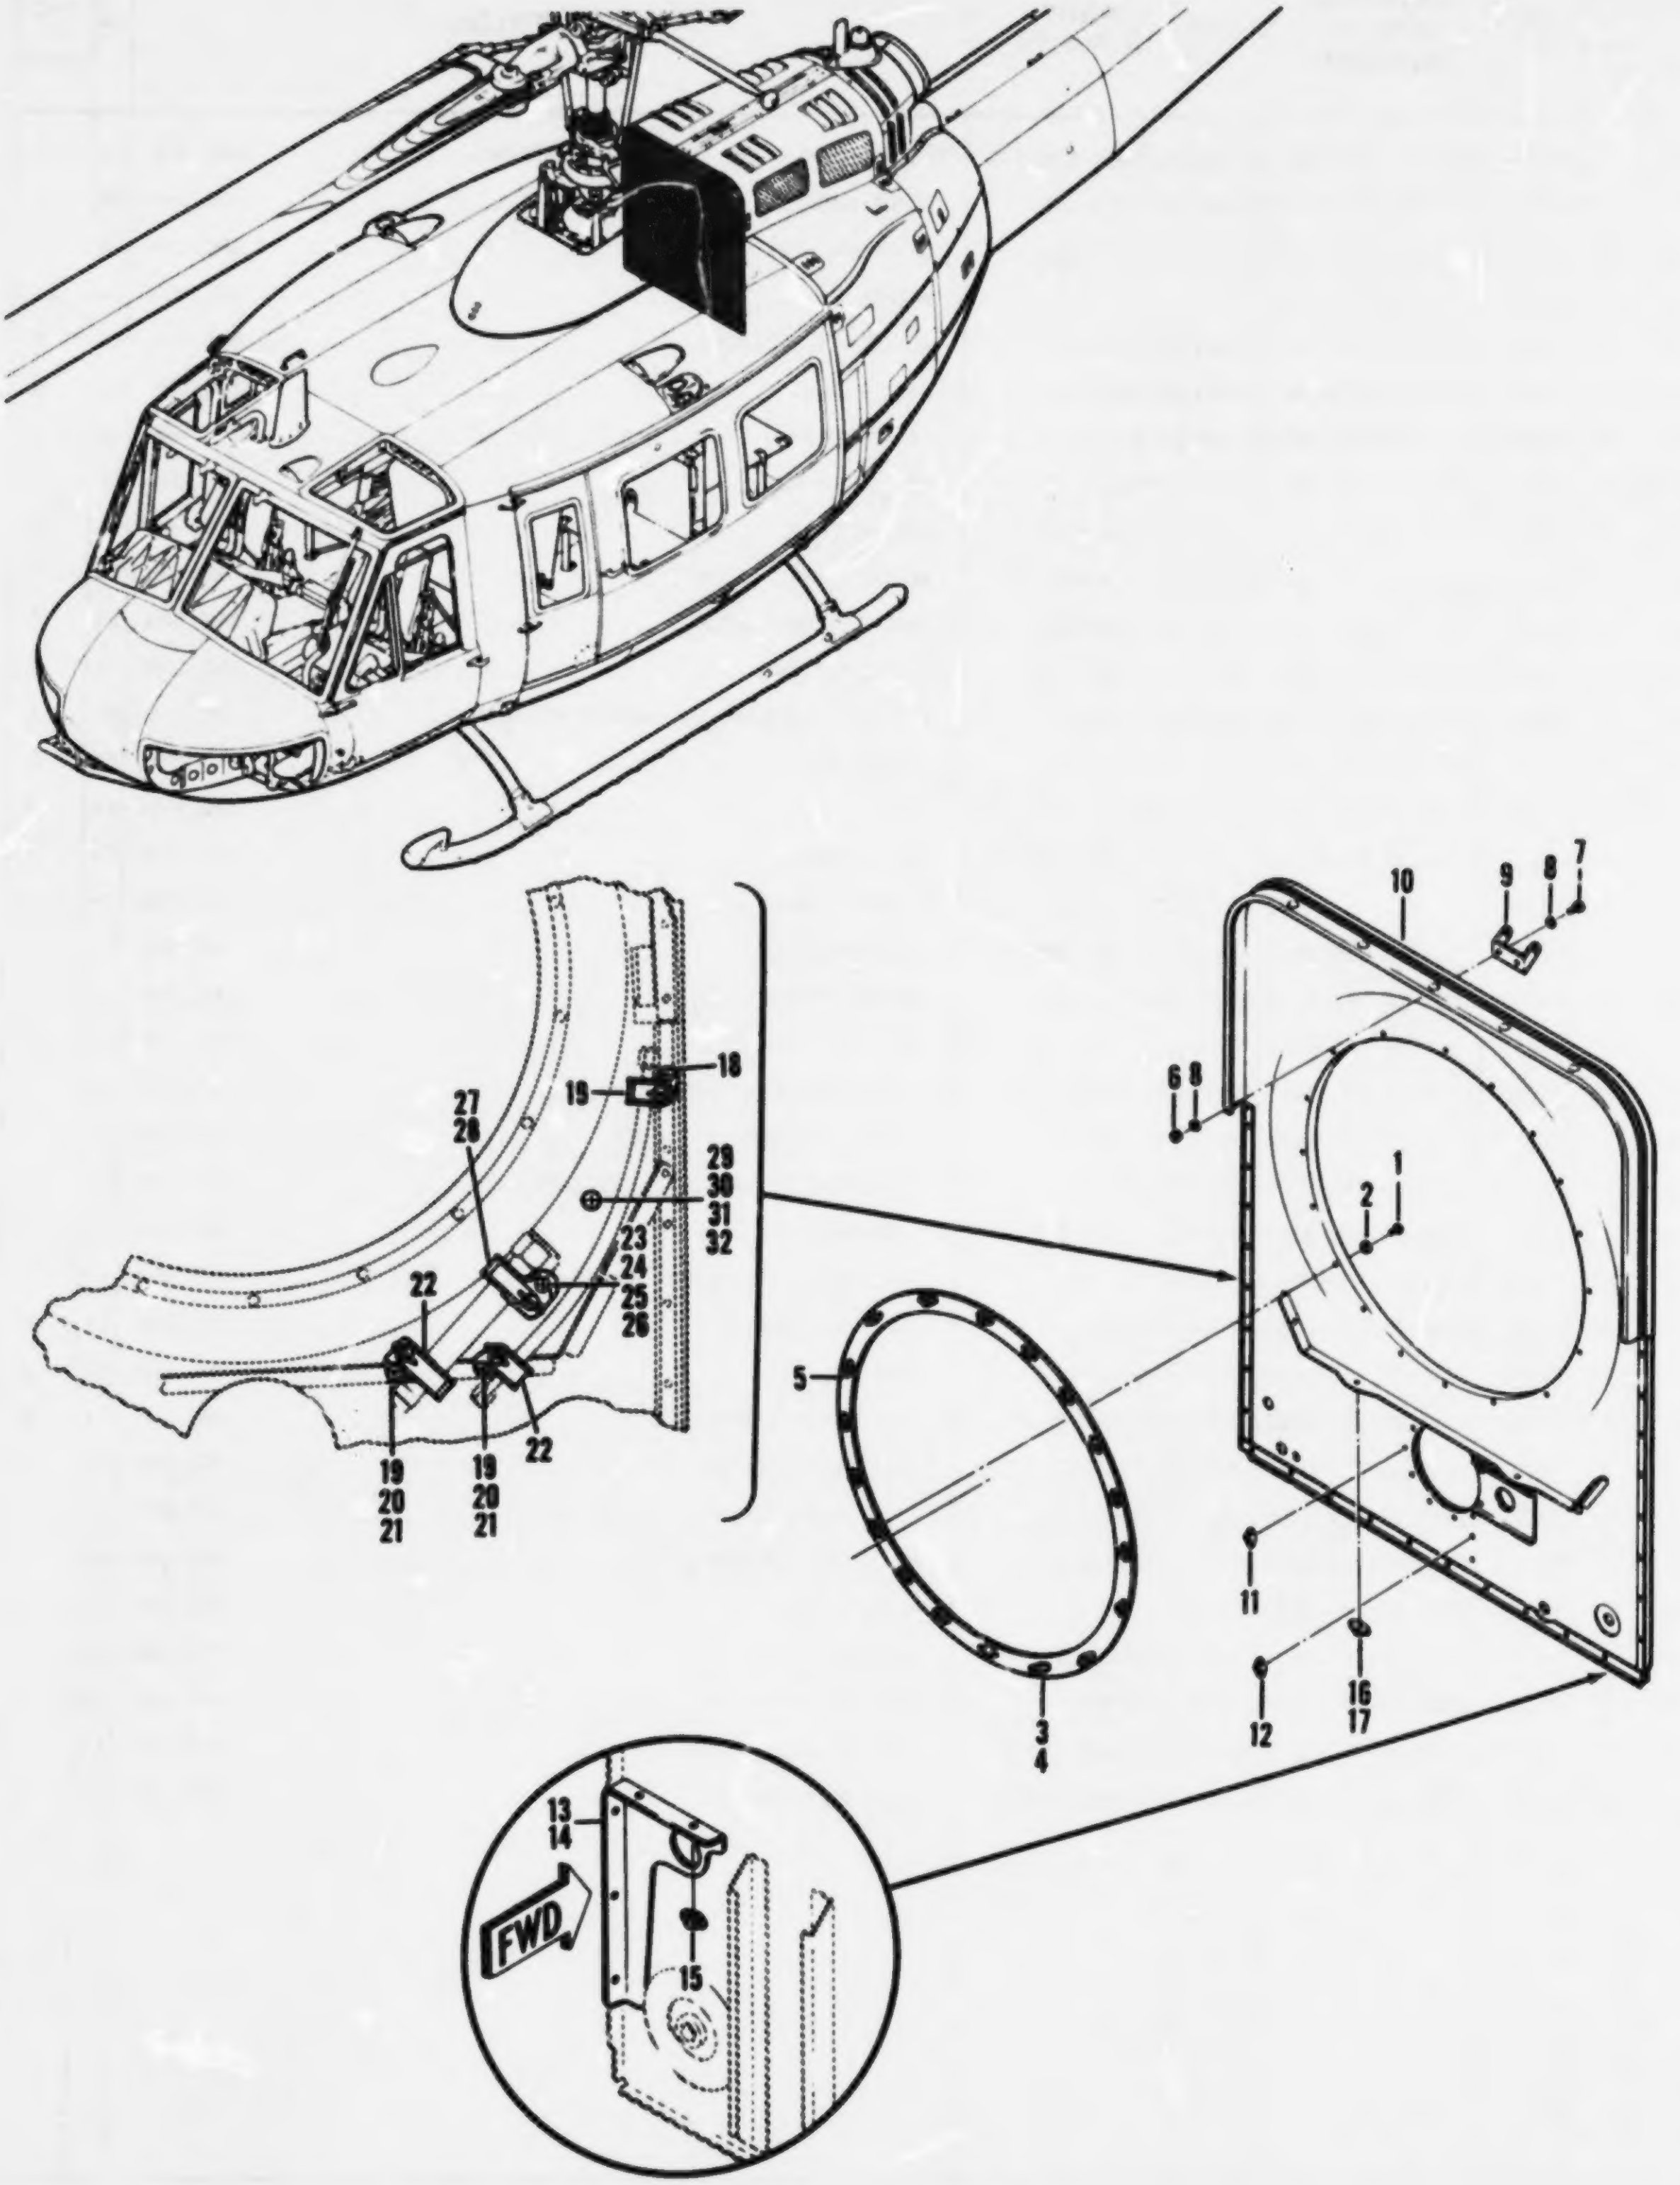
10
9
8
7
6
8
18
19
27
28
29
30
31
32
1
2
23
24
25
26
22
5
19
20
21
19
20
21
22
11
12
16
17
3
4
13
14
FWD
15

Figure 103. Firewall Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
103		PAOFF	1560-00-150-8902	97499	205-060-908-119	FIREWALL ASSEMBLY SEE FIG.96 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
103		PBOFF	1560-00-150-8911	97499	205-060-908-125	FIREWALL ASSEMBLY USBL EFF 65-9565 THRU 65-9810 SEE FIG.96 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
103		PAOFF	1560-00-181-5266	97499	205-060-908-117	FIREWALL ASSEMBLY USBL EFF 65-9811 & SUBSEQUENT SEE FIG.96 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
103	1	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE.........UHE,UHH,UHV,UHX	EA	18
103	2	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT.........UHE,UHH,UHV,UHX	EA	18
103	3	PAOOO	1560-00-716-8596	97499	204-060-868-1	.RING ASSY,ENGINE U/O 205-060-908-119 AND 205-060-908-125.........UHE,UHH,UHV,UHX	EA	1
103	4	MFOZZ		97499	204-060-868-5	..GASKET U/O PN 204-060-868-1.........UHE,UHH,UHV,UHX	EA	3
103	5	PAOZZ	5310-00-623-5989	80205	NAS1031A3	..NUT,SELF-LOCKING,PL.........UHE,UHH,UHV,UHX	EA	18
103	6	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	2
103	7	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE.........UHE,UHH,UHV,UHX	EA	2
103	8	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT.........UHE,UHH,UHV,UHX	EA	2
103	9	PAOZZ	1560-00-966-6101	97499	205-060-910-1	.FITTING,BEAM,FIREWA.........UHE,UHH,UHV,UHX	EA	1
103	10	XAOFF		97499	205-060-908-121	.FIREWALL ASSEMBLY U/O PN 205-060-908-119....UHE,UHH,UHV,UHX	EA	1
103	10	XAOFF		97499	205-060-908-127	.FIREWALL ASSEMBLY U/O PN 205-060-908-125....UHE,UHH,UHV,UHX	EA	1
103	10	XAOFF		97499	205-060-908-113	.FIREWALL ASSEMBLY U/O PN 205-060-908-117....UHE,UHH,UHV,UHX	EA	1
103	11	PAOZZ	5310-00-771-7406	96906	MS21076L3	..NUT,SELF-LOCKING,PL.........UHE,UHH,UHV,UHX	EA	10
103	12	PAOZZ	5310-00-728-9458	96906	MS21070L3	..NUT,SELF-LOCKING,PL.........UHE,UHH,UHV,UHX	EA	2
103	13	PBOOO	1560-00-939-7623	97499	205-060-920-7	..BRACKET ASSY FUSELAGE WEBBING.........UHE,UHH,UHV,UHX	EA	1
103	14	PAOZZ	5310-00-762-6148	96906	MS21070-3	...NUT,SELF-LOCKING,PL.........UHE,UHH,UHV,UHX	EA	5
103	15	PAOZZ	5325-00-282-7466	72794	R3 1-2	..RECEPTACLE,TURNLOCK FASTENER.........UHE,UHH,UHV,UHX	EA	4
103	16	PAOOO	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER.........UHE,UHH,UHV,UHX	EA	5
103	17	PAOZZ	5325-00-432-9964	72794	RF5-5	..EYELET,TURNLOCK.........UHE,UHH,UHV,UHX	EA	5
103	18	XDOZZ	5305-00-925-7857	96906	MS27039-1-09	..SCREW,MACHINE.........UHE,UHH,UHV,UHX	EA	1
103	19	PAOZZ	5305-00-912-7307	96906	MS27039-1-06	..SCREW,MACHINE.........UHE,UHH,UHV,UHX	EA	2
103	20	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT.........UHE,UHH,UHV,UHX	EA	2
103	21	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	2
103	22	PAOZZ	5340-00-817-1413	71286	7C1-8W	..CLAMP,LOOP U/O PN 205-060-908-113.........UHE,UHH,UHV,UHX	EA	2
103	23	PAOZZ	5305-00-925-9674	96906	MS27039-1-10	..SCREW,MACHINE.........UHE,UHH,UHV,UHX	EA	1
103	24	PBOZZ	5310-00-177-7745	97499	140-009B13T64	..WASHER,FLAT U/O PN 205-060-908-113.........UHE,UHH,UHV UHX	EA	1
103	25	PBOZZ	5310-00-177-7745	97499	140-009F13T64	..WASHER,FLAT U/O PN 205-060-908-113.........UHE,UHH,UHV,UHX	EA	2
103	26	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	1
103	27	PAOZZ	5340-00-863-7178	71286	7C1-16W	..CLAMP,LOOP.........UHE,UHH,UHV,UHX	EA	2
103	28	PAOZZ	5340-00-073-4730	71286	7C1-24W	..CLAMP ASSEMBLY U/O PN 205-060-908-113......UHE,UHH,UHV,UHX	EA	1
103	29	PAOZZ	5305-00-944-6929	96906	MS27039-1-07	..SCREW,MACHINE.........UHE,UHH,UHV,UHX	EA	1
103	30	PAOZZ	5310-00-167-0765	88044	AN970-3	..WASHER,FLAT.........UHE,UHH,UHV,UHX	EA	2
103	31	PAOZZ	5310-00-167-0753	88044	AN960PD10L	..WASHER,FLAT.........UHE,UHH,UHV,UHX	EA	1
103	32	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........UHE,UHH,UHV,UHX	EA	1

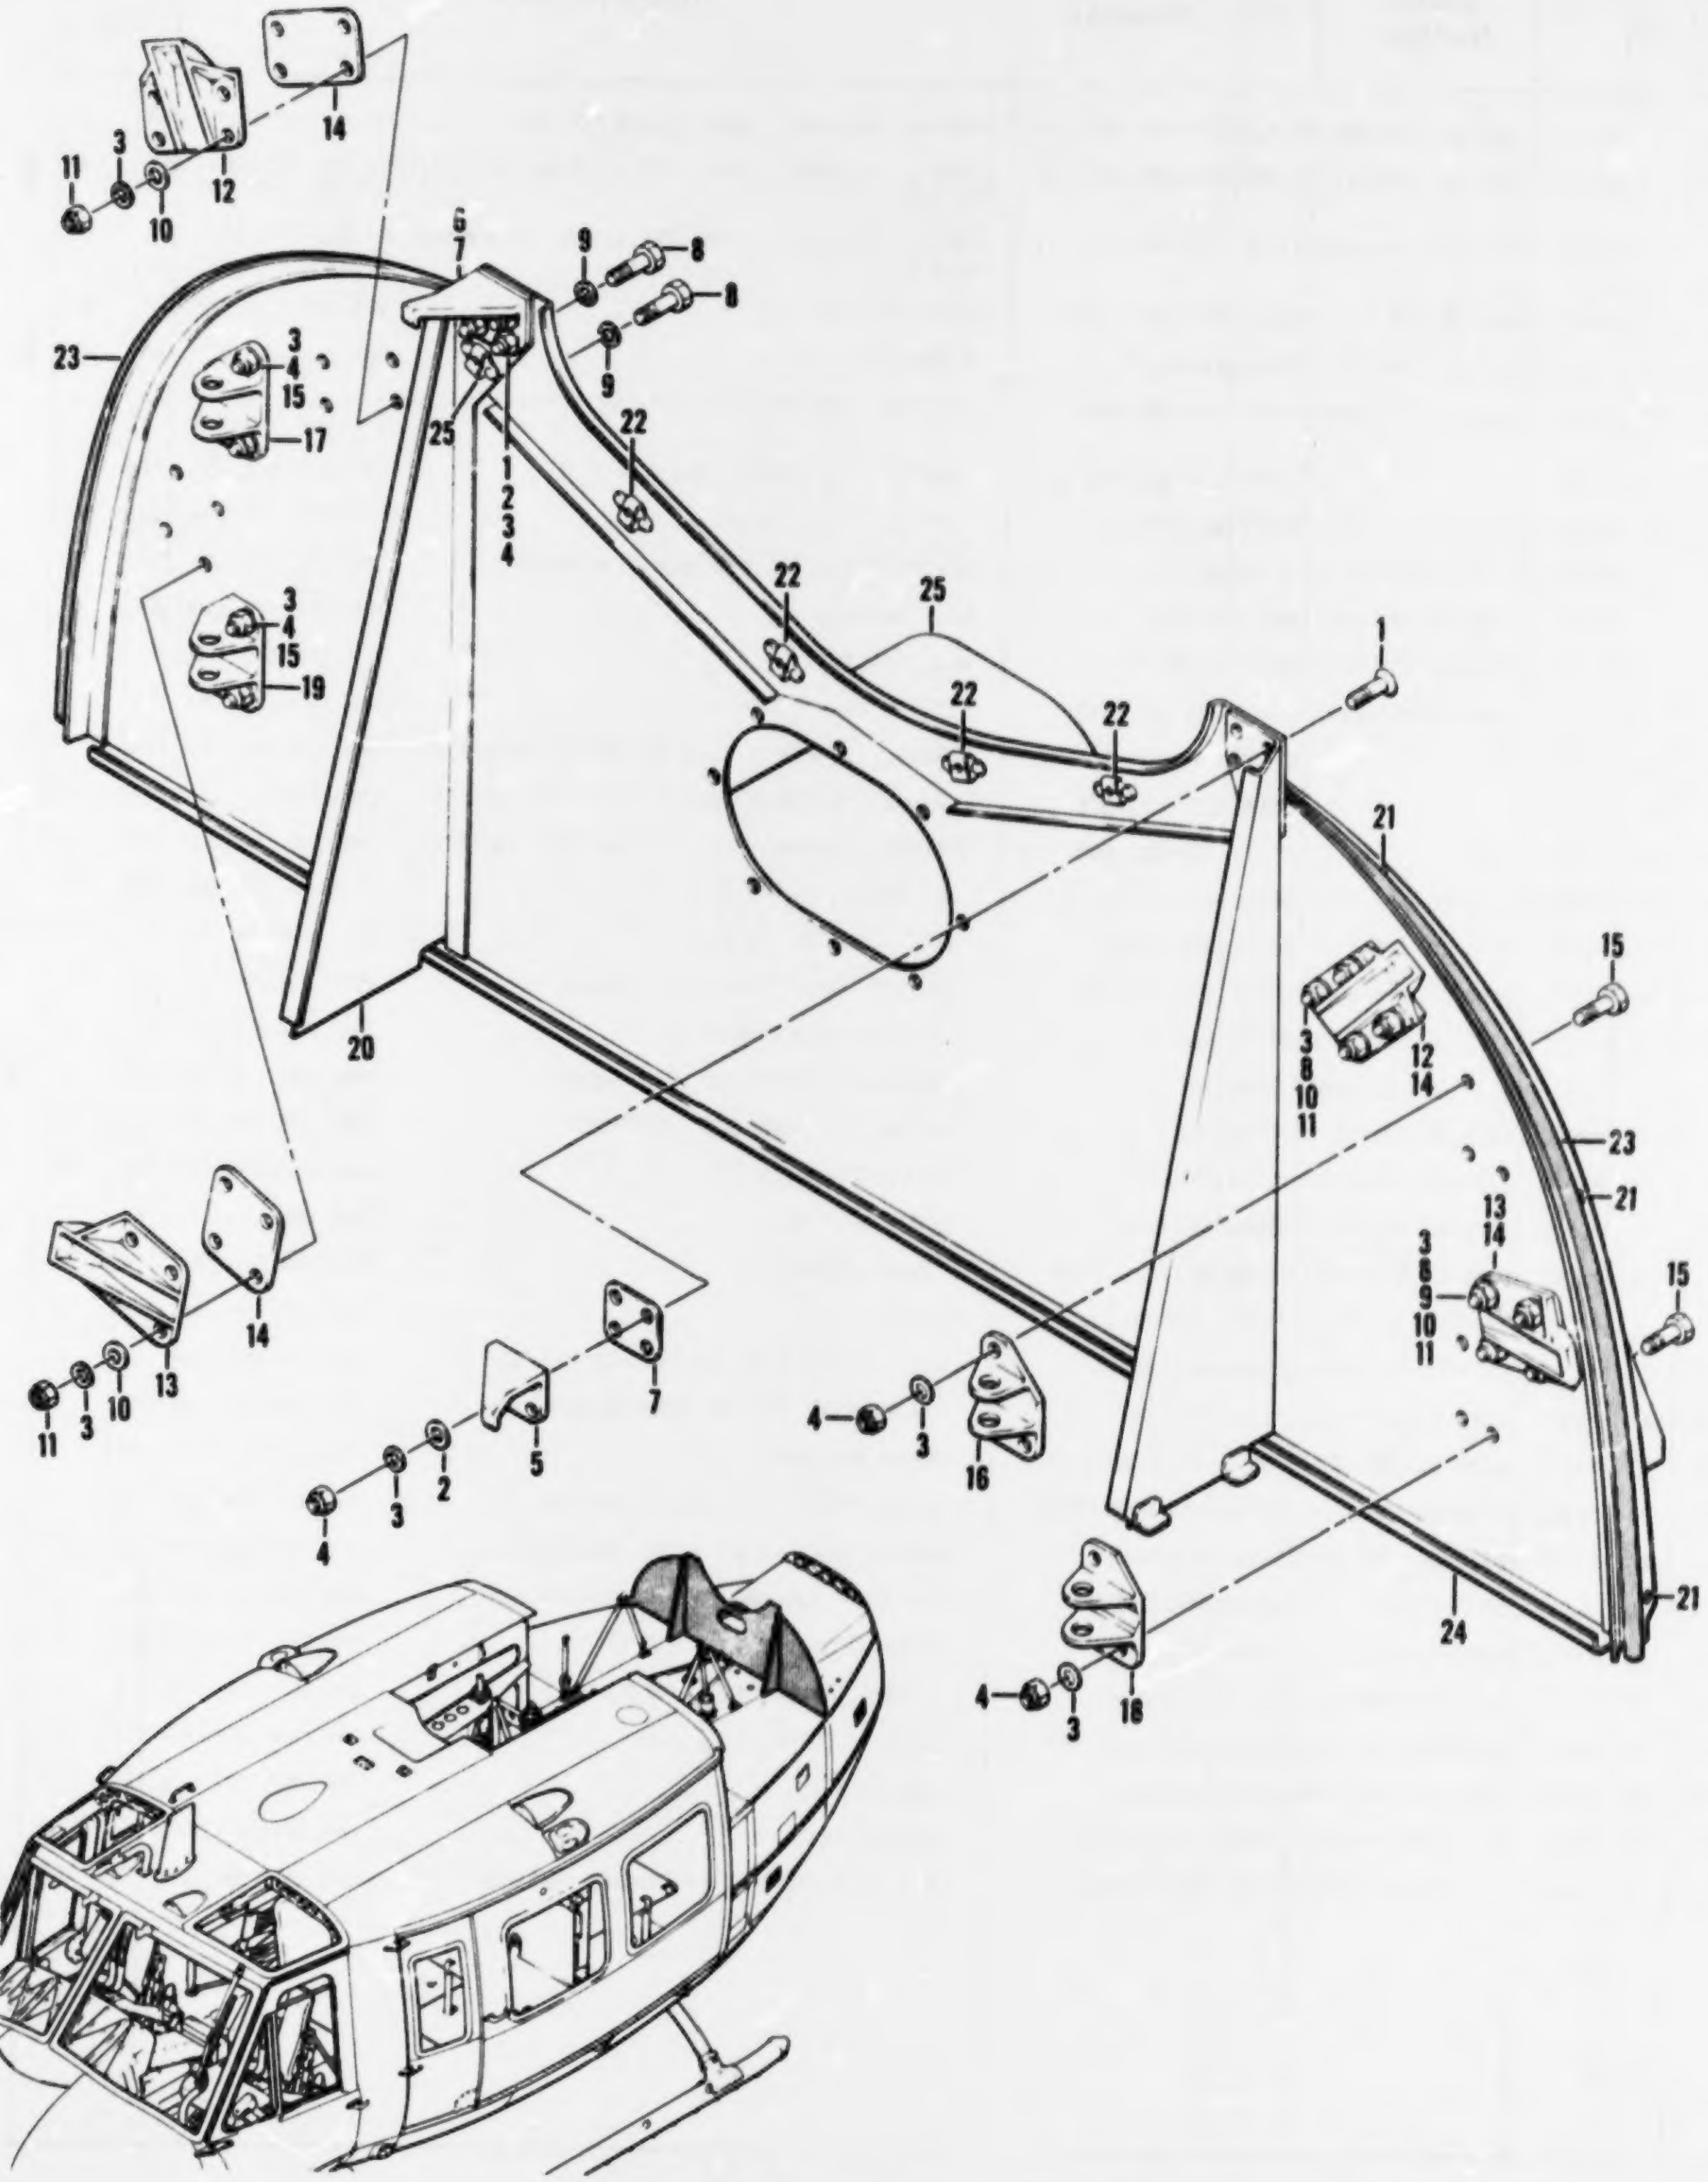
14
3
11
12
10
6
7
9
8
8
23
3
4
15
17
9
25
1
2
3
4
22
22
25
3
4
15
19
1
22
22
21
20
15
3
8
10
11
12
14
23
21
13
14
3
8
9
10
11
15
14
11
3
10
13
7
4
3
16
5
4
3
2
21
24
4
3
18

Figure 104. Firewall Assembly, Aft

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
104		PAOFF	1560-00-992-6502	97499	205-060-907-1	FIREWALL ASSEMBLY SEE FIG.96 FOR NHA.........UHE,UHH,UHV,UHX	EA	1
104	1	PAOZZ	5305-00-824-2029	96906	MS24694C56	.SCREW,MACHINE.................................UHE,UHH,UHV,UHX	EA	8
104	2	PAOZZ	5310-00-077-2114	97499	204-060-927-1	.WASHER,FLAT...................................UHE,UHH,UHV,UHX	EA	8
104	3	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT...................................UHE,UHH,UHV,UHX	EA	V
104	4	PAOZZ	5310-00-844-3302	96906	MS21043-3	.NUT,PLAIN,EXTENDED............................UHE,UHH,UHV,UHX	EA	V
104	5	PAOZZ	1560-00-992-6519	97499	205-060-912-1	.LATCH FITTING,AFT -LH.........................UHE,UHH,UHV,UHX	EA	1
104	6	PAOZZ	1560-00-992-6518	97499	205-060-912-2	.LATCH FITTING,AFT -RH.........................UHE,UHH,UHV,UHX	EA	1
104	7	PAOZZ	1560-00-992-6500	97499	205-060-917-1	.PLATE,AFT FIREWALL............................UHE,UHH,UHV,UHX	EA	2
104	8	PAOZZ	5306-00-182-1855	88044	AN3CH6A	.BOLT,MACHINE..................................UHE,UHH,UHV,UHX	EA	16
104	9	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT...................................UHE,UHH,UHV,UHX	EA	16
104	10	PAOZZ	5310-00-077-2114	97499	204-060-927-1	.WASHER,FLAT...................................UHE,UHH,UHV,UHX	EA	16
104	11	PAOZZ	5310-00-844-3302	96906	MS21043-3	.NUT,PLAIN,EXTENDED............................UHE,UHH,UHV,UHX	EA	16
104	12	PAOZZ	1560-00-992-6513	97499	205-060-913-1	.LATCH FITTING,AFT FIREWALL....................UHE,UHH,UHV,UHX	EA	2
104	13	PAOZZ	1560-00-992-6517	97499	205-060-913-3	.LATCH FITTING,AFT FIREWALL....................UHE,UHH,UHV,UHX	EA	2
104	14	PAOZZ	1560-00-675-3262	97499	204-060-936-1	.PLATE,FITTING,COWL............................UHE,UHH,UHV,UHX	EA	4
104	15	PAOZZ	5306-00-182-1853	88044	AN3CH4A	.BOLT,MACHINE..................................UHE,UHH,UHV,UHX	EA	12
104	16	PAOZZ	1560-00-992-6515	97499	205-060-918-3	.SUPPORT,STRUCTURAL -LH UPPER..................UHE,UHH,UHV,UHX	EA	1
104	17	PAOZZ	1560-00-992-6514	97499	205-060-918-4	.SUPPORT,STRUCTURAL -RH UPPER..................UHE,UHH,UHV,UHX	EA	1
104	18	PAOZZ	1560-00-992-6512	97499	205-060-918-1	.SUPPORT,STRUCTURAL -LH LOWER..................UHE,UHH,UHV,UHX	EA	1
104	19	PAOZZ	1560-00-992-6516	97499	205-060-918-2	.SUPPORT,STRUCTURAL -RH LOWER..................UHE,UHH,UHV,UHX	EA	1
104	20	XAOFZ		97499	205-060-907-3	.FIREWALL ASSEMBLY.............................UHE,UHH,UHV,UHX	EA	1
104	21	PAOOO	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER.................UHE,UHH,UHV,UHX	EA	6
104	22	PAOZZ	5325-00-291-0388	61864	99833P130	..RECEPTACLE,TURNLOCK FASTENER.................UHE,UHH,UHV,UHX	EA	6
104	23	MOOZZ	1560-00-413-1513	97499	205-060-907-35	..SEAL,FIREWALL................................UHE,UHH,UHV,UHX	EA	2
104	24	MFOZZ	1560-00-413-1514	97499	205-060-907-37	..GASKET,FIREWALL..............................UHE,UHH,UHV,UHX	EA	1
104	25	PAOZZ	1560-00-992-6501	97499	205-060-907-5	.SHIELD ASSEMBLY,AIR...........................UHE,UHH,UHV,UHX	EA	1

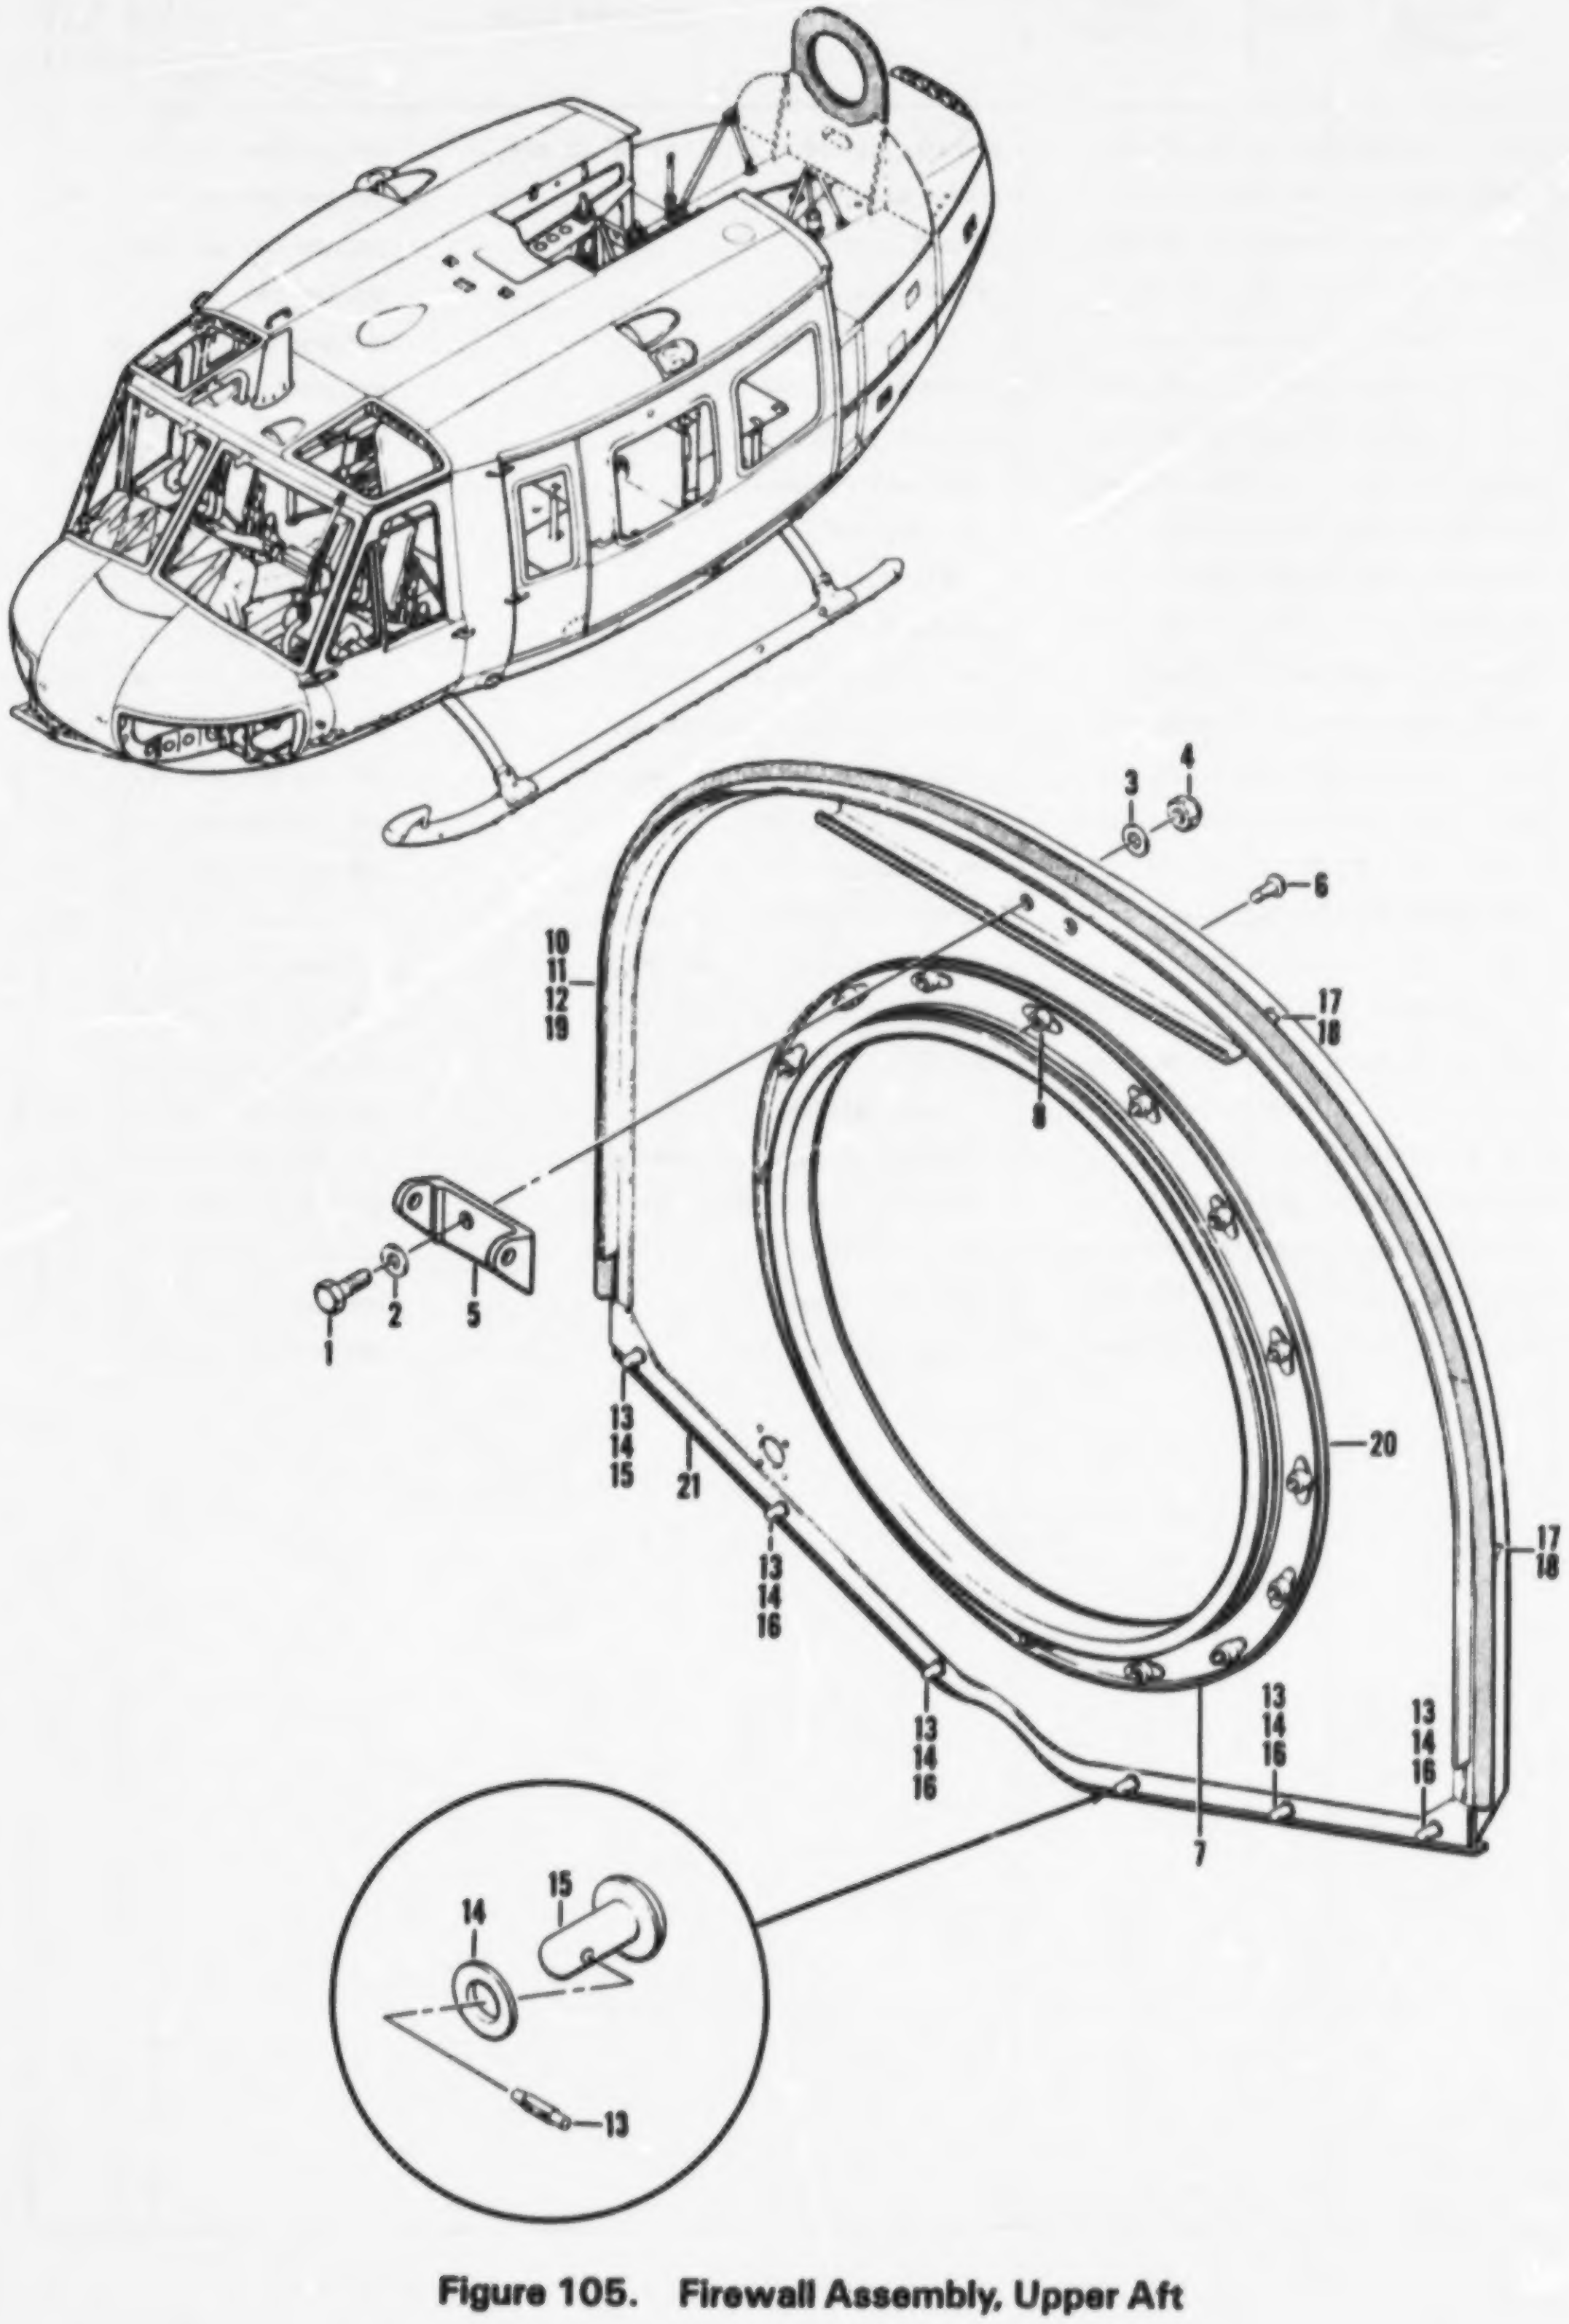
4
3
6
10
11
12
19
17
18
8
1
2
5
13
14
15
21
20
13
14
16
17
18
13
14
16
13
14
16
13
14
16
7
15
14
13

Figure 105. Firewall Assembly, Upper Aft

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
105		PAOFF	1560-00-076-7296	97499	205-060-909-25	FIREWALL ASSY,UPPER AFT SEE FIG.98 FOR NHA	UHE,UHH,UHV,UHX	EA	1
105	1	PAOZZ	5306-00-182-1853	88044	AN3CH4A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
105	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
105	3	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
105	4	PAOZZ	5310-00-844-3302	96906	MS21043-3	.NUT,PLAIN,EXTENDED	UHE,UHH,UHV,UHX	EA	2
105	5	PAOZZ	1560-00-966-6101	97499	205-060-910-1	.FITTING,BEAM	UHE,UHH,UHV,UHX	EA	1
105	6	PAOZZ	5305-00-059-3659	96906	MS51958-63	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	16
105	7	PAOOO	1560-00-069-6408	97499	205-060-909-29	.CHANNEL ASSY, FIREWALL	UHE,UHH,UHV,UHX	EA	1
105	8	PAOZZ	5310-00-782-7094	96906	MS21048L3	..NUT,SELF-LOCKING,PL -ALTERNATE-	UHE,UHH,UHV,UHX	EA	16
105	8	PAOZZ	5310-00-776-1936	96906	MS21048L3K	..NUT,SELF-LOCKING, ALTERNATE ITEM FOR PN MS21048L3 AT THIS LOCATION	UHE,UHH,UHV,UHX	EA	16
105	10	XAOFZ		97499	205-060-909-27	.FIREWALL ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
105	11	MFOZZ	1560-00-339-8736	97499	205-060-909-7	..SEAL,FIREWALL ASSY	UHE,UHH,UHV,UHX	EA	1
105	12	PAOZZ	1560-00-267-0398	97499	204-060-816-31	..RING,FIREWALL	UHE,UHH,UHV,UHX	EA	1
105	13	PAOZZ	5315-00-449-2946	76530	99836	..PIN,GROOVED,HEADLES	UHE,UHH,UHV,UHX	EA	6
105	14	PAOZZ	5310-00-772-6549	76530	294119-06	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	6
105	15	PAOZZ	5325-00-202-2691	76530	98292-2-200	..STUD,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	2
105	16	PAOZZ	5325-00-599-8767	76530	98292-2-160	..STUD,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	4
105	17	PAOOO	5325-00-432-9810	72794	RF5	..RECEPTACLE,TURNLOCK FASTENER	UHE,UHH,UHV,UHX	EA	4
105	18	PAOZZ	5325-00-432-9964	72794	RF5-5	...EYELET,TURNLOCK	UHE,UHH,UHV,UHX	EA	4
105	19	MFOZZ		97499	205-060-909-23	..GASKET	UHE,UHH,UHV,UHX	EA	1
105	20	MFOZZ		97499	204-060-816-33	..GASKET	UHE,UHH,UHV,UHX	EA	1
105	21	MFOZZ		97499	205-060-909-17	..GASKET	UHE,UHH,UHV,UHX	EA	1

Figure 106 deleted

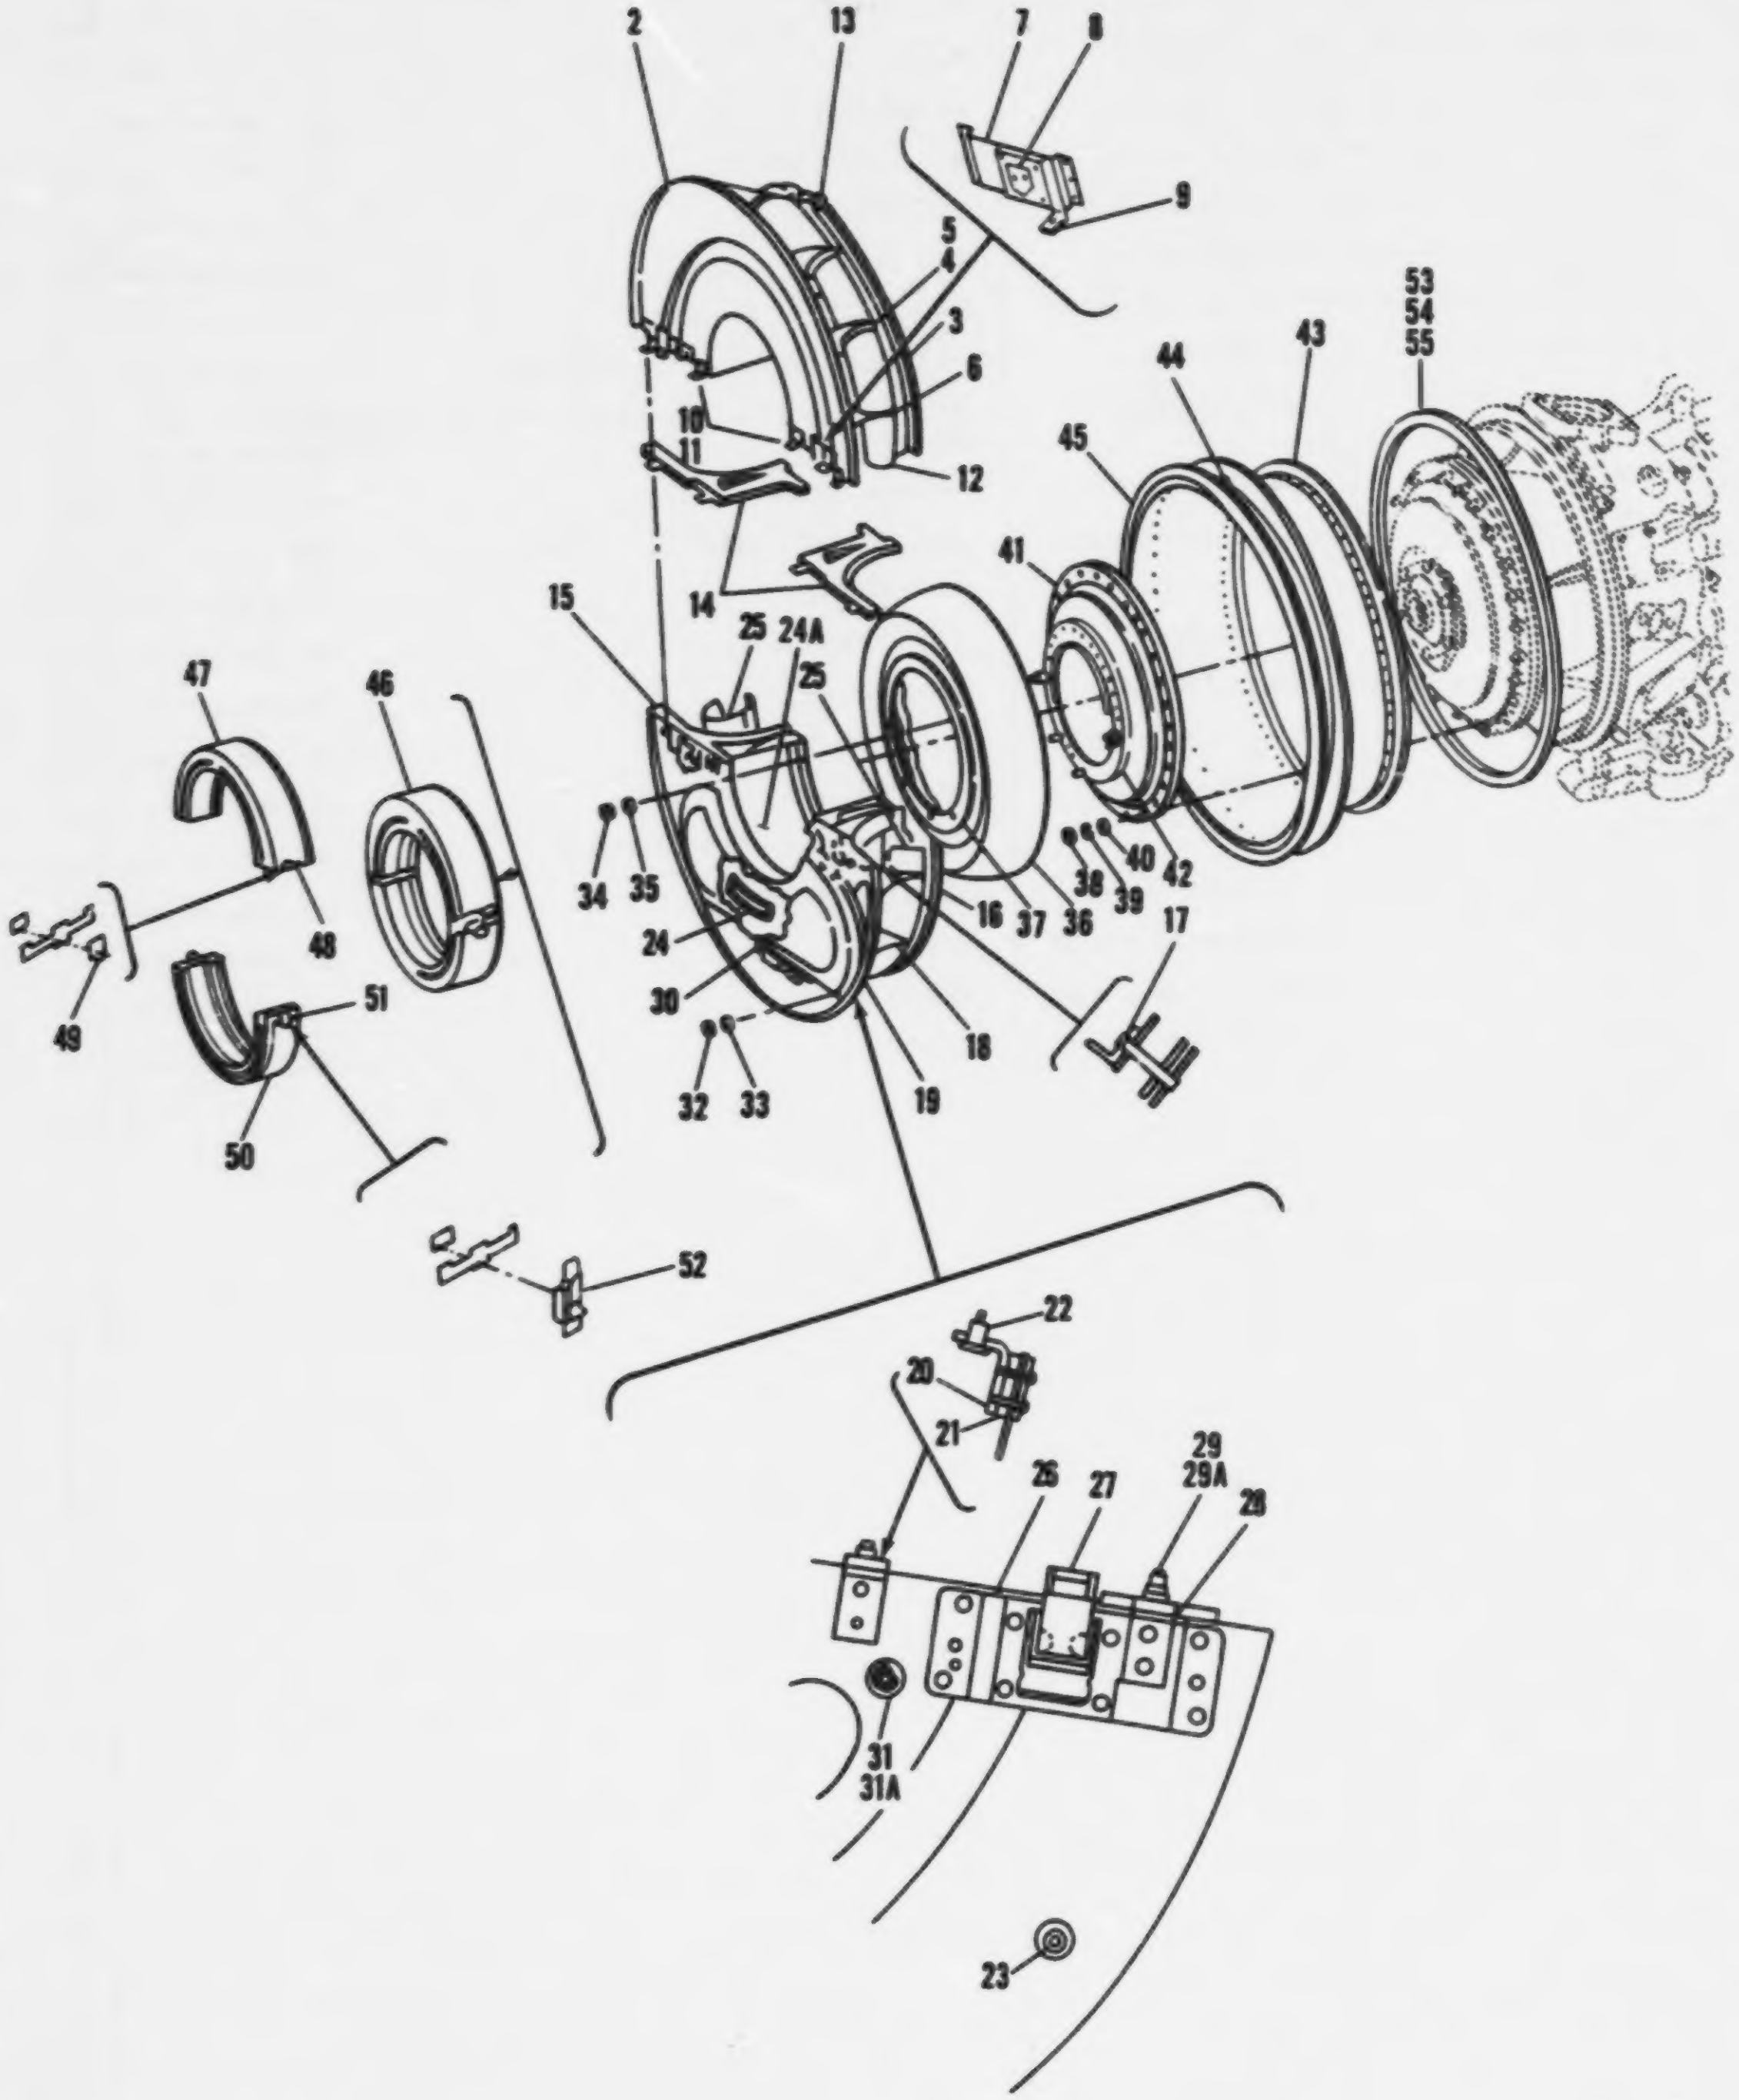
2
13
7
8
9
5
4
3
6
53
54
55
44
43
10
11
12
45
41
15
14
25
24A
25
47
46
34
35
38
39
40
42
16
37
36
17
24
48
30
49
51
18
32
33
19
50
52
22
20
21
29
29A
26
27
28
31
31A
23

Figure 107. Particle Separator

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
107		AFOFF	2945-00-109-4690	91547	1-010-500-07	PARTICLE SEPARATOR SEE FIG.95 FOR NHA............UHB,UHC,UHM	EA	1
107		XDOFF	2945-00-109-4678	91547	1-010-500-08	PARTICLE SEPARATOR, SEE FIG.95 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
107	2	PAOFF	2945-00-442-2544	91547	1-010-420-05	.AIR FILTER ASSEMBLY REPLACES PN 1-010-420-04 USED WITH PN 1-010-380-04 LOWER AIR FILTER ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	3	XAOOO		91547	1-010-410-04	..FLANGE,SEPARATOR............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	4	PAOZZ	2945-00-442-2514	91547	1-010-111-01	...SUPPORT,INLET,AIR............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	5
107	5	PAFZZ	5320-00-177-1070	91547	1-300-509-01	...RIVET,SOLID............UHB,UHC,UHE,UHH,UHM,UHV,UHX	LB	8
107	6	PAOZZ	2945-00-442-2543	91547	1-010-107-01	...SUPPORT,INLET,AIR............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	7	PAOOO	2945-00-442-2551	91547	1-010-580-02	..BRACKET ASSY, SEPARATOR -RH....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	7	PAOOO	2945-00-442-2542	91547	1-010-620-01	..BRACKET ASSY, SEPARATOR -LH....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	8	PAOZZ	5340-00-855-4391	88240	HS179286-2SS	...STRIKE,CATCH............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	9	PAOZZ	5340-00-891-1764	91547	1-010-126-01	...BRACKET,ANGLE............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	10	PAOZZ	5340-00-891-1764	91547	1-010-126-01	..BRACKET,ANGLE SAND AND DUST SEPARATOR ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
107	11	PAOZZ	2945-00-917-7080	91547	1-010-192-01	..SPACER,MOUNTING, SAND AND DUST SEPARATOR ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
107	12	PAOZZ	5340-00-855-4391	88240	HS179286-2SS	..STRIKE,CATCH............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
107	13	PAOZZ	2945-00-917-7072	98003	HC83314-42LASS30 2	..LATCH,AIR FILTER............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	14	PAOZZ	5330-00-455-9704	91547	1-010-530-03	.GASKET............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
107	15	PAOFF	2945-00-442-2539	91547	1-010-380-05	.AIR FILTER ASSY,LOW REPLACES PN 1-010-380-04. USED WITH PN 1-010-420-05..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	16	XAOOO		91547	1-010-370-04	..FILTER,AIR............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	17	PAFZZ	5320-00-177-1070	91547	1-300-509-01	...RIVET SOLID............UHB,UHC,UHE,UHH,UHM,UHV,UHX	LB	8
107	18	PAOZZ	2945-00-442-2514	91547	1-010-111-01	...SUPPORT,INLET,AIR............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
107	19	PAOZZ	2945-00-442-2543	91547	1-010-107-01	...SUPPORT,INLET,AIR............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
107	20	PAOZZ	5340-00-891-1764	91547	1-010-126-01	..BRACKET,ANGLE............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
107	21	PAOZZ	2945-00-917-7080	91547	1-010-192-01	..SPACER,MOUNTING, SAND AND DUST SEPARATOR ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
107	22	PAFZZ	5315-00-891-3499	91547	1-010-165-01	..PIN,SPECIAL............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
107	23	PAOZZ	5307-00-458-2365	29372	KNNS1032MX8	..STUD,LOCKED IN............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
107	24	PAOZZ	5330-00-456-6042	91547	1-010-206-02	..GASKET............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	24A	MOOZZ		01414	AA8621-2D12	..GASKET............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
107	25	PAOZZ	2945-00-917-7072	98003	HC83314-42LASS30 2	..LATCH,AIR FILTER............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
107	26	PAOZZ	2945-00-442-2562	91547	1-010-570-02	..LATCH ASSY,SAND AND DUST -RH ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	27	PAFFF	2945-00-442-2563	91547	1-010-610-01	..LATCH ASSY,SAND AND DUST -LH ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	28	PAOZZ	2945-00-917-7072	98003	HC83314-42LASS30 2	...LATCH,AIR FILTER............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	29	PAOZZ	5340-00-891-1764	91547	1-010-126-01	...BRACKET,ANGLE............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	29A	PAFZZ	5315-00-891-3499	91547	1-010-165-01	...PIN,SPECIAL............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	30	PAOFF	2945-00-442-2555	91547	1-300-499	.CLEANER,AIR,SAND AN............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
107	31	PAOZZ	2945-00-137-2346	18265	P11-4975	..TUBE ASSEMBLY,OUTLI............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
107	31A	PAOZZ	2945-00-137-2345	18265	P11-4974	..SLEEVE,FILTER,AIR I............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
107	32	PAOZZ	5310-00-807-1467	96906	MS21042-3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	EA	6

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
						....	UHE,UHH,UHM,UHV,UHX		
107	33	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT........................	UHE,UHH,UHM,UHV,UHX	EA	6
107	34	PAOZZ	5310-00-844-4872	96906	MS21043-4	.NUT,SELF-LOCKING, HEXAGON.......	UHE,UHH,UHM,UHV,UHX	EA	5
107	35	PAOZZ	5310-00-515-7449	88044	AN960C416L	.WASHER,FLAT........................	UHE,UHH,UHM,UHV,UHX	EA	5
107	36	PAOOO	2945-00-456-1910	91547	1-010-430-03	.DEFLECTOR ASSY....................	UHE,UHH,UHM,UHV,UHX	EA	1
107	37	PAOZZ	2945-00-917-7076	91547	1-010-186-01	..GASKET,DEFLECTOR ASSY..........	UHE,UHH,UHM,UHV,UHX	EA	1
107	38	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	24
107	39	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT........................	UHE,UHH,UHM,UHV,UHX	EA	24
107	40	PAOZZ	5365-00-929-8475	91547	1-010-132-01	.SPACER,SLEEVE.....................	UHE,UHH,UHM,UHV,UHX	EA	24
107	41	PAOOO	2945-00-442-2558	91547	1-010-360-03	.RING ASSY,DEFLECTOR..............	UHE,UHH,UHM,UHV,UHX	EA	1
107	42	PAFZZ	5315-00-891-3499	91547	1-010-165-01	.PIN,SPECIAL.........................	UHE,UHH,UHM,UHV,UHX	EA	2
107	43	PAOFF	2945-00-917-1866	91547	1-010-390-03	.FLANGE ASSY, MOUNTING............	........UHB,UHC,UHM	EA	1
107	43	PAOFF	2945-00-917-1847	91547	1-010-390-01	.FLANGE ASSY, MOUNTING............	....UHE,UHH,UHV,UHX	EA	1
107	44	PAOZZ	5340-00-873-7928	91547	1-010-600-01	..BRACKET MOUNTING AS.............	UHE,UHH,UHM,UHV,UHX	EA	1
107	45	PAOZZ	5330-00-852-6721	91547	1-010-138-01	..SEAL,RUBBER SPECIAL.............	UHE,UHH,UHM,UHV,UHX	EA	1
107	46	AOOOO	1560-00-167-8113	91547	1-010-680-01	SCREEN ASSEMBLY,AIR SEE FIG 95 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
107	47	PBOOO	2995-00-110-4364	91547	1-010-680-01	.SCREEN,PARTICLE SEPARATOR.......	UHE,UHH,UHM,UHV,UHX	EA	1
107	48	PAOOO	2995-00-110-4363	91547	1-010-650-01	..HOOK ASSY,SCREEN................	UHE,UHH,UHM,UHV,UHX	EA	2
107	49	PAOZZ	5340-00-855-4391	88240	HS179286-2SS	...STRIKE,CATCH....................	UHE,UHH,UHM,UHV,UHX	EA	1
107	50	PBOOO	2995-00-110-4361	91547	1-010-670-01	.SCREEN,PARTICLE SEPARATOR.......	UHE,UHH,UHM,UHV,UHX	EA	1
107	51	PAOOO	2995-00-110-4362	91547	1-010-640-01	..LATCH ASSEMBLY,SCRE.............	UHE,UHH,UHM,UHV,UHX	EA	2
107	52	PAOZZ	2945-00-917-7072	98003	HC83314-42LASS30 2	...LATCH ASSY,SCREEN..............	UHE,UHH,UHM,UHV,UHX	EA	1
107	53	PAOZZ	5340-00-077-2121	94581	S4409-1950M	.COUPLING,CLAMP....................	UHE,UHH,UHM,UHV,UHX	EA	1
107	54	PAOZZ	5315-00-223-6113	88044	AN416-1	..PIN,RETAINING....................	UHE,UHH,UHM,UHV,UHX	EA	1
107	55	PAOZZ	5310-00-198-4735	72962	Z1200-048	..NUT,SELF-LOCKING,SL..............	UHE,UHH,UHM,UHV,UHX	EA	1

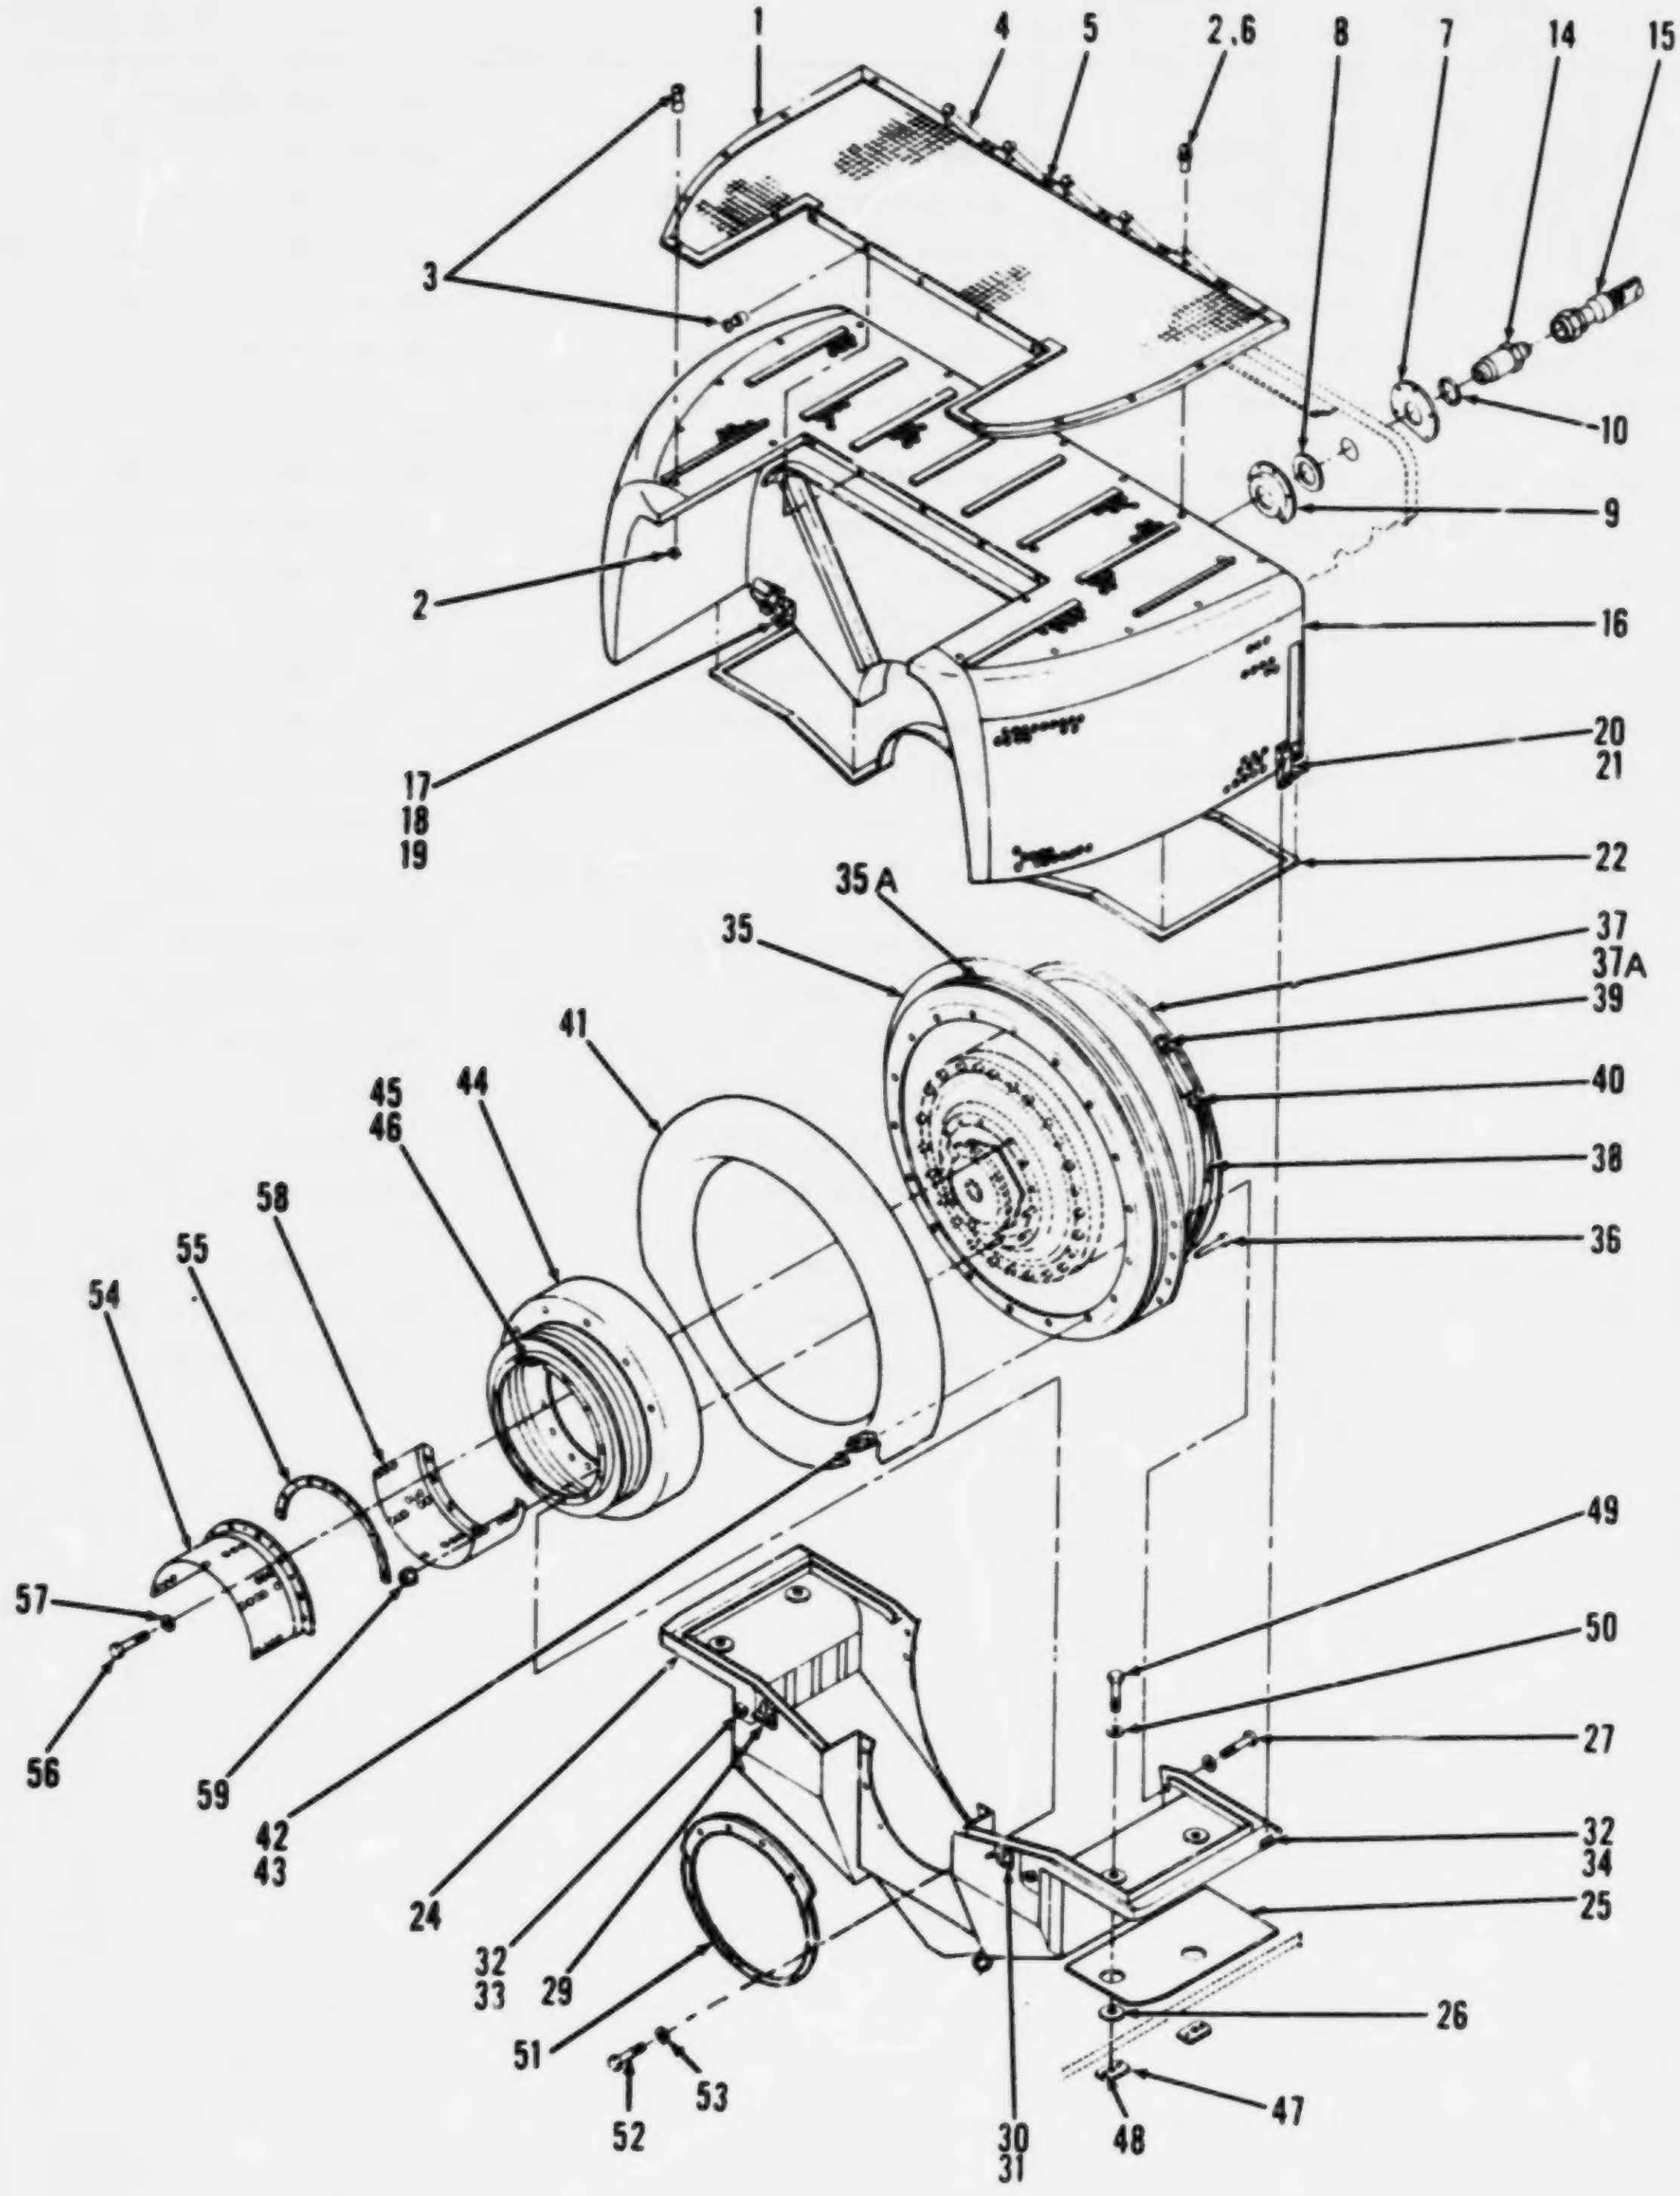
1
4
5
2,6
8
7
14
15
3
10
9
2
16
17
18
19
20
21
22
35A
35
37
37A
39
41
40
45
46
44
38
58
36
55
54
49
57
50
27
56
59
42
43
24
32
34
25
32
33
29
26
51
53
52
30
31
48
47

Figure 107A. Improved Particle Separator (Sheet 1 of 2)

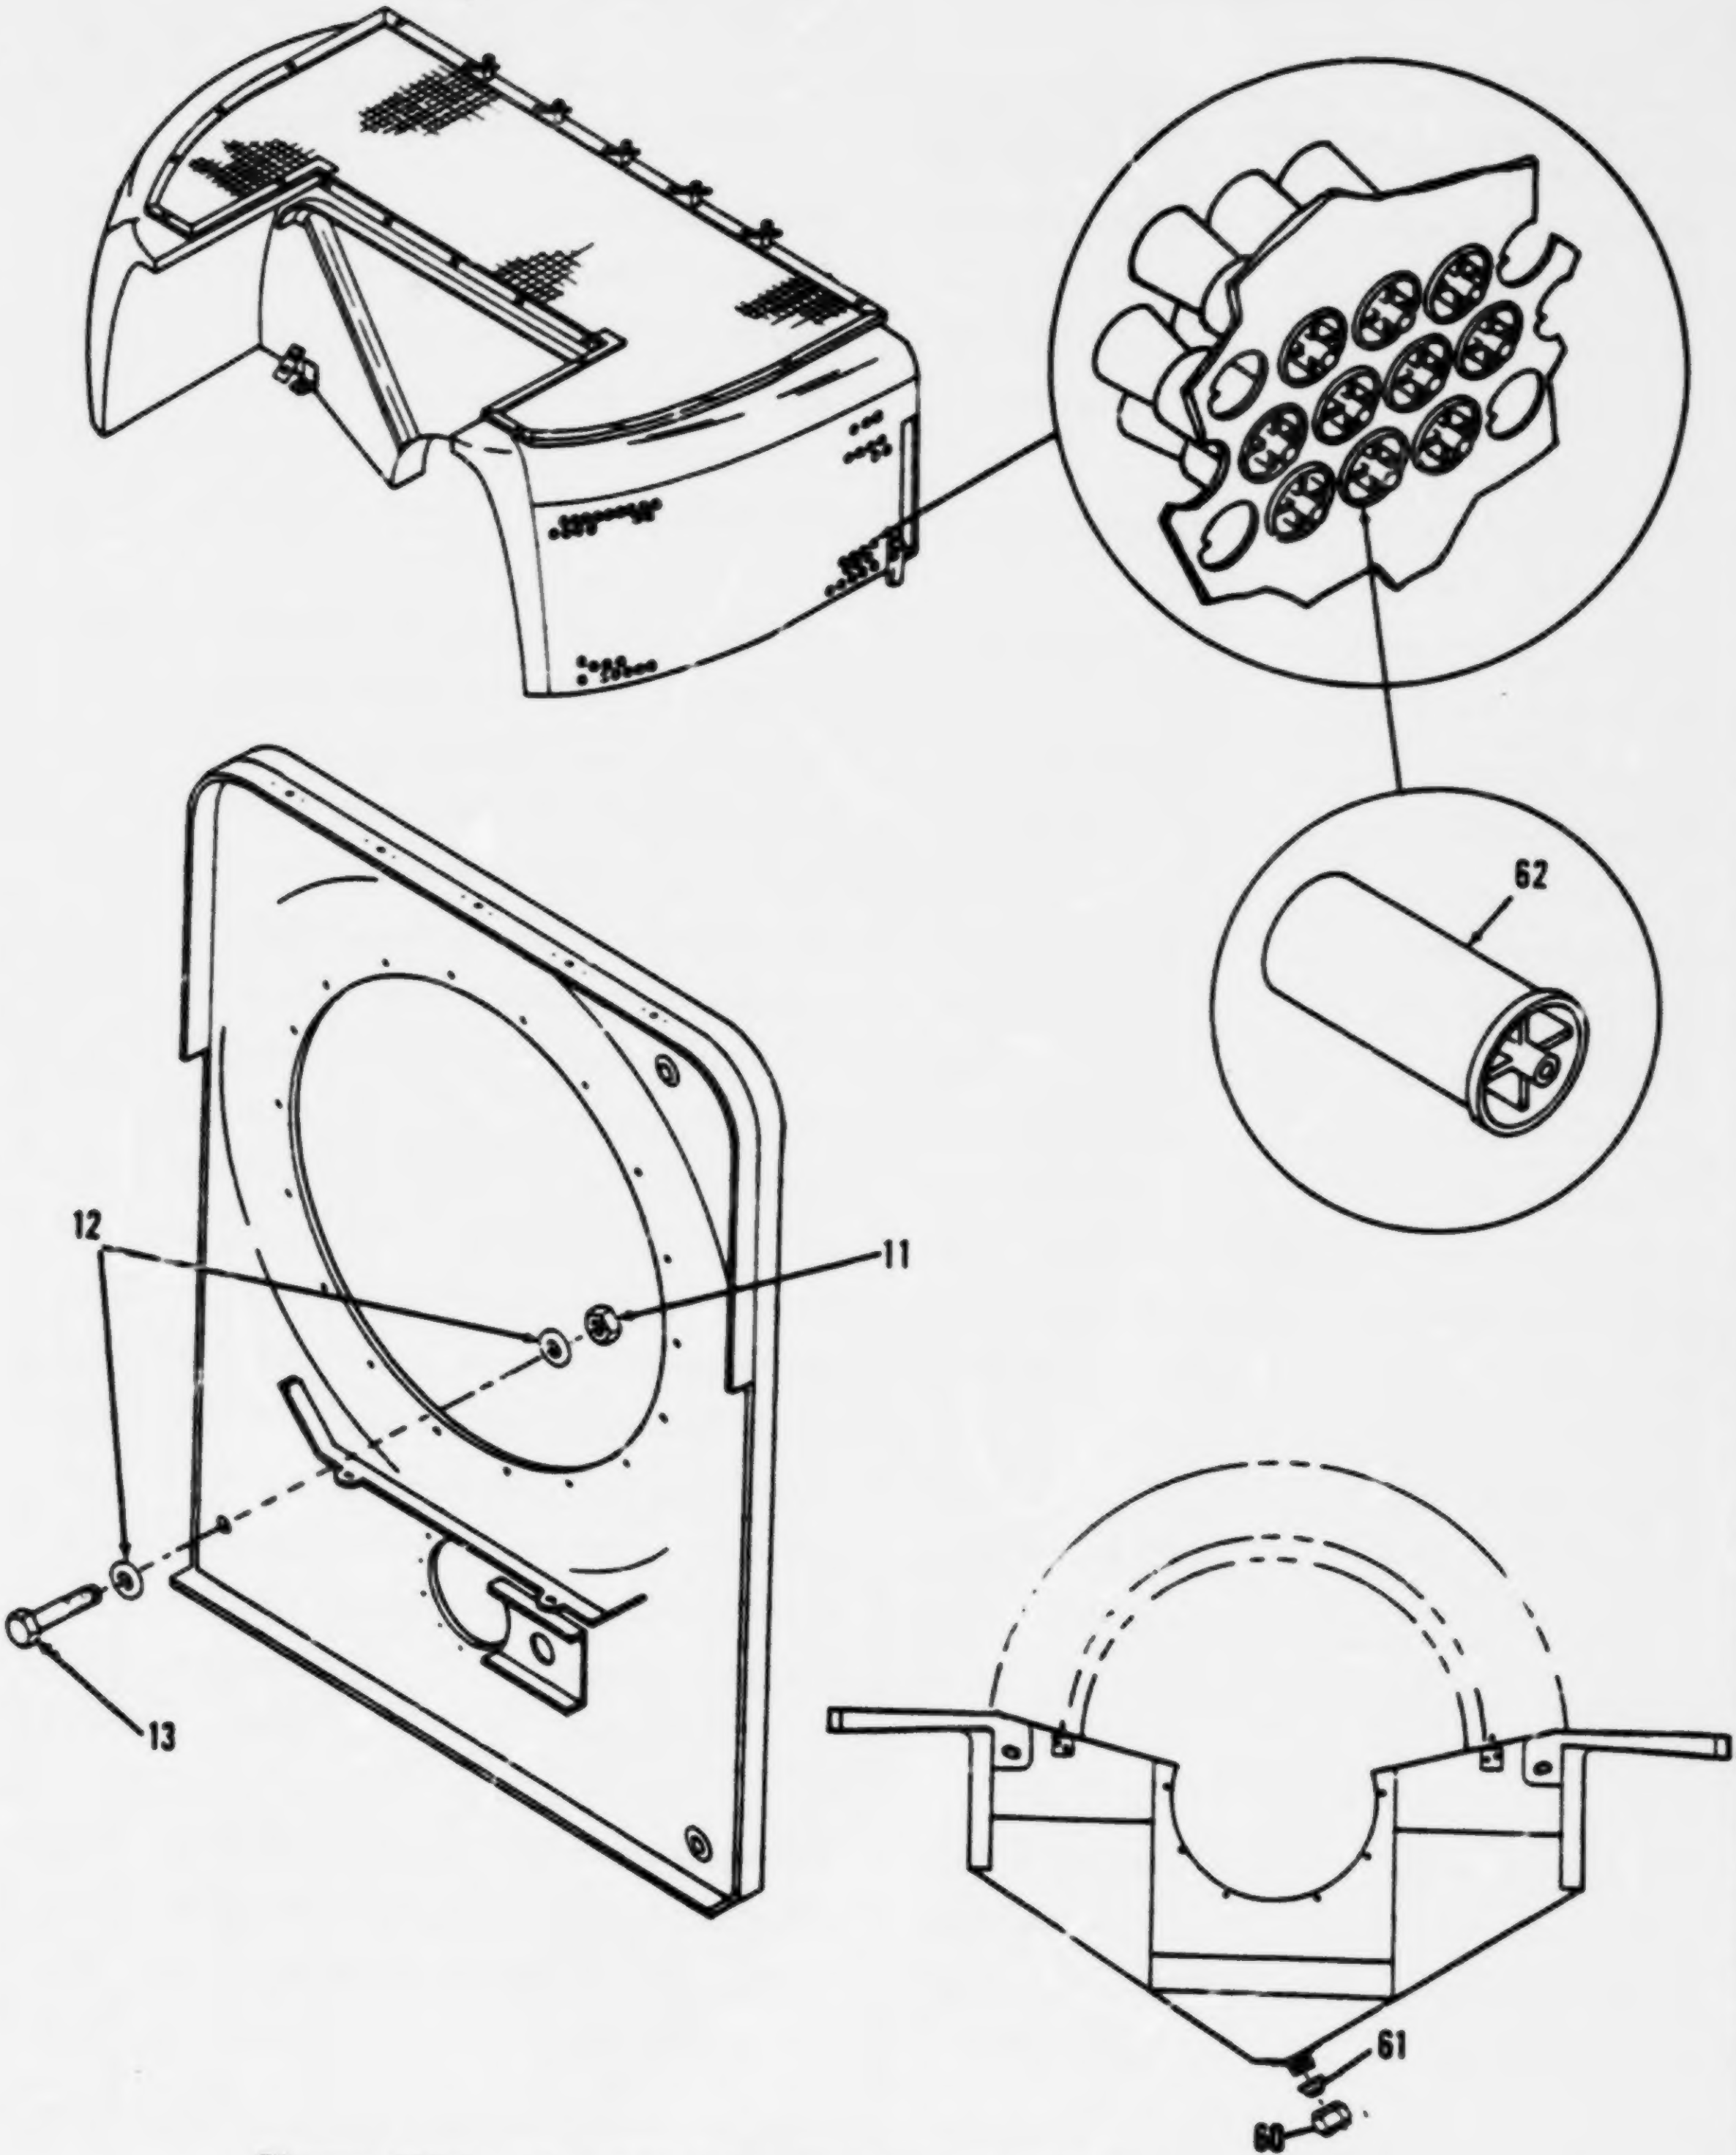
62
12
11
13
61
60

Figure 107A. Improved Particle Separator (Sheet 2 of 2)

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
107A		PAODD	1680-01-252-0383	60047	CE00553-1	AIR CLEANER KIT, IMPROVED PARTICLE SEPARATOR, SEE FIG. 95 FOR NHA .... EHH, EHX, UHH, UHV	EA	REF
107A	1	PAODD		60047	CD00553-1D6A	. SCREEN ASSEMBLY,TOP .... EHH, EHX, UHH, UHV	EA	1
107A	2	PAOZZ	5310-01-288-5588	60047	AA9500-2327A	. . WASHER, SPLIT .... EHH, EHX, UHH, UHV	EA	22
107A	3	PAOZZ	5306-01-288-5580	60047	AA9500-D2325A	. . FASTENER, OVAL HEAD STD .... EHH, EHX, UHH, UHV	EA	17
107A	4	PAOZZ	5340-01-288-5593	60047	AA9500-D2806	. . EJECTING BLADES .... EHH, EHX, UHH, UHV	EA	5
107A	5	PAOZZ		96906	MS20426A4-9	. . RIVET .... EHH, EHX, UHH, UHV	EA	10
107A	6	PAOZZ		60047	AA9500-D2837A	. . FASTENER, OVAL HEAD STD .... EHH, EHX, UHH, UHV	EA	5
107A	7	PAOZZ	2945-01-288-5559	60047	CB00553-1D503	. PLATE, BACKING .... EHH, EHX, UHH, UHV	EA	1
107A	8	PAOZZ	2945-01-288-5560	60047	CB00553-1D502	. . RING, SLIP .... EHH, EHX, UHH, UHV	EA	1
107A	9	PAOZZ	4730-01-288-5581	60047	CB00553-1D501	. . FLANGE, BULKHEAD .... EHH, EHX, UHH, UHV	EA	1
107A		PAOZZ	5320-00-685-0820	96906	MS20615-3M3	. . RIVET, SOLID .... EHH, EHX, UHH, UHV	LB	6
107A	10	PAOZZ	5330-00-167-5173	81349	M832-4-82/908	. . BOSS SEAL .... EHH,EHX, UHH, UHV	EA	1
107A	11	PAOZZ	5310-00-297-8380	96906	MS20500-624	. . NUT, SELF LOCKING .... EHH, EHX, UHH, UHV	EA	1
107A	12	PAOZZ	5306-00-207-5916	88044	AN960C616	. . WASHER, FLAT .... EHH, EHX, UHH, UHV	EA	2
107A	13	PAOZZ		88044	AN6C5A	. . BOLT .... EHH, EHX, UHH, UHV	EA	1
107A	14	PAOZZ		60047	CC00553-1D71A	. BULKHEAD FITTING .... EHH, EHX, UHH, UHV	EA	1
107A	15	PAOZZ	4720-01-293-9304	60047	CC00553-1D5A	. HOSE BLEED AIR .... EHH, EHX, UHH, UHV	EA	1
107A	16	PAOOO	2945-01-289-7521	60047	CE00553-1D3A	. AIR CLEANER, UPPER HALF ASSY .... EHH, EHX, UHH, UHV	EA	1
107A		PAOZZ	2945-01-288-5558	60047	CC00553-1D335L	. . RECEPTACLE, LOCATOR L.H. .... EHH, EHX, UHH, UHV	EA	1
107A	17	PAOZZ	2945-01-288-5562	60047	CC00553-1D335R	. . RECEPTACLE, LOCATOR R.H. .... EHH, EHX, UHH, UHV	EA	1
107A	18	PAOZZ	5320-00-117-6816	96906	MS20470AD4-3-5	. . RIVET .... EHH, EHX, UHH, UHV	LB	2
107A	19	PAOZZ	5320-00-754-0822	96906	MS20470AD4-5	. . RIVET .... EHH, EHX, UHH, UHV	LB	2
107A	20	PAOZZ	5340-01-288-5584	60047	CB00553-1D928	. . LATCH ASSEMBLY, TENSION .... EHH, EHX, UHH, UHV	EA	4
107A	21	PAOZZ	5320-00-754-0822	96906	MS20470AD4-5	. . RIVET .... EHH, EHX, UHH, UHV	EA	8
107A	22	PAOZZ		60047	AA9500-2317	. . GASKET .... EHH, EHX, UHH, UHV	FT	AR
107A		PAOZZ		04963	08001	. . ADHESIVE .... EHH, EHX, UHH, UHV	EA	AR
107A	24	PAOOO		60047	CE00553-1D2A	. LOWER HALF ASSEMBLY .... EHH, EHX, UHH, UHV	EA	1
107A	25	PAOZZ	5365-01-288-5594	60047	CC00553-1D52A	. . MOUNTING PAD .... EHH, EHX, UHH, UHV	EA	2
107A	26	PAOZZ	5310-01-288-5586	60047	CB00553-1D53A	. . WASHER, MOUNTING PAD .... EHH, EHX, UHH, UHV	EA	4
107A	27	PAOZZ		88044	AN3H3A	. . BOLT, MACHINE ACFT .... EHH, EHX, UHH, UHV	EA	10

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
107A	28	PAODD	4820-01-285-3020	60047	CB00553-1D232A	. . VALVE ASSEMBLY, DRAIN. . . . . EHH, EHX, UHH, UHV	EA	1
107A	29	PAOZZ		60047	CB00553-1D235	. . LOCATOR ASSEMBLY . . . . EHH, EHX, UHH, UHV	EA	2
107A	30	PAOZZ	5320-00-117-6826	95906	MS20470AD4-4	. . RIVET . . . . EHH, EHX, UHH, UHV	LB	4
107A	31	PAOZZ	5320-00-117-6828	96906	MS20470AD4-6	. . RIVET . . . . EHH, EHX, UHH, UHV	LB	2
107A	32	PAOZZ	5340-01-288-9575	60047	AA9500-D2835	. . STRIKE . . . . EHH, EHX, UHH, UHV	EA	4
107A	33	PAOZZ	5320-00-117-6828	96906	MS20470AD4-6	. . RIVET . . . . EHH, EHX, UHH, UHV	LB	4
107A	34	PAOZZ	5320-00-218-8468	96906	MS20470AD4-5-5	. . RIVET . . . . EHH, EHX, UHH, UHV	LB	4
107A	35	PAOOO	2945-01-288-5563	60047	CD00553-1D213A	. . SEAL LIP ASSEMBLY, AFT RADIUS . . EHH, EHX, UHH, UHV	EA	1
107A	35A	PAODD	1680-01-285-3022	60047	CD00553-1D2136A	. . . BELLOWS . . . . EHH, EHX, UHH, UHV	EA	1
107A	36	PAOZZ		80205	NAS1351-3-8	. . . SCREW, CAPTIVE SOCKET HEAD . . EHH, EHX, UHH, UHV	EA	18
107A	37A	PAODD	1560-01-288-3548	60047	CD00553-1D2134A	. . . RING ASSEMBLY, ENGINE INTAKE . . .EHH, EHX, UHH, UHV	EA	1
107A	37	PAOZZ	2945-01-288-5561	60047	CD00553-1D2137	. . . . RING,INTAKE W/WASH BLOCK . . . . EHH, EHX, UHH, UHV	EA	1
107A	38	PAOZZ	4720-01-288-9570	60047	CC00553-1D361A	. . . . HOSE, WASH . . . . EHH, EHX, UHH, UHV	EA	2
107A	39	PAOZZ	4730-00-220-3975	80205	AN929A6J	. . . . CAP, END . . . . EHH, EHX, UHH, UHV	EA	2
107A	40	PAOZZ	4730-00-580-2380	88044	AN6156J	. . . . FITTING . . . . EHH, EHX, UHH, UHV	EA	6
107A	41	PAOZZ		60047	CD00553-1D2135A	. . . RING ASSEMBLY, LARGE INTAKE . . EHH, EHX, UHH, UHV	EA	1
107A	42	PAOZZ	5310-00-728-5791	96906	MS21069L-3	. . . . NUT PLATE . . . . EHH, EHX, UHH, UHV	EA	18
107A	43	PAOZZ	5320-01-005-4079	96906	MS20426AD3-3-5	. . . . RIVET . . . . EHH, EHX, UHH, UHV	EA	36
107A	44	PAOZZ		60047	CE00553-1D4A	. SEAL ASSEMBLY, INNER . . . . EHH, EHX, UHH, UHV	EA	1
107A	45	PAOZZ	5310-00-777-5791	96906	MS21059-L3	. . NUT PLATE . . . . EHH, EHX, UHH, UHV	EA	10
107A	46	PAOZZ	5320-01-005-4079	96906	MS20426AD3-3-5	. . RIVET, C'SINK . . . . EHH, EHX, UHH, UHV	LB	20
107A		AOOOO		60047	CD00553-1D8A	. HARDWARE, MOUNTING . . . . EHH, EHX, UHH, UHV	EA	1
107A	47	PAOZZ	5310-01-291-8975	60047	CB00553-1D112A	. . NUT PLATE ASSEMBLY . . . . EHH, EHX, UHH, UHV	EA	4
107A		PAOZZ	5310-00-779-6636	96906	MS21060-L5	. . . NUT PLATE . . . . EHH, EHX, UHH, UHV	EA	1
107A		PAOZZ	5320-00-117-6950	96906	MS20426AD4-5	. . . RIVET . . . . EHH, EHX, UHH, UHV	LB	2
107A	48	PAOZZ	5320-00-117-6951	96906	MS20426AD4-6	. . RIVET, SOLID. . . . . EHH, EHX, UHH, UHV	LB	8
107A	49	PAOZZ	5306-00-050-1239	96906	MS90727-38	. . SCREW CAPTIVE, HEX HEAD . . . . EHH, EHX, UHH, UHV	EA	4
107A	50	PAOZZ	5310-00-087-7493	96906	MS27183-13	. . WASHER, FLAT . . . . EHH, EHX, UHH, UHV	EA	16
107A	51	PAOZZ		60047	CC00653-1D48A	. RING, SEAL,LIP . . . . EHH, EHX, UHH, UHV	EA	10
107A	52	PAOZZ	5306-00-274-2119	88044	AN3-5A	. BOLT, MACHINE . . . . EHH, EHX, UHH, UHV	EA	1
107A	53	PAOZZ	5210-01-136-3556	88044	AN960KD10L	. WASHER, FLAT . . . . EHH, EHX, UHH, UHV	EA	
107A	54	PAOOO		60047	CD00553-1D441A	. CAN, UPPER HALF . . . . EHH, EHX, UHH, UHV	EA	
107A	55	PAOZZ		60047	CC00553-1D49	. . GASKET, CAN (DO NOT USE WITH . . EHH, EHX, UHH, UHV GREASE DRIVE SHAFT COUPLING)	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
107A	56	PAOZZ	5306-00-282-3814	88044	AN102808	. BOLT .... EHH, EHX, UHH, UHV	EA	6
107A	57	PAOZZ	5310-00-183-4406	88044	AN960PD10	. WASHER, FLAT .... EHH, EHX, UHH, UHV	EA	6
107A	58	PAOOO	5340-01-292-0328	60047	CD00553-1D431A	. CAN, LOWER HALF .... EHH, EHX, UHH, UHV	EA	1
107A	59	PAOZZ	5310-00-807-1475	96906	MS21042L4	. NUT, SELF-LOCKING .... EHH, EHX, UHH, UHV	EA	5
107A	60	PAOZZ	4820-01-285-3020	60047	CB00553-1D232A	. VALVE, DRAIN ASSEMBLY (AIRCRAFT WITH IMPROVED PARTICLE SEPARATOR) .... EHH, EHX, UHH, UHV	EA	1
107A	61	PAOZZ	4820-01-288-5582	60047	CB00553-1D2321	. . VALVE ASSEMBLY, CHECK .... EHH, EHX, UHH, UHV	EA	1
107A	62	PAOZZ		60047	AA-8101-1KF1	. REPAIR KIT, PLUG .... EHH, EHX, UHH, UHV	EA	AR
107A	63	PAOZZ		60047	AC-8101-1008KT	. REPAIR KIT, TUBE .... EHH, EHX, UHH, UHV	EA	AR

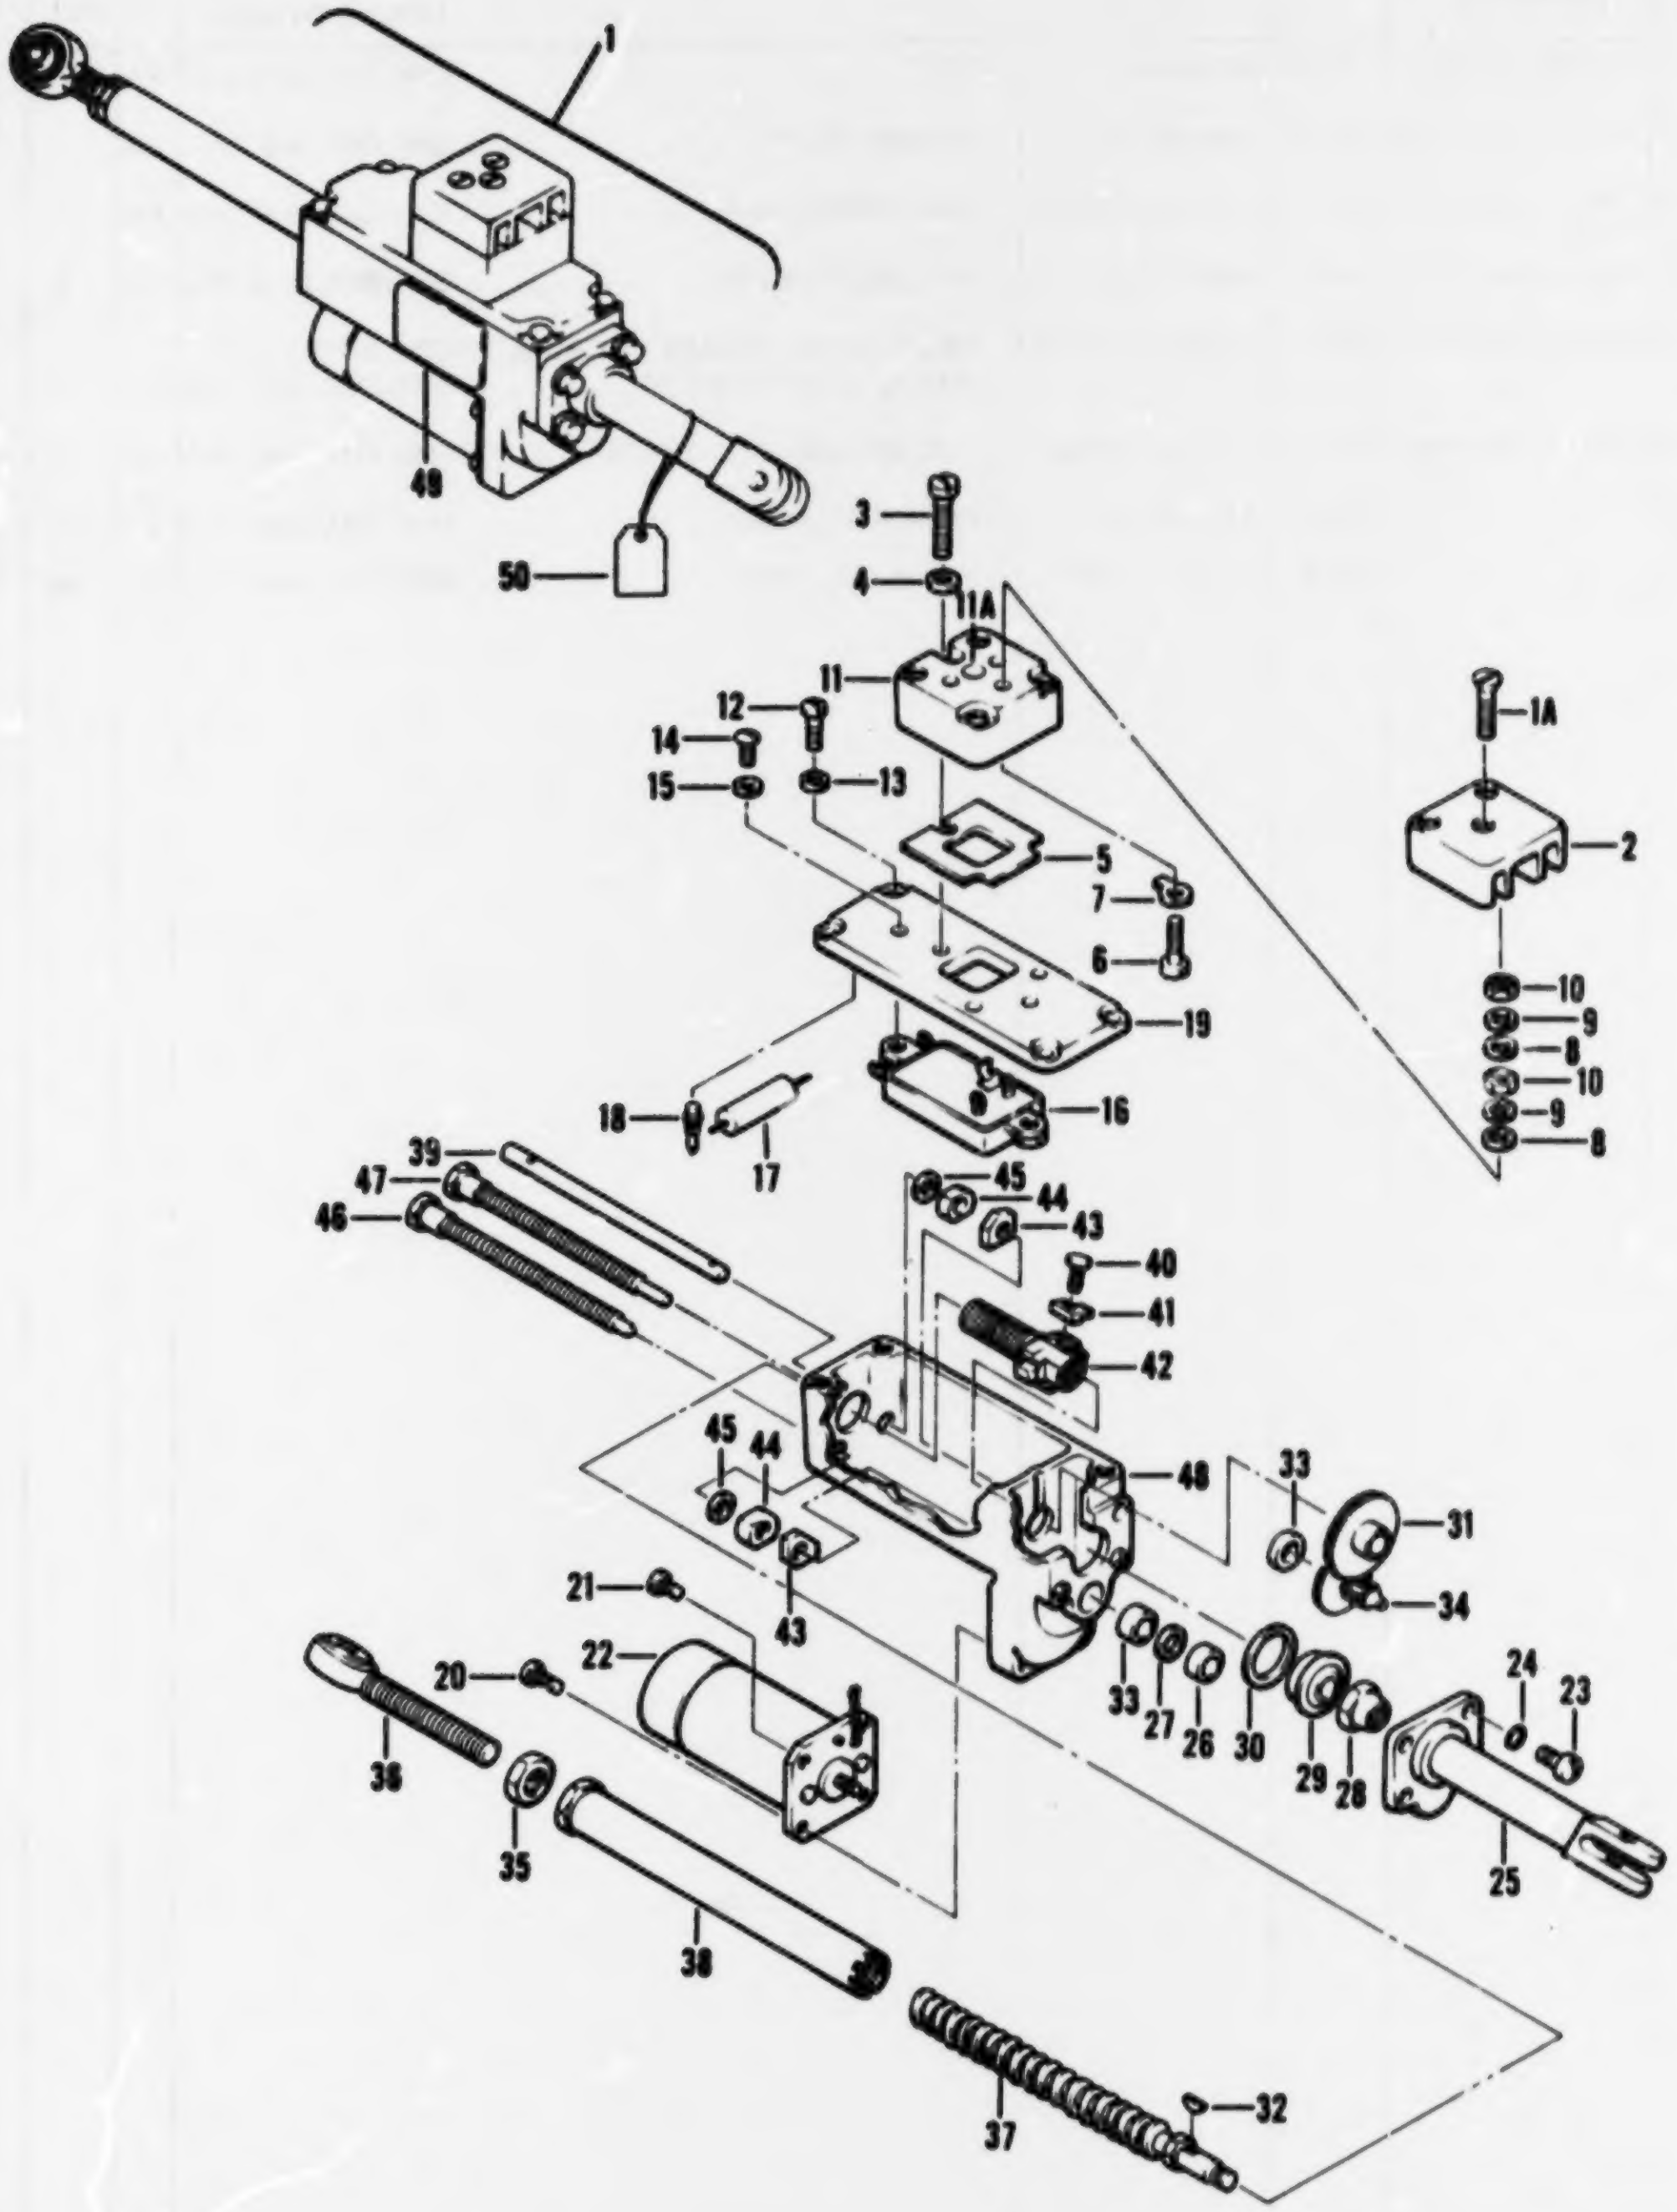
1
49
50
3
4
11A
11
12
14
15
13
5
7
6
19
16
18
17
1A
2
10
9
8
10
9
8
39
47
46
45
44
43
40
41
42
48
33
31
34
45
44
43
21
22
20
36
35
33
27
26
30
29
28
24
23
25
38
37
32

Figure 108. Actuator, Linear

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
108		PAOFF	2995-00-990-3163	70210	540264-2-1	ACTUATOR,LINEAR SEE FIG 97 & 98 FOR NHA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	1	XAOFF		70210	540265-2	.ACTUATOR ASSEMBLY SEE FIG 97 & 98 FOR NHA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	1A	PAOZZ	5305-00-957-7819	96906	MS24693S30	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
108	2	PAOZZ	1680-00-847-7465	70210	526112	..COVER,ACCESS,ACTUAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	3	PAFZZ	5305-00-490-0396	80205	NAS1190-06P10L	..SCREW,SELF-LOCKING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
108	4	PAFZZ	5310-00-728-4555	70210	S8157C207-020A	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
108	5	PAFZZ	5330-00-763-1253	70210	527073	..GASKET	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	6	PAFZZ	5305-00-582-5808	96906	MS35265-31	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
108	7	XDFZZ		70210	526116	..TERMINAL,LUG	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
108	8	PAOZZ	5310-00-167-0816	88044	AN960-6	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
108	9	PAOZZ	5310-00-045-4007	96906	MS35338-41	..WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
108	10	PAOZZ	5310-00-934-9763	96906	MS35649-265	..NUT,PLAIN,HEXAGON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
108	11	PAFFF	1680-00-795-1020	70210	526111-4	..BASE ASSY,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	11A	PAFZZ	5340-00-815-4930	96906	MS21209C0615	...INSERT,SCREW THREAD	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	12	PAFZZ	5305-00-865-3896	96906	MS21090-0621	..SCREW,MACHINE,SELF- LOCKING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
108	13	PAFZZ	5310-00-728-4555	70210	S8157C207-020A	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
108	14	PAFZZ	5305-00-984-4988	96906	MS35206-228	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
108	15	PAFZZ	5310-00-167-0816	88044	AN960-6	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
108	16	PAFZZ	5915-00-079-6415	70210	36026-1	..FILTER,RADIO FREQUE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	17	XDFZZ		70210	621-002-9062	..RESISTOR,FIXED,WIRE WOUND	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
108	17	XDFZZ	5905-00-994-7135	81349	RW69V470	..RESISTOR,FIXED,WIRE WOUND	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
108	17	XBFZZ	5905-00-796-3689	70210	621-002-9070	..RESISTOR,FIXED,WIRE WOUND	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
108	17	PAFZZ	5905-00-994-7141	81349	RW69V560	..RESISTOR,FIXED,WIRE WOUND	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
108	17	XDFZZ	5905-00-796-3692	70210	621-002-9076	..RESISTOR,FIXED,WIRE WOUND	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
108	17	PAFZZ	5905-00-796-3693	70210	621-002-9082	..RESISTOR,FIXED,WIRE WOUND	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
108	17	PBFZZ	5905-00-080-5899	81349	RW69V101	..RESISTOR,FIXED,WIRE WOUND	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
108	17	PAFZZ	5905-00-782-4554	81349	RW69V121	..RESISTOR,FIXED,WIRE WOUND	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
108	18	XDFZZ		88245	142889	..TERMINAL,STUD	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
108	19	PBFZZ	1680-00-927-3582	70210	528327	..COVER,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	20	PAFZZ	5305-00-687-6724	88044	AN503-6-6	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
108	21	PAFZZ	5305-00-207-0145	88044	AN503-6-4	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
108	22	XAFZZ		70210	48279-1	..MOTOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	23	PAFZZ	5305-00-145-6971	88044	AN503-8-6	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
108	24	XBFZZ	5310-00-264-3543	70210	S8157C7-032A	..WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
108	25	PAFZZ	1680-00-066-9414	70210	528302	..END CAP,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	26	PAFZZ	5365-00-759-7545	70210	S8168-44A0170	..SPACER,PLAIN METAL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	27	PAFZZ	5365-00-665-6449	70210	S8154-146C002	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
108	27	PAFZZ	5365-00-530-7926	70210	S8154-146C005	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
108	28	MFFZZ	5310-00-410-8211	70210	528307	..NUT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	29	PAFZZ	3110-00-529-9140	70210	PS40419	..BEARING,BALL,ANNULA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	30	PAFZZ	5365-00-764-5848	70210	S8154-187C001	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
108	30	XBFZZ	5340-00-682-7929	70210	S8154-187C002	..SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
108	31	PAFZZ	3020-00-765-9224	70210	40292-4	..GEAR,SPUR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	32	PAFZZ	5315-00-616-5519	96906	MS35756-1	..KEY,WOODRUFF	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	33	PAFZZ	3110-00-790-0181	70210	PS39504	..BEARING,BALL,ANNULA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	34	PAFZZ	3040-00-631-0702	70210	38414-4	..GEARSHAFT,SPUR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	35	PAOZZ	5310-00-764-7111	70210	528319	..NUT,PLAIN,HEXAGON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	36	PAOZZ	3120-00-045-5273	70210	528314	..BEARING,PLAIN,ROD E	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	37	PAFZZ	1680-00-868-2709	70210	528315-1	..SCREWJACK,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	38	PAFZZ	1680-00-795-1029	70210	528537	..TUBE,ACTUATOR DRIVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	39	PAFZZ	1680-00-799-0458	70210	528536	..GUIDE ROD,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	40	PAFZZ	5305-00-866-7246	70210	655-148-9004	..SCREW,SELF-LOCKING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	41	PAFZZ	5315-00-759-7609	70210	528540	..KEY,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	42	PAFZZ	5310-00-795-1231	70210	528538	..NUT,SLEEVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	43	PAFZZ	5310-00-764-0031	70210	528329	.NUT,PLAIN,ROUND	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
108	44	PBFZZ	5310-00-410-8212	70210	528539	..STOP,NUT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
108	45	XDFZZ	5310-00-764-2377	70210	S8157N410-020	..WASHER FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
108	46	PAFZZ	5305-00-784-3818	70210	528313	..SETSCREW	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	47	PAFZZ	1680-00-847-7425	70210	528313-2	..ADJUSTER ASSY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	48	PAFZZ	1680-00-120-0549	70210	528320-1	..HOUSING,MECHANICAL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	49	PAFZZ	1680-00-986-6073	70210	528338	..PLATE ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
108	50	PAFZZ	2995-00-868-2735	70210	S8145-76	..TAG,WARNING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

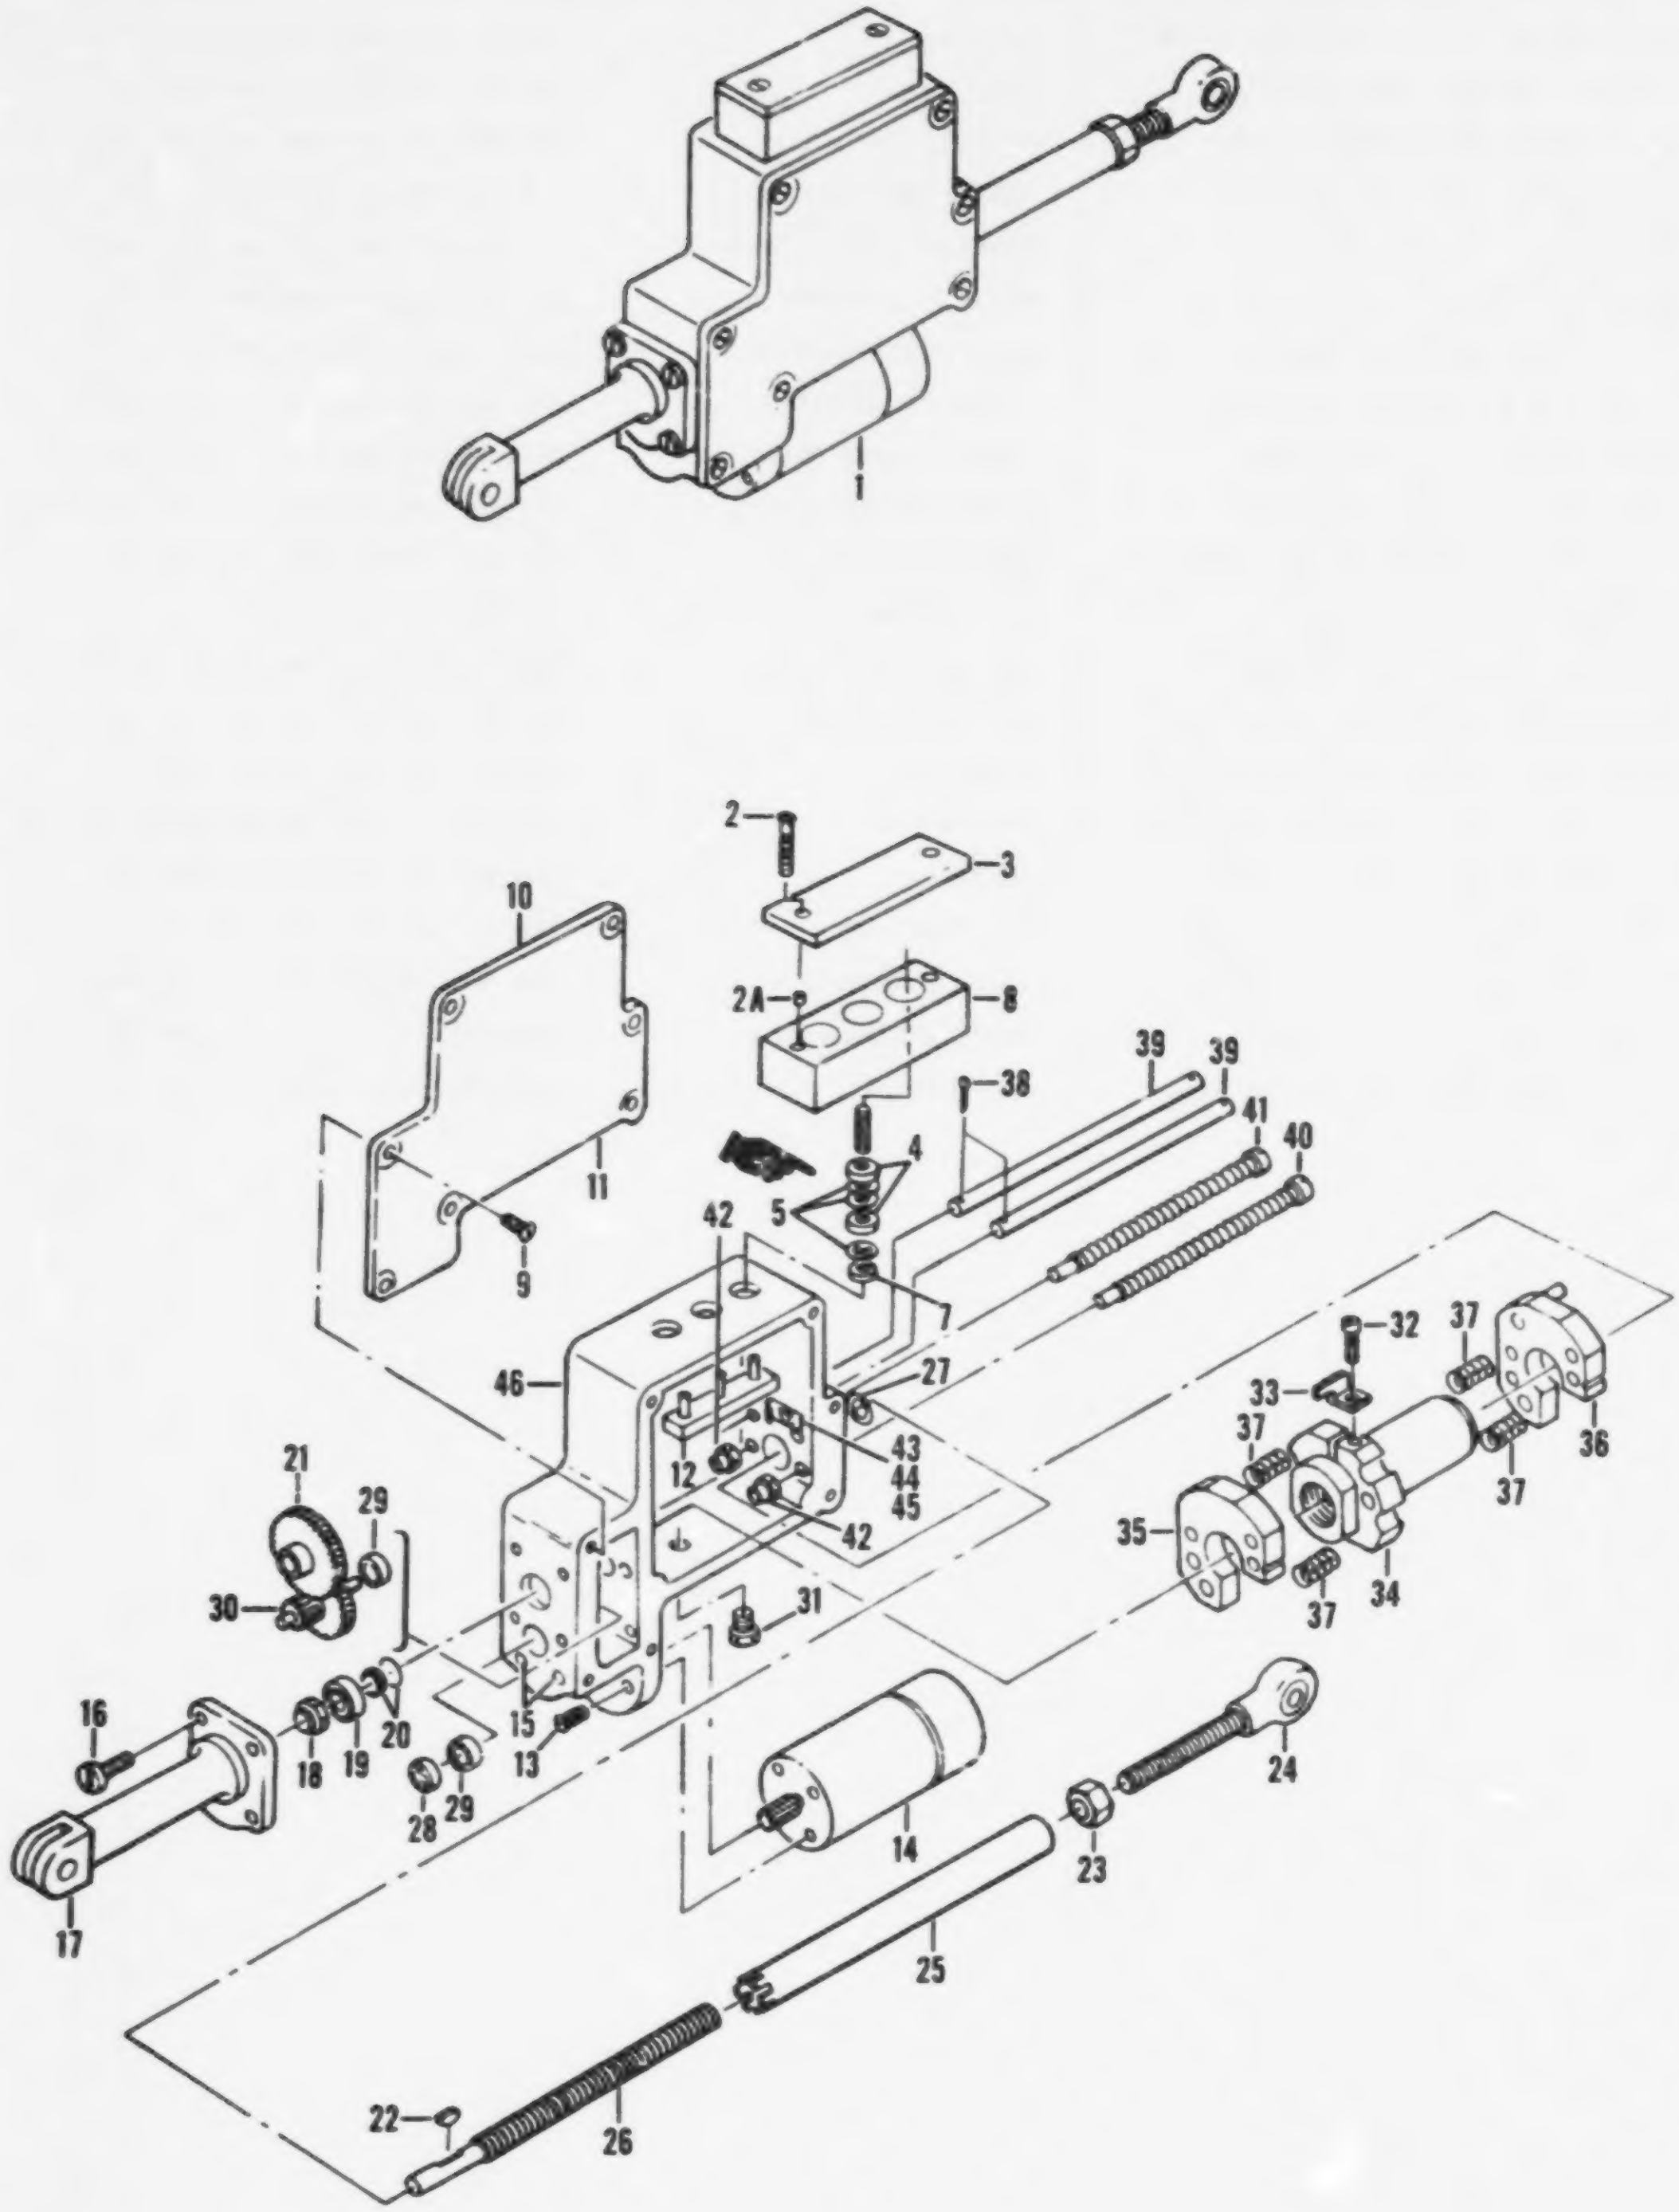
1
2
3
10
2A
8
39
39
38
41
40
4
11
5
42
9
7
32
37
46
27
33
37
36
43
44
45
21
29
12
35
42
37
34
37
30
31
37
16
20
15
18
19
13
28
29
24
14
23
17
25
22
26

Figure 109. Actuator, Linear

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
109		PAOFF	2995-00-990-3163	83777	700103G2	ACTUATOR,LINEAR SEE FIG 97 & 98 FOR NHA UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	1	XAOFF		83777	800171	.ACTUATOR ASSEMBLY INTRCH 2995-00-990-3163 SEE FIG 97 & 98 FOR NHA UHB,UHC,UHE,UHH,UHM,UHX	EA	1
109	2	PAOZZ	5305-00-763-6963	96906	MS51959-28	..SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
109	2A	PBFZZ	5340-00-558-8826	96906	MS21209C0620	..INSERT,SCREW THREAD UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	3	MFOZZ		83777	400012	..COVER,TERMINAL BOAR UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	4	PAOZZ	5310-00-934-9761	96906	MS35649-264	..NUT,PLAIN,HEXAGON UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
109	5	PAOZZ	5310-00-531-9514	88044	AN960C6	..WASHER,FLAT UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	9
109	7	PAFZZ	5970-00-177-1536	83777	400093	..INSULATOR,WASHER UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
109	8	PAFZZ	5940-00-177-2533	83777	600659	..TERMINAL BLOCK UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	9	PAFZZ	5305-00-922-6286	96906	MS35275-228	..SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	7
109	10	XBFZZ	9905-00-176-0539	83777	400015-2	..PLATE,INSTRUCTION UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	11	XBFZZ	1680-00-133-7491	83777	700242	..COVER,ACTUATOR,ELEC UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	12	PAFZZ	5915-00-133-7483	83777	600569	..FILTER,FLUID,PRESSU UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	13	PAFZZ	5305-00-225-6400	96906	MS24693C3	..SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
109	14	PAFZZ	6105-00-177-2488	83777	600568-1	..MOTOR,DIRECT CURREN UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	15	PAFZZ	5340-00-176-0578	83777	400090	..PLUG,SEALING UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
109	16	PAFZZ	5305-00-939-9230	96906	MS35275-243	..SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
109	17	PAFZZ	5340-00-176-0577	83777	400088	..CLEVIS RACKET UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	18	PAFZZ	5310-00-807-1468	96906	MS21042-4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	19	PAFZZ	3110-00-151-8095	21335	F400CL1	..BEARING,BALL,ANNULA UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	20	PAFZZ	5365-00-176-0931	83777	600635-1	..SHIM UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
109	20	PAFZZ	5365-00-176-0932	83777	600635-2	..SHIM UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
109	21	PAFZZ	3020-00-134-8074	83777	400082	..GEAR,SPUR UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	22	PAFZZ	5315-00-616-5519	96906	MS35756-1	..KEY,WOODRUFF UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	23	PAFZZ	5310-00-575-5186	96906	MS9360-11	..NUT,PLAIN,HEXAGON UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	24	PAFZZ	3120-00-874-2676	73134	MDV35-14D	..BEARING,PLAIN,ROD END UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	25	PAFZZ	1680-00-133-7488	83777	400083	..ARM ACTUATING,ELECT UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	26	PAFZZ	3040-00-760-6180	83777	400079	..GEARSHAFT,BEVEL UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	27	PCFZZ	5330-00-584-1840	96906	MS28775-014	..PACKING,PREFORMED UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	28	PAFZZ	5340-00-176-0446	83777	400091	..PLUG,SEALING UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	29	PAFZZ	3110-00-554-2928	30874	225574	..BEARING,BALL,ANNULA UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
109	30	PAFZZ	3020-00-134-8082	83777	600567	..GEAR ASSY, ACTUATOR UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	31	PAFZZ	5365-00-176-0436	83777	400014	..BUSHING,MACHINE THR UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	32	PAFZZ	5305-00-940-9488	96906	MS35275-226	..SCREW,MACHINE UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	33	PBFZZ		83777	400092	..LOCK,ACTUATOR UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	34	PAFZZ	1680-00-133-7486	83777	700245	..POSITIONER ASSY UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	35	PAFZZ	1680-00-133-7487	83777	600648	..STOP,ACTUATOR,-LH UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	36	PAFZZ	1680-00-133-7485	83777	600651	..STOP,ACTUATOR,-RH UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	37	PAFZZ	5360-00-176-0444	83777	400096	..SPRING,HELICAL,COMP UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
109	38	PAFZZ	5315-00-855-6805	96906	MS24665-22	..PIN,COTTER UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
109	39	XAFZZ		83777	400085	..GUIDE,ACTUATOR,ELEC UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
109	40	PAFZZ	5305-00-177-5599	83777	600572-1	..SETSCREW,ADJUSTER.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	41	PAFZZ	5305-00-177-5598	83777	600572-2	..SETSCREW,ADJUSTER.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	42	PAFZZ	5310-00-177-1249	83777	400077	..NUT,SLEEVE.........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
109	43	XDFZZ	5305-00-064-6647	96906	MS51957-13	..SCREW,MACHINE......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	44	PAFZZ	5310-00-184-8996	96906	MS35338-97	..WASHER, LOCK.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	45	PAFZZ	5977-00-133-7745	83777	400024	..BRUSH,GROUNDING STR................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
109	46	XBFZZ	1680-00-133-7490	83777	800161	..HOUSING,ACTUATOR...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

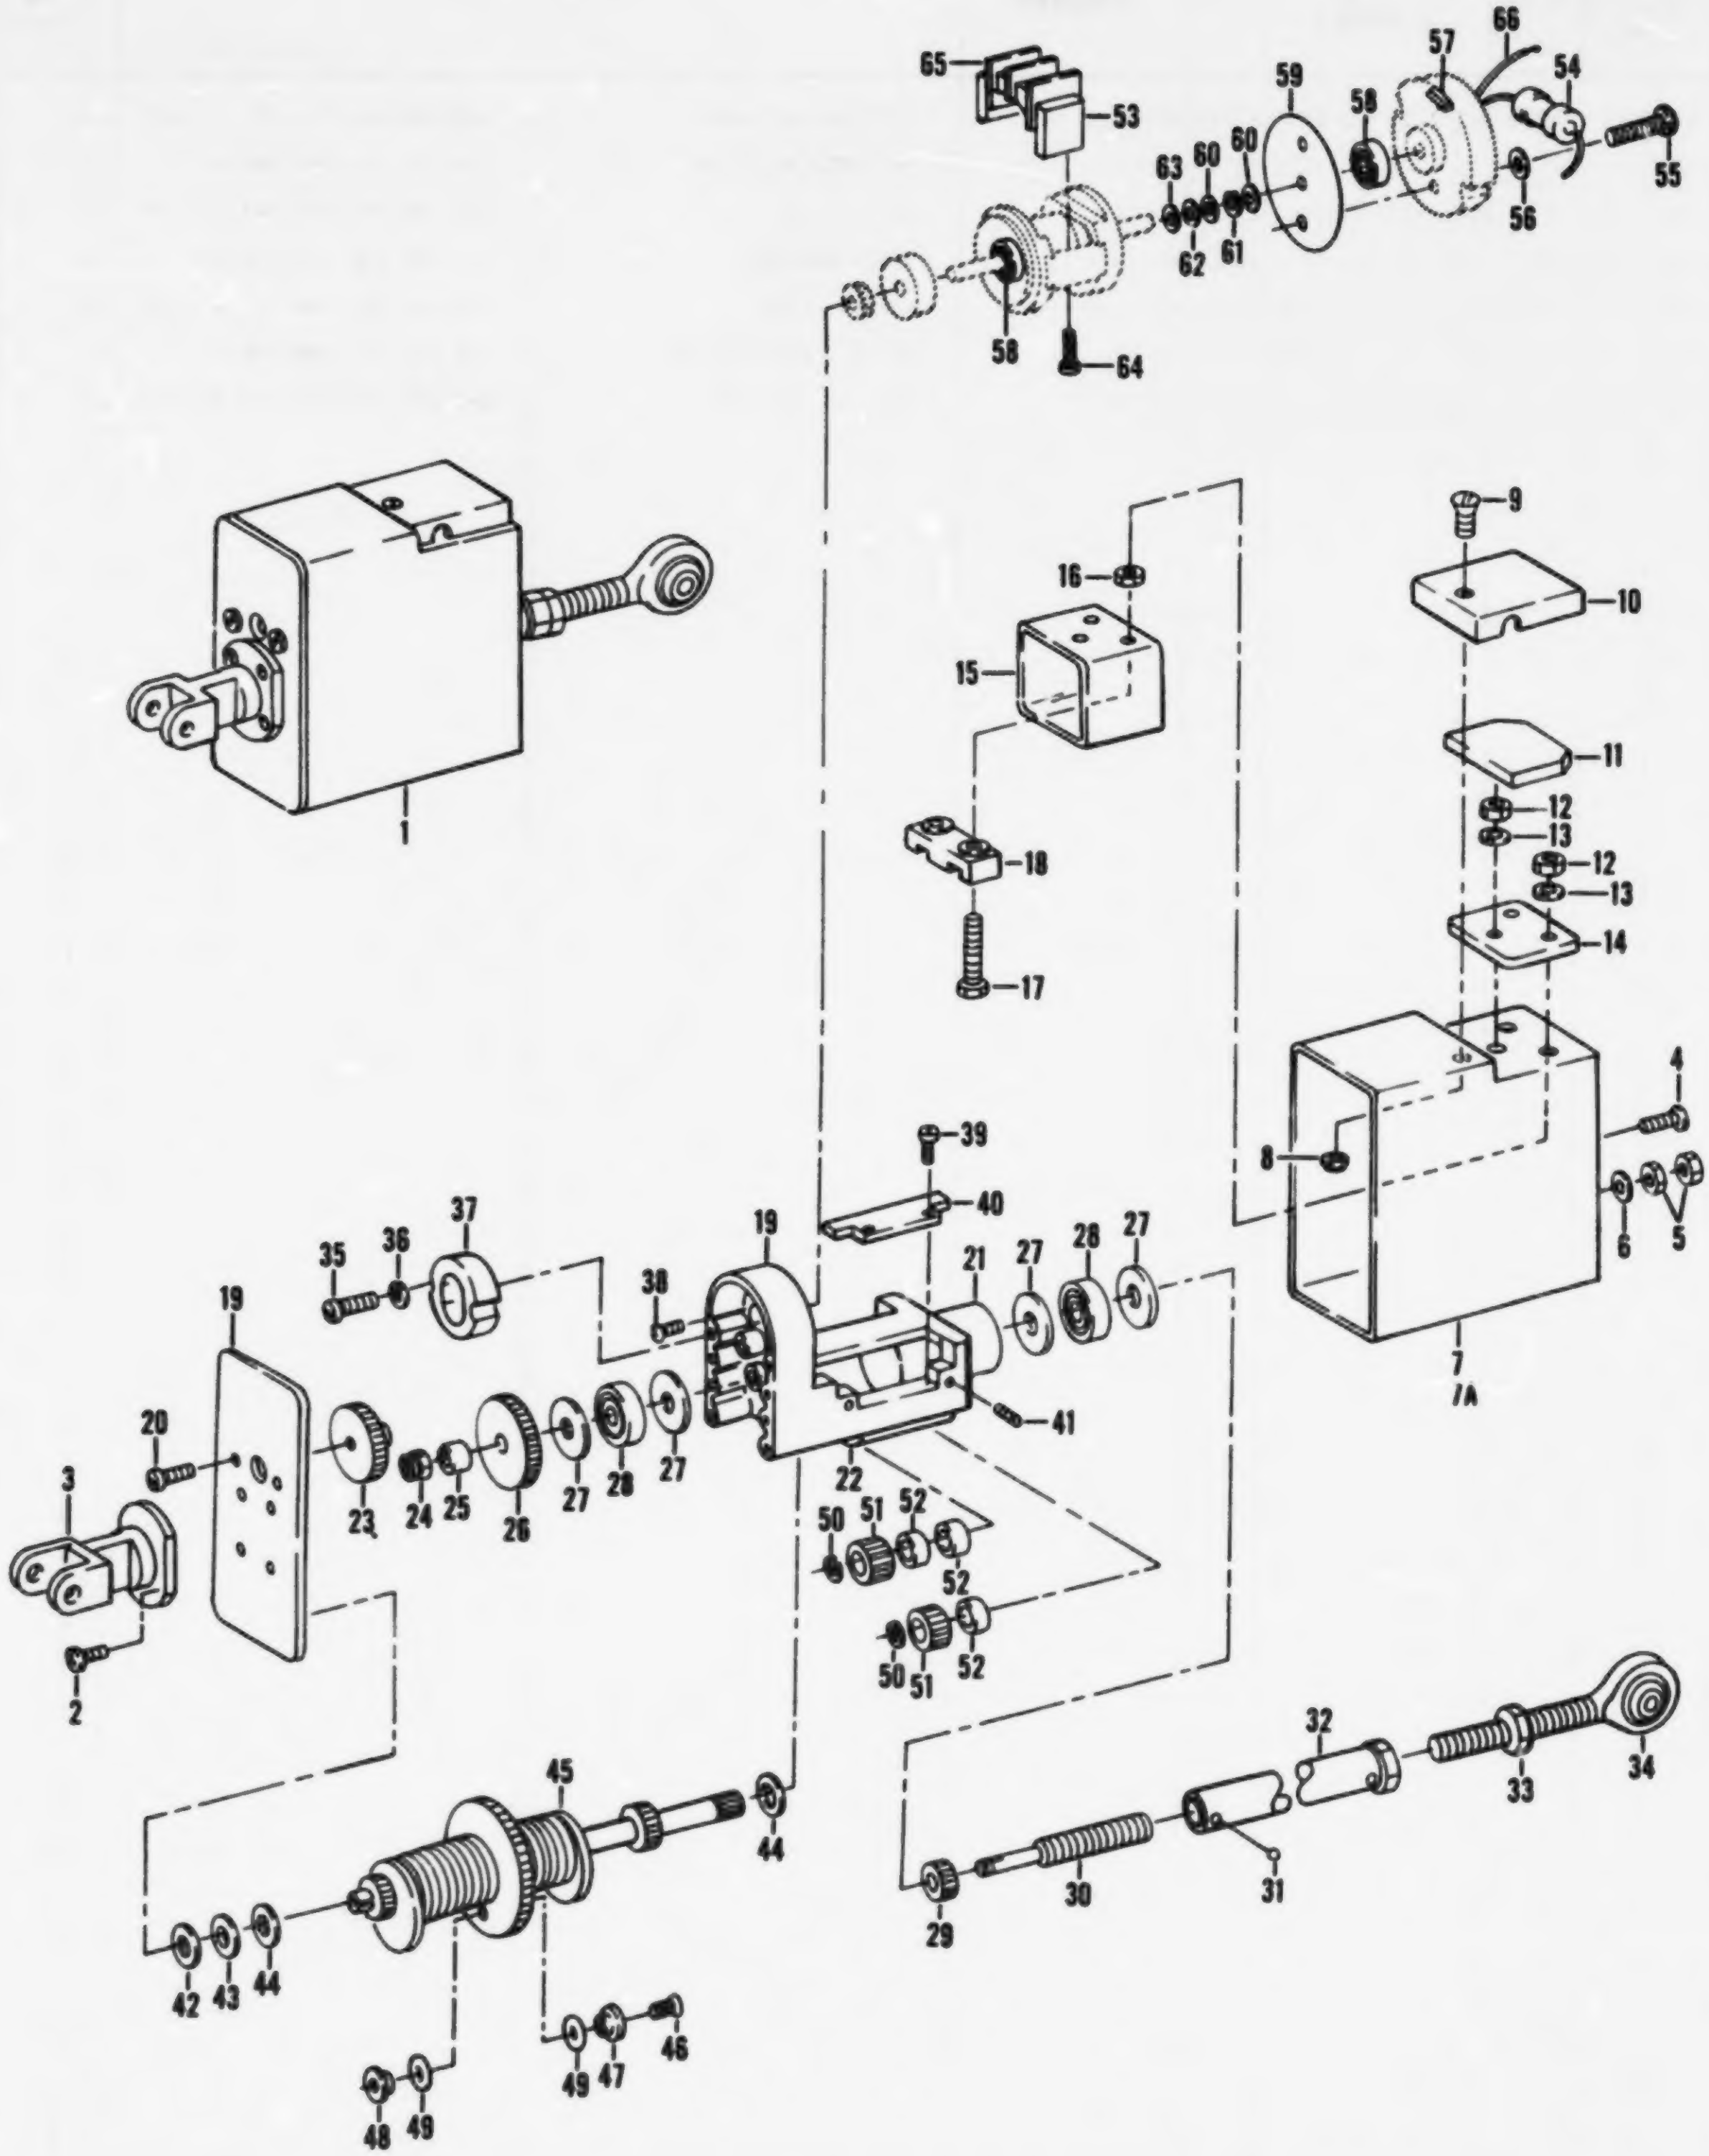
65
53
59
57
66
54
55
58
63
60
60
62
61
56
58
64
9
16
10
15
1
11
12
13
12
13
18
14
17
4
39
8
6
5
40
37
19
35
36
38
21
27
28
27
19
7
7A
20
41
3
23
24
25
26
27
28
27
22
50
51
52
52
2
50
51
52
32
45
34
44
33
30
31
29
42
43
44
46
49
47
48
49

Figure 110. Actuator, Linear

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
110		PAOFF	2995-00-990-3163	25140	65A124	ACTUATOR,LINEAR SEE FIG 97 & 98 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	1	XAOFF		25140	65A124	.ACTUATOR ASSEMBLY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	2	PBFZZ	5305-00-543-2732	96906	MS35265-18	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
110	3	PAFZZ	2995-00-187-5796	25140	17D2890	..PLATE,MOUNTING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	4	PAFZZ	5305-00-889-3116	96906	MS35206-213	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	5	PAFZZ	5310-00-902-6676	96906	MS21083N3	..NUT,SELF-LOCKING,HE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	6	PAFZZ	5365-00-263-9615	25140	21D1050	..SPACER,PLATE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	7	PAFFF	2995-00-187-5782	25140	2A921	..COVER AND NUT ASSY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	7A	XAFZZ		25140	4D2543	...COVER..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	8	PAFZZ	5310-00-855-1202	56878	SNL440-2	...NUT,SELF-LOCKING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	9	PAOZZ	5305-00-958-5457	96906	MS35190-226	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	10	PAOZZ	2995-00-551-3047	25140	6D1001	..COVER,ACCESS..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	11	PAOZZ	5940-00-334-6450	25140	9D1784	..COVER,TERMINAL BOAR..........UHB,UHC,UHF,UHH,UHM,UHV,UHX	EA	1
110	12	PBOZZ	5310-00-680-6627	96906	MS25082-1	..NUT,PLAIN,HEXAGON..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
110	13	PAOZZ	5310-00-167-0816	88044	AN960-6	..WASHER,FLAT..........UHB,UHC,UHH,UHM,UHV,UHE,UHX	EA	3
110	14	PBOZZ	5940-00-334-6451	25140	40D2023	..TERMINAL BOARD..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	15	PAFFF	5910-00-177-2619	25140	40D2045	..CAPACITOR,ELECTRICA..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	16	PAFZZ	5310-00-934-9747	96906	MS35649-262	...NUT,PLAIN,HEXAGON..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
110	17	PAFZZ	5305-00-257-6098	25140	1D1262	...SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	18	XAFZZ		25140	40D2022	...TERMINAL BOARD..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	19	PBFFF	2995-00-208-7602	25140	2A925	.HOUSING AND PLATE A..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	20	PBFZZ	5305-00-614-0260	96906	MS35265-17	...SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	21	PBFZZ	3120-00-133-6433	75263	K679-64	...BEARING,SLEEVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	22	PAFZZ	5315-00-807-7684	96906	MS16555-603	...PIN,STRAIGHT,HEADLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	23	XDFZZ	3040-00-195-1024	25140	1A2979	..GEARSHAFT ASSEMBLY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	24	PAFZZ	5310-00-902-6676	96906	MS21083N3	..NUT,SELF-LOCKING,HE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	25	PAFZZ	5365-00-221-7178	25140	19D1395	..SPACER,SLEEVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	26	PAFZZ	3020-00-229-5772	25140	3D1568	..GEAR,SPUR..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	27	PAFZZ	3120-00-014-1343	27545	516W	..BEARING,WASHER,THRU..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
110	28	PAFZZ	3110-00-097-5413	27545	T507	..RETAINER,BALL BEARING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	29	PAFZZ	3020-00-248-3007	25140	3D1567	..GEAR,SPUR..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	30	XBFZZ		25140	5D2656	..SHAFT,SHOULDERED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	31	PAFZZ	3110-00-183-7537	96906	MS19060-4806	..BALL,BEARING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	32	PAFZZ	2995-00-432-1489	25140	7A3636	..SHAFT,STRAIGHT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	33	PAOZZ	5310-00-182-4185	25140	1D871	..NUT,PLAIN,HEXAGON..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	34	PBOZZ	3120-00-164-8049	25140	15D1361	..BEARING,PLAIN,ROD END..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	35	PAFZZ	5305-00-237-8554	25140	1D653	..SCREW,FILLISTER,HD..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	36	PAFZZ	5310-00-235-0304	25140	21D793	..WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	37	PBFZZ	5999-00-340-1364	25140	29D580	..MAGNET,PERMANENT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	38	PAFZZ	5305-00-958-5483	96906	MS35190-221	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	39	PAFZZ	5305-00-889-3116	96906	MS35206-213	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
110	40	PAFZZ	2995-00-326-2897	25140	35D697	..RETAINER,BALL BEARING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
110	41	PBFZZ	5305-00-717-6949	96906	MS51963-10	..SETSCREW........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
110	42	XDFZZ	5365-00-211-5539	25140	21D883-3	..SHIM........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
110	43	XDFZZ	5365-00-209-1805	25140	21D883-1	..SHIM........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
110	44	XDFZZ	5365-00-209-1807	25140	21D883-2	..SHIM........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
110	45	PAFFF	2995-00-187-5810	25140	9A1417	..STOP AND SHAFT ASSY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	46	PBFZZ	5305-00-151-2259	88044	AN510-1-3	...SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	47	PBFZZ	5310-01-032-1191	25140	21D1048	...WASHER,DRIVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	48	PBFZZ	5310-01-024-4824	25140	21D1047	...NUT,SLEEVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	49	PAFZZ	5330-00-143-8365	25184	005-8305	...PACKING,PREFORMED........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	50	PAFZZ	5365-00-721-8187	96906	MS16624-1018	..RING,RETAINING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	51	PAFZZ	3020-00-229-5768	25140	3D901	..GEAR,SPUR........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	52	PBFZZ	5365-00-211-5537	25140	19D1396	..SPACER,SLEEVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
110	52	PBFZZ	5365-00-211-5537	25140	19D1396-1	..SPACER,SLEEVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
110	52	PBFZZ	5365-01-158-2105	25140	19D1396-2	..SPACER,SLEEVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
110	53	PAFFF	6105-00-437-7834	25140	3A1578	..MOTOR,DIRECT CURRENT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	53	XAFFF		25140	13A1578	...MOTOR,DIRECT CURRENT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	54	PAFZZ	5905-00-853-8000	44655	995-5B2500HM5PCT	....RESISTOR,FIXED,WIRE WOUND....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	55	PBFZZ	5305-00-614-0260	96906	MS35265-17	....SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	56	PAFZZ	5310-00-193-7577	96906	MS35333-36	....WASHER,LOCK........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	57	PAFZZ	5977-00-504-9042	25140	40D929	....BRUSH,ELECTRICAL........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	58	PAFZZ	3110-00-293-9430	21335	PA33KDDFS160	....BEARING,BALL,ANNULA........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	59	PAFZZ	5970-00-617-1256	25140	9D598	....INSULATOR,MOTOR........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	60	PAFZZ	5365-00-047-2330	25140	21D695-4	....SHIM........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	61	PAFZZ	5365-00-622-3700	25140	10D591	....SHIM........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	62	PBFZZ	5310-00-164-0621	25140	21D695-5	....WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
110	63	PBFZZ	5310-00-622-3813	25140	21D543	....WASHER,NONMETALLIC........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	64	PAFZZ	5305-00-954-3938	96906	MS35206-207	....SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110	65	PBFZZ	6105-00-617-1218	25140	4A1076	....COIL ASSEMBLY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110	66	MDFFZ		25140	40D944B2	....WIRE,ELECTRICAL........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

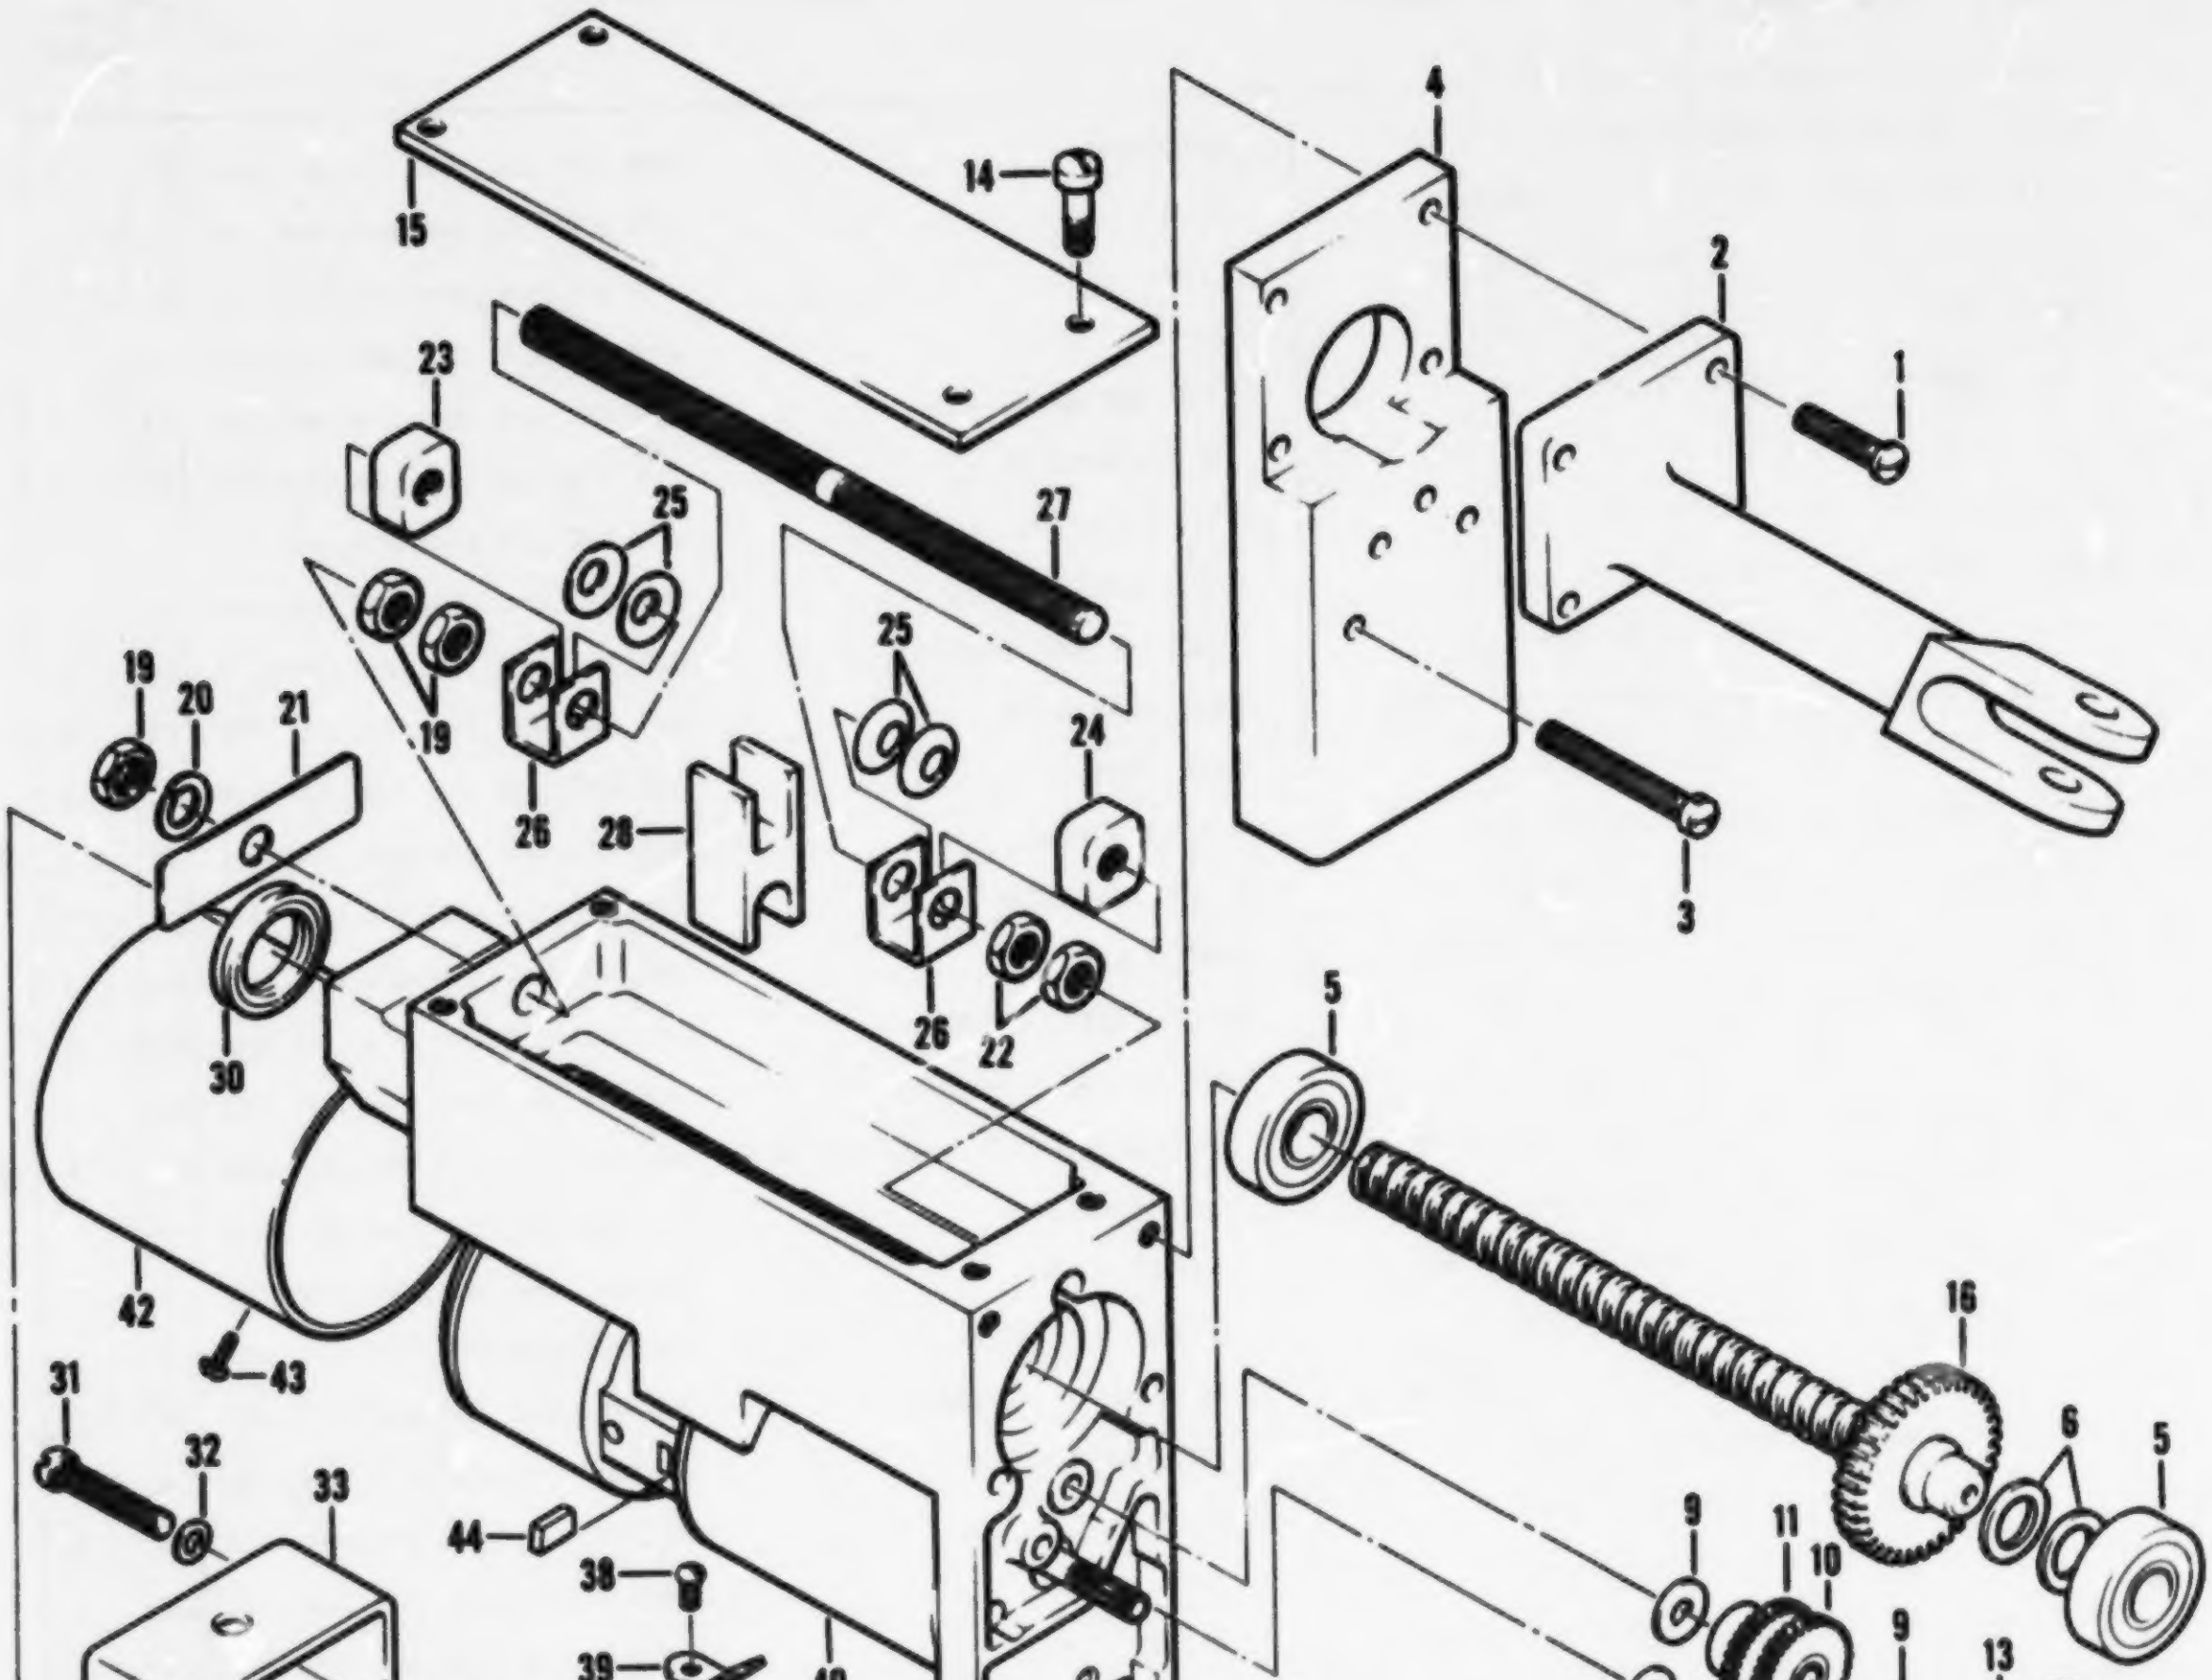
4
14
15
2
1
23
27
25
19
20
21
19
25
26
28
24
3
26
22
30
5
42
16
43
31
32
33
6
5
9
11
10
44
38
39
40
36
9
13
12
37
34
35
41
10
8
7
17
18
29

Figure 110A. Actuator, Electromechanical, Linear

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
110A		PAOFF	2995-00-990-3163	05624	SYLC9190-10	ACTUATOR,ELECTRO-ME SEE FIG.97 & 98 FOR NHA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	1	PAFZZ	5305-00-582-6806	62983	193770	.SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
110A	2	PAFZZ	2995-00-082-0528	05624	SYLC508	.CONNECTING END CAP,	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	3	PAFZZ	5305-00-614-0266	96906	MS35265-33	.SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110A	4	PAFZZ	5340-00-871-4162	05624	SYLC510-1	.CAP,END	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	5	PAFZZ	3110-00-580-9301	05624	CYRB252	.BEARING,BALL,ANNULA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110A	6	PAFZZ	5365-00-205-9181	05624	CYRD272	.SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
110A	7	PAFZZ	5310-00-896-6272	05624	CYRD311	.WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	8	PAFZZ	3020-00-878-2474	05624	SYLC522	.GEAR CLUSTER,SPUR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	9	PAFZZ	5310-00-895-6311	05624	CYRD311-3	.WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110A	10	PAFZZ	3020-00-878-2471	05624	SYLC523	.GEAR CLUSTER,SPUR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110A	11	PAFZZ	3020-00-878-2472	05624	SYLC524	.GEAR CLUSTER,SPUR	UHB,UHC,UHH	EA	1
110A	12	PAFZZ	5365-00-895-6329	05624	CYRD311-4	.SHIM	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	13	PAFZZ	5915-00-763-4149	05624	CYZR736	.FILTER,RADIO FREQUE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	14	PAFZZ	5305-00-271-8381	96906	AN116964	.SCREW	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
110A	15	MFFZZ		05624	SYLC507	.PLATE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	16	PAFZZ	3040-00-878-2486	05624	SYLC521	.GEARSHAFT,SPUR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	17	PAOZZ	3120-00-874-2676	05624	CYRB251	.BEARING,PLAIN,ROD E	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	18	PAFZZ	5310-00-870-0745	05624	DYRF14	.NUT,PLAIN,HEXAGON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	19	PAFZZ	5310-00-881-1360	05624	JYRF183	.NUT,PLAIN,HEXAGON	UHP,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
110A	20	PAFZZ	5310-00-045-3296	96906	MS35338-43	.WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	21	PAFZZ	9905-00-878-2488	05624	SYLC 516	.PLATE,INSTRUCTION	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	22	PAFZZ	5310-00-881-1361	05624	JYRF184	.NUT,PLAIN,HEXAGON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
110A	23	PAFZZ	5310-00-876-1015	05624	JYRF168	.NUT,PLAIN,SQUARE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	24	PAFZZ	5310-00-882-0432	05624	JYRF169	.NUT,PLAIN,SQUARE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	25	PAFZZ	5310-00-817-0994	05624	JYRD32	.WASHER,SPRING TENSI	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
110A	26	PAFZZ	2995-00-862-3956	05624	SYLC529	.RETAINER,ROD,ACTUAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110A	27	PAFZZ	5307-00-882-0572	05624	SYLC519	.SCREW,ADJUSTING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110A	28	PAFZZ	2995-00-878-2496	05620	SYLC515	.STOP,ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	29	PAFZZ	2995-00-878-2492	05624	SYLC520	.SLEEVE, ACTUATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	30	PAFZZ	5330-00-869-6964	05624	BYRZ102	.PACKING,PREFORMED	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	31	PAOZZ	5305-00-941-6403	96906	MS35275-208	.SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110A	32	PAFZZ	5310-00-579-5554	96906	MS35333-35	.WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110A	33	PAOZZ	5940-00-879-7074	05624	SYLC526	.COVER,TERMINAL BOAR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	34	PAOZZ	5310-00-815-4847	97942	1JA2699H12	.NUT,PLAIN,HEXAGON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
110A	35	PAOZZ	5310-00-579-0079	96906	MS35333-37	.WASHER,LOCK	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
110A	36	PAFZZ	5305-00-959-2345	96906	MS35190-211	.SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
110A	37	PAFZZ	2995-00-107-1888	05624	SYLC514	.MOUNTING,TERMINAL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	38	PAFZZ	5305-00-893-9544	96906	MS35265-11	.SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	39	PAFZZ	5940-00-682-2477	96906	MS77068-1	.TERMINAL,LUG	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	40	PAFZZ	6105-00-879-0540	05624	DYLM73501-1	.MOTOR,DIRECT CURREN	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	41	XAFZZ		05624	SYLC509-1	.HOUSING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
110A	42	PAFZZ	6105-00-871-2318	05624	DYLM525-5	.HOUSING,MULTIPLE..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	43	PAFZZ	5305-00-958-5462	96906	MS35190-215	..SCREW..............................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
110A	44	PAFZZ	5977-00-539-7970	05624	DYLM-26-1	..BRUSH,ELECTRICAL CO.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

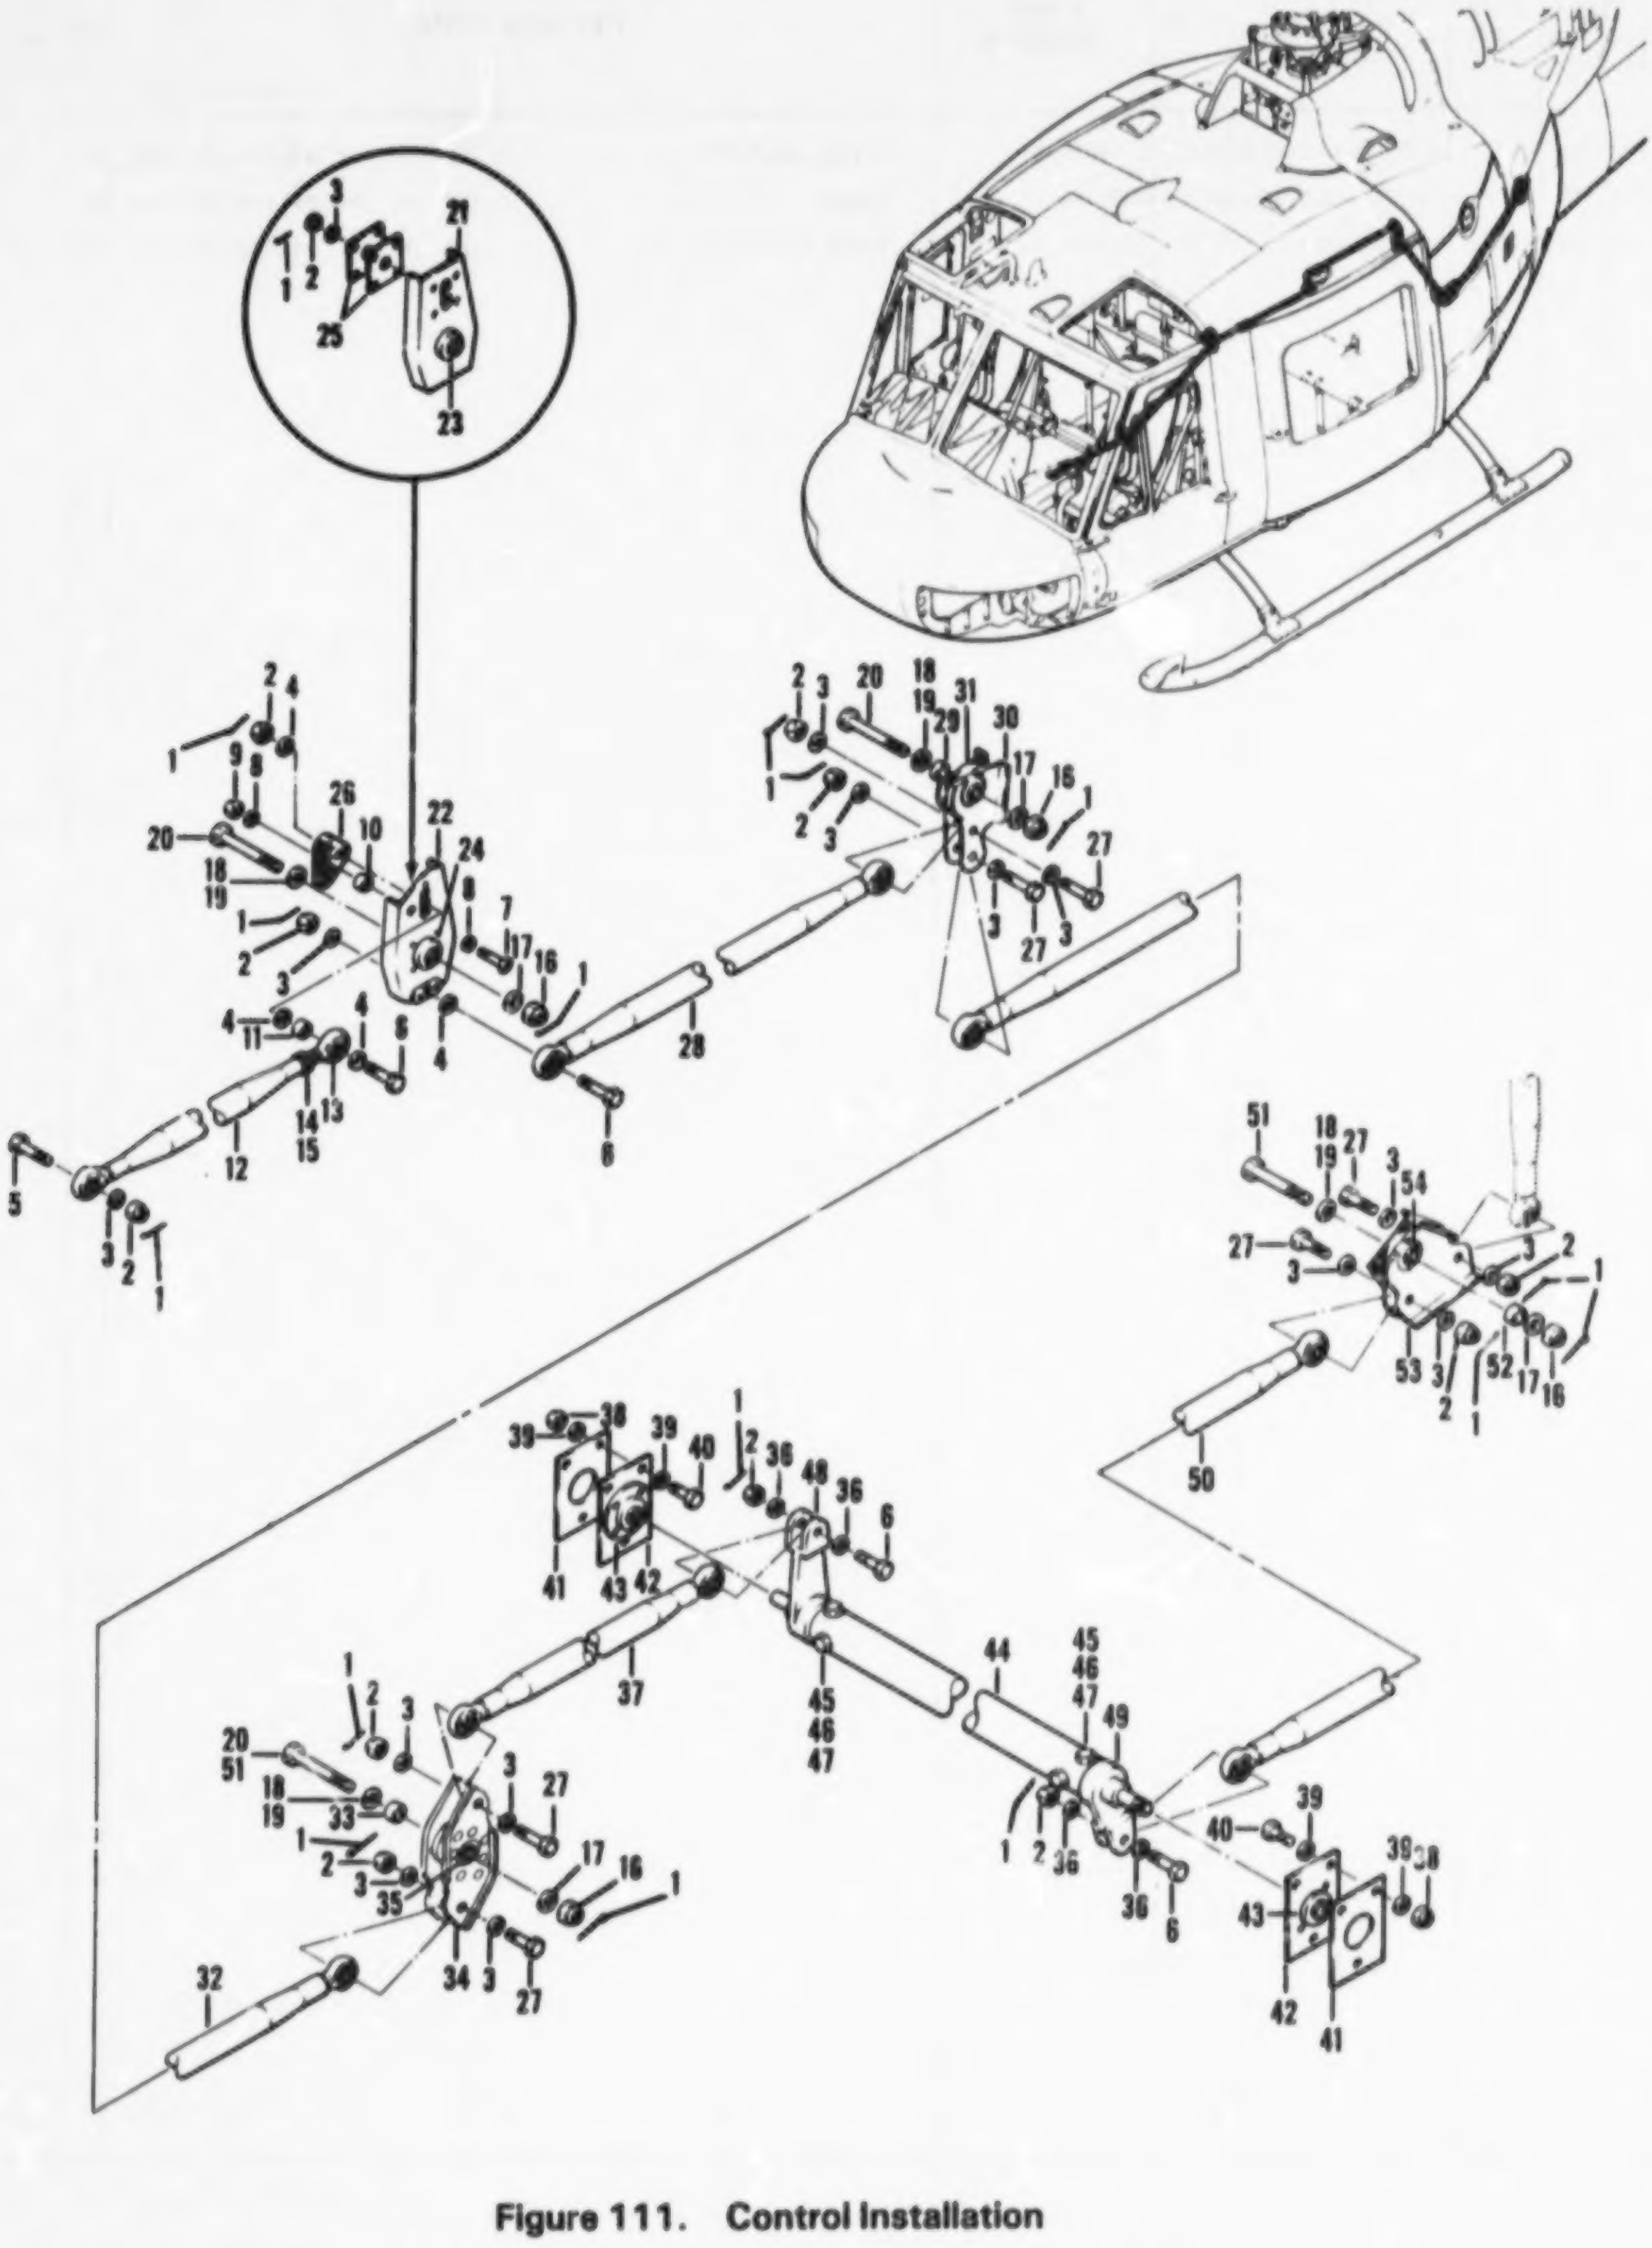
1
2
3
21
25
23
1
2
4
9
8
26
10
22
24
20
18
19
1
2
3
8
7
17
16
1
4
11
4
6
4
13
14
15
12
5
3
2
1
28
6
2
3
20
18
19
29
31
30
17
16
1
1
2
3
27
3
27
3
51
18
19
27
3
54
27
3
3
2
1
53
3
2
52
17
16
1
50
39
38
39
40
41
43
42
1
2
36
48
36
6
37
45
46
47
44
45
46
47
49
1
2
3
20
51
18
19
33
3
27
1
2
3
35
17
16
1
34
3
27
32
1
2
36
36
6
40
39
39
38
43
42
41

Figure 111. Control Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
111		XCFZZ		97499	204-060-701-1	CONTROL INSTL POWER LEVER USBL EFF 60-3546 THRU 60-3590 SEE FIG.113 FOR ADDITIONAL BREAKDOWN SEE FIG.6 FOR NHA 204-060-701-1 REPLACED BY -3 & -5 DEPENDING ON TAIL NO. PER BILL ERWIN 1-3-84..........UHB	EA	1
111		XCFZZ		97499	204-060-701-3	CONTROL INSTL POWER LEVER USBL EFF 60-3591 THRU 60-3619 SEE FIG.113 FOR ADDITIONAL BREAKDOWN SEE FIG.6 FOR NHA..........UHB	EA	1
111		XCFZZ		97499	204-060-701-5	CONTROL INSTL POWER LEVER USBL EFF (UH-1B) 61-686 & SUBSEQUENT SEE FIG.113 FOR ADDITION BREAKDOWN SEE FIG.6 FOR NHA..........UHB,UHC,UHM	EA	1
111	1	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER..........UHB,UHC,UHM	EA	15
111	2	PAOZZ	5310-00-285-2177	88044	AN320-3	.NUT,PLAIN,SLOTTED,H..........UHB,UHC,UHM	EA	11
111	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	16
111	4	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..........UHB,UHC,UHM	EA	6
111	5	XDOZZ	5306-00-151-1944	88044	AN173-10	.BOLT,MACHINE..........UHB,UHC,UHM	EA	1
111	6	PAOZZ	5306-00-180-1784	88044	AN173-11	BOLT,CLOSE TOLERANC..........UHB,UHC,UHM	EA	4
111	7	PAOZZ	5305-00-889-3116	96906	MS35206-213	.SCREW,MACHINE..........UHB,UHC,UHM	EA	1
111	8	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
111	9	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHB,UHC,UHM	EA	1
111	10	PAOZZ	5365-00-811-2924	80205	NAS43DD10-14	.SPACER,SLEEVE U/O PN 204-060-701-5..........UHB,UHC,UHM	EA	1
111	11	PAOZZ	5365-00-337-2848	80205	NAS43DD3-10	.SPACER,SLEEVE U/O PN 204-060-701-5..........UHB,UHC,UHM	EA	1
111	12	PAOOO	3040-00-939-8372	97499	204-061-716-1	.CONNECTING LINK..........UHB,UHC,UHM	EA	1
111	13	PAOZZ	3120-00-915-6059	15860	ATNE3-16	..BEARING,ROD END END..........UHB,UHC,UHM	EA	1
111	14	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT..........UHB,UHC,UHM	EA	1
111	15	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1
111	16	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,SLOTTED,HEXAGON..........UHB,UHC,UHM	EA	4
111	17	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..........UHB,UHC,UHM	EA	4
111	18	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT..........UHB,UHC,UHM	EA	V
111	19	PAOZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER, FLAT..........UHB,UHC,UHM	EA	V
111	20	PAOZZ	5306-00-151-0327	88044	AN174H25	.BOLT,CLOSE TOLER 3 EA U/O PN 204-060-701-1 AND -3 2 EA U/O PN 204-060-701-5..........UHB,UHC,UHM	EA	3
111	21	PAOOO	1560-00-816-6677	97499	204-060-728-9	.BELL CRANK ASSY U/O PN 204-060-701-3..........UHB	EA	1
111	22	PAOOO	1560-00-806-2169	97499	204-061-708-1	.BELL CRANK ASSY U/O PN 204-060-701-5..........UHB,UHC,UHM	EA	1
111	23	PBOZZ	3110-00-198-1010	96906	MS20218-1	..BEARING,BALL, BELLCRANK U/O PN 204-060-728-9..........UHB	EA	1
111	24	MFOZZ		97499	204-061-708-5	..BEARING U/O PN 204-061-708-1..........UHB,UHC,UHM	EA	1
111	25	MFOZZ		97499	204-060-728-3	..DOUBLER U/O PN 204-060-728-9..........UHB	EA	2
111	26	PAOZZ	1560-00-083-0467	97499	205-060-771-1	.PLATE,ADJUSTABLE BELLCRANK U/O PN 204-060-701-5..........UHB,UHC,UHM	EA	1
111	27	PAOZZ	5306-00-275-9557	88044	AN173H7	.BOLT,CLOSE TOLER..........UHB,UHC,UHM	EA	6
111	28	PAOZZ	3040-00-855-8266	97499	204-060-719-45	.CONNECTING LINK,RIG..........UHB,UHC,UHM	EA	1
111	29	PAOZZ	5365-00-810-2918	80205	NAS43DD4-13	.SPACER,SLEEVE..........UHB,UHC,UHM	EA	1
111	30	PAOOO	1560-00-625-0082	97499	204-060-731-1	.BELL CRANK ASSEMBLY..........UHB,UHC,UHM	EA	1
111	31	PBOZZ	3110-00-198-1010	96906	MS20218-1	..BEARING,BALL, BELLCRANK..........UHB,UHC,UHM	EA	1
111	32	PAOZZ	3040-00-886-6000	97499	204-060-719-37	.CONNECTING LINK,RIG..........UHB,UHC,UHM	EA	1
111	33	PAOZZ	5365-00-810-2918	80205	NAS43DD4-13	.SPACER,SLEEVE..........UHB,UHC,UHM	EA	1
111	34	PAOOO	1560-00-625-0079	97499	204-060-732-1	.BELL CRANK ASSY..........UHB,UHC,UHM	EA	1
111	35	PBOZZ	3110-00-198-1010	96906	MS20218-1	.BEARING,BALL, BELLCRANK..........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
111	36	PAOZZ	5310-00-814-8313	80205	NAS1197-10L	.WASHER,FLAT.........................UHB,UHC,UHM	EA	4
111	37	PAOZZ	3040-00-886-6001	97499	204-060-719-39	.CONNECTING LINK,RIG.........................UHB,UHC,UHM	EA	1
111	38	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.........................UHB,UHC,UHM	EA	6
111	39	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.........................UHB,UHC,UHM	EA	12
111	40	PAOZZ	5306-00-292-8284	88044	AN173H4A	.BOLT,CLOSE TOLERANC.........................UHB,UHC,UHM	EA	6
111	41	PAOZZ	5365-00-780-0882	97499	204-060-799-1	.SHIM.........................UHB,UHC,UHM	EA	5
111	42	PA000	1560-00-624-5167	97499	204-060-712-1	.SUPPORT ASSY.........................UHB,UHC,UHM	EA	2
111	43	PBOZZ	3110-00-198-1010	96906	MS20218-1	..BEARING,BALL, BELLCRANK.........................UHB,UHC,UHM	EA	1
111	44	PA000	1560-00-847-8379	97499	204-060-705-17	.TUBE ASSY,TORQUE.........................UHB,UHC,UHM	EA	1
111	45	PAOZZ	5310-00-807-1467	96906	MS21042-3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.........................UHB,UHC,UHM	EA	4
111	46	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT.........................UHB,UHC,UHM	EA	4
111	47	PAOZZ	5306-00-292-8277	88044	AN173H14A	. BOLT,CLOSE,TOLER.........................UHB,UHC,UHM	EA	1
111	48	PAOZZ	1560-00-847-8381	97499	204-060-705-13	..LEVER ASSY.........................UHB,UHC,UHM	EA	1
111	49	PAOZZ	1560-00-847-8380	97499	204-060-705-15	..LEVER ASSY.........................UHB,UHC,UHM	EA	1
111	50	PAOZZ	3040-00-886-6003	97499	204-060-719-43	.CONNECTING LINK,RIG.........................UHB,UHC,UHM	EA	1
111	51	PAOZZ	5306-00-151-0323	88044	AN174H31	.BOLT,CLOSE TOLERANC 1 EA U/O PN 204-060-701-1 AND -3 2 EA U/O PN 204-060-701-5.........................UHB,UHC,UHM	EA	2
111	52	PAOZZ	5365-00-810-2918	80205	NAS43DD4-13	.SPACER,SLEEVE.........................UHB,UHC,UHM	EA	1
111	53	PA000	1560-00-625-0078	97499	204-060-733-1	.BELL CRANK ASSY.........................UHB,UHC,UHM	EA	1
111	54	PBOZZ	3110-00-198-1010	96906	MS20218-1	..BEARING,BALL, BELLCRANK.........................UHB,UHC,UHM	EA	1

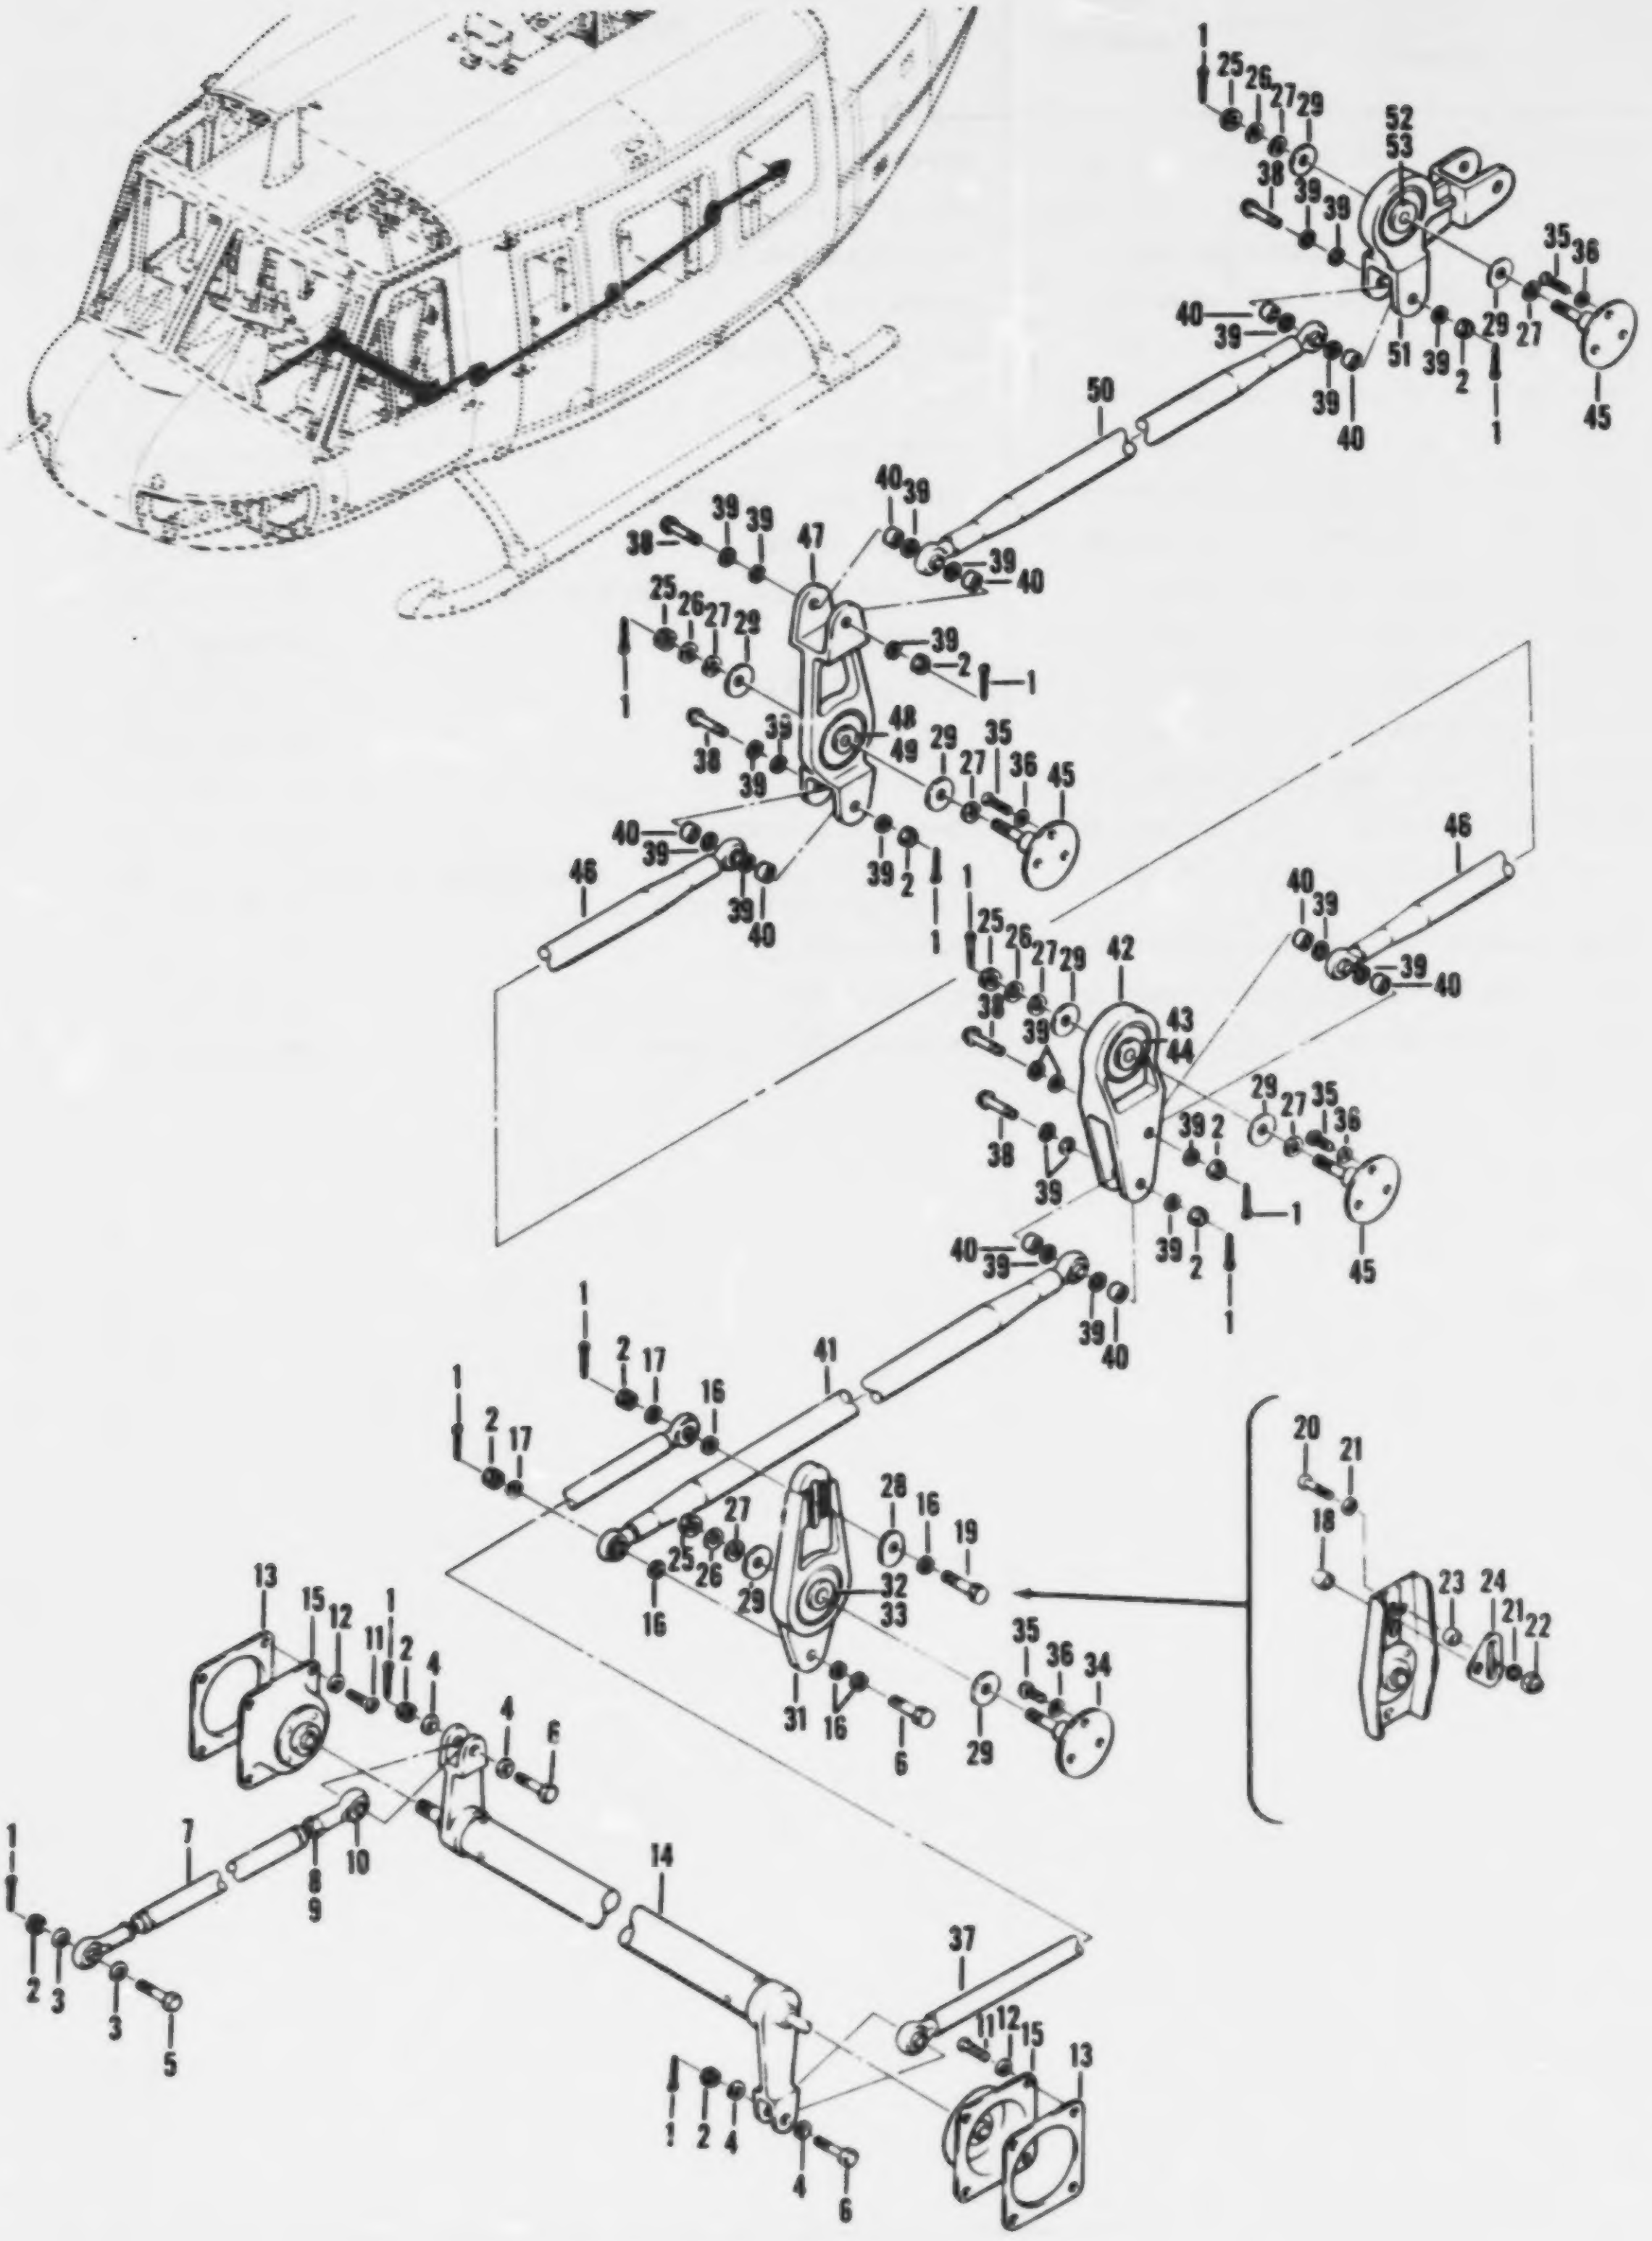
1
25
26
27
29
52
53
38
39
39
35
36
40
39
51
39
2
29
27
1
45
50
39
40
40
39
38
39
39
47
39
40
25
26
27
29
39
2
1
1
48
49
29
35
27
36
45
38
39
39
40
39
46
39
40
39
2
1
1
46
40
39
25
26
27
29
42
39
40
38
39
43
44
29
27
35
36
38
39
39
2
1
39
45
40
39
39
2
1
39
40
41
1
2
17
16
1
2
17
20
21
18
28
16
19
27
25
26
29
32
33
23
24
21
22
16
16
13
15
12
11
1
2
4
35
36
34
31
16
6
29
4
6
7
1
8
9
10
14
37
2
3
3
5
11
12
15
13
1
2
4
4
6

Figure 112. Control Installation, Power

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.							
112		XCFZZ		97499	205-060-700-3	CONTROL INSTL,POWER LEVER USBL EFF 62-2106 THRU 65-9976 SEE FIG.7 FOR NHA UHE,UHH,UHV,UHX	EA	1
112		XCFZZ		97499	205-060-700-5	CONTROL INSTL,POWER LEVER USBL EFF 65-9977 THRU 68-15489 SEE FIG.7 FOR NHA UHE,UHH,UHV,UHX	EA	1
112		XCFZZ		97499	205-060-700-7	CONTROL INSTL,POWER LEVER USBL EFF 15490 & SUBSEQUENT SEE FIG.7 FOR NHA UHE,UHH,UHV,UHX	EA	1
112	1	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER UHE,UHH,UHV,UHX	EA	14
112	2	PAOZZ	5310-00-285-2177	88044	AN320-3	.NUT,SLOTTED,HEXAGON ALTERNATE UHE,UHH,UHV,UHX	EA	10
112	2	PAOZZ	5310-00-167-1284	88044	AN310-3	.NUT,CASTELLATED, HEXAGON UHE,UHH,UHV,UHX	EA	10
112	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
112	4	PAOZZ	5310-00-814-8313	80205	NAS1197-10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	4
112	5	XDOZZ		88044	AN173-10	.BOLT,MACHINE UHE,UHH,UHV,UHX	EA	1
112	6	PAOZZ	5306-00-180-1784	88044	AN173-11	.BOLT,CLOSE TOLERANC UHE,UHH,UHV,UHX	EA	3
112	7	PAOOO	3040-00-939-7531	97499	204-061-716-7	.CONNECTING LINK,RIG UHE,UHH,UHV,UHX	EA	1
112	8	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	1
112	9	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
112	10	PAOZZ	3120-00-915-6059	15860	ATNE3-16	..BEARING,ROD END END UHE,UHH,UHV,UHX	EA	1
112	11	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	8
112	12	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	8
112	13	MFOZZ	1560-00-986-9947	97499	205-060-770-1	.SHIM,FLIGHT CONTROL UHE,UHH,UHV,UHX	EA	12
112	14	PAOZZ	1560-00-868-4843	97499	205-060-727-11	.TORQUE TUBE ASSY UHE,UHH,UHV,UHX	EA	1
112	15	PAOZZ	3130-00-963-1078	97499	205-060-730-1	.BEARING ASSEMBLY JACKSHAFT UHE,UHH,UHV,UHX	EA	2
112	16	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	5
112	17	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
112	18	PAOZZ	5365-00-337-2848	80205	NAS43DD3-10	.SPACER,SLEEVE UHE,UHH,UHV,UHX	EA	1
112	19	PAOZZ	5306-00-638-5817	88044	AN173H12	.BOLT,MACHINE UHE,UHH,UHV,UHX	EA	1
112	20	PAOZZ	5305-00-889-2999	96906	MS35206-217	.SCREW,MACHINE U/O PN 205-060-700-3 UHE,UHH,UHV,UHX	EA	1
112	21	PAOZZ	5310-00-550-5009	96906	MS15795-704	.WASHER,FLAT U/O PN 205-060-700-3 UHE,UHH,UHV,UHX	EA	2
112	22	PAOZZ	5310-00-807-1471	96906	MS21042L04	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O P/N 205-060-700-3 UHE,UHH,UHV,UHX	EA	1
112	23	PAOZZ	5365-00-811-2924	80205	NAS43DD10-14	.SPACER,SLEEVE U/O PN 205-060-700-3 UHE,UHH,UHV,UHX	EA	1
112	24	PAOZZ	1560-00-083-0467	97499	205-060-771-1	.PLATE ADJUSTABLE BELLCRANK POWER LEVER CONTROL U/W PN 205-060-719-1 UHE,UHH,UHV,UHX	EA	1
112	25	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,SLOTTED,HEXAGON UHE,UHH,UHV,UHX	EA	4
112	26	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
112	27	PAOZZ	5310-00-515-7449	88044	AN960C416L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	8
112	28	PAOZZ	5310-00-945-5726	97499	205-060-731-1	.WASHER,LOCK U/O PN 205-060-700-5 UHE,UHH,UHV,UHX	EA	1
112	29	PAOZZ	5310-00-167-0766	88044	AN970-4	.WASHER,FLAT U/O PN 205-060-700-5 & -7 UHE,UHH,UHV,UHX	EA	8
112	31	PAOOO	1560-00-923-4066	97499	205-060-719-1	.LEVER,POWER CONTROL UHE,UHH,UHV,UHX	EA	1
112	32	PAOZZ	3120-00-625-0123	97499	120-011-4A	..BUSHING,SLEEVE UHE,UHH,UHV,UHX	EA	1
112	33	PAOZZ	3110-00-023-6669	96906	MS27640-4	..BEARING,BALL,AIRFRA UHE,UHH,UHV,UHX	EA	1
112	34	PAOZZ	1560-00-963-1080	97499	205-060-766-3	.MOUNT,BELLCRANK POWER LEVER UHE,UHH,UHV,UHX	EA	1
112	35	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	12
112	36	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	12
112	37	PAOZZ	3040-00-952-9754	97499	205-060-734-9	CONNECTING LINK,RIG UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
112	38	PAOZZ	5306-00-180-1785	88044	AN173-12	.BOLT,CLOSE TOLERANC..........UHE,UHH,UHV,UHX	EA	5
112	39	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT..........UHE,UHH,UHV,UHX	EA	30
112	40	PAOZZ	5365-00-622-1810	80205	NAS43DD3-8	.SPACER,SLEEVE U/O PN 205-060-700-3..........UHE,UHH,UHV,UHX	EA	10
112	41	PAOZZ	3040-00-952-7152	97499	205-060-729-19	.CONNECTING LINK,RIG..........UHE,UHH,UHV,UHX	EA	1
112	42	PAOZZ	1560-00-924-5746	97499	205-060-717-1	.LEVER,POWER CONTROL..........UHE,UHH,UHV,UHX	EA	1
112	43	PAOZZ	3120-00-625-0123	97499	120-011-4A	..BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	1
112	44	PAOZZ	3110-00-023-6669	96906	MS27640-4	..BEARING,BALL,AIRFRA..........UHE,UHH,UHV,UHX	EA	1
112	45	PAOZZ	1560-00-963-1079	97499	205-060-766-1	.MOUNT,BELLCRANK POWER LEVER..........UHE,UHH,UHV,UHX	EA	3
112	46	PAOZZ	3040-00-952-7153	97499	205-060-729-21	.CONNECTING LINK,RIG..........UHE,UHH,UHV,UHX	EA	1
112	47	PAOZZ	1560-00-924-5747	97499	205-060-718-1	.BELLCRANK ASSY..........UHE,UHH,UHV,UHX	EA	1
112	48	PAOZZ	3120-00-625-0123	97499	120-011-4A	..BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	1
112	49	PAOZZ	3110-00-023-6669	96906	MS27640-4	..BEARING,BALL,AIRFRA..........UHE,UHH,UHV,UHX	EA	1
112	50	PAOZZ	3040-00-952-7149	97499	205-060-729-23	.CONNECTING LINK,RIG..........UHE,UHH,UHV,UHX	EA	1
112	51	PAOOO	1560-00-924-5748	97499	205-060-720-1	.BELLCRANK ASSY..........UHE,UHH,UHV,UHX	EA	1
112	52	PAOZZ	3120-00-625-0123	97499	120-011-4A	..BUSHING,SLEEVE..........UHE,UHH,UHV,UHX	EA	1
112	53	PAOZZ	3110-00-023-6669	96906	MS27640-4	..BEARING,BALL,AIRFRA..........UHE,UHH,UHV,UHX	EA	1

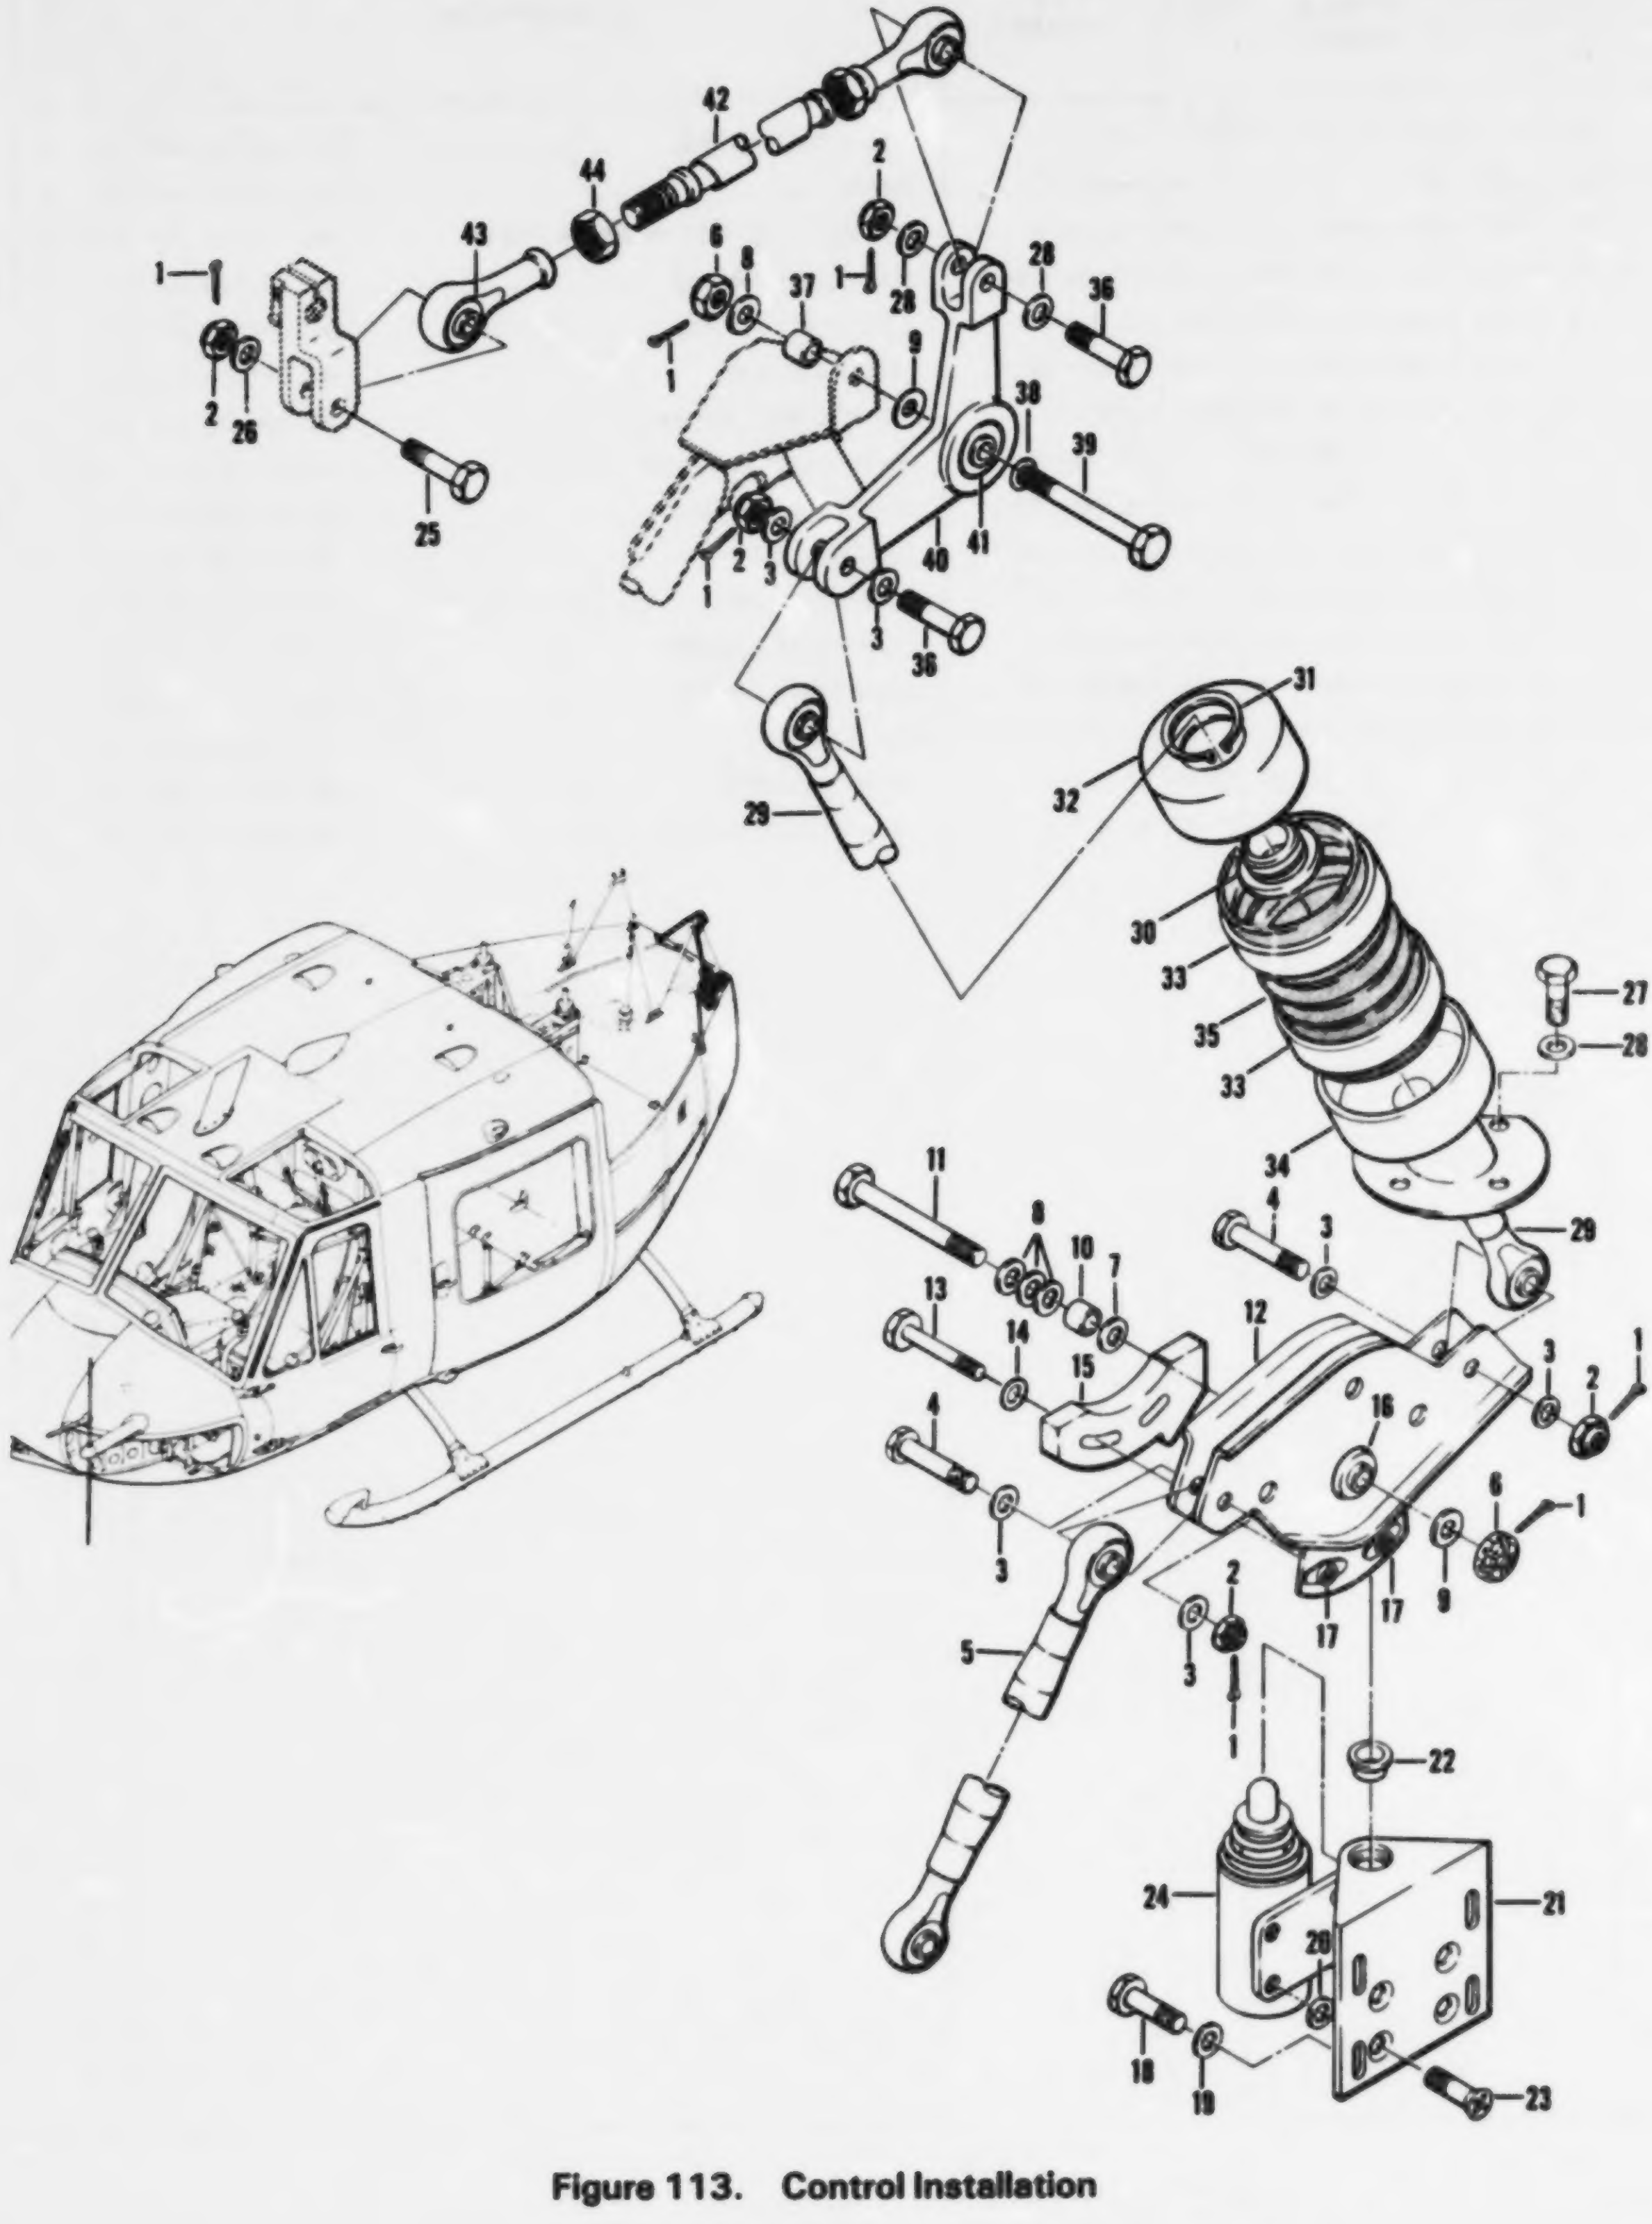
42
44
43
1
2
6
8
37
1
28
36
1
28
9
38
39
2
26
25
41
40
1
2
3
3
36
31
32
29
30
33
35
33
27
28
34
11
8
10
7
4
3
29
13
14
15
12
16
3
2
1
4
6
1
3
9
17
17
2
3
1
5
22
24
20
21
18
19
23

Figure 113. Control Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
113		XCFZZ		97499	204-060-701-1	CONTROL INSTL, POWER LEVER USBL.EFF.60-3546 THRU 60-3590.SEE FIG.111 FOR BALANCE OF BREAKDOWN.SEE FIG.6 FOR NHA.....UHB	EA	1
113		XCFZZ		97499	204-060-701-3	CONTROL INSTL, POWER LEVER USBL.EFF.60-3591 THRU 60-3619.SEE FIG.111 FOR BALANCE OF BREAKDOWN. SEE FIG.6 FOR NHA. ....UHB	EA	1
113		XCFZZ		97499	204-060-701-5	CONTROL INSTL, POWER LEVER USBL EFF UH-1B 60-686 & SUBSEQUENT,UH-1C 64-14101AND SUBSEQUENT SEE FIG.111 FOR BREAKDOWN,SEE FIG.6 FOR NHA..........UHB,UHC,UHM	EA	1
113	1	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER..........UHB,UHC,UHM	EA	7
113	2	PAOZZ	5310-00-285-2177	88044	AN320-3	.NUT,SLOTTED,HEXAGON..........UHB,UHC,UHM	EA	5
113	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	10
113	4	XDOZZ	5306-00-151-1945	88044	AN173-7	.BOLT,CLOSE TOLERANC..........UHB,UHC,UHM	EA	2
113	5	PAOZZ	3040-00-886-6002	97499	204-060-719-41	.CONNECTING LINK,RIG..........UHB,UHC,UHM	EA	1
113	6	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,SLOTTED,HEXAGON..........UHB,UHC,UHM	EA	2
113	7	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT..........UHB,UHC,UHM	EA	1
113	8	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHB,UHC,UHM	EA	3
113	9	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
113	10	PAOZZ	5365-00-580-5791	80205	NAS43DD4-16	.SPACER,SLEEVE..........UHB,UHC,UHM	EA	1
113	11	PAOZZ	5306-00-151-0322	88044	AN174H32	.BOLT,CLOSE TOLER..........UHB,UHC,UHM	EA	1
113	12	PAOOO	1560-00-886-6006	97499	204-060-791-9	.BELL CRANK ASSEMBLY..........UHB,UHC,UHM	EA	1
113	13	PAOZZ	5306-00-182-2060	88044	AN3H7A	..BOLT,MACHINE..........UHB,UHC,UHM	EA	2
113	14	PAOZZ	5310-00-893-1703	97499	204-060-796-1	..WASHER,LOCK..........UHB,UHC,UHM	EA	2
113	15	PAOZZ	1560-00-873-2278	97499	204-060-796-5	..STOP,POWER LEVER CO..........UHB,UHC,UHM	EA	1
113	16	PBOZZ	3110-00-198-1010	96906	MS20218-1	..BEARING,BALL BELLCRANK..........UHB,UHC,UHM	EA	1
113	17	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL..........UHB,UHC,UHM	EA	2
113	18	PAOZZ	5306-00-274-2119	88044	AN3-5A	.BOLT,MACHINE..........UHB,UHC,UHM	EA	4
113	19	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	4
113	20	PAOZZ	5365-00-845-0189	97499	120-031-12-7	.SHIM NOT REQUIRED WHEN BRACKET PN 204-060-797-5 IS USED ....UHB,UHC,UHM	EA	4
113	21	PAOOF	1560-00-404-6016	97499	204-060-797-5	.SPACER,MOUNTING BAS..........UHB,UHC,UHM	EA	1
113	22	PAOZZ	3120-00-842-0674	97499	22-007B20-12-18	..BEARING,SLEEVE..........UHB,UHC,UHM	EA	1
113	23	PAOZZ	5305-00-719-5406	96906	MS24694S46	.SCREW,MACHINE..........UHB,UHC,UHM	EA	4
113	24	PAOZZ	5945-00-400-8297	81823	A900	.SOLENOID,ELECTRICAL -ALTERNATE-..........UHB,UHC,UHM	EA	1
113	24	PAOZZ	5945-00-400-8297	07797	5447	.SOLENOID,ELECTRICAL..........UHB,UHC,UHM	EA	1
113	25	PAOZZ	5306-00-680-6546	80205	NAS1003-10	.BOLT,MACHINE..........UHB,UHC,UHM	EA	1
113	26	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
113	27	PAOZZ	5306-00-150-9221	88044	AN3-3A	.BOLT,MACHINE..........UHB,UHC,UHM	EA	4
113	28	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT..........UHB,UHC,UHM	EA	4
113	29	PAOZZ	3040-00-886-6004	97499	204-060-719-47	.CONNECTING LINK,RIG..........UHB,UHC,UHM	EA	1
113	30	PAOZZ	3120-00-708-2249	97499	204-060-769-1	.BEARING,SLEEVE..........UHB,UHC,UHM	SE	1
113	31	PAOZZ	5365-00-803-7302	96906	MS16624-1081	.RING,RETAINING..........UHB,UHC,UHM	EA	1
113	32	PAOZZ	1560-00-708-2253	97499	204-060-767-1	.RETAINER,POWER LEVER..........UHB,UHC,UHM	EA	1
113	33	PAOZZ	4730-00-278-9105	88044	AN737RM52	.CLAMP,HOSE..........UHB,UHC,UHM	EA	2
113	34	PAOZZ	1560-00-105-6299	97499	204-060-736-1	.END,POWER LEVER..........UHB,UHC,UHM	EA	1
113	35	PAOZZ	1560-00-776-7052	97499	20-045-1	.BOOT,DUST AND MOIST..........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
113	36	PAOZZ	5306-00-180-1784	88044	AN173-11	.BOLT,CLOSE TOLERANC	UHB,UHC,UHM	EA	2
113	37	PAOZZ	5365-00-685-3575	80205	NAS43HT4-35	.SPACER,SLEEVE	UHB,UHC,UHM	EA	1
113	38	PAOZZ	5310-00-167-0766	88044	AN970-4	.WASHER,FLAT	UHB,UHC,UHM	EA	1
113	39	PAOZZ	5306-00-180-1743	88044	AN174-24	.BOLT,CLOSE,TOLER	UHB,UHC,UHM	EA	1
113	40	PAOOO	1560-00-739-4577	97499	204-060-743-5	.BELL CRANK ASSY	UHB,UHC,UHM	EA	1
113	41	PAOZZ	3110-00-042-4571	96906	MS27644-4	..BEARING,BALL,AIRFRA	UHB,UHC,UHM	EA	1
113	42	PAOOO	3040-00-718-6623	97499	204-060-792-9	.CONNECTING LINK,RIG	UHB,UHC,UHM	EA	1
113	43	PAOZZ	3110-00-232-3179	96906	MS21153-1	..BEARING,BALL,ROD END	UHB,UHC,UHM	EA	1
113	44	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON	UHB,UHC,UHM	EA	1

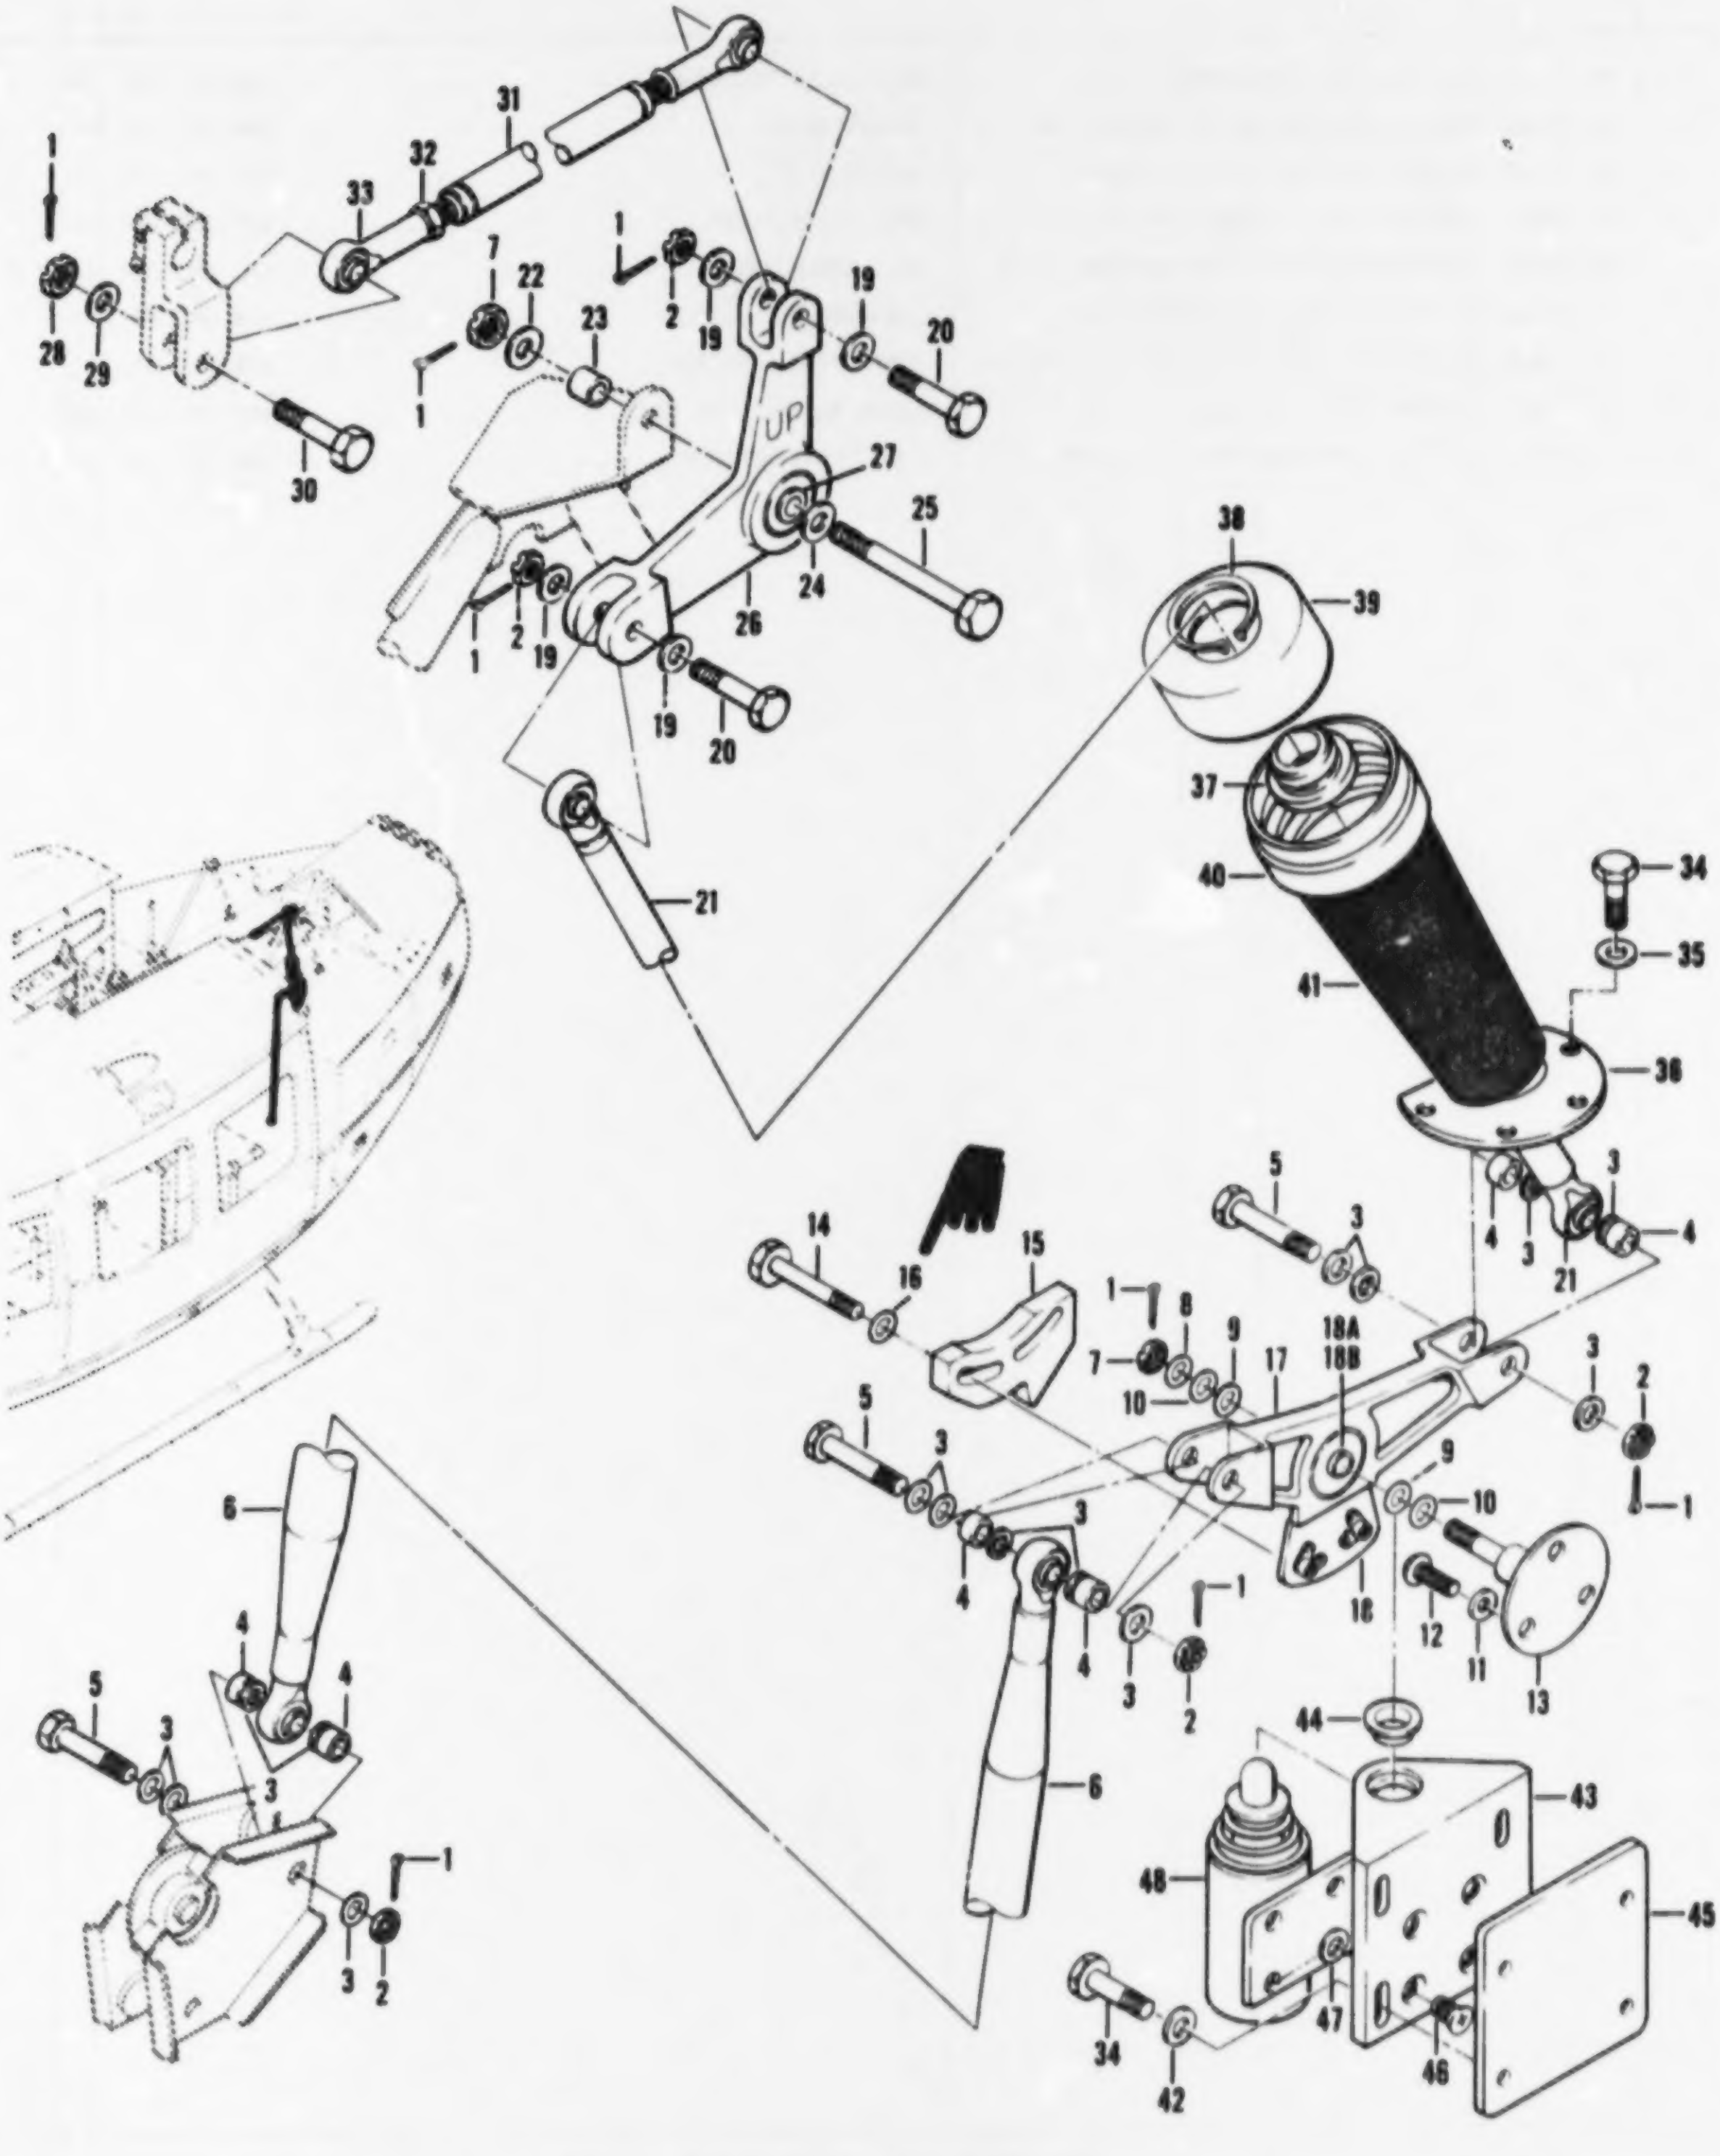
1
31
32
33
28
29
30
7
22
23
1
1
2
19
19
20
UP
27
25
24
1
2
19
26
19
20
21
38
39
37
40
41
34
35
36
5
3
4
3
21
3
4
14
16
15
1
8
7
9
10
17
18A
18B
3
2
1
5
3
9
10
6
4
3
4
1
18
12
11
13
3
2
44
43
48
45
6
5
4
4
3
3
1
3
2
34
42
47
46

Figure 114. Control Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
114		XCFZZ		97499	205-060-700-3	CONTROL INSTL. POWER LEVER USBL EFF 62-2106 THRU 65-9976 SEE FIG.7 FOR NHA UHE,UHH,UHV,UHX	EA	1
114		XCFZZ		97499	205-060-700-5	CONTROL INSTL. POWER LEVER USBL EFF 65-9977 THRU 68-15489 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
114		XCFZZ		97499	205-060-700-7	CONTROL INSTL. POWER LEVER USBL EFF 68-15490 & SUBSEQUENT SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
114	1	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER UHE,UHH,UHV,UHX	EA	7
114	2	PAOZZ	5310-00-285-2177	88044	AN320-3	.NUT,SLOTTED,HEXAGON ALTERNATE UHE,UHH,UHV,UHX	EA	5
114	2	PAOZZ	5310-00-167-1284	88044	AN310-3	.NUT,CASTELLATED, HEXAGON UHE,UHH,UHV,UHX	EA	5
114	3	PAOZZ	5310-00-183-4406	38044	AN960PD10	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	15
114	4	PAOZZ	5365-00-622-1810	80205	NAS43DD3-8	.SPACER,SLEEVE U/O PN 205-060-700-3 UHE,UHH,UHV,UHX	EA	6
114	5	PAOZZ	5306-00-180-1785	88044	AN173-12	.BOLT,CLOSE TOLERANC UHE,UHH,UHV,UHX	EA	3
114	6	PAOZZ	3040-00-952-7150	97499	205-060-729-25	.CONNECTING LINK,RIG UHE,UHH,UHV,UHX	EA	1
114	7	PAOZZ	5310-00-176-8108	88044	AN320-4	.NUT,SLOTTED,HEXAGON UHE,UHH,UHV,UHX	EA	2
114	8	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT U/O PN 205-060-700-3 UHE,UHH,UHV,UHX	EA	1
114	9	PAOZZ	5310-00-167-0766	88044	AN970-4	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
114	10	PAOZZ	5310-00-205-8924	88044	AN960C416L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
114	11	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	3
114	12	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	3
114	13	PAOZZ	1560-00-963-1075	97499	205-060-766-1	.MOUNT,BELL CRANK POWER LEVER UHE,UHH,UHV,UHX	EA	1
114	14	PAOZZ	5306-00-151-0785	88044	AN3-7A	.BOLT,MACHINE UHE,UHH,UHV,UHX	EA	2
114	15	PAOZZ	1560-00-873-2278	97499	204-060-795-5	.STOP,POWER LEVER CO UHE,UHH,UHV,UHX	EA	1
114	16	PAOZZ	5310-00-893-1703	97499	204-060-796-1	.WASHER,LOCK UHE,UHH,UHV,UHX	EA	2
114	17	PAOFF	1560-00-924-5757	97499	205-060-721-1	.BELL CRANK ASSY UHE,UHH,UHV,UHX	EA	1
114	18	PAOZZ	5310-00-728-7716	96906	MS21069L3	..NUT,SELF-LOCKING,PL UHE,UHH,UHV,UHX	EA	2
114	18A	PAFZZ	3110-00-023-6669	96906	MS27640-4	..BEARING,BALL,AIRFRA UHE,UHH,UHV,UHX	EA	1
114	18B	PAFZZ	3120-00-625-0123	97499	120-011-4A	..BUSHING,SLEEVE UHE,UHH,UHV,UHX	EA	1
114	19	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	4
114	20	PAOZZ	5306-00-180-1784	88044	AN173-11	.BOLT,CLOSE TOLERANC UHE,UHH,UHV,UHX	EA	2
114	21	PAOZZ	3040-00-952-9755	97499	205-060-734-11	.CONNECTING LINK,RIG UHE,UHH,UHV,UHX	EA	1
114	22	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
114	23	PAOZZ	5365-00-304-7658	80205	NAS43HT4-32	.SPACER,SLEEVE UHE,UHH,UHV,UHX	EA	1
114	24	PAOZZ	5310-00-167-0766	88044	AN970-4	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
114	25	PAOZZ	5306-00-180-1743	88044	AN174-24	.BOLT,CLOSE,TOLER UHE,UHH,UHV,UHX	EA	1
114	26	XDOOO		97499	204-060-743-5	.BELL CRANK ASSY, ROLLER STAKED CONTROL UHE,UHH,UHV,UHX	EA	1
114	27	XDOZZ		96906	MS27644-4	..BEARING,BALL,AIRFRA UHE,UHH,UHV,UHX	EA	1
114	28	PAOZZ	5310-00-264-1240	88044	AN320C3	.NUT,SLOTTED,HEXAGON UHE,UHH,UHV,UHX	EA	1
114	29	PAOZZ	5310-00-167-0812	88044	AN960C10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
114	30	PAOZZ	5306-00-680-6546	80205	NAS1003-10	.BOLT,MACHINE UHE,UHH,UHV,UHX	EA	1
114	31	PAOOO	3040-00-952-7147	97499	205-060-733-9	.CONNECTING LINK,RIG UHE,UHH,UHV,UHX	EA	1
114	32	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	2
114	33	PAOZZ	3110-00-232-3179	96906	MS21153-1	..BEARING,BALL ROD END UHE,UHH,UHV,UHX	EA	1
114	34	PAOZZ	5306-00-274-2119	88044	AN3-5A	.BOLT,MACHINE UHE,UHH,UHV,UHX	EA	9
114	35	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	6

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
114	36	PAOZZ	1560-00-400-5282	97499	205-060-722-5	.PLATE,HOUSING,POWER......UHE,UHH,UHV,UHX	EA	1
114	37	PAOZZ	3120-00-708-2249	97499	204-060-769-1	.BEARING,SLEEVE......UHE,UHH,UHV,UHX	SE	1
114	38	PAOZZ	5365-00-803-7302	96906	MS16624-1081	.RING,RETAINING......UHE,UHH,UHV,UHX	EA	1
114	39	PAOZZ	1560-00-708-2253	97499	204-060-767-1	.RETAINER,BOOT CONTR......UHE,UHH,UHV,UHX	EA	1
114	40	PAOZZ	4730-00-278-9105	88044	AN737RM82	.CLAMP,HOSE......UHE,UHH,UHV,UHX	EA	1
114	41	PAOZZ	1560-00-420-0934	97499	205-060-735-1	.BOOT ASSEMBLY,POWER......UHE,UHH,UHV,UHX	EA	1
114	42	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT......UHE,UHH,UHV,UHX	EA	4
114	43	PAOOF	1560-00-404-6016	97499	204-060-797-5	.SPACER,MOUNTING BAS......UHE,UHH,UHV,UHX	EA	1
114	44	PAOZZ	3120-00-842-0674	97499	22-007B20-12-18	..BEARING,SLEEVE......UHE,UHH,UHV,UHX	EA	1
114	45	PAOZZ	1560-00-963-1092	97499	205-060-772-1	.PLATE,STRUCTURAL,AI......UHE,UHH,UHV,UHX	EA	1
114	46	PAOZZ	5305-00-088-9667	96906	MS24693C270	.SCREW,MACHINE......UHE,UHH,UHV,UHX	EA	4
114	47	PAOZZ	5365-00-845-0189	97499	120-031-12-7	.SHIM NOT REQUIRED WHEN BRACKET PN 204-060-797-5 IS USED......UHE,UHH,UHV,UHX	EA	4
114	48	PAOZZ	5945-00-400-8297	81823	A900	.SOLENOID,ELECTRICAL ALTERNATE......UHE,UHH,UHV,UHX	EA	1
114	48	PAOZZ	5945-00-400-8297	07797	5447	.SOLENOID,ELECTRICAL......UHE,UHH,UHV,UHX	EA	1

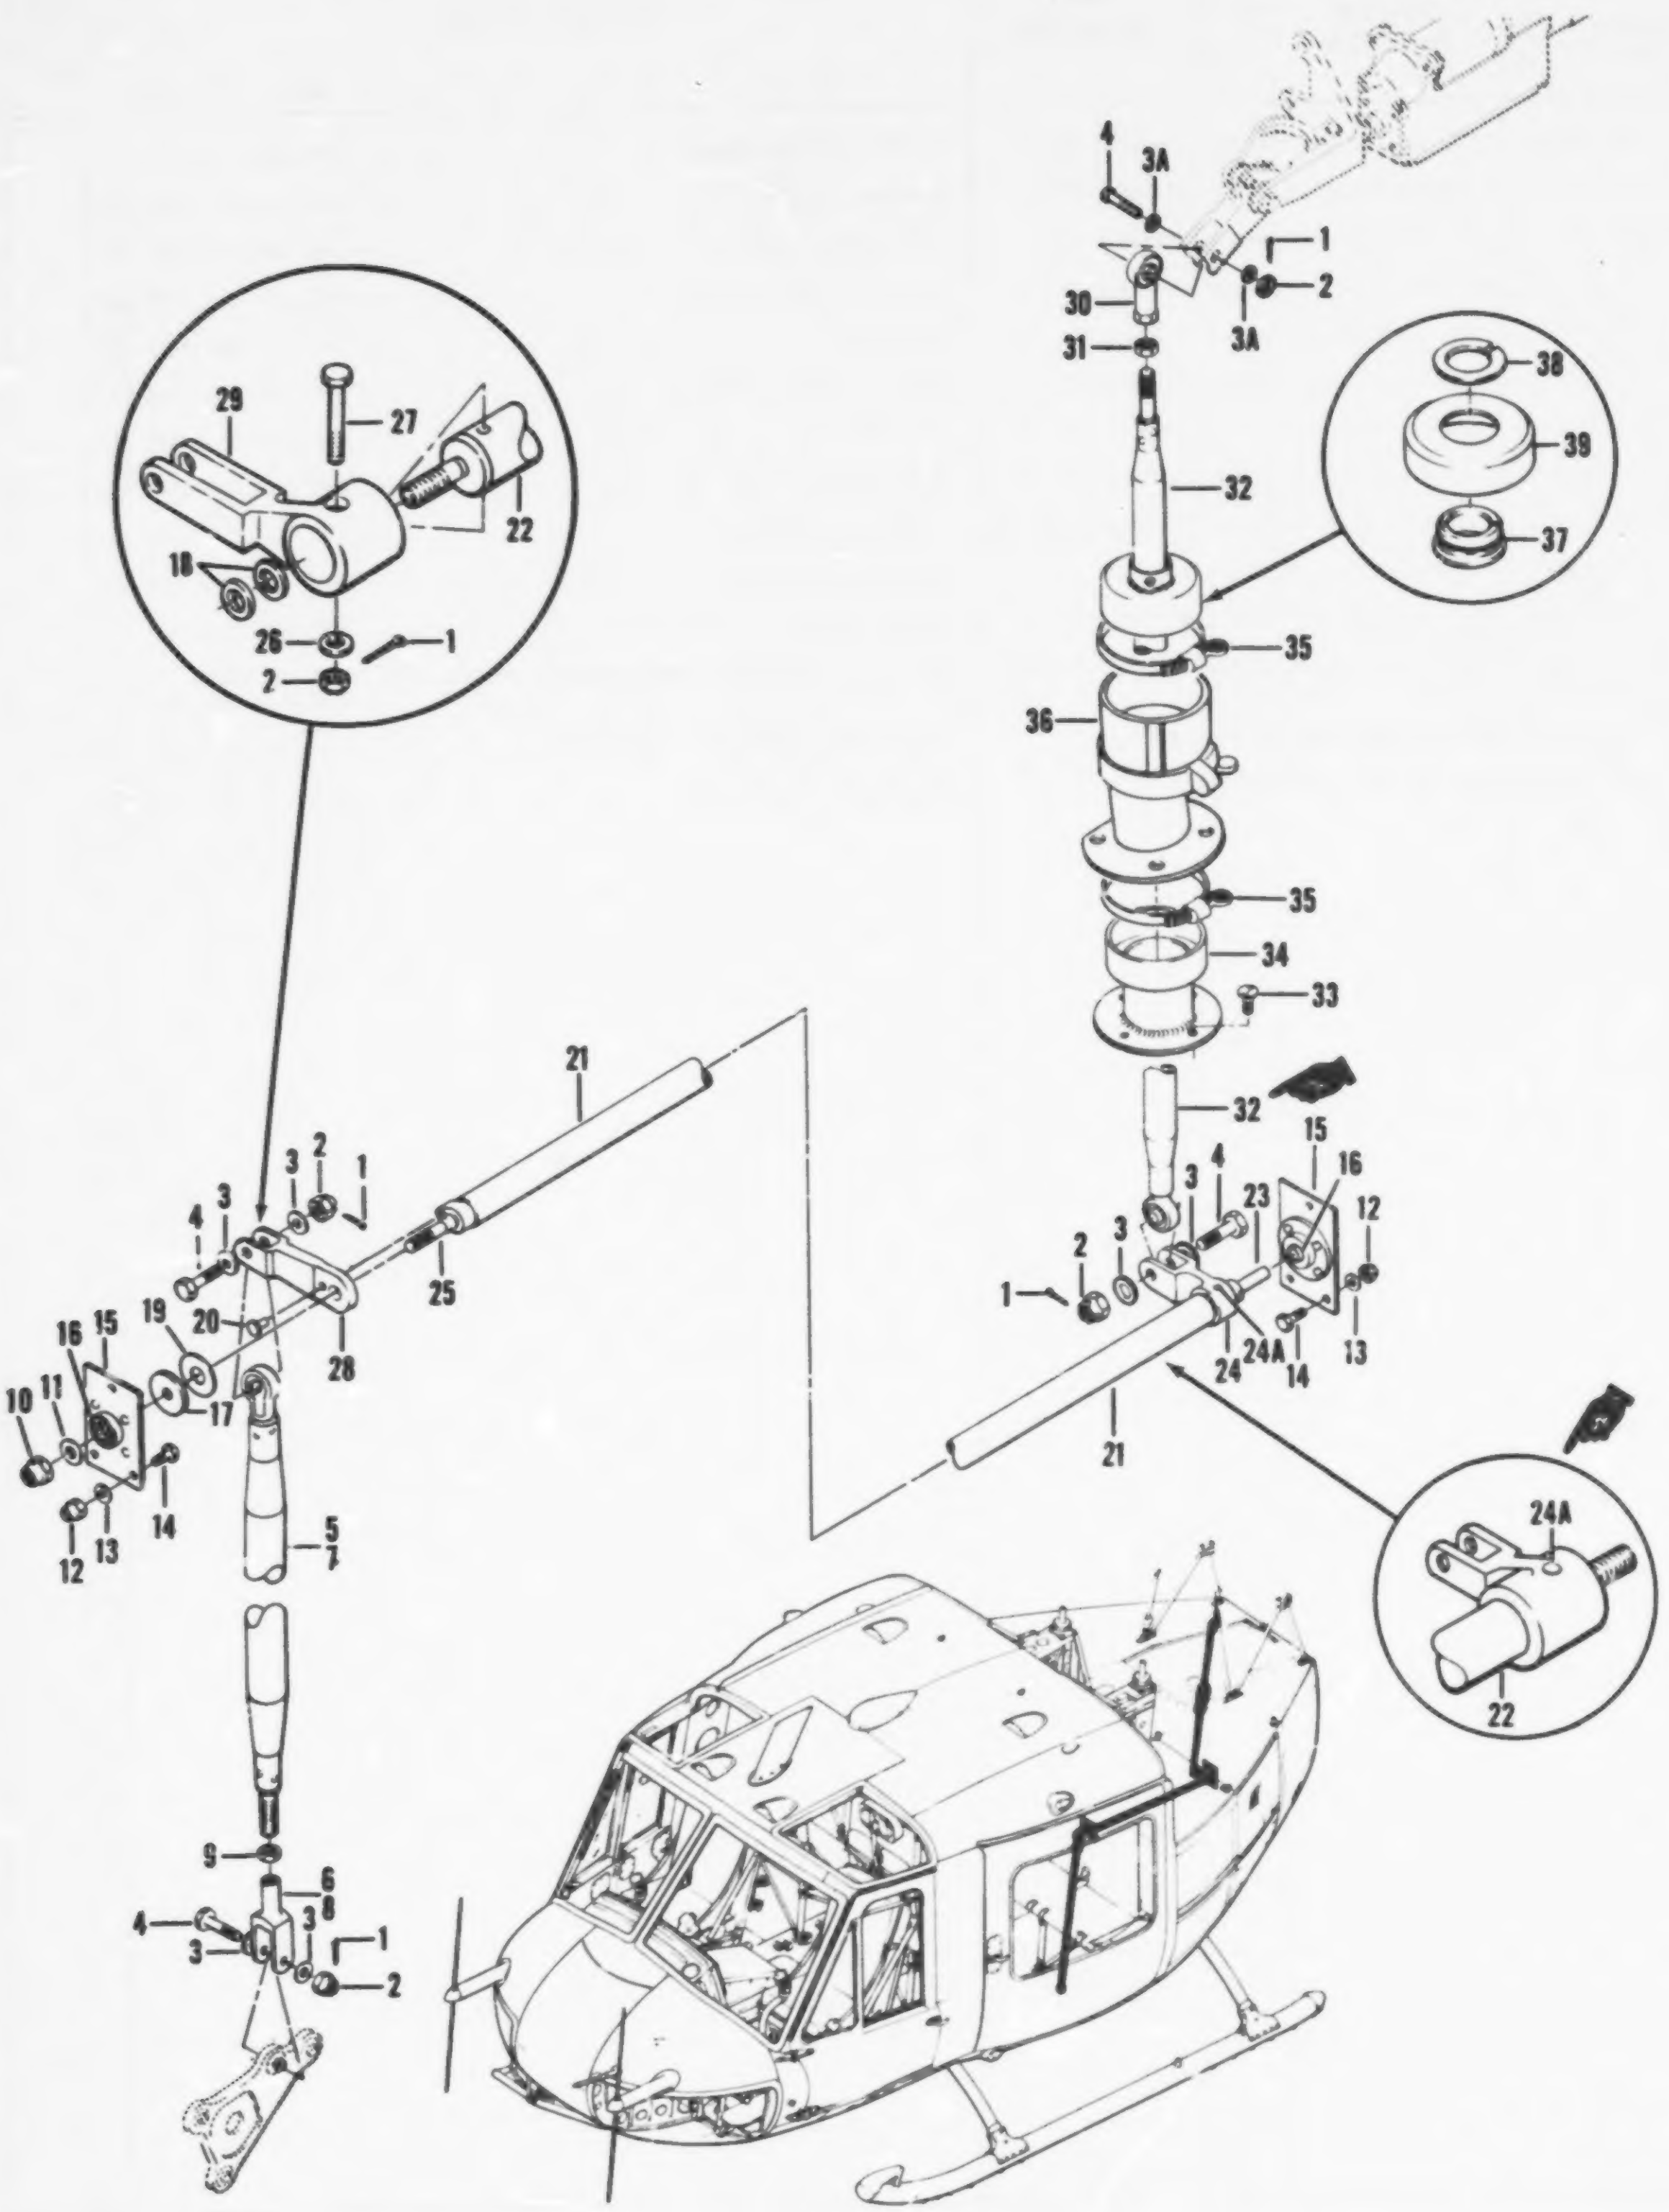
4
3A
1
2
3A
30
31
38
39
37
32
35
36
35
34
33
32
29
27
22
18
26
1
2
21
15
16
4
3
2
3
1
4
3
23
12
25
20
28
2
3
1
24A
14
13
24
16
15
19
17
10
11
14
12
13
5
7
21
24A
22
9
6
8
4
3
3
1
2

Figure 115. Compensator Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
115		XCFZZ		97499	204-061-700-1	COMPENSATOR INSTL DROOP USBL EFF 60-3546 THRU 60-3619 SEE FIG.6 FOR NHA .... UHB	EA	1
115		XCFZZ		97499	204-061-700-3	COMPENSATOR INSTL DROOP USBL EFF 61-686 THRU 61-803 SEE FIG. 6 FOR NHA .... UHB	EA	1
115		XCFZZ		97499	204-061-700-5	COMPENSATOR INSTL DROOP USBL EFF 62-1872 THRU 63-12952 SEE FIG.6 FOR NHA .... UHB	EA	1
115		XCFZZ		97499	204-061-700-7	COMPENSATOR INSTL DROOP USBL EFF 64-13902 THRU 64-14101 SEE FIG.6 FOR NHA .... UHB	EA	1
115		XCFZZ		97499	204-061-700-9	COMPENSATOR INSTL DROOP USBL EFF 64-14101 THRU 66-12772 SEE FIG.6 FOR NHA .... UHC,UHM	EA	1
115	1	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER .... UHB,UHC,UHM	EA	4
115	2	PAOZZ	5310-00-285-2177	88044	AN320-3	.NUT,SLOTTED,HEXAGON .... UHB,UHC,UHM	EA	4
115	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHB,UHC,UHM	EA	6
115	3A	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT .... UHB,UHC,UHM	EA	2
115	4	PAOZZ	5306-00-180-1784	88044	AN173-11	.BOLT,CLOSE TOLERANC .... UHB,UHC,UHM	EA	3
115	5	PAOZZ	3040-00-856-3986	97499	204-060-753-25	.CONNECTING LINK,RIG .... UHB	EA	1
115	6	PAOZZ	5340-00-721-4958	97499	204-060-747-1	.CLEVIS,ROD END .... UHB	EA	1
115	7	PAOOO	1615-00-930-6115	97499	204-061-703-19	.TUBE ASSEMBLY,DROOP .... UHC,UHM	EA	1
115	8	XDOZZ	5340-00-867-0411	97499	204-062-784-1	..CLEVIS,ROD END .... UHC,UHM	EA	1
115	9	PAOZZ	5310-00-596-8422	88044	AN316-5R	.NUT,PLAIN,HEXAGON .... UHB,UHC,UHM	EA	1
115	10	PAOZZ	5310-00-857-5557	96906	MS21045L4	.NUT,SELF-LOCKING,HE .... UHB,UHC,UHM	EA	1
115	11	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT .... UHB,UHC,UHM	EA	1
115	12	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHB,UHC,UHM	EA	6
115	13	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHB,UHC,UHM	EA	6
115	14	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE .... UHB,UHC,UHM	EA	6
115	15	PAOOO	1560-00-624-5167	97499	204-060-712-1	.SUPPORT ASSY .... UHB,UHC,UHM	EA	2
115	16	PBOZZ	3110-00-198-1010	96906	MS20218-1	..BEARING,BALL BELLCRANK .... UHB,UHC,UHM	EA	1
115	17	PAOZZ	5310-00-769-3412	97499	204-060-750-1	.WASHER,FLAT .... UHB	EA	1
115	18	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT U/O PN 204-061-700-5,-7,-9 .... UHB,UHC,UHM	EA	2
115	19	PAOZZ	5365-00-708-2255	97499	204-060-751-1	.SHIM .... UHB	EA	2
115	20	PAOZZ	5315-00-715-5433	97499	204-060-752-5	.PIN,STRAIGHT,HEADED .... UHB	EA	1
115	21	PAOOO	1560-00-873-2275	97499	204-060-738-5	.TUBE ASSY,TORQUE .... UHB	EA	1
115	22	PAOOO	1560-00-758-1957	97499	204-061-712-7	.TORQUE TUBE ASSY .... UHB	EA	1
115	22	PAOOO	1615-00-930-5233	97499	204-061-718-1	.TORQUE TUBE ASSY .... UHC,UHM	EA	1
115	23	PAOZZ	5315-00-893-1699	97499	204-060-746-1	..PIN,STRAIGHT,HEADLE U/O PN 204-060-738-5 .... UHB	EA	1
115	24	PAOZZ	1560-00-718-6627	97499	204-060-742-1	..LEVER,REMOTE CONTRO U/O PN 204-060-738-5 .... UHB	EA	1
115	24A	XDOZZ	5320-00-584-9804	96906	MS20470B4-20	..RIVET,SOLID .... UHB	EA	1
115	25	PAOZZ	4730-00-718-6484	97499	204-060-745-1	..FITTING U/O PN 204-060-738-5 .... UHB	EA	1
115	26	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHB,UHC,UHM	EA	1
115	27	XDOZZ	5306-00-180-1786	88044	AN173-13	.BOLT,CLOSE TOLERANC U/O PN 204-061-700-5,-7,-9 .... UHB,UHC,UHM	EA	1
115	28	PAOZZ	1560-00-710-4432	97499	204-060-761-3	.LEVER,REMOTE CONTRO U/O PN 204-061-700-1 & -3 .... UHB	EA	1
115	29	PAOZZ	1560-00-986-9933	97499	204-061-714-1	.LEVER,REMOTE CONTRO U/O PN 204-061-700-5,-7,-9 .... UHB,UHC,UHM	EA	1
115	30	PAOZZ		96906	MS21153-2	.BEARING,BALL,ROD .... UHB,UHC,UHM	EA	1
115	31	PAOZZ	5310-00-596-8422	88044	AN316-5R	.NUT,PLAIN,HEXAGON .... UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	UM	QTY INC IN UNIT
115	32	PAOZZ	3040-00-873-2275	97499	204-060-753-27	.CONNECTING LINK,RIG .... UHB	EA	1
115	32	PAOZZ	3040-00-930-6114	97499	204-061-716-13	.CONNECTING LINK,RIG .... UHC,UHM	EA	1
115	33	PAOZZ	5305-00-891-1775	88044	AN525-832R10	.SCREW,MACHINE .... UHB,UHC,UHM	EA	4
115	34	PAOZZ	1560-00-767-8012	97499	204-060-759-3	.END,POWER LEVER .... UHB,UHC,UHM	EA	1
115	35	PAOZZ	4730-00-278-9105	88044	AN737RM82	.CLAMP,HOSE .... UHB,UHC,UHM	EA	2
115	36	PAOZZ	1560-00-776-7052	97499	20-045-1	.BOOT,DUST AND MOIST .... UHB,UHC,UHM	EA	1
115	37	PAOZZ	1560-00-708-2251	97499	204-060-768-1	.BUSHING HALF SET,SL .... UHB,UHC,UHM	EA	1
115	38	PBOZZ	5365-00-804-2027	96906	MS16624-1093	.RING,RETAINING .... UHB,UHC,UHM	EA	1
115	39	PAOZZ	1560-00-708-2252	97499	204-060-767-3	.CONTROL,RETAINER .... UHB,UHC,UHM	EA	1

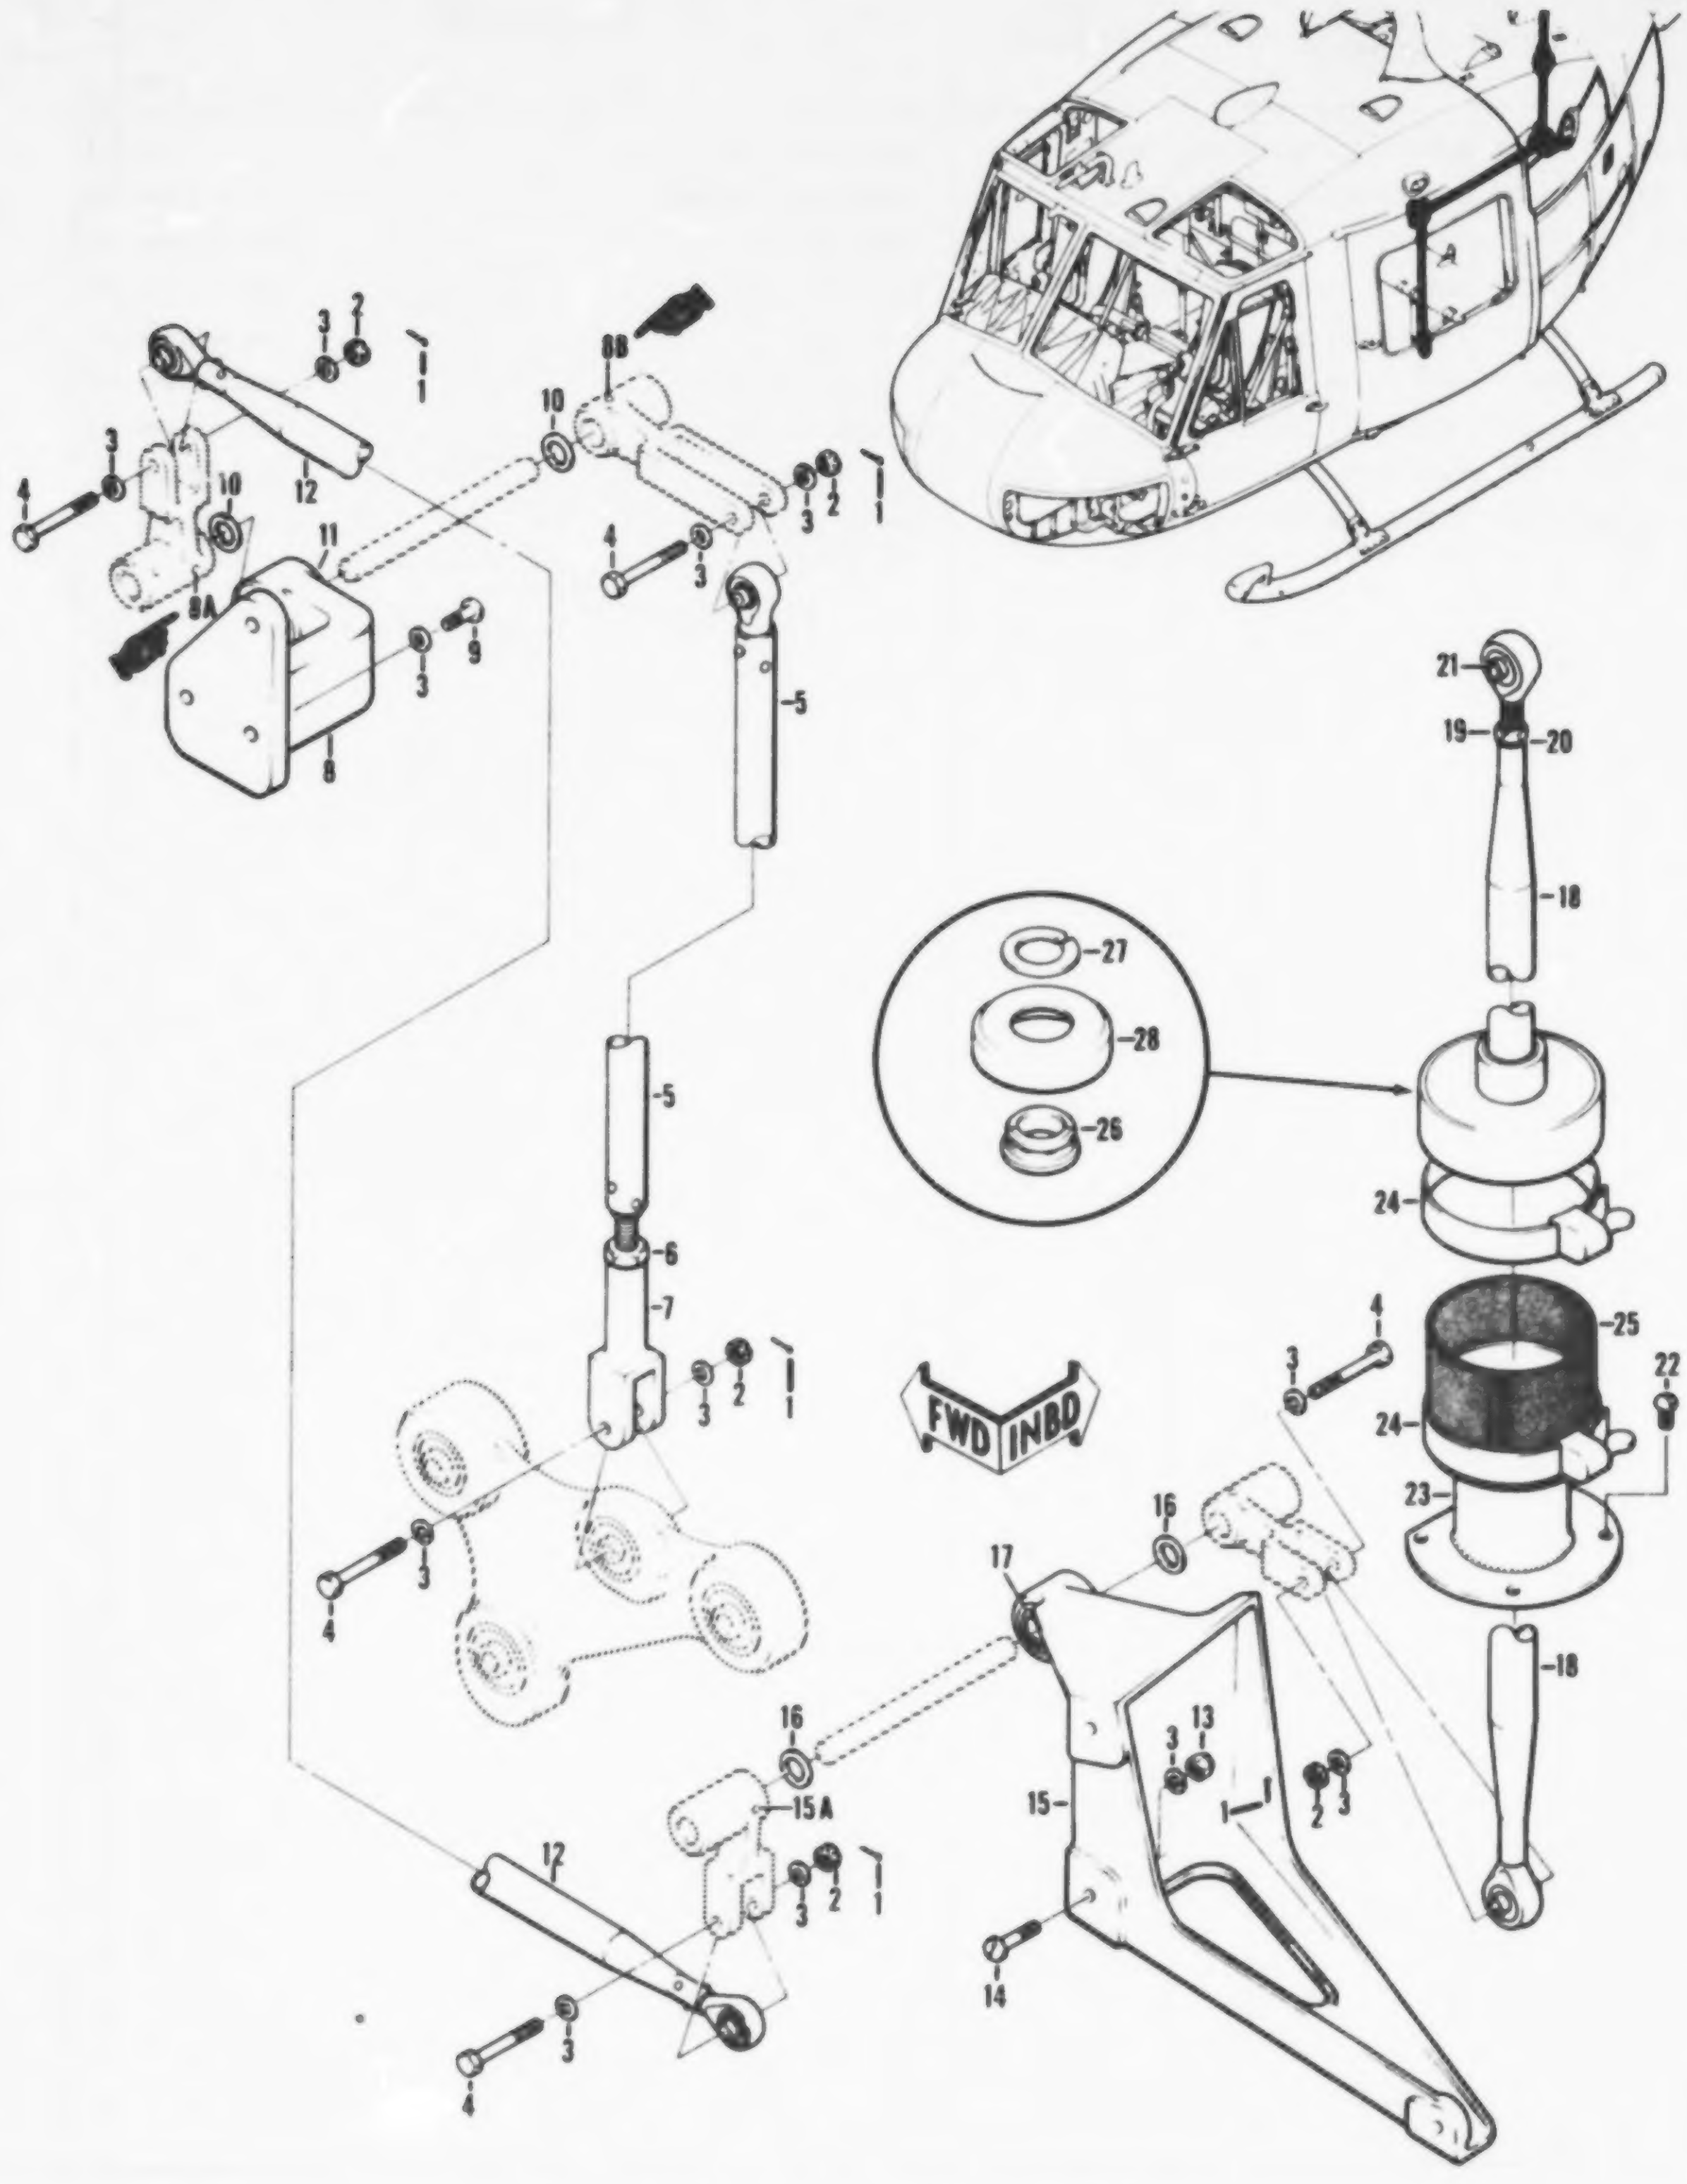
3
2
1
4
3
12
10
11
8A
9
3
8
8B
10
2
1
4
3
5
21
19
20
18
27
28
26
24
5
6
7
2
3
1
4
3
FWD
INBD
4
3
25
22
24
23
16
17
18
3
13
2
3
1
15
16
15A
12
2
1
3
14
4
3

Figure 116. Compensator Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
116		XCFZZ		97499	204-061-700-11	COMPENSATOR INSTL DROOP USBL EFF 66-492 & SUBSEQUENT SEE FIG 6 FOR NHA UHC,UHM	EA	1
116	1	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER UHC,UHM	EA	5
116	2	PAOZZ	5310-00-285-2177	88044	AN320-3	.NUT,SLOTTED,HEXAGON UHC,UHM	EA	5
116	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT UHC,UHM	EA	17
116	4	PAOZZ	5306-00-180-1784	88044	AN173-11	.BOLT,CLOSE TOLERANC UHC,UHM	EA	5
116	5	PAOOO	1615-00-930-6115	97499	204-061-703-19	.TUBE ASSY,DROOP UHC,UHM	EA	1
116	6	PAOZZ	5310-00-596-8422	88044	AN316-5R	..NUT,PLAIN,HEXAGON UHC,UHM	EA	1
116	7	XDOZZ	5340-00-867-0411	97499	204-062-784-1	..CLEVIS,ROD END UHC,UHM	EA	1
116	8	PAOZZ	1615-00-930-5234	97499	204-061-720-3	.JACKSHAFT UHC,UHM	EA	1
116	8A	PAOZZ	5320-00-721-5246	96906	MS20470A4-16	..RIVET,SOLID UHC,UHM	EA	2
116	8B	PAOZZ	5320-00-117-6834	96906	MS20470AD4-16	..RIVET,SOLID UHC,UHM	EA	2
116	9	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE UHC,UHM	EA	3
116	10	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT UHC,UHM	EA	2
116	11	PAOZZ	3110-00-034-5257	96906	MS27641-6	.BEARING,BALL,AIRFRA UHC,UHM	EA	2
116	12	PAOZZ	1615-00-930-5233	97499	204-061-718-1	.TORQUE TUBE ASSY UHC,UHM	EA	1
116	13	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHC,UHM	EA	3
116	14	PAOZZ	5305-00-180-0014	88044	AN525-10R12	.SCREW,MACHINE UHC,UHM	EA	3
116	15	PAOOO	1615-00-930-5232	97499	204-061-720-1	.JACKSHAFT ASSEMBLY, UHC,UHM	EA	1
116	15A	PAOZZ	5320-00-117-6834	96906	MS20470AD4-16	..RIVET,SOLID UHC,UHM	EA	4
116	16	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT UHC,UHM	EA	2
116	17	PAOZZ	3110-00-034-5257	96906	MS27641-6	..BEARING,BALL,AIRFRA UHC,UHM	EA	2
116	18	PAOOO	3040-00-930-6114	97499	204-061-716-13	.CONNECTING LINK,RIG UHC,UHM	EA	1
116	19	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON UHC,UHM	EA	1
116	20	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT UHC,UHM	EA	1
116	21	PAOZZ	3120-00-915-6069	15860	ATNE3-16	..BEARING,ROD END END UHC,UHM	EA	1
116	21	PAOZZ	3110-00-173-5072	88044	AN951REB3H	..BEARING,BALL,ROD END MAY BE USED AS AN ALTERNATE FOR ABOVE ITEM UHC,UHM	EA	1
116	21	PAOZZ	3110-00-232-3179	96906	MS21153-1	..BEARING,BALL,ROD END UHC,UHM	EA	1
116	22	PAOZZ	5305-00-891-1775	88044	AN525-832R10	.SCREW,MACHINE UHC,UHM	EA	4
116	23	PAOZZ	1560-00-767-8012	97499	204-060-759-3	.END,POWER LEVER UHC,UHM	EA	1
116	24	PAOZZ	4730-00-278-9106	88044	AN737RM82	.CLAMP,HOSE UHC,UHM	EA	2
116	25	PAOZZ	1560-00-776-7052	97499	20-045-1	.BOOT,DUST AND MOIST UHC,UHM	EA	1
116	26	PAOZZ	1560-00-708-2251	97499	204-060-768-1	.BUSHING HALF SET,SL UHC,UHM	EA	1
116	27	PBOZZ	5365-00-804-2027	96906	MS16624-1093	.RING,RETAINING UHC,UHM	EA	1
116	28	PAOZZ	1560-00-708-2252	97499	204-060-767-3	.CONTROL,RETAINER UHC,UHM	EA	1

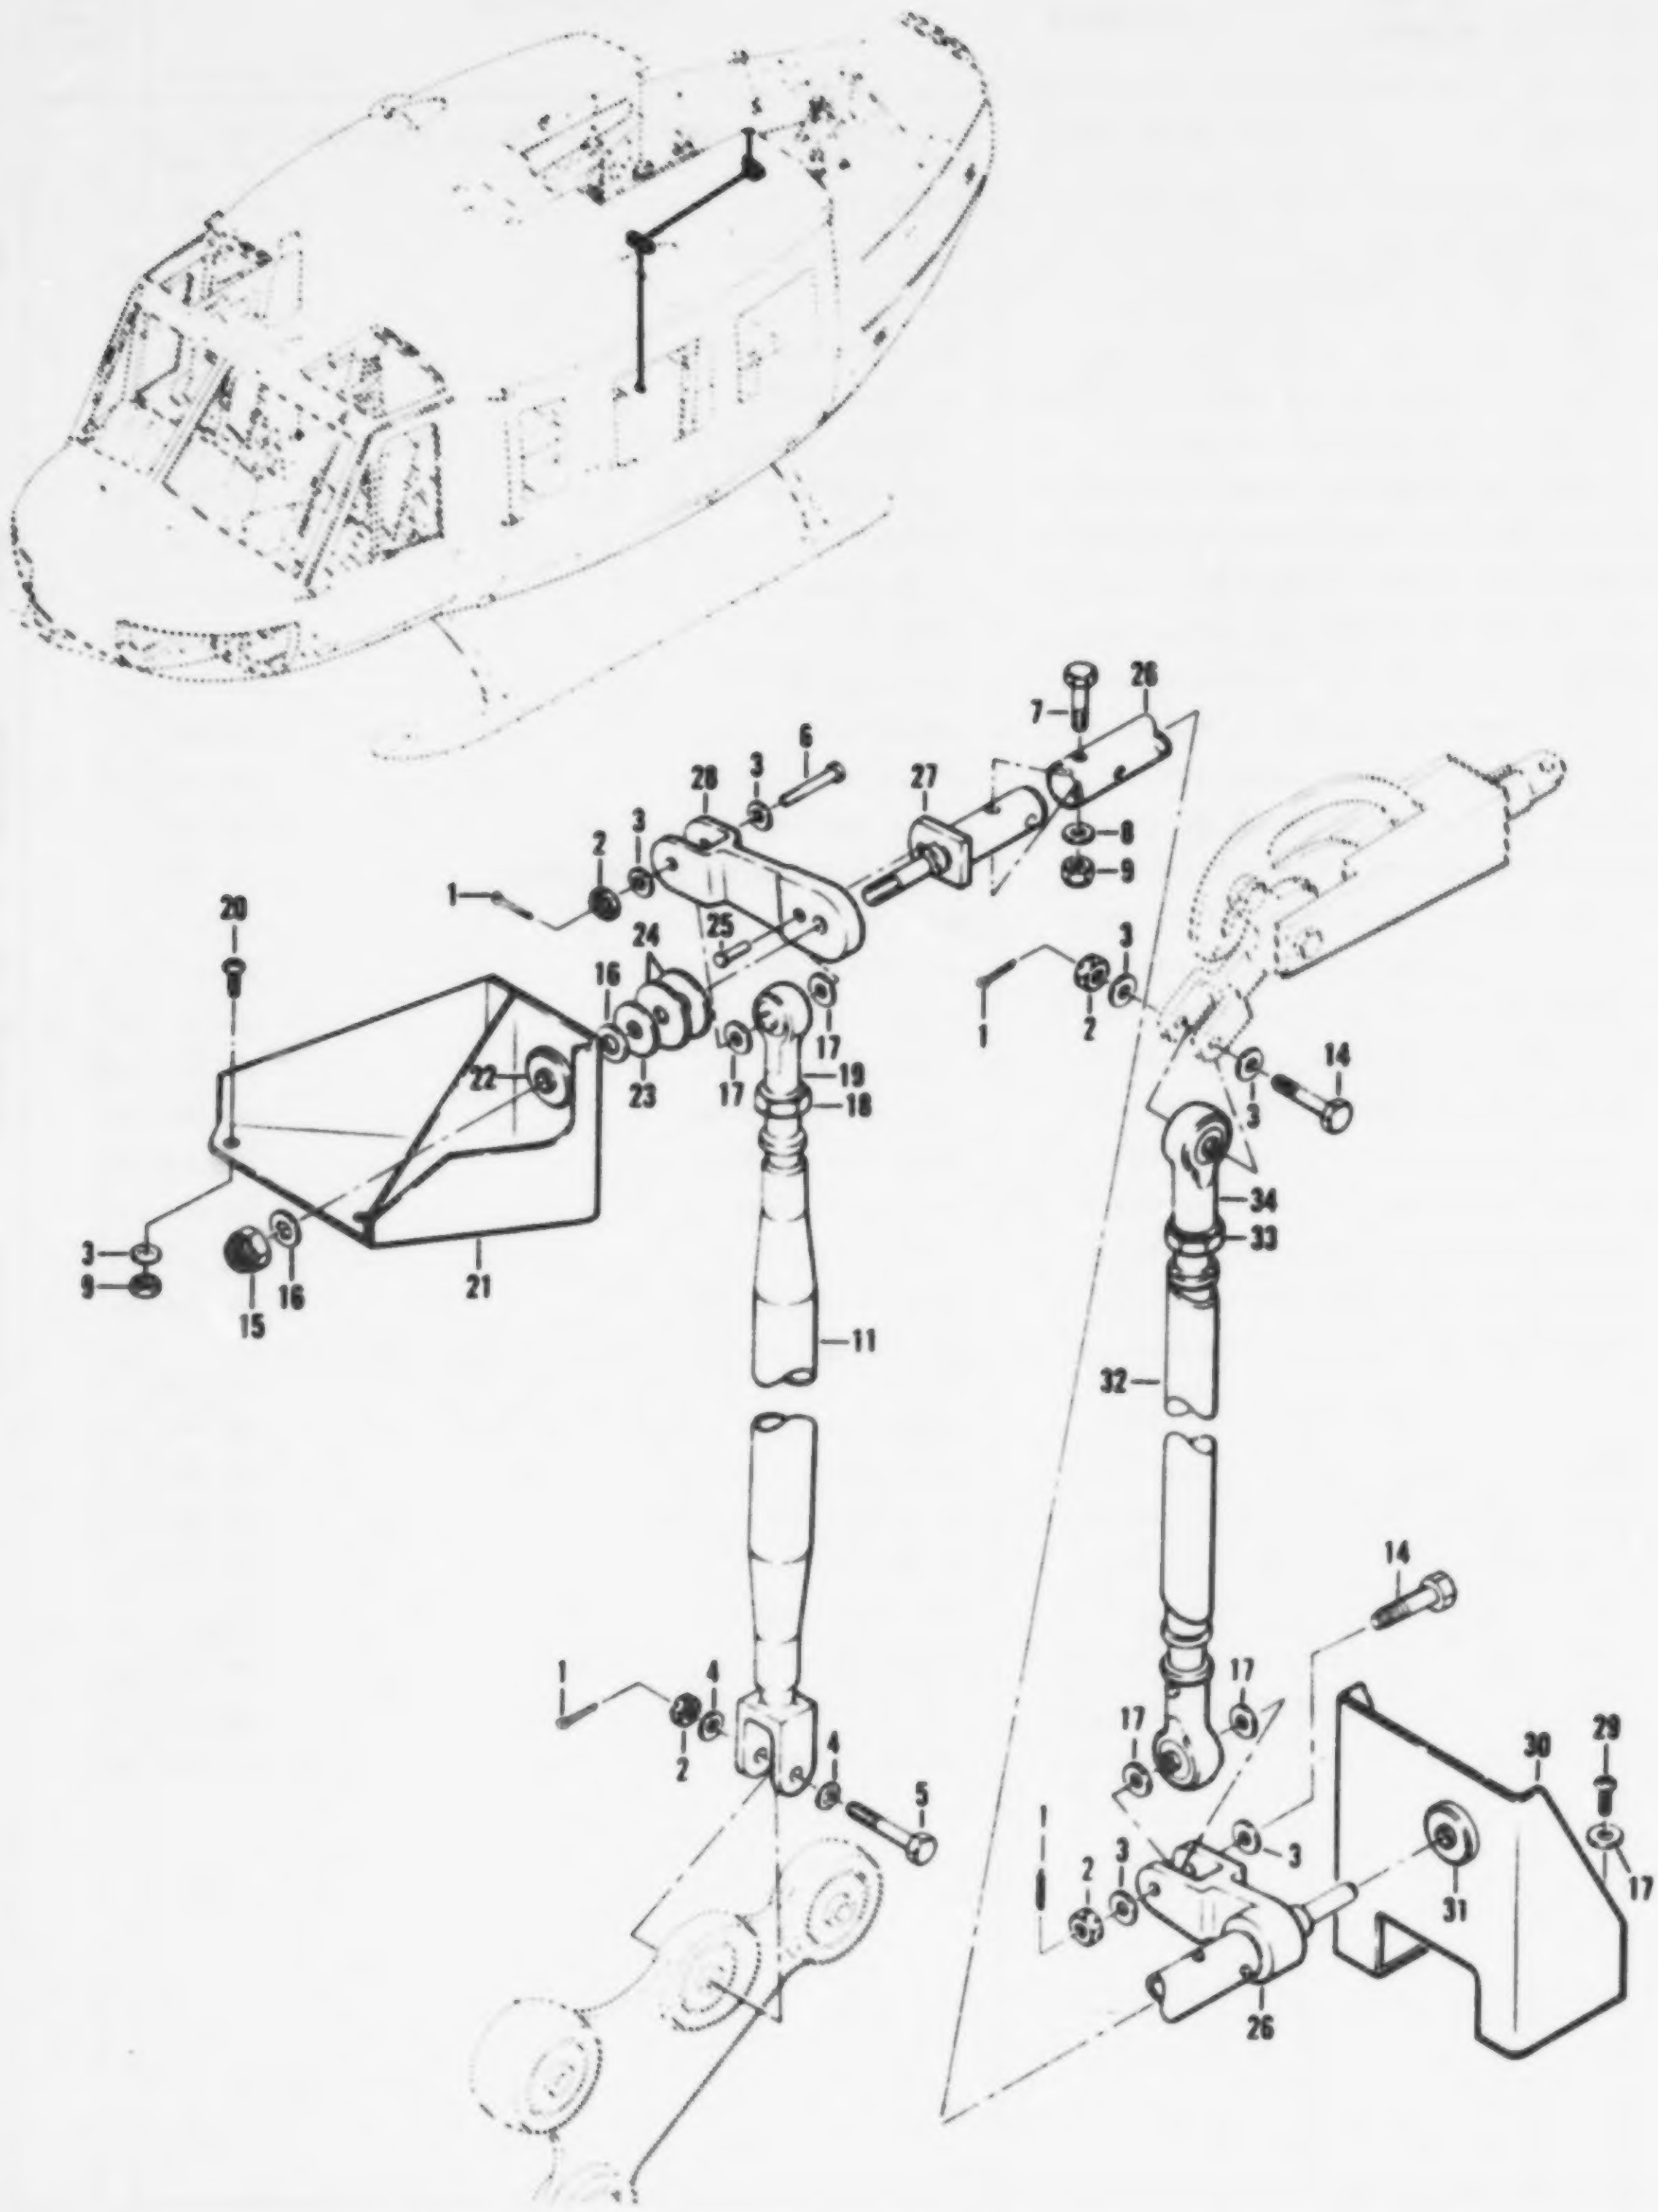
26
7
8
9
6
3
28
27
3
2
1
25
24
20
16
17
19
18
17
23
22
3
1
2
3
14
3
34
33
3
9
15
16
21
11
32
14
1
4
2
4
5
17
17
30
29
1
2
3
3
31
17
26

Figure 117. Compensator Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
117		XCFZZ		97499	205-060-701-3	COMPENSATOR INSTL DROOP USBL-EFF 62-2106 THRU 63-13002 SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
117		XCFZZ		97499	205-060-701-5	COMPENSATOR INSTL DROOP USBL EFF 64-13492 & SUBSEQUENT SEE FIG 7 FOR NHA UHE,UHH,UHV,UHX	EA	1
117	1	PAOZZ	5315-00-234-1854	96906	MS24665-153	.PIN,COTTER UHE,UHH,UHV,UHX	EA	4
117	2	PAOZZ	5310-00-285-2177	88044	AN320-3	.NUT,SLOTTED,HEXAGON UHE,UHH,UHV,UHX	EA	4
117	3	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	9
117	4	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT U/O PN 205-060-701-3 UHE,UHH,UHV,UHX	EA	2
117	5	PAOZZ	5306-00-180-1785	88044	AN173-12	.BOLT,CLOSE TOLERANC UHE,UHH,UHV,UHX	EA	1
117	6	XDOZZ	5306-00-151-1944	88044	AN173-10	.BOLT,MACHINE UHE,UHH,UHV,UHX	EA	1
117	7	PAOZZ	5306-00-550-3406	88044	AN173H10A	.BOLT,CLOSE TOLER UHE,UHH,UHV,UHX	EA	2
117	8	PAOZZ	5310-00-167-0801	88044	AN960C10	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
117	9	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	5
117	11	PAOZZ	3040-00-792-1494	97499	205-060-702-1	.CONNECTING LINK,RIG UHE,UHH,UHV,UHX	EA	1
117	14	PAOZZ	5306-00-180-1784	88044	AN173-11	.BOLT,CLOSE TOLERANC UHE,UHH,UHV,UHX	EA	2
117	15	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHV,UHX	EA	1
117	16	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	2
117	17	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	6
117	18	PAOZZ	5310-00-596-8422	88044	AN316-5R	.NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	1
117	19	PAOZZ	3110-00-232-3245	90896	MS21153-2	.BEARING,BALL,ROD END UHE,UHH,UHV,UHX	EA	1
117	20	PAOZZ	5305-00-925-9674	96906	MS27039-1-10	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	3
117	21	PAOOO	1560-00-957-7578	97499	205-060-716-1	.BRACKET,JACK SHAFT UHE,UHH,UHV,UHX	EA	1
117	22	PBOZZ	3110-00-198-1010	96906	MS20218-1	..BEARING,BALL, BELLCRANK UHE,UHH,UHV,UHX	EA	1
117	23	PAOZZ	5310-00-769-3412	97499	204-060-750-1	.WASHER,FLAT UHE,UHH,UHV,UHX	EA	1
117	24	PAOZZ	5365-00-708-2255	97499	204-060-751-1	.SHIM UHE,UHH,UHV,UHX	EA	2
117	25	PAOZZ	5315-00-715-5433	97499	204-060-752-5	.PIN,STRAIGHT,HEADED UHE,UHH,UHV,UHX	EA	1
117	26	PAOZZ	1560-00-968-4624	97499	205-060-710-1	.JACKSHAFT ASSY, DROOP UHE,UHH,UHV,UHX	EA	1
117	27	PAOZZ	1560-00-968-4688	97499	205-060-752-1	.FITTING,COMPENSATOR INSTL DROOP UHE,UHH,UHV,UHX	EA	1
117	28	PAOZZ	3040-00-181-3184	97499	205-060-751-3	.BELL CRANK,DROOP COMPENSATOR UHE,UHH,UHV,UHX	EA	1
117	29	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE UHE,UHH,UHV,UHX	EA	4
117	30	PAOOO	1560-00-957-7577	97499	205-060-715-1	.SUPPORT ASSY,DROOP UHE,UHH,UHV,UHX	EA	1
117	31	PBOZZ	3110-00-198-1010	96906	MS20218-1	..BEARING BALL, BELLCRANK UHE,UHH,UHV,UHX	EA	1
117	32	PAOOO	3040-00-957-7679	97499	205-060-712-1	.CONNECTING LINK,RIG UHE,UHH,UHV,UHX	EA	1
117	33	PAOZZ	5310-00-208-7589	88044	AN316-4R	..NUT,PLAIN,HEXAGON UHE,UHH,UHV,UHX	EA	1
117	34	PAOZZ	3110-00-232-3179	96906	MS21153-1	..BEARING,BALL,ROD EN UHE,UHH,UHX	EA	1

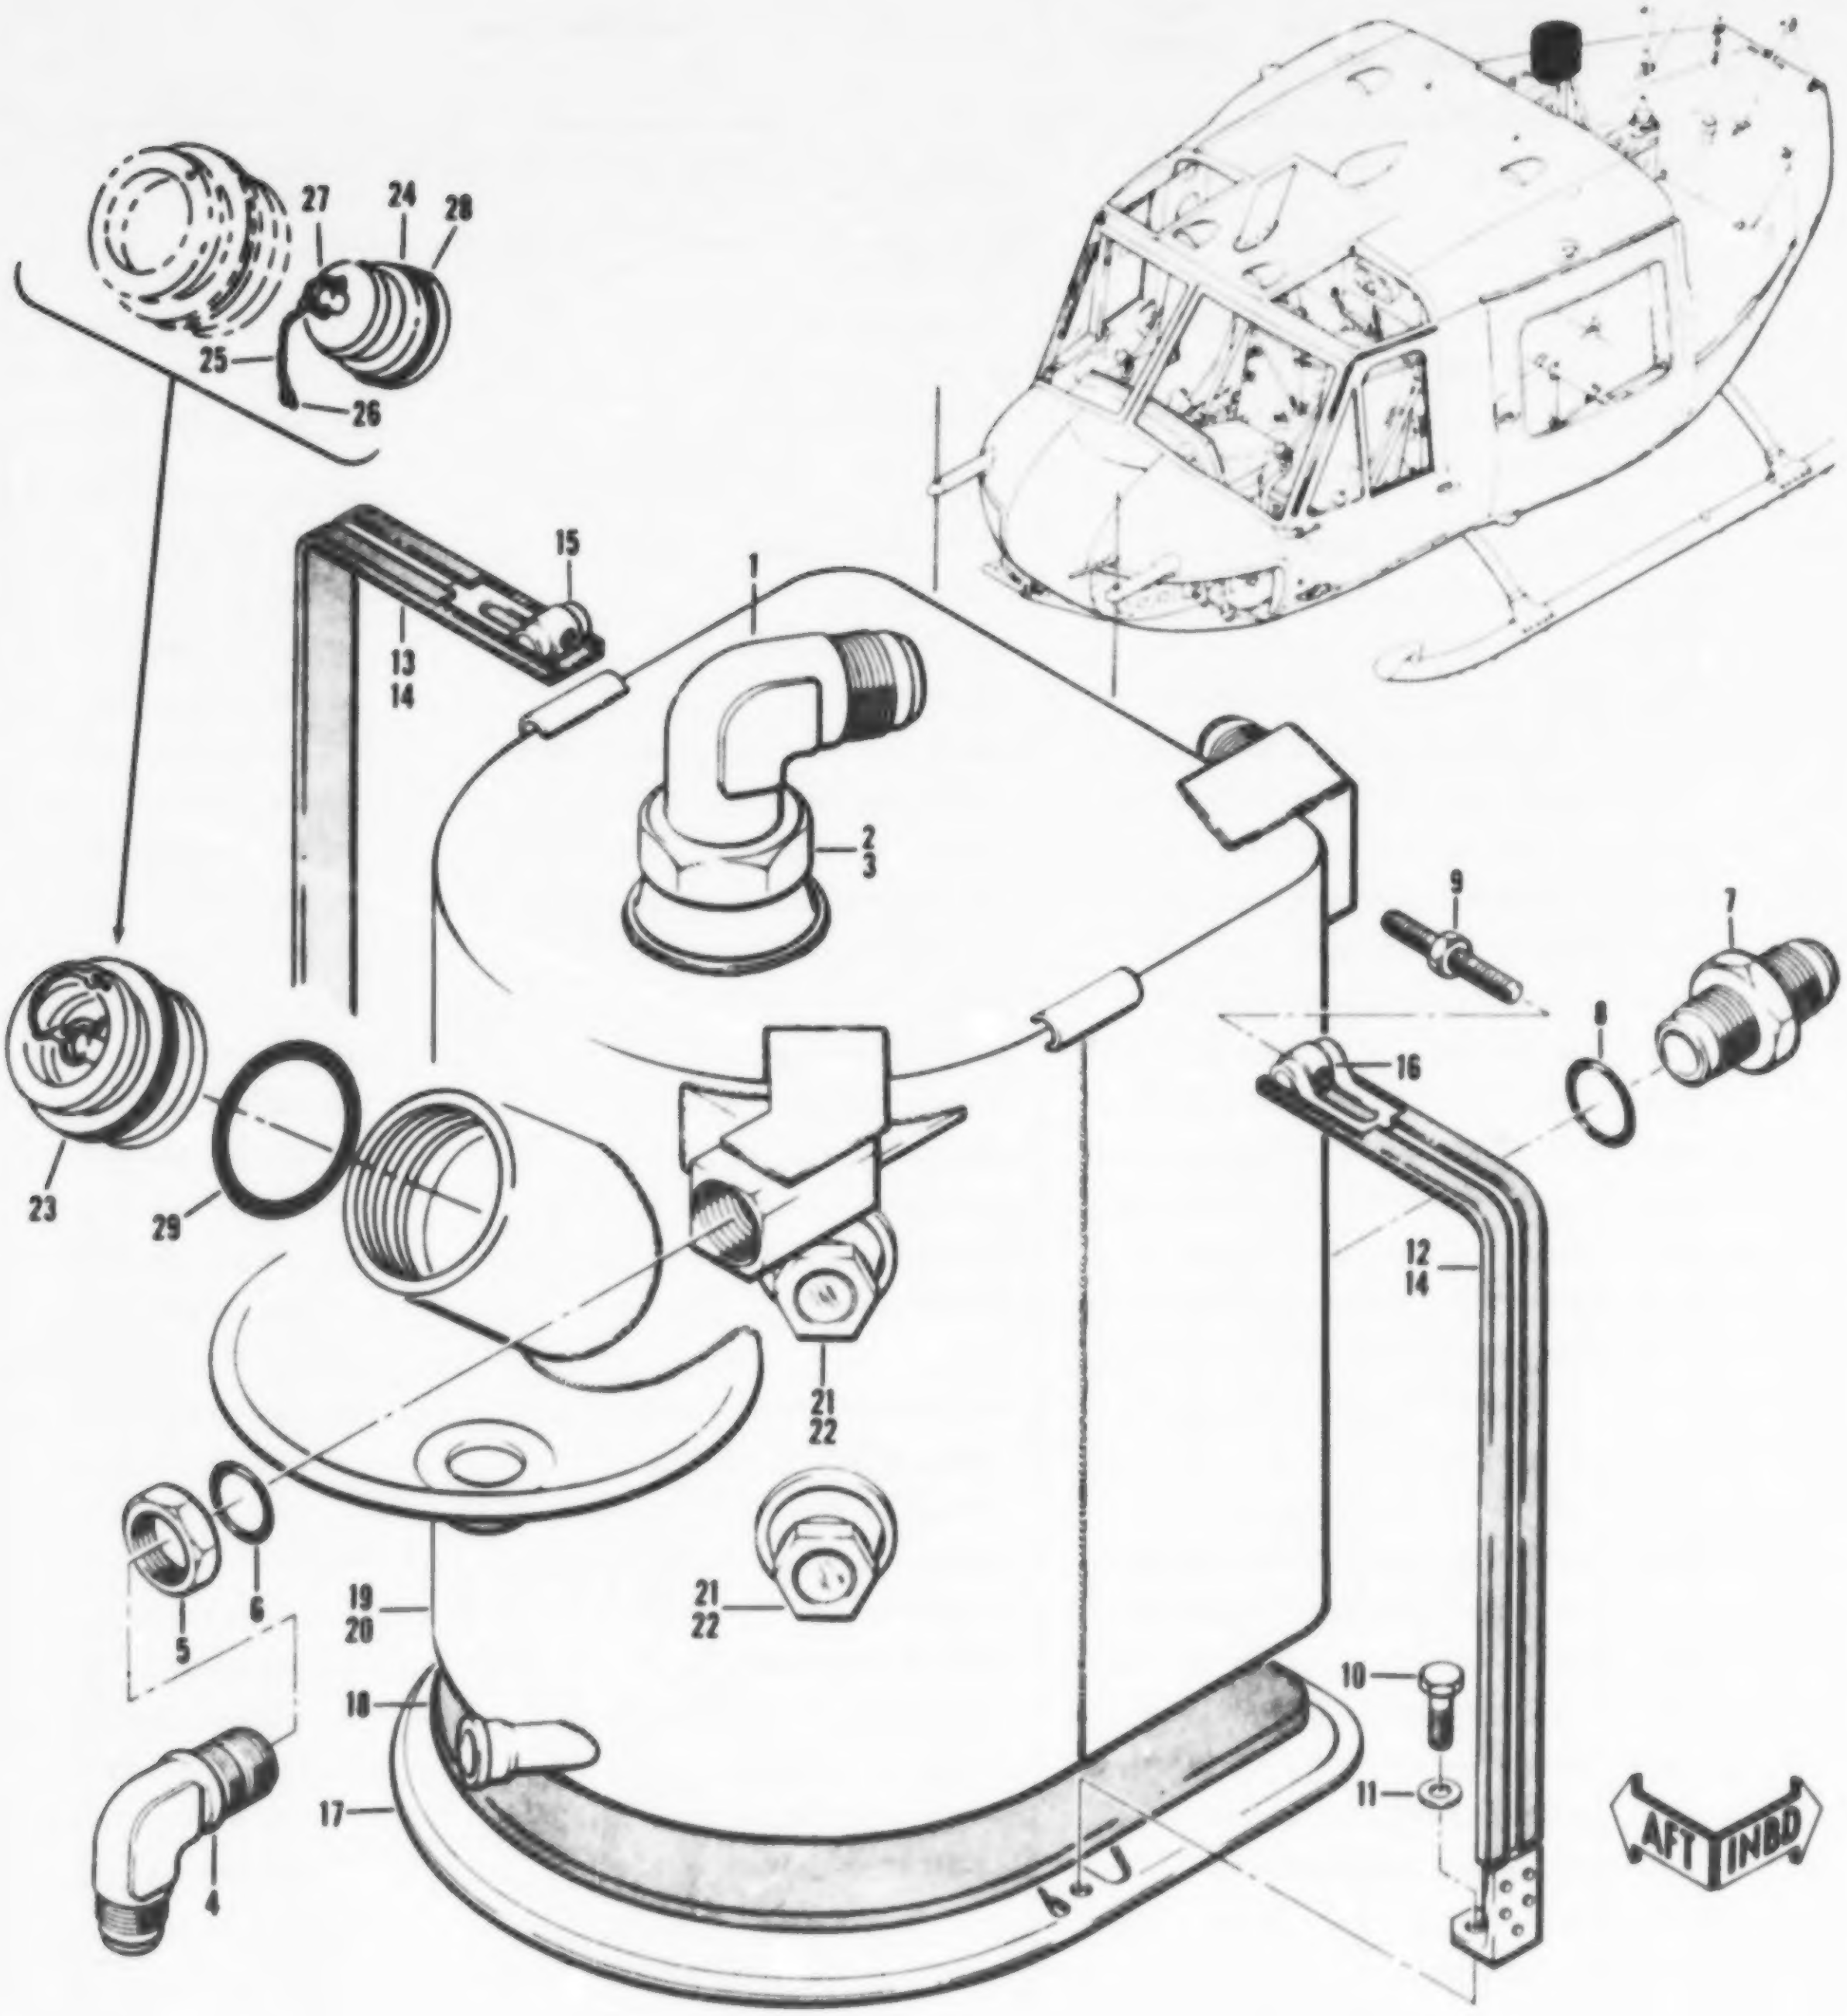
27
24
28
25
26
15
1
13
14
2
3
9
7
8
16
23
29
12
14
21
22
21
22
19
20
5
6
18
10
17
11
4
AFT
INBD

Figure 118. Oi1 System Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
118		XCFZZ		97499	204-060-551-1	OIL SYST INSTL USBL EFF 60-3546 THRU 61-723 SEE FIG 120, 123 & 124 FOR ADDITIONAL DETAIL BREAKDOWN..........UHB	EA	1
118		XCFZZ		97499	204-060-551-3	OIL SYST INSTL USBL EFF 61-724 THRU 61-803 SEE FIG 120, 123 & 124 FOR ADDITIONAL DETAIL BREAKDOWN..........UHB	EA	1
118		XCFZZ		97499	204-060-551-7	OIL SYST INSTL USBL EFF 62-1872 THRU 62-1915 SEE FIG 120, 123 & 124 FOR ADDITITIONAL DETAIL BREAKDOWN..........UHB	EA	1
118		XCFZZ		97499	204-060-551-11	OIL SYST INSTL USBL EFF 62-1916 THRU 62-12555 SEE FIG 120, 123 & 124 FOR ADDITIONAL DETAIL BREAKDOWN..........UHB	EA	1
118		XCFZZ		97499	204-060-551-15	OIL SYST INSTL USBL EFF 63-8500 & SUBSEQUENT SEE FIG 120, 123 & 124 FOR ADDITIONAL DETAIL BREAKDOWN..........UHB	EA	1
118		XCFZZ		97499	204-060-551-23	OIL SYST INSTL USBL EFF 64-14101 THRU 64-14191 SEE FIG 120, 123 & 124 FOR ADDITIONAL DETAIL BREAKDOWN..........UHC, UHM	EA	1
118		XCFZZ		97499	204-060-551-25	OIL SYST INSTL USBL EFF 65-9416 & SUBSEQUENT SEE FIG 120, 123 & 124 FOR ADDITIONAL DETAIL BREAKDOWN..........UHC, UHM	EA	1
118	1	PAOZZ	4730-01-086-8650	96906	MS24394D20	.ELBOW, TUBE..........UHB, UHC, UHM	EA	1
118	2	PAOZZ	5310-00-208-4135	88044	AN924-20D	.NUT, PLAIN, HEXAGON..........UHB, UHC, UHM	EA	1
118	3	PCOZZ	5330-00-558-1103	80205	NAS617-20	.PACKING, PREFORMED..........UHB, UHC, UHM	EA	1
118	4	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW, TUBE..........UHB, UHC, UHM	EA	1
118	5	PACZZ	5310-00-199-1028	88044	AN924-12D	.NUT, PLAIN, HEXAGON..........UHB, UHC, UHM	EA	1
118	6	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING, PREFORMED..........UHB, UHC, UHM	EA	1
118	7	PAOZZ	4730-00-584-6914	96906	MS24392D12	.NIPPLE, TUBE..........UHB, UHC, UHM	EA	1
118	8	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING, PREFORMED..........UHB, UHC, UHM	EA	1
118	9	PAOZZ	5340-00-637-8337	80205	NAS27-3-22	.TIE ROD, TENSIONING..........UHB, UHC, UHM	EA	1
118	10	PAOZZ	5306-00-151-1427	88044	AN4-5A	.BOLT, MACHINE..........UHB, UHC, UHM	EA	2
118	11	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER, FLAT..........UHB, UHC, UHM	EA	2
118	12	PAOOO	1560-00-736-4007	97499	204-060-563-1	.SUPPORT ASSY, OIL TANK..........UHB, UHC, UHM	EA	1
118	13	PAOOO	1560-00-736-4009	97499	204-060-563-3	.SUPPORT ASSY, OIL TANK..........UHB, UHC, UHM	EA	1
118	14	MOOZZ	1560-00-733-8405	97499	204-060-563-13	..PAD, OIL TANK SUPPORT..........UHB, UHC, UHM	EA	1
118	15	PAOZZ	1680-00-525-4452	80205	NAS25-3KR	...TRUNNION, TANK STRAP U/O PN 204-060-563-3 ....UHB, UHC, UHM	EA	1
118	16	PAOZZ	5315-00-525-4451	80205	NAS25-3KL	...TRUNNION, TANK STRAP U/O PN 204-060-563-1 ....UHB, UHC, UHM	EA	1
118	17	PAOOO	1560-00-736-4006	97499	204-060-561-1	.SUPPORT ASSY OIL..........UHB, UHC, UHM	EA	1
118	18	MOOZZ	1560-00-733-8389	97499	204-060-561-5	..PAD..........UHB, UHC, UHM	EA	1
118	19	PAOFF	1560-00-874-0886	97499	204-060-556-43	.TANK, LUBRICATING OI..........UHB, UHC, UHM	EA	1
118	19	XAOFF		97499	204-060-556-46	..TANK ASSEMBLY, OIL U/O PN 204-060-556-43..........UHB, UHC, UHM	EA	1
118	20	PAOZZ	9905-00-767-8004	97499	204-060-528-1	...PLATE, IDENTIFICATIO..........UHB, UHC, UHM	EA	1
118	21	PAOZZ	6680-00-895-6251	97484	S54T	..INDICATOR, SIGHT, LIQUID..........UHB, UHC, UHM	EA	3
118	21	PAOZZ	6680-00-454-8109	97484	S54TB	..INDICATOR, SIGHT, LIQUID..........UHB, UHC, UHM	EA	3
118	22	PCOZZ	5330-00-835-8974	96906	MS29561-119	..PACKING, PREFORMED..........UHB, UHC, UHM	EA	3
118	23	PAOOO	1560-00-409-4105	97499	204-060-540-9	..CAP AND ADAPTER ASSY..........UHB, UHC, UHM	EA	1
118	23	PAOOO	1560-00-409-4105	99321	FC3511-28	..CAP AND ADAPTER ASSY..........UHB, UHC, UHM	EA	1
118	23	PAOOO	1560-00-409-4105	99321	417-404	..CAP AND ADAPTER ASSY..........UHB, UHC, UHM	EA	1
118	24	XAOZZ		83646	37784-7	...CAP, FILLER OPENING U/O P/N FC3511-28..........UHB, UHC, UHM	EA	1
118	24	XAOZZ		99321	417-1	...CAP ASSEMBLY U/O P/N 417-404 ONLY..........UHB, UHC, UHM	EA	1
118	25	XAOZZ	4010-00-494-2848	83646	3519-7	....BEAD CHAIN..........UHB, UHC, UHM	EA	1
118	26	XAOZZ	5315-00-234-1861	96906	MS24665-298	....PIN, COTTER..........UHB, UHC, UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
118	27	XAOZZ		83646	37013	....PIN RETAINING....................................UHB,UHC,UHM	EA	1
118	28	PAOZZ	5330-00-882-9149	96906	MS17413-131	....PACKING,PREFORMED U/O P/N 37784-7............UHB,UHC,UHM	EA	1
118	28	PAOZZ	5330-00-618-2518	96906	MS29561-222	....PACKING,PREFORMED U/O P/N 417-1 ONLY.........UHB,UHC,UHM	EA	1
118	28	PAOZZ	5330-00-166-1058	81349	M83248-1-110	....PACKING,PREFORMED...............................UHB,UHC,UHM	EA	1
118	28	PAOZZ	5330-00-846-0502	96906	MS9241-010	....PACKING,PREFORMED...............................UHB,UHC,UHM	EA	1
118	29	PCOZZ	5330-00-802-9462	80205	NAS617-28	..PACKING,PREFORMED...................................UHB,UHC,UHM	EA	1

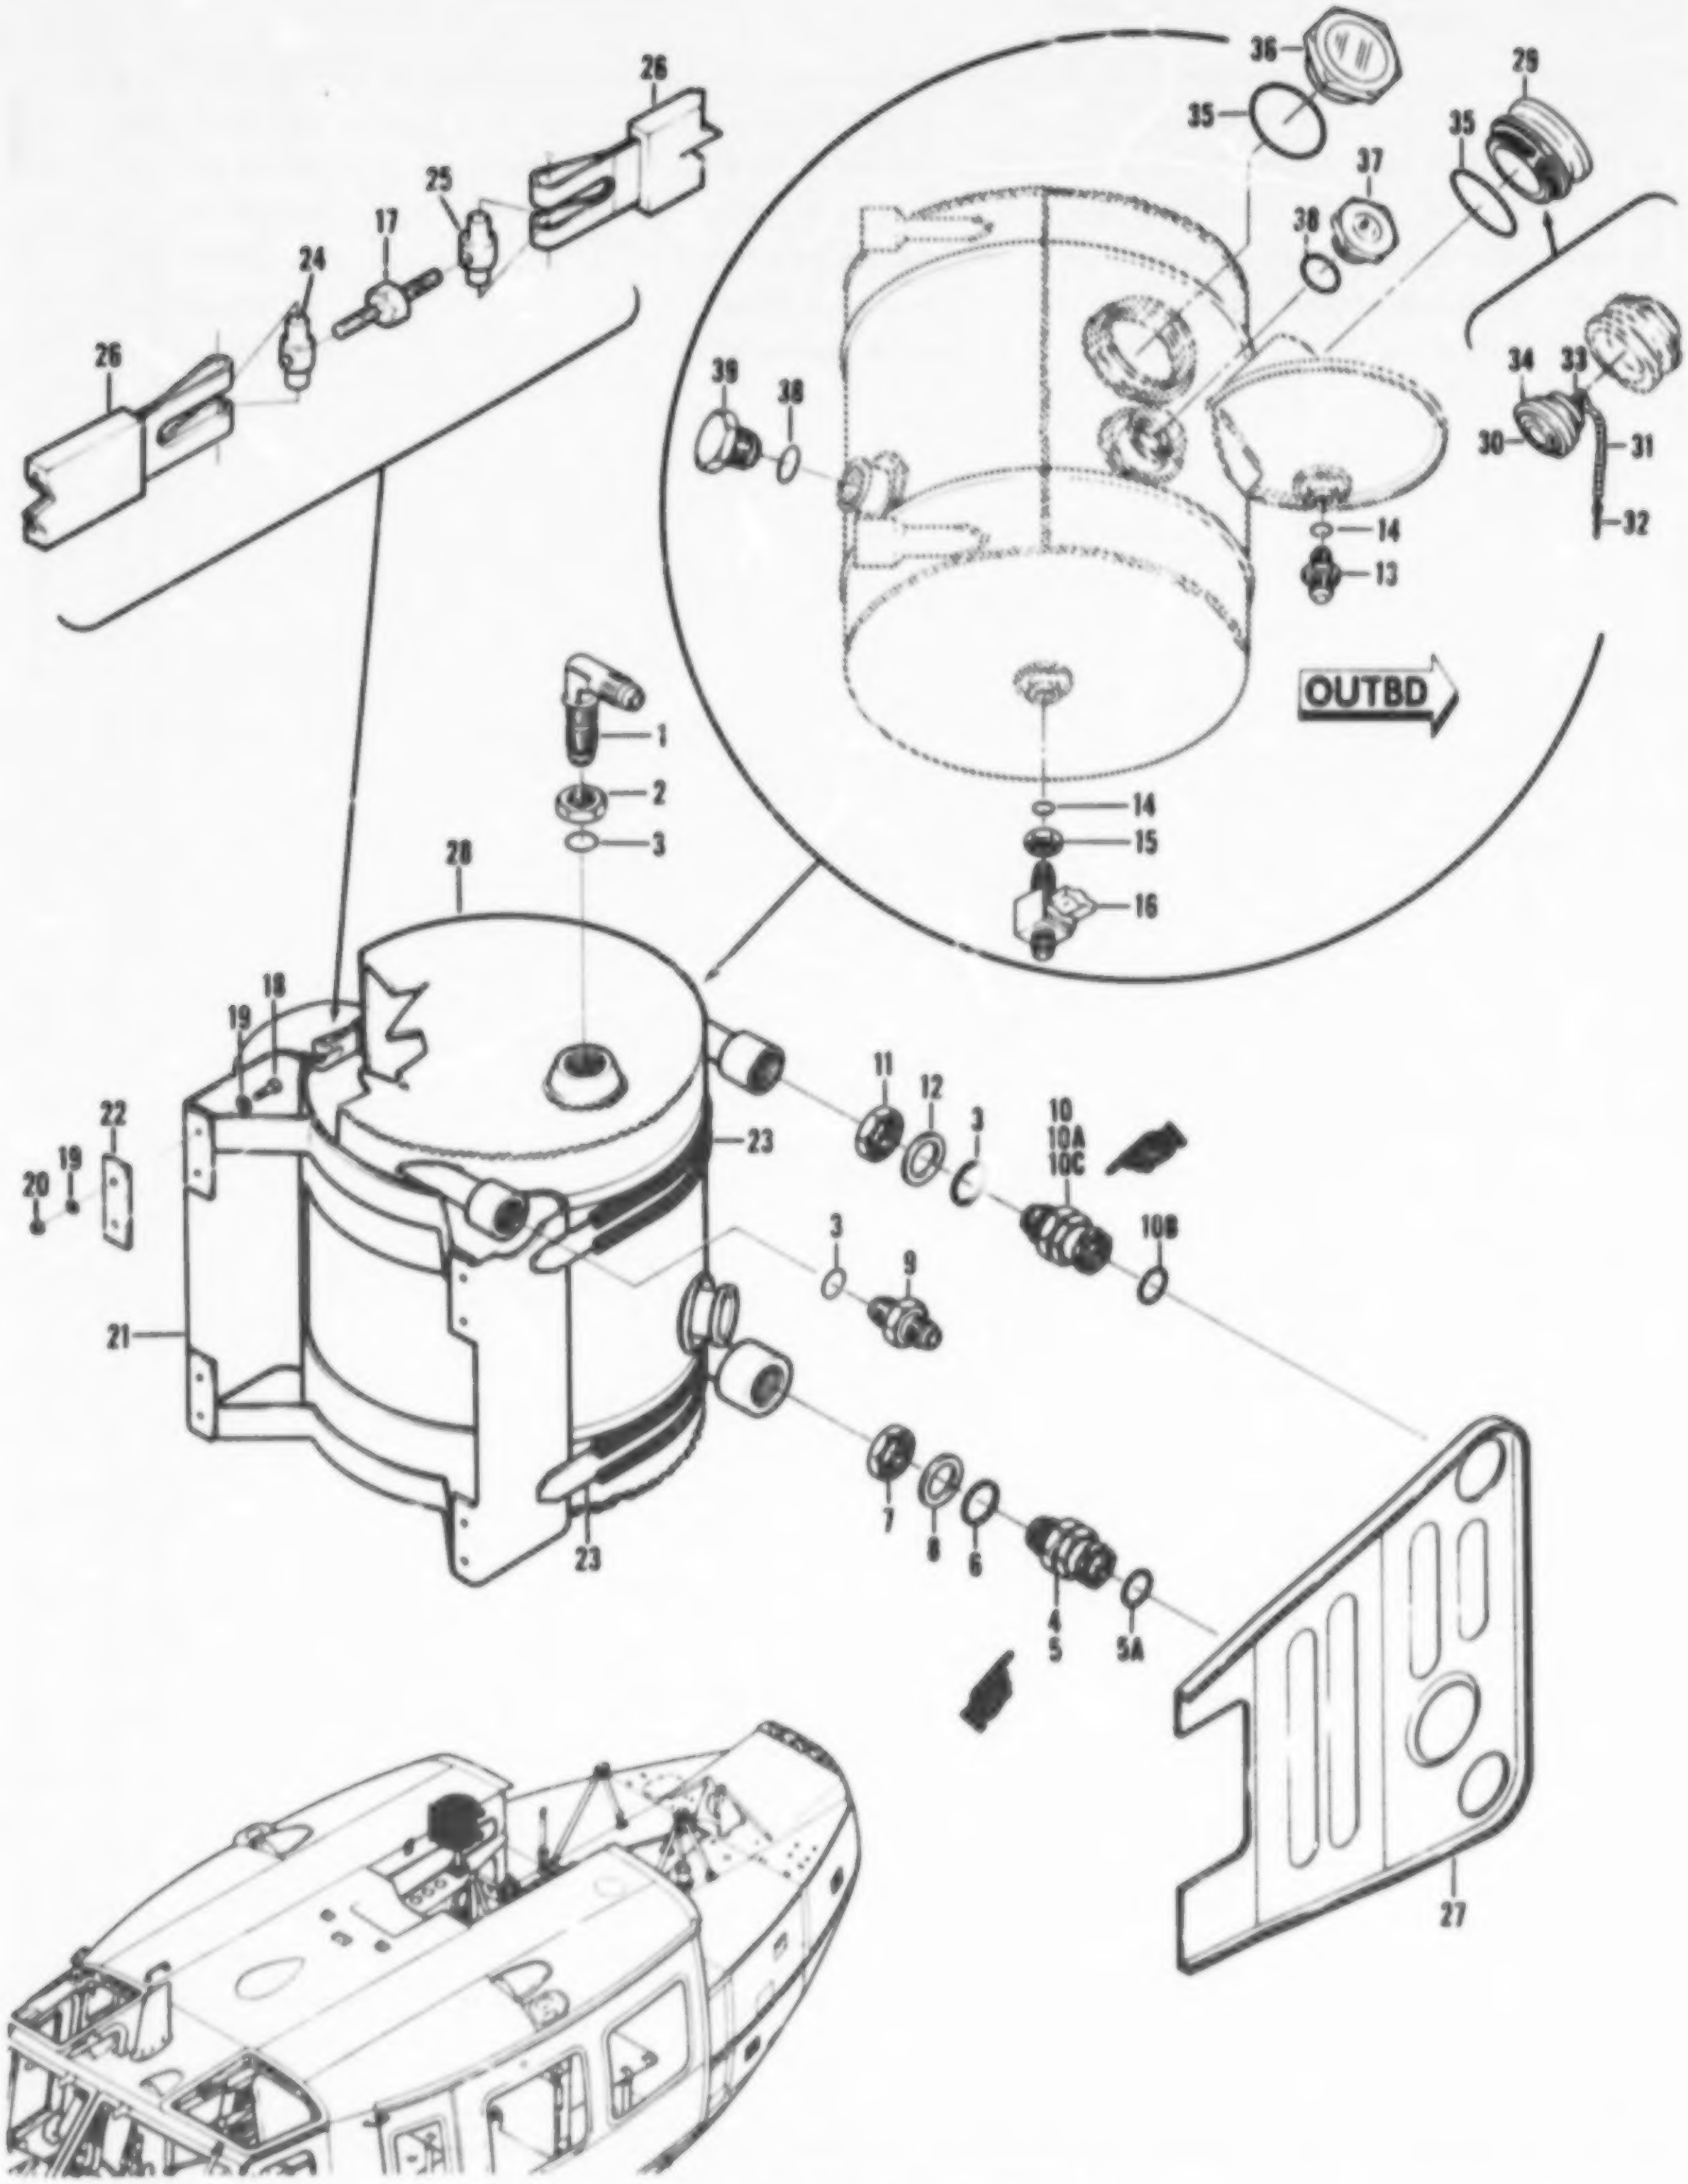
36
35
29
35
37
38
26
25
17
24
26
39
38
34
33
30
31
32
14
13
OUTBD
1
2
3
28
14
15
16
18
19
22
19
20
11
12
3
10
10A
10C
23
10B
3
9
21
7
8
6
4
5
5A
23
27

Figure 119. Oil System Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
119		XCFZZ		97499	205-060-500-5	OIL SYSTEM INSTL USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
119		XCFZZ		97499	205-060-500-7	OIL SYSTEM INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
119		XCFZZ		97499	205-060-500-9	OIL SYSTEM INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
119		XCFZZ		97499	205-060-500-11	OIL SYSTEM INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
119		XCFZZ		97499	205-060-500-13	OIL SYSTEM INSTL USBL EFF 66-746 THRU 68-16342 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
119		XCFZZ		97499	205-060-500-17	OIL SYSTEM INSTL USBL EFF 68-16343 THRU 68-16625 SEE FIG 7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
119		XCFZZ		97499	205-060-500-19	OIL SYSTEM INSTL USBL EFF 69-15000 THRU 71-20339 SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
119		XCFZZ		97499	205-060-500-23	OIL SYST INSTL USBL EFF 72-21465 & SUBSEQUENT SEE FIG.7 FOR NHA ... UHE,UHH,UHV,UHX	EA	1
119	1	PCOZZ	4730-00-805-4516	96906	MS24394-12	. ELBOW,TUBE ... UHE,UHH,UHV,UHX	EA	1
119	2	PBOZZ	5310-00-282-7831	96906	MS24400-12	. NUT,PLAIN,HEXAGON ... UHE,UHH,UHV,UHX	EA	1
119	3	PCOZZ	5330-00-835-8974	96906	MS29561-119	. PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	3
119	4	PAOOO	4730-00-993-1062	00624	375204-16	. COUPLING HALF,QUICK DISCONNECT USBL EFF 62-2106 THRU 71-20339 ... UHE,UHH,UHV,UHX	EA	1
119	5	PAOZZ	5330-01-029-8548	00624	22566-27	. . PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
119	5A	PAOZZ	5330-00-187-3635	00624	22566-213	. . PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
119	6	PBOZZ	5330-00-558-0364	80205	NAS617-16	. PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
119	7	PBOZZ	5310-00-208-4134	88044	AN924-24D	. NUT,PLAIN,HEXAGON ... UHE,UHH,UHV,UHX	EA	1
119	8	PAOZZ	5310-00-052-6616	88044	AN960PD3016L	. WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	1
119	9	PAOZZ	4730-00-684-6914	96906	MS24392D12	. NIPPLE,TUBE ... UHE,UHH,UHV,UHX	EA	1
119	10	PAOZZ	4730-00-852-9225	00624	375204-12	. COUPLING HALF,QUICK DISCONNECT USBL EFF 62-2106 THRU 71-20339 ... UHE,UHH,UHV,UHX	EA	1
119	10A	PAOZZ	5330-01-009-3606	00624	22566-23	. . PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
119	10B	PAOZZ	5330-01-009-3607	00624	22566-116	. . PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
119	10C	PAOZZ	5330-01-013-8334	00624	22566-114	. . PACKING ... UHE,UHH,UHV,UHX	EA	1
119	11	PAOZZ	5310-00-208-4135	88044	AN924-20D	. NUT,PLAIN,HEXAGON ... UHE,UHH,UHV,UHX	EA	1
119	12	PAOZZ	5310-00-641-9872	88044	AN960PD2616L	. WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	1
119	13	PAOZZ	4730-00-803-5693	96906	MS24392-8	. NIPPLE,TUBE ... UHE,UHH,UHV,UHX	EA	1
119	14	PCOZZ	5330-00-576-9925	80205	NAS617-6	. PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	2
119	15	PAOZZ	5310-00-282-7817	81352	AN924-6	. NUT,PLAIN,HEXAGON ... UHE,UHH,UHV,UHX	EA	1
119	16	PAOZZ	4810-00-546-4969	97499	212-040-232-1	. VALVE,BALL ... UHE,UHH,UHV,UHX	EA	1
119	17	PAOZZ	5340-00-637-8337	80205	NAS27-3-22	. TIE ROD,TENSIONING ... UHE,UHH,UHV,UHX	EA	2
119	18	PAOZZ	5306-00-151-0784	88044	AN3-10A	. BOLT,MACHINE ... UHE,UHH,UHV,UHX	EA	8
119	19	PAOZZ	5310-00-167-0753	88044	AN960PD10L	. WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	16
119	20	PAOZZ	5310-00-807-1474	96906	MS21042L3	. NUT,SELF-LOCKING,EX WASHER,HEXAGON ... UHE,UHH,UHV,UHX	EA	8
119	21	PAOOO	1560-00-933-6467	97499	205-061-520-23	. SUPPORT ASSY,OIL ... UHE,UHH,UHV,UHX	EA	1
119	21	XAOZZ		97499	205-061-520-27	. . SUPPORT ... UHE,UHH,UHV,UHX	EA	1
119	22	MFOZZ	1560-00-403-0609	97499	205-061-521-1	. . BLOCK,RADIUS U/O P/N 205-061-520-23 ... UHE,UHH,UHV,UHX	EA	4
119	23	MFOZZ	9390-00-985-0733	88044	AN8031-8-183	. . NONMETALLIC CHANNEL ... UHE,UHH,UHV,UHX	FT	2
119	24	PBOZZ	1680-00-526-4464	80205	NAS25-3L	. . PIN,SHOULDER,HEA ... UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
119	25	PBOZZ	1680-00-614-0313	80205	NAS25-3R	..PIN,SHOULDER,HEA	UHE,UHH,UHV,UHX	EA	2
119	26	MFOZZ	1560-00-981-5073	97499	205-060-540-19	..PAD,SUPPORT ASSY	UHE,UHH,UHV,UHX	EA	1
119	26	MFOZZ		97499	205-061-520-13	..PAD,SUPPORT ASSY	UHE,UHH,UHV,UHX	EA	2
119	27	PAOZZ	1560-00-033-6326	97499	205-061-536-1	.SUPPORT,OIL TANK	UHE,UHH,UHV,UHX	EA	1
119	28	PAOFF	1560-00-070-7837	97499	205-060-538-69	.TANK,LUBRICATING OI	UHE,UHH,UHV,UHX	EA	1
119	29	PAODD	1560-00-409-6615	97499	205-060-539-3	..CAP AND ADAPTER,OIL	UHE,UHH,UHV,UHX	EA	1
119	29	PAODD	1560-00-409-6615	99321	417-406	..CAP AND ADAPTER,OIL	UHE,UHH,UHV,UHX	EA	REF
119	29	PAODD	1560-00-409-6615	99321	FC3514-5	..CAP AND ADAPTER,OIL	UHE,UHH,UHV,UHX	EA	REF
119	30	XAODD		99321	37990-1	...CAP,FILLER OPENING U/O P/N FC3514-5	UHE,UHH,UHV,UHX	EA	1
119	30	XAODD		99321	417-169	...CAP ASSEMBLY U/O P/N 417-406 ONLY	UHE,UHH,UHV,UHX	EA	1
119	31	XAOZZ		83546	3519-7	....BEAD CHAIN	UHE,UHH,UHV,UHX	EA	1
119	32	XAOZZ	5315-00-234-1861	96906	MS24665-298	....PIN,COTTER	UHE,UHH,UHV,UHX	EA	1
119	33	XAOZZ		83646	37013	..PIN,RETAINING	UHE,UHH,UHV,UHX	EA	1
119	34	XDOZZ	5330-00-882-9149	96906	MS17413-131	....PACKING,PREFORMED U/O P/N 37990-1	UHE,UHH,UHV,UHX	EA	1
119	34	PAOZZ	5330-00-618-2518	96906	MS29561-222	....PACKING,PREFORMED U/O P/N 417-406	UHE,UHH,UHV,UHX	EA	1
119	34	PAOZZ	5330-00-166-1058	81349	M83248-1-110	....PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
119	34	PAOZZ	5330-00-846-0502	96906	MS9241-010	....PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
119	35	PCOZZ	5330-00-802-9462	80205	NAS617-28	..PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
119	36	PAOZZ	6680-00-053-3961	97484	S21	..PLUG,SIGHT	UHE,UHH,UHV,UHX	EA	1
119	37	PACZZ	6680-00-053-3960	97484	S20	..PLUG,SIGHT	UHE,UHH,UHV,UHX	EA	1
119	38	PBOZZ	5330-00-558-0364	80205	NAS617-16	..PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
119	39	PBOZZ	4730-00-825-9397	88044	AN806S16	..PLUG,MACHINE THREAD	UHE,UHH,UHV,UHX	EA	1

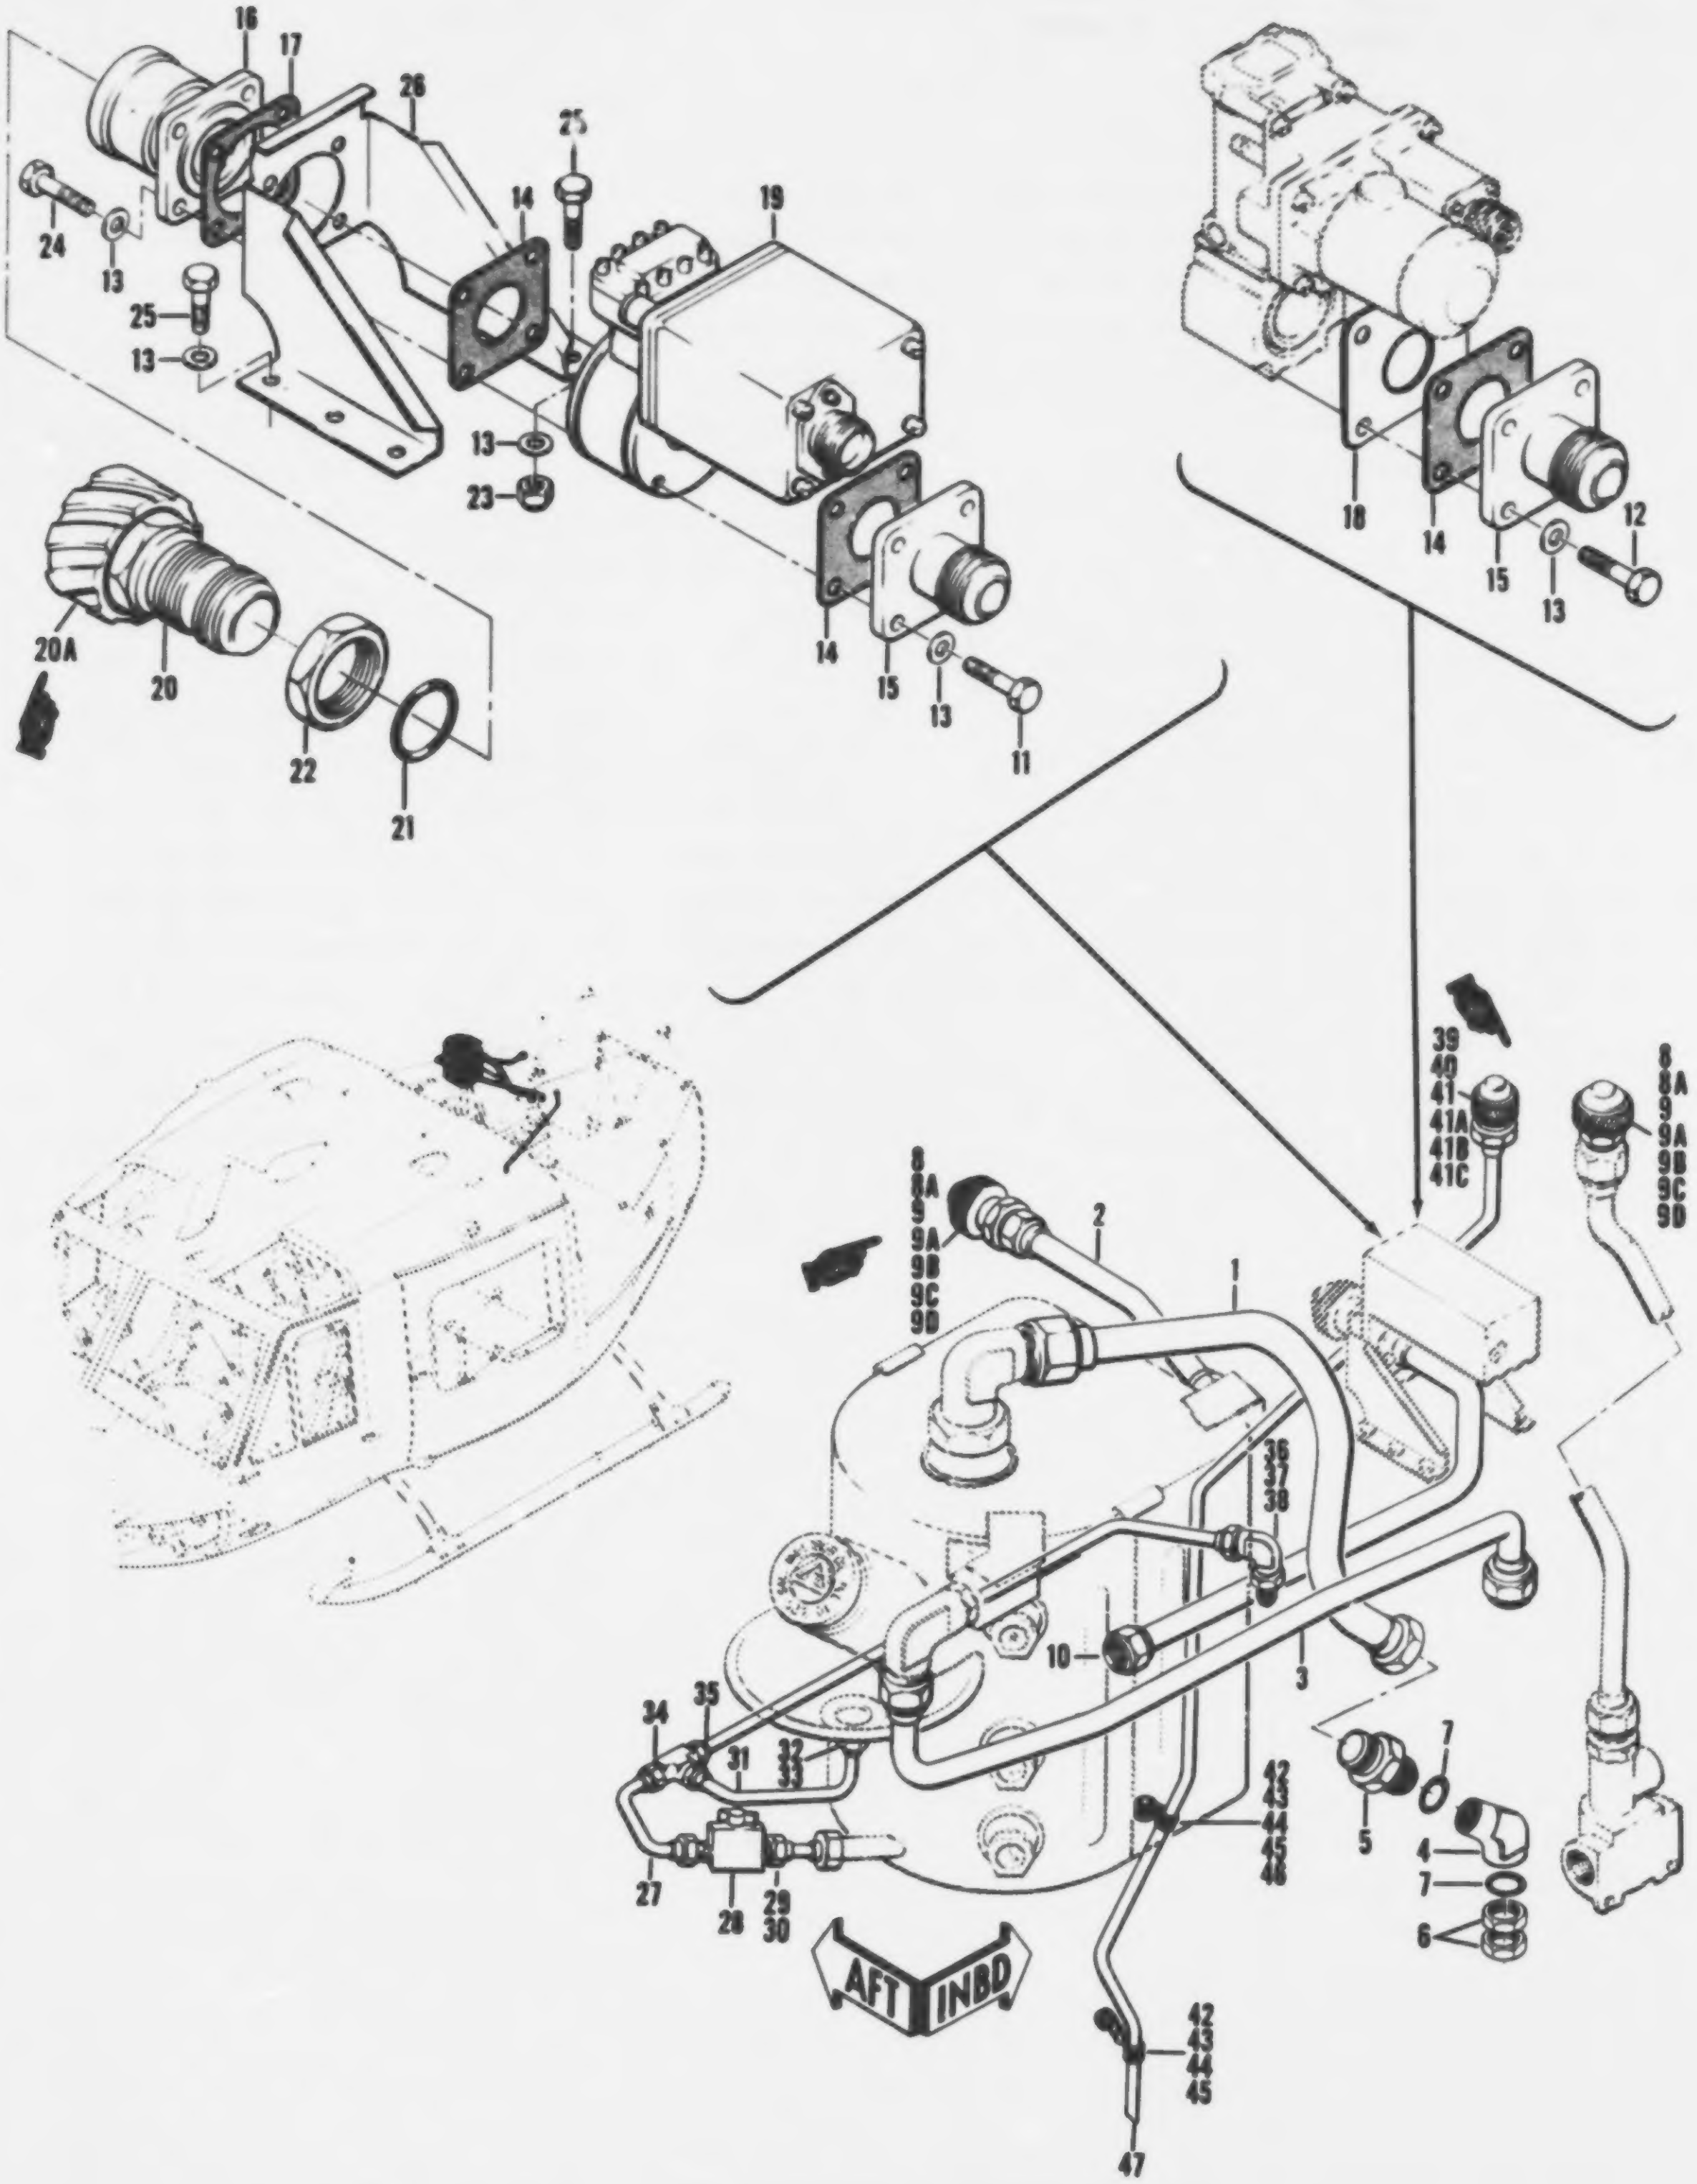
16
17
26
25
14
19
24
13
25
13
13
23
20A
20
22
21
14
15
13
11
18
14
15
13
12
39
40
41
41A
41B
41C
8
8A
9
9A
9B
9C
9D
8
8A
9
9A
9B
9C
9D
2
1
36
37
38
10
3
7
5
4
7
6
42
43
44
45
46
34
35
31
32
33
27
28
29
30
AFT
INBD
42
43
44
45
47

Figure 120. Oil System Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
120		XCFZZ		97499	204-060-551-1	OIL SYST INSTL USBL EFF 60-3546 THRU 61-723 SEE FIG.6 FOR NHA..........UHB	EA	1
120		XCFZZ		97499	204-060-551-3	OIL SYST INSTL USBL EFF 61-724 THRU 61-803 SEE FIG.6 FOR NHA..........UHB	EA	1
120		XCFZZ		97499	204-060-551-7	OIL SYST INSTL USBL EFF 62-1872 THRU 62-1915 SEE FIG.6 FOR NHA..........UHB	EA	1
120		XCFZZ		97495	204-060-551-11	OIL SYST INSTL USBL EFF 62-1916 THRU 62-12555 SEE FIG.6 FOR NHA NHA..........UHB	EA	1
120		XCFZZ		97499	204-060-551-15	OIL SYST INSTL USBL EFF 63-8500 & SUBSEQUENT SEE FIG.6 FOR NHA..........UHB	EA	1
120		XCFZZ		97499	204-060-551-23	OIL SYST INSTL USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA NHA..........UHC,UHM	EA	1
120		XCFZZ		97499	204-060-551-25	OIL SYST INSTL USBL EFF 65-9416 & SUBSEQUENT SEE FIG.6 FOR NHA..........UHC,UHM	EA	1
120	1	PAOZZ	1560-00-898-0004	97499	204-060-178-1	.TUBE ASSEMBLY,TANK BREATHER..........UHB,UHC,UHM	EA	1
120	2	MFOZZ	1560-00-733-8404	97499	204-060-176-1	.TUBE ASSEMBLY..........UHB,UHC,UHM	EA	1
120	3	MFOZZ	4710-00-733-8396	97499	204-060-177-1	.TUBE ASSEMBLY,METAL U/W STANDARD FUEL SYSTEM...UHB,UHC,UHM	EA	1
120	3	MFOZZ		97499	204-060-542-1	.TUBE ASSEMBLY U/W CRASHWORTHY FUEL SYSTEM..........UHC,UHM	EA	1
120	4	PAOZZ	4730-00-277-6430	88044	AN941D12	.ELBOW,BOSS..........UHB,UHC,UHM	EA	1
120	5	PAOZZ	4730-00-804-1903	96906	MS24399D25	.REDUCER,TUBE..........UHB,UHC,UHM	EA	1
120	6	PAOZZ	5310-00-690-5257	97499	204-060-668-1	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	2
120	7	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED..........UHB,UHC,UHM	EA	2
120	8	PAOZZ	5310-00-196-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	2
120	8A	PAOZZ	5310-00-183-4397	88044	AN960PD1716	.WASHER,FLAT..........UHB,UHC,UHM	EA	2
120	9	PAOZZ	4730-00-067-4808	00624	375200-12	.COUPLING HALF,QUICK DISCONNECT..........UHB,UHC,UHM	EA	2
120	9A	PAOZZ	5330-01-009-3606	00624	22566-23	..PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
120	9B	PAOZZ	5330-01-013-8334	00624	22566-114	..PACKING..........UHB,UHC,UHM	EA	1
120	9C	PAOZZ	5330-01-009-3607	00624	22566-116	..PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
120	9D	PAOZZ	5330-00-580-8601	97499	204-060-534-1	..GASKET..........UHB,UHC,UHM	EA	2
120	10	MFOZZ	4710-00-733-8402	97499	204-060-091-1	.TUBE ASSEMBLY,METAL U/O PN 204-060-551-1,-3, -7,-11,&-15..........UHB	EA	1
120	10	MFOZZ	1560-00-906-7574	97499	204-061-504-1	.TUBE ASSEMBLY,METAL U/O PN 204-060-551-23 &-25......UHC,UHM	EA	1
120	11	PAOZZ	5306-00-182-2011	88044	AN3H22A	.BOLT,MACHINE U/O PN 204-060-551-1,-3,-7,-11&-15.........UHB	EA	4
120	12	PAOZZ	5306-00-685-3027	88044	AN3-11A	.BOLT,MACHINE U/O PN 204-060-551-23 &-25.............UHC,UHM	EA	4
120	13	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT..........UHB,UHC,UHM	EA	19
120	14	PAOZZ	5330-00-599-9352	88044	AN763-16	.GASKET..........UHB,UHC,UHM	EA	2
120	15	PAOZZ	4730-00-289-5145	96906	MS20760D12-16	.ADAPTER,STRAIGHT..........UHB,UHC,UHM	EA	1
120	16	PAOZZ	1560-00-626-0088	97499	204-060-524-3	.CONNECTOR OIL SYSTEM..........UHB,UHC,UHM	EA	1
120	17	PAOZZ	5330-00-580-6272	97499	204-060-533-1	.GASKET..........UHB,UHC,UHM	EA	1
120	18	MFOZZ	5365-00-913-2347	97499	204-061-503-1	.SPACER,PLATE U/O PN 204-060-551-23 &-25.............UHC,UHM	EA	1
120	19	XBOZZ	2935-00-078-5294	81982	30-17912	.ACTUATOR ASSEMBLY..........UHB	EA	1
120	19	PAODD	4810-00-682-5186	97499	204-062-520-1	.VALVE,GATE..........UHB	EA	1
120	20	PAOZZ	4730-00-773-2611	00624	375200-16	.COUPLING HALF,QUICK DISCONNECT..........UHB,UHC,UHM	EA	1
120	20A	PAOZZ	5330-01-029-8548	00624	22566-27	..PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
120	21	PBOZZ	5330-00-558-0364	80205	NAS617-16	.PACKING,PREFORMED..........UHB,UHC,UHM	EA	1
120	22	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE		QTY INC IN UNIT
120	23	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT, SELF-LOCKING, EX WASHER, HEXAGON UHB, UHC, UHM	EA	8
120	24	PAOZZ	5306-00-722-0393	88044	AN3-4A	BOLT, MACHINE UHB	EA	4
120	25	PAOZZ	5306-00-150-9221	88044	AN3-3A	BOLT, MACHINE UHB	EA	3
120	26	MFOZZ	1560-00-863-5746	97499	204-060-532-1	BRACKET UHB	EA	1
120	27	MFOZZ	4710-00-733-8395	97499	204-060-179-1	TUBE ASSEMBLY, METAL UHB, UHC, UHM	EA	1
120	28	PAOZZ	4810-00-546-4959	97499	212-040-232-1	VALVE, BALL UHB, UHC, UHM	EA	1
120	29	PCOZZ	5330-00-576-9925	80205	NAS617-6	PACKING, PREFORMED UHB, UHC, UHM	EA	1
120	30	PAOZZ	5310-00-638-2605	96906	MS2440006	NUT, PLAIN, HEXAGON UHB, UHC, UHM	EA	1
120	31	MFOZZ	4710-00-736-4010	97499	204-060-568-1	TUBE ASSEMBLY, METAL UHB, UHC, UHM	EA	1
120	32	PAOZZ	4730-00-684-6916	96906	MS24392D6	NIPPLE, TUBE UHB, UHC, UHM	EA	1
120	33	PCOZZ	5330-00-576-9925	80205	NAS617-6	PACKING, PREFORMED UHB, UHC, UHM	EA	1
120	34	PBOZZ	4730-00-722-1208	96906	MS24402D6	TEE, TUBE UHB, UHC, UHM	EA	1
120	35	MFOZZ	1560-00-733-8393	97499	204-060-182-1	TUBE ASSEMBLY UHB, UHC, UHM	EA	1
120	36	PAOZZ	5310-00-638-2605	96906	MS2440006	NUT, PLAIN, HEXAGON UHB, UHC, UHM	EA	1
120	37	PAOZZ	5310-00-187-2402	88044	AN960PD916	WASHER, FLAT UHB, UHC, UHM	EA	2
120	38	PBOZZ	4730-00-684-6922	96906	MS24394D6	ELBOW, TUBE UHB, UHC, UHM	EA	1
120	39	PAOZZ	5310-00-282-7823	96906	MS2440004	NUT, PLAIN, HEXAGON UHB, UHC, UHM	EA	1
120	40	PAOZZ	5330-00-700-4477	97499	204-060-534-5	GASKET UHB, UHC, UHM	EA	1
120	41	PAOZZ	4730-00-773-2612	00624	375200-4	COUPLING HALF, QUICK DISCONNECT U/O PN 204-060-651-1, -3, & -7 UHB, UHC, UHM	EA	2
120	41A	PAOZZ	5330-01-046-4517	00624	22566-16	PACKING UHB, UHC, UHM	EA	1
120	41B	PAOZZ	5330-01-047-8600	00624	22566-110	PACKING, PREFORMED UHB, UHC, UHM	EA	1
120	41C	PAOZZ	5330-00-086-3990	00624	22566-14	PACKING, PREFORMED UHB	EA	1
120	42	PAOZZ	5310-00-807-1474	96906	MS21042L3	NUT, SELF-LOCKING, EX WASHER, HEXAGON UHB, UHC, UHM	EA	2
120	43	PAOZZ	5310-00-167-0753	88044	AN960PD10L	WASHER, FLAT UHB, UHC, UHM	EA	2
120	44	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	SCREW, MACHINE UHB, UHC, UHM	EA	2
120	45	PAOZZ	5340-00-161-5997	96906	MS21122-4	CLAMP, LOOP UHB, UHC, UHM	EA	3
120	46	PAOZZ	5340-00-187-6023	96906	MS21122-6	CLAMP, LOOP UHB, UHC, UHM	EA	1
120	47	MFOZZ	4710-00-707-7790	97499	204-060-020-93	TUBE ASSEMBLY, METAL UHB, UHC, UHM	EA	1

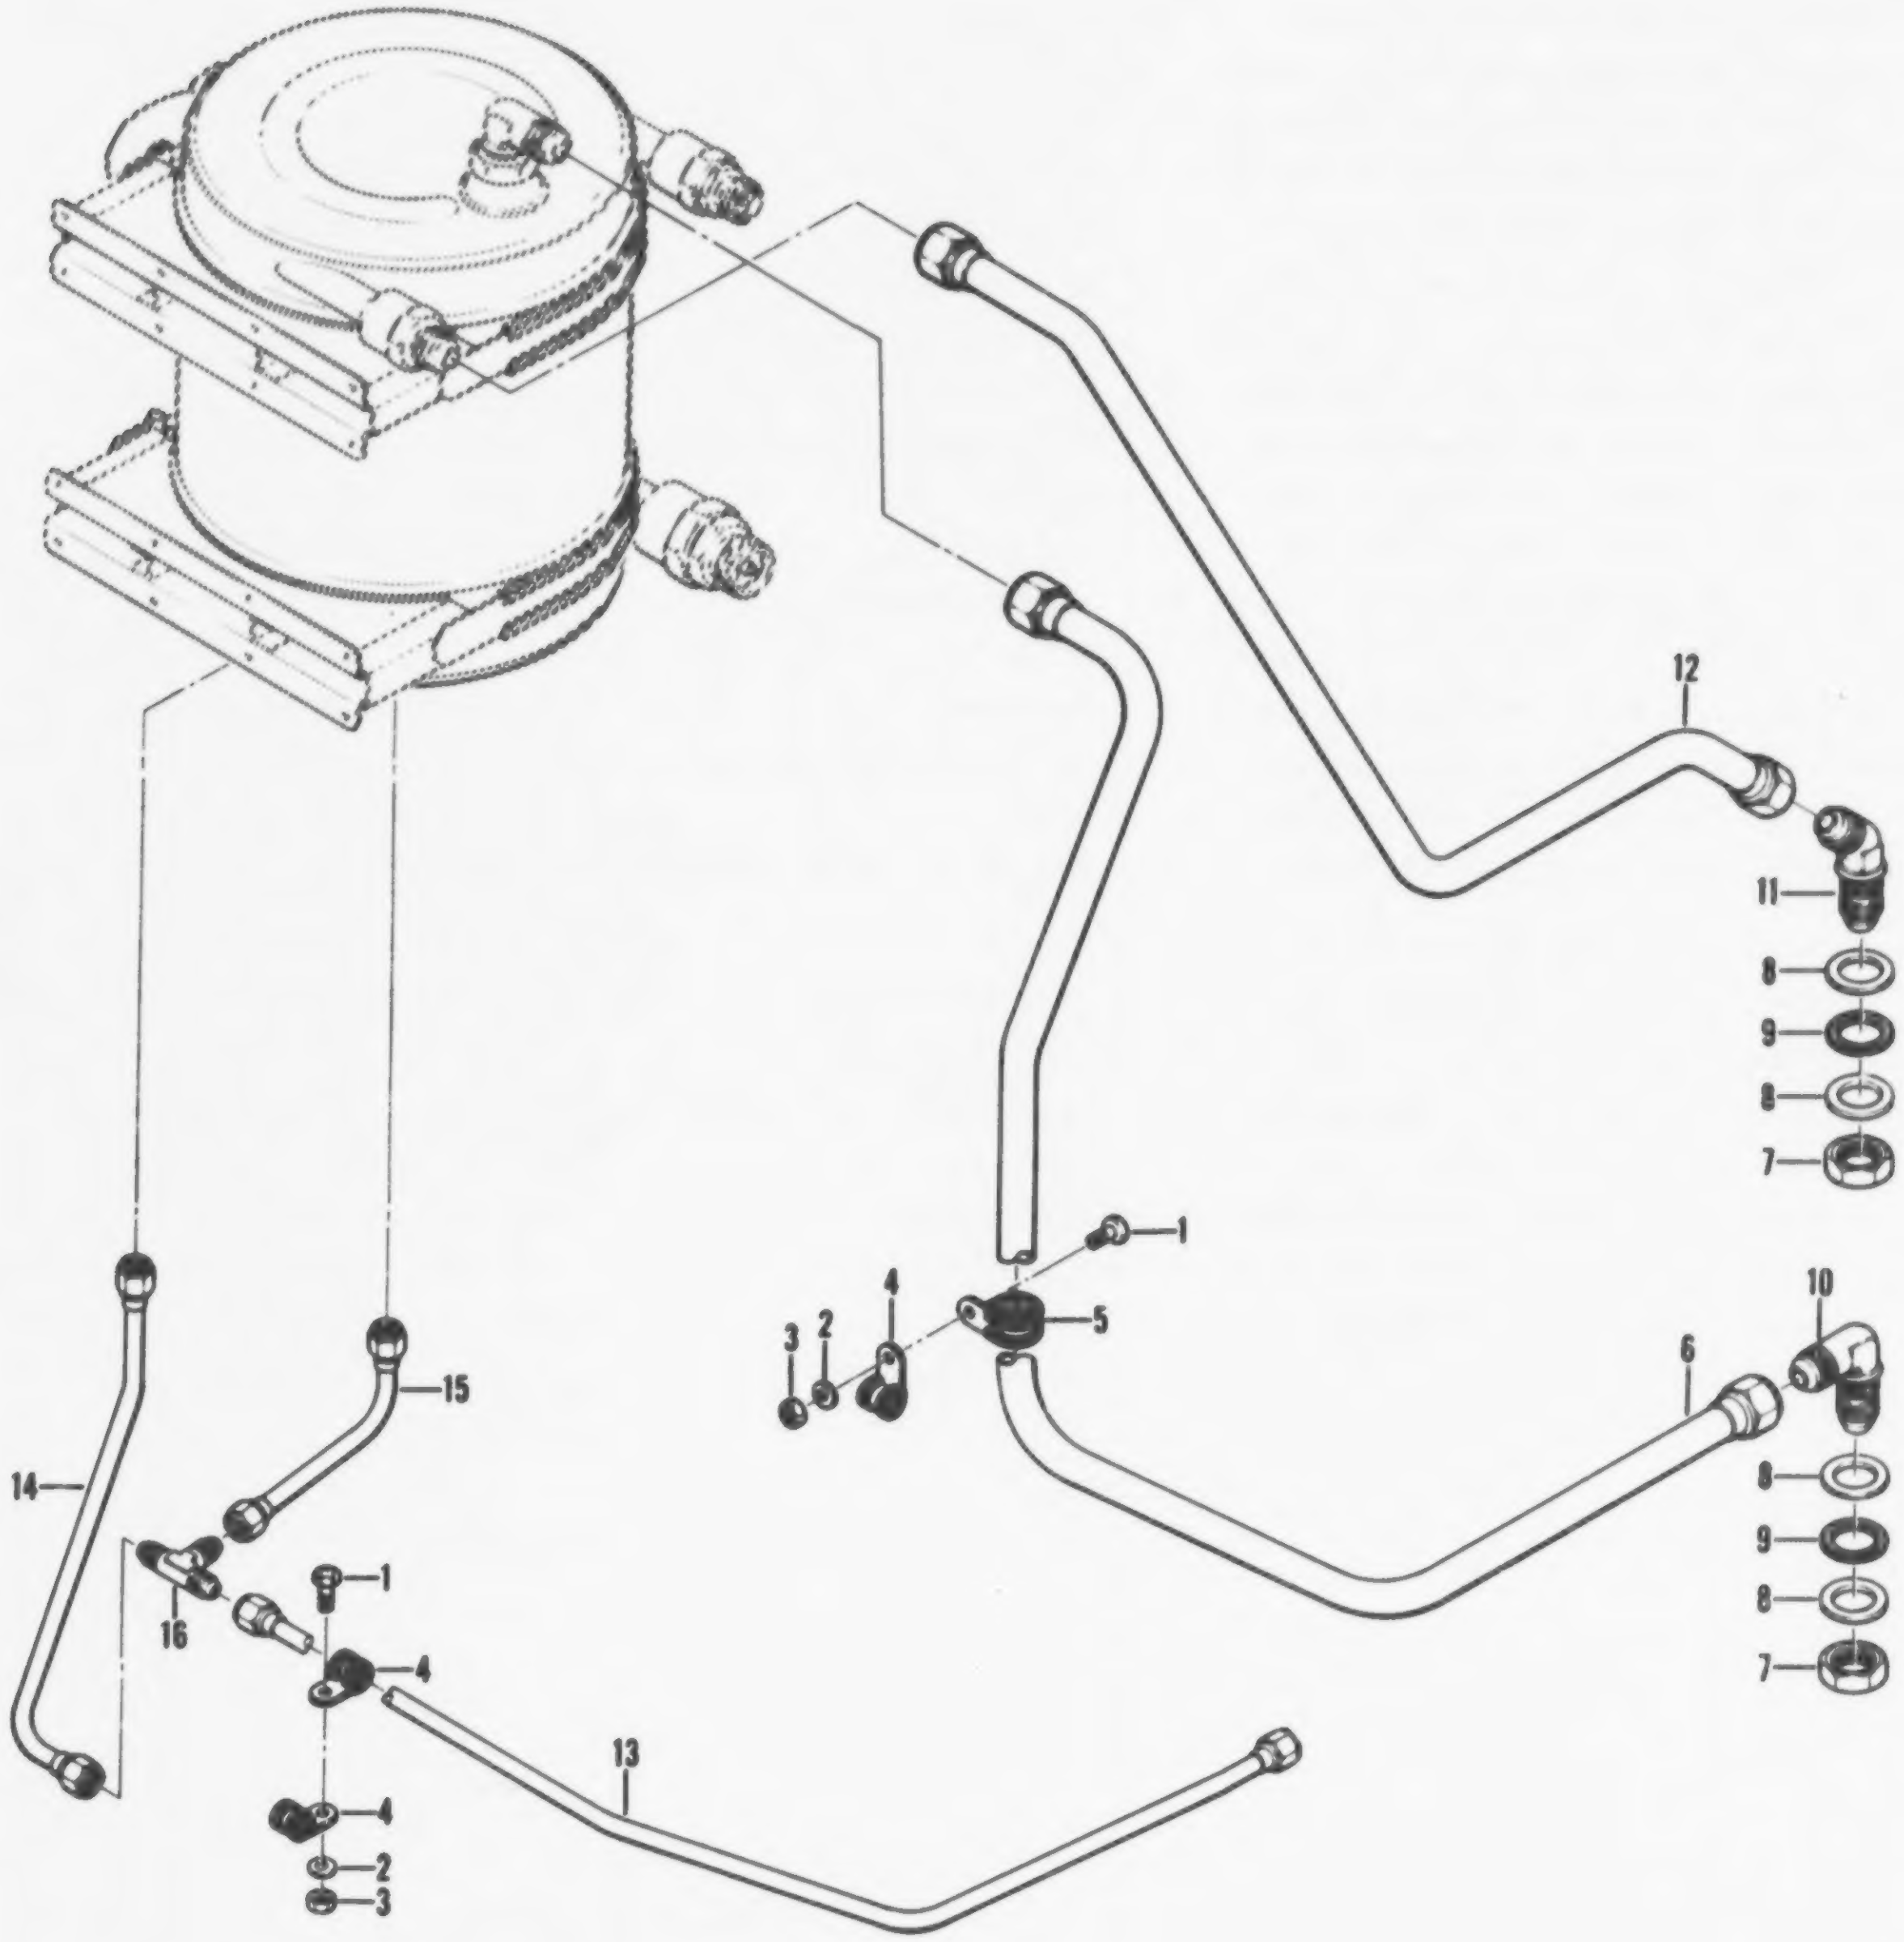
12
11
8
9
8
7
1
4
3
2
5
10
6
8
9
8
7
15
14
1
16
4
4
13
2
3

Figure 121. Oil System Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
121		XCFZZ		97499	205-060-500-5	OIL SYSTEM INSTL USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
121		XCFZZ		97499	205-060-500-7	OIL SYSTEM INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
121		XCFZZ		97499	205-060-500-9	OIL SYSTEM INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG 7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
121		XCFZZ		97499	205-060-500-11	OIL SYSTEM INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG 7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
121		XCFZZ		97499	205-060-500-13	OIL SYSTEM INSTL USBL EFF 66-746 THRU 68-16342 SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
121		XCFZZ		97499	205-060-500-17	OIL SYSTEM INSTL USBL EFF 68-16343 THRU 68-16625 SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
121		XCFZZ		97499	205-060-500-19	OIL SYSTEM INSTL USBL EFF 69-15000 THRU 71-20339 SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
121		XCFZZ		97499	205-060-500-23	OIL SYSTEM INSTL USBL EFF 72-21466 & SUBSEQUENT SEE FIG.7 FOR NHA .... UHE,UHH,UHV,UHX	EA	1
121	1	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
121	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	2
121	3	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	2
121	4	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	3
121	5	PAOZZ	5340-00-993-5478	81996	EAB700012	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	1
121	6	MFOZZ	4710-00-967-1811	97499	205-060-575-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
121	7	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON .... UHE,UHH,UHV,UHX	EA	2
121	8	PAOZZ	5310-00-797-5916	97499	140-009069T109	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	4
121	9	PAOZZ	5330-00-580-8601	97499	204-060-534-1	.GASKET .... UHE,UHH,UHV,UHX	EA	2
121	10	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW,TUBE .... UHE,UHH,UHV,UHX	EA	1
121	11	PAOZZ	4730-00-231-3020	88044	AN837-12	.ELBOW,TUBE .... UHE,UHH,UHV,UHX	EA	1
121	12	MFOZZ	4710-00-967-1814	97499	205-060-594-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
121	13	MFOZZ	4710-00-967-1813	97499	205-060-593-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
121	14	MFOZZ	4710-00-965-8547	97499	205-060-592-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
121	15	MFOZZ	4710-00-967-1812	97499	205-060-591-1	.TUBE ASSEMBLY,METAL .... UHE,UHH,UHV,UHX	EA	1
121	16	PAOZZ	4730-00-804-7943	96906	MS24402-6	.TEE,TUBE .... UHE,UHH,UHV,UHX	EA	1

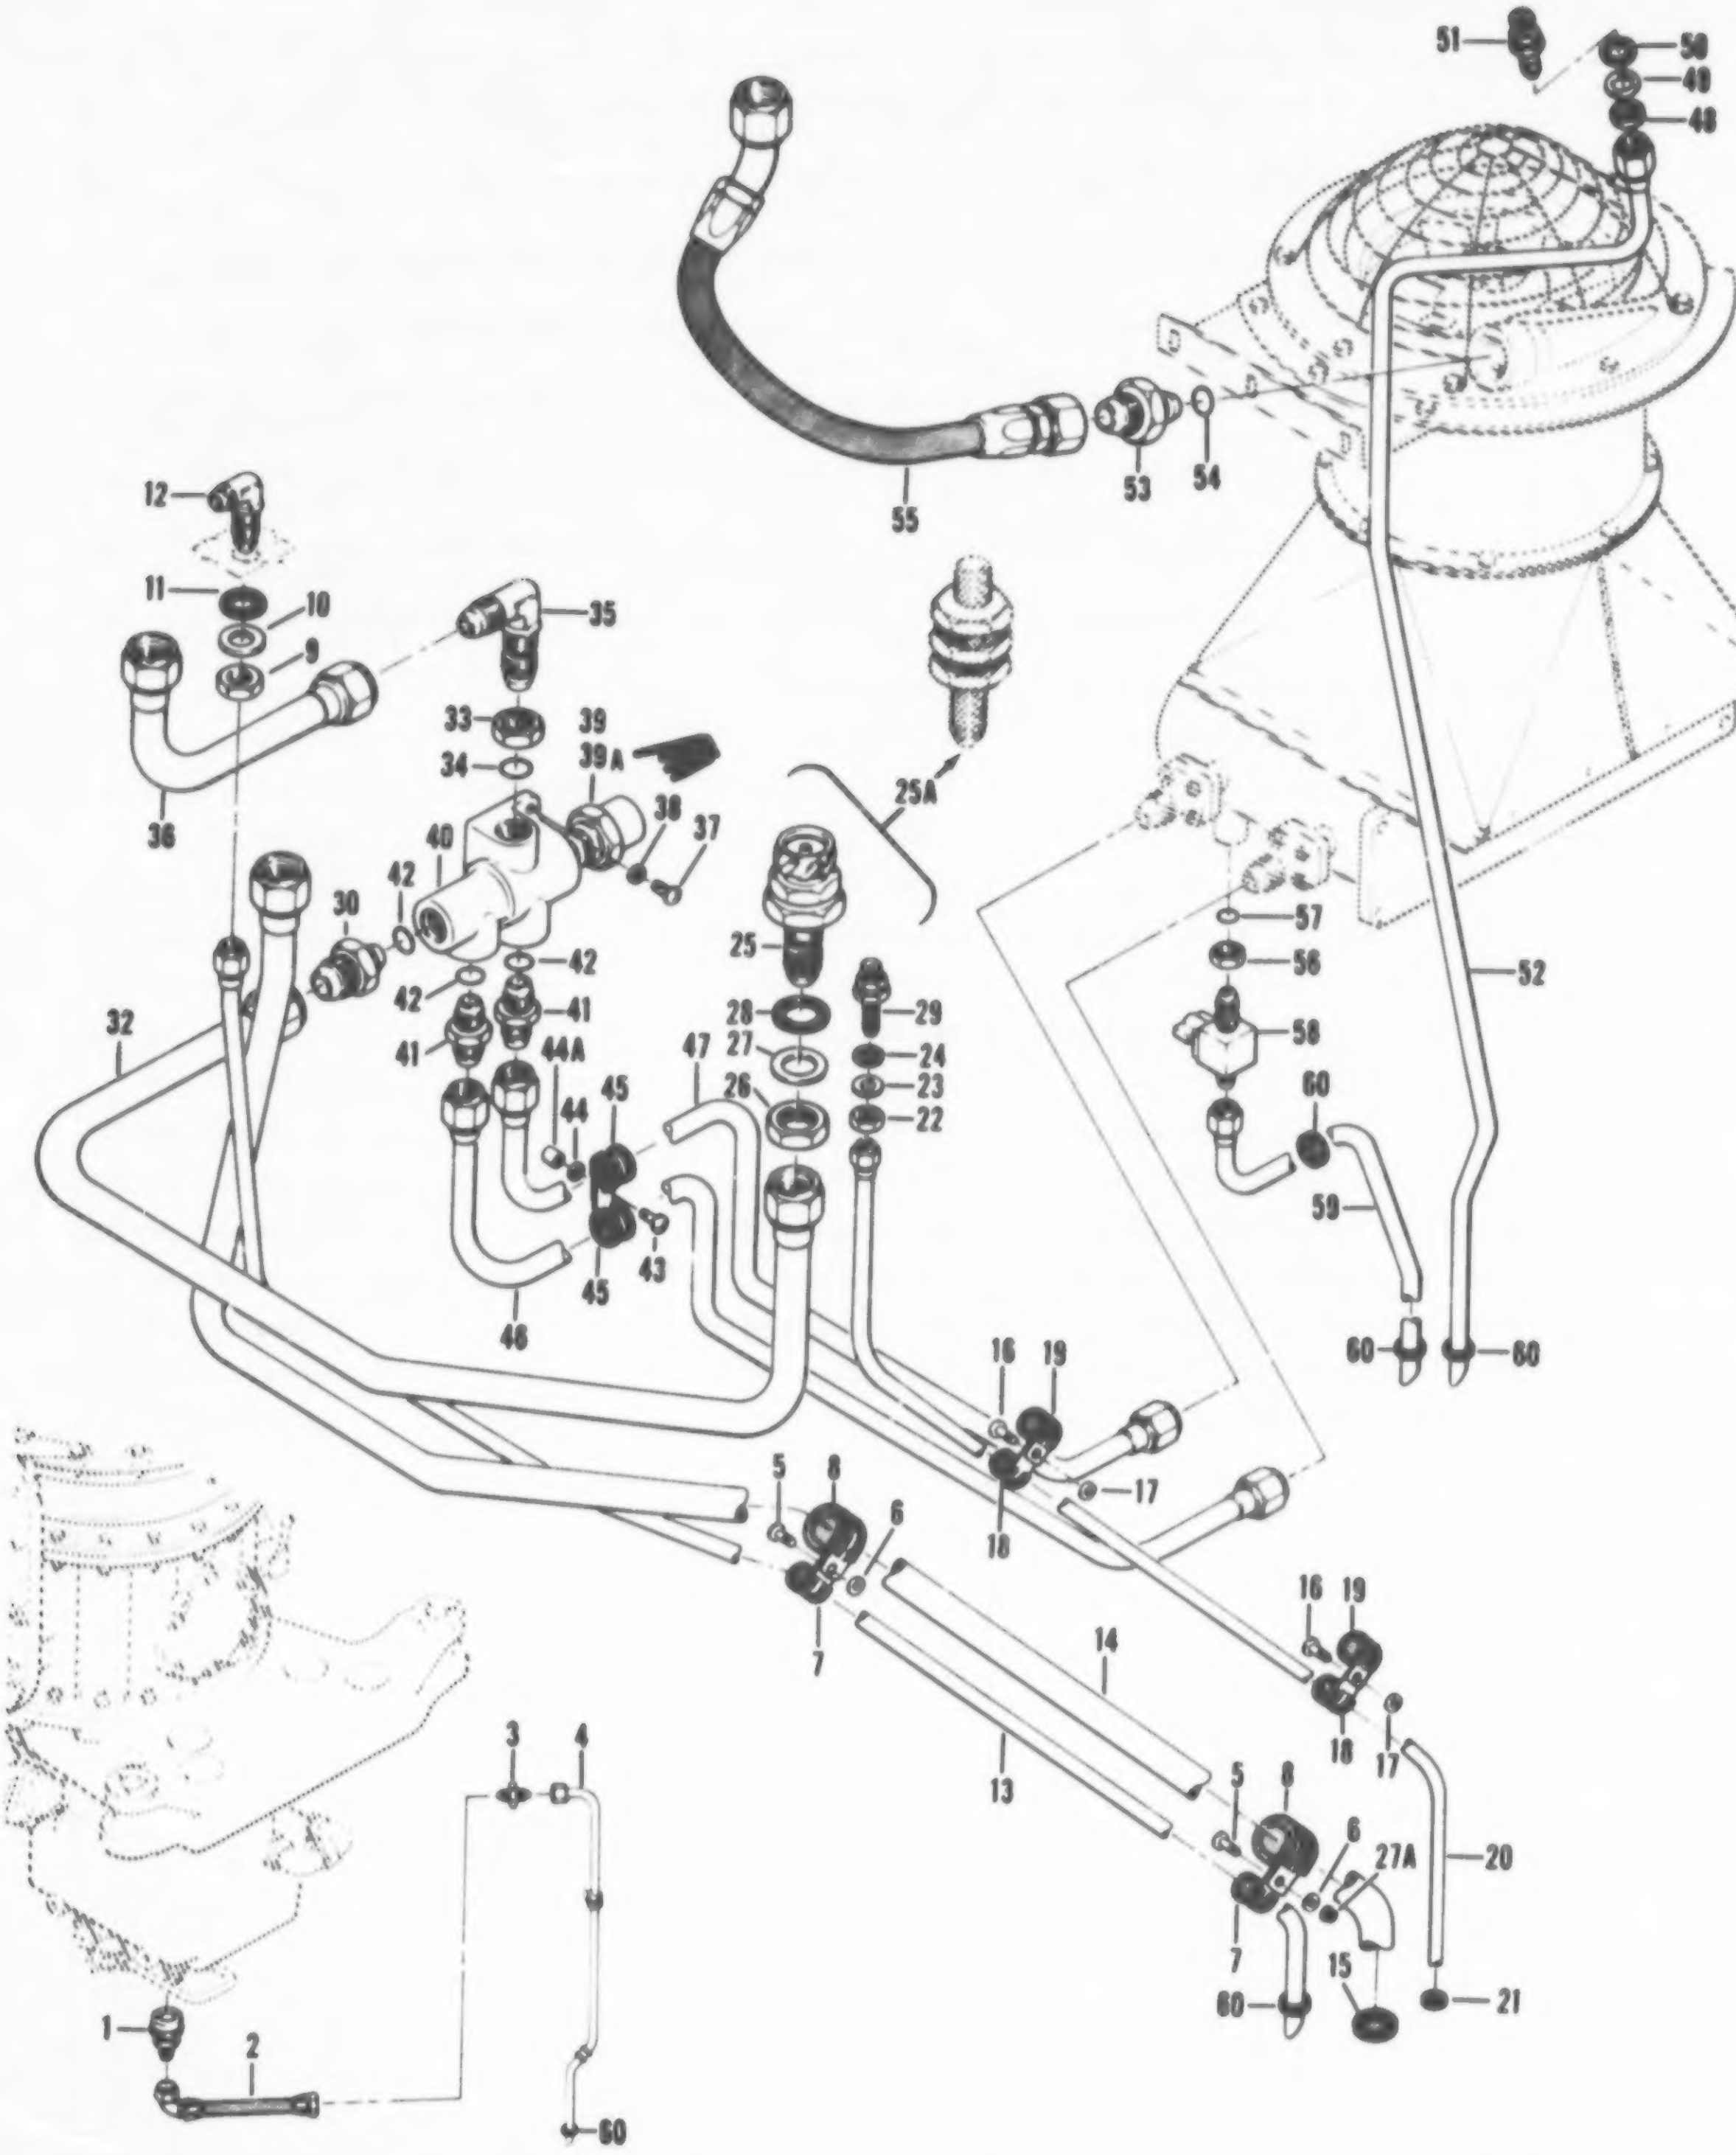
51
50
49
48
55
53
54
12
11
10
9
35
33
39
39A
34
36
38
37
40
25A
42
30
25
57
56
52
42
42
41
41
28
29
58
32
27
24
47
44A
26
23
22
45
60
44
59
43
45
46
60
60
16
19
18
17
5
8
6
18
16
19
14
7
18
17
13
5
8
6
27A
20
7
60
15
21
3
4
1
2
60

Figure 122. Oil System Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
						GROUP 04 POWER PLANT		
122		XCFZZ		97499	205-060-500-5	OIL SYSTEM INSTL USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA......UHE,UHH,UHV,UHX	EA	1
122		XCFZZ		97499	205-060-500-7	OIL SYSTEM INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.7 FOR NHA......UHE,UHH,UHV,UHX	EA	1
122		XCFZZ		97499	205-060-500-9	OIL SYSTEM INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG.7 FOR NHA......UHE,UHH,UHV,UHX	EA	1
122		XCFZZ		97499	205-060-500-11	OIL SYSTEM INSTL USBL EFF 65-9565 THRU 65-12896 SEE FIG.7 FOR NHA......UHE,UHH,UHV,UHX	EA	1
122		XCFZZ		97499	205-060-500-13	OIL SYSTEM INSTL USBL EFF 66-746 THRU 68-16342 SEE FIG.7 FOR NHA......UHE,UHH,UHV,UHX	EA	1
122		XCFZZ		97499	205-060-500-17	OIL SYSTEM INSTL USBL EFF 68-16343 THRU 68-16625 SEE FIG.7 FOR NHA......UHE,UHH,UHV,UHX	EA	1
122		XCFZZ		97499	205-060-500-19	OIL SYSTEM INSTL USBL EFF 69-15000 THRU 71-20339 SEE FIG.7 FOR NHA......UHE,UHH,UHV,UHX	EA	1
122		XCFZZ		97499	205-060-500-23	OIL SYSTEM INSTL USBL EFF 72-21465 & SUBSEQUENT SEE FIG.7 FOR NHA......UHE,UHH,UHV,UHX	EA	1
122	1	PAOZZ	4730-00-897-2530	00624	375504-6	.COUPLING HALF,QUICK DISCONNECT......UHE,UHH,UHV,UHX	EA	1
122	2	MFOZZ		96906	MS80000G1108	.HOSE ASSY, NONMETALLIC......UHE,UHH,UHV,UHX	EA	1
122	2	MFOZZ		96906	MS87028G1108	.HOSE ASSEMBLY......UHH,UHV,UHE,UHX	EA	1
122	3	PAOZZ	4730-00-684-6916	96906	MS2439206	.NIPPLE,TUBE......UHE,UHH,UHV,UHX	EA	1
122	4	MFOZZ	4710-00-981-3089	97499	205-060-580-1	.TUBE ASSEMBLY,METAL......UHE,UHH,UHV,UHX	EA	1
122	5	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE......UHE,UHH,UHV,UHX	EA	2
122	6	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT......UHE,UHH,UHV,UHX	EA	2
122	7	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP......UHE,UHH,UHV,UHX	EA	2
122	8	PAOZZ	5340-00-151-5999	96906	MS21122-12	.CLAMP,LOOP......UHE,UHH,UHV,UHX	EA	2
122	9	PAOZZ	5310-00-638-2605	96906	MS2440006	.NUT,PLAIN,HEXAGON......UHE,UHH,UHV,UHX	EA	1
122	10	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT......UHE,UHH,UHV,UHX	EA	1
122	11	PAOZZ	5330-00-678-5442	97499	204-060-534-3	.GASKET......UHE,UHH,UHV,UHX	EA	1
122	12	PBOZZ	4730-00-684-6922	96906	MS2439406	.ELBOW,TUBE......UHE,UHH,UHV,UHX	EA	1
122	13	MFOZZ	4710-00-981-3098	97499	205-060-581-1	.TUBE ASSEMBLY,METAL......UHE,UHH,UHV,UHX	EA	1
122	14	MFOZZ	4710-00-981-3097	97499	205-060-582-1	.TUBE ASSEMBLY,METAL......UHE,UHH,UHV,UHX	EA	1
122	15	PAOZZ	5325-00-263-6648	96906	MS35489-135	.GROMMET,NONMETALLIC......UHE,UHH,UHV,UHX	EA	1
122	16	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE......UHE,UHH,UHV,UHX	EA	2
122	17	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT......UHE,UHH,UHV,UHX	EA	2
122	18	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP......UHE,UHH,UHV,UHX	EA	2
122	19	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP......UHE,UHH,UHV,UHX	EA	2
122	20	MFOZZ	4710-00-981-3096	97499	205-060-583-1	.TUBE ASSEMBLY,METAL......UHE,UHH,UHV,UHX	EA	1
122	21	PAOZZ	5325-00-263-6632	96906	MS35489-6	.GROMMET,NONMETALLIC......UHE,UHH,UHV,UHX	EA	1
122	22	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON......UHE,UHH,UHV,UHX	EA	1
122	23	PAOZZ	5310-00-187-2401	88044	AN960PD716	.WASHER,FLAT......UHE,UHH,UHV,UHX	EA	1
122	24	PAOZZ	5330-00-700-4477	97499	204-060-534-5	.GASKET......UHE,UHH,UHV,UHX	EA	1
122	25	PAOZZ	4730-00-067-4808	00624	375200-12	..COUPLING HALF,QUICK DISCONNECT......UHE,UHH,UHV,UHX	EA	1
122	25A	PAOZZ	4730-00-100-4344	97499	205-063-602-5	.COUPLING ASSEMBLY,Q DISCONNECT USBL EFF 72-21646 & SUBSEQUENT......UHE,UHH,UHV,UHX	EA	1
122	26	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON......UHE,UHH,UHV,UHX	EA	2
122	27	PAOZZ	5310-00-183-4397	88044	AN960PD1716	.WASHER,FLAT......UHE,UHH,UHV,UHX	EA	4

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
122	27A	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING........UHE,UHH,UHV,UHX	EA	1
122	28	PAOZZ	5330-00-580-8601	97499	204-060-534-1	.GASKET........UHE,UHH,UHV,UHX	EA	1
122	29	PAOZZ	4730-00-773-2612	00624	375200-4	.COUPLING HALF,QUICK DISCONNECT USBL EFF 62-2106 THRU 71-20339........UHE,UHH,UHV,UHX	EA	1
122	30	PBOZZ	4730-00-805-5100	96906	MS24399D21	.REDUCER,TUBE........UHE,UHH,UHV,UHX	EA	1
122	32	MFOZZ	4710-00-981-3095	97499	205-060-584-1	.TUBE ASSEMBLY,METAL........UHE,UHH,UHV,UHX	EA	1
122	33	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON........UHE,UHH,UHV,UHX	EA	1
122	34	PCOZZ	5330-00-846-0500	96906	MS9241-119	.PACKING,PREFORMED........UHE,UHH,UHV,UHX	EA	1
122	35	PAOZZ	4730-00-197-2919	88044	AN833-12D	.ELBOW,TUBE........UHE,UHH,UHV,UHX	EA	1
122	36	MDOZZ		97499	205-060-585-1	.TUBE ASSEMBLY,METAL........UHE,UHH,UHV,UHX	EA	1
122	37	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	2
122	38	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	2
122	39	PAOOO	6620-00-575-1427	97499	205-060-512-1	.THERMOSTAT,FLOW CON CONTROL........UHE,UHH,UHV,UHX	EA	1
122	39A	PAOZZ	5330-00-205-9450	27462	8509467	..GASKET........UHE,UHH,UHV,UHX	EA	1
122	40	PAOZZ	1560-00-221-5717	97499	205-060-537-3	.BODY,OIL COOLER THE OIL COOLER........UHE,UHH,UHV,UHX	EA	1
122	41	PAOZZ	4730-00-866-1829	96906	MS24392D10	.NIPPLE,TUBE........UHE,UHH,UHV,UHX	EA	2
122	42	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORME........UHE,UHH,UHV,UHX	EA	3
122	43	PAOZZ	5305-00-948-4152	96906	MS27039-1-13	.SCREW,MACHINE........UHE,UHH,UHV,UHX	EA	1
122	44	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	1
122	44A	PAOZZ	5365-00-293-9800	80205	NAS43DD3-24	.SPACER,SLEEVE........UHE,UHH,UHV,UHX	EA	1
122	45	PAOZZ	5340-00-151-6000	96906	MS21122-10	.CLAMP,LOOP........UHE,UHH,UHV,UHX	EA	2
122	46	MFOZZ	4710-00-981-3100	97499	205-060-586-1	.TUBE ASSEMBLY,METAL........UHE,UHH,UHV,UHX	EA	1
122	47	MFOZZ	4710-00-981-5072	97499	205-060-587-1	.TUBE ASSEMBLY,METAL........UHE,UHH,UHV,UHX	EA	1
122	48	PAOZZ	5310-00-638-2606	96906	MS24400C06	.NUT,PLAIN,HEXAGON........UHE,UHH,UHV,UHX	EA	1
122	49	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT........UHE,UHH,UHV,UHX	HD	2
122	50	PAOZZ	5330-00-678-5442	97499	204-060-534-3	.GASKET........UHE,UHH,UHV,UHX	EA	1
122	51	PAOZZ	4730-00-839-0976	00624	375200-6	.COUPLING HALF,QUICK DISCONNECT........UHE,UHH,UHV,UHX	EA	1
122	52	MFOZZ	4710-00-981-3103	97499	205-060-590-1	.TUBE ASSEMBLY,METAL........UHE,UHH,UHV,UHX	EA	1
122	53	PAOZZ	4730-00-075-3715	97499	204-060-494-1	.REDUCER,TUBE........UHE,UHH,UHV,UHX	EA	1
122	54	PAOZZ	5330-00-599-0981	02697	3-165418-6	.PACKING,PREFORMED........UHE,UHH,UHV,UHX	EA	1
122	55	PAOZZ	4720-00-918-0714	78570	S21812-1308W	.HOSE ASSEMBLY,METAL........UHE,UHH,UHV,UHX	EA	1
122	56	PAOZZ	5310-00-638-2606	96906	MS24400D6	.NUT,PLAIN,HEXAGON........UHE,UHH,UHV,UHX	EA	1
122	57	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED........UHE,UHH,UHV,UHX	EA	1
122	58	PAOZZ	4810-00-545-4959	97499	212-040-232-1	.VALVE,BALL........UHE,UHH,UHV,UHX	EA	1
122	59	MFOZZ	4710-00-981-3102	97499	205-060-589-1	.TUBE ASSEMBLY,METAL........UHE,UHH,UHV,UHX	EA	1
122	60	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET,NONMETALLIC........UHE,UHH,UHV,UHX	EA	5

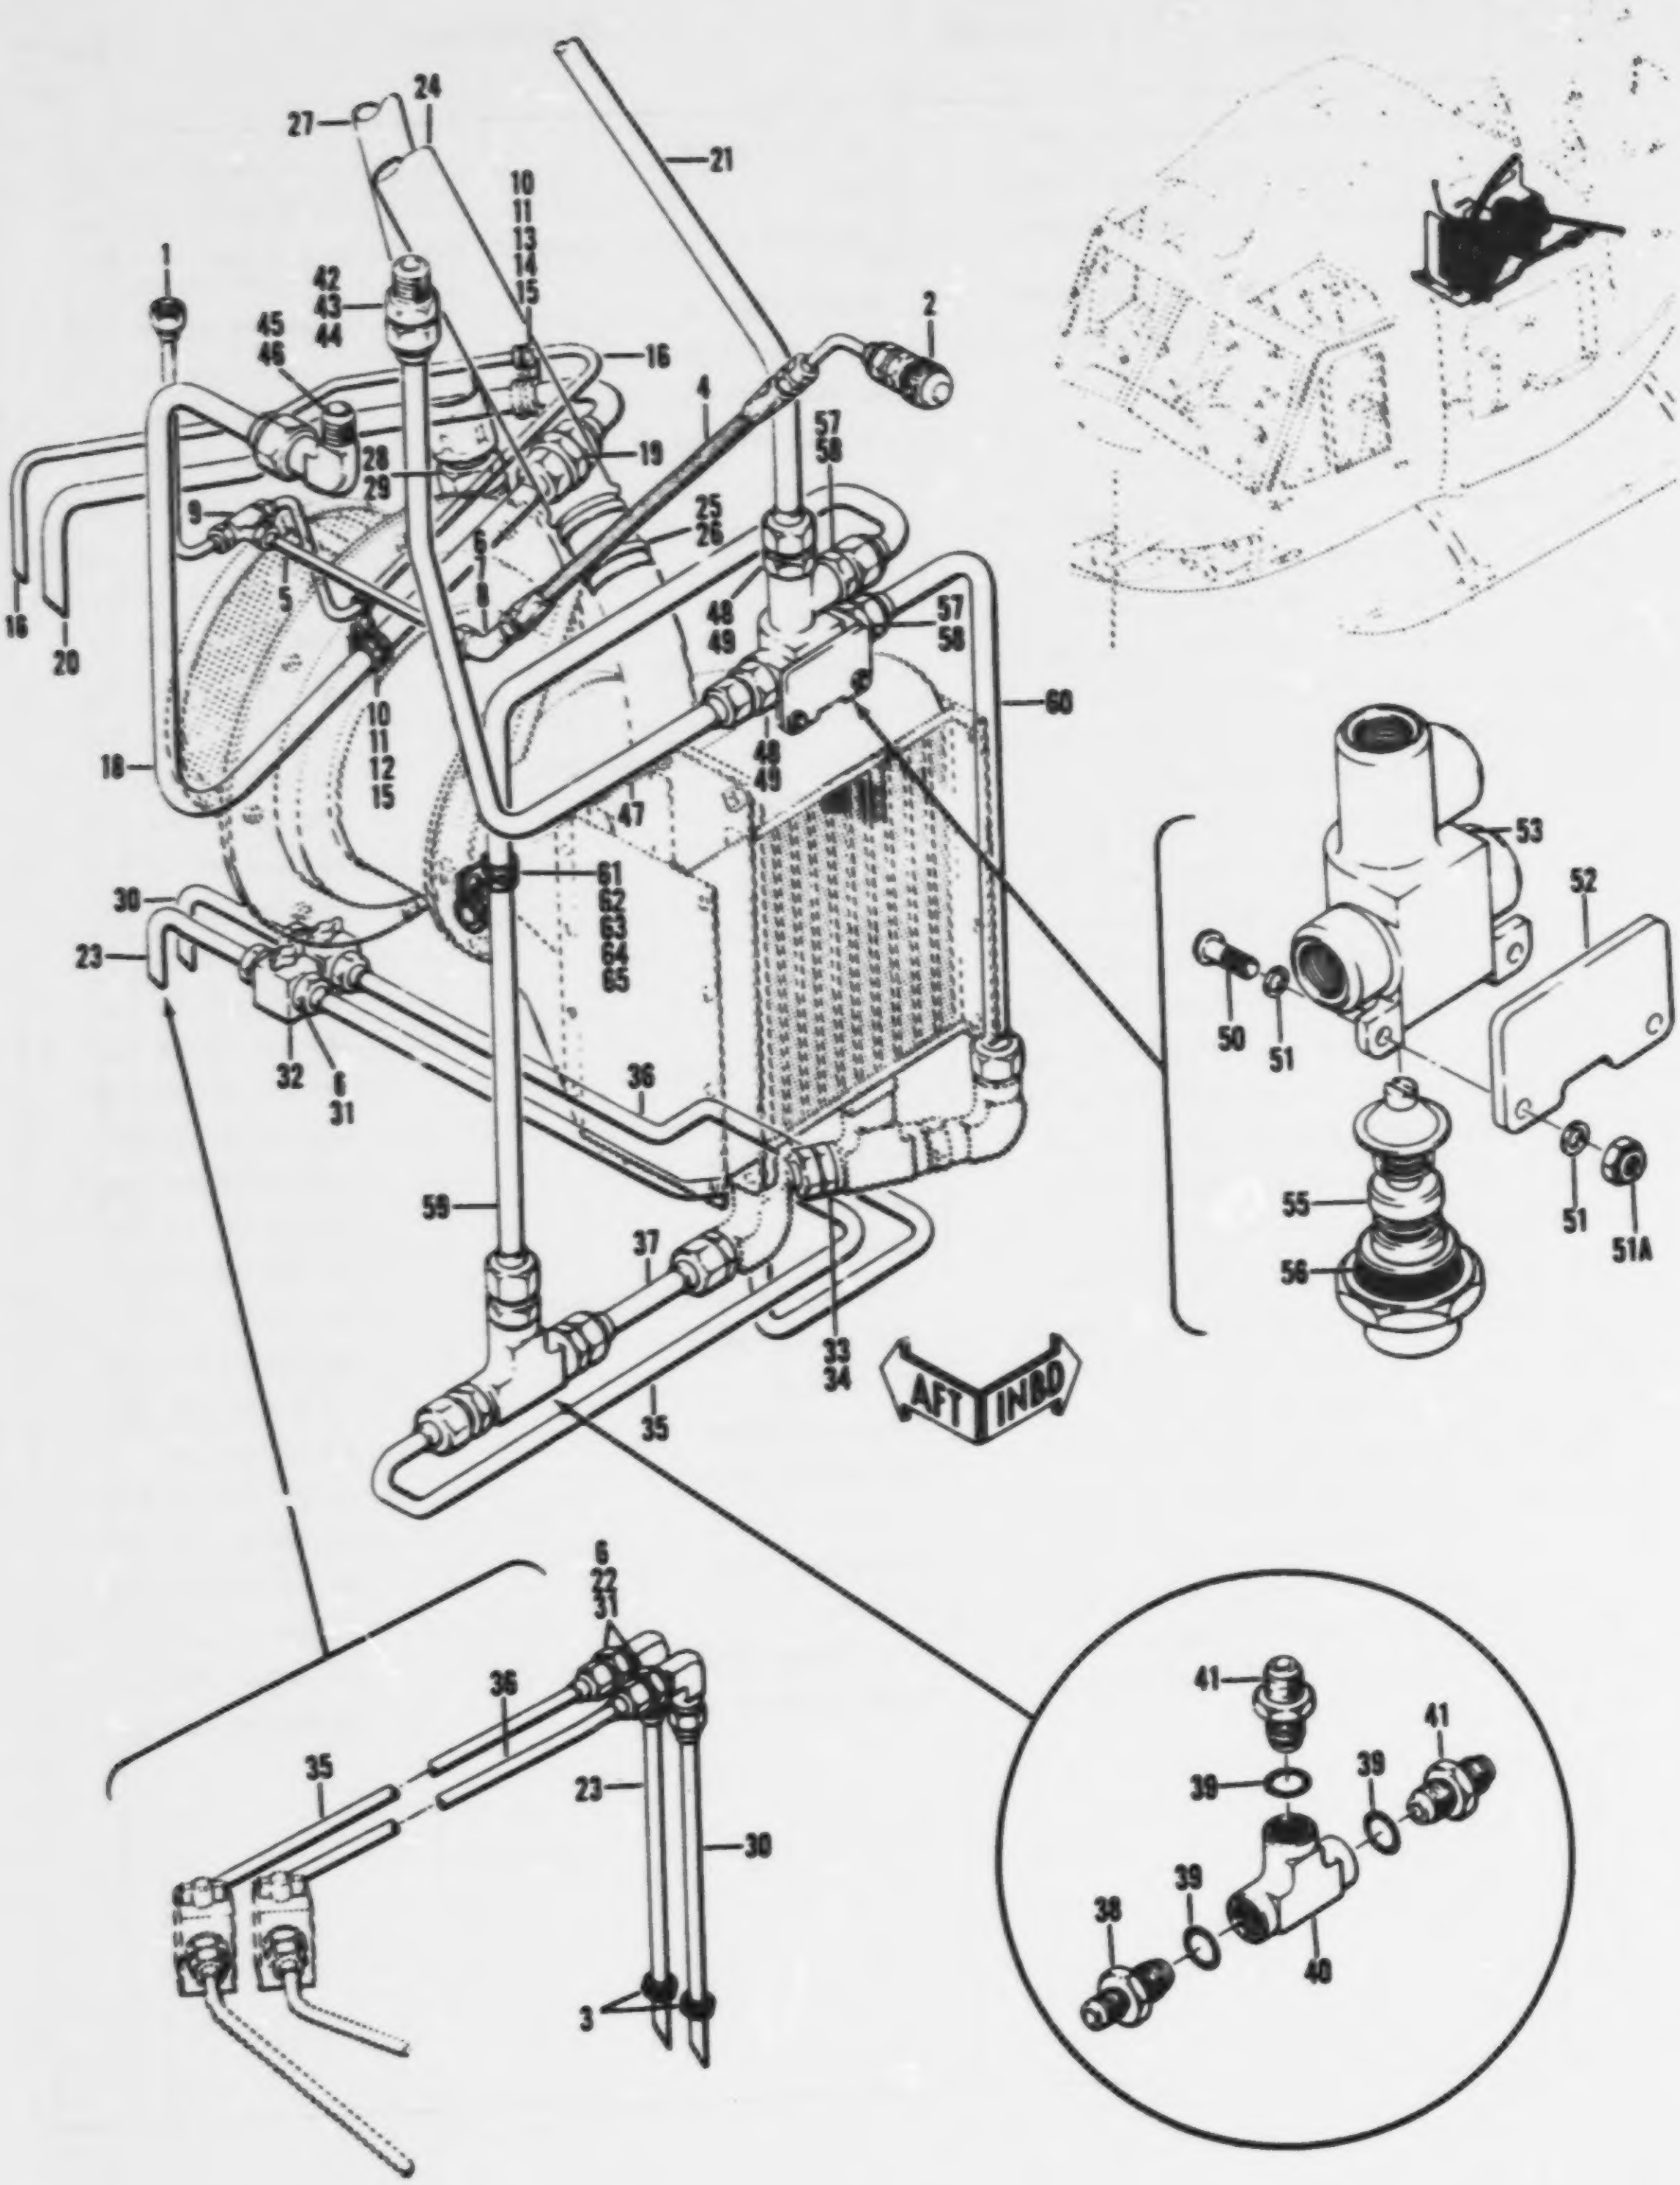
27
24
21
10
11
13
14
15
1
42
43
44
45
46
16
2
4
28
29
19
57
58
9
25
26
6
7
8
16
5
20
48
49
57
58
60
10
11
12
15
18
47
48
49
53
52
61
62
63
64
65
30
23
50
51
32
6
31
36
55
51
51A
56
59
37
33
34
AFT
INBD
35
6
22
31
36
41
39
41
35
23
30
39
39
38
40
3

Figure 123. Oil System Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
123		XCFZZ		97499	204-060-551-1	OIL SYSTEM INSTL USBL EFF 60-3546 THRU 61-723 SEE FIG.6 FOR NHA.......UHB	EA	1
123		XCFZZ		97499	204-060-551-3	OIL SYSTEM INSTL USBL EFF 61-724 THRU 61-803 SEE FIG.6 FOR NHA.......UHB	EA	1
123		XCFZZ		97499	204-060-551-7	OIL SYSTEM INSTL USBL EFF 62-1872 THRU 62-1915 SEE FIG.6 FOR NHA.......UHB	EA	1
123		XCFZZ		97499	204-060-551-11	OIL SYSTEM INSTL USBL EFF 62-1916 THRU 62-12555 SEE FIG.6 FOR NHA.......UHB	EA	1
123		XCFZZ		97499	204-060-551-15	OIL SYSTEM INSTL USBL EFF 63-8500 & SUBSEQUENT SEE FIG.6 FOR NHA.......UHB	EA	1
123		XCFZZ		97499	204-060-551-23	OIL SYSTEM INSTL USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA.......UHC,UHM	EA	1
123		XCFZZ		97499	204-060-551-25	OIL SYSTEM INSTL USBL EFF 65-9416 & SUBSEQUENT SEE FIG.6 FOR NHA.......UHC,UHM	EA	1
123	1	MFOZZ	4710-00-739-4593	97499	204-060-049-1	.TUBE ASSEMBLY,METAL.......UHB,UHC,UHM	EA	1
123	2	PAOZZ	4730-00-897-2530	00624	375504-6	.COUPLING HALF,QUICK DISCONNECT.......UHB,UHC,UHM	EA	1
123	3	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET,NONMETALLIC.......UHB	EA	2
123	4	XDOZZ	4720-00-181-8717	96906	MS8000G120C	.HOSE ASSY, NONMETALLIC.......UHB,UHC,UHM	EA	1
123	5	MFOZZ	4710-00-739-4595	97499	204-060-104-1	.TUBE ASSEMBLY,METAL.......UHB,UHC,UHM	EA	1
123	6	PAOZZ	5310-00-638-2605	96906	MS2440006	.NUT,PLAIN,HEXAGON.......UHB,UHC,UHM	EA	4
123	7	PAOZZ	5310-00-187-2402	88044	AN960PD916	.WASHER,FLAT.......UHB,UHC,UHM	EA	2
123	8	PAOZZ	4730-00-186-9997	96906	MS2439606	.ELBOW,TUBE.......UHB,UHC,UHM	EA	1
123	9	PBOZZ	4730-00-722-1208	96906	MS244020G	.TEE,TUBE.......UHB,UHC,UHM	EA	1
123	10	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.......UHB,UHC,UHM	EA	2
123	11	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.......UHB,UHC,UHM	EA	2
123	12	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE.......UHB,UHC,UHM	EA	1
123	13	PAOZZ	5305-00-912-7308	88044	AN525-10R14	.SCREW, MACHINE.......UHB,UHC,UHM	EA	1
123	14	PAOZZ	5365-00-293-9800	80205	NAS43DD3-24	.SPACER,SLEEVE.......UHB,UHC,UHM	EA	1
123	15	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP.......UHB,UHC,UHM	EA	2
123	15	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP.......UHB,UHC,UHM	EA	2
123	16	MFOZZ	4710-00-739-4594	97499	204-060-103-1	.TUBE ASSEMBLY,METAL.......UHB,UHC,UHM	EA	1
123	18	MFOZZ	4710-00-733-8394	97499	204-060-180-1	.TUBE ASSEMBLY,METAL.......UHB,UHC,UHM	EA	1
123	19	PAOZZ	4730-00-684-6914	96906	MS24392D12	.NIPPLE,TUBE.......UHB,UHC,UHM	EA	1
123	20	MFOZZ	4710-00-739-4592	97499	204-060-048-1	.TUBE ASSEMBLY,METAL.......UHB	EA	1
123	20	MFOZZ	1560-00-909-4192	97499	204-061-501-1	.TUBE ASSEMBLY,OIL SYSTEM.......UHC,UHM	EA	1
123	21	MFOZZ	1560-00-863-5747	97499	204-060-064-1	.TUBE ASSEMBLY.......UHB,UHC,UHM	EA	1
123	22	PBOZZ	4730-00-684-6922	96906	MS24394D6	.ELBOW,TUBE.......UHB,UHC,UHM	EA	2
123	23	MFOZZ	1560-00-733-8387	97499	204-060-186-1	.TUBE ASSEMBLY U/O PN 204-060-551-1 & -3.......UHB	EA	1
123	23	MFOZZ	4710-00-981-3084	97499	204-060-582-1	.TUBE ASSEMBLY,METAL U/O PN 204-060-551-7,-11, -15,-23,& -25.......UHB,UHC,UHM	EA	1
123	24	PAOZZ	4710-00-731-8077	97499	204-060-455-1	.DUCT.......UHB,UHC,UHM	EA	1
123	25	PAOZZ	5330-00-543-7034	80205	NAS521-16-12	.SLEEVE,SEAL,COUPLER.......UHB,UHC,UHM	EA	2
123	26	PAOZZ	4730-00-278-9102	88044	AN737RM74	.CLAMP,HOSE.......UHB,UHC,UHM	EA	4
123	27	PAOZZ	4720-00-939-7583	78570	S21912-2002W	.HOSE ASSEMBLY,METAL.......UHB,UHC,UHM	EA	1
123	28	PBOZZ	4730-00-684-7161	96906	MS24399D22	.REDUCER,TUBE U/O PN 204-060-551-1,-3,-7.......UHB	EA	1
123	28	PAOZZ	4730-00-075-3715	97499	204-060-494-1	.REDUCER,TUBE U/O PN 204-060-551-11,-15, -23,& -25.......UHB,UHC,UHM	EA	1

best copy available

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
123	29	PBOZZ	5330-00-558-0364	80205	NAS617-16	.PACKING,PREFORMED U/O PN 204-060-551-1,-3,-7............UHB	EA	1
123	29	PAOZZ	5330-00-599-0981	02697	3-16S418-6	.PACKING,PREFORMED................................UHB,UHC,UHM	EA	1
123	30	MFOZZ	1560-00-863-5751	97499	204-060-059-1	.TUBE ASSEMBLY U/O PN 204-060-551-1 & -3................UHB	EA	1
123	30	MFOZZ	4710-00-981-3091	97499	204-060-583-1	.TUBE ASSEMBLY,METAL U/O PN 204-060-551-7,-11, -15,-23,& -25 ....UHB,UHC,UHM	EA	1
123	31	PAOZZ	5310-00-188-7723	88044	AN960PD916L	.WASHER,FLAT................................UHB,UHC,UHM	EA	4
123	32	PAOZZ	4810-00-546-4959	97499	212-040-232-1	.VALVE,BALL................................UHB,UHC,UHM	EA	2
123	33	PBOZZ	4730-00-809-6003	96906	MS24399D15	.REDUCER,TUBE................................UHB,UHC,UHM	EA	2
123	34	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED................................UHB,UHC,UHM	EA	2
123	35	MFOZZ	1560-00-735-6564	97499	204-060-058-1	.TUBE ASSEMBLY U/O PN 204-060-551-1 & -3................UHB	EA	1
123	35	MFOZZ	4710-00-981-3087	97499	204-060-581-1	.TUBE ASSEMBLY,METAL U/O PN 204-060-551-7,-11, -15,-23,& -25 ....UHB,UHC,UHM	EA	1
123	35	MFOZZ	4710-00-981-3082	97499	204-060-579-1	.TUBE ASSEMBLY,METAL U/O PN 204-060-551-7,-11, -15,-23, & - 25..UHB,UHC,UHM	EA	1
123	36	MFOZZ	1560-00-733-8392	97499	204-060-185-1	.TUBE ASSEMBLY U/O PN 204-060-551-1 & -3................UHB	EA	1
123	36	MFOZZ	4710-00-981-3083	97499	204-060-680-1	.TUBE ASSEMBLY,METAL U/O PN 204-060-551-7,-11, -15,-23,& -25 ....UHB,UHC,UHM	EA	1
123	36	MFOZZ	4710-00-981-3081	97499	204-060-578-1	.TUBE ASSEMBLY,METAL U/O PN 204-060-551-7,-11, -15,-23,& -25 ....UHB,UHC,UHM	EA	1
123	37	MFOZZ	4710-00-733-8397	97499	204-060-046-1	.TUBE ASSEMBLY,METAL................................UHB,UHC,UHM	EA	1
123	38	PBOZZ	4730-00-809-6003	96906	MS24399D15	.REDUCER,TUBE................................UHB,UHC,UHM	EA	1
123	39	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED................................UHB,UHC,UHM	EA	3
123	40	PAOZZ	4730-00-278-2779	88044	AN938D10	.TEE,BOSS................................UHB,UHC,UHM	EA	1
123	41	PAOZZ	4730-00-866-1829	96906	MS24392D10	.NIPPLE,TUBE................................UHB,UHC,UHM	EA	2
123	42	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON................................UHB,UHC,UHM	EA	1
123	43	PAOZZ	4730-00-994-0883	96906	MS24393D12	.NIPPLE,TUBE................................UHB,UHC,UHM	EA	1
123	44	PAOZZ	5310-00-183-4397	88044	AN960PD1716	.WASHER,FLAT................................UHB,UHC,UHM	EA	1
123	45	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW,TUBE................................UHB,UHC,UHM	EA	1
123	46	PAOZZ	5310-00-167-0829	88044	AN960-1716	.WASHER,FLAT................................UHB,UHC,UHM	EA	1
123	47	MFOZZ	1560-00-863-5749	97499	204-060-061-1	.TUBE ASSEMBLY................................UHB,UHC,UHM	EA	1
123	48	PBOZZ	4730-00-805-5100	96906	MS24399D21	.REDUCER,TUBE................................UHB,UHC,UHM	EA	2
123	49	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED................................UHB,UHC,UHM	EA	2
123	50	PAOZZ	5305-00-180-0014	88044	AN525-10R12	.SCREW,MACHINE................................UHB,UHC,UHM	EA	2
123	51	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT................................UHB,UHC,UHM	EA	4
123	51A	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHB,UHC,UHM	EA	2
123	52	MFOZZ	1560-00-733-8390	97499	204-060-962-1	.SPACER................................UHB,UHC,UHM	EA	1
123	53	PAOZZ	1560-00-731-8038	97499	204-060-550-1	.BODY,VALVE,OIL COOL................................UHB,UHC,UHM	EA	1
123	55	PAOOO	6620-00-575-1427	97499	205-060-512-1	.THERMOSTAT,FLOW CONTROL................................UHB,UHC,UHM	EA	1
123	56	PAOZZ	5365-00-205-9450	27462	8509467	..SPACER,RING................................UHB,UHC,UHM	EA	1
123	57	PAOZZ	4730-00-866-1829	96906	MS24392D10	.NIPPLE,TUBE................................UHB,UHC,UHM	EA	2
123	58	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED................................UHB,UHC,UHM	EA	2
123	59	MFOZZ	1560-00-863-5748	97499	204-060-063-1	.TUBE ASSEMBLY................................UHB,UHC,UHM	EA	1
123	60	MFOZZ	1560-00-863-5750	97499	204-060-060-1	.TUBE ASSEMBLY................................UHB,UHC,UHM	EA	1
123	61	PAOZZ	5305-00-180-3326	88044	AN525-10R16	.SCREW,MACHINE................................UHB,UHC,UHM	EA	1
123	62	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT................................UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
123	63	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON............UHB,UHC,UHM	EA	1
123	64	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP............UHB,UHC,UHM	EA	2
123	65	PAOZZ	5365-00-684-2093	80205	NAS43003-16	.SPACER,SLEEVE............UHB,UHC,UHM	EA	1

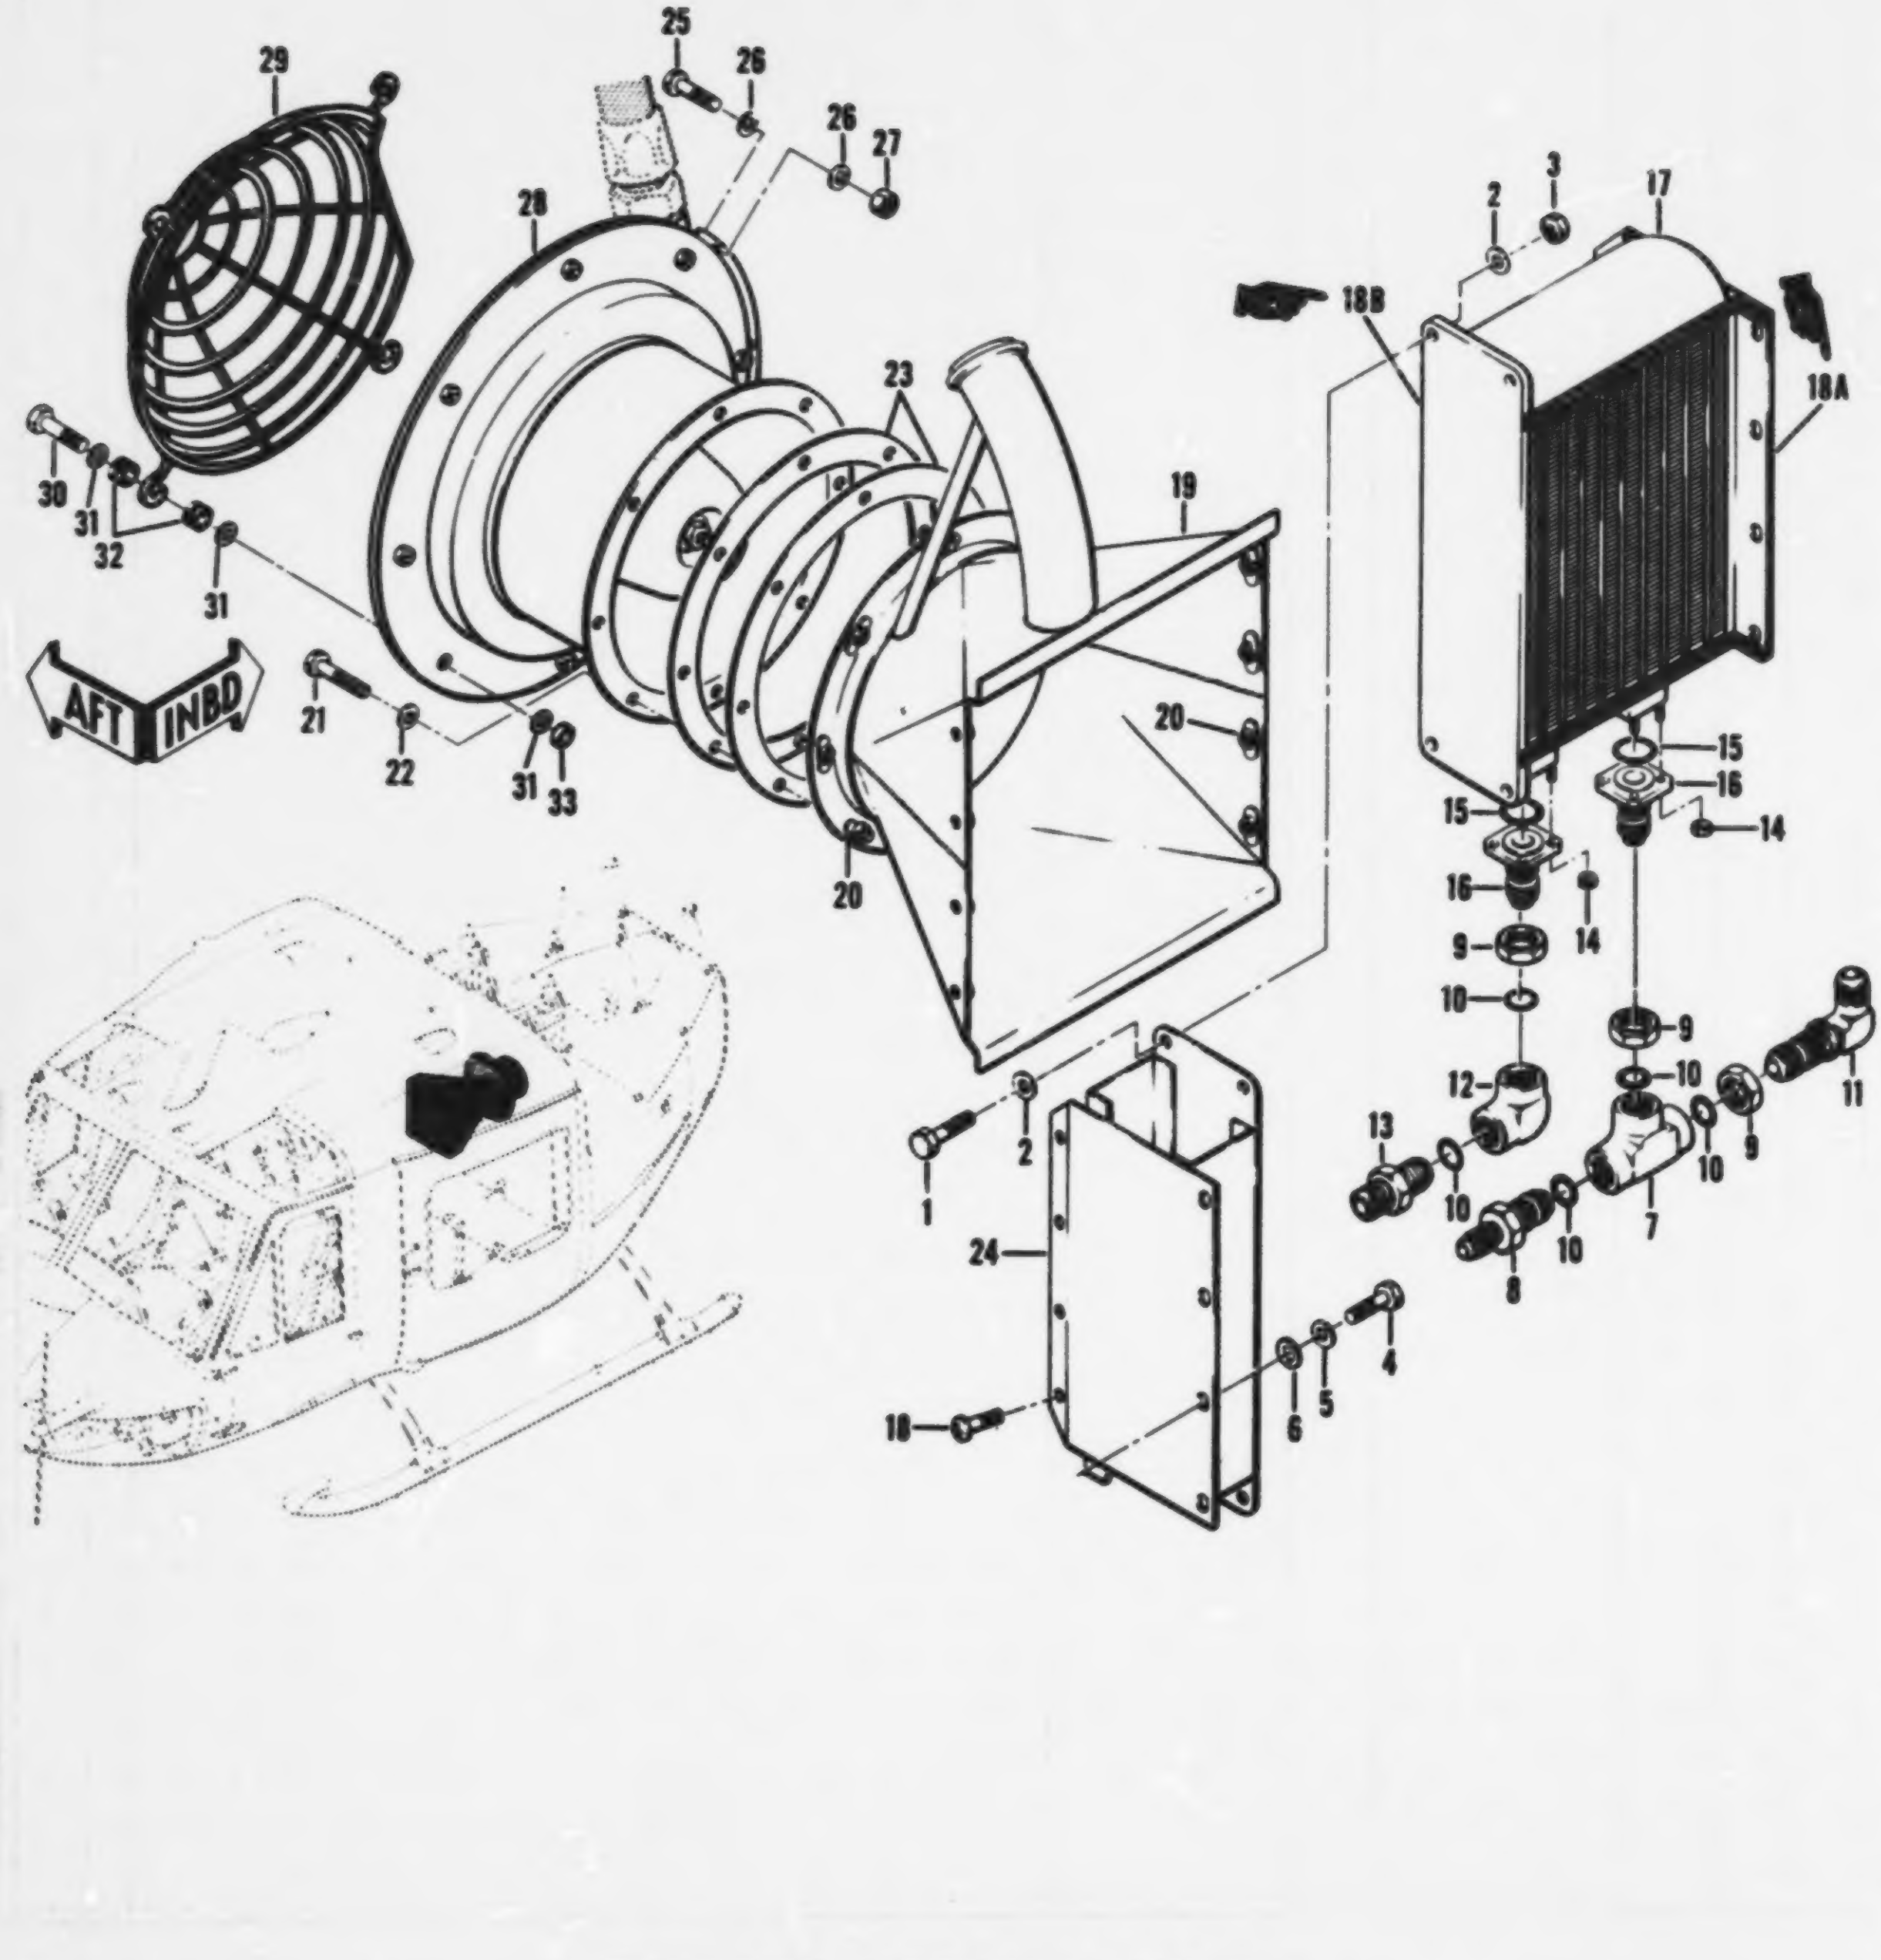
29
25
26
26
27
28
2
3
17
18B
18A
23
19
30
31
32
31
AFT
INBD
21
22
31
33
20
20
15
16
15
14
16
14
9
10
9
10
12
11
13
10
10
9
1
2
10
7
10
8
24
4
5
6
18

Figure 124. Oil System Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
124		XCFZZ		97499	204-060-551-1	OIL SYSTEM INSTL USBL EFF 60-3546 THRU 61-723 SEE FIG.6 FOR NHA.......UHB	EA	1
124		XCFZZ		97499	204-060-551-3	OIL SYSTEM INSTL USBL EFF 61-724 THRU 61-803 SEE FIG.6 FOR NHA.......UHB	EA	1
124		XCFZZ		97499	204-060-551-7	OIL SYSTEM INSTL USBL EFF 62-1872 THRU 62-1915 SEE FIG.6 FOR NHA.......UHB	EA	1
124		XCFZZ		97499	204-060-551-11	OIL SYSTEM INSTL USBL EFF 62-1916 THRU 62-12555 SEE FIG.6 FOR NHA.......UHB	EA	1
124		XCFZZ		97499	204-060-551-15	OIL SYSTEM INSTL USBL EFF 63-8500 & SUBSEQUENT SEE FIG.6 FOR NHA.......UHB	EA	1
124		XCFZZ		97499	204-060-551-23	OIL SYSTEM INSTL USBL EFF 64-14101 THRU 64-14191 SEE FIG.6 FOR NHA.......UHC,UHM	EA	1
124		XCFZZ		97499	204-060-551-25	OIL SYSTEM INSTL USBL EFF 65-9416 & SUBSEQUENT SEE FIG.6 FOR NHA.......UHC,UHM	EA	1
124	1	PAOZZ	5306-00-150-9101	88044	AN5-6A	.BOLT,MACHINE.......UHB,UHC,UHM	EA	4
124	2	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT.......UHB,UHC,UHM	EA	8
124	3	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.......UHB,UHC,UHM	EA	4
124	4	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE.......UHB,UHC,UHM	EA	8
124	5	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT.......UHB,UHC,UHM	EA	8
124	6	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT.......UHB,UHC,UHM	EA	24
124	7	PAOZZ	4730-00-278-2779	88044	AN938D10	.TEE,BOSS.......UHB,UHC,UHM	EA	1
124	8	PBOZZ	4730-00-809-6003	96906	MS24399D15	.REDUCER,TUBE.......UHB,UHC,UHM	EA	1
124	9	PBOZZ	5310-00-282-7834	88044	AN924-10D	.NUT,PLAIN,HEXAGON.......UHB,UHC,UHM	EA	1
124	10	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED.......UHB,UHC,UHM	EA	5
124	11	PBOZZ	4730-00-803-5050	96906	MS24394D10	.ELBOW,TUBE.......UHB,UHC,UHM	EA	1
124	12	PAOZZ	4730-00-277-2459	88044	AN939D10	.ELBOW,BOSS.......UHB,UHC,UHM	EA	1
124	13	PAOZZ	4730-00-866-1829	96906	MS24392D10	.NIPPLE,TUBE.......UHB,UHC,UHM	EA	1
124	14	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING, EXTENDED WASHER,HEXAGON.......UHB,UHC,UHM	EA	8
124	15	PAOZZ	5330-00-847-1120	97499	204-060-184-1	.GASKET.......UHB,UHC,UHM	EA	2
124	16	PAOZZ	4730-00-898-0007	97499	204-060-567-1	.ADAPTER,FITTING.......UHB,UHC,UHM	EA	2
124	17	PAODD	2935-00-737-6606	97499	204-060-549-5	.COOLER,LUBRICATING.......UHB,UHC,UHM	EA	1
124	18	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE.......UHB,UHC,UHM	EA	8
124	18A	MOOZZ		27462	8531804	.GASKET.......UHM,UHC	EA	2
124	18B	MOOZZ		27462	8531834	.GASKET.......UHM,UHC	EA	2
124	19	PAOOO	1560-00-987-3313	97499	204-060-443-17	.DUCT ASSEMBLY,OIL SYSTEM.......UHB,UHC,UHM	EA	1
124	20	PAOZZ	5310-00-623-5989	80205	NAS1031A3	..NUT,SELF-LOCKING,PL.......UHB,UHC,UHM	EA	16
124	21	PAOZZ	5306-00-656-0358	88044	AN3-6A	.BOLT,MACHINE.......UHB,UHC,UHM	EA	8
124	22	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT.......UHB,UHC,UHM	EA	8
124	23	PAOZZ	5365-00-842-0670	97499	204-060-555-1	.SHIM.......UHB,UHC,UHM	EA	V
124	24	PAOZZ	1560-00-731-8039	97499	204-060-554-1	.MOUNT ASSEMBLY,OIL.......UHB	EA	1
124	25	PAOZZ	5306-00-274-2119	88044	AN3-5A	.BOLT,MACHINE.......UHB,UHC,UHM	EA	3
124	26	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT.......UHB,UHC,UHM	EA	6
124	27	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.......UHB,UHC,UHM	EA	3
124	28	PAODD	2935-00-066-0300	97499	204-060-448-3	.TURBINE FAN,ENGINE.......UHB,UHC,UHM	EA	1
124	28	PAODD	2935-00-066-0300	60399	A20152-3	.TURBINE FAN,ENGINE SEE FIG.127 FOR BREAKDOWN....UHB,UHC,UHM	EA	1
124	28	PAODD	2935-00-066-0300	89513	132101-1	.TURBINE FAN,ENGINE SEE FIG.126 FOR BREAKDOWN....UHB,UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
124	29	PAOZZ	2935-00-066-0301	97499	204-060-692-1	.SCREEN ASSY,TURBINE..............................UHB,UHC,UHM	EA	1
124	30	PAOZZ	5306-00-151-1422	88044	AN4-12A	.BOLT,MACHINE..............................UHB,UHC,UHM	EA	4
124	31	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..............................UHB,UHC,UHM	EA	12
124	32	PAOZZ	5325-00-263-6632	96906	MS35489-6	.GROMMET,NONMETALLIC..............................UHB,UHC,UHM	EA	8
124	33	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX..............................UHB,UHC,UHM	EA	4

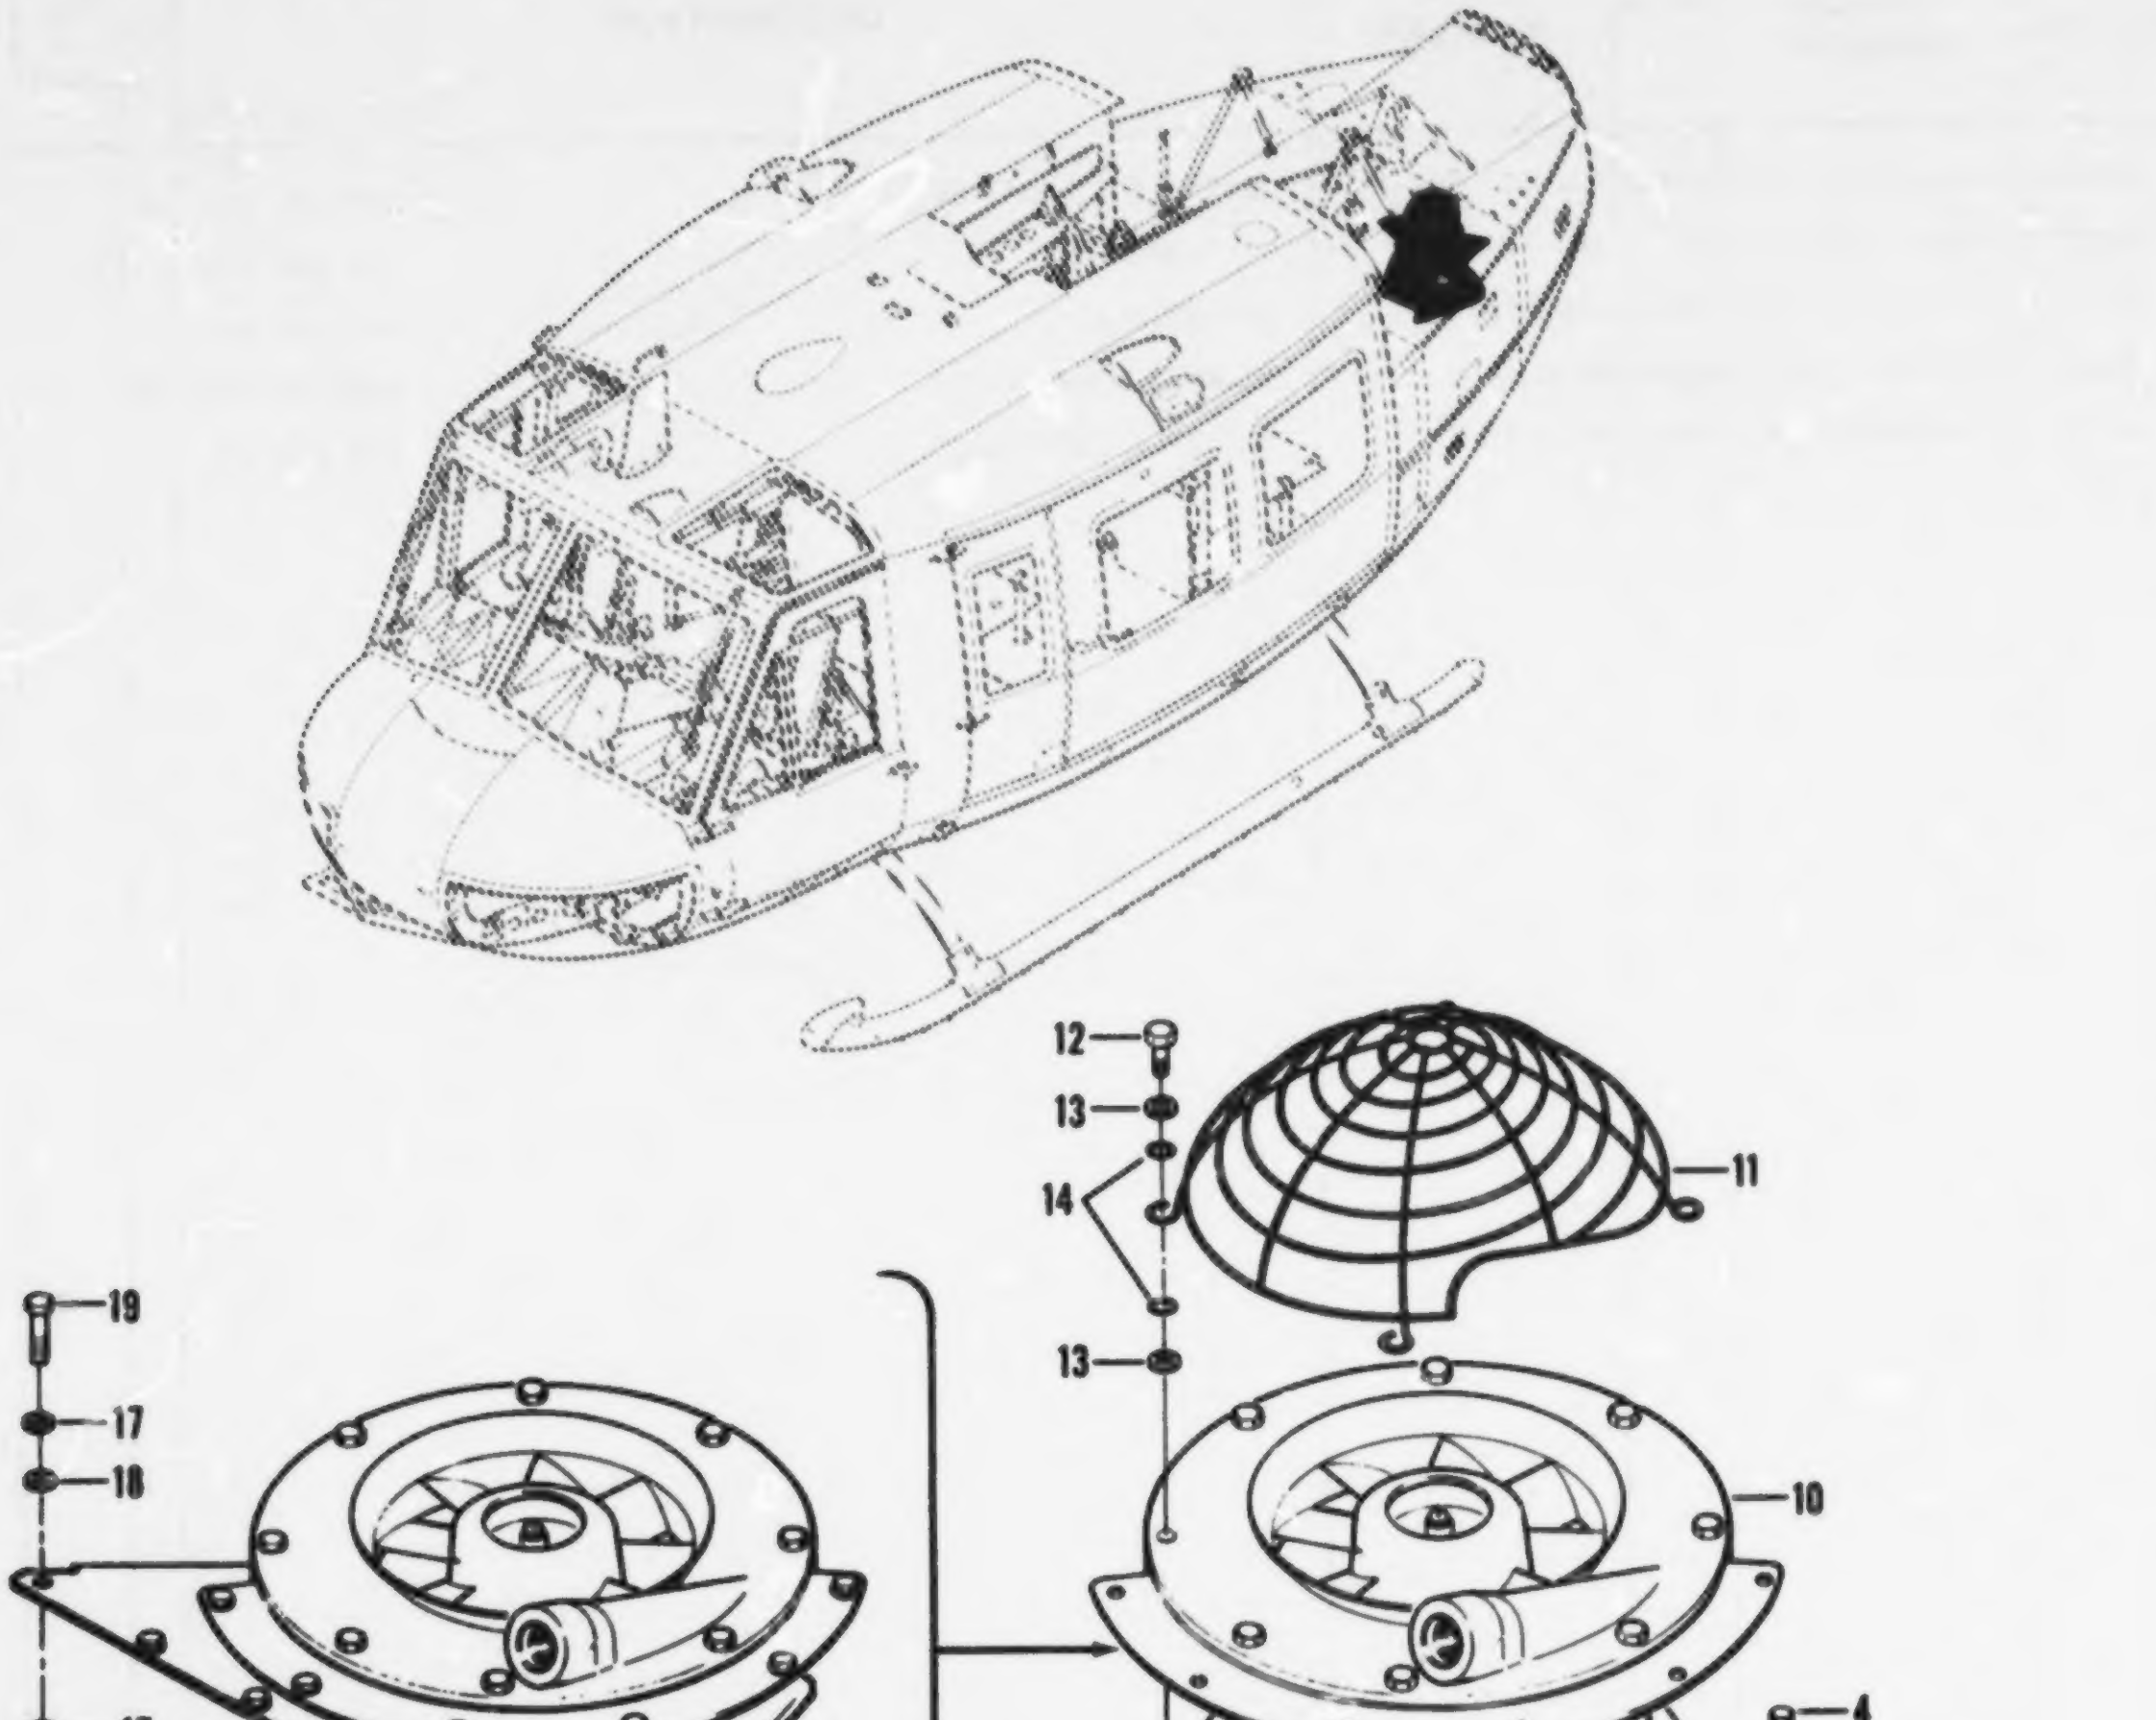
12
13
14
11
13
19
17
18
10
17
16
20
4
5
13
15
8
9
4
5
7B
7A
3
2
1
3
2
7
5
4
4
5
6
1

Figure 125. Oil System Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
125		XCFZZ		97499	205-060-500-5	OIL SYSTEM INSTL USBL EFF 62-2106 THRU 62-12372 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
125		XCFZZ		97499	205-060-500-7	OIL SYSTEM INSTL USBL EFF 63-8739 THRU 63-13002 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
125		XCFZZ		97499	205-060-500-9	OIL SYSTEM INSTL USBL EFF 64-13492 THRU 64-13901 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
125		XCFZZ		97499	205-060-500-11	OIL SYSTEM INSTL USBL EFF 65-9565 THRU 65-12895 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
125		XCFZZ		97499	205-060-500-13	OIL SYSTEM INSTL USBL EFF 66-746 THRU 68-16342 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
125		XCFZZ		97499	205-060-500-17	OIL SYSTEM INSTL USBL EFF 68-16343 THRU 68-16625 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
125		XCFZZ		97499	205-060-500-19	OIL SYSTEM INSTL USBL EFF 69-15000 THRU 71-20339 SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
125		XCFZZ		97499	205-060-500-23	OIL SYST INSTL USBL EFF 72-21465 & SUBSEQUENT SEE FIG.7 FOR NHA........UHE,UHH,UHV,UHX	EA	1
125	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	8
125	2	PAOZZ	5330-00-847-1120	97499	204-060-184-1	.GASKET........UHE,UHH,UHV,UHX	EA	2
125	3	PAOZZ	4730-00-989-6074	96906	MS20760D10	.ADAPTER,STRAIGHT, TUBE TO BOSS........UHE,UHH,UHV,UHX	EA	2
125	4	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	24
125	5	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	24
125	6	MFOZZ	1560-00-403-0594	97499	205-060-110-1	.FILLER,LAMINATED........UHE,UHH,UHV,UHX	EA	2
125	7	PAODD	2935-00-410-5884	97499	204-060-549-9	.COOLER,LUBRICATING........UHE,UHH,UHV,UHX	EA	1
125	7A	MOOZZ		27462	8531804	..GASKET........UHE,UHH,UHV,UHX	EA	2
125	7B	MOOZZ		27462	8531834	..GASKET........UHE,UHH,UHV,UHX	EA	2
125	8	PAOOO	1560-00-956-9925	97499	205-060-595-1	.DUCT ASSEMBLY,OIL COOLER........UHE,UHH,UHV,UHX	EA	1
125	9	PAOZZ	5310-00-734-1850	96906	MS21071L3	..NUT,SELF-LOCKING,PL........UHE,UHH,UHV,UHX	EA	16
125	10	PAODD	2935-00-066-0300	97499	204-060-448	.TURBINE FAN,ENGINE........UHE,UHH,UHV,UHX	EA	1
125	10	PAODD	2935-00-916-2528	60399	A20152-4	.TURBINE FAN,ENGINE SEE FIG.127 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
125	10	PAODD	2935-00-939-8428	89513	132101-1	.TURBINE FAN,ENGINE SEE FIG.126 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
125	11	PAOZZ	2935-00-066-0301	97499	204-060-592-1	.SCREEN ASSEMBLY........UHE,UHH,UHV,UHX	EA	1
125	12	PAOZZ	5306-00-151-1422	88044	AN4-12A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	4
125	13	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	12
125	14	PAOZZ	5325-00-263-6632	96906	MS35489-6	.GROMMET,NONMETALLIC........UHE,UHH,UHV,UHX	EA	8
125	15	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	4
125	16	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHE,UHH,UHV,UHX	EA	11
125	17	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	V
125	18	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT........UHE,UHH,UHV,UHX	EA	V
125	19	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE........UHE,UHH,UHV,UHX	EA	11
125	20	MFOZZ	1560-00-981-3088	97499	205-060-536-1	.BRACKET,TRANSMISSIO U/O PN 205-060-500-5,-7, -9,& -11 ....UHE,UHH,UHV,UHX	EA	1
125	20	AODDD	2935-00-134-5061	97499	205-060-509-3	.SUPPORT,OIL COOLER U/O PN 205-060-500-13,-17, -19,& -23 ....UHE,UHH,UHV,UHX	EA	1

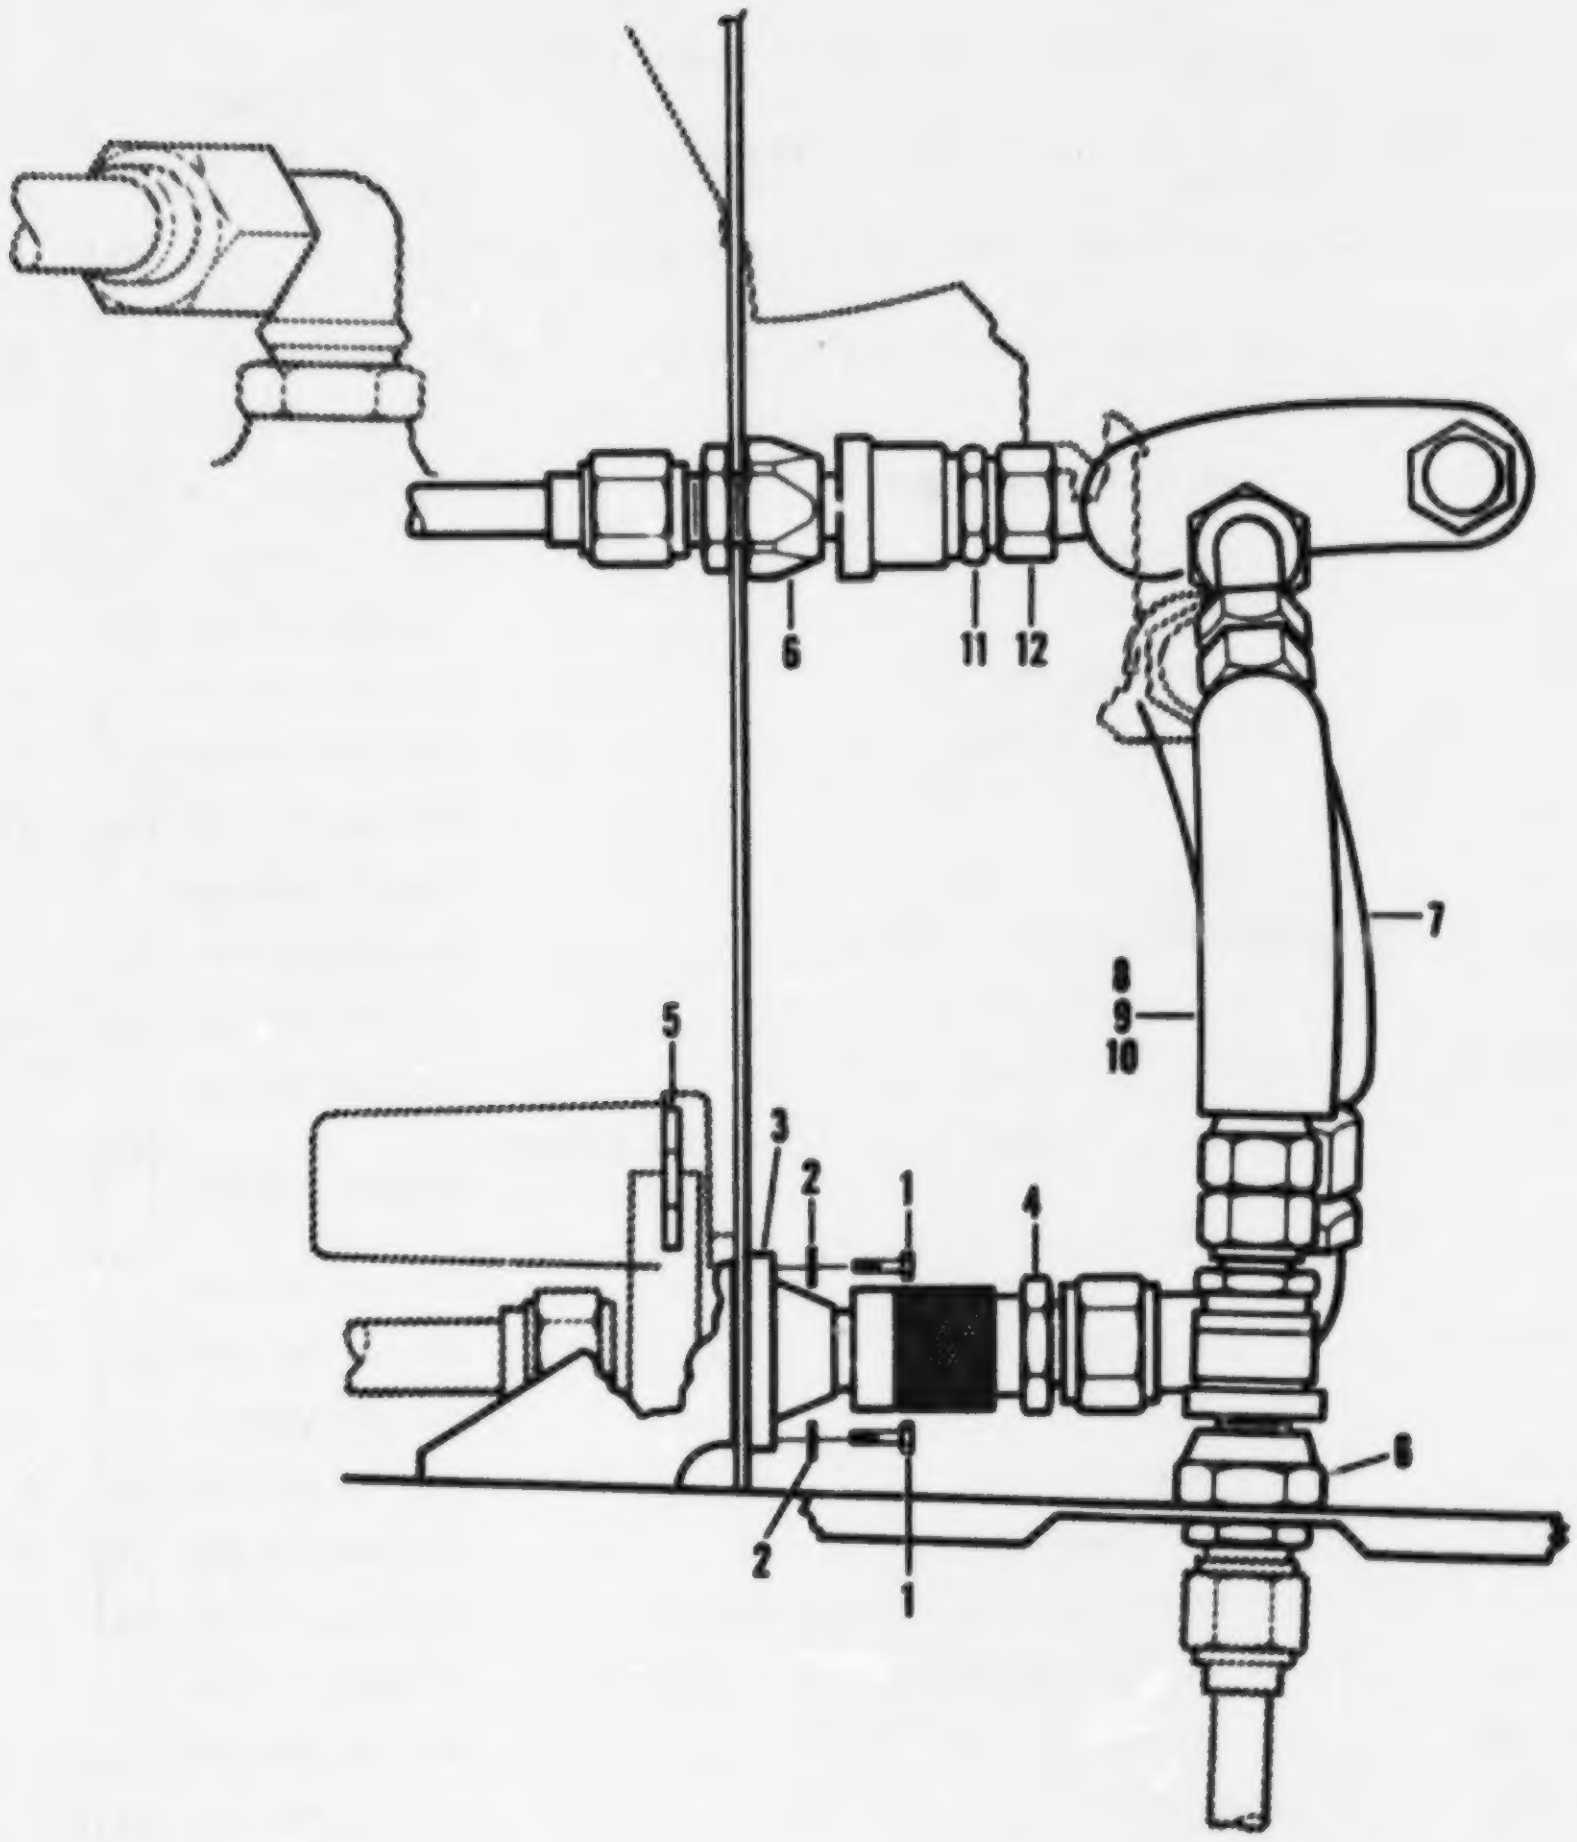
6
11
12
7
8
9
10
5
3
2
1
4
1
2
6

Figure 125A. Modification Kit, Oil System

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
125A		XCFZZ	1560-01-008-2866	97499	204-704-068-1	MODIFICATION KIT SEE FIG.317A FOR BALANCE OF BREAKDOWN ....UHB,UHC,UHM	EA	1
125A	1	PAOZZ	5306-00-151-0785	88044	AN3-7A	.BOLT,MACHINE........UHB,UHC,UHM	EA	4
125A	1	PAOZZ	5306-00-151-0776	88044	AN3-20A	.BOLT,MACHINE........UHB,UHC,UHM	EA	4
125A	2	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT........UHB,UHC,UHM	EA	4
125A	3	PAOZZ	4730-01-069-1300	97499	204-063-001-1	.COUPLING,HALF........UHB,UHC,UHM	EA	1
125A	4	PAOZZ	4730-01-069-1302	97499	204-063-002-1	.COUPLING,HALF........UHB,UHC,UHM	EA	1
125A	5	PAOZZ	5330-00-580-6272	97499	204-060-533-1	.GASKET........UHB,UHC,UHM	EA	1
125A	6	PAOZZ	4730-01-069-1303	97499	204-063-003-1	.COUPLING,HALF........UHB,UHC,UHM	EA	2
125A	7	MFOZZ		97499	70-009M000G160	.HOSE ASSEMBLY........UHB,UHC,UHM	EA	1
125A	8	MFOZZ		97499	70-009L000H106	.HOSE ASSEMBLY........UHB,UHC,UHM	EA	1
125A	9	PAOZZ	4730-00-235-1511	88044	AN919-20	.REDUCER,TUBE........UHB,UHC,UHM	EA	1
125A	10	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORME........UHB,UHC,UHM	EA	1
125A	11	PAOZZ	4730-01-044-3192	97499	204-063-004-1	.COUPLING,HALF,QUICK........UHB,UHC,UHM	EA	2
125A	12	MFOZZ		97499	70-009L000H114	.HOSE ASSEMBLY........UHB,UHC,UHM	EA	1

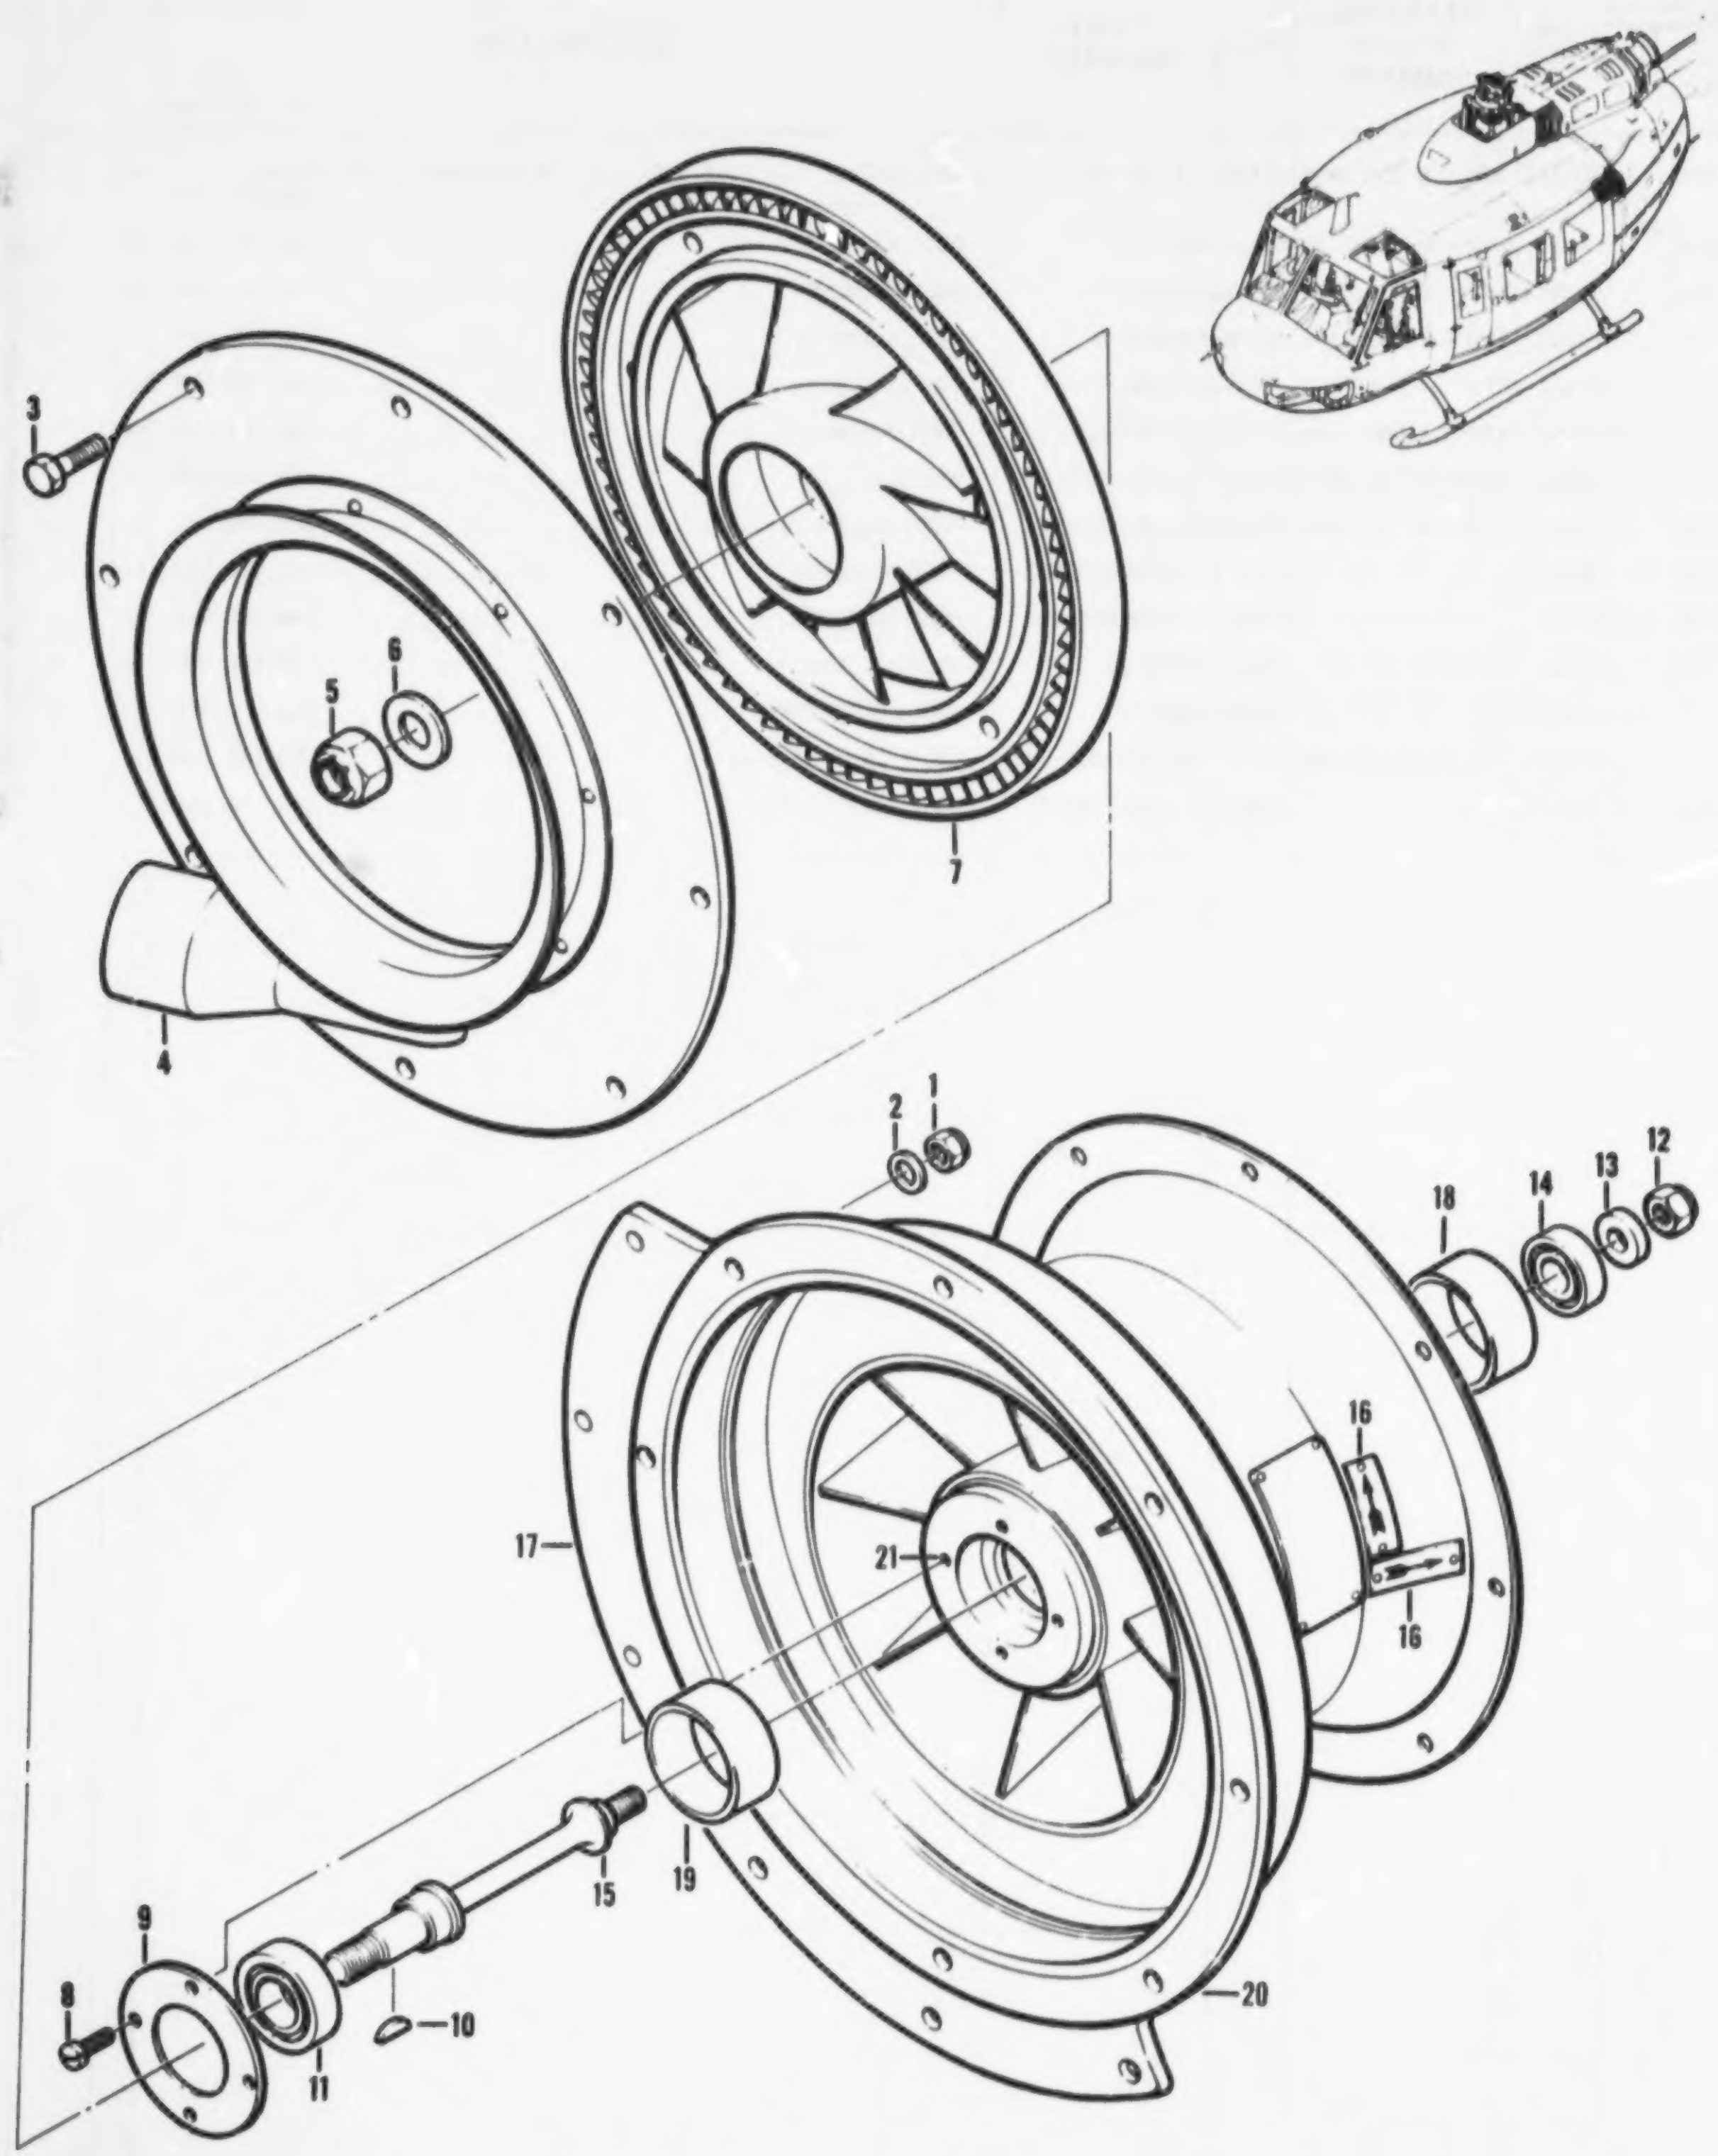
3
6
5
7
4
2
1
18
14
13
12
16
17
21
16
16
15
19
9
8
10
11
20

Figure 126. Turbine Fan, Engine

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
126		PAODO	2935-00-066-0300	89513	132101-1	TURBINE FAN,ENGINE SEE FIG. 124 & 125 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	1	PAFZZ	5310-00-877-5796	96906	MS21044N4	.NUT,SELF-LOCKING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
126	2	PAFZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
126	3	PAFZZ	5306-00-515-8064	88044	AN4-7A	.BOLT,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
126	4	XAFZZ		89513	R3468-1	.COVER AND BELLMOUTH........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	5	PAFZZ	5310-00-088-0552	96906	MS21044N7	.NUT,SELF-LOCKING,HE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	6	PAFZZ	5310-00-167-0822	88044	AN960-716	.WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	7	PBFZZ	1560-00-968-4642	89513	R3466-1	.FAN AND TURBINE ASSEMBLY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	8	PAFZZ	5305-00-150-9211	88044	AN502-10-10	.SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	9	PAFZZ	3110-00-963-0205	89513	R3648-1	.PLATE,RETAINING BEARING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	10	PAFZZ	5315-00-616-5514	96906	MS35756-6	.KEY,WOODRUFF........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	11	PAFDO	3110-01-019-4292	89513	J33C32	.BEARING,BALL,ANNULA........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	12	PAFZZ	5310-00-088-0553	96906	MS21044N6	.NUT,SELF-LOCKING HEXAGON........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	13	PAFZZ	5365-00-965-8541	89513	R2607-1	.WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	14	PAFZZ	3110-01-018-8101	89513	H33C32	.BEARING,BALL,ANNULA........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	15	PAFZZ	1560-00-967-7670	89513	R3467-1	.SHAFT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	16	PAFZZ	9905-00-954-1968	89513	R2297-1	.PLATE,DESIGNATION........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
126	17	XAFDO		89513	132102-1	.HOUSING ASSEMBLY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	18	PADZZ	3130-00-953-0208	89513	R3011-1	..LINEAR,BEARING, HOUSING REAR ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	19	PADZZ	3130-00-953-0206	89513	R2604-1	..LINEAR,BEARING, HOUSING FRONT ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	20	XAFZZ		89513	132103-1	..HOUSING ASSEMBLY........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
126	21	PAFZZ	5340-00-663-3267	00780	1191-3CNX570	..INSERT,SCREW THREAD........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4

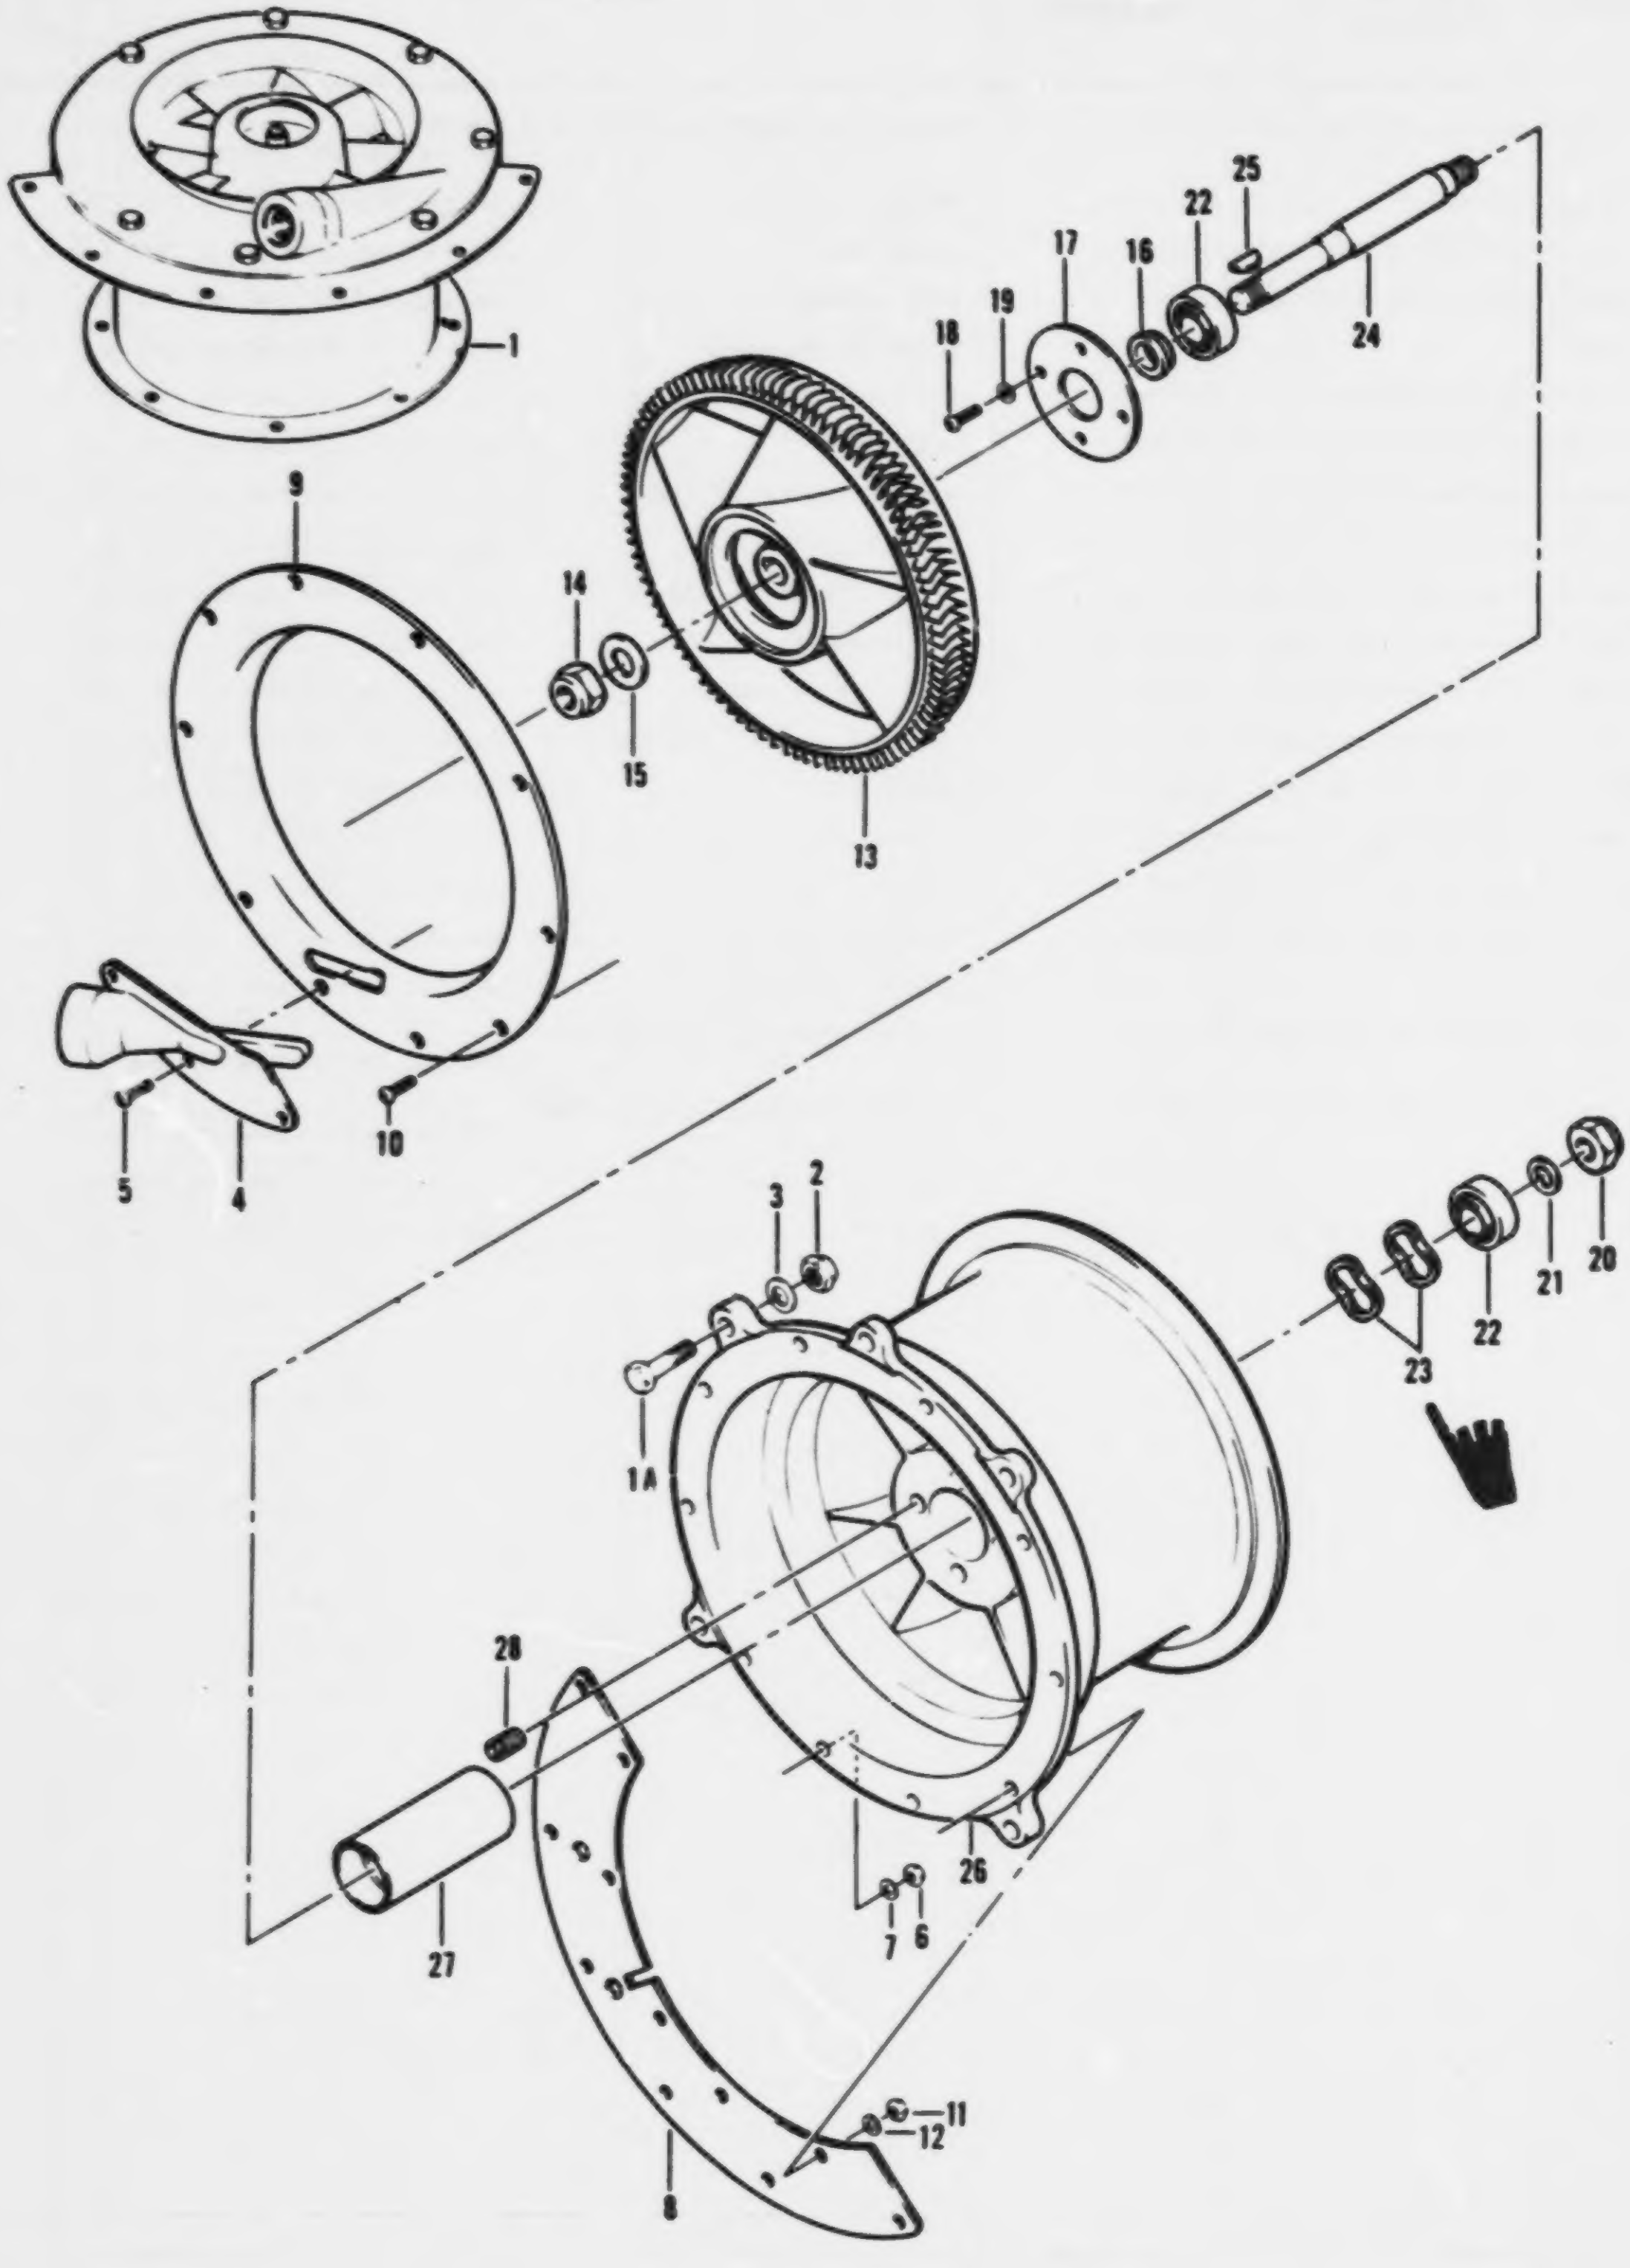
1
9
14
15
13
18
19
17
16
22
25
24
5
4
10
3
2
1A
23
22
21
20
28
27
26
7
6
11
12
8

Figure 127. Turbine Fan, Engine

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
127		PAODO	2935-00-066-0300	60399	A20152-3	TURBINE FAN,ENGINE SEE FIG 124 & 125 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
127	1	XAOFF		60399	A20153	TURBINE FAN ASSY	UHE,UHH,UHM,UHV,UHX	EA	1
127	1A	PAFZZ	5306-00-515-8064	88044	AN4-7A	..BOLT,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	6
127	2	PAFZZ	5310-00-877-5796	96906	MS21044N4	..NUT,SELF-LOCKING	UHE,UHH,UHM,UHV,UHX	EA	6
127	3	PAFZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	6
127	4	PAFZZ	2935-00-058-1129	60399	22285	..NOZZLE,TURBINE	UHE,UHH,UHM,UHV,UHX	EA	1
127	5	PAFZZ	5305-00-984-6197	96906	MS35206-249	..SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	3
127	6	PAFZZ	5310-00-857-5564	96906	MS21045L08	..NUT,SELF-LOCKING,HE	UHE,UHH,UHM,UHV,UHX	EA	3
127	7	PAFZZ	5310-00-515-8058	88044	AN960-8	..WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	3
127	8	PAFZZ	2935-00-410-2465	60399	21898	..PLATE,MOUNTING TURBINE	UHE,UHH,UHM,UHV,UHX	EA	1
127	9	PAFZZ	2935-00-437-7461	60399	21802	..INLET RING, TURBINE	UHE,UHH,UHM,UHV,UHX	EA	1
127	10	PAFZZ	5305-00-984-6196	96906	MS35206-248	..SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	7
127	11	PAFZZ	5310-00-857-5564	96906	MS21045L08	..NUT,SELF-LOCKING,HE	UHE,UHH,UHM,UHV,UHX	EA	7
127	12	PAFZZ	5310-00-515-8058	88044	AN960-8	..WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	7
127	13	PAFZZ	2935-00-410-2463	60399	21794	..IMPELLER TURBINE	UHE,UHH,UHM,UHV,UHX	EA	1
127	14	PAFZZ	5310-00-943-9897	96906	MS21083N9	..NUT,SELF-LOCKING	UHE,UHH,UHM,UHV,UHX	EA	1
127	15	PAFZZ	5310-00-167-0824	88044	AN960-916	..WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	1
127	16	PAFZZ	3120-00-115-1282	60399	21804	..BUSHING,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	1
127	17	PBFZZ	3110-00-112-1316	60399	21803	..PLATE,RETAINING, BEARING	UHE,UHH,UHM,UHV,UHX	EA	1
127	18	PAFZZ	5305-00-145-7011	88044	AN503-8-8	..SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	4
127	19	PAFZZ	5310-00-515-8058	88044	AN960-8	..WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	4
127	20	PAFZZ	5310-00-943-9897	96906	MS21083N9	..NUT,SELF-LOCKING,HE	UHE,UHH,UHM,UHV,UHX	EA	1
127	21	PAFZZ	5310-00-126-5085	60399	11115-71	..WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	1
127	22	PAFZZ	3110-00-068-0079	21335	P203NPPFS50160	..BEARING,BALL,ANNULA	UHE,UHH,UHM,UHV,UHX	EA	REF
127	22	PAFZZ	3110-00-068-0079	60399	15819-11	..BEARING,BALL,ANNULA	UHE,UHH,UHM,UHV,UHX	EA	2
127	23	PAFZZ	4130-00-851-8110	92830	W1543-017	..SPRING,WASHER	UHE,UHH,UHM,UHV,UHX	EA	2
127	24	PAFZZ	2935-00-065-1997	60399	21795	..SHAFT,SHOULDERED	UHE,UHH,UHM,UHV,UHX	EA	1
127	25	PAFZZ	5315-00-616-5515	96906	MS35756-5	..KEY,WOODRUFF	UHE,UHH,UHM,UHV,UHX	EA	1
127	26	PAFDO	2935-00-176-3922	60399	A25647	..HOUSING ASSY,TURBIN	UHE,UHH,UHM,UHV,UHX	EA	1
127	27	PBDZZ	3120-00-182-8490	60399	21801	...BUSHING,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	1
127	28	PBDZZ	5340-00-990-9916	83324	SR162L	...INSERT,SCREW THR	UHE,UHH,UHM,UHV,UHX	EA	4

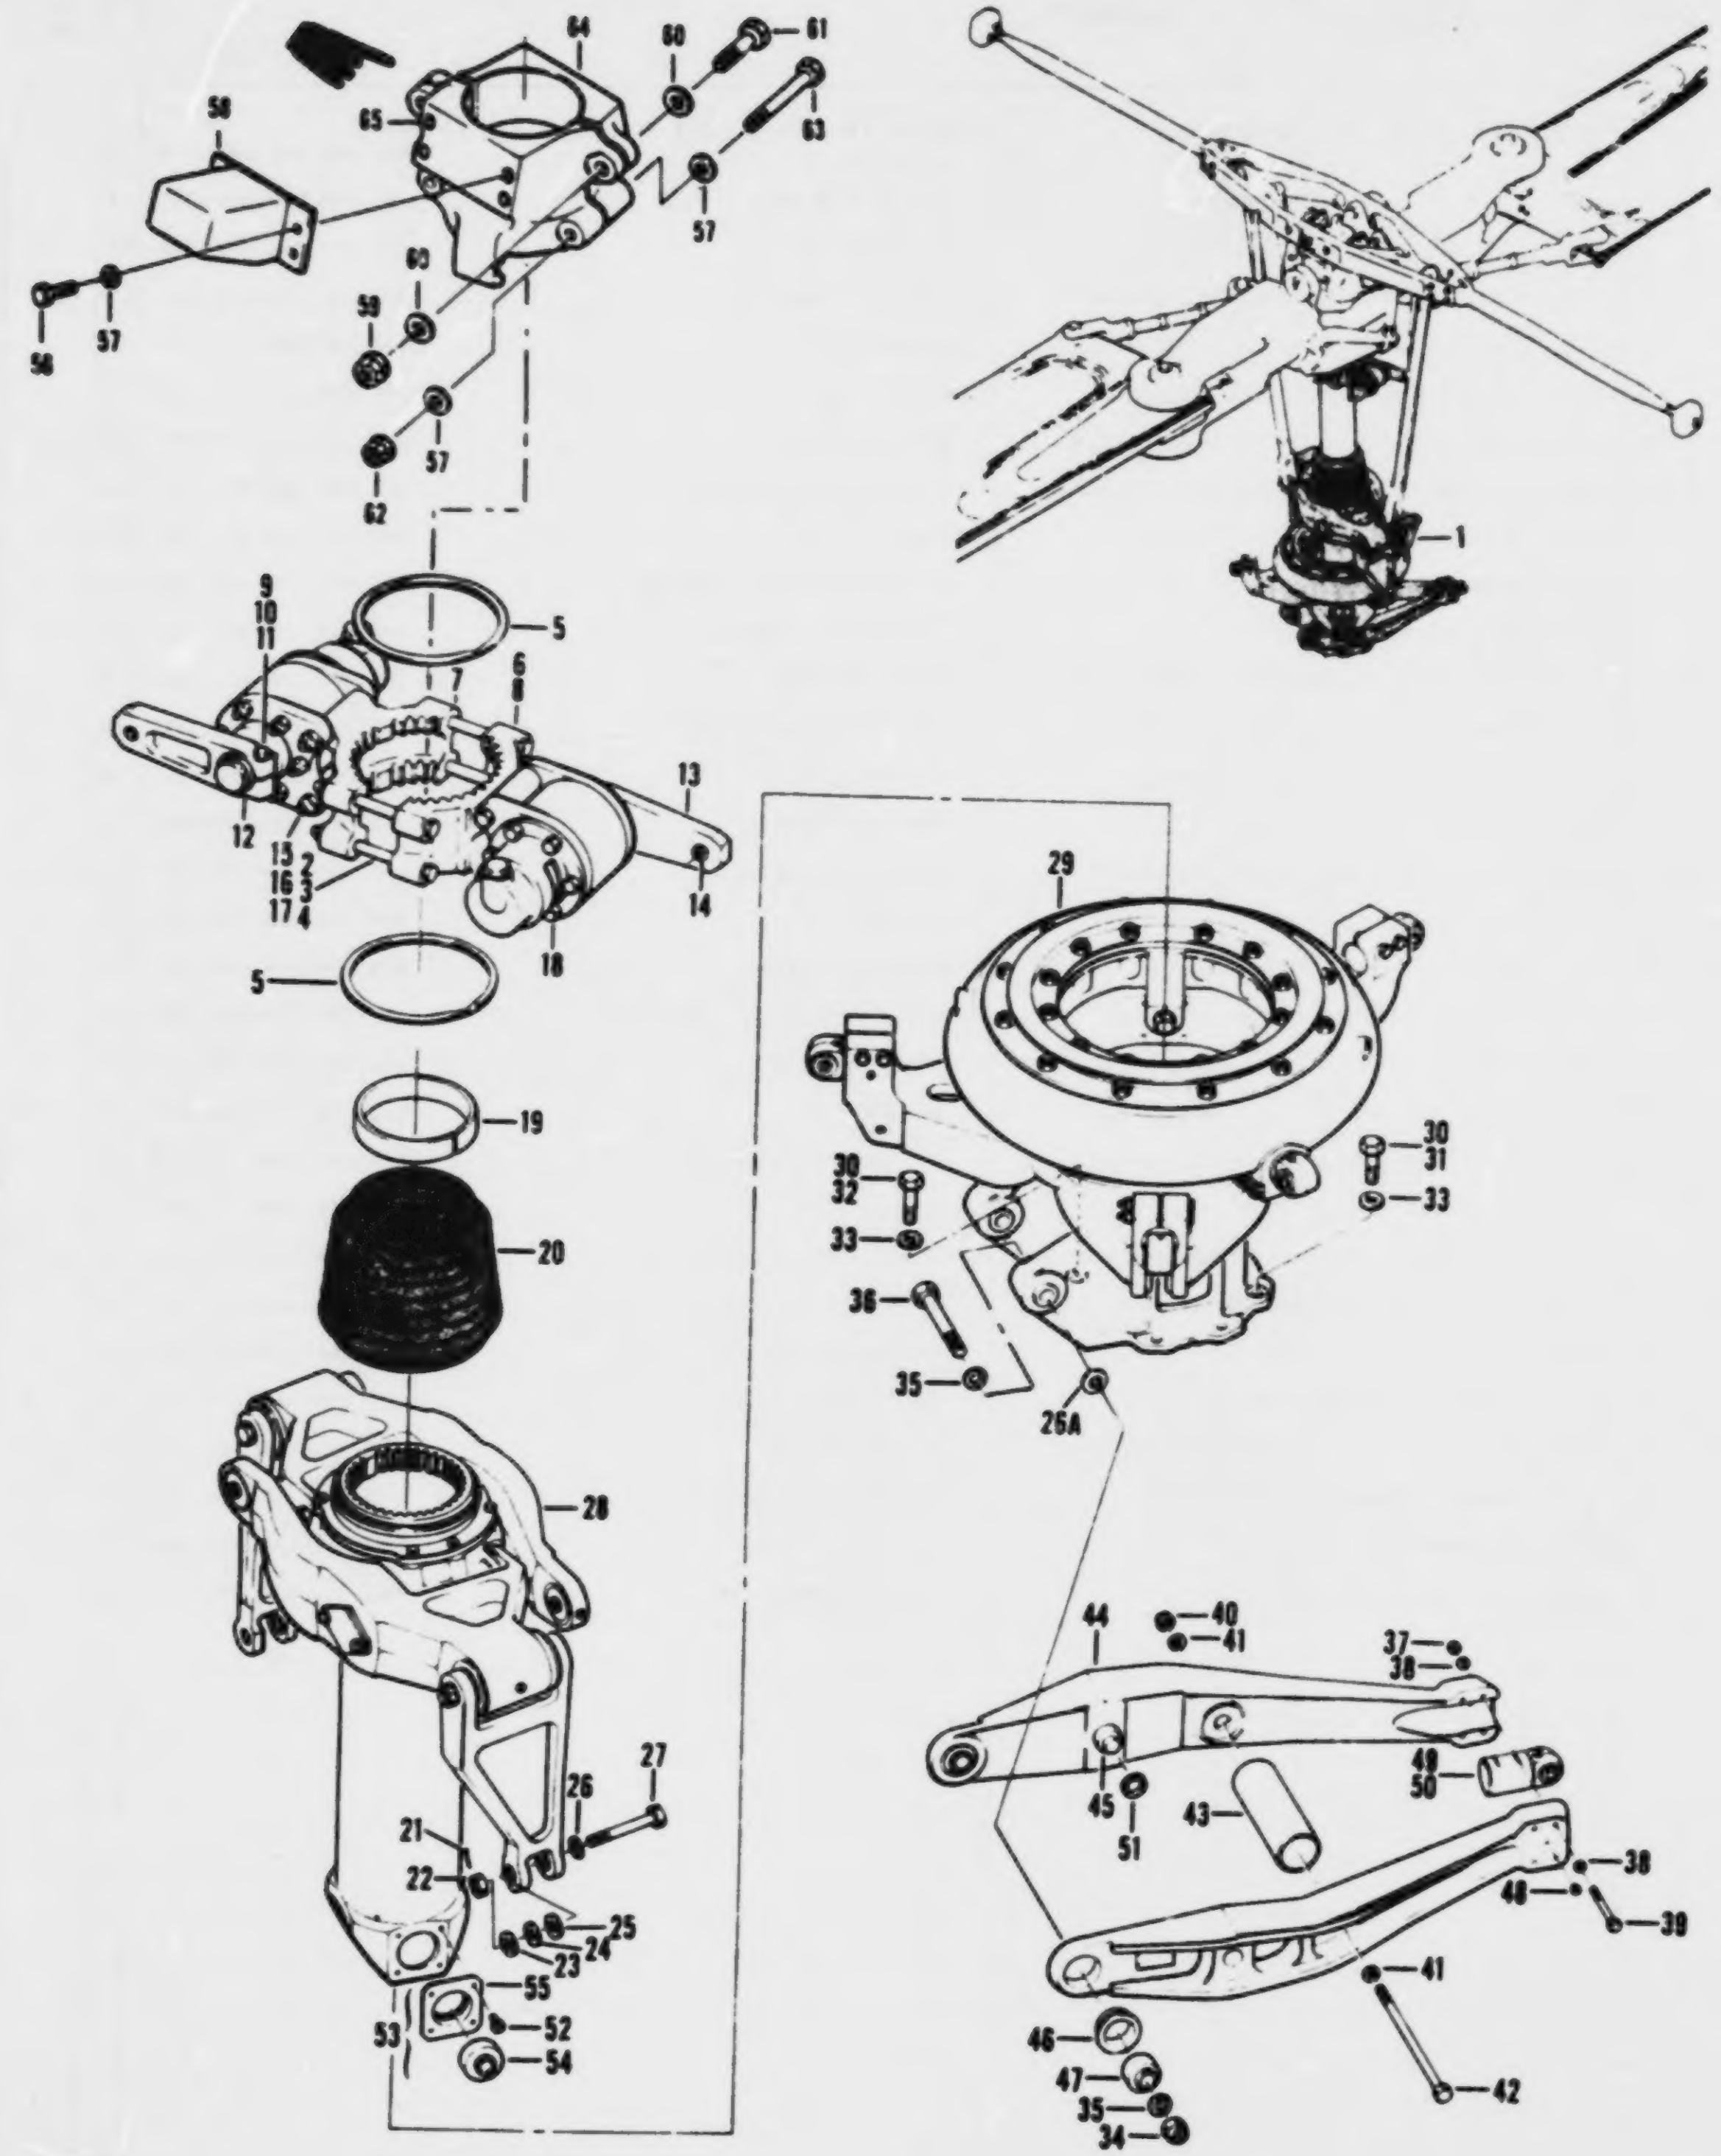
64
60
61
58
65
63
57
60
59
56
57
57
62
1
9
10
11
5
6
8
7
13
12
15
16
17
2
3
4
14
18
5
19
20
29
30
31
30
32
33
33
36
35
26A
28
44
40
41
37
38
27
26
21
22
25
24
23
55
52
53
54
49
50
45
51
43
38
48
39
41
46
47
35
34
42

Figure 128. Pylon Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
						GROUP 05 ROTORS		
128		XCFZZ		97499	204-200-009-5	PYLON INSTL USBL EFF 60-3546 THRU 60-3576 SEE FIG.4 FOR NHA	EA	1
128		XCFZZ		97499	204-200-009-17	PYLON INSTL USBL EFF 60-3577 THRU 60-3619 SEE FIG.4 FOR NHA	EA	1
128		XCFZZ		97499	204-200-009-9	PYLON INSTL USBL EFF 61-686 THRU 61-723 SEE FIG.4 FOR NHA	EA	1
128		XCFZZ		97499	204-200-009-13	PYLON INSTL USBL EFF 61-724 THRU 61-803 SEE FIG.4 FOR NHA	EA	1
128		XCFZZ		97499	204-200-009-21	PYLON INSTL USBL EFF 62-1872 THRU 62-1996 SEE FIG.4 FOR NHA	EA	1
128		XCFZZ		97499	204-200-009-29	PYLON INSTL USBL EFF 62-1997 THRU 62-12555 SEE FIG 4 FOR NHA	EA	1
128		XCFZZ		97499	204-200-009-37	PYLON INSTL USBL EFF 63-8500 THRU 63-8658 SEE FIG.4 FOR NHA	EA	1
128		XCFZZ		97499	204-200-009-53	PYLON INSTL USBL EFF 63-8659 & SUBSEQUENT SEE FIG 4 FOR NHA	EA	1
128		XCFZZ		97499	205-200-003-5	PYLON INSTL USBL EFF 62-2106 THRU 62-12372 SEE FIG.5 FOR NHA SEE FIG 163 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
128		XCFZZ		97499	205-200-003-9	PYLON INSTL USBL EFF 63-8739 THRU 63-8803 SEE FIG.5 FOR NHA SEE FIG 163 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
128		XCFZZ		97499	205-200-003-13	PYLON INSTL USBL EFF 63-8804 THRU 63-8859 SEE FIG.5 FOR NHA SEE FIG 163 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
128		XCFZZ		97499	205-200-003-17	PYLON INSTL USBL EFF 63-12956 THRU 72-21554 SEE FIG.5 FOR NHA SEE FIG 163 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
128		XCFZZ		97499	205-200-003-55	PYLON INSTL USBL EFF 72-21555 & SUBSEQUENT SEE FIG.5 FOR NHA SEE FIG 163 FOR BALANCE OF BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
128	1	XCFZZ		97499	204-200-009-7	.PYLON ASSY U/O PN 204-200-009-5	EA	1
128	1	XCFZZ		97499	204-200-009-11	.PYLON ASSY U/O PN 204-200-009-9	EA	1
128	1	XCFZZ		97499	204-200-009-15	.PYLON ASSY U/O PN 204-200-009-13	EA	1
128	1	XCFZZ		97499	204-200-009-19	.PYLON ASSY U/O PN 204-200-009-17	EA	1
128	1	XCFZZ		97499	204-200-009-23	.PYLON ASSY U/O PN 204-200-009-21	EA	1
128	1	XCFZZ		97499	204-200-009-31	.PYLON ASSY U/O PN 204-200-009-29	EA	1
128	1	XCFZZ		97499	204-200-009-39	.PYLON ASSY U/O PN 204-200-009-37 & -53	EA	1
128	1	XCFZZ		97499	205-200-003-7	.PYLON ASSY U/O PN 205-200-003-5 ....UHE,UHH,UHV,UHX	EA	1
128	1	XCFZZ		97499	205-200-003-11	.PYLON ASSY U/O PN 205-200-003-9 & -13 ....UHE,UHH,UHV,UHX	EA	1
128	1	XCFZZ		97499	205-200-003-19	.PYLON ASSY U/O PN 205-200-003-17 ....UHE,UHH,UHV,UHX	EA	1
128	1	XCFZZ		97499	205-200-003-53	.PYLON ASSY U/O PN 205-200-003-55 ....UHE,UHH,UHV,UHX	EA	1
128	2	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	4
128	3	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	8
128	4	PAOZZ	5306-00-151-1405	88044	AN4-33A	..BOLT,MACHINE .... UHE,UHH,UHV,UHX	EA	4
128	5	PAOZZ	5365-00-912-8344	80756	RS387CD	..RING,RETAINING .... UHE,UHH,UHV,UHX	EA	2
128	6	PAOZZ	1615-00-925-4143	97499	204-010-922-9	..ADAPTER ASSEMBLY .... UHE,UHH,UHV,UHX	EA	1
128	7	XAOZZ		97499	204-010-922-5	...ADAPTER,STABILIZER .... UHE,UHH,UHV,UHX	EA	1
128	8	XAOZZ		97499	204-010-922-7	...ADAPTER,DAMPER .... UHE,UHH,UHV,UHX	EA	1
128	9	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	2
128	10	PAOZZ	5310-00-183-4406	88044	AN960PD10	..WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	4
128	11	PAOZZ	5306-00-182-2006	88044	AN3H15A	..BOLT,MACHINE .... UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
128	12	PAOZZ	5365-00-804-2025	96906	MS16624-1087	..RING,RETAINING	UHE,UHH,UHV,UHX	EA	4
128	13	PAOFF	1615-00-830-9745	97499	204-C11-313-1	..LEVER ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
128	14	PAFZZ	3120-00-690-1141	97499	22-006-15-34-16	...BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
128	15	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	4
128	16	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	8
128	17	PAOZZ	5306-00-151-1409	88044	AN4-27A	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
128	18	PAODD	1650-00-157-6838	97499	204-010-937-7	..DAMPENER,FLUTTER STABILIZER BAR	UHE,UHH,UHV,UHX	EA	2
128	18	PAODD	1650-00-157-6843	92003	SGT520-6	..DAMPER ASSEMBLY, STABILIZER BAR INTERCH 1650-00-157-6843 SEE FIG. 146 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
128	19	PAOZZ	1615-00-830-9727	97499	204-010-457-5	..SPACER,BOOT	UHE,UHH,UHV,UHX	EA	1
128	20	PAOZZ	1615-00-419-5944	97499	204-011-462-1	..BOOT DUST AND MOISTURE SEAL	UHE,UHH,UHV,UHX	EA	1
128	21	PAOZZ	5315-00-234-1856	96906	MS24665-155	..PIN,COTTER	UHE,UHH,UHV,UHX	EA	2
128	22	PAOZZ	5310-00-167-1286	88044	AN310-5	..NUT,PLAIN	UHE,UHH,UHV,UHX	EA	2
128	23	PAOZZ	5310-00-167-0836	88044	AN960-516L	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
128	24	PAOZZ	5310-00-167-0820	88044	AN960-516	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
128	25	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
128	26	PAOZZ	5310-00-595-7078	96906	MS20002C5	..WASHER,RECESSED	UHE,UHH,UHV,UHX	EA	2
128	26A	PAOZZ	5365-00-483-2053	97499	120-008C24E16	..SHIM	UHE,UHH,UHV,UHX	EA	2
128	27	PAOZZ	5306-00-052-6322	80205	NAS1305-300	..BOLT,SHEAR	UHE,UHH,UHV,UHX	EA	2
128	28	PAODD	1615-00-454-8828	97499	204-011-401-11	..SCISSORS AND SLEEVE ASSEMBLY SEE FIG. 141 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
128	29	PAODD	1615-00-060-1062	97499	204-011-400-11	..SWASHPLATE,CONTROL ASSEMBLY SEE FIG. 143 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
128	30	PAOZZ	5306-00-182-2025	88044	AN5H6A	..BOLT,MACHINE		EA	8
128	31	PAOZZ	5306-00-182-2025	88044	AN5H6A	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	6
128	32	PAOZZ	5306-00-180-2752	88044	AN5H13	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
128	33	PAOZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	8
128	34	PAOZZ	5310-00-857-5562	96906	MS21045L8	..NUT,CASTELLATED,	UHE,UHH,UHV,UHX	EA	2
128	35	PAOZZ	5310-00-167-0823	88044	AN960-816	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
128	36	PAOZZ	5306-00-182-1404	88044	AN178-22A	..BOLT,CLOSE TOLERANC	UHE,UHH,UHV,UHX	EA	2
128	37	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	4
128	38	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	8
128	39	PAOZZ	5306-00-182-2038	88044	AN4H22A	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
128	40	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
128	41	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
128	42	PAOZZ	5306-01-014-4222	88044	AN6H55	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
128	43	PAOZZ	5365-00-731-8078	97499	204-011-447-1	..SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1
128	44	PAOFF	1615-00-471-5918	97499	212-010-403-5	..LEVER ASSY PYL	UHE,UHH,UHV,UHX	EA	2
128	45	PAFZZ	5315-00-236-6884	97499	212-010-402-3	...PIN,SHOULDER	UHE,UHH,UHV,UHX	EA	1
128	46	PAFZZ	3130-00-470-2770	97499	204-010-422-23	...LINER,BEARING U/O PN 212-010-403-5	UHE,UHH,UHV,UHX	EA	1
128	47	PAFZZ	3110-00-042-0440	96906	MS27641-8	...BEARING,BALL	UHE,UHH,UHV,UHX	EA	1
128	48	XDOZZ	4730-00-277-4780	80205	NAS516-1	...FITTING,LUBRICATION	UHE,UHH,UHV,UHX	EA	1
128	49	PAOZZ	1615-00-157-5729	84955	KSP9001-5	..TRUNNION ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
128	50	PAOZZ	1615-01-026-8349	50632	KSP9057	...SNUBBER,TRUNNION, ROTOR	UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
128	51	PAOZZ	5365-00-838-4774	97499	120-008C28E20	..SHIM.	UHE,UHH,UHV,UHX	EA	2
128	52	PAOZZ	5305-00-150-9213	88044	AN502-10-6	..SCREW, MACHINE.	UHE,UHH,UHV,UHX	EA	8
128	53	PAOFF	3130-00-830-9756	97499	204-011-443-1	..BEARING UNIT, BALL.	UHE,UHH,UHV,UHX	EA	2
128	54	PAFZZ	3110-00-027-4028	96906	MS27641-10	...BEARING, BALL.	UHE,UHH,UHV,UHX	EA	1
128	55	PAFZZ	3110-00-830-9757	97499	204-011-443-3	...PLATE, RETAINING, BEARING.	UHE,UHH,UHV,UHX	EA	1
128	56	PAOZZ	5306-01-167-2399	80205	NAS6604H2	.BOLT USBL ON PN204-012-101-137, -141.	UHE,UHH,UHV,UHX	EA	8
128	57	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER USBL ON PN 204-012-101-137, -141.	UHE,UHH,UHV,UHX	EA	12
128	58	PAOZZ	1615-01-875-8715	97499	204-310-100-105	.SPRING USBL ON PN 204-012-101-137, -141.	UHE,UHH,UHV,UHX	EA	2
128	59	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT USBL ON PN 204-012-101-137, -141.	UHE,UHH,UHV,UHX	EA	2
128	60	PAOZZ	5310-00-141-1795	88044	AN960-616	.WASHER USBL ON PN 204-012-101-137, -141.	UHE,UHH,UHV,UHX	EA	4
128	61	PAOZZ	5306-01-213-5367	80205	NAS6606-16	.BOLT USBL ON PN 204-012-101-137, -141.	UHE,UHH,UHV,UHX	EA	2
128	62	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT USBL ON PN 204-012-101-137, -141.	UHE,UHH,UHV,UHX	EA	2
128	63	PAOZZ	5306-01-170-3460	80205	NAS6604-36	.BOLT USBL ON PN 204-012-101-137, -141.	UHE,UHH,UHV,UHX	EA	2
128	64	PAODD	1615-01-875-8713	97499	204-011-208-101	.SUPPORT USBL ON PN 204-012-101-137, -141.	UHE,UHH,UHV,UHX	EA	2
128	65	PADZZ	5340-00-529-9262	96906	MS21209F4-15L	..INSERT, SCREW THREAD.	UHE,UHH,UHV,UHX	EA	4
128		AOODD		97499	204-040-009-15	..TRANSMISSION AND MAST ASSY U/O 204-200-003-7-11-15 AND -19 SEE FIG 150 FOR BREAKDOWN.		EA	1
128		AOODD		97499	204-040-009-21	..TRANSMISSION AND MAST ASSY U/O PN 204-040-009-23 & -31 SEE FIG 150 FOR BRKDN		EA	1
128		AOODD		97499	204-040-009-33	..TRANSMISSION AND MAST ASSY U/O PN 204-040-009-39 SEE FIG 150 FOR BRKDN.		EA	1
128		AOODD		97499	205-040-001-7	..TRANSMISSION AND MAST ASSY U/O PN 205-200-003-7 SEE FIG 150 FOR BRKDN.	UHE,UHH,UHV,UHX	EA	1
128		AOODD		97499	205-040-001-13	..TRANSMISSION AND MAST ASSY U/O PN 205-200-003-11 & -19 SEE FIG 150 FOR BRKDN	UHE,UHH,UHV,UHX	EA	1
128		XCFZZ		97499	204-075-019-1	..ELECTRICAL INSTL PYLON SEE FIG 275 FOR BREAKDOWN.		EA	1
128		XCFZZ		97499	205-075-003-3	..ELECTRICAL INSTL PYLON U/O PN 205-200-003-7 & -11 SEE FIG 276 FOR BRKDN.	UHE,UHH,UHV,UHX	EA	1
128		XCFZZ		97499	205-075-003-5	..ELECTRICAL INSTL PYLON U/O PN 205-200-003-19 SEE FIG 276 FOR BRKDN.	UHE,UHH,UHV,UHX	EA	1

Fig 129 Not Used

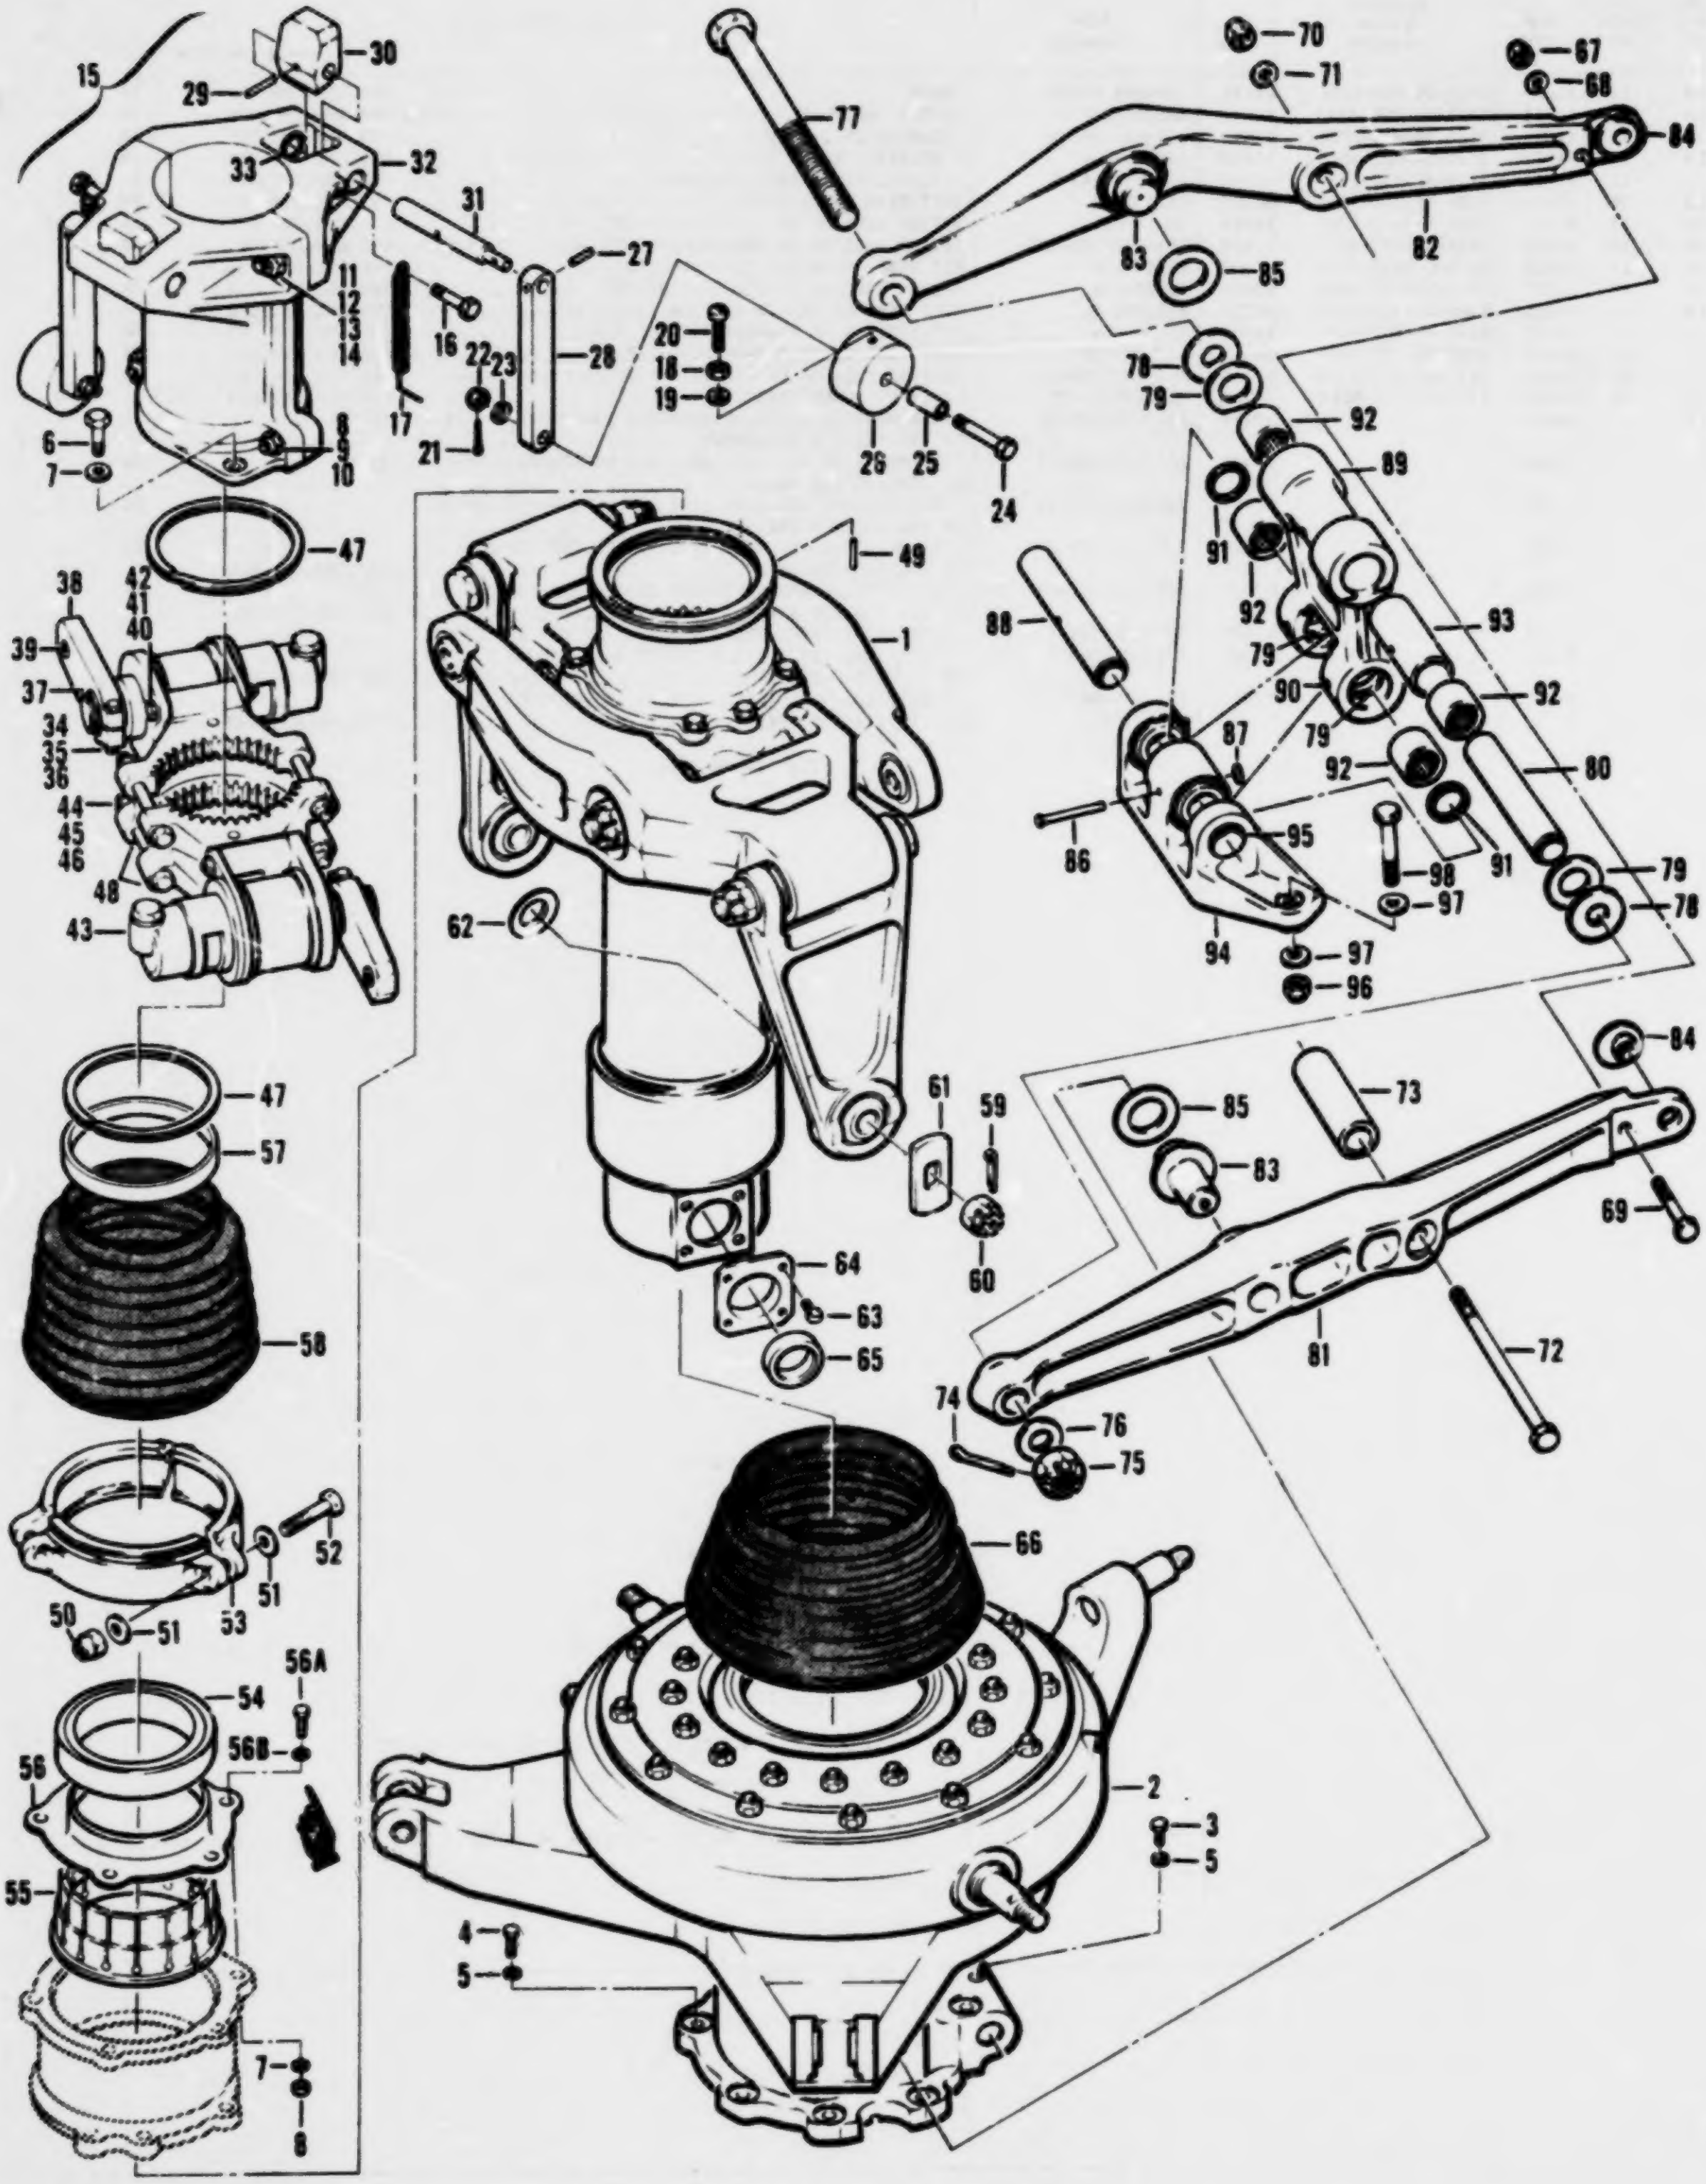
15
29
30
33
32
31
27
11
12
13
14
16
22
23
28
17
21
20
18
19
26
25
24
6
7
8
9
10
47
49
1
38
42
41
40
39
37
34
35
36
44
45
46
48
43
62
77
70
71
67
68
84
83
85
82
78
79
92
89
91
88
93
90
87
80
86
95
98
97
94
96
57
58
61
59
60
64
63
65
73
69
72
81
74
76
75
66
52
51
50
53
56A
56B
54
56
55
2
3
5
4

Figure 130. Pylon Installation

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
130		XCFZZ		97499	540-200-002-13	PYLON INSTL SEE FIG.4 FOR NHA	UHC,UHM	EA	1
130		XCFZZ		97499	540-200-002-15	.PYLON ASSY	UHC,UHM	EA	1
130	1	PAOOO	1560-00-436-1335	97499	540-011-451-5	..SCISSORS AND SLEEVE ASSEMBLY SEE FIG 142 FOR BREAKDOWN	UHC,UHM	EA	1
130	2	PAOOO	1615-00-911-9292	97499	540-011-450-7	..SWASHPLATE AND SUPP ASSEMBLY SEE FIG.144 FOR BREAKDOWN	UHC,UHM	EA	1
130	3	PAOZZ	5306-00-924-7782	80205	NAS1306-30H	..BOLT,SHEAR	UHC,UHM	EA	2
130	4	PAOZZ	5306-00-923-3773	80205	NAS1306-10H	..BOLT,SHEAR	UHC,UHM	EA	6
130	5	PAOZZ	5310-00-167-0821	88044	AN960-616	..WASHER,FLAT	UHC,UHM	EA	8
130	6	PAOZZ	5306-00-182-2016	88044	AN4H5A	..BOLT,MACHINE	UHC,UHM	EA	2
130	7	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT	UHC,UHM	EA	2
130	8	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHC,UHM	EA	2
130	9	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT	UHC,UHM	EA	4
130	10	PAOZZ	5306-00-182-1962	88044	AN4H14A	..BOLT,MACHINE	UHC,UHM	EA	2
130	11	PAOZZ	5310-00-857-5562	96906	MS21045L8	..NUT,SELF-LOCKING,HE	UHC,UHM	EA	2
130	12	PAOZZ	5310-00-167-0823	88044	AN960-816	..WASHER,FLAT	UHC,UHM	EA	4
130	13	PAOZZ	5306-00-208-3571	88044	AN8-16A	..BOLT MACHINE	UHC,UHM	EA	2
130	14	PAOZZ	5365-00-912-1894	97499	120-005C32-17	..SHIM	UHC,UHM	EA	2
130	15	AOOZZ	1615-00-902-5004	97499	540-011-468-3	..STOP ASSEMBLY,DYNAM	UHC,UHM	EA	2
130	16	PAOZZ	5306-00-182-1529	88044	AN4H11	...BOLT,MACHINE	UHC,UHM	EA	1
130	17	PAOZZ	5360-00-903-5484	97499	540-011-472-1	...SPRING,HELICAL,EXTE	UHC,UHM	EA	1
130	18	PAOZZ	5310-00-208-7589	88044	AN316-4R	...NUT,PLAIN,HEXAGON	UHC,UHM	EA	1
130	19	PAOZZ	5310-00-141-1795	88044	AN960-416	...WASHER,FLAT	UHC,UHM	EA	1
130	20	PAOZZ	5305-00-150-9706	88044	AN501A416-18	...SCREW,MACHINE	UHC,UHM	EA	1
130	21	PBOZZ	5315-00-839-5820	96906	MS24665-134	...PIN,COTTER	UHC,UHM	EA	1
130	22	PAOZZ	5310-00-167-1285	88044	AN310-4	...NUT,CASTELLATED,HEX CASTELLATED	UHC,UHM	EA	1
130	23	PAOZZ	5310-00-141-1795	88044	AN960-416	...WASHER,FLAT	UHC,UHM	EA	1
130	24	PAOZZ	5306-00-182-1912	88044	AN4H17	...BOLT,MACHINE	UHC,UHM	EA	1
130	25	PAOZZ	3120-00-928-6298	97499	540-011-493-1	...BEARING,SLEEVE	UHC,UHM	EA	1
130	26	PAOZZ	1615-00-948-9704	97499	540-011-470-3	...WEIGHT,CENTRIFUGAL FLAPPING STOP	UHC,UHM	EA	1
130	27	PAOZZ	5315-00-814-3531	96906	MS16562-50	...PIN,SPRING	UHC,UHM	EA	1
130	28	PAOZZ	3040-00-995-2475	97499	540-011-469-3	...CONNECTING LINK,RIG	UHC,UHM	EA	1
130	29	PAOZZ	5315-00-810-3702	96906	MS16562-38	...PIN,SPRING	UHC,UHM	EA	1
130	30	PAOZZ	1615-00-906-6426	97499	540-011-476-1	...STOP,FLAP RESTRAINT ROTOR	UHC,UHM	EA	1
130	31	PAOZZ	1615-00-932-5111	97499	540-011-471-5	...SHAFT,STRAIGHT	UHC,UHM	EA	1
130	32	PAOOO	1615-00-906-6430	97499	540-011-466-1	...SUPPORT ASSEMBLY,FL RESTRAINT,MAIN ROTOR	UHC,UHM	EA	1
130	33	PAOZZ	3120-00-904-4624	97499	540-011-473-1	....BUSHING,SLEEVE	UHC,UHM	EA	2
130	34	PAOZZ	5310-00-807-1474	96906	MS21042L3	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHC,UHM	EA	2
130	35	PAOZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT	UHC,UHM	EA	4
130	36	PAOZZ	5306-00-151-0779	88044	AN3-15A	..BOLT,MACHINE	UHC,UHM	EA	2
130	37	PAOZZ	5365-00-804-2025	96906	MS16624-1087	..RING,RETAINING	UHC,UHM	EA	2
130	38	PAOOO	1615-00-906-6427	97499	540-011-308-5	..LEVER,REMOTE CONTRO	UHC,UHM	EA	2
130	39	PAOZZ	3120-00-781-8926	97499	540-011-421-17	...BUSHING,SLEEVE	UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
130	40	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON................	UHM	EA	4
130	41	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT..	UHM	EA	8
130	42	PAOZZ	5306-00-182-2021	88044	AN4H27A	..BOLT,MACHINE..	UHM	EA	4
130	43	PAODD	1650-00-157-6843	97499	204-010-937-7	..DAMPENER,FLUTTER STABILIZOR BAR..................	UHM	EA	2
130	43	PAODD	1615-00-113-6354	92003	SGT520-6	..DAMPER ASSEMBLY, STABILIZER BAR INTERCH 1650-00-157-6843 SEE FIG. 146 FOR BREAKDOWN..........................	UHM	EA	1
130	44	PAOZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON................	UHM	EA	4
130	45	PAOZZ	5310-00-167-0820	88044	AN960-516	..WASHER,FLAT..	UHM	EA	8
130	46	PAOZZ	5306-00-150-9236	88044	AN5-34A	..BOLT,MACHINE.......................................	UHM	EA	4
130	47	PAOZZ	5365-00-912-8344	80756	RS387CD	..RING,RETAINING.....................................	UHM	EA	2
130	48	PAOZZ	1615-00-919-1899	97499	540-011-307-5	..SUPPORT ASSY,PYLON.................................	UHM	EA	1
130	49	PAOZZ	5315-00-597-4297	96906	MS9048-042	..PIN,SPRING -ALTERNATE-.............................	UHM	EA	1
130	49	PAOZZ	5315-00-949-8277	72962	53-018-078-0750	..PIN,SPRING...	UHM	EA	1
130	50	PAOZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON................	UHM	EA	3
130	51	PAOZZ	5310-00-167-0820	88044	AN960-516	..WASHER,FLAT..	UHM	EA	6
130	52	PAOZZ	5306-00-616-2618	88044	AN5-12A	..BOLT,MACHINE.......................................	UHM	EA	3
130	53	PAOZZ	1615-00-930-5204	97499	540-011-388-1	..CLAMP,ROTOR..	UHM	EA	3
130	54	PAOZZ	1615-00-930-6111	97499	540-011-386-1	..RING,RUBBER..	UHM	EA	1
130	55	PAOZZ	1615-00-064-8568	97499	540-011-384-3	..COLLET SET,ROTOR...................................	UHM	EA	1
130	56	PAOZZ	1615-00-481-3118	97499	209-010-465-1	..RETAINER,PYLON ASSY USE ONLY WITH PN 209-010-464-1 (REF FIG. 142 ITEM 3..........................	UHM	EA	1
130	56A	PAOZZ	5306-00-616-2759	80205	NAS1304-8DH	...BOLT,SHEAR..	UHM	EA	6
130	56B	PAOZZ	5310-00-141-1795	88044	AN960-416	...WASHER,FLAT.......................................	UHM	EA	6
130	57	PAOZZ	1615-00-830-9727	97499	204-010-457-5	..SPACER,BOOT..	UHM	EA	1
130	58	PAOZZ	1615-00-419-5944	97499	204-011-462-1	..BOOT,DUST AND MOIST................................	UHM	EA	1
130	59	PAOZZ	5315-00-234-1864	96906	MS24665-302	..PIN,COTTER...	UHM	EA	1
130	60	PAOZZ	5310-00-871-8758	96906	MS17825-8	..NUT, SELF-LOCKING, CASTELLATED	UHM	EA	2
130	61	PAOZZ	5365-00-776-7004	97499	540-011-440-1	..SPACER,PLATE.......................................	UHM	EA	2
130	62	PAOZZ	5310-00-903-5486	97499	540-011-480-1	..WASHER,CONVEX......................................	UHM	EA	2
130	63	PAOZZ	5306-00-150-9213	88044	AN502-10-6	..SCREW,MACHINE......................................	UHM	EA	8
130	64	PAOFF	3130-00-930-5229	97499	540-011-396-1	..BEARING UNIT,ROLLER................................	UHM	EA	2
130	65	PAFZZ	3110-00-926-4549	60380	MJH161210H	...BEARING,ROLLER,NEED...............................	UHM	EA	1
130	66	PAOZZ	1560-00-792-2324	97499	540-011-427-1	..BOOT DUST AND MOISTURE SEAL........................	UHM	EA	1
130	67	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON................	UHM	EA	1
130	68	PAOZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT..	UHM	EA	1
130	69	PAOZZ	5306-00-182-2038	88044	AN4H22A	..BOLT,MACHINE.......................................	UHM	EA	1
130	70	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX WASHER,HEXAGON................	UHM	EA	1
130	71	PAOZZ	5310-00-167-0821	88044	AN960-616	..WASHER,FLAT..	UHM	EA	1
130	72	PAOZZ	5306-00-167-3851	88044	AN6-55	..BOLT,MACHINE.......................................	UHM	EA	1
130	73	PAOZZ	1615-01-173-7124	97499	209-010-517-101	..SPACER,ROTOR CONTRO................................	UHM	EA	1
130	74	PAOZZ	5315-00-298-1481	96906	MS24665-357	..PIN,COTTER...	UHM	EA	1
130	75	PAOZZ	5310-00-582-6065	81352	AN310-10	..NUT CASTELLATED, HEXAGON...........................	UHM	EA	1
130	76	PAOZZ	5310-00-774-9428	97499	140-007-41-3906	..WASHER,RECESSED....................................	UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE		(7) U/M	(8) QTY INC IN UNIT
130	77	PAOZZ	5306-00-926-5573	80205	NAS1310-1290	..BOLT,SHEAR	UHM	EA	1
130	78	PAOZZ	3120-00-930-5284	97499	540-011-395-1	..BEARING,WASHER,THRU	UHM	EA	2
130	79	PAOZZ	3120-00-930-5222	97499	540-011-394-1	..BEARING,THRUST	UHM	EA	4
130	80	PAOZZ	1615-00-930-5220	97499	540-011-392-1	..SHAFT,ROTOR	UHM	EA	1
130	81	PAOFF	1615-00-930-5230	97499	540-011-495-1	..LEVER ASSY,ROTOR U/W PN 540-011-495-2 ONLY	UHM	EA	1
130	82	PAOFF	1615-00-930-5227	97499	540-011-495-2	..LEVER ASSY,ROTOR U/W PN 540-011-495-1 ONLY	UHM	EA	1
130	83	PAFZZ	1615-00-930-5226	97499	540-011-498-1	...PIN ASSEMBLY,ROTOR	UHM	EA	1
130	84	PAFZZ	3120-00-930-5228	97499	540-011-499-1	...BUSHING,SLEEVE	UHM	EA	1
130	85	PAOZZ	3120-00-930-5221	97499	540-011-394-11	..BEARING,THRUST	UHM	EA	2
130	86	PAOZZ	5315-00-052-8494	96906	MS20392-2C59	..PIN,STRAIGHT HEADED	UHM	EA	1
130	87	PAOZZ	5310-00-167-0834	88044	AN960-10L	..WASHER,FLAT	UHM	EA	1
130	88	PAOZZ	1615-00-930-5208	97499	540-011-392-3	..SHAFT,ROTOR	UHM	EA	1
130	89	PAOFF	1615-00-930-5211	97499	540-011-496-1	..LINK ASSEMBLY,ROTOR	UHM	EA	1
130	90	XDOZZ	4730-00-277-4780	80205	NAS516-1	...FITTING,LUBRICATION	UHM	EA	3
130	91	PAFZZ	1615-00-930-5209	73680	71X7041	...SEAL,ROTOR	UHM	EA	2
130	92	PAFZZ	3110-00-227-2159	80657	B1416OH	...BEARING,ROLLER,NEED	UHM	EA	1
130	93	PAFZZ	5365-00-930-5210	97499	540-011-439-1	...SPACER	UHM	EA	1
130	94	PAOFF	1615-00-930-5218	97499	540-011-438-1	..BRACKET ASSY,ROTOR	UHM	EA	1
130	95	PAFZZ	3120-00-930-5219	97499	540-011-393-1	...BUSHING,ROTOR	UHM	EA	4
130	96	PAOZZ	5310-00-807-1477	96906	MS21042L6	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHM	EA	4
130	97	PAOZZ	5310-00-149-9146	96906	MS20002C6	..WASHER,RECESSED	UHM	EA	8
130	98	PAOZZ	5306-00-851-8927	80205	NAS1306-20DH	..BOLT,SHEAR	UHM	EA	4
130		XCFZZ		97499	204-075-019-9	..ELECTRICAL INSTL PYLON SEE FIG 275 FOR BREAKDOWN	UHM	EA	1
130		XCFZZ		97499	204-075-019-7	..ELECTRICAL INSTL PYLON SEE FIG 275 FOR BREAKDOWN	UHM	EA	1
130		AOOOO		97499	204-040-009-49	..TRANSMISSION AND MAST ASSEMBLY SEE FIG 150 FOR BREAKDOWN	UHM	EA	1

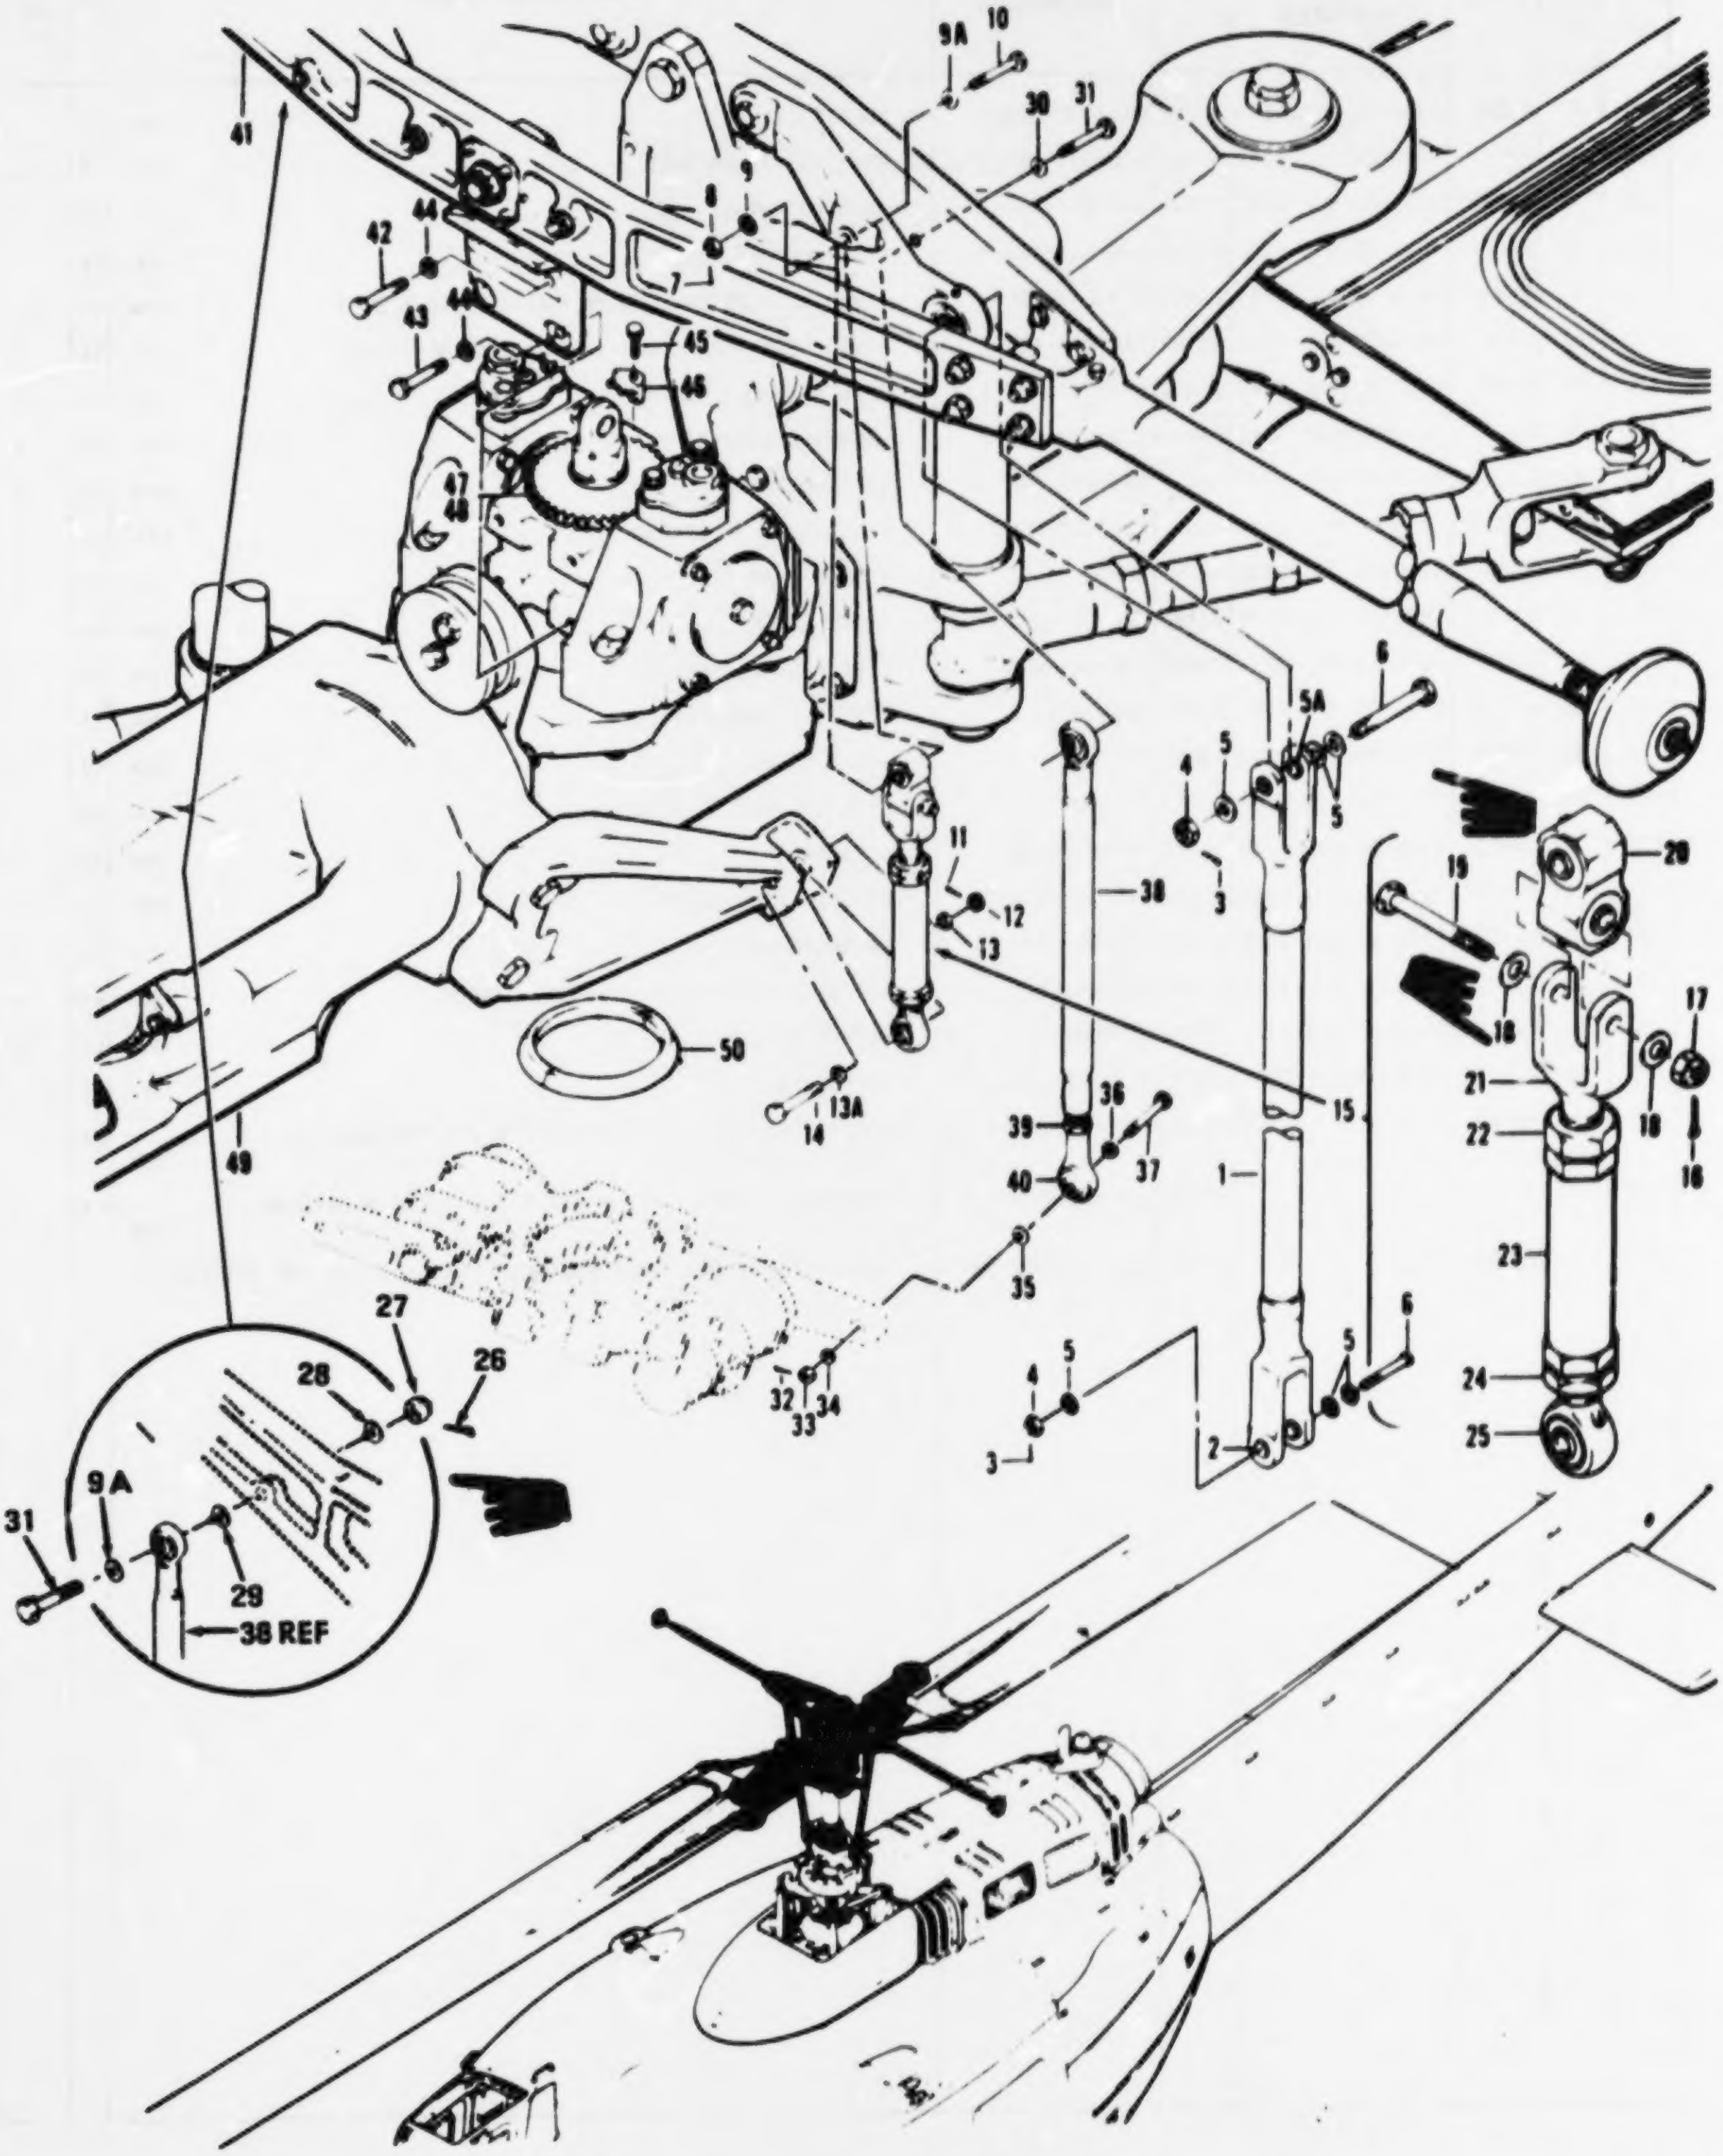
41
9A
10
30
31
9
8
7
42
44
43
44
45
46
47
48
6
5A
5
4
5
3
38
11
12
13
20
19
18
17
50
15
21
18
22
16
13A
14
36
39
37
40
1
49
35
23
6
5
27
28
26
4
5
5
24
32
33
34
2
25
3
31
9 A
29
38 REF

Figure 131. Pylon Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
131		XCFZZ		97499	204-200-009-7	PYLON ASSY USBL EFF 60-3546 THRU 60-3576		EA	1
131		XCFZZ		97499	204-200-009-19	PYLON ASSY USBL EFF 60-3577 THRU 60-3619		EA	1
131		XCFZZ		97499	204-200-009-11	PYLON ASSY USBL EFF 61-686 THRU 61-723		EA	1
131		XCFZZ		97499	204-200-009-15	PYLON ASSY USBL EFF 61-724 THRU 61-803		EA	1
131		XCFZZ		97499	204-200-009-23	PYLON ASSY USBL EFF 62-1872 THRU 62-1996		EA	1
131		XCFZZ		97499	204-200-009-31	PYLON ASSY USBL EFF 62-1997 THRU 62-12555		EA	1
131		XCFZZ		97499	204-200-009-39	PYLON ASSY USBL EFF 63-8500 & SUBSEQUENT		EA	1
131		XCFZZ		97499	205-200-003-7	PYLON ASSY USBL EFF 62-2106 THRU 62-12372	UHE, UHH, UHV, UHX	EA	1
131		XCFZZ		97499	205-200-003-11	PYLON ASSY USBL EFF 63-8739 THRU 63-8859	UHE, UHH, UHV, UHX	EA	1
131		XCFZZ		97499	205-200-003-19	PYLON ASSY USBL EFF 63-12956 THRU 72-21554	UHE, UHH, UHV, UHX	EA	1
131		XCFZZ		97499	205-200-003-53	PYLON ASSY USBL EFF 72-21555 & SUBSEQUENT	UHE, UHH, UHV, UHX	EA	1
131	1	PAOOO	3040-00-497-3445	97499	212-010-404-1	CONNECTING LINK, RIG	UHE, UHH, UHV, UHX	EA	2
131	2	PAFZZ	3120-00-840-2718	97499	204-010-413-41	BUSHING, SLEEVE	UHE, UHH, UHV, UHX	EA	4
131	3	PAOZZ	5315-00-234-1856	96906	MS24665-155	PIN, COTTER	UHE, UHH, UHV, UHX	EA	2
131	4	PAOZZ	5310-00-167-1286	88044	AN310-5	NUT, CASTELLATED, HEX	UHE, UHH, UHV, UHX	EA	2
131	5	PAOZZ	5310-00-167-0820	88044	AN960-516	WASHER, FLAT	UHE, UHH, UHV, UHX	EA	4
131	5A	MFOZZ		81996	5310-UH1-036-1	BUMPER	UHE, UHH, UHV, UHX	EA	1
131	6	PAOZZ	5306-00-964-2111	80205	NAS1306-27D	BOLT, SHEAR	UHE, UHH, UHV, UHX	EA	2
131	7	PAOZZ	5315-00-234-1863	96906	MS24665-300	PIN, COTTER	UHE, UHH, UHV, UHX	EA	1
131	8	PAOZZ	5310-00-582-6058	88044	AN310-6	NUT, PLAIN, CASTELLAT	UHE, UHH, UHV, UHX	EA	1
131	9	PAOZZ	5310-00-167-0821	88044	AN960-616	WASHER, FLAT	UHE, UHH, UHV, UHX	EA	1
131	9A	PAOZZ	5310-00-149-9146	96906	MS20002C6	WASHER, FLAT.		EA	1
131	10	PAOZZ	5306-00-964-3125	80205	NAS1306-34D	BOLT, SHEAR	UHE, UHH, UHV, UHX	EA	1
131	11	PAOZZ	5315-00-234-1863	96906	MS24665-300	PIN, COTTER	UHE, UHH, UHV, UHX	EA	2
131	12	PAOZZ	5310-00-582-6058	81352	AN310-6	NUT, CASTELLATED, HEX U/W PITCH HORN PN 204-011-120-5	UHE, UHH, UHV, UHX	EA	2
131	13	PAOZZ	5310-00-167-0821	88044	AN960-616	WASHER, FLAT	UHE, UHH, UHV, UHX	EA	2
131	13	PAOZZ	5310-00-167-0837	88044	AN960-616L	WASHER, FLAT	UHE, UHH, UHV, UHX	EA	V
131	13A	PAOZZ	5310-00-149-9146	96906	MS20002C6	WASHER, RECESSED	UHE, UHH, UHV, UHX	EA	2
131	14	PAOZZ	5306-01-006-3891	80205	NAS1306-32D	BOLT, SHEAR	UHE, UHH, UHV, UHX	EA	2
131	15	AOOOZ		97499	204-011-127-1	LINK ASSEMBLY, MAIN MIXING LEVER TO PITCH HORN CONTROL	UHE, UHH, UHV, UHX	EA	2
131	16	PAOZZ	5315-00-234-1863	96906	MS24665-300	PIN, COTTER	UHE, UHH, UHV, UHX	EA	1
131	17	PAOZZ	5310-00-582-6058	81352	AN310-6	NUT, CASTELLATED, HEX CASTELLATED	UHE, UHH, UHV, UHX	EA	1
131	16	PAOZZ	5310-00-167-0821	88044	AN960-616	WASHER, FLAT	UHE, UHH, UHV, UHX	EA	1
131	19	PAOZZ	5306-00-851-8928	80205	NAS1306-27DH	BOLT, SHEAR	UHE, UHH, UHV, UHX	EA	1
131	20	PAOZZ	1615-00-829-6855	97499	204-011-128-1	UNIVERSAL CONTROL LEVER	UHE, UHH, UHV, UHX	EA	1
131	21	PAOZZ	5340-01-184-1317	97499	204-011-136-103	CLEVIS, ROD END	UHE, UHH, UHV, UHX	EA	1
131	22	PAOZZ	5310-00-208-6797	80205	NAS509-10	NUT, PLAIN, HEXAGON	UHE, UHH, UHV, UHX	EA	1
131	23	PAOZZ	5340-00-865-7927	97499	204-011-137-1	TURNBUCKLE BODY	UHE, UHH, UHV, UHX	EA	1
131	24	PAOZZ	5310-00-576-8033	80205	NAS509L10	NUT, PLAIN, HEXAGON	UHE, UHH, UHV, UHX	EA	1
131	25	PAOZZ	3120-00-839-0971	97499	204-011-119-1	BEARING, PLAIN, ROD END	UHE, UHH, UHV, UHX	EA	1
131	26	PAOZZ	5315-00-815-1405	96906	MS24665-151	PIN, COTTER	UHE, UHH, UHV, UHX	EA	1
131	27	PAOZZ	5310-00-167-1285	88044	AN310-4	NUT, PLAIN	UHE, UHH, UHV, UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
131	28	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
131	29	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
131	30	PAOZZ	5310-00-131-2667	97499	206-010-324-1	.WASHER,SPRING TENS	UHE,UHH,UHV,UHX	EA	1
131	31	PAOZZ	5306-00-151-0332	88044	AN174H20	.BOLT,CLOSE,TOLER	UHE,UHH,UHV,UHX	EA	1
131	32	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER	UHE,UHH,UHV,UHX	EA	1
131	33	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,CASTELLATED,HEX	UHE,UHH,UHV,UHX	EA	1
131	34	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
131	35	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
131	36	PAOZZ	5310-00-131-2667	97499	206-010-324-1	.WASHER,SPRING TENS	UHE,UHH,UHV,UHX	EA	1
131	37	PAOZZ	5306-00-180-1739	88044	AN174-16	.BOLT,CLOSE TOLERANC	UHE,UHH,UHV,UHX	EA	1
131	38	PAOOO	1560-00-894-6542	97499	204-010-925-9	.TUBE ASSEMBLY, STABILIZER	UHE,UHH,UHV,UHX	EA	2
131	39	PAOZZ	5310-00-167-1302	88044	AN316-7R	..NUT,PLAIN,HEXAGO	UHE,UHH,UHV,UHX	EA	1
131	40	PAOZZ	3120-00-269-4453	97499	47-140-252-3	..BEARING,PLAIN ROD END	UHE,UHH,UHV,UHX	EA	1
131	41	AFOFF		97499	204-011-326-7	.STABILIZER,ROTARY BREAKDOWN	SEE FIG. 133 FOR UHE,UHH,UHV,UHX	EA	1
131	42	PAOZZ	5306-00-206-6270	88044	AN6H12A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
131	43	PAOZZ	5306-00-206-6266	88044	AN6H7A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
131	44	PAOZZ	5310-00-167-0821	96906	AN960-616	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	8
131	45	PAOZZ	5306-00-182-1958	88044	AN4H10A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	1
131	46	PAOZZ	1615-00-625-0039	97499	204-010-132-1	.LOCK,MAST NUT,PYLON	UHE,UHH,UHV,UHX	EA	1
131	47	PAOZZ	5310-00-624-5116	97499	204-010-481-1	.NUT,MAST	UHE,UHH,UHV,UHX	EA	1
131	48	PAOZZ	5310-00-076-9864	97499	204-010-128-1	.WASHER,RECESSED	UHE,UHH,UHV,UHX	EA	1
131	49	AOOOO		97499	204-012-100-21	.HUB AND BLADE ASSY SEE FIG. 136 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
131	50	PAOZZ	1615-00-625-0038	97499	204-010-127-1	.CONE SET,TRUNNION	UHE,UHH,UHV,UHX	EA	1
131		PAOZZ	1615-00-226-5111	97499	204-1629-2	PARTS KIT,ROTOR CON	UHE,UHH,UHV,UHX	EA	1

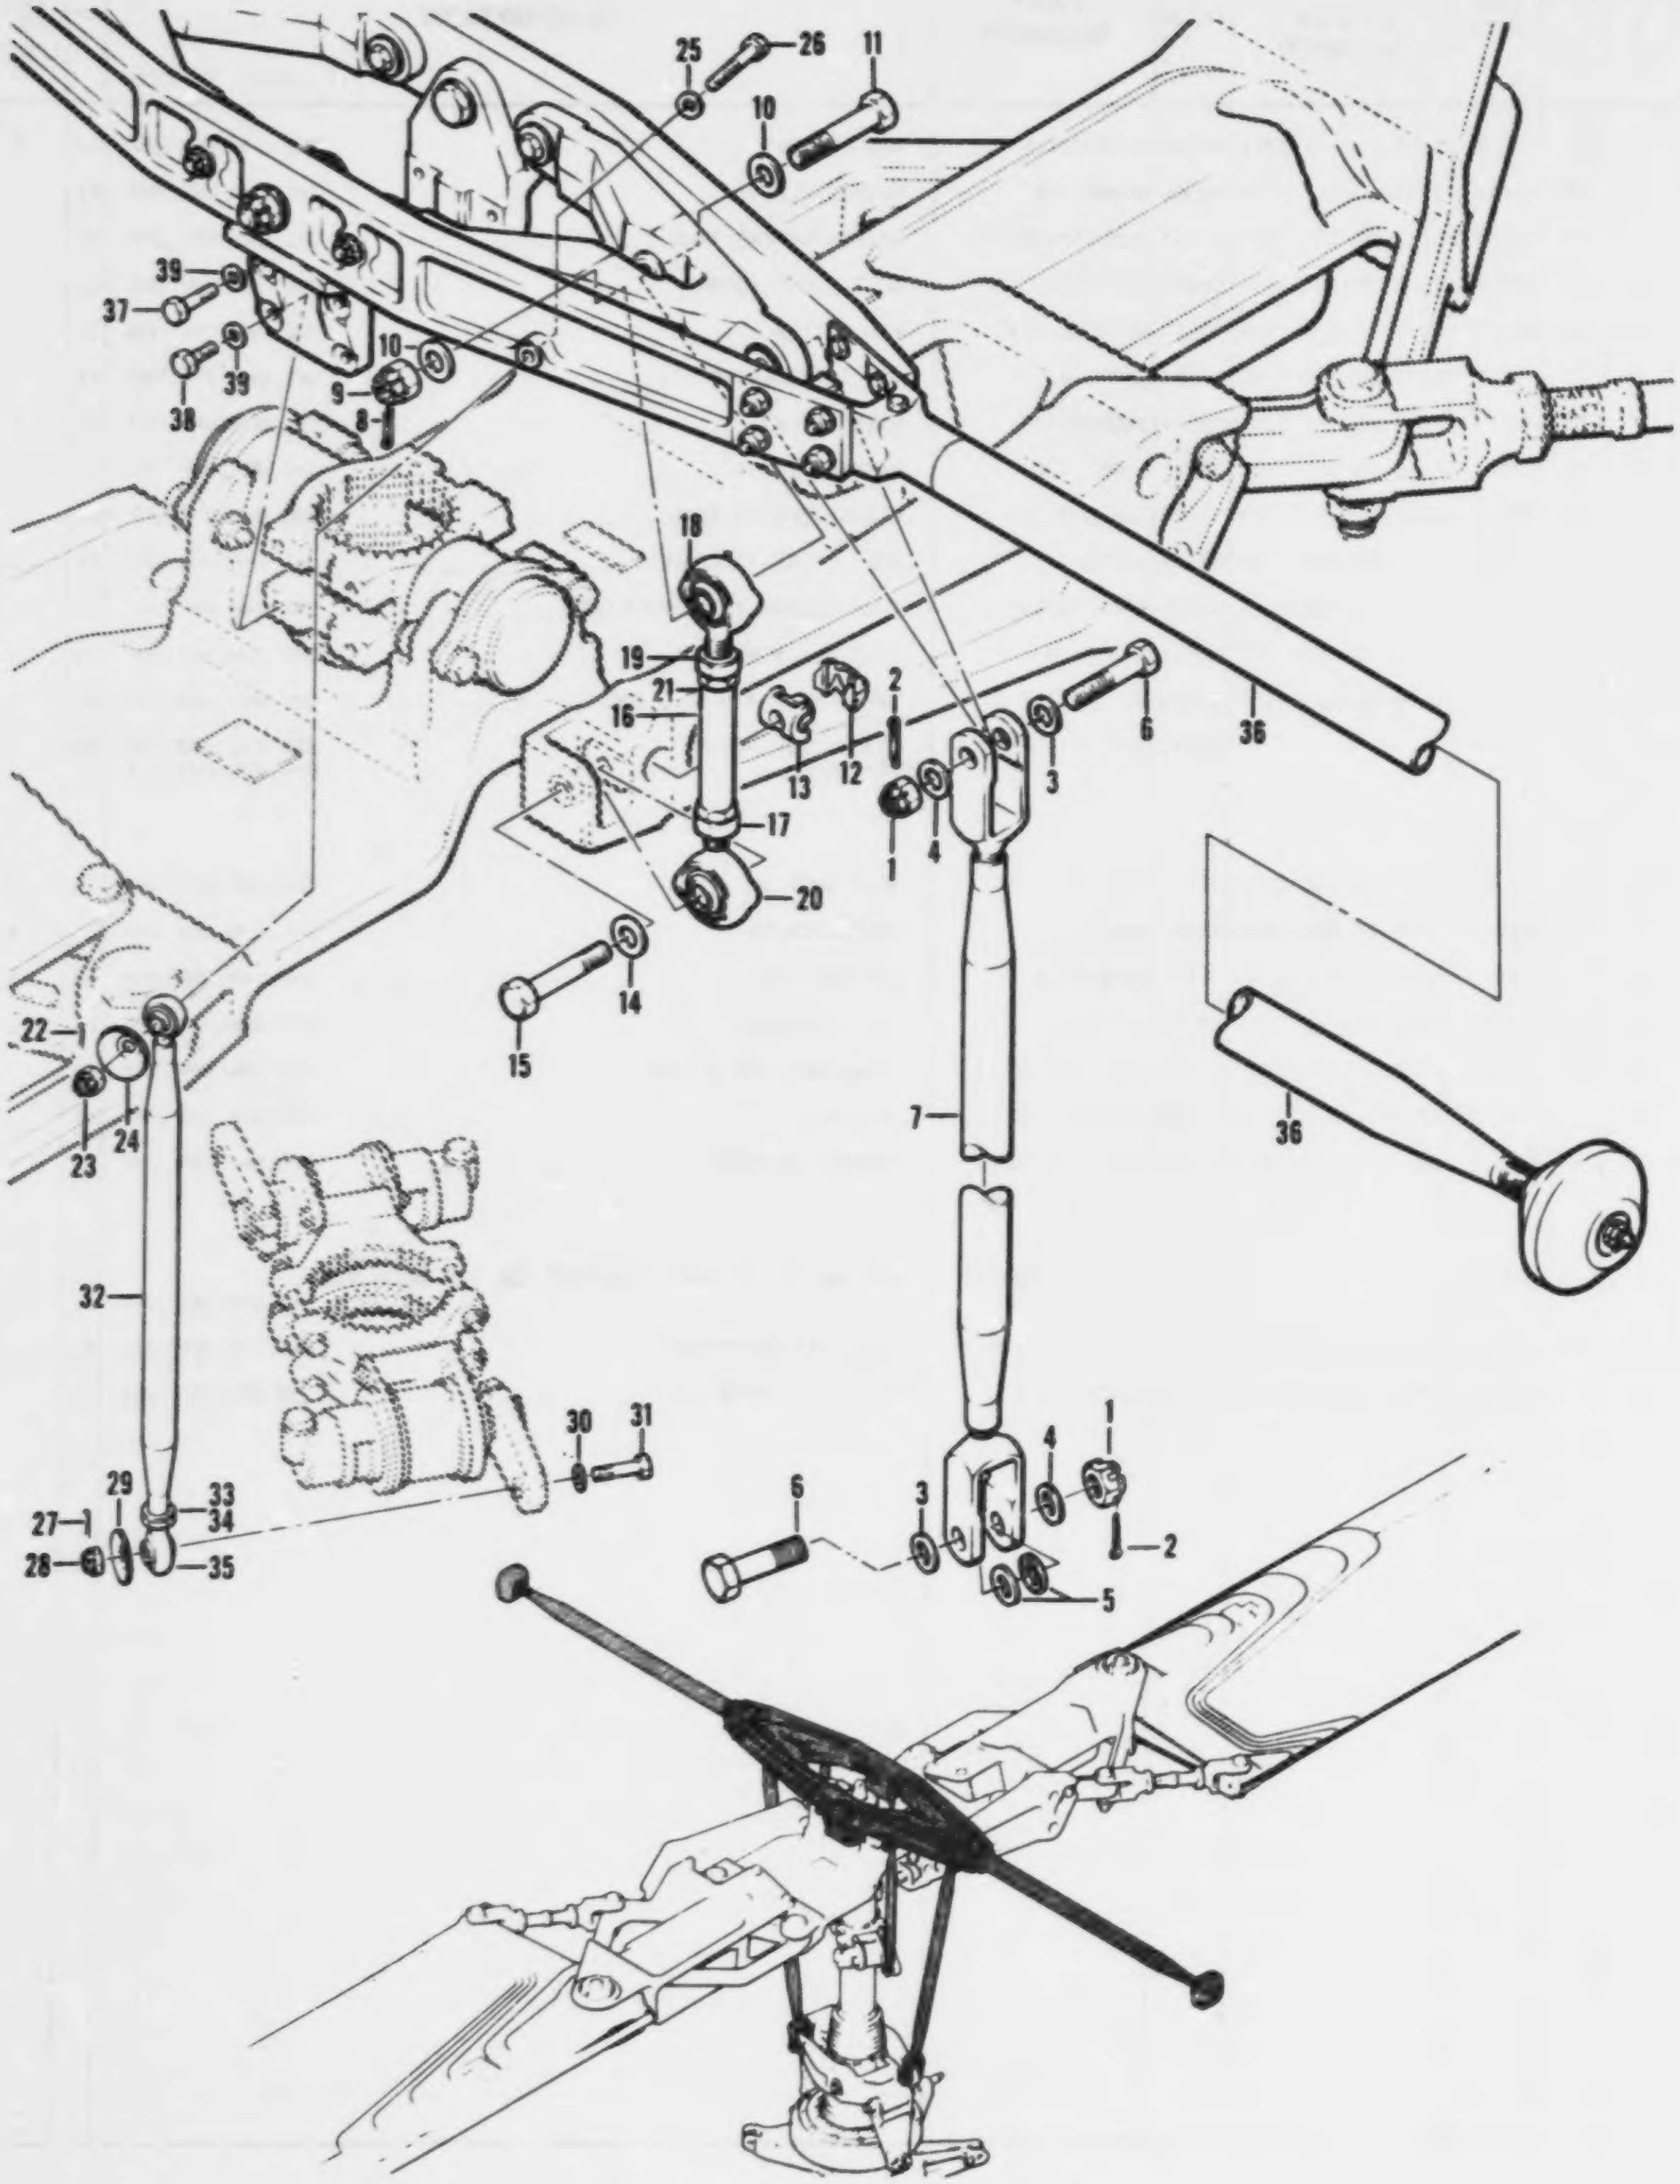
25
26
11
10
39
37
38
39
10
9
8
18
19
21
16
2
13
12
6
36
3
1
4
17
20
14
15
22
24
23
7
36
32
30
31
29
33
34
27
28
35
6
3
4
1
2
5

Figure 132. Pylon Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
132		XCFZZ		97499	540-200-002-3	PYLON ASSY USBL EFF 64-14101 THRU 64-14191 .... UHC,UHM	EA	1
132		XCFZZ		97499	540-200-002-11	PYLON ASSY USBL EFF 65-9416 THRU 65-12772 .... UHC,UHM	EA	1
132		XCFZZ		97499	540-200-002-15	PYLON ASSY USBL EFF 66-492 & SUBSEQUENT .... UHC,UHM	EA	1
132	1	PAOZZ	5310-00-871-8758	90696	MS17825-8	.NUT,SELF-LOCKING,CASTELLATED .... UHC,UHM	EA	1
132	2	PAOZZ	5315-00-245-1254	96906	MS24665-309	.PIN,COTTER .... UHC,UHM	EA	2
132	3	PAOZZ	5310-00-774-9427	97499	140-007-33-32C4	.WASHER,FLAT .... UHC,UHM	EA	2
132	4	PAOZZ	5310-00-167-0839	88044	AN960-816L	.WASHER,FLAT .... UHC,UHM	EA	2
132	5	PAOZZ	5310-00-925-8641	97499	540-011-481-3	.WASHER,RECESSED .... UHC,UHM	EA	2
132	6	PAOZZ	5306-00-824-9863	80205	NAS1308-25D	.BOLT,SHEAR .... UHC,UHM	EA	2
132	7	PAOZZ	3040-00-986-6160	97499	540-011-428-5	.CONNECTING LINK,RIG .... UHC,UHM	EA	2
132	8	PAOZZ	5315-00-059-0491	96906	MS24665-372	.PIN,COTTER .... UHC,UHM	EA	1
132	9	PAOZZ	5310-00-582-6055	81352	AN310-10	.NUT,PLAIN .... UHC,UHM	EA	1
132	10	PAOZZ	5310-00-774-9428	97499	140-007-41-3905	.WASHER,RECESSED .... UHC,UHM	EA	2
132	11	PAOZZ	5306-00-880-6404	80205	NAS1310-36D	.BOLT,SHEAR .... UHC,UHM	EA	1
132	12	PAOZZ	5340-00-064-6088	80205	NAS578-10B	.RETAINER,NUT AND BOLT .... UHC,UHM	EA	1
132	13	PAOZZ	5310-00-853-5771	80205	NAS577-10A	.NUT,SELF-LOCKING BARREL .... UHC,UHM	EA	1
132	14	PAOZZ	5310-00-774-9429	97499	140-007-41-4005	.WASHER,FLAT .... UHC,UHM	EA	1
132	15	PAOZZ	5306-00-903-5806	80205	NAS1310-36H	.BOLT,SHEAR .... UHC,UHM	EA	1
132	16	A0000	3040-00-908-1387	97499	540-011-126-1	.CONNECTING LINK,RIG .... UHC,UHM	EA	2
132	17	PAOZZ	5310-00-789-1379	97499	540-011-138-1	..NUT,PLAIN,ROUND .... UHC,UHM	EA	1
132	18	PAOZZ	3120-00-771-6032	97499	540-011-128-1	..BEARING,PLAIN,ROD END .... UHC,UHM	EA	1
132	19	PAOZZ	5310-00-788-6059	97499	540-011-138-3	..NUT,PLAIN,ROUND .... UHC,UHM	EA	1
132	20	PAOZZ	3120-00-771-6033	97499	540-011-128-3	..BEARING,PLAIN,ROD END .... UHC,UHM	EA	1
132	21	PAOZZ	1615-00-867-1139	97499	540-011-129-1	..PITCH LINK BARREL .... UHC,UHM	EA	1
132	22	PAOZZ	5315-00-234-1856	96906	MS24665-155	.PIN,COTTER .... UHC,UHM	EA	1
132	23	PAOZZ	5310-00-167-1286	88044	AN310-5	.NUT,CASTELLATED,HEX .... UHC,UHM	EA	1
132	24	MFOZZ	5310-00-929-5821	97499	206-010-324-3	.WASHER,SPRING TENSI .... UHC,UHM	EA	1
132	25	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT .... UHC,UHM	EA	1
132	26	PBOZZ	5306-00-275-9531	88044	AN175H16	.BOLT,CLOSE,TOLER .... UHC,UHM	EA	1
132	27	PAOZZ	5315-00-234-1856	96906	MS24665-155	.PIN,COTTER .... UHC,UHM	EA	1
132	28	PAOZZ	5310-00-167-1286	88044	AN310-5	.NUT,CASTELLATED,HEX .... UHC,UHM	EA	1
132	29	MFOZZ	5310-00-929-5821	97499	206-010-324-3	.WASHER,SPRING TENSI .... UHC,UHM	EA	1
132	30	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT .... UHC,UHM	EA	1
132	31	PAOZZ	5306-00-275-9529	88044	AN175H14	.BOLT,CLOSE TOLERANC .... UHC,UHM	EA	1
132	32	PA000	3040-00-866-6064	97499	540-011-309-1	.CONNECTING LINK,RIG .... UHC,UHM	EA	2
132	33	PAOZZ	5310-00-167-1300	88044	AN316-6R	..NUT,PLAIN,HEXAGO .... UHC,UHM	EA	1
132	34	PAOZZ	5310-00-187-2400	88044	AN960PD616	..WASHER,FLAT .... UHC,UHM	EA	1
132	35	PAOZZ	3120-00-847-7531	77896	TFM105	..BEARING,PLAIN,ROD .... UHC,UHM	EA	2
132	36	PA000	1615-00-689-6306	97499	540-011-300-9	.STABILIZER,ROTARY SEE FIG. 134 FOR BREAKDOWN .... UHC,UHM	EA	1
132	37	PAOZZ	5306-00-206-6270	88044	AN6H12A	.BOLT,MACHINE .... UHC,UHM	EA	4
132	38	PAOZZ	5306-00-206-6266	88044	AN6H7A	.BOLT,MACHINE .... UHC,UHM	EA	4
132	39	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT .... UHC,UHM	EA	8

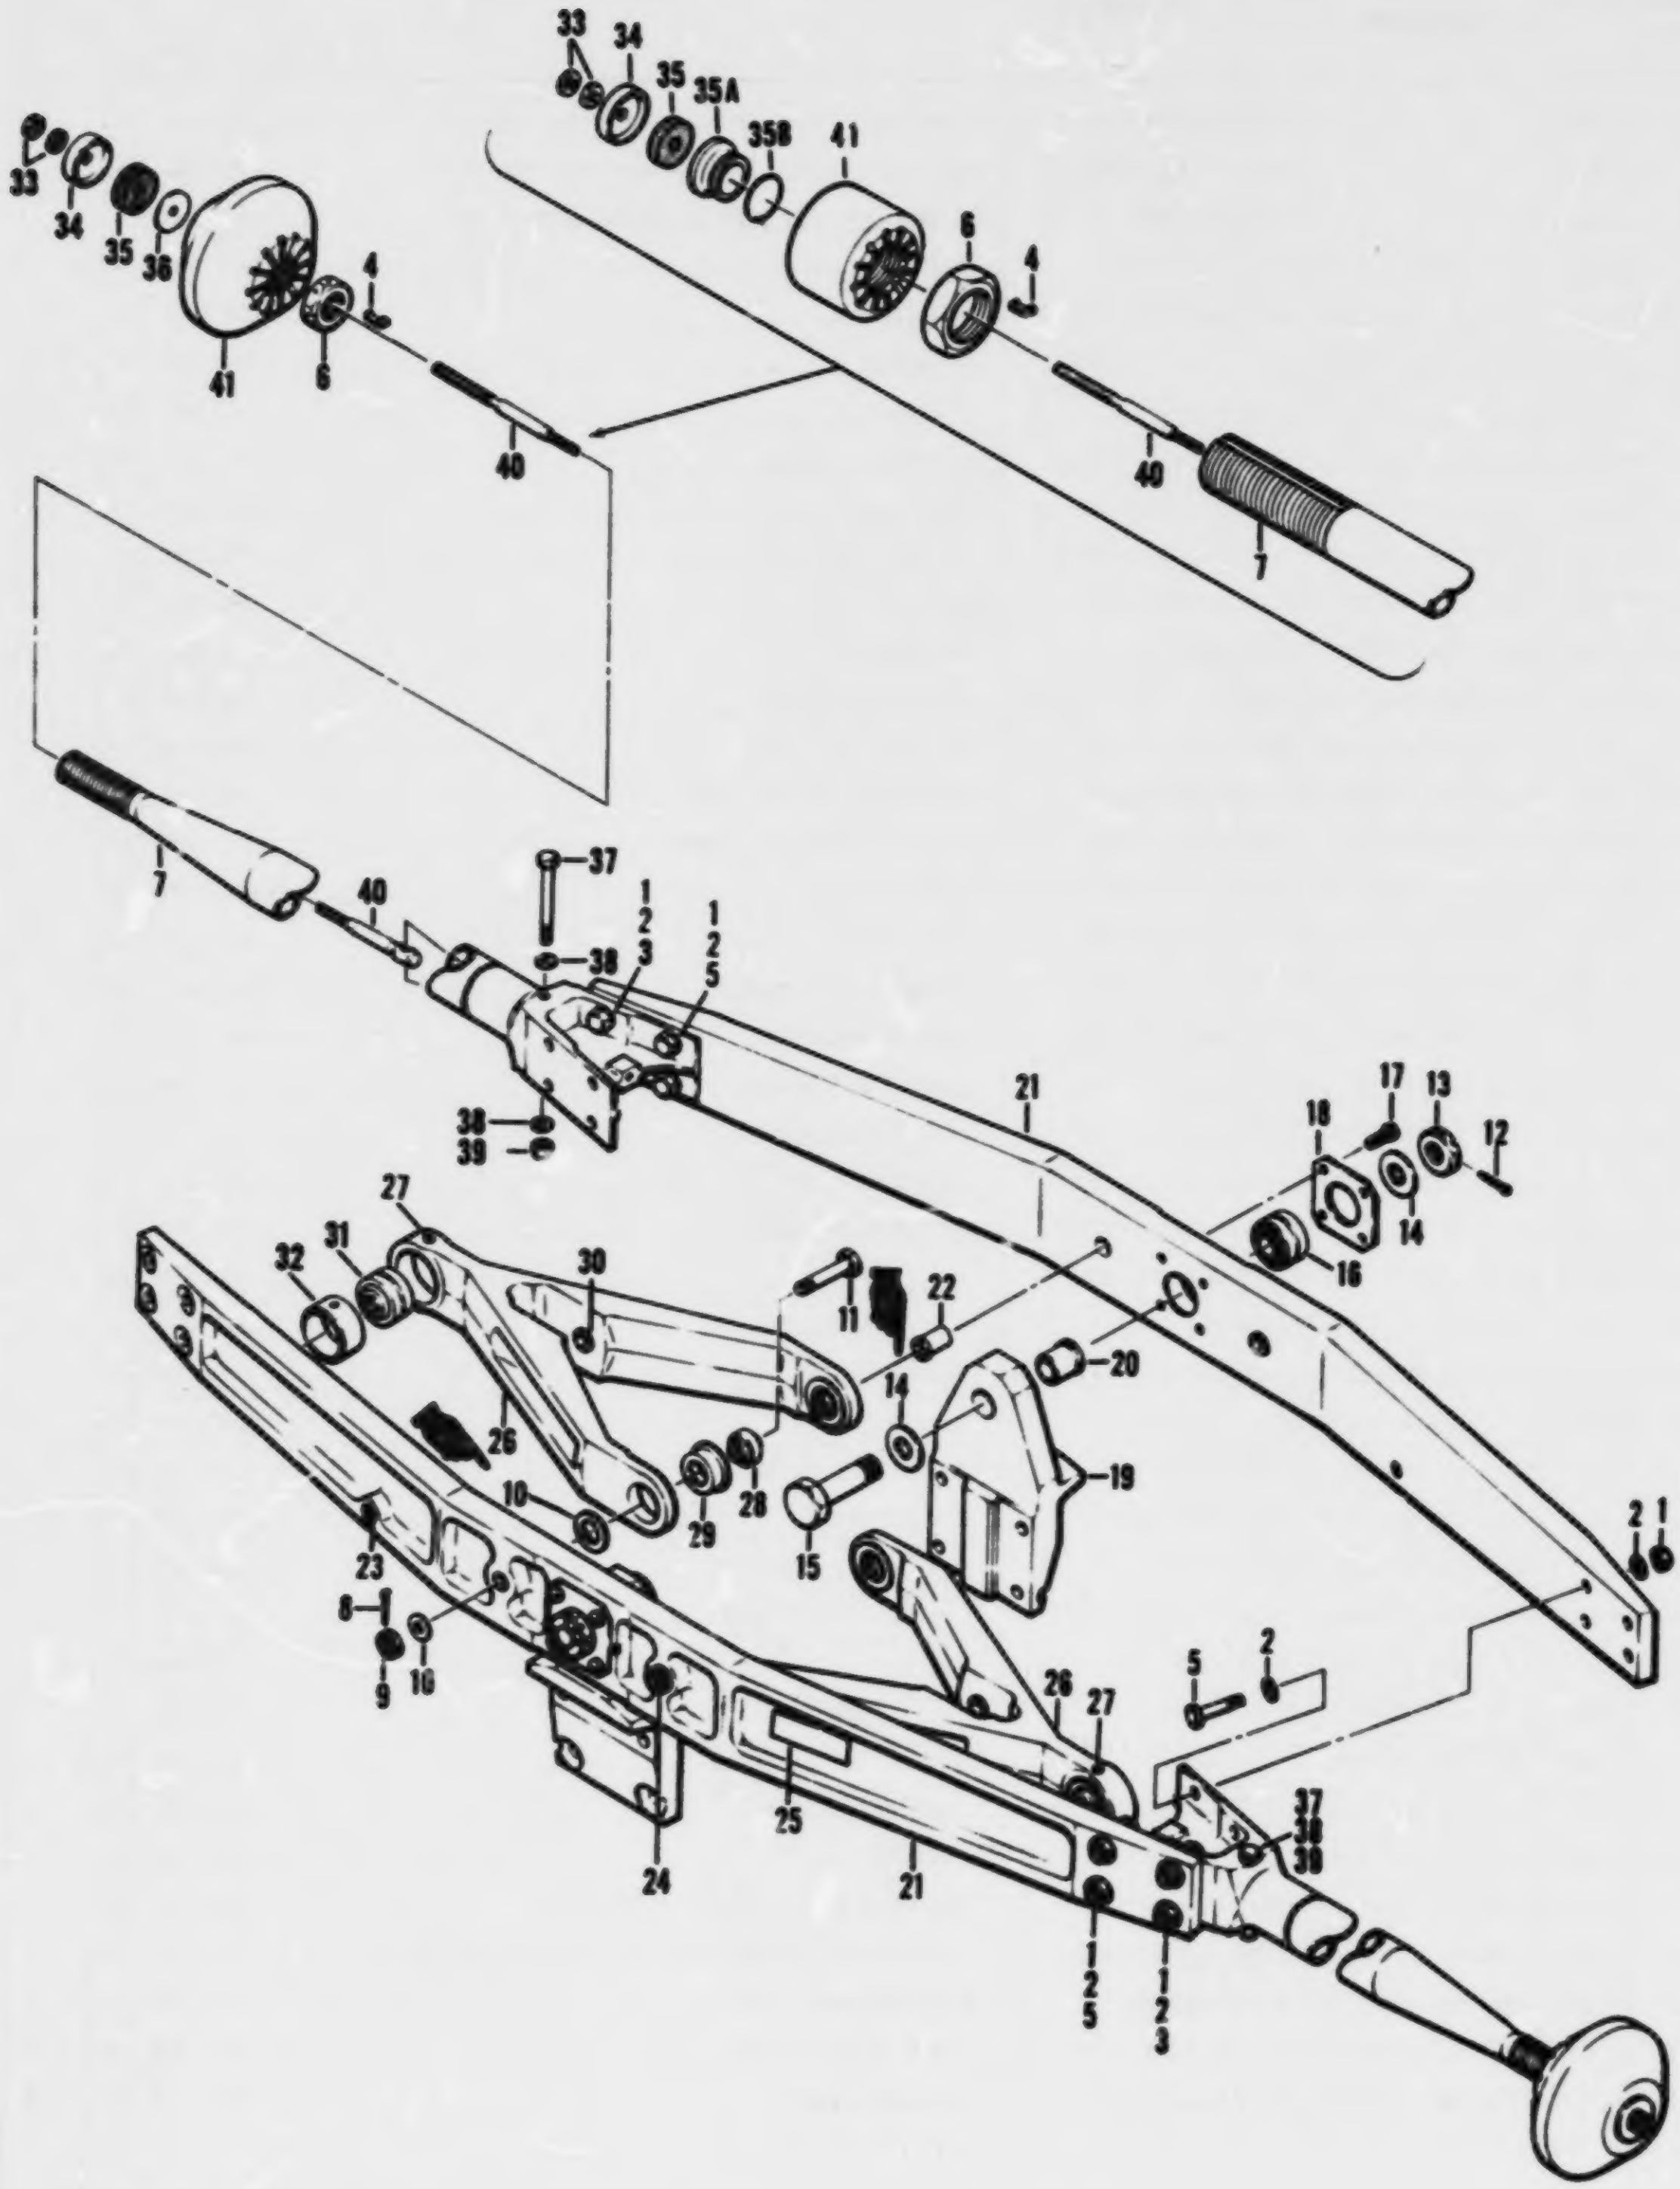
33
34
35
35A
35B
41
6
4
33
34
35
36
41
6
4
40
40
7
7
40
37
1
2
3
1
2
5
38
38
39
21
18
17
13
12
14
16
27
31
32
30
11
22
20
14
26
19
10
29
28
15
2
1
23
8
9
10
5
2
26
27
24
25
21
37
38
39
1
2
5
1
2
3

Figure 133. Stabilizer Bar Assembly

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
133		AFDFF	1615-00-689-6307	97499	204-011-326-7	STABILIZER,ROTARY SEE FIG.131 FOR NHA	UHE,UHH,UHV,UHX	EA	1
133	1	PAFZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	16
133	2	PAFZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	32
133	3	PAFZZ	5306-00-144-4041	88044	AN175H10A	.BOLT,CLOSE TOLER	UHE,UHH,UHV,UHX	EA	8
133	4	PAFZZ	5340-00-552-0429	80205	NAS559-5	.LOCK,ROD END U/O PN 204-011-326-7	UHE,UHH,UHV,UHX	EA	2
133	4	PAFZZ	5340-00-925-9797	80205	NAS559-9	.LOCK,ROD END U/O PN 212-010-311-101	UHH,UHE,UHV,UHX	EA	2
133	5	PAFZZ	5306-00-151-2413	88044	AN175-11A	.BOLT,CLOSE TOLERANC	UHE,UHH,UHV,UHX	EA	8
133	6	PAFZZ	5310-00-298-9255	80205	NAS509-12	.NUT,PLAIN,HEXAGON U/O PN 204-011-326-7	UHE,UHH,UHV,UHX	EA	2
133	6	PAFZZ	5310-00-479-0204	80205	NAS509-24	.NUT U/O PN 212-010-311-101	UHH,UHE,UHV,UHX	EA	2
133	7	PAFZZ	1615-00-169-5085	97499	204-011-328-11	.TUBE ASSEMBLY,STABI U/O PN 204-011-326-7	UHE,UHH,UHV,UHX	EA	2
133	7	PAFZZ	1615-01-029-4913	97499	212-010-311-101	.STABILIZER TUBE,ROT RPLS PN 204 011 328 11	UHH,UHV,UHE,UHX	EA	2
133	8	PAFZZ	5315-00-234-1864	96906	MS24665-302	.PIN,COTTER	UHE,UHH,UHV,UHX	EA	4
133	9	PAFZZ	5310-00-176-8110	88044	AN320-6	.NUT,SLOTTED,HEX	UHE,UHH,UHV,UHX	EA	4
133	10	PAFZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
133	11	XDFZZ	5306-00-206-6405	80205	NAS464P6-20	.BOLT,SHEAR -ALTERNATE-	UHH,UHM,UHV,UHE,UHX	EA	4
133	11	XDFZZ	5306-00-282-4859	80205	NAS464-6-21	.BOLT,SHEAR	UHE,UHH,UHV,UHX	EA	4
133	12	PAFZZ	5315-00-236-8369	96906	MS24665-370	.PIN,COTTER	UHE,UHH,UHV,UHX	EA	2
133	13	PAFZZ	5310-00-176-8114	88044	AN320-10	.NUT,SLOTTED,HEX	UHE,UHH,UHV,UHX	EA	2
133	14	PAFZZ	5310-00-167-0825	88044	AN960-1016	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
133	15	PAFZZ	5306-00-638-4646	80205	NAS464-10-27	.BOLT,SHEAR U/O PN 204-011-326-7	UHE,UHH,UHV,UHX	EA	2
133	16	PAFDD	3110-00-716-8570	97499	204-011-310-1	.BEARING,BALL,DUPLEX	UHE,UHH,UHV,UHX	SE	2
133	17	PAFZZ	5305-00-882-2242	96906	MS35266-81	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	8
133	18	PAFZZ	5330-00-893-0447	97499	204-011-308-1	.GASKET	UHE,UHH,UHV,UHX	EA	2
133	19	PAFFF	1560-00-830-9741	97499	204-011-304-1	.SUPPORT ASSEMBLY,ST BAR	UHE,UHH,UHV,UHX	EA	2
133	20	PAFZZ	3120-00-837-1829	97499	204-010-413-43	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
133	21	PAFFF	1615-00-830-9743	97499	204-011-307-1	.CENTER FRAME ASSY	UHE,UHH,UHV,UHX	EA	2
133	22	PAFZZ	3120-00-837-1828	97499	204-010-413-45	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	2
133	23	PAFZZ	3120-00-837-1827	97499	204-010-413-47	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
133	24	XDFZZ	4730-00-277-4780	80205	NAS516-1	..FITTING,LUBRICATION	UHE,UHH,UHV,UHX	EA	1
133	25	PAFZZ	9905-00-060-2034	97499	100-024-1	.PLATE,IDENTIFICATIO	UHE,UHH,UHV,UHX	EA	1
133	26	PAFFF	1615-00-830-9740	97499	204-011-301-1	.LEVER ASSEMBLY, STABILIZER BAR	UHE,UHH,UHV,UHX	EA	2
133	27	XDFZZ	4730-00-277-4780	80205	NAS516-1	..FITTING,LUBRICATION	UHE,UHH,UHV,UHX	EA	1
133	28	PAFZZ	3110-00-034-5257	96906	MS27641-6	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	2
133	29	PAFZZ	3130-00-707-3534	97499	204-010-422-17	..LINER,BEARING HOUSI	UHE,UHH,UHV,UHX	EA	2
133	30	PAFZZ	3120-00-837-1830	97499	204-010-413-33	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	2
133	31	PAFZZ	3110-00-460-5244	96906	MS28913-5C	..BEARING,ROLLER,AIRF	UHE,UHH,UHV,UHX	EA	1
133	32	PAFZZ	3120-00-731-7967	97499	120-C14-5A	..BUSHING SLEEVE	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
133	33	PAFZZ	5310-00-167-1345	88044	AN315-5R	.NUT,PLAIN,HEXAGO	UHE,UHH,UHV,UHX	EA	4
133	34	PAFZZ	5330-00-781-0991	97499	204-011-334-1	.RETAINER,PACKING	UHE,UHH,UHV,UHX	EA	2
133	35	PAFZZ	5365-00-935-8811	97499	204-011-333-1	.BUSHING,RUBBER	UHE,UHH,UHV,UHX	EA	2
133	35A	PAFZZ	5365-01-064-8136	97499	540-011-322-1	.BUSHING U/O PN 212-010-311-101	UHH,UHE,UHV,UHX	EA	2
133	35B	PAFZZ	5330-00-250-0228	96906	MS29513-119	.PACKING,PREFORMED U/O PN 212-010-311-101	UHH,UHV,UHE,UHX	EA	2
133	36	PAFZZ	5310-00-195-9875	97499	204-011-332-1	.WASHER,FLAT U/O PN 204-011-326-7	UHE,UHH,UHV,UHX	EA	2
133	37	PAFZZ	5306-00-638-5794	88044	AN174H23A	.BOLT,CLOSE TOLERANC	UHE,UHH,UHV,UHX	EA	2
133	38	PAFZZ	5330-00-739-6955	83259	600-742-1-4	.PACKING WITH RETAIN	UHE,UHH,UHV,UHX	EA	4
133	39	PAFZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	2
133	40	PAFZZ	4010-00-764-8673	97499	204-011-329-1	.WIRE ROPE ASSEMBLY,	UHE,UHH,UHV,UHX	EA	2
133	41	PAFZZ	1615-00-829-6857	97499	204-011-303-7	.WEIGHT,ROTARY WING U/O PN 204-011-326-7	UHE,UHH,UHV,UHX	EA	2
133	41	PAFZZ	1680-01-064-7501	97499	212-010-306-1	.WEIGHT U/C PN 212-010-311-101	UHH,UHV,UHE,UHX	EA	2

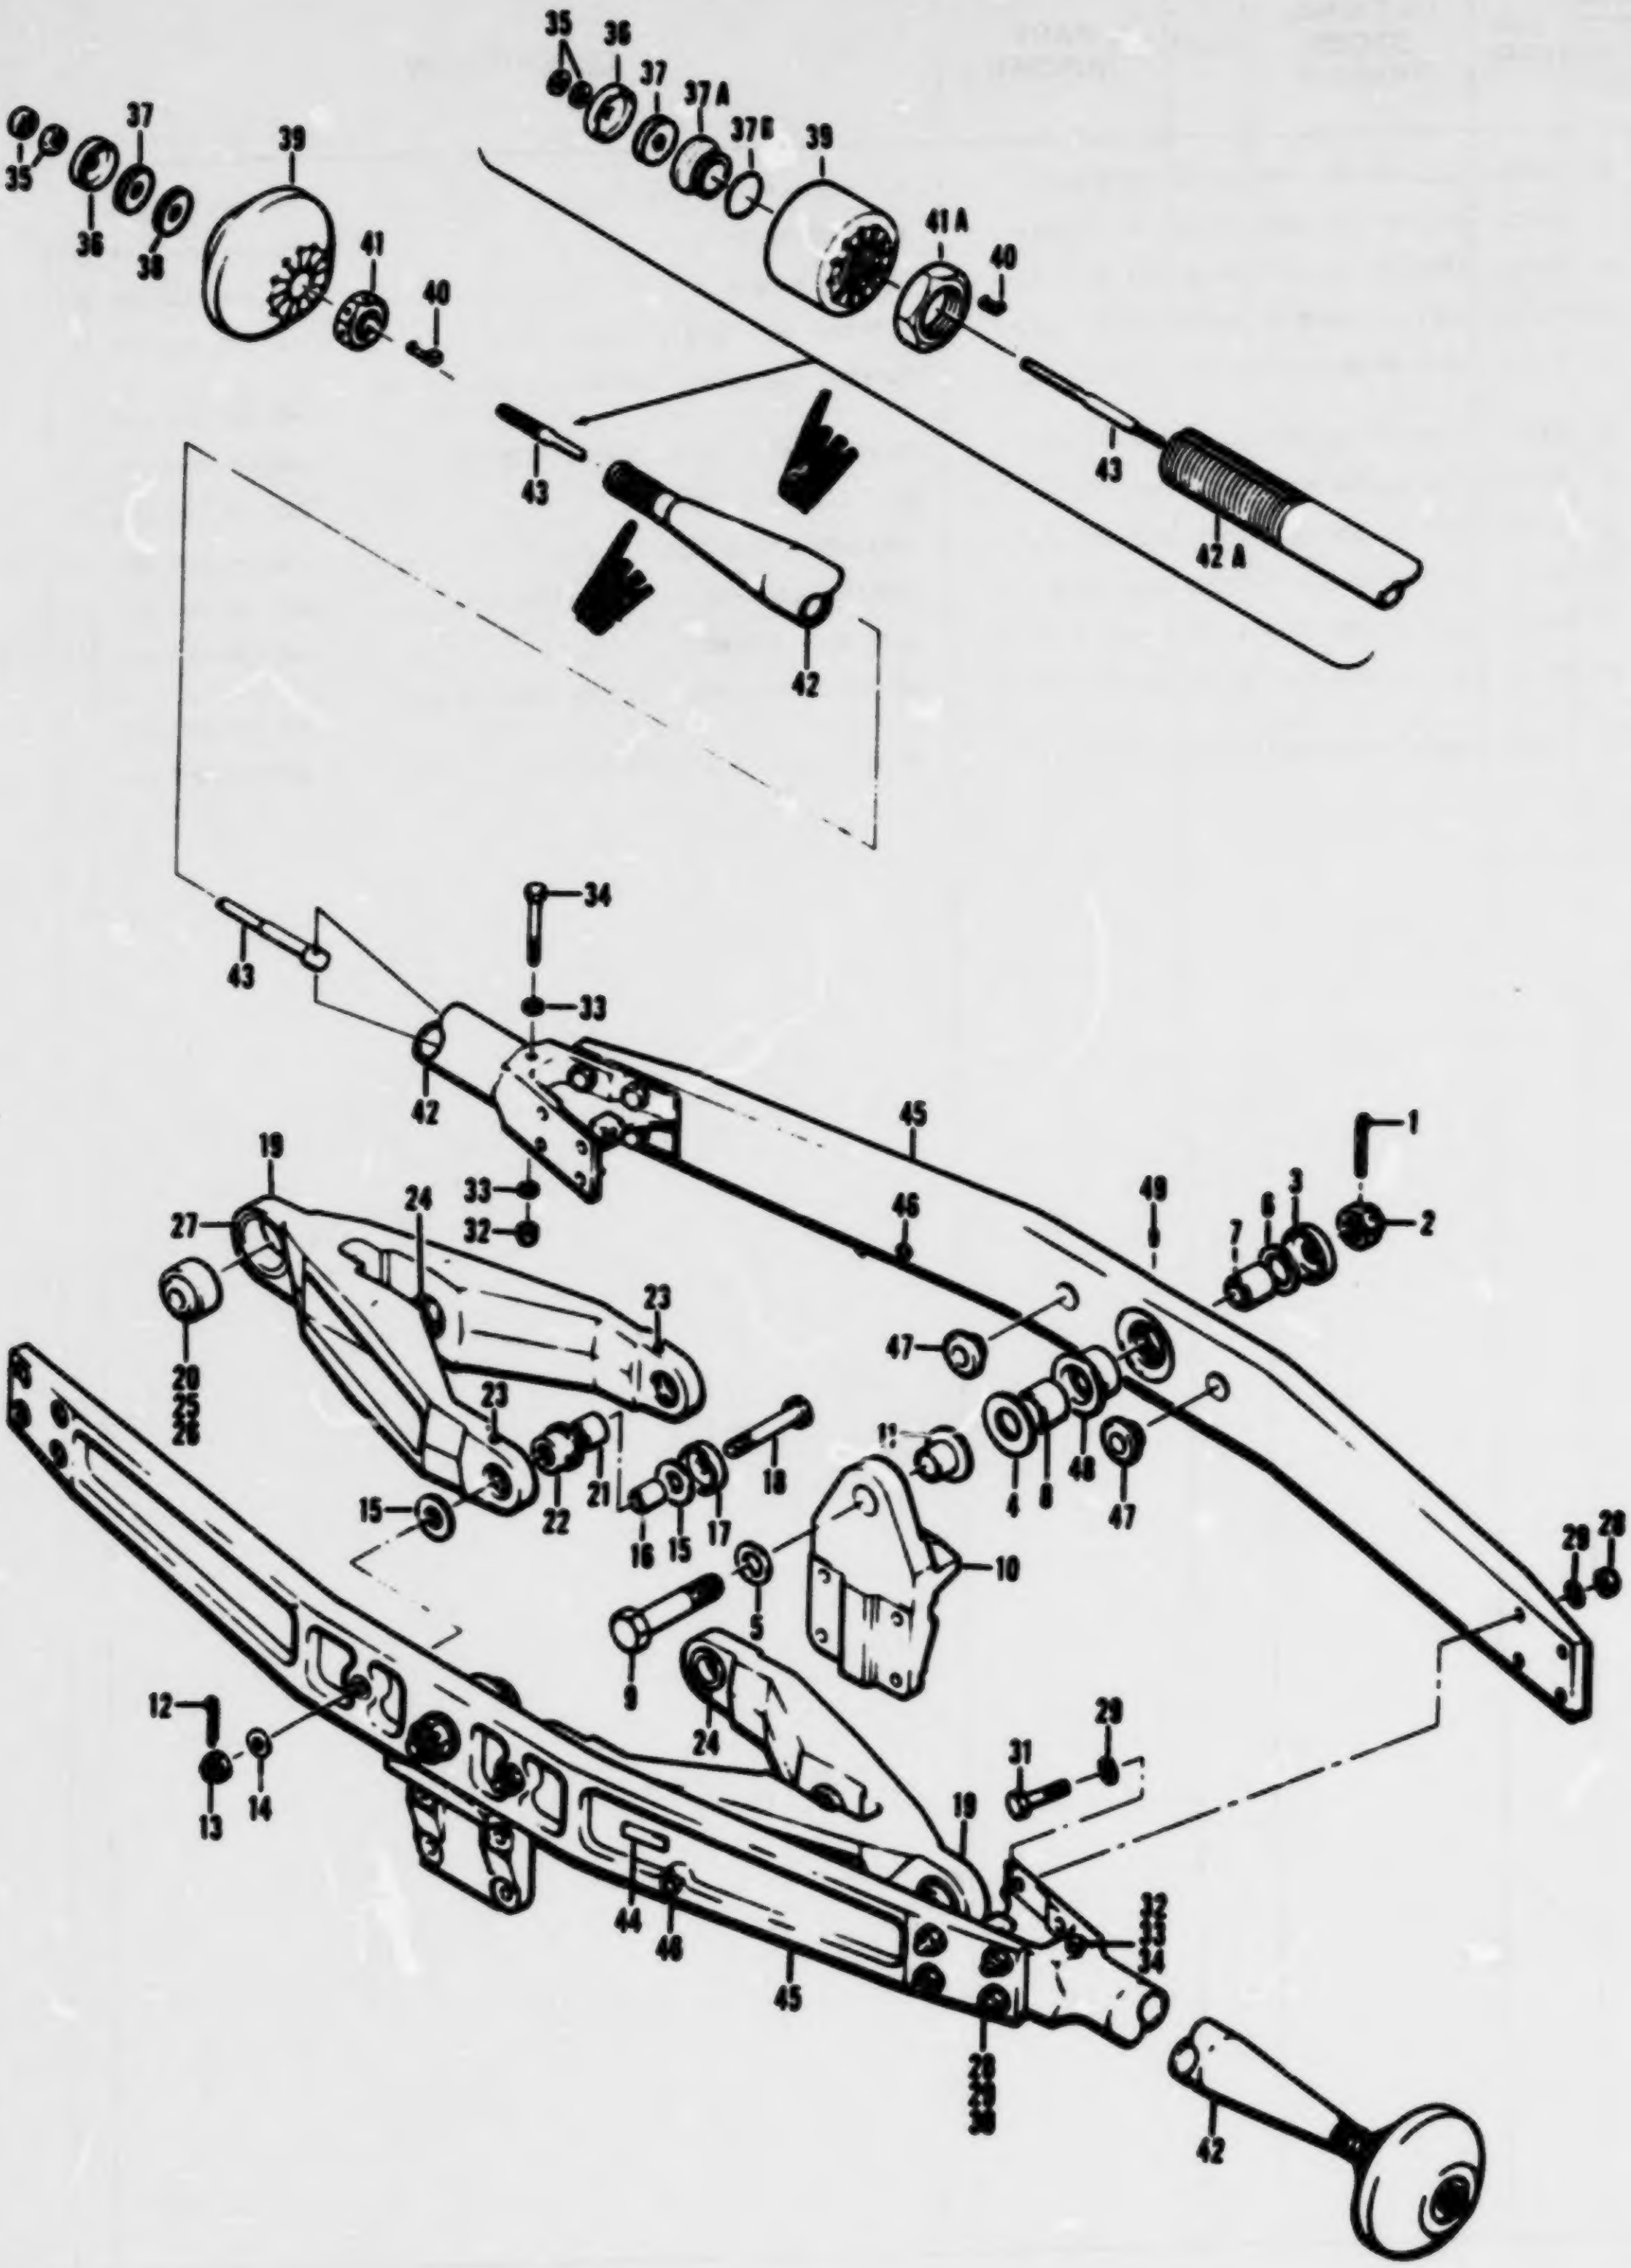
35
36
37
37A
37B
39
35
37
39
36
38
41
40
41A
40
43
43
42A
42
43
34
33
42
45
1
19
33
32
24
46
49
3
27
6
7
2
23
20
25
26
47
23
11
4
8
48
47
15
22
21
16
15
17
18
10
5
9
29
28
12
24
29
13
14
31
19
44
46
32
33
34
45
28
29
30
42

Figure 134. Stabilizer, Rotary

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
134		PAODD	1615-00-689-6306	97499	540-011-300-9	STABLIZER,ROTARY SEE FIG. 132 FOR NHA	UHM	EA	1
134	1	PAFZZ	5315-00-298-1481	96906	MS24665-357	.PIN,COTTER	UHM	EA	2
134	2	PAFZZ	5310-00-582-6055	81352	AN310-10	.NUT,PLAIN	UHM	EA	2
134	3	PAFZZ	3130-00-930-5224	97499	540-011-311-1	.COVER	UHM	EA	2
134	4	PAFZZ	3120-00-930-5282	97499	540-011-394-5	.BEARING,WASHER,THRU	UHM	EA	2
134	5	PAFZZ	5310-00-775-1853	97499	140-007-42-39C4	.WASHER,FLAT	UHM	EA	2
134	6	PAFZZ	5310-00-930-5283	97499	540-011-394-7	.WASHER,FLAT	UHM	EA	2
134	7	PAFZZ	3110-00-198-2142	60380	IR1016	.RING,BEARING INNER	UHM	EA	1
134	8	PAFZZ	3110-00-926-4538	60399	JH14120H	.BEARING,ROLLER,NEED	UHM	EA	2
134	9	PAFZZ	5306-00-880-6402	80205	NAS1310-300	.BOLT,SHEAR	UHM	EA	2
134	10	PAFFF	1615-00-930-8508	97499	540-011-303-15	.SUPPORT ASSEMBLY, STABILIZER BAR	UHM	EA	2
134	11	PAFZZ	3120-00-930-9223	97499	540-011-317-1	..BUSHING,SLEEVE	UHM	EA	1
134	12	PAFZZ	5315-00-234-1864	96906	MS24665-302	.PIN,COTTER	UHM	EA	4
134	13	PAFZZ	5310-00-167-1288	88044	AN310-7	.NUT,CASTELLATED,HEX	UHM	EA	4
134	14	PAFZZ	5310-00-775-1854	97499	140-007-30-24C4	.WASHER,RECESSED	UHM	EA	4
134	15	PAFZZ	3120-00-930-5281	97499	540-011-394-3	.BEARING,WASHER,THRU	UHM	EA	8
134	16	PAFZZ	3110-00-930-5356	97499	540-011-312-1	.BEARING	UHM	EA	4
134	17	PAFZZ	1615-00-930-5214	97499	540-011-313-1	.SHIELD,ROTOR	UHM	EA	4
134	18	PAFZZ	5306-00-926-5572	80205	NAS1307-290	.BOLT,SHEAR	UHM	EA	4
134	19	PAFFF	1615-00-078-2764	97499	540-011-302-9	.LEVER ASSEMBLY, STABILIZER	UHM	EA	2
134	20	PAFZZ	3120-00-775-1847	97499	540-011-415-1	..BEARING,PLAIN,SELF- ALIGNING	UHM	EA	1
134	21	PAFZZ	3110-00-926-4537	60399	JH10100H	..BEARING,ROLLER,NEED	UHM	EA	2
134	22	PADZZ	3130-00-689-6317	97499	540-011-314-3	..LINER,BEARING HOUSI	UHM	EA	2
134	23	XDFZZ		80205	NAS516-1	..FITTING,LUBRICATION	UHM	EA	2
134	24	PAFZZ	3120-00-781-8930	97499	540-011-421-9	..BUSHING,SLEEVE	UHM	EA	2
134	25	AFFFF		97499	540-011-052-1	..BEARING ASSEMBLY U/D PN 540-011-302-9	UHM	EA	1
134	26	XAFZZ		97499	540-011-416-1	...BEARING,PLAIN SELF ALIGNING	UHM	EA	1
134	27	PAFZZ	3120-00-089-7621	97499	540-011-052-5	...BUSHING,SLEEVE	UHM	EA	1
134	28	PAFZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHM	EA	16
134	29	PAFZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT	UHM	EA	32
134	30	PAFZZ	5306-00-144-4041	88044	AN175H10A	.BOLT,CLOSE TOLERANC	UHM	EA	8
134	31	PAFZZ	5306-00-680-6306	88044	AN175-11A	.BOLT,CLOSE TOLERANC	UHM	EA	8
134	32	PAFZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHM	EA	2
134	33	PAFZZ	5330-00-739-6955	83259	600-742-1-4	.PACKING WITH RETAIN	UHM	EA	4
134	34	PAFZZ	5306-00-638-5794	88044	AN174H23A	.BOLT,CLOSE TOLERANC	UHM	EA	2
134	35	PAFZZ	5310-00-167-1345	88044	AN315-5R	.NUT,PLAIN HEXAGON	UHM	EA	4
134	36	PAFZZ	5330-00-781-0991	97499	204-011-334-1	.RETAINER,PACKING	UHM	EA	2
134	37	PAFZZ	5365-00-935-8811	97499	204-011-333-1	.BUSHING,RUBBER	UHM	EA	2
134	37A	PAFZZ	5365-01-064-8136	97499	540-011-322-1	.BUSHING U/D PN 212-010-311-101	UHM	EA	2
134	37B	PAFZZ	5330-00-250-0228	96[illegible]	MS29513-199	.PACKING,PREFORMED U/D PN 212-010-311-101	UHM	EA	2
134	38	PAFZZ	5310-00-195-9875	97499	204-011-332-1	.WASHER,FLAT	UHM	EA	2
134	39	PAFZZ	1615-00-847-7498	97499	540-011-304-1	.WEIGHT,ROTARY WING	UHM	EA	2
134	39	PAFZZ	1680-01-064-7501	97499	212-010-306-1	.WEIGHT U/D PN 212-010-311-101	UHM	EA	2
134	40	PAFZZ	5340-00-852-0429	80205	NAS559-5	.LOCK,ROD END	UHM	EA	2
134	40	PAFZZ	5340-00-925-9797	80205	NAS559-9	.LOCK,ROD END U/D PN 212-010-311-101	UHM	EA	2

(1) ILLUSTRATION (a) FIG NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
134	41	PBFZZ	5310-00-298-9285	80205	NAS509-12	NUT, PLAIN, HEXAGON	UHM	EA	2
134	41A	PAFZZ	5310-00-479-0204	80205	NAS509-24	NUT U/D PN 212-010-311-101	UHM	EA	2
134	42	PAFZZ	1615-00-169-5085	97499	204-011-328-11	TUBE ASSEMBLY, STABILIZER	UHM	EA	2
134	42A	PAFZZ	1615-01-029-4913	97499	212-010-311-101	STABILIZER TUBE ROTARY RPLS PN 204-011-328-11	UHM	EA	2
134	43	PAFZZ	4010-00-764-8573	97499	204-011-329-1	WIRE ROPE ASSEMBLY,	UHM	EA	2
134	44	PAFZZ	9905-00-060-2034	97499	100-024-1	PLATE, IDENTIFICATIO	UHM	EA	1
134	45	PAFDD	1615-00-930-6110	97499	540-011-301-5	FRAME ASSEMBLY, CENT	UHM	EA	2
134	46	PAFZZ	3120-00-781-8932	97499	540-011-421-3	BUSHING, SLEEVE	UHM	EA	1
134	47	PAFZZ	3120-00-781-8929	97499	540-011-421-11	BUSHING, SLEEVE	UHM	EA	2
134	48	PADZZ	3130-00-689-6318	97499	540-011-310-3	LINER, BEARING HOUSI	UHM	EA	1
134	49	XDFZZ		80205	NAS516-1	FITTING, LUBRICATION	UHM	EA	1

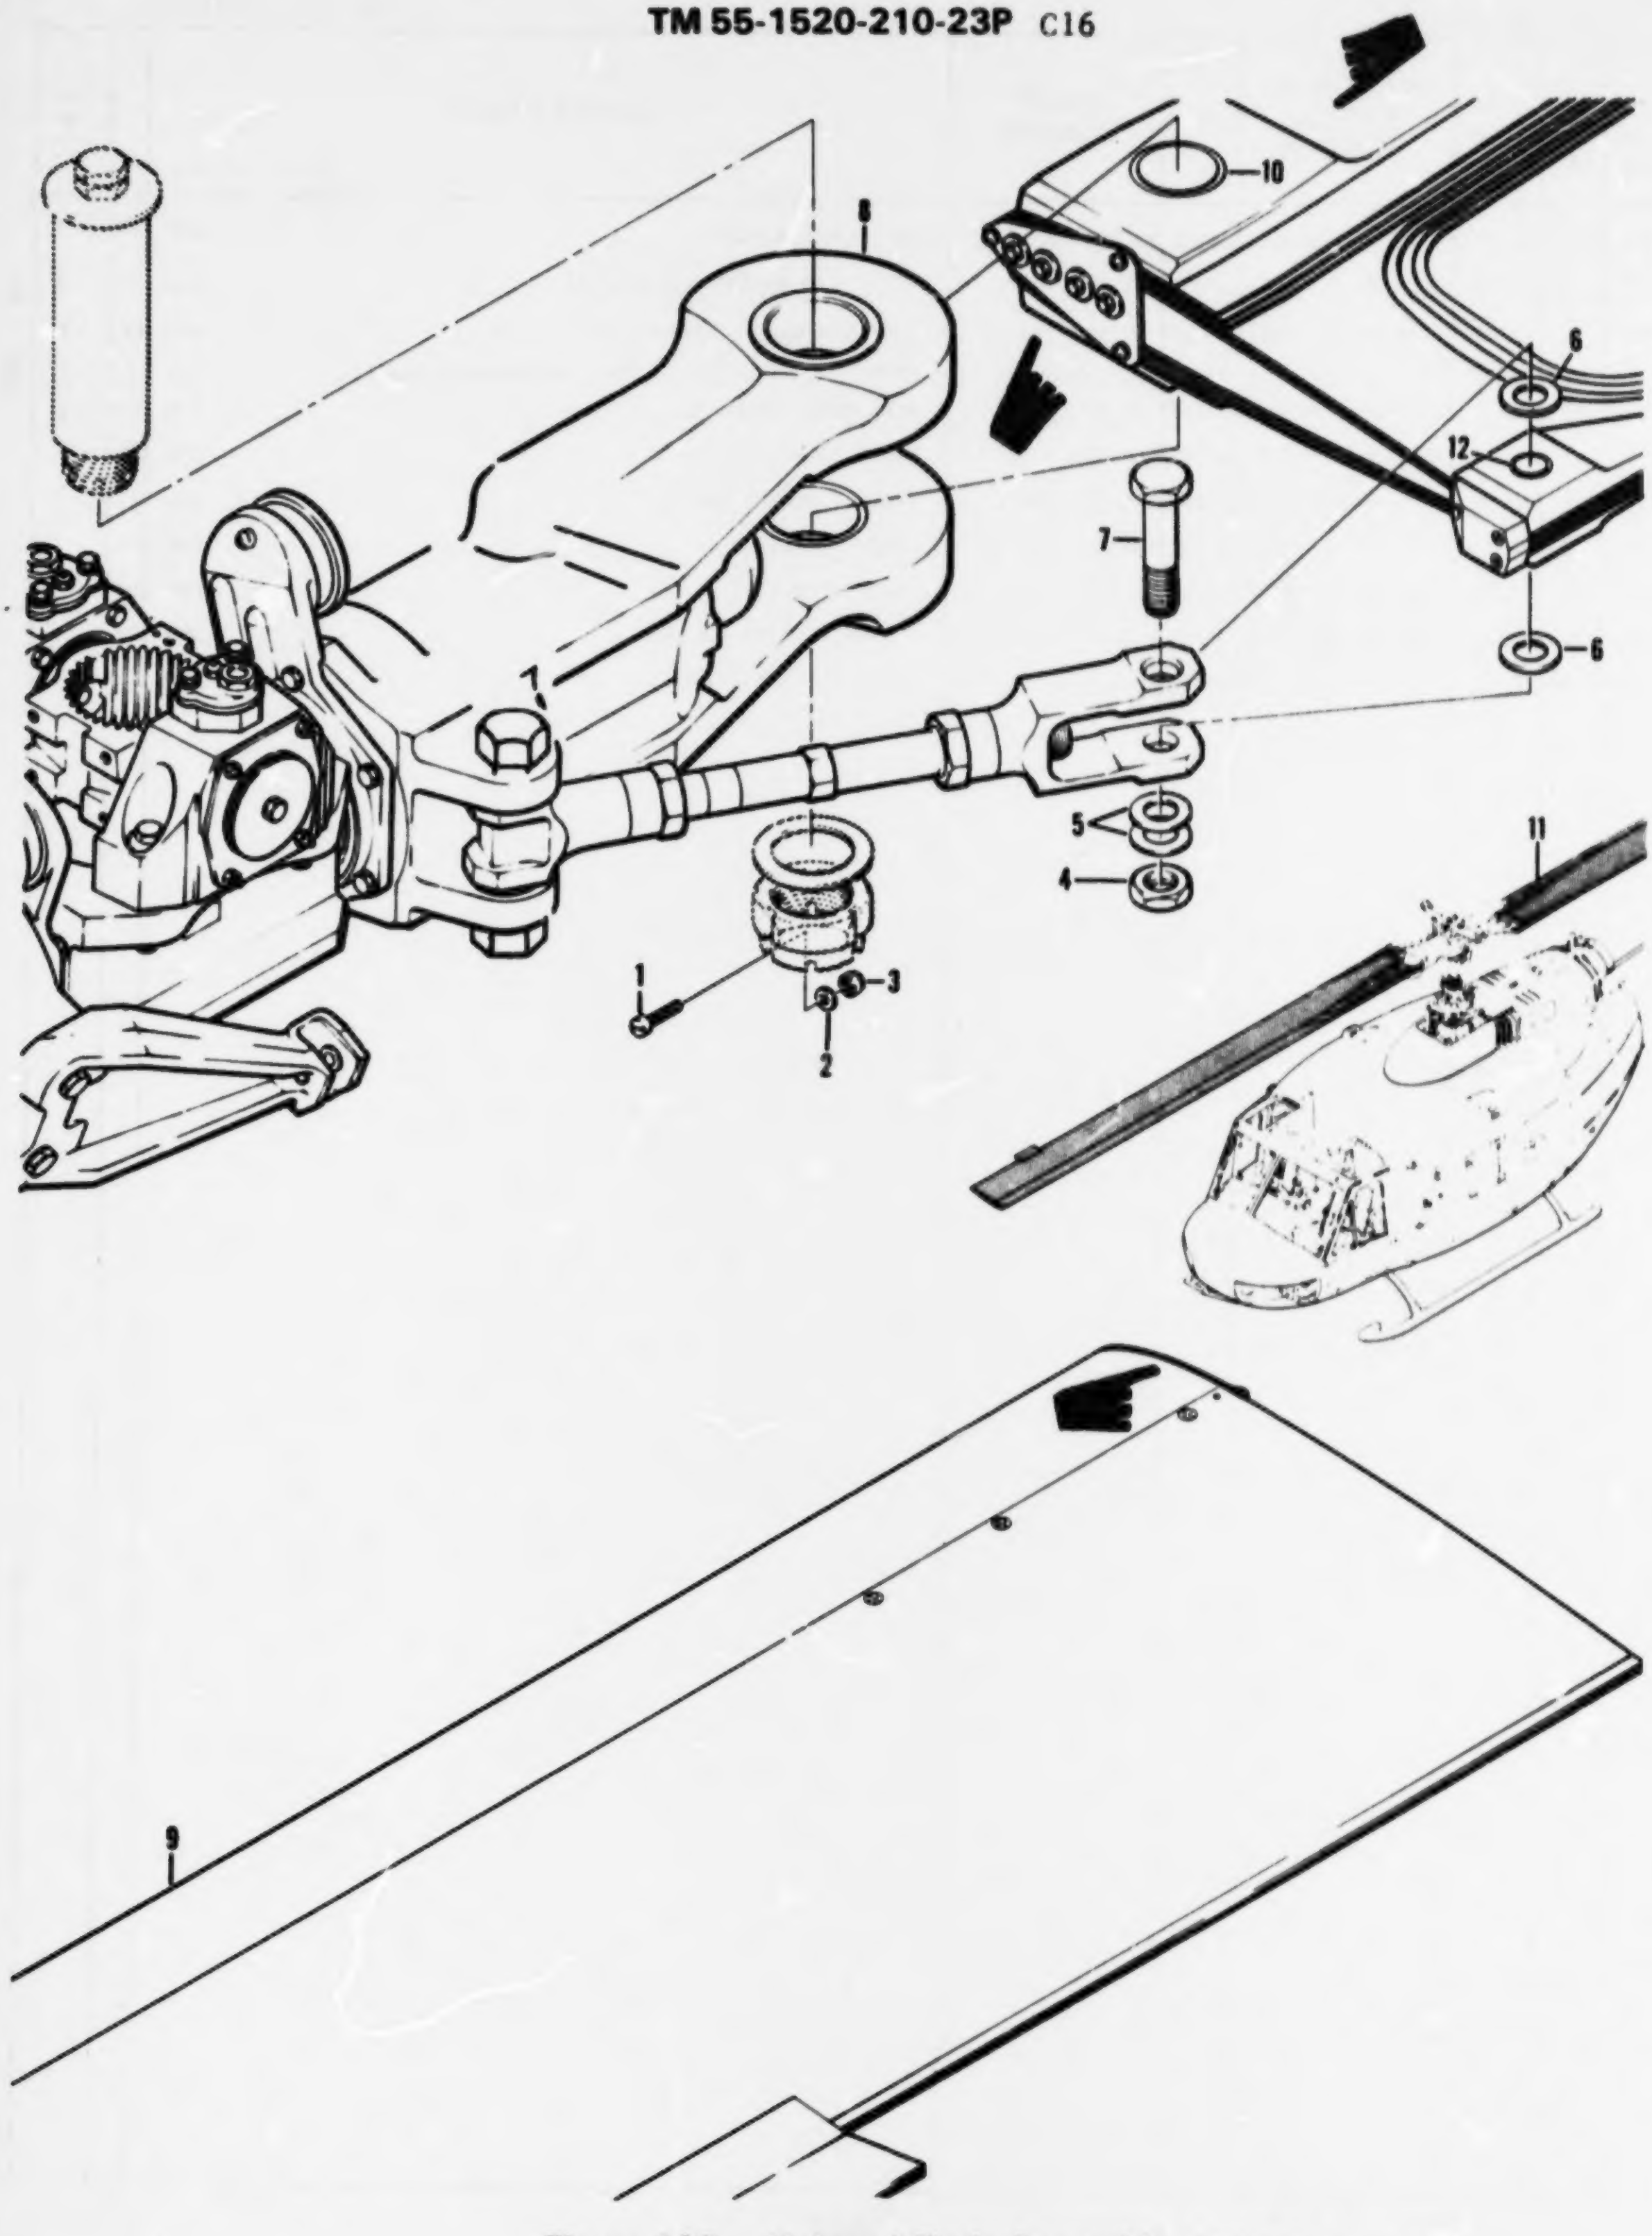
10
8
6
12
7
6
7
5
4
11
1
3
2
9

Figure 135. Hub and Blade Assembly (SHEET 1 OF 2)

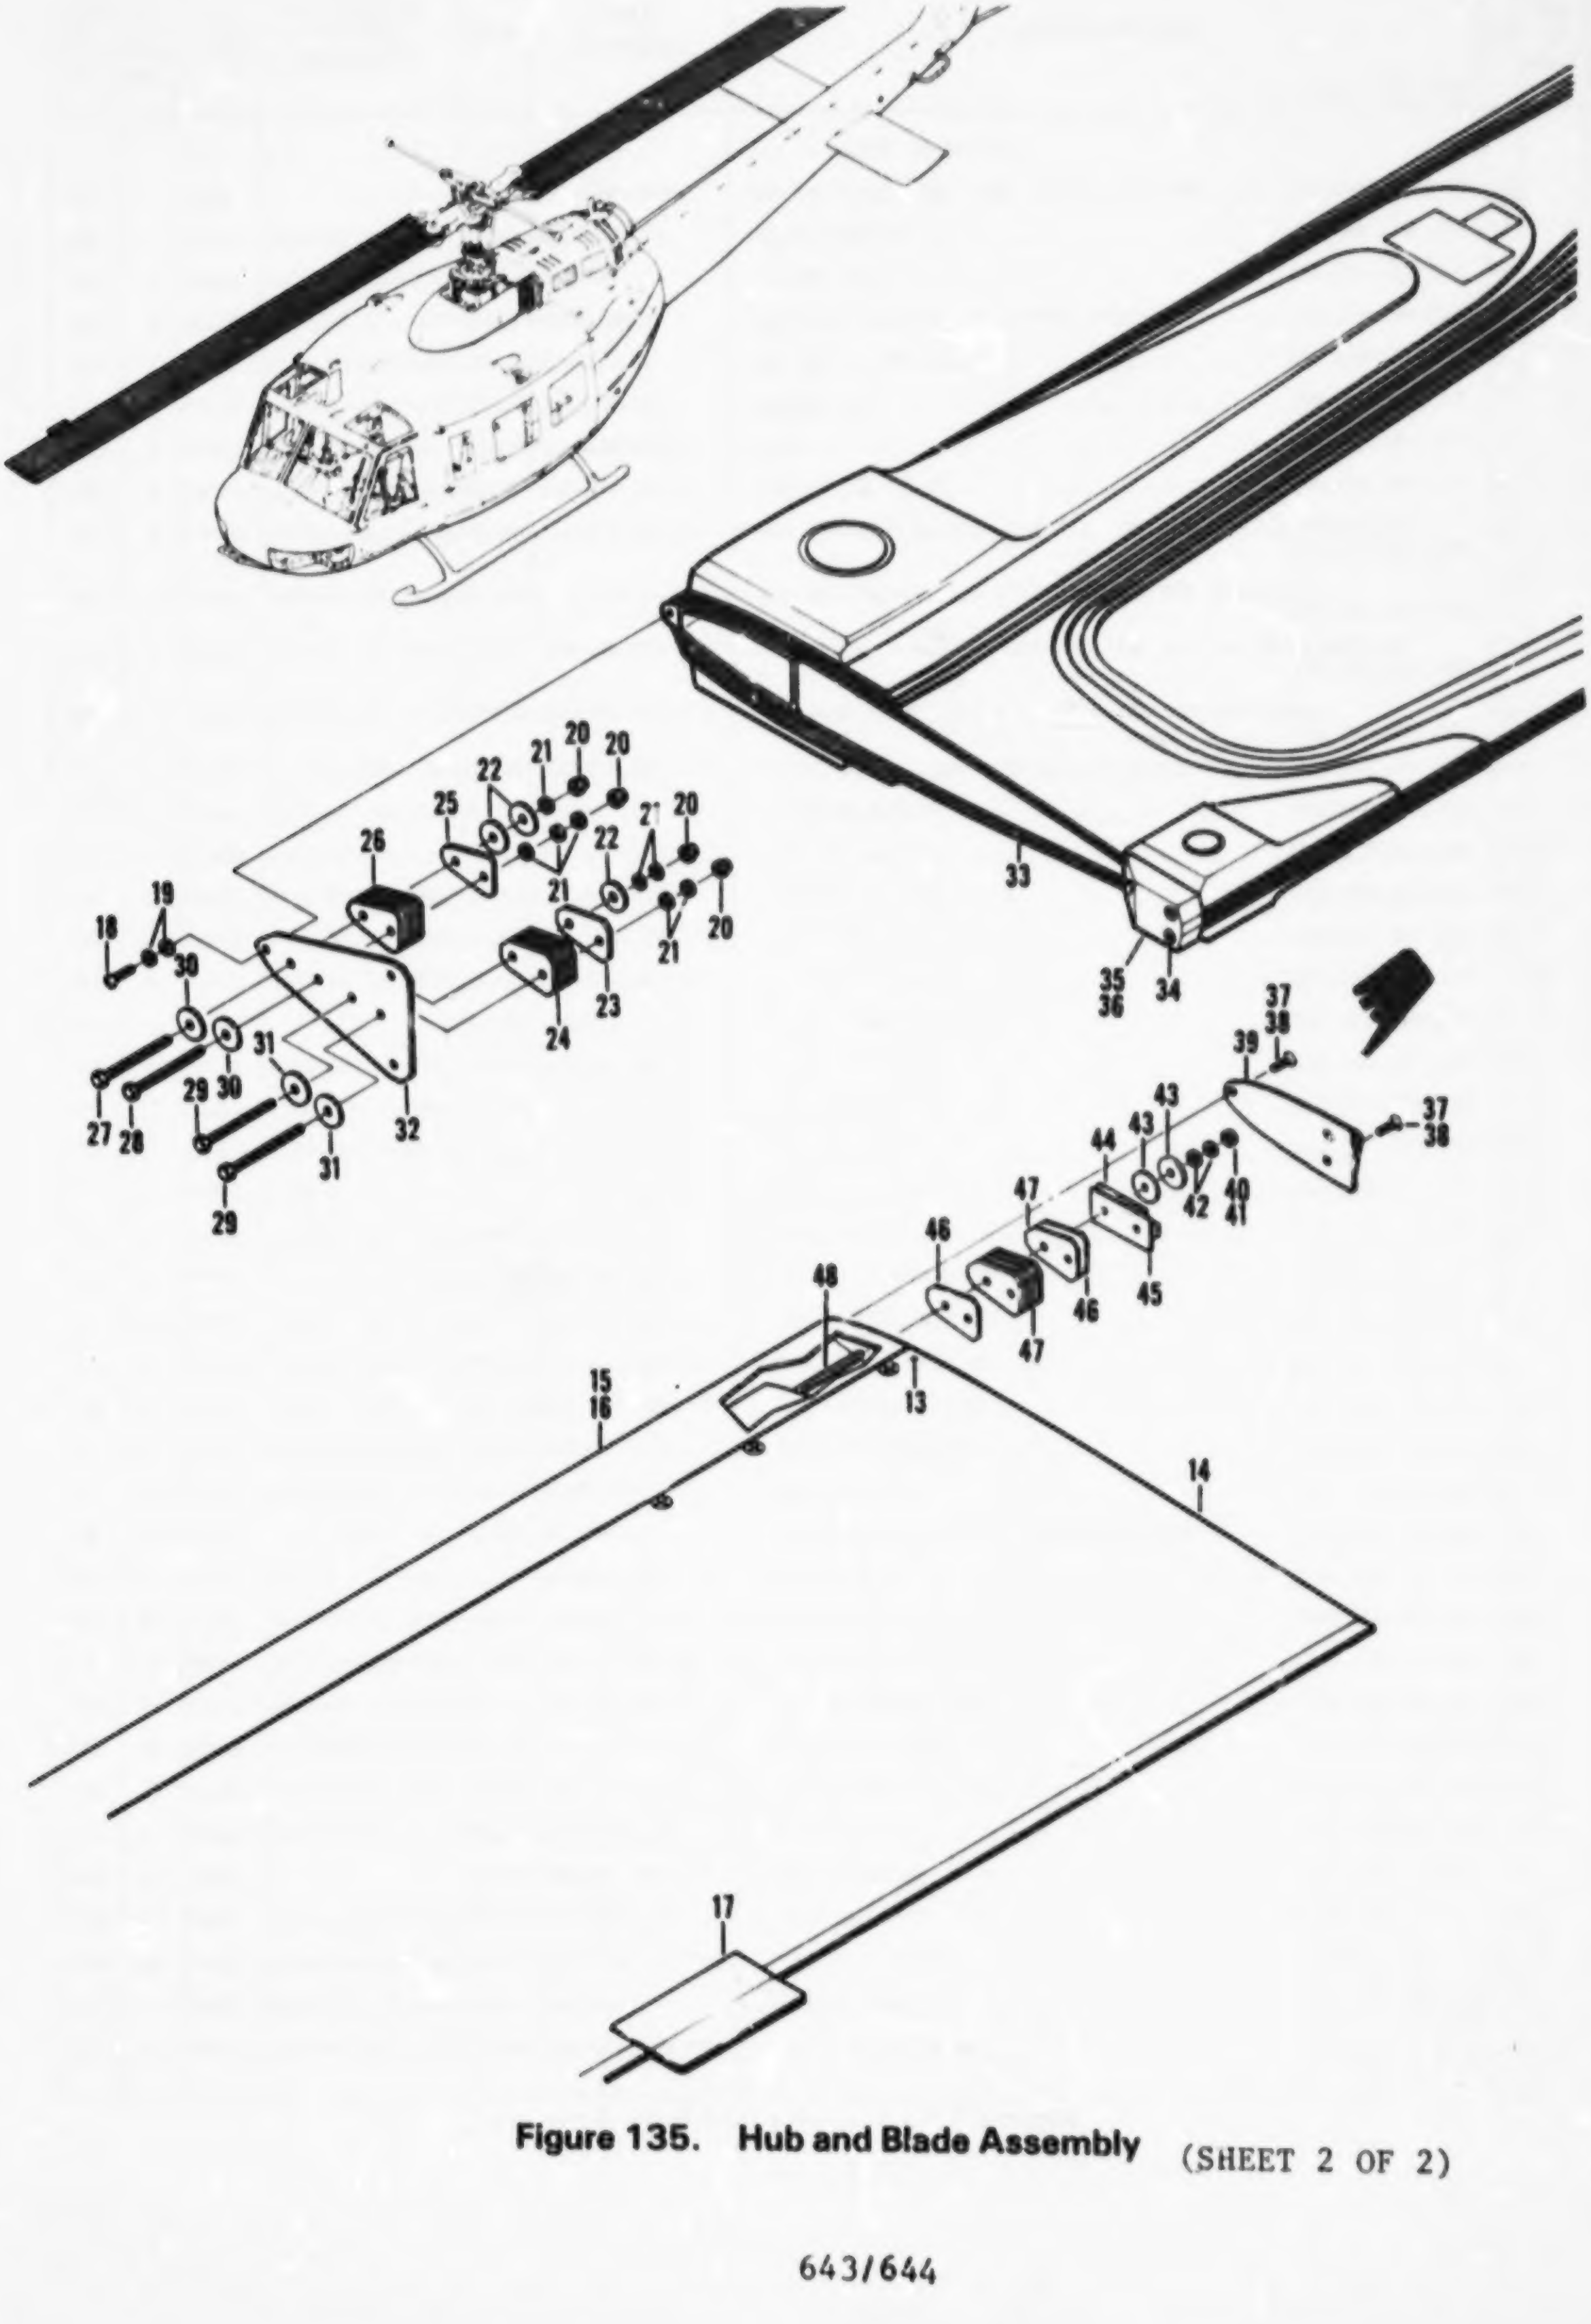
20
20
21
22
25
21
27
20
26
22
21
21
20
19
18
30
21
23
20
24
33
35
36
34
37
38
39
37
38
27
28
29
30
31
32
29
31
29
43
43
44
42
40
41
47
45
46
46
47
48
15
16
13
14
17

Figure 135. Hub and Blade Assembly (SHEET 2 OF 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 06 ROTORS		
135		A0000		97499	204-012-100-21	HUB AND BLADE ASSY SEE FIG. 131 FOR NHA.......UHE,UHH,UHV,UHX	EA	1
135	1	PAOZZ	5305-00-880-2625	88044	MS35265-47	.SCREW,MACHINE.......UHE,UHH,UHV,UHX	EA	3
135	2	PAOZZ	5310-00-615-8058	88044	AN960-8	.WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	2
135	3	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.......UHE,UHH,UHV,UHX	EA	2
135	4	PAOZZ	5310-00-446-5336	96906	MS21245L14	.NUT,SELF-LOCKING,HE.......UHE,UHH,UHV,UHX	EA	2
135	5	PAOZZ	5310-00-167-0827	88044	AN960-1416	.WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	4
135	6	PAOZZ	5365-00-868-4682	97499	130-008C58E29	.SHIM.......UHE,UHH,UHV,UHX	EA	2
135	7	PAOZZ	5306-00-829-6856	97499	204-011-188-1	.BOLT,CLOSE TOLER.......UHE,UHH,UHV,UHX	EA	2
135	8	PAODD	1615-01-058-4860	97499	204-012-101-31	.HUB ASSEMBLY,MAIN R SEE FIG. 138 AND 140 FOR BREAKDOWN.......UHE,UHH,UHV,UHX	EA	1
135	8	PAODD	1615-01-261-0570	97499	204-012-101-137	.HUB,MAIN ROTOR SEE FIG. 138 & 140 FOR BREAKDOWN.......UHE,UHH,UHV,UHX	EA	1
135	8	PAODD	1615-01-237-0512	97499	204-012-101-139	.HUB ASSEMBLY,MAIN R SEE FIG. 138 AND 140 FOR BREAKDOWN.......UHE,UHH,UHV,UHX	EA	1
135	8	PAODD	1615-01-261-2982	97499	204-012-101-141	.HUB,MAIN ROTOR SEE FIG. 138 & 140 FOR BREAKDOWN.......UHE,UHH,UHV,UHX	EA	1
135	9	PAODD	1615-01-092-1256	97499	204-011-250-113	.BLADE,ROTARY WING U/O 204-012-100-21.......UHH,UHE,UHV,UHX	EA	2
135	10	PAOZZ	3120-00-783-2836	97499	204-011-022-5	..BUSHING,SLEEVE.......UHE,UHH,UHV,UHX	EA	1
135	10	PAOZZ	3120-00-783-2861	97499	204-011-022-7	..BUSHING,SLEEVE.......UHE,UHH,UHV,UHX	EA	V
135	10	PAOZZ	3120-00-783-2832	97499	204-011-022-9	..BUSHING,SLEEVE.......UHE,UHH,UHV,UHX	EA	V
135	10	PAOZZ	3120-00-789-2826	97499	204-011-022-11	..BUSHING,SLEEVE.......UHE,UHH,UHV,UHX	EA	V
135	10	PAOZZ	3120-00-783-2830	97499	204-011-022-13	..BUSHING,SLEEVE.......UHE,UHH,UHV,UHX	EA	V
135	11	XDOZZ		97499	100-028-1	..PLATE,IDENTIFICATIO.......UHE,UHH,UHV,UHX	EA	1
135	12	PAOZZ	3120-00-783-2405	97499	204-011-023-3	..BUSHING,SLEEVE.......UHE,UHH,UHV,UHX	EA	1
135	12	PAOZZ	3120-00-191-2509	97499	204-011-023-5	..BUSHING,SLEEVE.......UHE,UHH,UHV,UHX	EA	V
135	12	PAOZZ	3120-00-191-2518	97499	204-011-023-7	..BUSHING,SLEEVE.......UHE,UHH,UHV,UHX	EA	V
135	12	PAOZZ	3120-00-191-2524	97499	204-011-023-9	..BUSHING,SLEEVE.......UHE,UHH,UHV,UHX	EA	V
135	13	PAOZZ	5305-00-253-5605	96906	MS21318-7	..SCREW,DRIVE.......UHE,UHH,UHV,UHX	EA	1
135	14	PAOZZ	1615-00-984-6533	97499	204-011-042-9	..COVER,TIP END,ROTOR.......UHE,UHH,UHV,UHX	EA	1
135	15	PAOZZ	1615-01-150-5286	97499	205-015-010-101	..STRIP,ABRASIVE,ROTO.......UHH,UHV,UHE,UHX	EA	1
135	16	PAOZZ	1615-00-941-8742	97499	204-011-005-25	..BLOCK,NOSE,MAIN ROT ROTOR.......UHE,UHH,UHV,UHX	EA	1
135	17	PAFZZ	1615-01-143-7337	97499	204-011-039-107	..TAB ASSEMBLY,TRIM.......UHH,UHE,UHV,UHX	EA	1
135	18	PAOZZ	5305-00-926-5667	80205	NAS1190-4P8L	..SCREW,SELF-LOCKING.......UHE,UHH,UHV,UHX	EA	3
135	19	PAOZZ	5310-00-187-2364	88044	AN960PD416	..WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	3
135	20	PAOZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON.......UHE,UHH,UHV,UHX	EA	4
135	21	PAOZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	V
135	22	PAOZZ	5310-00-167-0766	88044	AN970-4	..WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	V
135	23	XDOZZ	1615-00-239-3807	97499	204-011-043-5	..RETAINER.......UHE,UHH,UHV,UHX	EA	V
135	24	PAOZZ	1615-00-401-6192	97499	204-011-025-1	..WEIGHT,ROTARY WING.......UHE,UHH,UHV,UHX	EA	V
135	25	MDOZZ	1615-00-401-6190	97499	204-012-022-3	..PLATE,RETAINING.......UHE,UHH,UHV,UHX	EA	V
135	26	PAOZZ	1615-00-401-6191	97499	204-012-021-1	..WEIGHT,ROTARY WING.......UHE,UHH,UHV,UHX	EA	V
135	27	XDOZZ	5306-00-431-1138	80205	NAS428-4-46	..BOLT,MACHINE.......UHE,UHH,UHV,UHX	EA	1
135	28	XDOZZ		80205	NAS428-4-24	..BOLT,MACHINE.......UHE,UHH,UHV,UHX	EA	1
135	29	PBOZZ	5306-00-288-1361	80205	NAS428-4-10	..BOLT,MACHINE.......UHE,UHH,UHV,UHX	EA	2
135	30	PAOZZ	1615-00-401-6188	97499	205-010-202-1	..WEIGHT,TIP END.......UHE,UHH,UHV,UHX	EA	13
135	31	PAOZZ	5310-00-167-0766	88044	AN970-4	..WASHER,FLAT.......UHE,UHH,UHV,UHX	EA	4
135	32	PBOZZ	1615-00-401-6189	97499	204-012-016-1	..PLATE,ROTOR BLADE.......UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
135	33	PADZZ	1615-00-497-1969	97499	204-012-023-1	..INBOARD COVER,BLADE	UHE,UHH,UHV,UHX	EA	1
135	34	PADZZ	5305-00-889-2963	80205	NAS1190-3P10L	..SCREW,SELF-LOCKING	UHE,UHH,UHV,UHX	EA	3
135	35	PADZZ	1615-00-497-1963	97499	204-012-027-3	..WEIGHT,ROTARY WING	UHE,UHH,UHV,UHX	EA	V
135	35	PADZZ	1615-00-497-1964	97499	204-012-027-5	..WEIGHT,ROTARY WING	UHE,UHH,UHV,UHX	EA	V
135	35	PADZZ	1615-00-497-1965	97499	204-012-027-7	..WEIGHT,ROTARY WING	UHE,UHH,UHV,UHX	EA	V
135	35	PADZZ	1615-00-497-1966	97499	204-012-027-9	..WEIGHT,ROTARY WING	UHE,UHH,UHV,UHX	EA	V
135	35	PADZZ	1615-00-497-1967	97499	204-012-027-11	..WEIGHT,ROTARY WING	UHE,UHH,UHV,UHX	EA	V
135	36	PADZZ	1615-00-497-1962	97499	204-012-027-1	..WEIGHT,ROTARY WING	UHE,UHH,UHV,UHX	EA	V
135	36	PADZZ	1615-00-497-1968	97499	204-012-027-19	..WEIGHT,ROTARY WING	UHE,UHH,UHV,UHX	EA	V
135	36	PADZZ	1615-00-497-1969	97499	204-012-027-21	..WEIGHT,ROTARY WING	UHE,UHH,UHV,UHX	EA	V
135	36	PADZZ		97499	204-012-027-115	..WEIGHT,ROTARY WING	UHE,UHH,UHV,UHX	EA	V
135	37	PBOZZ	5305-00-132-1746	80205	NAS1189-3P10	..SCREW,SELF-LOCKI	UHE,UHH,UHV,UHX	EA	2
135	38	PBOZZ	5305-00-874-7065	02615	NK509-418R12	..SCREW,SELF-LOCKING	UHE,UHH,UHV,UHX	EA	3
135	39	PAOZZ	1615-00-497-1960	97499	204-011-062-1	..TIP CAP,BLADE,ROTAR	UHE,UHH,UHV,UHX	EA	1
135	40	PADZZ	5310-00-807-1475	96906	MS21042L4	..NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	2
135	41	PADZZ	5310-00-807-1469	96906	MS21042-5	..NUT,SELF-LOCKING,EX	UHE,UHH,UHV,UHX	EA	4
135	42	PADZZ	5310-00-187-2354	88044	AN960PD416	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
135	42	PAOZZ		88044	AN960PD516	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	3
135	42	PAOZZ		88044	AN960C516	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	5
135	43	PADZZ	5310-00-167-0766	88044	AN970-4	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
135	43	PAOZZ		88044	AN970-5	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	6
135	43	PAOZZ		97499	204-011-269-1	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
135	44	PADZZ	1615-00-141-0080	97499	204-011-268-3	..LOCK PLATE,RETAINER	UHE,UHH,UHV,UHX	EA	V
135	45	PADZZ	1615-00-141-0079	97499	204-011-267-3	..RETAINER,WEIGHT,ROT	UHE,UHH,UHV,UHX	EA	V
135	46	PADZZ	1615-00-141-0078	97499	204-011-266-3	..RETAINER,BALLAST,RO	UHE,UHH,UHV,UHX	EA	V
135	47	PADZZ	1615-00-495-6558	97499	204-011-025-3	..WEIGHT,MAIN ROTOR B	UHE,UHH,UHV,UHX	EA	V
135	48	PADZZ	5307-00-495-6556	97499	540-011-023-3	..STUD,CONTINUOUS THR	UHE,UHH,UHV,UHX	EA	2
135		PAODD	8145-00-691-6583	97499	204-011-250MUSC1	SHIPPING AND STORAG CONTAINER U/O PN 204-011-250-113	UHE,UHH,UHV,UHX	EA	1

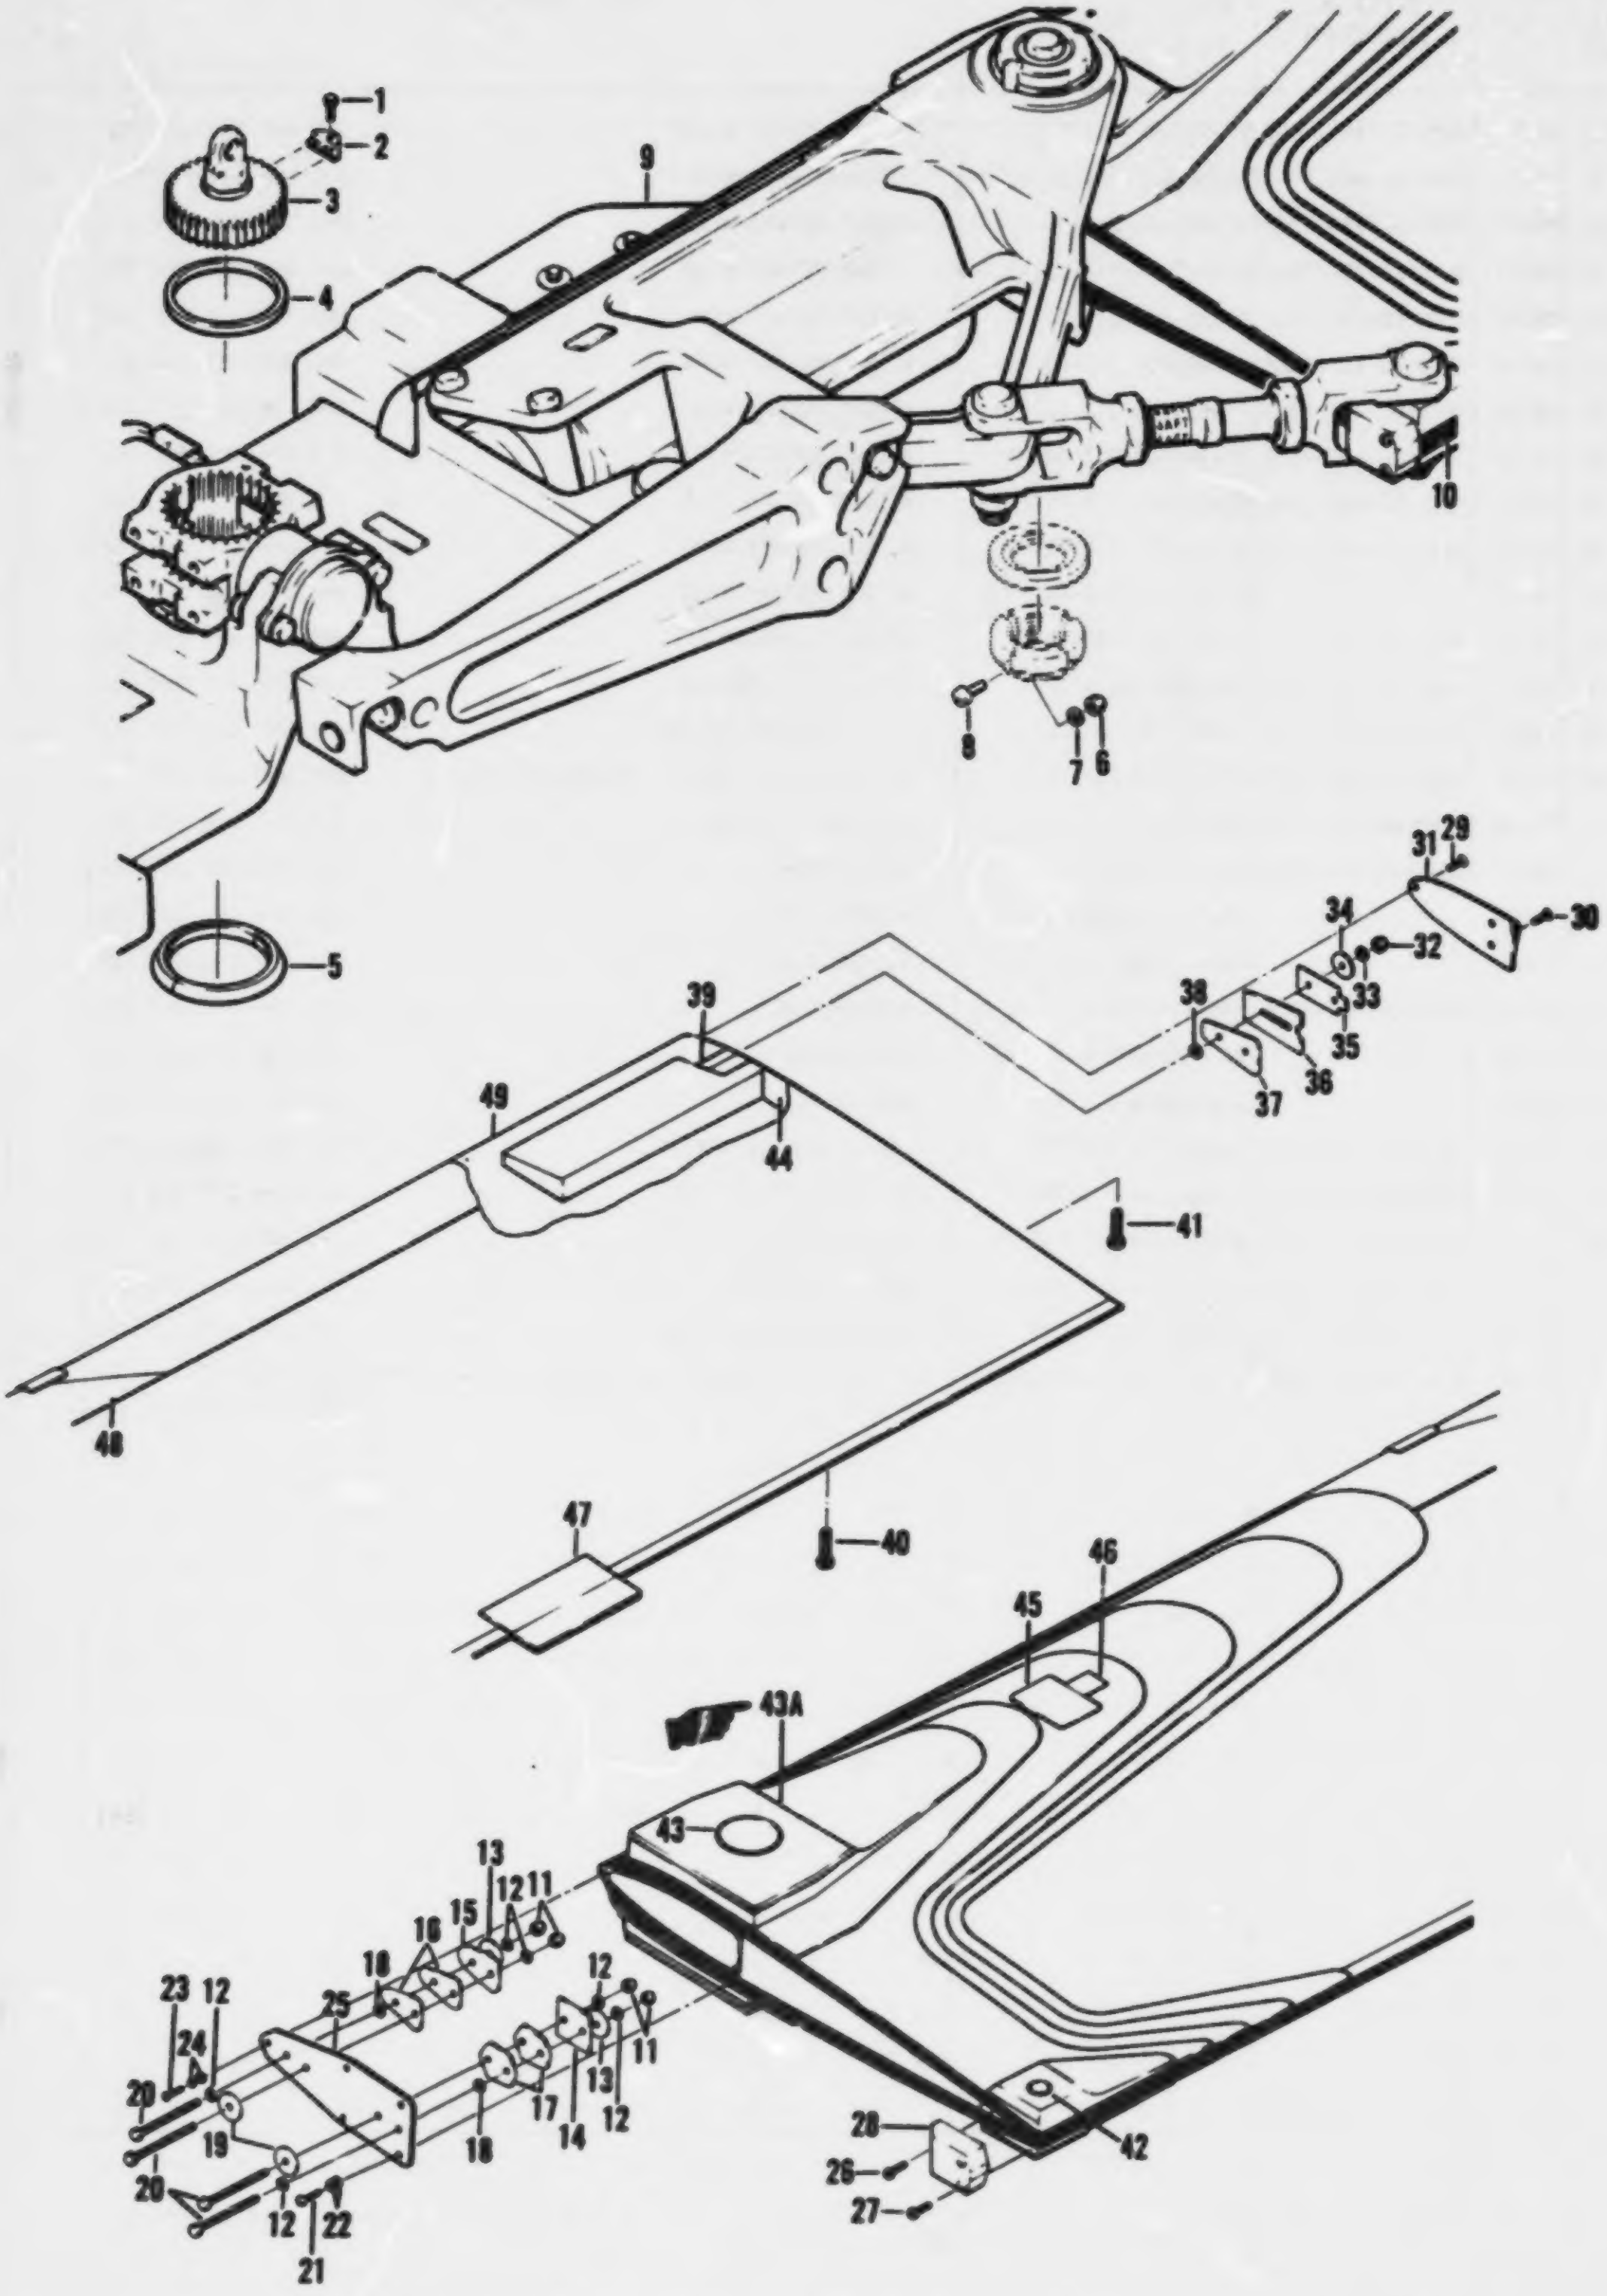
1
2
3
4
9
10
8
7
6
5
29
31
30
34
32
33
38
35
36
37
39
49
44
41
48
47
40
46
45
43A
43
13
12
11
16
15
18
23
12
24
25
12
11
20
19
13
12
17
14
18
20
12
22
21
28
42
26
27

Figure 136. Hub and Blade Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
136		A0000		97499	540-011-100-9	HUB AND BLADE ASSY USBL EFF 64-14101 & SUB...........UHC,UHM	EA	1
136	1	PAOZZ	5306-00-182-1958	88044	AN4H10A	.BOLT,MACHINE..........UHC,UHM	EA	1
136	2	PAOZZ	1615-00-625-0039	97499	204-010-132-1	.LOCK,MAST NUT,PYLON..........UHC,UHM	EA	1
136	3	PAOZZ	5310-00-624-5116	97499	204-010-481-1	.NUT,MAST..........UHC,UHM	EA	1
136	4	PAOZZ	5310-00-076-9864	97499	204-010-126-1	.WASHER,RECESSED..........UHC,UHM	EA	1
136	5	PAOZZ	1615-00-625-0038	97499	204-010-127-1	.CONE SET,TRUNNION..........UHC,UHM	EA	1
136	6	PAOZZ	5310-00-807-1473	96906	MS21042L08	.NUT,SELF-LOCKING..........UHC,UHM	EA	2
136	7	PAOZZ	5310-00-515-8058	88044	AN960-8	.WASHER,FLAT..........UHC,UHM	EA	2
136	8	PAOZZ	5305-00-860-2625	88044	AN503-8-12	.SCREW,MACHINE..........UHC,UHM	EA	3
136	9	PAODD	1615-01-017-9926	97499	540-011-101-23	.HUB,MAIN ROTOR SEE FIG.139 FOR BREAKDOWN..........UHC,UHM	EA	1
136	10	PAODD	1615-00-389-1950	97499	540-015-001-1	.BLADE,ROTARY WING..........UHC,UHM	EA	2
136	11	PADZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX WASHER,HEXAGON..........UHC,UHM	EA	6
136	12	PADZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT..........UHC,UHM	EA	85
136	13	PADZZ	5310-00-167-0767	88044	AN970-5	..WASHER,FLAT..........UHC,UHM	EA	V
136	14	PADZZ	1615-00-495-6591	97499	540-011-020-5	..RETAINER,WEIGHT,BLA MAY BE OMITTED IF NO BALANCE WEIGHTS ARE REQUIRED..........UHC,UHM	EA	1
136	15	PADZZ	1615-00-495-6590	97499	540-011-020-7	..RETAINER,WEIGHT,BLA MAY BE OMITTED IF NO BALANCE WEIGHTS ARE REQUIRED..........UHC,UHM	EA	1
136	16	PADZZ	1615-00-495-6557	97499	540-011-018-1	..WEIGHT,ROTARY WING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	V
136	17	PADZZ	1615-00-495-6558	97499	540-011-018-3	..WEIGHT,MAIN ROTOR BLADE..........UHC,UHM	EA	V
136	18	PADZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT..........UHC,UHM	EA	V
136	19	PADZZ	5310-00-167-0767	88044	AN970-5	..WASHER,FLAT..........UHC,UHM	EA	2
136	20	PBDZZ	5306-00-936-2430	80205	NAS428-5-34	..BOLT,MACHINE..........UHC,UHM	EA	4
136	21	PBDZZ	5305-00-724-3264	02615	HK525-416R8	..SCREW,SELF-LOCKING..........UHC,UHM	EA	4
136	22	PADZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT..........UHC,UHM	EA	V
136	23	PADZZ	5305-00-889-2966	80205	NAS1190-3P8L	..SCREW,SELF-LOCKING..........UHC,UHM	EA	1
136	24	PADZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT..........UHC,UHM	EA	2
136	25	PADZZ	1615-00-495-6578	97499	540-011-017-1	..COVER PLATE,BLADE,R..........UHC,UHM	EA	1
136	26	PADZZ	5305-00-104-7535	80205	NAS1635-3LE8	..SCREW,SELF-LOCKING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	1
136	27	PADZZ	5305-00-819-9665	80205	NAS1190-3P6L	..SCREW,SELF-LOCKING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	3
136	27	PADZZ	5305-00-889-2965	80205	NAS1190-3P8L	..SCREW,SELF-LOCKING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	2
136	27	PADZZ	5305-00-451-0131	80205	NAS1190-3P14L	..SCREW,SELF-LOCKING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	2
136	27	PADZZ	5305-00-889-2963	80205	NAS1190-3P10L	..SCREW,SELF-LOCKING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	2
136	27	PADZZ	5305-00-367-9919	80205	NAS1190-3P18L	..SCREW,SELF-LOCKING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	2
136	27	XDDZZ	5305-00-357-9936	80205	NAS1190-3P22L	..SCREW,SELF-LOCKING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	2
136	27	PADZZ	5305-00-842-0320	80205	NAS1190-3P12L	..SCREW,SELF-LOCKING..........UHC,UHM	EA	V
136	27	PADZZ	5305-00-410-6691	80205	NAS1190-3P16L	..SCREW,SELF-LOCKING..........UHC,UHM	EA	V
136	27	PADZZ	5305-00-357-9941	80205	NAS1190-3P20L	..SCREW,SELF-LOCKING..........UHC,UHM	EA	V
136	27	PADZZ	5305-00-357-9920	80205	NAS1190-3P24L	..SCREW,SELF-LOCKING..........UHC,UHM	EA	V
136	27	XDDZZ	5305-00-402-0124	80205	NAS1190-3P26L	..SCREW,SELF-LOCKING..........UHC,UHM	EA	V
136	28	PADZZ	1615-00-495-6568	97499	540-011-019-5	..WEIGHT,ROTARY WING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	1
136	28	PADZZ	1615-00-495-6569	97499	540-011-019-7	..WEIGHT,ROTARY WING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	1
136	28	PADZZ	1615-00-495-6560	97499	540-011-019-9	..WEIGHT,ROTARY WING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
136	28	PADZZ	1615-00-495-6571	97499	540-011-019-11	..WEIGHT,ROTARY WING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	1
136	28	PADZZ	1615-00-495-6572	97499	540-011-019-13	..WEIGHT,ROTARY WING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	1
136	28	PADZZ	1615-00-495-6574	97499	540-011-019-15	..WEIGHT,ROTARY WING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	1
136	28	PADZZ	1615-00-495-6563	97499	540-011-019-1	..WEIGHT,ROTARY WING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	1
136	28	PADZZ	1615-00-495-6565	97499	540-011-019-3	..WEIGHT,ROTARY WING USE AS REQUIRED FOR BALANCE.....UHC,UHM	EA	1
136	29	PADZZ	5305-00-208-6348	02615	NK509-10R10	..SCREW,SELF-LOCKING.....................................UHC,UHM	EA	1
136	30	PBOZZ	5305-00-208-6347	02615	NK509-416R10	..SCREW,SELF-LOCKING.....................................UHC,UHM	EA	2
136	31	PAOZZ	1615-00-495-6580	97499	540-011-025-1	..TIP CAP,BLADE,ROTAR....................................UHC,UHM	EA	1
136	32	PADZZ	5310-00-807-1476	96906	MS21042L5	..NUT,SELF-LOCKING,EX EXTENDED WASHER HEXAGON MAY BE OMITTED IF NO BALANCE WEIGHTS ARE REQUIRED ....UHC,UHM	EA	2
136	33	PADZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT MAY BE OMITTED IF NO BALANCE WEIGHTS ARE REQUIRED..UHC,UHM	EA	2
136	34	PADZZ	5310-00-167-0767	88044	AN970-5	..WASHER,FLAT USE AS REQUIRED FOR BALANCE...........UHC,UHM	EA	V
136	35	PADZZ	1615-00-495-6587	97499	540-011-027-1	..WEIGHT,MAIN ROTOR B MAY BE OMITTED IF NO BALANCE WEIGHTS ARE REQUIRED...................................UHC,UHM	EA	1
136	36	PADZZ	1615-00-495-6577	97499	540-011-028-1	..RETAINER,WEIGHT,BLA MAY BE OMITTED IF NO BALANCE WEIGHTS ARE REQUIRED ....UHC,UHM	EA	1
136	36	PADZZ	1615-00-271-9552	97499	540-011-054-1	..RETAINER,BALANCE WE MAY BE OMITTED IF NO BALANCE WEIGHTS ARE REQUIRED,RETAINER 540-011-028-1 IS REQUIRED IF RETAINER 540-011-054-1 IS INSTALLED..........................UHC,UHM	EA	1
136	37	PADZZ	1615-01-008-7745	97499	540-011-018-7	..WEIGHT,ROTARY WING USE AS REQUIRED FOR BALANCE,RPLS 1615-00-495-6559.......................................UHC,UHM	EA	23
136	38	PADZZ	5310-00-187-2399	88044	AN960PD516	..WASHER,FLAT USE AS REQUIRED FOR BALANCE...........UHC,UHM	EA	V
136	39	PADZZ	5307-00-495-6556	97499	540-011-023-3	..STUD,CONTINUOUS THR....................................UHC,UHM	EA	2
136	40	XDDZZ	5305-00-753-7077	96906	MS24621-2	..SCREW,TAPPING,THREA FORMING........................UHC,UHM	EA	1
136	41	PADZZ	5305-00-061-8226	17910	NK509C616R15	..SCREW,SELF-LOCKI.......................................UHC,UHM	EA	16
136	42	PADZZ	3120-00-783-2405	97499	204-011-023-3	..BUSHING,SLEEVE...UHC,UHM	EA	1
136	42	PADZZ	3120-00-191-2509	97499	204-011-023-5	..BUSHING,SLEEVE -0.010 IN. OVERSIZE................UHC,UHM	EA	1
136	42	PADZZ	3120-00-191-2518	97499	204-011-023-7	..BUSHING,SLEEVE -0.020 IN. OVERSIZE................UHC,UHM	EA	1
136	42	PADZZ	3120-00-191-2524	97499	204-011-023-9	..BUSHING,SLEEVE -0.030 IN. OVERSIZE................UHC,UHM	EA	1
136	43	PADZZ	3120-00-783-2836	97499	204-011-022-5	..BUSHING,SLEEVE...UHC,UHM	EA	1
136	43	PADZZ	3120-00-783-2851	97499	204-011-022-7	..BUSHING,SLEEVE -0.005 IN. OVERSIZE................UHC,UHM	EA	1
136	43	PADZZ	3120-00-783-2832	97499	204-011-022-9	..BUSHING,SLEEVE -0.010 IN. OVERSIZE................UHC,UHM	EA	1
136	43	PADZZ	3120-00-789-2826	97499	204-011-022-11	..BUSHING,SLEEVE -0.015 IN. OVERSIZE................UHC,UHM	EA	1
136	43	PADZZ	3120-00-783-2830	97499	204-011-022-13	..BUSHING,SLEEVE -0.020 IN. OVERSIZE................UHC,UHM	EA	1
136	43A	PADZZ	1615-00-495-6589	97499	540-011-032-1	..SPACER,BOX BEAM,BLA....................................UHC,UHM	EA	1
136	44	PADZZ	1615-00-982-9968	97499	540-011-016-9	..COVER,MAIN ROTOR USE DEPENDING ON FLANGE WIDTH REQUIRED ....UHC,UHM	EA	1
136	44	PBDZZ	1615-00-403-6989	97499	540-011-016-11	..FAIRING,BLADE,ROTAR USE DEPENDING ON FLANGE WIDTH REQUIRED ....UHC,UHM	EA	1
136		XADDD		97499	540-015-001-7	..BLADE ASSEMBLY...UHC,UHM	EA	1
136	45	MDDZZ	9905-00-532-6678	96906	MS27253-2	...PLATE,IDENTIFICATIO...................................UHC,UHM	EA	1
136	46	PADZZ	9905-00-912-7144	97499	100-028-1	...PLATE,IDENTIFICATIO...................................UHC,UHM	EA	1
136	47	PAFZZ	1615-00-847-7496	97499	540-011-021-1	...TRIM TAB ASSEMBLY.....................................UHC,UHM	EA	1
136	47	PAFZZ	1615-00-462-8791	97499	540-011-021-11	...TRIM TAB,BLADE,.......................................UHC,UHM	EA	1
136	48	XBDZZ	1615-00-915-6033	97499	540-011-010-7	...STRIP,MAIN ROTOR BLADE...............................UHC,UHM	EA	1
136	49	PADZZ	1615-01-166-9660	97499	204-011-010-139	..STRIP,MAIN ROTOR.......................................UHC,UHM	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
136		PAODD	8145-00-919-0176	97499	540-011-001MUSC1	SHIPPING AND STORAG CONTAINER U/O PN 540-011-001-5 .... UHC,UHM	EA	1

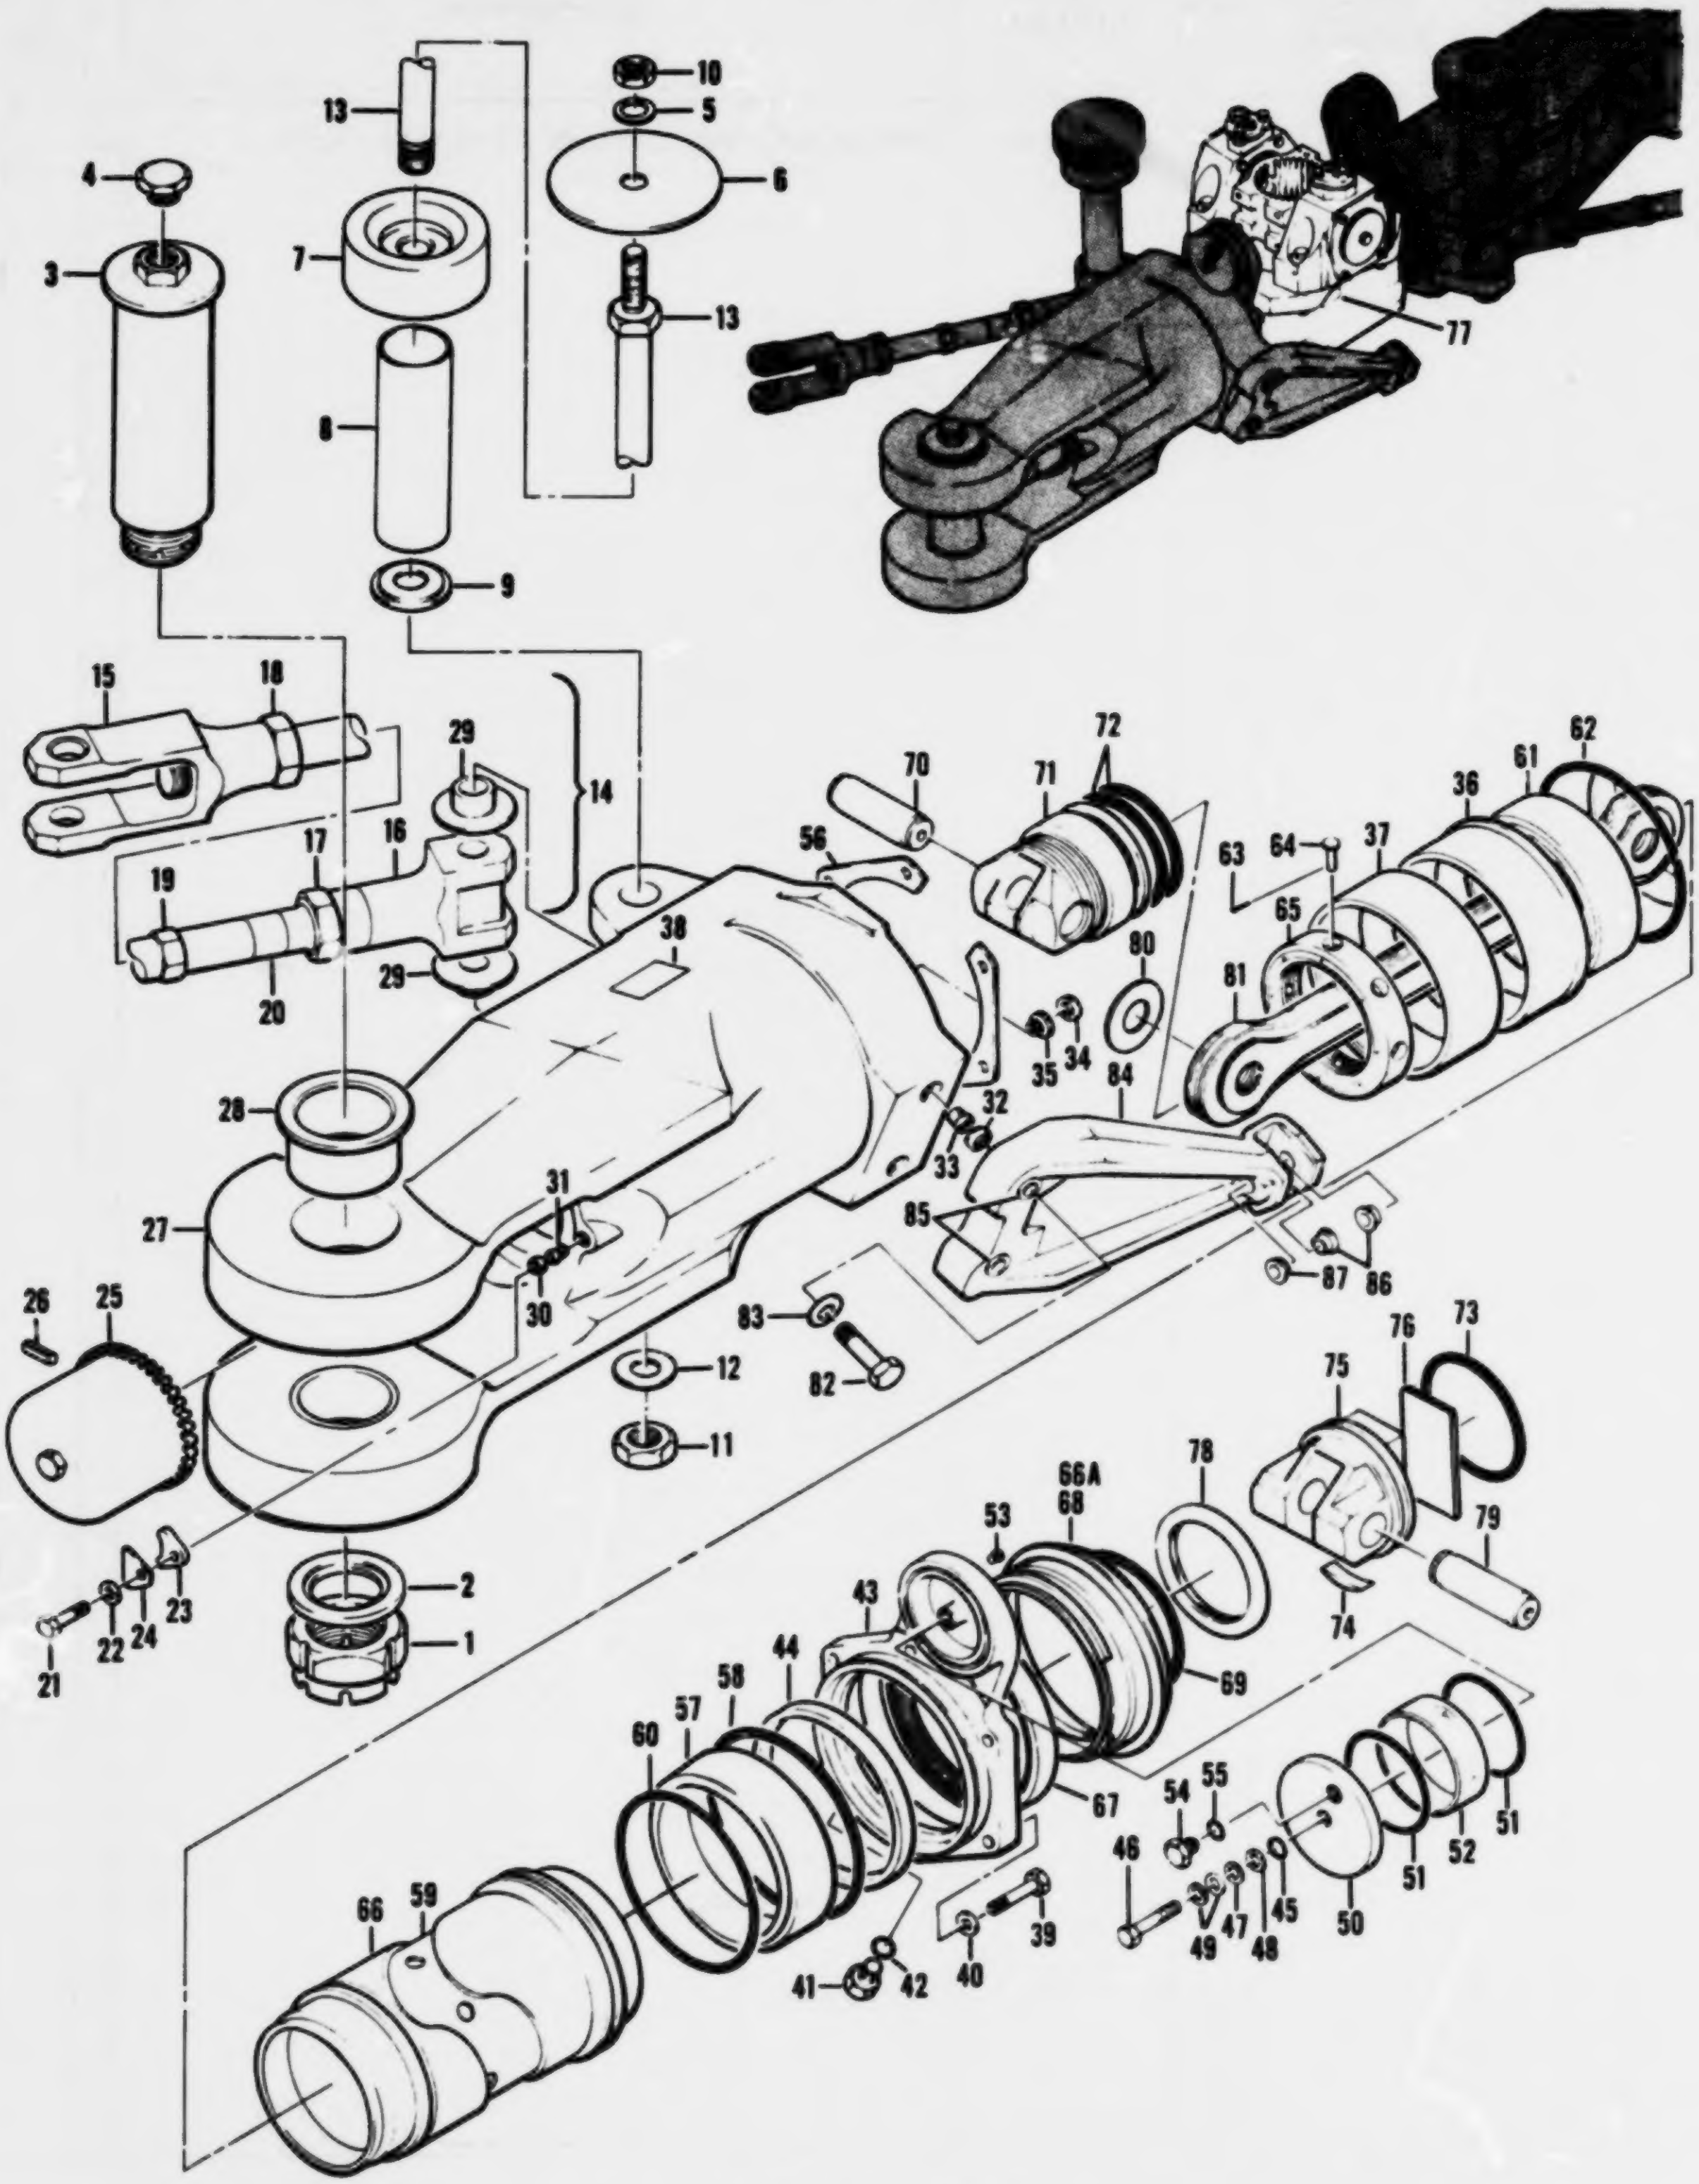
10
13
5
4
6
3
7
13
77
8
9
15
18
29
14
72
70
71
62
61
36
56
37
64
63
16
17
19
65
38
80
29
20
81
35
34
32
84
28
33
31
27
85
87
86
30
26
25
83
76
73
12
82
75
11
66A
68
78
53
79
43
2
74
24
23
22
1
21
44
69
58
57
60
67
55
54
51
52
46
39
51
66
59
45
50
49
47
48
40
41
42

Figure 137. Hub, Main Rotor

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
137		PAODD	1615-00-886-1778	97499	204-011-101-11	HUB,MAIN ROTOR SEE FIG.135 FOR NHA SEE FIG.140 FOR BALANCE OF BREAKDOWN ....UHB	EA	1
137	1	PAOZZ	5310-00-830-9737	97499	204-011-153-1	.NUT,PLAIN,ROUND........UHB	EA	2
137	2	PAOZZ	5310-00-839-0972	97499	204-011-152-1	.WASHER,RECESSED........UHB	EA	2
137	3	PAOZZ	1615-00-830-9736	97499	204-011-151-1	.BOLT ASSEMBLY,MAIN........UHB	EA	2
137	4	PAOZZ	5365-00-287-0106	88044	AN814-10L	.PLUG,MACHINE THREAD........UHB	EA	2
137	5	PAOZZ	5310-00-167-0825	88044	AN960-1016	.WASHER,FLAT........UHB	EA	V
137	6	PAOZZ	5310-00-837-6998	97499	204-011-156-1	.WASHER,FLAT........UHB	EA	2
137	7	PAOZZ	1615-00-472-7312	97499	204-011-173-3	.COUNTERWEIGHT,MAIN........UHB	EA	2
137	8	PAOZZ	5365-00-973-1107	97499	204-011-174-1	.SPACER,SLEEVE........UHB	EA	2
137	9	PAOZZ	5310-00-877-9723	97499	204-011-175-1	.WASHER,SHOULDERED AND RECESSED........UHB	EA	2
137	10	PAOZZ	5310-00-449-2381	96906	MS21245L10	.NUT,SELF-LOCKING,HE........UHB	EA	2
137	11	PAFZZ	5310-00-445-5336	96906	MS21245L14	.NUT,SELF-LOCKING,HE........UHB	EA	2
137	12	PAFZZ	5310-00-167-0827	88044	AN960-1416	.WASHER,FLAT........UHB	EA	2
137	13	PAFZZ	1615-00-856-4652	97499	204-011-172-1	.BOLT,COUNTERWEIGHT........UHB	EA	2
137	14	AFOFF	1560-00-830-9732	97499	204-011-140-1	.DRAG BRACE ASSEMBLY........UHB	EA	2
137	15	PAFZZ	5340-00-157-7846	97499	204-011-179-1	..CLEVIS,ROD END........UHB	EA	1
137	16	PAFZZ	1615-00-230-3886	97499	204-011-180-1	..FITTING,DRAG BRACE........UHB	EA	1
137	17	PAFZZ	1560-00-830-9734	97499	204-011-144-1	..NUT,DRAG BRACE........UHB	EA	1
137	18	PAFZZ	1560-00-830-9735	97499	204-011-144-3	..NUT,DRAG BRACE........UHB	EA	1
137	19	PAFFF	5306-00-830-9733	97499	204-011-143-1	..ROD,THREADED END........UHB	EA	1
137	20	PAFZZ	9905-00-115-0696	97499	204-011-146-3	...PLATE,INSTRUCTION........UHB	EA	1
137	21	PAFZZ	5306-00-182-2017	88044	AN4H5A	.BOLT,MACHINE........UHB	EA	2
137	22	PAFZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT........UHB	EA	2
137	23	PAFZZ	1615-00-670-2959	97499	204-010-526-1	.LOCK,STRAP RETAINER........UHB	EA	2
137	24	PAFZZ	1560-00-758-3675	97499	204-011-149-1	.CLAMP,HUB STRAP RET........UHB	EA	2
137	25	PAFZZ	5310-00-474-9240	97499	204-011-116-1	.NUT........UHB	EA	2
137	26	PAFZZ	5315-00-142-2341	97499	204-011-158-3	.KEY,MACHINE........UHB	EA	2
137	27	PADOO	1615-00-067-1827	97499	204-011-121-5	.GRIP ASSEMBLY,MAIN........UHB	EA	2
137	28	PADZZ	3120-00-848-6977	97499	204-010-413-29	..BUSHING,SLEEVE........UHB	EA	2
137	29	PADZZ	3120-00-848-6976	97499	204-010-413-27	..BUSHING,SLEEVE........UHB	EA	2
137	30	PADZZ	5365-00-682-5877	83324	RL28SB6	..RING,LOCK,SERRATED........UHB	EA	1
137	31	PADZZ	5340-00-200-2362	83324	RD206SB6	..INSERT,SCREW THREAD........UHB	EA	1
137	32	PADZZ	5365-00-382-6507	83324	RL38SB9	..RING,LOCK,SERRATED........UHB	EA	2
137	33	PADZZ	5340-00-710-9416	83324	RD203SB8	..INSERT,SCREW THR........UHB	EA	2
137	34	PBDZZ	5365-00-735-0196	83324	RL33SB9	..RING,LOCK,SERRATED........UHB	EA	6
137	35	PADZZ	5340-00-286-2465	83324	RAD207SB9	..INSERT,SCREW THREAD........UHB	EA	6
137	36	PADZZ	3120-00-446-6376	97499	204-011-129-1	..BUSHING,SLEEVE........UHB	EA	1
137	37	PADZZ	3130-00-898-0045	97499	204-011-130-1	..LINER,BEARING HOUSI........UHB	EA	1
137	38	PAFZZ	9905-00-060-2034	97499	100-024-1	..PLATE,IDENTIFICATIO........UHB	EA	1
137	39	XDFZZ	5306-00-182-2027	88044	AN5H10A	.BOLT,MACHINE........UHB	EA	12
137	40	PAFZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT........UHB	EA	12

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
137	41	PAOZZ	5365-00-124-3042	96906	MS24391D5L	.PLUG,MACHINE THREAD	UHB	EA	1
137	42	PCOZZ	5330-00-584-0150	80205	NAS617-5	.PACKING,PREFORMED	UHB	EA	1
137	43	PAFFF	1615-01-041-7058	97499	204-011-125-5	.PLATE ASSEMBLY	UHB	EA	2
137	44	PADZZ	5365-00-446-6375	97499	204-011-126-1	..RING,LOCK,KEYED	UHB	EA	1
137	45	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED	UHB	EA	2
137	46	PAOZZ	5306-00-182-1963	88044	AN4H15A	.BOLT,MACHINE	UHB	EA	2
137	47	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT	UHB	EA	2
137	48	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHB	EA	2
137	49	PAOZZ	5310-00-045-4007	96906	MS35338-44	.WASHER,LOCK	UHB	EA	4
137	50	PAOZZ	1615-00-624-6723	97499	204-010-507-1	.COVER,OIL RESERVOIR	UHB	EA	2
137	51	PCOZZ	5330-00-542-1422	96906	MS29561-234	.PACKING,PREFORME COMPONENT OF KIT 1615-00-078-4585	UHB	EA	4
137	52	PAOZZ	1615-00-670-7590	97499	204-010-506-1	.SIGHT GLASS,HUB	UHB	EA	2
137	53	PAOZZ	4820-00-826-6465	96906	MS35670-2	.VALVE,SAFETY RELIEF	UHB	EA	2
137	54	PBOZZ	5365-00-845-3502	96906	MS24391D6L	.PLUG,MACHINE THREAD	UHB	EA	2
137	55	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED	UHB	EA	2
137	56	PAFZZ	5365-00-758-3676	97499	204-011-162-1	.SHIM	UHB	EA	8
137	57	PADOO	3110-00-446-7575	97499	204-011-111-1	.BEARING,ROLLER,NEED	UHB	EA	2
137	58	PAFZZ	5330-00-611-3281	96906	MS29561-258	.PACKING,PREFORME COMPONENT OF KIT 1615-00-078-4585	UHB	EA	2
137	59	PADZZ	5365-00-446-6379	97499	204-011-160-1	.SPACER,SLEEVE	UHB	EA	1
137	60	PAFZZ	5330-00-691-6361	25184	160-1487	.PACKING,PREFORMED	UHB	EA	2
137	61	PADOO	3110-00-474-9232	97499	204-011-112-1	.BEARING,ROLLER,JOUR	UHB	EA	2
137	62	PAFZZ	5330-00-691-6345	25184	159-1487	.PACKING,PREFORMED	UHB	EA	2
137	63	PAFZZ	5315-00-839-2325	96906	MS24665-132	.PIN,COTTER	UHB	EA	2
137	64	PAFZZ	5315-00-812-3734	96906	MS20392-1C7	.PIN,STRAIGHT,HEADED	UHB	EA	2
137	65	XDFZZ	5310-00-446-6373	97499	204-011-124-1	.NUT,PLAIN,ROUND	UHB	EA	2
137	66	PADZZ	1615-00-898-0048	97499	204-011-159-1	.SPACER,MAIN ROTOR G	UHB	EA	2
137	66A	PAFFF	1615-00-201-3782	97499	204-012-116-3	.SHIELD ASSEMBLY,MAI	UHB	EA	1
137	67	PAFZZ	5330-00-753-4409	97499	204-011-131-5	.SEAL	UHB	EA	2
137	68	PAFZZ	1615-00-865-7914	97499	204-012-118-1	..SHIELD,ROTARY WING	UHB	EA	1
137	69	PCFZZ	5330-00-726-1236	96906	MS29561-248	.PACKING,PREFORME	UHB	EA	2
137	70	PAFZZ	5315-00-834-1418	97499	204-012-104-5	.PIN ASSEMBLY,STRAP	UHB	EA	2
137	71	PAFZZ	1615-00-474-9139	97499	204-011-115-1	.FITTING,STRAP RETEN	UHB	EA	2
137	72	PAFZZ	5330-00-726-4153	96906	MS29561-237	.PACKING,PREFORMED COMPONENT OF KIT 1615-00-078-4585	UHB	EA	4
137	73	PAFZZ	5330-00-725-0758	96906	MS29561-240	.PACKINGPREFORMED COMPONENT OF KIT 1615-00-078-4585	UHB	EA	2
137	74	PAFZZ	1615-00-758-2828	97499	204-011-164-1	.STOP,INBOARD FITTIN COMPONENT OF KIT 1615-00-078-4585	UHB	EA	2
137	75	PAFZZ	1615-00-980-9549	97499	204-011-114-3	.FITTING ASSEMBLY,HU	UHB	EA	2
137	76	XDOZZ	1615-00-856-9367	97499	204-011-139-1	..PLATE,FITTING,MAIN	UHB	EA	1
137	77	PADZZ	9905-00-532-2497	96906	MS27253-1	.PLATE,IDENTIFICATIO	UHB	EA	1
137	78	PAFZZ	5365-00-446-6372	97499	204-011-123-1	.SPACER,RING	UHB	EA	2
137	79	PAFZZ	5315-00-834-1418	97499	204-012-104-5	.PIN ASSEMBLY,STRAP	UHB	EA	2
137	80	PADZZ	5365-00-202-8647	97499	120-007C68-36	.SHIM	UHB	EA	8
137	81	PADZZ	1615-00-474-9137	97499	204-011-113-1	.STRAP SET,MAIN ROTO	UHB	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
137	82	XDFZZ		88044	AN6H22	.BOLT,MACHINE .... UHB	EA	4
137	83	PAFZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT .... UHB	EA	4
137	84	PAFFF	1615-00-088-3887	97499	204-011-120-5	.PITCH HORN ASSEMBLY .... UHB	EA	2
137	85	PAFZZ	3120-00-837-1527	97499	204-010-170-5	..BUSHING,SLEEVE .... UHB	EA	2
137	86	PAFZZ	3120-00-839-5863	97499	204-010-170-7	..BUSHING,SLEEVE .... UHB	EA	2
137	87	PAFZZ	3120-00-984-5761	97499	204-010-170-9	..BUSHING,SLEEVE .... UHB	EA	1

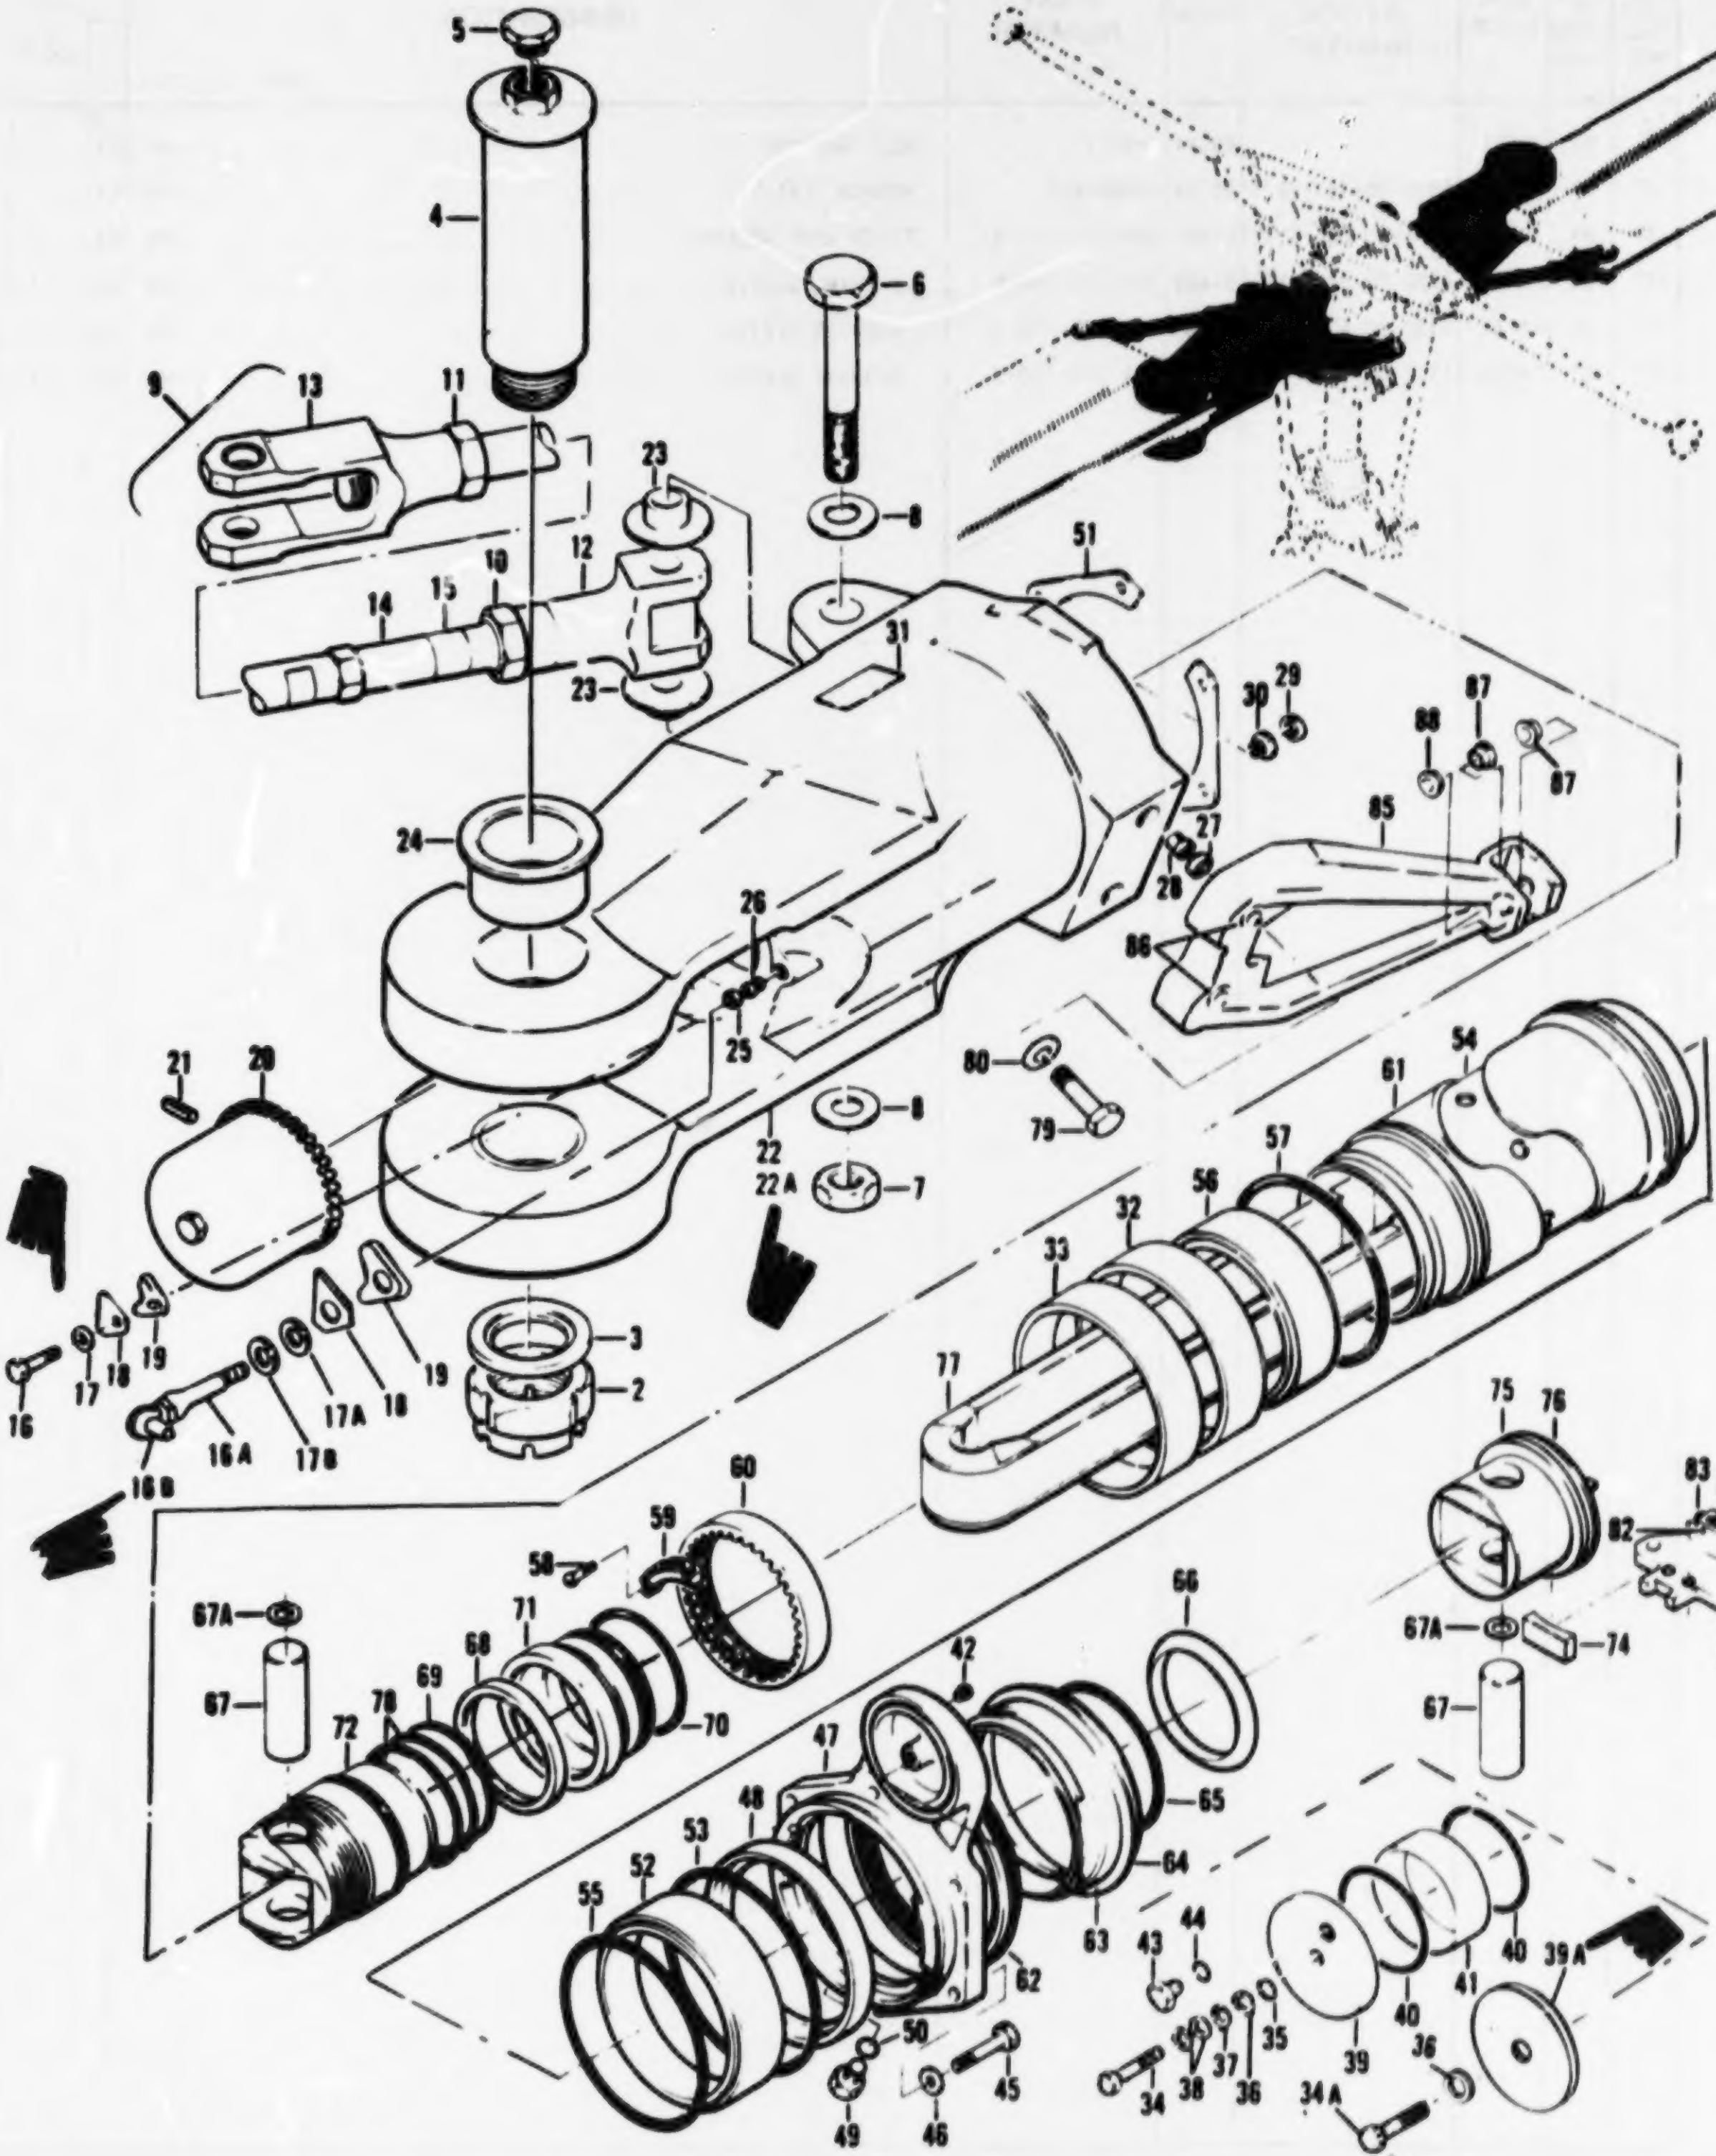
5
4
6
9
13
11
8
23
12
10
15
14
23
51
31
30
29
88
87
87
24
27
28
85
26
86
25
21
20
80
8
54
61
79
22
22 A
7
57
56
32
33
3
2
16
17
18
19
17A
18
19
16A
17B
16B
77
75
76
83
84
82
81
60
59
58
67A
66
42
67A
74
67
71
68
69
70
78
72
67
47
65
48
53
64
52
55
62
63
43
44
40
39A
41
40
39
50
45
34
38
37
36
35
36
34A
49
46

Figure 138. Hub Assembly, Main Rotor

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 05 ROTORS			
138		PAODD	1615-01-056-4550	97499	204-012-101-31	HUB ASSEMBLY, MAIN R SEE FIG. 135 FOR NHA. SEE FIG 140 FOR BALANCE OF BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
138		PAODD	1615-01-261-0570	97499	204-012-101-137	HUB, MAIN ROTOR SEE FIG. 135 FOR NHA SEE FIG. 140 FOR BALANCE OF BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
138		PAODD	1615-01-237-0512	97499	204-012-101-139	HUB ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
138		PAODD	1615-01-270-2982	97499	204-012-101-141	HUB ASSY, MAIN ROTOR SEE FIG. 135 FOR NHA SEE FIG. 140 FOR BALANCE OF BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
138	2	PAOZZ	5310-00-830-9737	97499	204-011-153-1	.NUT, PLAIN, ROUND	UHE,UHH,UHV,UHX	EA	2
138	3	PAOZZ	5310-00-839-0972	97499	204-011-152-1	.WASHER, RECESSED	UHE,UHH,UHV,UHX	EA	2
138	4	PAODD	1615-00-830-9736	97499	204-011-151-1	.BOLT ASSEMBLY, MAIN	UHE,UHH,UHV,UHX	EA	2
138	5	PAOZZ	5365-00-287-0106	88044	AN814-10L	.PLUG, MACHINE THREAD	UHE,UHH,UHV,UHX	EA	2
138	6	PAFZZ	5306-00-768-7506	97499	204-011-166-3	.BOLT, SHEAR	UHE,UHH,UHV,UHX	EA	2
138	7	PAFZZ		80205	NAS1022-A14	.NUT, SELF-LOCKING, HE	UHE,UHH,UHV,UHX	EA	2
138	8	PAFZZ	5310-00-167-0827	88044	AN960-1416	.WASHER, FLAT	UHE,UHH,UHV,UHX	EA	2
138	9	AFOZZ	1560-00-830-9732	97499	204-011-140-1	.DRAG BRACE ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
138	10	PAFZZ	1560-00-830-9734	97499	204-011-144-1	..NUT, DRAG BRACE	UHE,UHH,UHV,UHX	EA	1
138	11	PAFZZ	1560-00-830-9735	97499	204-011-144-3	..NUT, DRAG BRACE	UHE,UHH,UHV,UHX	EA	1
138	12	PAFZZ	1615-00-230-3886	97499	204-011-180-1	..FITTING, DRAG BRACE	UHE,UHH,UHV,UHX	EA	1
138	13	PAFZZ	5340-00-157-7846	97499	204-011-179-1	..CLEVIS, ROD END	UHE,UHH,UHV,UHX	EA	1
138	14	PAFFF	5306-00-830-9733	97499	204-011-143-1	..ROD, THREADED END	UHE,UHH,UHV,UHX	EA	1
138	15	PAFZZ	9905-00-115-0696	97499	204-011-146-3	...PLATE, INSTRUCTION	UHE,UHH,UHV,UHX	EA	1
138	16	PAFZZ	5306-00-291-8252	88044	AN6H7A	.BOLT, MACHINE USBL ON 204-012-101-31 AND - 137	UHE,UHH,UHV,UHX	EA	2
138	16A	PAFZZ		97499	204-612-001-101	.BOLT, MACHINE USBL ON PN 204-012-101-139, -141	UHE,UHH,UHV,UHX	EA	2
138	16B	PAFZZ	6730-00-050-4207	96906	MS15001-4	.FITTING USBL ON PN 204-012-101-139, -141	UHE,UHH,UHV,UHX	EA	2
138	17	PAFZZ	5310-00-141-1795	88044	AN960-416	.WASHER, FLAT USBL ON PN 204-012-101-31, -137	UHE,UHH,UHV,UHX	EA	2
138	17A	PAFZZ	5310-00-167-0835	88044	AN960-416L	.WASHER, FLAT USBL ON PN 204-012-101-139, -141	UHE,UHH,UHV,UHX	EA	2
138	17B	PAFZZ	5310-00-596-1766	96906	MS20002C4	.WASHER, FLAT USBL ON PN 204-012-101-139, -141	UHE,UHH,UHV,UHX	EA	2
138	18	PAFZZ	1560-00-758-3675	97499	204-011-149-1	.CLAMP, HUB STRAP RET	UHE,UHH,UHV,UHX	EA	2
138	19	PAFZZ	1615-00-670-2959	97499	204-010-526-1	.LOCK, STRAP RETAINER	UHE,UHH,UHV,UHX	EA	2
138	20	PAFZZ	5310-00-474-9240	97499	204-011-116-1	.NUT	UHE,UHH,UHV,UHX	EA	2
138	21	PAFZZ	5315-00-142-2341	97499	204-011-158-3	.KEY, MACHINE	UHE,UHH,UHV,UHX	EA	2
138	22	PADDD	1615-00-057-1827	97499	204-011-121-5	.GRIP ASSEMBLY, MAIN USBL ON 204-012-101-31 AND -137	UHE,UHH,UHV,UHX	EA	2
138	22A	PADDD	1615-01-257-6237	97499	204-011-121-113	.GRIP ASSEMBLY, MAIN USBL ON 204-012-101-139 AND -141	UHE,UHH,UHV,UHX	EA	2
138	23	PADZZ	5120-00-848-5976	97499	204-010-413-27	..BUSHING, SLEEVE	UHE,UHH,UHV,UHX	EA	2
138	24	PADZZ	5120-00-848-4977	97499	204-010-413-29	..BUSHING, SLEEVE	UHE,UHH,UHV,UHX	EA	2
138	25	PADZZ	5365-00-682-5877	83324	KL20888	..RING, LOCK, SERRATED	UHE,UHH,UHV,UHX	EA	1
138	26	PADZZ	5340-00-200-2362	83324	KD20688	..INSERT, SCREW THREAD	UHE,UHH,UHV,UHX	EA	1
138	27	PADZZ	5365-00-382-6607	83324	KL38889	..RING, LOCK, SERRATED	UHE,UHH,UHV,UHX	EA	2
138	28	PADZZ	5340-00-710-9416	83324	KD20888	..INSERT, SCREW THR	UHE,UHH,UHV,UHX	EA	2
138	29	PBDZZ	5365-00-735-0196	83324	KL33889	..RING, LOCK, SERRATED	UHE,UHH,UHV,UHX	EA	6

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
138	30	PADZZ	5340-00-286-2486	83324	RAD207589	..INSERT,SCREW THREAD	UHE,UHH,UHV,UHX	EA	8
138	31	PAFZZ	9905-00-080-2034	97499	100-024-1	..PLATE,IDENTIFICATIO	UHE,UHH,UHV,UHX	EA	1
138	32	PADZZ	3120-00-446-6376	97499	204-011-129-1	..BUSHING,SLEEVE	UHE,UHH,UHV,UHX	EA	1
138	33	PADZZ	3120-00-898-0045	97499	204-011-130-1	..LINER,BEARING HOUSI	UHE,UHH,UHV,UHX	EA	1
138	34	PADZZ	5306-00-182-1983	88044	AN4H15A	.BOLT,MACHINE USBL ON 204-012-101-31 AND -137	UHE,UHH,UHV,UHX	EA	2
138	34A	PADZZ	5306-00-182-2016	88044	AN4H-8A	.BOLT,MACHINE USBL ON 204-012-101-139 AND -141	UHE,UHH,UHV,UHX	EA	2
138	35	PADZZ	5330-00-166-0989	81349	MS3248/1-010	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	4
138	36	PADZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT USBL ON 204-012-101-31 AND -137	UHE,UHH,UHV,UHX	EA	2
138	37	PADZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT USBL ON 204-012-101-31 AND -137	UHE,UHH,UHV,UHX	EA	2
138	38	PADZZ	5310-00-582-5965	96906	MS35338-44	.WASHER,LOCK USBL ON 204-012-101-31 AND -137	UHE,UHH,UHV,UHX	EA	4
138	39	PADZZ	1615-00-624-6723	97499	204-010-607-1	.COVER,OIL RESERVOIR USBL ON 204-012-101-31 AND -137	UHE,UHH,UHV,UHX	EA	2
138	39A	PADZZ	5310-00-243-0489	97499	204-012-127-101	.COVER,OIL RESERVOIR USBL ON 204-012-101-139 AND -141	UHE UHH,UHV,UHX	EA	2
138	40	PADZZ	5330-00-165-1952	81349	MS3248-1-234	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	4
138	41	PADZZ	1615-00-873-2260	97499	204-010-606-5	.SIGHT GLASS,TRANSMI	UHE,UHH,UHV,UHX	EA	2
138	42	PADZZ	4820-00-826-6486	96906	MS35670-2	.VALVE,SAFETY RELIEF USBL ON 204-012-101-31 ANC -137	UHE,UHH,UHV,UHX	EA	2
138	43	PBOZZ	5365-00-846-3502	96906	MS24391D6L	.PLUG,MACHINE THREAD USBL ON 204-012-101-31 AND -137	UHE,UHH,UHV,UHX	EA	2
138	44	PADZZ	5330-00-166-0990	81349	MS3248-1-014	.PACKING,PREFORMED USBL ON 204-012-101-31 AND -137	UHE,UHH,UHV,UHX	EA	2
138	45	XDFZZ	5306-00-182-2027	88044	AN6H10A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	12
138	46	PAFZZ	5310-00-187-2399	88044	AN960PD616	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	12
138	47	PADDD	1615-01-041-7058	97499	204-011-125-9	.PLATE ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
138	48	PADZZ	5365-00-446-6375	97499	204-011-128-1	..RING,LOCK,KEYED	UHE,UHH,UHV,UHX	EA	1
138	49	PADZZ	5365-00-124-3042	96906	MS24391D6L	.PLUG,MACHINE THREAD	UHE,UHH,UHV,UHX	EA	2
138	50	PADZZ	5330-00-166-0988	81349	MS3248-1-013	.PACKING,PREFORMED USBL ON 204-012-101-31 AND -137	UHE,UHH,UHV,UHX	EA	2
138	51	PADZZ	5365-00-758-3676	97499	204-011-182-1	.SHIM	UHE,UHH,UHV,UHX	EA	8
138	52	PADDD	3110-00-446-7575	97499	204-011-111-1	.BEARING,ROLLER NEED	UHE,UHH,UHV,UHX	EA	2
138	53	PADZZ	5330-00-167-6141	81349	MS3248-1-258	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
138	54	PADZZ	5365-00-446-6379	97499	204-011-160-1	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	2
138	55	PADZZ	5330-00-005-0482	81349	MS3248-1-160	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
138	56	PADZZ	3110-00-474-9232	97499	204-011-112-1	.BEARING,ROLLER,JOUR	UHE,UHH,UHV,UHX	EA	2
138	57	PADZZ	5330-00-165-1936	81349	MS3248-1-159	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
138	58	PADZZ	5306-00-271-7778	88044	AN503-8-10	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
138	59	PADZZ	1615-00-757-4857	97499	204-012-113-3	.LOCKPLATE,MAIN ROTO	UHE,UHH,UHV,UHX	EA	2
138	60	PADZZ	5310-00-142-2449	97499	204-012-106-1	.NUT,PLAIN,INTERNAL	UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
138	61	PADZZ	1615-00-898-0048	97499	204-011-139-1	.SPACER, MAIN ROTOR G.	UHE,UHH,UHV,UHX	EA	2
138	62	PAFZZ	5330-00-753-4409	97499	204-011-131-107	.SEAL.	UHE,UHH,UHV,UHX	EA	2
138	63	PAFZZ	1615-00-201-3782	97499	204-012-116-3	.SHIELD ASSEMBLY, MAI	UHE,UHH,UHV,UHX	EA	1
138	64	PAFZZ	1615-00-865-7914	97499	204-012-118-1	..SHIELD, ROTARY WING.	UHE,UHH,UHV,UHX	EA	1
138	65	PAFZZ	5330-00-165-1965	81349	M83248-1-248	.PACKING, PREFORMED.	UHE,UHH,UHV,UHX	EA	2
138	66	PAFZZ	5365-00-446-6372	97499	204-011-123-1	.SPACER, RING.	UHE,UHH,UHV,UHX	EA	2
138	67	PAFZZ	5315-00-834-1418	97499	204-012-104-5	.PIN, STRAIGHT, HEADLE	UHE,UHH,UHV,UHX	EA	2
138	67A	PAFZZ	5310-00-184-8976	88044	AN960PD816L	..WASHER, FLAT.	UHE,UHH,UHV,UHX	EA	4
138	68	PAFZZ	5330-00-916-2472	97820	S12561-341	.PACKING, PREFORMED (USE UNTIL EXHAUSTED) (RPL BY S32979-341G99).	UHE,UHH,UHV,UHX	EA	2 2
138	68	PAFZZ	5330-01-280-4972	97820	S32979-341G99	.PACKING, PREFORMED REPLACES P/N S12561-341.	UHE,UHH,UHV,UHX	EA	2
138	69	PAFZZ	5330-00-167-5160	81349	M83248-1-341	.PACKING, PREFORMED.	UHE,UHH,UHV,UHX	EA	2
138	70	PAFZZ	5330-00-165-1956	81349	M83248-1-238	.PACKING, PREFORMED.	UHE,UHH,UHV,UHX	EA	2
138	71	PAFZZ	1615-00-200-8060	97499	204-012-107-1	.SLEEVE, SEAL ROTOR.	UHE,UHH,UHV,UHX	EA	2
138	72	PAFZZ	1615-00-200-7454	97499	204-012-103-1	.FITTING, HUB ASSY.	UHE,UHH,UHV,UHX	EA	2
138	74	PAFZZ	1560-00-757-1469	97499	204-012-108-1	.STOP, INBOARD FITTIN.	UHE,UHH,UHV,UHX	EA	2
138	75	PAFZZ	1615-00-848-4888	97499	204-012-102-5	.FITTING ASSEMBLY, HE.	UHE,UHH,UHV,UHX	EA	2
138	76	PAFZZ	5330-00-165-1958	81349	M83248-1-240	.PACKING, PREFORMED.	UHE,UHH,UHV,UHX	EA	2
138	77	PAFZZ	1615-01-063-4016	97499	204-012-122-5	.STRAP ASSEMBLY	UHE,UHH,UHV,UHX	EA	2
138	77	PAFZZ		97499	204-310-101-101	.STRAP ASSEMBLY...ALTERNATE FOR PN 204-012-122-5. DO NOT INTERMIX -5, -101. STRAPS. USE -5 OR -101 IN PAIRS WHEN REPLACING STRAPS.		EA	
138	78	PAFZZ	5330-00-165-1955	81349	M83248-1-237	.PACKING, PREFORMED.	UHE,UHH,UHV,UHX	EA	4
138	79	PAFZZ	5306-00-638-5765	88044	AN6H22A	.BOLT, MACHINE.	UHE,UHH,UHV,UHX	EA	4
138	80	PAFZZ	5310-00-167-0821	88044	AN960-616	.WASHER, FLAT.	UHE,UHH,UHV,UHX	EA	4
138	81	PAFZZ	1560-00-200-7815	97499	204-012-105-1	.STOP ASSEMBLY, STAT USBL ON 204-012-101-31,-139.	UHE,UHH,UHV,UHX	EA	2
138	82	PAFZZ	5315-00-845-9890	96906	MS16562-199	..PIN, SPRING.	UHE,UHH,UHV,UHX	EA	1
138	83	PAFZZ		97499	204-012-110-1	..BOLT, SPECIAL.	UHE,UHH,UHV,UHX	EA	1
138	84	PAFZZ	3020-00-225-5086	97499	204-012-109-1	..GEAR, WORM.	UHE,UHH,UHV,UHX	EA	1
138	85	PAFFF	1615-00-085-3887	97499	204-011-120-5	.PITCH HORN ASSEMBLY ROTOR.	UHE,UHH,UHV,UHX	EA	2
138	86	PADZZ	3120-00-837-1527	97499	204-010-170-5	..BUSHING, SLEEVE.	UHE,UHH,UHV,UHX	EA	2
138	87	PADZZ	3120-00-839-5863	97499	204-010-170-7	..BUSHING, SLEEVE.	UHE,UHH,UHV,UHX	EA	2
138	88	PADZZ	3120-00-986-5761	97499	204-010-170-9	..BUSHING, SLEEVE.	UHE,UHH,UHV,UHX	EA	1

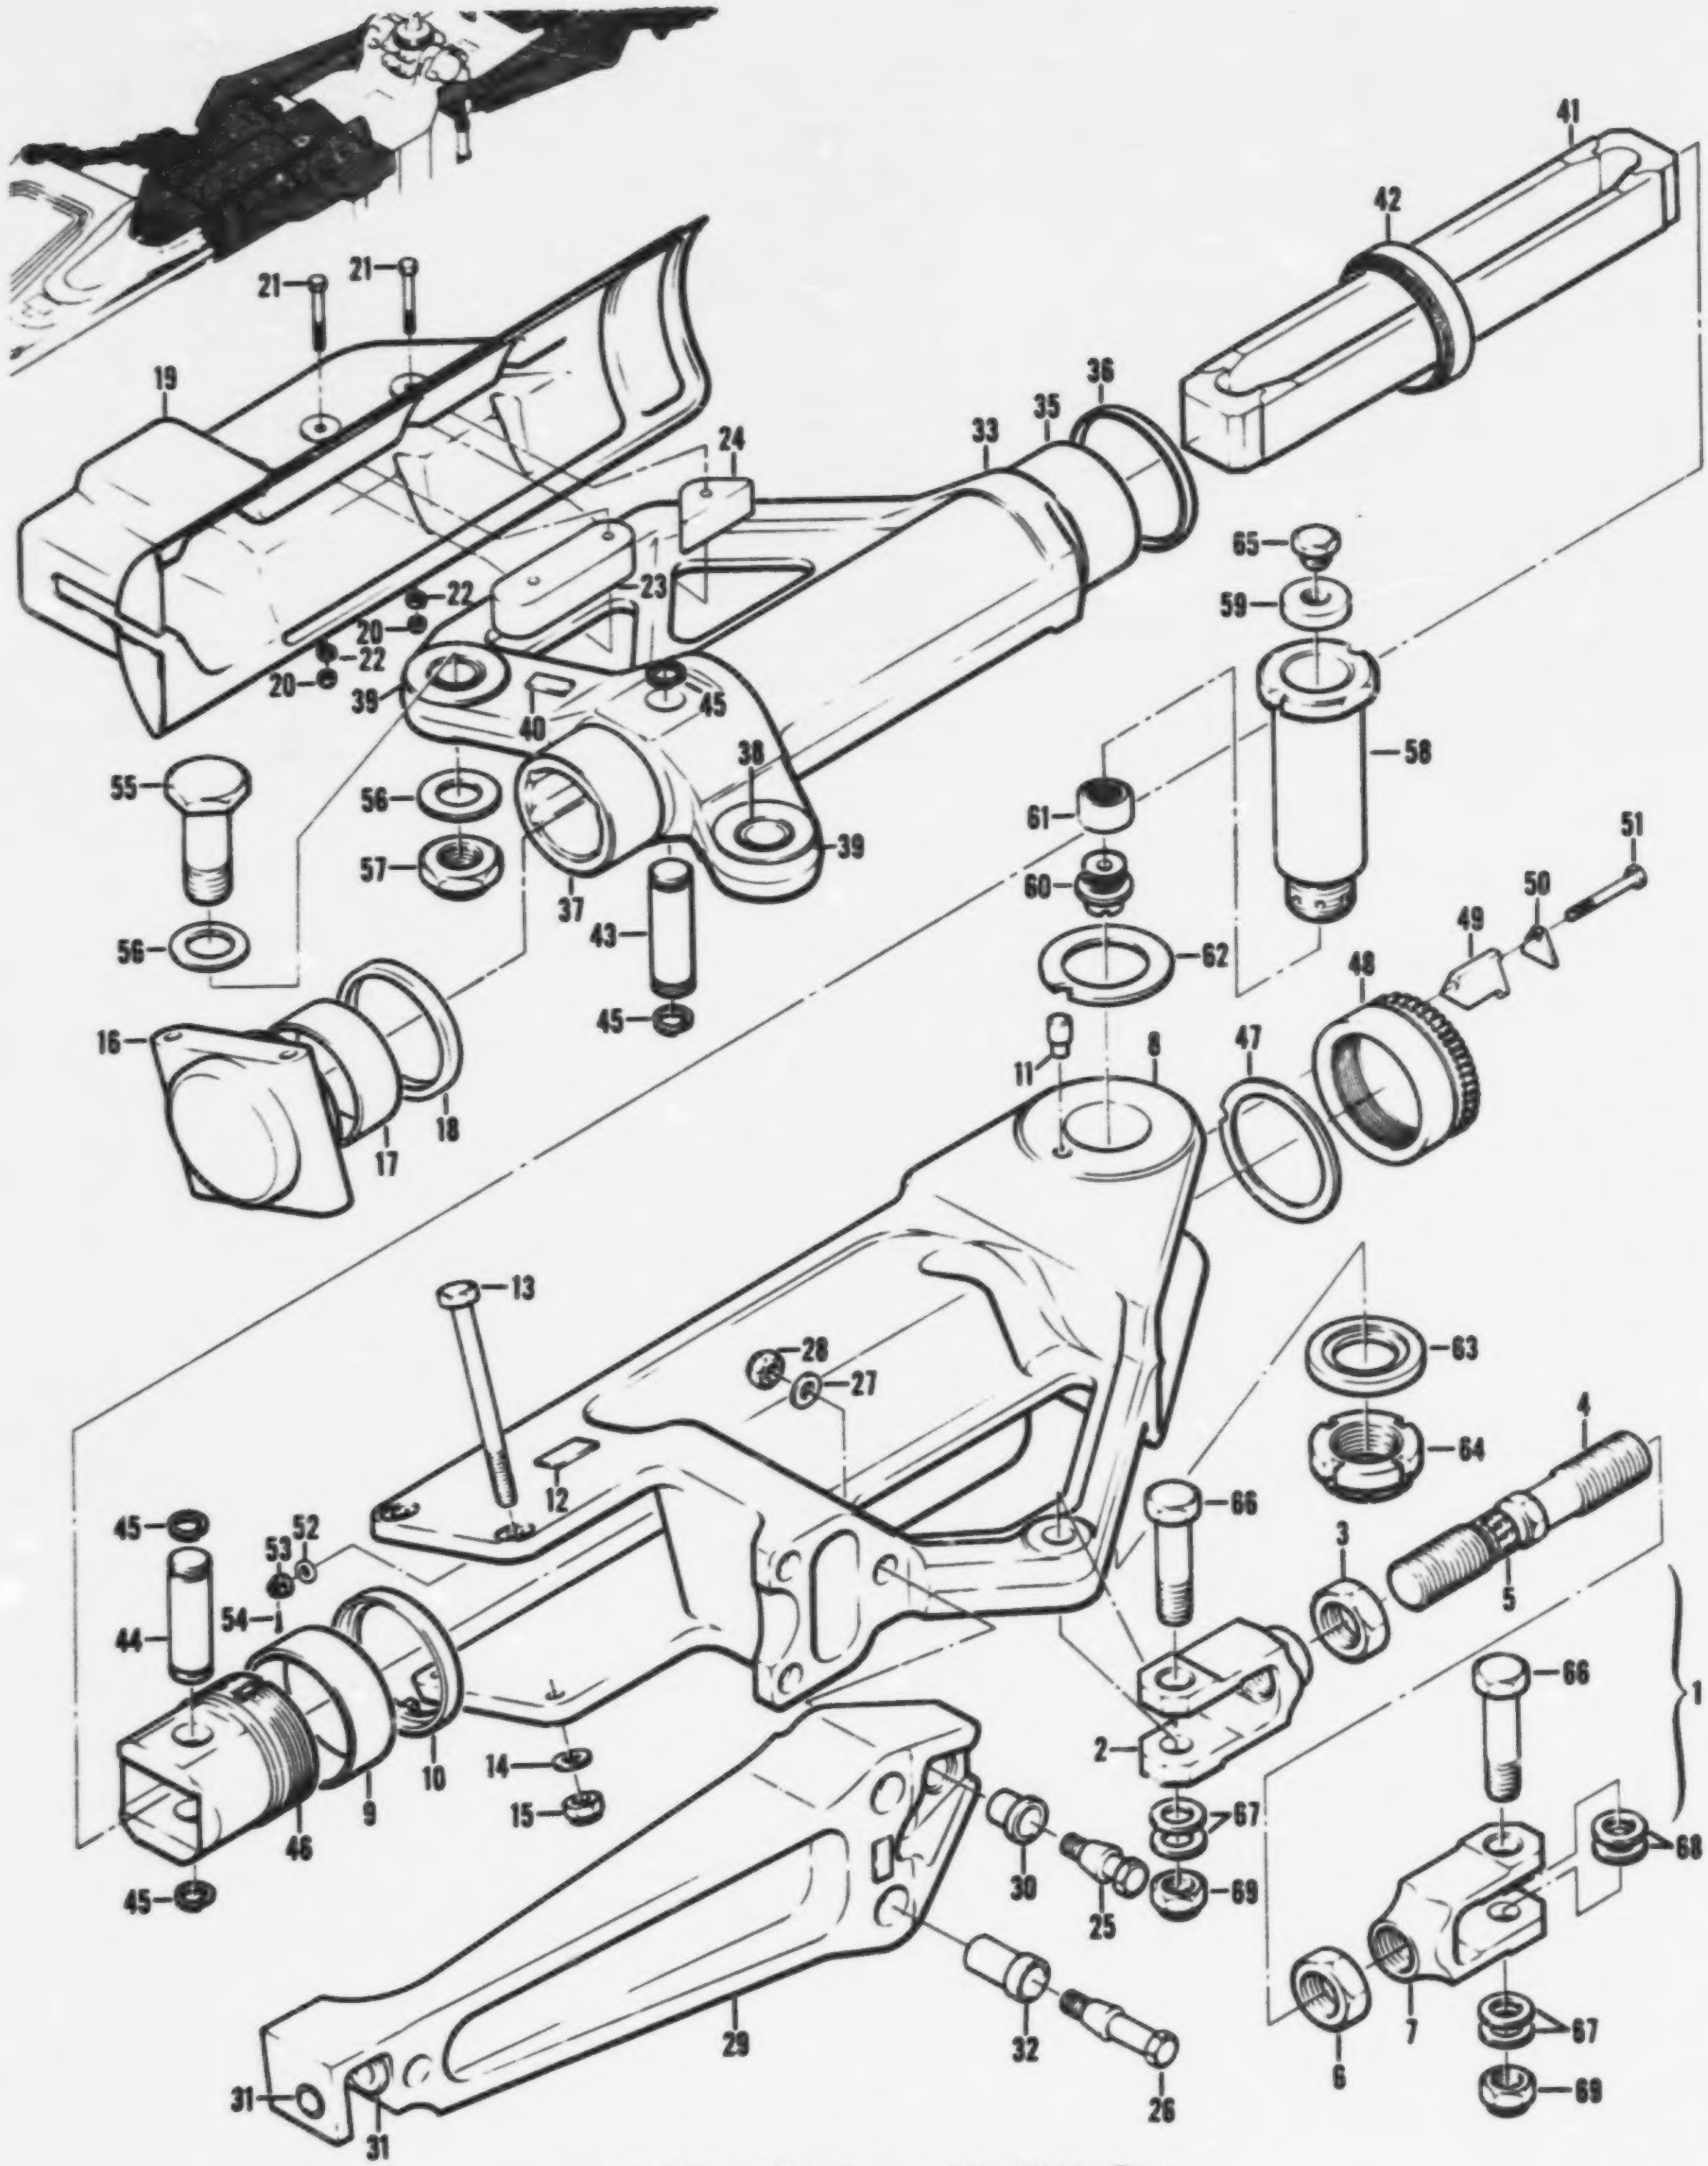
41
42
21
21
36
35
33
19
24
65
22
23
59
20
22
20
39
45
40
58
38
55
56
61
57
39
51
60
37
50
49
43
62
56
48
45
16
11
8
47
17
18
13
63
28
27
64
4
12
66
45
52
53
3
54
44
5
66
2
1
10
14
9
15
67
46
68
30
45
25
69
29
32
67
6
7
31
26
69
31

Figure 139. Hub Assembly, Main Rotor
(Sheet 1 of 2)

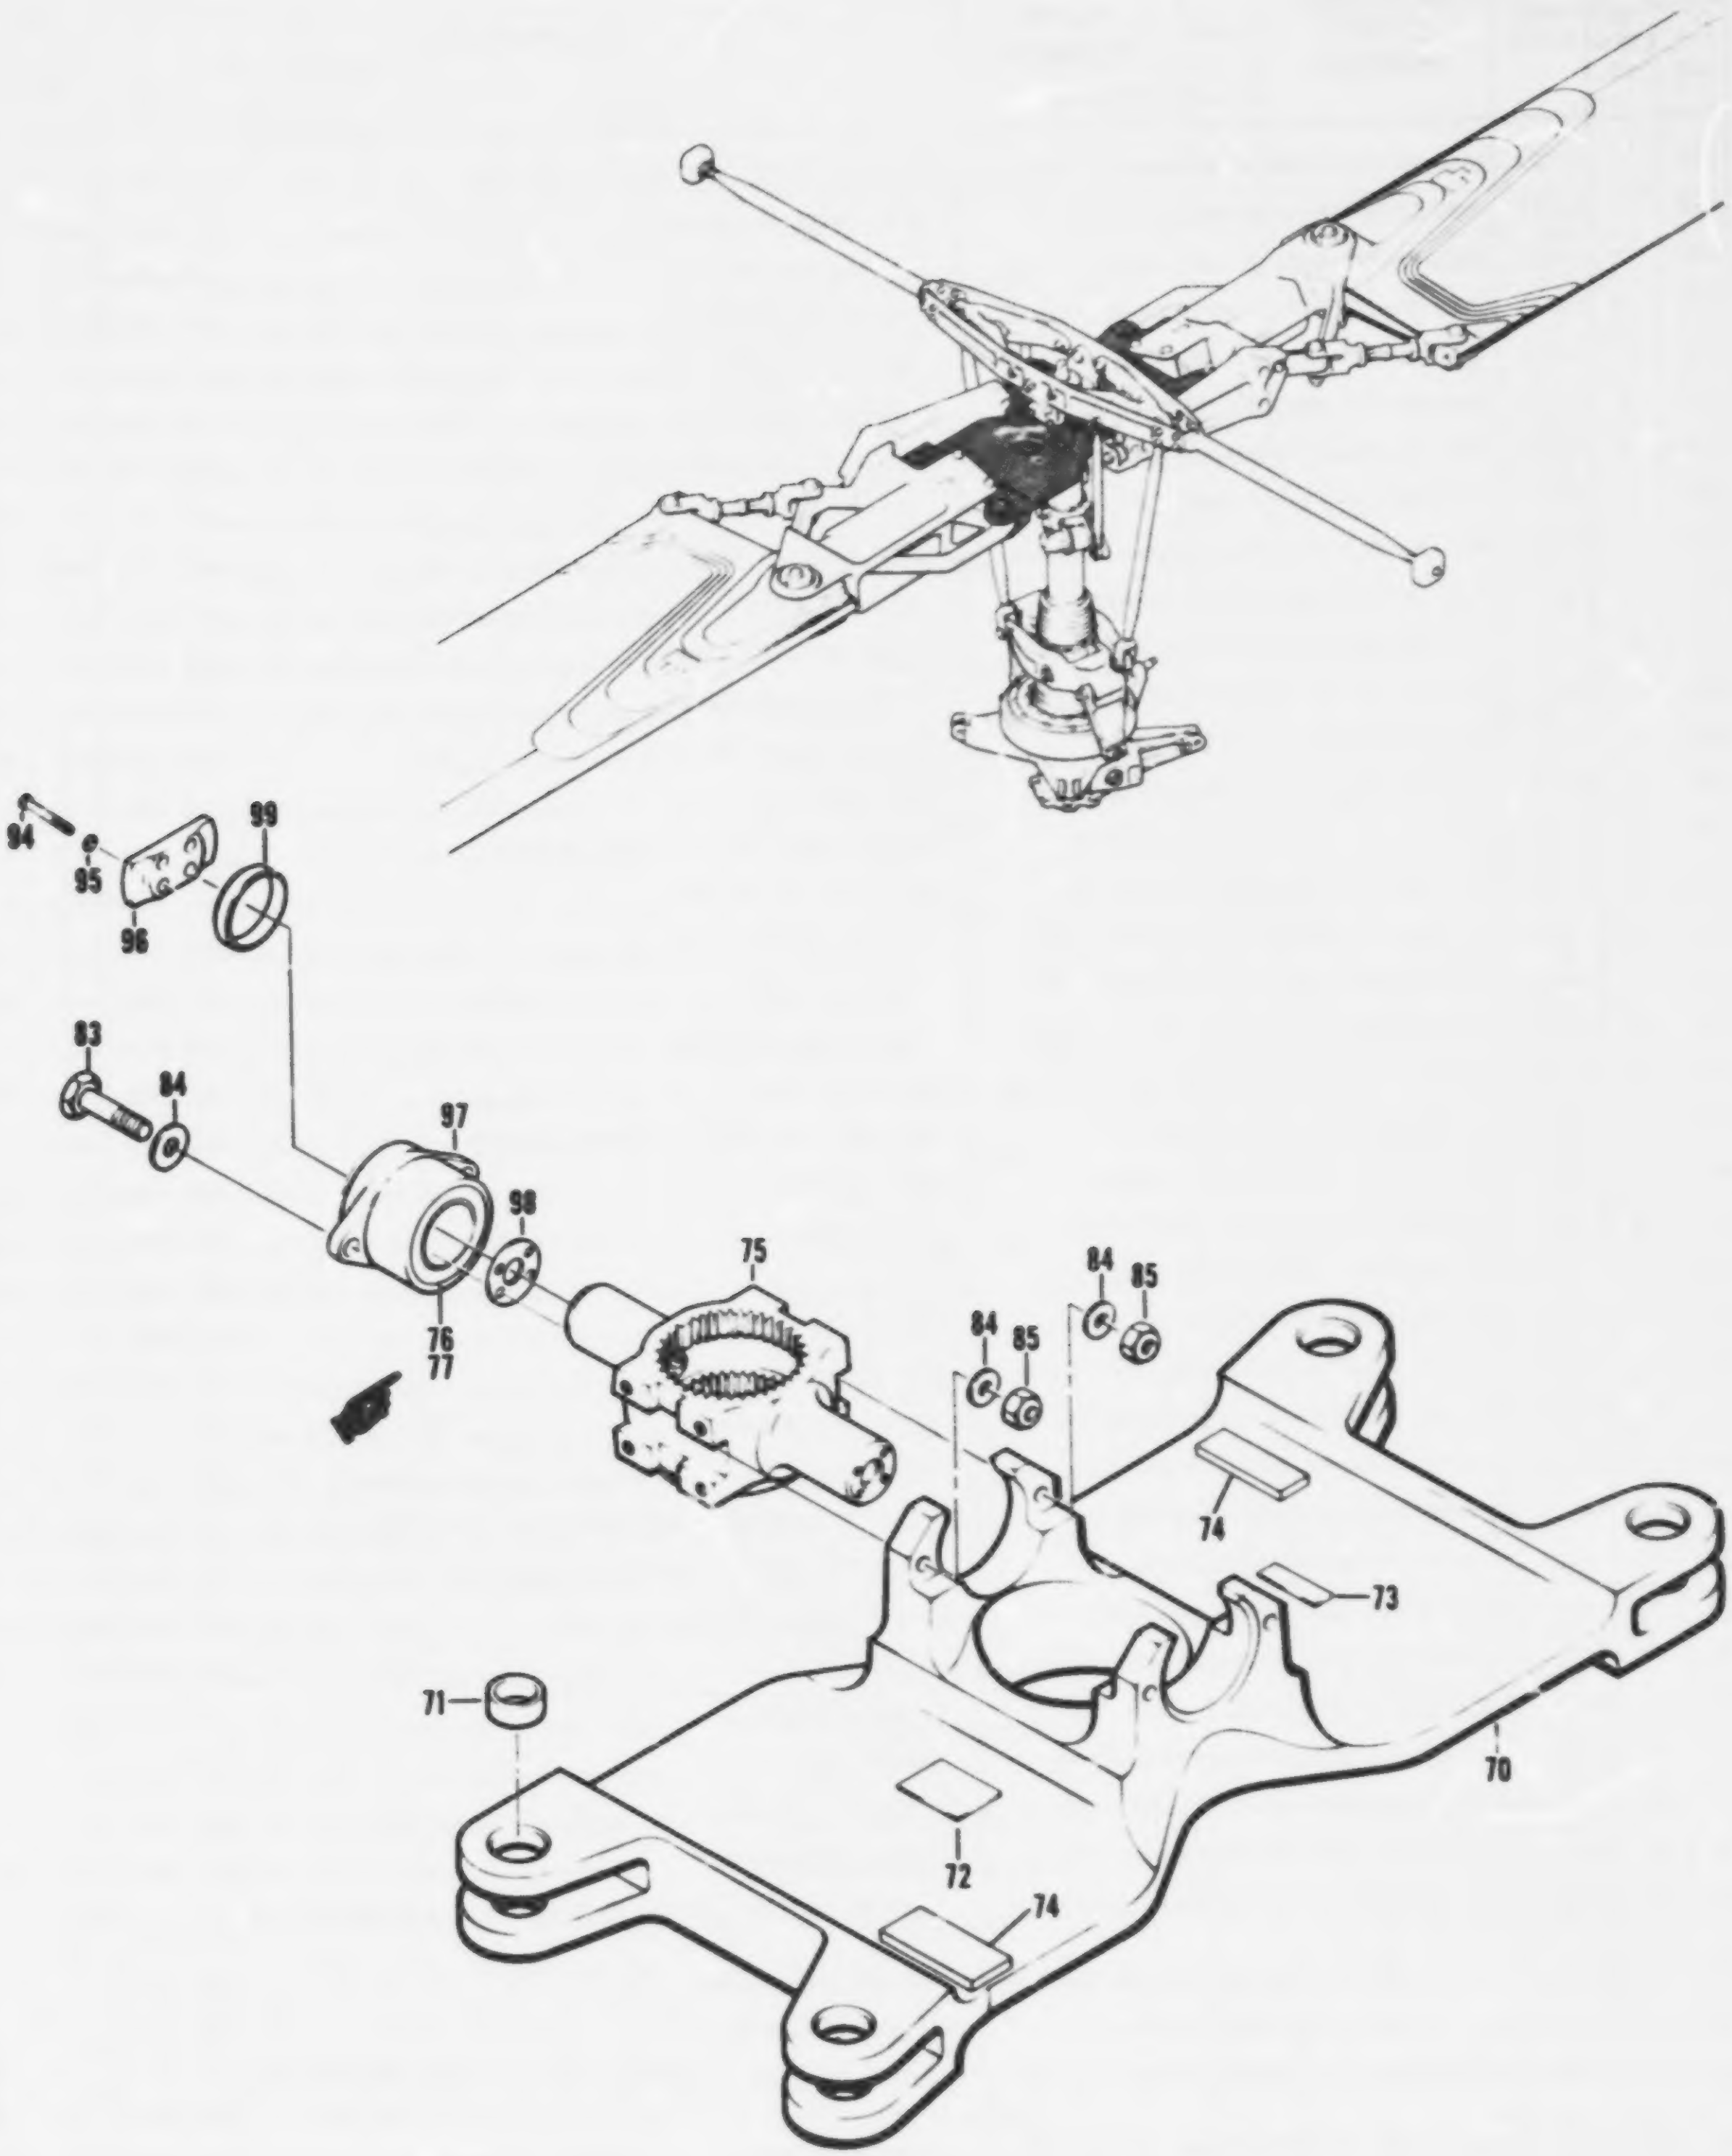
94
95
96
99
83
84
97
98
76
77
75
84
85
84
85
74
73
71
70
72
74

Figure 139. Hub Assembly, Main Rotor
(Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
139		PAODO	1615-01-017-9926	97499	540-011-101-23	HUB,MAIN ROTOR SEE FIG.136 FOR NHA	UHC,UHM	EA	1
139	1	AFOFF	1560-00-907-6141	97499	540-011-116-1	.DRAG BRACE ASSEMBLY	UHC,UHM	EA	2
139	2	PAFZZ	5340-00-774-9463	97499	540-011-117-3	..CLEVIS,ROD END	UHC,UHM	EA	1
139	3	PAFZZ	5310-00-770-9171	97499	540-011-121-3	..NUT,PLAIN,HEXAGON	UHC,UHM	EA	1
139	4	PAFZZ	1615-00-847-7525	97499	540-011-118-1	..BARREL ASSEMBLY,DRA	UHC,UHM	EA	1
139	5	PAFZZ	9905-00-115-0696	97499	204-011-146-3	...PLATE,INSTRUCTION	UHC,UHM	EA	1
139	6	PAFZZ	5310-00-770-9170	97499	540-011-121-1	..NUT,PLAIN,HEXAGON	UHC,UHM	EA	1
139	7	PAFZZ	5340-00-774-9465	97499	540-011-117-1	..CLEVIS,ROD END	UHC,UHM	EA	1
139	8	PAFDO	1615-00-911-3705	97499	540-011-154-5	.GRIP ASSEMBLY,MAIN	UHC,UHM	EA	2
139	9	PAFZZ	3120-00-982-0804	97499	540-011-110-13	..BEARING,SLEEVE	UHC,UHM	EA	1
139	10	PAFZZ	1615-00-866-5998	97499	540-011-115-1	..RING,INDEXING,STRAP	UHC,UHM	EA	1
139	11	PAFZZ	5315-00-772-3147	97499	540-011-123-1	..PIN,SHOULDER,HEADLE	UHC,UHM	EA	1
139	12	PAFZZ	9905-00-060-2034	97499	100-024-1	..PLATE,IDENTIFICATIO	UHC,UHM	EA	1
139	13	PAFZZ	5306-00-880-6399	80205	NAS1308-92	.BOLT,SHEAR	UHC,UHM	EA	4
139	14	PAFZZ	5310-00-167-0823	88044	AN960-816	.WASHER,FLAT MAX OF 4 MAY BE USED	UHC,UHM	EA	4
139	15	PAFZZ	5310-00-857-5562	96906	MS21045L8	.NUT,SELF-LOCKING,HE	UHC,UHM	EA	4
139	16	PAFFF	1615-00-921-5500	97499	540-011-109-5	.HOUSING ASSEMBLY,MA	UHC,UHM	EA	2
139	17	PAFZZ	3120-00-974-6496	97499	540-011-110-9	..BEARING,SLEEVE	UHC,UHM	EA	1
139	18	PAFZZ	5330-00-903-1061	97499	540-011-159-1	..SEAL,PLAIN ENCASED	UHC,UHM	EA	1
139	19	PAOZZ	1615-00-116-7110	97499	540-011-174-11	.DEFLECTOR,SAND,MAIN	UHC,UHM	EA	2
139	20	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHC,UHM	EA	6
139	21	PAOZZ	5306-00-151-1416	88044	AN4-20A	.BOLT,MACHINE	UHC,UHM	EA	6
139	22	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT	UHC,UHM	EA	6
139	23	PAOZZ	5365-00-937-3145	97499	540-011-175-1	.SHIM	UHC,UHM	EA	2
139	24	PAOZZ	5365-00-937-3146	97499	540-011-176-1	.SPACER,PLATE	UHC,UHM	EA	2
139	25	PAFZZ	1615-00-997-2512	97499	209-010-112-3	.BOLT,PITCH HORN,MAI	UHC,UHM	EA	2
139	26	PAFZZ	1615-00-997-2511	97499	209-010-112-1	.BOLT,PITCH HORN,MAI	UHC,UHM	EA	4
139	27	PAFZZ	5310-00-167-0823	88044	AN960-816	.WASHER,FLAT	UHC,UHM	EA	8
139	28	PAFZZ	5310-00-809-7447	56878	42FLW820	.NUT,SELF-LOCKING -INTRCH 5310-00-297-3721	UHC,UHM	EA	6
139	28	PAFZZ	5310-00-297-3721	72962	E8060	.NUT,SELF-LOCKING -INTRCH 5310-00-809-7447	UHC,UHM	EA	6
139	29	PAFFF	1615-00-909-2573	97499	540-011-147-1	.HORN ASSEMBLY,PITCH	UHC,UHM	EA	2
139	30	PAFZZ	3120-00-904-3291	97499	540-011-149-3	..BUSHING,SLEEVE	UHC,UHM	EA	2
139	31	PAFZZ	3120-00-871-8767	97499	540-011-131-7	..BUSHING,SLEEVE	UHC,UHM	EA	1
139	32	PAFZZ	3120-00-904-3289	97499	540-011-149-1	..BUSHING,SLEEVE	UHC,UHM	EA	2
139	33	PAFDO	1615-01-023-0674	97499	540-011-153-17	.EXTENSION ASSEMBLY	UHC,UHM	EA	2
139	35	PADZZ	1615-01-020-2011	97499	540-012-125-3	..SLEEVE,EXTENSION,7	UHC,UHM	EA	1
139	35	PBDZZ	3120-01-026-6943	97499	540-012-125-7	..BUSHING,SLEEVE UNDERSIZE SLEEVE U/O P/N 540-011-153-17	UHC,UHM	EA	1
139	36	PAFZZ	1615-00-960-0321	97499	540-011-169-13	..RADIUS RING,ASSEMBL	UHC,UHM	EA	1
139	37	PADZZ	1615-01-020-2010	97499	540-012-125-1	..SLEEVE,EXTENSION 7	UHC,UHM	EA	1
139	37	PBDZZ	3120-01-026-6942	97499	540-012-125-5	..BUSHING,SLEEVE UNDERSIZE SLEEVE U/O P/N 540-011-153-17	UHC,UHM	EA	1
139	38	PADZZ	3120-00-905-7579	97499	540-011-161-3	..BUSHING,SLEEVE	UHC,UHM	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
139	39	PAFZZ	5365-00-054-8800	97499	540-011-318-3	..SHIM	UHC,UHM	EA	4
139	40	PAFZZ	9905-00-060-2034	97499	100-024-1	..PLATE,IDENTIFICATIO	UHC,UHM	EA	1
139	41	PAFZZ	1615-01-063-4015	97499	204-012-122-7	.STRAP ASSEMBLY	UHC,UHM	EA	2
139	42	PAFZZ	5330-00-929-1046	97499	540-011-168-3	.SEAL,RING,METAL	UHC,UHM	EA	2
139	43	PAFZZ	5315-00-891-8383	97499	540-011-112-5	.PIN,GROOVED,HEADLES	UHC,UHM	EA	2
139	44	PAFZZ	5315-00-891-8384	97499	540-011-112-7	.PIN,GROOVED,HEADLES	UHC,UHM	EA	2
139	45	PAFZZ	5365-00-921-5497	80756	RST125CD	.RING,RETAINING	UHC,UHM	EA	8
139	46	PAFZZ	1615-00-866-6005	97499	540-011-113-1	.FITTING RETENTION	UHC,UHM	EA	2
139	47	PAFZZ	5365-00-775-1856	97499	540-011-120-5	.SPACER,RING	UHC,UHM	EA	2
139	48	PAFZZ	[illegible]0-00-930-8398	97499	540-011-177-1	.NUT,RETENTION STRAP	UHC,UHM	EA	2
139	49	PAFZZ	1615-00-930-8608	97499	540-011-178-1	.LOCK,STRAP RETAINER	UHC,UHM	EA	2
139	50	MFFZZ		97499	540-011-179-1	.CLAMP,STRAP RETENTI	UHC,UHM	EA	2
139	51	PAFZZ	5306-00-180-2706	88044	AN4H23	.BOLT,MACHINE	UHC,UHM	EA	2
139	52	PAFZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT	UHC,UHM	EA	2
139	53	PAFZZ	5310-00-961-8390	96906	MS17825-4	.NUT,SELF-LOCKING	UHC,UHM	EA	2
139	54	PAFZZ	5315-00-839-5820	96906	MS24665-134	.PIN,COTTER	UHC,UHM	EA	2
139	55	PAFZZ	5306-00-905-6790	97499	540-011-162-1	.BOLT,SHEAR	UHC,UHM	EA	4
139	56	PAFZZ	5310-00-903-4860	97499	140-007-81-64F6	.WASHER,FLAT	UHC,UHM	EA	8
139	57	PAFZZ	5310-00-445-5337	96906	MS21245L20	.NUT,SELF-LOCKING,HE	UHC,UHM	EA	4
139	58	PAODZ	1615-00-936-2371	97499	540-011-119-19	.BOLT ASSEMBLY,ROTOR	UHC,UHM	EA	1
139	59	PAOZZ	5310-00-998-2784	97499	540-011-119-13	..NUT,PLAIN,ROUND	UHC,UHM	EA	1
139	60	PAOZZ	1615-00-068-6624	97499	540-011-119-23	..PLUG,RETENTION BOLT	UHC,UHM	EA	1
139	61	PAOZZ	5310-00-824-0858	97499	540-011-119-21	..NUT,PLAIN,ROUND	UHC,UHM	EA	1
139	62	PAOZZ	5310-00-779-3361	97499	540-011-120-1	.WASHER,KEYWAY	UHC,UHM	EA	2
139	63	PAOZZ	5310-00-839-0972	97499	204-011-152-1	.WASHER,RECESSED	UHC,UHM	EA	2
139	64	PAOZZ	5310-00-830-9737	97499	204-011-153-1	.NUT,PLAIN,ROUND	UHC,UHM	EA	2
139	65	PAOZZ	5365-00-880-6[illegible]	96906	MS24391D10	.PLUG,MACHINE THREAD	UHC,UHM	EA	2
139	66	PAOZZ	5306-00-829-6856	97499	204-011-166-1	.BOLT,CLOSE TOLER	UHC,UHM	EA	4
139	67	PAOZZ	5310-00-167-0827	88044	AN960-1416	.WASHER,FLAT	UHC,UHM	EA	8
139	68	PAOZZ	5365-00-856-4682	97499	120-008C58E29	.SHIM	UHC,UHM	EA	4
139	69	PAOZZ	5310-00-445-5336	96906	MS21245L14	.NUT,SELF-LOCKING,HE	UHC,UHM	EA	4
139	70	PAFDD	1615-00-906-6424	97499	540-011-102-5	.YOKE ASSEMBLY,MAIN	UHC,UHM	EA	1
139	71	PADZZ	3120-00-905-7580	97499	540-011-161-1	..BUSHING,SLEEVE	UHC,UHM	EA	8
139	72	PADZZ	9905-00-532-2497	96906	MS27253-1	..PLATE,IDENTIFICATIO	UHC,UHM	EA	1
139	73	PAFZZ	9905-00-060-2034	97499	100-024-1	..PLATE,IDENTIFICATIO	UHC,UHM	EA	1
139	74	PAFZZ	1615-00-410-5925	97499	540-011-102-13	..CHAFING STRIP,YOKE,	UHC,UHM	EA	4
139	75	PAFFF	1615-00-033-6314	97499	540-011-192-1	.TRUNNION,MAIN ROTOR	UHC,UHM	EA	1
139	76	XDOZZ	5365-00-925-6942	97499	540-011-143-9	..SPACER,SLEEVE	UHC,UHM	EA	2
139	77	PAFZZ	6640-00-598-0804	86282	6 SHORT SUPERIOR	..STOPPER,BOTTLE	UHC,UHM	EA	2
139	83	PAFZZ	5306-00-639-7587	96906	MS20006-20	.BOLT,INTERNAL WRENC	UHC,UHM	EA	4
139	84	PAFZZ	5310-00-149-9146	96906	MS20002C6	.WASHER,RECESSED	UHC,UHM	EA	8
139	85	PAFZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHC,UHM	EA	4

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
139	94	PAFZZ	5306-00-051-6745	80205	NAS1305-10H	.BOLT,SHEAR........ UHC,UHM	EA	8
139	95	PAFZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT........ UHC,UHM	EA	8
139	96	PAFZZ	1615-00-030-7199	97499	540-011-194-1	.RETAINER,MAIN ROTOR........ UHC,UHM	EA	2
139	97	PAFZZ	3130-00-117-1068	97499	540-011-193-1	.BEARING UNIT,PLAIN U/O P/N 540-011-101-23........ UHC,UHM	EA	2
139	98	MFFZZ	5365-00-173-7675	97499	540-011-195-1	.SHIM........ UHC,UHM	EA	4
139	99	PAFZZ	1615-00-051-3542	97499	540-011-196-1	.DISK,SOLID,PLAIN........ UHC,UHM	EA	2

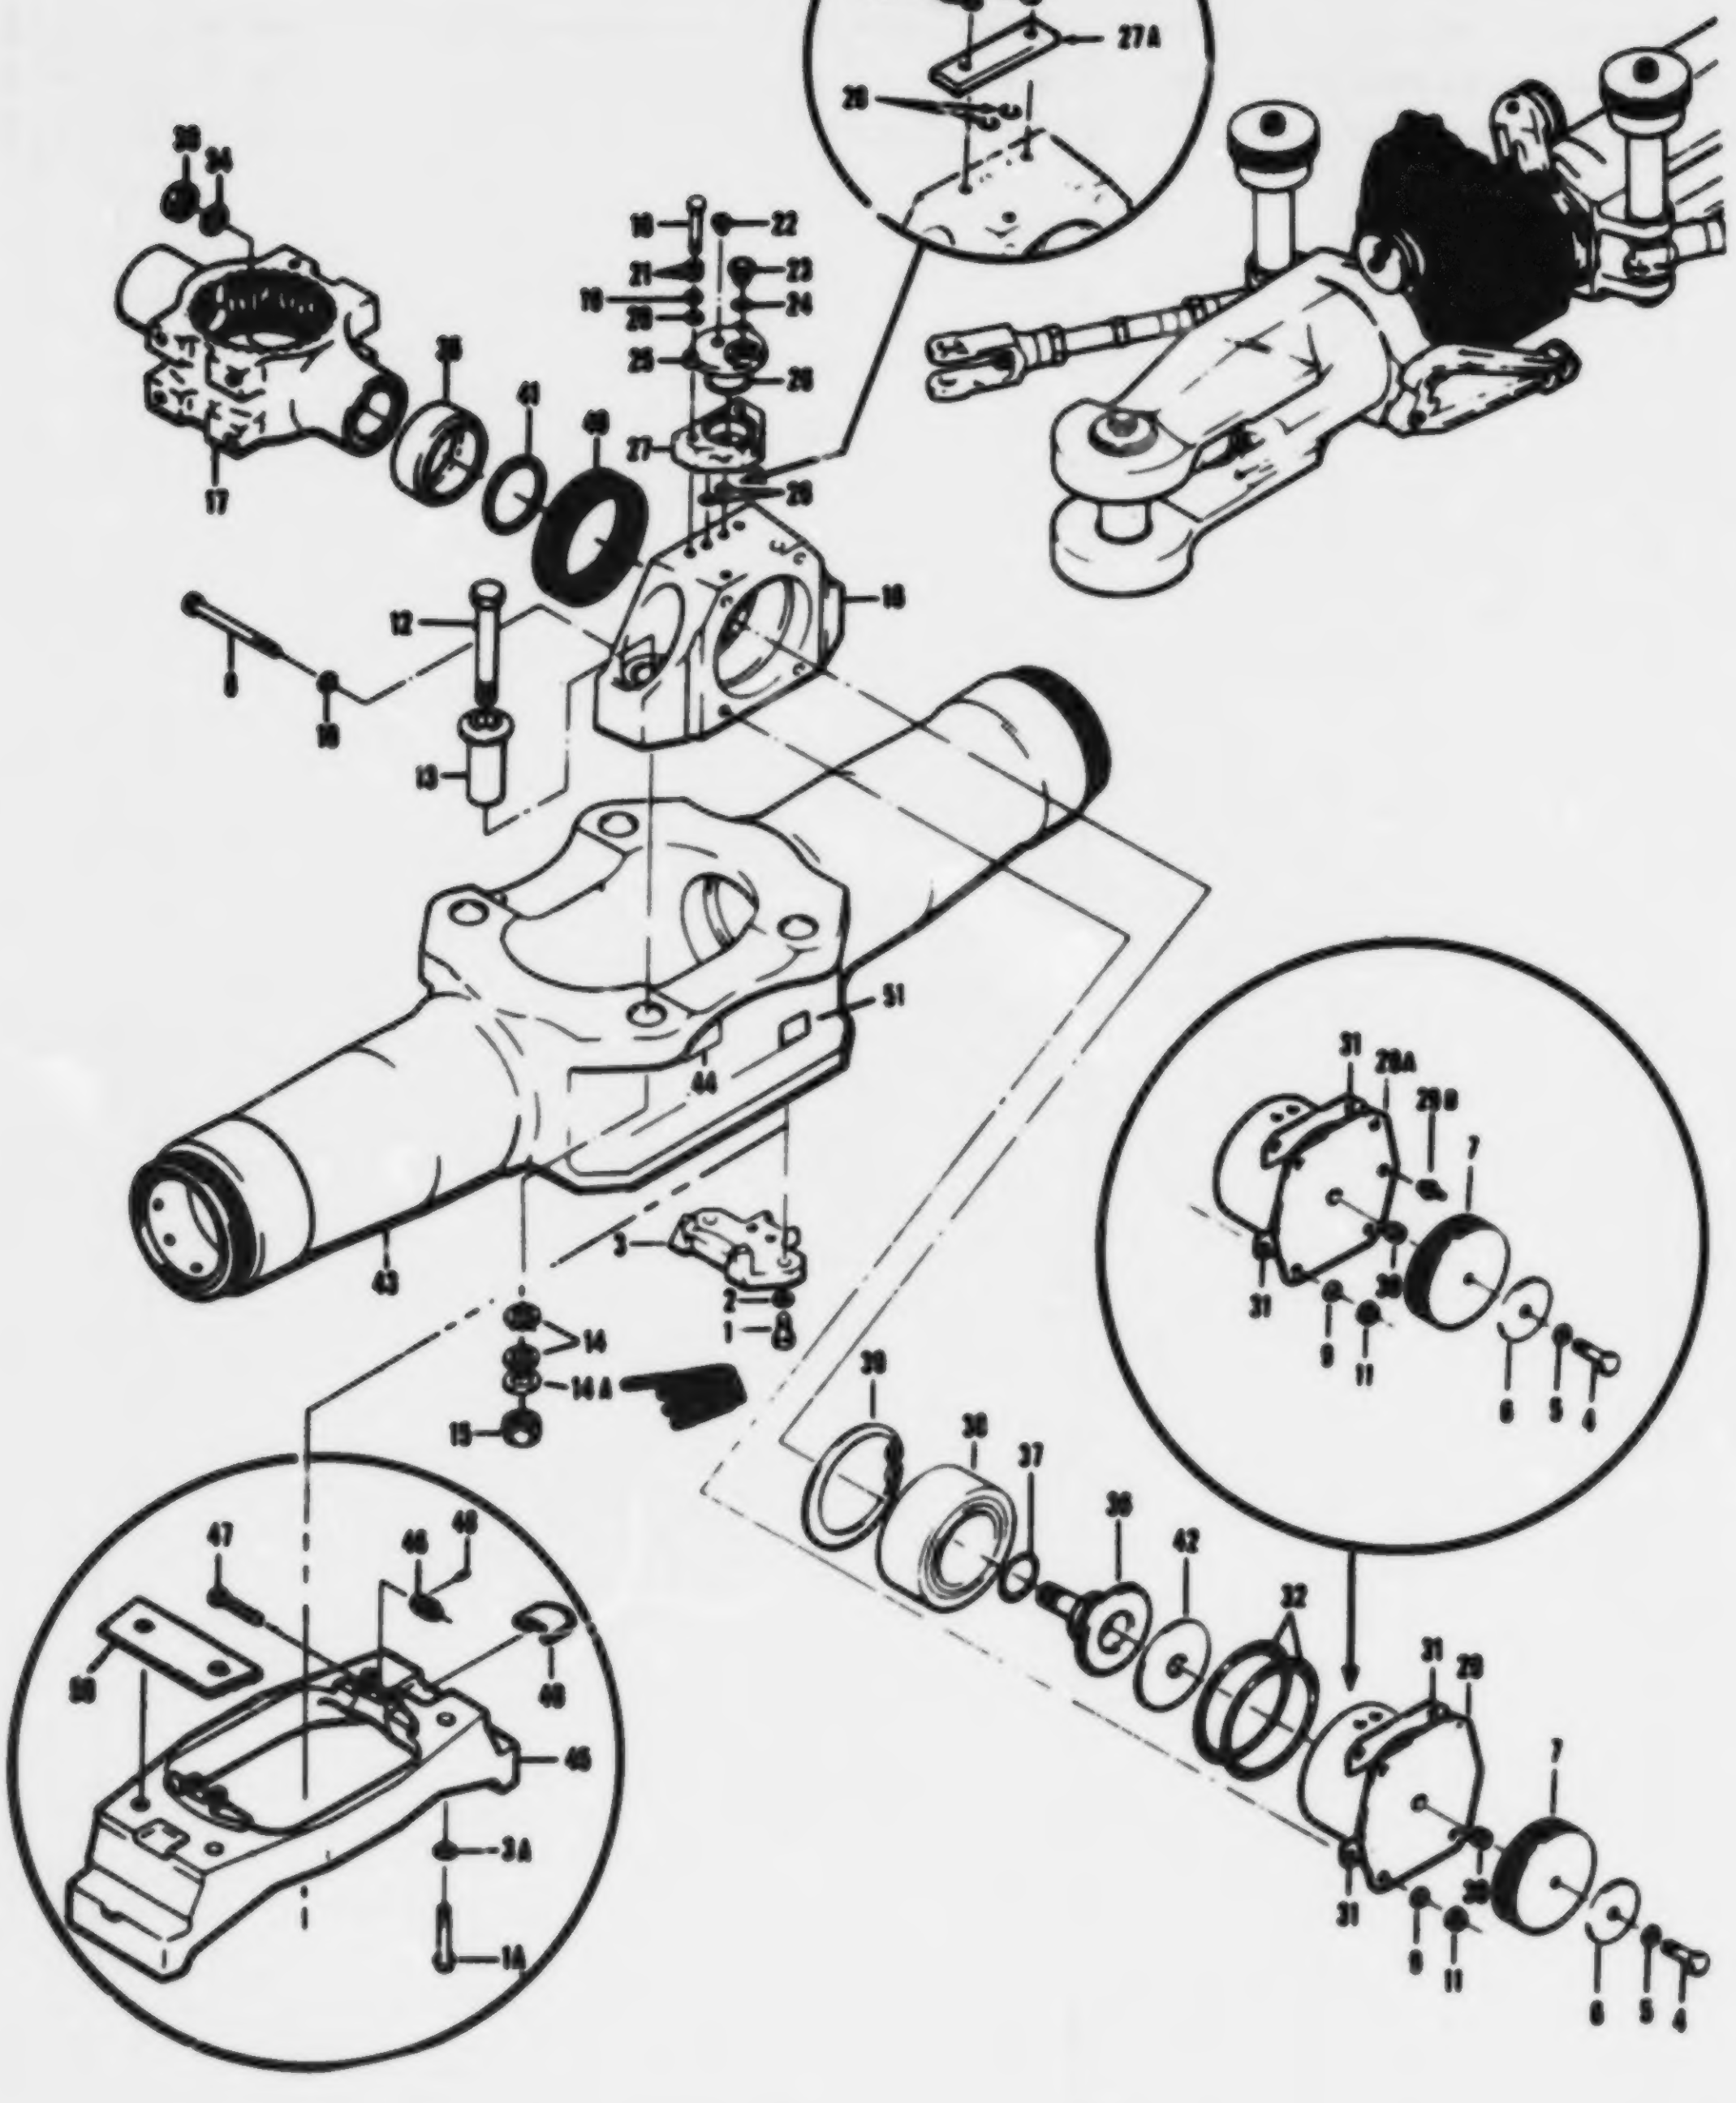
19 A
20
27A
26
33
34
19
22
21
23
10
24
20
25
26
17
35
41
40
27
28
12
16
8
10
13
51
44
43
3
2
1
14
14 A
15
31
29A
29B
7
30
31
9
11
6
5
4
39
38
37
36
42
32
31
29
7
30
31
9
11
6
5
4
47
46
48
50
49
45
3A
1A

Figure 140. Hub Assembly, Main Rotor, Inboard Section

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6) DESCRIPTION		(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER		USABLE ON CODE	U/M	QTY INC IN UNIT
140		PAODD	1615-01-056-4550	97499	204-012-101-31	HUB ASSEMBLY, MAIN R SEE FIG.135 FOR NHA SEE FIG 140 FOR BALANCE OF BREAKDOWN..............	UHE, UHH, UHV, UHX	EA	1
140		PAUDD	1615-11-261-0570	97493	214-012-101-137	HUB, MAIN ROTOR SEE FIG.135 FOR NHA SEE FIG.141 FOR BALANCE OF BREAKDOWN..............	UHE, IHH, IHV, UHX	EA	1
140		PAODD	1615-01-237-0512	97499	204-012-101-139	HUB ASSEMBLY..................................	UHE, UHH, UHV, UHX	EA	1
140		PAODD	1615-01-270-2982	97499	204-012-101-141	HUB ASS , MAIN ROTOR SEE FIG.135 FOR NHA SEE FIG.140 FOR BALANCE OF BREAKDOWN..............	UHE, UHH, UHV, UHX	EA	1
140	1	PAFZZ	5306-00-638-5828	88044	AN6H6A	.BOLT MACHINE................................	UHE, UHH, UHV, UHX	EA	4
140	1A	PAOZZ	5306-00-975-2073	96906	MS21250H06006	.BOLT MACHINE USBL ON PN 204-012-101-137,-141. .	UHE, UHH, UHV, UHX	EA	4
140	2	PAFZZ	5310-00-187-2400	88044	AN960PD616	.WASHER, FLAT................................	UHE, UHH, UHV, UHX	EA	4
140	3	PAFZZ	1615-00-183-4422	97499	204-011-157-7	.STATIC STOP MAIN............................	UHE, UHH, UHV, UHX	EA	2
140	3A	PAFZZ	5310-01-H75-8721	97499	140-007-25S20A4	.WASHER......................................	UHE, UHH, UHV, UHX	EA	4
140	4	PAFZZ	5306-00-638-7511	88044	AN6H5	.BOLT, MACHINE...............................	UHE, UHH, UHV, UHX	EA	2
140	4	PAFZZ	5306-00-616-1224	88044	AN6-6A	.BOLT, MACHINE...............................	UHE, UHH, UHV, UHX	EA	V
140	4	PAFZZ	5306-00-637-8591	88044	AN6H7	.BOLT, MACHINE...............................	UHE, UHH, UHV, UHX	EA	V
140	4	PAFZZ	5306-00-638-5775	88044	AN6H10	.BOLT, MACHINE...............................	UHE, UHH, UHV, UHX	EA	V
140	4	PAFZZ	5306-00-638-4834	88044	AN6H11	.BOLT, MACHINE...............................	UHE, UHH, UHV, UHX	EA	V
140	4	PAFZZ	5306-00-281-9995	88044	AN6H12	.BOLT, MACHINE...............................	UHE, UHH, UHV, UHX	EA	V
140	4	PAFZZ	5306-00-638-5760	88044	AN6H13	.BOLT, MACHINE...............................	UHE, UHH, UHV, UHX	EA	V
140	5	PAFZZ	5310-00-167-0821	88044	AN960-616	.WASHER, FLAT................................	UHE, UHH, UHV, UHX	EA	5
140	6	PAFZZ	5310-00-167-0768	96906	MS63040-6	.WASHER, FLAT................................	UHE, UHH, UHV, UHX	EA	V
140	7	PAFZZ	1615-00-868-2754	97499	204-011-150-1	.WEIGHT, MAIN ROTOR 16 MAX...................	UHE, UHH, UHV, UHX	EA	V
140	8	XBDZZ	5306-00-151-2614	88044	AN5-31A	.BOLT, MACHINE...............................	UHE, UHH, UHV, UHX	EA	8
140	9	PAOZZ	5310-00-167-0836	88044	AN960-516L	.WASHER, FLAT................................	UHE, UHH, UHV, UHX	EA	8
140	10	PADZZ	5310-00-187-2399	88044	AN960PD0516	.WASHER, FLAT................................	UHE, UHH, UHV, UHX	EA	8
140	11	PADZZ	5310-00-807-1476	96906	MS21042L5	.NUT, SELF-LOCKING, EX WASHER, HEXAGON.........	UHE, UHH, UHV, UHX	EA	8
140	12	PADZZ	5306-01-300-0423	96906	MS14181-08044	.BOLT, USBL ON PN 201-012-101-137,-141.........	UHE, UHH, UHV, UHX	EA	4
140	12	PADZZ	5306-00-873-7844	97499	204-011-171-3	.BOLT, USBL ON PN 204-012-I01-31,-139..........	UHE, UHH, UHV, UHX	EA	4
148	13	PADZZ	3120-00-954-6363	97499	204-011-135-3	.BUSHING, SLEEVE.............................	UHE, UHH, UHV, UHX	EA	4
140	14	PADZZ	5310-01-272-2436	97499	140-007-33S8-3	.WASHER, FLAT................................	UHE, UHH, UHV, UHX	EA	V
140	14A	PADZZ	5310-00-306-3167	88044	AN960C-816L	.WASHER, FLAT................................	UHE, UHH, UHV, UHX	EA	4
140	15	PADZZ	5310-01-300-0462	96906	MS14152L08	.NUT, SELF-LOCKING, EX.........................	UHE, UHH, UHV, UHX	EA	1
140	16	PADZZ	1615-00-406-7717	97499	204-011-108-3	.PILLOW BLOCK................................	UHE, UHH, UHV, UHX	EA	1
140	17	PADZZ	1615-00-474-9224	97499	204-011-105-1	.TRUNNION ASSEMBLY............................	UHE, UHH, UHV, UHX	EA	4
140	18	PAOZZ	5306-00-182-1963	88044	AN4H15A	.BOLT, MACHINE...............................	UHE, UHH, UHV, UHX	EA	4
140	18A	PAOZZ	5306-00-186-2014	88044	AN4H3A	.BOLT, MACHINE...............................	UHE, UHH, UHV, UHX	EA	4
148	19	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER, FLAT................................	UHE, UHH, UHV, UHX	EA	8
140	20	PAOZZ	5310-00-187-2354	88044	AN960P0416	.WASHER, FLAT................................	UHE, UHH, UHV, UHX	EA	8
140	21	PAOZZ	5310-00-582-5965	96906	MS35338-44	.WASHER, LOCK................................	UHE, UHH, UHV, UHX	EA	4
140	22	PAOZZ	4820-00-826-6465	96906	MS35670-2	.VALVE, SAFETY RELIEF.........................	UHE, UHH, UHV, UHX	EA	2
148	23	PAOZZ	5365-00-124-3042	96906	MS24391D5L	.PLUG, MACHINE THREAD.........................	UHE, UHH, UHV, UHX	EA	2
140	24	PCOZZ	5330-00-584-0150	80205	NAS617-5	.PACKING PREFORMED............................	UHE, UHH, UHV, UHX	EA	2
140	24	PAFZZ	5330-00-166-0988	81349	M83248-1-013	.PACKING, PREFORMED U/O PN 204-012-101-31......	UHE, UHH, UHV, UHX	EA	2
140	25	PAOZZ	1615-00-633-0828	97499	204-010-829-1	.COVER, MAIN ROTOR............................	UHE, UHH, UHV, UHX	EA	2
140	26	PCOZZ	5330-00-618-2514	96906	MS29561-220	.PACKING, PREFORMED...........................	UHE, UHH, UHV, UHX	EA	2
140	26	PAOZZ	5330-00-166-8411	81349	MS3248-1-220	.PACKING, PREFORMED U/O PN 204-012-101-31......	UHE, UHH, UHV, UHX	EA	2
140	27	PAOZZ	1615-00-624-5151	97499	204-010-191-1	.RESERVOIR, TRUNNION..........................	UHE, UHH, UHV, UHX	EA	2
140	27A	PAOZZ	5306-01-H75-8723	97499	204-012-129-101	.PLATE.......................................	UHE, UHH, UHV, UHX	EA	2
140	28	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING, PREFORMED...........................	UHE, UHH, UHV, UHX	EA	4
140	28	PAOZZ	5330-00-166-0975	81349	MS3248-1-011	.PACKING, PREFORMED U/O PN 204-012-101-31......	UHE, UHH, UHV, UHX	EA	4
140	29	PADDD	3130-00-474-9146	97499	204-011-122-1	.LINER ASSEMBLY...............................	UHE, UHH, UHV, UHX	EA	4
140	29A	PADDD	3130-01-258-1665	97499	204-011-122-105	.LINER ASSEMBLY...............................	UHE, UHH, UHV, UHX	EA	2
140	29B	PADDD	4730-01-077-4893	80205	NAS516-1A	.FITTING.....................................	UHE, UHH, UHV, UHX	EA	2
140	30	PADZZ	5310-00-754-1817	91767	3591-6CNX-8	..INSERT, SCREW THR...........................	UHE, UHH, UHV, UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG NO	(b) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
140	31	PADZZ	5365-00-758-3674	97499	204-011-147-1	.SHIM	UHE,UHH,UHV,UHX	EA	8
140	32	PADZZ	5330-00-725-0758	96906	MS29561-240	.PACKING PREFORMED	UHE,UHH,UHV,UHX	EA	4
140	32	PAFZZ	5330-00-165-1958	81349	M83248-1-240	.PACKING,PREFORMED U/O P/N 204-012-101-31	UHE,UHH,UHV,UHX	EA	4
140	33	PADZZ	5310-00-449-2378	96906	MS21245L8	.NUT, SELF-LOCKING, HE	UHE,UHH,UHV,UHX	EA	2
140	34	PADZZ	5310-00-167-0823	88044	AN960-816	.WASHER, FLAT	UHE,UHH,UHV,UHX	EA	2
140	35	PADZZ	5365-00-446-6378	97499	204-011-148-1	.SPACER, RING	UHE,UHH,UHV,UHX	EA	2
140	36	PADZZ	1615-00-898-0046	97499	204-011-134-1	.LOCK, INNER RACE	UHE,UHH,UHV,UHX	EA	2
140	37	PCDZZ	5330-00-059-7503	96906	MS9241-218	.PACKING, PREFORMED	UHE,UHH,UHV,UHX	EA	2
140	37	XDFZZ		81349	M83248-1-218	.PACKING, PREFORMED U/O P/N 204-012-101-31	UHE,UHH,UHV,UHX	EA	2
140	38	PADZZ	3110-00-897-3803	97499	204-011-110-3	.BEARING, ROLLER NEEDLE	UHE,UHH,UHV,UHX	EA	2
140	39	PADZZ	5365-00-664-8889	96906	MS16625-1346	.RING, RETAINING	UHE,UHH,UHV,UHX	EA	2
140	40	PADZZ	5330-00-758-3672	97499	204-011-132-1	.SEAL, PLAIN	UHE,UHH,UHV,UHX	EA	2
140	41	PADZZ	5330-00-691-6342	25184	035-1487	.PACKING, PREFORMED	UHE,UHH,UHV,UHX	EA	2
140	41	PADZZ	5330-00-166-8395	81349	M83248-1-035	.PACKING, PREFORMED U/O P/N 204-012-101-31	UHE,UHH,UHV,UHX	EA	2
140	42	PADZZ	5310-00-446-6377	97499	204-011-133-1	.WASHER, FLAT	UHE,UHH,UHV,UHX	EA	2
140	43	PADZZ	1615-00-474-9223	97499	204-011-102-1	.YOKE ASSEMBLY, MAIN		EA	1
140	43	PADDD	1615-00-757-2905	97499	204-011-102-17	.YOKE ASSEMBLY, MAIN	UHE,UHH,UHV,UHX	EA	1
140	44	PAOZZ	9905-00-060-2034	97499	100-024-1	..PLATE, IDENTIFICATIO	UHE,UHH,UHV,UHX	EA	2
140	45	PAODD	5340-01-286-0636	97499	204-011-207-105	.PLATE ASSY USBL ON PN 204-012-101-137, -141	UHE,UHH,UHV,UHX	EA	1
140	46	PAOZZ	3020-01-H75-8717	97499	204-012-109-001	..GEAR WORM USBL ON PN 204-011-207-105	UHE,UHH,UHV,UHX	EA	2
140	47	PAOZZ	5306-00-795-9861	97499	204-012-110-1	..BOLT, MACHINE USBL ON PN 204-011-207-105	UHE,UHH,UHV,UHX	EA	2
140	48	PADZZ	5315-00-598-9857	96906	MS171462	..PIN, SPRING	UHE,UHH,UHV,UHX	EA	2
140	49	PAOZZ	5315-01-H75-8718	97499	204-011-211-101	.KEY, MACHINE USBL ON PN 204-012-101-137, -141	UHE,UHH,UHV,UHX	EA	2
140	50	PAOZZ	1560-01-H75-8719	97499	204-011-213-101	.SHIM USBL ON PN 204-012-101-137, -141	UHE,UHH,UHV,UHX	EA	1
140	51	XDOZZ	1680-00-532-2497	88044	AN7510-1	.PLATE, IDENTIFICATIO USBL ON PN 204-012-101-31 AND -137	UHE,UHH,UHV,UHX	EA	1
140	51	XDOZZ	9905-00-532-2497	96906	MS27253-1	.PLATE, IDENTIFICATIO USBL ON PN 205-704-087-105	UHE,UHH,UHV,UHX	EA	

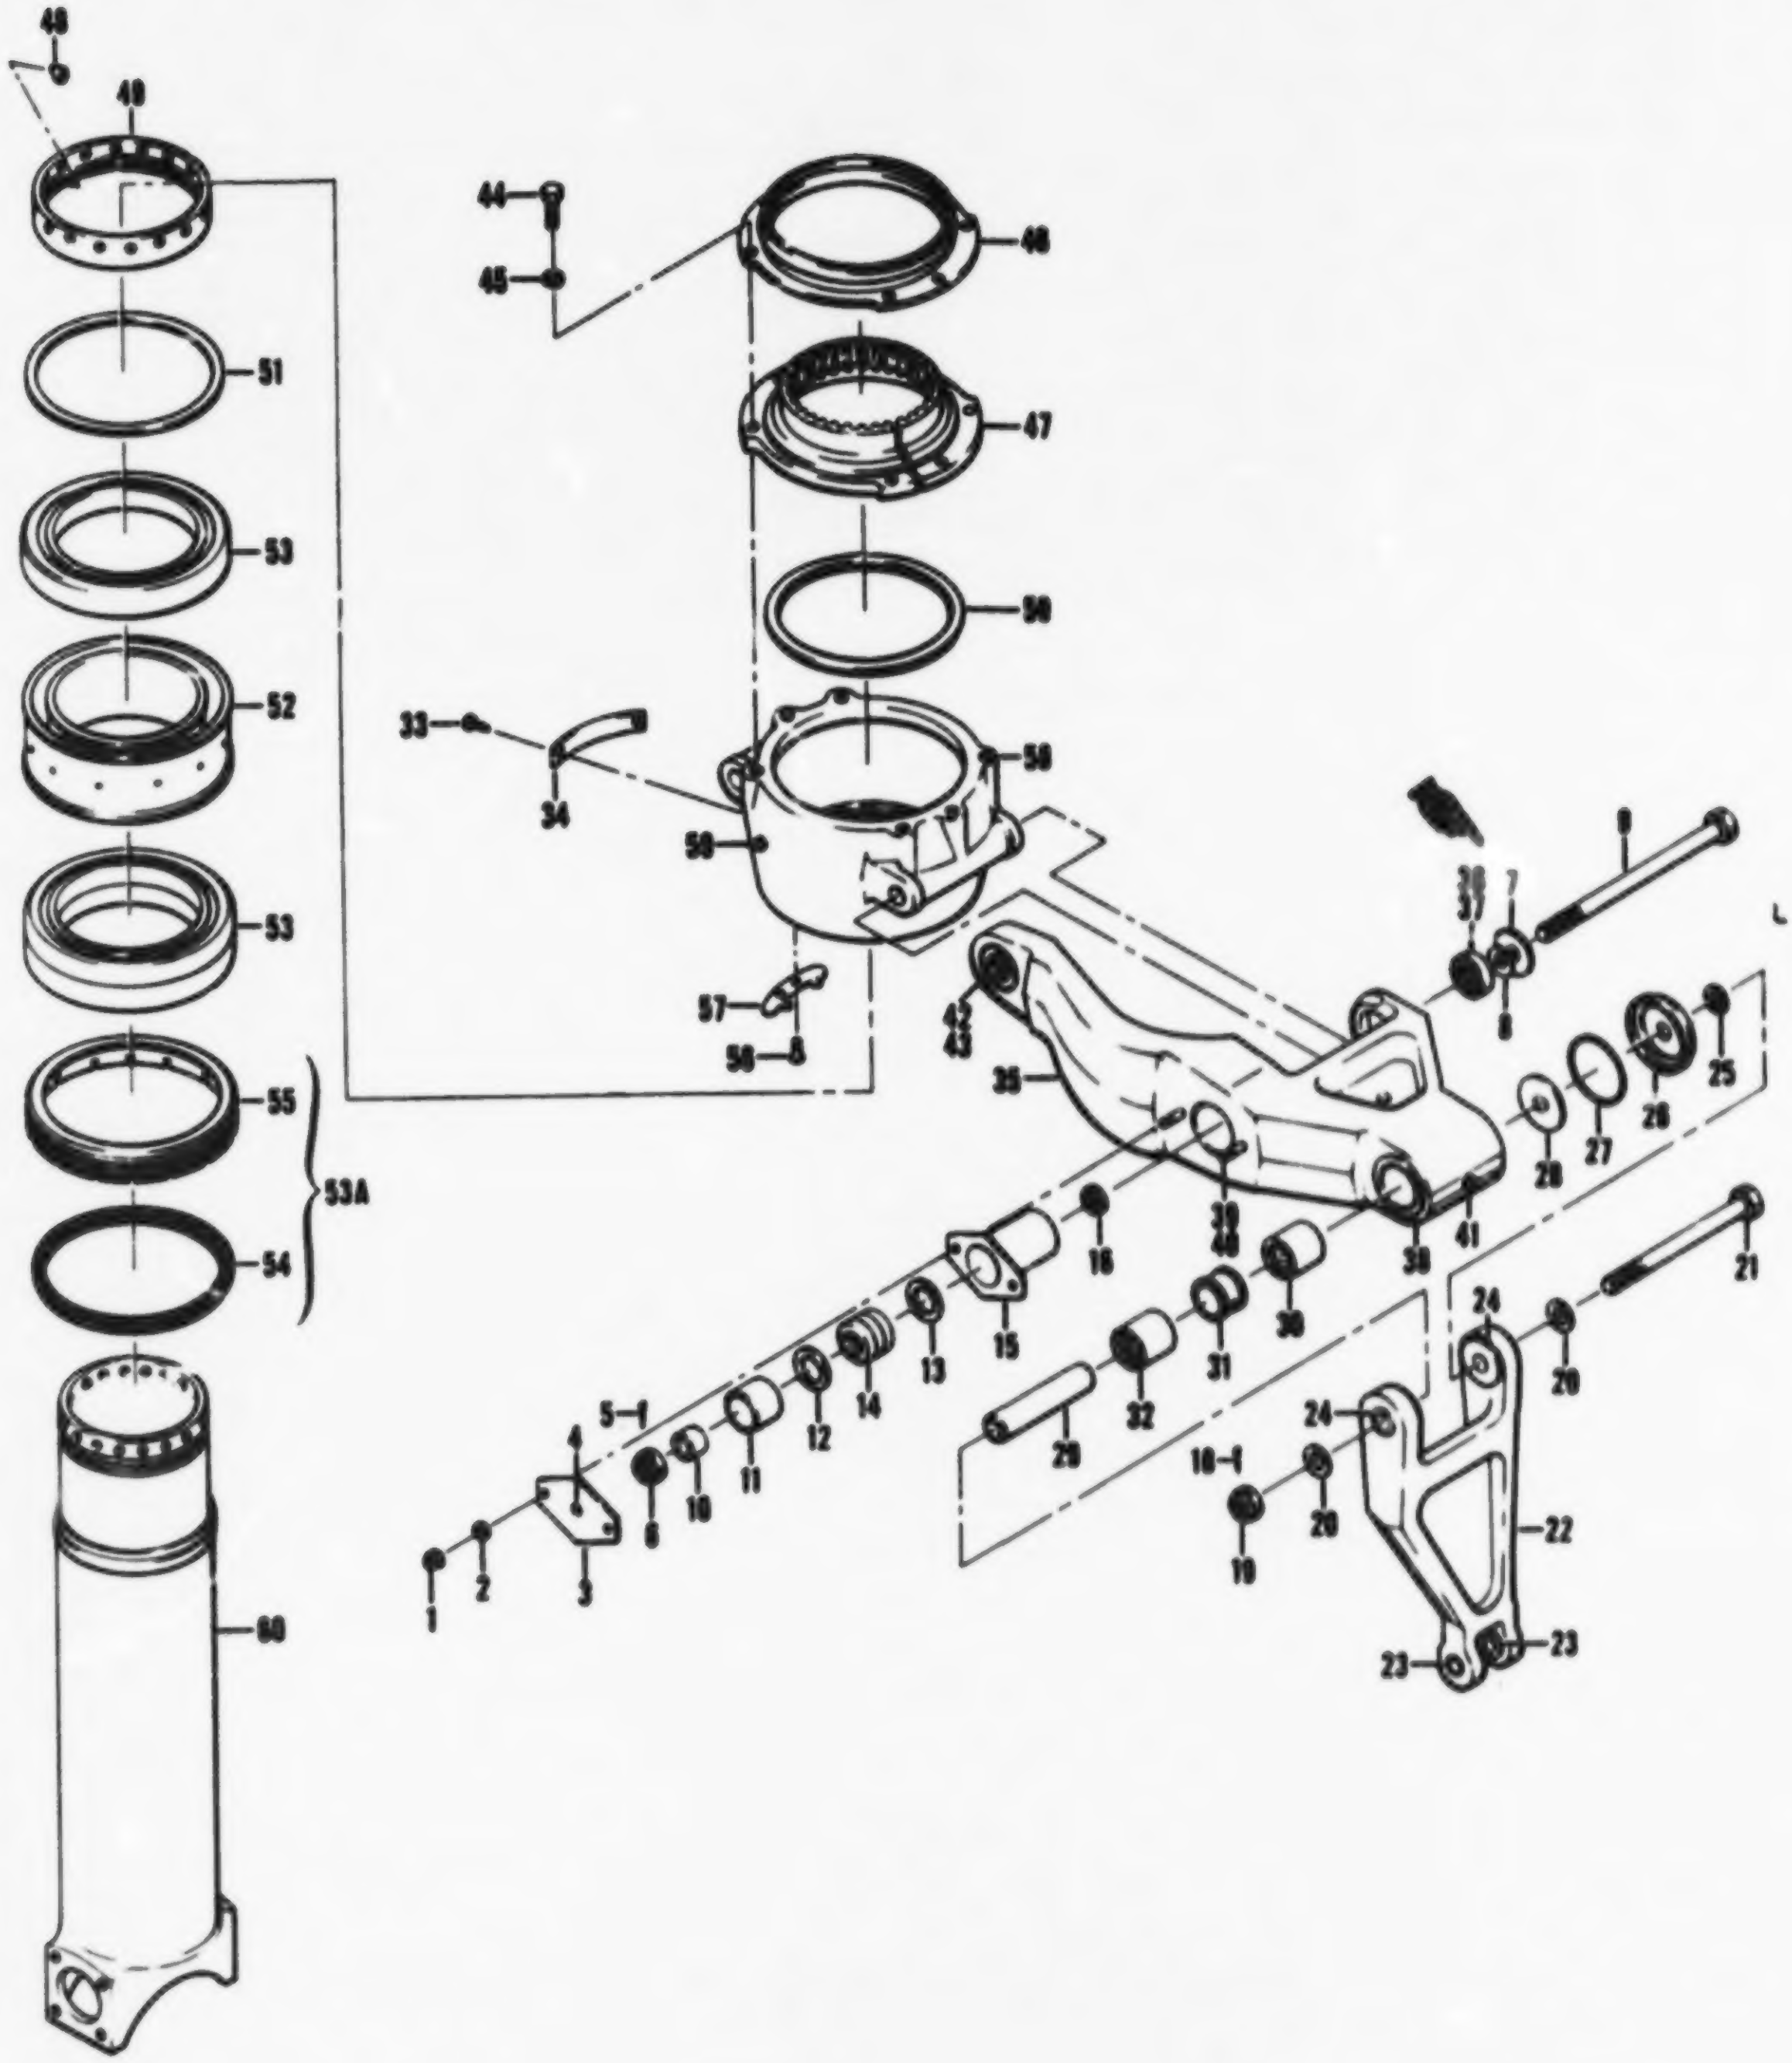
48
49
51
53
52
53
55
53A
54
60
44
45
46
47
50
33
34
58
59
57
56
9
36
37
7
8
42
43
35
25
26
27
28
39
40
16
38
41
21
15
13
14
12
5
30
31
32
29
24
20
24
18
19
20
22
4
6
10
11
1
2
3
23
23

Figure 141. Scissors and Sleeve Assembly

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7)	(8) QTY INC IN UNIT
141		PAODD	1615-00-454-8828	97499	204-011-401-11	SCISSORS AND SLEEVE ASSEMBLY SEE FIG 128 FOR NHA	UHB,UHE,UHH,UHV,UHX	EA	1
141	1	PAOZZ	5310-00-263-2862	96906	MS21045C3	.NUT,SELF-LOCKING,HE	UHB,UHE,UHH,UHV,UHX	EA	4
141	2	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT	UHB,UHE,UHH,UHV,UHX	EA	4
141	3	PAOOO	1515-00-847-8366	97499	204-010-456-3	.COVER,ACCESS	UHB,UHE,UHH,UHV,UHX	EA	2
141	4	XDOZZ	4730-00-277-4780	80205	NAS516-1	..FITTING,LUBRICATION	UHB,UHE,UHH,UHV,UHX	EA	1
141	5	PAOZZ	5315-00-234-1864	96906	MS24665-302	.PIN,COTTER	UHB,UHE,UHH,UHV,UHX	EA	2
141	6	PAOZZ	5310-00-176-8112	88044	AN320-8	.NUT,PLAIN,SLOTTED,H	UHB,UHE,UHH,UHV,UHX	EA	2
141	7	PAOZZ	5310-00-952-7556	97499	204-011-459-1	.WASHER,FLAT	UHB,UHE,UHH,UHV,UHX	EA	2
141	8	PAOZZ	5310-00-167-0839	88044	AN960-816L	.WASHER,FLAT	UHB,UHE,UHH,UHV,UHX	EA	V
141	8	PAOZZ	5310-00-167-0823	88044	AN960-816	.WASHER,FLAT	UHB,UHE,UHH,UHV,UHX	EA	V
141	9	PAOZZ	5306-00-757-5050	80205	NAS464P8-90	.BOLT,SHEAR	UHB,UHE,UHH,UHV UHX	EA	2
141	10	PAOZZ	5365-00-841-9950	80205	NAS43HT8-21	.SPACER,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	2
141	10	PAOZZ	5365-00-813-8832	80205	NAS43HT8-18	.SPACER,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	2
141	11	PAOZZ	5365-00-838-1598	97499	204-010-455-3	.SPACER,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	2
141	12	PAOZZ	5365-00-782-8611	97499	120-045-35-29	.SHIM	UHB,UHE,UHH,UHV,UHX	EA	2
141	13	PAOZZ	5365-00-782-8611	97499	120-045-35-29	.SHIM	UHB,UHE,UHH,UHV,UHX	EA	2
141	14	PAODD	3110-00-731-7977	97499	204-011-412-1	.BEARING,BALL,STACK	UHB,UHE,UHH,UHV,UHX	SE	2
141	15	PAOZZ	3130-00-830-9726	97499	204-010-454-3	.LINER,BEARING HOUSI	UHB,UHE,UHH,UHV,UHX	EA	2
141	16	PAOZZ	1615-01-143-7339	97499	204-011-448-103	.SPACER	UHH,UHB,UHE,UHV,UHX	EA	2
141	18	PAOZZ	5315-00-234-1864	96906	MS24665-302	.PIN,COTTER	UHB,UHE,UHH,UHV,UHX	EA	2
141	19	PAOZZ	5310-00-176-8112	88044	AN320-8	.NUT,PLAIN,SLOTTED,H	UHB,UHE,UHH,UHV,UHX	EA	2
141	20	PAOZZ	5310-00-167-0751	88044	AN960PD816	.WASHER,FLAT	UHB,UHE,UHH,UHV,UHX	EA	4
141	21	PAOZZ	5306-00-771-6031	80205	NAS464P8-69	.BOLT,SHEAR	UHB,UHE,UHH,UHV,UHX	EA	2
141	22	PAOFF	1615-00-830-9750	97499	204-011-407-1	.LINK ASSY	UHB,UHE,UHH,UHV,UHX	EA	2
141	23	PAFZZ	3120-00-847-2708	97499	22-007-19-27-18	..BUSHING,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	2
141	24	PAFZZ	3120-00-847-3401	97499	22-010-31-35-48	..BUSHING,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	2
141	25	PAOZZ	5365-00-842-0669	97499	120-045-27-17	.SHIM	UHB,UHE,UHH,UHV,UHX	EA	V
141	26	PAOOO	1615-00-830-9751	97499	204-011-421-1	.HOUSING ASSEMBLY	UHB,UHE,UHH,UHV,UHX	EA	2
141	27	PAOZZ	5330-00-839-5862	73680	71X6223	..SEAL,PLAIN ENCASED	UHB,UHE,UHH,UHV,UHX	EA	1
141	28	PAOZZ	3120-00-839-6431	97499	204-011-420-1	.BEARING,WASHER,THRU	UHB,UHE,UHH,UHV,UHX	EA	2
141	29	PAOZZ	3110-00-840-2716	97499	204-010-441-3	.RING,BEARING,INNER	UHB,UHE,UHH,UHV,UHX	EA	2
141	30	PAOZZ	3110-00-840-8611	97499	204-011-419-1	.BEARING,ROLLER,JOUR	UHB,UHE,UHH,UHV,UHX	EA	2
141	31	PAOZZ	5365-00-830-9752	97499	204-011-422-1	.SPACER,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	2
141	32	PAOZZ	3110-00-840-8610	97499	204-011-418-1	.BEARING,ROLLER,JOUR	UHB,UHE,UHH,UHV,UHX	EA	2
141	33	PAOZZ	5305-00-253-5606	96906	MS21318-7	.SCREW,DRIVE	UHB,UHE,UHH,UHV,UHX	EA	2
141	34	PAOZZ	9905-00-118-5663	97499	100-037-1M	.PLATE,IDENTIFICATIO	UHB,UHE,UHH,UHV,UHX	EA	1
141	35	PAOFF	1615-00-938-9784	97499	204-011-406-13	.SCISSORS ASSEMBLY	UHB,UHE,UHH,UHV,UHX	EA	2
141	36	PAFZZ	3120-00-759-3797	97499	204-011-456-1	..SLEEVE,BEARING ASSY	UHB,UHE,UHH,UHV,UHX	EA	1
141	37	PAOZZ	3110-00-042-0440	96906	MS27641-8	..BEARING,BALL,AIRFRA	UHB,UHE,UHH,UHV,UHX	EA	1
141	38	PAFZZ	3130-00-898-0061	97499	204-011-413-1	..LINER,BEARING HOUSI	UHB,UHE,UHH,UHV,UHX	EA	1
141	39	PAFZZ	5307-00-358-0297	96906	MS51989-104-10	..STUD,LOCKED IN	UHB,UHE,UHH,UHV,UHX	EA	2
141	40	PAFZZ	5365-00-281-9224	83324	RL2[illegible]86	..RING,LOCK,SERRATED	UHB,UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
141	41	XDOZZ	4730-00-277-4780	80205	NAS516-1	..FITTING,LUBRICATION	UHB,UHE,UHH,UHV,UHX	EA	2
141	42	PAFZZ	3110-00-460-5244	96906	MS28913-5C	..BEARING,ROLLER,AIRF	UHB,UHE,UHH,UHV,UHX	EA	1
141	43	PAFZZ	3120-00-731-7967	97499	120-014-5A	..BUSHING SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	1
141	44	PAFZZ	5306-00-182-2016	88044	AN4H5A	.BOLT,MACHINE	UHB,UHE,UHH,UHV,UHX	EA	6
141	45	PAFZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHB,UHE,UHH,UHV,UHX	EA	6
141	46	PAFZZ	1615-00-649-8229	97499	204-010-445-1	.FLANGE,SCISSORS AND	UHB,UHE,UHH,UHV,UHX	EA	1
141	47	PAFZZ	1615-00-454-8780	97499	204-010-479-17	.PLATE SET	UHB,UHE,UHH,UHV,UHX	EA	1
141	48	PAFZZ	5315-00-860-9527	97499	204-011-453-1	.PIN	UHB,UHE,UHH,UHV,UHX	EA	1
141	49	PAFZZ	5310-00-649-8226	97499	204-010-420-1	.NUT,PLAIN,ROUND	UHB,UHE,UHH,UHV,UHX	EA	1
141	50	PAFZZ	5330-00-580-2008	97499	204-010-428-1	.SEAL,PLAIN ENCASED	UHB,UHE,UHH,UHV,UHX	EA	1
141	51	PAFZZ	5365-00-847-1132	97499	204-011-411-1	.SPACER,RING	UHB,UHE,UHH,UHV,UHX	EA	1
141	52	PAFZZ	5365-00-736-6554	97499	204-011-410-1	.SPACER SET,RING	UHB,UHE,UHH,UHV,UHX	EA	1
141	53	PAFDD	3110-00-855-9236	97499	204-011-409-1	.BEARING,BALL,STACK	UHB,UHE,UHH,UHV,UHX	EA	1
141	53A	AFFFF	1560-00-649-8228	97499	204-010-437-5	.NUT,PLAIN ROUND	UHB,UHE,UHH,UHV,UHX	EA	1
141	54	PAFZZ	5330-00-580-2008	97499	204-010-428-1	..SEAL,PLAIN ENCASED	UHB,UHE,UHH,UHV,UHX	EA	1
141	55	PAFZZ	5310-00-788-0048	97499	204-010-437-7	..NUT,PLAIN,ROUND	UHB,UHE,UHH,UHV,UHX	EA	1
141	56	PAFZZ	5305-00-912-4818	96906	MS35276-261	.SCREW,MACHINE	UHB,UHE,UHH,UHV,UHX	EA	2
141	57	PAFZZ	1615-00-860-9508	97499	204-011-454-1	.LOCK,PLATE,SCISSORS	UHB,UHE,UHH,UHV,UHX	EA	1
141	58	PAFZZ	1615-00-970-1259	97499	204-011-405-9	HUB ASSY,COLLECTIVE	UHB,UHE,UHH,UHV,UHX	EA	1
141	59	XDOZZ	4730-00-277-4780	80205	NAS516-1	..FITTING,LUBRICATION	UHB,UHE,UHH,UHV,UHX	EA	2
141	60	PAFZZ	1615-01-143-7338	97499	204-011-408-105	.SLEEVE, COLLECTIVE	UHH,UHB,UHE,UHV,UHX	EA	1

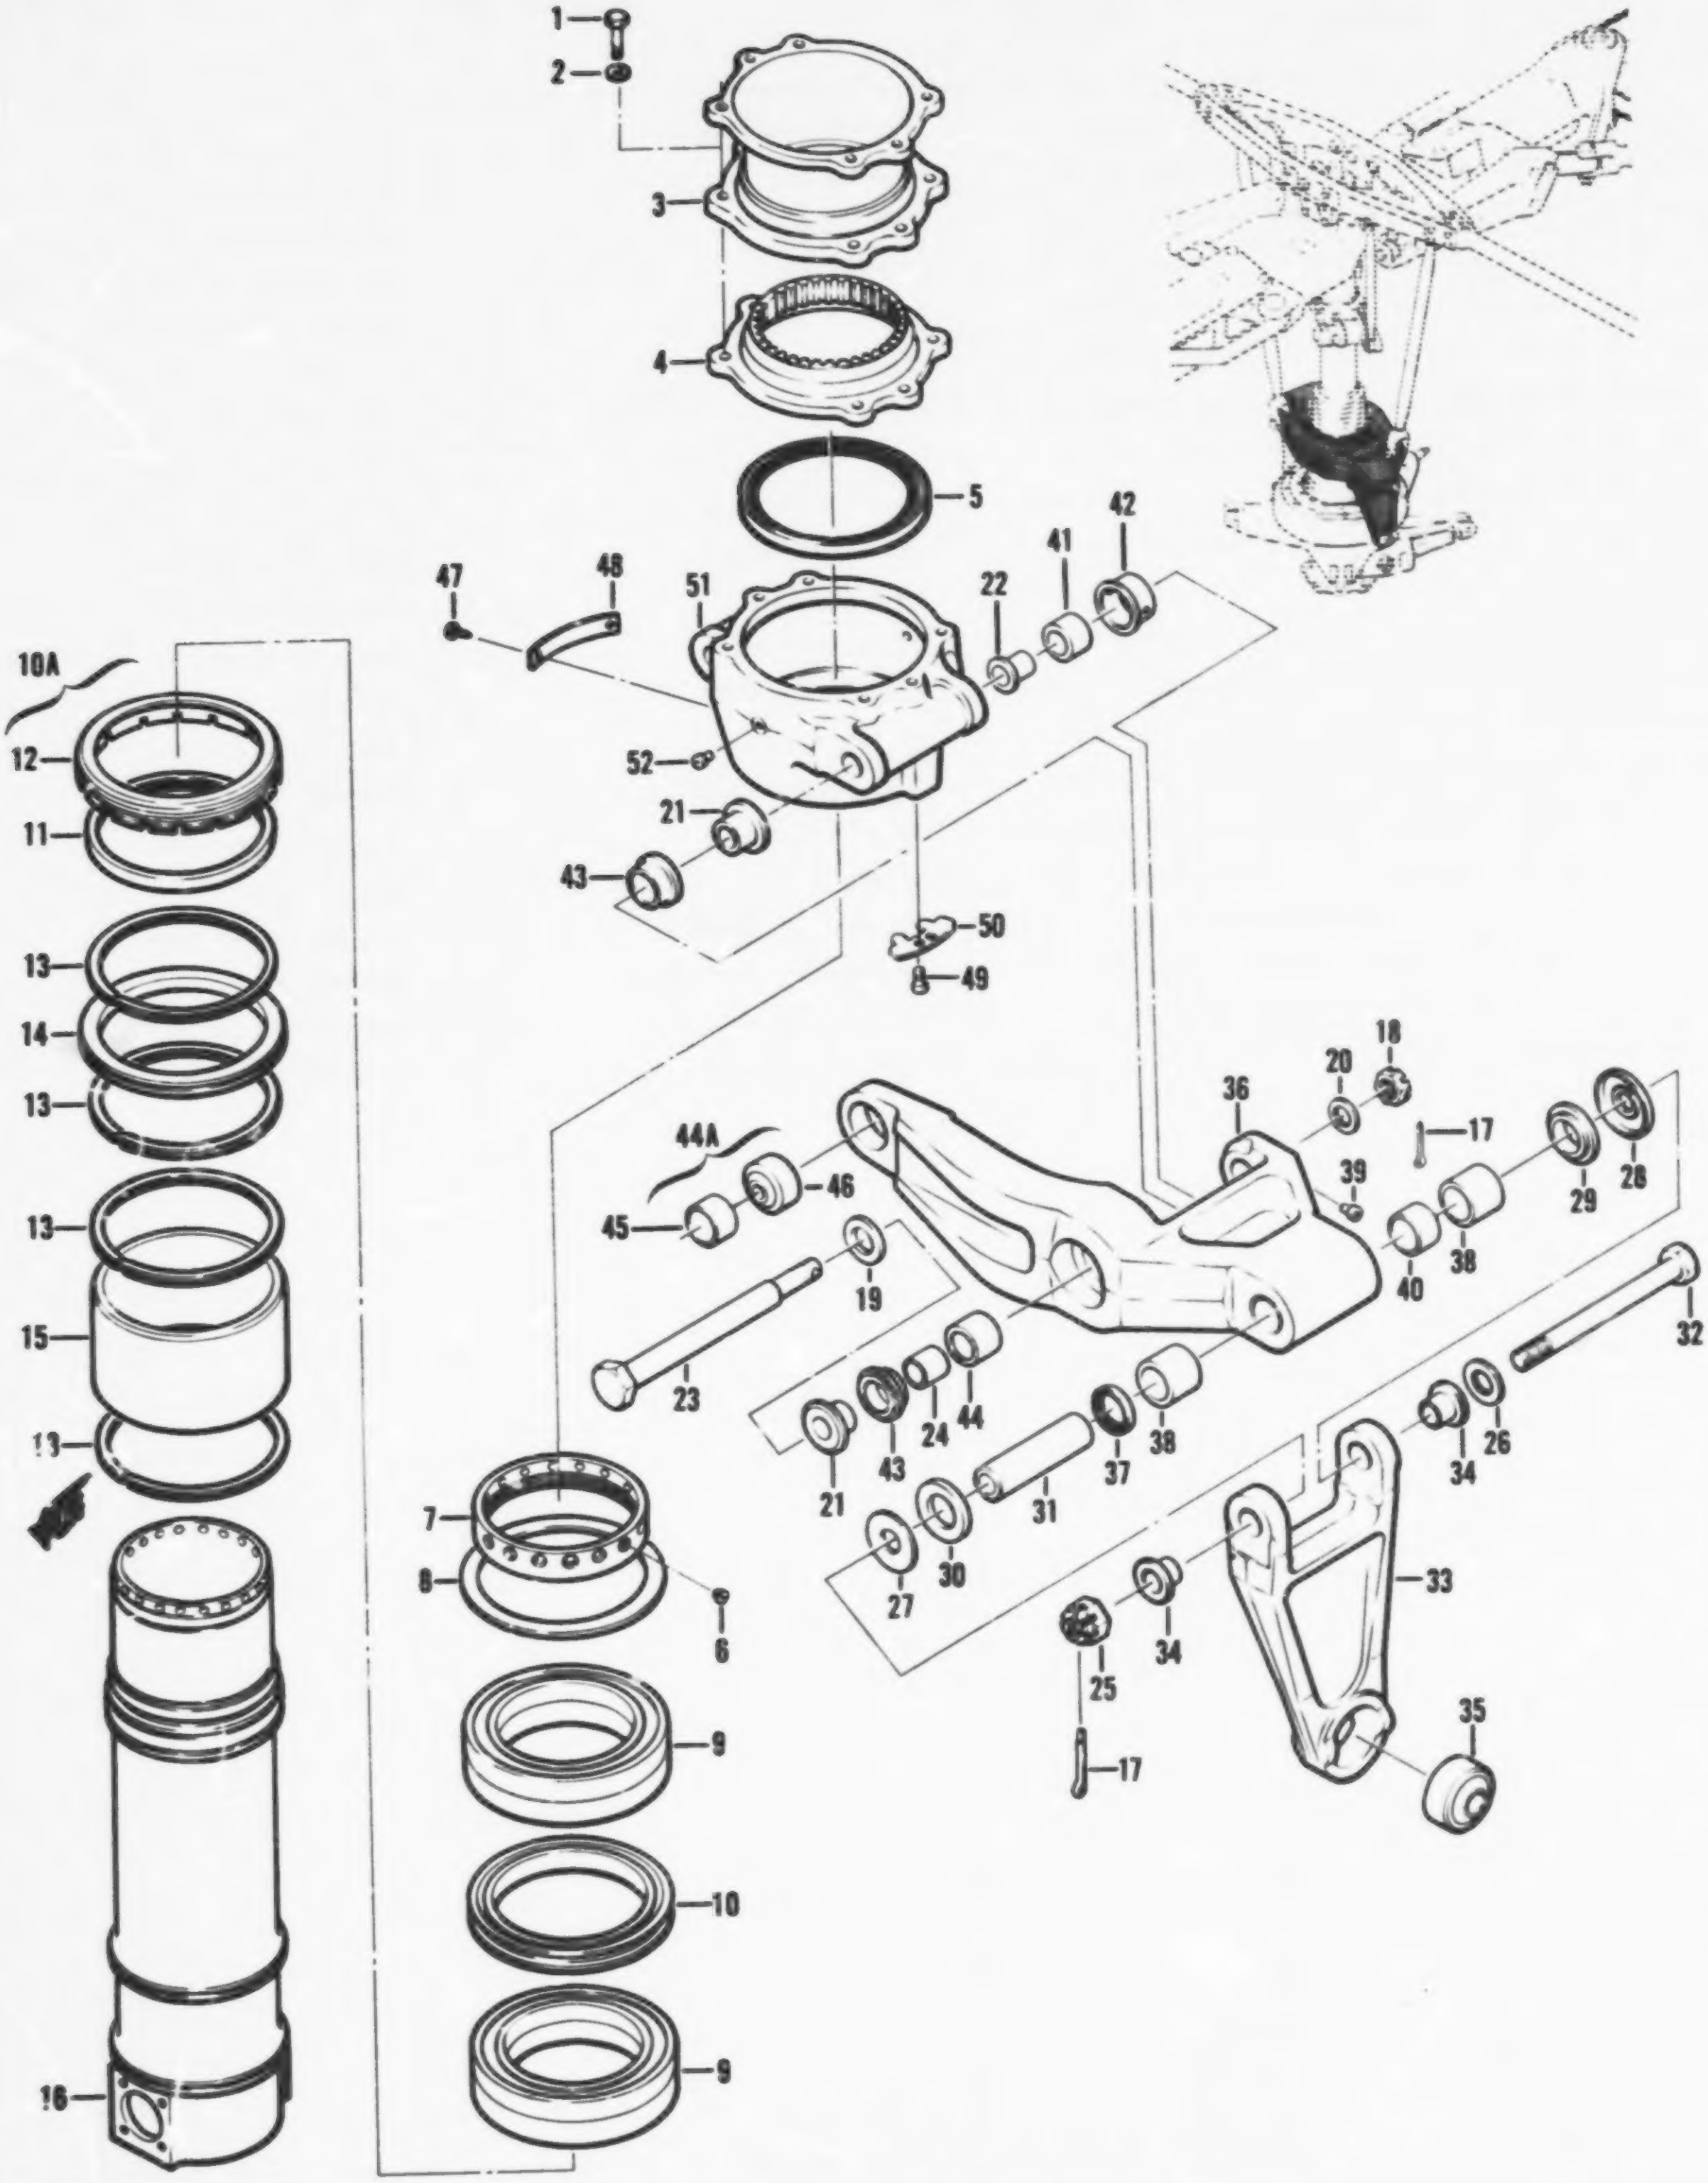
1
2
3
4
5
42
41
22
47
48
51
10A
12
52
21
11
43
50
49
13
14
13
18
20
36
17
44A
39
46
29
28
45
13
40
38
19
32
15
23
24
44
43
38
37
21
31
26
34
13
7
30
27
8
6
33
34
25
9
35
17
10
9
16

Figure 142. Scissors and Sleeve Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
142		PAODD	1560-00-436-1835	97499	540-011-451-5	SCISSORS AND SLEEVE ASSEMBLY SEE FIG 130 FOR NHA	UHM	EA	1
142	1	XDFZZ		80205	NAS1304-10H	BOLT,SHEAR	UHM	EA	6
142	2	PAFZZ	5310-00-187-2354	88044	AN960PD416	WASHER,FLAT	UHM	EA	6
142	3	PAOZZ	1615-00-482-1068	97499	209-010-464-1	EXTENSION,PYLON ASSEMBLY. USE ONLY WITH P/N 209-010-465-1 REF FIG 130 ITEM 56	UHM	EA	1
142	4	PAFZZ	1615-00-918-2450	97499	540-011-486-1	PLATE,SPLINE,SCISSO	UHM	EA	1
142	5	PAFZZ	5330-00-580-2008	97499	204-010-428-1	SEAL,PLAIN ENCASED	UHM	EA	1
142	6	PAFZZ	5315-00-860-9527	97499	204-011-453-1	PIN	UHM	EA	1
142	7	PAFZZ	5310-00-645-8226	97499	204-010-420-1	NUT,PLAIN,ROUND	UHM	EA	1
142	8	PAFZZ	5365-00-847-1132	97499	204-011-411-1	SPACER,RING	UHM	EA	1
142	9	PAODD	3110-00-133-6452	97499	540-011-449-3	BEARING,BALL,STACK	UHM	EA	1
142	10	PAFZZ	5365-00-909 1313	97499	540-011-461-1	SPACER SET,RING	UHM	SE	1
142	10A	ADOOZ		97499	204-010-437-5	NUT,PLAIN ROUND	UHM	EA	1
142	11	PAFZZ	5330-00-580-2008	97499	204-010-428-1	SEAL,PLAIN ENCASED	UHM	EA	1
142	12	PAFZZ	5310-00-788-0048	97499	204-010-437-7	NUT,PLAIN,ROUND	UHM	EA	1
142	13	PAFZZ	5365-00-947-3557	80756	RS456CD	RING,RETAINING	UHM	EA	4
142	14	PAFZZ	5365-00-904-1488	97499	540-011-458-1	SPACER RING	UHM	EA	1
142	15	PAFZZ	3120-00-986-6124	97499	209-010-452-1	BEARING,SLEEVE	UHM	EA	1
142	16	PADZZ	1615-00-908-6459	97499	540-011-456-1	SLEEVE,COLLECTIVE	UHM	EA	1
142	17	PAFZZ	5315-00-013-7214	96906	MS24665-359	PIN,COTTER	UHM	EA	4
142	18	PAFZZ	5310-00-176-8113	88044	AN320-9	NUT,SLOTTED HEXAGON	UHM	EA	2
142	19	PAFZZ	5310-00-777-5040	97499	140-007-50-42C4	WASHER,RECESSED	UHM	EA	2
142	20	PAFZZ	3120-00-930-5285	97499	540-011-395-5	BEARING,WASHER,THRU	UHM	EA	2
142	21	PAFZZ	3120-00-905-7581	97499	540-011-441-17	BUSHING,SLEEVE	UHM	EA	4
142	22	PAFZZ	3120-00-071-4504	97499	540-011-398-3	BUSHING,SLEEVE	UHM	EA	2
142	23	PAFZZ	5306-00-930-5358	97499	540-011-397-1	BOLT,SHOULDER	UHM	EA	2
142	24	PAFZZ	3110-00-941-7061	97499	540-011-484-1	RING,BEARING,INNER	UHM	EA	2
142	25	PAOZZ	5310-00-582-6055	81352	AN310-10	NUT,CASTELLATED,HEX	UHM	EA	2
142	26	PAOZZ	5310-00-774-9428	97499	140-007-41-3905	WASHER,RECESSED	UHM	EA	2
142	27	PAOZZ	3120-00-930-5286	97499	540-011-395-3	WASHER	UHM	EA	2
142	28	PAOZZ	5310-00-930-6112	97499	540-011-315-1	WASHER,RECESSED	UHM	EA	2
142	29	PAOZZ	5310-00-930-6113	97499	540-011-316-1	WASHER,SHOULDERED	UHM	EA	2
142	30	PAOZZ	3120-00-930-5212	97499	540-011-394-9	BEARING,WASHER,THRU	UHM	EA	2
142	31	PAOZZ	1615-00-930-5231	97499	540-011-392-5	SHAFT,ROTOR	UHM	EA	2
142	32	PAOZZ	5306-00-900-8700	80205	NAS1310-800	BOLT,SHEAR	UHM	EA	2
142	33	PAOFF	1615-00-866-5996	97499	540-011-409-1	LINK ASSEMBLY,SWASH	UHM	EA	2
142	34	PAFZZ	3120-00-781-8931	97499	540-011-421-5	BUSHING,SLEEVE	UHM	EA	2
142	35	PAFZZ	3120-00-775-1852	97499	540-011-414-1	BEARING,PLAIN SELF ALIGNING	UHM	EA	1
142	36	PAOFF	1615-00-183-7733	97499	540-011-406-17	SCISSORS ASSY,ROTOR	UHM	EA	2
142	37	PAFZZ	1615-00-930-5203	73680	71X7042	SEAL,ROTOR	UHM	EA	2
142	38	PADZZ	3110-00-926-4536	80657	JH1416	BEARING,ROLLER,NEED	UHM	EA	1
142	39	XDOZZ		80205	NAS516-1	FITTING,LUBRICATION	UHM	EA	2
142	40	PAFZZ	5365-00-930-5235	97499	540-011-439-5	SPACER,ROTOR	UHM	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
142	41	PAFZZ	3110-00-930-6289	80667	JTT12110H	. . BEARING, ROLLER, NEED	UHM	EA	1
142	42	PAFZZ	3130-00-233-9259	97499	540-011-399-3	. . LINER, BEARING HOUSI	UHM	EA	1
142	43	PAFZZ	3120-00-919-6054	97499	540-011-485-1	. . BEARING ASSEMBLY, TH	UHM	EA	2
142	44	PAFZZ	3110-00-832-9179	97499	540-011-492-1	. . BEARING, ROLLER, CYLINDRICAL	UHM	EA	1
142	44A	ADFFF		97499	540-011-052-1	. . BEARING ASSEMBLY	UHM	EA	1
142	45	PADZZ	3120-00-089-7621	97499	540-011-052-5	. . . BUSHING, SLEEVE	UHM	EA	1
142	46	PAFZZ	3120-00-775-1847	97499	540-011-415-1	. . . BEARING, PLAIN, SELF- ALIGNING	UHM	EA	1
142	47	PAOZZ	5305-00-253-5606	96906	MS21318-7	. SCREW, DRIVE	UHM	EA	2
142	48	PAOZZ	9905-00-060-2034	97499	100-024-1	. PLATE, IDENTIFICATIO	UHM	EA	1
142	49	PADZZ	5305-00-912-4817	96906	MS35276-260	. SCREW, MACHINE	UHM	EA	2
142	50	PAFZZ	1615-00-860-9508	97499	204-011-454-1	. LOCK, PLATE, SCISSORS	UHM	EA	1
142	51	PADOO	1615-00-930-5215	97499	540-011-405-9	. HUB ASSEMBLY, ROTOR	UHM	EA	1
142	52	XDOZZ		80205	NAS516-1	. . FITTING, LUBRICATION	UHM	EA	2

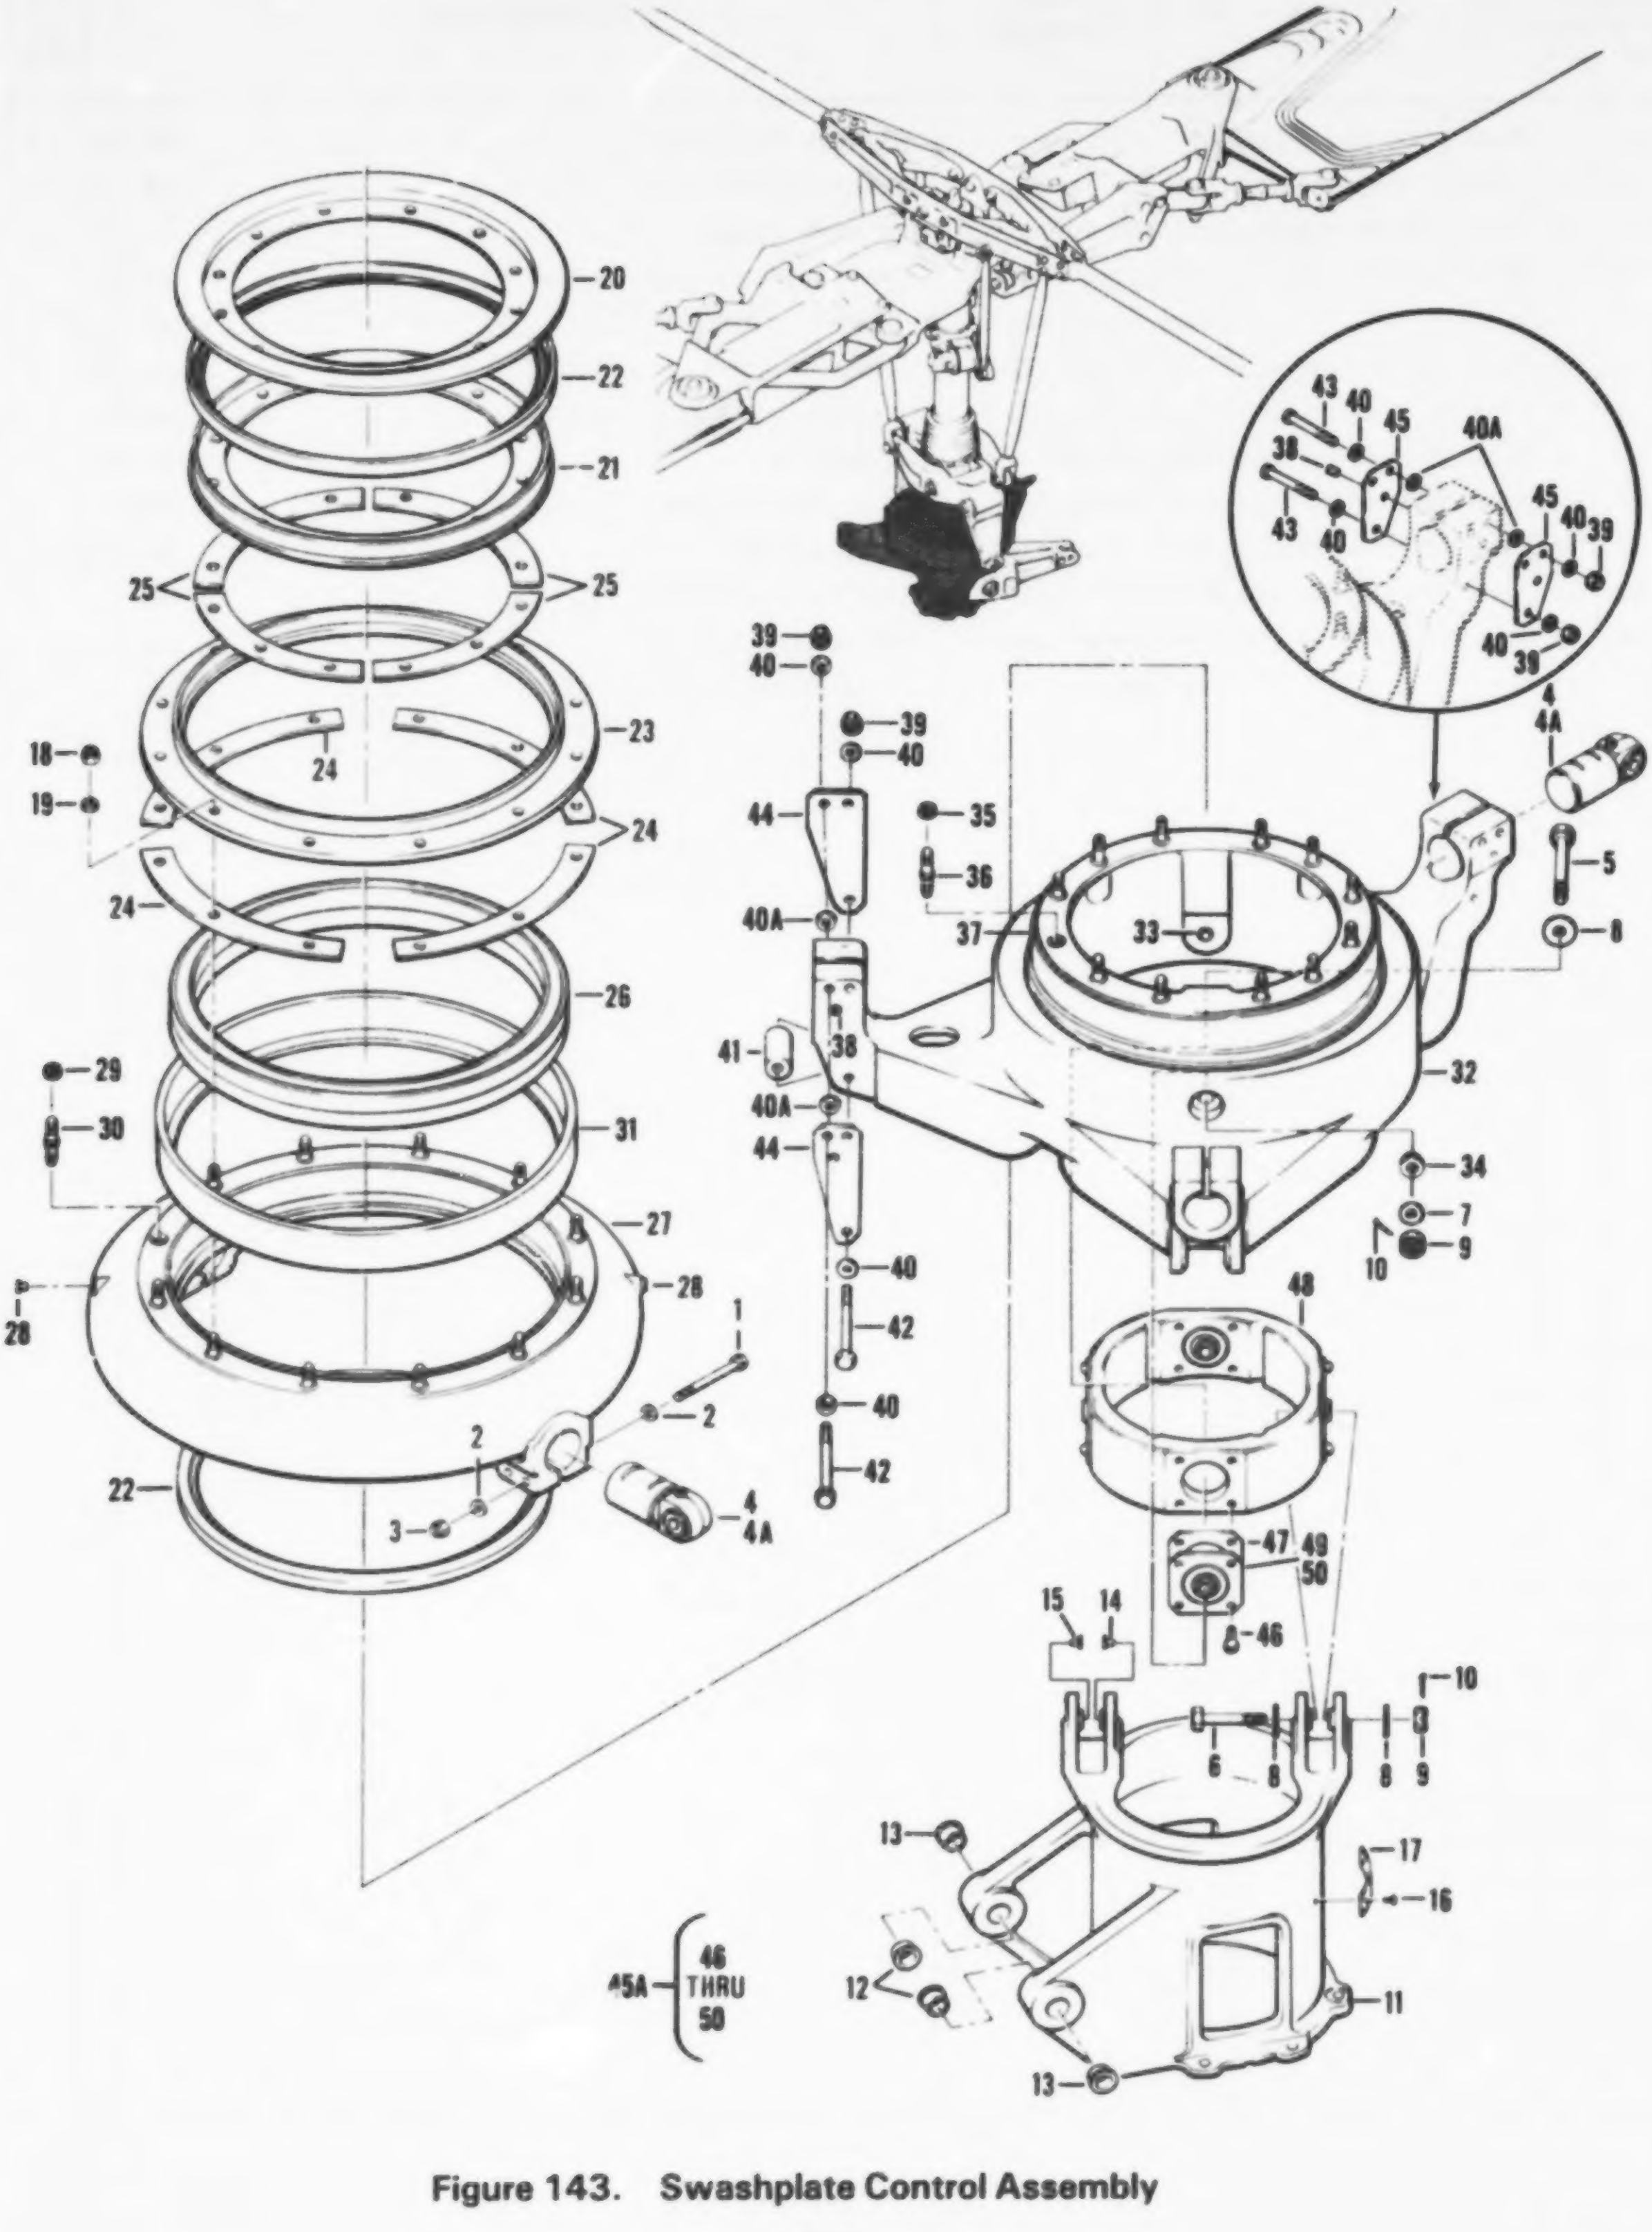
20
22
21
25
25
23
18
19
24
24
24
26
29
30
31
27
28
28
1
2
2
22
3
4
4A
39
40
39
40
44
35
36
40A
37
33
41
38
40A
44
40
42
40
42
43
40
45
40A
38
43
40
45
40
39
40
39
4
4A
5
8
32
34
7
9
10
48
47
49
50
46
15
14
10
6
8
8
9
13
17
16
12
11
13
45A
46
THRU
50

Figure 143. Swashplate Control Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
143		PAODO	1615-00-060-1062	97499	204-011-400-11	SWASHPLATE,CONTROL ASSEMBLY SEE FIG 128 FOR NHA	UHB,UHE,UHH,UHV,UHX	EA	1
143	1	PAOZZ	5306-00-182-2039	88044	AN4H23A	BOLT,MACHINE	UHB,UHE,UHH,UHV,UHX	EA	4
143	2	PAOZZ	5310-00-187-2354	88044	AN960PD416	WASHER,FLAT	UHB,UHE,UHH,UHV,UHX	EA	8
143	3	PAOZZ	5310-00-807-1475	96906	MS21042L4	NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHE,UHH,UHV,UHX	EA	4
143	4	PAOZZ	1615-00-157-5729	84955	KSP9001-5	TRUNNION ASSEMBLY	UHB,UHE,UHH,UHV,UHX	EA	5
143	4A	PAOZZ	1615-01-026-8349	50632	KSP9057	.SNUBBER,TRUNNION, ROTOR	UHB,UHE,UHH,UHV,UHX	EA	2
143	5	PADZZ	5306-00-530-0327	97499	204-011-463-1	BOLT,SHEAR	UHB,UHE,UHH,UHV,UHX	EA	2
143	6	PADZZ	5306-00-488-7597	97499	204-011-461-1	BOLT,SHEAR	UHB,UHE,UHH,UHV,UHX	EA	2
143	7	PADZZ	5310-00-167-0820	88044	AN960-516	WASHER,FLAT	UHB,UHE,UHH,UHV,UHX	EA	2
143	8	PADZZ	5310-01-083-6496	97499	204-011-457-3	WASHER,RECESSED	UHB,UHE,UHH,UHV,UHX	EA	6
143	9	PADZZ	5310-00-176-8109	88044	AN320-5	NUT,PLAIN,SLOTTED	UHB,UHE,UHH,UHV,UHX	EA	4
143	10	PADZZ	5315-00-234-1854	96906	MS24665-153	PIN,COTTER	UHB,UHE,UHH,UHV,UHX	EA	4
143	11	PADDO	1615-00-856-3919	97499	204-011-404-5	SUPPORT ASSEMBLY SWASHPLATE	UHB,UHE,UHH,UHV,UHX	EA	1
143	12	PAFZZ	3120-00-625-0062	97499	22-010-31-34-24	.BUSHING,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	2
143	13	PAFZZ	3120-00-690-8395	97499	204-010-413-15	.BUSHING,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	2
143	14	PAFZZ	3120-00-474-9147	97499	204-010-413-39	.BUSHING,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	2
143	15	PAFZZ	3120-00-446-6380	97499	204-010-413-31	.BUSHING,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	2
143	16	PAOZZ	5306-00-253-5606	96906	MS21318-7	.SCREW,DRIVE	UHB,UHE,UHH,UHV,UHX	EA	2
143	17	PAOZZ	9905-00-060-2034	97499	100-024-1	.PLATE,IDENTIFICATIO	UHB,UHE,UHH,UHV,UHX	EA	1
143	18	PADZZ	5310-00-807-1475	96906	MS21042L4	NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHE,UHH,UHV,UHX	EA	24
143	19	PADZZ	5310-00-187-2354	88044	AN960PD416	WASHER,FLAT	UHB,UHE,UHH,UHV,UHX	EA	24
143	20	PADZZ	3110-00-876-2410	97499	204-011-428-3	PLATE,RETAINING,BEA	UHB,UHE,UHH,UHV,UHX	EA	1
143	21	PADZZ	3110-00-474-9175	97499	204-011-427-1	CAP,INNER	UHB,UHE,UHH,UHV,UHX	EA	1
143	22	PADZZ	5330-00-446-6384	97499	204-011-429-1	SEAL,RUBBER	UHB,UHE,UHH,UHV,UHX	EA	2
143	23	PADZZ	3110-00-830-8041	97499	204-011-426-1	PLATE,RETAINING,BEA	UHB,UHE,UHH,UHV,UHX	EA	1
143	24	PADZZ	5365-00-446-6388	97499	204-011-444-1	SHIM	UHB,UHE,UHH,UHV,UHX	EA	4
143	25	PADZZ	5365-00-446-6387	97499	204-011-431-1	SHIM	UHB,UHE,UHH,UHV,UHX	EA	4
143	26	PADDO	3110-00-446-6386	97499	204-011-430-1	BEARING,BALL,ANNULA	UHB,UHE,UHH,UHV,UHX	EA	1
143	27	PADDO	1615-00-474-9151	97499	204-011-403-1	RING ASSEMBLY,OUTER	UHB,UHE,UHH,UHV,UHX	EA	1
143	28	XDOZZ	4730-00-277-4780	80205	NAS516-1	.FITTING,LUBRICATION	UHB,UHE,UHH,UHV,UHX	EA	4
143	29	PADZZ	5365-00-936-3668	96906	MS51990-105	.RING,LOCK,SERRATED	UHB,UHE,UHH,UHV,UHX	EA	12
143	30	PADZZ	5307-00-531-1414	83324	SF101-9SA11A	.STUD,PLAIN	UHB,UHE,UHH,UHV,UHX	EA	12
143	31	PADZZ	3130-00-474-9167	97499	204-011-425-1	.LINER	UHB,UHE,UHH,UHV,UHX	EA	1
143	32	PADDO	1615-00-060-1058	97499	204-011-402-13	RING,SWASHPLATE U/O PN 204-011-400-11	UHB,UHE,UHH,UHV,UHX	EA	1
143	33	PADZZ	3120-00-446-6382	97499	204-010-413-35	.BUSHING,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	2
143	34	PADZZ	1615-00-474-9188	97499	204-010-413-37	.BUSHING	UHB,UHE,UHH,UHV,UHX	EA	4
143	35	PADZZ	5365-00-935-3668	96906	MS51990-105	.RING,LOCK,SERRATED	UHB,UHE,UHH,UHV,UHX	EA	12
143	36	PADZZ	5307-00-531-1414	83324	SF101-9SA11A	.STUD,PLAIN	UHB,UHE,UHH,UHV,UHX	EA	12
143	37	PADZZ	5365-00-474-9166	97499	204-011-423-1	.SPACER,SLEEVE	UHB,UHE,UHH,UHV,UHX	EA	1
143	38	XDOZZ	4730-00-277-4780	80205	NAS516-1	.FITTING,LUBRICATION	UHB,UHE,UHH,UHV,UHX	EA	3
143	39	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX -WASHER,HEXAGON	UHB,UHE,UHH,UHV,UHX	EA	9

(1) FIG NO	(1) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
143	40	PADZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
143	40A	PADZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
143	41	PADZZ	5365-00-078-5878	97499	204-011-480-1	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	2
143	42	PADZZ	5306-00-182-2018	88044	AN4H24A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	6
143	43	PADZZ	5306-00-182-2020	88044	AN4H28A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	3
143	44	MFOZZ	1615-00-854-8475	97499	204-011-458-1	.PLATE,SWASHPLATE	UHE,UHH,UHV,UHX	EA	4
143	44	MFOZZ	1615-00-060-1065	97499	204-011-458-3	.PLATE,SWASHPLATE	UHE,UHH,UHV,UHX	EA	4
143	45	MFOZZ	1615-00-060-1067	97499	204-011-458-5	.PLATE,SWASHPLATE -ALTERNATE-	UHE,UHH,UHV,UHX	EA	2
143	45	MFOZZ	1615-00-854-8331	97499	204-011-458-7	.PLATE,SWASHPLATE	UHE,UHH,UHV,UHX	EA	2
143	45A	AODDO	1560-00-847-8323	97499	204-010-404-1	RING ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
143	46	PADZZ	5305-00-160-9213	88044	AN502-10-6	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	16
143	47	PADZZ	5365-00-680-7600	97499	204-010-434-1	.SHIM	UHE,UHH,UHV,UHX	EA	4
143	48	PADZZ	1615-00-649-8222	97499	204-010-404-3	.RING,SWASHPLATE SUP	UHE,UHH,UHV,UHX	EA	1
143	49	PADDD	3130-00-646-8227	97499	204-010-433-1	.BEARING AND LINER ASSEMBLY	UHE,UHH,UHV,UHX	EA	4
143	50	PADZZ	3110-00-023-7007	96906	MS27640-6	..BEARING,BALL,AIRFRA	UHE,UHH,UHV,UHX	EA	1

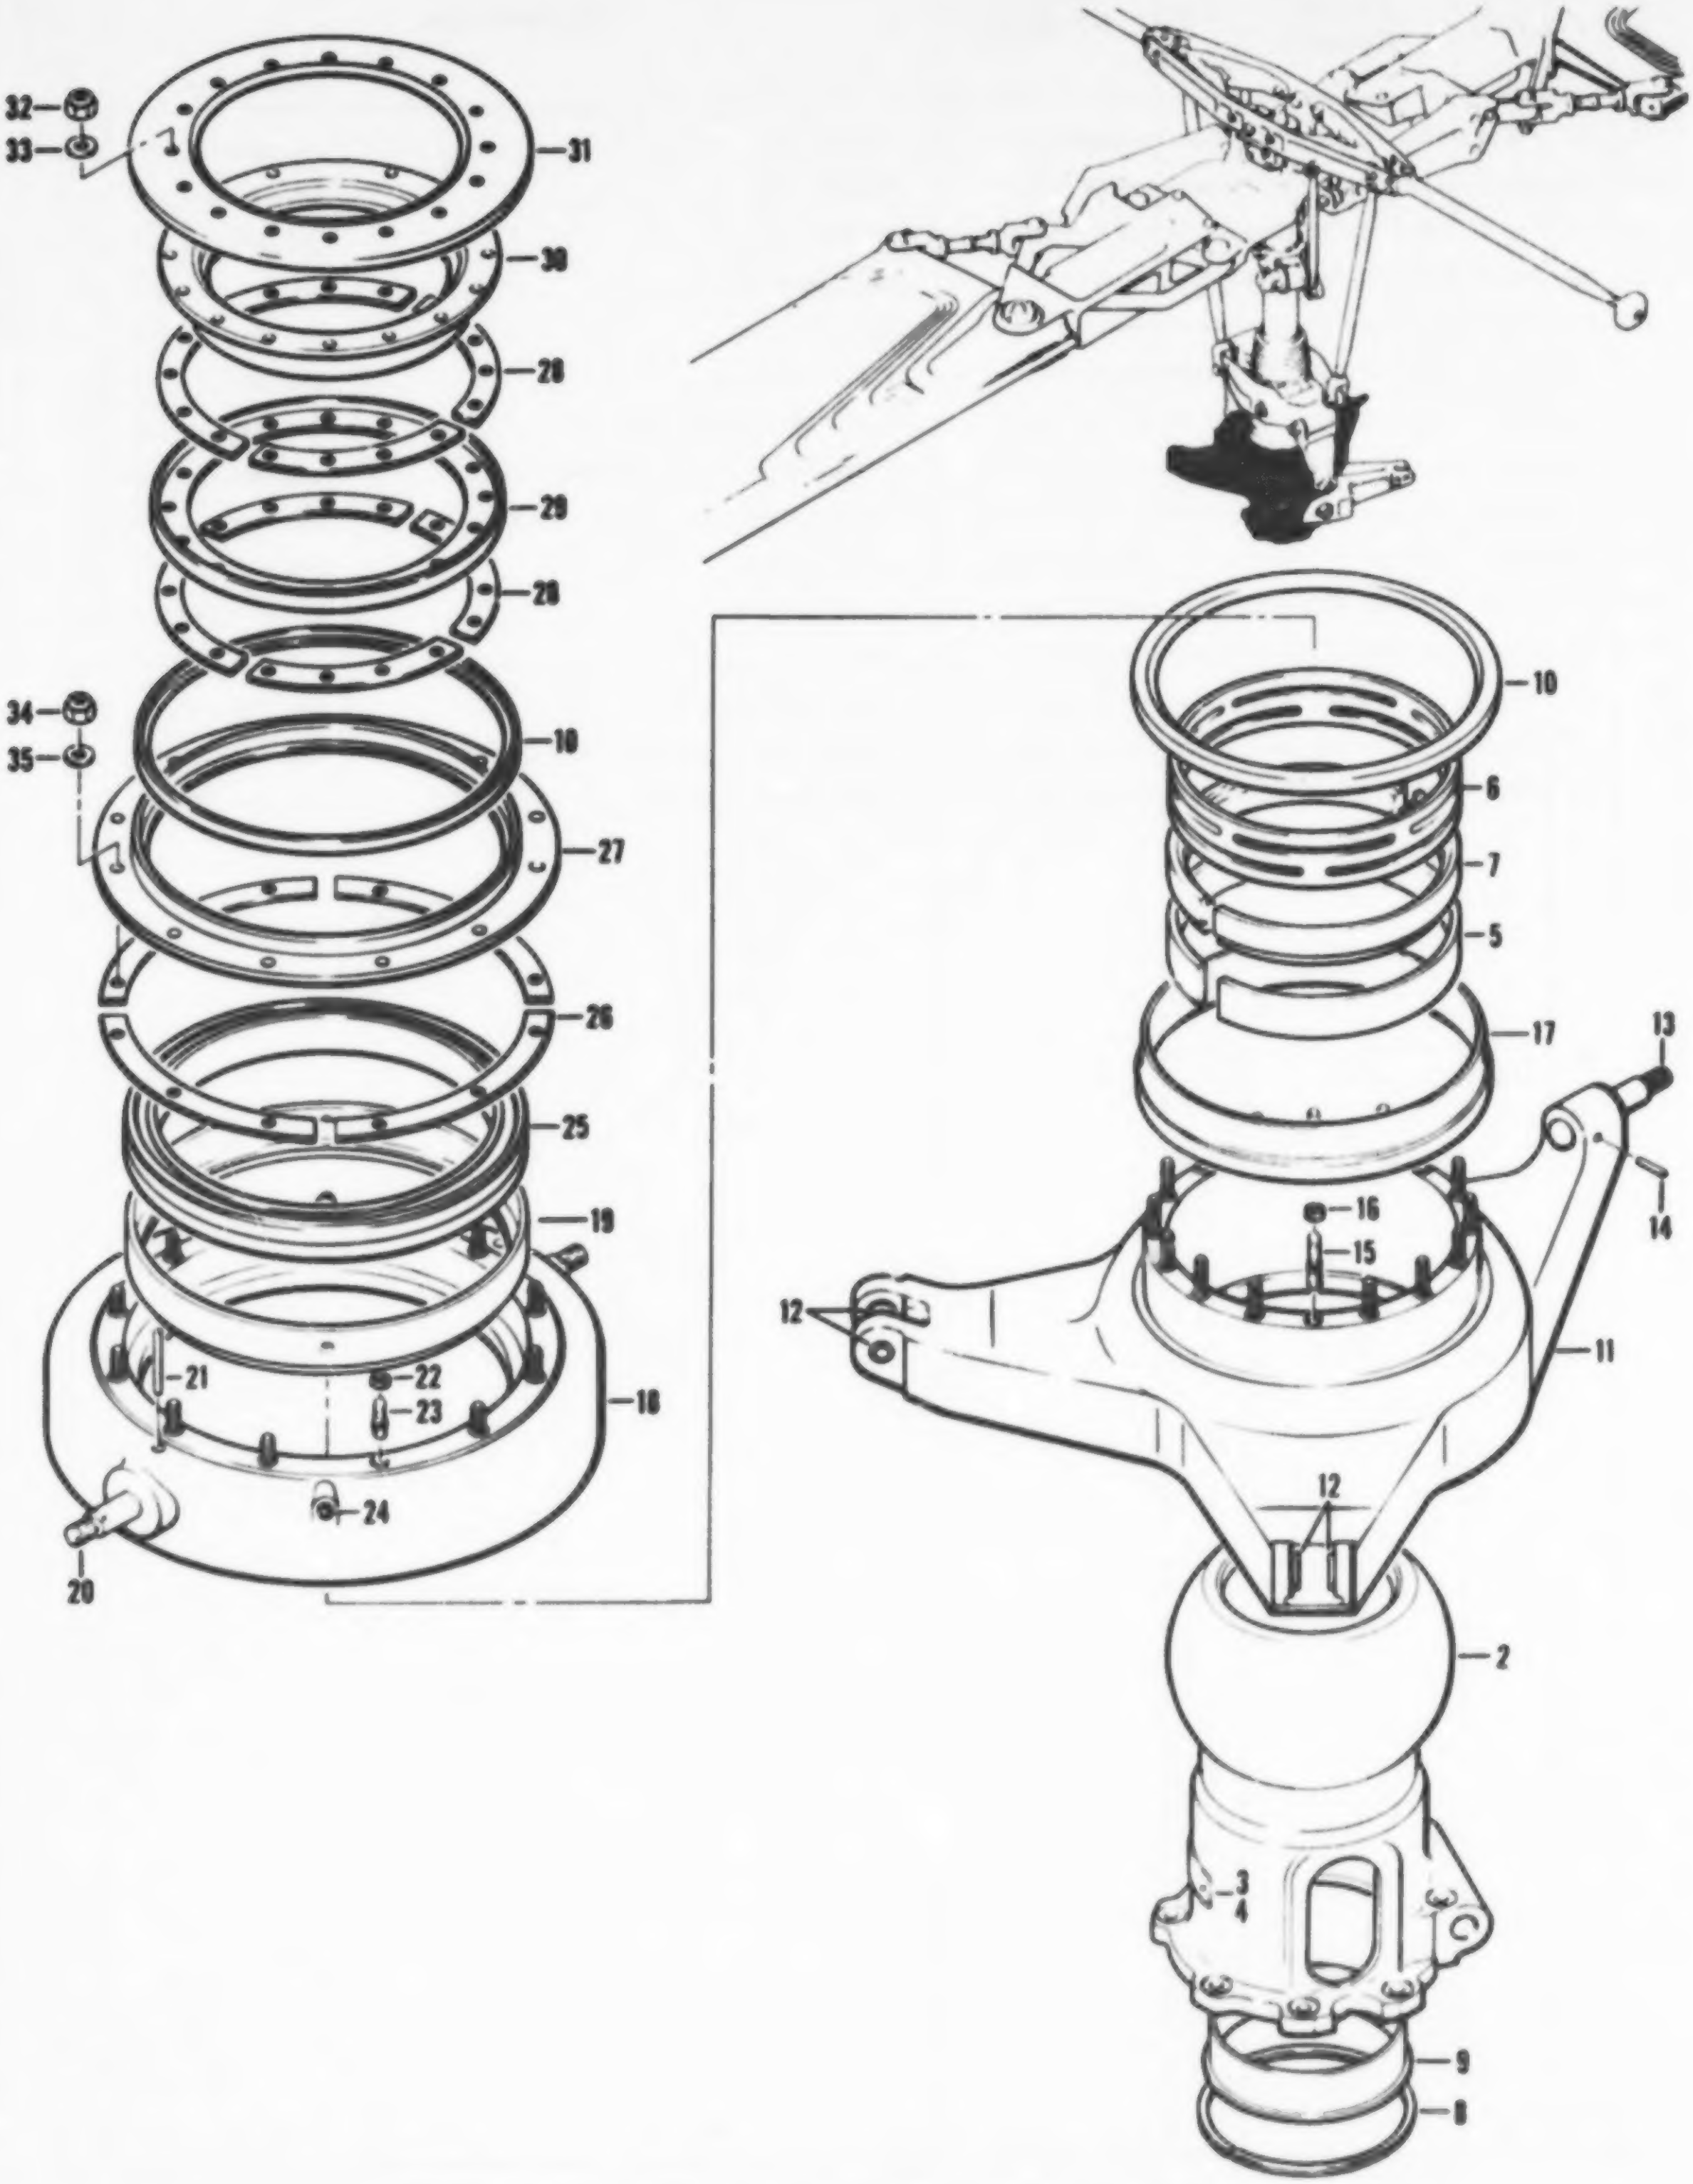
32
33
31
30
28
29
28
34
35
10
27
26
25
19
21
22
23
18
24
20
10
6
7
5
17
13
14
16
15
12
11
12
2
3
4
9
8

Figure 144. Swashplate and Support Assembly

SECTION II

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
144		PAOFF	1615-00-911-9292	97499	540-011-450-7	SWASHPLATE AND SUPPORT ASSEMBLY SEE FIG 130 FOR HHA	UHC, UHM	EA	1
144	2	PAFFF	1615-00-921-6161	97499	540-011-452-5	.SUPPORT ASSEMBLY, SW	UHC, UHM	EA	1
144	3	PAFZZ	5305-00-253-5606	96906	MS21318-7	..SCREW, DRIVE	UHC, UHM	EA	2
144	4	PAFZZ	9905-00-060-2034	97499	100-024-1	..PLATE, IDENTIFICATIO	UHC, UHM	EA	1
144	5	PAFZZ	5365-00-772-6198	97499	540-011-425-1	.RING, RETAINING	UHC, UHM	EA	1
144	6	PAFZZ	1615-00-930-6109	97499	540-011-383-1	.SPRING, EXPANDER, BEA	UHC, UHM	EA	1
144	7	PAFZZ	1615-00-908-6772	97499	540-011-482-1	SEAT, BALL SOCKET	UHC, UHM	SE	1
144	8	PAFZZ	5365-00-944-7302	80756	RR550CD	.RING, RETAINING	UHC, UHM	EA	1
144	9	PAFZZ	3120-00-912-6151	97499	540-011-419-13	.BEARING, WASHER, THRU	UHC, UHM	EA	1
144	10	PAFZZ	5330-00-446-6384	97499	204-011-429-1	.SEAL, SWASHPLATE AND BEARING	UHC, UHM	EA	2
144	11	PAFFF	1615-00-913-4063	97499	540-011-403-9	.RING ASSEMBLY, INNER	UHC, UHM	EA	1
144	12	PAFZZ	3120-00-089-7134	97499	540-011-381-1	..BUSHING, SLEEVE	UHC, UHM	EA	4
144	13	PAFZZ	5315-00-909-4214	97499	540-011-469-1	..PIN, SHOULDER	UHC, UHM	EA	1
144	14	PAFZZ	5315-00-836-9628	96906	MS16562-52	..PIN, SPRING	UHC, UHM	EA	2
144	15	PAFZZ	5307-00-264-2559	83324	SF101-9SA16A	..STUD, LOCKED IN	UHC, UHM	EA	16
144	16	PAFZZ	5365-00-405-7576	83324	RLRR24SB7	..RING, LOCK, SERRATED	UHC, UHM	EA	16
144	17	PAFZZ	5365-00-474-9166	97499	204-011-423-1	..SPACER, SLEEVE	UHC, UHM	EA	1
144	18	PAFFF	1615-00-872-7859	97499	540-011-404-5	.RING ASSEMBLY, OUTER	UHC, UHM	EA	1
144	19	PAFZZ	5365-00-909-2813	97499	540-011-479-1	..SPACER, SLEEVE	UHC, UHM	EA	1
144	20	PAFZZ	5306-00-903-8215	97499	540-011-478-1	..BOLT, SHOULDER	UHC, UHM	EA	2
144	21	PBFZZ	5315-00-882-3429	96906	MS9048-179	..PIN, SPRING	UHC, UHM	EA	2
144	22	PAFZZ	5365-00-682-5877	83324	RL28S88	..RING, LOCK, SERRATED	UHC, UHM	EA	12
144	23	XDFZZ	5307-00-801-6720	83324	SF111-11SA11A	..STUD, PLAIN	UHC, UHM	EA	12
144	24	XDOZZ	4730-00-277-4780	80205	NAS516-1	..FITTING, LUBRICATION	UHC, UHM	EA	2
144	25	PAODD	3110-00-446-6386	97499	204-011-430-1	.BEARING, BALL, ANNULA	UHC, UHM	EA	1
144	26	PAFZZ	5365-00-871-5775	97499	540-011-436-1	.SHIM	UHC, UHM	EA	4
144	27	PAFZZ	3110-00-871-8681	97499	540-011-434-1	.CAP, OUTER	UHC, UHM	EA	1
144	28	PAFZZ	5365-00-799-0466	97499	540-011-426-1	.SHIM	UHC, UHM	EA	8
144	29	PAFZZ	1615-00-903-6694	97499	540-011-411-3	.RING, WEARING	UHC, UHM	EA	1
144	30	PADZZ	1615-00-908-6771	97499	540-011-466-1	SEAT, BALL SOCKET	UHC, UHM	EA	1
144	31	PAFZZ	1615-00-792-1490	97499	540-011-424-1	.RING, WEARING	UHC, UHM	EA	1
144	32	PAFZZ	5310-00-807-1475	96906	MS21042L4	.NUT, SELF-LOCKING, EX WASHER, HEXAGON	UHC, UHM	EA	16
144	33	PAFZZ	5310-00-187-2354	88044	AN960PD416	.WASHER, FLAT	UHC, UHM	EA	16
144	34	PAFZZ	5310-00-807-1476	96906	MS21042L5	.NUT, SELF-LOCKING, EX WASHER, HEXAGON	UHC, UHM	EA	12
144	35	PAFZZ	5310-00-187-2399	88044	AN960PD516	.WASHER, FLAT	UHC, UHM	EA	12

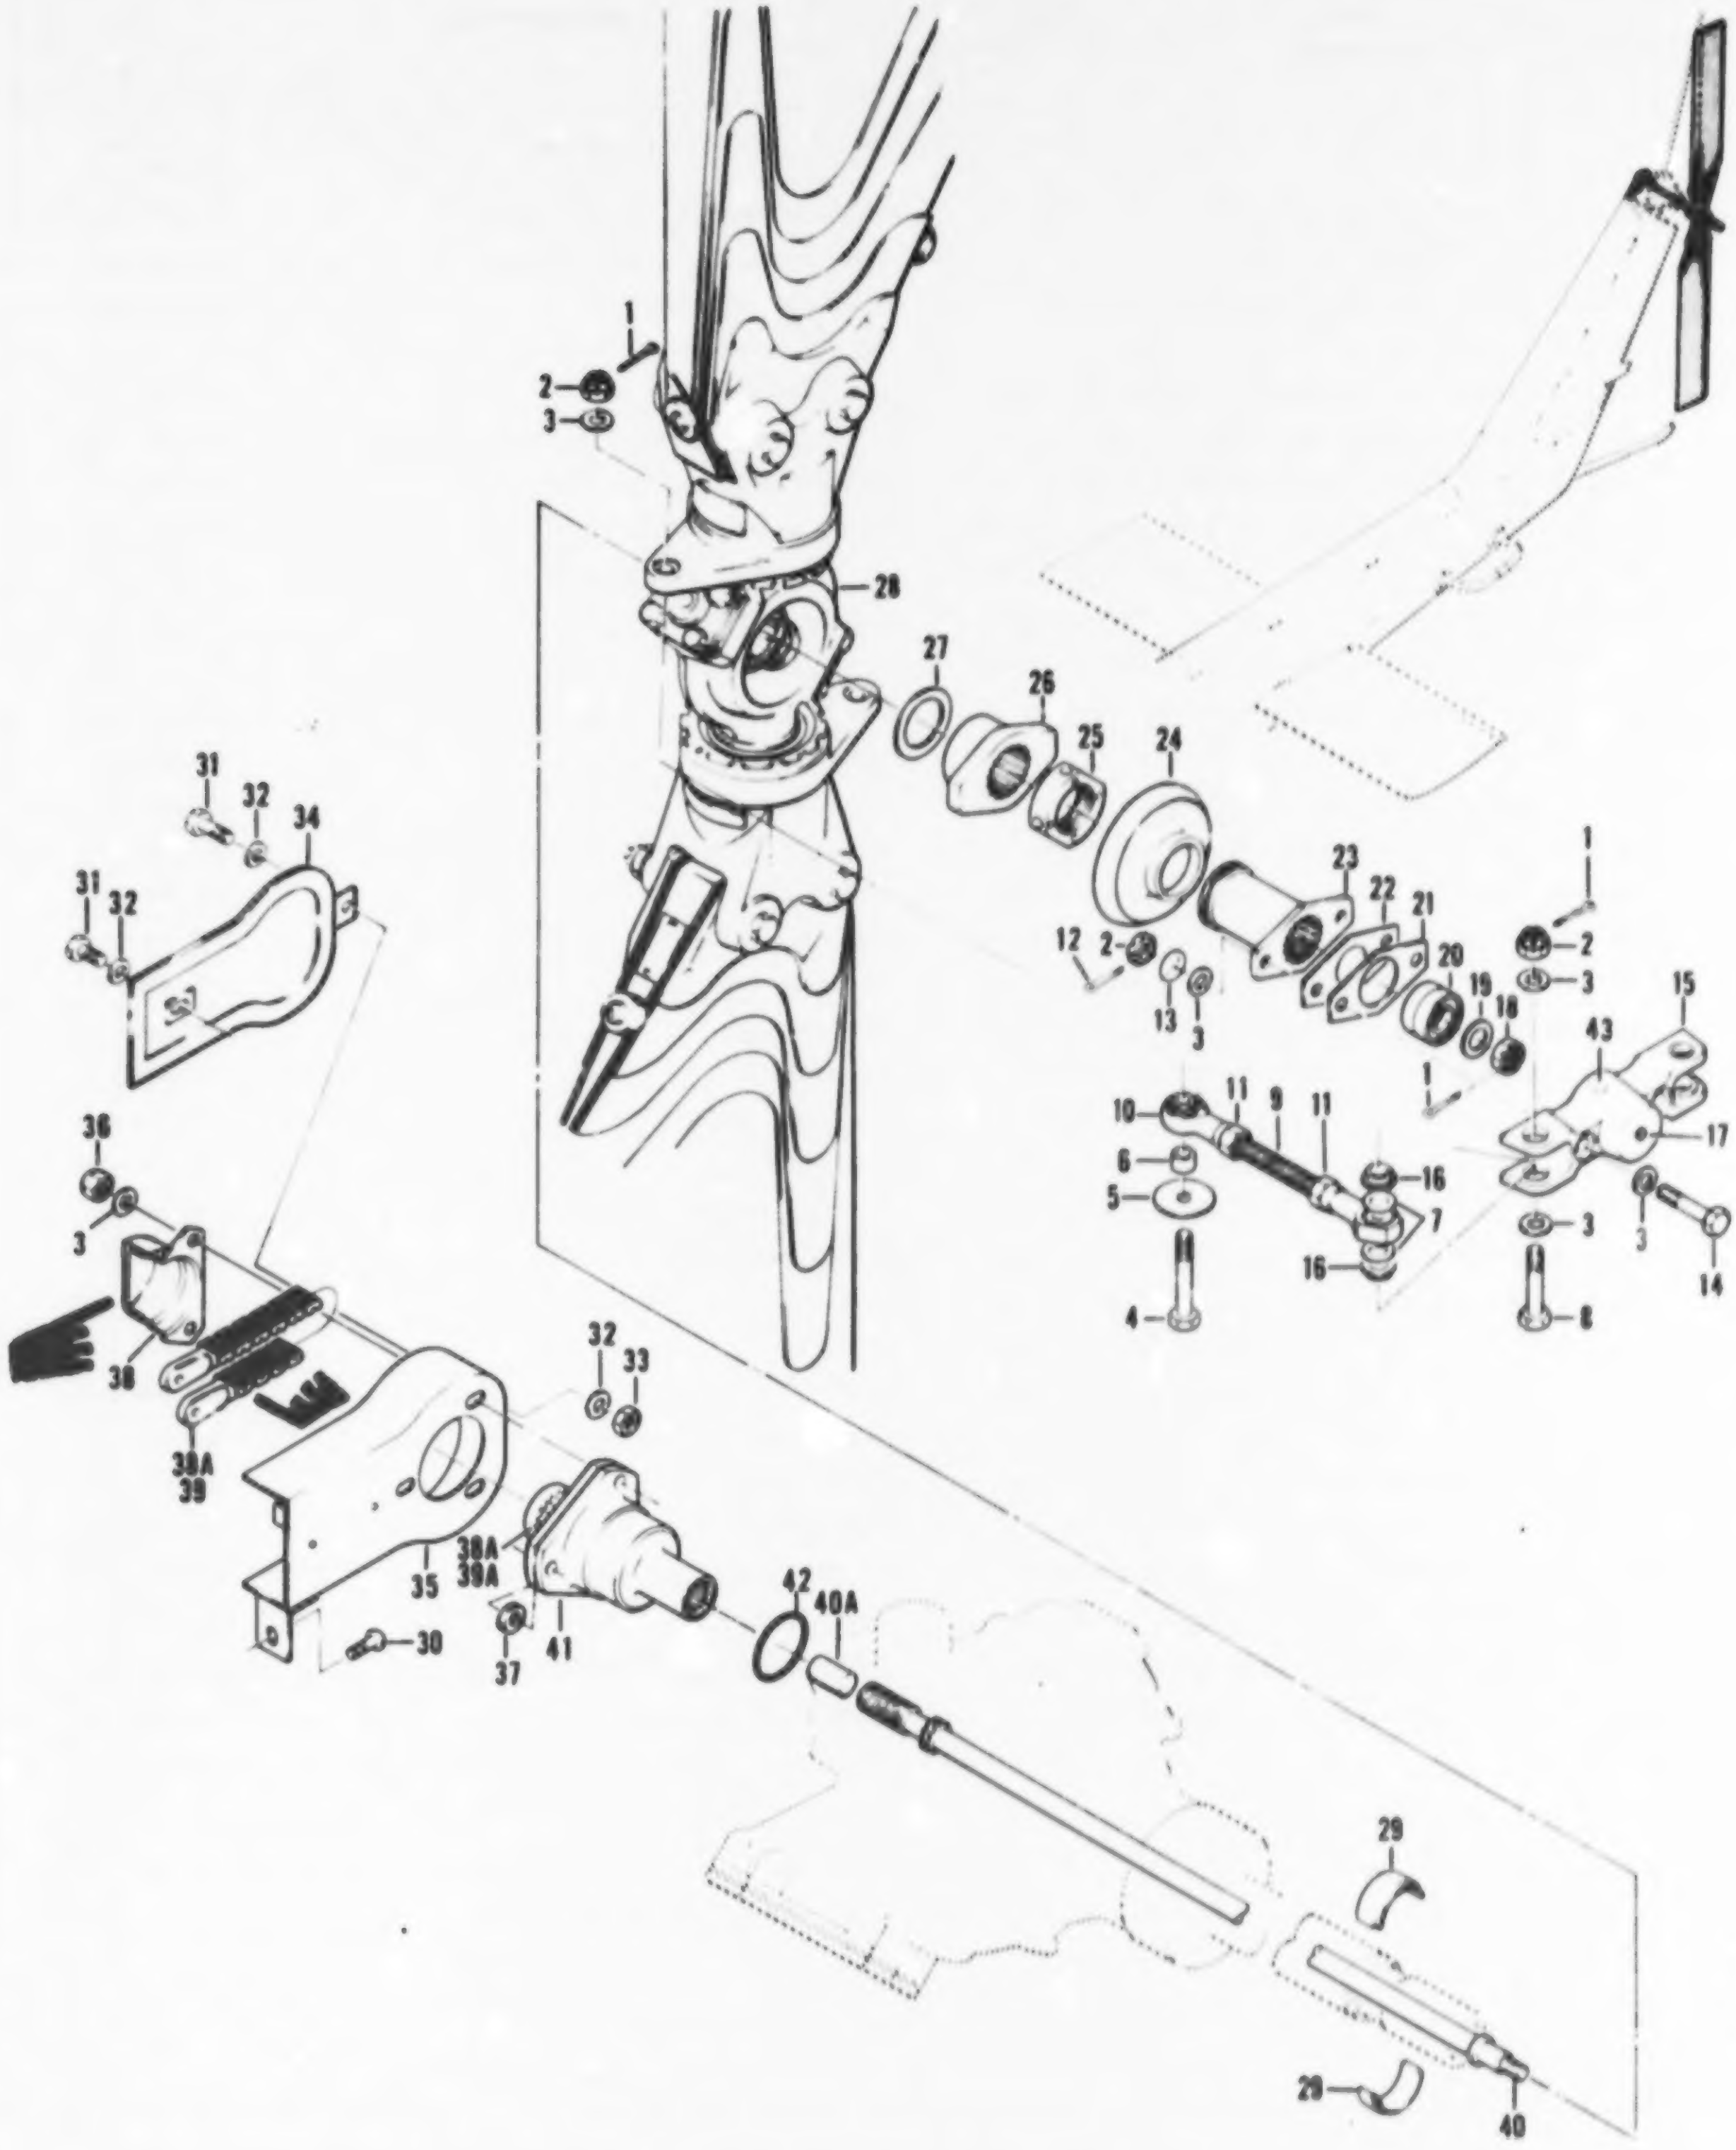
1
2
3
28
27
26
25
24
23
22
21
20
19
18
1
2
3
12
2
13
3
15
43
17
1
10
11
9
11
6
16
5
7
16
3
14
3
4
8
31
32
34
31
32
36
3
38
38A
39
32
33
35
38A
39A
41
37
30
42
40A
29
29
40

Figure 145. Tail Rotor Installation

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
145		XCFZZ		97499	204-011-700-17	ROTOR INSTL,TAIL SEE FIG.8 FOR NHA UHM	EA	1
145		XCFZZ		97499	204-011-700-21	ROTOR INSTL,TAIL USBL EFF 62-2106 THRU 72-21649 SEE FIG.8 FOR NHA UHE,UHH,UHV,UHX	EA	1
145		XCFZZ		97499	204-011-700-25	ROTOR INSTL,TAIL USBL EFF 73-21661 & SUB SEE FIG.8 FOR NHA UHE,UHH,UHV,UHX	EA	1
145	1	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER UHE,UHH,UHM,UHV,UHX	EA	5
145	2	PAOZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN UHE,UHH,UHM,UHV,UHX	EA	6
145	3	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT UHE,UHH,UHM,UHV,UHX	EA	13
145	4	PAOZZ	5306-00-116-1314	80205	NAS1304-190H	.BOLT,MACHINE BLK 4 RPLS NAS1304-20D UHE,UHH,UHM,UHV,UHX	EA	2
145	5	PAOZZ	5310-00-226-5633	97499	204-010-793-3	.WASHER,FLAT UHE,UHH,UHM,UHV,UHX	EA	2
145	6	PAOZZ	5365-00-580-3641	80205	NAS43HT4-8	.SPACER,SLEEVE UHE,UHH,UHM,UHV,UHX	EA	2
145	7	MDOZZ		81996	1560UH1-711-1	.ANTI CHAFFING WASHE UHE,UHH,UHM,UHV,UHX	EA	4
145	8	PAOZZ	5306-00-063-3753	80205	NAS1304-18D	.BOLT,SHEAR UHE,UHH,UHM,UHV,UHX	EA	2
145	9	PAOOO	3040-00-157-5087	97499	204-011-762-11	.LINK ASSEMBLY,TR UHE,UHH,UHM,UHV,UHX	EA	2
145	10	PAOZZ	3120-00-980-0344	97499	204-011-763-1	..BEARING,PLAIN,ROD E UHE,UHH,UHM,UHV,UHX	EA	1
145	11	PAOZZ	5310-00-167-1345	88044	AN315-5R	..NUT,PLAIN,HEXAGO UHE,UHH,UHM,UHV,UHX	EA	2
145	12	PAOZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER UHE,UHH,UHM,UHV,UHX	EA	2
145	13	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT UHE,UHH,UHM,UHV,UHX	EA	2
145	14	PAOZZ	5306-00-680-5284	80205	NAS1304-21D	.BOLT,MACHINE UHE,UHH,UHM,UHV,UHX	EA	2
145	15	PAOOO	1615-00-051-3646	97499	204-011-711-1	.CROSSHEAD ASSEMBLY UHE,UHH,UHM,UHV,UHX	EA	1
145	16	PAOZZ	1560-00-758-3671	97499	204-010-794-1	..BUSHING,CROSSHEAD,T UHE,UHH,UHM,UHV,UHX	EA	4
145	17	XDOZZ	4730-00-277-4780	80205	NAS516-1	..FITTING,LUBRICATION UHE,UHH,UHM,UHV,UHX	EA	1
145	18	PAOZZ	5310-00-176-8109	88044	AN320-5	.NUT,PLAIN,SLOTTED UHE,UHH,UHM,UHV,UHX	EA	1
145	19	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER,FLAT UHE,UHH,UHM,UHV,UHX	EA	1
145	20	PAOUD	3110-00-136-0863	97499	204-011-789-1	.BEARING,BALL,ANNULA UHE,UHH,UHM,UHV,UHX	EA	1
145	21	PAOZZ	5365-00-584-2062	97499	204-010-713-1	.SHIM UHE,UHH,UHM,UHV,UHX	EA	1
145	22	PAOZZ	3110-00-973-3512	97499	204-010-721-3	.PLATE,RETAINING,BEA UHE,UHH,UHM,UHV,UHX	EA	1
145	23	PAOZZ	1615-00-869-6111	97499	204-010-720-3	.SLIDER,TAIL ROTOR UHE,UHH,UHM,UHV,UHX	EA	1
145	24	PAOZZ	1615-00-503-1896	97499	47-641-101-1	.BOOT,DUST AND MOIST SEAL UHE,UHH,UHM,UHV,UHX	EA	1
145	25	PAOZZ	5310-00-624-6714	97499	204-010-719-1	.NUT,PLAIN,ROUND UHE,UHH,UHM,UHV,UHX	EA	1
145	26	PAOZZ	1615-00-083-0468	97499	204-010-774-11	.STATIC STOP, T/R UHE,UHH,UHM,UHV,UHX	EA	1
145	27	PAOZZ	5365-00-950-9396	97499	120-007C49-41	.SHIM UHE,UHH,UHM,UHV,UHX	EA	1
145	28	XDOOZ	1615-00-168-5645	97499	204-011-800-9	.HUB AND BLADE ASSY SEE FIG 147 FOR BREAKDOWN UHM	EA	1
145	28	XDOOO		97499	204-011-800-27	.HUB AND BLADE ASSY SEE FIG 147 FOR BREAKDOWN UHE,UHH,UHV,UHX	EA	1
145	29	PAOZZ	1615-00-775-3846	97499	204-010-724-5	.CONE SET,TAIL ROTOR UHE,UHH,UHM,UHV,UHX	SE	1
145	30	XDOZZ	5305-00-925-7867	96906	MS27039-1-09	.SCREW,MACHINE UHE,UHH,UHM,UHV,UHX	EA	1
145	31	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE UHE,UHH,UHM,UHV,UHX	EA	2
145	32	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT UHE,UHH,UHM,UHV,UHX	EA	2
145	33	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON UHE,UHH,UHM,UHV,UHX	EA	1
145	34	PAOZZ	1615-00-074-9014	97499	204-001-858-1	.COVER,ACCESS UHE,UHH,UHM,UHV,UHX	EA	1
145	35	PAOZZ	1615-00-234-7299	97499	205-001-745-1	.COVER,TAIL ROTOR UHE,UHH,UHM,UHV,UHX	EA	1
145	36	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	EA	3

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
						....	UHE,UHH,UHM,UHV,UHX		
145	37	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT..................	UHE,UHH,UHM,UHV,UHX	EA	V
145	38	PAOZZ	1615-01-016-1349	81996	1560-UH-1-754-1	.GUARD,MECHANICAL DR............	UHE,UHH,UHM,UHV,UHX	EA	1
145	38A	AOOZZ		81996	1560-UH-1-773-1	.CHAIN AND SPROCKET SPROCKET...	UHE,UHH,UHM,UHV,UHX	EA	1
145	39	PAOZZ	3020-01-048-3468	81996	1560-UH-1-752-1	.CHAIN,ROLLER..................	UHE,UHH,UHM,UHV,UHX	EA	1
145	39A	PAOZZ	3020-01-048-3467	81996	1560-UH-1-753-1	.SPROCKET WHEEL................	UHE,UHH,UHM,UHV,UHX	EA	1
145	40	PAOOO	1615-00-886-5998	97499	204-010-742-9	.CONTROL TUBE,TAIL R...........	UHE,UHH,UHM,UHV,UHX	EA	1
145	40A	PAOZZ	5330-00-151-0573	03938	00SHORT	..SEAL,SPECIAL.................	UHE,UHH,UHM,UHV,UHX	EA	1
145	41	AFOFF		97499	204-010-740-5	.CONTROL ASSY SEE FIG 149 FOR BREAKDOWN	UHE,UHH,UHM,UHV,UHX	EA	1
145	42	PAOZZ	5330-00-846-1956	96906	MS9241-224	.PACKING,PREFORMED..............	UHE,UHH,UHM,UHV,UHX	EA	1
145	43	PAOZZ	1615-01-079-6378	99865	KIT4016	.BALANCE ARM KIT................	UHE,UHH,UHM,UHV,UHX	EA	2

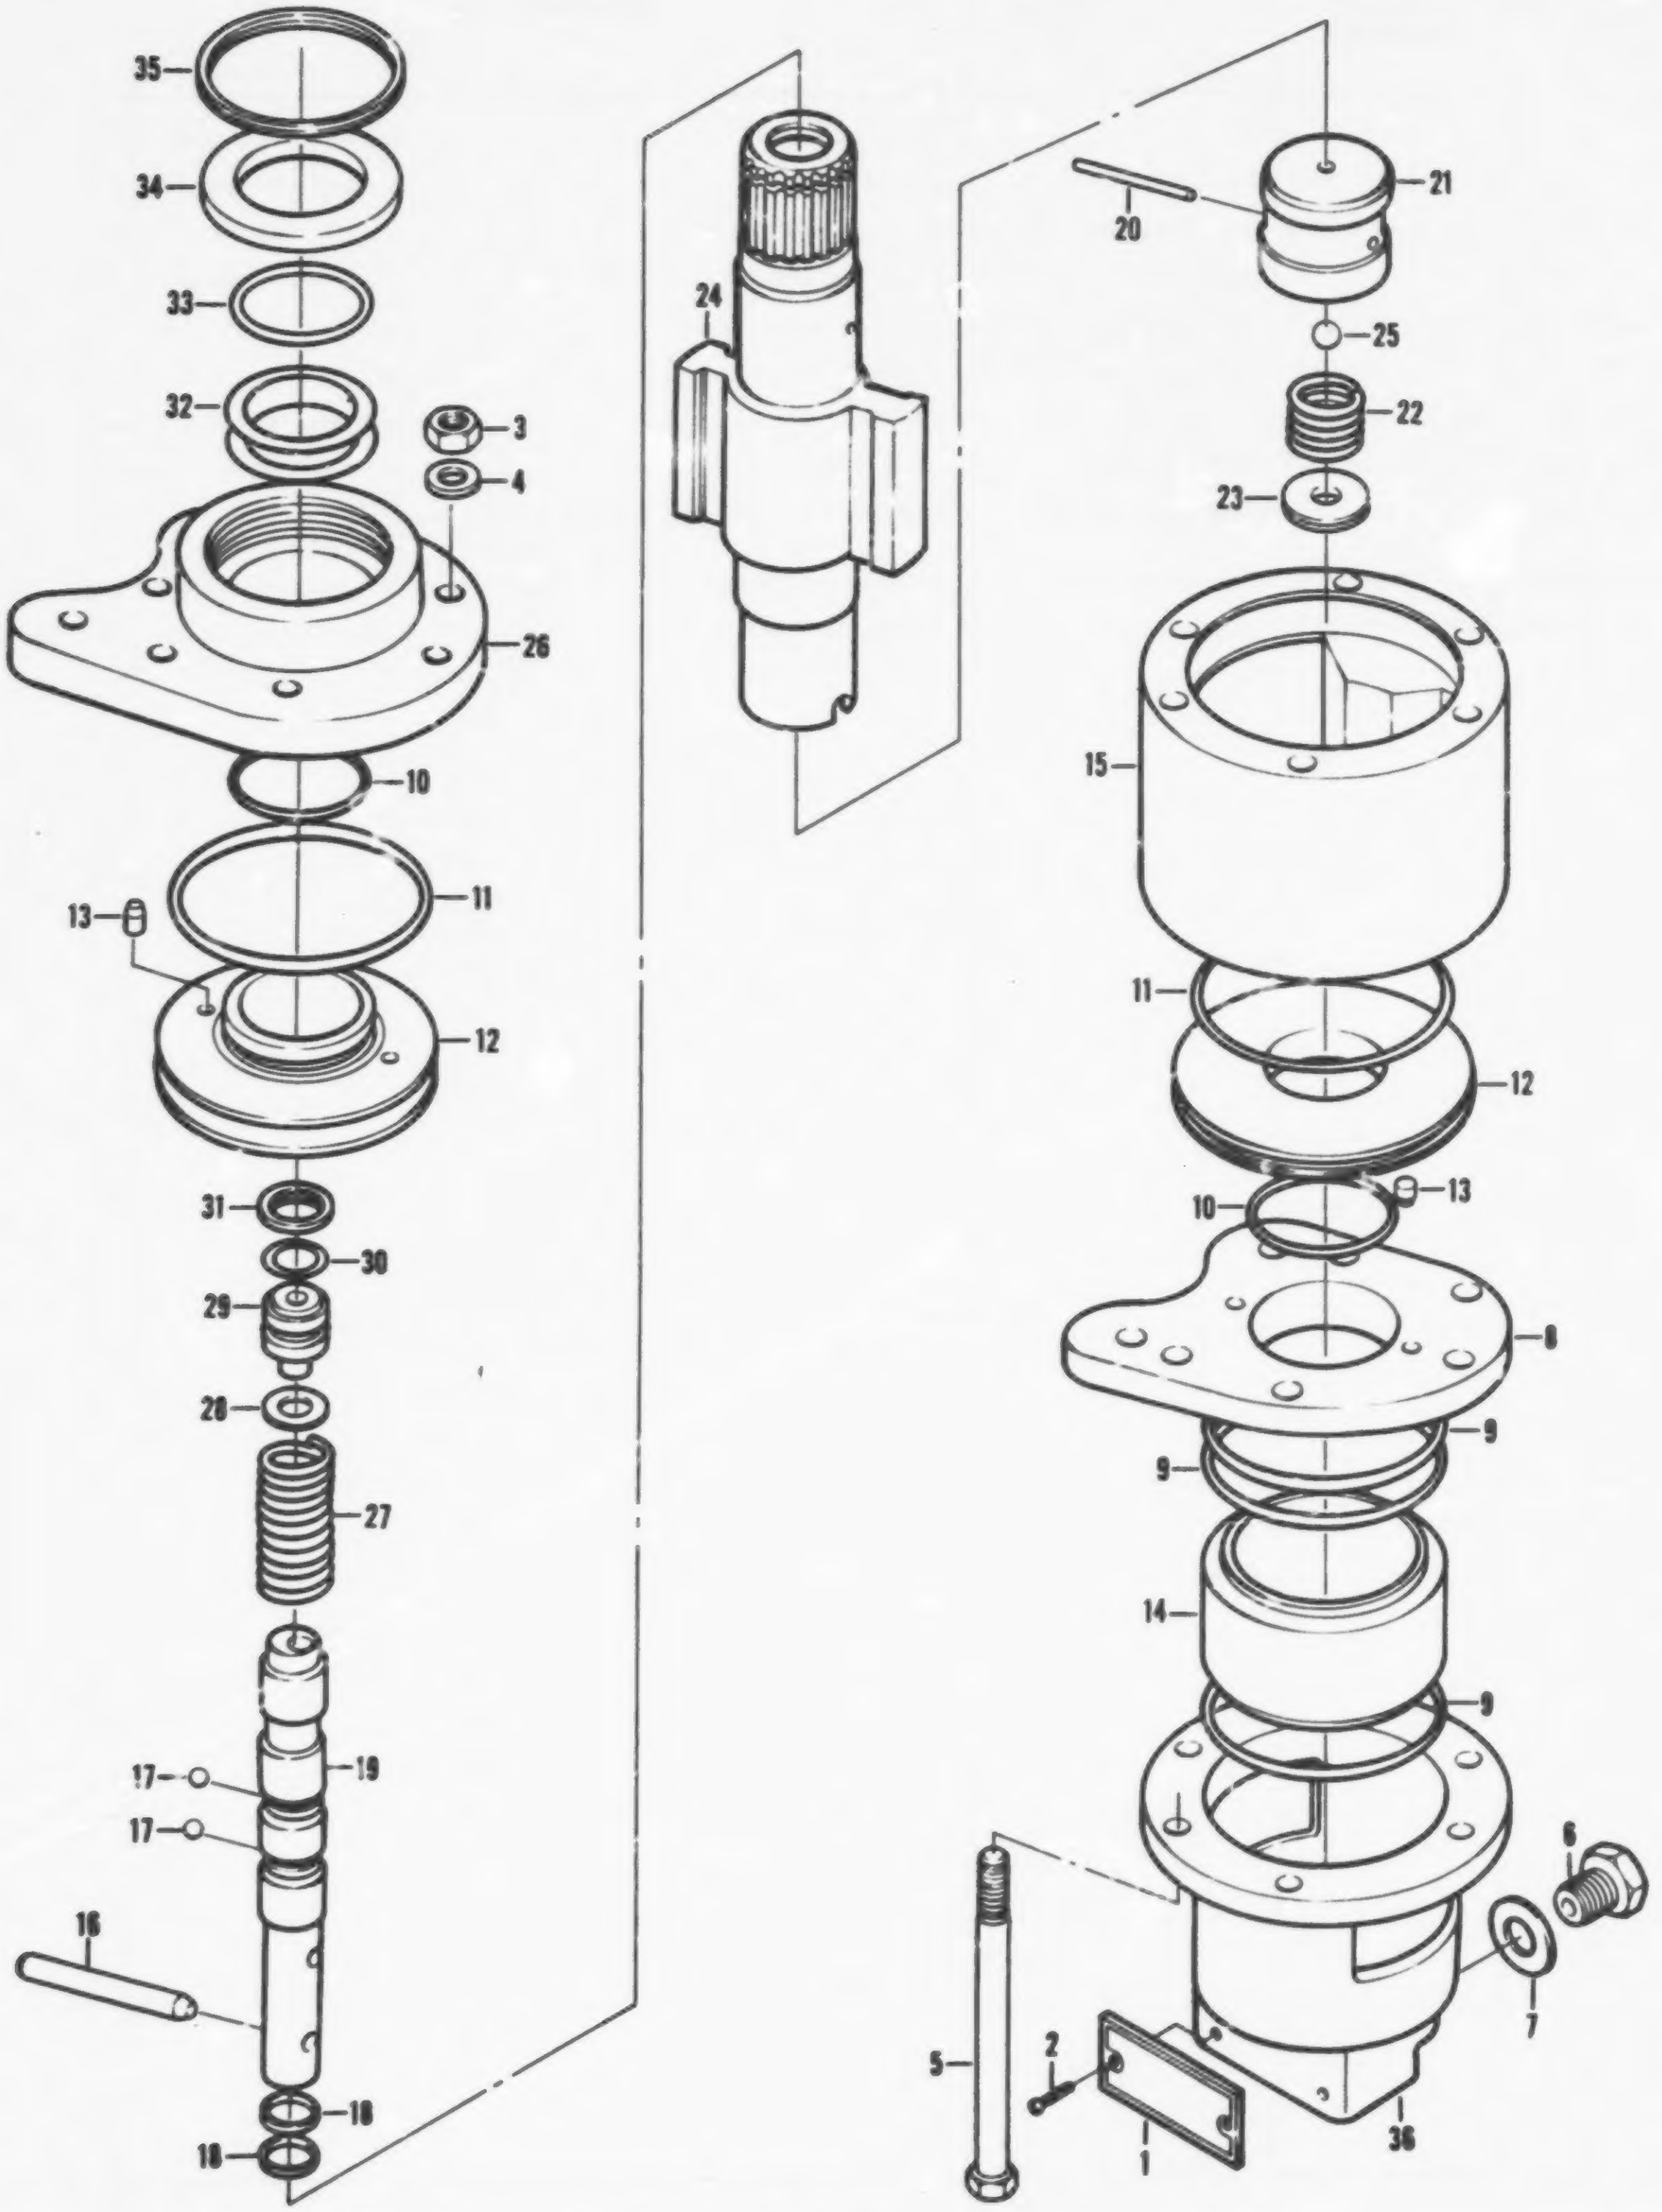
35
34
33
32
3
4
26
24
20
21
25
22
23
15
10
11
13
12
11
12
10
13
8
31
30
29
28
27
9
9
14
9
19
17
17
16
18
18
6
7
5
2
1
36

Figure 146. Damper Assembly, Stabilizer Bar

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
146		PADDD	1650-00-157-6843	92003	SGT520-6	DAMPER ASSEMBLY, STABILIZER BAR SEE FIG 128 AND 130 FOR NHA .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	1	PADZZ	9905-00-491-7074	92003	SGT538-3	.PLATE,IDENTIFICATIO .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	2	PADZZ	5305-00-253-5606	96906	MS21318-7	.SCREW,DRIVE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
146	3	PADZZ	5310-00-061-7326	96906	MS21045-3	.NUT,SELF-LOCKING HE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
146	4	PADZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
146	5	PADZZ	5306-00-150-9876	88044	AN3-27A	.BOLT,MACHINE .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
146	6	PADZZ	5365-00-726-4161	96906	MS24391D2L	.PLUG,MACHINE THREAD .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	7	PADZZ	5330-00-186-4945	96906	MS28777-2	.GASKET .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	8	XADZZ		92003	SGT524-1	.PLATE,SPECIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	9	PCDZZ	5330-00-808-7612	96906	MS28775-131	.PACKING,PREFORMED .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
146	10	PCDZZ	5330-00-727-2637	96906	MS28775-023	.PACKING,PREFORMED .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
146	11	PCDZZ	5330-00-720-2859	96906	MS28775-135	.PACKING,PREFORMED .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
146	12	XADZZ		92003	SGT527-1	.RETAINER,SPECIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
146	13	XADZZ		92003	SGT537-3	.PIN,SPECIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
146	14	MDDZZ	1650-00-497-9447	92003	SGT528-1	.WINDOW,OBSERVATION .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	15	XADZZ		92003	SGT521-1	.BARREL,SPECIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	16	XADZZ		92003	SGT537-1	.PIN,SPECIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	17	PADZZ	3110-00-100-6147	96906	MS19059-44	.BALL,BEARING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
146	18	XADZZ		92003	SGT536-1	.RING,RETAINING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
146	19	XADZZ		92003	SGT526-1	.SPOOL-,SPECIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	20	PADZZ	5315-00-584-0257	96906	MS16562-198	.PIN,SPRING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	21	XADZZ		92003	SGT529-1	.PISTON,SPECIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	22	XADZZ		92003	SGT535-1	.SPRING,HELICAL,COMP .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	23	XADZZ		92003	SGT531-1	.RESTRICTOR,FLUID .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	24	XADZZ		92003	SGT522-2	.WINGSSHAFT,SPECIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	25	XADZZ		92003	7-32NYLONBALL	.BALL,BEARING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	26	XADZZ		92003	SGT523-1	.PLATE,END,SPECIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	27	XADZZ		92003	SGT534-1	.SPRING,HELICAL,COMP .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	28	XADZZ		19315	SWAL1615-03MZ	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	29	XADZZ		92003	SGT532-1	.SEAL,HELICAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	30	PCDZZ	5330-00-640-9613	88044	AN6227B7	.PACKING,PREFORMED .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	31	XDDZZ		80756	RR50	.RING,RETAINING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	32	XADZZ		07322	KIN5213	.HOLDERXCAP .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	33	PCDZZ	5330-00-196-5381	88044	AN6227B18	.PACKING,PREFORMED .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	34	XADZZ		92003	SGT533-1	.WASHER,FLAT .... UHB,UHC,UHE,UHH,UHM,UHV UHX	EA	1
146	35	PADZZ	5365-00-812-9828	80756	RR156C	.RING,RETAINING .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
146	36	XADZZ		92003	SGT525-1	.RESERVOIR,SPECIAL .... UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

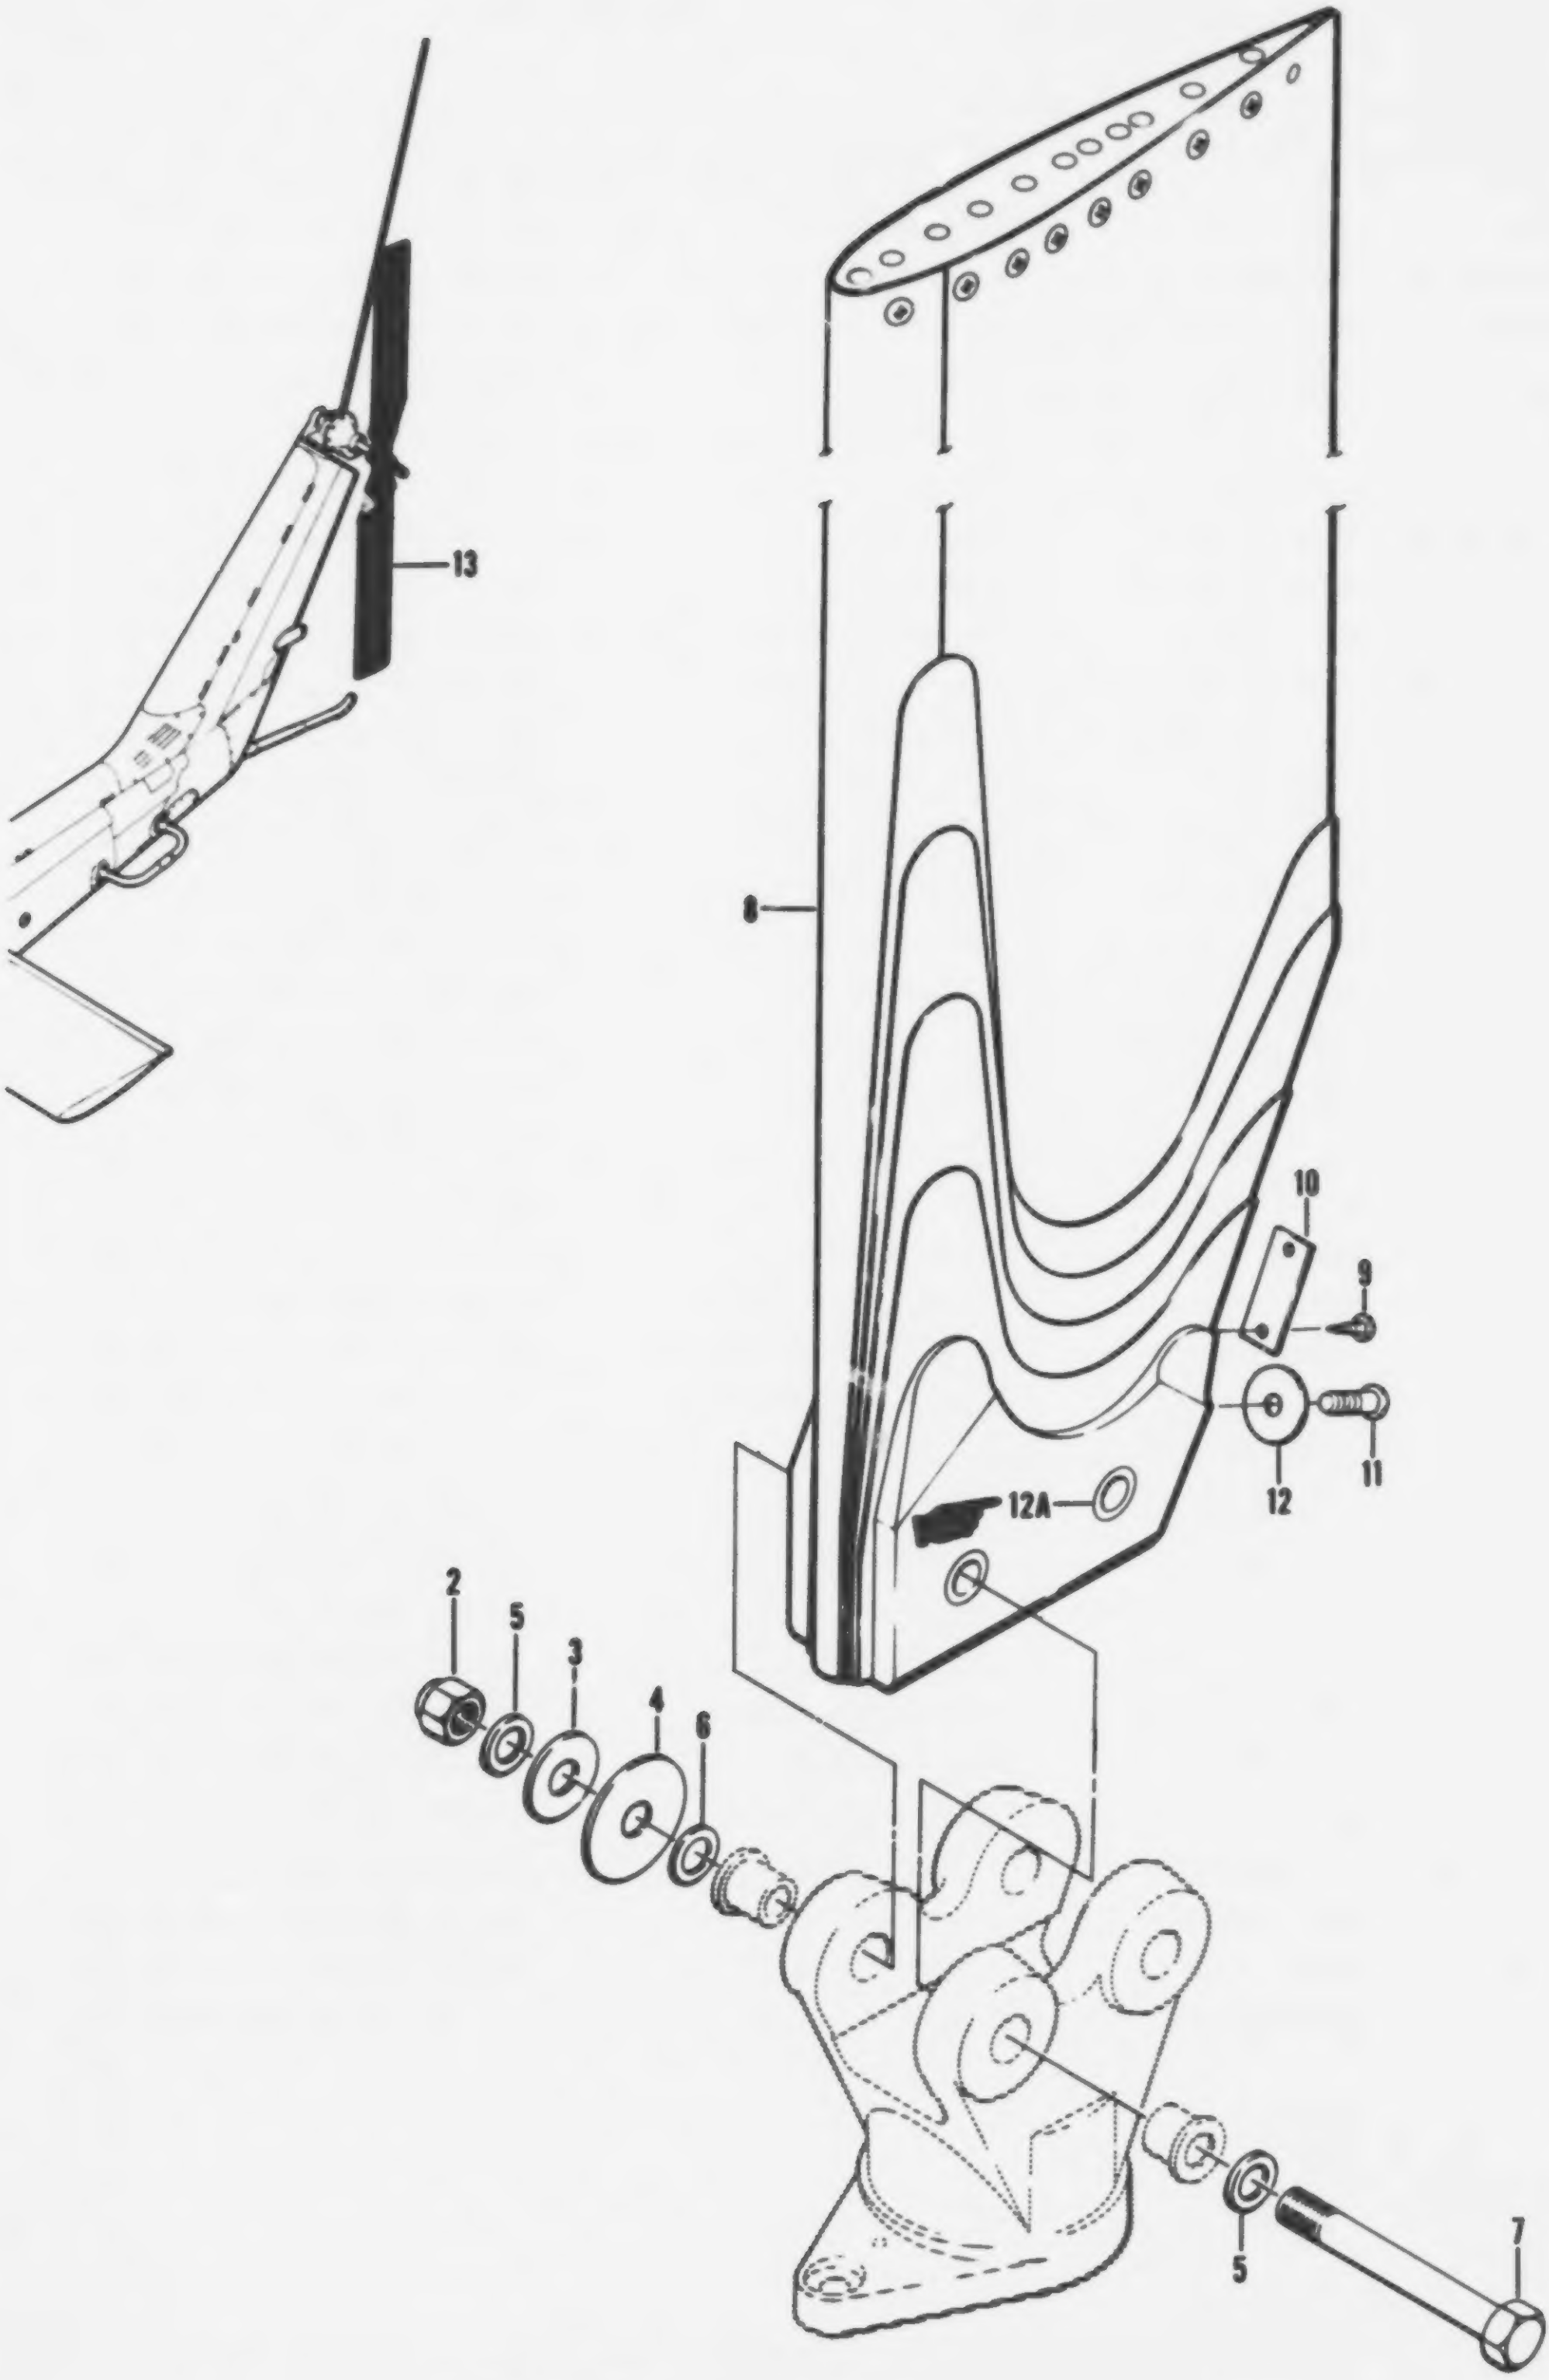
13
8
10
9
12A
12
11
2
5
3
4
6
5
7

Figure 147. Hub and Blade Assembly, Tail Rotor

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
147		XOOOO	1615001685645	97499	204-011-800-9	HUB AND BLADE ASSY.. UHM TAIL ROTOR SEE FIG 145 FOR NHA	EA	1
147		XDOOO		97499	204-011-800-27	HUB AND BLADE ASSY.................. UHE, UHH, UHV, UHX TAIL ROTOR SEE FIG 145 FOR NHA	EA	1
147	2	PAOZZ	5310008061031	96906	MS21040-7	.NUT, SELF LOCKING, HE..... UHE, UHH, UHM, UHV, UHX	EA	4
147	3	PAOZZ	5310009876712	97499	204-011-708-1	.WASHER, FLAT.............. UHE, UHH, UHM, UHV, UHX -MAX 8 EA	EA	V
147	4	PAOZZ	5310009891778	97499	204-011-708-3	.WASHER, FLAT............... UHE, UHH, UHM, UHV, UHX -MAX 8 EA	EA	V
147	5	PAOZZ	5310001670838	88044	AN960-716L	.WASHER, FLAT.............. UHE, UHH, UHM, UHV, UHX -MAX 8 EA	EA	V
147	6	PAOZZ	5310001670822	88044	AN960-716	.WASHER, FLAT.............. UHE, UHH, UHM, UHV, UHX -MAX 16 EA	EA	V
147	7	PAOZZ	5306001509954	88044	AN177H35	.BOLT, CLOSE TOLER......... UHE, UHH, UHM, UHV, UHX TO BALANCE HUB AND BLADE ASSEMBLY P/N 204-011-801-17 USE THE REQ'D AN177 BOLT TO ACCOMODATE BALANCE WASHERS.	EA	V
147	7	PAOZZ	5306012164346	80205	NAS6607-40	.BOLT, CLOSE TOLER............... UHE, UHH, UHM, UHV, UHX TO BALANCE HUB AND BLADE ASSEMBLY P/N 204-011-801-121 USE THE REQ'D NAS6607 BOLT TO ACCOMODATE BALANCE WASHERS (U/O PN 205-011-711-101)	EA	4
147	7	PAOZZ	5306001509955	88044	AN177H36	.BOLT, CLOSE TOLER......... UHE, UHH, UHM, UHV, UHX TO BALANCE HUB AND BLADE ASSEMBLY P/N 204-011-801-17 USE THE REQ'D AN177 BOLT TO ACCOMODATE BALANCE WASHERS	EA	V
147	7	PAOZZ	5306012125202	80205	NAS6607-44	.BOLT, CLOSE TOLER................ UHE, UHH, UHM, UHV, UHX TO BALANCE HUB AND BLADE ASSEMBLY P/N 204-011-801-121 USE THE REQ'D NAS6607 BOLT TO ACCOMODATE BALANCE WASHERS (U/O PN 205-011-711-101)	EA	4
147	7	PAOZZ	5306001509956	88044	AN177H37	.BOLT, CLOSE TOLER.......... UHE, UHH, UHM, UHV, UHX TO BALANCE HUB AND BLADE ASSEMBLY P/N 204-011-801-17 USE THE REQ'D AN177 BOLT TO ACCOMODATE BALANCE WASHERS	EA	V
147	7	PAOZZ	5306012164347	80205	NAS6607-48	.BOLT, CLOSE TOLER.......... UHE, UHH, UHM, UHV, UHX TO BALANCE HUB AND BLADE ASSEMBLY P/N 204-011-801-121 USE THE REQ'D NAS6607 BOLT TO ACCOMODATE BALANCE WASHERS (U/O PN 205-011-711-101)	EA	4
147	7	PAOZZ	5306001509957	88044	AN177H40	.BOLT CLOSE TOLER............ UHE, UHH, UHM, UHV, UHX TO BALANCE HUB AND BLADE ASSEMBLY P/N 204-011-801-17 USE THE REQ'D AN177 BOLT TO ACCOMODATE BALANCE WASHERS	EA	V
147	8	PAOFF	1615004727308	97499	204-011-702-15	.BLADE, ROTARY, RUDDER................ UHE, UHH, UHV, UHX	EA	2
147	8	PAOFF	1615009070842	97499	204-011-702-17	.BLADE, ROTARY, RUDDER................................ UHM	EA	2
147	9	PAFZZ	5305009545207	96906	MS24621-8	..SCREW, TAPPING, THREA.... UHE, UHH, UHM, UHV, UHX	EA	2
147	10	PAFZZ	9905000602034	97499	100-024-1	..PLATE, IDENTIFICATION...... UHE, UHH, UHM, UHV, UHX	EA	1
147	11	PAFZZ	5305001450960	96906	MS35206-338	..SCREW MACHINE............ UHE, UHH, UHM, UHV, UHX IF WEIGHTS ARE REQ'D USE MS35206-338 SCREW WITH AN960C10 OR AN970-3 WASHERS, IF NOT REQ'D USE MS35206-264 SCREW	EA	2
147	11	PAFZZ	5305009846211	96906	MS35206-264	..SCREW MACHINE............ UHE, UHH, UHM, UHV, UHX IF WEIGHTS ARE REQ'D USE MS35206-338 SCREW WITH AN960C10 OR AN970-3 WASHERS, IF NOT REQ'D USE MS35206-264 SCREW	EA	2
147	12	PAFZZ	5310001670801	88044	AN960C10	..WASHER, FLAT............ UHE, UHH, UHM, UHV, UHX IF WEIGHTS ARE REQ'D USE MS35206-338 SCREW WITH AN960C10 OR AN970-3 WASHERS. IF NOT REQ'D USE MS35206-264 SCREW	EA	V
147	12	PAFZZ	5310001670765	88044	AN970-3	..WASHER, FLAT............. UHE, UHH, UHM, UHV, UHX IF WEIGHTS ARE REQ'D USE MS35206-338 SCREW WITH AN960C10 OR AN970-3 WASHERS, IF NOT REQ'D USE MS35206-264 SCREW	EA	V
147	12A	XADZZ		97499	204-011-755-7	..BUSHING, T/R BLADE....... UHE, UHH, UHM, UHV, UHX	EA	2
147	13	PAOFF	1615001336872	97499	204-011-801-17	.HUB ASSY, TAIL ROTOR....... UHE, UHH, UHM, UHV, UHX SEE FIG 148 FOR BREAKDOWN. REPLACED BY 204-011-801-121	EA	1
147	13	PAOFF		97499	204-011-801-121	.HUB ASSY, TAIL ROTOR..... UHE, UHH, UHM, UHV, UHX SEE FIG 148 FOR BREAKDOWN. REPLACES P/N 204-011-801-17.	EA	1

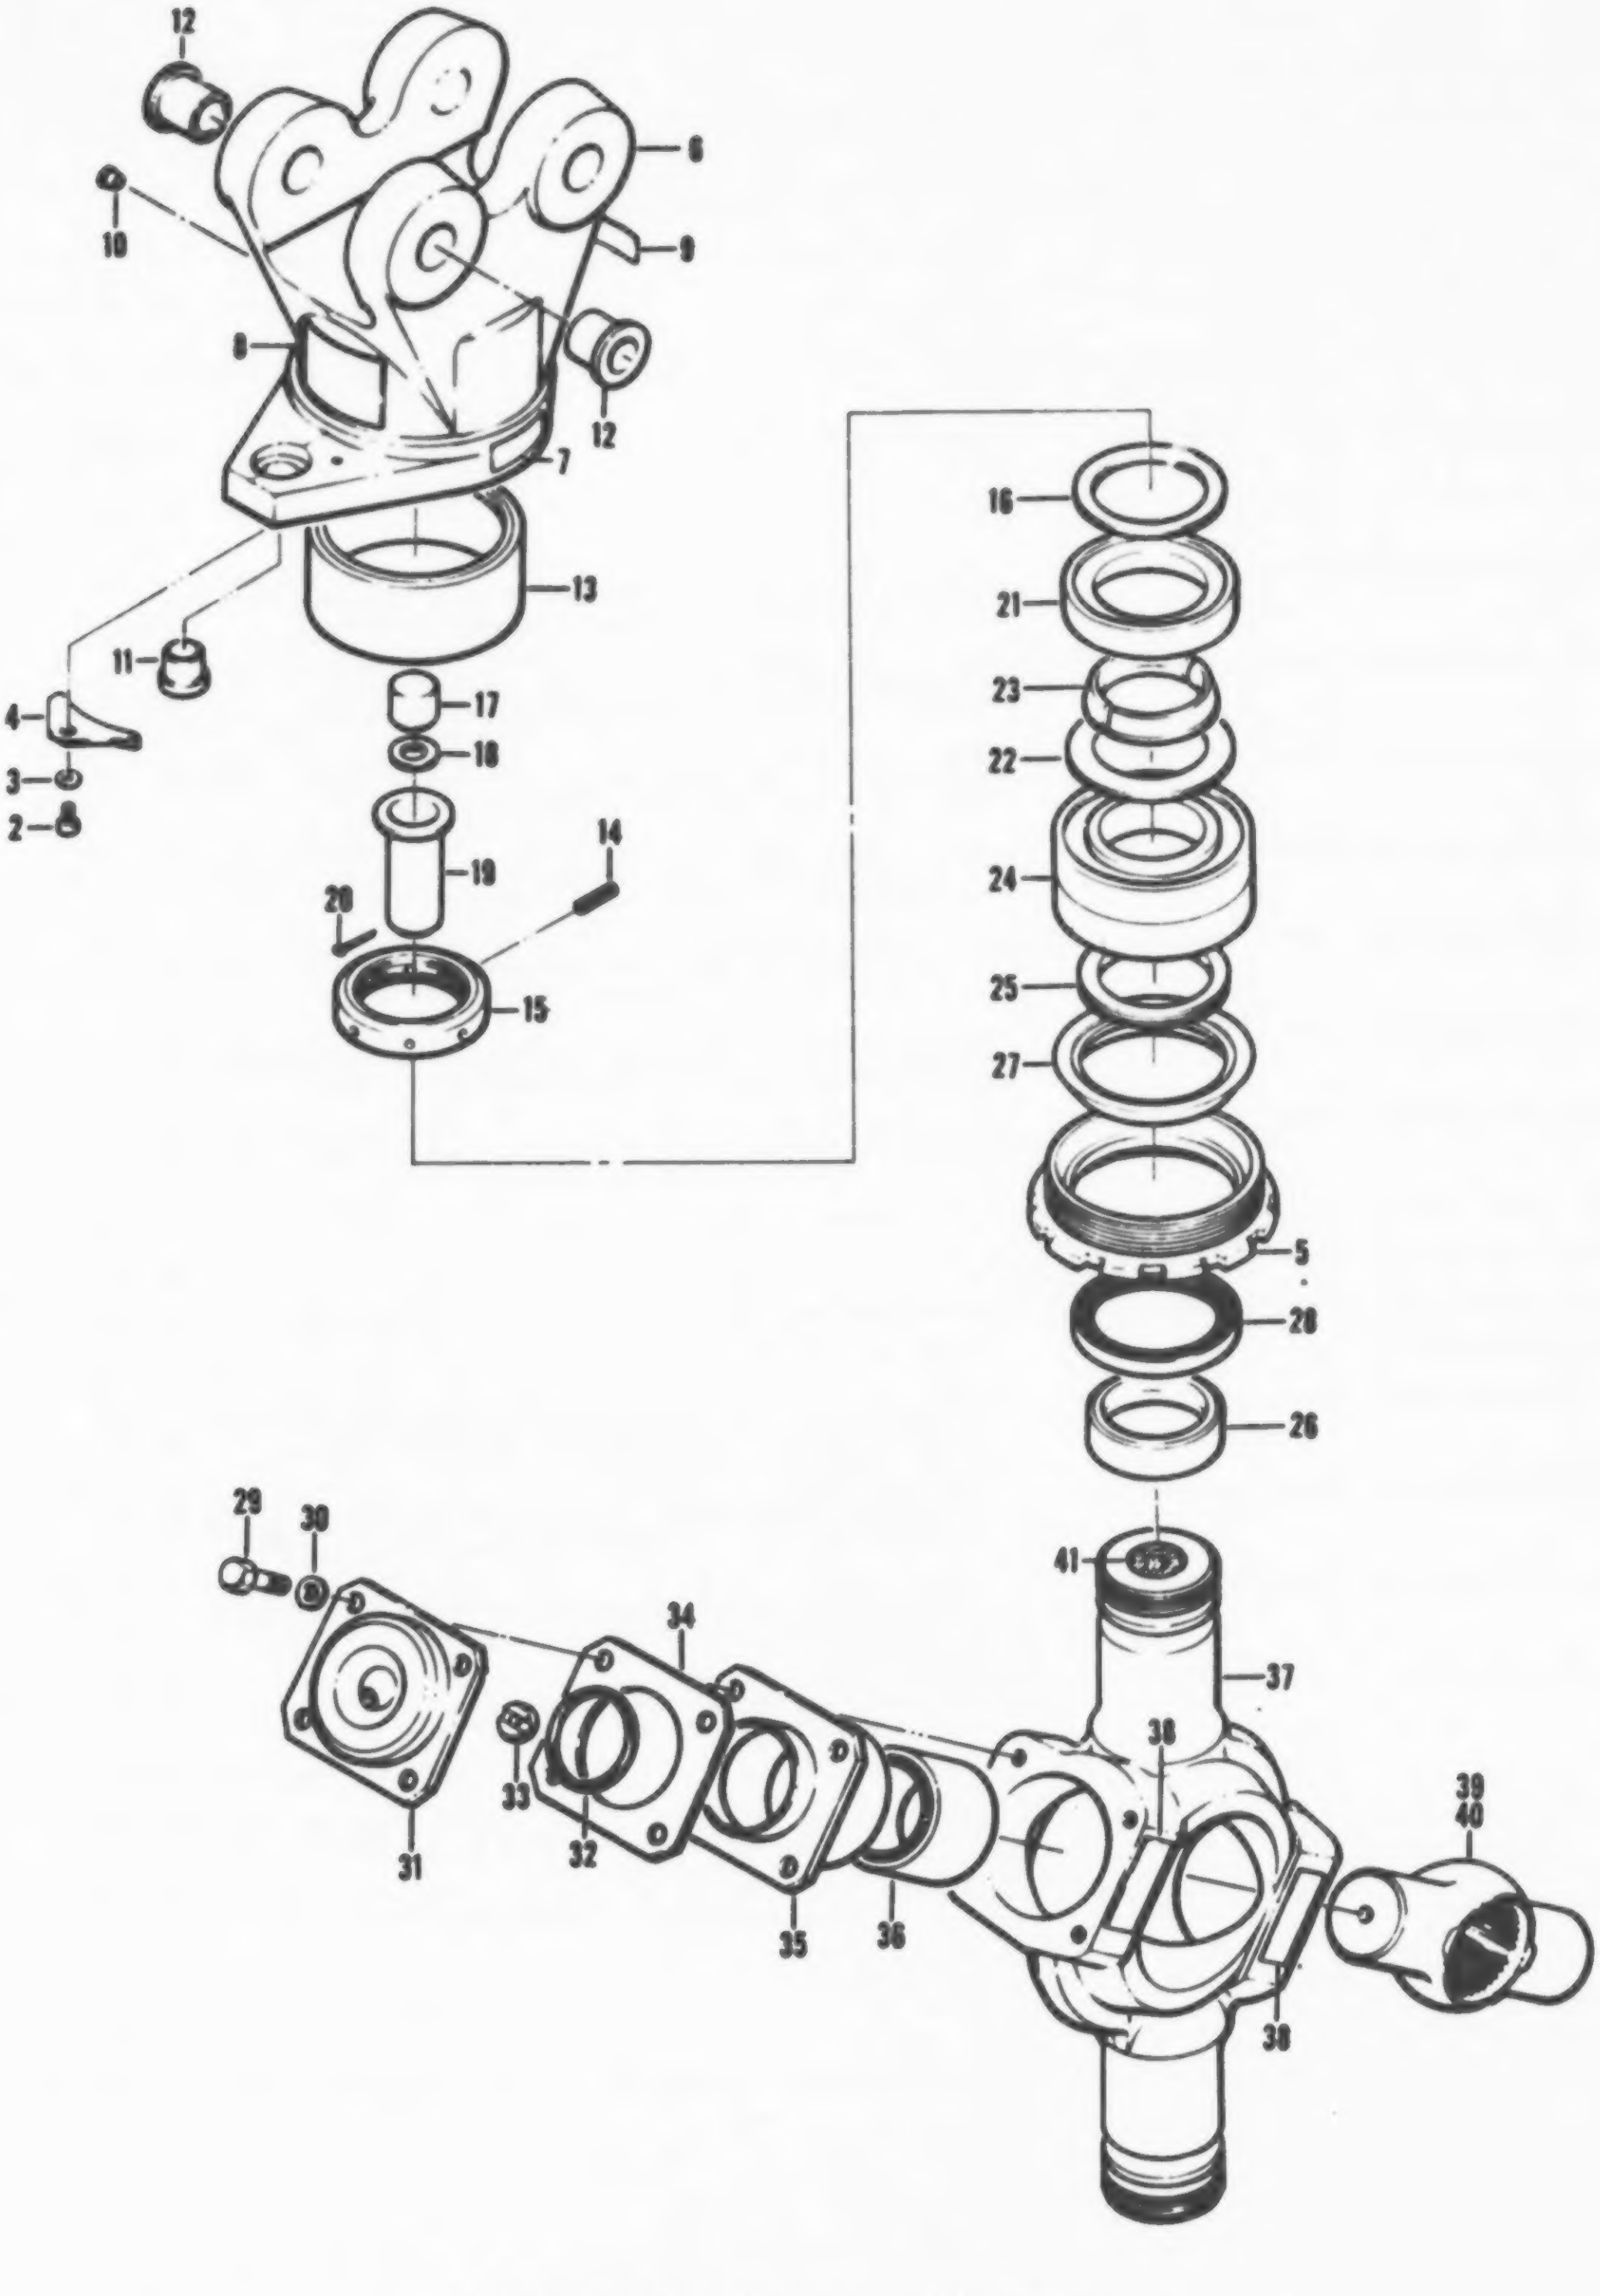
12
6
10
9
8
12
7
16
13
21
11
17
23
4
18
22
3
2
14
24
19
20
25
15
27
5
28
26
29
30
41
34
37
33
38
39
40
31
32
35
36
38

Figure 148. Hub Assembly, Tail Rotor

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
148		PAOFF	1615-01-210-6453	97499	204-011-801-121	HUB ASSY, TAIL ROTOR	UHE,UHH,UHM,UHV,UHX	EA	1
148	2	PAFZZ	5305-00-150-9212	88044	AN502-10-8	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	2
148	3	PAFZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	2
148	3A	PAFZZ	5310-00-167-0818	88044	AN960-10	.WASHER	UHE,UHH,UHM,UHV,UHX	EA	2
148	4	PAFZZ	1615-00-898-1688	97499	204-011-707-1	.LOCKPLATE,GRIP NUT	UHE,UHH,UHM,UHV,UHX	EA	2
148	5	PAFZZ	5310-01-211-9578	97499	205-011-710-101	.NUT,ASSEMBLY	UHE,UHH,UHM,UHV,UHX	EA	2
148	6	PAFFF	1615-01-210-6454	97499	205-011-711-101	.GRIP ASSY	UHE,UHH,UHM,UHV,UHX	EA	2
148	7	PAFZZ	9905-00-118-5663	97499	100-037-1M	..PLATE, IDENTIFICATIO	UHE,UHH,UHM,UHV,UHX	EA	1
148	8	PAFZZ	9905-00-176-0564	97499	204-010-779-9	..PLATE,INSTRUCTION	UHE,UHH,UHM,UHV,UHX	EA	1
148	9	XDFZZ		97499	204-010-779-11	..PLATE,INSTRUCTION	UHE,UHH,UHM,UHV,UHX	EA	1
148	10	XDFZZ		80205	NAS516-1	..FITTING,LUBRICATION	UHE,UHH,UHM,UHV,UHX	EA	1
148	11	PAFZZ	3120-01-214-2912	97499	204-010-413-165	..BUSHING,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	1
148	12	..FZZ	3120-01-214-2911	97499	205-011-709-101	..BUSHING,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	4
148	13	XAFZZ		97499	204-011-729-1	..LINER,BEARING	UHE,UHH,UHM,UHV,UHX	EA	1
148	14	PAFZZ	5315-00-844-3958	96906	MS16562-26	.PIN,SPRING	UHE,UHH,UHM,UHV,UHX	EA	4
148	15	PAFZZ	5310-00-115-9403	97499	204-011-723-1	.NUT,PLAIN,ROUND	UHE,UHH,UHM,UHV,UHX	EA	2
148	16	PAFZZ	5365-00-120-1176	97499	120-006C60-45	.SHIM	UHE,UHH,UHM,UHV,UHX	EA	4
148	17	PAFZZ	1615-00-113-6175	97499	204-011-726-1	.PLUG,THRUST	UHE,UHH,UHM,UHV,UHX	EA	2
148	18	PAFZZ	5365-00-134-3373	97499	120-006C15-0	.SHIM	UHE,UHH,UHM,UHV,UHX	EA	12
148	19	PAFFF	1615-00-113-6176	97499	204-011-725-1	.SPRING ASSEMBLY, PRELOAD	UHE,UHH,UHM,UHV,UHX	EA	2
148	20	PAFZZ	5315-01-027-6616	96906	MS24665-132	..PIN,COTTER	UHE,UHH,UHM,UHV,UHX	EA	1
148	21	PAFZZ	5365-00-111-5525	97499	204-011-721-1	.SPACER,RING	UHE,UHH,UHM,UHV,UHX	EA	2
148	22	PAFZZ	5365-00-244-2736	97499	120-006C77-71	.SHIM	UHE,UHH,UHM,UHV,UHX	EA	1
148	23	PAFZZ	1615-00-111-3622	97499	204-011-720-1	.CONE SET, TAIL ROTOR	UHE,UHH,UHM,UHV,UHX	EA	2
148	24	PAFFF	3110-00-872-6968	97499	204-010-704-9	.BEARING,BALL,DUPLEX	UHE,UHH,UHM,UHV,UHX	EA	2
148	25	PAFZZ	5365-00-937-4483	97499	120-004C54-45	.SHIM	UHE,UHH,UHM,UHV,UHX	EA	8
148	26	PAFZZ	5365-00-113-6174	97499	204-011-732-1	.RING,TAIL ROTOR	UHE,UHH,UHM,UHV,UHX	EA	2
148	27	PAFZZ	5365-00-113-1416	97499	204-011-731-1	.SPACER,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	2
148	28	PAFZZ	5330-00-178-9681	96879	BR200-140-3	.SEAL,PLAIN ENCASED	UHE,UHH,UHM,UHV,UHX	EA	2
148	29	PAFZZ	5306-00-182-2056	88044	AN3H3A	.BOLT,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	8
148	30	PAFZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	8
148	31	PAFZZ	1615-00-780-2661	97499	204-010-788-1	.CAP ASSEMBLY,THRUST	UHE,UHH,UHM,UHV,UHX	EA	2
148	31	XAFZZ		97499	204-010-788-3	..CAP,THRUST	UHH,UHV	EA	1
148	32	PCFZZ	5330-00-290-9383	88044	AN123876	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	2
148	33	PAFZZ	5365-00-785-3625	97499	204-010-787-1	.SPACER,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	2
148	34	PAFZZ	5365-00-785-3622	97499	204-010-789-1	.SHIM	UHE,UHH,UHM,UHV,UHX	EA	2
148	35	PAFZZ	1615-00-785-3623	97499	204-010-786-1	.HOUSING TRUNNION	UHE,UHH,UHM,UHV,UHX	EA	2
148	36	PAFDD	3110-00-784-0227	97499	204-010-783-1	.BEARING,ROLLER,NEED	UHE,UHH,UHM,UHV,UHX	EA	2
148	37	PAFFF	1615-00-111-3623	97499	204-011-722-5	.YOKE ASSEMBLY,ROTOR	UHE,UHH,UHM,UHV,UHX	EA	1
148	38	PAFZZ	9905-00-060-2034	97499	100-024-1	..PLATE,IDENTIFICATIO	UHE,UHH,UHM,UHV,UHX	EA	2
148	39	PAFFF	1615-00-135-2550	97499	204-011-737-1	.TRUNNION ASSY,TAIL	UHE,UHH,UHM,UHV,UHX	EA	1
148	40	PAFZZ	3110-00-443-1153	97499	204-011-736-1	..RING,BEARING,INNER	UHE,UHH,UHM,UHV,UHX	EA	2
148	41	PAFZZ	6640-00-598-0804	86282	6 SHORT SUPERIOR	..STOPPER,BOTTLE	UHE,UHH,UHM,UHV,UHX	EA	2

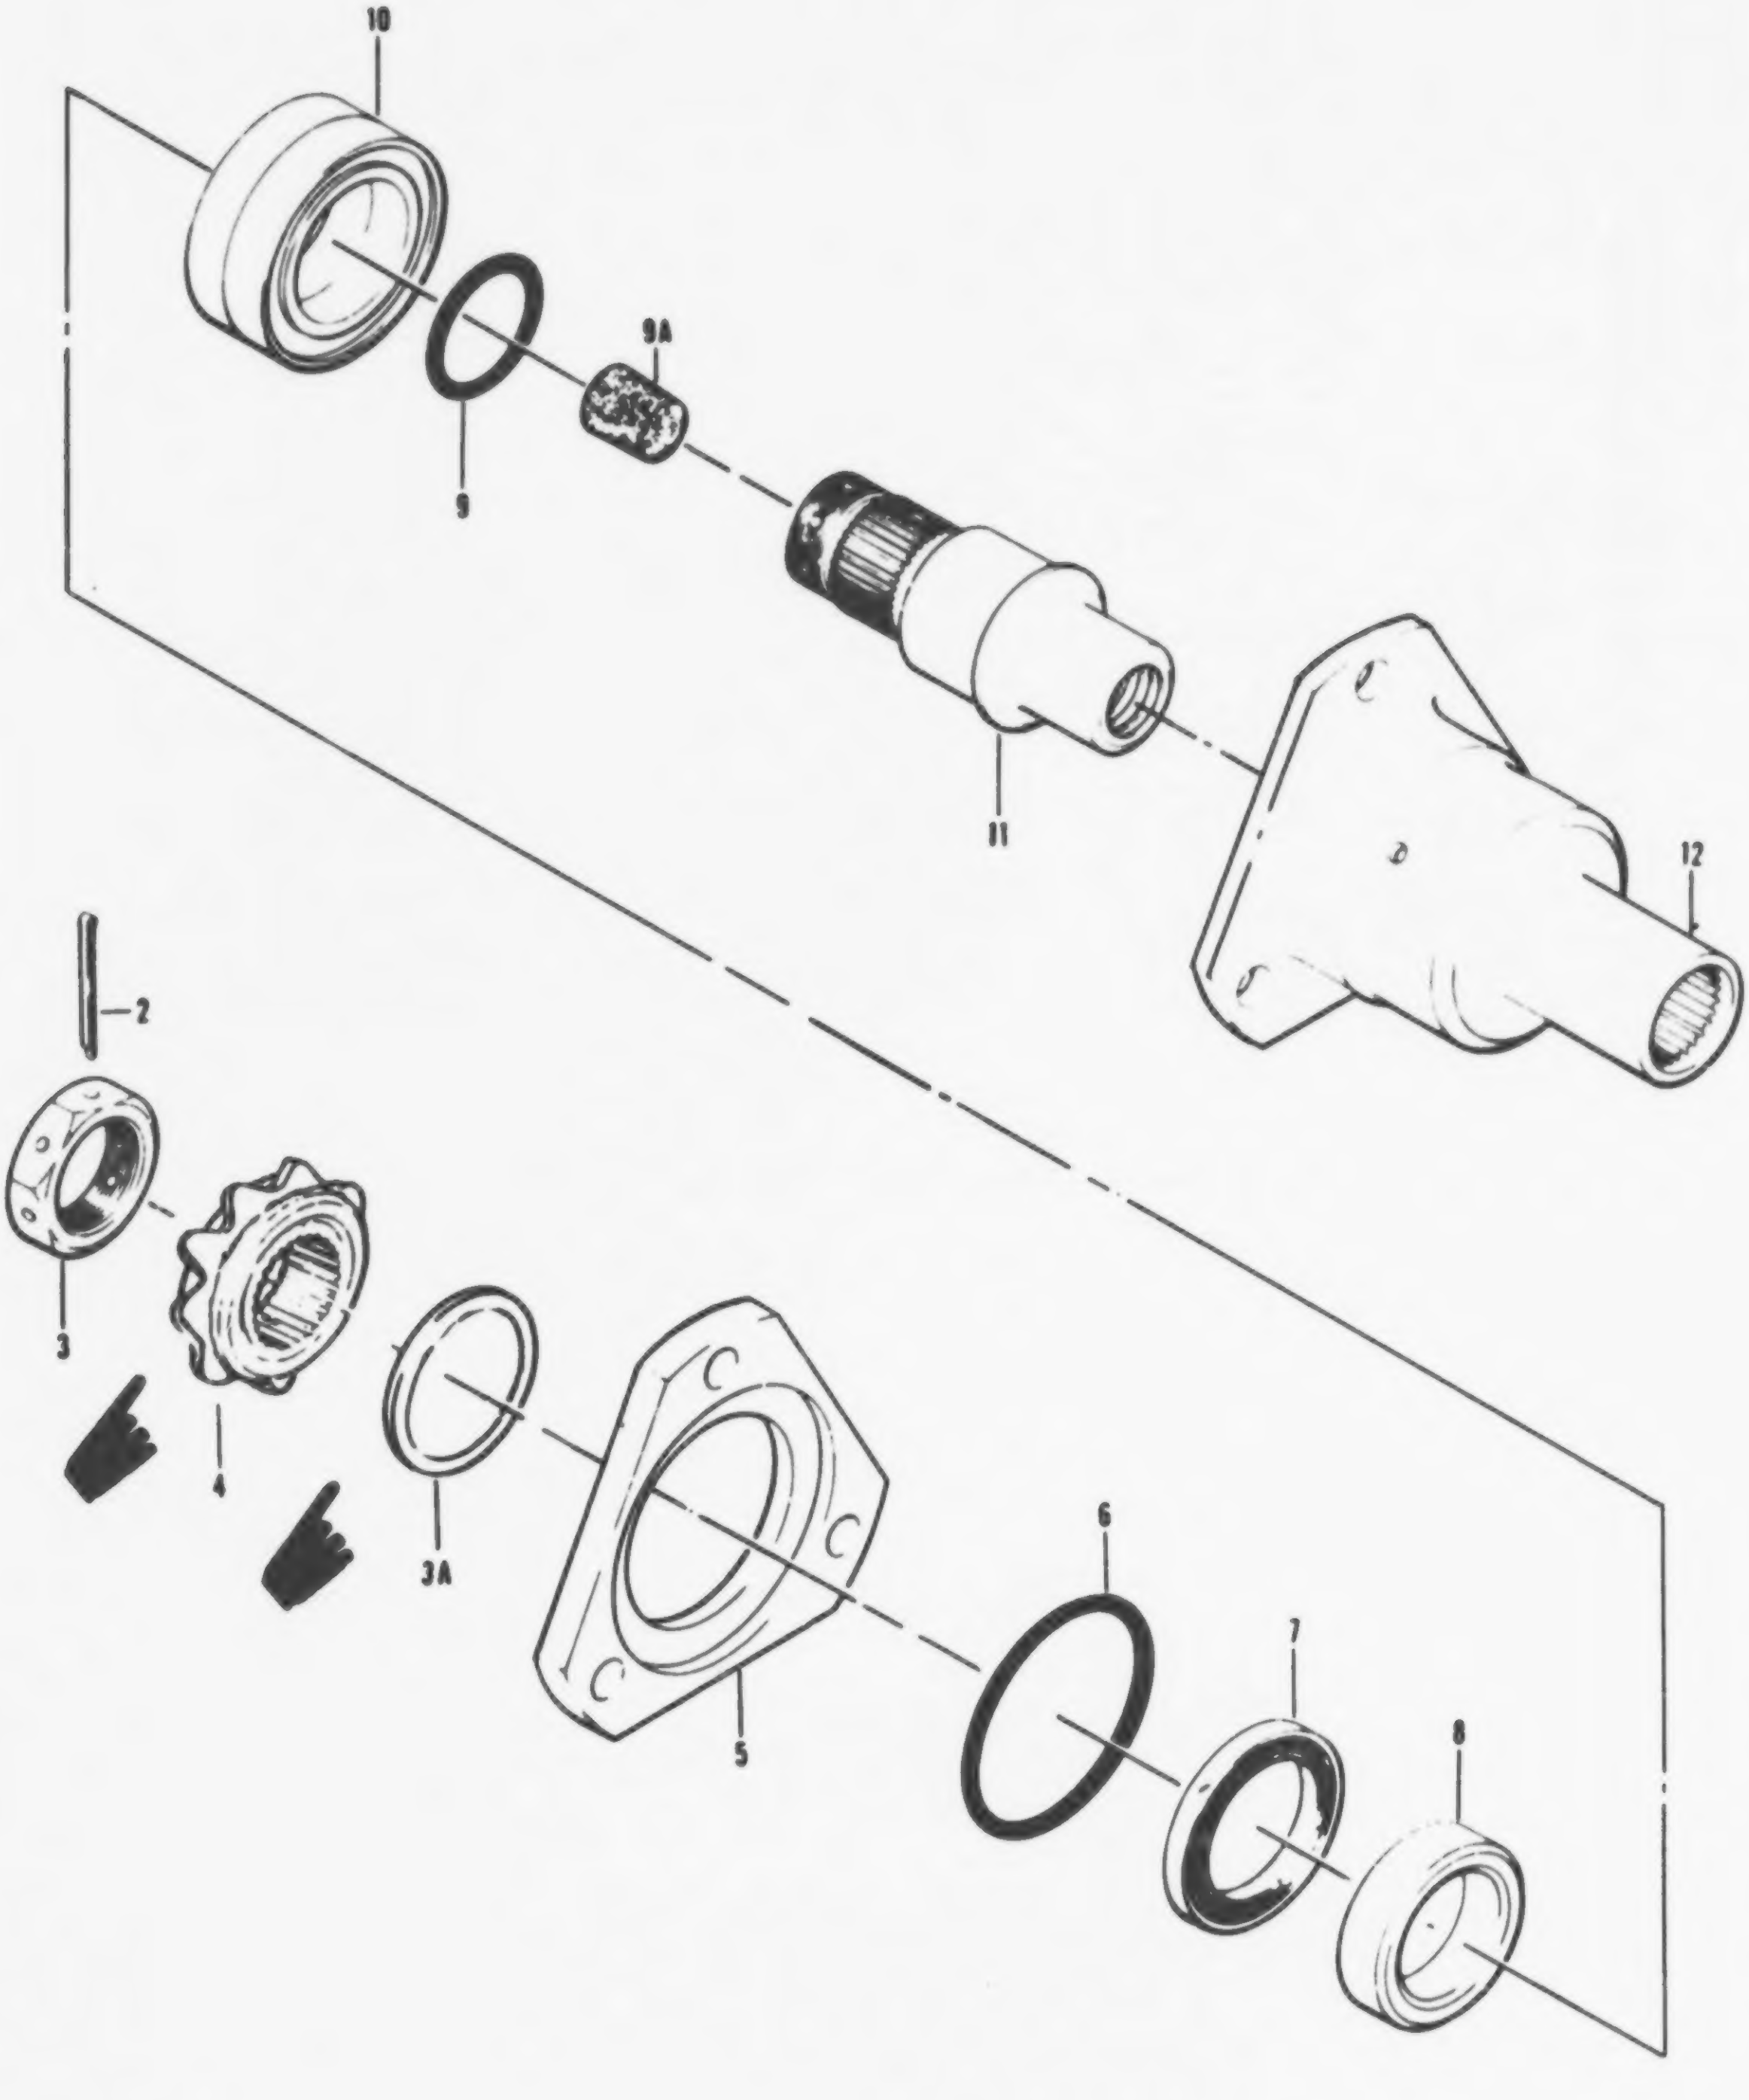
10
9
9A
11
12
2
3
4
3A
5
6
7
8

Figure 149. Control Assembly, Quill

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
149		AFOFF	1615-00-815-6683	97499	204-010-740-5	CONTROL ASSEMBLY,QU SEE FIG 145 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
149	2	PAOZZ	5315-00-682-1460	96906	MS24665-157	PIN,COTTER	UHE,UHH,UHM,UHV,UHX	EA	1
149	3	PAOZZ	5310-00-674-4233	97499	204-010-767-1	NUT,PLAIN,HEXAGON ROTOR	UHE,UHH,UHM,UHV,UHX	EA	1
149	3A	MFOZZ		81996	1560-UH1-990-1	.WASHER	UHE,UHH,UHM,UHV,UHX	EA	1
149	4	PAOZZ	3020-01-048-3457	81996	1560-UH-1-753-1	SPROCKET WHEEL	UHE,UHH,UHM,UHV,UHX	EA	1
149	5	PAOZZ	3110-00-806-2439	97499	204-010-746-2	PLATE,RETAINING,BEA	UHE,UHH,UHM,UHV,UHX	EA	1
149	6	PAOZZ	5330-00-846-1956	96906	MS9241-224	PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
149	7	PAOZZ	5330-00-515-4742	73680	71X7062	SEAL,PLAIN ENCAS	UHE,UHH,UHM,UHV,UHX	EA	1
149	8	PAOZZ	5365-00-684-5818	97499	204-010-766-1	SPACER,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	1
149	9	PAOZZ	5330-00-542-1457	96906	MS29561-116	PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
149	9A	PAOZZ	8125-00-926-2056	22527	7-7910	STOPPER,BOTTLE SIZE NO 5	UHE,UHH,UHM,UHV,UHX	EA	1
149	10	PAODD	3110-00-079-6387	97499	204-011-712-1	BEARING,BALL,DUPLEX	UHE,UHH,UHM,UHV,UHX	EA	1
149	11	PAOZZ	1615-00-691-2141	97499	204-010-765-1	CONTROL NUT ASSY	UHE,UHH,UHM,UHV,UHX	EA	1
149	12	PAOZZ	1615-00-815-6682	97499	204-010-775-3	HOUSING,QUILL,TAIL	UHE,UHH,UHM,UHV,UHX	EA	1

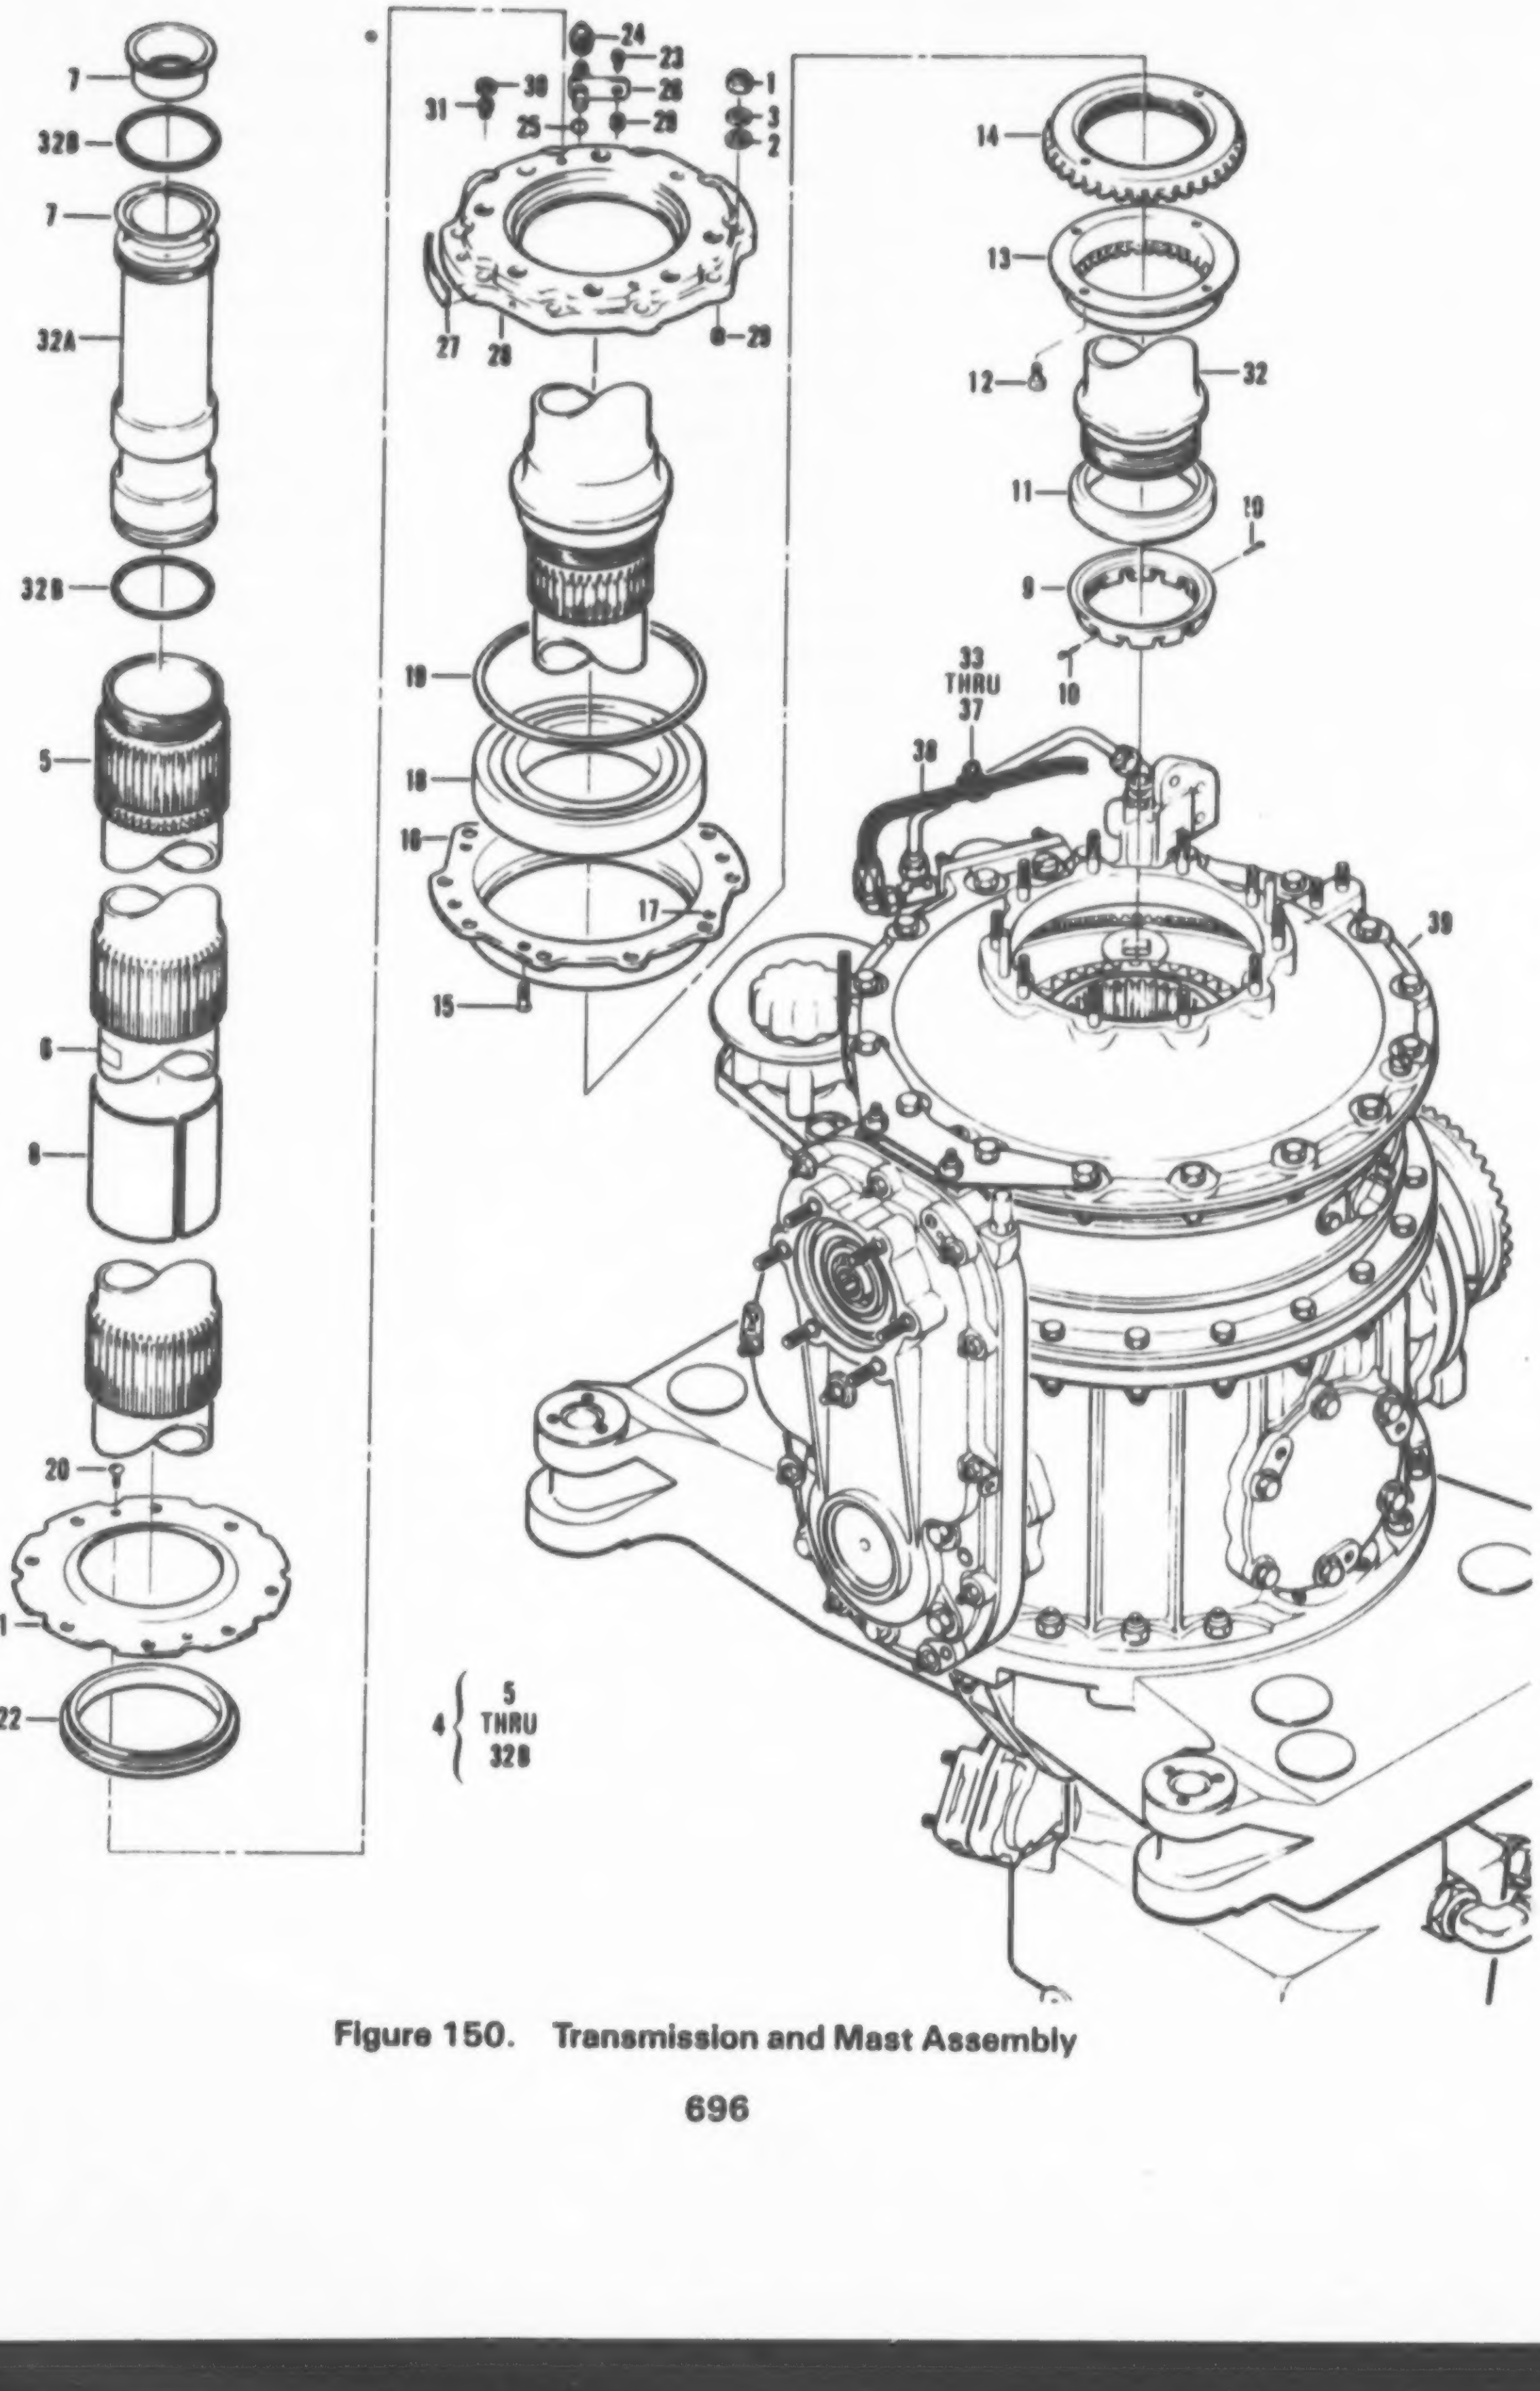
7
32B
7
32A
32B
5
6
8
20
21
22
4 { 5 THRU 32B
24
23
31
30
26
25
29
1
3
2
27
28
29
19
18
16
17
15
14
13
12
32
11
10
9
10
33 THRU 37
38
39

Figure 150. Transmission and Mast Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 06 DRIVE TRAIN		
150		AODDD		97499	204-040-009-49	TRANSMISSION AND MAST ASSY USBL EFF 64-14101 & SUBSEQUENT SEE FIG 130 FOR NHA .... UHM	EA	1
150		AODDD		97499	205-040-001-7	TRANSMISSION AND ASSEMBLY USBL EFF 62-2106 THRU 62-12372 SEE FIG. 128 FOR NHA .... UHE, UHH, UHV, UHX	EA	1
150		AODDD		97499	205-040-001-13	TRANSMISSION AND MAST ASSY USBL EFF 63-8739 & SUBSEQUENT SEE FIG 128 FOR NHA .... UHE, UHH, UHV, UHX	EA	1
150	1	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT, SELF-LOCKING, EX WASHER, HEXAGON .... UHE, UHH, UHM, UHV, UHX	EA	10
150	2	PAOZZ	5310-00-184-8980	88044	AN960PD516L	.WASHER, FLAT .... UHE, UHH, UHM, UHV, UHX	EA	10
150	3	PAOZZ	5310-00-167-0836	88044	AN960-516L	.WASHER, FLAT .... UHE, UHH, UHM, UHV, UHX	EA	10
150	4	PAODD	1615-00-265-2896	97499	204-040-366-15	.MAST ASSEMBLY, TRANS TRANSMISSION .... UHE, UHH, UHV, UHX	EA	1
150	4	PAODD	1615-01-180-0338	97499	204-040-366-103	.MAST ASSEMBLY, TRANSMISSION .... UHM	EA	1
150	5	XAODD		97499	204-011-450-7	..MAST ASSEMBLY .... UHE, UHH, UHV, UHX	EA	1
150	5	XAOZZ		97499	204-011-450-5	..MAST ASSEMBLY, MAIN .... UHM	EA	1
150	6	PAFZZ	9905-00-060-2034	97499	100-024-1	...PLATE, IDENTIFICATIO .... UHE, UHH, UHM, UHV, UHX	EA	1
150	7	PAOZZ	5340-01-030-4292	97499	30-063-29	...CAP-PLUG, PROTECTIVE U/O PN 204-011-450-5 W/O MAST PLUG OBS-AFT-CMPL-W MWO 55-1500-219-30/9 .... UHE, UHH, UHM, UHV, UHX	EA	1
150	7	PAOZZ	5340-00-290-7242	97499	30-063-31	...CAP-PLUG, PROTECTIVE USE WHEN MAST PLUG P/N 209-010-090-1 IS INSTALLED USE-AFT-COMP-W MWO 55-1500-219-30-9 .... UHE, UHH, UHM, UHV, UHX	EA	1
150	7	PAOZZ	5340-00-290-7229	99017	53	...CAP, PROTECTIVE, D .... UHE, UHH, UHV, UHX	EA	1
150	8	PADZZ	5365-00-909-2587	97499	540-011-477-3	...SPACER, SLEEVE .... UHM	EA	1
150	9	PADZZ	3110-00-069-7207	97499	204-040-309-1	..NUT .... UHE, UHH, UHM, UHV, UHX	EA	1
150	10	PADZZ	5315-00-234-1866	96906	MS24665-165	..PIN, COTTER .... UHE, UHH, UHM, UHV, UHX	EA	2
150	11	PADDZ	3110-00-765-2383	97499	204-040-270-5	..RING, BEARING, INNER .... UHE, UHH, UHM, UHV, UHX	EA	1
150	12	PADZZ	5305-00-145-6971	88044	AN503-8-6	..SCREW, MACHINE .... UHE, UHH, UHM, UHV, UHX	EA	2
150	13	PADZZ	1615-00-071-8760	97499	205-040-236-1	..LOCKWASHER, TRANSMIS .... UHE, UHH, UHM, UHV, UHX	EA	1
150	14	PADZZ	5310-00-626-0127	97499	204-040-116-1	..NUT, SELF-LOCKING, SP .... UHE, UHH, UHM, UHV, UHX	EA	1
150	15	PADZZ	5305-00-957-7811	96906	MS24693S272	..SCREW, MACHINE .... UHE, UHH, UHM, UHV, UHX	EA	4
150	16	PADDD	3130-00-765-2389	97499	204-040-307-1	..LINER, BEARING HOUSI .... UHE, UHH, UHM, UHV, UHX	EA	1
150	17	PADZZ	5340-00-290-4476	96906	MS21208F1-10	...INSERT, SCREW THR .... UHE, UHH, UHM, UHV, UHX	EA	1
150	18	PADDD	3110-01-094-4412	97499	212-040-136-1	..BEARING, BALL, ANNULA .... UHB, UHE, UHH, UHV, UHX	EA	1
150	19	PADZZ	5365-00-505-2338	97499	120-006C213-198	..SHIM .... UHE, UHH, UHM, UHV, UHX	EA	1
150	20	PBFZZ	5305-00-889-2997	96906	MS35206-216	..SCREW, MACHINE .... UHE, UHH, UHM, UHV, UHX	EA	2
150	21	PAFZZ	3110-00-829-6843	97499	204-040-347-1	..PLATE, TRANSMISSION .... UHB, UHE, UHH, UHV, UHX	EA	1
150	21	PAFZZ	1680-00-872-7841	97499	540-040-011-1	..PLATE, MAST BEARING .... UHC, UHM	EA	1
150	22	PAFZZ	5330-00-875-7988	97499	204-040-244-1	..SEAL, PLAIN .... UHE, UHH, UHM, UHV, UHX	EA	1
150	23	PAOZZ	5305-00-271-7746	88044	AN502-10-6	..SCREW, MACHINE .... UHE, UHH, UHM, UHV, UHX	EA	1
150	24	PAOZZ	4730-00-698-4030	88044	AN929-4S	..CAP, TUBE .... UHE, UHH, UHM, UHV, UHX	EA	1
150	25	PCOZZ	5330-00-580-5937	96906	MS29561-008	..PACKING, PREFORMED .... UHE, UHH, UHM, UHV, UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	UM	QTY INC IN UNIT
150	26	PAOZZ	1615-00-215-4301	97499	204-040-761-1	..JET,OIL SPRAY ASSEM UHE,UHH,UHM,UHV,UHX	EA	1
150	27	PAOZZ	9905-00-118-6663	97499	100-037-1M	..PLATE,IDENTIFICATIO UHE,UHH,UHM,UHV,UHX	EA	1
150	28	PAOOO	1615-00-070-6821	97499	204-040-349-9	..PLATE ASSEMBLY UHE,UHH,UHV,UHX	EA	1
150	28	PAOOO	3110-00-909-3804	97499	540-040-010-5	..PLATE ASSY,UPPER UHM	EA	1
150	29	PBOZZ	5340-00-697-3302	96906	MS124695	...INSERT,SCREW THREAD UHE,UHH,UHM,UHV,UHX	EA	5
150	30	PBOZZ	5365-00-735-0196	83324	RL33S89	...RING,LOCK,SERRATED UHE,UHH,UHV,UHX	EA	8
150	30	PAOZZ	5365-00-382-6607	83324	RL38S89	...RING,LOCK,SERRATED U/O PN 540-040-010-5 UHM	EA	8
150	31	PAOZZ	5340-00-286-2466	83324	RAD207S89	...INSERT,SCREW THREAD UHE,UHH,UHV,UHX	EA	8
150	31	PAOZZ	5340-00-584-0607	83324	RD308S810L	...INSERT,SCREW THR UHM	EA	8
150	32	PAOZZ	5340-00-826-2066	99017	EC48	..CAP,PROTECTIVE,DUST U/O PN 204-040-366-11 UHE,UHH,UHM,UHV,UHX	EA	1
150	32	PAOZZ	5340-00-223-7118	99017	SC3-1-2	..CAP,PROTECTIVE,DUST U/O PN 204-040-366-11 UHE,UHH,UHM,UHV,UHX	EA	1
150	32A	PAOZZ	1615-01-106-9085	97499	209-010-090-1	..PLUG ASSEMBLY,MAST NOT USED WHEN MAST PN 204-040-366-15 IS INSTALLED USE-AFT-CM PL-W MWO 55-1500-219-30-9 UHE,UHH,UHM,UHV,UHX	EA	1
150	32B	PAOZZ	5330-00-046-4559	96906	MS9241-233	...PACKING,PREFORMED UHE,UHH,UHM,UHV,UHX	EA	2
150	33	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 204-040-009-33 & PN 205-040-001-13 UHE,UHH,UHM,UHV,UHX	EA	1
150	34	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 204-040-009-33 & PN 205-040-001-13 UHE,UHH,UHM,UHV,UHX	EA	1
150	35	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE U/O PN 204-040-009-33,-49, & PN 205-040-001-13 UHE,UHH,UHM,UHV,UHX	EA	1
150	36	PAOZZ	5340-00-161-5997	96906	MS21122-4	.CLAMP,LOOP U/O PN 204-040-009-33 & PN 205-040-001-13 UHE,UHH,UHM,UHV,UHX	EA	1
150	37	PAOZZ	5340-00-990-9301	81996	EAB70007	.CLAMP,LOOP U/O PN 204-040-009-33 &-49 UHE,UHH,UHM,UHV,UHX	EA	1
150	38	XDOZZ	4720-00-727-2374	96906	MS87028E124C	.HOSE ASSEMBLY,NONME U/O PN 204-040-009-33,-49, & PN 205-040-001-7 UHE,UHH,UHM,UHV,UHX	EA	1
							EA	
150	39	AOOOO		97499	204-040-009-57	.TRANSMISSION ASSEMB SEE FIG. 151 FOR BREAKDOWN UHM	EA	1
150	39	AOOOO		97499	205-040-001-17	.TRANSMISSION ASSEMB SEE FIG. 153 FOR BREAKDOWN UHE,UHH,UHV,UHX	EA	1

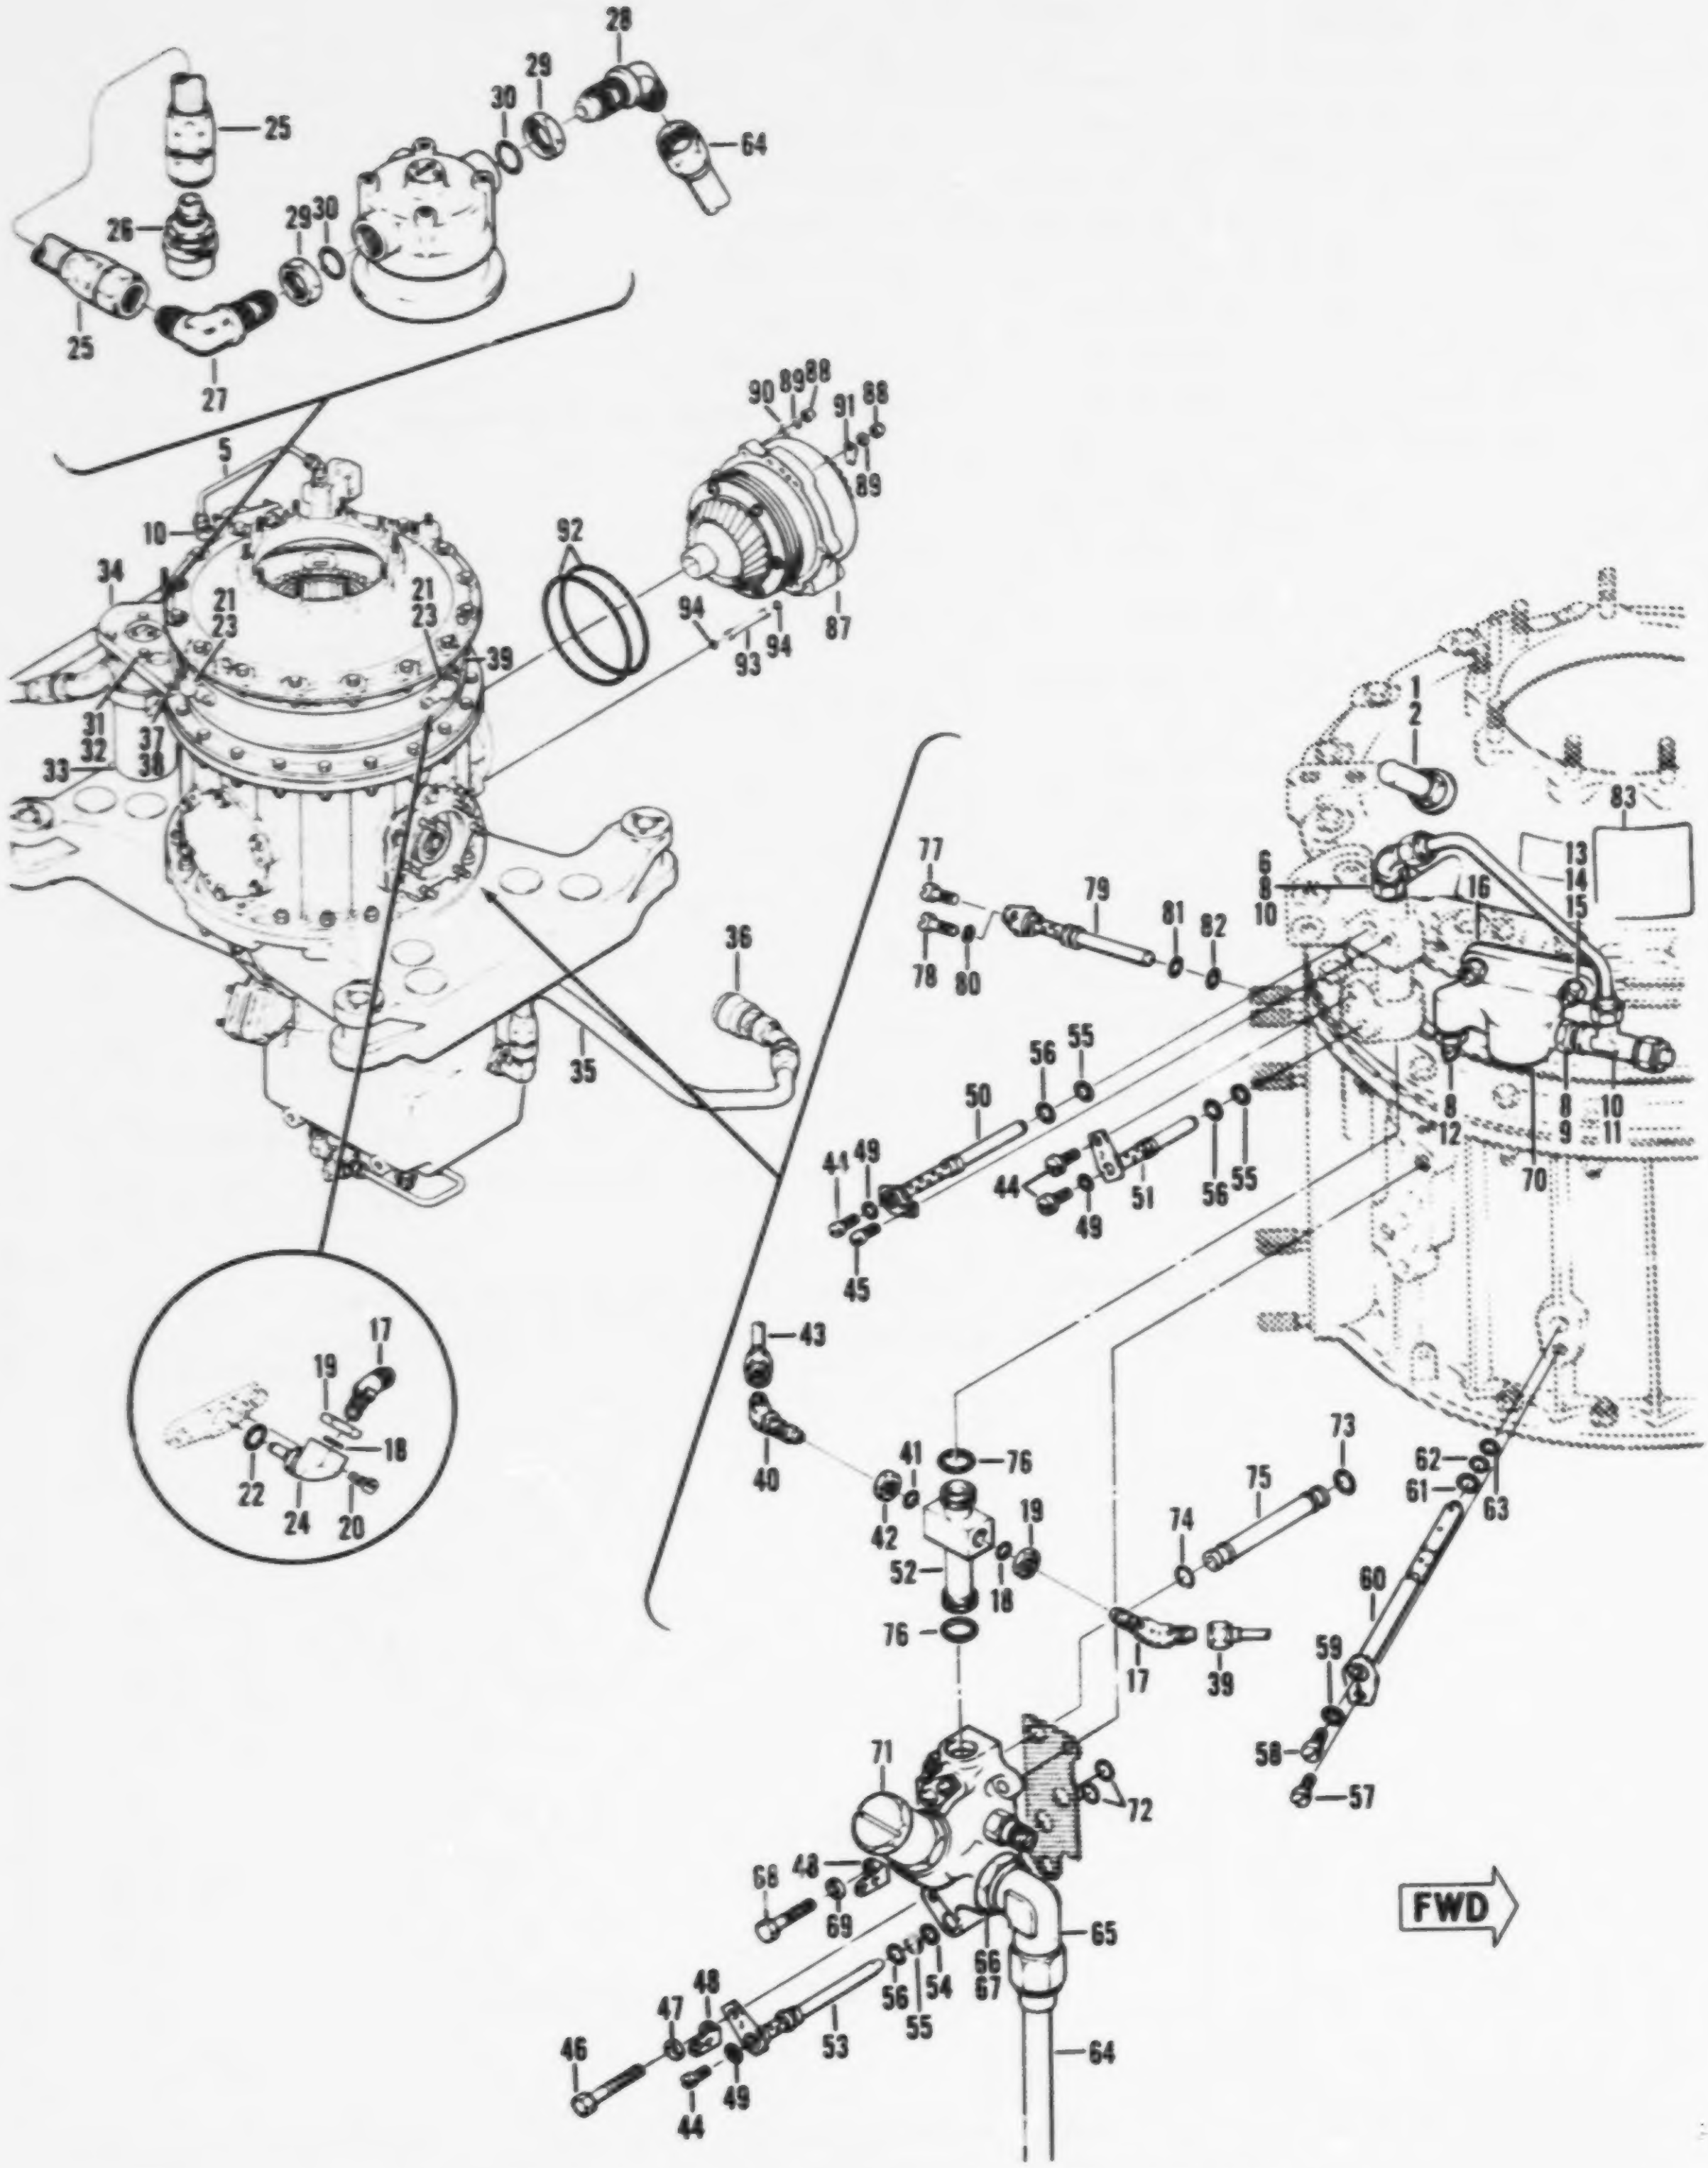
28
29
30
25
64
26
29
30
25
27
90
89
88
91
88
89
5
10
92
34
21
23
21
23
39
94
94
93
87
31
32
33
37
38
1
2
83
77
79
6
8
10
13
14
15
16
81
82
78
80
36
35
56
55
50
8
12
8
9
10
11
70
41
49
44
51
56
55
49
45
43
17
19
18
22
24
20
73
62
61
63
76
41
75
40
42
19
74
52
18
60
76
17
39
59
71
58
57
72
68
48
69
65
66
67
56
54
55
48
47
46
53
49
44
64
FWD

Figure 151. Transmission Assembly (Sheet 1 of 2)

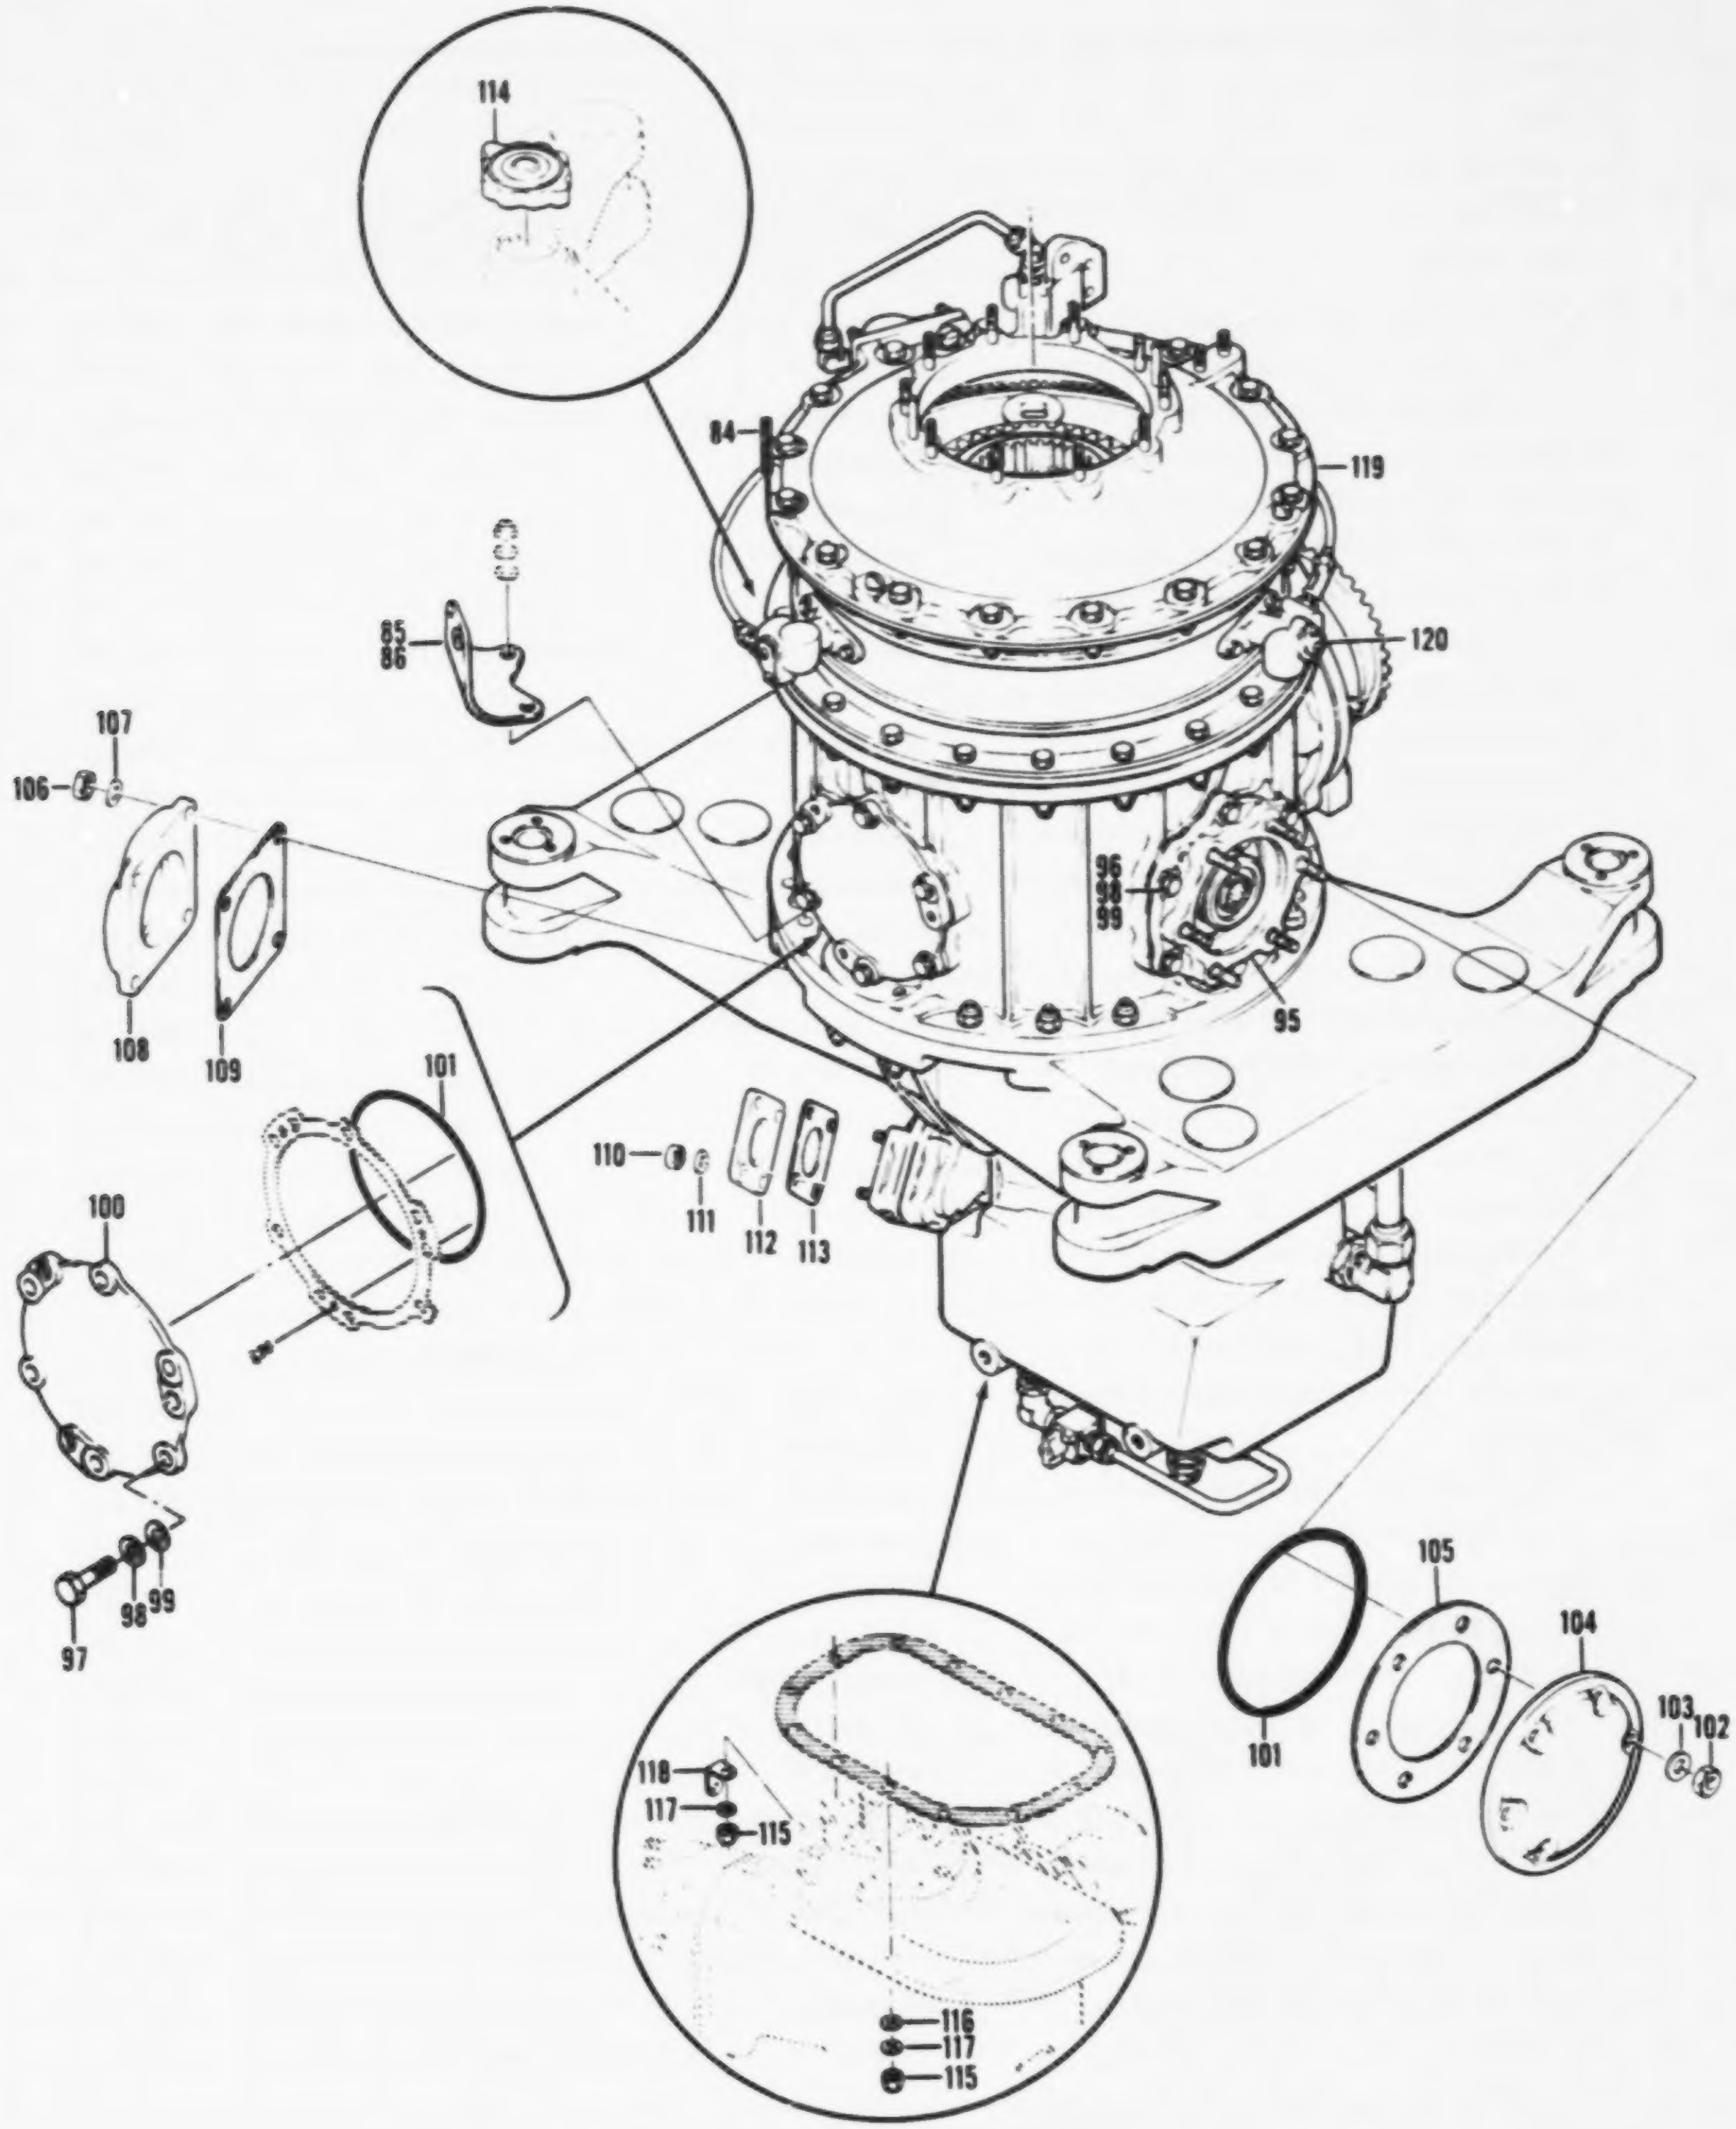
114
84
119
85
86
120
107
106
96
98
99
95
108
109
101
110
111
112
113
100
97
98
99
105
104
101
103
102
118
117
115
116
117
115

Figure 151. Transmission Assembly (Sheet 2 of 2)

best copy available

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
151		AOODD		97499	204-04C-009-57	TRANSMISSION ASSY SEE FIG.150 FOR NHA. USE UNTIL STOCK IS EXHAUSTED,THEN ASSEMBLE FROM COMPONENT PARTS LISTED IN FIG. 152. THE FOLLOWING COMPONENTS ARE LISTED FOR REPLACEMENT PURPOSES ONLY.......... UHM	EA	1
151	1	PAOZZ	4820-00-091-4720	97484	A800	.VALVE,AIR PRESS.......... UHM	EA	1
151	2	PAOZZ	5330-00-290-9402	88044	AN123026	.GASKET.......... UHM	EA	1
151	5	PAOZZ	4710-00-829-6848	97499	204-040-375-1	.TUBE ASSEMBLY,METAL.......... UHM	EA	1
151	6	PAOZZ	4730-00-803-5049	96906	MS24396D4	.ELBOW,TUBE.......... UHM	EA	1
151	8	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED.......... UHM	EA	3
151	9	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON.......... UHM	EA	2
151	10	PAOZZ	4730-00-725-4351	96906	MS24394D4	.ELBOW,TUBE.......... UHM	EA	1
151	11	PAOZZ	4730-00-720-4984	96906	MS24390D4	.TEE,TUBE U/O PN 204-040-009-31,-61,& -57.......... UHM	EA	1
151	12	PAOZZ	4730-00-834-9560	96906	MS24392D4	.NIPPLE,TUBE.......... UHM	EA	1
151	13	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON.......... UHM	EA	2
151	14	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT.......... UHM	EA	2
151	15	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT.......... UHM	EA	2
151	16	PAOZZ	1560-00-829-6846	97499	204-040-370-1	.MANIFOLD,OIL PRESS.......... UHM	EA	1
151	17	PAOZZ	4730-00-803-5049	96906	MS24396D4	.ELBOW,TUBE.......... UHM	EA	3
151	18	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED.......... UHM	EA	3
151	19	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON.......... UHM	EA	3
151	20	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE.......... UHM	EA	2
151	22	PCOZZ	5330-00-702-4712	96906	MS29561-112	.PACKING,PREFORME U/O PN 204-040-009-57 & -61.... UHM	EA	2
151	23	PAOZZ	1615-00-069-3312	97499	204-040-252-21	.SET LUBRICATOR, TRANSMISSION.......... UHM	EA	2
151	24	PAOZZ	1615-00-475-2533	97499	205-040-135-1	.OIL JET ASSEMBLY U/O PN 204-040-009-61.......... UHM	EA	2
151	25	MFOZZ	4720-00-076-7405	96906	MS87028K02308	.HOSE ASSEMBLY,NONME.......... UHM	EA	1
151	25	MFOZZ		96906	MS8000K180K185	.HOSE ASSEMBLY,NONME.......... UHM	EA	1
151	26	PAOZZ	4730-00-773-2621	00624	375504-12	.COUPLING HALF,QUICK DISCONNECT.......... UHM	EA	1
151	27	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW,TUBE.......... UHM	EA	1
151	28	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW,TUBE.......... UHM	EA	1
151	29	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON.......... UHM	EA	2
151	30	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORME.......... UHM	EA	2
151	31	PAOZZ	5306-00-151-2603	96906	MS20074-06-04	.BOLT,MACHINE.......... UHM	EA	4
151	32	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT.......... UHM	EA	4
151	33	PAOOO	1615-00-796-5004	97499	204-040-760-3	.FILTER ASSEMBLY SEE FIG.176 FOR BREAKDOWN.......... UHM	EA	1
151	34	PAOFF	1560-00-882-2326	97499	204-040-731-3	.BRACKET ASSEMBLY.......... UHM	EA	1
151	35	MFOZZ	4720-00-067-5729	96906	MS87028K2608	.HOSE ASSEMBLY, NONMETALIC.......... UHM	EA	1
151	36	PAOZZ	4730-00-773-2621	00624	375504-12	.COUPLING HALF,QUICK DISCONNECT.......... UHM	EA	1
151	37	PAOZZ	5306-00-180-1489	88044	AN6-17A	.BOLT,MACHINE.......... UHM	EA	4

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
151	38	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT............UHB,UHC,UHM	EA	4
151	39	XBOZZ	1615-00-859-2740	97499	204-040-395-1	.TUBE ASSEMBLY,METAL............UHB	EA	1
151	39	MFOZZ	4710-00-874-0564	97499	204-040-722-1	.TUBE ASSEMBLY,METAL U/O PN 204-040-009-61......UHB,UHC,UHM	EA	1
151	40	PAOZZ	4730-00-803-5049	96906	MS24396D4	.ELBOW,TUBE............UHB,UHC,UHM	EA	1
151	41	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED............UHB,UHC,UHM	EA	1
151	42	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON............UHB,UHC,UHM	EA	1
151	43	XBOZZ	1615-00-859-2741	97499	204-040-396-1	.TUBE ASSEMBLY,METAL............UHB	EA	1
151	43	MFOZZ	4710-00-874-0855	97499	204-040-723-1	.TUBE ASSEMBLY,METAL U/O PN 204-040-009-61......UHB,UHC,UHM	EA	1
151	44	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE............UHB,UHC,UHM	EA	4
151	45	PAOZZ	5305-00-150-9520	88044	AN502-416-6	.SCREW,MACHINE............UHB,UHC,UHM	EA	1
151	46	PAOZZ	5306-00-182-1966	88044	AN4H20A	.BOLT,MACHINE............UHB,UHC,UHM	EA	1
151	47	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT............UHB	EA	1
151	48	MFOZZ	5340-00-912-1903	97499	20-032-2	.BRACKET,ANGLE............UHB,UHC,UHM	EA	2
151	49	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN RETAINER............UHB,UHC,UHM	EA	3
151	50	PAOZZ	1615-00-898-6884	97499	204-040-261-13	.JET LUBRICATOR, TRANSMISSION............UHB,UHC,UHM	EA	1
151	51	PAOZZ	1615-00-069-3312	97499	204-040-262-21	.JET LUBRICATOR, TRANSMISSION............UHB,UHC,UHM	EA	1
151	52	PAOZZ	4730-00-740-3366	97499	204-040-398-1	.FITTING,OIL............UHB,UHC,UHM	EA	1
151	53	PAOZZ	1615-00-830-9763	97499	204-040-326-7	.JET LUBRICATOR, TRANSMISSION............UHB,UHC,UHM	EA	1
151	54	PCOZZ	5330-00-580-5937	96906	MS29561-008	.PACKING,PREFORMED............UHB,UHC,UHM	EA	1
151	55	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED............UHB,UHC,UHM	EA	3
151	56	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED............UHB,UHC,UHM	EA	3
151	57	PAOZZ	5305-00-150-9520	88044	AN502-416-6	.SCREW,MACHINE............UHB,UHC,UHM	EA	1
151	58	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE............UHB,UHC,UHM	EA	1
151	59	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN RETAINER............UHB,UHC,UHM	EA	1
151	60	PAOZZ	1615-00-787-4265	97499	204-040-327-1	.JET LUBRICATOR, TRANSMISSION............UHB,UHC,UHM	EA	1
151	61	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED............UHB,UHC,UHM	EA	1
151	62	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED............UHB,UHC,UHM	EA	1
151	63	PCOZZ	5330-00-580-5937	96906	MS29561-008	.PACKING,PREFORMED............UHB,UHC,UHM	EA	2
151	64	MFOZZ		96906	MS87028K072C	.HOSE ASSEMBLY............UHB,UHC,UHM	EA	1
151	65	PAOZZ	4730-00-684-6914	96906	MS24392D12	.NIPPLE,TUBE............UHB,UHC,UHM	EA	1
151	66	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON............UHB,UHC,UHM	EA	1
151	67	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED............UHB,UHC,UHM	EA	1
151	68	PAOZZ	5306-00-182-2017	88044	AN4H5A	.BOLT,MACHINE............UHB,UHC,UHM	EA	1
151	69	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT............UHB,UHC,UHM	EA	1
151	70	PAOZZ	5365-00-859-2739	97499	204-040-394-1	.SPACER,PLATE............UHB,UHC,UHM	EA	1
151	71	AOOOO	1560-00-874-0861	97499	204-040-393-1	.MANIFOLD ASSEMBLY U/O PN 204-040-009-61 SEE FIG. 177 FOR BREAKDOWN............UHB,UHC,UHM	EA	1
151	72	PCOZZ	5330-00-800-5180	96906	MS29561-015	.PACKING,PREFORMED............UHB,UHC,UHM	EA	2
151	72	PCOZZ	5330-00-852-4230	96906	MS9241-015	.PACKING,PREFORMED............UHB,UHC,UHM	EA	2
151	73	PCOZZ	5330-00-580-5937	96906	MS29561-008	.PACKING,PREFORMED............UHB,UHC,UHM	EA	1
151	74	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED............UHB	EA	1
151	75	XBOZZ	1615-00-859-2750	97499	204-040-384-1	.TUBE ASSEMBLY RIGID............UHB	EA	1
151	76	XCOZZ	5330-00-585-1066	96906	MS29561-114	.PACKING,PREFORMED............UHB,UHC,UHM	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
151	77	PAOZZ	5305-00-150-9520	88044	AN502-416-6	.SCREW,MACHINE........UHB,UHC,UHM	EA	1
151	78	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE........UHB,UHC,UHM	EA	1
151	79	PAOZZ	1615-00-898-6883	97499	204-040-288-11	.JET LUBRICATOR, TRANSMISSION........UHB,UHC,UHM	EA	1
151	80	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN........UHB,UHC,UHM	EA	1
151	81	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED........UHB,UHC,UHM	EA	1
151	82	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED........UHB,UHC,UHM	EA	1
151	83	MFOZZ	9905-00-532-6678	96906	MS27253-2	.PLATE,IDENTIFICATIO........UHB,UHC,UHM	EA	1
151	84	PAOZZ	1560-00-830-9725	97499	204-001-516-15	.BRACKET,SPRING,CYCL CONTROL SPRING........UHB	EA	1
151	85	PAOOO	1615-00-875-9719	97499	540-001-313-1	.BRACKET ASSEMBLY,TR CONTROL SPRING........UHC,UHM	EA	1
151	86	PAOZZ	1615-00-875-9721	97499	540-001-314-1	..BUSHING,MAIN TRANSMISSION........UHC,UHM	EA	1
151	87	PAODO	1615-01-112-5904	97499	205-040-263-111	.QUILL ASSEMBLY,TRAN SMISSION SEE FIG 166 FOR BREAKDOWN ....UHB,UHC,UHM	EA	1
151	88	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHB,UHC,UHM	EA	7
151	89	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT........UHB,UHC,UHM	EA	7
151	90	PAOZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER, FLAT........UHB,UHC,UHM	EA	6
151	91	MFOZZ	5975-00-913-0930	97499	204-040-732-1	.STRAP,SUPPORT........UHB,UHC,UHM	EA	1
151	91	MFOZZ	5975-00-913-0930	97499	204-040-732-1	.STRAP,SUPPORT U/O PN 204-040-009-57 & -61........UHB,UHC,UHM	EA	2
151	92	PCOZZ	5330-00-726-9307	96906	MS29561-260	.PACKING, PREFORM........UHB,UHC,UHM	EA	2
151	93	PAOZZ	1615-00-830-9764	97499	204-040-341-1	.TUBE,OIL DRAIN,TRAN........UHB,UHC,UHM	EA	1
151	94	PCOZZ	5330-00-585-1065	96906	MS29561-113	.PACKING,PREFORMED........UHB,UHC,UHM	EA	2
151	95	PAODO	1615-00-056-4869	97499	204-040-379-3	.QUILL ASSEMBLY SEE FIG. 167 FOR BREAKDOWN........UHB,UHC,UHM	EA	1
151	96	PAOZZ	5306-00-144-4004	88044	AN6-12A	.BOLT,MACHINE........UHB,UHC,UHM	EA	6
151	97	PAOZZ	5306-00-208-3636	88044	AN6-10A	.BOLT,MACHINE........UHB,UHC,UHM	EA	6
151	98	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT........UHB,UHC,UHM	EA	12
151	99	PAOZZ	5310-00-847-2719	80205	NAS1197-616	.WASHER,FLAT........UHB,UHC,UHM	EA	12
151	100	PAOZD	1615-00-898-1684	97499	204-040-174-1	.COVER ASSEMBLY,QUIL........UHB,UHC,UHM	EA	1
151	101	PCOZZ	5330-00-726-1236	96906	MS29561-248	.PACKING,PREFORMED........UHB,UHC,UHM	EA	2
151	102	PAOZZ	5310-00-167-1346	88044	AN315-6R	.NUT,PLAIN,HEXAGON USED FOR STOCKING AND SHIPPING PURPOSES ....UHB,UHC,UHM	EA	6
151	103	PAOZZ	5310-00-167-0804	88044	AN960C616	.WASHER,FLAT USED FOR STOCKING AND SHIPPING PURPOSES ....UHB,UHC,UHM	EA	6
151	104	PAOZZ	2995-00-313-1433	88044	AN100041	.COVER,ENGINE ACCESS USED FOR STOCKING AND SHIPPING PURPOSES ....UHB,UHC,UHM	EA	1
151	105	PCOZZ	5330-00-023-7626	96906	MS9136-01	.GASKET USED FOR STOCKING AND SHIPPING PURPOSES ....UHB,UHC,UHM	EA	1
151	106	PAOZZ	5310-00-167-1345	81352	AN315-5R	.NUT,PLAIN,HEXAGO USED FOR STOCKING AND SHIPPING PURPOSES ....UHB,UHC,UHM	EA	4
151	107	PAOZZ	5310-00-167-0803	88044	AN960C516	.WASHER,FLAT USED FOR STOCKING AND SHIPPING PURPOSES ....UHB,UHC,UHM	EA	4
151	108	PAOZZ	2995-00-025-2244	88044	AN100036	.COVER,ENGINE ACCESS USED FOR STOCKING AND SHIPPING PURPOSES ....UHB,UHC,UHM	EA	1
151	109	PAOZZ	5330-00-237-5653	96906	MS9135-01	.GASKET USED FOR STOCKING AND SHIPPING PURPOSES ....UHB,UHC,UHM	EA	1
151	110	PAOZZ	5310-00-167-1344	88044	AN315-4R	.NUT,PLAIN,HEXAGON USED FOR STOCKING AND SHIPPING PURPOSES ....UHB,UHC,UHM	EA	4
151	111	PAOZZ	5310-00-631-9515	88044	AN960C416	.WASHER,FLAT USED FOR STOCKING AND SHIPPING PURPOSES ....UHB,UHC,UHM	EA	4
151	112	PAOZZ	2840-00-145-7961	88044	AN100043	.COVER,ACCESS USED FOR STOCKING AND SHIPPING PURPOSES	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						............UHB,UHC,UHM		
151	113	PAOZZ	5330-00-023-7623	96906	MS9134-01	.GASKET USED FOR STOCKING AND SHIPPING PURPOSES ....UHB,UHC,UHM	EA	1
151	114	PAOZZ	1615-00-701-9935	78567	FC3731	.CAP ASSEMBLY............UHB,UHC,UHM	EA	1
151	115	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON............UHB,UHC,UHM	EA	13
151	116	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT............UHB,UHC,UHM	EA	13
151	117	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT............UHB,UHC,UHM	EA	13
151	118	MFOZZ	5340-00-912-1903	97493	20-032-2	.BRACKET,ANGLE............UHB,UHC,UHM	EA	1
151	119	ADOOD	1615-00-488-7628	97499	204-040-362-13	.QUILL ASSEMBLY SEE FIG 160 FOR BREAKDOWN........UHB,UHC,UHM	EA	1
151	120	PADZZ	1615-00-859-2746	97499	204-040-339-9	.HOUSING ASSEMBLY,TR............UHB	EA	1

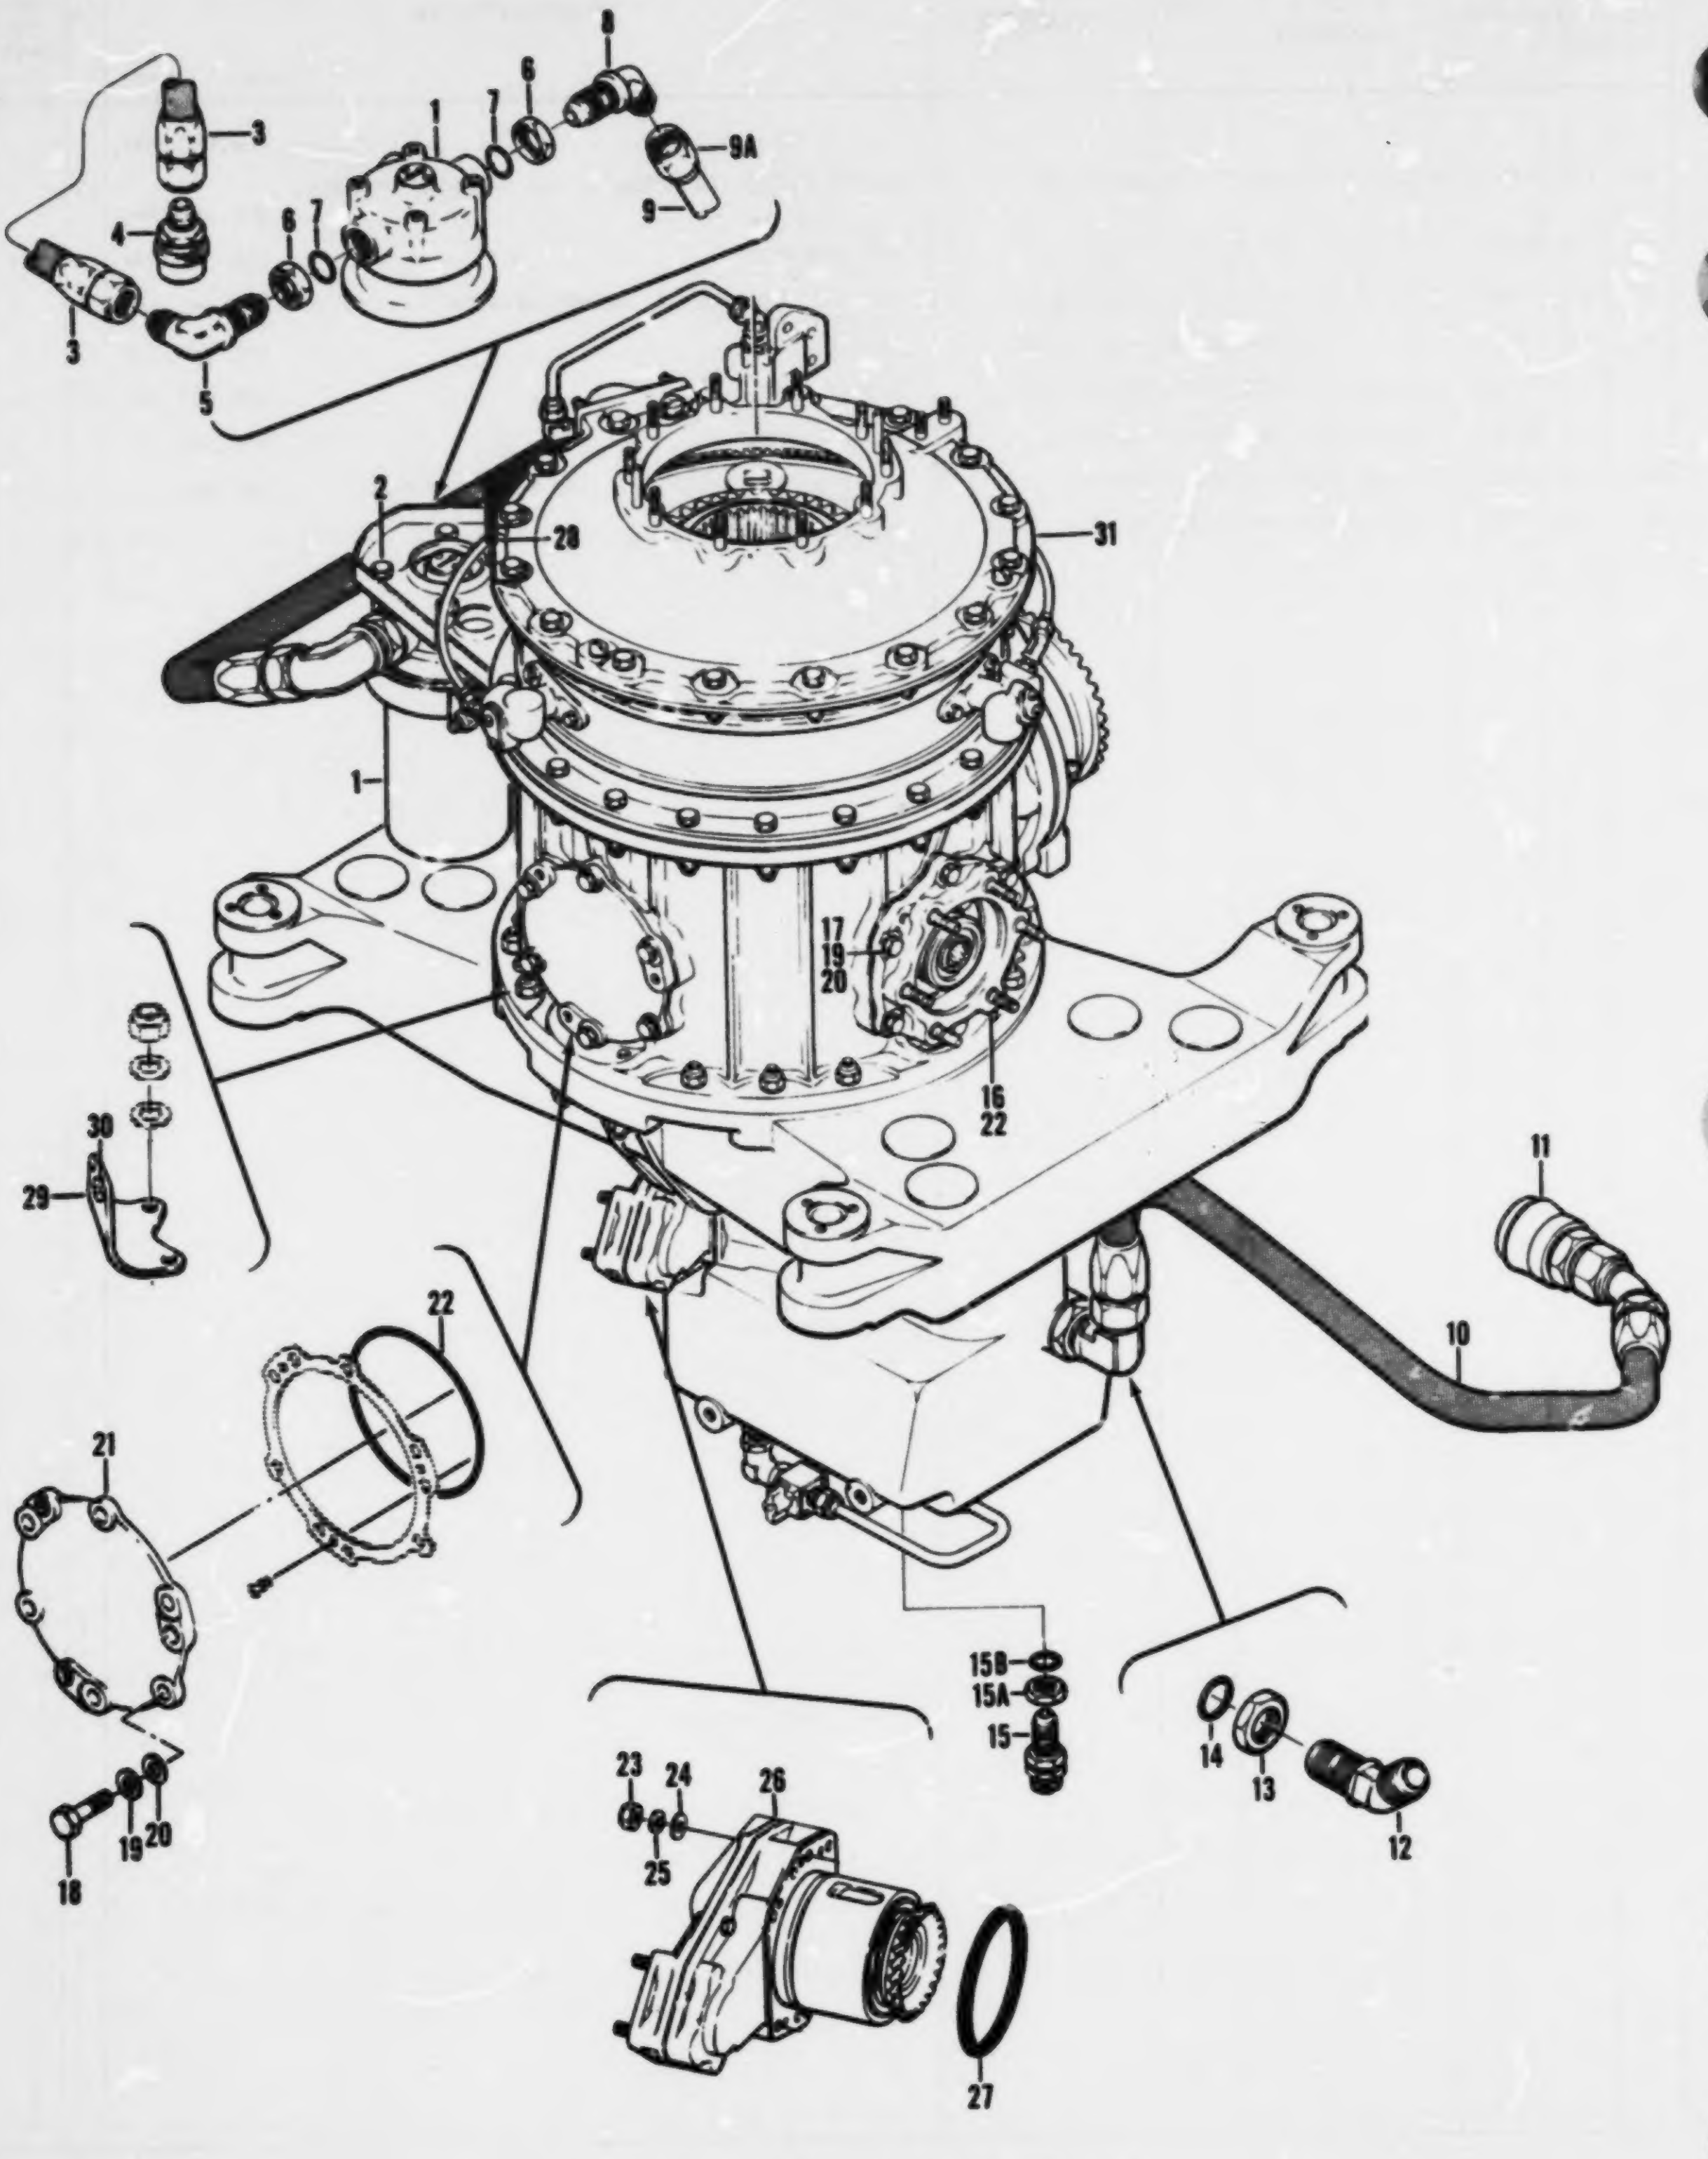
8
6
1
7
3
9A
4
6
7
9
3
5
2
28
31
1
17
19
20
16
22
11
30
29
10
22
21
15B
15A
15
14
13
12
23
24
26
25
18
19
20
27

Figure 152. Transmission Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
152		AOOOO		97499	204-040-009-57	TRANSMISSION ASSEMB THE BELOW LISTED COMPONENTS	UHM	EA	1
152	1	PAOOO	1615-00-796-5004	97499	204-040-760-3	.FILTER ASSEMBLY SEE FIG. 176 FOR BREAKDOWN	UHM	EA	1
152	2	PAOZZ	5306-00-151-2603	96906	MS20074-05-04	.BOLT,MACHINE	UHM	EA	4
152	2	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT	UHM	EA	4
152	3	MFOZZ		96906	MS8000K180K185	.HOSE ASSEMBLY,NONME	UHM	EA	1
152	4	PAOZZ	4730-00-773-2621	00624	375504-12	.COUPLING HALF,QUICK DISCONNECT	UHM	EA	1
152	5	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW,TUBE	UHM	EA	1
152	6	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON	UHM	EA	2
152	7	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED	UHM	EA	2
152	8	PAOZZ	4730-00-803-5051	96906	MS24396D12	.ELBOW,TUBE	UHM	EA	1
152	9	MFOZZ		96906	MS87028K072C	.HOSE ASSEMBLY	UHM	EA	1
152	9A	PAOZZ	4730-00-684-6914	96906	MS24392D12	.NIPPLE,TUBE	UHM	EA	1
152	10	MFOZZ	4720-00-067-5729	96906	MS87028K260B	HOSE ASSEMBLY,NONME	UHM	EA	1
152	11	PAOZZ	4730-00-773-2621	00624	375504-12	.COUPLING HALF,QUICK DISCONNECT	UHM	EA	1
152	12	PAOZZ	4730-00-803-5051	96906	MS24396D12	.ELBOW,TUBE	UHM	EA	1
152	13	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON	UHM	EA	1
152	14	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED	UHM	EA	1
152	15	PAOZZ	4730-00-839-0976	00624	375200-6	.COUPLING HALF,QUICK DISCONNECT	UHM	EA	1
152	15A	PAOZZ	5310-00-638-2605	96906	MS2440006	.NUT,PLAIN,HEXAGON	UHM	EA	1
152	15B	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED	UHM	EA	1
152	16	PAOOO	1615-00-056-4869	97499	204-040-379-3	.QUILL ASSEMBLY SEE FIG 157 FOR BREAKDOWN	UHM	EA	1
152	17	PAOZZ	5306-00-144-4004	88044	AN6-12A	.BOLT,MACHINE	UHM	EA	6
152	18	PAOZZ	5306-00-208-3636	88044	AN6-10A	.BOLT,MACHINE	UHM	EA	6
152	19	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT	UHM	EA	12
152	20	PAOZZ	5310-00-847-2719	80205	NAS1197-616	.WASHER,FLAT	UHM	EA	12
152	21	PAOZO	1615-00-898-1684	97499	204-040-174-1	.COVER ASSEMBLY,QUIL	UHM	EA	1
152	22	PAOZZ	5330-00-726-1236	96906	MS29561-248	.PACKING,PREFORMED	UHM	EA	1
152	23	PAOZZ	5310-00-807-1476	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHM	EA	2
152	24	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT	UHM	EA	2
152	25	PAOZZ	5310-00-167-0836	88044	AN960-516L	.WASHER,FLAT	UHM	EA	2
152	26	PAOOO	1680-00-871-8736	97499	204-040-800-1	.QUILL ASSEMBLY TRANSMISSION SEE FIG 170 FOR BREAKDOWN	UHM	EA	1
152	27	PCOZZ	5330-00-726-4163	96906	MS29561-237	.PACKING,PREFORMED	UHM	EA	1
152	29	PAOZO	1615-00-875-9719	97499	540-001-313-1	.BRACKET ASSEMBLY,TR CONTROL SPRING	UHM	EA	1
152	30	PAOZZ	1615-00-875-9721	97499	540-001-314-1	..BUSHING,MAIN TRANSM	UHM	EA	1
152	31	PAOOO	1615-00-183-0834	97499	204-040-016-5	.TRANSMISSION ASSY SEE FIG. 155, 156 & 159 FOR BREAKDOWN	UHM	EA	1
152		PAOOO	8145-00-701-9867	97499	204-030MUSC1	SHIPPING AND STORAG CONTAINER U/O PN 204-040-016-1	UHM	EA	1

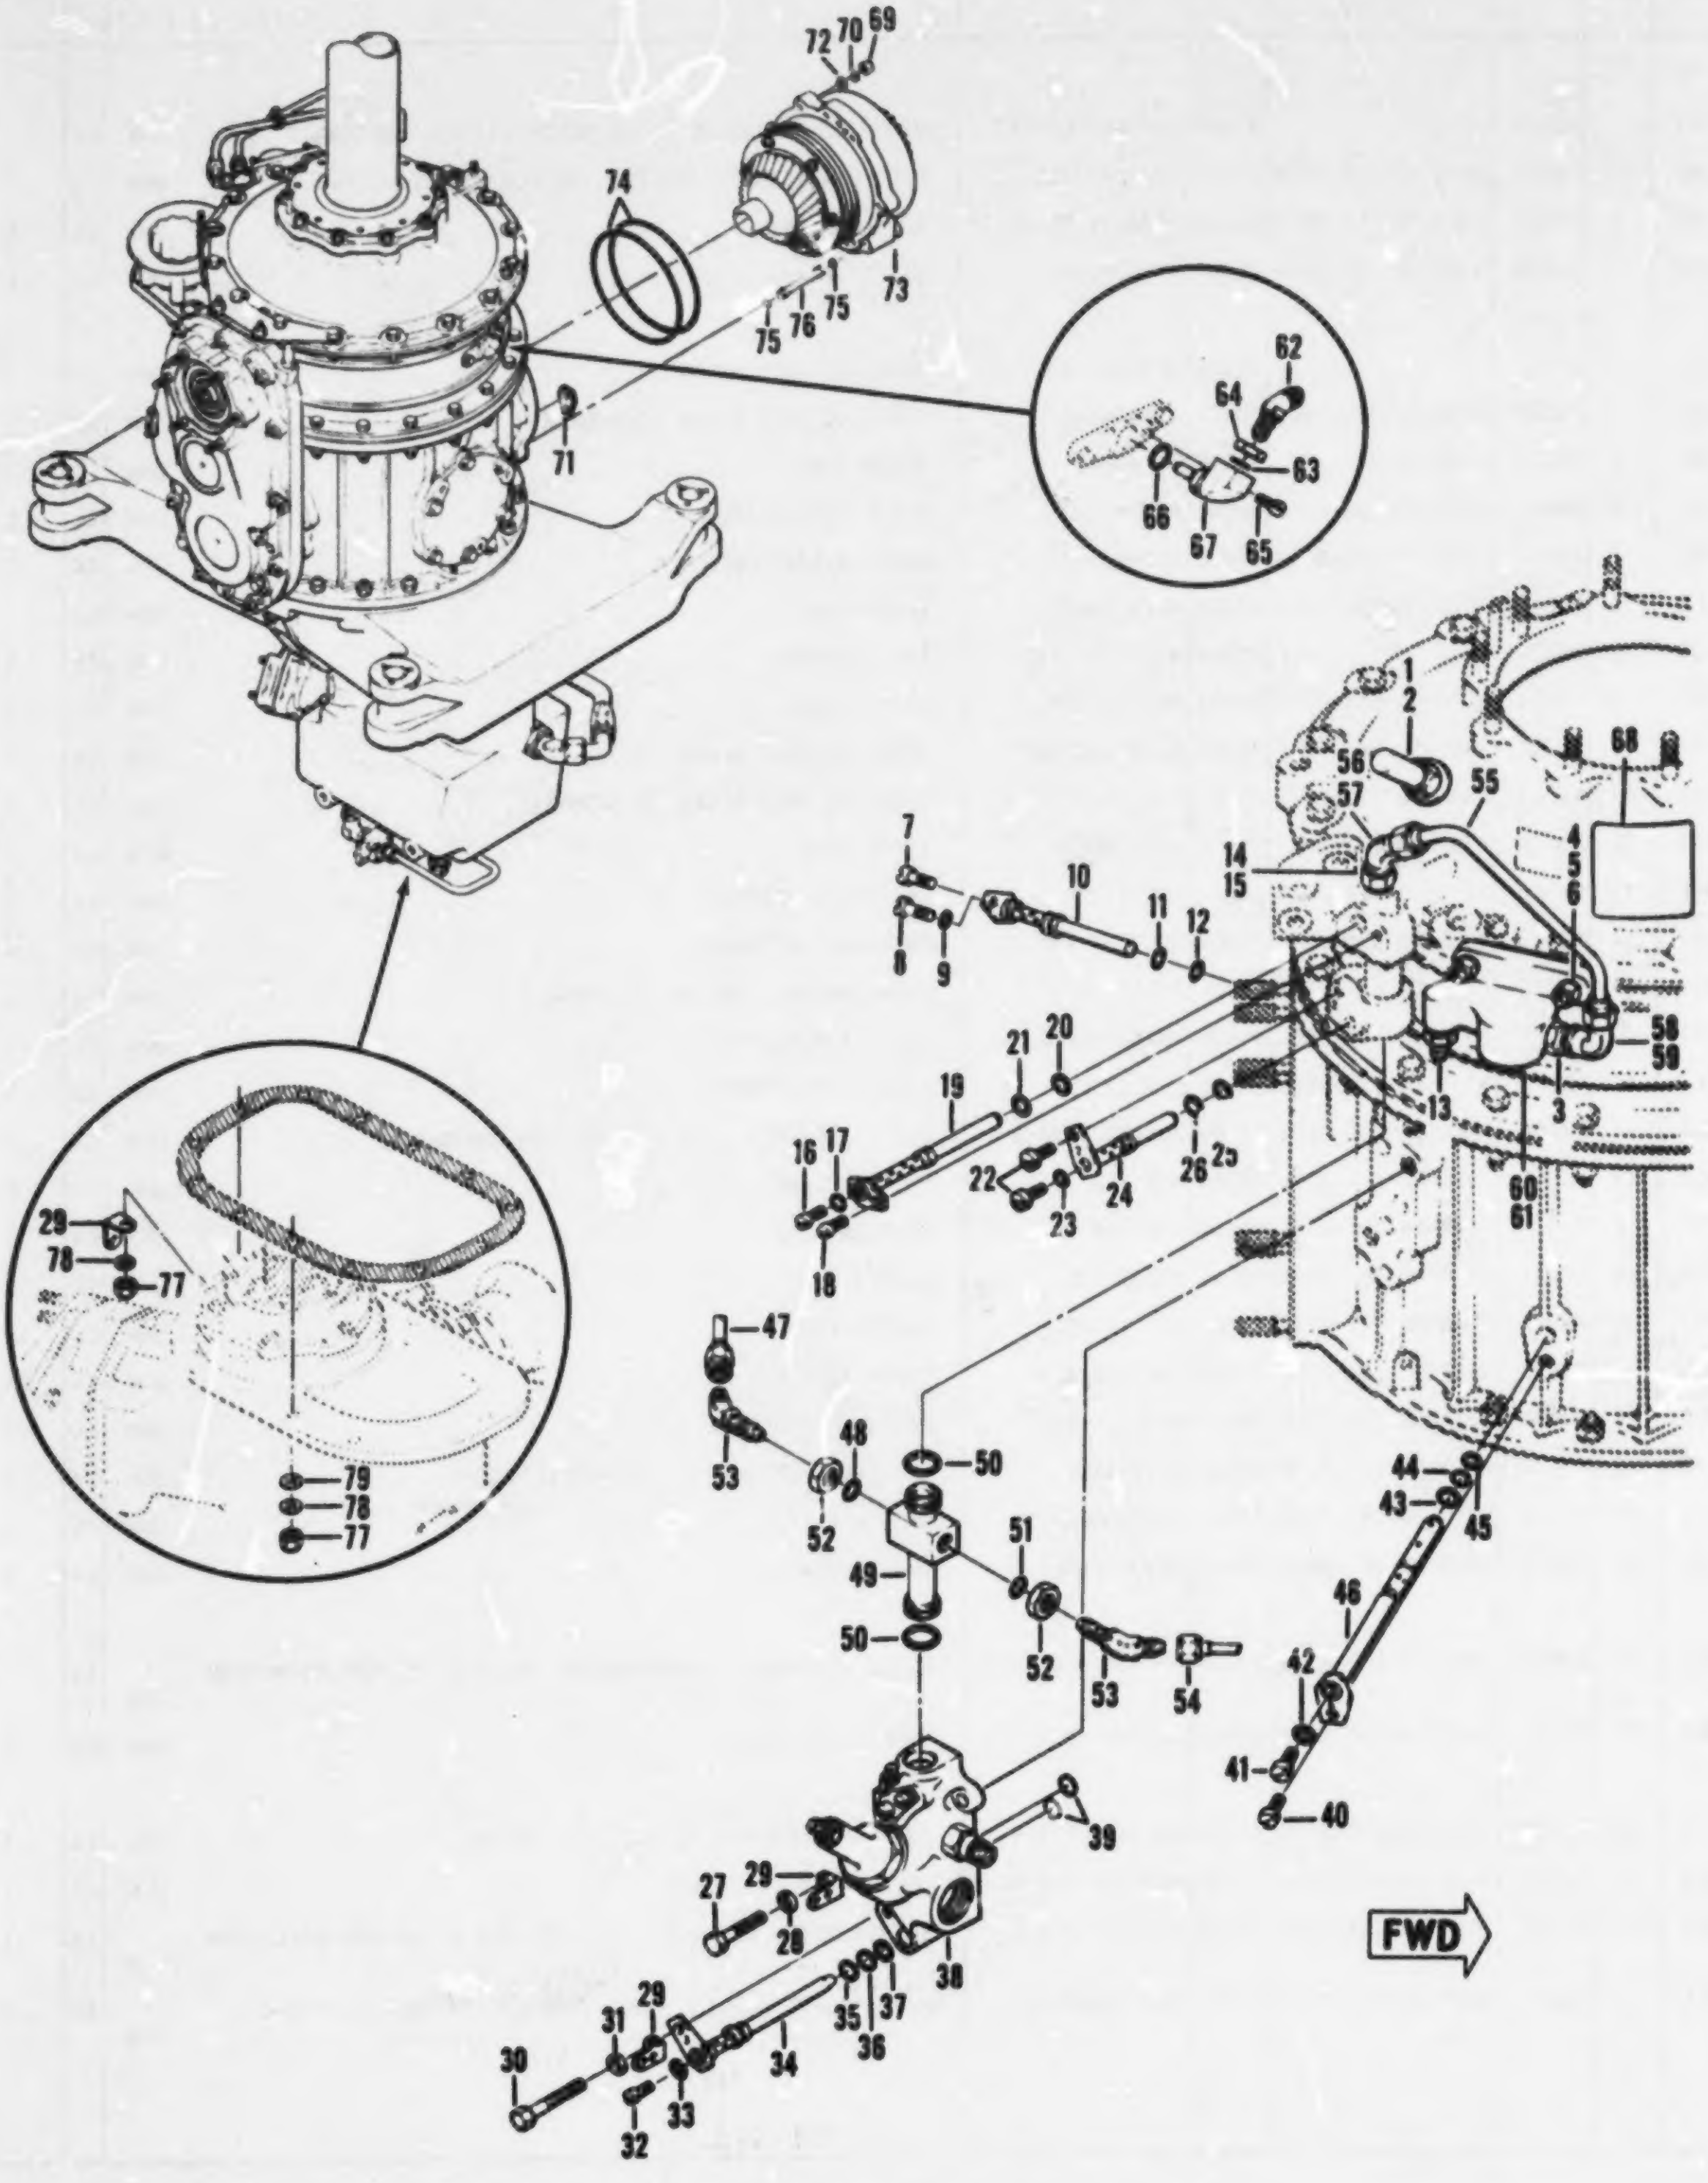
72
70
69
74
73
75
76
75
71
62
64
63
66
67
65
1
2
56
57
55
68
4
5
6
14
15
7
10
11
12
8
9
58
59
13
3
21
20
19
16
17
22
24
26
25
23
60
61
18
29
78
77
47
48
50
53
52
79
78
77
49
51
44
43
45
46
50
52
53
54
42
41
40
39
27
29
28
38
31
29
35
37
36
34
30
33
32
FWD

Figure 153. Transmission Assembly (Sheet 1 of 2)

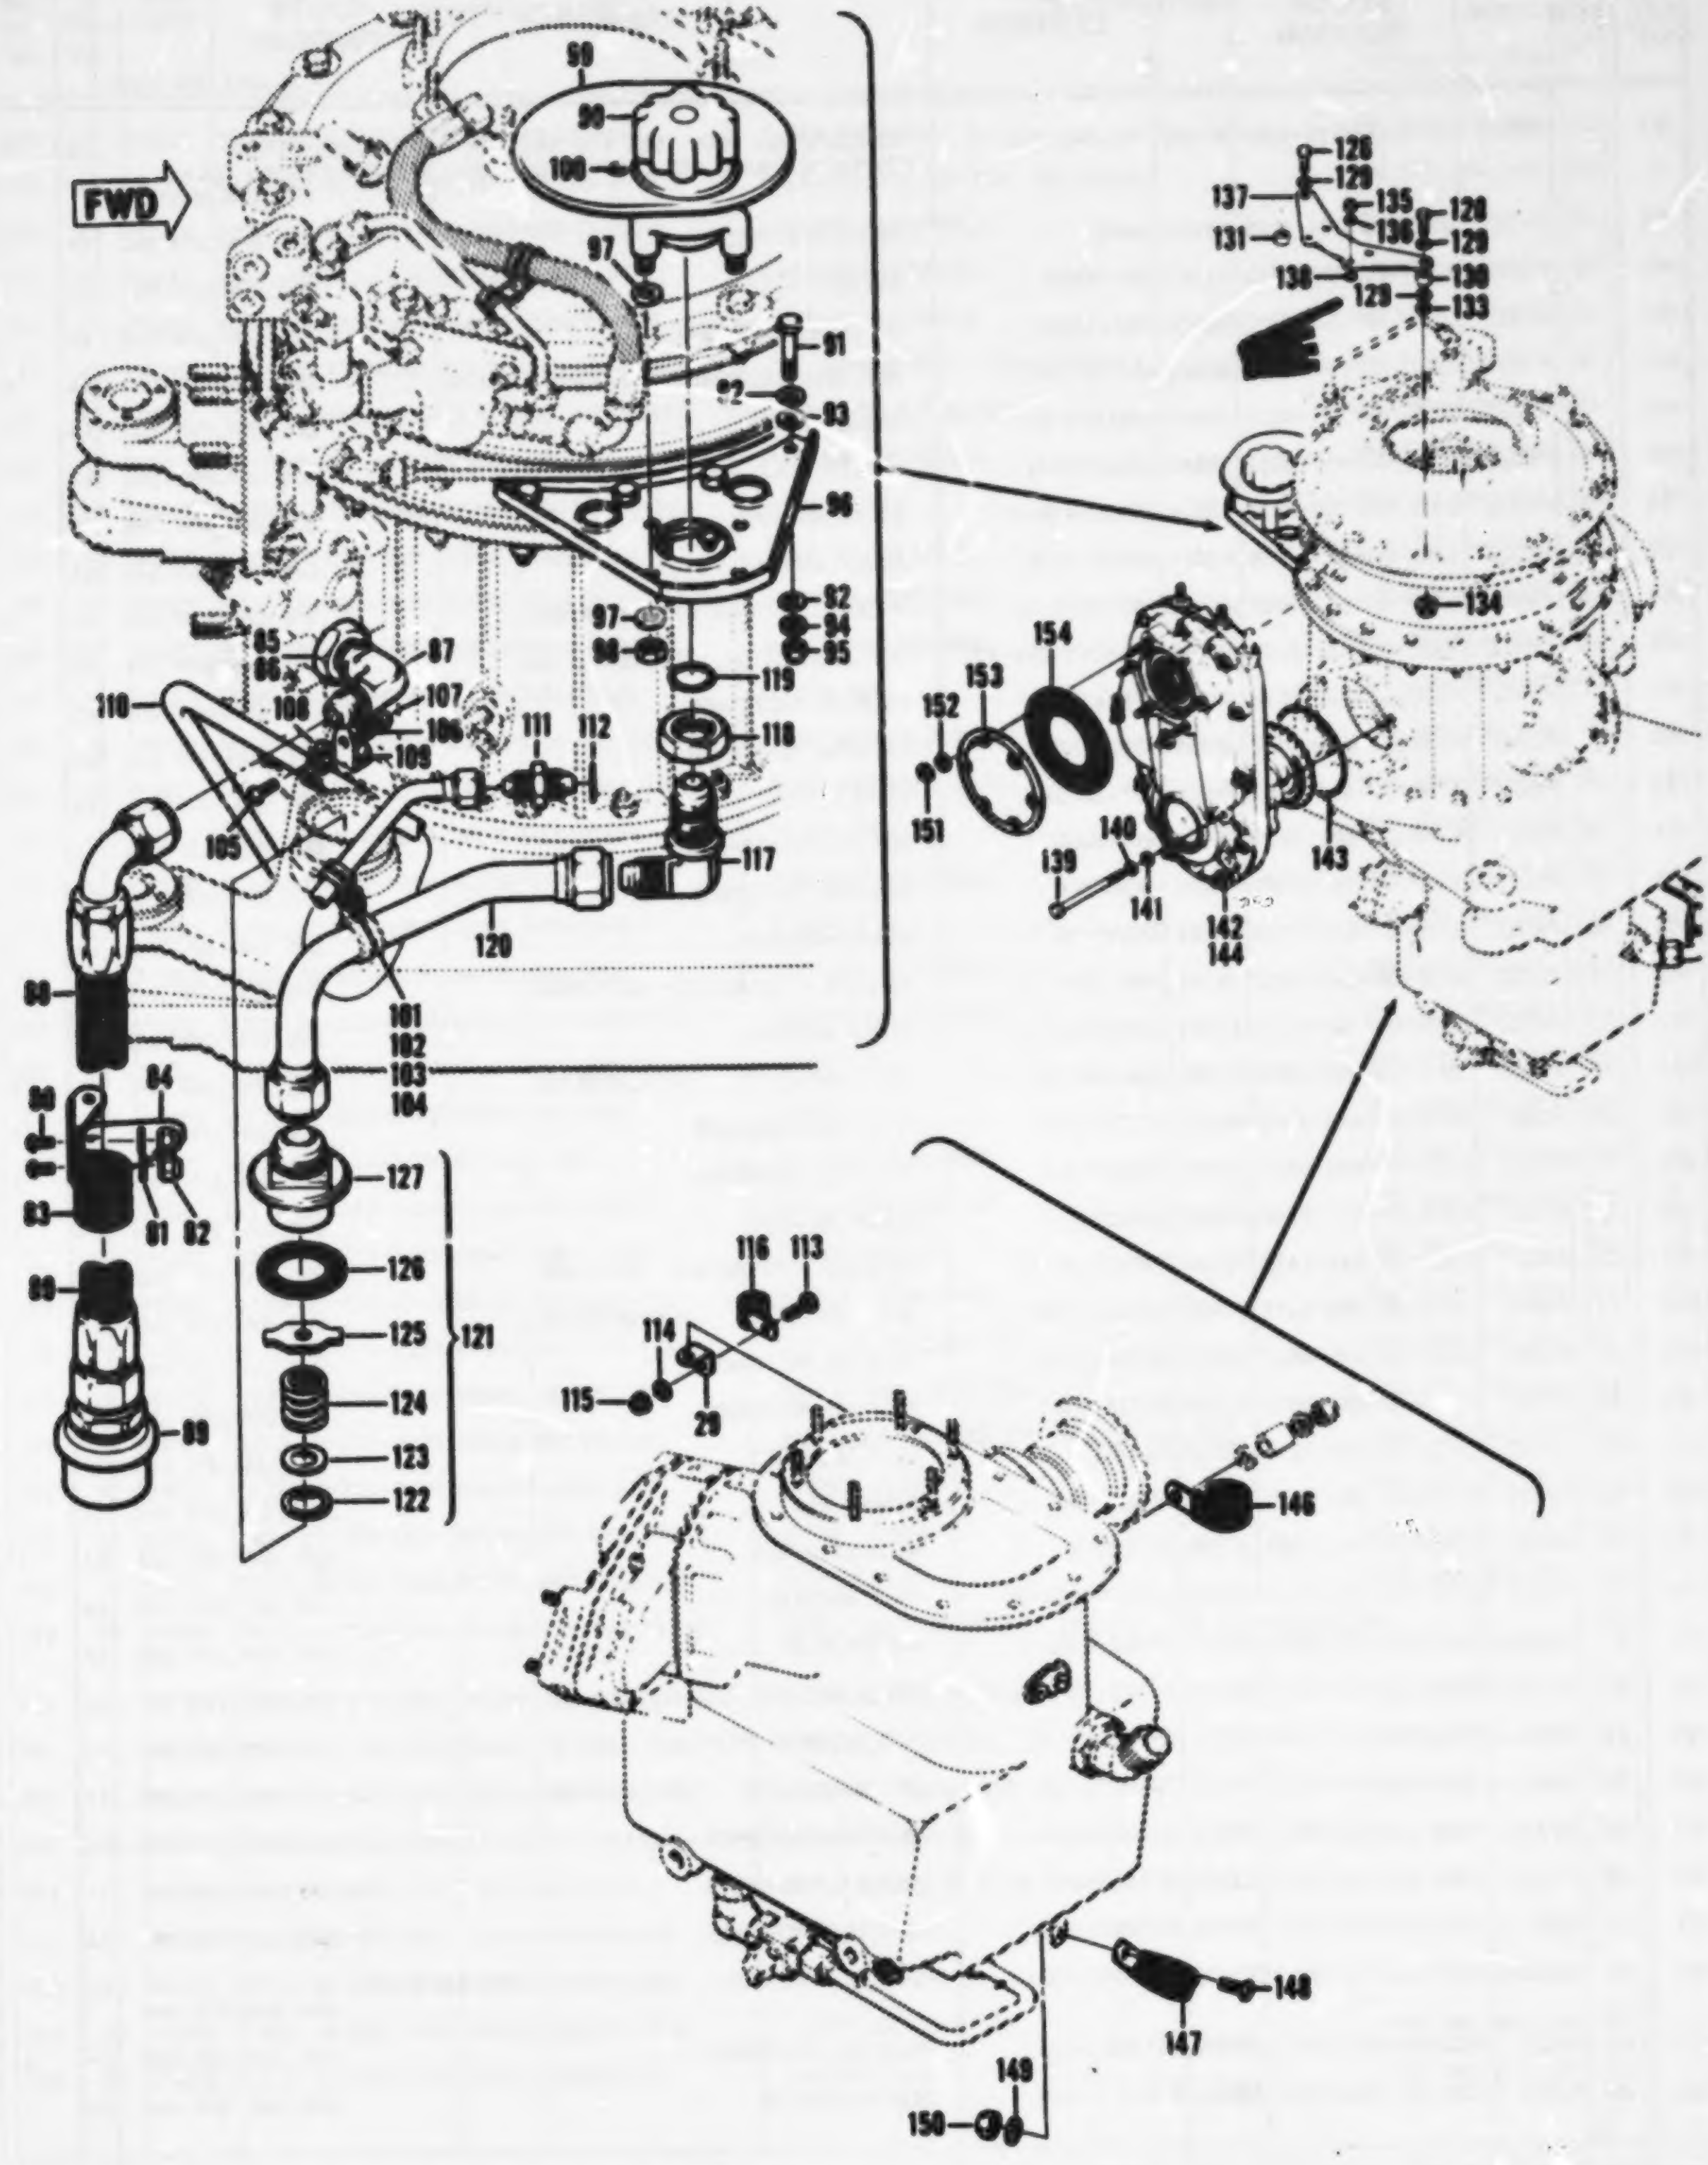
FWD
98
99
100
97
91
92
93
96
92
94
95
97
98
119
118
85
86
87
107
108
106
109
110
111
112
105
117
120
101
102
103
104
88
84
90
83
81
82
80
89
127
126
125
124
123
122
121
128
129
137
135
136
128
129
131
130
138
129
133
134
154
153
152
151
140
139
141
142
144
143
116
113
114
115
29
146
148
147
149
150

Figure 153. Transmission Assembly (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
153		AOODD	1615-00-919-1351	97499	205-040-001-17	TRANSMISSION ASSY SEE FIG. 150 FOR NHA ASSEMBLE FROM COMPONENT PARTS ARE LISTED FOR REPLACEMENT PURPOSES ONLY ... UHE,UHH,UHV,UHX	EA	1
153	1	PAOZZ	4820-00-091-4720	97484	A800	.VALVE,AIR PRESSU ... UHE,UHH,UHV,UHX	EA	1
153	2	PAOZZ	5330-00-290-9402	88044	AN123026	.GASKET ... UHE,UHH,UHV,UHX	EA	1
153	3	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON ... UHE,UHH,UHV,UHX	EA	1
153	4	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ... UHE,UHH,UHV,UHX	EA	2
153	5	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	2
153	6	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	2
153	7	PAOZZ	5305-00-150-9520	88044	AN502-416-6	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	1
153	8	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	1
153	9	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN RETAINER ... UHE,UHH,UHV,UHX	EA	1
153	10	PAOZZ	1615-00-898-6883	97499	204-040-288-11	.JET LUBRICATOR, TRANSMISSION ... UHE,UHH,UHV,UHX	EA	1
153	11	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
153	12	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
153	13	PAOZZ	4730-00-834-9560	96906	MS2439204	NIPPLE,TUBE ... UHE,UHH,UHV,UHX	EA	1
153	14	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON ... UHE,UHH,UHV,UHX	EA	1
153	15	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
153	16	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	1
153	17	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN RETAINER ... UHE,UHH,UHV,UHX	EA	1
153	18	PAOZZ	5305-00-150-9520	88044	AN502-416-6	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	1
153	19	PAOZZ	1615-00-898-6884	97499	204-040-261-13	.JET LUBRICATOR, TRANSMISSION ... UHE,UHH,UHV,UHX	EA	1
153	20	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
153	21	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
153	22	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	2
153	23	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN RETAINER ... UHE,UHH,UHV,UHX	EA	1
153	24	PAOZZ	1615-00-069-3312	97499	204-040-262-21	.JET LUBRICATOR, TRANSMISSION ... UHE,UHH,UHV,UHX	EA	1
153	25	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
153	26	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
153	27	PAOZZ	5306-00-182-2017	88044	AN4H6A	.BOLT,MACHINE ... UHE,UHH,UHV,UHX	EA	1
153	28	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	1
153	29	MFOZZ	5340-00-912-1903	97499	20-032-2	.BRACKET,ANGLE ... UHE,UHH,UHV,UHX	EA	4
153	30	PAOZZ	5306-00-727-3131	96906	MS20073-04-21	.BOLT,MACHINE ... UHE,UHH,UHV,UHX	EA	1
153	31	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT ... UHE,UHH,UHV,UHX	EA	1
153	32	PAOZZ	5305-00-150-9213	88044	AN502-10-6	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	1
153	33	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN ... UHE,UHH,UHV,UHX	EA	1
153	34	PAOZZ	1615-00-830-9763	97499	204-040-326-7	.JET LUBRICATOR, TRANSMISSION ... UHE,UHH,UHV,UHX	EA	1
153	35	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
153	36	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
153	37	PCOZZ	5330-00-580-5937	96906	MS29561-008	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	1
153	38	AOOOO	1560-00-874-0861	97499	204-040-393-1	.MANIFOLD ASSEMBLY SEE FIG. 177 FOR BREAKDOWN ... UHE,UHH,UHV,UHX	EA	1
153	39	PCOZZ	5330-00-800-5180	96906	MS29561-015	.PACKING,PREFORMED ... UHE,UHH,UHV,UHX	EA	2
153	40	PAOZZ	5305-00-150-9520	88044	AN502-416-6	.SCREW,MACHINE ... UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
153	41	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
153	42	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN RETAINER	UHE,UHH,UHV,UHX	EA	1
153	43	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
153	44	PCOZZ	5330-00-846-0602	96906	MS9241-010	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
153	45	PCOZZ	5330-00-580-5937	96906	MS29561-006	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
153	46	PAOZZ	1615-00-787-4265	97499	204-040-327-1	.JET LUBRICATOR, TRANSMISSION	UHE,UHH,UHV,UHX	EA	1
153	47	MFOZZ	4710-00-874-0865	97499	204-040-723-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
153	48	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
153	49	PAOZZ	4730-00-740-3366	97499	204-040-398-1	.FITTING,OIL	UHE,UHH,UHV,UHX	EA	1
153	50	XDOZZ	5330-00-585-1066	96906	MS29561-114	.PACKING,PREFORME	UHE,UHH,UHV,UHX	EA	2
153	51	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
153	52	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	2
153	53	PAOZZ	4730-00-803-5049	96906	MS24398D4	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	2
153	54	MFOZZ	4710-00-874-0864	97499	204-040-722-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
153	55	PAOZZ	4710-00-829-6848	97499	204-040-375-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
153	56	PAOZZ	4730-00-803-5049	96906	MS24398D4	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
153	57	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
153	58	PAOZZ	4730-00-725-4361	96906	MS24394D4	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
153	59	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
153	60	PAOZZ	1560-00-829-6846	97499	204-040-370-1	.MANIFOLD OIL PRESS	UHE,UHH,UHV,UHX	EA	1
153	61	PAOZZ	5365-00-859-2739	97499	204-040-394-1	.SPACER,PLATE	UHE,UHH,UHV,UHX	EA	1
153	62	PAOZZ	4730-00-803-5049	96906	MS24398D4	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	2
153	63	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
153	64	PAOZZ	5310-00-282-7823	96906	MS24400D4	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	2
153	65	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
153	66	PCOZZ	5330-00-702-4712	96906	MS29561-112	.PACKING,PREFORME	UHE,UHH,UHV,UHX	EA	2
153	67	PAOZZ	1615-00-475-2533	97499	205-040-135-1	.OIL JET ASSEMBLY,PL	UHE,UHH,UHV,UHX	EA	2
153	68	MFOZZ	9905-00-532-6678	96906	MS27253-2	.PLATE,IDENTIFICATIO	UHE,UHH,UHV,UHX	EA	1
153	69	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	7
153	70	PAOZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	6
153	71	MFOZZ	5975-00-913-0930	97499	204-040-732-1	.STRAP,SUPPORT	UHE,UHH,UHV,UHX	EA	1
153	72	PAOZZ	5310-00-187-2396	88044	AN960PD616L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	7
153	73	PAODD	1615-00-134-3087	97499	205-040-263-3	.QUILL ASSY TRANSMIS SEE FIG 166 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
153	73	PAODD	1615-01-112-5904	97499	205-040-263-111	.QUILL ASSEMBLY,TRAN	UHE,UHH,UHV,UHX	EA	1
153	74	PCOZZ	5330-00-726-9307	96906	MS29561-250	.PACKING, PREFORM	UHE,UHH,UHV,UHX	EA	2
153	75	PCOZZ	5330-00-685-1065	96906	MS29561-113	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
153	76	PAOZZ	1615-00-830-9764	97499	204-040-341-1	.TUBE,OIL DRAIN, TRANSMISSION	UHE,UHH,UHV,UHX	EA	1
153	77	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	13
153	78	PAOZZ	5310-00-187-2364	88044	AN960PD416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	12
153	79	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	13
153	80	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
153	81	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
153	82	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
153	83	PAOZZ	5340-00-020 0392	96906	MS21040D15	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
153	84	MFOZZ		97499	205-040-154-3	.BRACKET	UHE,UHH,UHV,UHX	EA	1
153	85	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORME	UHE,UHH,UHV,UHX	EA	1
153	86	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
153	87	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
153	88	MFOZZ		96906	MS87028K360C	.HOSE ASSEMBLY,NONME	UHE,UHH,UHV,UHX	EA	1
153	89	PAOZZ	4730-00-773-2621	00624	375504-12	.COUPLING HALF,QUICK DISCONNECT	UHE,UHH,UHV,UHX	EA	1
153	90	PAOZZ	1615-00-701-9935	78567	FC3731	.CAP ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
153	91	PAOZZ	5305-00-180-1489	88044	AN6-17A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
153	92	PAOZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER, FLAT	UHE,UHH,UHV,UHX	EA	4
153	93	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
153	94	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	8
153	95	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	4
153	96	PAOZZ	1560-00-682-2326	97499	204-040-731-3	.BRACKET ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
153	97	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	8
153	98	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	4
153	99	PAOOO	1560-00-961-1345	97499	205-040-160-1	.FILLER ASSY,NECK, SCUPPER OIL,TRANSMISSION	UHE,UHH,UHV,UHX	EA	1
153	100	PAOZZ	1615-00-690-7294	78567	FC3652	..ADAPTER ASSEMBLY,FI	UHE,UHH,UHV,UHX	EA	1
153	101	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
153	102	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
153	103	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
153	104	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
153	105	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
153	106	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
153	107	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
153	108	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
153	109	MFOZZ		97499	205-040-131-1	.BRACKET,ANGLE	UHE,UHH,UHV,UHX	EA	1
153	110	MFOZZ	4710-00-075-3370	97499	205-040-163-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
153	111	PAOZZ	4730-00-684-6916	96906	MS24392D6	.NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
153	112	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
153	113	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	1
153	114	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
153	115	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
153	116	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
153	117	PAOZZ	4730-00-722-7216	96906	MS24394D16	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
153	118	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
153	119	PBOZZ	5330-00-558-0364	80205	NAS617-16	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
153	120	PAOZZ	4710-00-968-1320	97499	205-040-162-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
153	121	AOOOZ		97499	205-040-136-1	.CAP ASSEMBLY,	UHE,UHH,UHV,UHX	EA	1
153	122	PAOZZ	5365-00-983-2504	80756	RRT125	..RING,RETAINING	UHE,UHH,UHV,UHX	EA	1
153	123	PAOZZ	5310-00-187-2403	88044	AN960PD1016	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
153	124	PAOZZ	5360-00-990-0002	97499	205-040-139-1	. .SPRING,HELICAL,COMP .... UHE,UHH,UHV,UHX	EA	1
153	125	PAOZZ	1615-00-992-6474	97499	205-040-138-1	. .PLATE,OIL CAP, ... UHE,UHH,UHV,UHX	EA	1
153	126	PAOZZ	5330-00-987-1432	97499	205-040-140-1	. .GASKET .... UHE,UHH,UHV,UHX	EA	1
153	127	PAOZZ	1615-00-944-7287	97499	205-040-124-1	. .ADAPTER,CAP ASSEMBL TRANSMISSION .... UHE,UHH,UHV,UHX	EA	1
153	128	PAOZZ	5306-00-206-3639	88044	AN6-16A	.BOLT,MACHINE .... UHE,UHH,UHV,UHX	EA	4
153	129	PAOZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	11
153	130	PAOZZ	5365-00-580-4837	80205	NAS43HT6-28	.SPACER,SLEEVE .... UHE,UHH,UHV,UHX	EA	3
153	131	PAOZZ	5365-00-950-6477	80205	NAS43HT6-26	.SPACER,SLEEVE .... UHE,UHH,UHV,UHX	EA	1
153	133	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	4
153	134	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	4
153	135	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	2
153	136	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	2
153	137	PAOZZ	1560-00-992-6471	97499	205-040-114-1	.BRACKET,GENERATOR .... UHE,UHH,UHV,UHX	EA	1
153	138	PAOZZ	5365-00-989-2978	97499	120-037E24-13	.SHIM .... UHE,UHH,UHV,UHX	EA	1
153	139	PAOZZ	5306-00-180-0313	88044	AN6-35A	.BOLT,MACHINE .... UHE,UHH,UHV,UHX	EA	5
153	140	PAOZZ	5310-00-167-0821	88044	AN960-516	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	5
153	141	PAOZZ	5310-00-847-2719	80205	NAS1197-616	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	5
153	142	PAODD	1615-00-987-5152	97499	205-040-200-1	.QUILL ASSEMBLY, TRANSMISSION,SEE FIG 168 FOR BREAKDOWN .... UHE,UHH,UHV,UHX	EA	1
153	142	PAODD	1615-01-080-2057	97499	205-040-205-1	.QUILL ASSEMBLY, ... UHE,UHX	EA	1
153	143	PCOZZ	5330-00-726-1236	96906	MS29561-246	.PACKING,PREFORMED .... UHE,UHH,UHV,UHX	EA	1
153	144	PAOZZ	5305-00-725-3503	96906	MS51964-97	.SETSCREW .... UHE,UHH,UHV,UHX	EA	1
153	146	MFOZZ		97499	205-040-156-3	.CLAMP,LOOP TRANSMISSION .... UHE,UHH,UHV,UHX	EA	1
153	147	PAOZZ	5340-00-989-4572	81996	EAB700D15	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	1
153	148	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	1
153	149	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	1
153	150	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	1
153	151	PAOZZ	5310-00-167-1346	88044	AN315-6R	.NUT,PLAIN,HEXAGON .... UHE,UHH,UHV,UHX	EA	6
153	152	PAOZZ	5310-00-167-0804	88044	AN960C616	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	6
153	153	PAOZZ	2995-00-313-1433	88044	AN100041	.COVFR,ENGINE ACCESS .... UHE,UHH,UHV,UHX	EA	1
153	154	PCOZZ	5330-00-023-7626	96906	MS9136-01	.GASKET .... UHE,UHH,UHV,UHX	EA	1

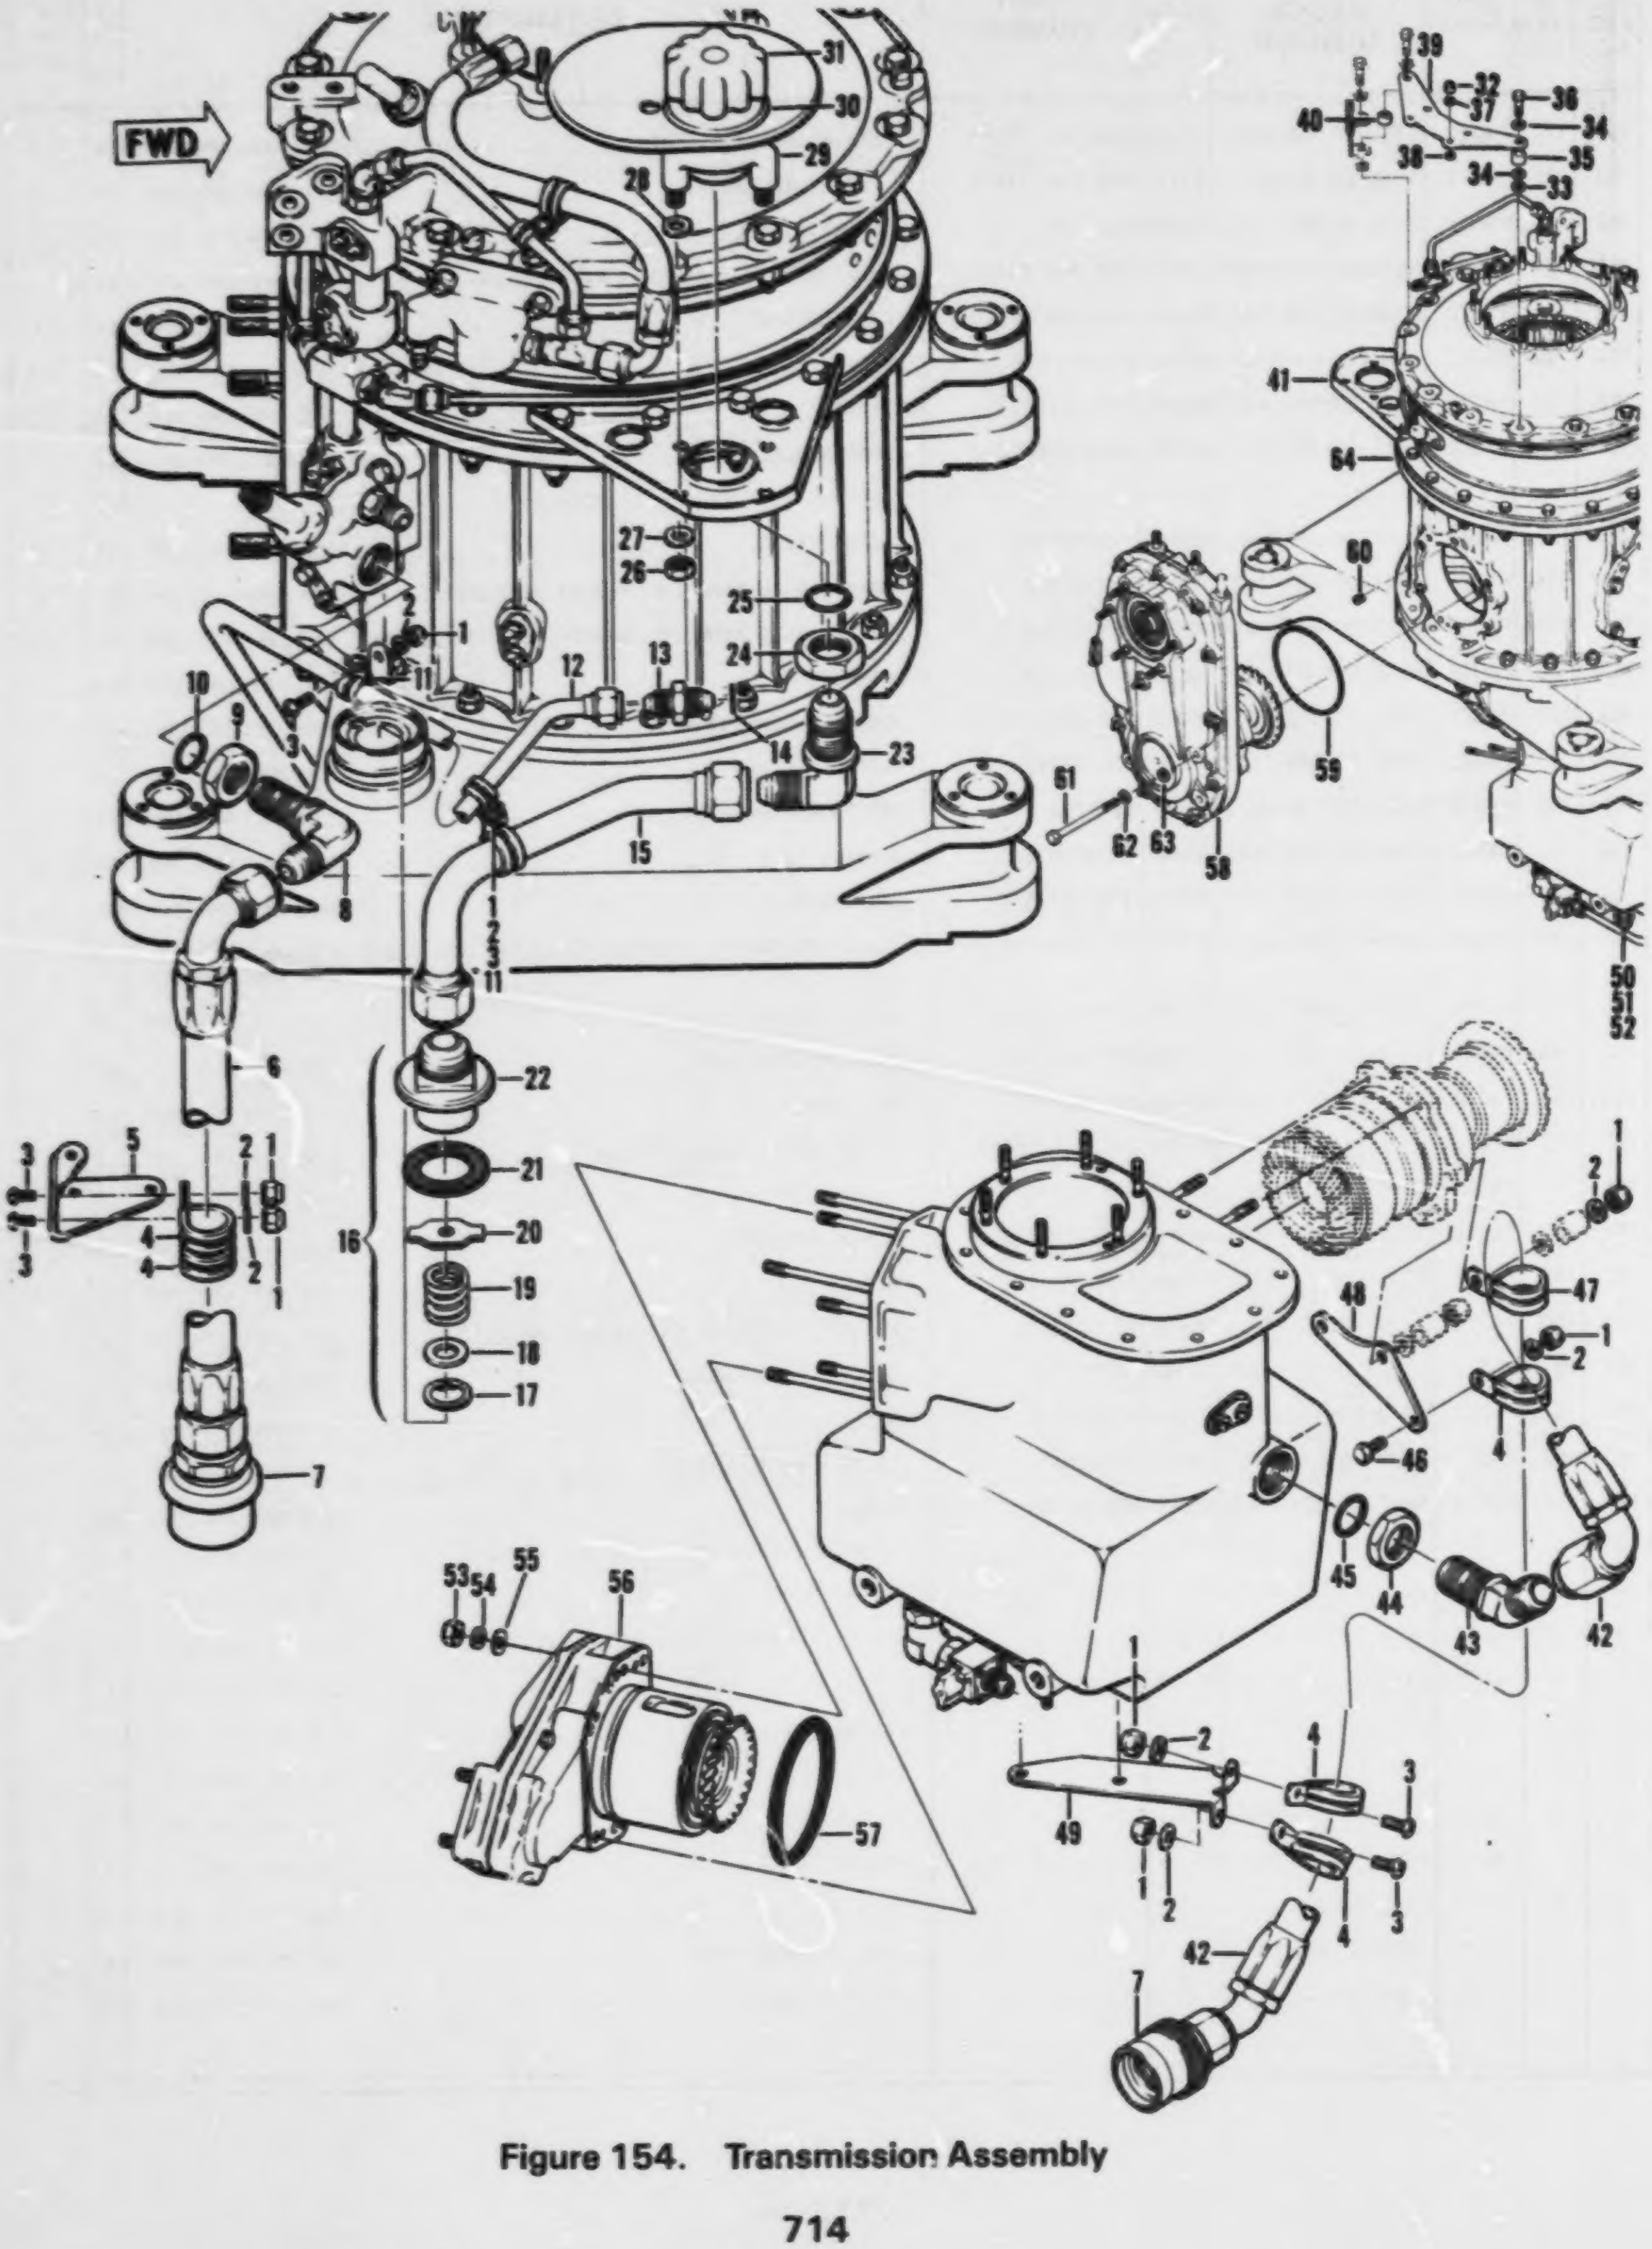
FWD
31
30
29
28
39
32
37
36
40
34
38
35
34
33
41
64
60
27
26
25
24
1
2
11
12
13
14
23
10
9
3
59
61
62
63
58
15
8
1
2
3
11
50
51
52
6
22
21
20
16
19
18
17
3
5
2
1
3
4
4
2
1
3
7
48
47
1
2
1
2
46
4
45
44
43
42
53
54
55
56
57
1
2
4
3
49
1
2
4
3
42
7

Figure 154. Transmission Assembly

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION		(7) U/M	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.						USABLE ON CODE		
154		A0000		97499	205-040-001-17	TRANSMISSION ASSEMB SEE FIG 150 FOR NHA, ASSEMBLE FROM COMPONENT PARTS ARE LISTED FOR REPLACEMENT PURPOSES ONLY	UHE,UHH,UHV,UHX	EA	1
154	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	7
154	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	7
154	3	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	6
154	4	PAOZZ	5340-00-256-7342	96906	MS21122-14	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	5
154	5	PAOZZ	1560-00-911-8599	97499	205-040-123-3	.BRACKET,HOSE SUPPOR	UHE,UHH,UHV,UHX	EA	1
154	6	MFOZZ		96906	MS87028K360C	.HOSE ASSEMBLY,NONME	UHE,UHH,UHV,UHX	EA	1
154	7	PAOZZ	4730-00-773-2621	00624	375504-12	.COUPLING HALF,QUICK DISCONNECT	UHE,UHH,UHV,UHX	EA	2
154	8	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
154	9	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
154	10	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
154	11	PAOZZ	5340-00-187-6023	96906	MS21122-6	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	2
154	12	MFOZZ		97499	205-040-163-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
154	13	PAOZZ	4730-00-684-6916	96906	MS2439206	.NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
154	14	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
154	15	PAOZZ	4710-00-958-1320	97499	205-040-162-1	.TUBE ASSEMBLY,METAL	UHE,UHH,UHV,UHX	EA	1
154	16	AOOOZ		97499	205-040-136-1	.CAP ASSEMBLY, TRANSMISSION	UHE,UHH,UHV,UHX	EA	1
154	17	PAOZZ	5365-00-983-2504	80756	RRT125	..RING,RETAINING	UHE,UHH,UHV,UHX	EA	1
154	18	PAOZZ	5310-00-187-2403	88044	AN960PD1016	..WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
154	19	PAOZZ	5360-00-990-0002	97499	205-040-139-1	..SPRING,HELICAL,COMP	UHE,UHH,UHV,UHX	EA	1
154	20	PAOZZ	1615-00-992-6474	97499	205-040-138-1	..PLATE,OIL CAP TRANSMISSION	UHE,UHH,UHV,UHX	EA	1
154	21	PAOZZ	5330-00-987-1432	97499	205-040-140-1	..GASKET	UHE,UHH,UHV,UHX	EA	1
154	22	PAOZZ	1615-00-944-7287	97499	205-040-124-1	..ADAPTER,CAP ASSEMBL TRANSMISSION	UHE,UHH,UHV,UHX	EA	1
154	23	PAOZZ	4730-00-722-7216	96906	MS24394D16	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
154	24	PAOZZ	5310-00-949-6143	88044	AN924-16D	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
154	25	PBOZZ	5330-00-558-0364	80205	NAS617-16	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
154	26	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	4
154	27	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
154	28	PAOZZ	5310-00-844-5081	80205	NAS1197-416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
154	29	PAOOO	1560-00-961-1345	97499	205-040-160-1	.FILLER ASSEMBLY,NEC SCUPPER OIL,TRANSMISSION	UHE,UHH,UHV,UHX	EA	1
154	30	PAOZZ	1615-00-690-7294	78567	FC3662	..ADAPTER ASSEMBLY,FI	UHE,UHH,UHV,UHX	EA	1
154	31	PAOZZ	1615-00-701-9935	78567	FC3731	.CAP ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
154	32	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	6
154	33	PAOZZ	5310-00-847-2719	80205	NAS1197-616	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
154	34	PAOZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	11
154	35	PAOZZ	5365-00-580-4837	80205	NAS43HT6-28	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	3
154	36	PAOZZ	5306-00-208-3639	88044	AN6-16A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
154	37	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
154	38	PAOZZ	5365-00-989-2978	97499	120-037E24-13	.SHIM	UHE,UHH,UHV,UHX	EA	1
154	39	PAOZZ	1560-00-992-6471	97499	205-040-114-1	.BRACKET,GENERATOR	UHE,UHH,UHV,UHX	EA	1
154	40	PAOZZ	5365-00-950-6477	80205	NAS43HT6-26	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
164	42	MFOZZ		96906	MS87028K322E140	.HOSE ASSEMBLY....................UHE,UHH,UHV,UHX	EA	1
164	43	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW,TUBE P/N MS24398D12 IS ALTERNATE ELBOW ....UHE,UHH,UHV,UHX	EA	1
164	43	PAOZZ	4730-00-803-5051	96906	MS24398D12	.ELBOW,TUBE ALTERNATE FOR 90 DEG.ELBOW P/N MS24394D12 ....UHE,UHH,UHV,UHX	EA	1
164	44	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON....................UHE,UHH,UHV,UHX	EA	1
164	45	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED....................UHE,UHH,UHV,UHX	EA	1
164	46	PAOZZ	5306-00-722-0393	88044	AN3-4A	.BOLT,MACHINE....................UHE,UHH,UHV,UHX	EA	1
164	47	MFOZZ		97499	205-040-166-3	.CLAMP,LOOP....................UHE,UHH,UHV,UHX	EA	1
164	48	MFOZZ		97499	205-040-170-1	.BRACKET,HOSE SUPPOR....................UHE,UHH,UHV,UHX	EA	1
164	49	MFOZZ		97499	205-040-169-1	.BRACKET,HOSE SUPPOR....................UHE,UHH,UHV,UHX	EA	1
164	50	PAOZZ	4730-00-839-0976	00624	375200-6	.COUPLING HALF,QUICK DISCONNECT....................UHE,UHH,UHV,UHX	EA	1
164	51	PAOZZ	5310-00-638-2606	96906	MS24400D6	.NUT,PLAIN,HEXAGON....................UHE,UHH,UHV,UHX	EA	1
164	52	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED....................UHE,UHH,UHV,UHX	EA	1
164	53	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON....................UHE,UHH,UHV,UHX	EA	2
164	54	PAOZZ	5310-00-167-0836	88044	AN960-516L	.WASHER,FLAT....................UHE,UHH,UHV,UHX	EA	2
164	55	PAOZZ	5310-00-825-4306	80205	NAS1197-516	.WASHER,FLAT....................UHE,UHH,UHV,UHX	EA	2
164	56	PAODO	1615-00-829-6845	97499	204-040-367-1	.QUILL ASSEMBLY SEE FIG. 169 FOR BREAKDOWN....UHE,UHH,UHV,UHX	EA	1
164	57	PCOZZ	5330-00-726-4153	96906	MS29561-237	.PACKING,PREFORMED....................UHE,UHH,UHV,UHX	EA	1
164	58	PAODO	1615-00-987-5152	97499	205-040-200-1	.QUILL ASSEMBLY, TRANSMISSION,SEE FIG 168 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
164	58	PAODO	1615-01-080-2057	97499	205-040-205-1	.QUILL ASSEMBLY, TRANSMISSION SEE FIG. 168 FOR BREAKDOWN ....UHE,UHX	EA	1
164	59	PCOZZ	5330-00-726-1236	96906	MS29561-248	.PACKING,PREFORMED....................UHE,UHH,UHV,UHX	EA	1
164	60	PAOZZ	5305-00-725-3503	96906	MS51964-97	.SETSCREW....................UHE,UHH,UHV,UHX	EA	1
164	61	PAOZZ	5306-00-180-0313	88044	AN6-35A	.BOLT,MACHINE....................UHE,UHH,UHV,UHX	EA	5
164	62	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT....................UHE,UHH,UHV,UHX	EA	5
164	63	PAOZZ	5310-00-847-2719	80205	NAS1197-616	.WASHER,FLAT....................UHE,UHH,UHV,UHX	EA	5
164	64	PAODO	1615-00-183-0834	97499	204-040-016-5	.TRANSMISSION ASSY,H SEE FIG. 155, 166 & 169 FOR BREAKDOWN ....UHE,UHH,UHV,UHX	EA	1
164		PAODO	8145-00-701-9867	97499	204-030MUSC1	.SHIPPING AND STORAG E CONTAINER....................UHE,UHH,UHV,UHX	EA	1

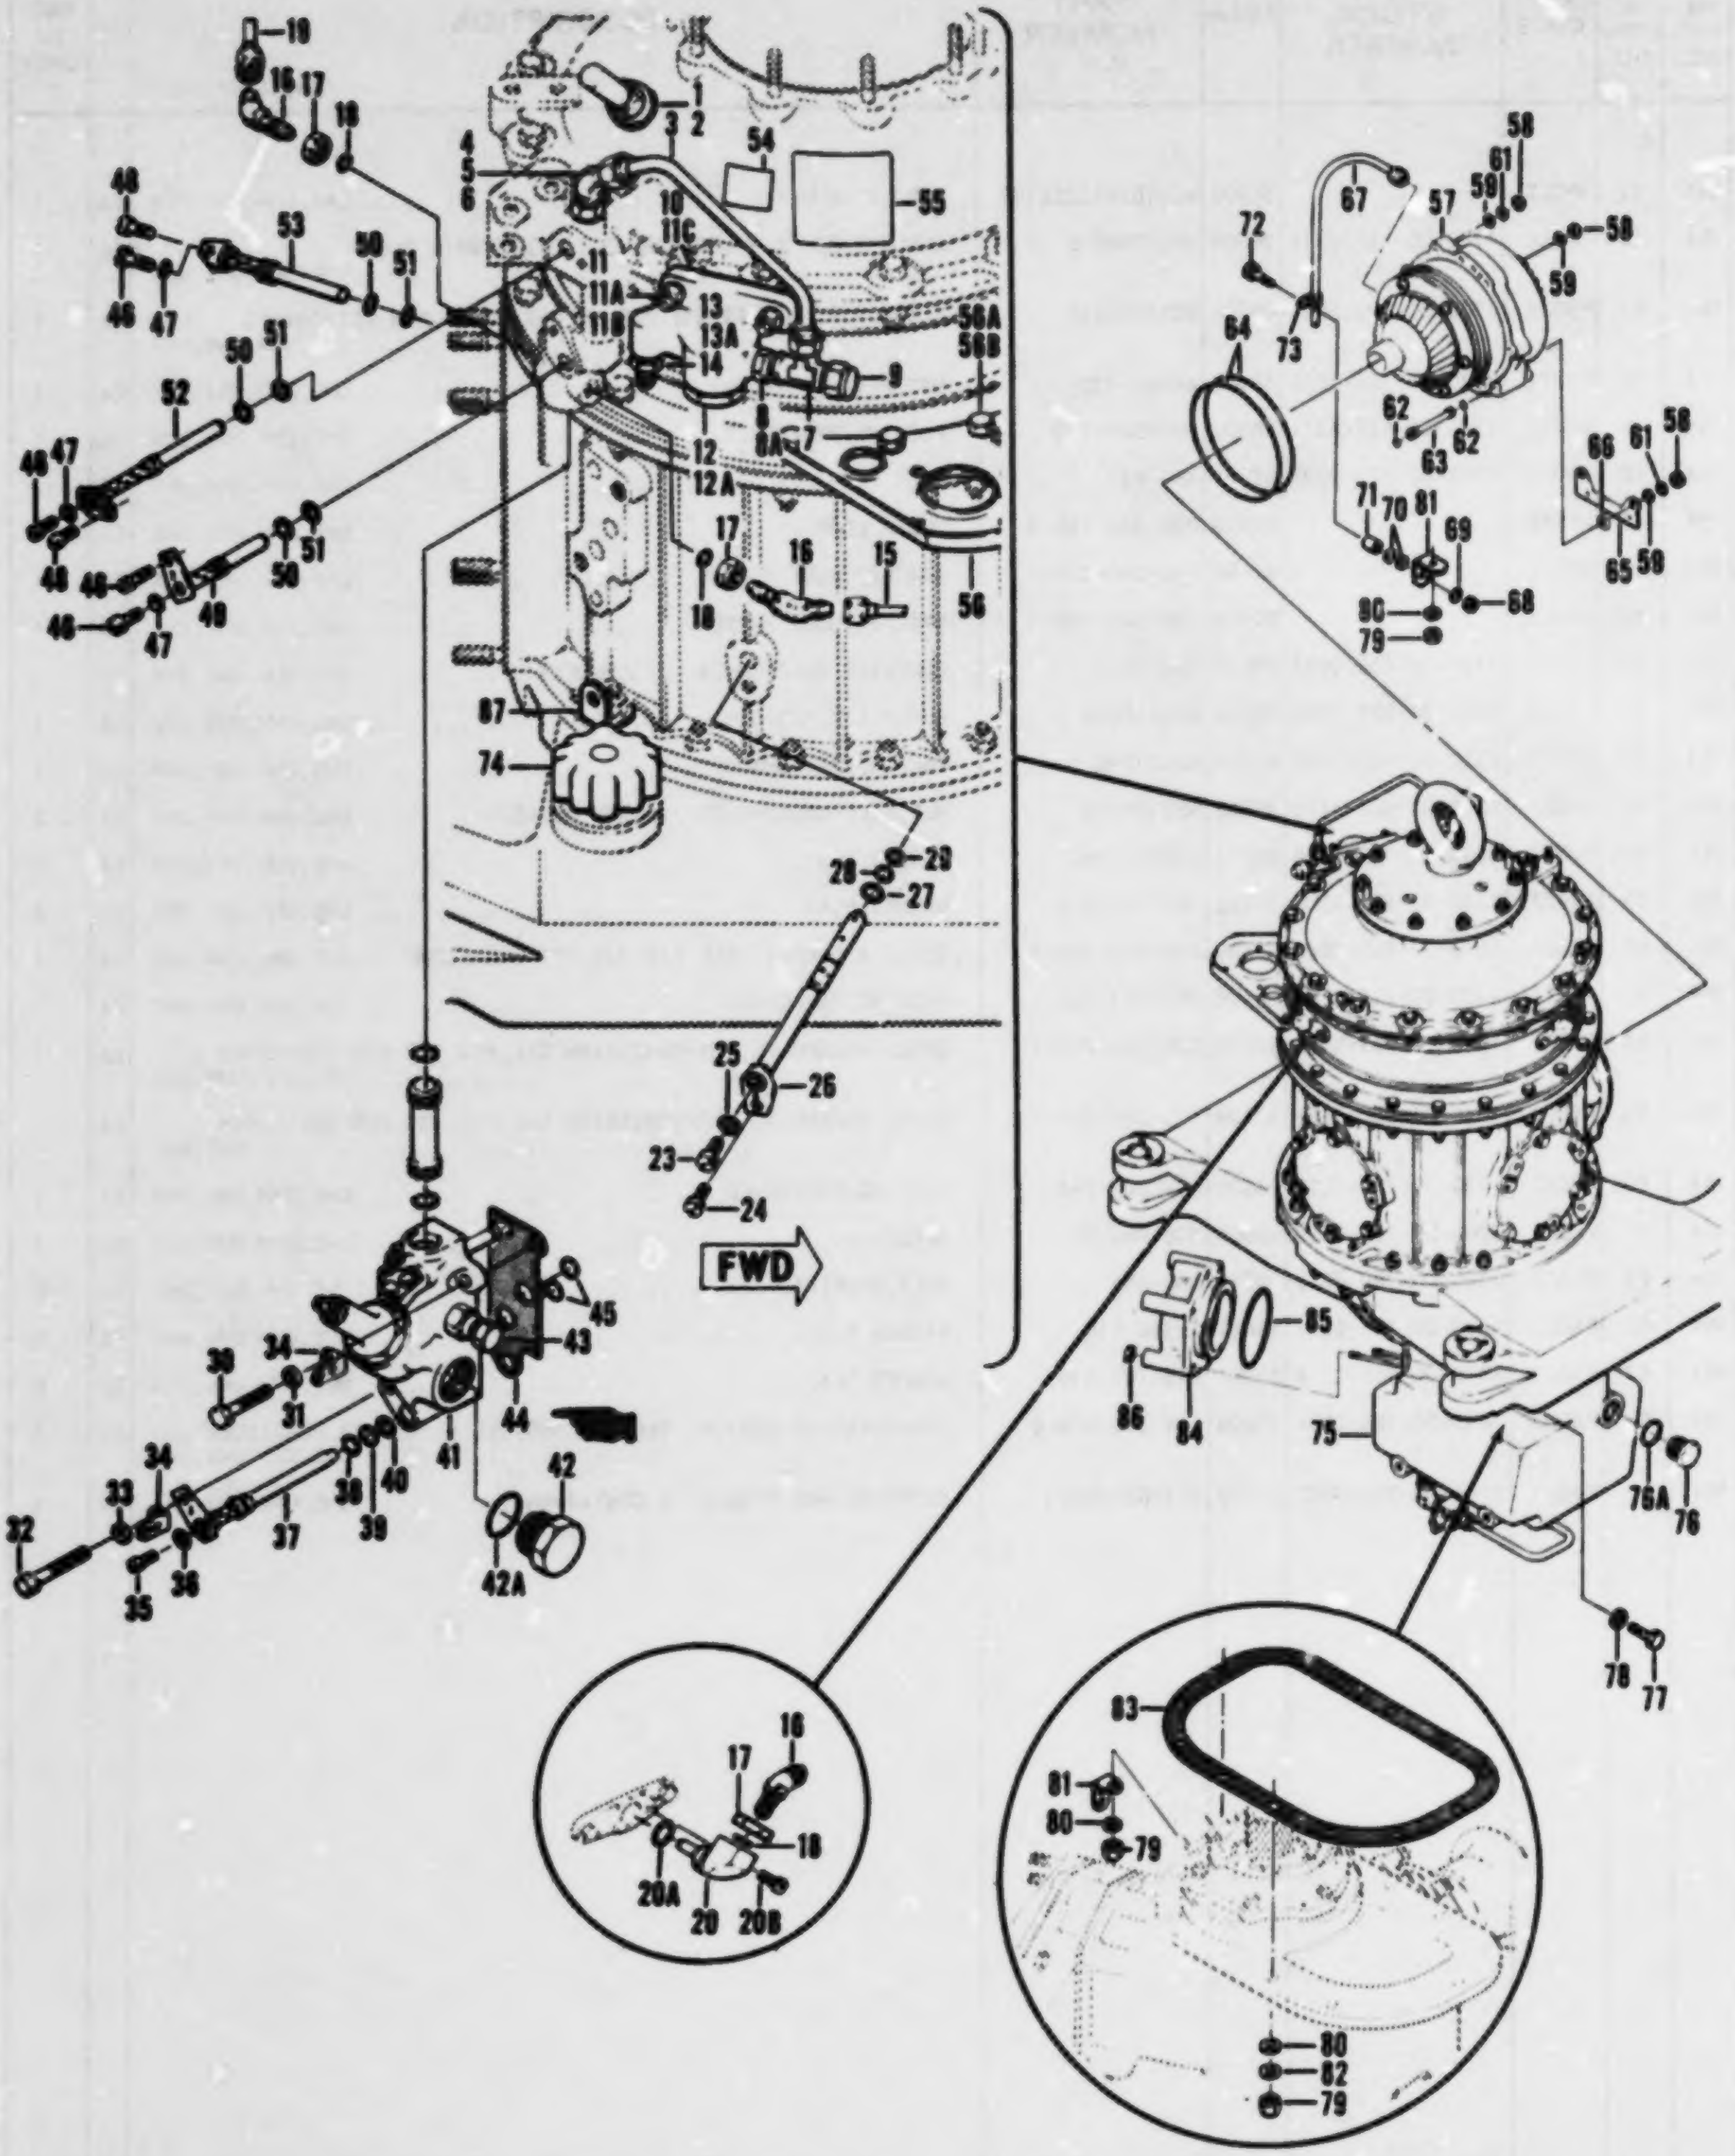
19
16
17
18
1
2
3
4
5
6
54
55
48
53
46
47
50
51
10
11C
11
11A
11B
13
13A
14
9
56A
56B
52
8
8A
7
12
12A
48
47
46
49
17
16
15
18
56
87
74
28
29
27
25
26
23
24
FWD
45
43
44
42
42A
41
30
31
34
32
33
35
36
37
38
39
40
58
61
59
67
57
72
73
64
62
63
66
65
71
70
81
69
68
80
79
85
84
86
75
76A
76
78
77
83
16
17
18
20A
20
20B
81
80
79
80
82
79

Figure 155. Transmission Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
155		PAOOO	1615-00-183-0834	97499	204-040-016-5	TRANSMISSION ASSY, SEE FIG. 157 & 154 FOR NHA. SEE FIG. 156 & 159 FOR BALANCE OF BREAKDOWN......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	1	PAOZZ	4820-00-091-4720	97484	A800	.VALVE,AIR PRESS..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	2	PAOZZ	5330-00-290-9402	88044	AN123025	.GASKET..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	3	PAOZZ	4710-00-829-6848	97499	204-040-375-1	.TUBE ASSEMBLY,METAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	4	PAOZZ	4730-00-803-5049	96906	MS2439604	.ELBOW,TUBE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	5	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	6	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	7	PAOZZ	4730-00-720-4984	96906	MS2439004	.TEE,TUBE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	8	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	8A	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	9	XDOZZ	4370-00-221-2115	88044	AN929-4	.CAP,TUBE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	10	PAOZZ	1560-00-829-6846	97499	204-040-370-1	.MANIFOLD,OIL PRESSU..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	11	PAOZZ	5310-00-807-1475	96906	MS21042L4	NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	11A	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	11B	PAOZZ	5310-00-167-0836	88044	AN960-416L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	11C	PAOZZ	5365-00-859-2739	97499	204-040-394-1	.SPACER,PLATE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	12	PAOZZ	5365-00-275-8506	88044	AN814-12DL	.PLUG,MACHINE THREAD..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	12A	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	13	PAOZZ	4730-00-834-9560	96906	MS2439204	.NIPPLE,TUBE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	13A	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	14	XDOZZ	4730-00-221-2115	88044	AN929-4	.CAP,TUBE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	15	MFOZZ	4710-00-874-0864	97499	204-040-722-1	.TUBE ASSEMBLY,METAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	16	PAOZZ	4730-00-803-5049	96906	MS2439604	.ELBOW,TUBE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
155	17	PAOZZ	5310-00-282-7823	96906	MS2440004	.NUT,PLAIN,HEXAGON..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
155	18	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
155	19	MFOZZ	4710-00-874-0865	97499	204-040-723-1	.TUBE ASSEMBLY,METAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	20	PAOZZ	1615-00-476-2533	97499	205-040-135-1	.OIL JET ASSEMBLY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	20A	PCOZZ	5330-00-702-4712	96906	MS29561-112	.PACKING,PREFORME..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	20B	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	23	PAOZZ	5305-00-150-9213	88044	AN502-10-6	.SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	24	PAOZZ	5305-00-514-8005	96906	MS35266-79	.SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	25	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN RETAINER....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	26	PAOZZ	1615-00-787-4265	97499	204-040-327-1	.JET LUBRICATOR,TRAN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	27	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED....................UHB,UHC,UHE,UHH,UHM	EA	1
155	28	PCOZZ	5330-00-846-0602	96906	MS9241-010	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	29	PCOZZ	5330-00-580-5937	96906	MS29561-008	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	30	PAOZZ	5306-00-182-2017	88044	AN4H5A	.BOLT,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	31	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	32	PAOZZ	5306-00-727-3131	96906	MS20073-04-21	.BOLT,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	33	PAOZZ	5310-00-167-0836	88044	AN960-416L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	34	MFOZZ	5340-00-912-1903	97499	20-032-2	.BRACKET,ANGLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
155	35	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE.....................UHB,UHC,UHE.UHH,UHM,UHV,UHX	EA	1
155	36	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN RETAINER....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	37	PAOZZ	1615-00-830-9763	97499	204-040-326-7	.JET LUBRICATOR, TRANSMISSION....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	38	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED..........................UHB,UHC,UHE,UHH,UHM	EA	1
155	39	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	40	PCOZZ	5330-00-580-5937	96906	MS29561-008	.PACKING,PREFORMED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	41	AOOOZ	1560-00-874-0861	97499	204-040-393-1	.MANIFOLD ASSEMBLY SEE FIG. 177 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	42	PAOZZ	5365-00-278-8805	88044	AN814-12DL	.PLUG,MACHINE THREAD..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	42A	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	43	XDOZZ		96906	MS25043-12C	.COVER,ELECTRICAL.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	44	PAOZZ	5330-00-061-3157	97499	204-040-759-1	.GASKET...........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	45	PCOZZ	5330-00-882-4230	96906	MS9241-015	.PACKING,PREFORMED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	46	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
155	47	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN RETAINER....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
155	48	PAOZZ	5305-00-614-8005	96906	MS35265-79	.SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	49	PAOZZ	1615-00-069-3312	97499	204-040-262-21	.JET LUBRICATOR, TRANSMISSION....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	50	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED..........................UHB,UHC,UHE,UHH,UHM	EA	3
155	51	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
155	52	PAOZZ	1615-00-898-6884	97499	204-040-251-13	.JET LUBRICATOR, TRANSMISSION....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	53	PAOZZ	1615-00-898-6883	97499	204-040-288-11	.JET LUBRICATOR, TRANSMISSION....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	54	MFOZZ	9905-00-532-6678	96906	MS27253-2	.PLATE,IDENTIFICATIO..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	55	PAOZZ	9905-00-086-6780	97499	100-008-1	.PLATE,IDENTIFICATIO..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	56	PAOFF	1560-00-682-2326	97499	204-040-731-3	.BRACKET ASSEMBLY TRANSMISSION ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	56A	PAOZZ	5306-00-180-1429	88044	AN6-17A	.BOLT,MACHINE.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
155	56B	PAOZZ	5310-00-878-7199	80205	NAS1197-616L	.WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	57	PAODD	1615-00-134-3087	97499	205-040-263-3	.QUILL ASSY TRANSMIS SEE FIG. 166 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	57	PAODD	1615-01-112-6904	97499	205-040-263-111	.QUILL ASSEMBLY,TRAN SEE FIG. 166 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	58	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	7
155	59	PAOZZ	5310-00-847-2719	80205	NAS1197-616	.WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	7
155	61	PAOZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT U/O PN 204-040-016-5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	7
155	62	PCOZZ	5330-00-585-1065	96906	MS29561-113	.PACKING,PREFORMED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	63	PAOZZ	1615-00-830-9764	97499	204-040-341-1	.TUBE,OIL DRAIN, TRANSMISSION....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	64	PCOZZ	5330-00-726-9307	96906	MS29561-260	.PACKING,PREFORMED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	65	MFOZZ		97499	204-040-848-1	.BRACKET,ANGLE U/O PN 204-040-016-5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	66	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT U/O PN 204-040-016-5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	67	MFOZZ	4710-00-563-9846	97499	209-040-158-1	.TUBE,TRANSMISSION, DRAIN.......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	68	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON U/O PN 204-040-016-5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	69	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT U/O PN 204-040-016-5	EA	1

(1) ILLUSTRATION (A) FIG. NO.	 (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						..........UHB,UHC,UHE,UHH,UHM,UHV,UHX		
155	70	PAOZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT U/O PN 204-040-016-5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	71	PAOZZ	5365-00-662-3098	30205	NAS43DD3-32	.SPACER,SLEEVE U/O PN 204-040-016-5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	72	XDOZZ	5305-00-954-0944	03538	N80P16022C6	.SCREW,MACHINE U/O PN 204-040-016-5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	73	PAOZZ	5340-00-151-5997	96906	MS21122-4	.CLAMP,LOOP U/O PN 204-040-016-5 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	74	PAOZZ	1615-00-701-9935	78567	FC3731	.CAP ASSEMBLY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	75	ADOOO		97499	204-040-365-31	.DRIVE AND SUMP ASSY SEE FIG. 164 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	76	PAOZZ	5365-00-278-8806	88044	AN814-12DL	.PLUG,MACHINE THREAD..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	76A	PCOZZ	5330-00-836-8974	96906	MS29561-119	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	77	PAOZZ	5305-00-720-9296	97499	204-010-224-1	.SETSCREW..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	78	PAOZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	79	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	13
155	80	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	13
155	81	MFOZZ	5340-00-912-1903	97499	20-032-2	.BRACKET,ANGLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
155	82	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	11
155	83	PAOZZ	5330-00-625-0117	97499	204-040-164-1	.GASKET..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	84	PAOZZ	5340-00-071-4499	97499	204-040-842-1	.PLUG,PROTECTIVE,DUS..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	85	PCOZZ	5330-00-726-4153	96906	MS29561-237	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155	86	PAOZZ	5310-00-167-1345	81352	AN315-5R	.NUT,PLAIN,HEXAGO..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
155	87	MFOZZ	5340-00-976-4629	97499	205-040-131-1	.BRACKET,ANGLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
155		PAOZZ	1615-00-728-8116	97499	204-040-018-1	.INSTALLATION KIT,UN TRANSMISSION C/O 4 EA AN960PD416 WASHER 12 EA AN960PD516 WASHER 9 EA AN960PD616 WASHER 1 EA MS29561-211 PACKING 1 EA MS29561-232 PACKING 1 EA MS29561- ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

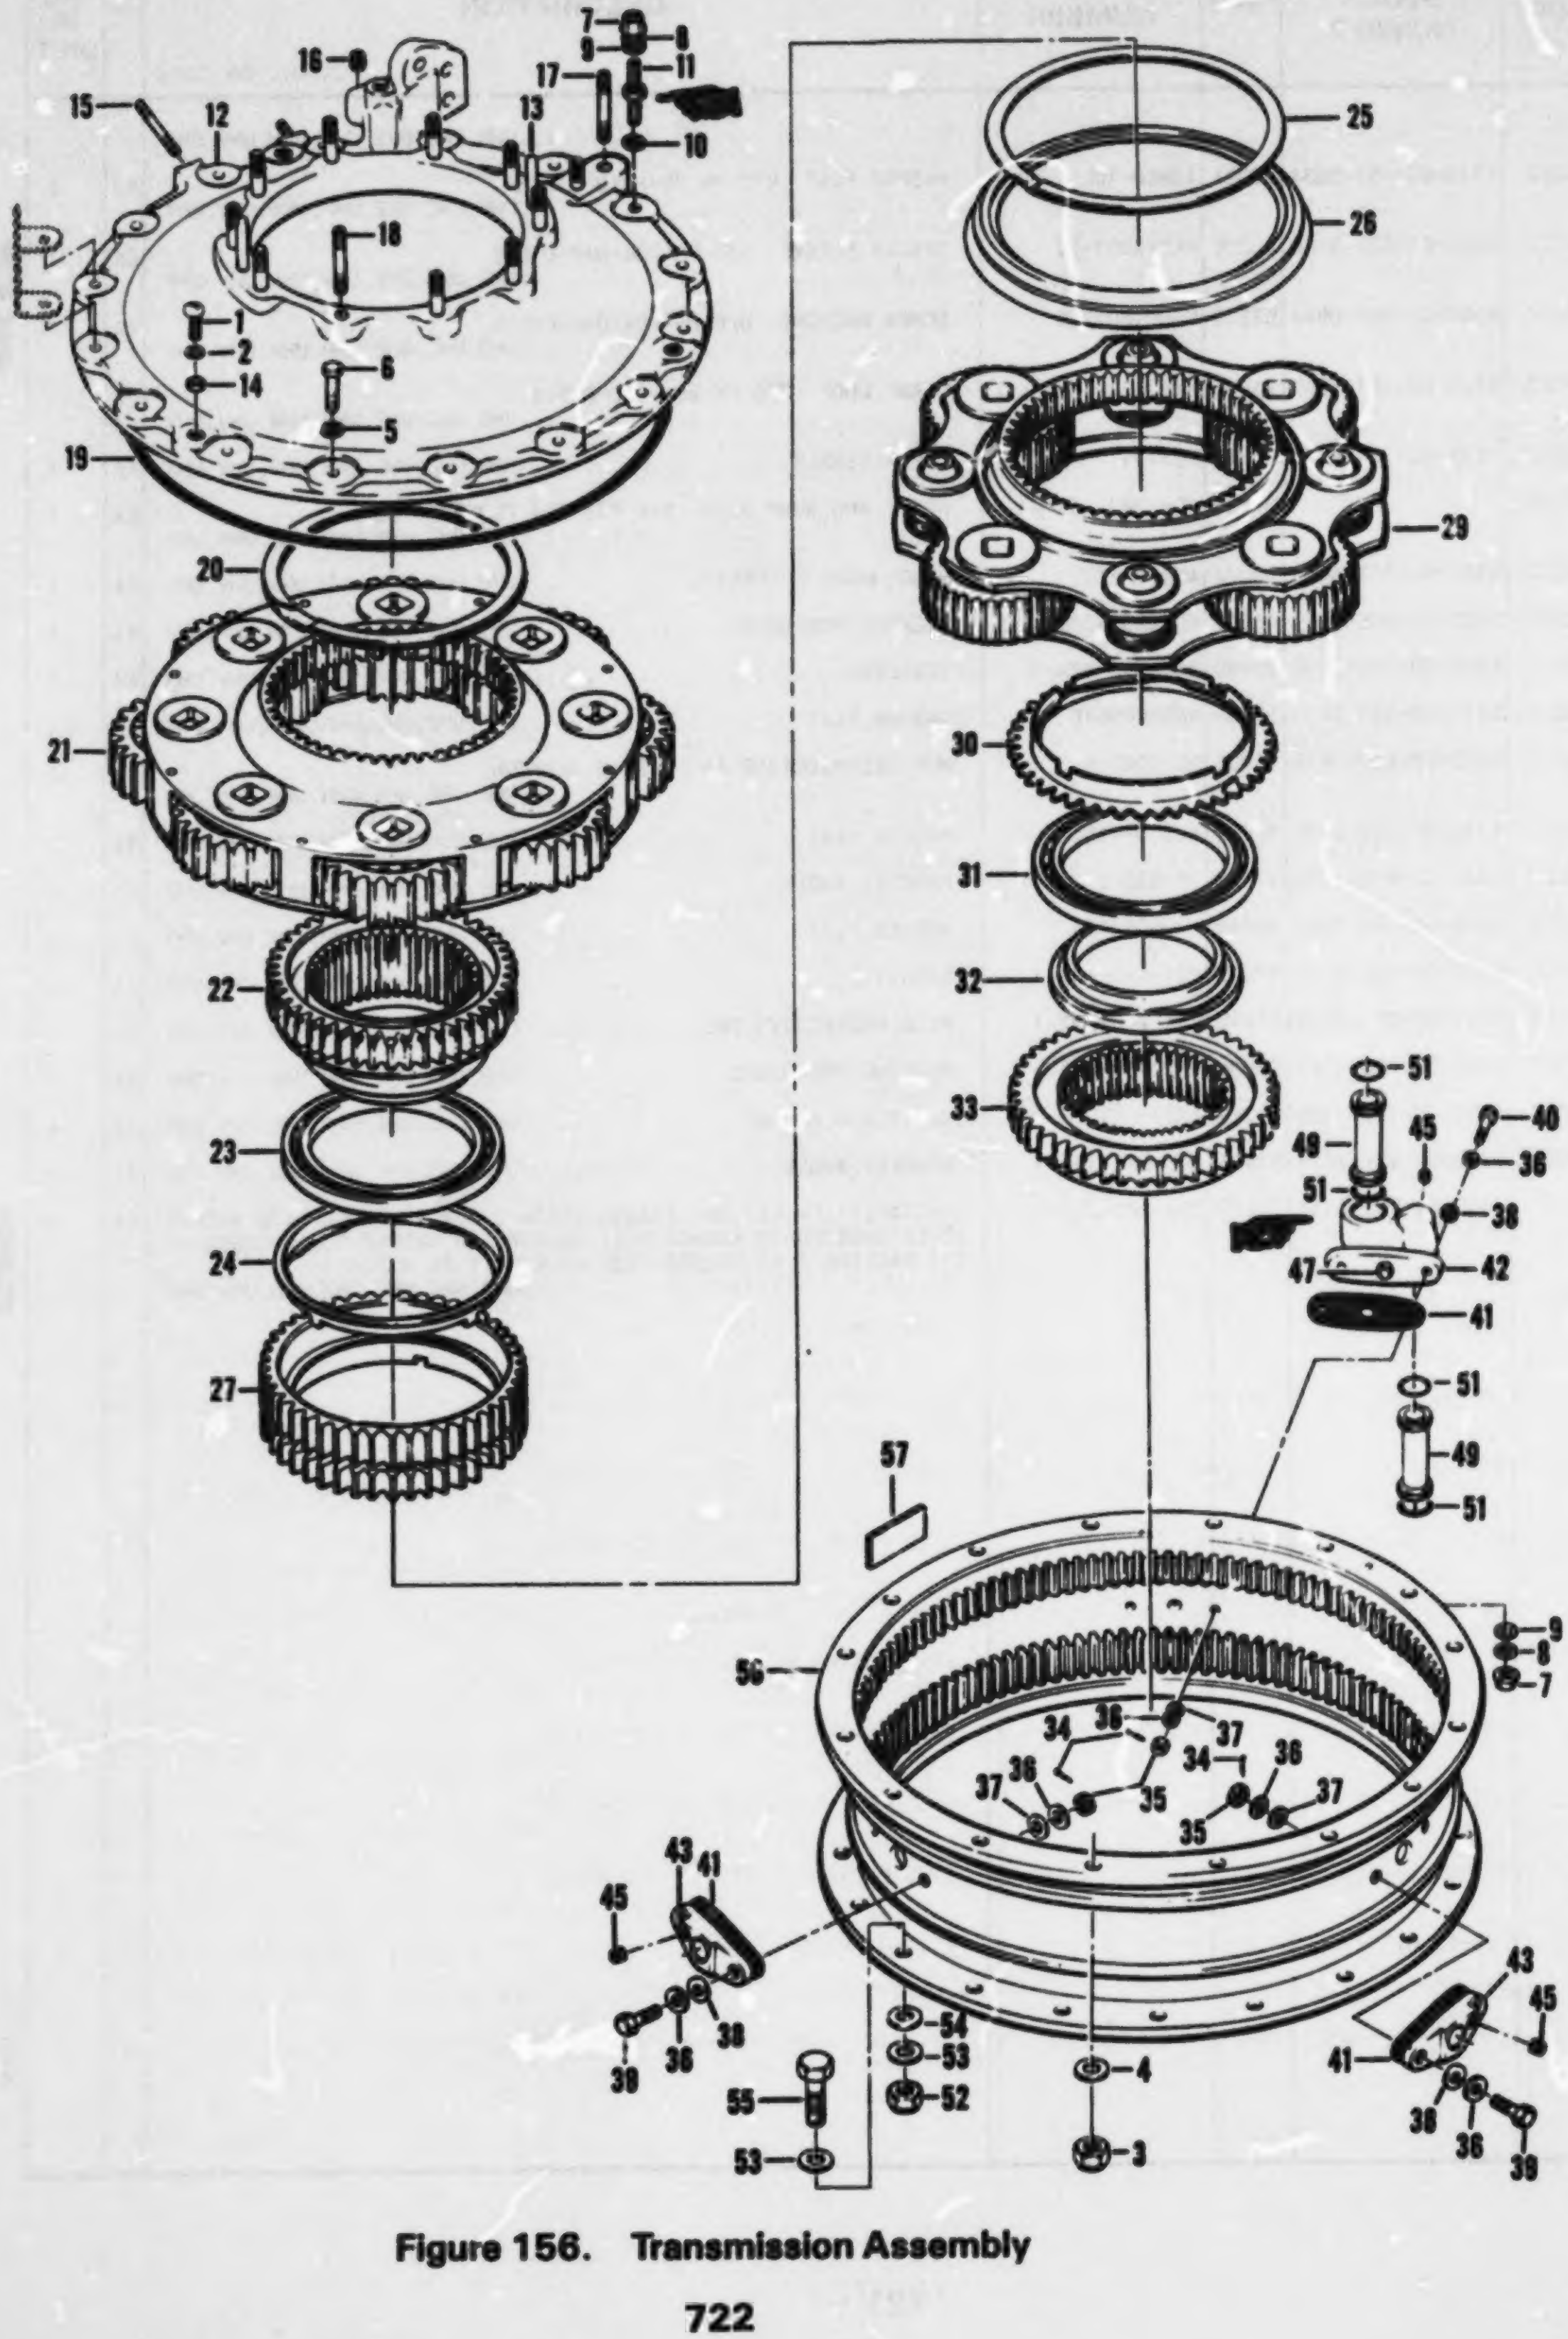
7
9
8
11
16
17
15
12
13
10
18
1
2
14
6
5
19
20
21
22
23
24
27
25
26
29
30
31
32
33
51
45
40
49
36
51
38
47
42
41
51
49
51
57
9
8
7
56
34
36
37
37
36
34
36
35
37
35
43
41
45
38
39
36
54
53
52
55
53
4
3
43
45
41
38
36
39

Figure 156. Transmission Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
156		PAODD	1615-00-183-0834	97499	204-040-016-5	TRANSMISSION ASSY,H SEE FIG. 152 & 154 FOR NHA SEE FIG. 155 & 159 FOR BALANCE OF BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
156	1	PADZZ	5305-00-880-5939	96906	MS35266-95	.SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
156	2	PADZZ	5310-00-184-8980	88044	AN960PD516L	.WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
156	3	PADZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	14
156	4	PADZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	28
156	5	PADZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	14
156	6	PADZZ	5306-00-281-9995	88044	AN6H12	.BOLT,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	14
156	7	PAOZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........UHC,UHM	EA	2
156	8	PAOZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT........UHC,UHM	EA	2
156	9	PAOZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER, FLAT........UHC,UHM	EA	2
156	10	PAOZZ	5365-00-872-1279	97499	120-008C21E13	.SHIM........UHC,UHM	EA	2
156	11	PAOZZ	5307-00-900-5033	97499	204-040-792-1	.STUD,SHOULDERED........UHC,UHM	EA	2
156	12	PADOO	1615-00-858-8397	97499	204-040-359-1	.CASE ASSEMBLY, TRANSMISSION....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
156	13	PAOZZ	5315-00-680-4171	80205	NAS607-4-20	..PIN,STRAIGHT,HEADLE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
156	14	PADZZ	5310-00-474-0552	83324	REA054	..NUT,PLAIN SPLINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
156	15	PAOZZ	5307-00-262-6584	88044	AN125988	..STUD,PLAIN -STANDARD........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
156	15	PAOZZ	5307-00-264-2427	88044	AN125989	..STUD,PLAIN -0.003 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	15	PBOZZ	5307-00-264-2421	88044	AN125990	..STUD,PLAIN -0.006 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	15	PAOZZ	5307-00-206-9706	88044	AN125991	..STUD,PLAIN -0.009 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	15	PAOZZ	5307-00-637-7224	88044	AN125992	..STUD,PLAIN -0.012 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	16	PADZZ	5340-00-291-3484	96906	MS21208F4-15	..INSERT,SCREW THREAD........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
156	17	PAOZZ	5307-00-292-5857	88044	AN126324	..STUD,PLAIN -STANDARD........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
156	17	PAOZZ	5307-00-206-5466	88044	AN126325	..STUD,PLAIN -0.003 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	17	PAOZZ	5307-00-264-2465	88044	AN126332	..STUD,PLAIN -0.006 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	17	PAOZZ	5307-00-584-5250	88044	AN126327	..STUD,PLAIN -0.009 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	17	PBOZZ	5307-00-637-7229	88044	AN126328	..STUD,PLAIN -0.012 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	18	PAOZZ	5307-00-637-1655	88044	AN126366	..STUD,PLAIN -STANDARD........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	10
156	18	PAOZZ	5307-00-637-6448	88044	AN126367	..STUD,PLAIN -0.003 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	18	PAOZZ	5307-00-637-6449	88044	AN126368	..STUD,PLAIN -0.006 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	18	PBOZZ	5307-00-206-9713	88044	AN126369	..STUD,PLAIN -0.009 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	18	PAOZZ	5307-00-569-0201	88044	AN126370	..STUD,PLAIN -0.012 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
156	19	PADZZ	5330-00-625-0196	97499	204-040-219-1	.PACKING,PREFORMED........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
156	20	PADZZ	5340-00-714-5453	80756	PS625L	.RING,RETAINING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
156	21	ADDOZ	1615-00-413-1462	97499	204-040-360-3	.PLANETARY ASSY RPL-BY PN 204-040-360-101 SEE FIG. 157 FOR BREAKDOWN........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
156	21	ADDDZ		97499	204-040-380-101	.PLANETARY ASSY RPLS--P/N 204-040-380-3 SEE FIG. 157 FOR BREAKDOWN........................	UHE,UHH,UHM,UHV,UHX	EA	1
156	22	PADZZ	1615-00-859-6112	97499	204-040-117-3	.ADAPTER,MAST DRIVIN..............	UHE,UHH,UHM,UHV,UHX	EA	1
156	23	PADDD	3110-00-691-2157	97499	204-040-135-1	.BEARING,BALL,AIRFRA..............	UHE,UHH,UHM,UHV,UHX	EA	1
156	24	PADZZ	3130-00-898-6889	97499	204-040-337-1	.LINER,PLANETARY SUPPORT.........	UHE,UHH,UHM,UHV,UHX	EA	1
156	25	PADZZ	5365-00-855-8945	80756	RS675L	.RING,RETAINING..................	UHE,UHH,UHM,UHV,UHX	EA	1
156	26	PADZZ	1615-00-898-1685	97499	204-040-378-1	.DEFLECTOR,DIRT..................	UHE,UHH,UHM,UHV,UHX	EA	1
156	27	PADZZ	3040-00-943-0836	97499	204-040-330-3	.GEARSHAFT,SPUR..................	UHE,UHH,UHM,UHV,UHX	EA	1
156	29	ADDDZ	1560 00-488-4922	97499	204-040-784-1	.PLANETARY ASSY,LOW SEE FIG. 158 FOR BREAKDOWN RPL-BY PN 204-040-784-103..................	UHE,UHH,UHM,UHV,UHX	EA	1
156	29	ADDDZ		97499	204-040-784-103	.PLANETARY ASSY,LOW RPLS-PN 204-040-784-1 SEE FIG. 158 FOR BREAKDOWN..................	UHE,UHH,UHM,UHV,UHX	EA	1
156	30	PADZZ	1615-00-898-6890	97499	204-040-338-1	.LINER,BEARING SUPPO..............	UHE,UHH,UHM,UHV,UHX	EA	1
156	31	PADDD	3110-00-691-2157	97499	204-040-135-1	.BEARING,BALL,AIRFRA..............	UHE,UHH,UHM,UHV,UHX	EA	1
156	32	PADZZ	1615-00-691-2163	97499	204-040-257-1	.LINER,TRANSMISSION..............	UHE,UHH,UHM,UHV,UHX	EA	1
156	33	PADZZ	3020-00-128-1634	97499	205-040-229-1	.GEAR,SPUR.......................	UHE,UHH,UHM,UHV,UHX	EA	1
156	34	PADZZ	5315-00-815-1405	96906	MS24665-151	.PIN,COTTER......................	UHE,UHH,UHM,UHV,UHX	EA	6
156	35	PADZZ	5310-00-176-8108	88044	AN320-4	.NUT,PLAIN,SLOTTED,H..............	UHE,UHH,UHM,UHV,UHX	EA	6
156	36	PADZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT.....................	UHE,UHH,UHM,UHV,UHX	EA	12
156	37	PADZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT.....................	UHE,UHH UHM,UHV,UHX	EA	6
156	38	PADZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT.....................	UHE,UHH,UHM,UHV,UHX	EA	6
156	39	PADZZ	5306-00-144-3706	88044	AN4-7	.BOLT,MACHINE....................	UHE,UHH,UHM,UHV,UHX	EA	2
156	40	XDDZZ	5306-00-144-3707	88044	AN4-10	.BOLT,MACHINE....................	UHE,UHH,UHM,UHV,UHX	EA	2
156	41	PADZZ	5330-00-758-3687	97499	204-040-340-3	.GASKET..........................	UHE,UHH,UHM,UHV,UHX	EA	3
156	42	PADDD	1615-00-128-1663	97499	204-040-430-1	.HOUSING ASSY,NOZZLE..............	UHE,UHH,UHM,UHV,UHX	EA	1
156	43	PADZZ	1615-00-888-3160	97499	205-040-134-1	.HOUSING ASSEMBLY................	UHE UHH,UHM,UHV,UHX	EA	2
156	46	PBDZZ	5340-00-697-3302	96906	MS124695	..INSERT,SCREW THREAD............	UHE,UHH,UHM,UHV,UHX	EA	3
156	47	PADZZ	3120-00-135-2601	97499	204-040-431-1	..BUSHING,SLEEVE U/O PN 204-040-430	UHE,UHH,UHM,UHV,UHX	EA	1
156	49	PADZZ	1615-00-859-6114	97499	204-040-223-11	.TUBE,OIL TRANSFER...............	UHE,UHH,UHM,UHV,UHX	EA	2
156	51	XDOZZ	5330-00-585-1066	96906	MS29561-114	.PACKING,PREFORMED...............	UHE,UHH,UHM,UHV,UHX	EA	4
156	52	PADZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	20
156	53	PADZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT.....................	UHE,UHH,UHM,UHV,UHX	EA	40
156	54	PADZZ	5310-00-187-2400	88044	AN960PD616	WASHER,FLAT......................	UHE,UHH,UHM,UHV,UHX	EA	20
156	55	PADZZ	5306-00-208-3639	88044	AN6-16A	.BOLT,MACHINE....................	UHE,UHH,UHM,UHV,UHX	EA	16
156	56	PADDD	1615-00-893-3442	97499	204-040-331-5	.CASE.TRANSMISSION...............	UHE,UHH,UHM,UHV,UHX	EA	1
156	57	PADZZ	9905-00-060-2034	97499	100-024-1	..PLATE,IDENTIFICATIO............	UHE,UHH,UHM,UHV,UHX	EA	1

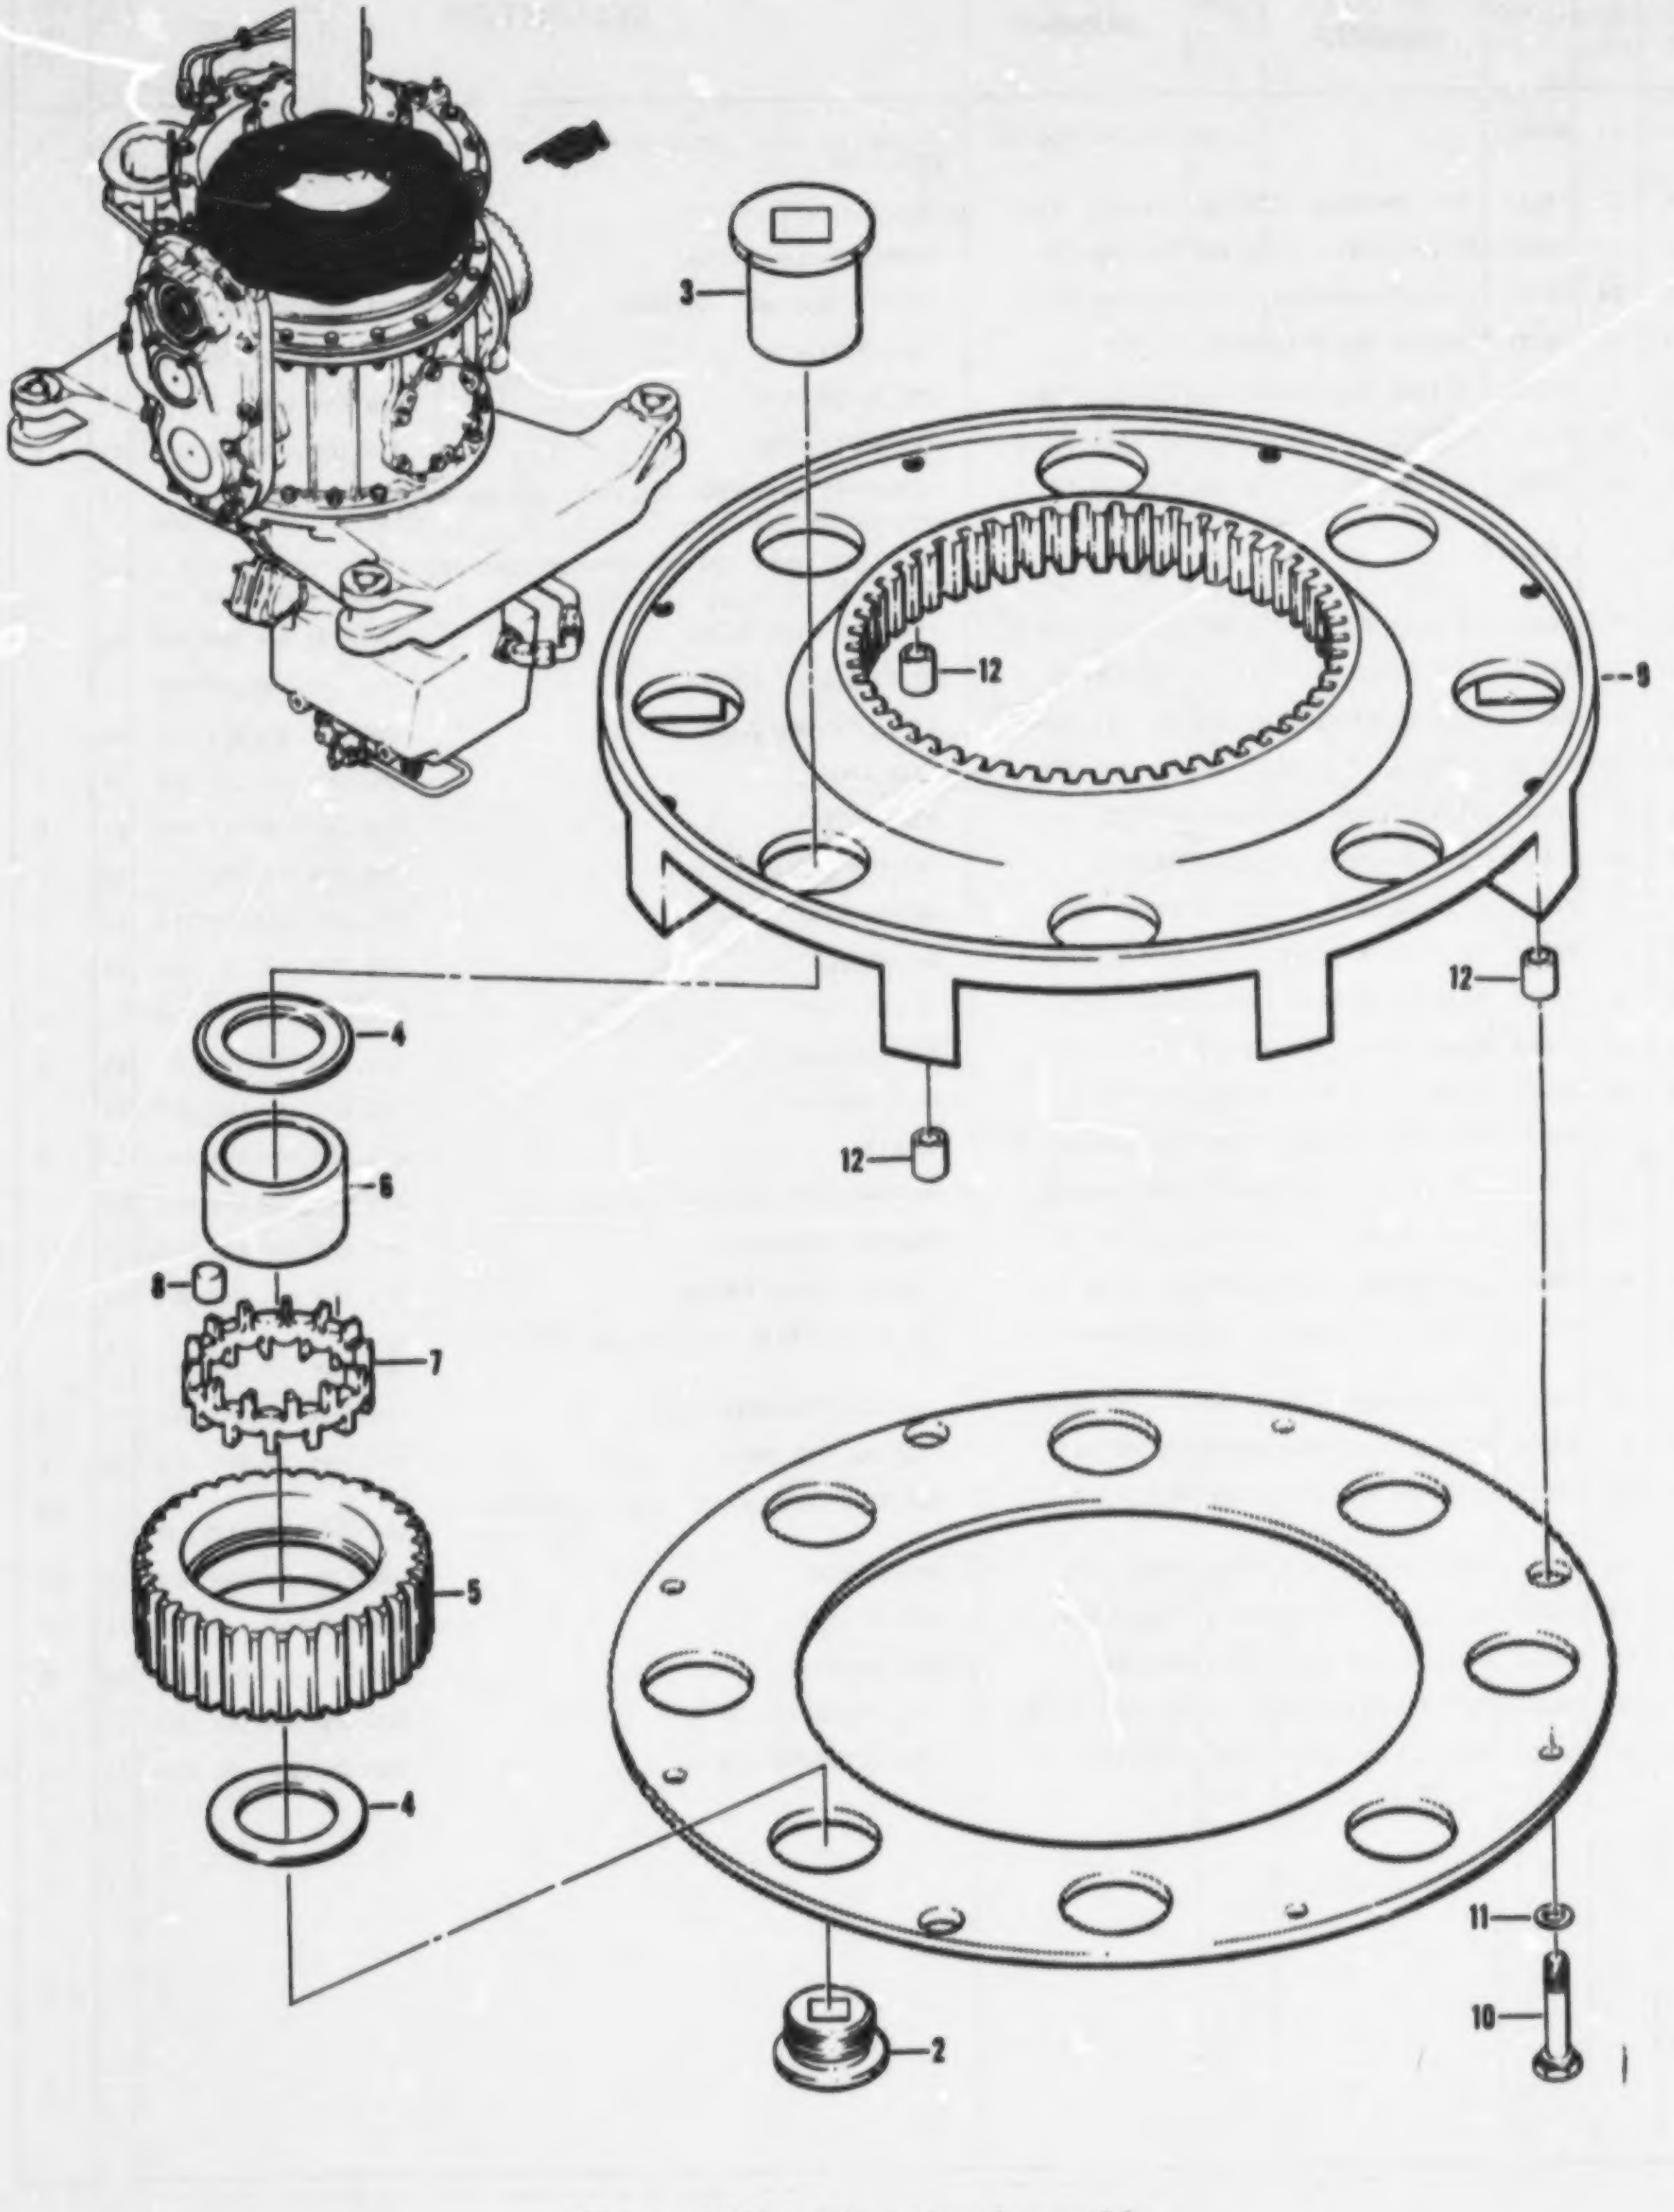
3
12
9
12
4
12
6
8
7
5
4
11
10
2

Figure 157. Planetary Assembly

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
157		ADDDZ	1615-00-413-1462	97499	204-040-360-3	PLANETARY ASSY RPL-BY PN 204-040-360-101 SEE FIG. 156 FOR NHA..............................	UHE,UHH,UHM,UHV,UHX	EA	1
157		ADDDZ		97499	204-040-360-101	PLANETARY ASSY RPLS-PN 204-040-360-3 SEE FIG. 156 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
157	2	PADZZ	5310-00-624-5251	97499	204-040-131-1	.NUT,BEARING......................	UHE,UHH,UHM,UHV,UHX	EA	8
157	3	PADZZ	1615-00-787-4273	97499	204-040-130-5	.SHAFT,SHOULDERED.................	UHE,UHH,UHM,UHV,UHX	EA	8
157	4	PADZZ	3120-00-787-4257	97499	204-040-134-5	.WASHER,PLANETARY.................	UHE,UHH,UHM,UHV,UHX	EA	16
157	5	PADZZ	3020-00-898-6886	97499	204-040-108-7	.GEAR,SPUR........................	UHE,UHH,UHM,UHV,UHX	EA	8
157	6	PADZZ	3110-00-714-8791	97499	204-040-132-1	.RING,BEARING,INNER...............	UHE,UHH,UHM,UHV,UHX	EA	8
157	7	PADZZ	3110-00-880-0706	97499	204-040-129-1	.RETAINER,ROLLER,BEA U/O PN 204-040-360-3	UHE,UHH,UHM,UHV,UHX	EA	8
157	7	PADZZ	3110-01-047-3773	97499	214-040-110-3	.RETAINER,ROLLER,BEA U/O PN 204-040-360-101	UHE,UHH,UHM,UHV,UHX	EA	8
157	8	PADDD	3110-01-203-7972	97499	204-040-725-1	.ROLLER SET, TRANSMISSION-ALTERNATE-	UHE,UHH,UHM,UHV,UHX	SE	26
157	8	PADD[illegible]	3110-00-807-7833	97499	204-040-725-3	.ROLLER SET, TRANSMISSION........	UHE,UHH,UHM,UHV,UHX	SE	8
157	9	PADDD	1615-00-874-0862	97499	204-040-397-1	.SPIDER ASSY,UPPER................	UHE,UHH,UHM,UHV,UHX	EA	1
157	10	PADZZ	5306-00-206-4911	88044	AN174H15A	..BOLT,CLOSE TOLERANC.............	UHE,UHH,UHM,UHV,UHX	EA	8
157	11	PADZZ	5310-00-141-1795	88044	AN960-416	..WASHER,FLAT.....................	UHE,UHH,UHM,UHV,UHX	EA	8
157	12	PADZZ	5365-00-896-6345	21178	L811A	..SPACER,SLEEVE...................	UHE,UHH,UHM,UHV,UHX	EA	8

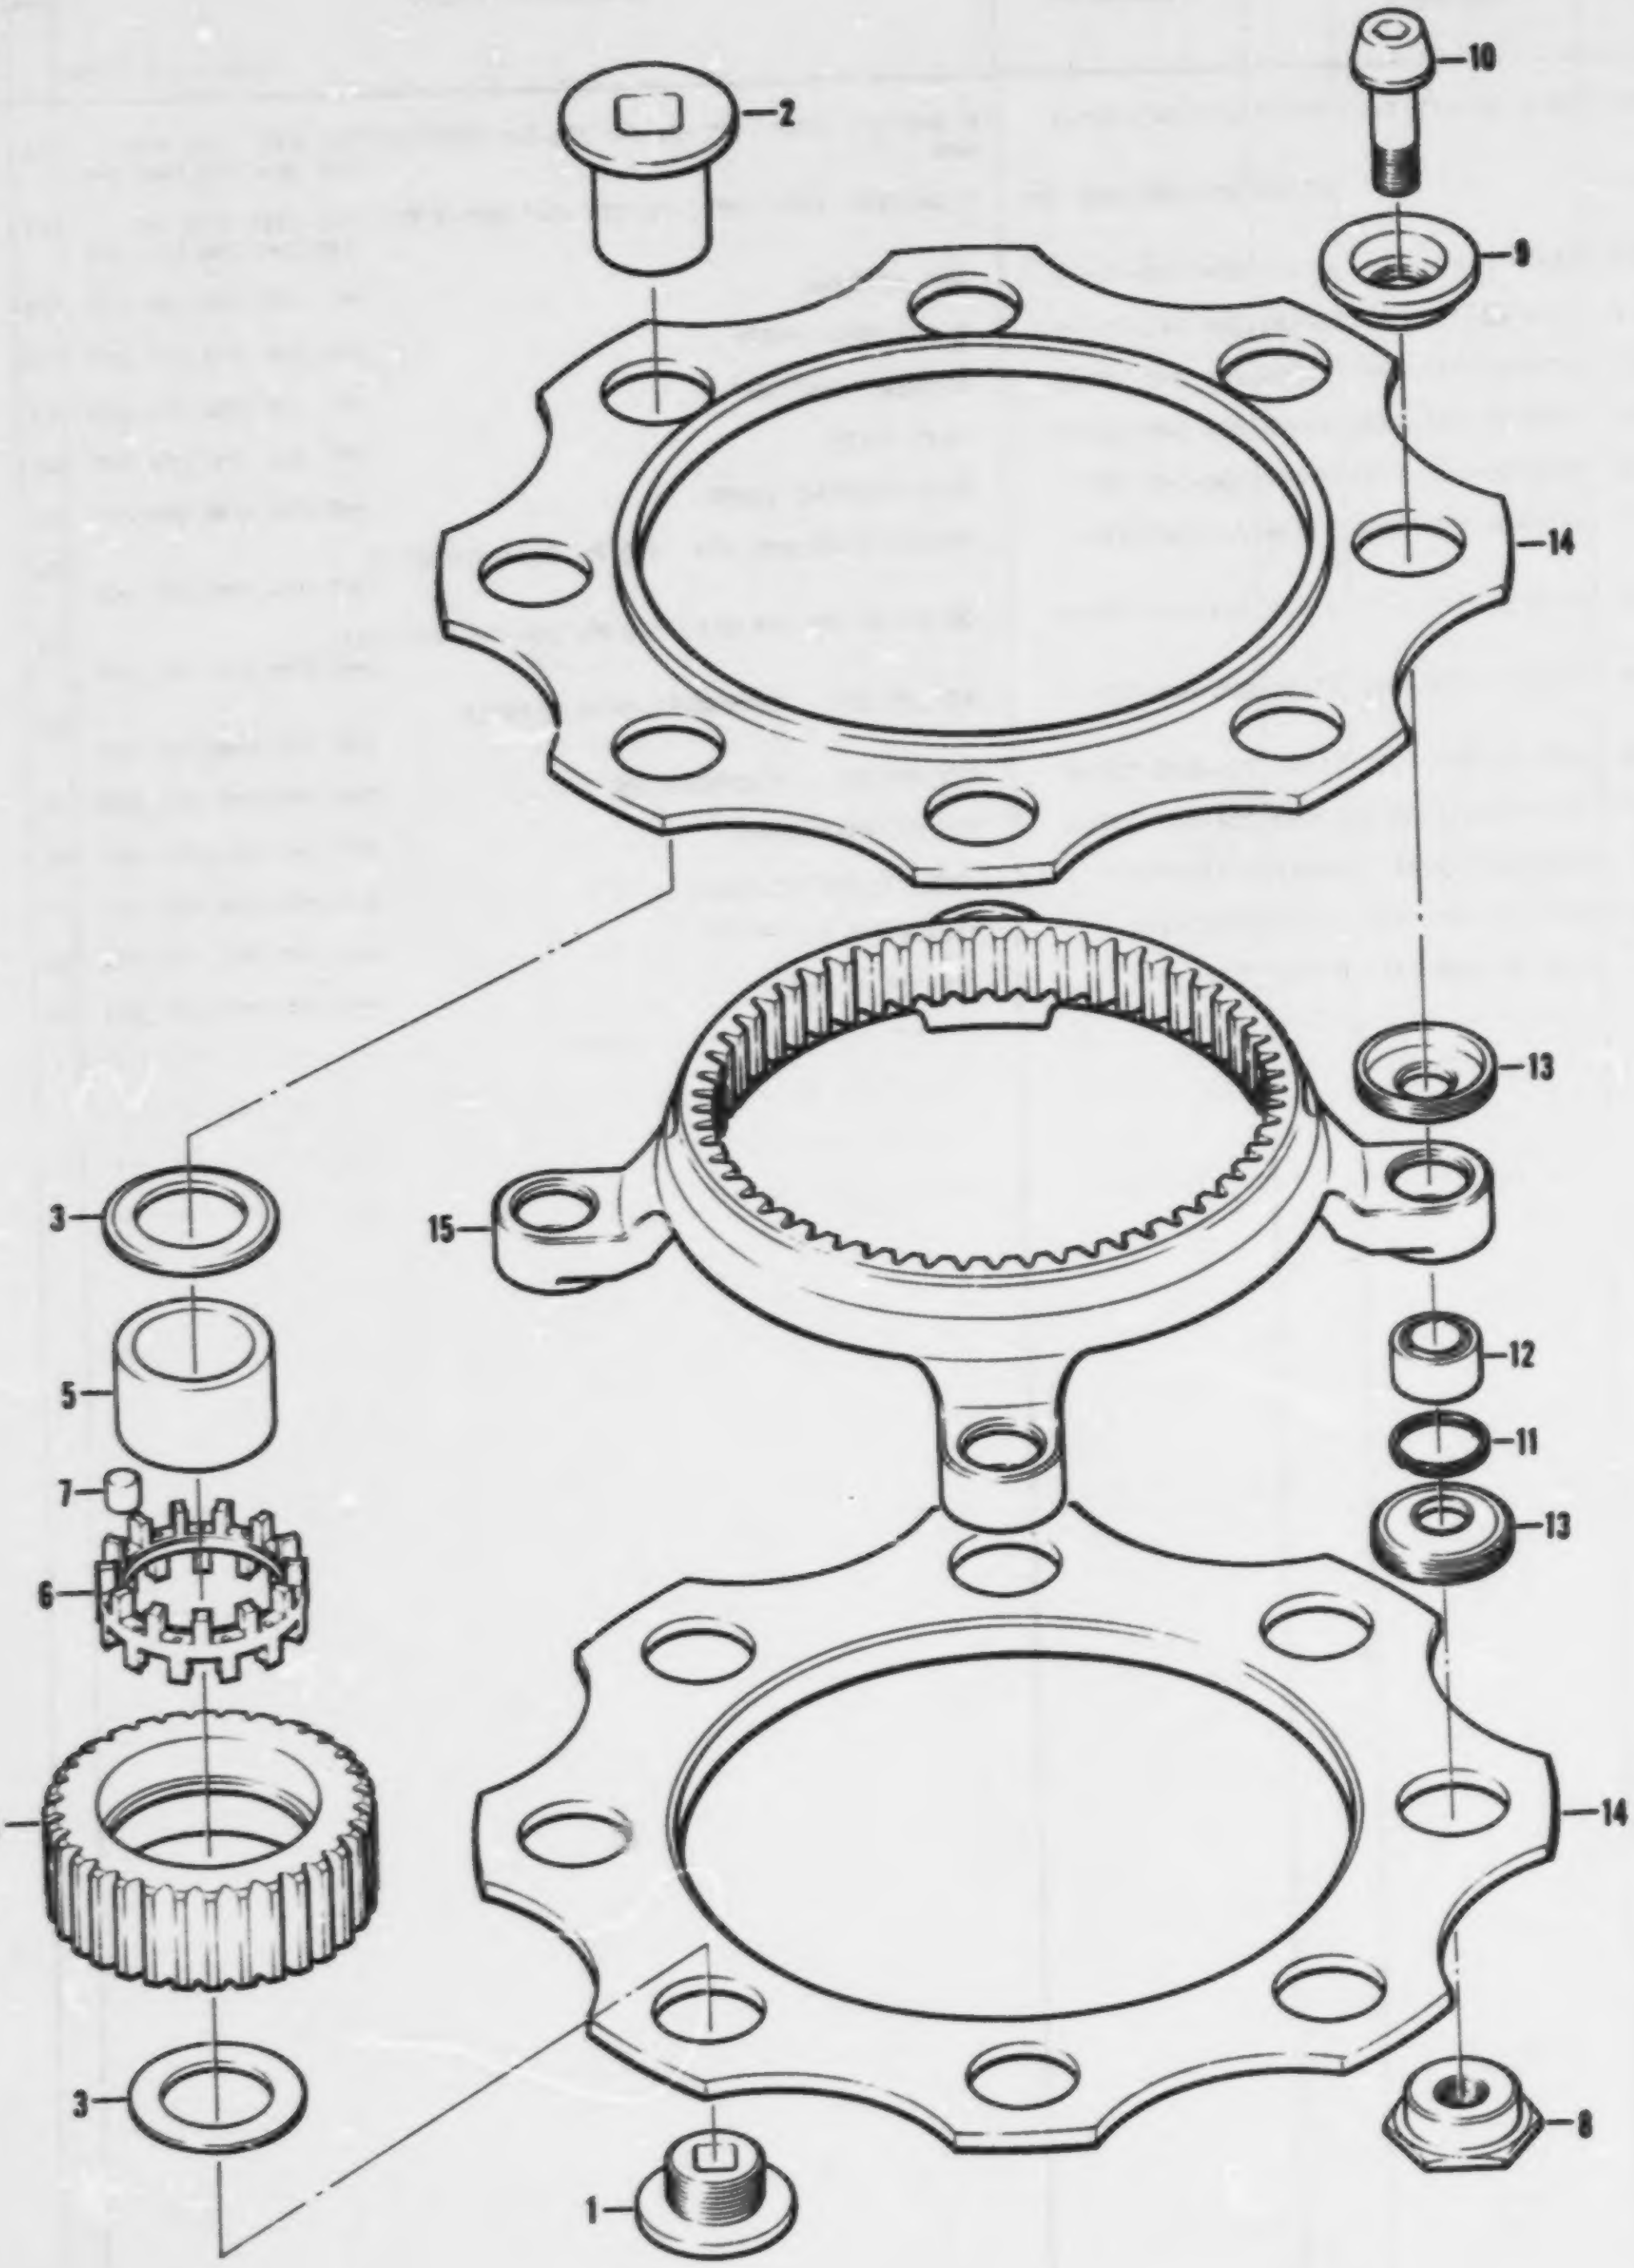
10
2
9
14
13
3
15
12
5
11
7
13
6
4
14
3
8
1

Figure 158. Lower Planetary Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7)	(8) QTY INC IN UNIT
158		AD00Z	1560-00-488-4922	97499	204-040-784-1	PLANETARY ASSY,LOW RPL-BY PN 204-040-784-103 SEE FIG. 156 FOR NHA...........................	UHE,UHH,UHM,UHV,UHX	EA	1
158		AD00Z		97499	204-040-784-103	PLANETARY ASSY,LOW RPLS-PN 204-040-784-1 SEE FIG. 156 FOR NHA.....................	UHE,UHH,UHM,UHV,UHX	EA	1
158	1	PADZZ	5310-00-624-5251	97499	204-040-131-1	.NUT,BEARING...........	UHE,UHH,UHM,UHV,UHX	EA	4
158	2	PADZZ	1615-00-787-4273	97499	204-040-130-5	.SHAFT,SHOULDERED.................	UHE,UHH,UHM,UHV,UHX	EA	4
158	3	PADZZ	3120-00-787-4257	97499	204-040-134-5	.WASHER,PLANETARY PI..............	UHE,UHH,UHM,UHV,UHX	EA	8
158	4	PADZZ	3020-00-898-6886	97499	204-040-108-7	.GEAR,SPUR........................	UHE,UHH,UHM,UHV,UHX	EA	4
158	5	PADZZ	3110-00-714-8791	97499	204-040-132-1	.RING,BEARING,INNER...............	UHE,UHH,UHM,UHV,UHX	EA	4
158	6	PADZZ	3110-00-580-0705	97499	204-040-133-1	.RETAINER,ROLLER,BEA RPL-BY PN 214-040-110-3	UHE,UHH,UHM,UHV,UHX	EA	4
158	6	PADZZ	3110-01-047-3773	97499	214-040-110-3	.RETAINER,ROLLER,BEA RPLS-PN 204-040-133-1	UHE,UHH,UHM,UHV,UHX	EA	4
158	7	PADDD	3110-00-807-7833	97499	204-040-725-1	.ROLLER SET, TRANSMISSION-ALTERNATE-	UHE,UHH,UHM,UHV,UHX	SE	26
158	7	PADDD	3110-01-203-7972	97499	204-040-725-3	.ROLLER SET, TRANSMISSION........	UHE,UHH,UHM,UHV,UHX	SE	26
158	8	PADZZ	5310-00-916-2467	97499	204-040-788-1	.NUT,RETAINING....................	UHE,UHH,UHM,UHV,UHX	EA	4
158	9	PADZZ	3120-00-915-6060	97499	204-040-790-1	.BUSHING,SLEEVE...................	UHE,UHH,UHM,UHV,UHX	EA	4
158	10	PADZZ	5306-00-488-7461	97499	204-040-787-1	.BOLT,INTERNAL WRENC..............	UHE,UHH,UHM,UHV,UHX	EA	4
158	11	PADZZ	5365-00-576-9619	80756	RRT112	.RING,RETAINING...................	UHE,UHH,UHM,UHV,UHX	EA	1
158	12	PADZZ	3120-00-939-8220	97613	KWB9N	.BEARING,PLAIN,SELF- ALIGNING....	UHE,UHH,UHM,UHV,UHX	EA	4
158	13	PADZZ	1615-01-020-2012	97499	204-040-789-7	.RING,PLANETARY...................	UHE,UHH,UHM,UHV,UHX	EA	8
158	14	PADZZ	3110-00-755-1181	97499	204-040-786-1	.PLATE,PILLOW BLOCK...............	UHE,UHH,UHM,UHV,UHX	SE	1
158	15	PADZZ	1615-00-924-7749	97499	204-040-785-3	.SPIDER,LOWER,MAIN T..............	UHE,UHH,UHM,UHV,UHX	EA	1

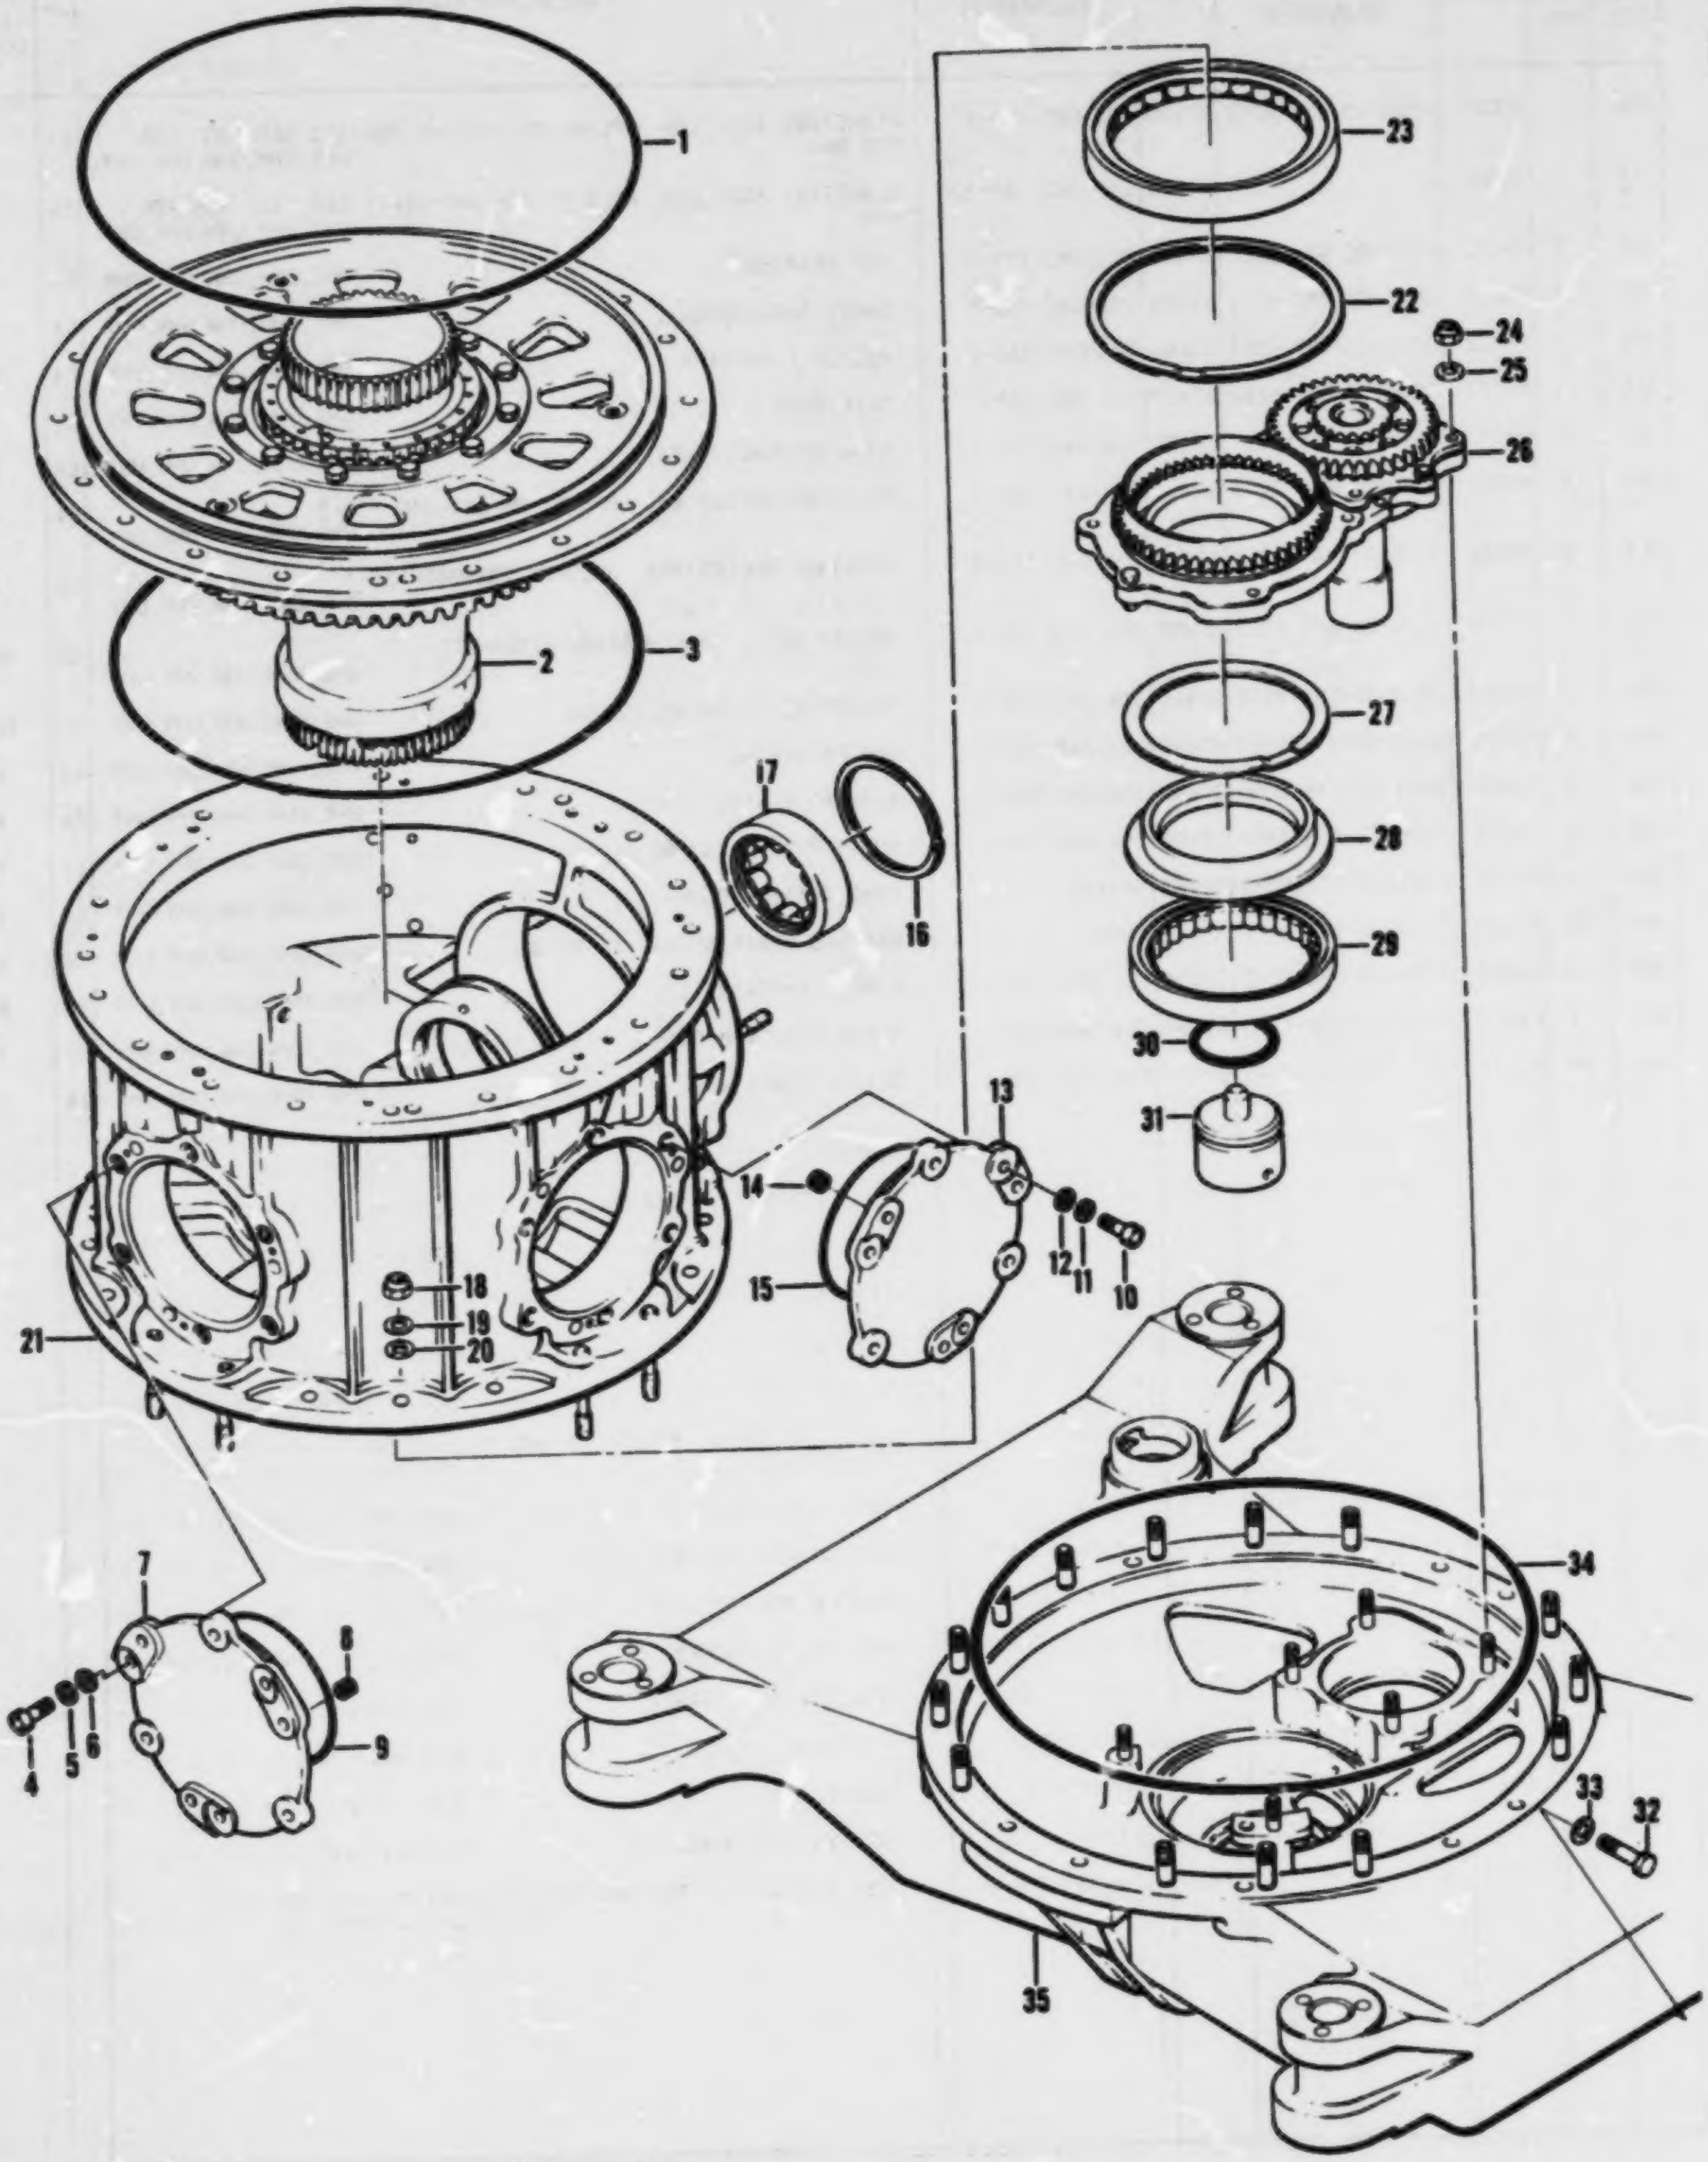
1
2
3
17
16
23
22
24
25
26
27
28
29
30
31
13
14
12
11
10
15
18
19
20
21
7
8
4
5
6
9
34
33
32
35

Figure 159. Transmission Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
159		PADDD	1615-00-183-0834	97499	204-040-016-5	TRANSMISSION ASSY,H SEE FIG. 152 & 154 FOR NHA SEE FIG. 155 & 156 FOR BALANCE OF BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	1	PADZZ	5330-00-625-0196	97499	204-040-219-1	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	2	ADDDZ	1615-00-488-7628	97499	204-040-362-13	.QUILL ASSEMBLY SEE FIG. 160 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	3	PADZZ	5330-00-524-6899	97499	204-040-218-1	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	4	PADZZ	5306-00-208-3636	88044	AN6-10A	.BOLT,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
159	5	PADZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
159	6	PADZZ	5310-00-847-2719	80205	NAS1197-616	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
159	7	PADDD	1615-00-898-1684	97499	204-040-174-1	.COVER ASSEMBLY,QUIL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	8	PADZZ	5310-00-474-0552	83324	REA054	..NUT,PLAIN SPLINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
159	9	PCDZZ	5330-00-726-1236	96906	MS29561-248	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	10	PADZZ	5306-00-208-3636	88044	AN6-10A	.BOLT,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
159	11	PADZZ	5310-00-167-0837	88044	AN960-616L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
159	12	PADZZ	5310-00-847-2719	80205	NAS1197-616	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
159	13	PADDD	1615-00-898-1684	97499	204-040-174-1	.COVER ASSEMBLY,QUIL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	14	PADZZ	5310-00-474-0552	83324	REA054	..NUT,PLAIN SPLINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
159	15	PCDZZ	5330-00-726-1236	96906	MS29561-248	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	16	PADZZ	5365-00-714-5450	80756	RR354L	.RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	17	PADDD	3110-00-133-3378	97499	205-040-249-1	.BEARING,ROLLER,CYLI..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	18	PADZZ	5310-00-807-1477	96906	MS21042L6	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	20
159	19	PADZZ	5310-00-167-0821	88044	AN960-616	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	18
159	20	PADZZ	5310-00-187-2395	88044	AN960PD616L	.WASHER, FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	20
159	21	PADDD	1615-00-874-0857	97499	204-040-353-23	.CASE ASSEMBLY, TRANSMISSION.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	22	PADZZ	5365-00-714-5452	80756	RR650L	.RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	23	PADDD	3110-00-701-9880	97499	204-040-271-3	.BEARING,ROLLER,JOUR..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	24	PADZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
159	25	PADZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
159	26	ADDDZ	1560-00-488-4921	97499	204-040-213-9	.QUILL ASSEMBLY ACCESSORY AND TAIL ROTOR DRIVE SEE FIG. 161 FOR BREAKDOWN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	27	PADZZ	5365-00-714-5451	80756	RR500L	.RING,RETAINER..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	28	PADZZ	1615-00-701-9884	97499	204-040-308-1	.RING,CENTERING,TRAN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	29	PADDD	3110-00-691-2169	97499	204-040-270-3	.BEARING,ROLLER,JOUR..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	30	PCDZZ	5330-00-702-4716	96906	MS29561-226	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	31	PADZZ	1615-00-701-9379	97499	204-040-234-1	.PLUG,OIL,TRANSMISSI..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	32	PADZZ	5305-00-720-9296	97499	204-010-224-1	.SETSCREW..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	33	PADZZ	5310-00-187-2400	88044	AN960PD616	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	34	PADZZ	5330-00-625-0196	97499	204-040-219-1	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
159	35	PADDD	1615-00-996-7491	97499	204-040-354-9	.CASE ASSEMBLY, TRANSMISSION,SEE FIG 163 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

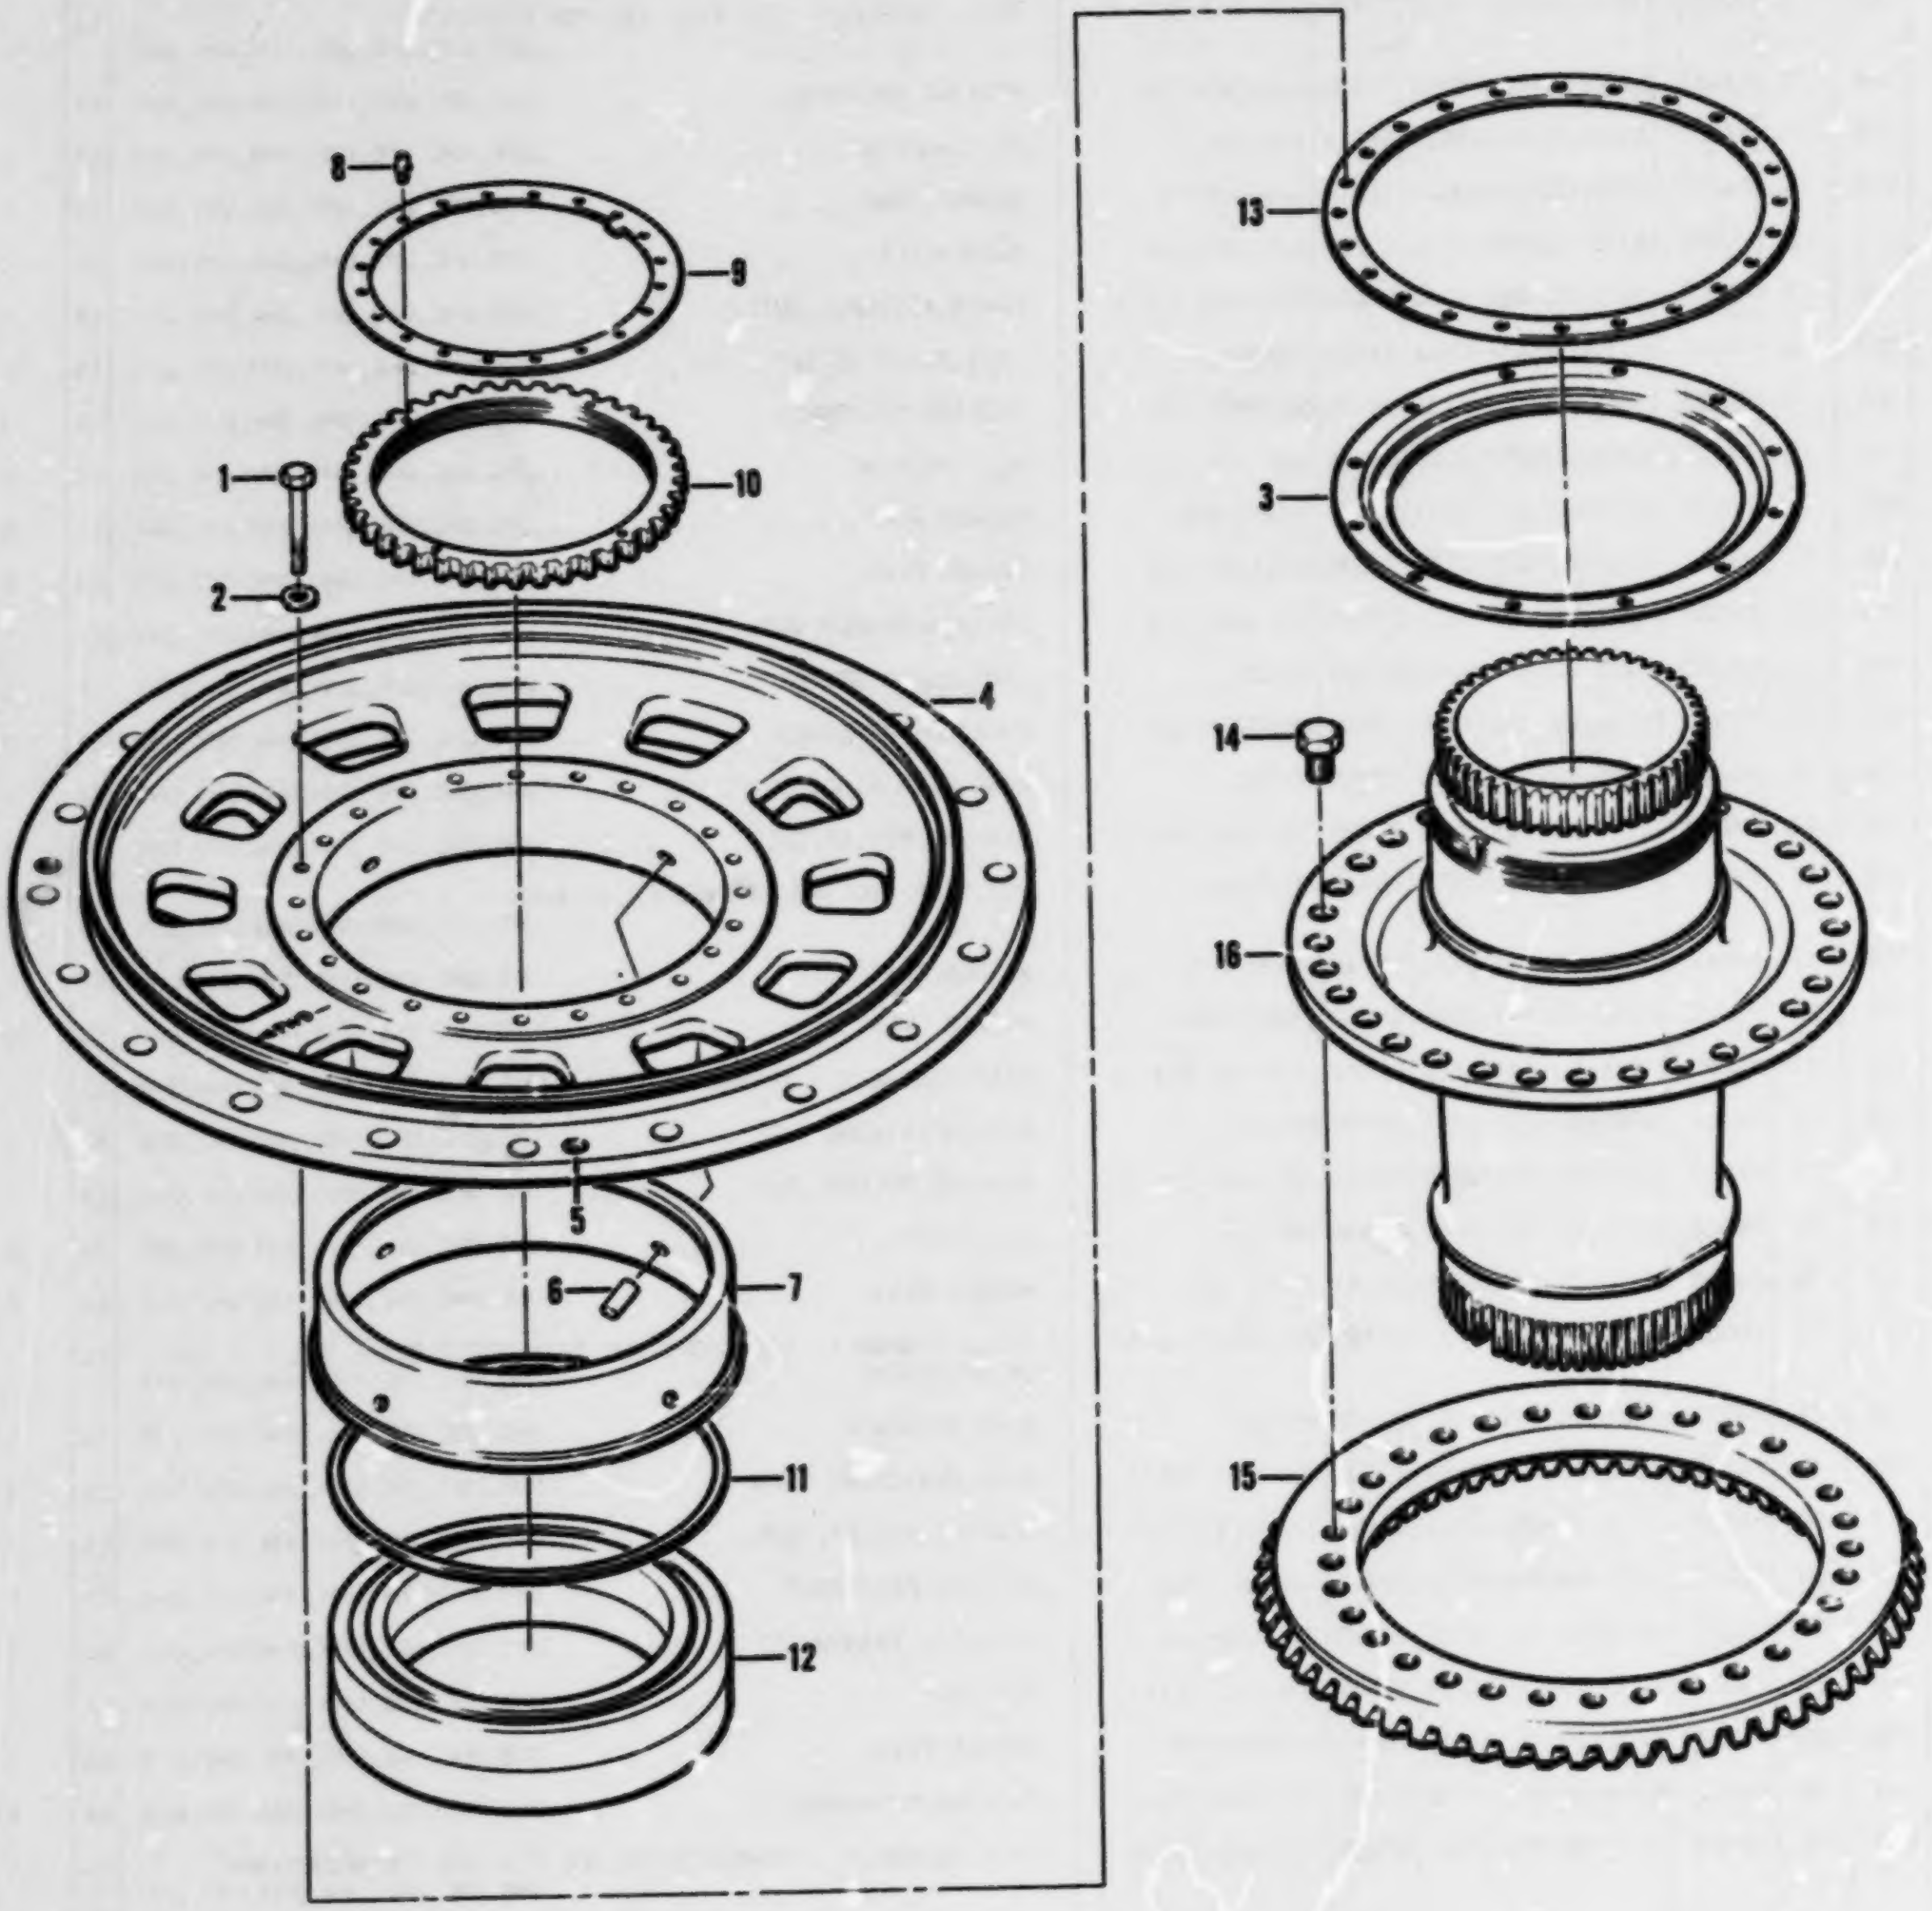
8
9
1
10
2
4
13
3
14
16
5
6
7
11
12
15

Figure 160. Quill Assembly

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
160		AD00Z	1615-00-488-7628	97499	204-040-362-13	QUILL ASSEMBLY SEE FIG. 151 & 159 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
160	1	PADZZ	5306-00-182-2008	88044	AN3H17A	.BOLT,MACHINE......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	24
160	2	PADZZ	5310-00-167-0834	88044	AN960-10L	.WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	24
160	3	PADZZ	3110-00-061-5312	97499	204-040-357-5	.PLATE,RETAINING,BEA..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
160	4	PADDD	1615-00-874-0860	97499	204-040-386-1	.CASE ASSEMBLY,..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
160	5	PADZZ	5210-00-474-0552	83324	REA064	..NUT,PLAIN SPLINE................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
160	6	PBDZZ	5315-00-060-2845	96906	MS24692-245P	..PIN,TAPERED,PLAIN...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
160	7	XBDZZ	3130-00-858-8405	97499	204-040-336-1	..LINER,BEARING HOUSI.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
160	8	PADZZ	5305-00-765-4465	97499	204-040-323-1	.SCREW,MACHINE....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
160	9	PADZZ	1615-00-624-5250	97499	204-040-123-1	.RING,LOCKING GEAR SHAFT-AFT.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
160	10	PADZZ	5310-00-713-8354	97499	204-040-122-1	.NUT,PLAIN,SPLINE.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
160	11	PADZZ	5365-00-758-3691	97499	204-040-350-1	.SHIM.............................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
160	12	PADDD	3110-00-133-3379	97499	205-040-245-1	.BEARING.BALL,DUPLEX..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
160	13	PADZZ	5365-00-758-1460	97499	204-040-348-3	.SHIM.............................UHB,UHC,UHE.UHH,UHM,UHV,UHX	EA	1
160	14	PADZZ	5306-01-071-9150	97499	214-040-117-5	.BOLT,INPUT GEAR..................UHB,UHC,UHE,UHM,UHV,UHX,UHH	EA	32
160	15	PADZZ	3020-01-140-2760	97499	204-040-701-103	.GEAR,BEVEL.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
160	16	PADDD	1615-00-918-1912	97499	204-040-324-5	.SHAFT,MAIN GEAR..................UHB,UHC,UHE,UHH,UHM,UHV.UHX	EA	1

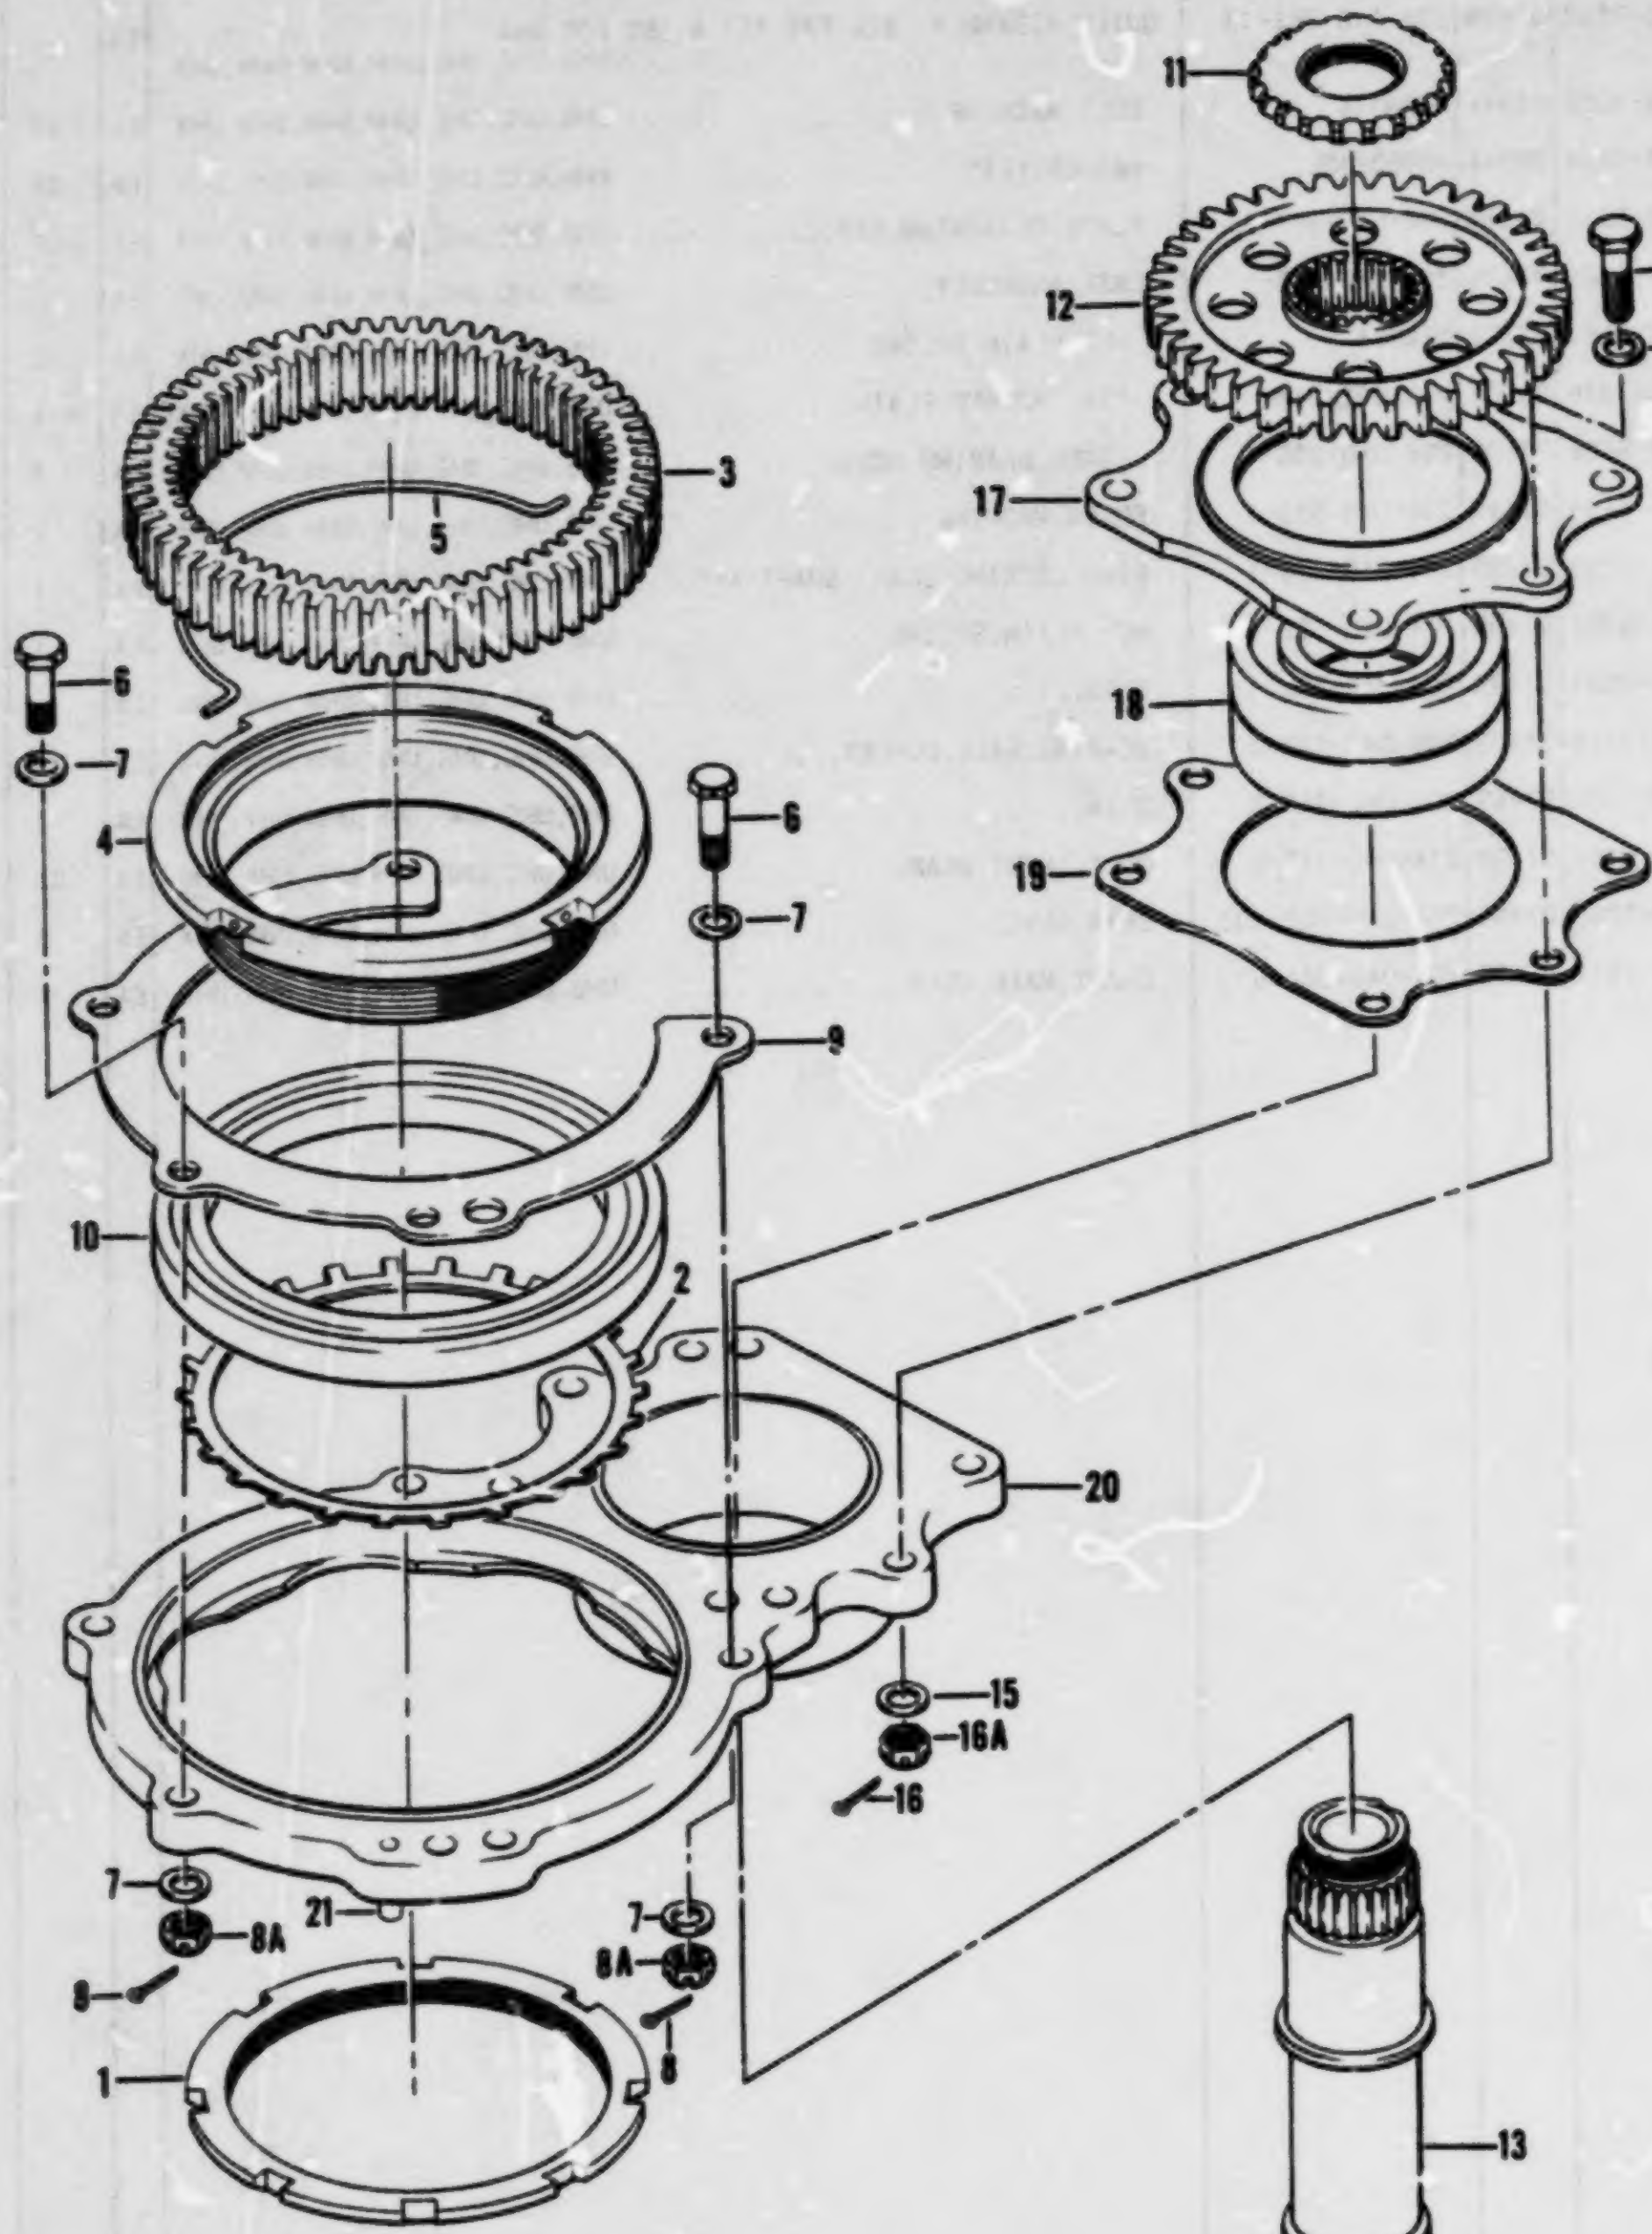
11
14
12
15
3
5
17
6
7
18
4
6
7
19
9
10
2
20
15
16A
16
7
8A
21
7
8A
8
8
1
13

Figure 161. **Quill Assembly, Offset Accessory and Tail Rotor Drive**

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
161		ADOOZ	1560-00-488-4921	97499	204-040-213-9	QUILL ASSEMBLY ACCESSORY AND TAIL ROTOR DRIVE SEE FIG. 159 FOR HHA..........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	1	PADZZ	5310-00-709-8602	97499	204-040-252-1	.NUT,PLAIN,ROUND..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	2	PADZZ	5310-00-710-9429	97499	204-040-253-1	.WASHER,KEY.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	3	PADZZ	3020-00-019-0293	97499	204-040-763-1	.GEAR,SPUR........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	4	PADZZ	1615-00-701-9940	97499	204-040-321-1	.SUPPORT,TRANSMISSIO..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	5	PADZZ	5340-00-701-9941	97499	204-040-322-1	.RETAINER,DRIVING GEAR..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	6	PADZZ	5306-00-182-1528	88044	AN4H10	.BOLT,MACHINE.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
161	7	PADZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
161	8	PADZZ	5315-00-234-1856	96906	MS24665-155	.PIN,COTTER.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
161	8A	PADZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
161	9	PADZZ	3110-00-708-2283	97499	204-040-251-1	.PLATE,RETAINING,BEA..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	10	PADOO	3110-00-691-2157	97499	204-040-135-1	.BEARING,BALL,AIRFRA..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	11	PADZZ	5310-00-709-8601	97499	204-040-186-1	.NUT,PLAIN,SPLINE.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	12	PADZZ	3020-00-019-0292	97499	204-040-762-1	.GEAR,SPUR........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	13	PADZZ	3040-00-787-4256	97499	204-040-121-5	.GEARSHAFT,SPUR...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	14	PADOO	5306-00-182-1529	88044	AN4H11	.BOLT,MACHINE.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
161	15	PADZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
161	16	PADZZ	5315-00-234-1856	96906	MS24665-155	.PIN,COTTER.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
161	16A	PADZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
161	17	PADZZ	3110-00-708-2281	97499	204-040-159-3	.PLATE,RETAINING,BEA..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	18	PADOO	3110-00-625-0114	97499	204-040-143-1	.BEARING,BALL,DUPLEX ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	19	PADZZ	5365-00-625-0138	97499	204-040-182-3	.SHIM,LAMINATED...................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	20	PADOO	1615-00-784-0231	97499	204-040-250-9	.SLEEVE ASSEMBLY, TRANSMISSION ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
161	21	PADZZ	5315-00-241-2917	88044	AN122717	..PIN,STRAIGHT HEADLESS..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

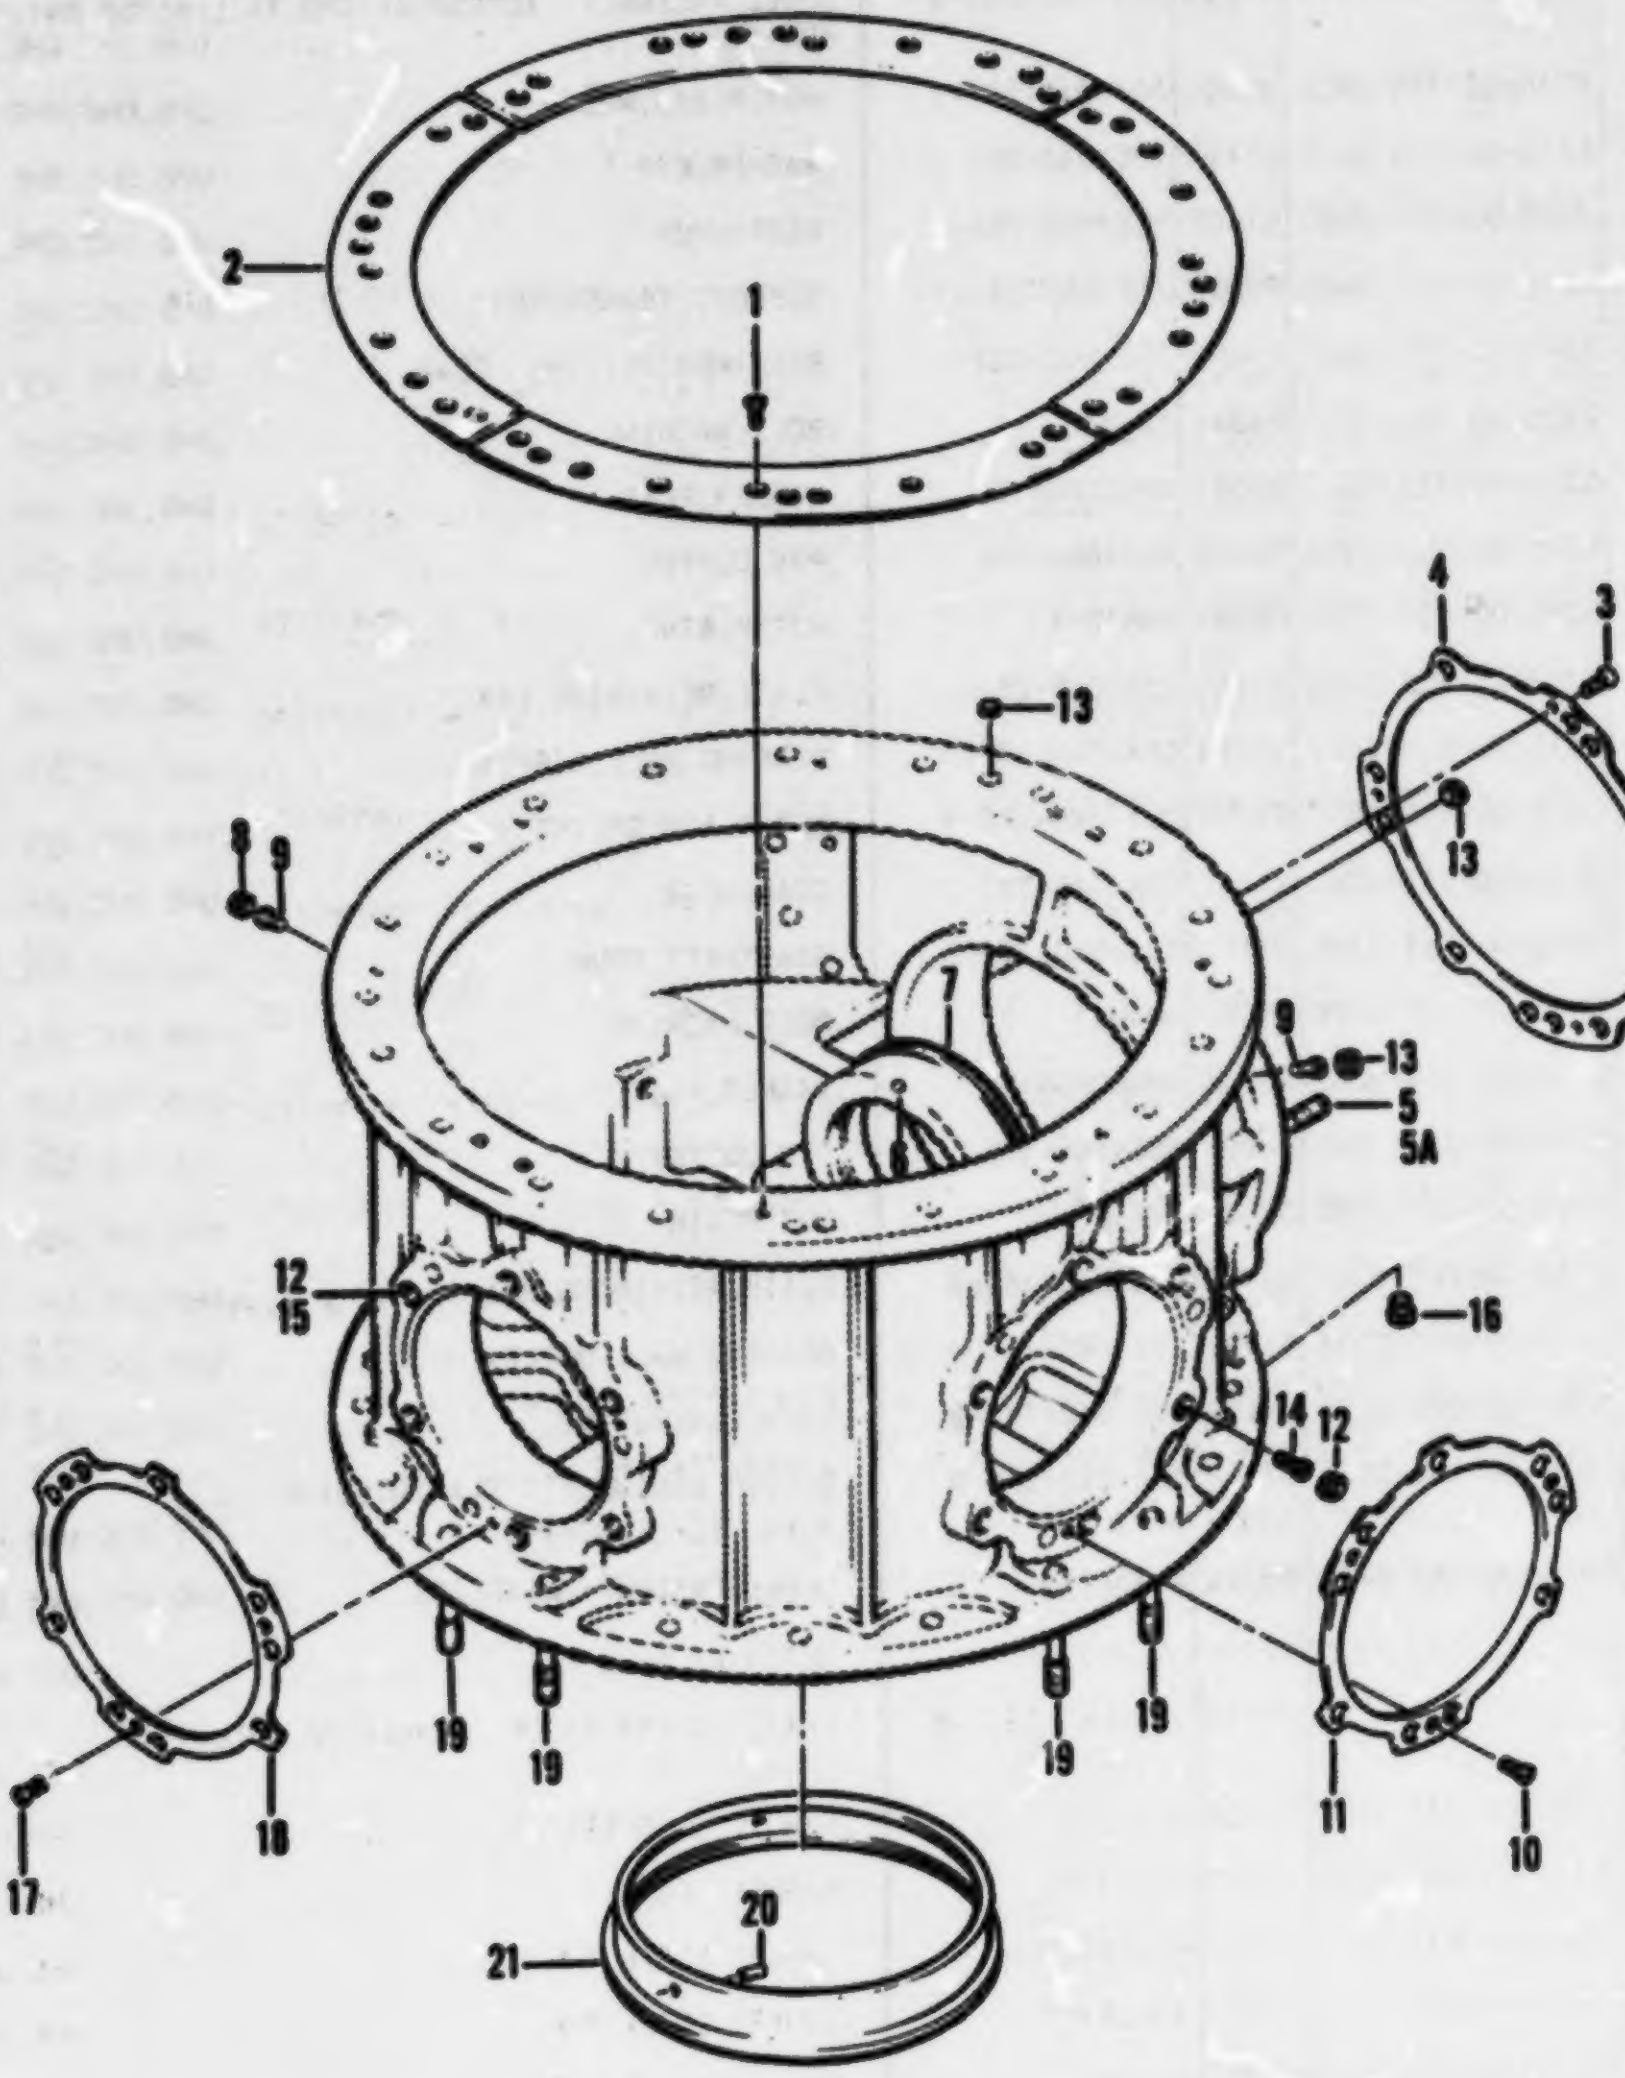
2
1
4
3
13
13
8
9
7
9
13
5
5A
12
15
16
14
12
19
19
19
19
18
17
11
10
20
21

Figure 162. Case Assembly, Transmission

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
162		PADDD	1615-00-874-0857	97499	204-040-353-23	CASE ASSEMBLY, TRANSMISSION SEE FIG 159 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
162	1	PADZZ	5305-00-957-7817	96906	MS24693S26	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	12
162	2	MDOZZ		97499	204-040-353-11	.PLATE,TRANSMISSION	UHE,UHH,UHM,UHV,UHX	EA	1
162	3	PADZZ	5305-00-957-7815	96906	MS24693S4	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	3
162	4	MDOZZ		97499	204-040-353-13	.PLATE,TRANSMISSION INPUT QUILL SHIM	UHE,UHH,UHM,UHV,UHX	EA	1
162	5	PAOZZ	5307-00-893-6016	88044	AN126978	.STUD,PLAIN -STANDARD	UHE,UHH,UHM,UHV,UHX	EA	4
162	5	PAOZZ	5307-00-446-8857	97499	205-040-308-3	.STUD,PLAIN -STANDARD	UHE,UHH,UHM,UHV,UHX	EA	3
162	5	PAOZZ	5307-00-207-3506	88044	AN126979	.STUD,PLAIN -0.003 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
162	5	PAOZZ	5307-00-415-1662	97499	205-040-308-5	.STUD,PLAIN -0.003 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
162	5	PAOZZ	5307-00-208-03[illegible]	88044	AN126980	.STUD,PLAIN -0.006 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
162	5	PAOZZ	5307-00-418-1284	97499	205-040-308-7	.STUD,PLAIN -0.006 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
162	5	PAOZZ	5307-00-840-7780	88044	AN126981	.STUD,PLAIN -0.009 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
162	5	PAOZZ	5307-00-243-3647	97499	205-040-308-9	.STUD,PLAIN -0.009 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
162	5	PAOZZ	5307-00-840-8614	88044	AN126982	.STUD,PLAIN -0.012 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
162	5	PAOZZ	5307-00-446-8861	97499	205-040-308-11	.STUD,PLAIN -0.012 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
162	5A	XBOZZ	5305-00-064-3724	80205	NAS1081C4A4N	.SETSCREW U/W PN 205-040-308 SERIES	UHE,UHH,UHM,UHV,UHX	EA	3
162	6	PBOZZ	5315-00-060-2824	96906	MS24692-173P	.PIN,TAPERED,PLAIN	UHE,UHH,UHM,UHV,UHX	EA	3
162	7	PADDA	3130-00-797-2435	97499	204-040-274-1	.LINER,BEARING HOUSI	UHE,UHH,UHM,UHV,UHX	EA	1
162	8	PADZZ	5365-00-682-5877	83324	RL28S88	.RING,LOCK,SERRATED	UHE,UHH,UHM,UHV,UHX	EA	4
162	9	PADZZ	5340-00-290-5092	83324	RD206S88L	.INSERT,SCREW THR	UHE,UHH,UHM,UHV,UHX	EA	4
162	10	PADZZ	5305-00-957-7815	96906	MS24693S4	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	3
162	11	MDOZZ		97499	204-040-353-15	.PLATE,TRANSMISSION GENERATOR QUILL	UHE,UHH,UHM,UHV,UHX	EA	1
162	12	PADZZ	5365-00-382-6607	83324	RL38S89	.RING,LOCK,SERRATED	UHE,UHH,UHM,UHV,UHX	EA	12
162	13	PADZZ	5310-00-860-0639	83324	RZA11194	.WASHER,LOCK	UHE,UHH,UHM,UHV,UHX	EA	12
162	14	PADZZ	5340-00-631-7077	83324	RD208SB10L	.INSERT,SCREW THR	UHE,UHH,UHM,UHV,UHX	EA	6
162	15	PAOZZ	5340-00-631-7077	83324	RD208SB10L	.INSERT,SCREW THR	UHE,UHH,UHM,UHV,UHX	EA	6
162	16	PADZZ	5310-00-596-5477	83324	REA048	.NUT,PLAIN,SPLINE	UHE,UHH,UHM,UHV,UHX	EA	3
162	17	PADZZ	5305-00-957-7815	96906	MS24693S4	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	3
162	18	MDOZZ		97499	204-040-353-17	.PLATE,TRANSMISSION QUILL	UHE,UHH,UHM,UHV,UHX	EA	1
162	19	PADZZ	5307-00-893-6019	88044	AN126996	.STUD,PLAIN -STANDARD	UHE,UHH,UHM,UHV,UHX	EA	6
162	19	XDOZZ	5307-00-899-8871	88044	AN126997	.STUD,PLAIN -0.003 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
162	19	XDOZZ	5307-00-893-6017	88044	AN126998	.STUD,PLAIN -0.006 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
162	19	XDOZZ	5307-00-879-9546	88044	AN126999	.STUD,PLAIN -0.009 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
162	19	XDOZZ	5307-00-823-8797	88044	AN127000	.STUD,PLAIN -0.012 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
182	20	PADZZ	5315-00-889-4189	96906	MS24692-208P	.PIN,TAPERED,PLAI..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
182	21	PADZZ	3130-00-797-2433	97499	204-040-168-1	.LINER,BEARING HOUSI..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

PAGE 14 OF REPORT-NO. 5459-40 08-02-8

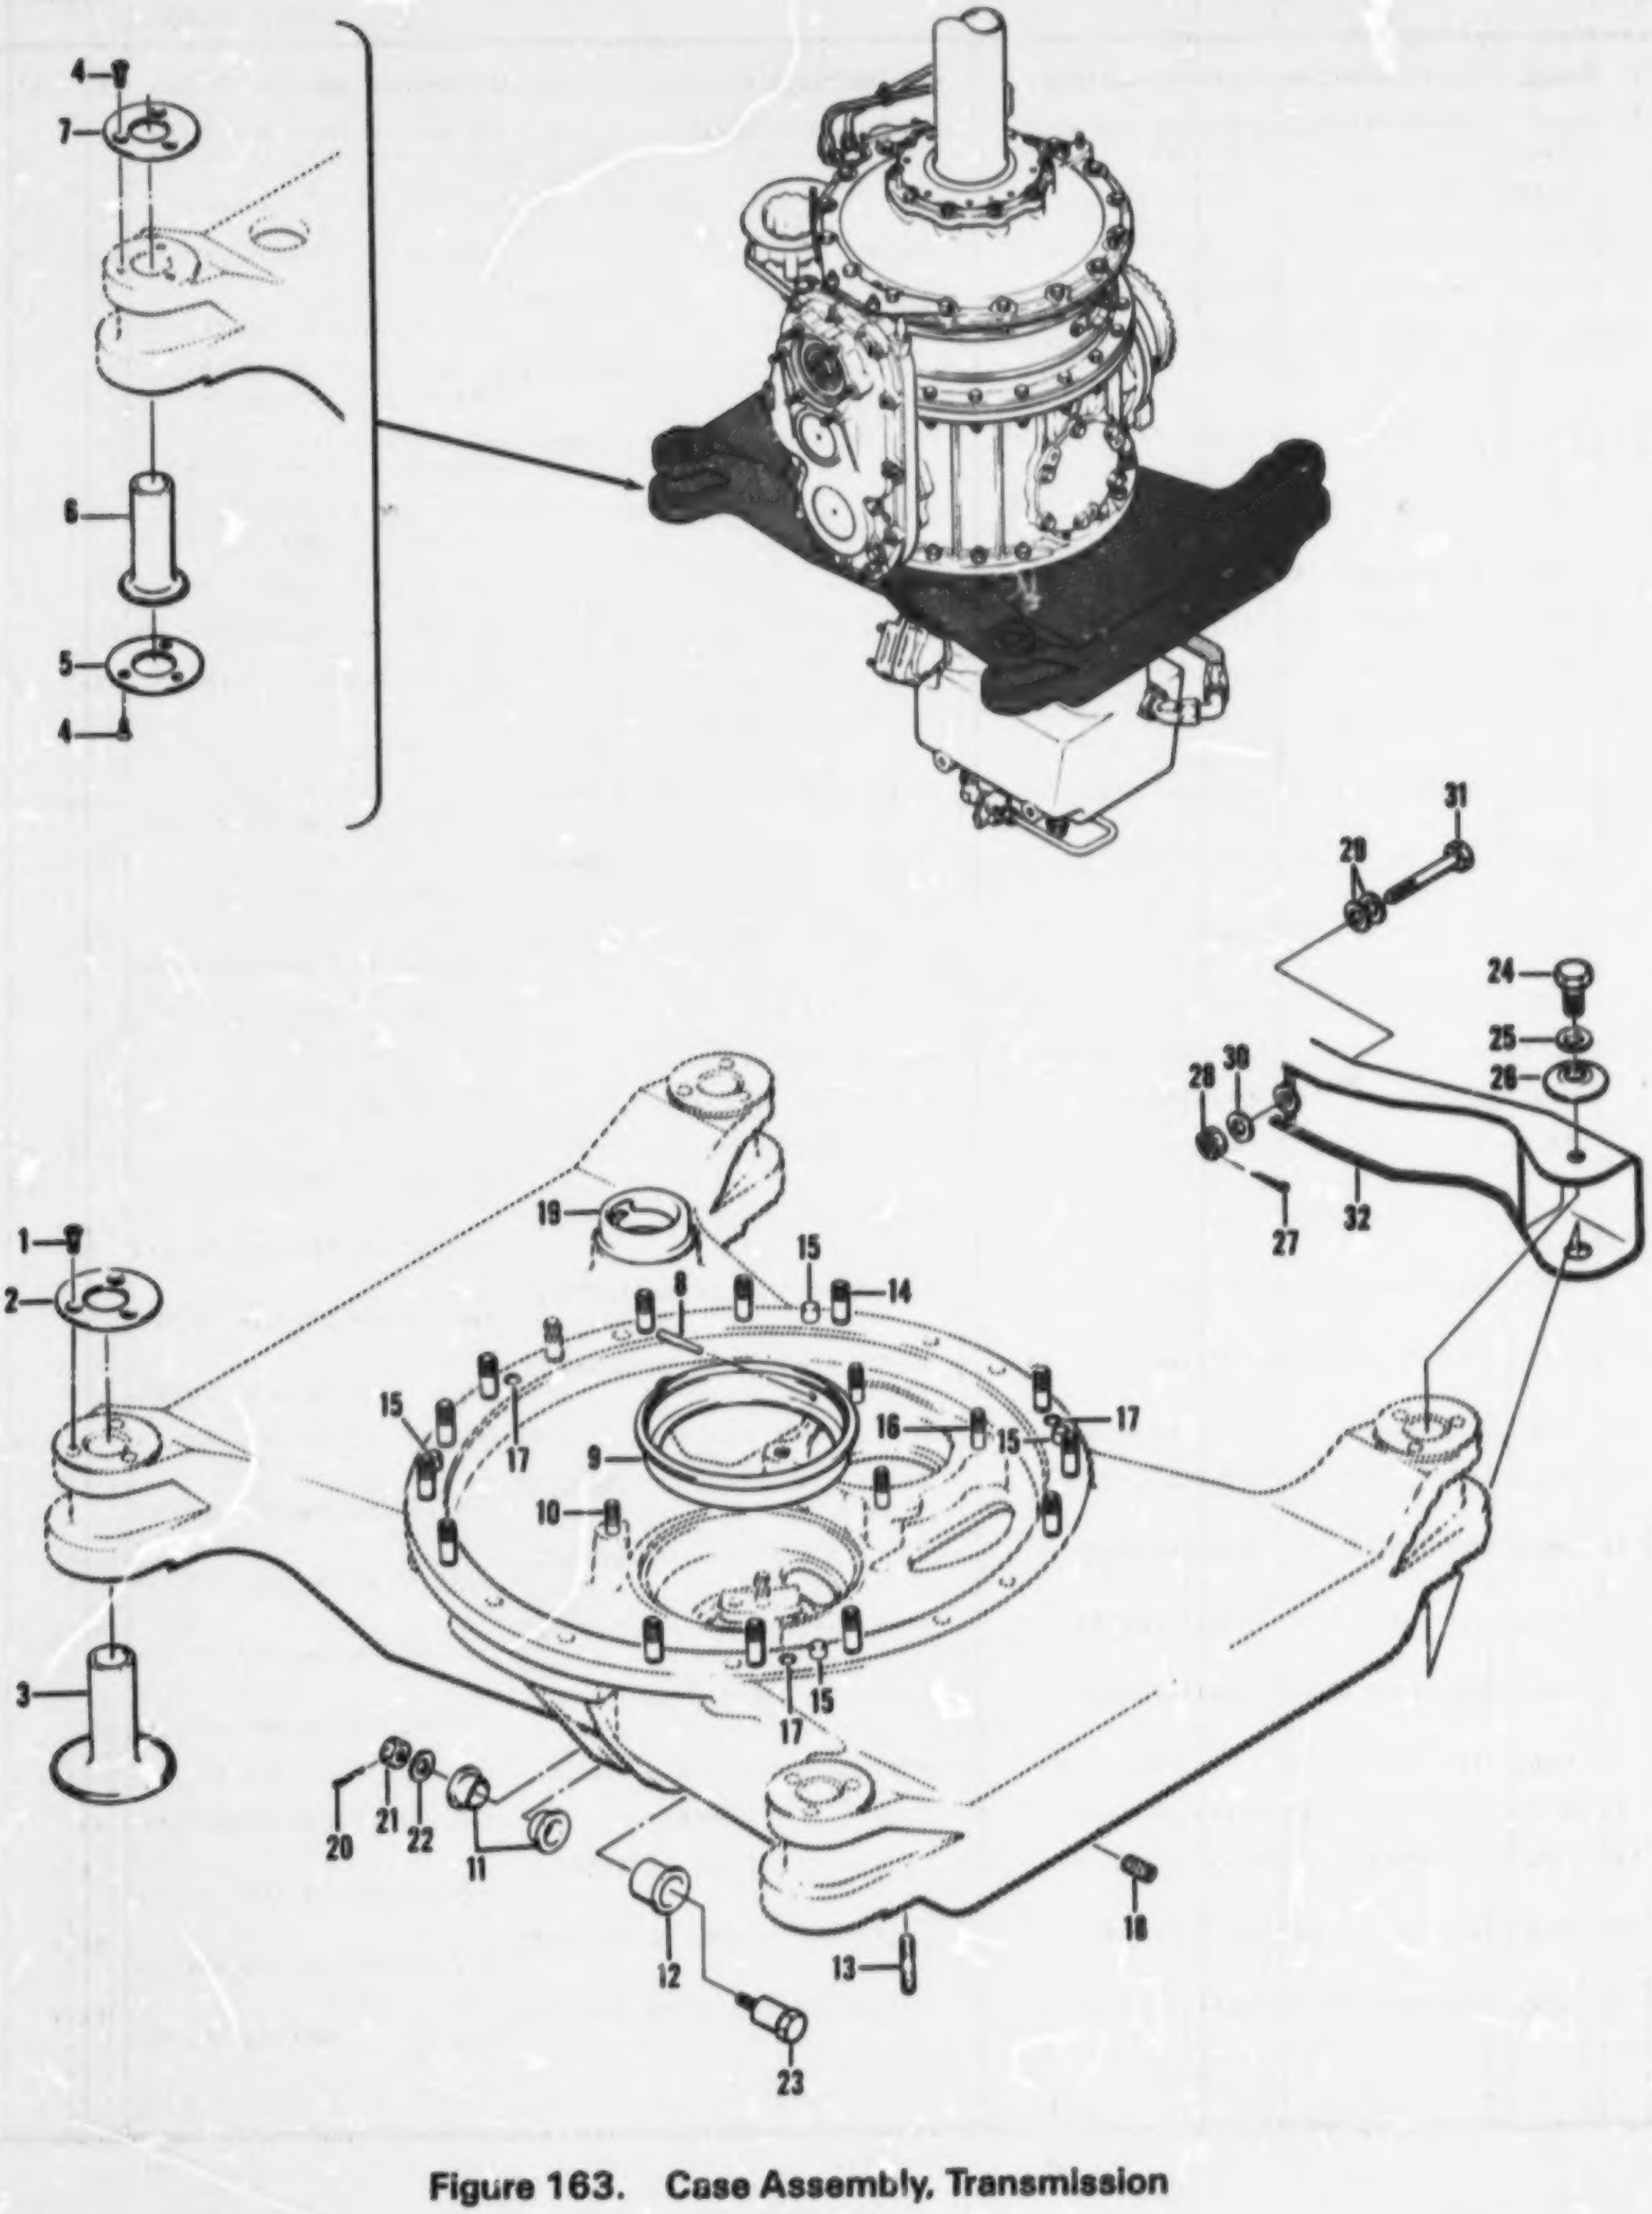
4
7
6
5
4
31
29
24
25
26
28
30
32
27
19
1
2
15
14
8
15
17
16
17
15
9
10
3
17
15
20
21
22
11
12
13
18
23

Figure 163. Case Assembly, Transmission

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
163		PADOO	1615-00-996-7491	97499	204-040-364-9	CASE ASSEMBLY, TRANSMISSION SEE FIG 159 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
163	1	PADZZ	5305-00-958-6373	96906	MS24693S51	.SCREW,MACHINE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
163	2	PADZZ	3110-00-691-2159	97499	204-040-236-1	.PLATE,RETAINING, BEARING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
163	3	PADZZ	3120-00-624-5239	97499	204-040-235-1	.BUSHING,SLEEVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
163	4	PADZZ	5305-00-958-6373	96906	MS24693S51	.SCREW,MACHINE ALTERNATE METHOD OF INSTALLATION ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	24
163	5	PADZZ	3110-00-125-4105	97499	204-040-736-1	.PLATE,RETAINING, BEARING-ALTERNATE METHOD OF INSTALLATION ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
163	6	PADZZ	3120-00-127-2442	97499	204-040-735-1	.BUSHING,SLEEVE ALTERNATE METHOD OF INSTALLATION ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
163	7	PADZZ	3110-00-691-2159	97499	204-040-236-1	.PLATE,RETAINING, BEARING-ALTERNATE METHOD OF INSTALLATION ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
163	8	PBDZZ	5315-00-060-2826	96906	MS24692-98P	.PIN,TAPERED,PLAIN........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
163	9	PADZZ	3130-00-797-1035	97499	204-040-166-3	.LINER,BEARING........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
163	10	XDDZZ	5307-00-807-6022	88044	AN128436	.STUD,PLAIN -STANDARD........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
163	10	XDDZZ	5307-00-206-7417	88044	AN128437	.STUD,PLAIN -0.003 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	10	PADZZ	5307-00-206-7418	88044	AN128438	.STUD,PLAIN -0.006 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	10	XBDZZ	5307-00-823-8790	88044	AN128439	.STUD,PLAIN -0.009 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	10	XDDZZ	5307-00-857-2394	88044	AN128440	.STUD,PLAIN -0.012 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	11	PADZZ	3120-00-625-0061	97499	22-012-36-28-34	.BUSHING,SLEEVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
163	12	PADZZ	3120-00-711-6196	97499	22-014-47-58-34	.BUSHING,SLEEVE........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
163	13	PADZZ	5307-00-264-2448	88044	AN126012	.STUD,PLAIN -STANDARD........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	13
163	13	PBDZZ	5307-00-637-5233	88044	AN126019	.STUD,PLAIN -0.003 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	13	PADZZ	5307-00-637-5212	88044	AN126020	.STUD,PLAIN -0.006 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	13	PBDZZ	5307-00-637-1642	88044	AN126021	.STUD,PLAIN -0.009 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	13	PBDZZ	5307-00-579-0458	88044	AN126022	.STUD,PLAIN -0.012 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	14	XDDZZ	5307-00-893-6015	88044	AN126966	.STUD,PLAIN -STANDARD........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	14
163	14	PADZZ	5307-00-893-6014	88044	AN126967	.STUD,PLAIN -0.003 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	14	XBDZZ	5307-00-893-6013	88044	AN126968	.STUD,PLAIN -0.006 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	14	XDDZZ	5307-00-879-9548	88044	AN126969	.STUD,PLAIN -0.009 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	14	XDDZZ	5307-00-879-9547	88044	AN126970	.STUD,PLAIN -0.012 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	15	PADZZ	5315-01-022-7618	97499	212-040-198-1	.PIN,STRAIGHT,HEADLE HEADLESS....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
163	16	XDDZZ	5307-00-807-7610	88044	AN128448	.STUD,PLAIN -STANDARD........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
163	16	XDDZZ	5307-00-811-5679	88044	AN128449	.STUD,PLAIN -0.003 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	16	XDDZZ	5307-00-811-5680	88044	AN128450	.STUD,PLAIN -0.006 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
163	16	XDDZZ	5307-00-879-9552	88044	AN128451	.STUD,PLAIN -0.009 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
(A) FIG. NO.	(B) ITEM NO.							
163	16	XDOZZ	5307-00-879-9549	88044	AN128452	.STUD,PLAIN -0.012 IN. OVERSIZE .... UHE,UHH,UHM,UHV,UHX	EA	V
163	17	PADZZ	5310-00-880-0639	83324	RZA11194	.WASHER,LOCK........ UHE,UHH,UHM,UHV,UHX	EA	3
163	18	PADZZ	5340-00-291-3493	96906	MS21208F6-10	.INSERT,SCREW THREAD........ UHE,UHH,UHM,UHV,UHX	EA	1
163	19	PAOZZ	1615-00-690-7294	78587	FC3862	.ADAPTER ASSEMBLY........ UHE,UHH,UHM,UHV,UHX	EA	1
163		XCFZZ		97499	205-200-003-5	PYLON INSTL SEE FIG.5 FOR NHA SEE FIG.128 FOR BALANCE OF BRKDN........UHE,UHH,UHV,UHX	EA	1
163		XCFZZ		97499	205-200-003-9	PYLON INSTL SEE FIG.5 FOR NHA SEE FIG.128 FOR BALANCE OF BRKDN........UHE,UHH,UHV,UHX	EA	1
163		XCFZZ		97499	205-200-003-13	PYLON INSTL SEE FIG.5 FOR NHA SEE FIG.128 FOR BALANCE OF BRKDN........UHE,UHH,UHV,UHX	EA	1
163		XCFZZ		97499	205-200-003-17	PYLON INSTL SEE FIG.5 FOR NHA SEE FIG.128 FOR BALANCE OF BRKDN........UHE,UHH,UHV,UHX	EA	1
163		XCFZZ		97499	205-200-003-55	PYLON INSTL SEE FIG.5 FOR NHA SEE FIG 128 FOR BALANCE OF BRKDN........UHE,UHH,UHV,UHX	EA	1
163	20	PBOZZ	5315-00-236-8359	96906	MS24665-370	.PIN,COTTER........ UHE,UHH,UHM,UHV,UHX	EA	1
163	21	PAOZZ	5310-00-176-8113	88044	AN320-9	.NUT,PLAIN,SLOTTED,H........ UHE,UHH,UHM,UHV,UHX	EA	1
163	22	PAOZZ	5310-00-167-0824	88044	AN960-916	.WASHER,FLAT........ UHE,UHH,UHM,UHV,UHX	EA	1
163	23	PAOZZ	1615-00-998-0448	97499	204-040-815-1	.BOLT ASSY........ UHE,UHH,UHM,UHV,UHX	EA	1
163	24	PAFZZ	5306-00-886-1454	02615	NK9-11	.BOLT,SELF-LOCKING........ UHE,UHH,UHM,UHV,UHX	EA	4
163	25	PAFZZ	5310-00-167-0824	88044	AN960-916	.WASHER,FLAT -MAX OF 2 EA........ UHE,UHH,UHM,UHV,UHX	EA	4
163	26	PAFZZ	5310-00-076-9861	97499	204-030-913-3	.WASHER,RECESSED........ UHE,UHH,UHM,UHV,UHX	EA	4
163	27	PBFZZ	5315-00-236-8359	96906	MS24665-370	.PIN,COTTER........ UHE,UHH,UHM,UHV,UHX	EA	1
163	28	PAFZZ	5310-00-167-1290	88044	AN310-9	.NUT,PLAIN,SLOTTED,H........ UHE,UHH,UHM,UHV,UHX	EA	1
163	29	PAFZZ	5310-00-167-0824	88044	AN960-916	.WASHER,FLAT........ UHE,UHH,UHM,UHV,UHX	EA	V
163	30	PBFZZ	5310-00-167-0840	88044	AN960-916L	.WASHER,FLAT........ UHE,UHH,UHM,UHV,UHX	EA	4
163	31	PAFZZ	5305-00-151-1793	88044	AN179H42	.BOLT,CLOSE TOLERANG........ UHE,UHH,UHM,UHV,UHX	EA	1
163	31	PAOZZ	5306-00-180-0408	88044	AN179-43	.BOLT,CLOSE ALT FOR P/N AN179H42 WHEN 2 OR MORE WASHERS ARE REQ FOR EYE BOLT ALIGNMENT........ UHE,UHH,UHM,UHV,UHX	EA	1
163	32	PAOOO	1615-00-571-3675	97499	204-030-061-1	.SUPPORT ASSEMBLY........ UHE,UHH,UHM,UHV,UHX	EA	1

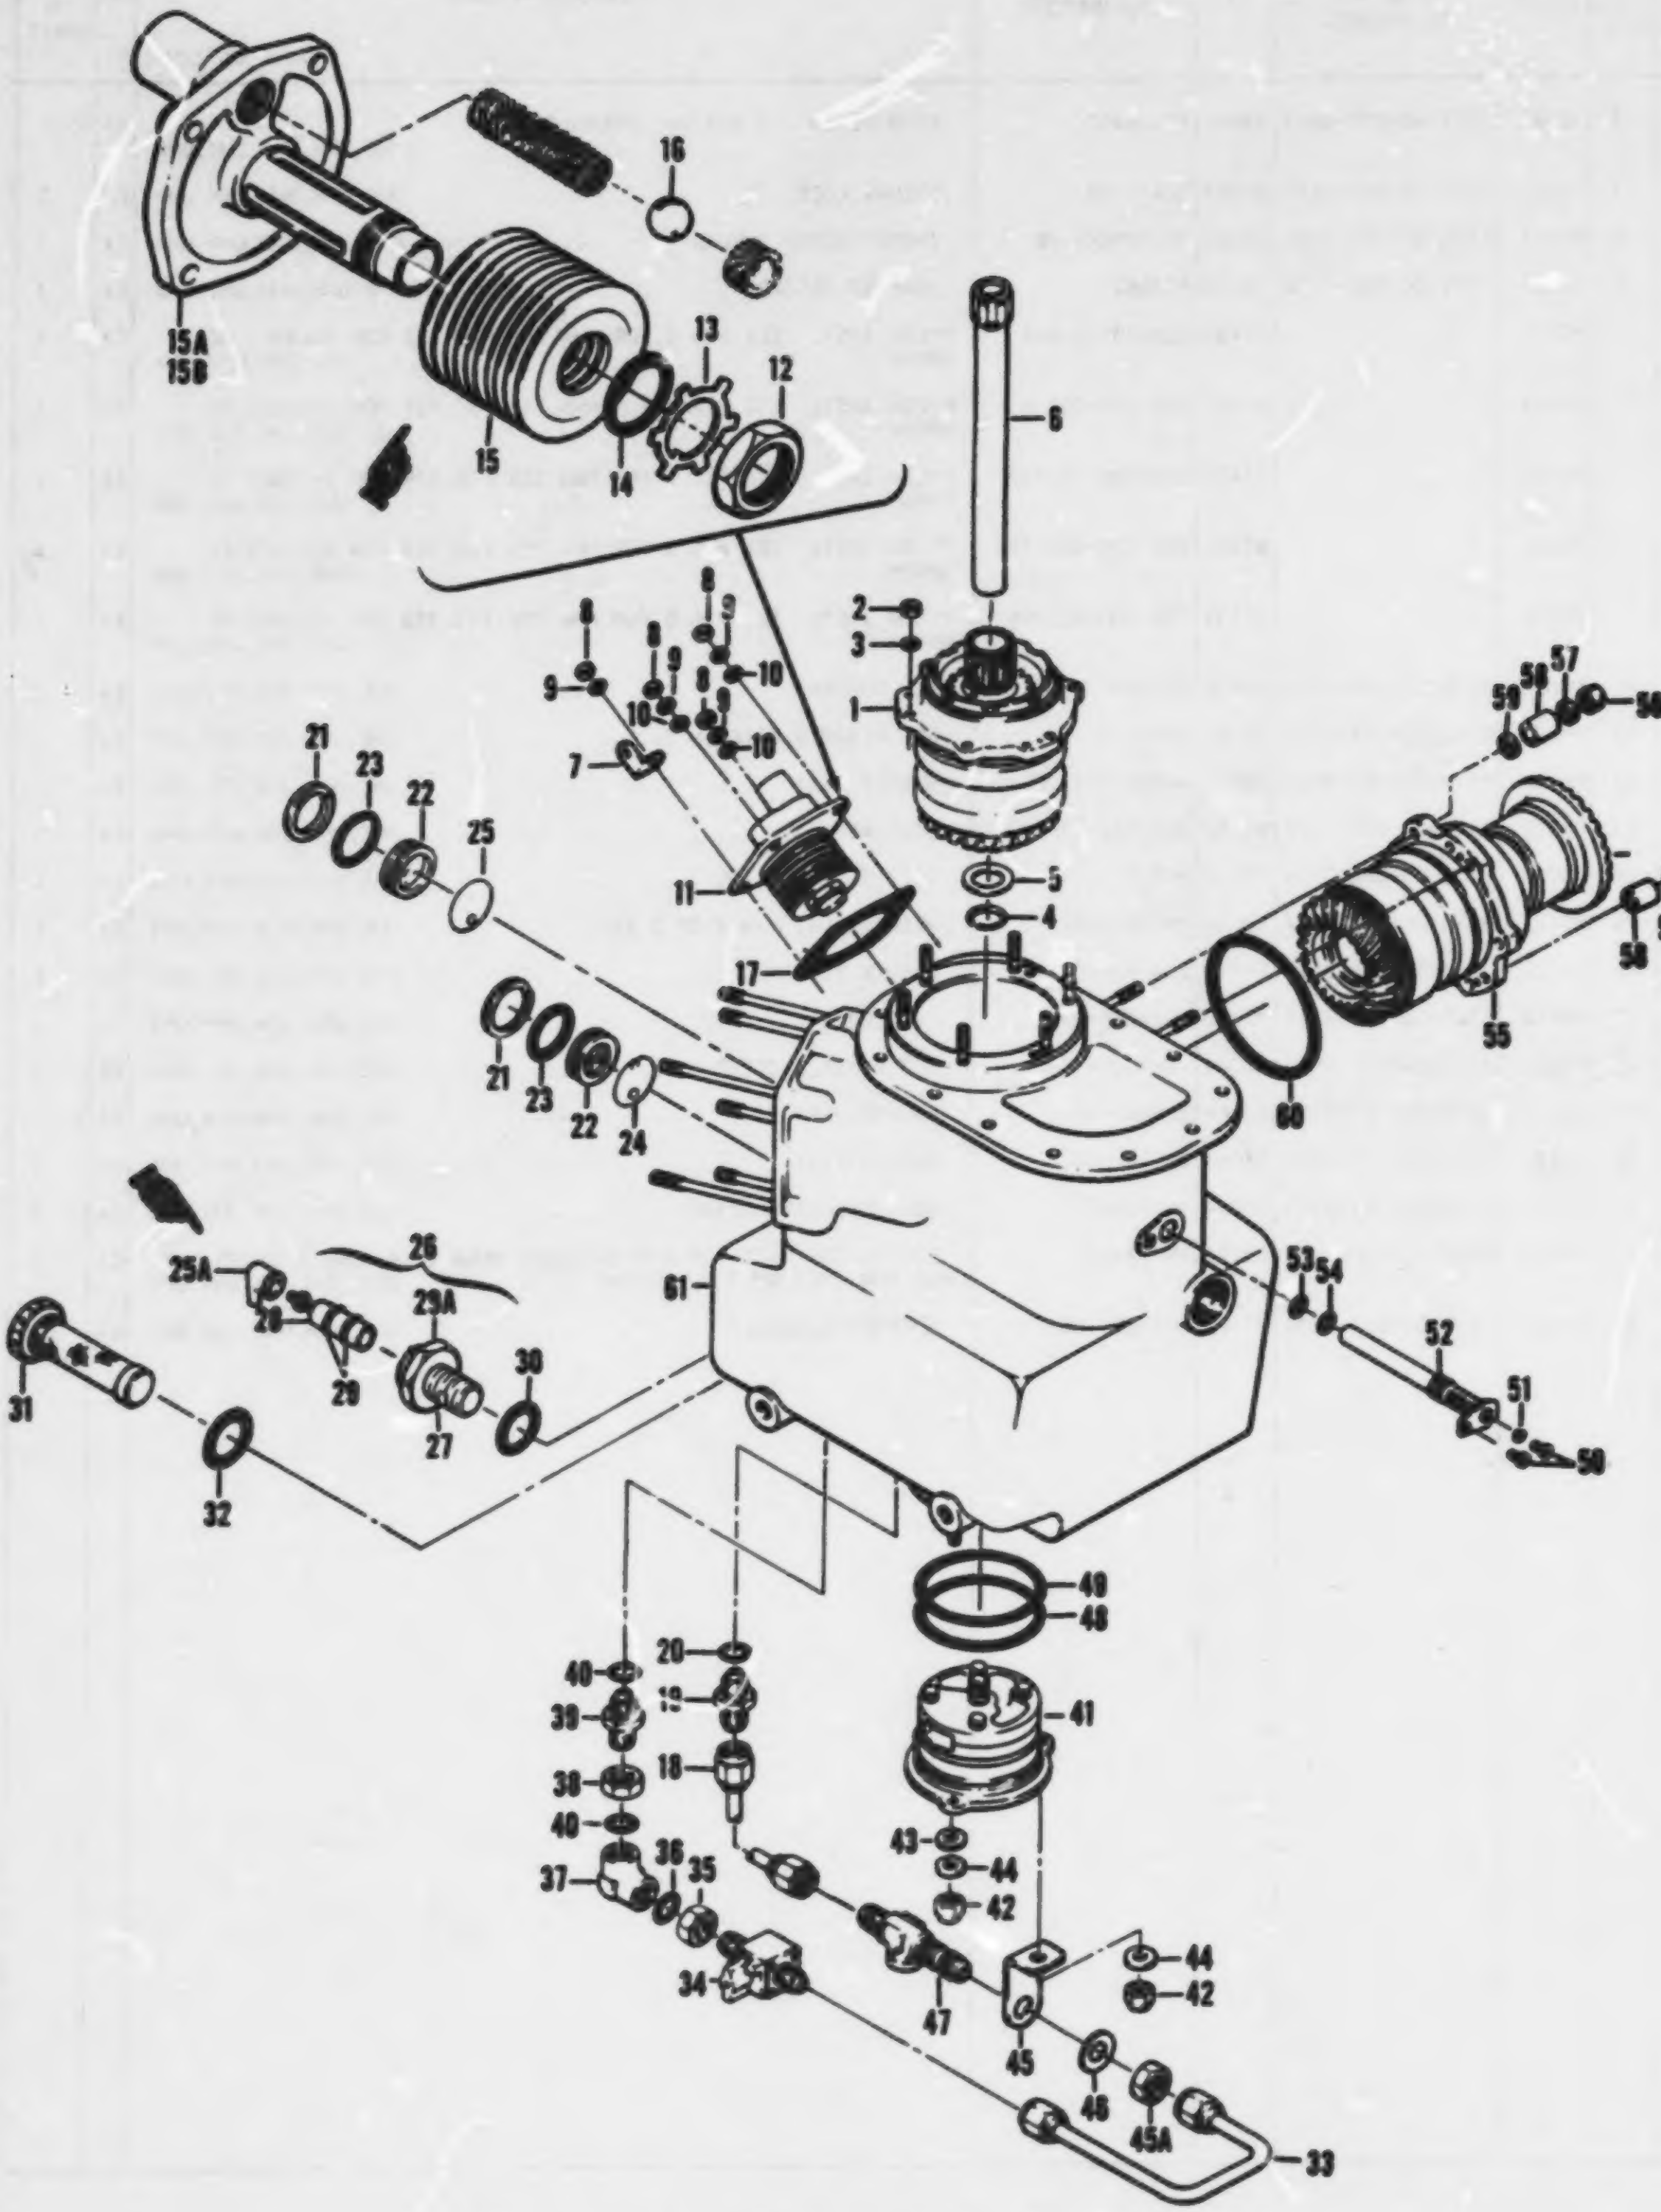
16
15A
15B
13
12
6
15
14
8
9
8
9
2
3
9
10
8
9
1
10
8
9
10
7
21
23
22
25
11
5
4
17
59
58
57
56
56
57
58
55
60
21
23
22
24
26
25A
28
29A
61
53
54
52
51
50
31
29
27
30
32
49
48
40
20
19
39
41
38
18
40
43
44
42
37
36
35
34
47
44
42
45
46
45A
33

Figure 164. Drive and Sump Assembly
(Sheet 1 of 2)

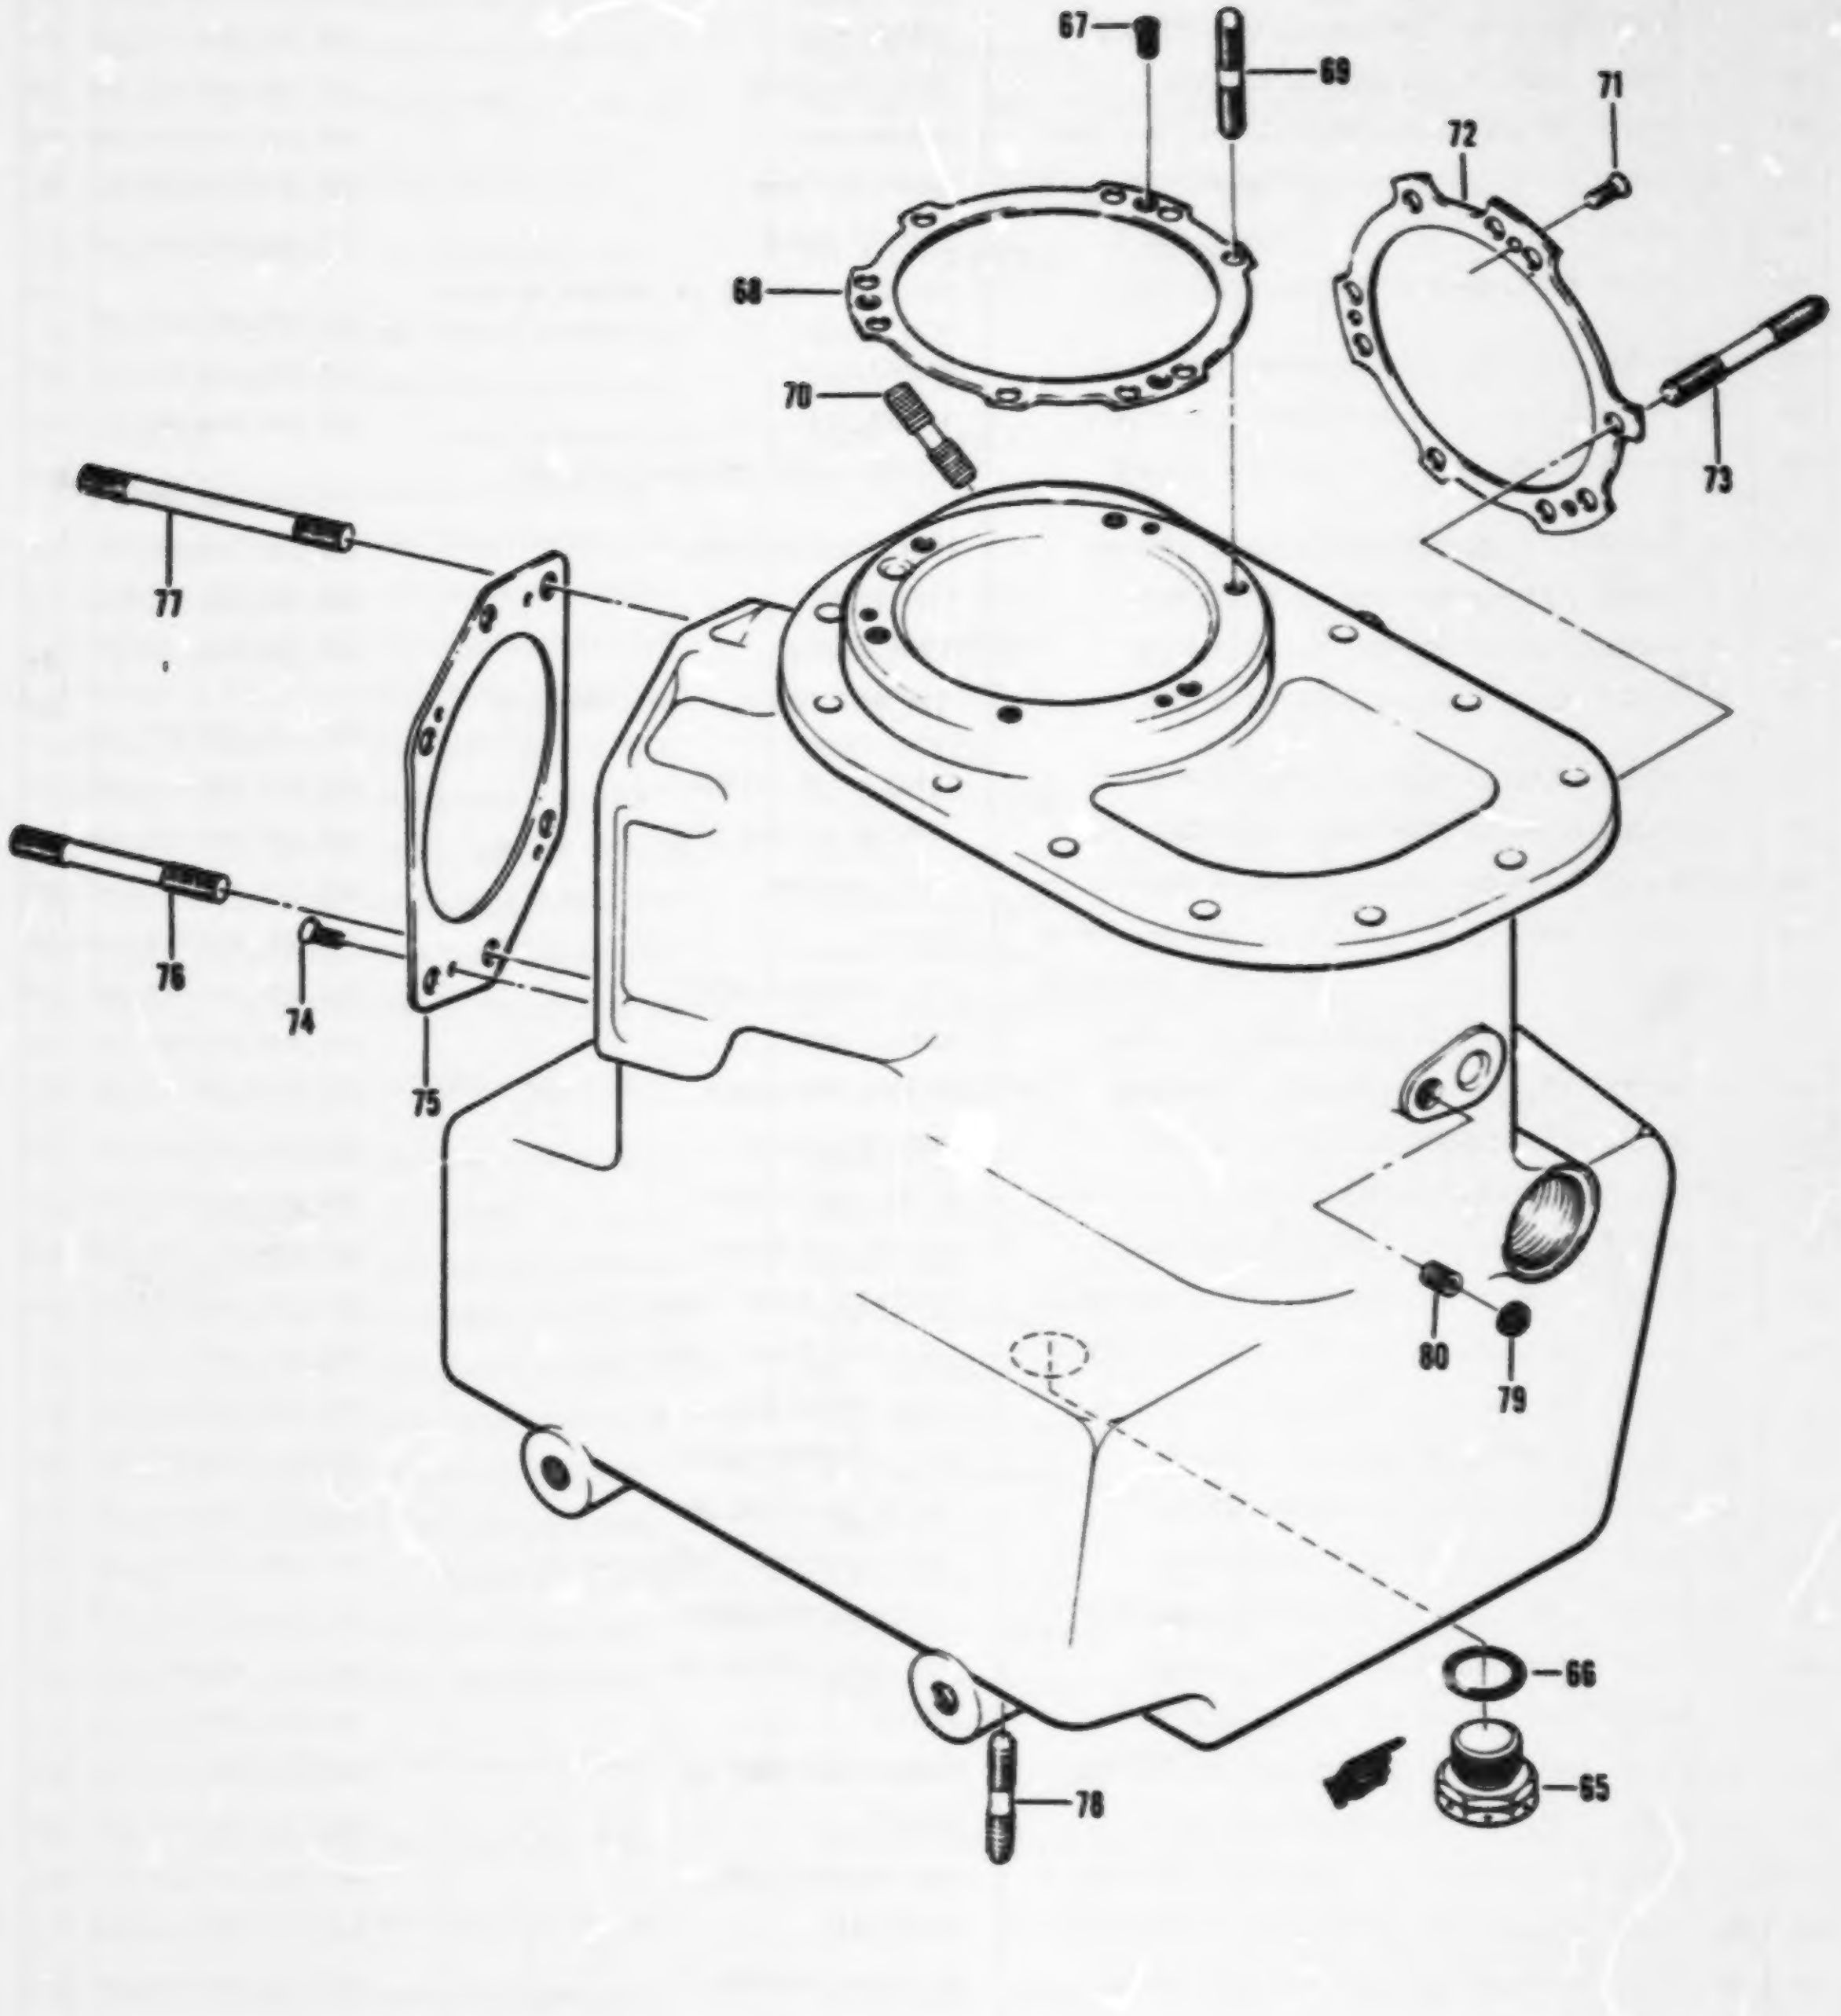
67
69
71
72
68
70
73
77
76
74
75
80
79
66
65
78

Figure 164. Drive and Sump Assembly
(Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
164		ADOZZ		97499	204-040-365-31	DRIVE AND SUMP ASSY SEE FIG. 155 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
164	1	ADOZZ	1615-00-133-7364	97499	204-040-206-9	.QUILL ASSY SEE FIG. 165 FOR BREAKDOWN	UHB,UHC,UHM	EA	1
164	2	PADZZ	5310-00-167-1286	88044	AN310-4	.NUT,PLAIN	UHE,UHH,UHM,UHV,UHX	EA	6
164	3	PADZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	6
164	4	PADZZ	5365-00-893-1698	80756	RS90L	.RING,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
164	5	PADZZ	5310-00-584-8249	97499	204-040-196-1	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	1
164	6	PADZZ	1615-00-798-3642	97499	204-040-197-3	.SHAFT,OIL PUMP	UHE,UHH,UHM,UHV,UHX	EA	1
164	7	MFOZZ		97499	20-032-2	.BRACKET,ANGLE	UHE,UHH,UHM,UHV,UHX	EA	1
164	8	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	4
164	9	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	4
164	10	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	3
164	11	PAOOO	1615-00-772-7714	00736	02W10116	.FILTER,FLUID PRESSURE ASSEMBLY	UHE,UHH,UHM,UHV,UHX	EA	1
164	12	PAOZZ	5310-00-981-7030	00736	A14064-164	..NUT,PLAIN,HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	1
164	13	PAOZZ	5310-00-981-7031	00736	A14985P	..WASHER,KEY	UHE,UHH,UHM,UHV,UHX	EA	1
164	14	PAOZZ	5365-00-205-9621	00736	02FC135	..SPACER,RING	UHE,UHH,UHM,UHV,UHX	EA	11
164	15	PAOZZ	2910-00-803-9525	00736	B19066	..FILTER ELEMENT, FLUID PRESSURE	UHE,UHH,UHM,UHV,UHX	EA	10
164	15A	XDOZZ	1560-00-758-3655	00736	02W116-213	..SEAT,VALVE,FILTER	UHE,UHH,UHM,UHV,UHX	EA	1
164	15B	PAOZZ	5360-00-373-7264	00736	02S367-110	..SPRING,HELICAL,COMP	UHE,UHH,UHM,UHV,UHX	EA	1
164	16	PAOZZ	3110-00-100-6158	96906	MS19059-57	..BALL,BEARING	UHE,UHH,UHM,UHV,UHX	EA	1
164	17	PAOZZ	5330-00-107-5393	97499	205-040-187-3	.GASKET	UHE,UHH,UHM,UHV,UHX	EA	1
164	18	MFOZZ		97499	204-040-215-27	.TUBE ASSEMBLY,METAL	UHE,UHH,UHM,UHV,UHX	EA	1
164	19	PAOZZ	4730-00-684-6916	96906	MS24392D6	.NIPPLE,TUBE	UHE,UHH,UHM,UHV,UHX	EA	1
164	20	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
164	21	PAOZZ	5365-00-598-0814	80756	RRT150C	.RING,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	2
164	22	PAOZZ	6680-00-765-2855	97499	204-040-514-1	.GLASS,LIQUID SIGHT	UHE,UHH,UHM,UHV,UHX	EA	2
164	23	PCOZZ	5330-00-059-7503	96906	MS9241-218	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	2
164	24	PAOZZ	1615-00-674-4209	97499	204-040-508-7	.INDICATOR,SIGHT GAGE-LOW	UHE,UHH,UHM,UHV,UHX	EA	1
164	25	PAOZZ	1615-00-674-4208	97499	204-040-508-5	.INDICATOR,SIGHT GAGE-FULL	UHE,UHH,UHM,UHV,UHX	EA	1
164	25A	PAOZZ	5975-00-553-7151	96906	MS25171-2S	.CABLE NIPPLE,ELE	UHE,UHH,UHM,UHV,UHX	EA	1
164	26	AOOOO	2995-00-920-2606	97484	B76698	.CHIP DETECTOR,MAGNE	UHE,UHH,UHM,UHV,UHX	EA	1
164	27	PAOZZ	4820-00-494-9613	97484	B7672	..VALVE,SELF CLOSING	UHE,UHH,UHM,UHV,UHX	EA	1
164	28	PAOOO	2995 01 150 7950	97484	B76748	..CHIP DETECTOR, TRANSMISSION	UHE,UHH,UHM,UHV,UHX	EA	1
164	29	PCOZZ	5330-00-800-5180	96906	MS29561-015	...PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	2
164	29A	PAOZZ	5310-00-275-1408	72962	22NTM50	..NUT,SELF-LOCKING,HE	UHE,UHH,UHM,UHV,UHX	EA	1
164	30	PAOZZ	5330-00-883-8221	96906	MS35769-24	.GASKET	UHE,UHH,UHM,UHV,UHX	EA	1
164	31	PAOZZ	1615-00-624-5245	97499	204-040-237-1	.SCREEN ASSY,PUMP IN	UHE,UHH,UHM,UHV,UHX	EA	1
164	32	PAOZZ	5330-00-199-5882	96906	MS35769-26	.GASKET	UHE,UHH,UHM,UHV,UHX	EA	1
164	33	MFOZZ		97499	204-040-215-19	.TUBE ASSEMBLY,METAL	UHE,UHH,UHM,UHV,UHX	EA	1
164	34	PAOZZ	4810-00-546-4969	97499	212-040-232-1	.VALVE,BALL	UHE,UHH,UHM,UHV,UHX	EA	1
164	35	PAOZZ	5310-00-638-2805	96906	MS24400D6	.NUT,PLAIN,HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
164	36	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED................	UHE,UHH,UHM,UHV,UHX	EA	1
164	37	PAOZZ	4730-00-278-3683	88044	AN93906	.ELBOW,BOSS........................	UHE,UHH,UHM,UHV,UHX	EA	1
164	38	PAOZZ	5310-00-638-2605	96906	MS2440006	.NUT,PLAIN,HEXAGON.................	UHE,UHH,UHM,UHV,UHX	EA	1
164	39	PAOZZ	4730-00-640-5099	96906	MS2190006	.NIPPLE,TUBE.......................	UHE,UHH,UHM,UHV,UHX	EA	1
164	40	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED................	UHE,UHH,UHM,UHV,UHX	EA	2
164	41	PAODD	4320-00-150-0309	97499	212-040-184-1	.PUMP,ROTARY SEE FIG.172 FOR BREAKDOWN OF P/N GC2778	UHE,UHH,UHM,UHV,UHX	EA	1
164	41	PAODD	4320-00-150-0309	86329	GC2778	.PUMP,ROTARY SEE FIG.172 FOR BREAKDOWN	UHE,UHH,UHM,UHV,UHX	EA	1
164	42	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	3
164	43	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT.......................	UHE,UHH,UHM,UHV,UHX	EA	2
164	44	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT.......................	UHE,UHH,UHM,UHV,UHX	EA	3
164	45	MFOZZ	!	97499	204-040-299-1	.BRACKET,ANGLE.....................	UHE,UHH,UHM,UHV,UHX	EA	1
164	45A	PAOZZ	5310-00-638-2605	88044	AN924-6D	.NUT,PLAIN,HEXAGON.................	UHE,UHH,UHM,UHV,UHX	EA	1
164	46	PAOZZ	5310-00-167-2402	88044	AN960PD916	.WASHER,FLAT.......................	UHE,UHH,UHM,UHV,UHX	EA	1
164	47	PBOZZ	4730-00-725-3313	96906	MS24388D6	.TEE,TUBE TO BOSS..................	UHE,UHH,UHM,UHV,UHX	EA	1
164	48	PCOZZ	5330-00-045-4559	96906	MS9241-233	.PACKING,PREFORMED................	UHE,UHH,UHM,UHV,UHX	EA	1
164	49	PCOZZ	5330-00-803-9889	96906	MS29561-232	.PACKING,PREFORMED................	UHE,UHH,UHM,UHV,UHX	EA	1
164	50	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE.....................	UHE,UHH,UHM,UHV,UHX	EA	2
164	51	PAOZZ	5330-00-641-4432	25184	110-3-16	.PACKING WITH RETAIN..............	UHE,UHH,UHM,UHV,UHX	EA	1
164	52	PAOZZ	1615-00-797-1032	97499	204-040-298-1	.JET,OIL...........................	UHE,UHH,UHM,UHV,UHX	EA	1
164	53	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED................	UHE,UHH,UHM,UHV,UHX	EA	1
164	54	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED................	UHE,UHH,UHM,UHV,UHX	EA	1
164	55	PAODD	1615-00-795-0661	97499	204-040-207-13	.QUILL ASSEMBLY,TAIL SEE FIG.171 FOR BREAKDOWN	UHE,UHH,UHM,UHV,UHX	EA	1
164	56	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	6
164	57	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT.......................	UHE,UHH,UHM,UHV,UHX	EA	6
164	58	PAOZZ	5365-00-729-4971	80205	NAS43-4-44	.SPACER,SLEEVE.....................	UHE,UHH,UHM,UHV,UHX	EA	6
164	59	PAOZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT.......................	UHE,UHH,UHM,UHV,UHX	EA	6
164	60	PCOZZ	5330-00-726-4153	96906	MS29561-237	.PACKING,PREFORMED................	UHE,UHH,UHM,UHV,UHX	EA	1
164	61	PADDD	1615-00-960-6840	97499	204-040-355-5	.CASE ASSEMBLY,TAIL................	UHE,UHH,UHM,UHV,UHX	EA	1
164	65	PADZZ	5365-00-804-2152	96906	MS9015-09	..PLUG,MACHINE THREAD..............	UHE,UHH,UHM,UHV,UHX	EA	1
164	66	PCDZZ	5330-00-531-2068	80205	NAS617-8	..PACKING,PREFORMED...............	UHE,UHH,UHM,UHV,UHX	EA	1
164	67	PADZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE....................	UHE,UHH,UHM,UHV,UHX	EA	3
164	68	MDOZZ		97499	204-040-355-11	..PLATE,ROTOR DRIVE................	UHE,UHH,UHM,UHV,UHX	EA	1
164	69	XDOZZ	5307-00-807-5025	88044	AN128424	..STUD,PLAIN -STANDARD............	UHE,UHH,UHM,UHV,UHX	EA	6
164	69	PADZZ	5307-00-844-9201	88044	AN128431	..STUD,PLAIN -0.003 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
164	69	XDOZZ	5307-00-844-9199	88044	AN128432	..STUD,PLAIN -0.006 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
164	69	XDOZZ	5307-00-846-1535	88044	AN128433	..STUD,PLAIN -0.009 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
164	69	XDOZZ	5307-00-879-9551	88044	AN128428	..STUD,PLAIN -0.012 IN. OVERSIZE	UHE,UHH,UHM,UHV,UHX	EA	V
164	70	PAFZZ	5307-00-282-6583	88044	AN126000	..STUD,PLAIN -STANDARD...........	UHE,UHH,UHM,UHV,UHX	EA	4

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
164	70	PAFZZ	5307-00-282-6586	88044	AN126007	..STUD,PLAIN -0.003 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	70	PADDD	5307-00-978-8956	88044	AN126236	..STUD,PLAIN -0.006 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	70	PBFZZ	5307-00-234-2450	88044	AN126009	..STUD,PLAIN -0.009 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	70	PAFZZ	5307-00-559-0222	88044	AN126010	..STUD,PLAIN -0.012 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	71	PAOZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
164	72	MDDZZ	1615-00-488-7627	97499	204-040-355-13	..PLATE,ROTOR DRIVE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
164	73	PBFZZ	5307-00-559-0218	88044	AN126078	..STUD,PLAIN -STANDARD	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
164	73	PBFZZ	5307-00-206-7405	81352	AN126079	..STUD,PLAIN -0.003 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	73	PBDDD	5307-00-206-7406	88044	AN126080	..STUD,PLAIN -0.006 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	73	PAFZZ	5307-00-638-7825	88044	AN126081	..STUD,PLAIN -0.009 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	73	PAFZZ	5307-00-638-7823	88044	AN126082	..STUD,PLAIN -0.012 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	74	PAFZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE	UHB,UHC,UHM	EA	4
164	75	MDDZZ	1615-00-944-8016	97499	204-040-355-15	..PLATE,TRANSMISSION	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
164	76	PBFZZ	5307-00-998-3311	88044	AN126432	..STUD,PLAIN -STANDARD	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
164	76	PBFZZ	5307-00-559-0199	88044	AN126433	..STUD,PLAIN -0.003 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	76	PAFZZ	5307-00-726-0240	88044	AN126434	..STUD,PLAIN -0.006 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	76	PAFZZ	5307-00-841-8571	88044	AN126435	..STUD,PLAIN -0.009 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	76	XBFZZ	5307-00-841-8570	88044	AN126436	..STUD,PLAIN -0.012 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	77	PAFZZ	5307-00-726-0243	88044	AN126474	..STUD,PLAIN -STANDAD	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
164	77	PAFZZ	5307-00-726-0241	88044	AN126475	..STUD,PLAIN -0.003 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	77	XDFZZ	5307-00-726-0244	88044	AN126476	..STUD,PLAIN -0.005 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	77	XDFZZ	5307-00-841-8569	88044	AN126477	..STUD,PLAIN -0.009 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	77	XDFZZ	5307-00-840-7777	88044	AN126478	..STUD,PLAIN -0.012 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	78	PAFZZ	5307-00-282-6583	88044	AN126000	..STUD,PLAIN -STANDARD	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
164	78	PBFZZ	5307-00-206-5469	88044	AN126001	..STUD,PLAIN -0.003 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	78	PBFZZ	5307-00-206-5468	88044	AN126002	..STUD,PLAIN -0.006 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	78	PAFZZ	5307-00-550-0396	88044	AN126004	..STUD,PLAIN -0.012 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
164	79	PADZZ	5365-00-935-3668	96906	MS51990-105	..RING,LOCK,SERRATED	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
164	80	PADZZ	5340-00-597-3309	83324	RD205S87	..INSERT,SCREW THR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

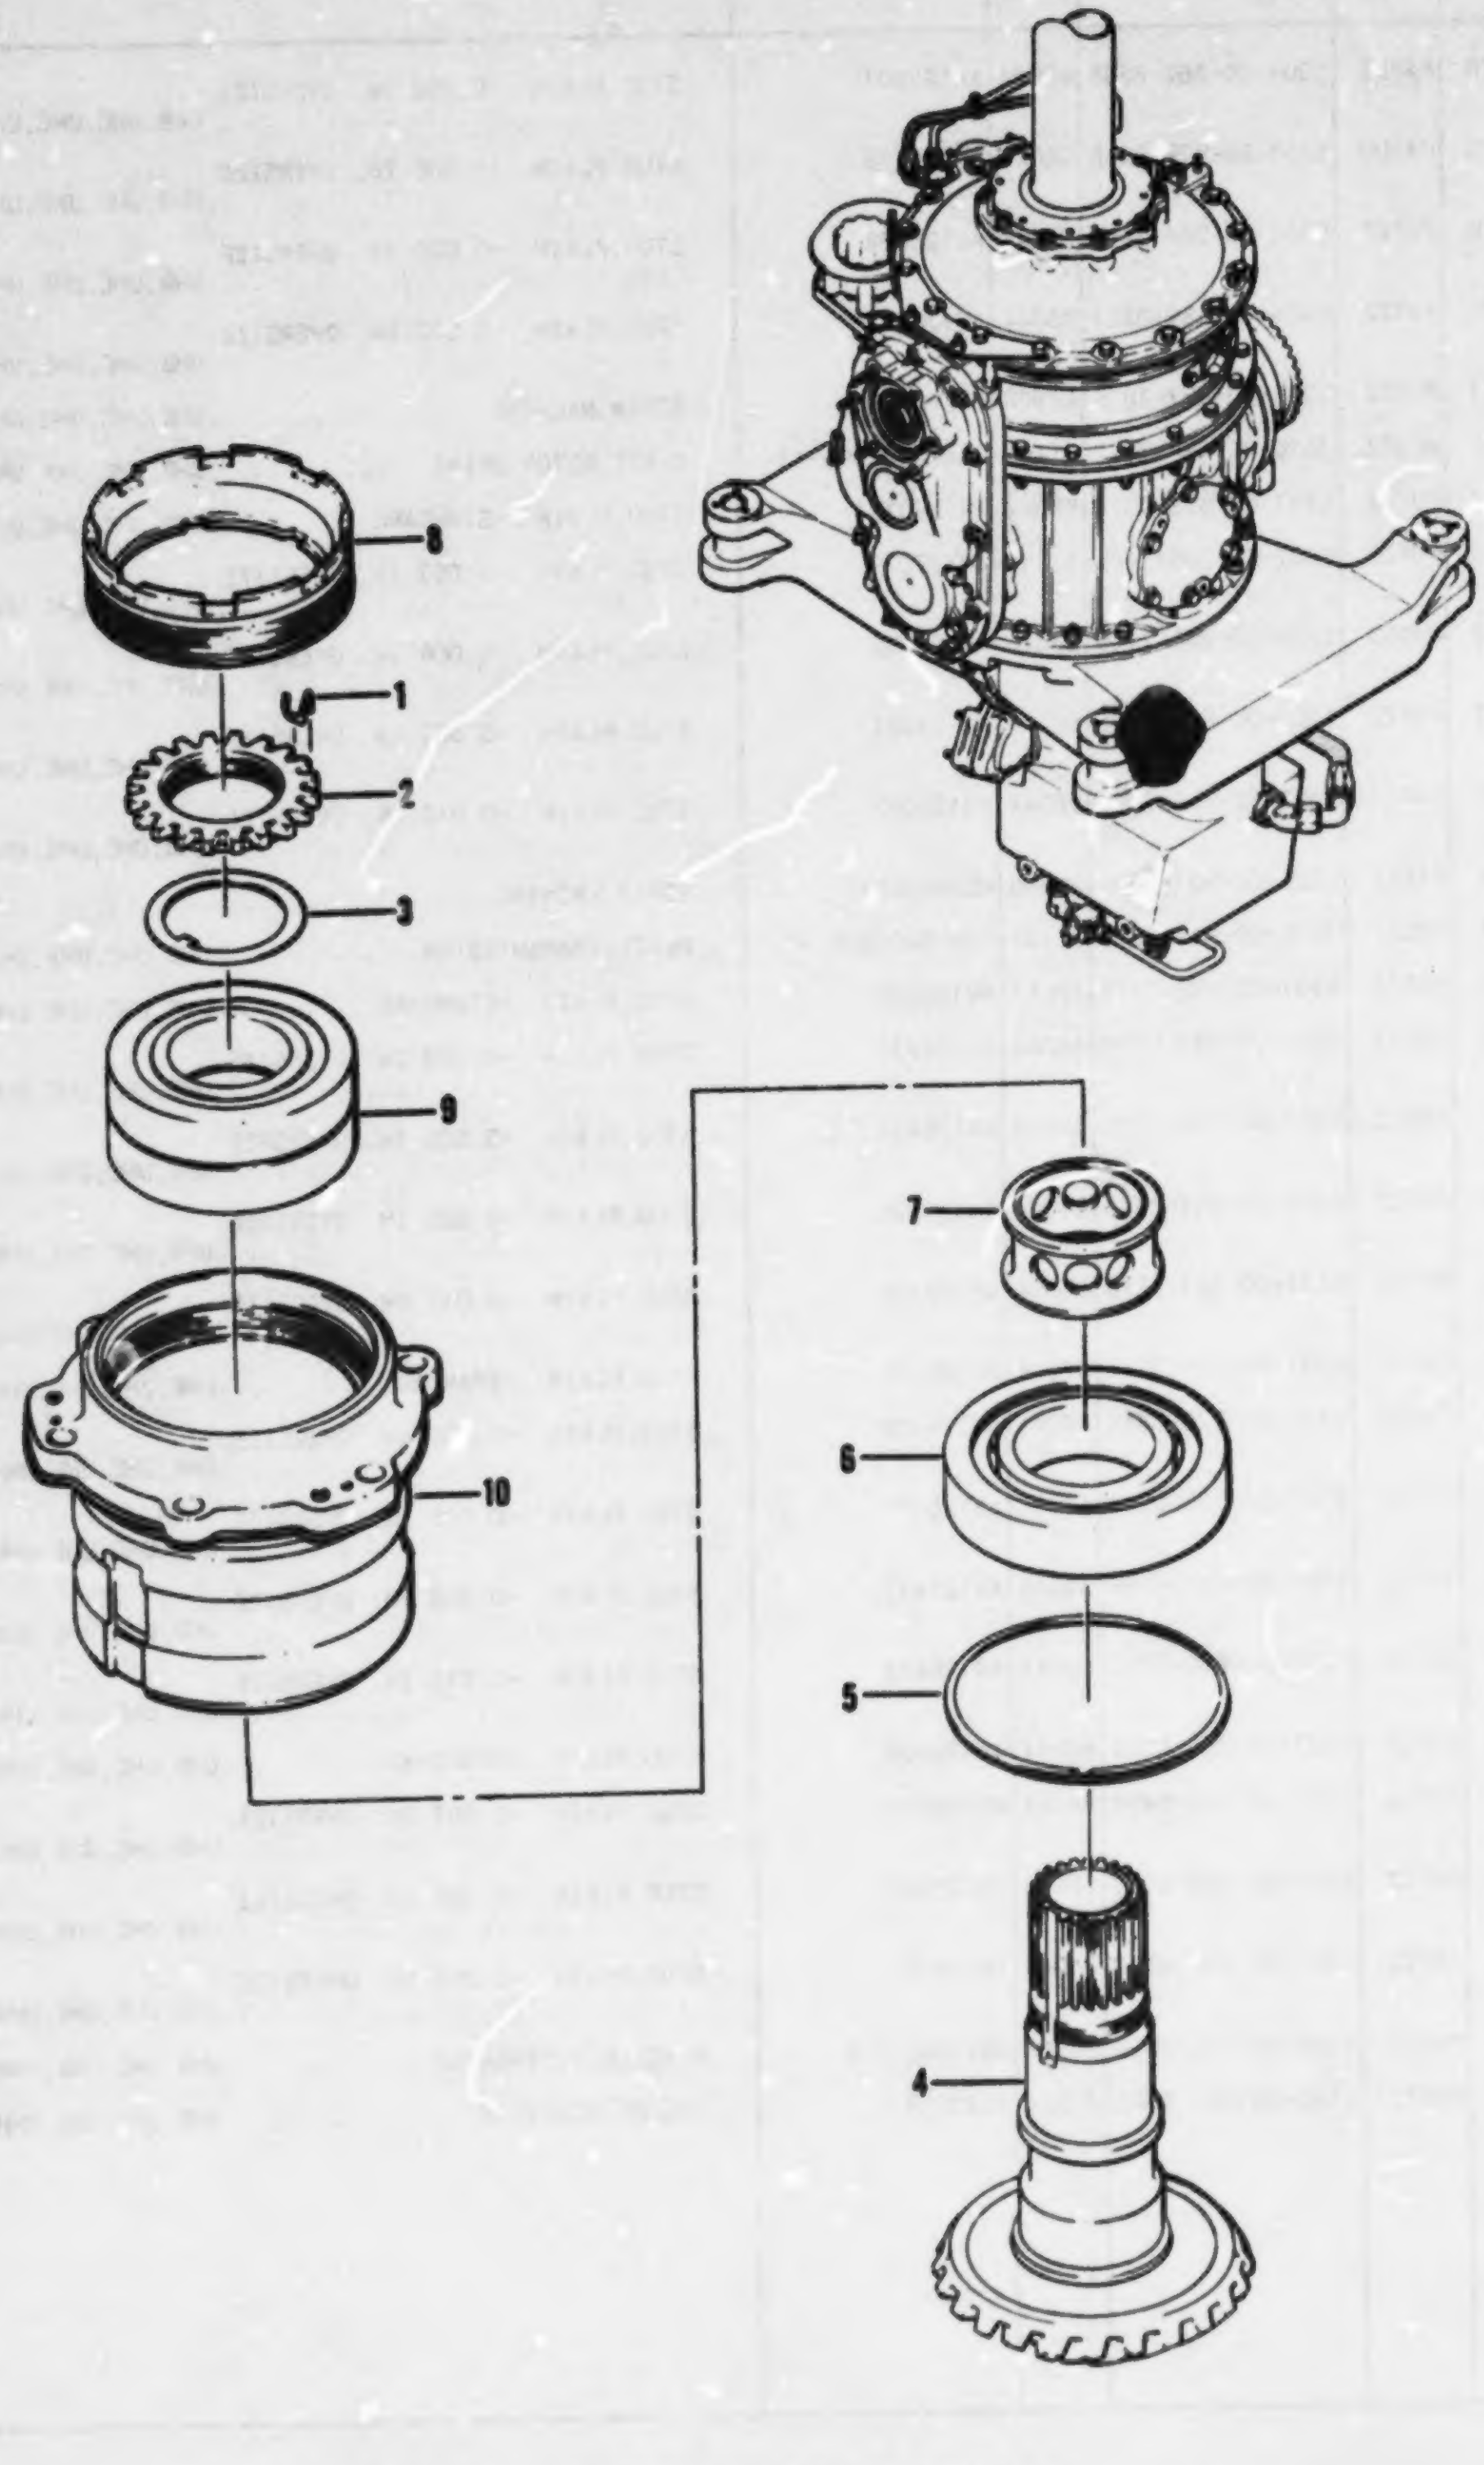
1
2
3
4
5
6
7
8
9
10

Figure 165. Quill Assembly, Tail Rotor

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
165		ADOOZ	1615-00-133-7364	97499	204-040-206-9	QUILL ASSY ROTOR SEE FIG. 164 FOR NHA ....UHB,UHC,UHE.UHH,UHM,UHV,UHX	EA	1
165	1	PADZZ	5340-00-439-8474	97499	204-040-231-1	.CLIP,RETAINER..........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
165	2	PADZZ	5310-00-797-2438	97499	204-040-230-1	.NUT,PLAIN,SPLINE......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
165	3	PADZZ	5310-00-796-9762	97499	204-040-232-1	.WASHER,KEY.............................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
165	4	PADZZ	3040-00-787-4263	97499	204-040-103-7	.GEARSHAFT,BEVEL.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
165	5	PADZZ	5365-00-806-5118	80756	RR314L	.RING,RETAINING........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
165	6	PADDD	3110-00-822-2130	97499	204-040-310-1	.BEARING,ROLLER CYLINDRICAL.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
165	7	PADZZ	3120-00-439-8473	97499	204-040-170-5	.BEARING,SLEEVE.......................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
165	8	PADZZ	5365-00-772-5135	97499	204-040-185-3	.RING,EXTERNALLY THR...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
165	9	PADDD	3110-00-625-0114	97499	204-040-143-1	.BEARING,BALL,DUPLEX...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
165	10	PADZZ	1615-00-798-3643	97499	204-040-305-1	.SLEEVE ASSY,TAIL ROTOR..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

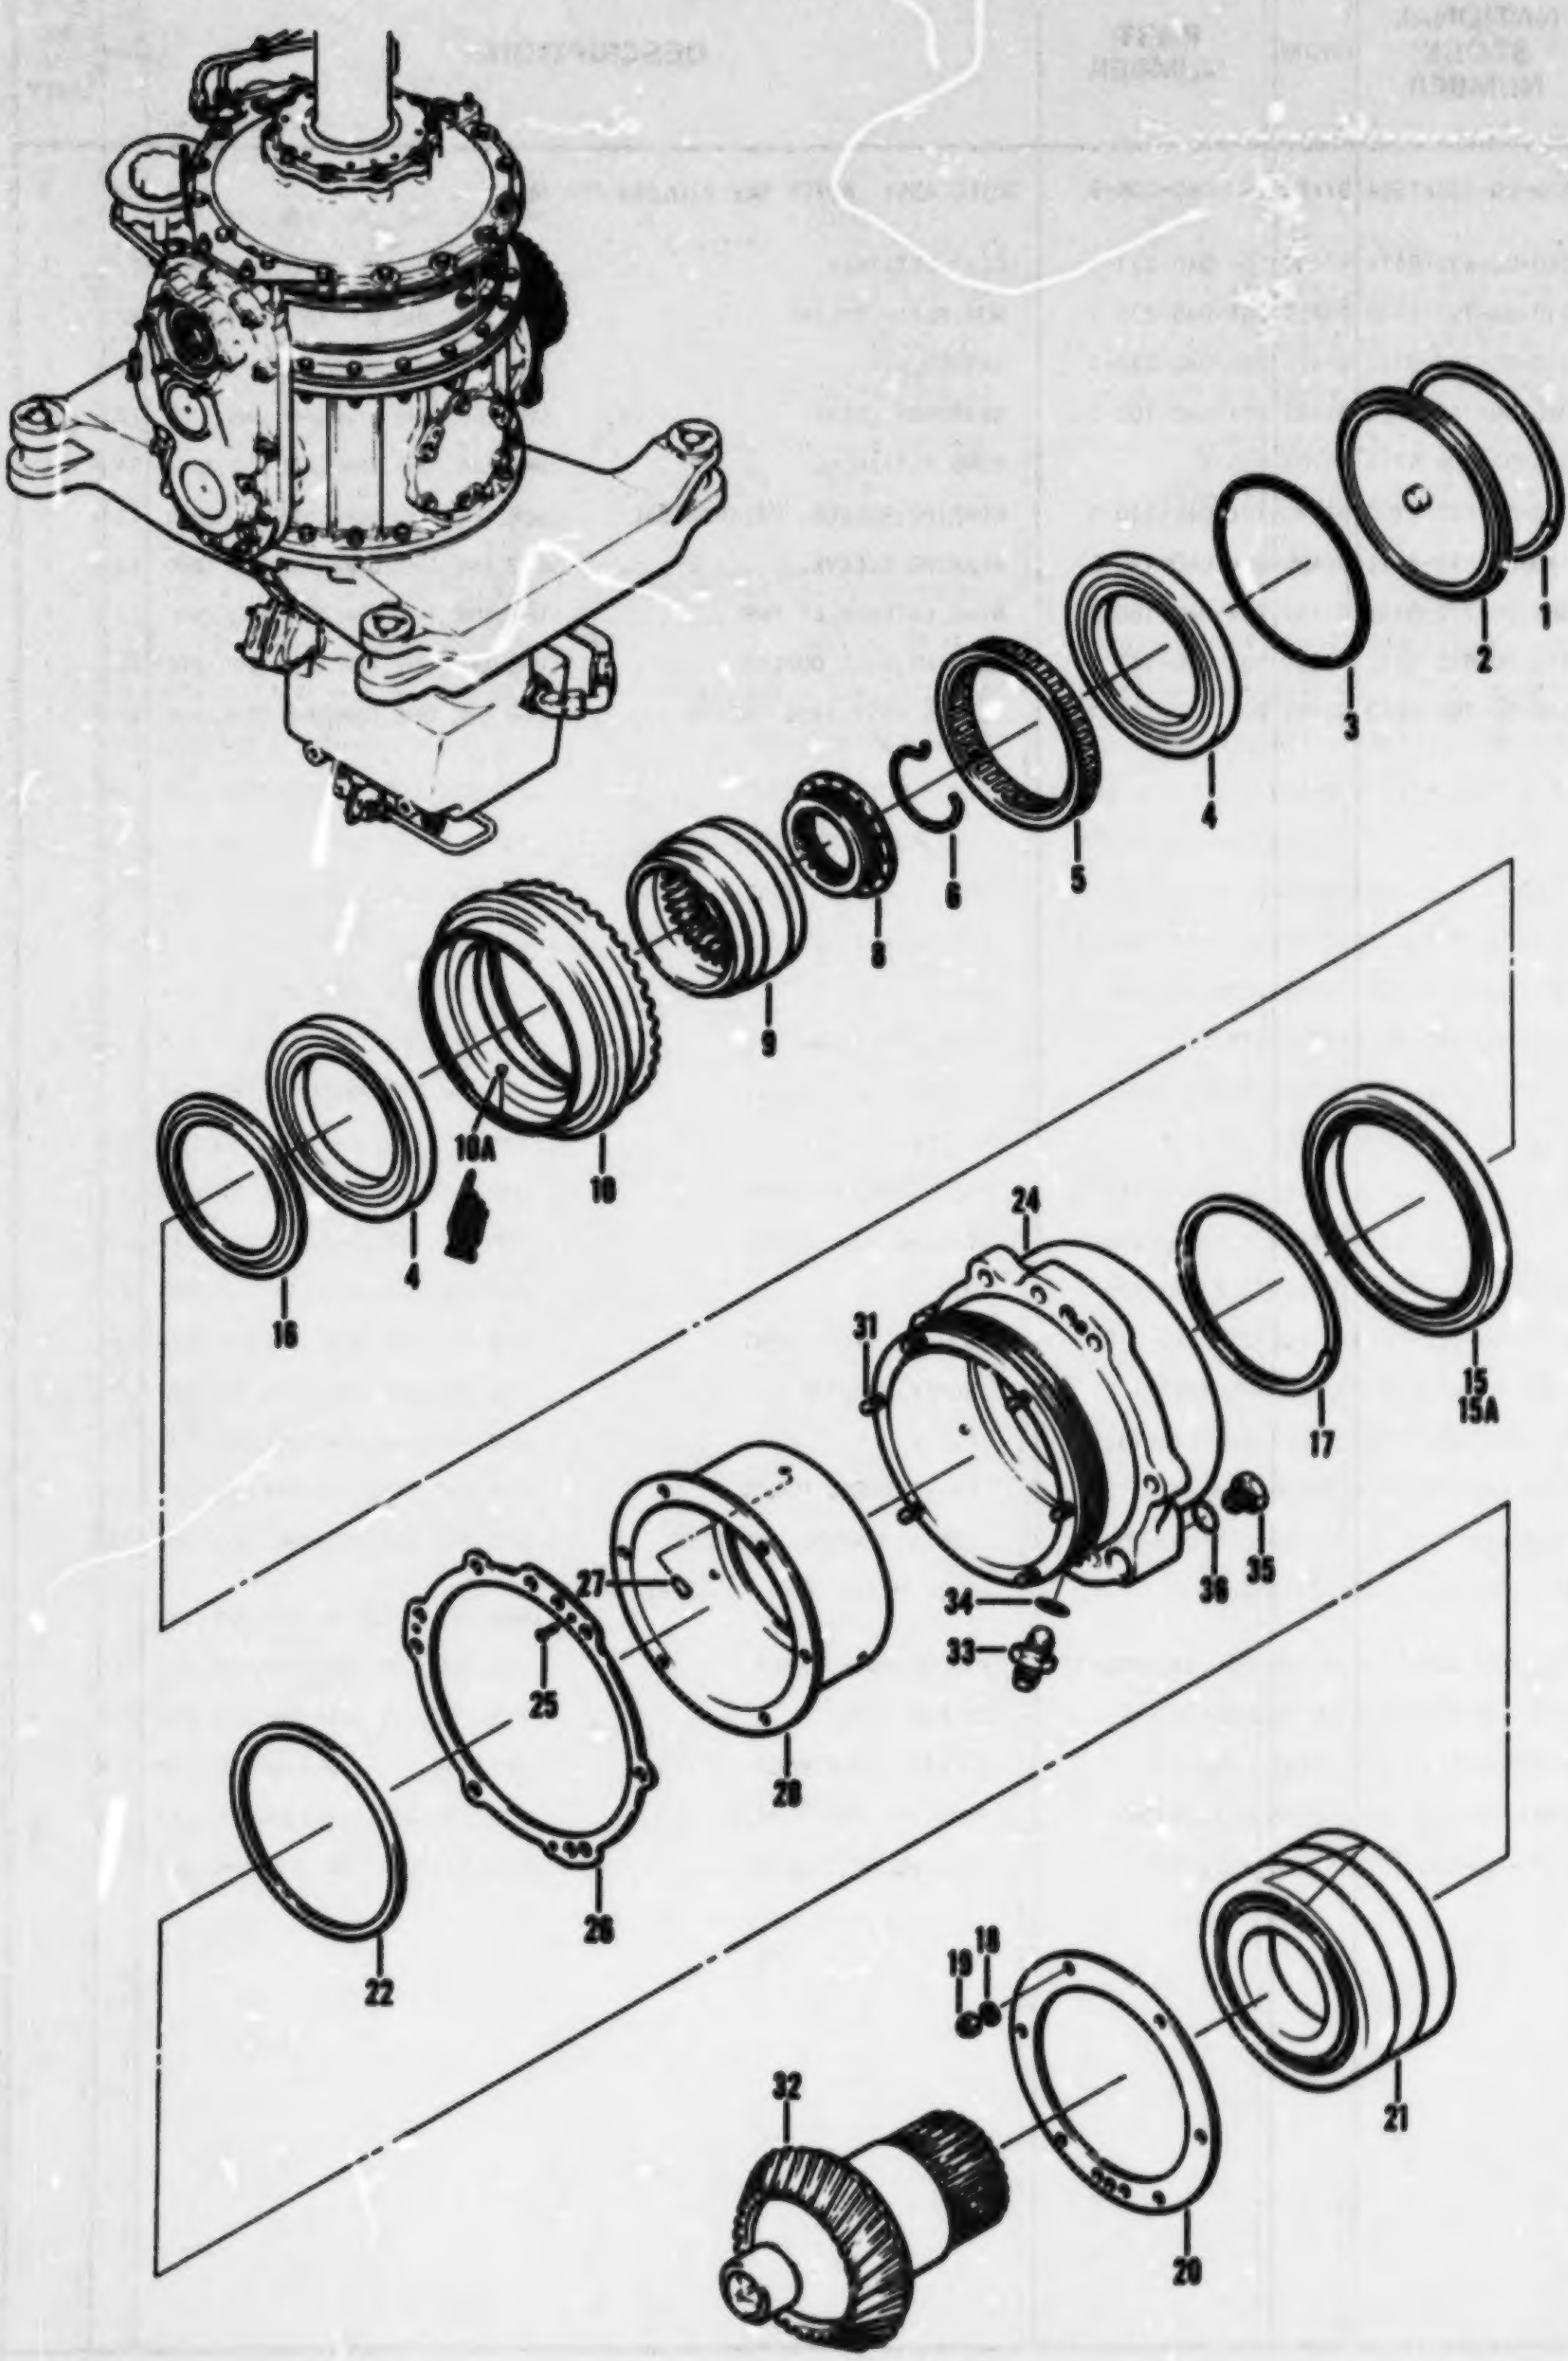
1
2
3
4
5
6
8
9
10
10A
4
16
24
31
15
15A
17
35
36
34
33
27
25
28
26
22
18
19
21
32
20

Figure 166. Quill Assembly, Transmission

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
166		PAODD	1615-00-134-3087	97499	205-040-263-3	QUILL ASSEMBLY, TRANSMISSION.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166		PAODD	1615-01-112-5904	97499	205-040-263-111	QUILL ASSEMBLY, TRANSMISSION.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	1	PAOZZ	5365-00-712-1407	80756	RR511C	.RING,RETAINING....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	2	PAOZZ	1615-00-709-8628	97499	204-040-629-5	.CAP,GREASE........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	3	PAOZZ	5330-00-580-5801	97499	204-040-640-1	.PACKING,PREFORMED..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	4	PAODD	3110-00-199-7398	97499	205-040-242-1	.BEARING,BALL,ANNULA...........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
166	5	PADZZ	1615-00-128-1644	99186	X134296	.RING,CLUTCH, U/O PN 205-040-263-3. FOR ALTERNATE PART USE PN 205-040-250-101..................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	5	PADZZ	1615-01-112-5903	97499	205-040-250-101	.CLUTCH,FREEWHEELING U/O PN 205-040-263-111. MAY BE USED AS AN ALTERNATE FOR PN X134296......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	6	PAFZZ	5340-00-714-5446	97499	204-040-183-1	.CLIP,RETAINING.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	8	PAFZZ	1615-00-977-7079	97499	204-040-184-1	.RING,SPLINED, TRANSMISSION......UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	9	PADZZ	3110-00-766-4409	97499	204-040-190-101	.RING,BEARING,INNER...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	10	PADZZ	1615-01-115-8546	97499	205-040-232-101	.LINER,BEARING HOUSI..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	10A	PADZZ	5315-00-527-7516	97499	214-040-703-1	.PIN,SHOULDER,HEADLE..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
166	15	PAFZZ	5330-00-614-5750	97499	214-040-821-1	.SEAL,PLAIN ENCASED.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	15A	PAFZZ	1615-00-614-5740	97499	214-040-833-1	.SLEEVE,WEAR,QUILL A..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	16	PAFZZ	1615-00-128-1660	97499	205-040-237-1	.SHIELD.................................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	17	PADZZ	5365-00-281-9[illegible]7	80756	RR511	.RING,RETAINING.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	18	PADZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT..........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
166	19	PADZZ	5310-00-167-1285	88044	AN310-4	.NUT,PLAIN..............................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
166	20	PADZZ	3110-00-859-6113	97499	204-040-148-3	.PLATE,INPUT PINION,..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	21	PADDD	3110-00-136-2603	97499	205-040-246-3	.BEARING,BALL,STACK...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	22	PADZZ	5365-00-582-4141	97499	204-040-175-1	.SHIM....................................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	24	PADDD	1615-00-128-1618	97499	205-040-256-7	.HOUSING,MAIN INPUT,...............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	25	PADZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE.....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
166	26	MDOZZ	1615-00-488-5025	97499	205-040-256-5	..PLATE...................................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	27	XDOZZ	5315-00-080-2824	96906	MS24692-173P	..PIN,TAPERED,PLAIN.................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	3
166	28	PBDZZ	3130-00-133-6465	97499	204-040-351-5	..LINER,BEARING HOUSING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	31	PADZZ	5307-00-228-3022	29372	MH10	..STUD,PLAIN U/O PN 205-040-256-7 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
166	32	PADZZ	1615-00-868-8394	97499	204-040-700-101	.PINION,MAIN INPUT,T..............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	33	PAOZZ	4730-00-834-9660	96906	MS24392-D4	.NIPPLE,TUBE..........................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	34	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	35	PBOZZ	5365-00-845-3502	96906	MS24391D6L	.PLUG,MACHINE THREAD.............UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
166	36	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

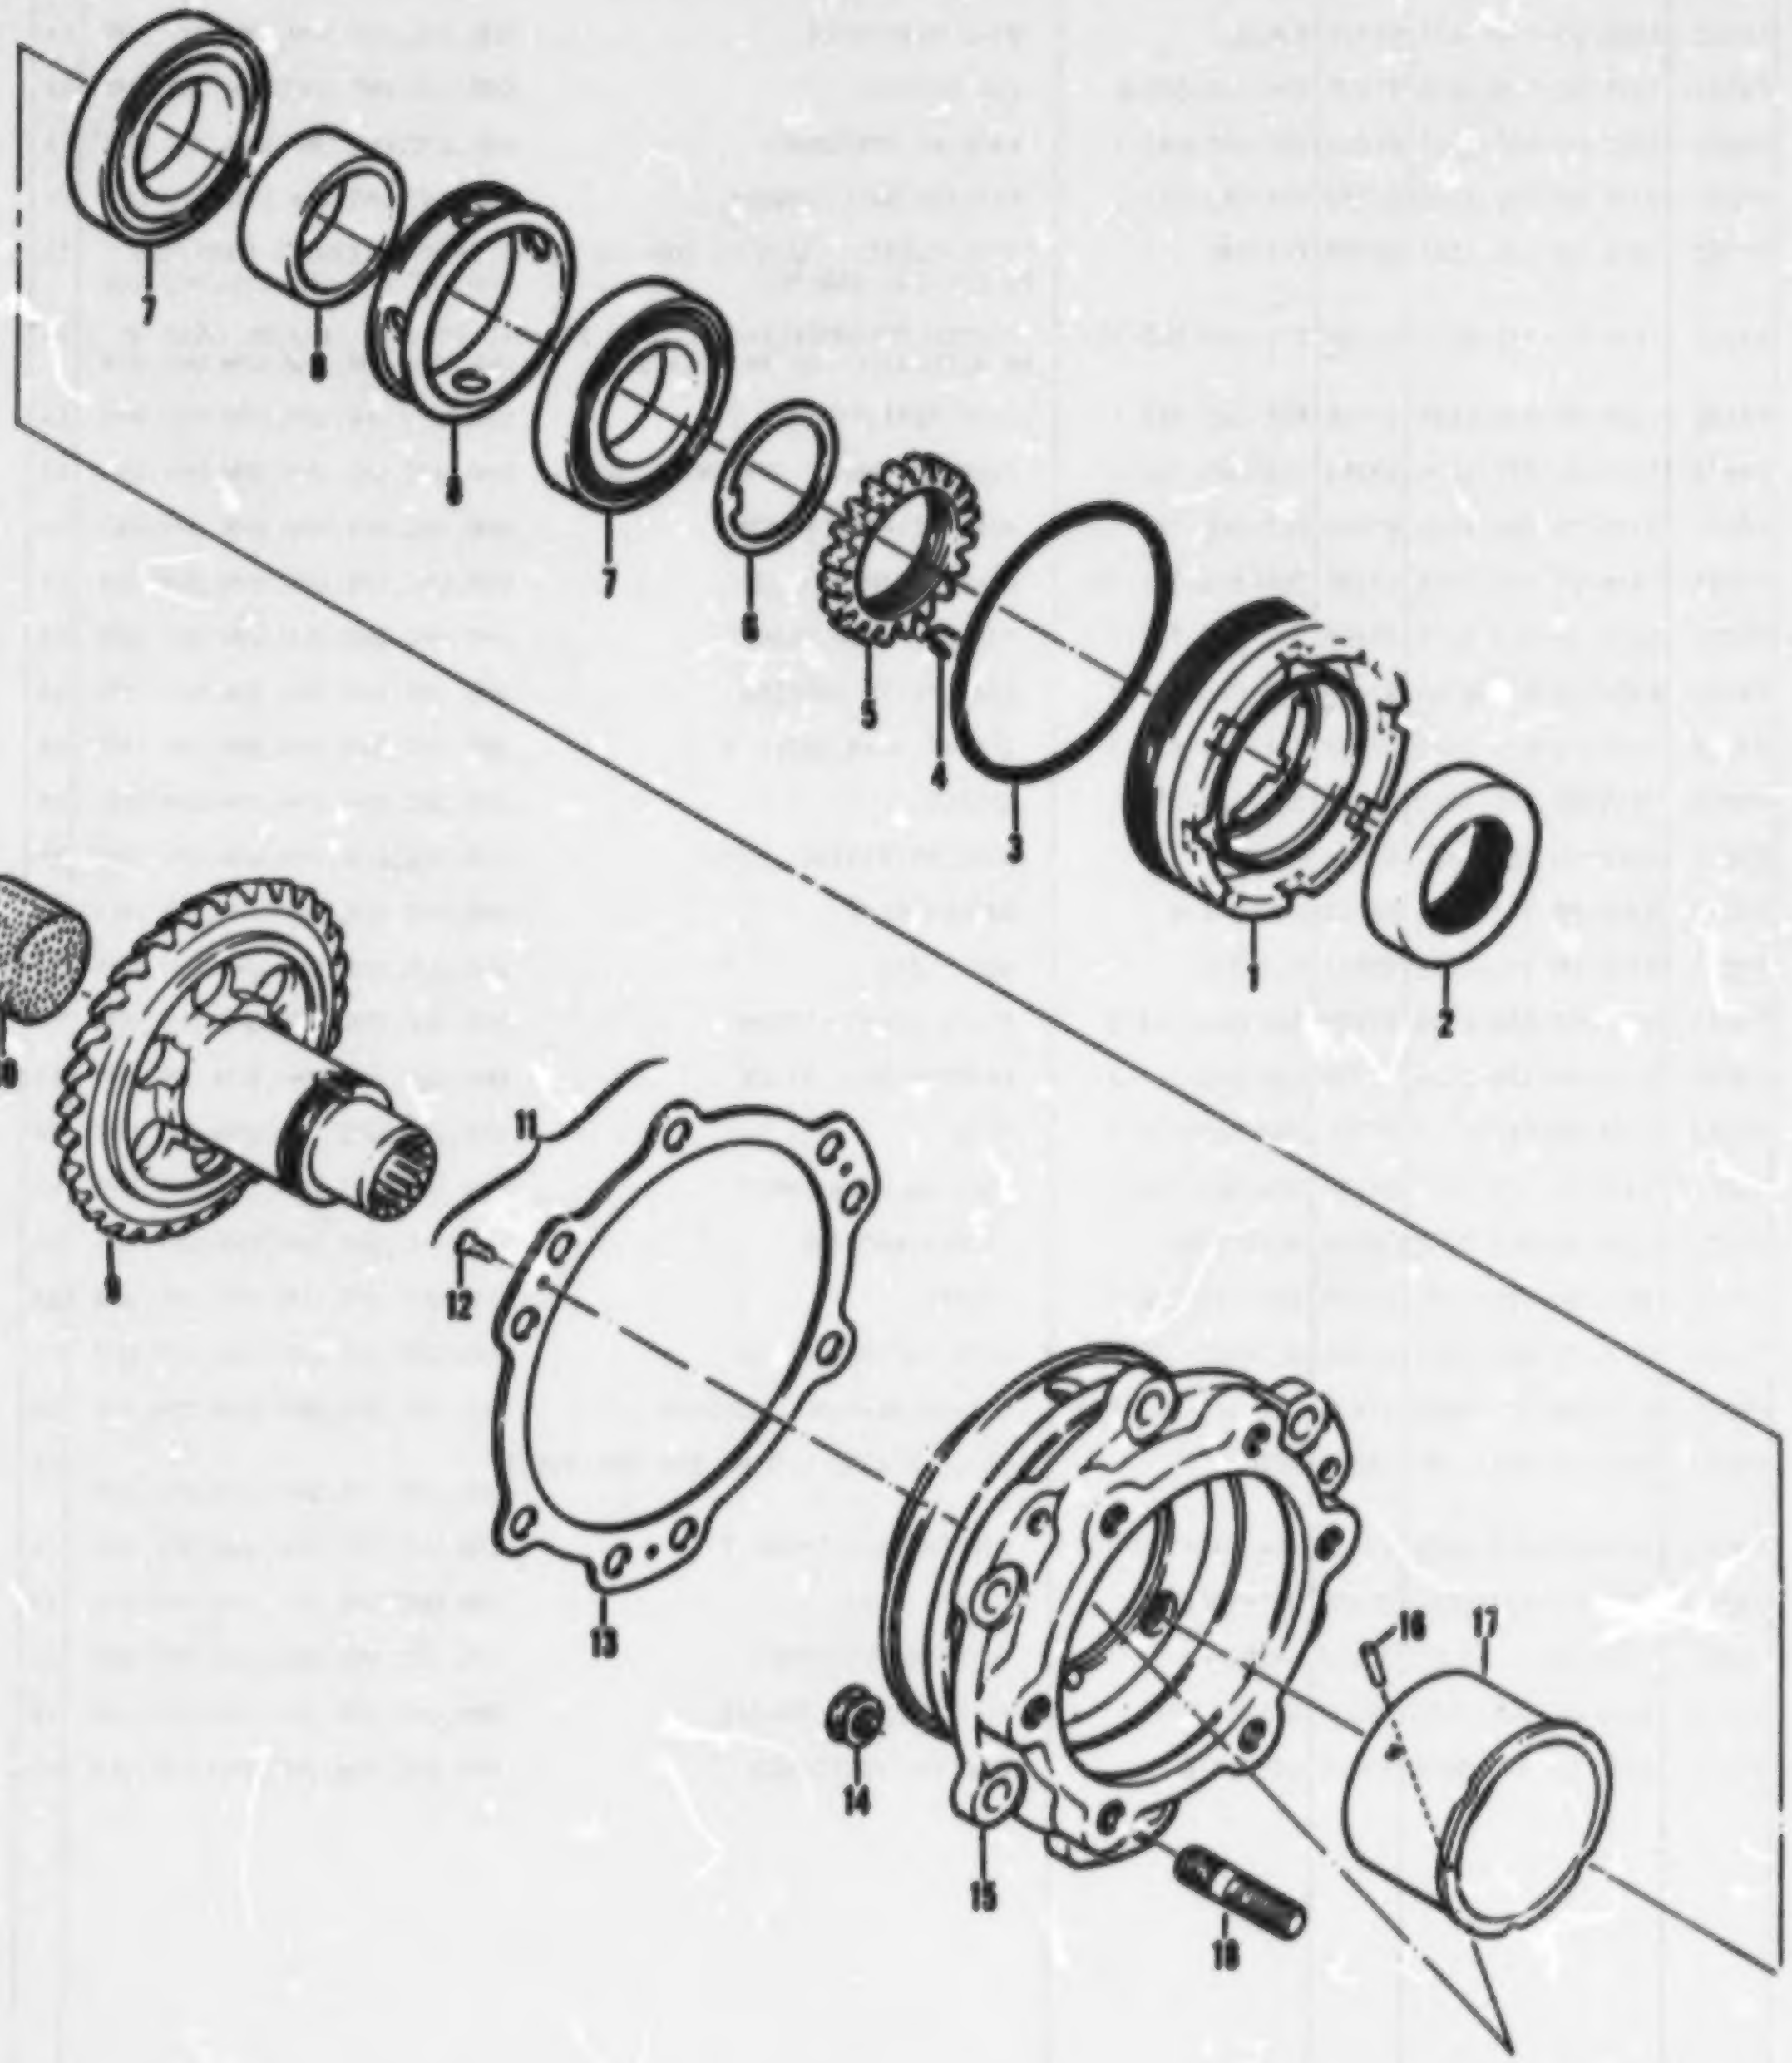
7
8
8
7
6
5
4
3
1
2
10
9
11
12
13
14
15
16
17
18

Figure 167. Quill Assembly, Generator

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
167		PAODD	1615-00-056-4889	97499	204-040-379-3	QUILL ASSEMBLY,GENE SEE FIG. 151 & 152 FOR NHA....UHB,UHC,UHM	EA	1
167	1	PAFZZ	5310-00-056-4892	97499	204-040-427-5	.NUT,TAIL ROTOR DRIV........................UHB,UHC,UHM	EA	1
167	2	PAFZZ	5330-00-796-1313	78680	450161H	.SEAL,PLAIN ENCASED........................UHB,UHC,UHM	EA	1
167	3	PCFZZ	5330-00-882-8058	96906	MS9241-235	.PACKING,PREFORMED........................UHB,UHC,UHM	EA	1
167	4	PADZZ	5340-00-649-8351	97499	204-040-413-1	.CLIP,90 DEGREE,GEAR........................UHB,UHC,UHM	EA	1
167	5	PADZZ	5310-00-703-8272	97499	204-040-412-1	.NUT,90 DEGREE GEAR........................UHB,UHC,UHM	EA	1
167	6	PADZZ	5310-00-616-2484	97499	204-040-194-1	.WASHER,KEY........................UHB,UHC,UHM	EA	1
167	7	PADDD	3110-00-088-3399	97499	204-040-424-1	.BEARING,BALL,DUPLEX........................UHB,UHC,UHM	EA	1
167	8	PADZZ	1615-00-065-5477	97499	204-040-189-7	.SPACER SET,SLEEVE........................UHB,UHC,UHM	EA	1
167	9	PADDD	1615-00-898-1689	97499	204-040-102-17	.PINION ASSEMBLY,SPI........................UHB,UHC,UHM	EA	1
167	10	PADZZ	8125-00-999-4683	86282	16SHORT	..STOPPER........................UHB,UHC,UHM	EA	1
167	11	PADDD	5340-00-066-4891	97499	204-040-399-7	.SLEEVE,ASSEMBLY........................UHB,UHC,UHM	EA	1
167	12	PADZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE........................UHB,UHC,UHM	EA	3
167	13	MDDZZ		97499	204-040-399-5	..SHIM........................UHB,UHC,UHM	EA	1
167	14	PADZZ	5310-00-474-0652	63324	REA054	..NUT,PLAIN SPLINE........................UHB,UHC,UHM	EA	3
167	15	XADDD		97499	204-040-399-9	..SLEEVE........................UHB,UHC,UHM	EA	1
167	16	XDDZZ	5315-00-664-3519	81352	AN386-5OP4	...PIN,TAPERED,PLAIN........................UHB,UHC,UHM	EA	3
167	17	PADZZ	3120-00-062-9134	97499	204-040-757-1	...LINER,BEARING HOUSI........................UHB,UHC,UHM	EA	1
167	18	XDFZZ	5307-00-823-8718	88044	AN126930	..STUD,PLAIN -STANDARD........................UHB,UHC,UHM	EA	6
167	18	XDFZZ	5307-00-637-6225	88044	AN126931	..STUD,PLAIN -0.003 IN. OVERSIZE................UHB,UHC,UHM	EA	V
167	18	PAFZZ	5307-00-637-6229	88044	AN126932	..STUD,PLAIN -0.006 IN. OVERSIZE................UHB,UHC,UHM	EA	V
167	18	XBFZZ	5307-00-840-7778	88044	AN126933	..STUD,PLAIN -0.009 IN. OVERSIZE................UHB,UHC,UHM	EA	V
167	18	XDFZZ	5307-00-840-7779	88044	AN126934	..STUD,PLAIN -0.012 IN. OVERSIZE................UHB,UHC,UHM	EA	V

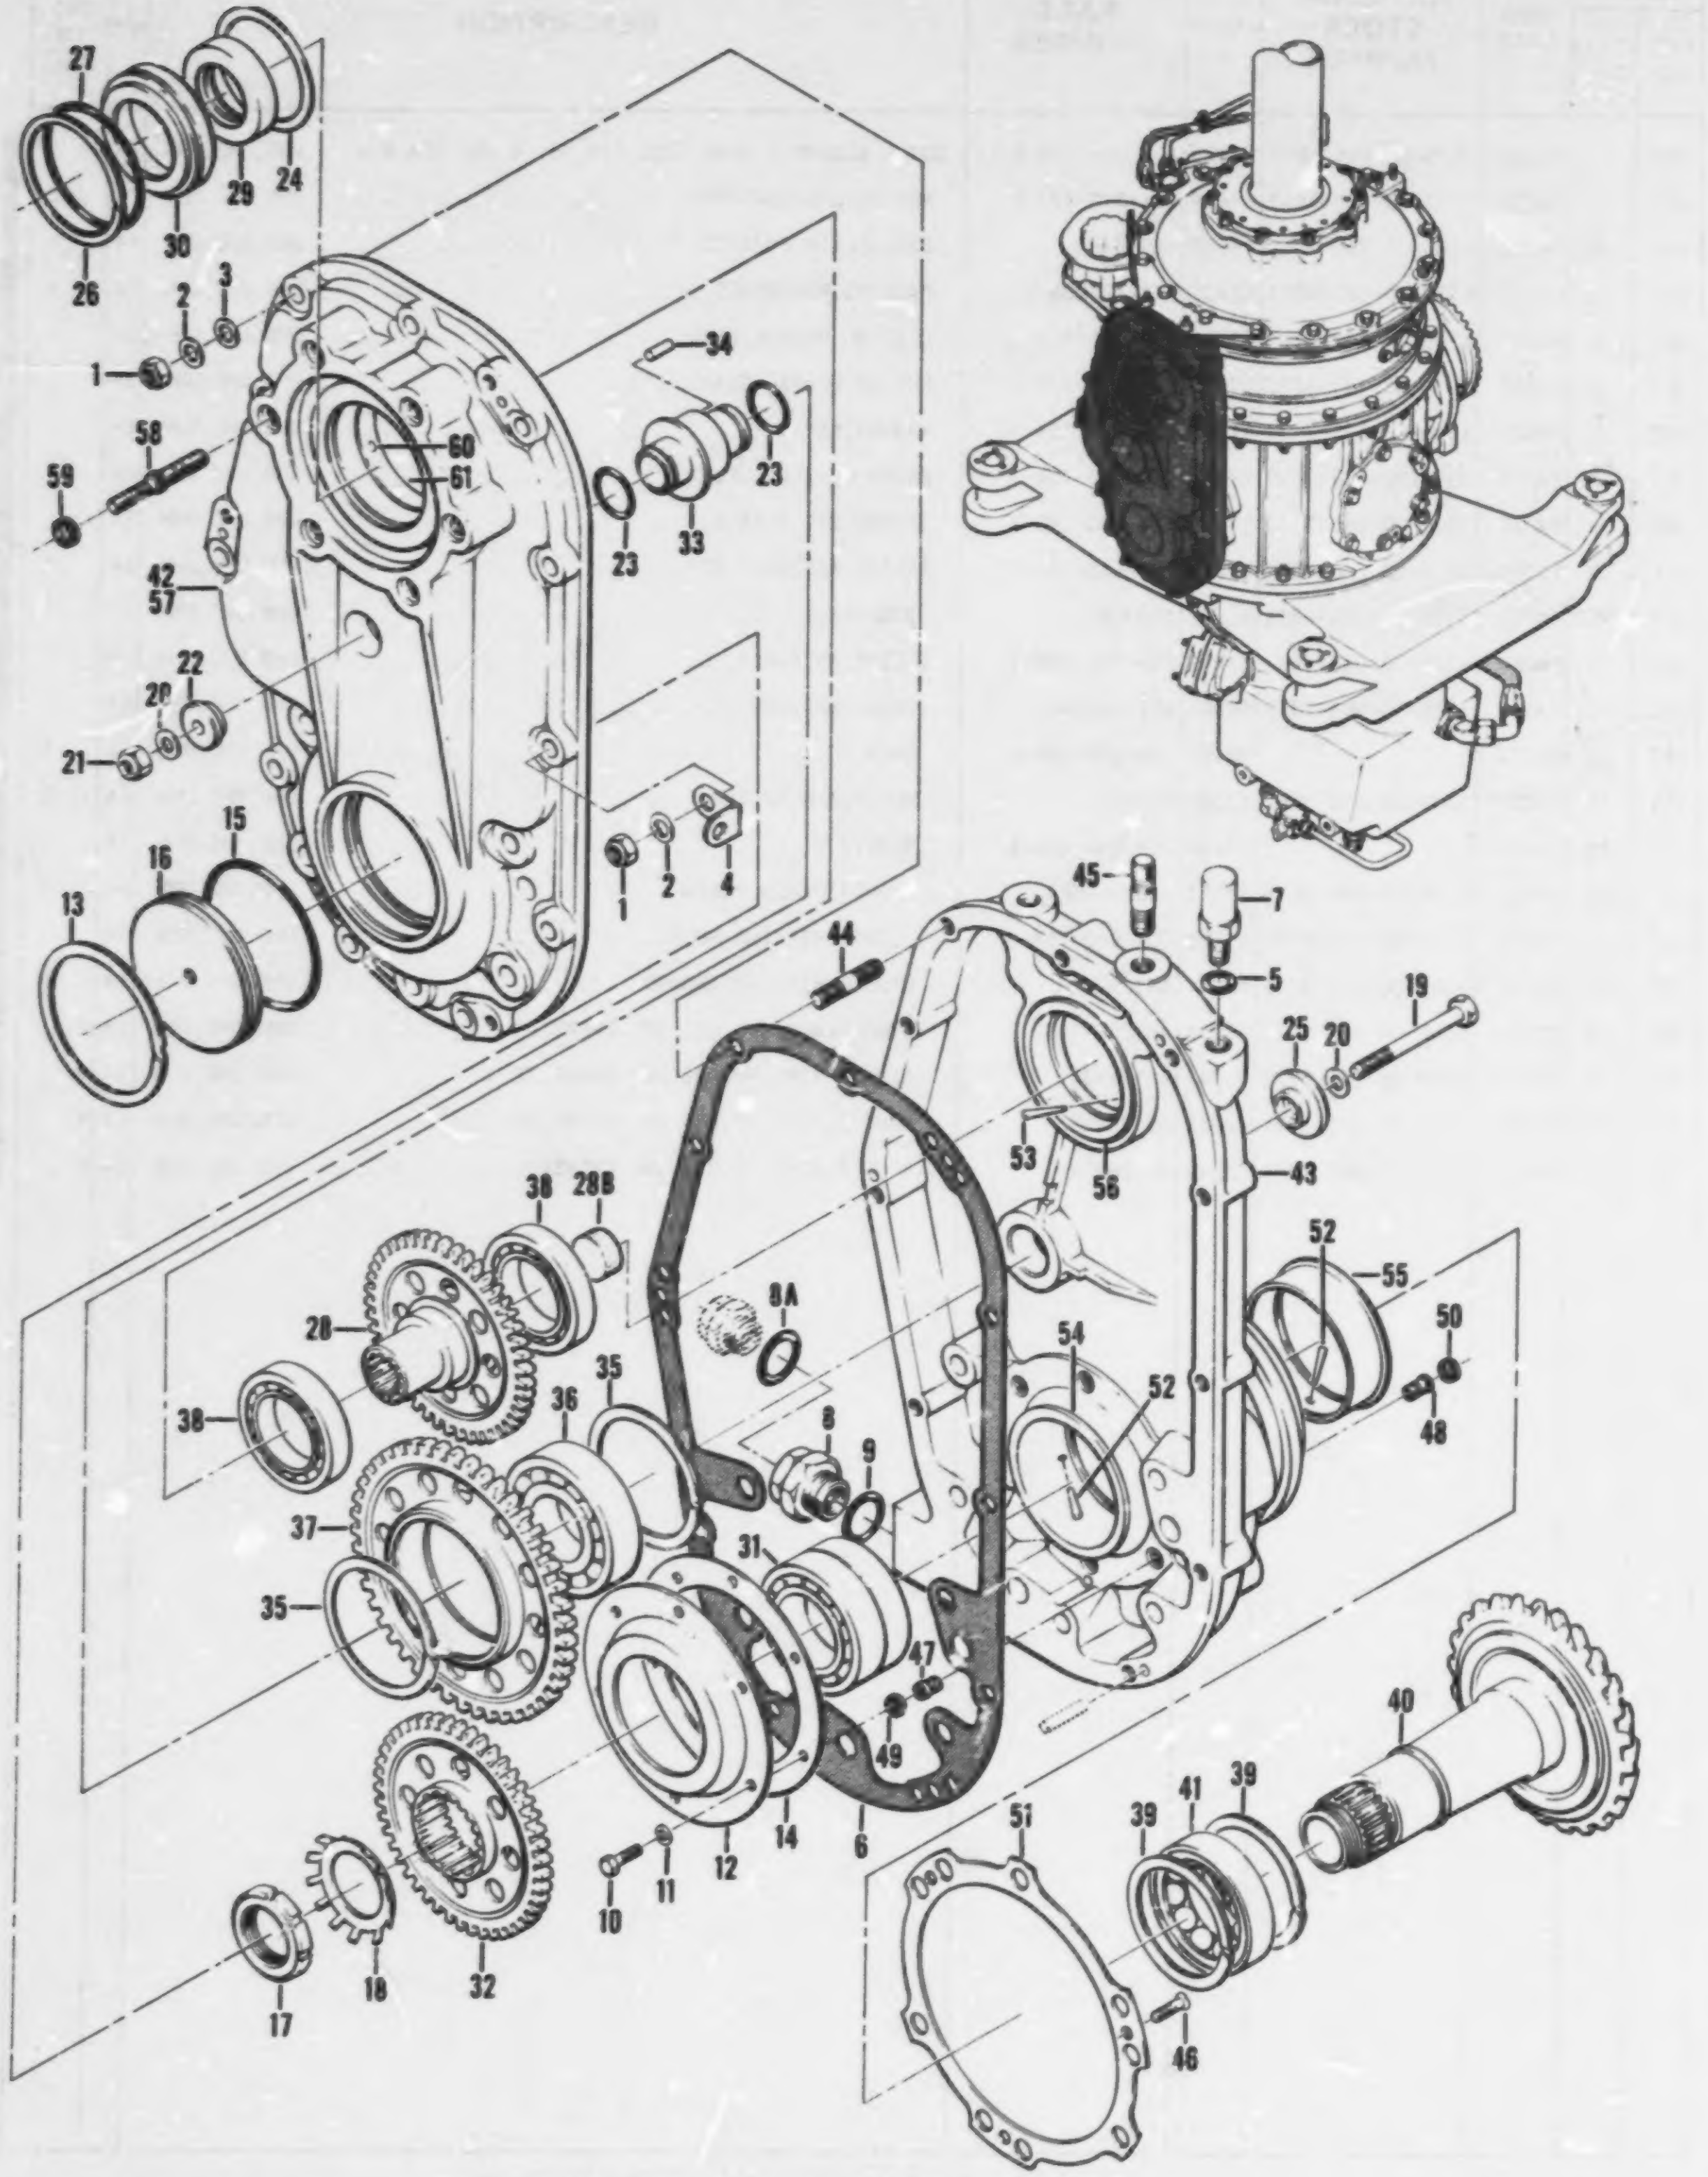
27
29
24
30
26
3
2
1
34
23
58
60
61
59
23
33
42
57
22
20
21
15
1
2
4
16
13
45
7
44
5
19
25
20
53
56
43
38
28B
8A
28
52
55
50
35
54
52
48
36
38
8
9
37
31
47
35
40
49
39
41
39
51
14
6
12
10
11
32
18
17
46

Figure 168. Quill Assembly, Transmission
(Sheet 1 of 2)

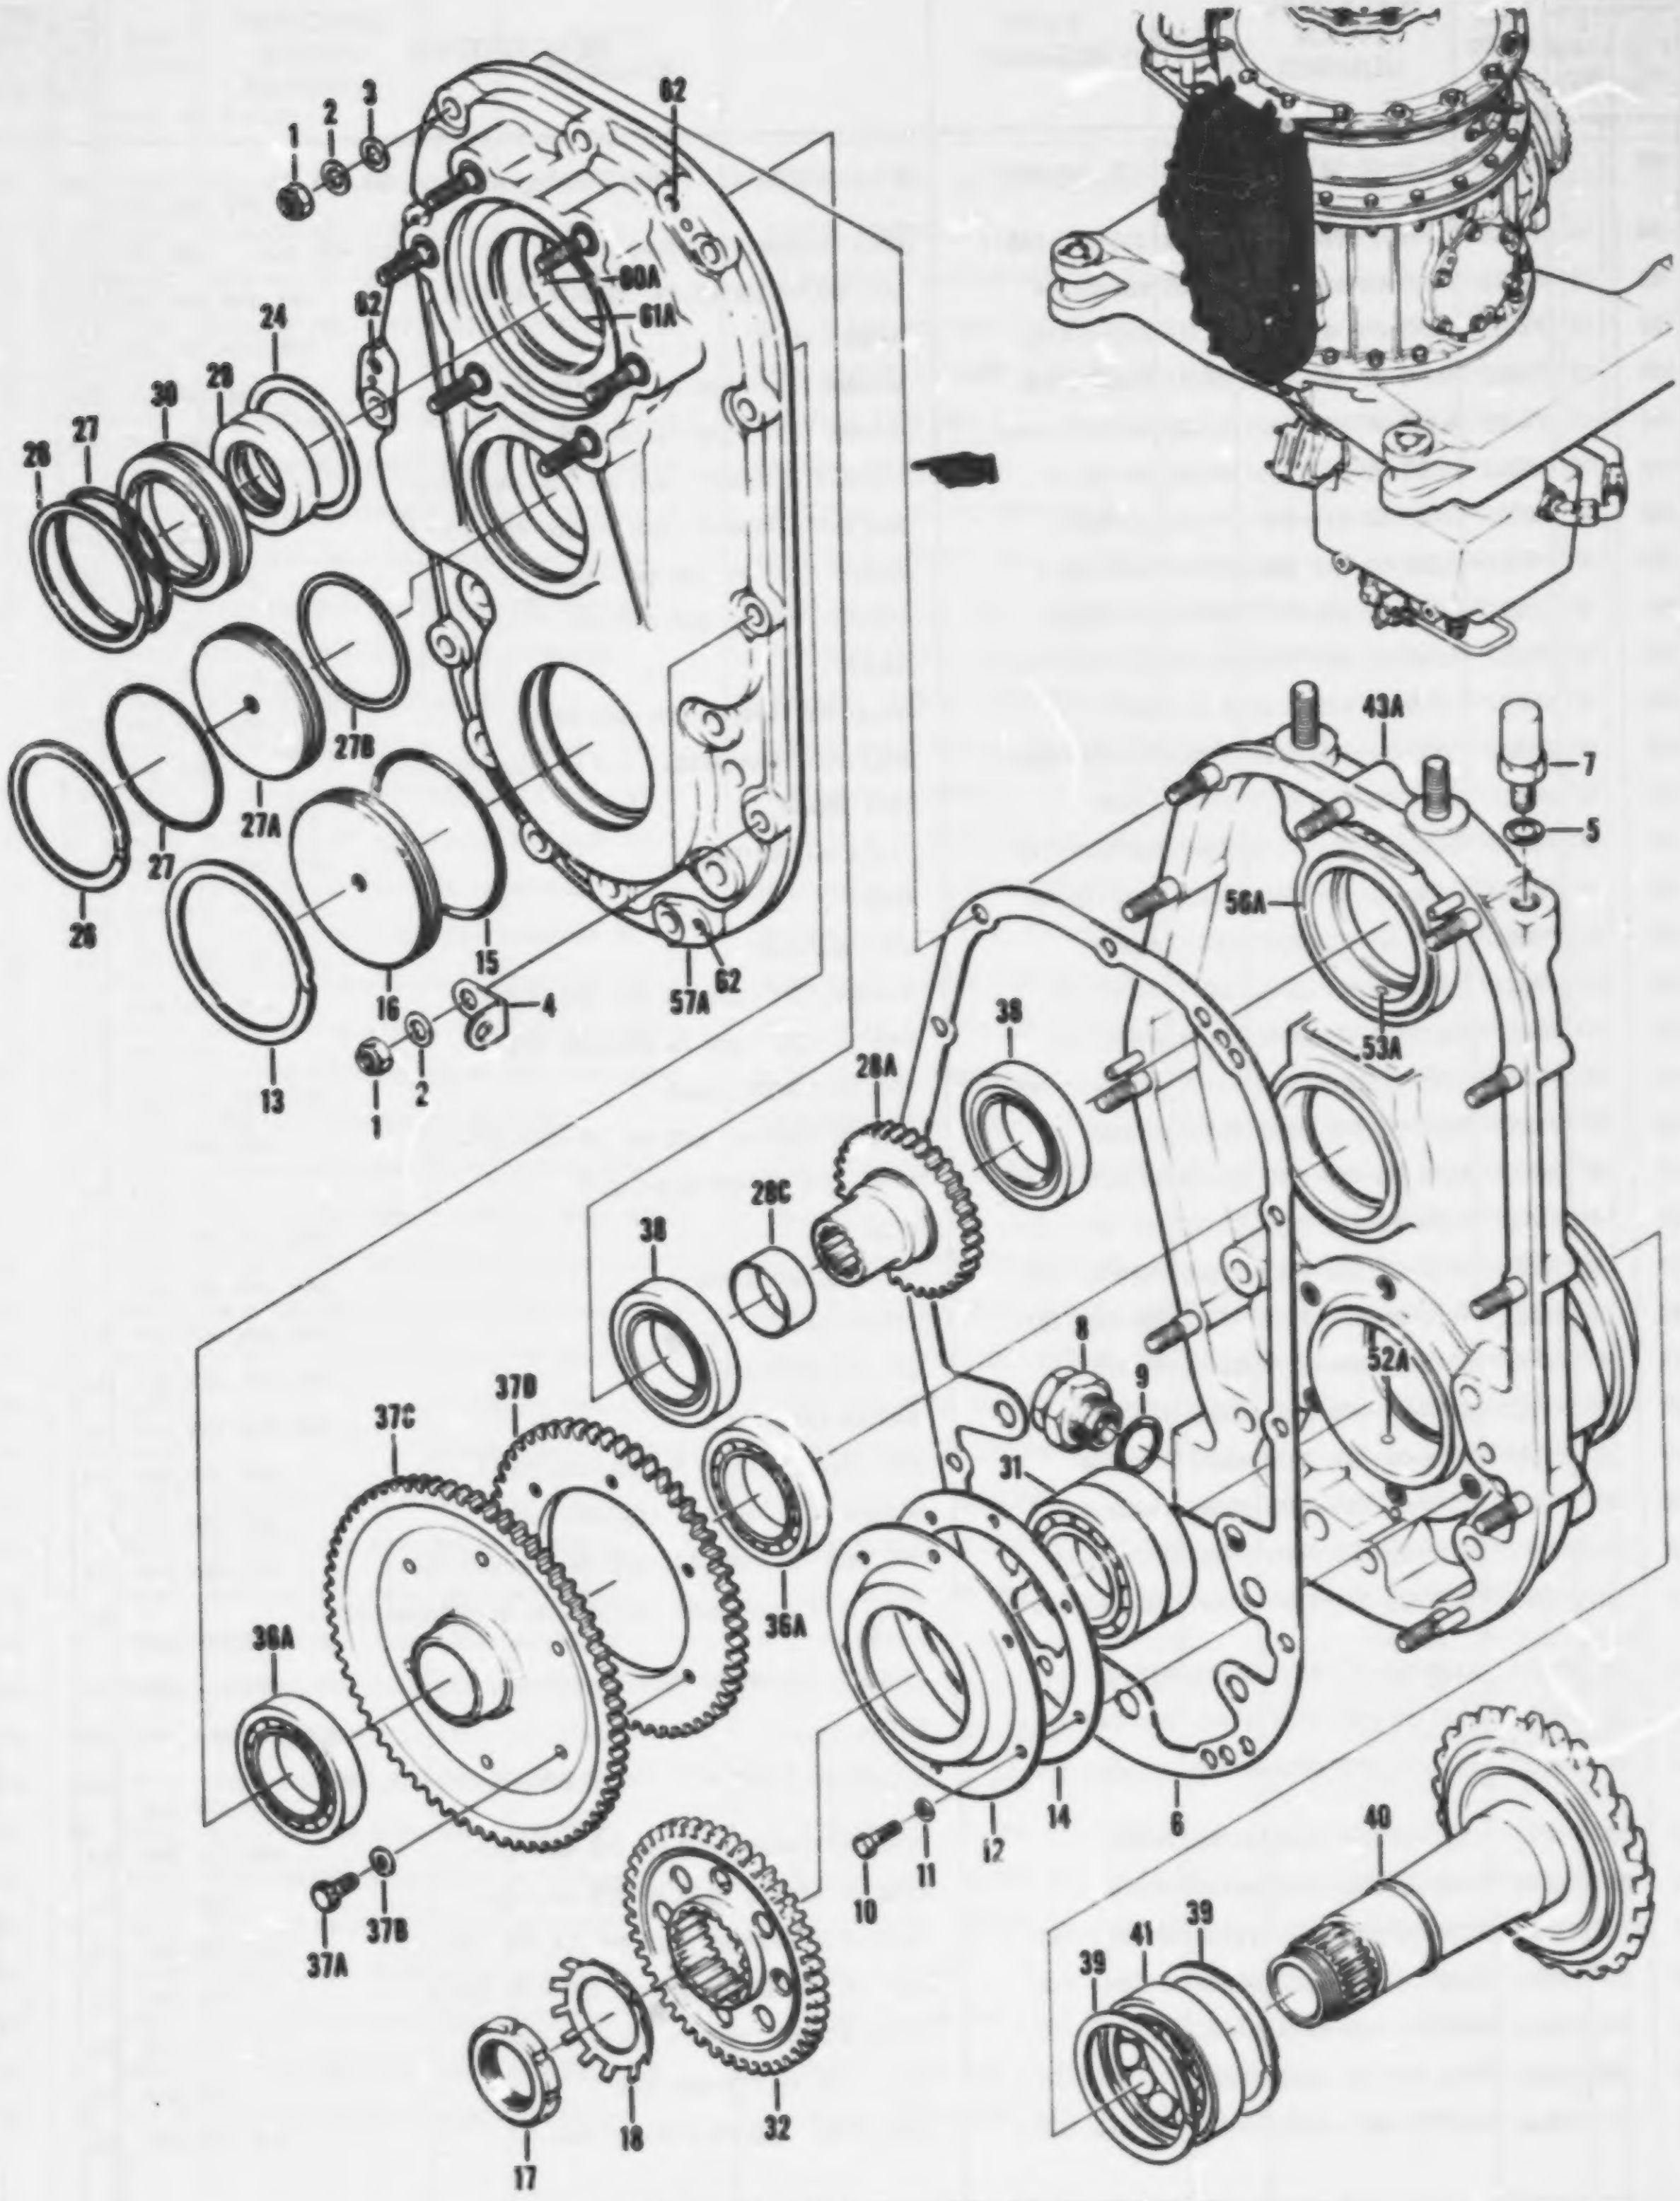
1
2
3
62
60A
61A
62
24
30
29
26
27
27B
27A
27
26
15
16
13
1
2
4
57A
62
43A
7
5
56A
53A
38
28A
28C
38
8
9
52A
31
37C
37D
36A
36A
14
12
6
10
11
37B
37A
40
41
39
39
32
18
17

Figure 168. Quill Assembly, Transmission (Sheet 2 of 2)

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
168		PAODD	1615-00-987-5152	97499	205-040-200-1	QUILL ASSEMBLY, TRANSMISSION. SEE FIG. 153 FOR NHA ....UHE,UHH,UHV	EA	1
168		PAODD	1615-01-080-2057	97499	205-040-205-1	QUILL ASSEMBLY, TRANSMISSION. SEE FIG. 153 FOR NHA....UHE,UHX	EA	1
168	1	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........ UHE,UHH,UHV,UHX	EA	11
168	2	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..........................UHE,UHH,UHV,UHX	EA	11
168	3	PAOZZ	5310-00-187-2364	88044	AN960PD416	.WASHER,FLAT U/O PN 205-040-200-1...............UHE,UHH,UHV	EA	10
168	3	PAOZZ	5310-00-804-6801	80205	NAS1197-416L	.WASHER,FLAT U/O PN 205-040-205-1...................UHE,UHX	EA	9
168	4	XDOZZ	1680-00-871-8861	97499	20-032-3	.BRACKET,AIRCRAFT U/O PN 205-040-200-1..........UHE,UHH,UHV	EA	1
168	4	XDOZZ	1680-00-871-8861	97499	20-032-3	.BRACKET,AIRCRAFT U/O PN 205-040-205-1..............UHE,UHX	EA	2
168	5	PBOZZ	5330-00-643-3261	96906	MS35769-6	.GASKET U/O PN 205-040-200-1.....................UHE,UHH,UHV	EA	1
168	5	XDOZZ	5330-00-599-5377	88044	AN123023	.GASKET U/O PN 205-040-205-1.........................UHE,UHX	EA	1
168	6	PAOZZ	5330-00-767-7170	97499	205-040-115-1	.GASKET ....UHE,UHH,UHV,UHX	EA	1
168	7	PAOZZ	1615-00-649-8149	97484	A814	.BREATHER U/O PN 205-040-200-1..................UHE,UHH,UHV	EA	1
168	7	PAOZZ	1615-01-115-6993	97499	214-040-809-3	.BREATHER,TRANSMISSI U/O PN 205-040-205-1...........UHE,UHX	EA	1
168	8	PAOOO	4820-00-980-9551	97484	A722G	.COCK,DRAIN.............................UHE,UHH,UHV,UHX	EA	1
168	8A	PCOZZ	5330-00-702-4712	96906	MS29561-112	..PACKING,PREFORME.....................UHE,UHH,UHV,UHX	EA	1
168	9	PAOZZ	5330-00-834-2912	96906	MS35769-18	.GASKET................................UHE,UHH,UHV,UHX	EA	1
168	10	PAOZZ	5306-00-182-2057	88044	AN3H4A	.BOLT,MACHINE..........................UHE,UHH,UHV,UHX	EA	6
168	11	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT U/O PN 205-040-200-1..............UHE,UHH,UHV	EA	6
168	11	PAOZZ	5310-00-167-0[illegible]4	88044	AN960-10L	.WASHER,FLAT U/O PN 205-040-205-1...................UHE,UHX	EA	6
168	12	PAOZZ	1680-00-967-7668	97499	205-040-109-1	.RETAINER,BEVEL GEAR...................UHE,UHH,UHV,UHX	EA	1
168	13	PAOZZ	5365-00-616-4993	80756	RR306C	.RING,RETAINING U/O PN 205-040-200-1 ....UHE,UHH,UHV	EA	1
168	13	XDOZZ	5365-00-763-9962	81349	M27426-3173B	.RING U/O PN 205-040-205-1...........................UHE,UHX	EA	1
168	14	PAOZZ	5365-00-728-6062	97499	205-040-111-1	.SHIM...................................UHE,UHH,UHV,UHX	EA	1
168	15	PCOZZ	5330-00-803-9889	96906	MS29561-232	.PACKING,PREFORMED.....................UHE,UHH,UHV,UHX	EA	1
168	16	PAOZZ	1615-00-070-7838	97499	205-040-121-1	.COVER,ACCESS..........................UHE,UHH,UHV,UHX	EA	1
168	17	PAOZZ	5310-00-985-0216	96906	MS172333	.NUT,PLAIN,ROUND.......................UHE,UHH,UHV,UHX	EA	1
168	18	PAOZZ	5310-00-978-9665	96906	MS172283	.WASHER,KEY............................UHE,UHH,UHV,UHX	EA	1
168	19	PAOZZ	5306-00-182-2020	88044	AN4H26A	.BOLT,MACHINE U/O PN 205-040-200-1.............UHE,UHH,UHV	EA	1
168	20	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT U/O PN 205-040-200-1..............UHE,UHH,UHV	EA	2
168	21	PAOZZ	5310-00-807-1468	96906	MS21042-4	.NUT,SELF-LOCKING,EX U/O PN 205-040-200-1.......UHE,UHH,UHV	EA	1
168	22	PAOZZ	1615-00-077-8758	97499	205-040-110-3	.CAP,IDLER GEARSHAFT DRIVE U/O PN 205-040-200-1 ....UHE,UHH,UHV	EA	1
168	23	PCOZZ	5330-00-702-4711	96906	MS29561-117	.PACKING,PREFORMED U/O PN 205-040-200-1.........UHE,UHH,UHV	EA	2
168	24	PAOZZ	5365-00-728-7619	97499	205-040-113-1	.SHIM...................................UHE,UHH,UHV,UHX	EA	1
168	25	PAOZZ	1615-00-077-8762	97499	205-040-110-1	.CAP,IDLER GEARSHAFT DRIVE U/O PN 205-040-200-1 ....UHE,UHH,UHV	EA	1
168	26	PAFZZ	5365-00-282-1643	80756	RR256C	.RING,RETAINING U/O PN 205-040-200-1............UHE,UHH,UHV	EA	1
168	26	PAOZZ	5365-00-282-1643	80756	RR256C	.RING,RETAINING U/O PN 205-040-205-1................UHE,UHX	EA	2
168	27	PCFZZ	5330-00-804-8862	96906	MS29561-142	.PACKING,PREFORMED U/O PN 205-040-200-1.........UHE,UHH,UHV	EA	1
168	27	PAFZZ	5330-00-804-8862	96906	MS29561-142	.PACKING,PREFORME U/O PN 205-040-205-1.............UHE,UHX	EA	2
168	27A	PAOZZ	5340-01-116-4473	97499	214-040-160-1	.COVER,ACCESS U/O PN 205-040-205-1..................UHE,UHX	EA	1
168	27B	PAOZZ	5365-01-116-4682	97499	214-040-136-3	.SHIM U/O PN 205-040-205-1...........................UHE,UHX	EA	1
168	28	PAOOO	3020-00-967-7669	97499	205-040-103-1	.GEAR,SPUR U/O PN 205-040-200-1................UHE,UHH,UHV	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	UM	QTY INC IN UNIT
168	28A	PADZZ	3020-01-116-4262	97499	205-040-208-1	.GEAR,SPUR U/O PN 205-040-205-1......................UHE,UHX	EA	1
168	28B	PADZZ	8125-00-461-1168	86282	17SHORT	..BOTTLE,STOPPER..............................UHE,UHH,UHV,UHX	EA	1
168	28B	PAFZZ	1615-01-151-6924	07200	29310-8048	.SLEEVE,WEAR U/O PN 205-040-205-1.................UHE,UHX	EA	1
168	29	PAFZZ	5330-00-795-1313	76680	450161H	.SEAL,PLAIN ENCASED U/O PN 205-040-200-1.........UHE,UHH,UHV	EA	1
168	29	PAFZZ		07200	2891-21246	.SEAL ASSEMBLY,TRANS U/O PN 205-040-205-1............UHE,UHX	EA	1
168	30	PAFZZ	5330-00-937-1431	97499	205-040-112-1	.RETAINER,PACKING.............................UHE,UHH,UHV,UHX	EA	1
168	31	PADZZ	3110-00-052-9135	97499	205-040-106-1	.BEARING,BALL,DUPLEX..........................UHE,UHH,UHV,UHX	EA	1
168	32	PADZZ	3020-00-967-7660	97499	205-040-101-1	.GEAR,SPUR U/O PN 205-040-200-1..................UHE,UHH,UHV	EA	1
168	32	PADZZ	3020-01-116-4256	97499	205-040-204-1	.GEAR,SPUR U/O PN 205-040-205-1......................UHE,UHX	EA	1
168	33	PADOO	156[illegible] 967-7657	9749[illegible]	[illegible]05-040-104-1	.SHAFT ASSEMBLY,IDLE U/O PN 205-040-200-1........UHE,UHH,UHV	EA	1
168	34	PADZZ	5315-00-241-2922	88044	AN122692	..PIN,STRAIGHT HEADLESS U/O PN 205-040-200-1.....UHE,UHH,UHV	EA	1
168	35	PADZZ	5340-00-986-0023	80756	RR283L	.RETAINER U/O PN 205-040-200-1...................UHE,UHH,UHV	EA	2
168	36	PADZZ	3110-00-987-6711	97499	205-040-107-1	.BEARING,BALL,ANNULA U/O PN 205-040-200-1........UHE,UHH,UHV	EA	1
168	36A	PADZZ	3110-00-990-0008	97499	205-040-108-1	.BEARING,BALL,ANNULA U/O PN 205-040-205-1............UHE,UHX	EA	2
168	37	PADZZ	3020-00-967-7668	97499	205-040-102-1	.GEAR,SPUR U/O PN 205-040-200-1..................UHE,UHH,UHV	EA	1
168	37A	PADZZ	5306-00-182-2015	88044	AN4H4A	.BOLT,MACHINE U/O PN 205-040-205-1...................UHE,UHX	EA	6
168	37B	PADZZ	5310-00-515-7449	88044	AN960C416L	.WASHER,FLAT U/O PN 205-040-205-1....................UHE,UHX	EA	6
168	37C	PADZZ	3020-01-116-4263	97499	205-040-207-1	.GEAR,SPUR U/O PN 205-040-205-1......................UHE,UHX	EA	1
168	37D	PADZZ	3020-01-116-4264	97499	205-040-206-1	.GEAR,SPUR U/O PN 205-040-205-1......................UHE,UHX	EA	1
168	38	PADZZ	3110-00-990-0008	97499	205-040-108-1	.BEARING,BALL,ANNULA.............................UHE,UHH,UHV	EA	2
168	39	XDDZZ	5365-00-687-2831	80756	RR268L	.RING,RETAINING U/O PN 205-040-200-1.............UHE,UHH,UHV	EA	2
168	39	XDDZZ	5365-01-047-8281	81349	M27426-3164C	.RING,RETAINING U/O PN 205-040-205-1.................UHE,UHX	EA	2
168	40	PADZZ	3020-00-967-7661	97499	205-040-100-3	.GEAR,BEVEL...................................UHE,UHH,UHV,UHX	EA	1
168	41	PADZZ	3110-00-891-9972	97499	205-040-105-1	.BEARING,ROLLER, CYLINDRICAL..................UHE,UHH,UHV,UHX	EA	1
168	42	PADOO	1615-00-070-7846	97499	205-040-125-1	.CASE SET,QUILL ASSY U/O PN 205-040-200-1........UHE,UHH,UHV	EA	1
168	42	PADOO	6115-01-117-1221	97499	205-040-199-1	.CASE SET,ALTERNATOR U/O PN 205-040-205-1............UHE,UHX	EA	1
168	43	XADOO		97[illegible]99	205-040-125-3	..CASE ASSEMBLY U/O PN 205-040-125-1.............UHE,UHH,UHV	EA	1
168	43A	XADOO		97499	205-040-199-3	..CASE ASSEMBLY U/O PN 205-040-199-1.................UHE,UHX	EA	1
168	44	PADZZ	5307-00-637-9970	88044	AN126018	...STUD,PLAIN -STANDARD.......................UHE,UHH,UHV,UHX	EA	11
168	44	PBDZZ	5307-00-637-5233	88044	AN126019	...STUD,PLAIN -0.003 IN. OVERSIZE.............UHE,UHH,UHV,UHX	EA	V
168	44	PADZZ	5307-00-637-5212	88044	AN126020	...STUD,PLAIN -0.006 IN. OVERSIZE.............UHE,UHH,UHV,UHX	EA	V
168	44	PBDZZ	5307-00-637-1642	88044	AN126021	...STUD,PLAIN -0 009 IN. OVERSIZE.............UHE,UHH,UHV,UHX	EA	V
168	44	PBDZZ	5307-00-579-0458	88044	AN126022	...STUD,PLAIN -0.012 IN. OVERSIZE.............UHE,UHH,UHV,UHX	EA	V
168	45	XBDZZ	5307-00-950-9386	88044	AN126636	...STUD,PLAIN -STANDARD.......................UHE,UHH,UHV,UHX	EA	2
168	45	XDDZZ	5307-00-950-9390	88044	AN126637	...STUD,PLAIN -0.003 IN. OVERSIZE.............UHE,UHH,UHV,UHX	EA	V
168	45	PADZZ	5307-00-950-9389	88044	AN126638	...STUD,PLAIN -0.006 IN. OVERSIZE.............UHE,UHH,UHV,UHX	EA	V
168	45	XDDZZ	5307-00-950-9388	88044	AN126639	...STUD,PLAIN -0.009 IN. OVERSIZE.............UHE,UHH,UHV,UHX	EA	V
168	45	XDDZZ	5307-00-950-9387	88044	AN126640	...STUD,PLAIN -0.012 IN. OVERSIZE.............UHE,UHH,UHV,UHX	EA	V
168	46	PADZZ	5305-00-957-7815	96906	MS24693S4	...SCREW,MACHINE..............................UHE,UHH,UHV,UHX	EA	3
168	47	PADZZ	5340-00-597-3309	83324	RD205S87	...INSERT,SCREW THR U/O PN 205-040-125-3.........UHE,UHH,UHV	EA	6
168	47	PADZZ	5340-00-290-5124	96906	MS51991-206	...INSERT,SCREW THR U/O PN 205-040-199-3.............UHE,UHX	EA	6
168	48	PADZZ	5340-00-559-8030	83324	RAD107S89	...INSERT,SCREW THR U/O PN 205-040-125-3.........UHE,UHH,UHV	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
168	48	PADZZ	5340-00-151-5932	96906	MS51991-107	...INSERT,SCREW THREAD U/O PN 205-040-199-3..........UHE,UHX	EA	2
168	49	PADZZ	5365-00-405-7576	96906	MS51990-105P	...RING,LOCK,SERRATED.....................UHE,UHH,UHV,UHX,UHC	EA	6
168	50	PBDZZ	5365-00-735-0196	83324	RL33589	...RING,LOCK,SERRATED U/O PN 205-040-125-3.......UHE,UHH,UHV	EA	2
168	50	PADZZ	5365-00-421-9083	96906	MS51990-107P	...RING,LOCK,SERRATED U/O PN 205-040-199-3..........UHE,UHX	EA	2
168	51	MDDZZ	1615-00-488-5021	97499	205-040-125-11	...PLATE,SHIM U/O PN 205-040-125-3...............UHE,UHH,UHV	EA	1
168	51	MDDZZ		97499	205-040-199-11	...PLATE,SHIM U/O PN 205-040-199-3..................UHE,UHX	EA	1
168	52	PADZZ	5315-00-983-9160	96906	MS24692-100P	...PIN,TAPERED,PLAI U/O PN 205-040-125-3.....UHE,UHH,UHV,UHX	EA	5
168	52A	PADZZ	5315-00-527-6890	88044	AN385-30P5	...PIN,TAPERED,PLAIN U/O PN 205-040-199-3....UHE,UHH,UHV,UHX	EA	6
168	53	PADZZ	5315-00-062-4388	96906	MS24692-50P	...PIN,TAPERED,PLAIN U/O PN 205-040-125-1....UHE,UHH,UHV,UHX	EA	2
168	53A	PADZZ	5315-00-530-7901	88044	AN385-50P3	...PIN,TAPERED,PLAIN U/O PN 205-040-199-3....UHE,UHH,UHV,UHX	EA	4
168	54	PADZZ	3130-00-070-7839	97499	205-040-118-1	...LINER,BEARING HOUSI GENERATOR DRIVE.......UHE,UHH,UHV,UHX	EA	1
168	55	PADZZ	3120-00-068-7527	97499	205-040-119-1	...BUSHING,SLEEVE............................UHE,UHH,UHV,UHX	EA	1
168	56	PADZZ	5310-00-071-0907	97499	205-040-120-1	...WASHER,SHOULDERED U/O PN 205-040-125-3....UHE,UHH,UHV,UHX	EA	1
168	56A	PADZZ	3130-00-568-4778	97499	214-040-708-1	...LINER,BEARING HOUSI U/O PN 205-040-199-3..........UHE,UHX	EA	2
168	57	XADDD		97499	205-040-125-5	..CASE ASSEMBLY U/O PN 205-040-125-1.............UHE,UHH,UHV	EA	1
168	57A	XADDD		97499	205-040-199-5	..CASE ASSEMBLY U/O PN 205-040-199-1.................UHE,UHX	EA	1
168	58	PADZZ	5307-00-828-9957	83324	SFA121-12SA16-5A	...STUD,LOCKED IN U/O PN 205-040-125-5...........UHE,UHH,UHV	EA	6
168	58	XDDZZ	5307-00-222-2083	96906	MS51989-107-16	...STUD U/O P/N 205-040-199-5........................UHE,UHX	EA	6
168	59	PBDZZ	5365-00-735-0196	83324	RL33589	...RING,LOCK,SERRATED U/O PN 205-040-125-5.......UHE,UHH,UHV	EA	6
168	59	PADZZ	5365-00-421-9083	96906	MS51990-107P	...RING,LOCK,SERRATED U/O PN 205-040-199-5..........UHE,UHX	EA	6
168	60	PADZZ	5315-00-062-4388	96906	MS24692-50P	...PIN,TAPERED,PLAIN U/O PN 205-040-125-5....UHE,UHH,UHV,UHX	EA	2
168	60A	PADZZ	5315-00-530-7901	88044	AN385-50P3	...PIN,TAPERED,PLAIN U/O PN 205-040-199-5....UHE,UHH,UHV,UHX	EA	4
168	61	PADZZ	5310-00-071-0907	97499	205-040-120-1	...WASHER,SHOULDERED U/O PN 205-040-125-5....UHE,UHH,UHV,UHX	EA	1
168	61A	PADZZ	5310-00-071-0907	97499	205-040-120-1	...WASHER,SHOULDERED U/O PN 205-040-199-5....UHE,UHH,UHV,UHX	EA	2
168	62	PADZZ	5340-01-094-5402	81349	M45932/1-13AL	...INSERT,SCREW THREAD U/O PN 205-040-196-5..........UHE,UHX	EA	3

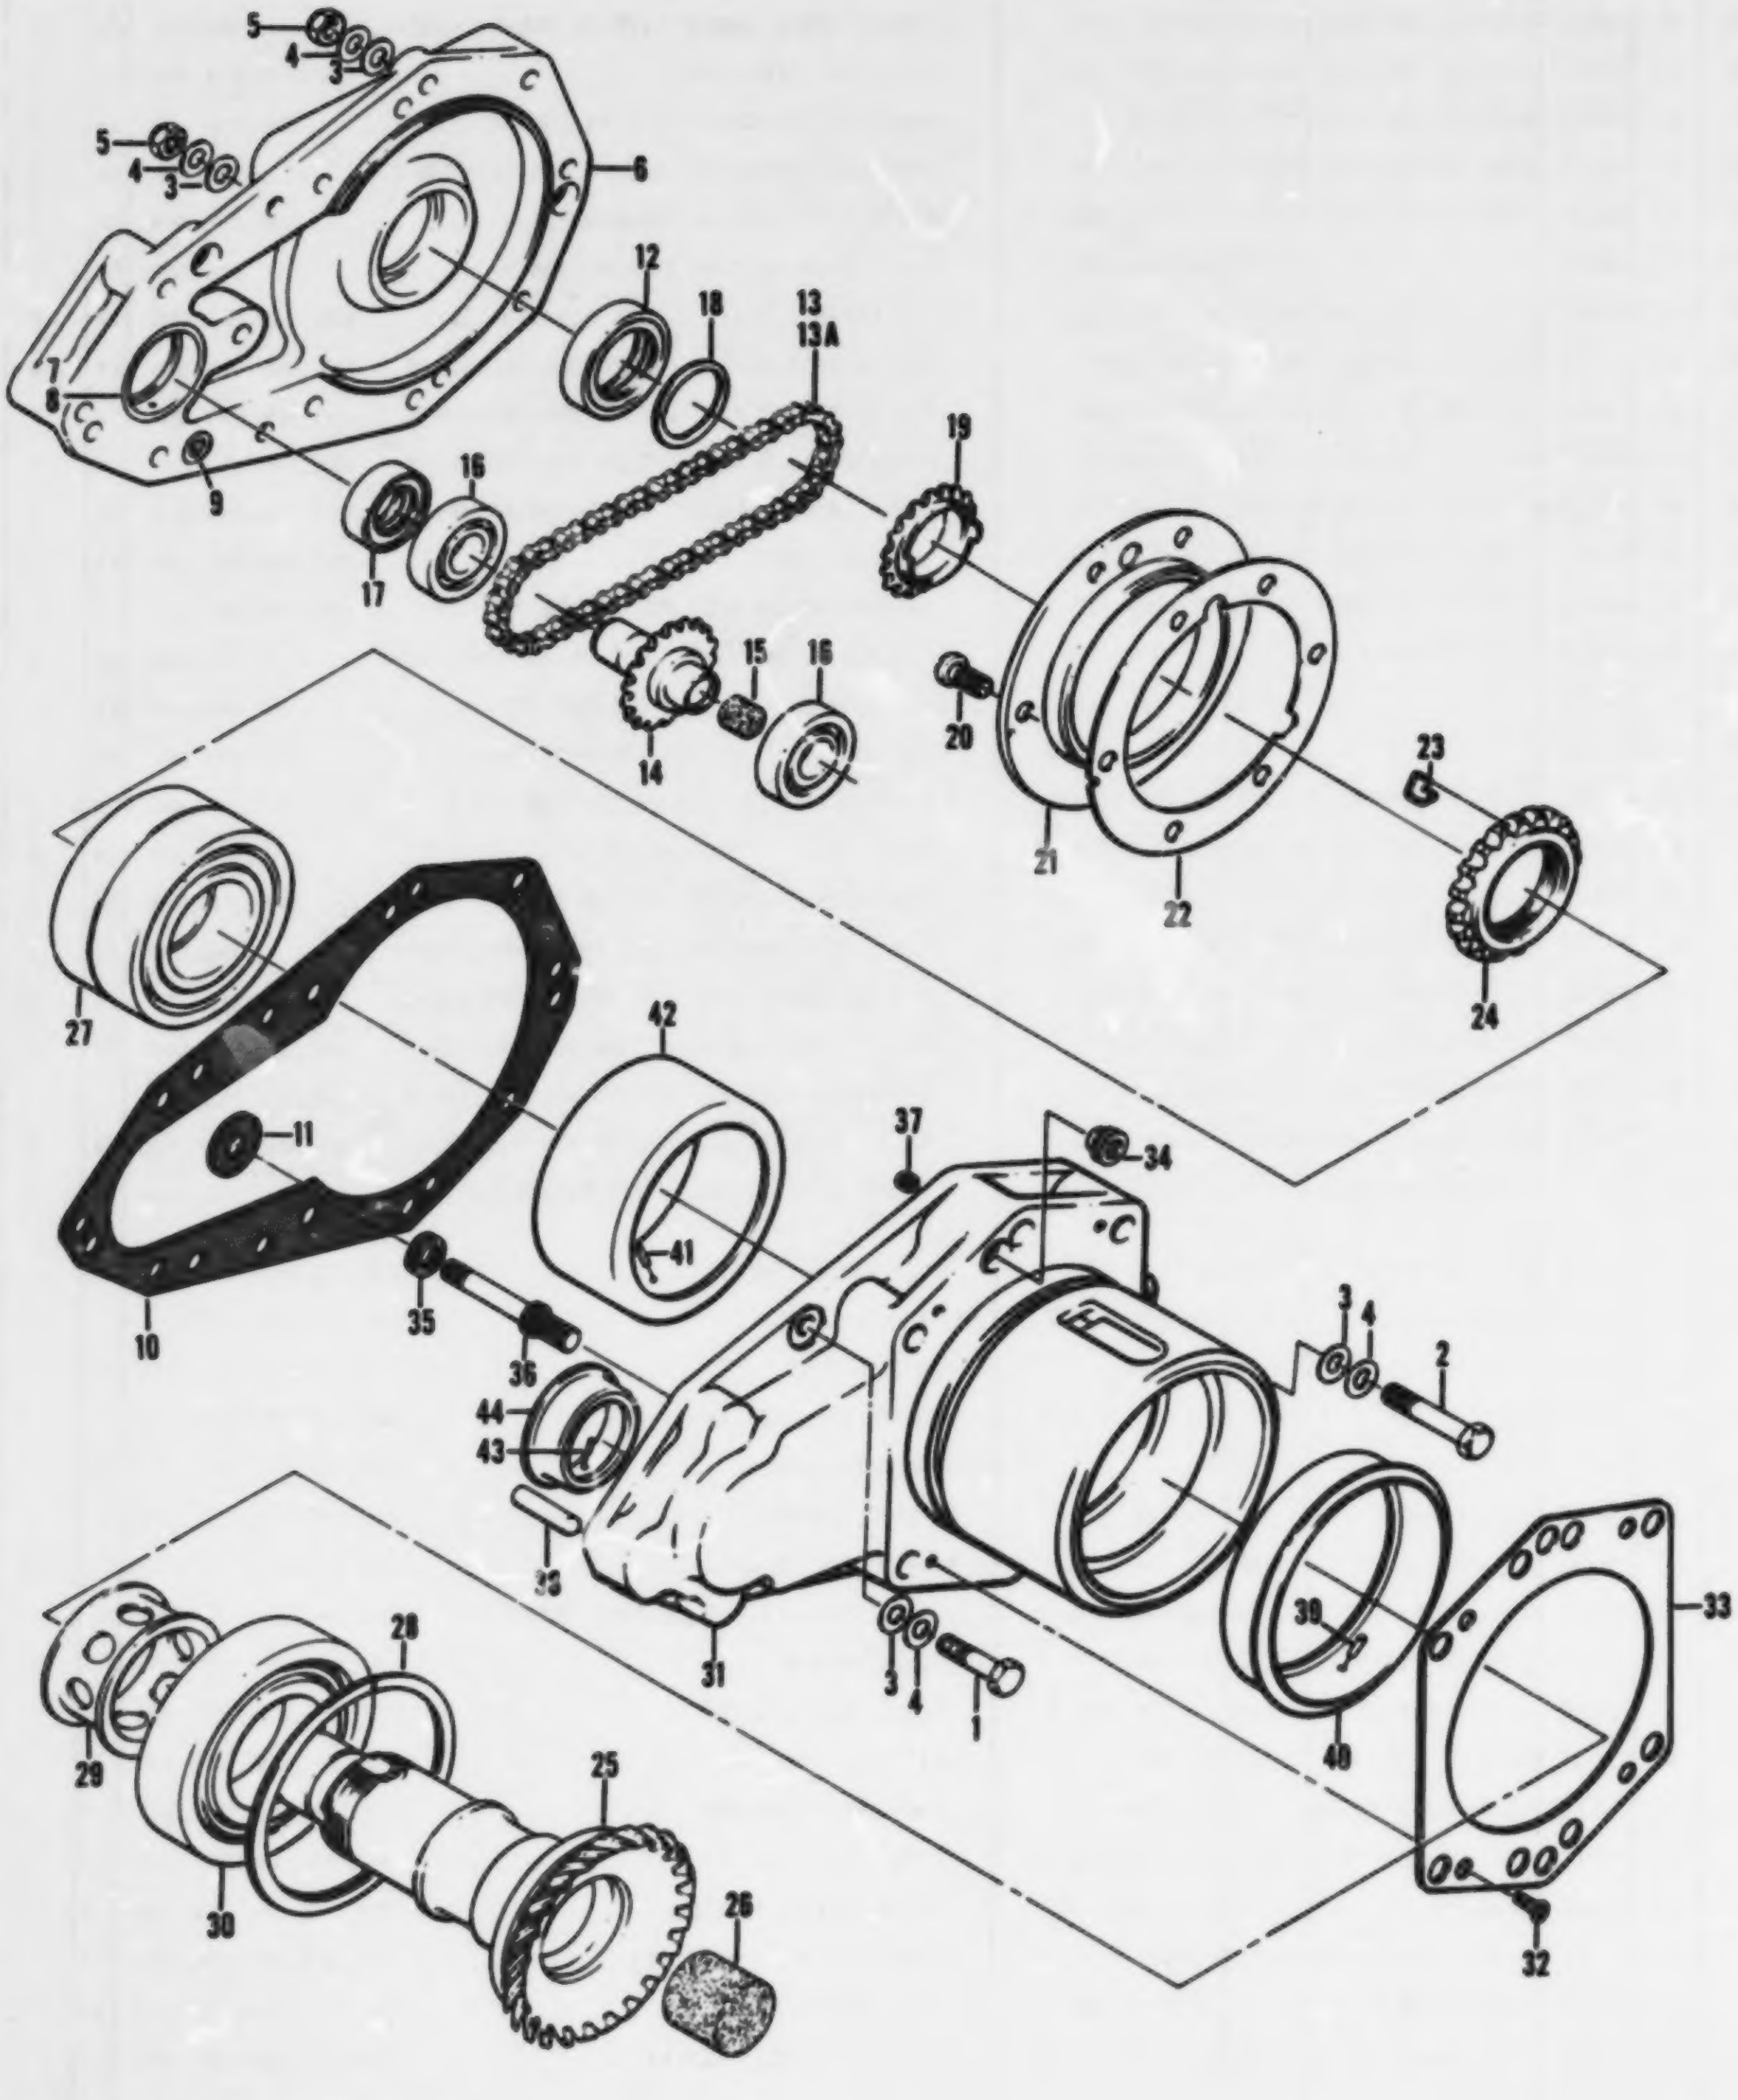
5
4
3
5
4
3
6
7
8
9
12
18
13
13A
16
17
19
15
16
14
20
21
22
23
24
27
42
37
34
11
41
10
35
36
44
43
38
31
3
4
2
3
4
1
39
40
33
28
29
25
30
26
32

Figure 169. Quill Assembly, Accessory Drive

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
169		PADDD	1615-00-829-6845	97499	204-040-367-1	QUILL ASSEMBLY ,ACCESSORY DRIVE SEE FIG. 152 & 154 FOR NHA ....UHB,UHE,UHH,UHV,UHX	EA	1
169	1	PADZZ	5306-00-182-1526	88044	AN4H5	.BOLT,MACHINE..........UHB,UHE,UHH,UHV,UHX	EA	2
169	2	PADZZ	5306-00-182-1962	88044	AN4H14A	.BOLT,MACHINE..........UHB,UHE,UHH,UHV,UHX	EA	1
169	3	PADZZ	5310-00-187-2354	88044	AN960PD416	.WASHER,FLAT..........UHB,UHE,UHH,UHV,UHX	EA	6
169	4	PADZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..........UHB,UHE,UHH,UHV,UHX	EA	6
169	5	PADZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON......UHB,UHE,UHH,UHV,UHX	EA	3
169	6	PADDD	1615-00-795-0662	97499	204-040-334-9	.COVER ASSEMBLY,HYDR PUMP..........UHB,UHE,UHH,UHV,UHX	EA	1
169	7	PADZZ	5315-00-062-4388	96906	MS24692-50P	..PIN,TAPERED,PLAIN..........UHB,UHE,UHH,UHV,UHX	EA	1
169	8	XBDZZ	3120-00-769-2365	97499	204-040-791-1	..BUSHING,SLEEVE..........UHB,UHE,UHH,UHV,UHX	EA	1
169	9	PADZZ	5310-00-596-5477	83324	REA048	..NUT,PLAIN,SPLINE..........UHB,UHE,UHH,UHV,UHX	EA	3
169	10	PADZZ	5330-00-869-8062	97499	204-040-163-5	.GASKET..........UHB,UHE,UHH,UHV,UHX	EA	1
169	11	PADZZ	5330-00-625-0116	97499	204-040-163-3	.GASKET..........UHB,UHE,UHH,UHV,UHX	EA	1
169	12	PADZZ	5330-00-947-3205	76680	450120H	.SEAL,PLAIN ENCASED..........UHB,UHE,UHH,UHV,UHX	EA	1
169	13	PADDD	3020-00-691-0548	97499	204-001-736-5	.CHAIN,ROLLER..........UHB,UHE,UHH,UHV,UHX	EA	1
169	13A	PADZZ	3020-00-956-9872	72625	C4189CL18	..LINK,ROLLER CHAIN..........UHB,UHE,UHH,UHV,UHX	EA	1
169	14	PADDD	1615-00-898-6888	97499	204-040-333-1	.SPROCKET ASSEMBLY..........UHB,UHE,UHH,UHV,UHX	EA	1
169	15	PADZZ	6640-00-232-5985	22527	7-7910	..STOPPER,BOTTLE..........UHB,UHE,UHH,UHV,UHX	EA	1
169	16	PADZZ	3110-00-814-7639	97499	204-040-145-1	.BEARING,BALL,ANNULA..........UHB,UHE,UHH,UHV,UHX	EA	2
169	17	PADZZ	5330-00-948-0919	76680	450007H	.SEAL,PLAIN,ENCASED..........UHB,UHE,UHH,UHV,UHX	EA	1
169	18	PADZZ	5365-00-830-5704	80756	RS100L	.RING,RETAINING..........UHB,UHE,UHH,UHV,UHX	EA	1
169	19	PADZZ	1615-00-625-0134	97499	204-040-112-1	.SPROCKET,HYDRAULIC..........UHB,UHE,UHH,UHV,UHX	EA	1
169	20	PADZZ	5305-00-150-9520	88044	AN502-416-6	.SCREW,MACHINE..........UHB,UHE,UHH,UHV,UHX	EA	6
169	21	PADZZ	3110-00-625-0133	97499	204-040-199-1	.RETAINING RING,PUMP..........UHB,UHE,UHH,UHV,UHX	EA	1
169	22	PADZZ	5365-00-625-0139	97499	204-040-192-1	.SHIM..........UHB,UHE,UHH,UHV,UHX	EA	1
169	23	PADZZ	5340-00-439-8474	97499	204-040-231-1	.CLIP,RETAINER..........UHB,UHE,UHH,UHV,UHX	EA	1
169	24	PADZZ	5310-00-797-2438	97499	204-040-230-1	.NUT,PLAIN,SPLINE..........UHB,UHE,UHH,UHV,UHX	EA	1
169	25	PADDD	3040-00-787-4262	97499	204-040-105-21	.PINION ASSEMBLY..........UHB,UHE,UHH,UHV,UHX	EA	1
169	26	PBDZZ	6640-00-232-5995	22527	7-7910	..STOPPER,BOTTLE..........UHB,UHE,UHH,UHV,UHX	EA	1
169	27	PADDD	3110-00-625-0114	97499	204-040-143-1	.BEARING,BALL,DUPLEX..........UHB,UHE,UHH,UHV,UHX	EA	1
169	28	PADZZ	5365-00-805-5118	80756	RR314L	.RING,RETAINING..........UHB,UHE,UHH,UHV,UHX	EA	1
169	29	PADZZ	3120-00-439-8473	97499	204-040-170-5	.BEARING,SLEEVE..........UHB,UHE,UHH,UHV,UHX	EA	1
169	30	PADDD	3110-00-822-2130	97499	204-040-310-1	.BEARING,ROLLER,CYLI..........UHB,UHE,UHH,UHV,UHX	EA	1
169	31	PADDD	1615-00-875-7999	97499	204-040-305-11	.SLEEVE ASSEMBLY, ACCESSORY DRIVE.......UHB,UHE,UHH,UHV,UHX	EA	1
169	32	PADZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE..........UHB,UHE,UHH,UHV,UHX	EA	4
169	33	MDDZZ	1615-00-945-8249	97499	204-040-306-9	..PLATE,TRANSMISSION..........UHB,UHE,UHH,UHV,UHX	EA	1
169	34	PADZZ	5310-00-596-5477	83324	REA048	..NUT,PLAIN,SPLINE..........UHB,UHE,UHH,UHV,UHX	EA	2
169	35	PADZZ	5365-00-935-3868	96906	MS51990-106	..RING,LOCK,SERRATED..........UHB,UHE,UHH,UHV,UHX	EA	4
169	36	PADZZ	5307-00-639-7774	83324	SF101-9SA28A	..STUD,LOCKED IN..........UHB,UHE,UHH,UHV,UHX	EA	4
169	37	PADZZ	5340-00-200-7224	96906	MS21208C4-10	..INSERT,SCREW THREAD..........UHB,UHE,UHH,UHV,UHX	EA	6
169	38	PADZZ	5315-00-721-4858	80205	NAS607-4-4	..PIN,STRAIGHT, HEADLESS..........UHB,UHE,UHH,UHV,UHX	EA	1
169	39	PBDZZ	5315-00-060-2826	96906	MS24692-98P	..PIN,TAPERED,PLAIN..........UHB,UHE,UHH,UHV,UHX	EA	3
169	40	PADZZ	3130-00-785-3624	97499	204-040-318-1	..LINER,BEARING, SLEEVE..........UHB,UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
169	41	PBOZZ	5315-00-080-2826	96906	MS24692-58P	..PIN,TAPERED,PLAIN........................	UHB,UHE,UHH,UHV,UHX	EA	3
169	42	PADZZ	5365-00-893-0448	97499	204-040-316-1	..LINER,BEARING, SLEEVE..................	UHB,UHE,UHH,UHV,UHX	EA	1
169	43	PADZZ	5315-00-082-4388	96906	MS24692-50P	..PIN,TAPERED,PLAIN........................	UHB,UHE,UHH,UHV,UHX	EA	1
169	44	PADZZ	3130-00-895-9486	97499	204-040-317-1	..LINER,BEARING, SLEEVE..................	UHB,UHE,UHH,UHV,UHX	EA	1

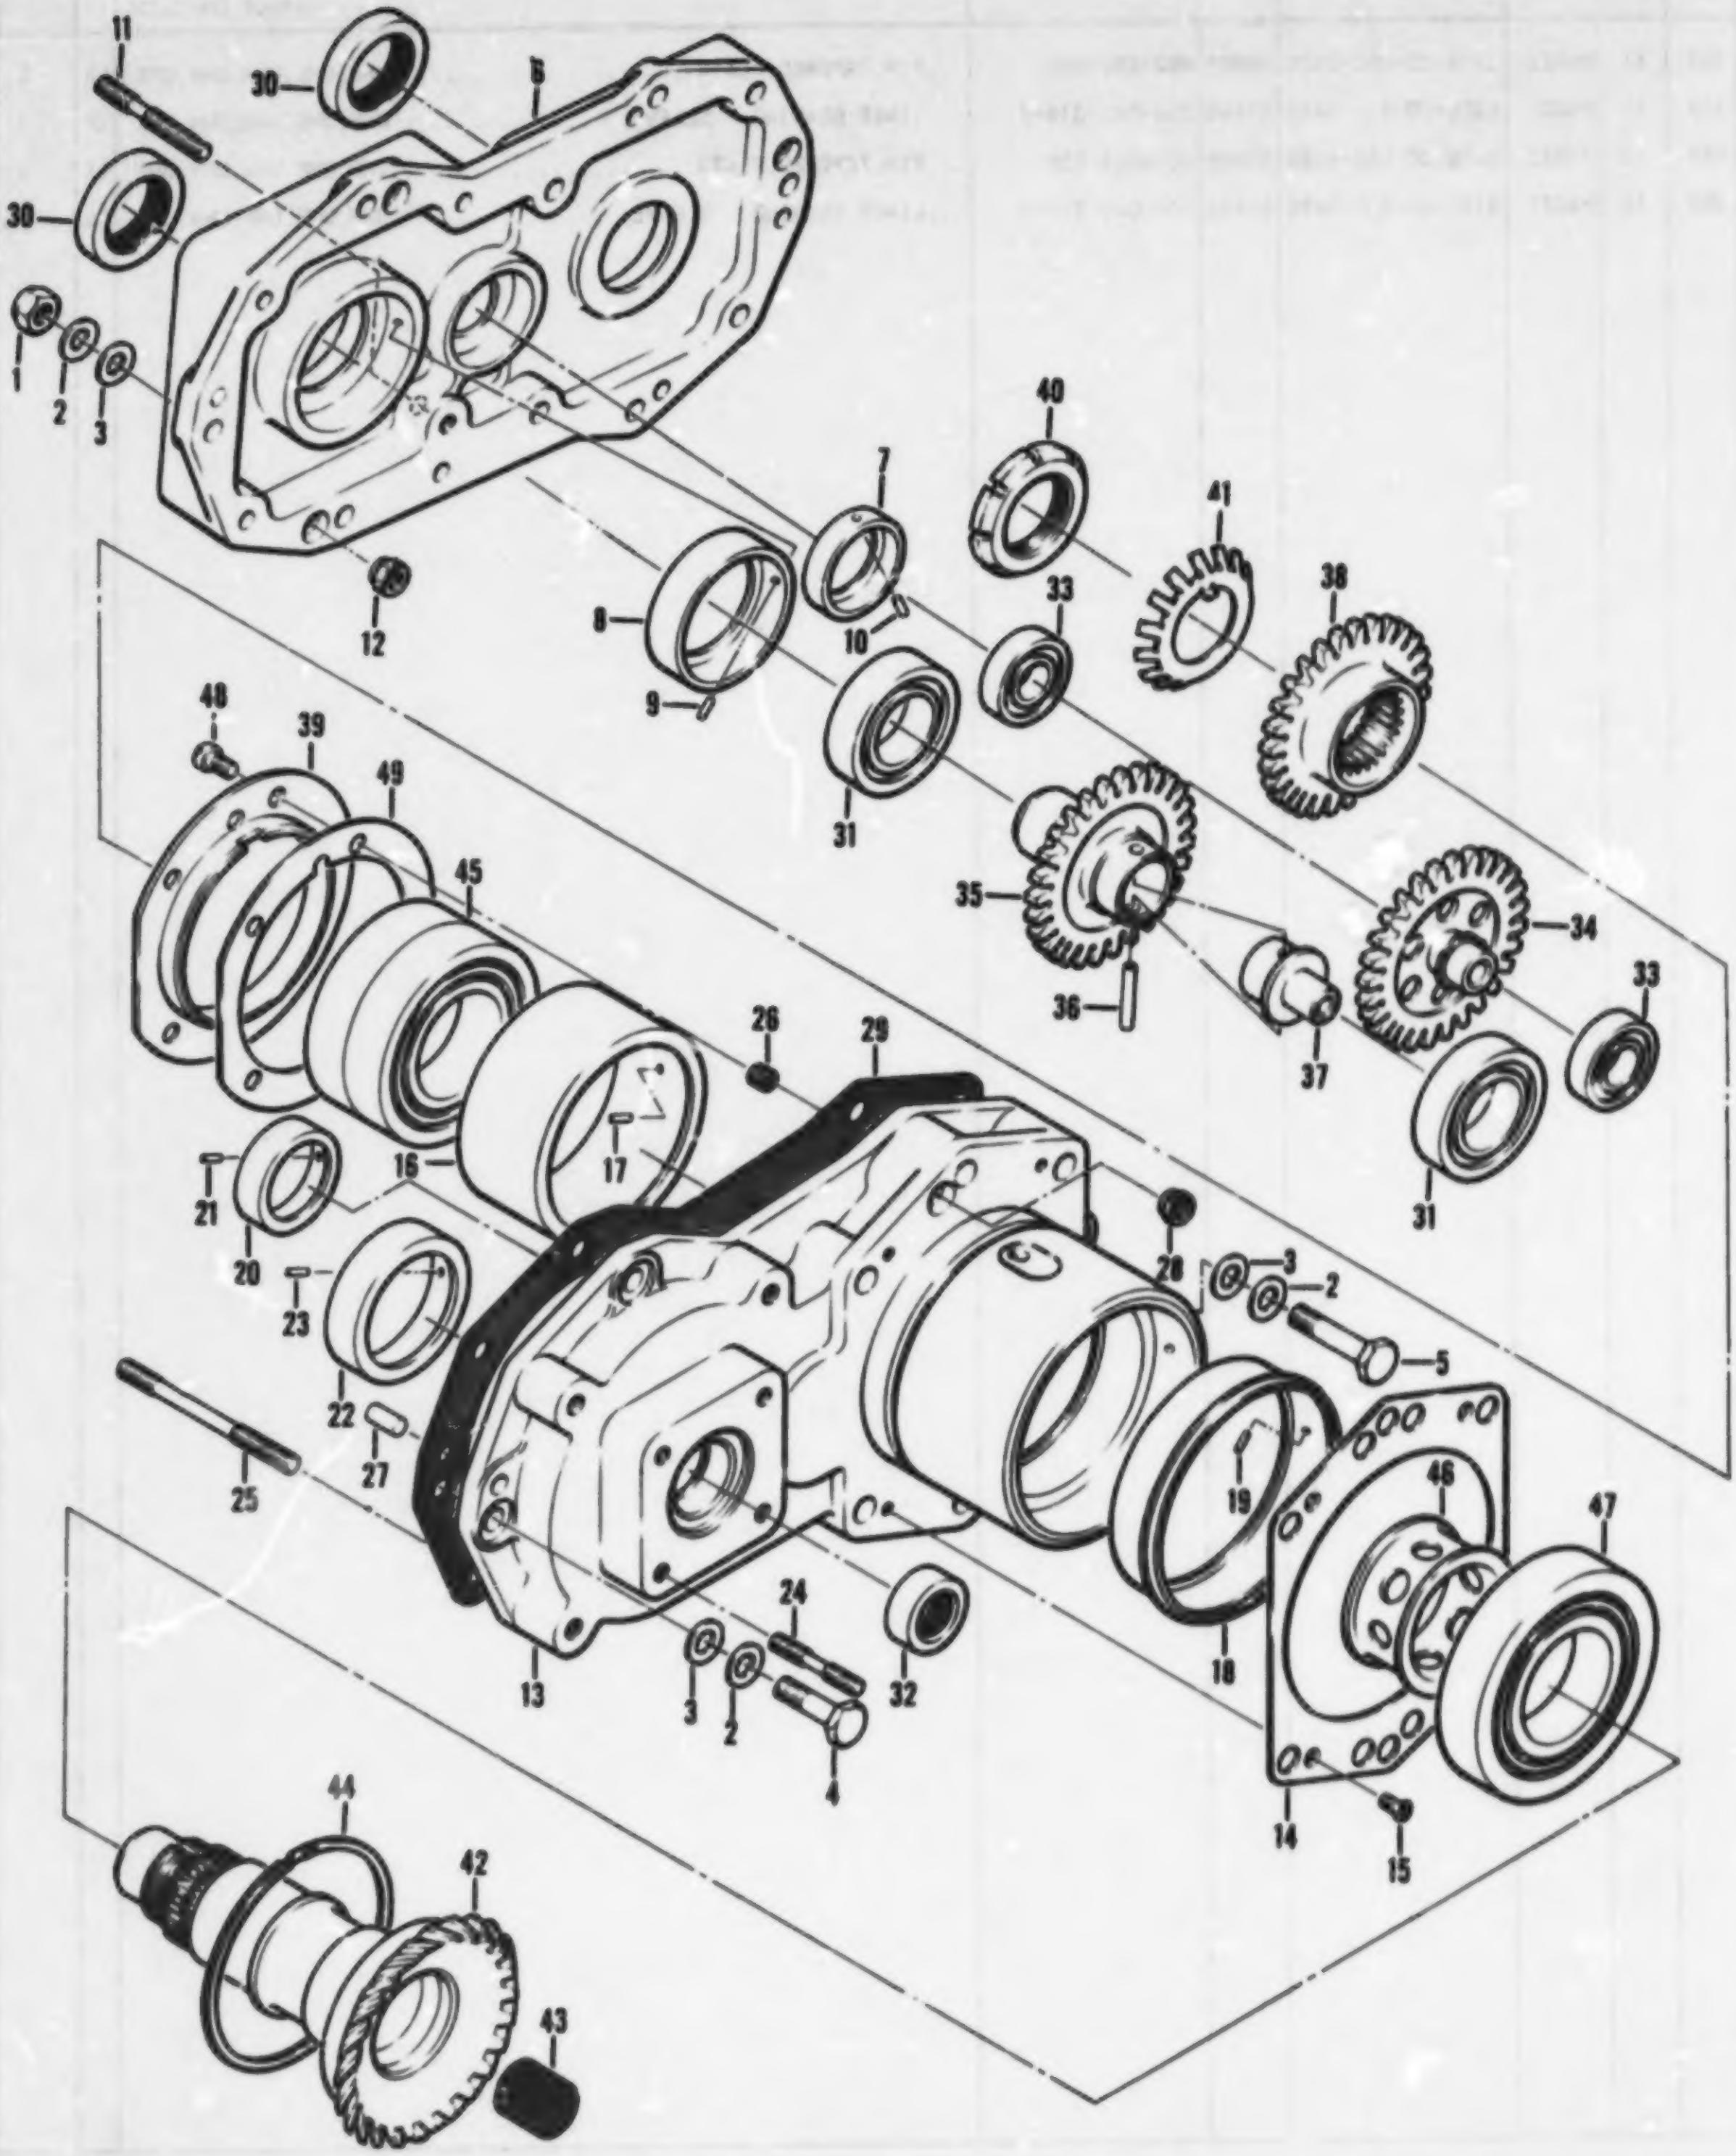
11
30
6
30
1
2
3
12
40
7
41
33
38
8
10
9
48
39
49
31
45
35
34
36
33
37
26
29
21
16
17
20
28
3
2
23
5
31
22
27
25
19
46
47
24
32
13
3
2
18
4
14
15
44
42
43

Figure 170. Quill Assembly, Transmission

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) UM	(8) QTY INC IN UNIT
170		PAODO	1680-00-871-8736	97499	204-040-800-1	QUILL ASSEMBLY,TRAN SEE FIG. 152 FOR NHA..............UHC,UHM	EA	1
170	1	PADZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON..............UHC,UHM	EA	5
170	2	PADZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..............UHC,UHM	EA	10
170	3	PADZZ	5310-00-804-6801	80205	NAS1197-416L	.WASHER,FLAT..............UHC,UHM	EA	10
170	4	PADZZ	5306-00-151-1424	88044	AN4-10A	.BOLT,MACHINE..............UHC,UHM	EA	4
170	5	PADZZ	5306-00-151-1420	88044	AN4-14A	.BOLT,MACHINE..............UHC,UHM	EA	1
170	6	PADDD	1650-00-872-1181	97499	204-040-802-1	.COVER,HYDRAULIC PUM..............UHC,UHM	EA	1
170	7	PADZZ	3130-00-872-1276	97499	204-040-804-1	..LINER,BEARING HOUSI SLEEVE..............UHC,UHM	EA	1
170	8	PADZZ	3130-00-872-1275	97499	204-040-805-1	..LINER,BEARING, SLEEVE..............UHC,UHM	EA	2
170	9	PBDZZ	5315-00-060-2826	96906	MS24692-98P	..PIN,TAPERED,PLAIN..............UHC,UHM	EA	2
170	10	PADZZ	5315-00-062-4388	96906	MS24692-50P	..PIN,TAPERED,PLAIN..............UHC,UHM	EA	1
170	11	PADZZ	5307-00-079-7203	88044	AN126546	..STUD,PLAIN -STANDARD..............UHC,UHM	EA	V
170	11	PADZZ	5307-00-902-4172	88044	AN126547	..STUD,PLAIN -0.003 IN. OVERSIZE..............UHC,UHM	EA	V
170	11	PADZZ	5307-00-902-4171	88044	AN126548	..STUD,PLAIN -0.006 IN. OVERSIZE..............UHC,UHM	EA	V
170	11	PADZZ	5307-00-902-4648	88044	AN126549	. STUD,PLAIN -0.009 IN. OVERSIZE..............UHC,UHM	EA	V
170	11	PADZZ	5307-00-902-4170	88044	AN126550	..STUD,PLAIN -0.012 IN. OVERSIZE..............UHC,UHM	EA	3
170	12	PADZZ	5310-00-596-5477	83324	REA048	..NUT,PLAIN,SPLINE..............UHC,UHM	EA	1
170	13	PADDD	1680-00-871-8738	97499	204-040-801-1	.SLEEVE ASSEMBLY, TRANSMISSION..............UHC,UHM	EA	1
170	14	MDDZZ		97499	204-040-801-5	..SHIM,PLATE..............UHC,UHM	EA	4
170	15	PADZZ	5305-00-957-7815	96906	MS24693S54	..SCREW,MACHINE..............UHC,UHM	EA	1
170	16	PADZZ	5365-00-893-0448	97499	204-040-316-1	..WASHER,RECESS..............UHC,UHM	EA	3
170	17	PBDZZ	5315-00-060-2826	96906	MS24692-98P	..PIN,TAPERED,PLAIN..............UHC,UHM	EA	1
170	18	PADZZ	3130-00-785-3624	97499	204-040-318-1	..LINER,BEARING HOUSI..............UHC,UHM	EA	3
170	19	PBDZZ	5315-00-060-2826	96906	MS24692-98P	..PIN,TAPERED,PLAIN..............UHC,UHM	EA	1
170	20	PADZZ	3130-00-872-1276	97499	204-040-804-1	..LINER,BEARING SLEEVE..............UHC,UHM	EA	2
170	21	PADZZ	5315-00-062-4388	96906	MS24692-50P	..PIN,TAPERED,PLAIN..............UHC,UHM	EA	1
170	22	PADZZ	3130-00-872-1275	97499	204-040-805-1	..LINER,BEARING SLEEVE..............UHC,UHM	EA	2
170	23	PBDZZ	5315-00-060-2826	96906	MS24692-98P	..PIN,TAPERED,PLAIN..............UHC,UHM	EA	4
170	24	PADZZ	5307-00-938-6092	88044	AN126222	..STUD,PLAIN STANDARD -STANDARD..............UHC,UHM	EA	V
170	24	PADZZ	5307-00-902-4166	88044	AN126223	..STUD,PLAIN -0.003 IN. OVERSIZE..............UHC,UHM	EA	V
170	24	XDDZZ	5307-00-902-4169	88044	AN126224	..STUD,PLAIN -0.006 IN. OVERSIZE..............UHC,UHM	EA	V
170	24	PADZZ	5307-00-902-4168	88044	AN126225	..STUD,PLAIN -0.009 IN. OVERSIZE..............UHC,UHM	EA	V
170	24	PADZZ	5307-00-902-4167	88044	AN126226	..STUD,PLAIN -0.012 IN. OVERSIZE..............UHC,UHM	EA	3
170	25	XDDZZ	5307-00-983-8404	88044	AN126426	..STUD,PLAIN -STANDARD..............UHC,UHM	EA	V
170	25	XDDZZ	5307-00-902-4649	88044	AN126427	..STUD,PLAIN -0.003 IN. OVERSIZE..............UHC,UHM	EA	V
170	25	XDDZZ	5307-00-902-4650	88044	AN126428	..STUD,PLAIN -0.006 IN. OVERSIZE..............UHC,UHM	EA	V
170	25	XDDZZ	5307-00-902-4652	88044	AN126429	..STUD,PLAIN -0.009 IN. OVERSIZE..............UHC,UHM	EA	5
170	26	PADZZ	5340-00-290-4650	96906	MS21208F5-10	..INSERT,SCREW THREAD..............UHC,UHM	EA	2
170	27	PADZZ	5315-00-721-4858	80205	NAS607-4-4	..PIN,STRAIGHT HEADLESS..............UHC,UHM	EA	2
170	28	PADZZ	5310-00-596-5477	83324	REA048	..NUT,PLAIN,SPLINE..............UHC,UHM	EA	1
170	29	PADZZ	5330-00-872-1270	97499	204-040-803-1	.GASKET..............UHC,UHM	EA	2
170	30	PAFZZ	5330-00-872-1278	78680	450680H	.SEAL,PLAIN ENCASED..............UHC,UHM		

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
170	31	PADZZ	3110-00-516-5240	21335	P9105KE6569	.BEARING,BALL,ANNULA.........UHC,UHM	EA	2
170	32	PAFZZ	5330-00-948-0919	76680	450007H	.SEAL,PLAIN ENCAS.........UHC,UHM	EA	1
170	33	PADZZ	3110-00-814-7639	97499	204-040-145-1	.BEARING,BALL,ANNULA.........UHC,UHM	EA	2
170	34	PADZZ	3040-00-872-1216	97499	204-040-795-1	.GEARSHAFT,SPUR.........UHC,UHM	EA	1
170	35	PADDD	1680-00-872-1214	97499	204-040-796-1	.GEAR,SPUR AND ADAPT.........UHC,UHM	EA	1
170	36	PADZZ	5315-00-619-3155	80205	NAS561C6-15	..PIN,SPRING.........UHC,UHM	EA	1
170	37	PADZZ	1680-00-872-1182	97499	204-040-797-1	..ADAPTER,TACHOMETER.........UHC,UHM	EA	1
170	38	PADZZ	3020-00-872-1216	97499	204-040-794-1	.GEAR,SPUR,TRANSMISS.........UHC,UHM	EA	1
170	39	PADZZ	3110-00-871-8734	97499	204-040-798-1	.PLATE,RETAINING,BEA.........UHC,UHM	EA	1
170	40	PADZZ	5310-00-902-4097	96906	MS172330	.NUT,PLAIN,ROUND.........UHC,UHM	EA	1
170	41	PADZZ	5310-00-906-2500	96906	MS172280	.WASHER,KEY.........UHC,UHM	EA	1
170	42	PADDD	1680-00-871-8737	97499	204-040-793-1	.PINION ASSEMBLY.........UHC,UHM	EA	1
170	43	PADZZ	5340-01-026-3209	03938	8SHORT	.SHORT PLUG,GEARSHAF.........UHC,UHM	EA	1
170	44	PADZZ	5365-00-805-5118	80756	RR314L	.RING,RETAINING.........UHC,UHM	EA	1
170	44	PADZZ	5365-00-598-0991	80756	RR314	.RING,RETAINING.........UHC,UHM	EA	1
170	45	PADDD	3110-00-625-0114	97499	204-040-143-1	.BEARING,BALL,DUPLEX.........UHC,UHM	EA	1
170	46	PADZZ	3120-00-439-8473	97499	204-040-170-5	.BEARING,SLEEVE.........UHC,UHM	EA	1
170	47	PADDD	3110-00-822-2130	97499	204-040-310-1	.BEARING,ROLLER, CYLINDRICAL.........UHC,UHM	EA	1
170	48	PADZZ	5305-00-150-9520	88044	AN502-416-6	.SCREW,MACHINE.........UHC,UHM	EA	5
170	49	PADZZ	5365-00-872-1266	97499	204-040-799-1	.SHIM.........UHC,UHM	EA	1

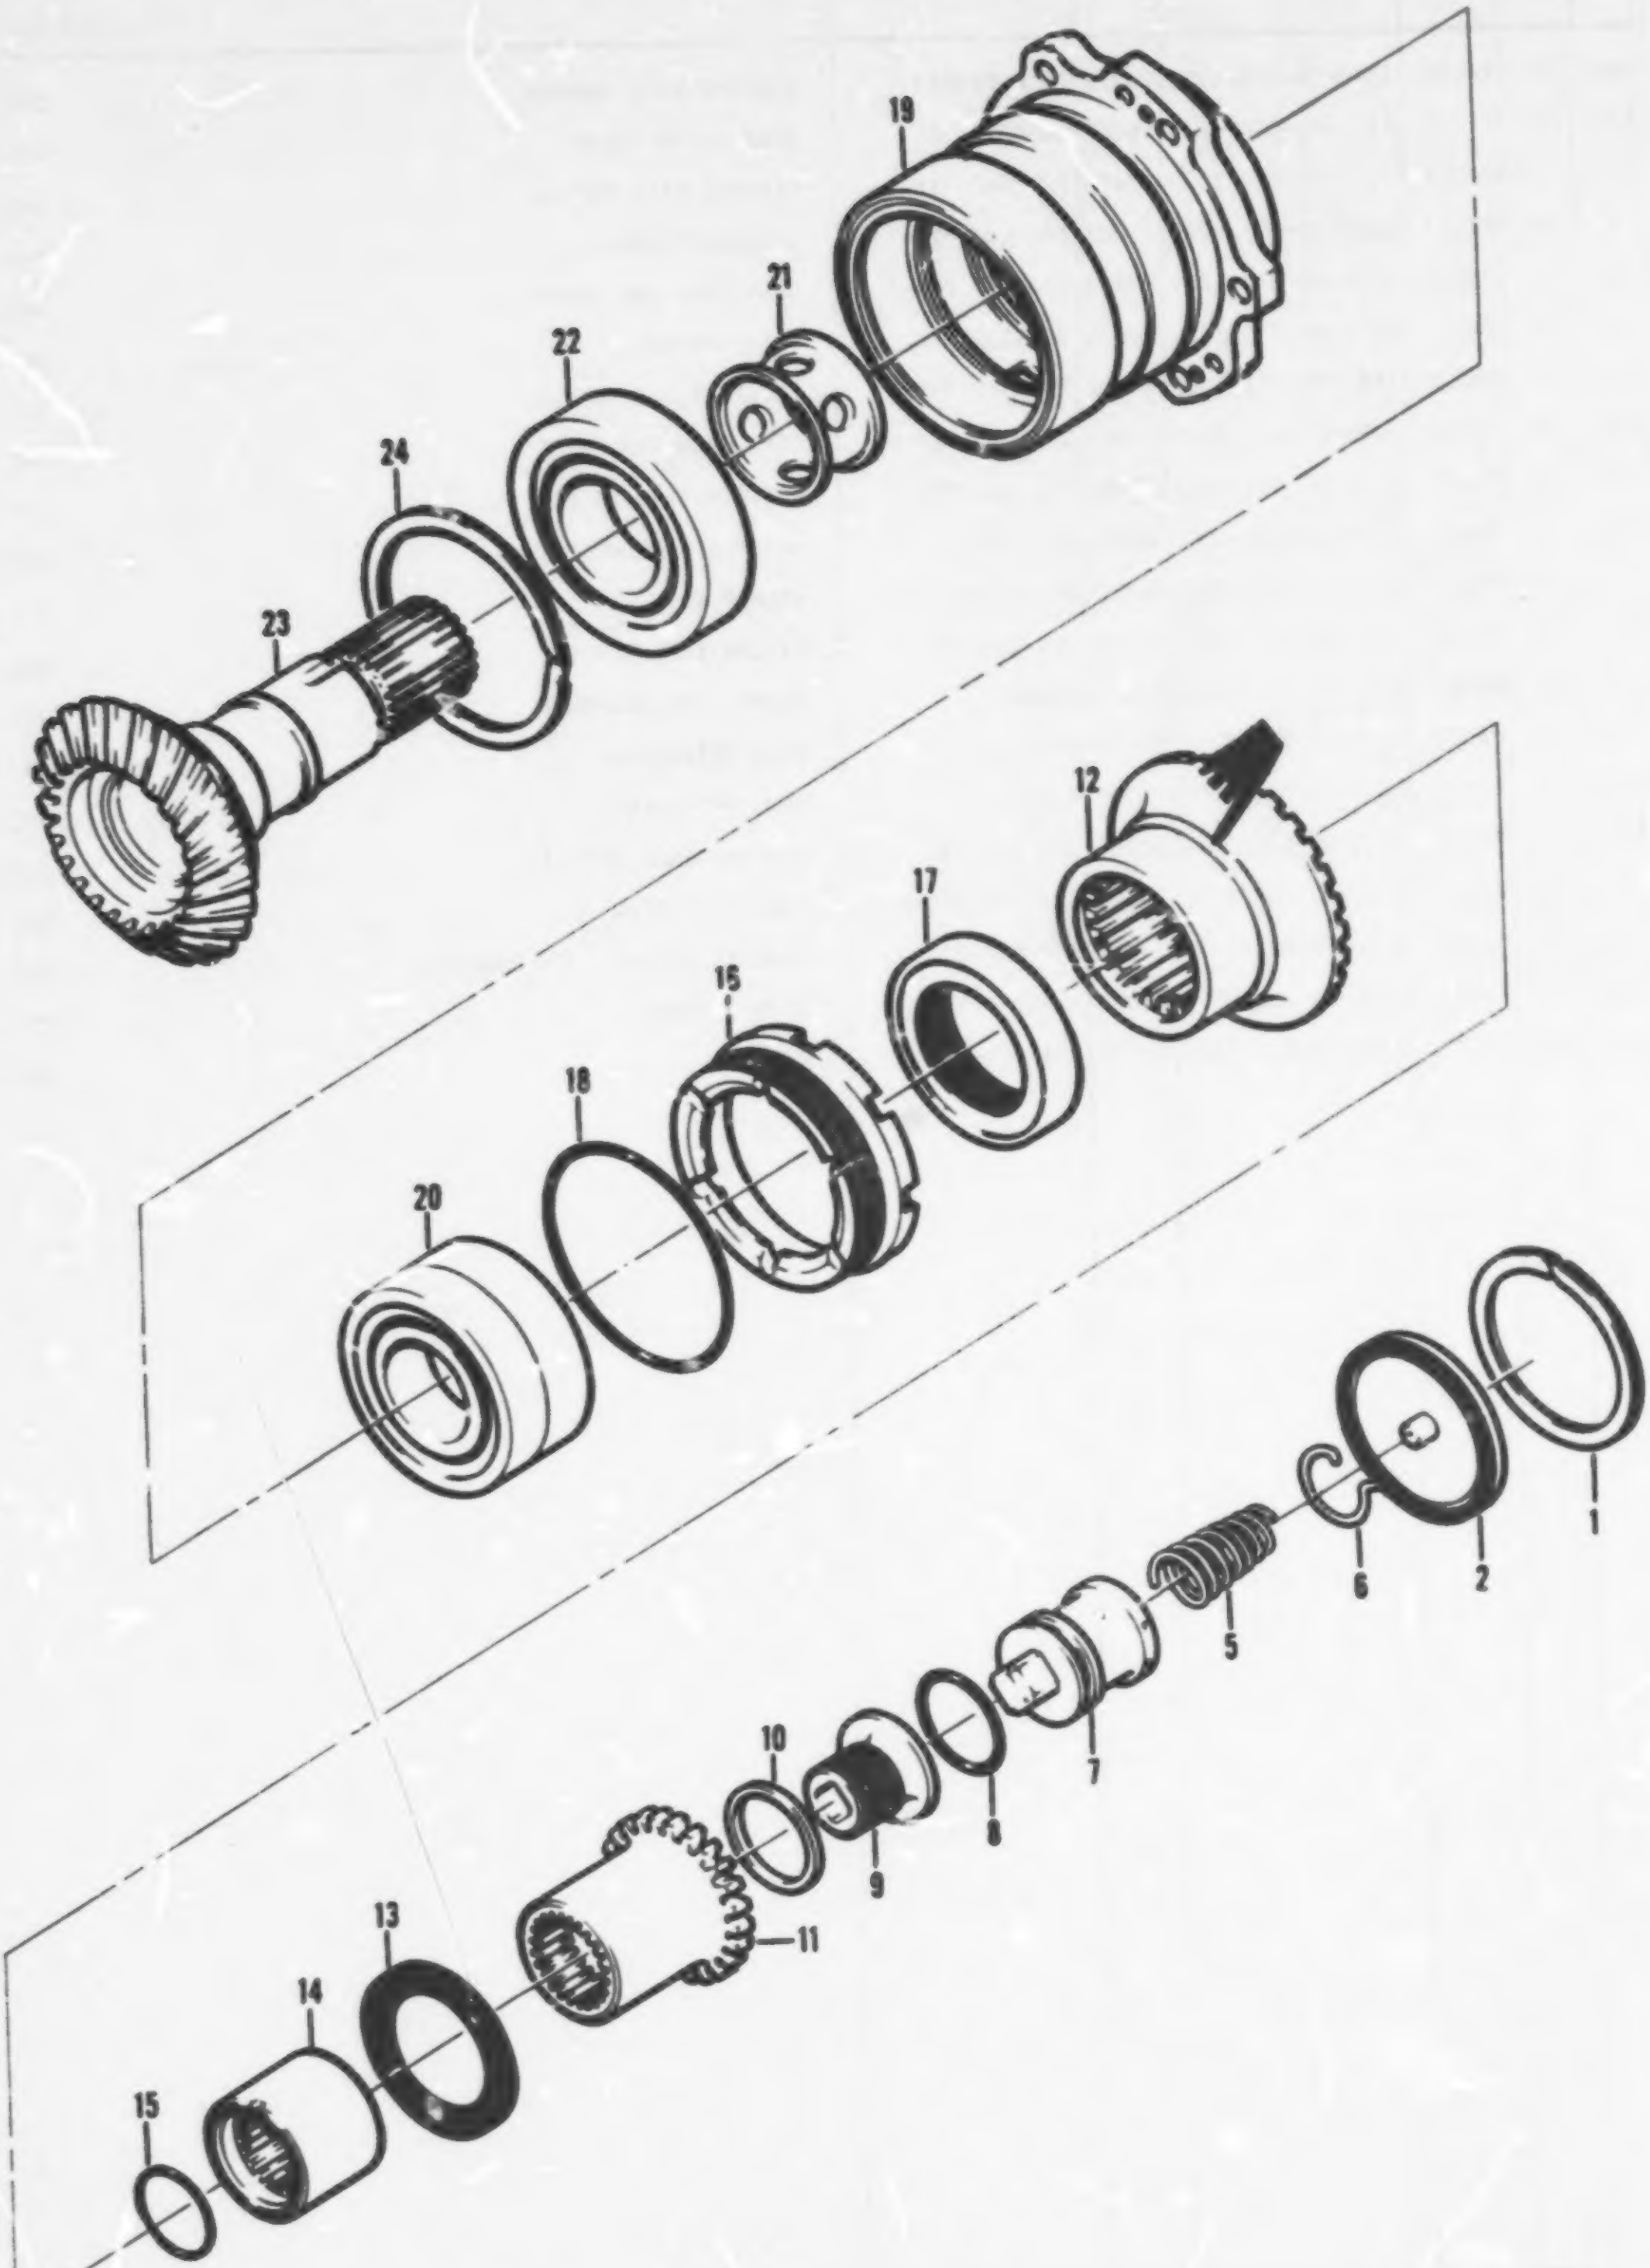
19
21
22
24
23
12
17
15
18
20
1
2
6
5
7
8
10
9
11
13
14
15

Figure 171. Quill Assembly, Tail Rotor

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7)	(8) QTY INC IN UNIT
171		PAODD	1615-00-795-0661	97499	204-040-207-13	QUILL ASSEMBLY,TAIL ROTOR SEE FIG 164 FOR MHA .... UHE,UHH,UHM,UHV,UHX	EA	1
171	1	PAOZZ	5365-00-619-0523	80756	RRT237C	.RING,RETAINING........ UHE,UHH,UHM,UHV,UHX	EA	1
171	2	PAOZZ	1615-00-701-4144	97499	204-040-510-1	.PLATE ASSEMBLY,TAIL........ UHE,UHH,UHM,UHV,UHX	EA	1
171	5	PAOZZ	5360-00-701-5659	97499	204-040-608-1	.SPRING,HELICAL,COMP........ UHE,UHH,UHM,UHV,UHX	EA	1
171	6	PAOZZ	5365-00-770-9347	97499	204-040-609-1	.RING,RETAINING........ UHE,UHH,UHM,UHV,UHX	EA	1
171	7	PAFZZ	1615-00-701-4143	97499	204-040-607-1	.RETAINER,HELICAL CO........ UHE,UHH,UHM,UHV,UHX	EA	1
171	8	PAFZZ	5330-00-618-2513	96906	MS29561-216	.PACKING,PREFORMED........ UHE,UHH,UHM,UHV,UHX	EA	1
171	9	PAFZZ	1560-00-691-2113	97499	204-040-612-1	.BOLT,RETAINING,COUP........ UHE,UHH,UHM,UHV,UHX	EA	1
171	10	PAFZZ	5365-00-691-2112	97499	204-040-606-1	.SPACER,RING........ UHE,UHH,UHM,UHV,UHX	EA	1
171	11	PAOFF	1615-00-791-6073	97499	204-040-603-7	.COUPLING,MALE SPHER........ UHE,UHH,UHM,UHV,UHX	EA	1
171	12	PAODD	1615-00-701-4142	97499	204-040-604-5	.COUPLING DRIVESHAFT........ UHE,UHH,UHM,UHV,UHX	EA	1
171	13	PAFZZ	5330-00-625-0132	97499	204-040-611-1	.SEAL,PLAIN........ UHE,UHH,UHM,UHV,UHX	EA	1
171	14	PAFZZ	5365-00-775-7744	97499	204-040-313-1	.SPACER,SLEEVE........ UHE,UHH,UHM,UHV,UHX	EA	1
171	15	PCFZZ	5330-00-803-9886	96906	MS29561-215	.PACKING,PREFORMED........ UHE,UHH,UHM,UHV,UHX	EA	1
171	16	PAFZZ	5365-00-772-6135	97499	204-040-185-3	.RING,EXTERNALLY THR........ UHE,UHH,UHM,UHV,UHX	EA	1
171	17	PAFZZ	5330-00-753-4432	76680	451858H50	.SEAL,PLAIN ENCASED........ UHE,UHH,UHM,UHV,UHX	EA	1
171	18	PCFZZ	5330-00-045-4569	96906	MS9241-233	.PACKING,PREFORMED........ UHE,UHH,UHM,UHV,UHX	EA	1
171	19	PAFDD	1615-00-798-3643	97499	204-040-305-1	.SLEEVE ASSY,TAIL ROTOR........ UHE,UHH,UHM,UHV,UHX	EA	1
171	20	PAFDD	3110-00-626-0114	97499	204-040-143-1	.BEARING,BALL,DUPLEX........ UHE,UHH,UHM,UHV,UHX	EA	1
171	21	PAFZZ	3120-00-439-8473	97499	204-040-170-5	.BEARING,SLEEVE........ UHE,UHH,UHM,UHV,UHX	EA	1
171	22	PAFDD	3110-00-822-2130	97499	204-040-310-1	.BEARING,ROLLER, CYLINDRICAL..... UHE,UHH,UHM,UHV,UHX	EA	1
171	23	PAFDD	3040-00-792-5406	97499	204-040-104-13	.GEARSHAFT,BEVEL........ UHE,UHH,UHM,UHV,UHX	EA	1
171	24	PAFZZ	5365-00-805-5118	80756	RR314L	.RING,RETAINING ALTERNATE........ UHE,UHH,UHM,UHV,UHX	EA	1
171	24	PAFZZ	5365-00-598-0991	80756	RR314	.RING,RETAINING........ UHE,UHH,UHM,UHV,UHX	EA	1

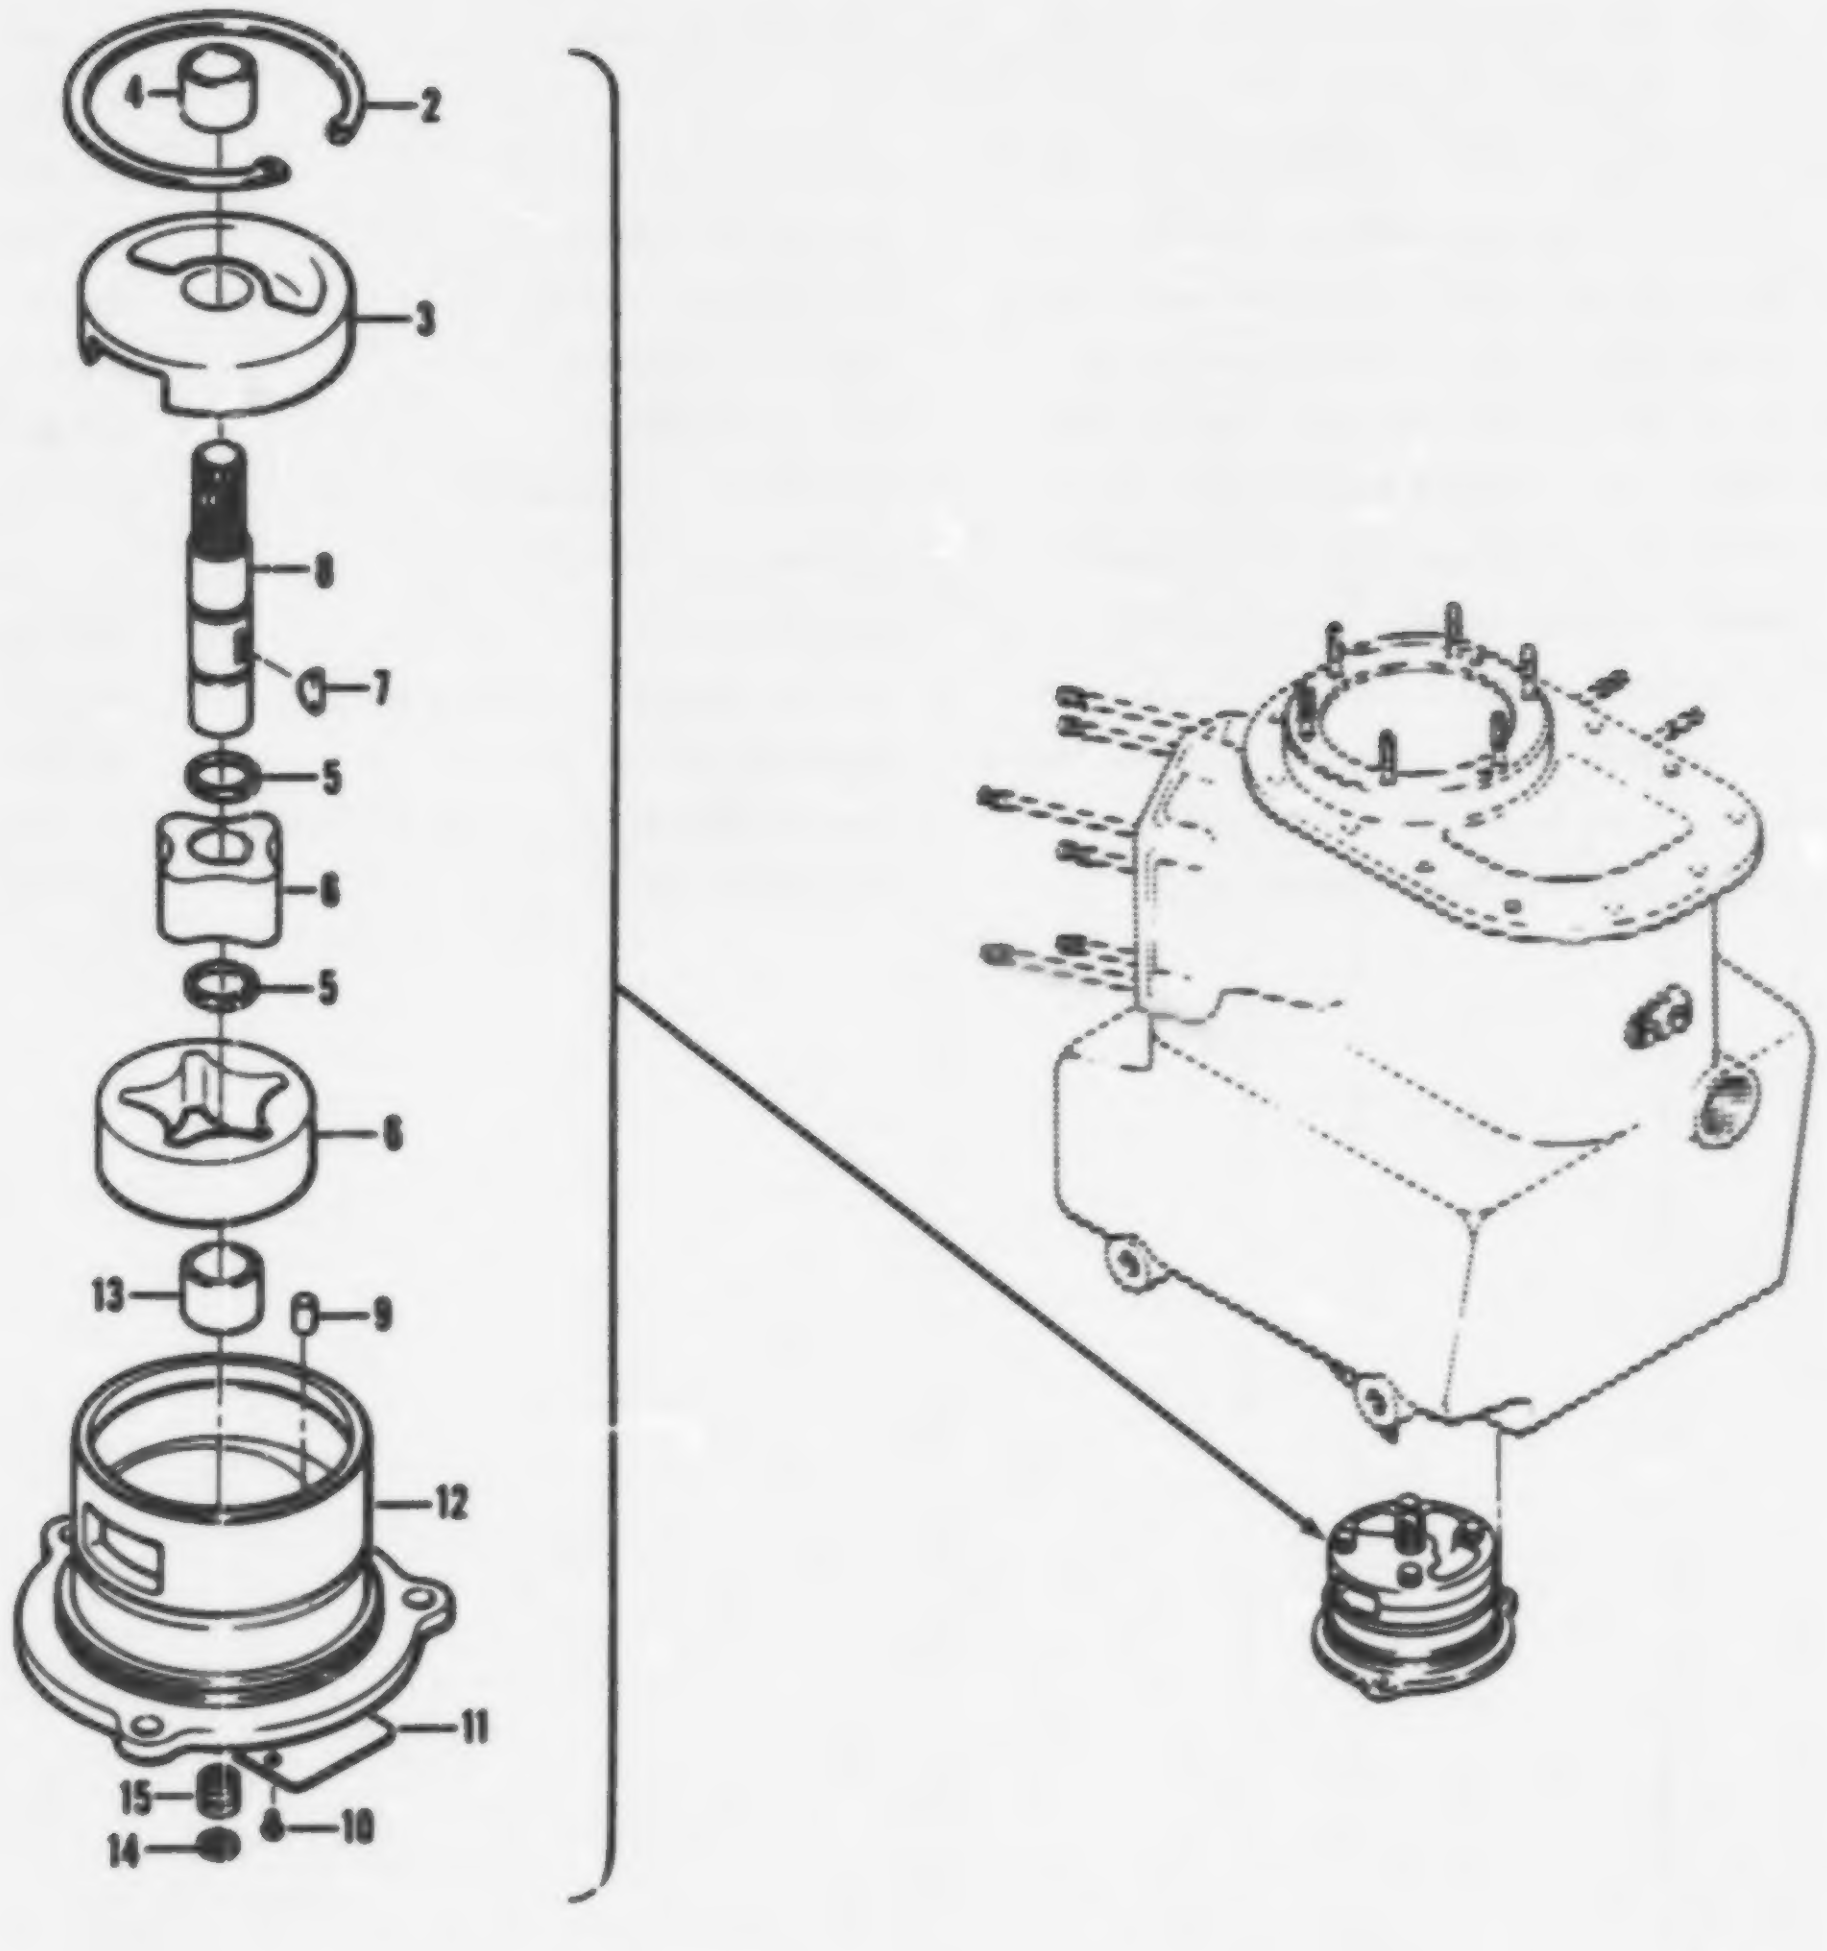
4
2
3
8
7
5
6
5
6
13
9
12
11
15
10
14

Figure 172. Pump, Rotary

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
172		PAODO	4320-00-150-0309	97499	212-040-184-1	PUMP,ROTARY SEE FIG 164 FOR NHA (BREAKDOWN FOR P/N GC2778) ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172		PAODO	4320-00-150-0309	86329	GC2778	PUMP,ROTARY SEE FIG 164 FOR NHA ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172	2	PADZZ	5365-00-550-5685	96906	MS16631-256	.RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172	3	PADDD	1615-00-981-6984	86329	GA5256	.PLATE,RETAINER,PUMP..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172	3	BADDD	3130-01-010-1280	86329	32 62320 0005 1	.BEARING UNIT,PLAIN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172	4	PADZZ	3120-00-976-0976	86329	GA3870	..BEARING,SLEEVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
172	5	PADZZ	5365-00-550-5685	96906	MS16631-256	.RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
172	6	PADZZ	4320-00-981-6986	86329	GA5907	.GEAR ROTOR SET..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172	7	PBDZZ	5315-00-687-5218	96906	MS35756-3	.KEY WOODRUFF..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172	8	PADZZ	1615-00-588-2870	86329	GA6209	.SHAFT,SHOULDERED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172	9	PADZZ	5315-00-974-1544	86329	GA5257	.PIN,STRAIGHT,HEADLE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172	10	PADZZ	5305-00-253-5606	96906	MS21318-7	.SCREW,DRIVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
172	11	PADZZ	9905-00-246-9306	86329	GA1672	.PLATE,IDENTIFICATIO..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
172	12	PADOO	1615-00-981-6987	86329	GA5909	.BODY ASSY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172	13	PADZZ	3120-00-976-0976	86329	GA3870	..BEARING,SLEEVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	4
172	14	PBDZZ	5365-00-781-4780	01556	KR6A1	..RING,LOCK,KEYED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172	15	PADZZ	1615-00-974-1546	01556	246-1-6A	..INSERT,PUMP ASSEMBL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
172	15	PADZZ	5340-00-085-0219	96906	MS1830-202	..INSERT,SCREW THREAD..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

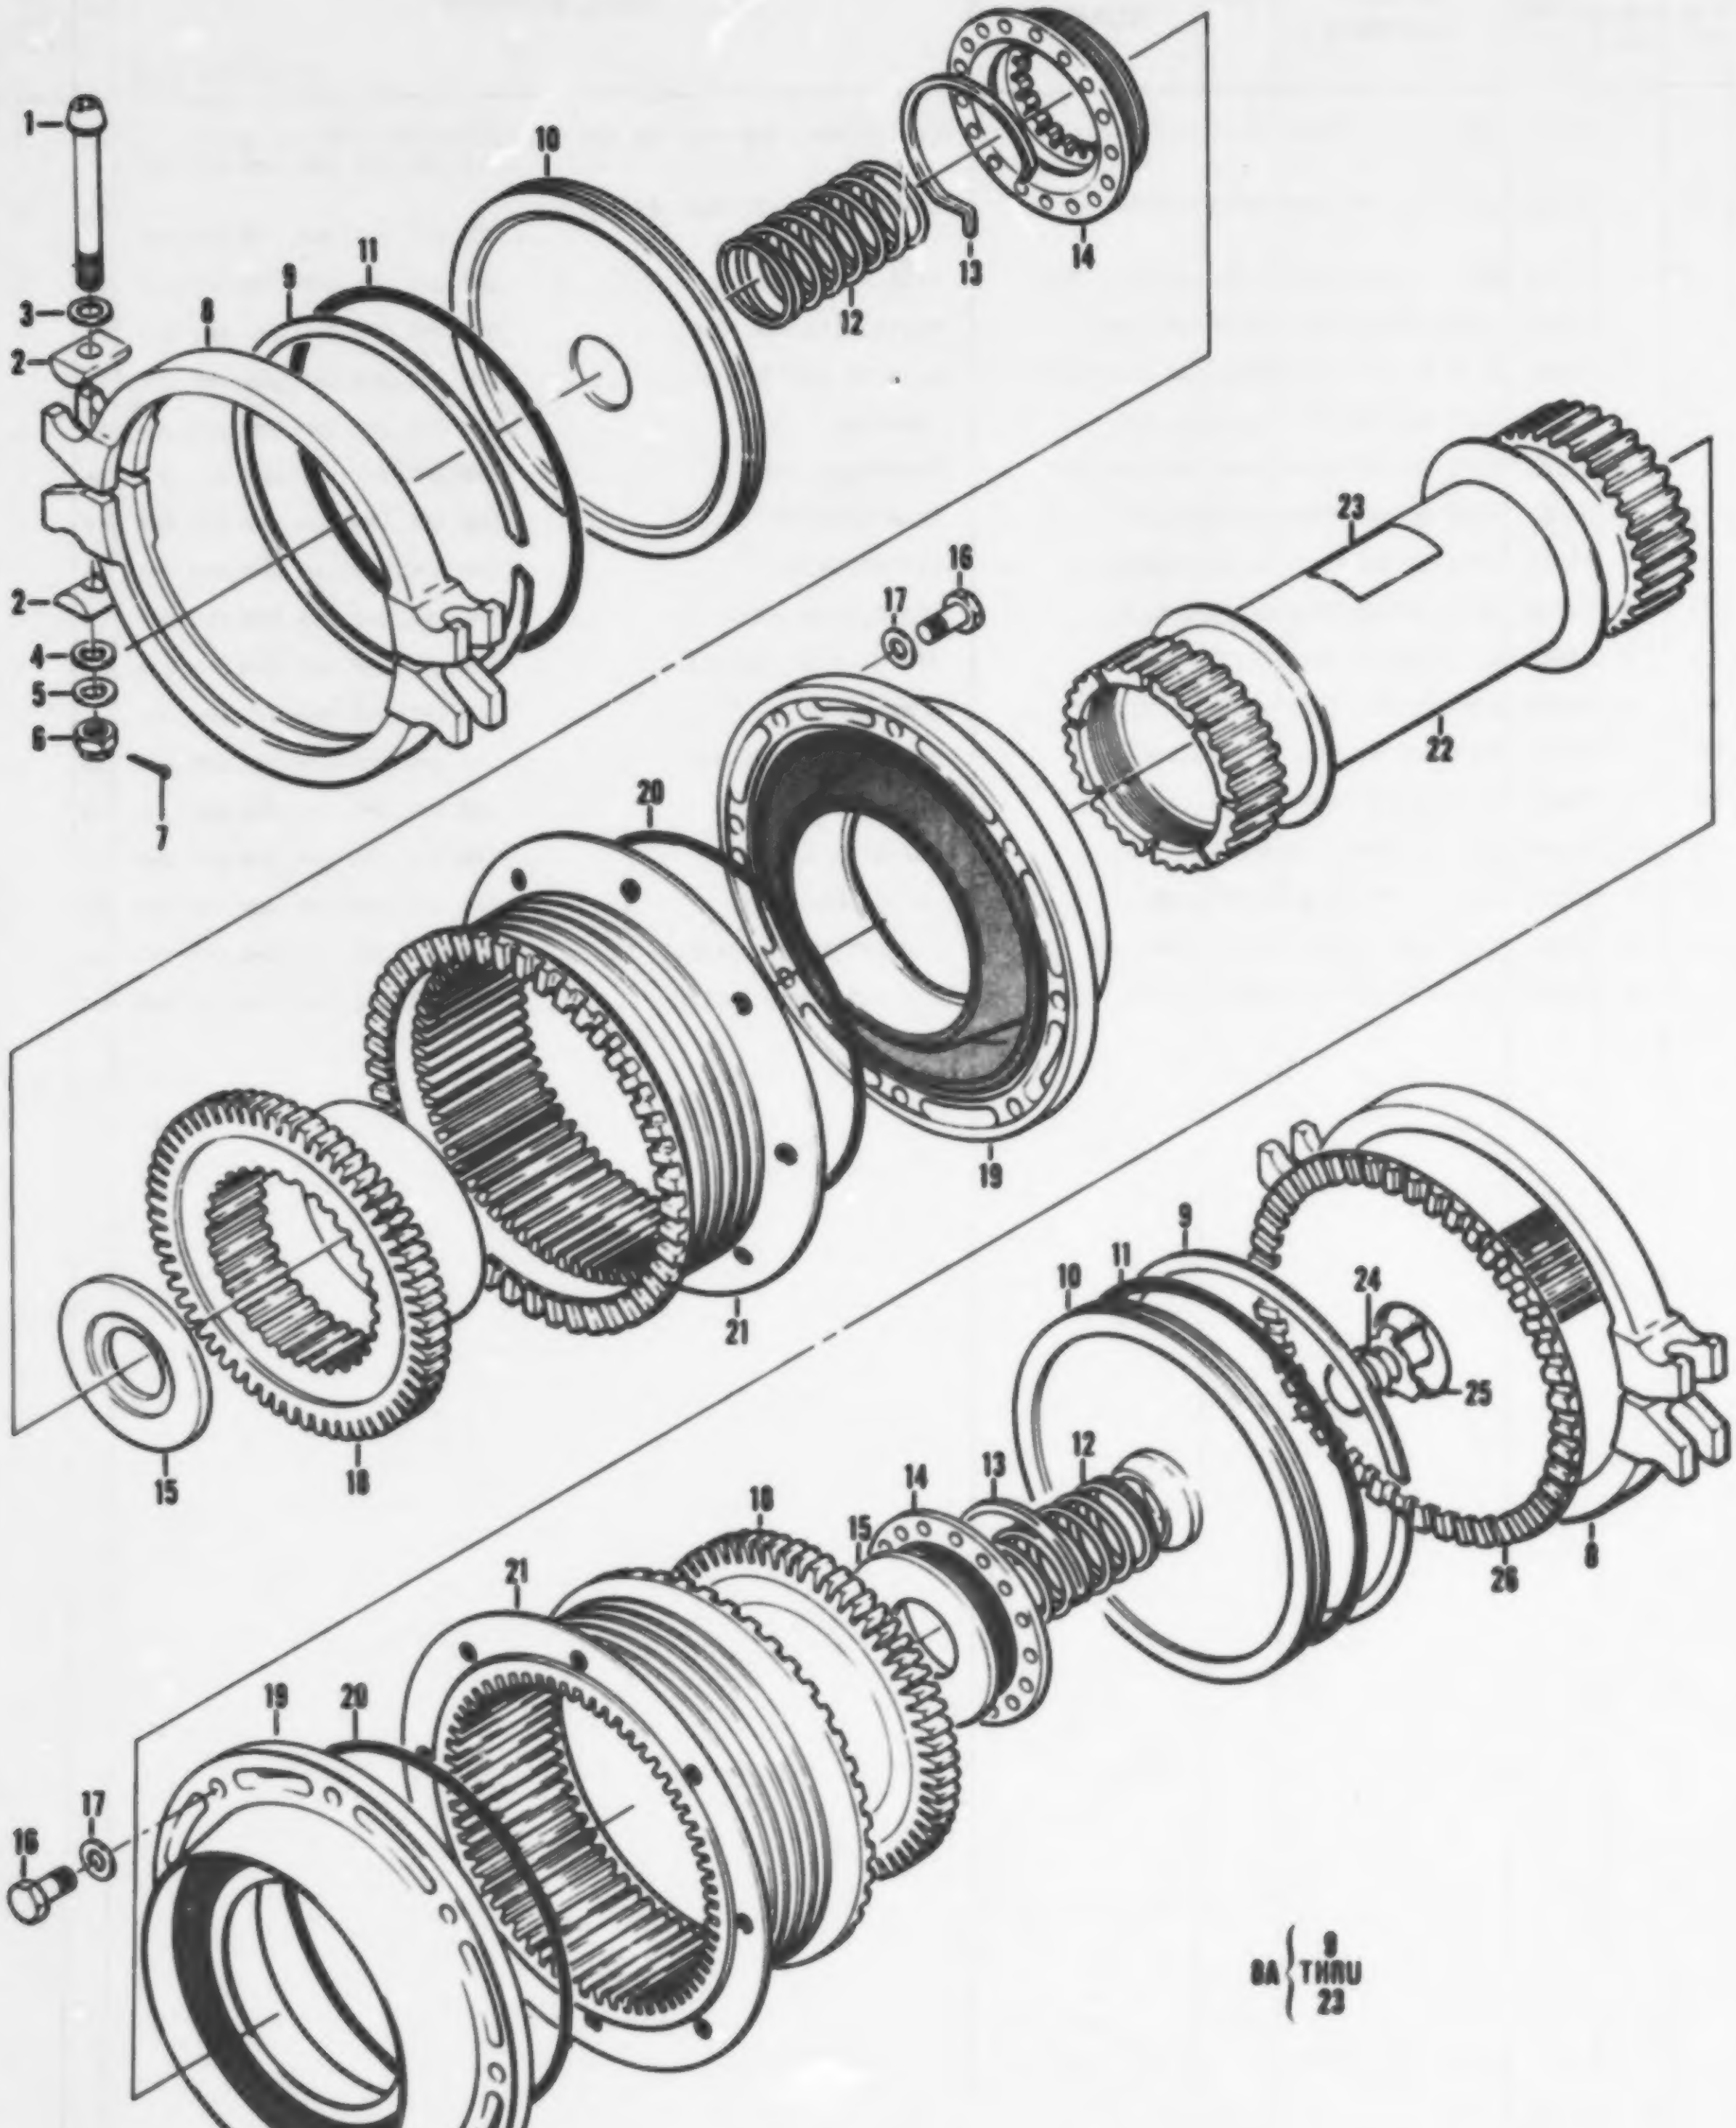
1
3
2
8
9
11
10
12
13
14
2
4
5
6
7
17
16
23
22
20
19
21
18
15
9
11
10
24
25
26
8
18
14
13
12
15
21
19
20
17
16
8A { 9 THRU 23

Figure 173. Drive Shaft Installation, Engine to Transmission

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
173		XCOZZ		97499	204-040-010-5	DRIVE SHAFT INSTALL ENGINE TO TRANSMISSION USBL EFF UH-1B 60-3577 & SUBSEQUENT, UH-1C, M 64-14101 THRU 66-9564 & UH-1H 62-2106 THRU 65-12895 SEE FIG.4 & 5 FOR NHA UHE, UHH, UHM, UHV, UHX	EA	1
173		XCOZZ		97499	204-040-010-13	DRIVE SHAFT INSTL ENGINE TO TRANSMISSION USBL EFF UH-1C & M 66-492 & SUBS & UH-1H 66-746 THRU 66-17144 & 66-8574 THRU 66-8577 SEE FIG.4 UH-1C & M & FIG.5 UH-1H UHE, UHH, UHM, UHV, UHX	EA	1
173		XCOZZ		97499	205-040-004-5	DRIVE SHAFT INSTL USBL EFF 67-17145 & SUBSEQUENT SEE FIG.5 FOR NHA UHE, UHH, UHV, UHX	EA	1
173	1	PAOZZ	5306-00-724-3593	97499	204-040-624-1	.BOLT, INTERNAL WRENCHING UHE, UHH, UHM, UHV, UHX	EA	4
173	2	PAOZZ	1615-00-716-8594	97499	204-040-717-1	.PIVOT, DRIVESHAFT UHE, UHH, UHM, UHV, UHX	EA	8
173	3	PAOZZ	5310-00-595-7076	96906	MS20002C5	.WASHER, RECESSED UHE, UHH, UHM, UHV, UHX	EA	4
173	4	PAOZZ	5310-00-167-0820	88044	AN960-516	.WASHER, FLAT UHE, UHH, UHM, UHV, UHX	EA	4
173	5	PAOZZ	5310-00-167-0836	88044	AN960-516L	.WASHER, FLAT UHE, UHH, UHM, UHV, UHX	EA	V
173	6	PAOZZ	5310-00-167-1286	88044	AN310-5	.NUT, PLAIN UHE, UHH, UHM, UHV, UHX	EA	4
173	7	PAOZZ	5315-00-234-1856	96906	MS24665-155	.PIN, COTTER UHE, UHH, UHM, UHV, UHX	EA	4
173	8	PAOZZ	1615-00-761-2532	97499	204-040-716-5	.COUPLING SET UHE, UHH, UHM, UHV, UHX	EA	2
173	8A	PAODO	1615-01-014-6005	97499	205-040-004-21	.DRIVE ASSEMBLY, INPU UHM	EA	1
173	9	PAOZZ	5365-00-125-8887	97499	205-040-186-1	..RING, RETAINING UHM	EA	2
173	10	PAOZZ	1615-00-068-6834	97499	205-040-175-1	..RETAINER MAIN DRIVE SHAFT UHM	EA	2
173	11	PAOZZ	5330-00-580-5801	97499	204-040-640-1	..PACKING, PREFORMED UHM	EA	2
173	12	PAOZZ	5360-00-446-6331	97499	204-040-685-1	..SPRING, HELICAL, COMP UHM	EA	2
173	13	PAOZZ	5340-00-714-5446	97499	204-040-183-1	..CLIP, RETAINING UHM	EA	2
173	14	PAOZZ	1615-00-977-7079	97499	204-040-184-1	..RING, SPLINED, TRANSMISSION UHM	EA	2
173	15	PAOZZ	5340-00-733-2563	97499	204-040-690-1	..RETAINER UHM	EA	2
173	16	PAOZZ	5306-00-182-2016	88044	AN4H5A	..BOLT, MACHINE UHM	EA	16
173	17	PAOZZ	5310-00-184-9001	88044	AN960PD416L	..WASHER, FLAT UHM	EA	16
173	18	PAODO	1615-00-069-3327	97499	204-040-687-5	..COUPLING, MAIN DRIVE UHM	EA	2
173	19	PAOZZ	1615-00-624-0674	97499	205-040-176-7	..BOOT, DUST AND MOIST UHM	EA	2
173	20	PAOZZ	5330-00-841-8711	97499	204-040-691-3	..PACKING, PREFORMED UHM	EA	2
173	21	PAODO	1615-00-076-1486	97499	205-040-178-1	..COUPLING, MAIN DRIVE UHM	EA	2
173	22	PAODO	1615-00-606-5100	97499	204-040-686-1	..DRIVE SHAFT UHM	EA	1
173	23	PAOZZ	9905-00-060-2034	97499	100-024-1	..PLATE, IDENTIFICATIO UHM	EA	2
173	24	PAOZZ	5306-00-959-6202	97499	204-040-813-1	.BOLT, EXTERNALLY REL U/W T53-L-11B, -11D, & -13 ENGINES ONLY UHE, UHH, UHM, UHV, UHX	EA	1
173	25	PAOZZ	5310-00-902-5423	97499	204-040-814-3	.WASHER, KEY U/W T53-L-11B, -11D, & -13 ENGINES ONLY UHE, UHH, UHM, UHV, UHX	EA	1
173	26	PAOZZ	1615-00-979-8577	97499	204-040-812-3	.ADAPTER, DRIVESHAFT, U/W T53-L-11B, -11D, & -13 ENGINES ONLY UHE, UHH, UHM, UHV, UHX	EA	1

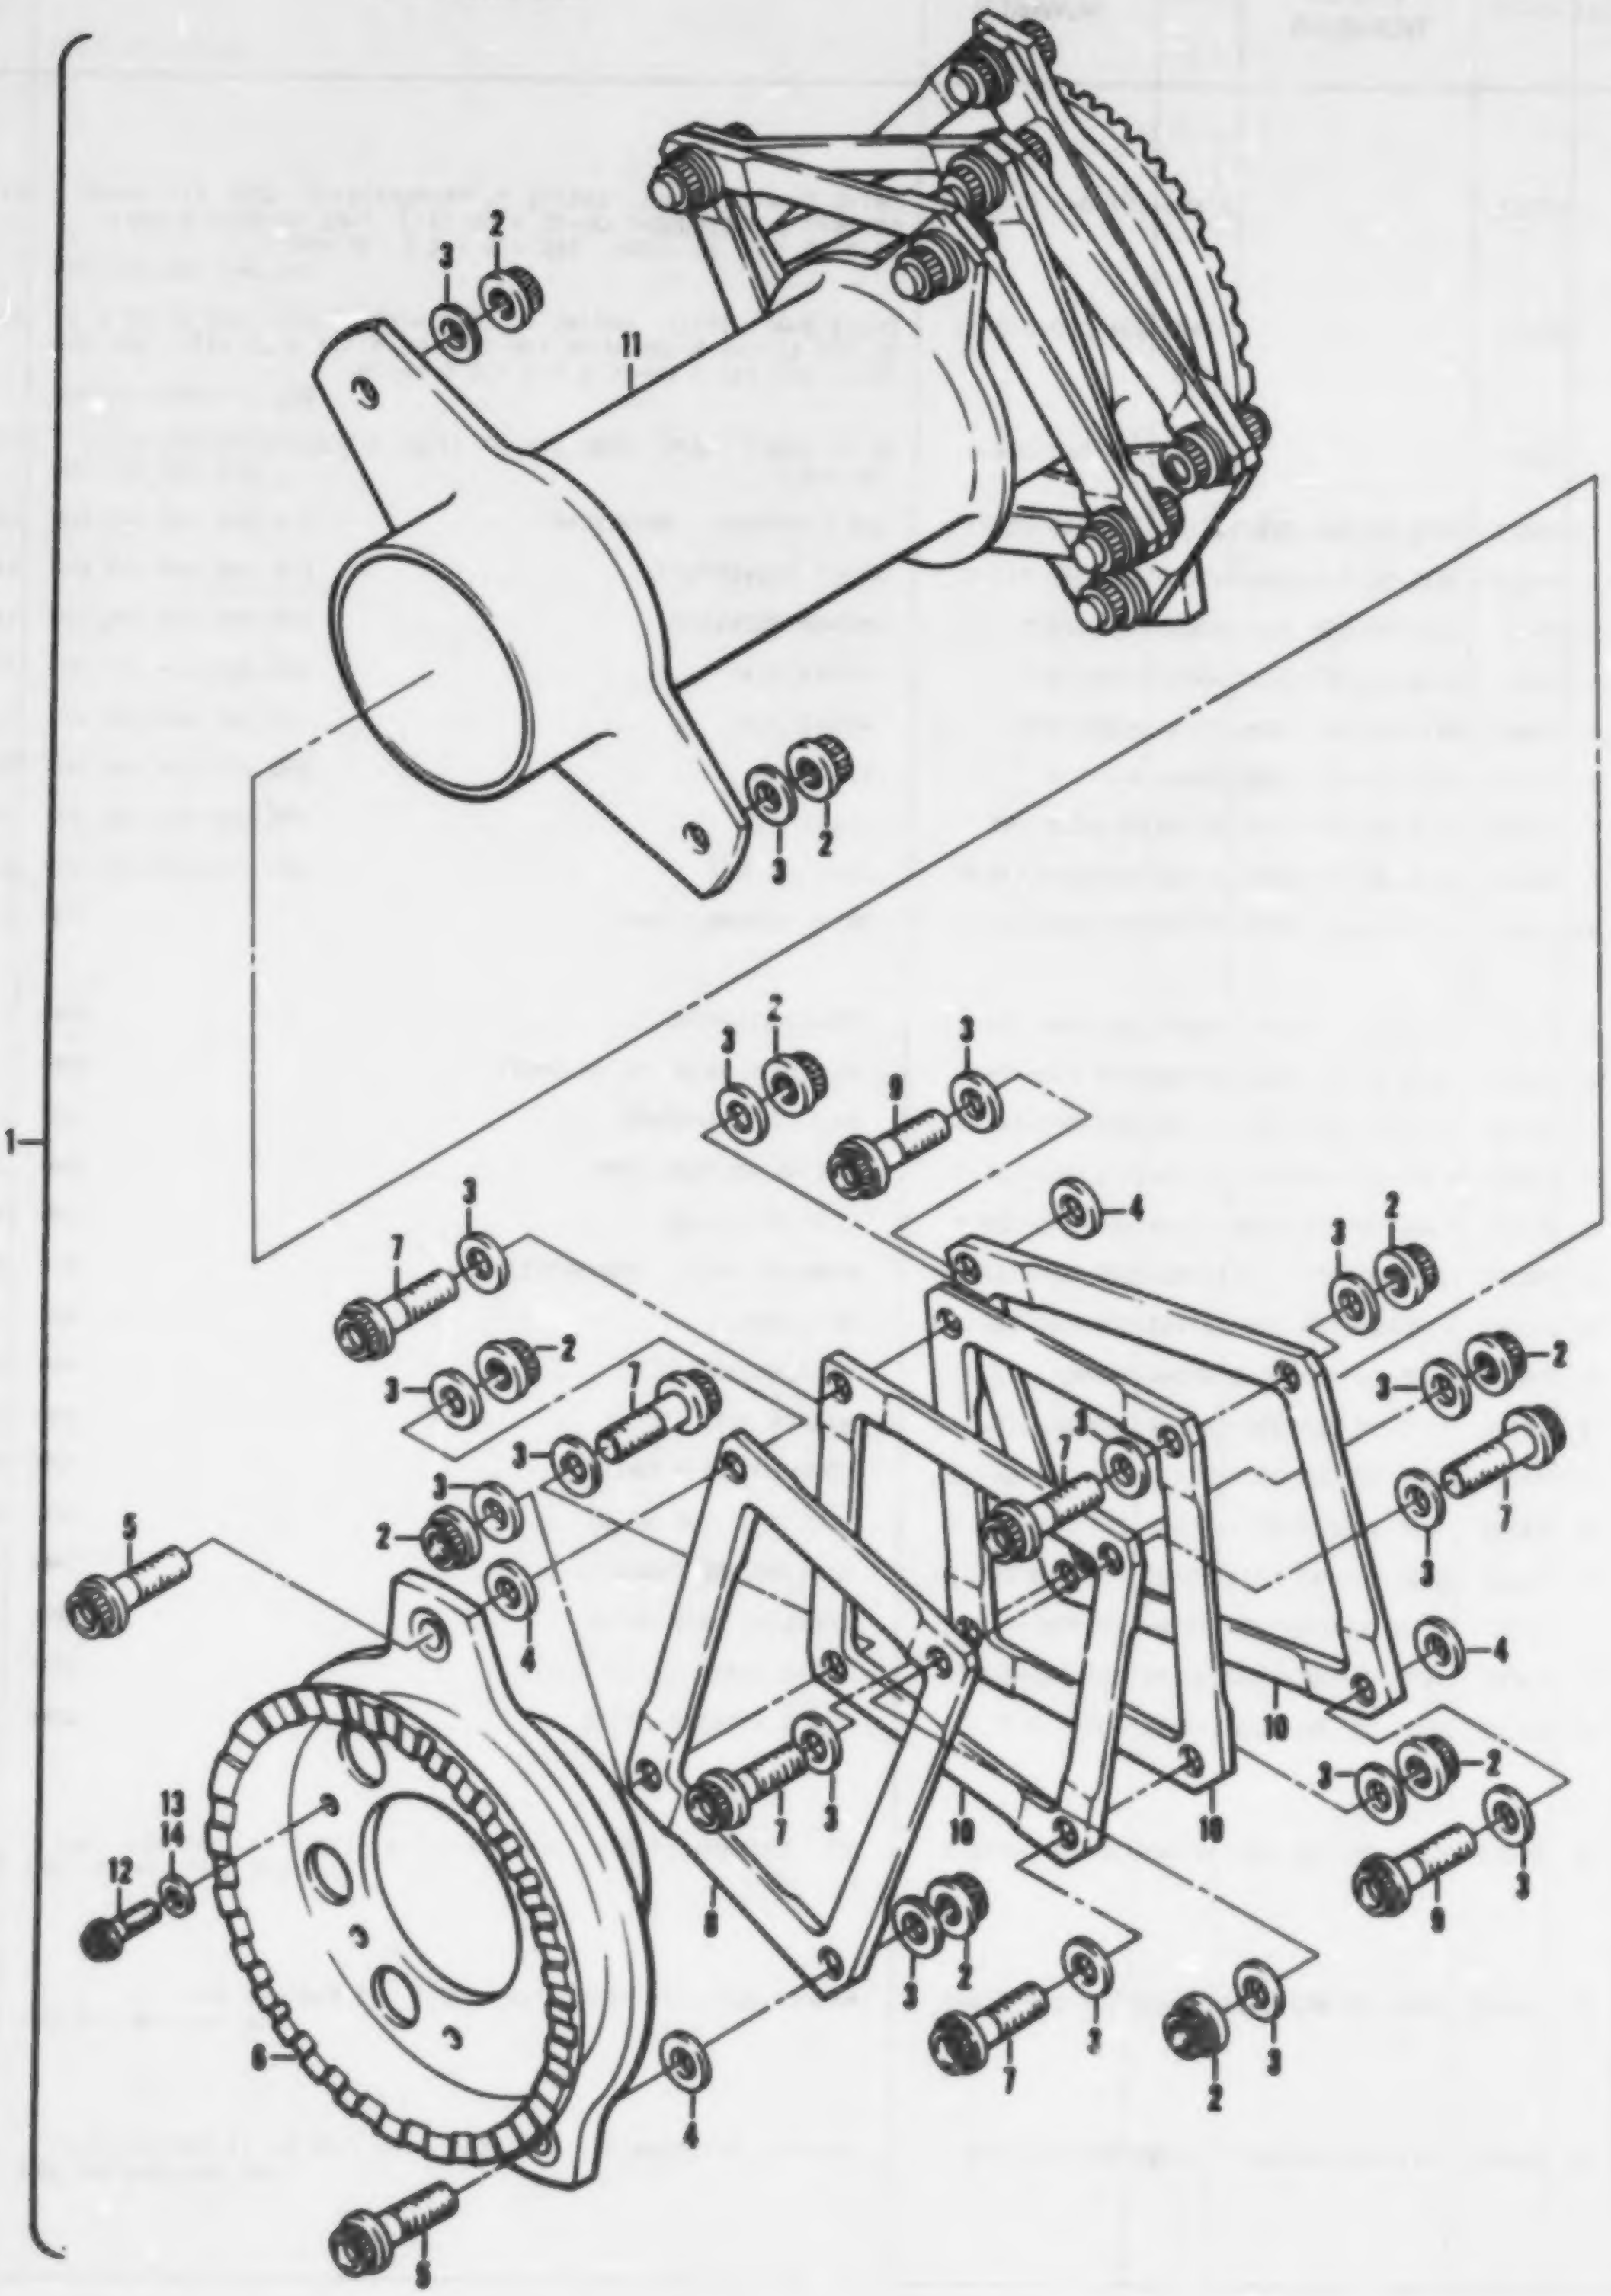
1
2
3
11
3
2
2
3
3
9
4
3
7
3
2
3
2
7
3
2
3
7
3
2
3
4
7
3
5
4
10
13
14
12
7
3
10
10
3
2
9
3
8
3
2
7
3
3
2
6
4
8

Figure 173A. Drive Shaft Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
173A		XCFZZ		50632	SKCP2282	DRIVE SHAFT INSTL.........UHE,UHH,UHV,UHX	EA	1
173A	1	PAOOO	1615-01-072-6670	50632	SKCP2281-103	.DRIVE,SHAFT,TRANSMI.........UHE,UHH,UHV,UHX	EA	1
173A	2	PADZZ	5310-01-097-8011	50632	SKCP2187-11	..NUT,SELF LOCKING.........UHE,UHH,UHV,UHX	EA	20
173A	3	PADZZ	5310-01-042-2806	50632	SKCP2181-11	..WASHER,RECESSED.........UHE,UHH,UHV,UHX	EA	36
173A	4	PADZZ	5310-01-088-7446	50632	SKCP2316-11	..WASHER,FLAT.........UHE,UHH,UHV,UHX	EA	8
173A	5	PADZZ	5306-01-092-0212	50632	SKCP2314-13	..BOLT,SHEAR.........UHE,UHH,UHV,UHX	EA	4
173A	6	PADZZ	1615-01-036-4592	50632	SKCP2177-11	..FITTING,SHAFT END.........UHE,UHH,UHV,UHX	EA	2
173A	7	PADZZ	5306-01-088-6072	50632	SKCP2314-11	..BOLT,SHEAR.........UHE,UHH,UHV,UHX	EA	12
173A	8	PADZZ	1615-01-036-4594	50632	SKCP2175-11	..PLATE,OUTER.........UHE,UHH,UHV,UHX	EA	2
173A	9	PADZZ	5306-01-088-6071	50632	SKCP2314-15	..BOLT,SHEAR.........UHE,UHH,UHV,UHX	EA	4
173A	10	PADZZ	1615-01-036-4593	50632	SKCP2176-11	..PLATE,INNER.........UHE,UHH,UHV,UHX	EA	6
173A	11	PADZZ	1615-01-036-4591	50632	SKCP2178-11	..FITTING,INTERCONNEC.........UHE,UHH,UHV,UHX	EA	1
173A	12	PADZZ	5305-00-800-7211	80205	NAS603-11	..SCREW,MACHINE (MAX OF 4 TO BE USED FOR BALANCE) ....UHE,UHH,UHV,UHX	EA	V
173A	13	PADZZ	5310-00-167-0818	88044	AN960-10	..WASHER,FLAT (MAX OF 16 TO BE USED FOR BALANCE) ....UHE,UHH,UHV,UHX	EA	V
173A	14	PADZZ	5310-00-167-0766	88044	AN970-3	..WASHER,FLAT.........UHE,UHH,UHV,UHX	EA	V

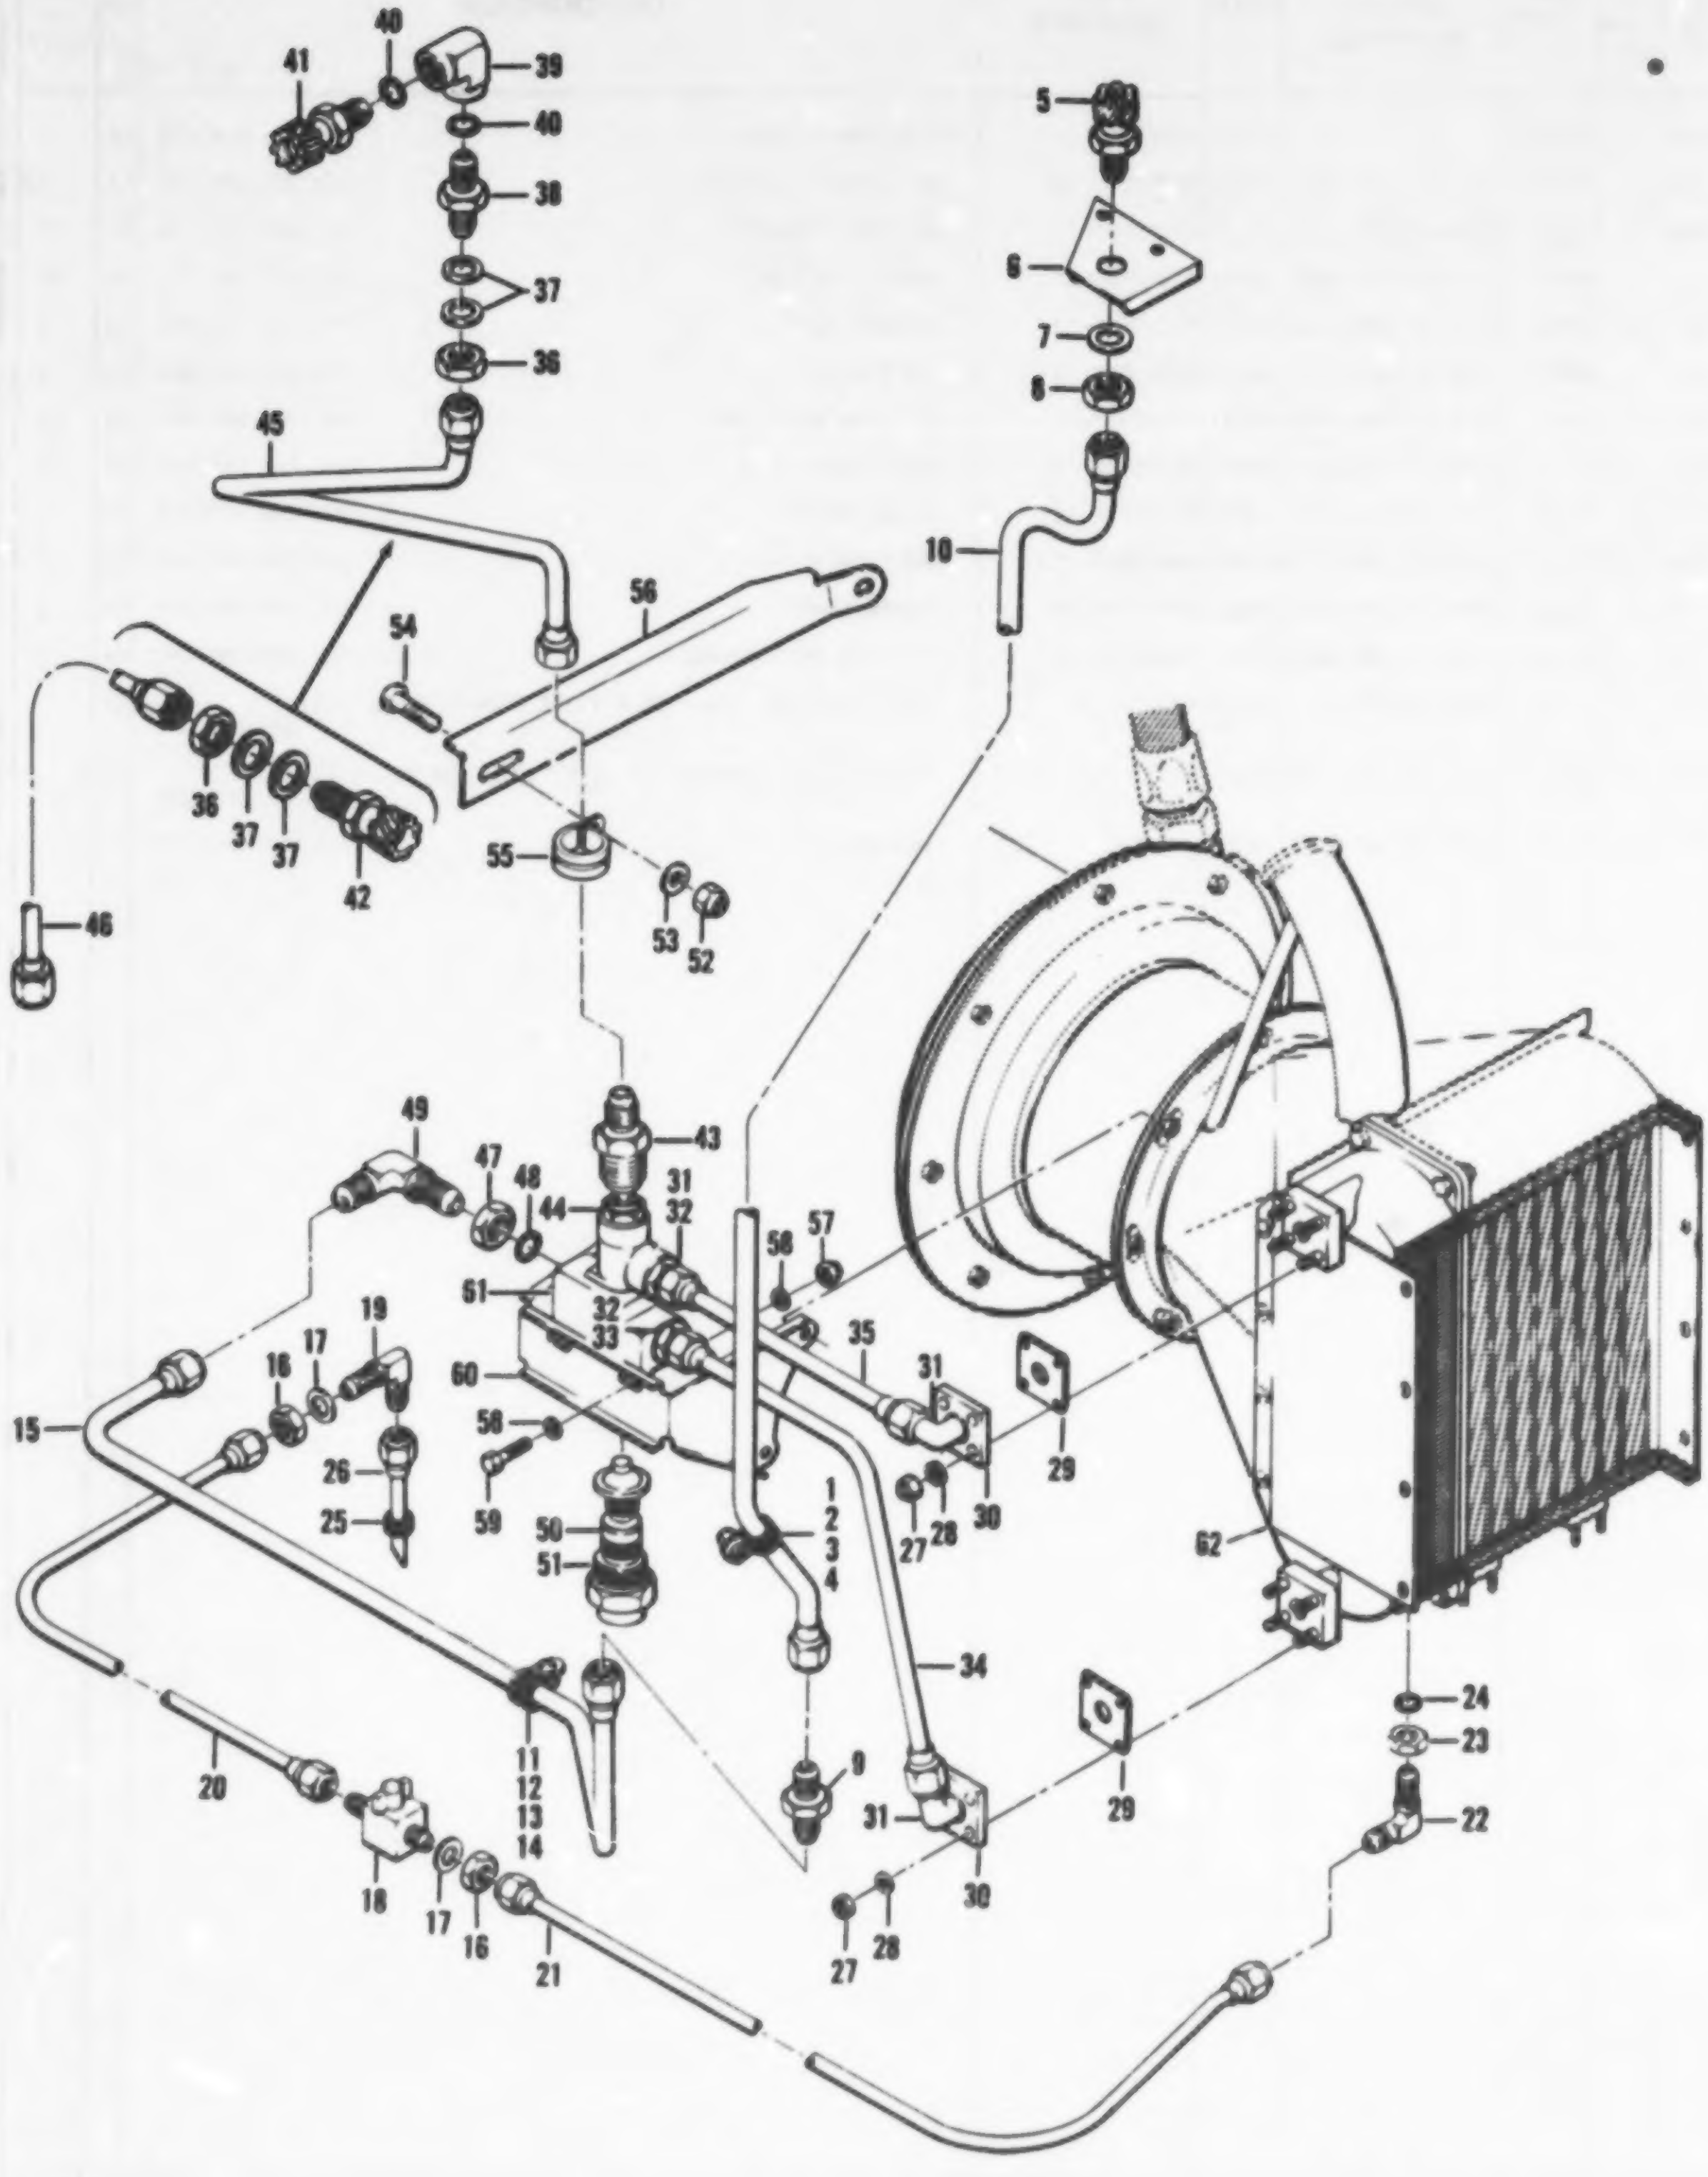
40
41
39
40
38
37
36
45
5
6
7
8
10
56
54
36
37
37
42
55
53
52
46
49
47
48
43
31
32
44
61
32
33
58
57
35
19
17
16
60
15
31
29
58
59
26
25
50
51
1
2
3
4
27
28
30
62
34
24
23
22
11
12
13
14
20
9
18
17
16
21
31
30
29
27
28

Figure 174. Transmission Oil Cooler Installation

SECTION II

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
174		XCFZZ		97499	204-040-740-1	COOLER INSTL TRANSMISSION OIL SEE FIG.6 FOR MHA .... UHB	EA	1
174		XCFZZ		97499	204-040-740-3	COOLER INSTL TRANSMISSION OIL SEE FIG. 6 FOR MHA ..... UHC,UHM	EA	1
174	1	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHB,UHC,UHM	EA	1
174	2	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHB,UHC,UHM	EA	1
174	3	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHB,UHC,UHM	EA	1
174	4	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP .... UHB,UHC,UHM	EA	1
174	5	PAOZZ	4730-00-067-4808	00624	375200-12	.COUPLING HALF,QUICK DISCONNECT .... UHB,UHC,UHM	EA	1
174	6	PAOZZ	1560-00-953-4979	97499	204-040-741-1	.BRACKET,COUPLING .... UHB,UHC,UHM	EA	1
174	7	PAOZZ	5310-00-584-5611	88044	AN960PD716L	.WASHER,FLAT .... UHB,UHC,UHM	EA	1
174	8	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON .... UHB,UHC,UHM	EA	1
174	9	PAOZZ	4730-00-684-6914	96906	MS24392D12	.NIPPLE,TUBE .... UHB,UHC,UHM	EA	1
174	10	MFOZZ	4710-00-052-1547	97499	204-040-758-1	.TUBE ASSEMBLY,METAL .... UHB,UHC,UHM	EA	1
174	11	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHB,UHC,UHM	EA	1
174	12	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHB,UHC,UHM	EA	1
174	13	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE .... UHB,UHC,UHM	EA	1
174	14	PAOZZ	5340-00-993-5478	81996	EAB700D12	.CLAMP,LOOP .... UHB,UHC,UHM	EA	1
174	15	MFOZZ	4710-00-980-9477	97499	204-040-745-1	.TUBE ASSEMBLY,METAL .... UHB,UHC,UHM	EA	2
174	16	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON .... UHB,UHC,UHM	EA	2
174	17	PAOZZ	5310-00-188-7723	81352	AN960PD916L	.WASHER,FLAT .... UHB,UHC,UHM	EA	1
174	18	PAOZZ	4810-00-546-4959	97499	212-040-232-1	.VALVE,BALL .... UHB,UHC,UHM	EA	1
174	19	PBOZZ	4730-00-684-6922	96906	MS24394D6	.ELBOW,TUBE .... UHB,UHC,UHM	EA	1
174	20	MFOZZ	4710-00-980-9484	97499	204-040-750-1	.TUBE ASSEMBLY,METAL .... UHB,UHC,UHM	EA	1
174	21	MFOZZ	4710-00-980-9481	97499	204-040-749-1	.TUBE ASSEMBLY,METAL .... UHB,UHC,UHM	EA	1
174	22	PBOZZ	4730-00-684-6922	96906	MS24394D6	.ELBOW,TUBE .... UHB,UHC,UHM	EA	1
174	23	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON .... UHB,UHC,UHM	EA	1
174	24	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED .... UHB,UHC,UHM	EA	1
174	25	PAOZZ	5325-00-291-9366	96906	MS35489-11	.GROMMET,NONMETALLIC .... UHB,UHC,UHM	EA	1
174	26	MFOZZ	4710-00-980-9483	97499	204-040-751-1	.TUBE ASSEMBLY,METAL .... UHB,UHC,UHM	EA	1
174	27	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHB,UHC,UHM	EA	8
174	28	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHB,UHC,UHM	EA	8
174	29	PAOZZ	5330-00-847-1120	97499	204-060-184-1	.GASKET .... UHB,UHC,UHM	EA	2
174	30	PAOZZ	4730-00-990-3313	96906	MS20756D10	.FLANGE,PIPE,SWIVEL .... UHB,UHC,UHM	EA	2
174	31	PAOZZ	4730-00-086-1528	00624	508535-10	.ELBOW,FLANGE TO TUB .... UHB,UHC,UHM	EA	2
174	32	PAOZZ	4730-00-866-1829	96906	MS24392D10	.NIPPLE,TUBE .... UHB,UHC,UHM	EA	2
174	33	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED .... UHB,UHC,UHM	EA	2
174	34	MFOZZ	4710-00-980-9480	97499	204-040-748-1	.TUBE ASSEMBLY,METAL .... UHB,UHC,UHM	EA	1
174	35	MFOZZ	4710-00-980-9479	97499	204-040-747-1	.TUBE ASSEMBLY,METAL .... UHB,UHC,UHM	EA	1
174	36	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON .... UHB,UHC,UHM	EA	1
174	37	PAOZZ	5310-00-584-5611	88044	AN960PD716L	.WASHER,FLAT .... UHB,UHC,UHM	EA	2
174	38	PAOZZ	4730-00-994-0883	96906	MS24393D12	.NIPPLE,TUBE .... UHB	EA	1
174	39	PAOZZ	4730-00-277-2461	88044	AN939D12	.ELBOW,BOSS .... UHB	EA	1
174	40	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED .... UHB	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
174	41	PAOZZ	4730-00-852-9225	00624	375204-12	.COUPLING HALF,QUICK DISCONNECT	UHB	EA	1
174	42	PAOZZ	4730-00-067-4808	00624	375200-12	.COUPLING HALF,QUICK DISCONNECT	UHB,UHC,UHM	EA	1
174	43	PBOZZ	4730-00-805-5100	96906	MS24398D21	.REDUCER,TUBE	UHB,UHC,UHM	EA	1
174	44	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED	UHB,UHC,UHM	EA	1
174	45	MFOZZ	4710-00-980-9476	97499	204-040-746-1	.TUBE ASSEMBLY,METAL	UHB	EA	1
174	46	MFOZZ	1560-00-912-1897	97499	204-040-808-1	.TUBE ASSEMBLY,METAL	UHC,UHM	EA	1
174	47	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON	UHB,UHC,UHM	EA	1
174	48	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED	UHB,UHC,UHM	EA	1
174	49	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW,TUBE	UHB,UHC,UHM	EA	1
174	50	PAOOO	6620-00-576-1427	97499	205-060-512-1	.THERMOSTAT,FLOW CON	UHB,UHC,UHM	EA	1
174	51	PAOZZ	5365-00-205-9460	27462	8509467	..SPACER,RING	UHB,UHC,UHM	EA	1
174	52	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	1
174	53	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHB,UHC,UHM	EA	1
174	54	PAOZZ	5305-00-989-7434	96906	MS35207-263	.SCREW,MACHINE	UHB,UHC,UHM	EA	1
174	55	PAOZZ	5340-00-993-6249	81996	EA8700D20	.CLAMP,LOOP	UHB,UHC,UHM	EA	1
174	56	MFOZZ	1560-00-864-9040	97499	204-040-754-3	.BRACKET,VALVE BODY	UHB,UHC,UHM	EA	1
174	57	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHM	EA	2
174	58	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHB,UHC,UHM	EA	4
174	59	PAOZZ	5306-00-182-2080	88044	AN3H6A	.BOLT,MACHINE	UHB,UHC,UHM	EA	2
174	60	PAOZZ	1560-00-961-1338	97499	204-040-742-1	.BRACKET, VALVE BODY	UHB,UHC,UHM	EA	1
174	61	PAOZZ	1560-00-221-5717	97499	205-060-537-3	.BODY,OIL COOLER	UHB,UHC,UHM	EA	1
174	62	PAOOO	1615-00-133-6226	97499	204-040-724-3	.COOLER,OIL,TRANSMIS	UHB,UHC,UHM	EA	1

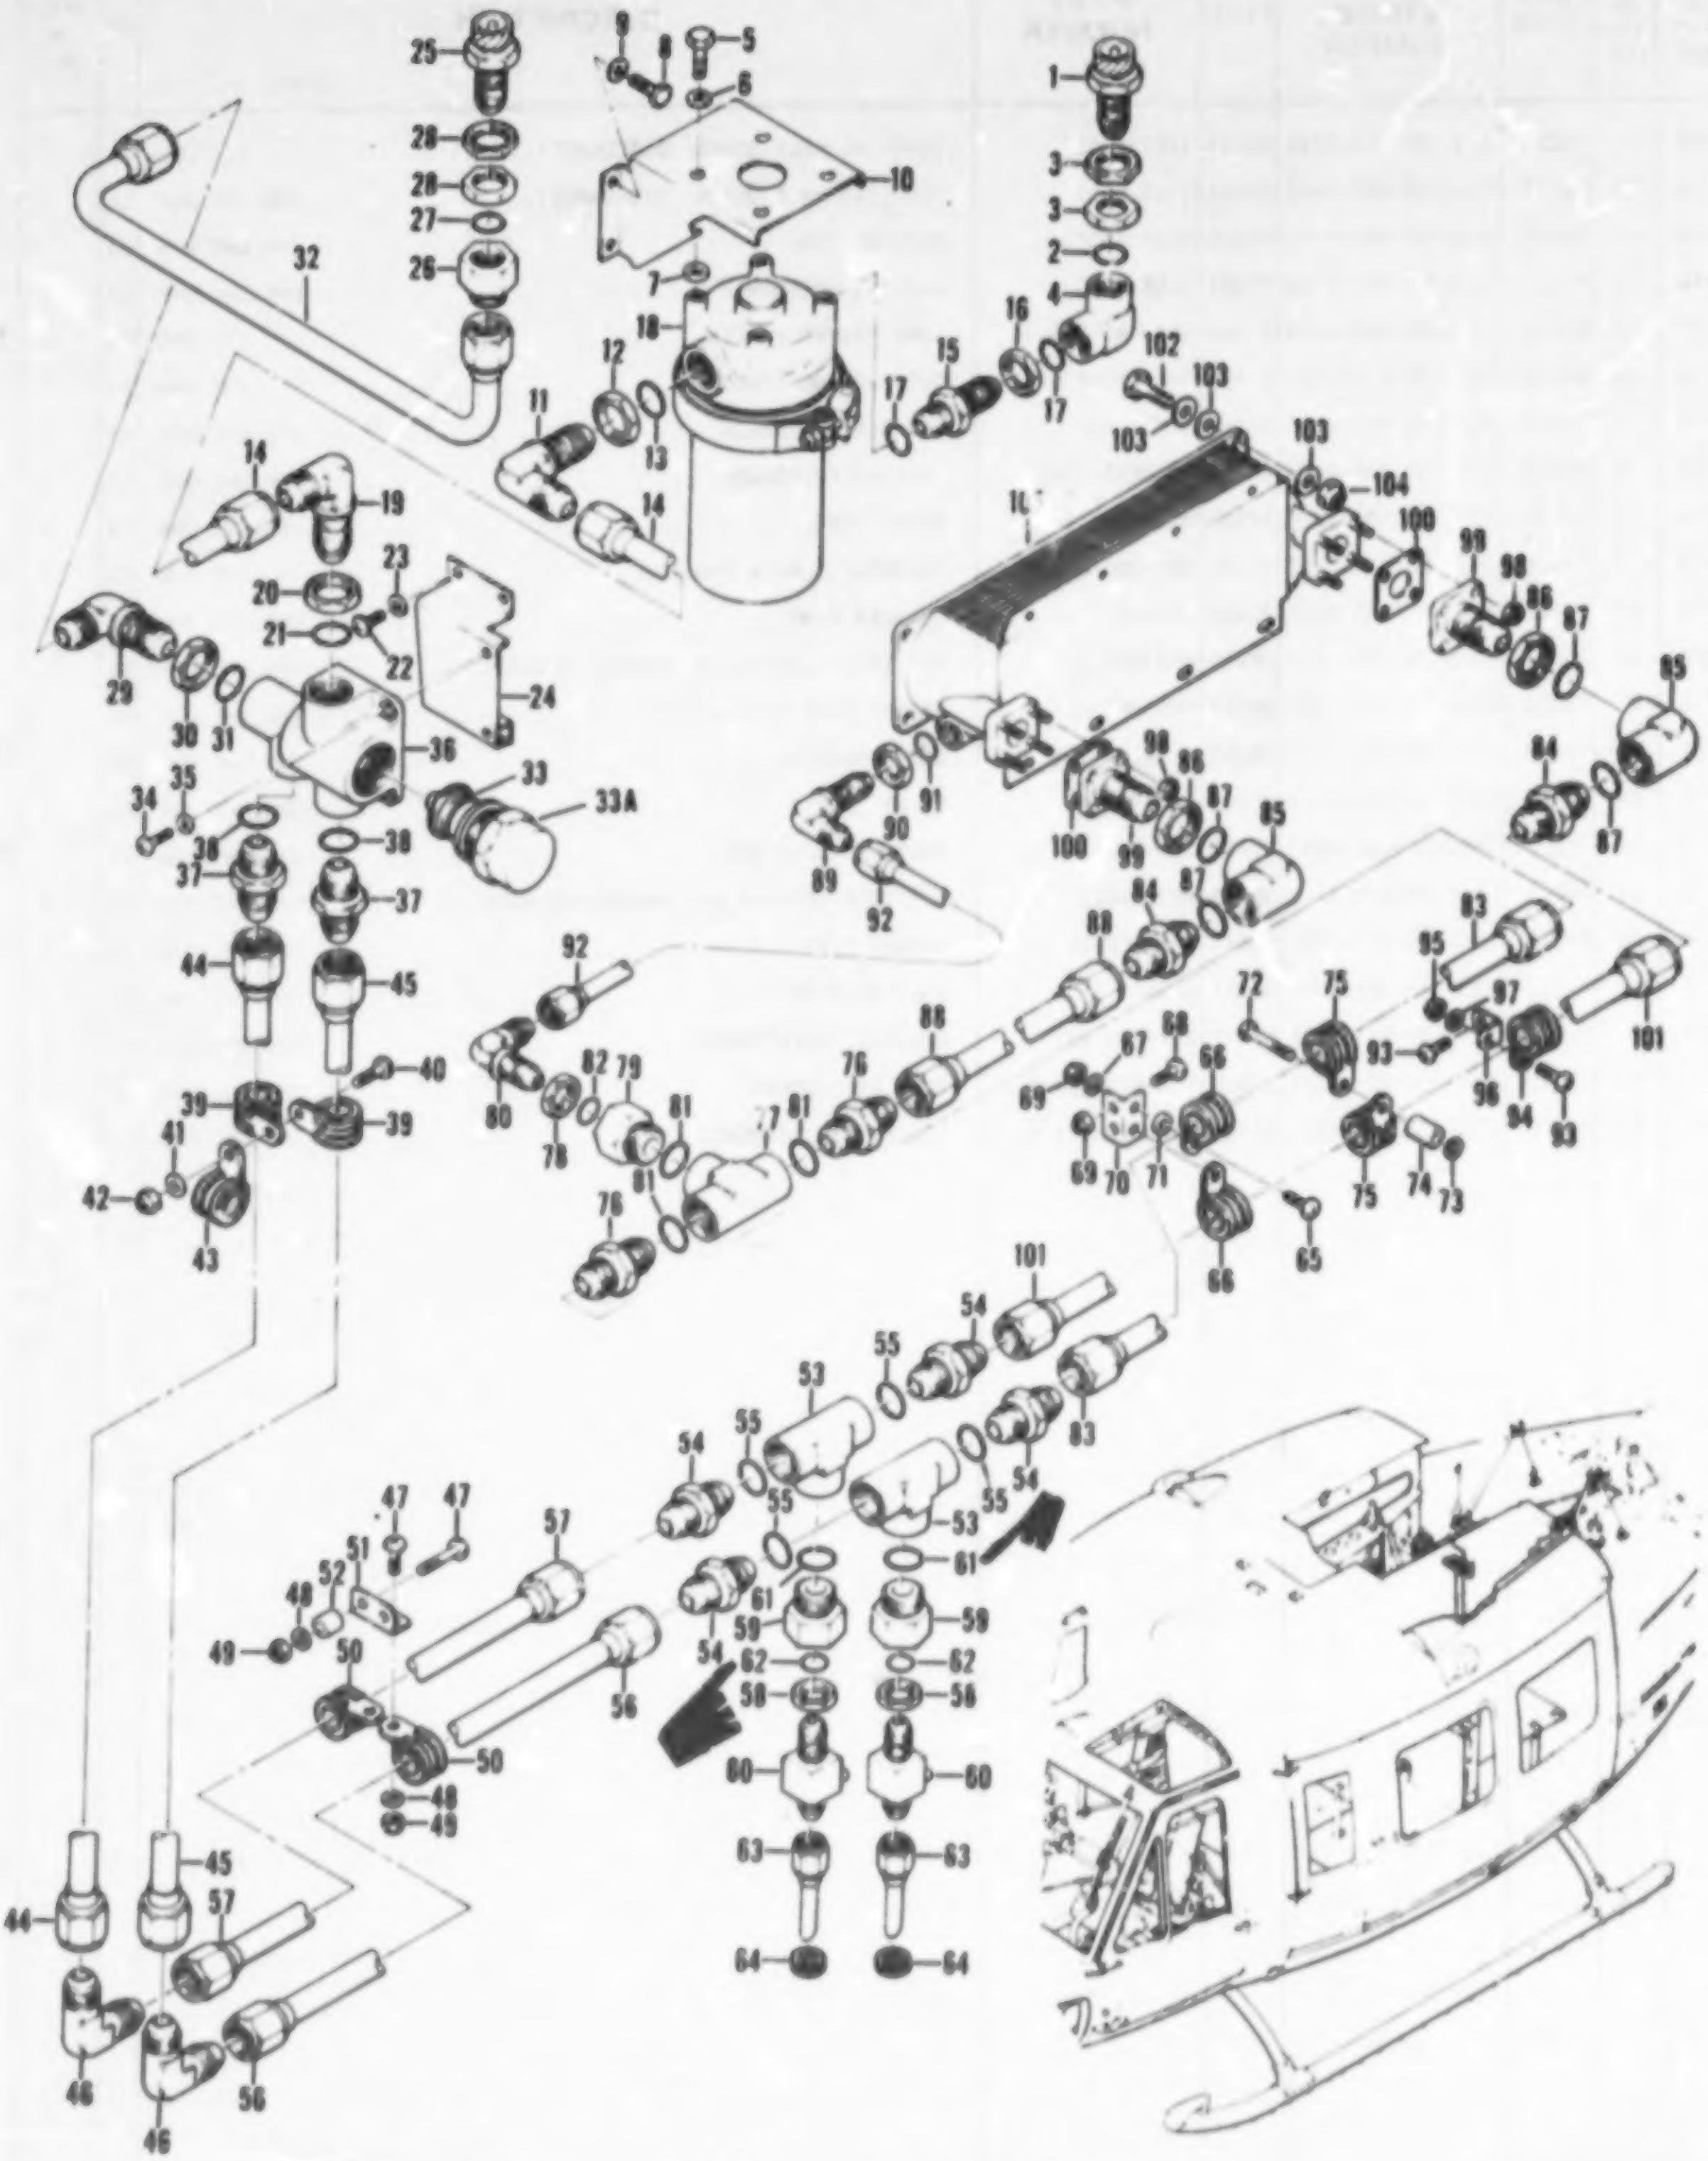
25
9
8
5
6
10
1
28
28
27
26
3
3
2
4
32
7
18
16
102
12
15
17
17
103
103
11
13
17
103
14
19
14
104
101
100
99
98
86
87
23
20
21
22
24
29
30
31
36
85
33
33A
98
86
87
34
35
38
38
37
37
91
90
84
89
92
100
99
87
85
87
84
88
83
44
45
92
95
97
72
75
101
40
82
79
88
68
67
93
80
76
66
96
94
93
39
39
81
77
81
69
78
41
42
43
81
69
70
71
75
74
73
76
65
66
101
54
55
53
83
54
55
54
47
47
57
55
53
55
61
51
48
52
61
59
59
49
50
54
62
62
56
58
58
50
60
60
48
49
63
63
45
57
44
64
64
46
56
46

Figure 175. Transmission Oil Cooler Installation

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
175		XCFZZ		97499	205-040-201-3	COOLER INSTL TRANSMISSION OIL USBL EFF 62-2106 THRU 68-16625 SEE FIG.7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
175		XCFZZ		97499	205-040-201-5	COOLER INSTALLATION TRANSMISSION OIL USBL EFF 69-15000 & SUBSEQUENT SEE FIG.7 FOR NHA	UHE,UHH,UHV,UHX	EA	1
175	1	PAOZZ	4730-00-067-4808	00624	375200-12	.COUPLING HALF,QUICK DISCONNECT	UHE,UHH,UHV,UHX	EA	1
175	2	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
175	3	PAOZZ	5310-00-890-5267	97499	204-080-868-1	.NUT,PLAIN,HEXAGON	UHH,UHV,UHE,UHX	EA	2
175	4	PAOZZ	4730-00-277-2461	88044	AN938D12	.ELBOW,BOSS	UHE,UHH,UHY,UHX	EA	1
175	5	PAOZZ	5306-00-814-3881	96906	MS20074-05-06	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
175	6	PAOZZ	5310-00-184-8980	88044	AN960PD516L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
175	7	PAOZZ	5365-00-719-4285	80205	NAS42DD10-12	.SPACER,SLEEVE	UHE,UHH,UHV,UHX	EA	4
175	8	PAOZZ	5306-00-150-9221	88044	AN3-3A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
175	9	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
175	10	MFOZZ	1660-00-757-2866	97499	205-040-202-3	.BRACKET,TRANSMISSIO	UHE,UHH,UHV,UHX	EA	1
175	11	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
175	12	PAOZZ	5310-00-199-1026	88044	AN924-12D	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
175	13	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORME	UHE,UHH,UHV,UHX	EA	1
175	14	MFOZZ	1660-00-980-9486	97499	205-040-203-1	.TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
175	15	PAOZZ	4730-00-994-0883	96906	MS24393D12	.NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	1
175	16	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
175	17	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2
175	18	PAOOO	1615-00-796-5004	97499	204-040-760-3	.FILTER ASSEMBLY SEE FIG.176 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
175	19	PAOZZ	4730-00-197-2919	96906	MS24394D12	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
175	20	PAOZZ	5310-00-199-1028	88044	AN924-12D	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
175	21	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
175	22	PAOZZ	5306-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	4
175	23	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
175	24	MFOZZ	1660-00-980-9458	97499	205-040-152-1	.BRACKET	UHE,UHH,UHV,UHX	EA	1
175	25	PAOZZ	4730-00-067-4808	00624	375200-12	.COUPLING HALF,QUICK DISCONNECT	UHE,UHH,UHV,UHX	EA	1
175	26	PAOZZ	4730-00-080-2856	96906	MS24398D12-10	.ADAPTER,STRAIGHT, TUBE TO BOSS	UHE,UHH,UHV,UHX	EA	1
175	27	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
175	28	PAOZZ	1660-00-961-1341	97499	205-060-661-1	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	2
175	29	PBOZZ	4730-00-803-6050	96906	MS24394D10	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
175	30	PBOZZ	5310-00-282-7834	88044	AN924-10D	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
175	31	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
175	32	MFOZZ	1660-00-980-9459	97499	205-040-159-1	.TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
175	33	PAOOO	6620-00-575-1427	97499	205-060-512-1	.THERMOSTAT,FLOW CON	UHE,UHH,UHV,UHX	EA	1
175	33A	PAOZZ	5365-00-205-9450	27462	8509467	..SPACER,RING	UHE,UHH,UHV,UHX	EA	1
175	34	PAOZZ	5306-00-925-7857	96906	MS27039-1-09	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
175	35	PAOZZ	5310-00-183-4406	88044	AN960PD10	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	2
175	36	PAOZZ	1660-00-221-8717	97499	205-060-537-3	.BODY,OIL COOLER	UHE,UHH,UHV,UHX	EA	1
175	37	PAOZZ	4730-00-866-1829	96906	MS24392D10	.NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	2
175	38	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	2

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
175	39	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	2
175	40	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	1
175	41	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	1
175	42	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	1
175	43	PAOZZ	5340-00-993-5476	81996	EAB700D12	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	1
175	44	MFOZZ	1560-00-980-9462	97499	205-040-142-1	.TUBE ASSEMBLY .... UHE,UHH,UHV,UHX	EA	1
175	45	MFOZZ	1560-00-980-9454	97499	205-040-148-1	.TUBE ASSEMBLY .... UHE,UHH,UHV,UHX	EA	1
175	46	PBOZZ	4730-00-194-1044	96906	MS24401D10	.ELBOW,TUBE .... UHE,UHH,UHV,UHX	EA	2
175	47	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	4
175	48	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	4
175	49	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	4
175	50	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	2
175	51	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE .... UHE,UHH,UHV,UHX	EA	2
175	52	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	.SPACER,SLEEVE .... UHE,UHH,UHV,UHX	EA	2
175	53	PAOZZ	4730-00-278-2779	88044	AN938D10	.TEE,BOSS .... UHE,UHH,UHV,UHX	EA	2
175	54	PAOZZ	4730-00-866-1829	96906	MS24392D10	.NIPPLE,TUBE .... UHE,UHH,UHV,UHX	EA	4
175	55	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED .... UHE,UHH,UHV,UHX	EA	4
175	56	MFOZZ	1560-00-980-9453	97499	205-040-147-1	.TUBE ASSEMBLY .... UHE,UHH,UHV,UHX	EA	1
175	57	MFOZZ	1560-00-980-9463	97499	205-040-143-1	.TUBE ASSEMBLY .... UHE,UHH,UHV,UHX	EA	1
175	58	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON .... UHE,UHH,UHV,UHX	EA	2
175	59	PAOZZ	4730-00-231-1331	88044	AN893-121D	.REDUCER,BOSS .... UHE,UHH,UHV,UHX	EA	2
175	60	PAOZZ	4810-00-546-[illegible]9	97499	212-040-232-1	.VALVE,POPPET DRAIN .... UHE,UHH,UHV,UHX	EA	2
175	61	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED .... UHE,UHH,UHV,UHX	EA	2
175	62	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED .... UHE,UHH,UHV,UHX	EA	2
175	63	MFOZZ	1560-00-980-9456	97499	205-040-151-1	.TUBE ASSEMBLY .... UHE,UHH,UHV,UHX	EA	2
175	64	PAOZZ	5325-00-263-6651	96906	MS35489-12	.GROMMET,NONMETALLIC .... UHE,UHH,UHV,UHX	EA	2
175	65	PAOZZ	5305-00-989-7435	96906	MS35207-264	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
175	66	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	2
175	67	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	2
175	68	PAOZZ	5305-00-990-6444	96906	MS35207-261	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	2
175	69	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON .... UHE,UHH,UHV,UHX	EA	4
175	70	PAOZZ	5340-00-598-8250	88044	AN743-7	.BRACKET,ANGLE .... UHE,UHH,UHV,UHX	EA	1
175	71	PAOZZ	5365-00-684-2093	80205	NAS43DD3-16	.SPACER,SLEEVE .... UHE,UHH,UHV,UHX	EA	2
175	72	PAOZZ	5305-00-688-2342	03538	N80P16018C6	.SCREW,MACHINE .... UHE,UHH,UHV,UHX	EA	1
175	73	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT .... UHE,UHH,UHV,UHX	EA	1
175	74	PAOZZ	5365-00-662-3100	80205	NAS43DD3-64	.SPACER,SLEEVE .... UHE,UHH,UHV,UHX	EA	1
175	75	PAOZZ	5340-00-993-6244	81996	EAB700D10	.CLAMP,LOOP .... UHE,UHH,UHV,UHX	EA	2
175	76	PAOZZ	4730-00-866-1829	96906	MS24392D10	.NIPPLE,TUBE .... UHE,UHH,UHV,UHX	EA	2
175	77	PAOZZ	4730-00-278-2779	88044	AN938D10	TEE,BOSS .... UHE,UHH,UHV,UHX	EA	1
175	78	PAOZZ	5310-00-638-2605	96906	MS24400D6	.NUT,PLAIN,HEXAGON .... UHE,UHH,UHV,UHX	EA	1
175	79	PAOZZ	4730-00-231-1331	88044	AN893-121D	.REDUCER,BOSS .... UHE,UHH,UHV,UHX	EA	1
175	80	PBOZZ	4730-00-684-6922	96906	MS24394D6	.ELBOW,TUBE .... UHE,UHH,UHV,UHX	EA	1

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
175	81	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	3
175	82	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
175	83	MFOZZ	1560-00-980-9451	97499	205-040-146-1	.TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
175	84	PAOZZ	4730-00-866-1829	96906	MS24392D10	.NIPPLE,TUBE	UHE,UHH,UHV,UHX	EA	2
175	85	PAOZZ	4730-00-277-2459	88044	AN939D10	.ELBOW,BOSS	UHE,UHH,UHV,UHX	EA	2
175	86	PBOZZ	5310-00-282-7834	88044	AN924-10D	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
175	87	PAOZZ	5330-00-584-0149	80205	NAS617-10	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	4
175	88	MFOZZ	1560-00-980-9465	97499	205-040-145-1	.TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
175	89	PBOZZ	4730-00-884-6922	96906	MS24394D6	.ELBOW,TUBE	UHE,UHH,UHV,UHX	EA	1
175	90	PAOZZ	5310-00-638-2606	96906	MS24400D6	.NUT,PLAIN,HEXAGON	UHE,UHH,UHV,UHX	EA	1
175	91	PCOZZ	5330-00-576-9925	80205	NAS617-6	.PACKING,PREFORMED	UHE,UHH,UHV,UHX	EA	1
175	92	MFOZZ	1560-00-980-9455	97499	205-040-150-1	.TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
175	93	PAOZZ	5305-00-781-9057	96906	MS27039-1-08	.SCREW,MACHINE	UHE,UHH,UHV,UHX	EA	2
175	94	PAOZZ	5340-00-993-6244	81996	EAB7000D10	.CLAMP,LOOP	UHE,UHH,UHV,UHX	EA	1
175	95	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	1
175	96	PAOZZ	5340-00-598-8251	88044	AN743-12	.BRACKET,ANGLE	UHE,UHH,UHV,UHX	EA	1
175	97	PAOZZ	5310-00-167-0753	88044	AN960PD10L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	1
175	98	PAOZZ	5310-00-807-1474	96906	MS21042L3	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	8
175	99	PAOZZ	4730-00-898-0007	97499	204-060-567-1	.ADAPTER,OIL COOLER	UHE,UHH,UHV,UHX	EA	2
175	100	PAOZZ	5330-00-847-1120	97499	204-060-184-1	.GASKET	UHE,UHH,UHV,UHX	EA	2
175	101	MFOZZ	1560-00-980-9464	97499	205-040-144-1	.TUBE ASSEMBLY	UHE,UHH,UHV,UHX	EA	1
175	102	PAOZZ	5305-00-150-9102	88044	AN5-7A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
175	103	PAOZZ	5310-00-187-2399	88044	AN960PD516	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	8
175	104	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	4
175	105	PAOOO	1615-00-133-6226	97499	204-040-724-3	.COOLER,OIL,TRANSMIS	UHE,UHH,UHV,UHX	EA	1

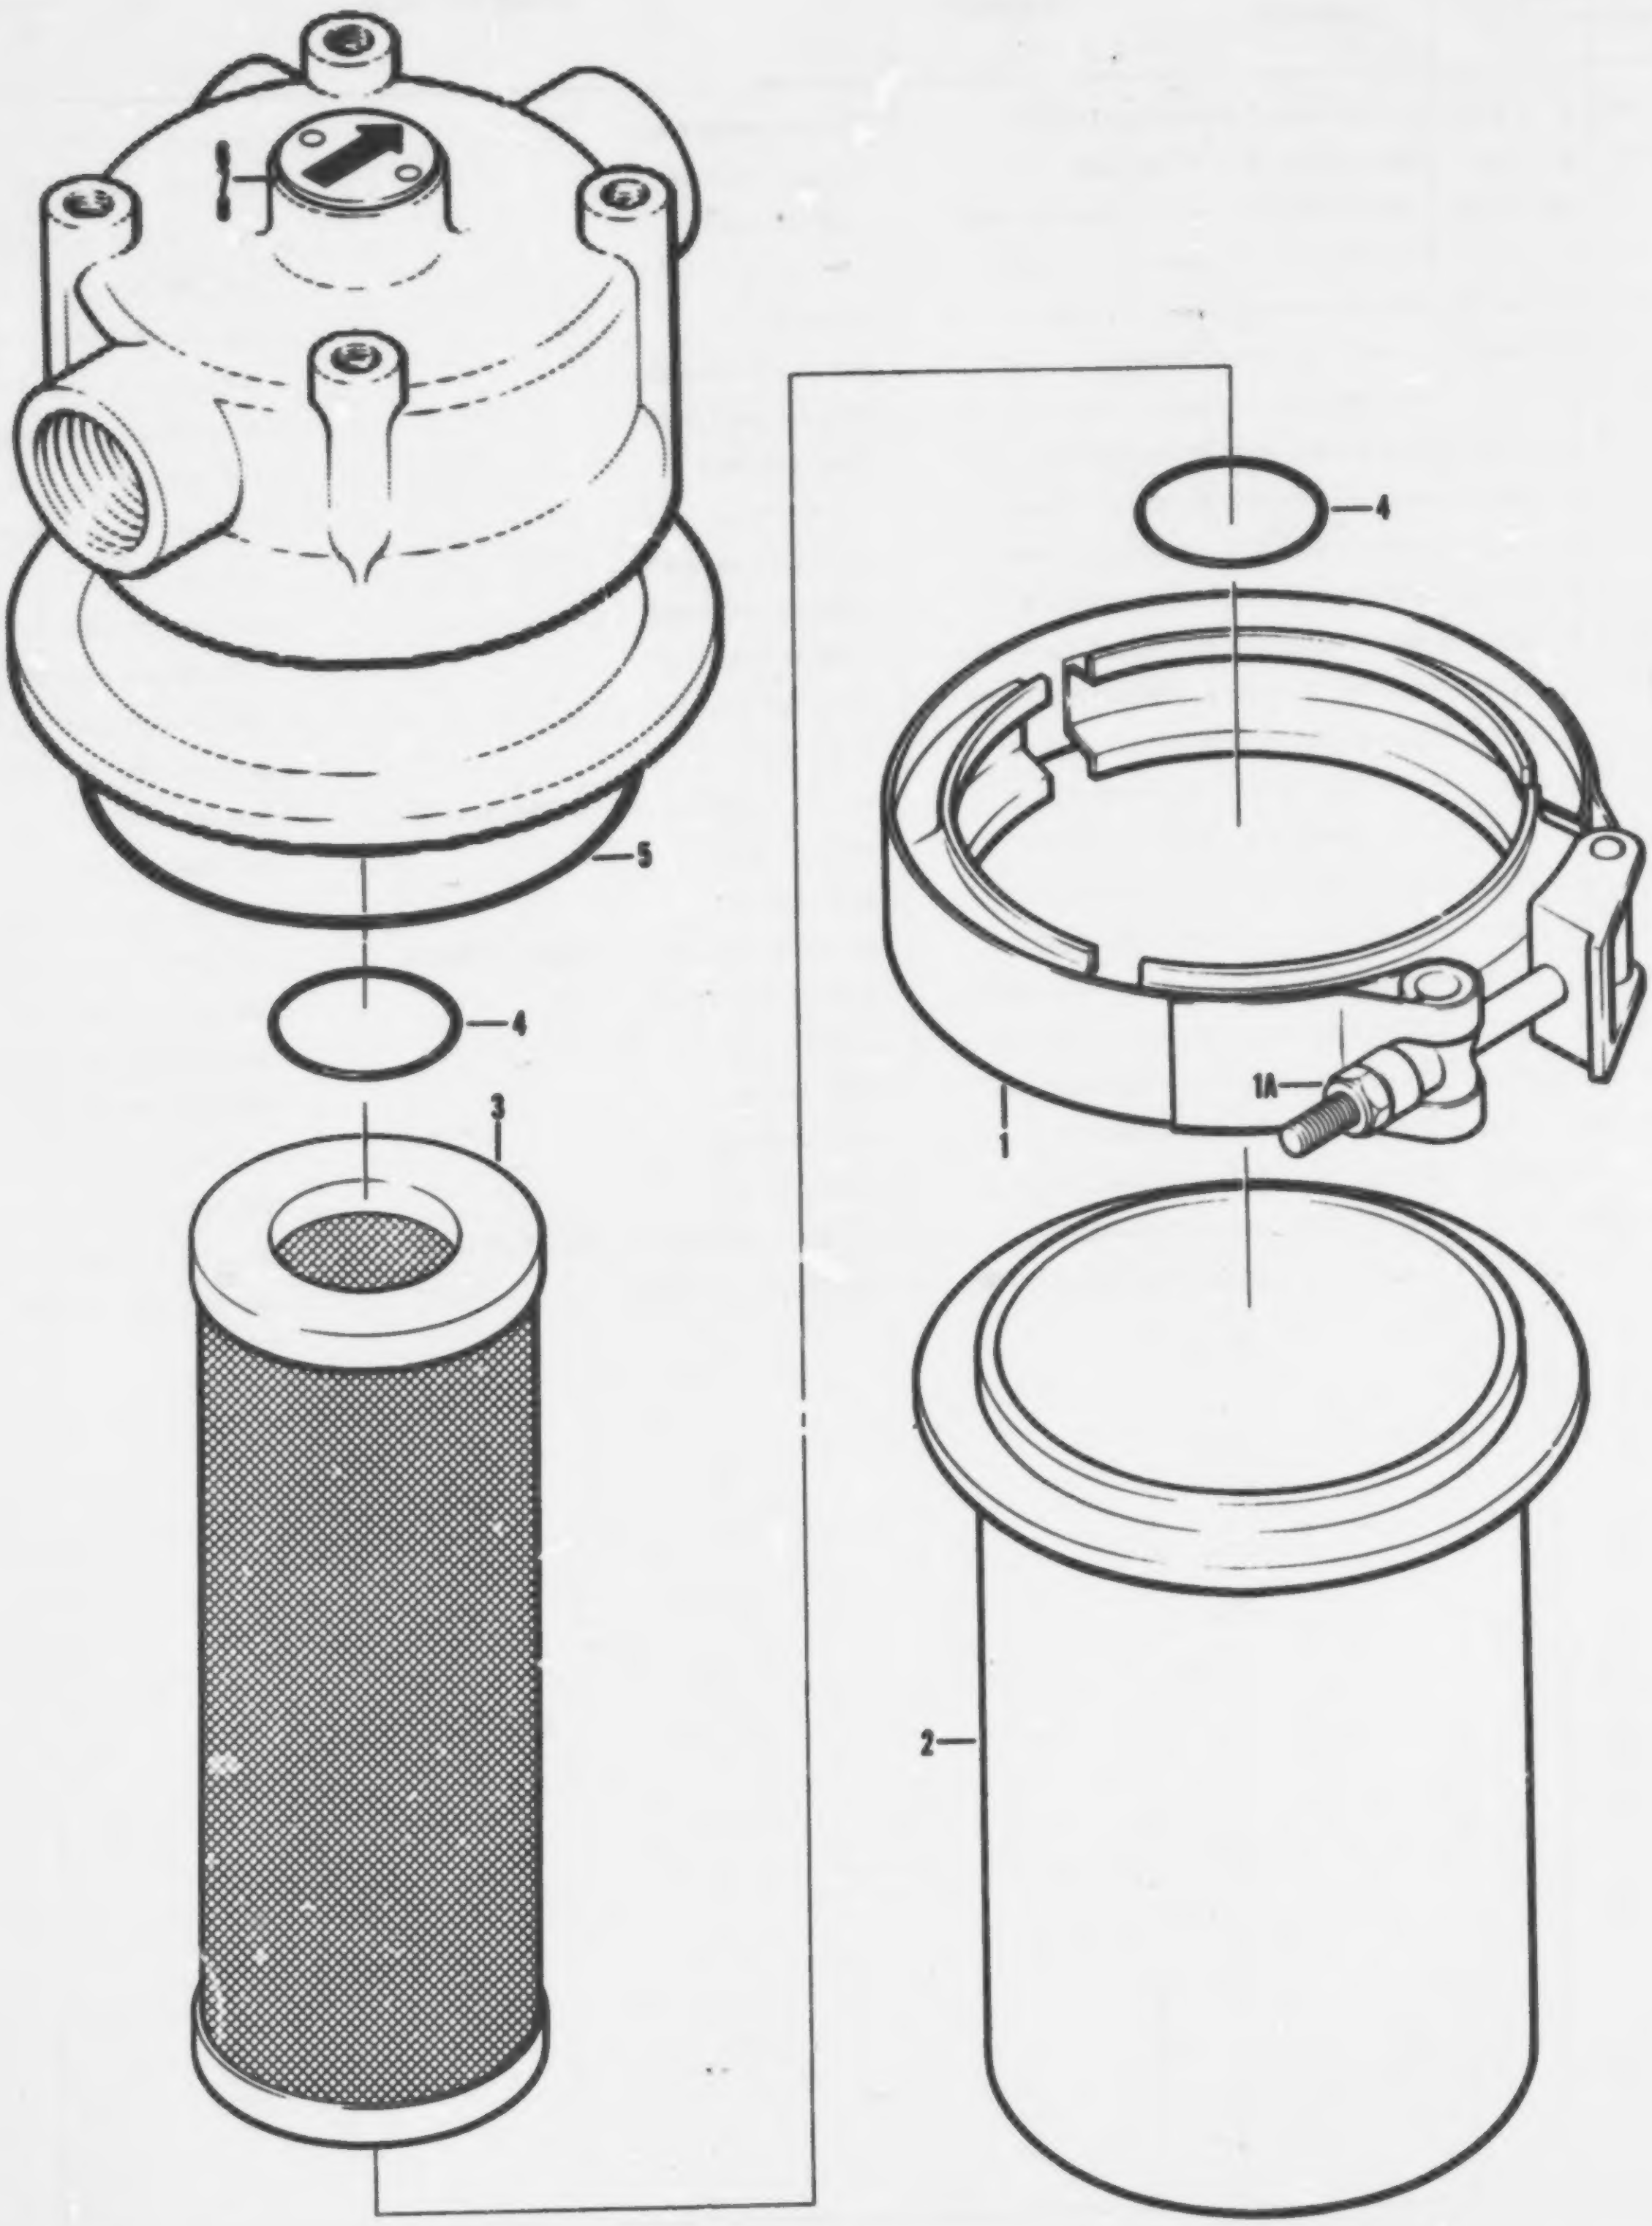

Figure 176. Filter Assembly

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
176		PAOOO	1615-00-796-5004	97499	204-040-760-3	FILTER ASSEMBLY SEE FIG 151, 152 & 175 FOR NHA ....UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
176		PAOOO	1615-00-796-5004	21769	133444	FILTER ASSEMBLY..........UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	REF
176	1	PAOZZ	5340-00-225-9053	98625	4562-350	.COUPLING..........UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
176	1A	PAOZZ	5310-00-813-3232	80205	NAS679C4M	..NUT, SELF-LOCKING, HE..........UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
176	2	PAOZZ	1560-00-757-8745	97499	204-040-760-15	.STRAINER, BODY SEDIMENT..........UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
176	3	XAOZZ		97499	204-040-760-13	.FILTER ELEMENT COMPONENT OF KIT NSN 2945-00-019-0280 ....UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
176	4	XDOZZ	5330-00-964-0058	96906	MS29561-024	.PACKING, PREFORMED COMPONENT OF KIT NSN 2945-00-019-0280 ....UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	2
176	5	PCOZZ	5330-00-726-4153	96906	MS29561-237	.PACKING, PREFORMED COMPONENT OF KIT NSN 2945-00-019-0280 ....UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
176	6	PAOZZ	5330-00-868-7021	73370	128030	.PACKING, PREFORMED..........UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
176	7	PCOZZ	5330-00-729-5254	96906	MS29561-014	.PACKING, PREFORMED..........UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
176	8	PAOZZ	1680-00-868-6996	87405	139248	.INDICATOR, TRANSMISS..........UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1
176		PAOZZ	2945-00-019-0280	97499	204-2490-1	FUEL AND OIL KIT FILTER..........UHB, UHC, UHE, UHH, UHM, UHV, UHX	EA	1

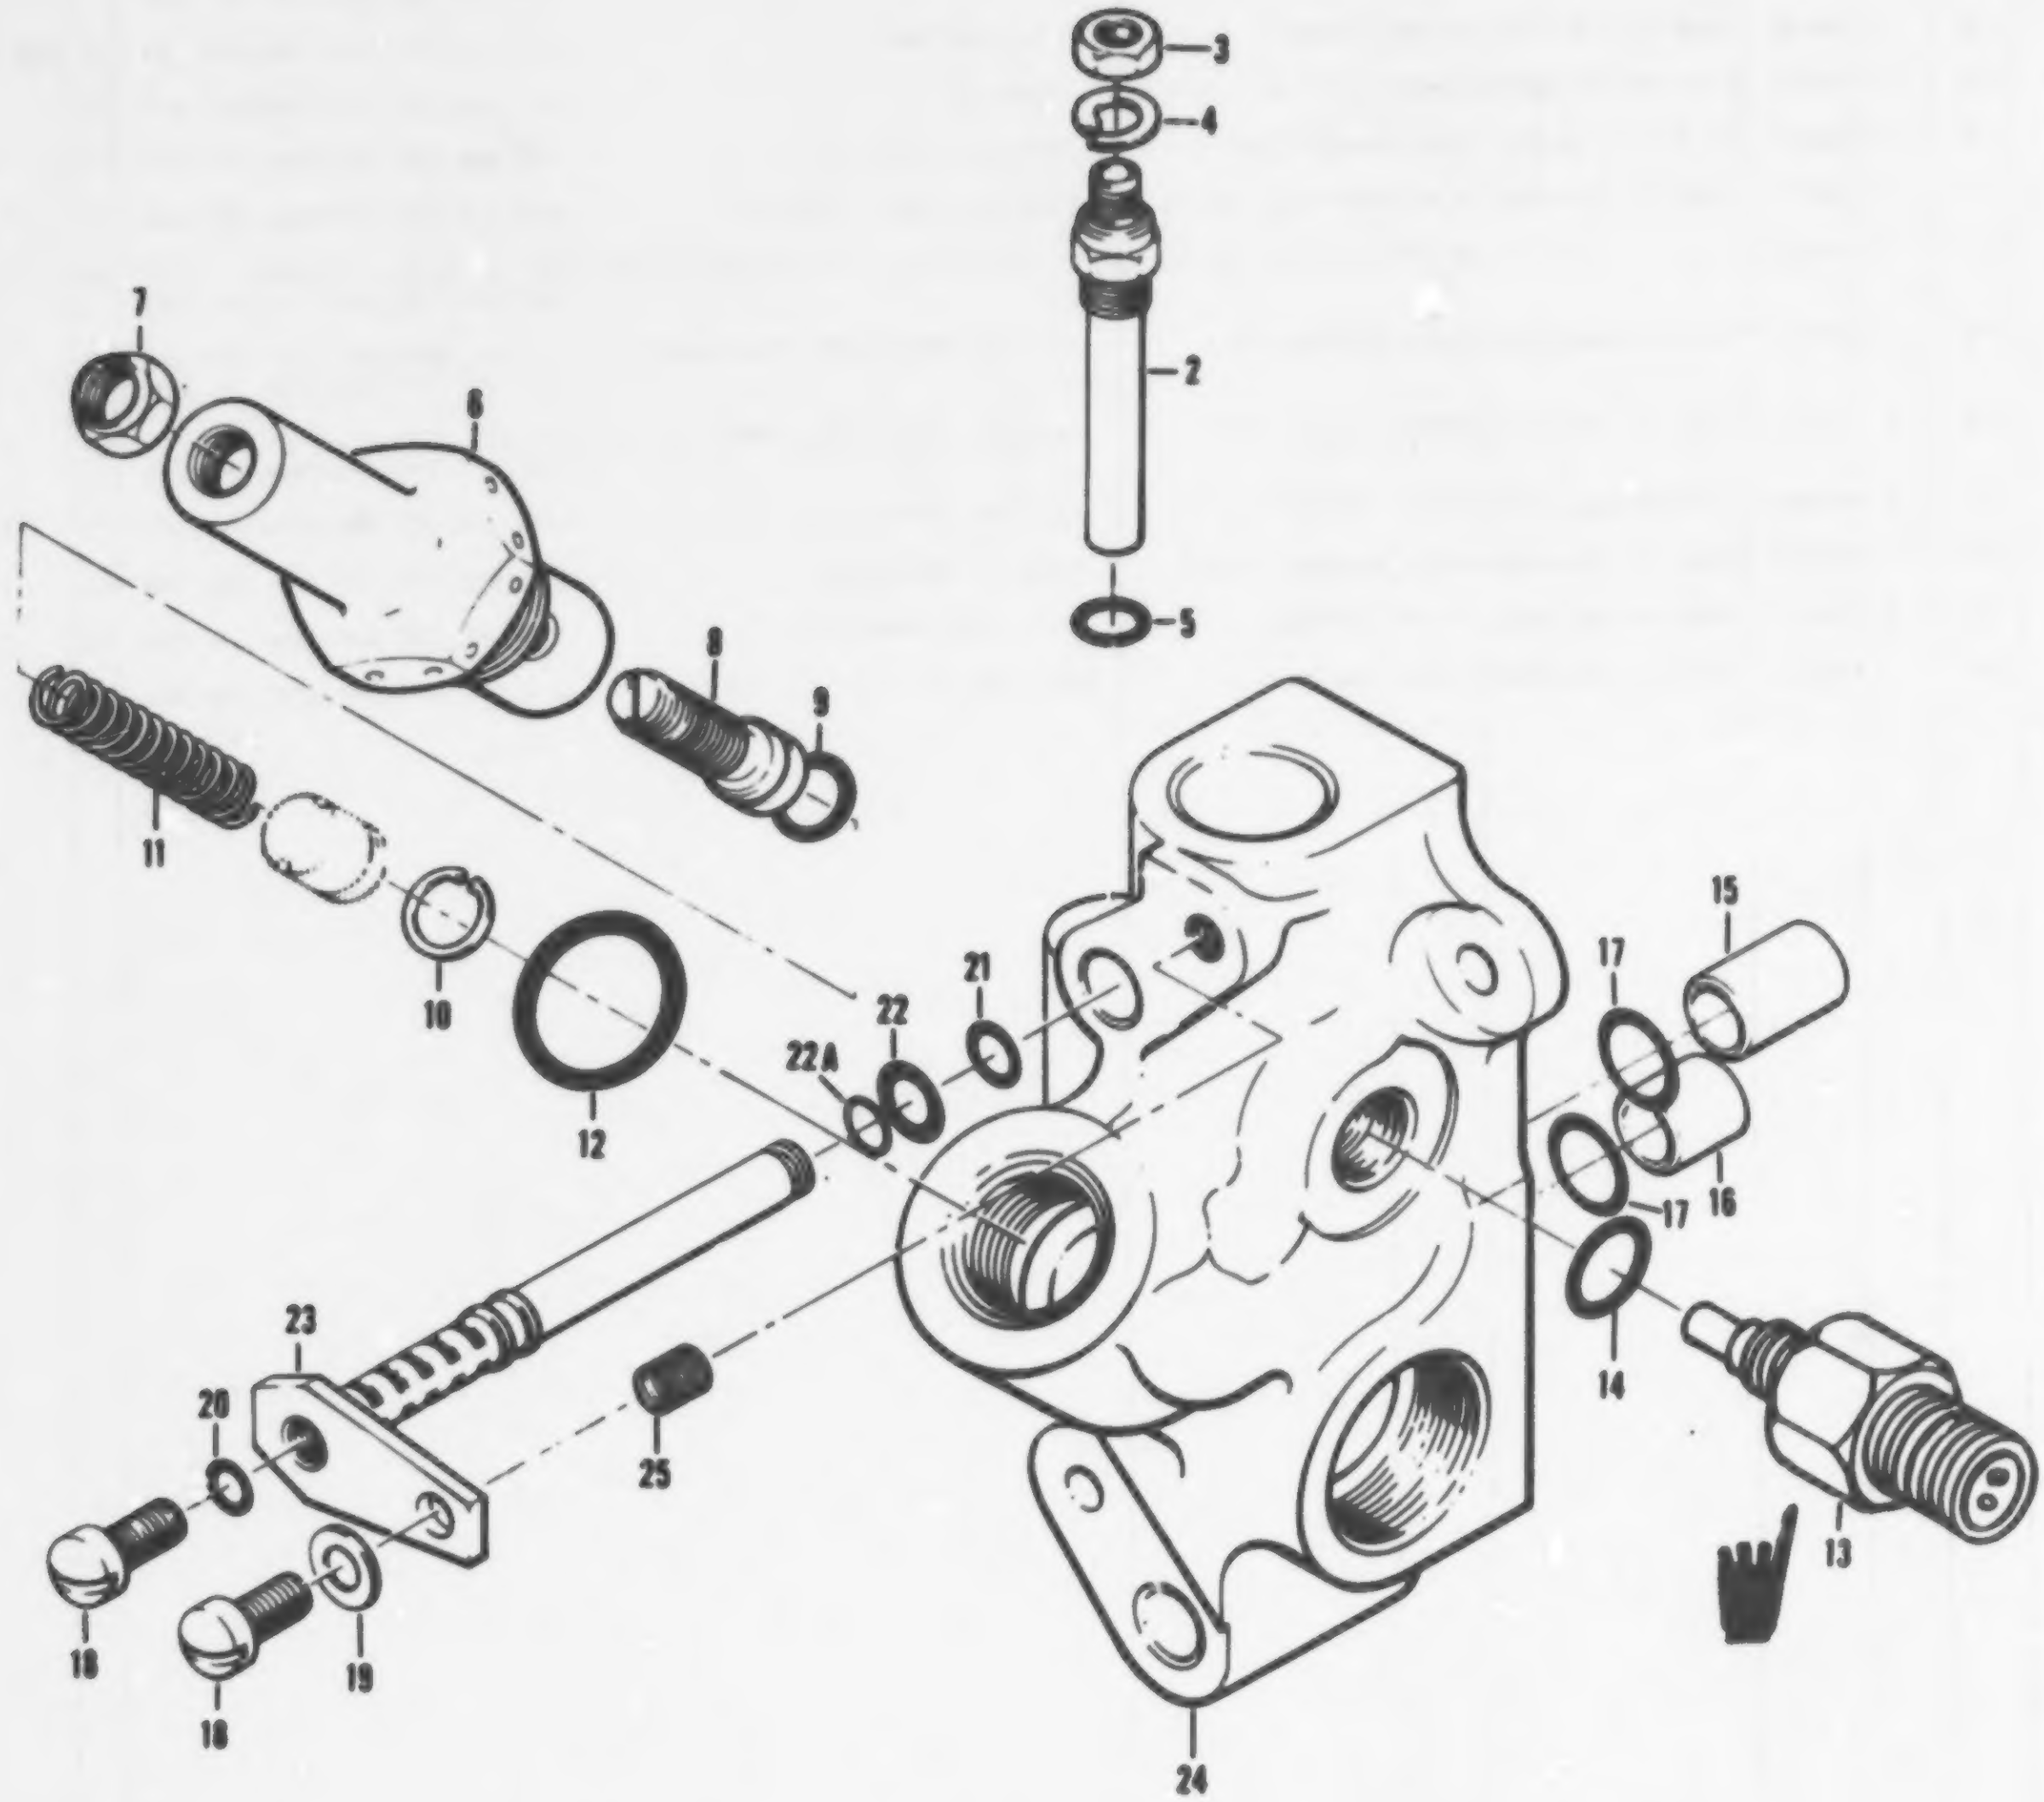
3
4
2
5
7
6
8
9
11
10
12
22
21
22A
15
17
17
16
14
13
23
20
25
18
18
19
24

Figure 177. Manifold Assembly

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
177		AOOGO	1560-00-874-0861	97499	204-040-393-1	MANIFOLD ASSEMBLY SEE FIG 151, 153 AND 155 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
177	2	PAOZZ	5930-00-299-1066	73168	12411-2-230	.SWITCH,THERMOSTATIC	UHE,UHH,UHM,UHV,UHX	EA	1
177	3	PAOZZ	5310-00-934-9763	96906	MS35649-265	.NUT,PLAIN,HEXAGON	UHE,UHH,UHM,UHV,UHX	EA	1
177	4	PAOZZ	5310-00-045-4007	96906	MS35338-41	.WASHER,LOCK	UHE,UHH,UHM,UHV,UHX	EA	1
177	5	PCOZZ	5330-00-579-7549	80205	NAS617-3	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
177	6	PAOOO	4730-00-988-4533	97499	204-040-368-1	.FITTING,LUBRICANT PRESSURE RELIEF	UHE,UHH,UHM,UHV,UHX	EA	1
177	7	PAOZZ	5310-00-926-1851	96906	MS2108306	..NUT,SELF-LOCKING,HE	UHE,UHH,UHM,UHV,UHX	EA	1
177	8	XBOZZ	5305-00-143-2017	97499	204-040-389-1	..SETSCREW	UHE,UHH,UHM,UHV,UHX	EA	1
177	9	PCOZZ	5330-00-882-6874	96906	MS9241-011	..PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
177	10	PAOZZ	5365-00-804-9743	96906	MS16625-1050	..RING,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
177	10A	PBOZZ	4820-00-413-1465	97499	204-040-391-1	..PLUMBER, VALVE	UHE,UHH,UHM,UHV,UHX	EA	1
177	11	PAOZZ	5360-00-691-2158	97499	204-040-227-1	..SPRING,HELICAL,COMP	UHE,UHH,UHM,UHV,UHX	EA	1
177	12	PCOZZ	5330-00-835-8974	96906	MS29561-119	.PACKING,PREFORME	UHE,UHH,UHM,UHV,UHX	EA	1
177	13	PAOZZ	6685-00-580-9651	96906	MS28034-3	.TRANSMITTER,TEMP ELECTRICAL RESISTANCE	UHE,UHH,UHM,UHV,UHX	EA	1
177	14	PCOZZ	5330-00-531-2070	80205	NAS617-4	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
177	15	PAOZZ	3120-00-670-5316	97499	21-008-12-16	.BUSHING,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	1
177	16	PAOZZ	3120-00-625-0063	97499	21-008-12-24	.BUSHING,SLEEVE	UHE,UHH,UHM,UHV,UHX	EA	1
177	17	PCOZZ	5330-00-800-5180	96906	MS29561-015	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	2
177	18	PAOZZ	5305-00-271-7746	88044	AN502-10-6	.SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	2
177	19	PAOZZ	5310-00-167-0818	88044	AN960-10	.WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	1
177	20	PAOZZ	5330-00-641-4432	25184	PRP110-3-16	.PACKING WITH RETAIN	UHE,UHH,UHM,UHV,UHX	EA	1
177	21	PCOZZ	5330-00-846-0502	96906	MS9241-010	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
177	22	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
177	22A	PAOZZ	5330-00-580-5937	96906	MS29561-008	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
177	23	PAOZZ	1615-00-806-2196	97499	204-040-388-1	.JET LUBRICATOR, TRANSMISSION	UHE,UHH,UHM,UHV,UHX	EA	1
177	24	PAOFF	1560-00-876-8761	97499	204-040-387-5	.MANIFOLD ASSY,OIL	UHE,UHH,UHM,UHV,UHX	EA	1
177	25	PBFZZ	5340-00-986-2929	96906	MS124655	..INSERT,SCREW THREAD	UHE,UHH,UHM,UHV,UHX	EA	1

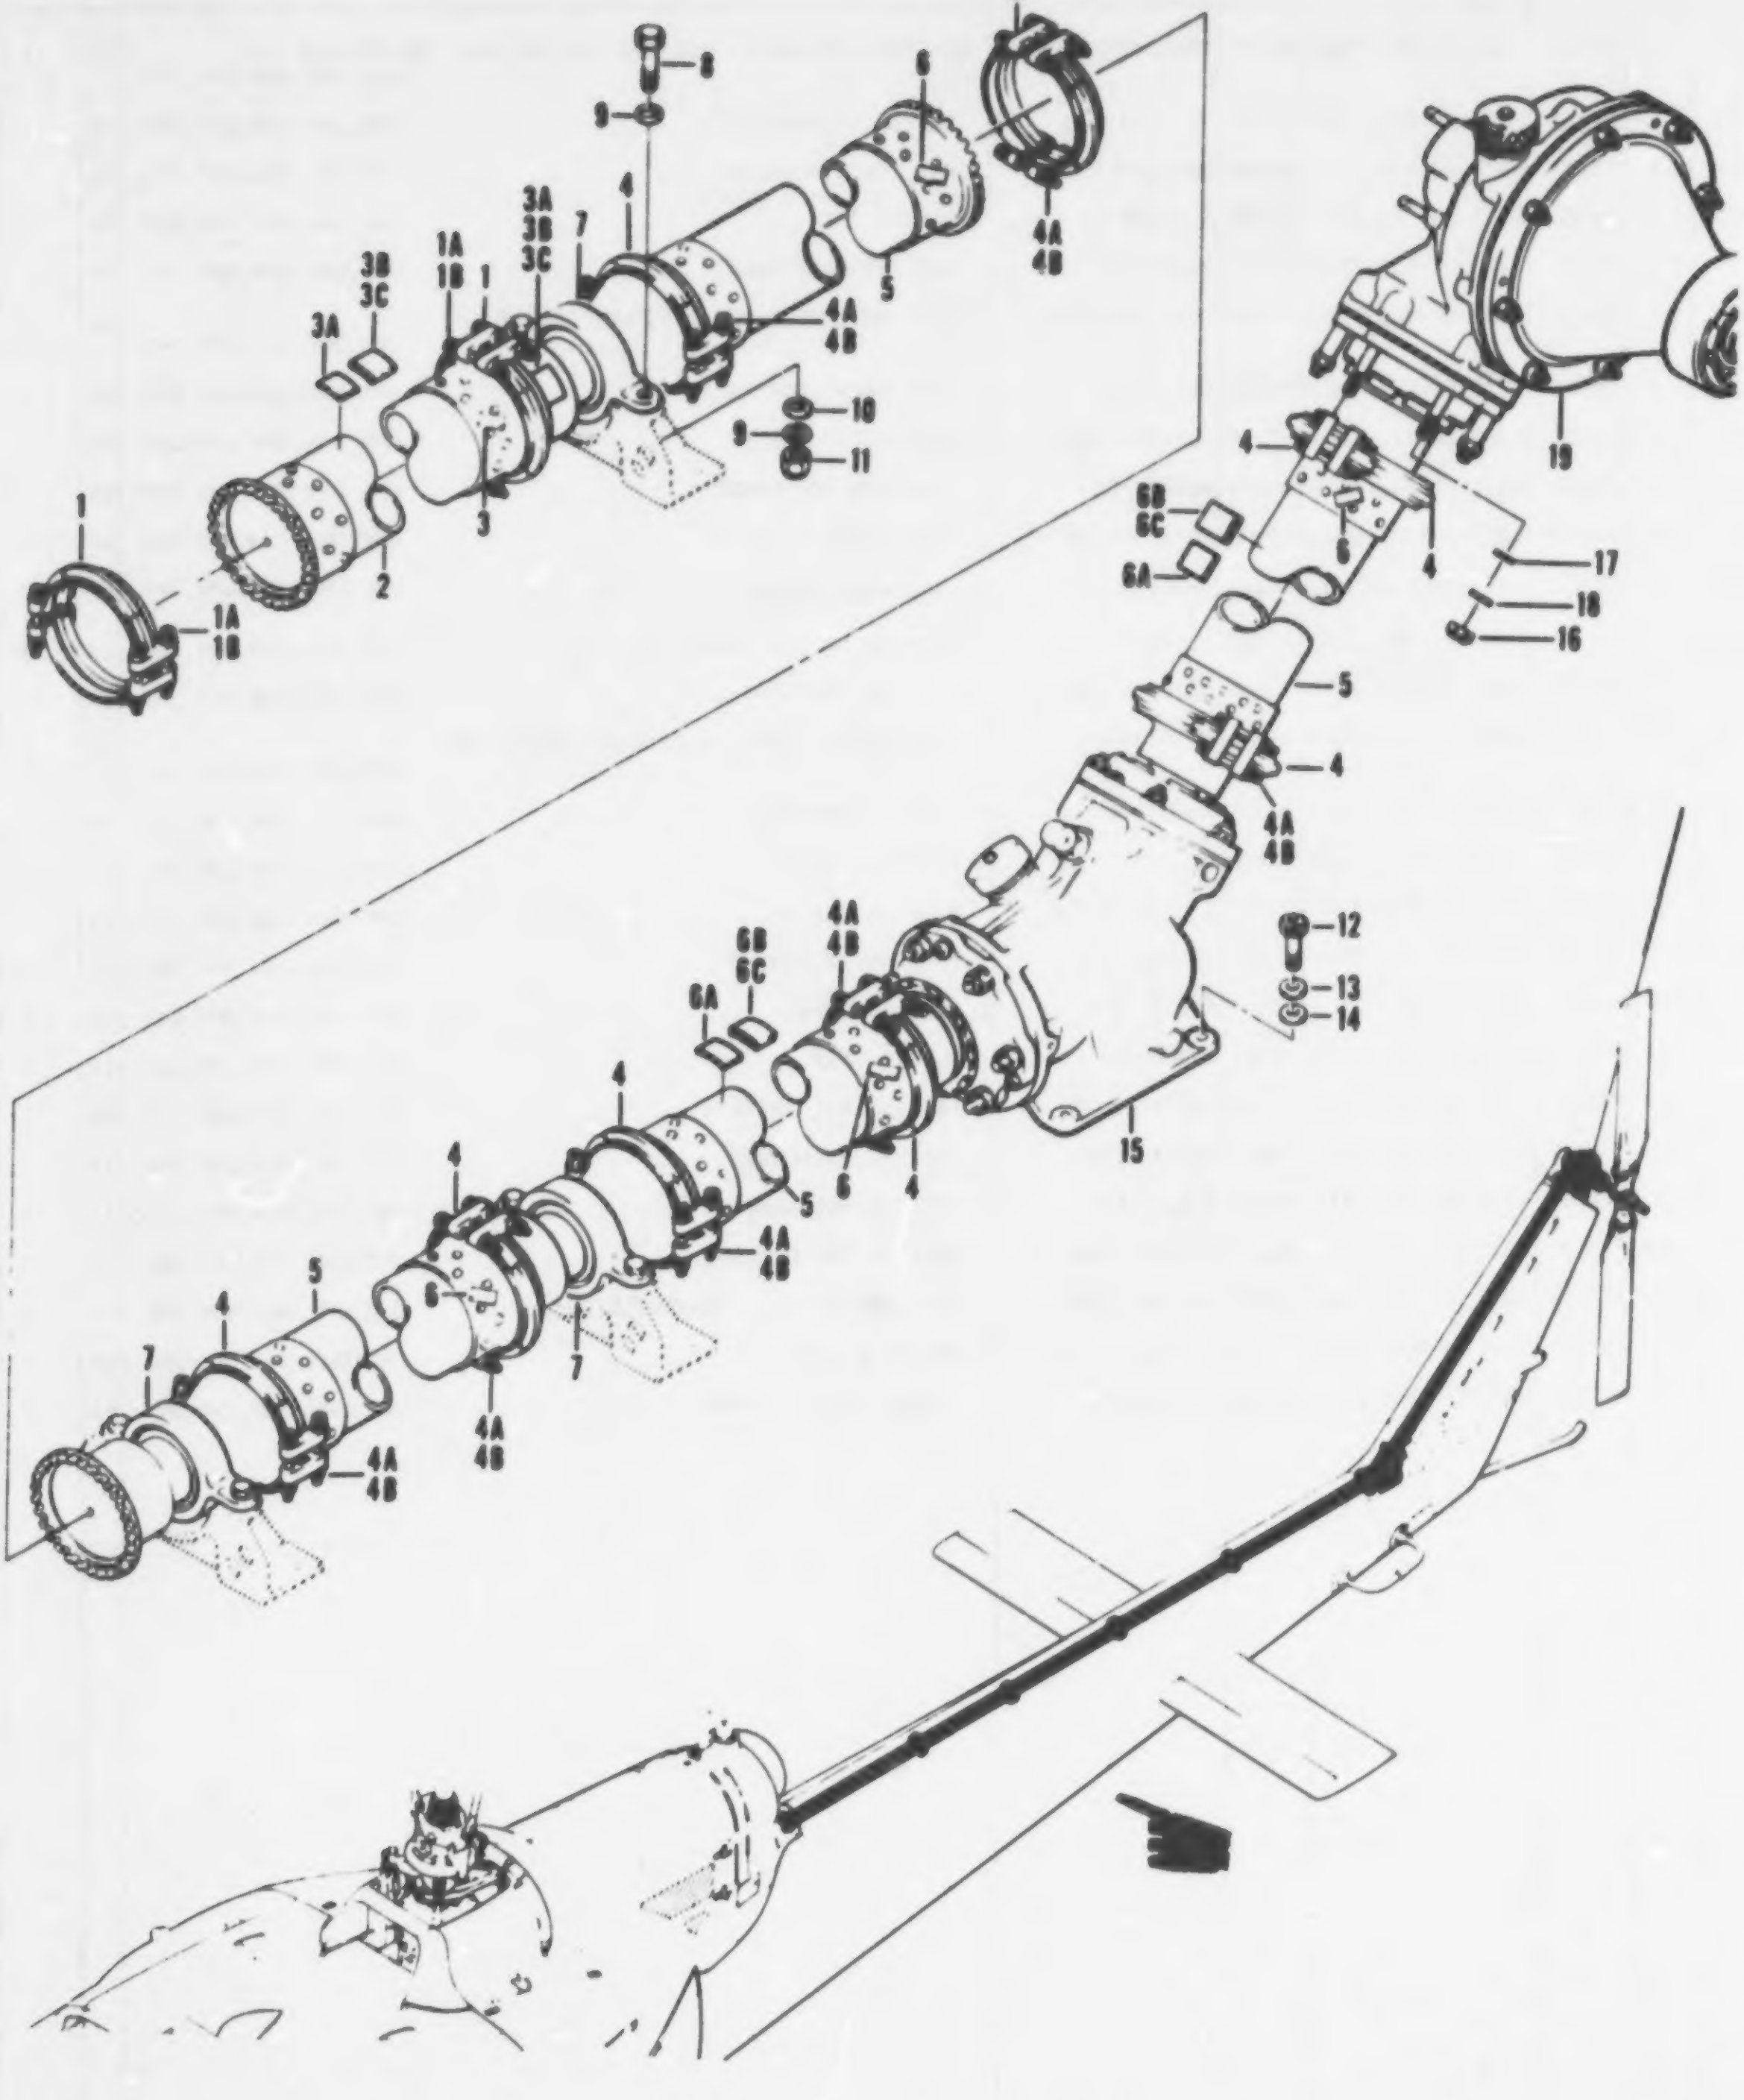
4
8
6
9
3A
3B
3C
7
4
1A
1B
1
3B
3C
3A
4A
4B
5
4A
4B
10
9
11
3
1
2
1A
1B
19
4
6B
6C
6A
6
4
17
18
16
5
4
4A
4B
12
13
14
4A
4B
6B
6C
6A
4
15
4
5
6
4
4
4A
4B
5
4
6
7
7
4A
4B
4A
4B

Figure 178. Shaft Installation, Tail RotorDrive

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
178		XCFZZ		97499	204-040-011-3	SHAFT INSTL DRIVE USBL EFF 60-3646 THRU 61-803 SEE FIG.4 FOR NHA........		EA	1
178		XCFZZ		97499	204-040-011-7	SHAFT INSTL DRIVE USBL EFF UH-1B 62-1872 & SUBSEQUENT SEE FIG.4 FOR NHA........	UHM	EA	1
178	1	PAODD	3010-00-957-6866	97499	204-040-811-1	.CLAMP,COUPLING........	UHM	EA	2
178	1A	PAOZZ	5310-00-688-2089	72962	52Z1835-048	..NUT,SELF-LOCKING,EX -ALTERNATE-........	UHM	EA	4
178	1A	PAOZZ	5310-00-702-5020	56878	FN1216-428	..NUT,SELF-LOCKING,EX........	UHM	EA	4
178	1B	PAOZZ	5306-00-894-1067	96906	MS9089-24	..BOLT,MACHINE U/O PN 204-040-811-1........	UHM	EA	4
178	2	PAODD	1615-01-008-2798	97499	204-040-620-7	.SHAFT ASSEMBLY,TAIL........	UHM	EA	1
178	3	PAOZZ	9905-00-060-2034	97499	100-024-1	. PLATE,IDENTIFICATIO........	UHM	EA	1
178	3A	PAOZZ	1615-01-058-3668	97499	204-040-621-3	..WEIGHT,DRIVE SHAFT,........	UHM	EA	1
178	3B	PAOZZ	1615-01-058-3669	97499	204-040-621-5	..WEIGHT,DRIVE SHAFT,........	UHM	EA	16
178	3C	PAOZZ	1615-01-058-3670	97499	204-040-621-7	..WEIGHT,DRIVE SHAFT,........	UHM	EA	2
178		XCFZZ		97499	204-040-011-1	SHAFT INSTL USBL EFF 60-3646 THRU 61-803 SEE FIG.8 FOR NHA		EA	1
178		XCFZZ		97499	204-040-011-5	SHAFT INSTL USBL EFF UH-1B 62-1872 & SUBSEQUENT SEE FIG.8 FOR NHA........	UHM	EA	1
178	4	PAODD	3010-00-957-6866	97499	204-040-811-1	.CLAMP,COUPLING........	UHM	EA	8
178	4A	PAOZZ	5310-00-688-2089	72962	52Z1835-048	..NUT,SELF-LOCKING,EX -ALTERNATE-........	UHM	EA	4
178	4A	PAOZZ	5310-00-702-5020	80539	FN1216-428	..NUT........	UHM	EA	4
178	4B	PAOZZ	5306-00-894-1067	96906	MS9089-24	..BOLT,MACHINE U/O PN 204-040-811-1........	UHM	EA	4
178	5	PAODD	1615-01-008-2798	97499	204-040-620-7	.SHAFT ASSEMBLY,TAIL ROTOR........	UHM	EA	4
178	6	PAOZZ	9905-00-060-2034	97499	100-024-1	..PLATE,IDENTIFICATIO........	UHM	EA	1
178	6A	PAOZZ	1615-01-058-3668	97499	204-040-621-3	..WEIGHT,DRIVE SHAFT,........	UHM	EA	1
178	6B	PAOZZ	1615-01-058-3669	97499	204-040-621-5	..WEIGHT,DRIVE SHAFT,........	UHM	EA	16
178	6C	PAOZZ	1615-01-058-3670	97499	204-040-621-7	..WEIGHT,DRIVE SHAFT,........	UHM	EA	2
178	7	PAODD	1615-01-056-5385	97499	204-040-600-11	.HANGER ASSEMBLY........	UHM	EA	3
178	8	PAOZZ	5306-00-151-1424	88044	AN4-10A	.BOLT,MACHINE........	UHM	EA	6
178	9	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT........	UHM	EA	V
178	10	PAOZZ	5310-00-844-5081	80205	NAS1197-416	.WASHER,FLAT........	UHM	EA	V
178	11	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........	UHM	EA	6
178	12	PAOZZ	5306-00-182-1959	88044	AN4H11A	.BOLT,MACHINE........	UHM	EA	4
178	13	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT........	UHM	EA	4
178	14	PAOZZ	5310-00-184-9001	88044	AN960PD416L	.WASHER,FLAT........	UHM	EA	4
178	15	PAODD	1615-00-918-2676	97499	204-040-003-37	.GEAR BOX ASSEMBLY, 42 DEGREE. SEE FIG.181 FOR BREAKDOWN	UHM	EA	1
178	16	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON........	UHM	EA	6
178	17	PAOZZ	5310-00-184-8980	88044	AN960PD516L	.WASHER,FLAT........	UHM	EA	6
178	18	PAOZZ	5310-00-167-0836	88044	AN960-516L	.WASHER,FLAT........	UHM	EA	6
178	19	PAODD	1615-00-918-2677	97499	204-040-012-13	.GEAR BOX ASSEMBLY,T 90 DEGREE SEE FIG.184 FOR BREAKDOWN	UHM	EA	1

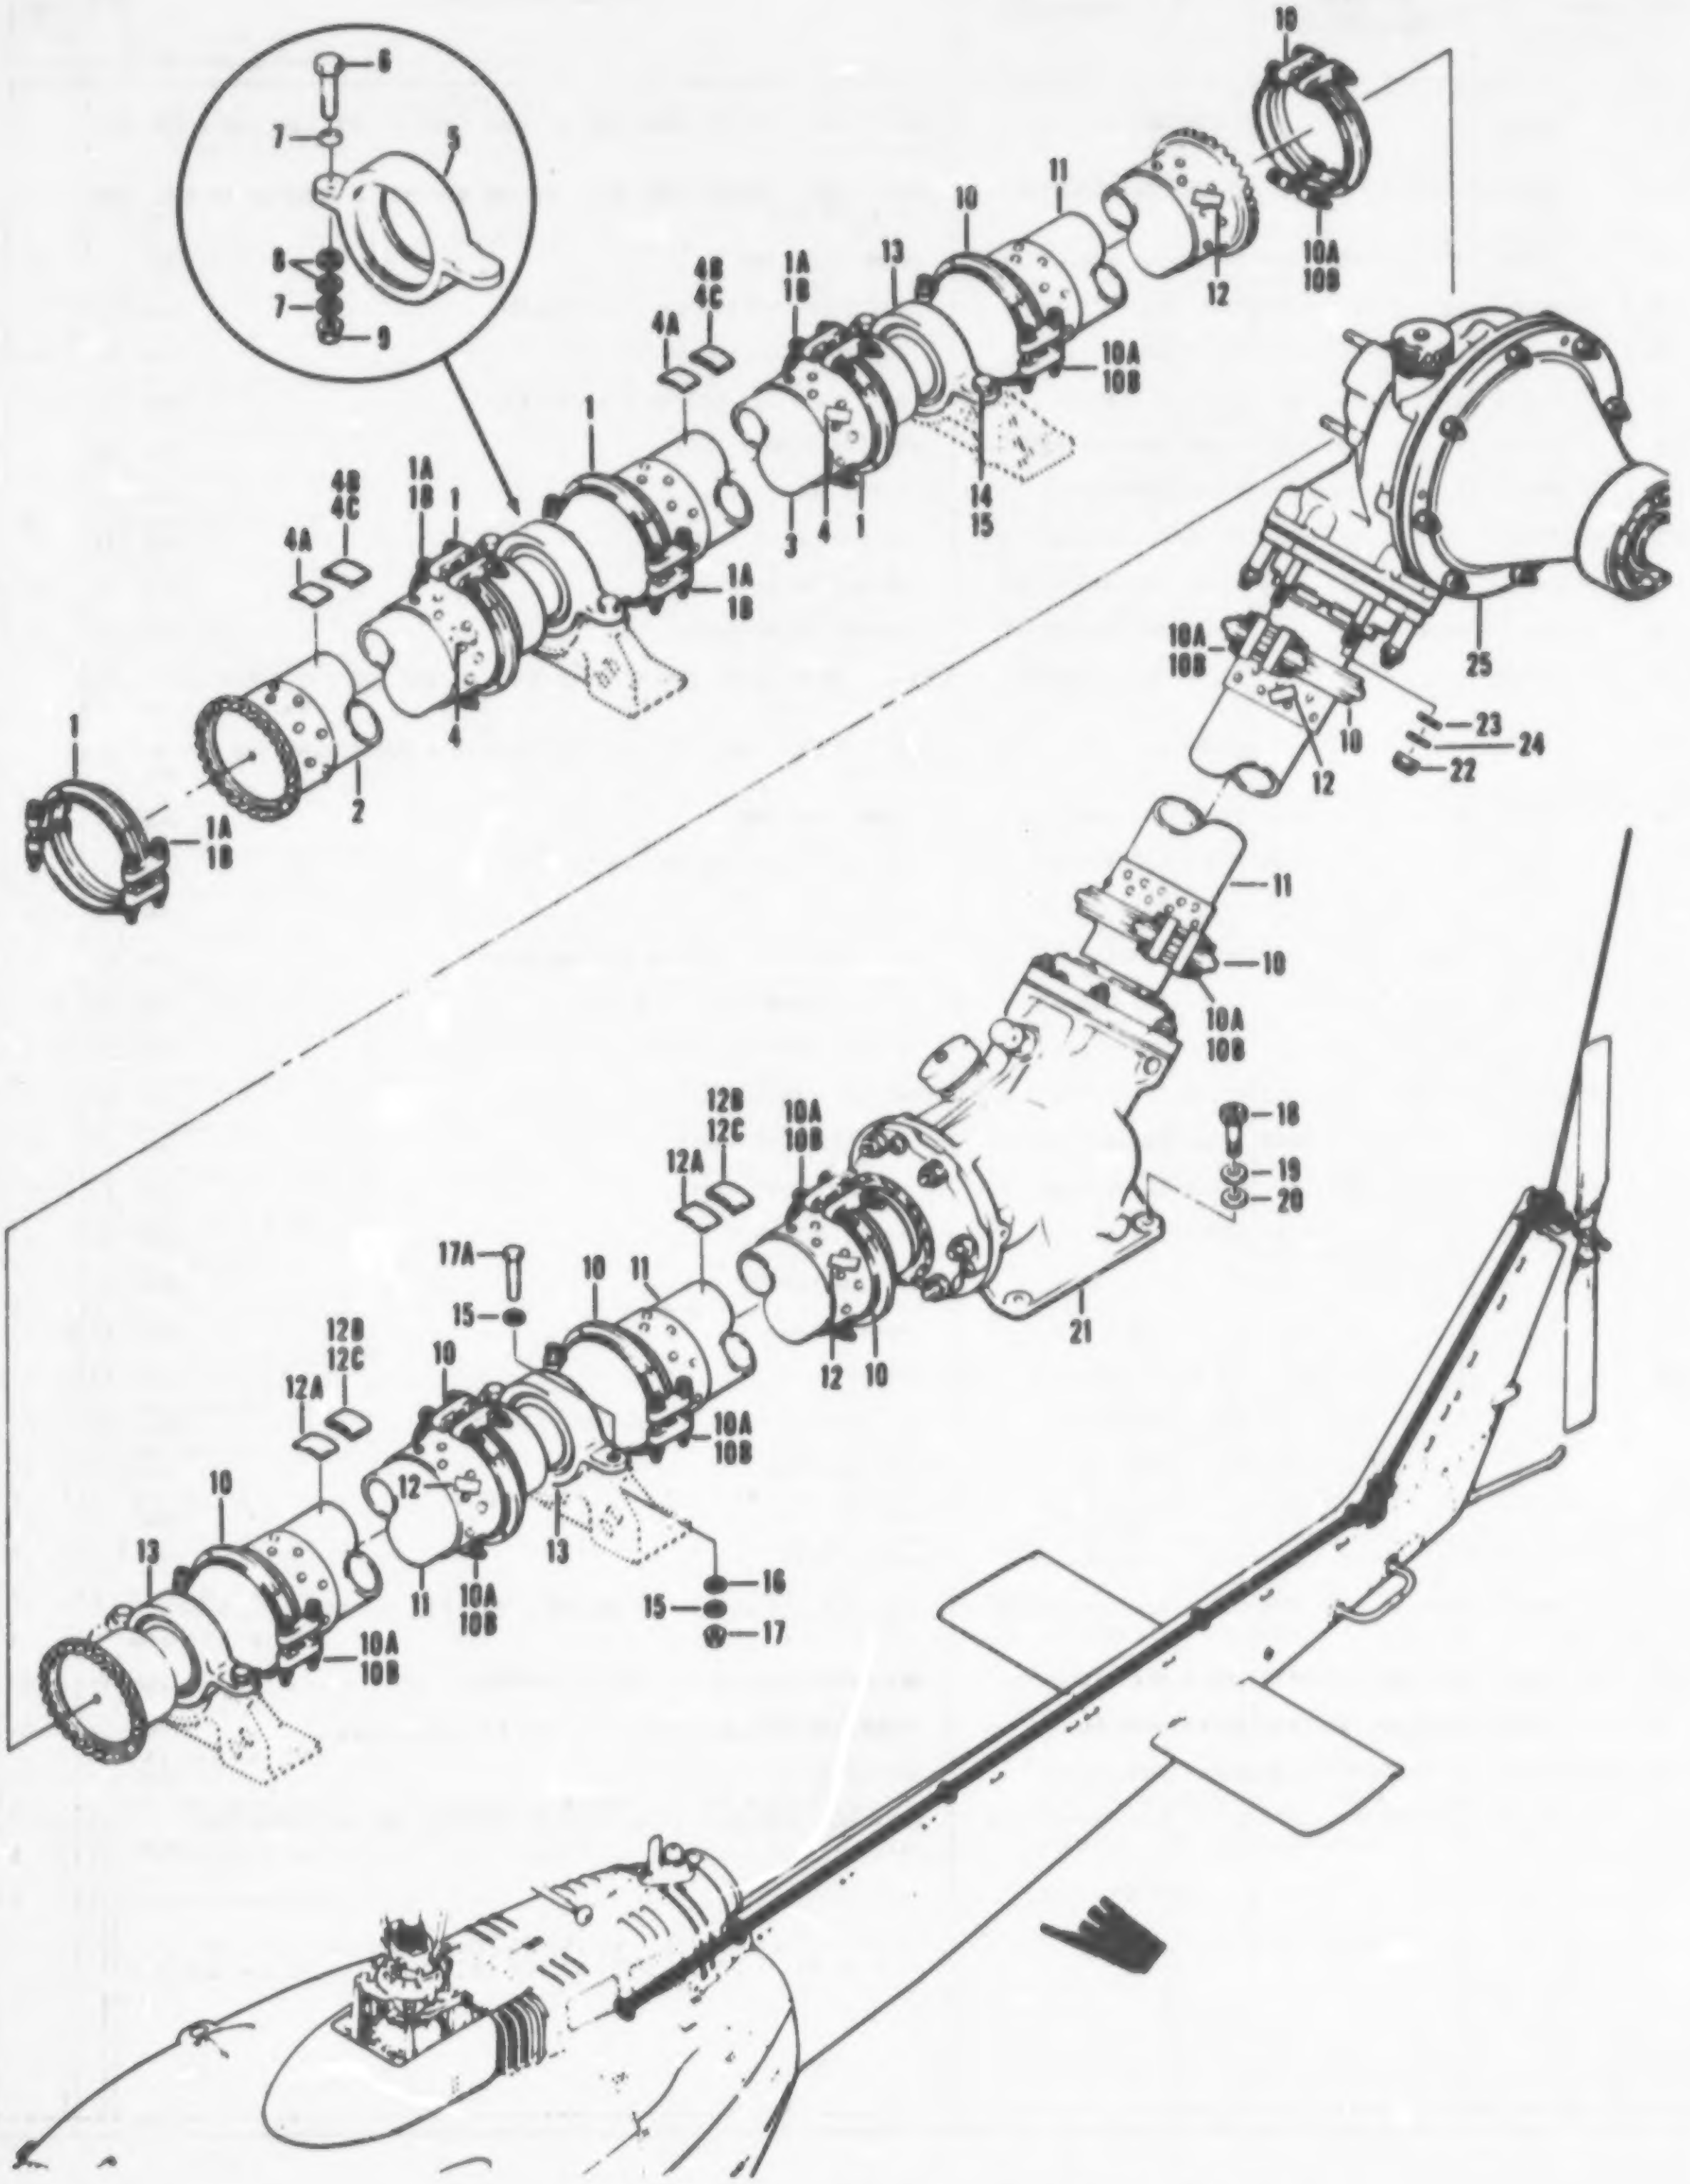
6
7
5
8
7
9
10
11
10
13
1A
1B
4B
4C
4A
12
10A
10B
1
4B
4C
4A
1A
1B
1
3
4
1
14
15
1A
1B
4
2
1
1A
1B
25
10A
10B
23
24
22
10
12
11
10
10A
10B
18
19
20
12B
12C
10A
10B
12A
17A
15
10
11
21
12
10
12B
12C
12A
10
10A
10B
12
13
10
13
16
15
17
11
10A
10B
10A
10B

Figure 179. Shaft Installation, Tail RotorDrive

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)		(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION	USABLE ON CODE	U/M	QTY INC IN UNIT
179		XCFZZ		97499	205-040-003-3	SHAFT INSTL,TAIL ROTOR SEE FIG.5 FOR NHA	UHE,UHH,UHV,UHX	EA	1
179	1	PAOOO	3010-00-957-6866	97499	204-040-811-1	.CLAMP,COUPLING	UHE,UHH,UHV,UHX	EA	4
179	1A	PAOZZ	5310-00-688-2069	72962	52Z1835-048	..NUT,SELF-LOCKING,EX	UHE,UHH,UHV,UHX	EA	4
179	1A	PAOZZ	5310-00-702-5020	80539	FN1216-428	..NUT ALTERNATE FOR PN 52Z1835-048	UHE,UHH,UHV,UHX	EA	4
179	1B	PAOZZ	5306-00-894-1067	96906	MS9089-24	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
179	2	PAOOO	1615-01-008-2798	97499	204-040-620-7	.SHAFT ASSEMBLY,TAIL ROTOR	UHE,UHH,UHV,UHX	EA	1
179	3	PAOOO	1615-01-008-2797	97499	204-040-620-9	.SHAFT ASSEMBLY,TAIL ROTOR	UHE,UHH,UHV,UHX	EA	1
179	4	PAOZZ	9905-00-060-2034	97499	100-024-1	..PLATE,IDENTIFICATIO	UHE,UHH,UHV,UHX	EA	1
179	4A	PAOZZ	1615-01-058-3668	97499	204-040-621-3	..WEIGHT,DRIVE SHAFT,	UHE,UHH,UHV,UHX	EA	1
179	4B	PAOZZ	1615-01-058-3669	97499	204-040-621-5	..WEIGHT,DRIVE SHAFT,	UHE,UHH,UHV,UHX	EA	16
179	4C	PAOZZ	1615-01-058-3670	97499	204-040-621-7	..WEIGHT,DRIVE SHAFT,	UHE,UHH,UHV,UHX	EA	2
179	5	PAOOO	1615-01-056-5365	97499	204-040-600-11	..HANGER ASSEMBLY,DRI	UHE,UHH,UHV,UHX	EA	1
179	6	PAOZZ	5306-00-151-1421	88044	AN4-13A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
179	7	PAOZZ	5310-00-141-1795	88044	AN960-416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
179	8	PAOZZ	5310-00-844-5081	80205	NAS1197-416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	6
179	9	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	2
179		XCFZZ		97499	205-040-003-1	SHAFT INSTL SEE FIG 8 FOR NHA	UHE,UHH,UHV,UHX	EA	1
179	10	PAOOO	3010-00-957-6866	97499	204-040-811-1	.CLAMP,COUPLING	UHE,UHH,UHV,UHX	EA	8
179	10A	PAOZZ	5310-00-688-2069	72962	52Z1835-048	..NUT,SELF-LOCKING,EX	UHE,UHH,UHV,UHX	EA	4
179	10A	PAOZZ	5310-00-702-5020	80539	FN1216-428	..NUT	UHE,UHH,UHV,UHX	EA	4
179	10B	PAOZZ	5306-00-894-1067	96906	MS9089-24	..BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
179	11	PAOOO	1615-01-008-2798	97499	204-040-620-7	.SHAFT ASSEMBLY,TAIL	UHE,UHH,UHV,UHX	EA	4
179	12	PAOZZ	9905-00-060-2034	97499	100-024-1	..PLATE,IDENTIFICATIO	UHE,UHH,UHV,UHX	EA	2
179	12A	PAOZZ	1615-01-058-3668	97499	204-040-621-3	..WEIGHT,DRIVE SHAFT,	UHE,UHH,UHV,UHX	EA	1
179	12B	PAOZZ	1615-01-058-3669	97499	204-040-621-5	..WEIGHT,DRIVE SHAFT,	UHE,UHH,UHV,UHX	EA	16
179	12C	PAOZZ	1615-01-058-3670	97499	204-040-621-7	..WEIGHT,DRIVE SHAFT,	UHE,UHH,UHV,UHX	EA	2
179	13	PAOOO	1615-01-056-5365	97499	204-040-600-11	.HANGER ASSEMBLY	UHE,UHH,UHV,UHX	EA	3
179	14	PAOZZ	5306-00-515-8064	88044	AN4-7A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	2
179	15	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
179	16	PAOZZ	5310-00-844-5081	80205	NAS1197-416	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	V
179	17	PAOZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	4
179	17A	PAOZZ	5306-00-151-1424	88044	AN4-10A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
179	18	PAOZZ	5306-00-182-1960	88044	AN4H12A	.BOLT,MACHINE	UHE,UHH,UHV,UHX	EA	4
179	19	PAOZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
179	20	PAOZZ	5310-00-184-9001	80205	NAS1197-416L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	4
179	21	PAOOO	1615-00-918-2676	97499	204-040-003-37	.GEAR BOX ASSEMBLY SEE FIG.181 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1
179	22	PAOZZ	5310-00-807-1476	96906	MS21042L5	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHE,UHH,UHV,UHX	EA	8
179	23	PAOZZ	5310-00-184-8980	88044	AN960PD516L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	6
179	24	PAOZZ	5310-00-167-0836	88044	AN960-516L	.WASHER,FLAT	UHE,UHH,UHV,UHX	EA	6
179	25	PAOOO	1615-00-918-2677	97499	204-040-012-13	.GEAR BOX ASSEMBLY,T ,90 DEGREE RPLS--1615-00-472-7306 & 1615-00-961-4426 SEE FIG.184 FOR BREAKDOWN	UHE,UHH,UHV,UHX	EA	1

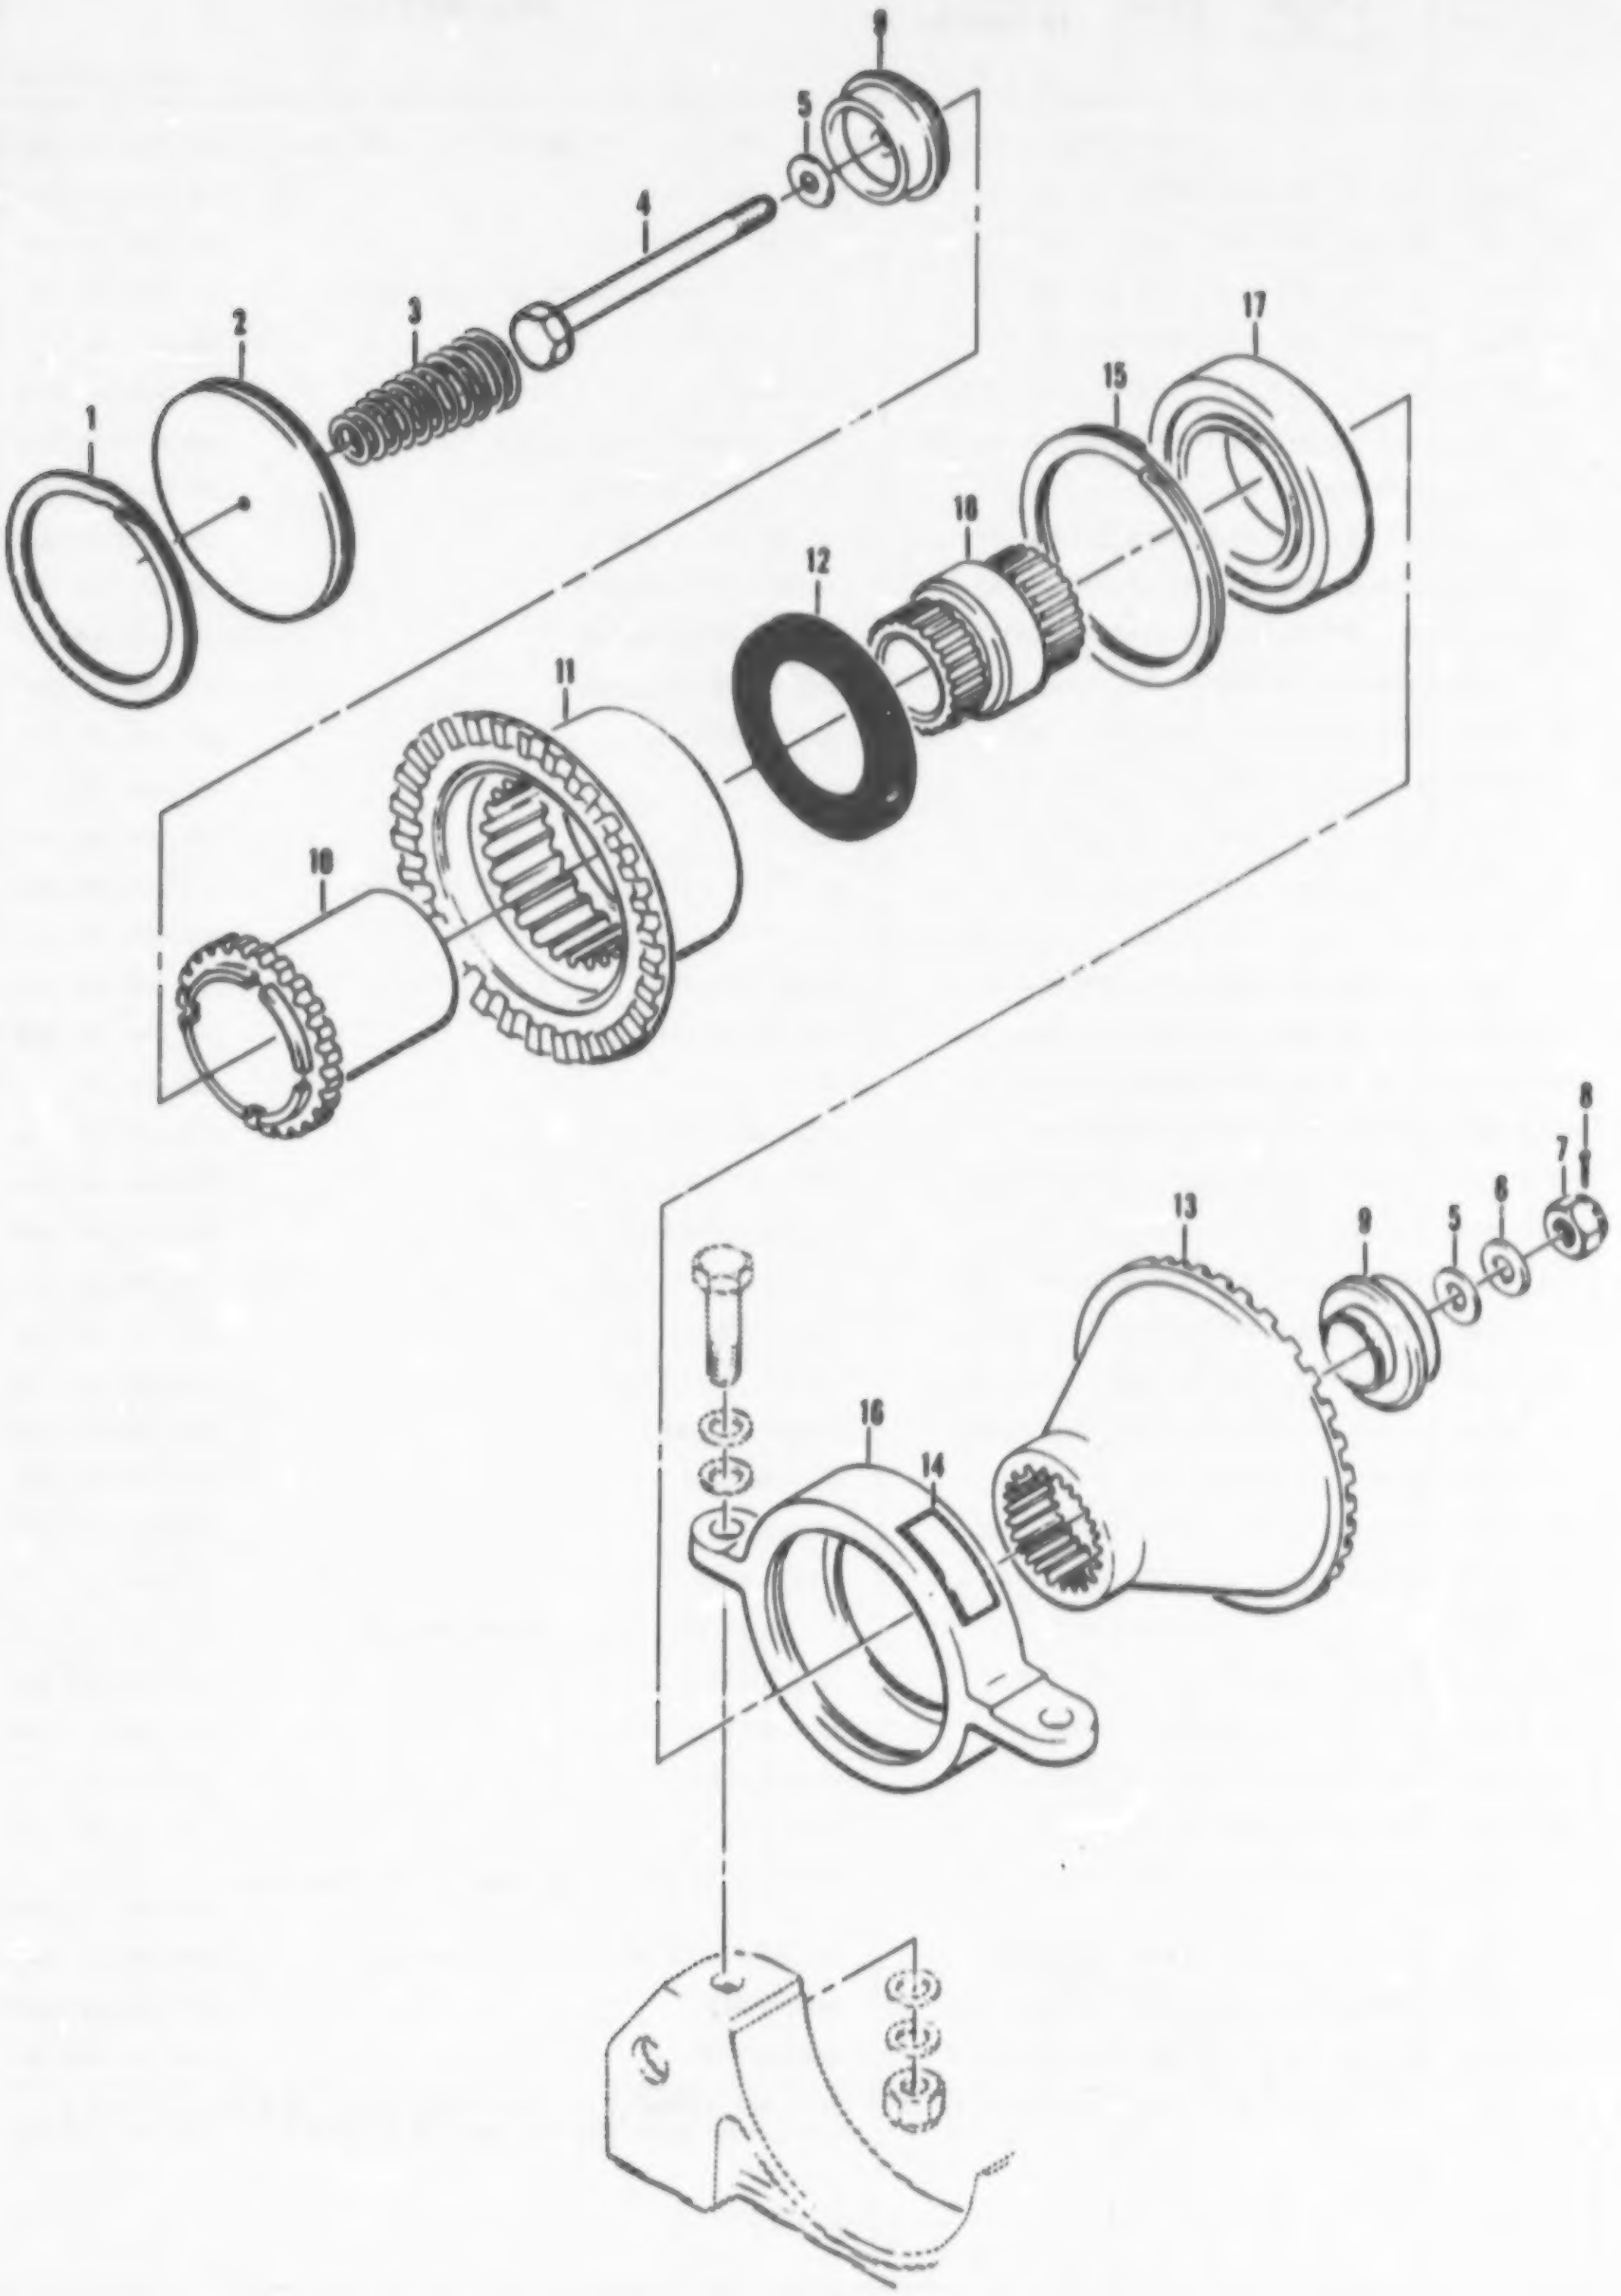
9
5
4
3
2
1
17
15
18
12
11
10
8
7
6
5
9
13
16
14

Figure 180. Hanger Assembly, Driveshaft

(1) ILLUSTRATION (a) FIG. NO.	(b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 06 DRIVE TRAIN			
180		PAOOO	1615-01-086-6366	97499	204-040-600-11	**HANGER ASSEMBLY, DRIVE SHAFT**	UHE,UHH,UHM,UHV,UHX	EA	1
180	1	PAOZZ	5365-00-619-0523	80756	RRT237C	RING,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
180	2	PAOZZ	1615-00-701-4144	97499	204-040-610-1	PLATE ASSEMBLY,TAIL	UHE,UHH,UHM,UHV,UHX	EA	1
180	3	PAOZZ	5360-00-701-6659	97499	204-040-608-1	SPRING,HELICAL,COMP	UHE,UHH,UHM,UHV,UHX	EA	1
180	4	PBOZZ	5306-00-151-1141	88044	AN4-30	BOLT,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	1
180	5	PAOZZ	5310-00-844-5081	80205	NAS1197-416	WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	2
180	6	PAOZZ	5310-00-167-0826	88044	AN960-416L	WASHER,FLAT	UHE,UHH,UHM,UHV,UHX	EA	1
180	7	PAOZZ	5310-00-167-1285	88044	AN310-4	NUT,PLAIN,CASTELLAT	UHE,UHH,UHM,UHV,UHX	EA	1
180	8	PAOZZ	5315-00-231-1856	96906	MS24665-155	PIN,COTTER	UHE,UHH,UHM,UHV,UHX	EA	1
180	9	PAOZZ	1615-00-446-9189	97499	204-040-615-5	PLATE,RETAINING TAI	UHE,UHH,UHM,UHV,UHX	EA	2
180	10	PAOFF	1615-00-791-6073	97499	204-040-603-7	COUPLING,MALE SPHER	UHE,UHH,UHM,UHV,UHX	EA	1
180	11	PAOFF	1615-00-701-4142	97499	204-040-604-5	COUPLING DRIVESHAFT	UHE,UHH,UHM,UHV,UHX	EA	1
180	12	PAOZZ	5330-00-826-0132	97499	204-040-611-1	SEAL,PLAIN	UHE,UHH,UHM,UHV,UHX	EA	1
180	13	PAOFF	1615-00-765-2417	97499	204-040-614-3	COUPLING,HANGER	UHE,UHH,UHM,UHV,UHX	EA	1
180	14	PAOZZ	9905-00-060-2034	97499	100-024-1	PLATE,IDENTIFICATIO	UHE,UHH,UHM,UHV,UHX	EA	1
180	15	PAOZZ	5365-00-768-2744	80756	RR244C	RING,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
180	16	PAOFF	1615-00-765-2416	97499	204-040-617-5	HANGER,DRIVESHAFT	UHE,UHH,UHM,UHV,UHX	EA	1
180	16	PAOFF		97499	204-040-617-101	HANGER,DRIVESHAFT	UHE,UHH,UHM,UHV,UHX	EA	1
180	17	PAFZZ	3110-01-030-4306	97499	204-040-623-5	BEARING,BALL,ANNULA -ALTERNATE-	UHE,UHH,UHM,UHV,UHX	EA	1
180	17	PAFZZ	3110-01-030-4306	21335	PAMB107NPPA2702	BEARING,BALL,ANNULA	UHE,UHH,UHM,UHV,UHX	EA	1
180	18	PAOFF	1615-00-765-2408	97499	204-040-602-5	SHAFT,SHOULDERED	UHE,UHH,UHM,UHV,UHX	EA	1

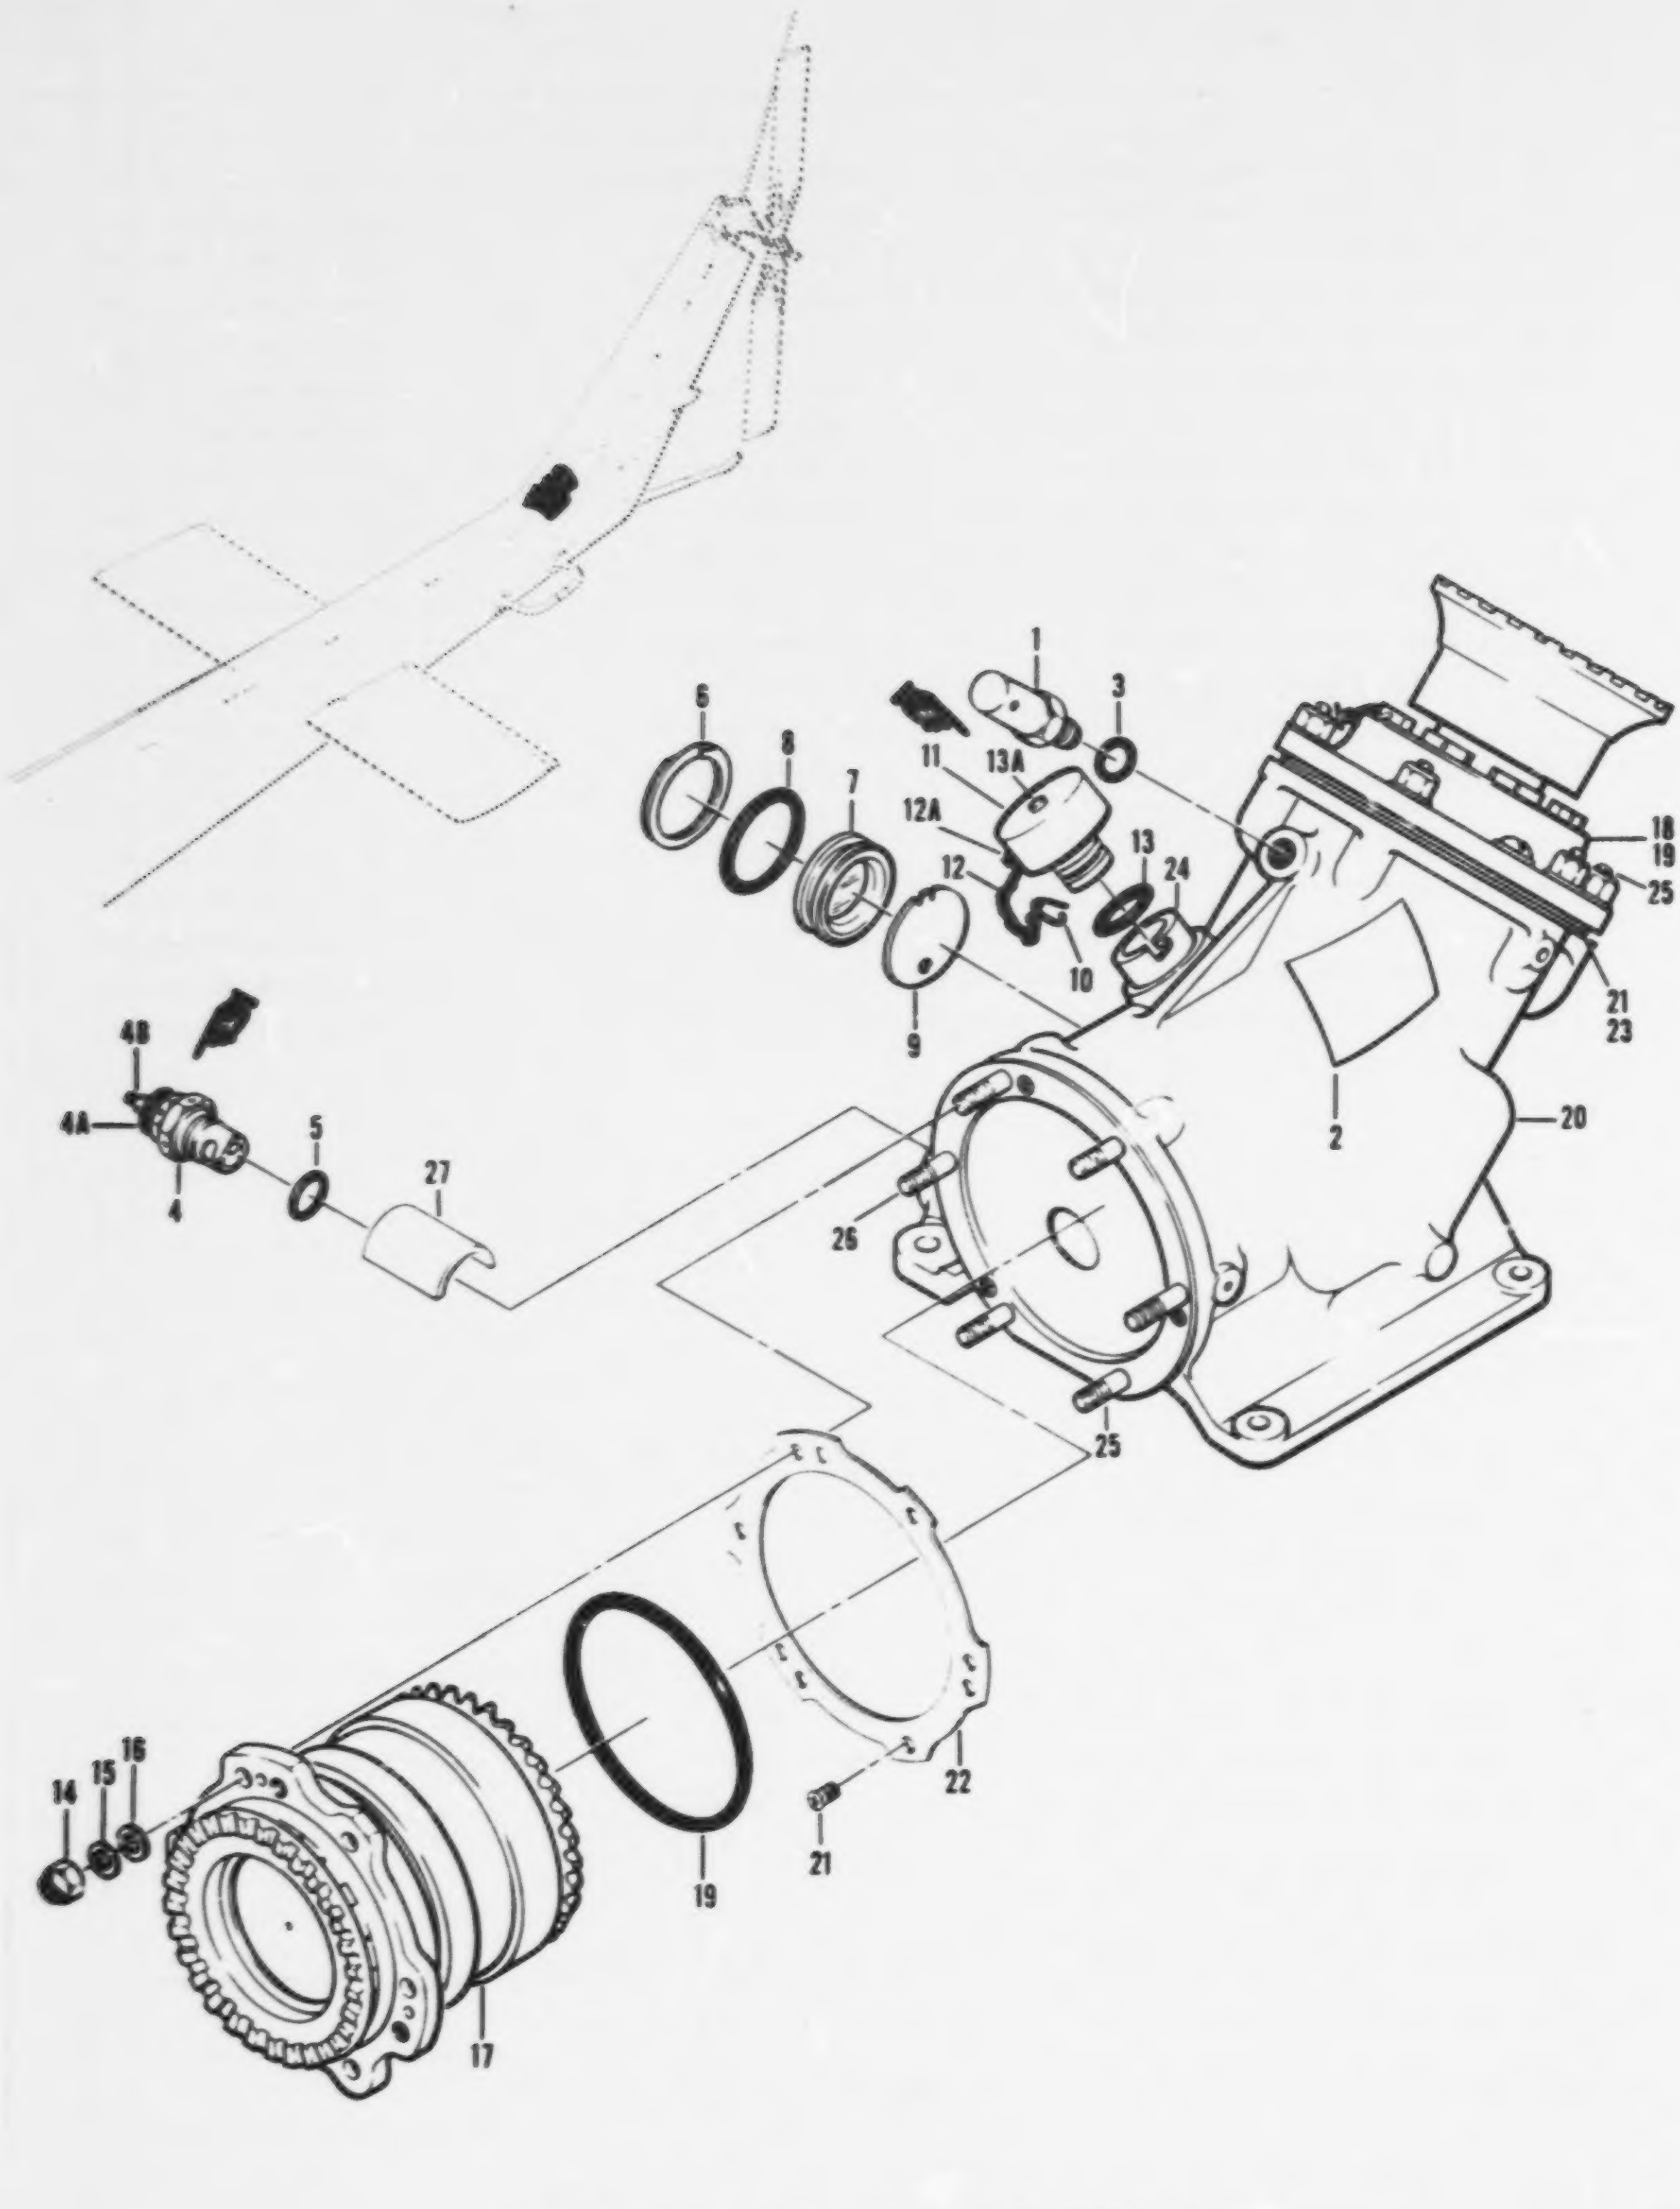
1
3
6
8
7
11
13A
12A
12
13
24
10
9
18
19
25
21
23
2
20
4B
4A
4
5
27
26
25
22
19
21
14
15
16
17

Figure 181. Gearbox Assembly, 42 Degree

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
181		PAODO	1615-00-918-2676	97499	204-040-003-37	GEAR BOX ASSEMBLY, 42 DEGREE. SEE FIG 178 & 179 FOR NHA	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	1	PAOZZ	1615-00-649-8149	97484	A814	.BREATHER	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	2	PADZZ	9905-00-532-2497	96906	MS27253-1	.PLATE,IDENTIFICATIO	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	3	PBOZZ	5330-00-543-3261	96906	MS35769-6	.GASKET	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	4	PAOOO	1615-00-918-1893	97484	B752G	.CHIP DETECTOR, MAGNETIC -ALTERNATE-	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	4	PAOOO	1615-00-918-1893	36540	VBC12	.CHIP DETECTOR,MAGNE MAGNETIC	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	4A	PCOZZ	5330-00-882-6874	96906	MS9241-011	..PACKING,PREFORMED U/O PN B752G	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
181	4A	PCOZZ	5330-00-882-6874	96906	MS9241-011	..PACKING,PREFORMED U/O PN VBC12	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	4B	PAOZZ	5310-00-275-1408	72962	22NTM50	..NUT,SELF-LOCKING,HE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
181	5	PAOZZ	5330-00-815-9489	96906	MS35769-11	..GASKET	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	6	PAOZZ	5365-00-598-0814	80756	RRT150C	.RING,RETAINING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	7	PAOZZ	6680-00-765-2855	97499	204-040-514-1	.GLASS,LIQUID SIGHT INDICATOR	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	8	PCOZZ	5330-00-059-7503	96906	MS9241-218	.PACKING,PREFORMED	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	9	PAOZZ	6680-00-580-0724	97499	204-040-508-1	.INDICATOR,SIGHT,LIQ	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	10	PBOZZ	5315-00-223-6112	88044	AN416-2	.PIN,RETAINING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	11	PAOOO	1615-00-690-7602	97499	204-040-502-11	.CAP ASSY	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	12	MOOZZ	4010-00-408-2329	80020	NAF1088-1A4	..CHAIN,WELDLESS	UHB,UHC,UHE,UHH,UHM,UHV,UHX	FT	1
181	12A	PAOZZ	5315-00-135-9769	97499	204-040-502-5	..PIN	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	13	PAOZZ	5330-00-690-9594	96906	MS29561-210	..PACKING,PREFORMED	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	13A	PAOZZ	5365-00-432-3584	96906	MS16624-5018-1	..RING,RETAINING	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	14	PAFZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
181	15	PAFZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
181	16	PAFZZ	5310-00-804-6801	80205	NAS1197-416L	.WASHER,FLAT	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
181	17	PADOO	1615-00-760-3314	97499	204-040-003-33	.QUILL ASSEMBLY,GEAR BOX 42 DEGREE-INPUT SEE FIG. 182 FOR BREAKDOWN	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	18	PADOO	1615-00-760-3313	97499	204-040-003-35	.QUILL ASSEMBLY,GEAR BOX 42 DEGREE OUTPUT SEE FIG. 182 FOR BREAKDOWN	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	19	PAFZZ	5330-00-726-4153	96906	MS29561-237	.PACKING,PREFORMED	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
181	20	PADOO	1615-00-735-6560	97499	204-040-513-1	.CASE ASSEMBLY,TAIL	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	21	PADZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
181	22	MDOZZ	1560-00-757-8733	97499	204-040-513-11	..PLATE,CASE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	23	MDOZZ	1560-00-757-8739	97499	204-040-513-13	..PLATE,CASE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	24	PADZZ	1615-00-432-2493	97499	204-040-506-3	..ADAPTER,FILLER CAP,	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	25	PAFZZ	5307-00-637-6438	88044	AN126024	..STUD,PLAIN -STANDARD U/O PN 204-040-513-1	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	12
181	25	PAFZZ	5307-00-637-5231	88044	AN126025	..STUD,PLAIN -0.003 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
181	25	PAFZZ	5307-00-637-5232	88044	AN126026	..STUD,PLAIN -0.006 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
181	25	PAFZZ	5307-00-637-5226	88044	AN126027	..STUD,PLAIN -0.009 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
181	25	PAFZZ	5307-00-559-0217	88044	AN126034	..STUD,PLAIN -0.012 IN. OVERSIZE	UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V

best copy available

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
181	26	XDFZZ		88044	AN154757	..STUD,STEPPED -0.003 IN. OVERSIZE U/O PN 204-040-513-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
181	26	XDFZZ		88044	AN154758	..STUD,STEPPED -0.006 IN. OVERSIZE U/O PN 204-040-513-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
181	26	XDFZZ		88044	AN154759	..STUD,STEPPED -0.009 IN. OVERSIZE U/O PN 204-040-513-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
181	26	XDFZZ		88044	AN154760	..STUD,STEPPED -0.012 IN. OVERSIZE U/O PN 204-040-513-1 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
181	27	PAOZZ	1560-00-765-6260	97499	204-001-752-1	..STRIP,CHAFING....................UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

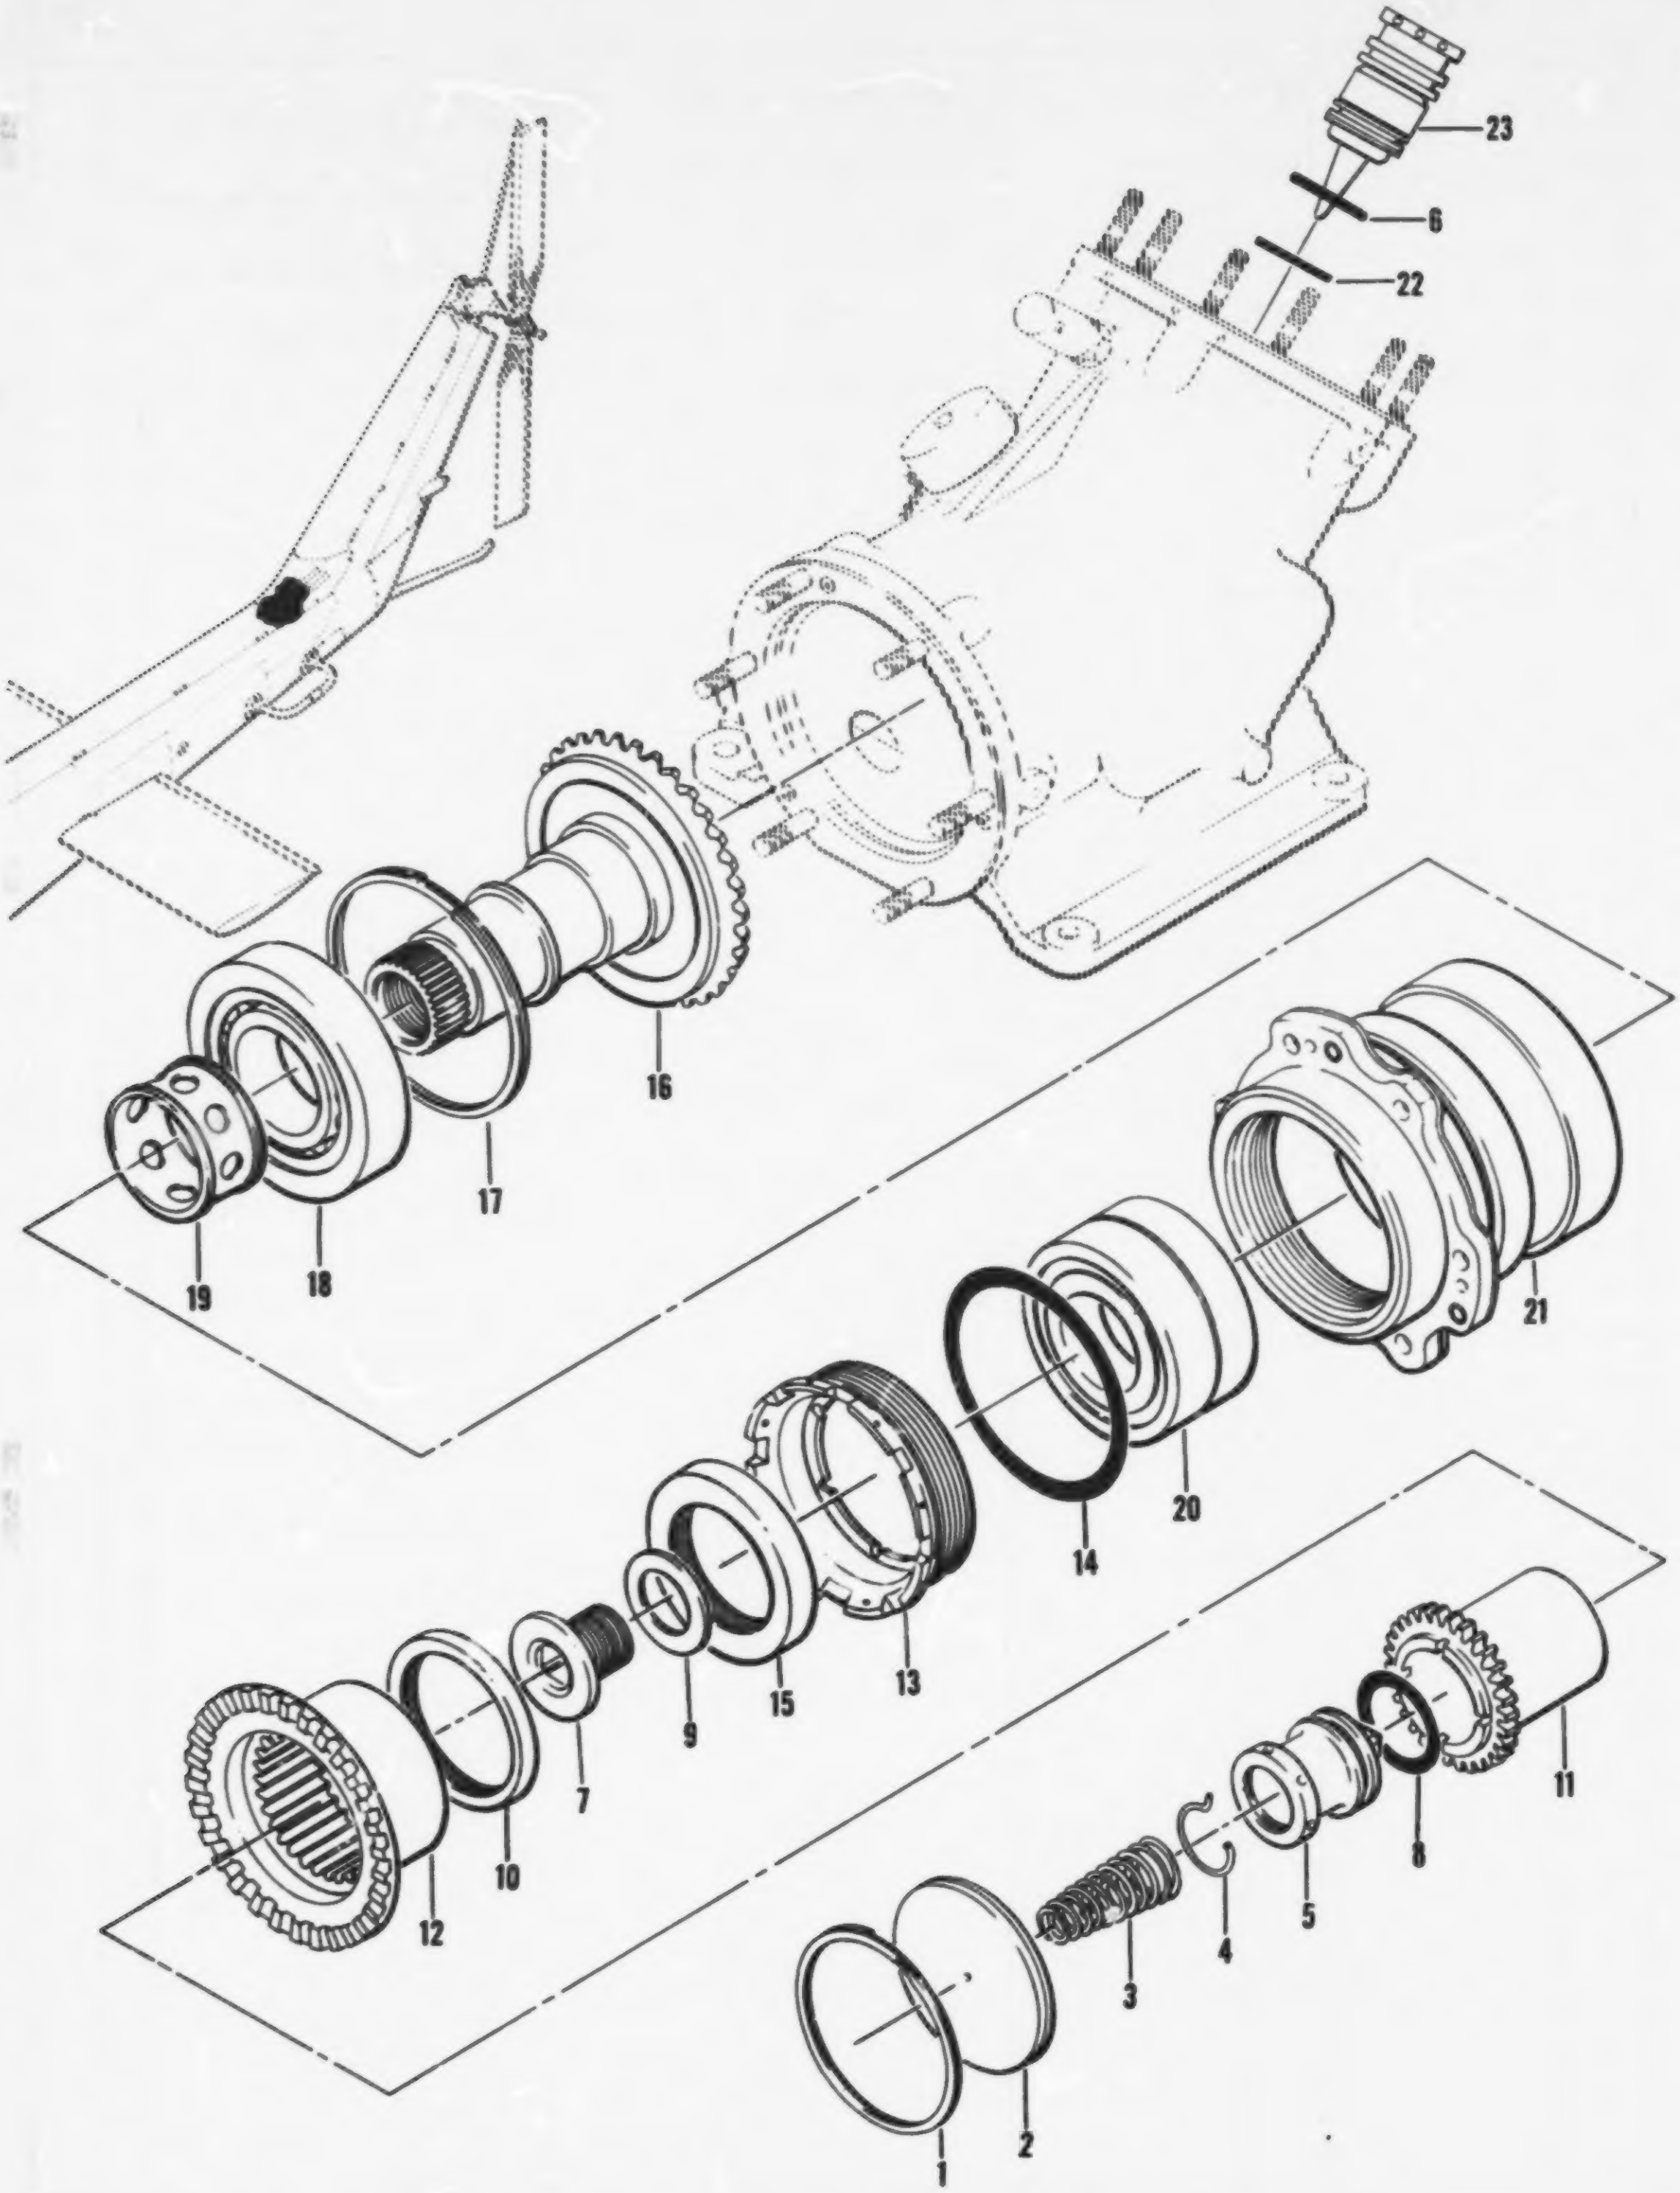
23
6
22
16
17
18
19
21
20
14
13
15
9
7
10
12
11
8
5
4
3
2
1

Figure 182. Quill Assembly, Gearbox, 42 Degree

SECTION II

(1) ILLUSTRATION (A) FIG. NO.	(B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
182		PADOO	1615-00-760-3314	97499	204-040-003-33	QUILL ASSEMBLY,GEAR BOX 42 DEGREE-INPUT. SEE FIG. 181 FOR NHA..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182		PADOO	1615-00-760-3313	97499	204-040-003-35	QUILL ASSEMBLY,GEAR BOX 42 DEGREE-OUTPUT. SEE FIG. 181 FOR NHA..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	1	PAOZZ	5365-00-619-0523	80756	RRT237C	.RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	2	PAOZZ	1615-00-701-4144	97499	204-040-610-1	.PLATE ASSEMBLY,TAIL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	3	PAOZZ	5360-00-701-5659	97499	204-040-608-1	.SPRING,HELICAL,COMP..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	4	PAOZZ	5365-00-770-9347	97499	204-040-609-1	.RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	5	PAOZZ	1615-00-701-4143	97499	204-040-607-1	.RETAINER,HELICAL COMPRESSION U/O PN 204-040-003-33 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	5	PAFZZ	1615-00-765-2406	97499	204-040-607-3	.RETAINER,HELICAL COMPRESSION U/O PN 204-040-003-35 • ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	6	PCFZZ	5330-00-807-9638	96906	MS29561-023	.PACKING,PREFORMED U/O PN 204-040-003-35 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	7	PAFZZ	1560-00-691-2113	97499	204-040-612-1	.BOLT,RETAINING,COUP..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	8	PAFZZ	5330-00-618-2513	96906	MS29561-216	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	9	PAFZZ	5365-00-691-2112	97499	204-040-606-1	.SPACER,RING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	10	PAFZZ	5330-00-625-0132	97499	204-040-611-1	.SEAL,PLAIN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	11	PAOOO	1615-00-791-6073	97499	204-040-603-7	.COUPLING,MAIL SPHERICAL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	12	PAOOO	1615-00-701-4142	97499	204-040-604-5	.COUPLING DRIVESHAFT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	13	PAFZZ	5365-00-772-6135	97499	204-040-185-3	.RING,EXTERNALLY THR..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	14	PAFZZ	5330-00-045-4559	96906	MS9241-233	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	15	PAFZZ	5330-00-753-4432	76680	451858H60	.SEAL,PLAIN ENCASED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	16	PADZZ	3040-00-797-8576	97499	204-040-500-9	.GEARSHAFT,BEVEL U/O PN 204-040-003-33 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	16	PADZZ	3040-00-797-8573	97499	204-040-500-10	.GEARSHAFT,BEVEL U/O PN 204-040-003-35 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	17	PADZZ	5365-00-805-5118	80756	RR314L	.RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	18	PADOO	3110-00-822-2130	97499	204-040-310-1	.BEARING,ROLLER, CYLINDRICAL.....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	19	PADZZ	3120-00-439-8473	97499	204-040-170-5	.BEARING,SLEEVE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	20	PADOO	3110-00-625-0114	97499	204-040-143-1	.BEARING,BALL,DUPLEX..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	21	PADZZ	1615-00-798-3643	97499	204-040-305-1	.SLEEVE ASSEMBLY,TAI..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	22	PADZZ	5365-00-714-5449	80756	RR118L	.RING,RETAINING U/O PN 204-040-003-35 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
182	23	PADZZ	1615-00-830-4286	97499	204-040-510-13	.OIL COLLECTOR ASSEM U/O PN 204-040-003-35 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

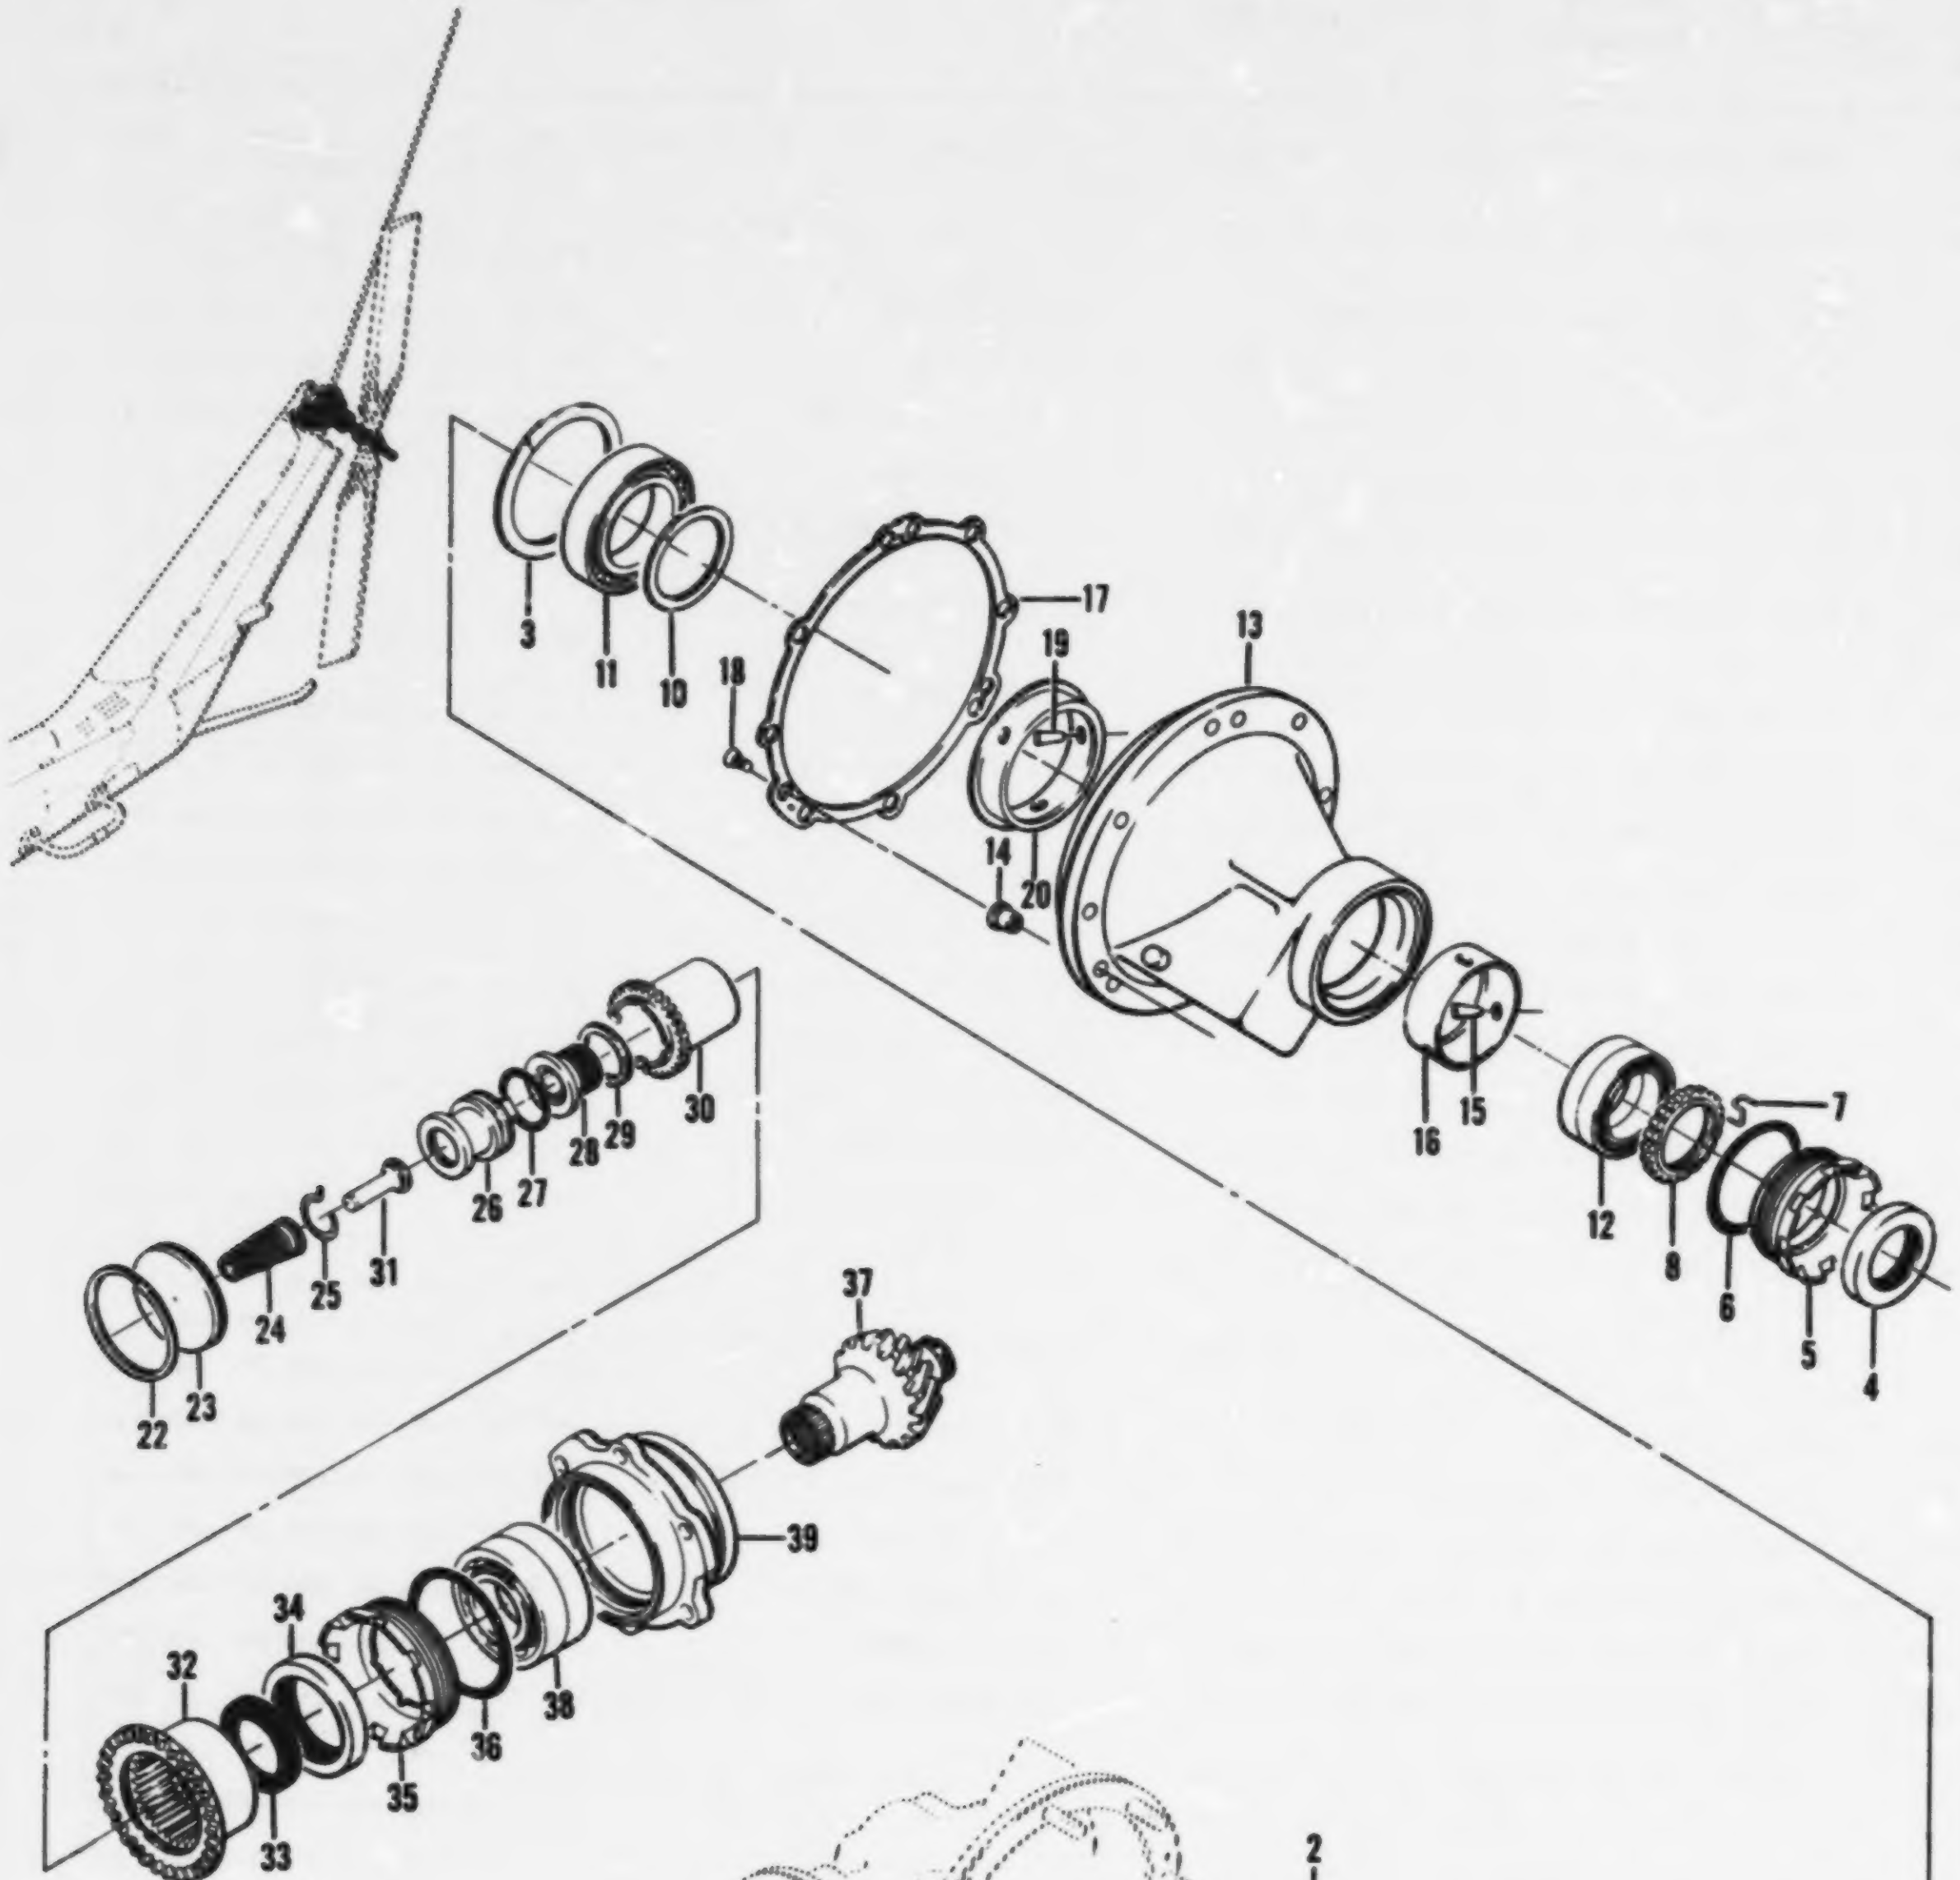
3
11
10
17
18
19
13
14
20
16
15
7
12
8
6
5
4
30
29
28
27
26
31
25
24
23
22
37
39
34
32
38
36
35
33
2
1
9

Figure 183. Quill Assembly, Tail

(1) ILLUSTRATION (A) FIG. NO.	(1) ILLUSTRATION (B) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION	(6) USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
183		PADDD	1615-00-974-7726	97499	204-040-012-9	QUILL ASSEMBLY,TAIL SEE FIG.184 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
183	1	PADZZ	5306-00-625-4609	97499	204-040-405-1	.BOLT,RETAINER	UHE,UHH,UHM,UHV,UHX	EA	1
183	2	PADZZ	3020-00-787-4267	97499	204-040-401-7	.GEAR,BEVEL	UHE,UHH,UHM,UHV,UHX	EA	1
183	3	PADZZ	5365-00-598-0991	80756	RR314	.RING,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
183	4	PAFZZ	5330-00-795-1315	76680	450171J60	.SEAL,PLAIN ENCASED	UHE,UHH,UHM,UHV,UHX	EA	1
183	5	PAFZZ	5365-00-981-3061	97499	204-040-427-3	.NUT,BEARING RETAINI	UHE,UHH,UHM,UHV,UHX	EA	1
183	6	PCFZZ	5330-00-882-8058	96906	MS9241-235	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
183	7	PADZZ	5340-00-649-8351	97499	204-040-413-1	.CLIP,90 DEGREE,GEAR	UHE,UHH,UHM,UHV,UHX	EA	1
183	8	PADZZ	5310-00-703-8272	97499	204-040-412-1	.NUT,90 DEGREE GEAR	UHE,UHH,UHM,UHV,UHX	EA	1
183	9	PADZZ	1615-00-787-4268	97499	204-040-402-9	.SHAFT,TAIL ROTOR	UHE,UHH,UHM,UHV,UHX	EA	1
183	10	PADZZ	5365-00-589-9981	80756	RS196	.RING,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
183	11	PAFDD	3110-00-690-8929	97499	204-040-407-3	.BEARING,ROLLER, CYLINDRICAL	UHE,UHH,UHM,UHV,UHX	EA	1
183	12	PADDD	3110-00-088-3399	97499	204-040-424-1	.BEARING,BALL,DUPLEX	UHE,UHH,UHM,UHV,UHX	EA	1
183	13	PADDD	1615-00-972-2736	97499	204-040-425-1	.SLEEVE ASSEMBLY,TAI	UHE,UHH,UHM,UHV,UHX	EA	1
183	14	PADZZ	5310-00-596-5477	83324	REA048	..NUT,PLAIN,SPLINE	UHE,UHH,UHM,UHV,UHX	EA	3
183	15	PBDZZ	5315-00-060-8457	96906	MS24692-74P	..PIN,TAPERED,PLAIN	UHE,UHH,UHM,UHV,UHX	EA	3
183	16	PADZZ	3130-00-990-0766	97499	204-040-426-1	..LINER,BEARING HOUSING	UHE,UHH,UHM,UHV,UHX	EA	1
183	17	MDDZZ		97499	204-040-425-5	..PLATE,SHIM	UHE,UHH,UHM,UHV,UHX	EA	1
183	18	PADZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE	UHE,UHH,UHM,UHV,UHX	EA	3
183	19	PBDZZ	5315-00-060-2826	96906	MS24692-98P	..PIN,TAPERED,PLAIN	UHE,UHH,UHM,UHV,UHX	EA	3
183	20	PADZZ	3130-00-858-8396	97499	204-040-416-1	..LINER,BEARING HOUSING	UHE,UHH,UHM,UHV,UHX	EA	1
183		PADDD	1615-00-760-3315	97499	204-040-012-11	QUILL ASSEMBLY,GEAR BOX 90 DEGREE. SEE FIG.184 FOR NHA	UHE,UHH,UHM,UHV,UHX	EA	1
183	22	PADZZ	5365-00-619-0523	80756	RRT237C	.RING,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
183	23	PADZZ	1615-00-701-4144	97499	204-040-610-1	.PLATE ASSEMBLY,TAIL	UHE,UHH,UHM,UHV,UHX	EA	1
183	24	PADZZ	5360-00-701-5659	97499	204-040-608-1	.SPRING,HELICAL,COMP	UHE,UHH,UHM,UHV,UHX	EA	1
183	25	PADZZ	5365-00-770-9347	97499	204-040-609-1	.RING,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
183	26	PAFZZ	1615-00-701-4143	97499	204-040-607-1	.RETAINER,HELICAL CO	UHE,UHH,UHM,UHV,UHX	EA	1
183	27	PAFZZ	5330-00-618-2513	96906	MS29561-216	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
183	28	PAFZZ	1560-00-691-2113	97499	204-040-612-1	.BOLT,RETAINING	UHE,UHH,UHM,UHV,UHX	EA	1
183	29	PAFZZ	5365-00-691-2112	97499	204-040-606-1	.SPACER,RING	UHE,UHH,UHM,UHV,UHX	EA	1
183	30	PADDD	1615-00-791-6073	97499	204-040-603-7	.COUPLING,MALE SPHERICAL	UHE,UHH,UHM,UHV,UHX	EA	1
183	31	PADZZ	5315-00-778-2215	97499	204-040-422-1	.PIN,SHOULDER,HEADED	UHE,UHH,UHM,UHV,UHX	EA	1
183	32	PADDD	1615-00-701-4142	97499	204-040-604-5	.COUPLING DRIVESHAFT	UHE,UHH,UHM,UHV,UHX	EA	1
183	33	PAFZZ	5330-00-625-0132	97499	204-040-611-1	.SEAL,PLAIN	UHE,UHH,UHM,UHV,UHX	EA	1
183	34	PAFZZ	5330-00-753-4432	76680	451858H60	.SEAL,PLAIN ENCASED	UHE,UHH,UHM,UHV,UHX	EA	1
183	35	PAFZZ	5365-00-772-6135	97499	204-040-185-3	.RING,EXTERNALLY THR	UHE,UHH,UHM,UHV,UHX	EA	1
183	36	PAFZZ	5330-00-045-4559	96906	MS9241-233	.PACKING,PREFORMED	UHE,UHH,UHM,UHV,UHX	EA	1
183	37	PADZZ	3040-00-787-4269	97499	204-040-400-9	GEAR SHAFT,BEVEL	UHE,UHH,UHM,UHV,UHX	EA	1
183	38	PADDD	3110-00-625-0114	97499	204-040-143-1	.BEARING,BALL,DUPLEX	,UHE,UHH,UHM,UHV,UHX	EA	1
183	39	PADZZ	1615-00-898-1687	97499	204-040-423-1	.SLEEVE ASSY.,GEAR	,UHE,UHH,UHM,UHV,UHX	EA	1

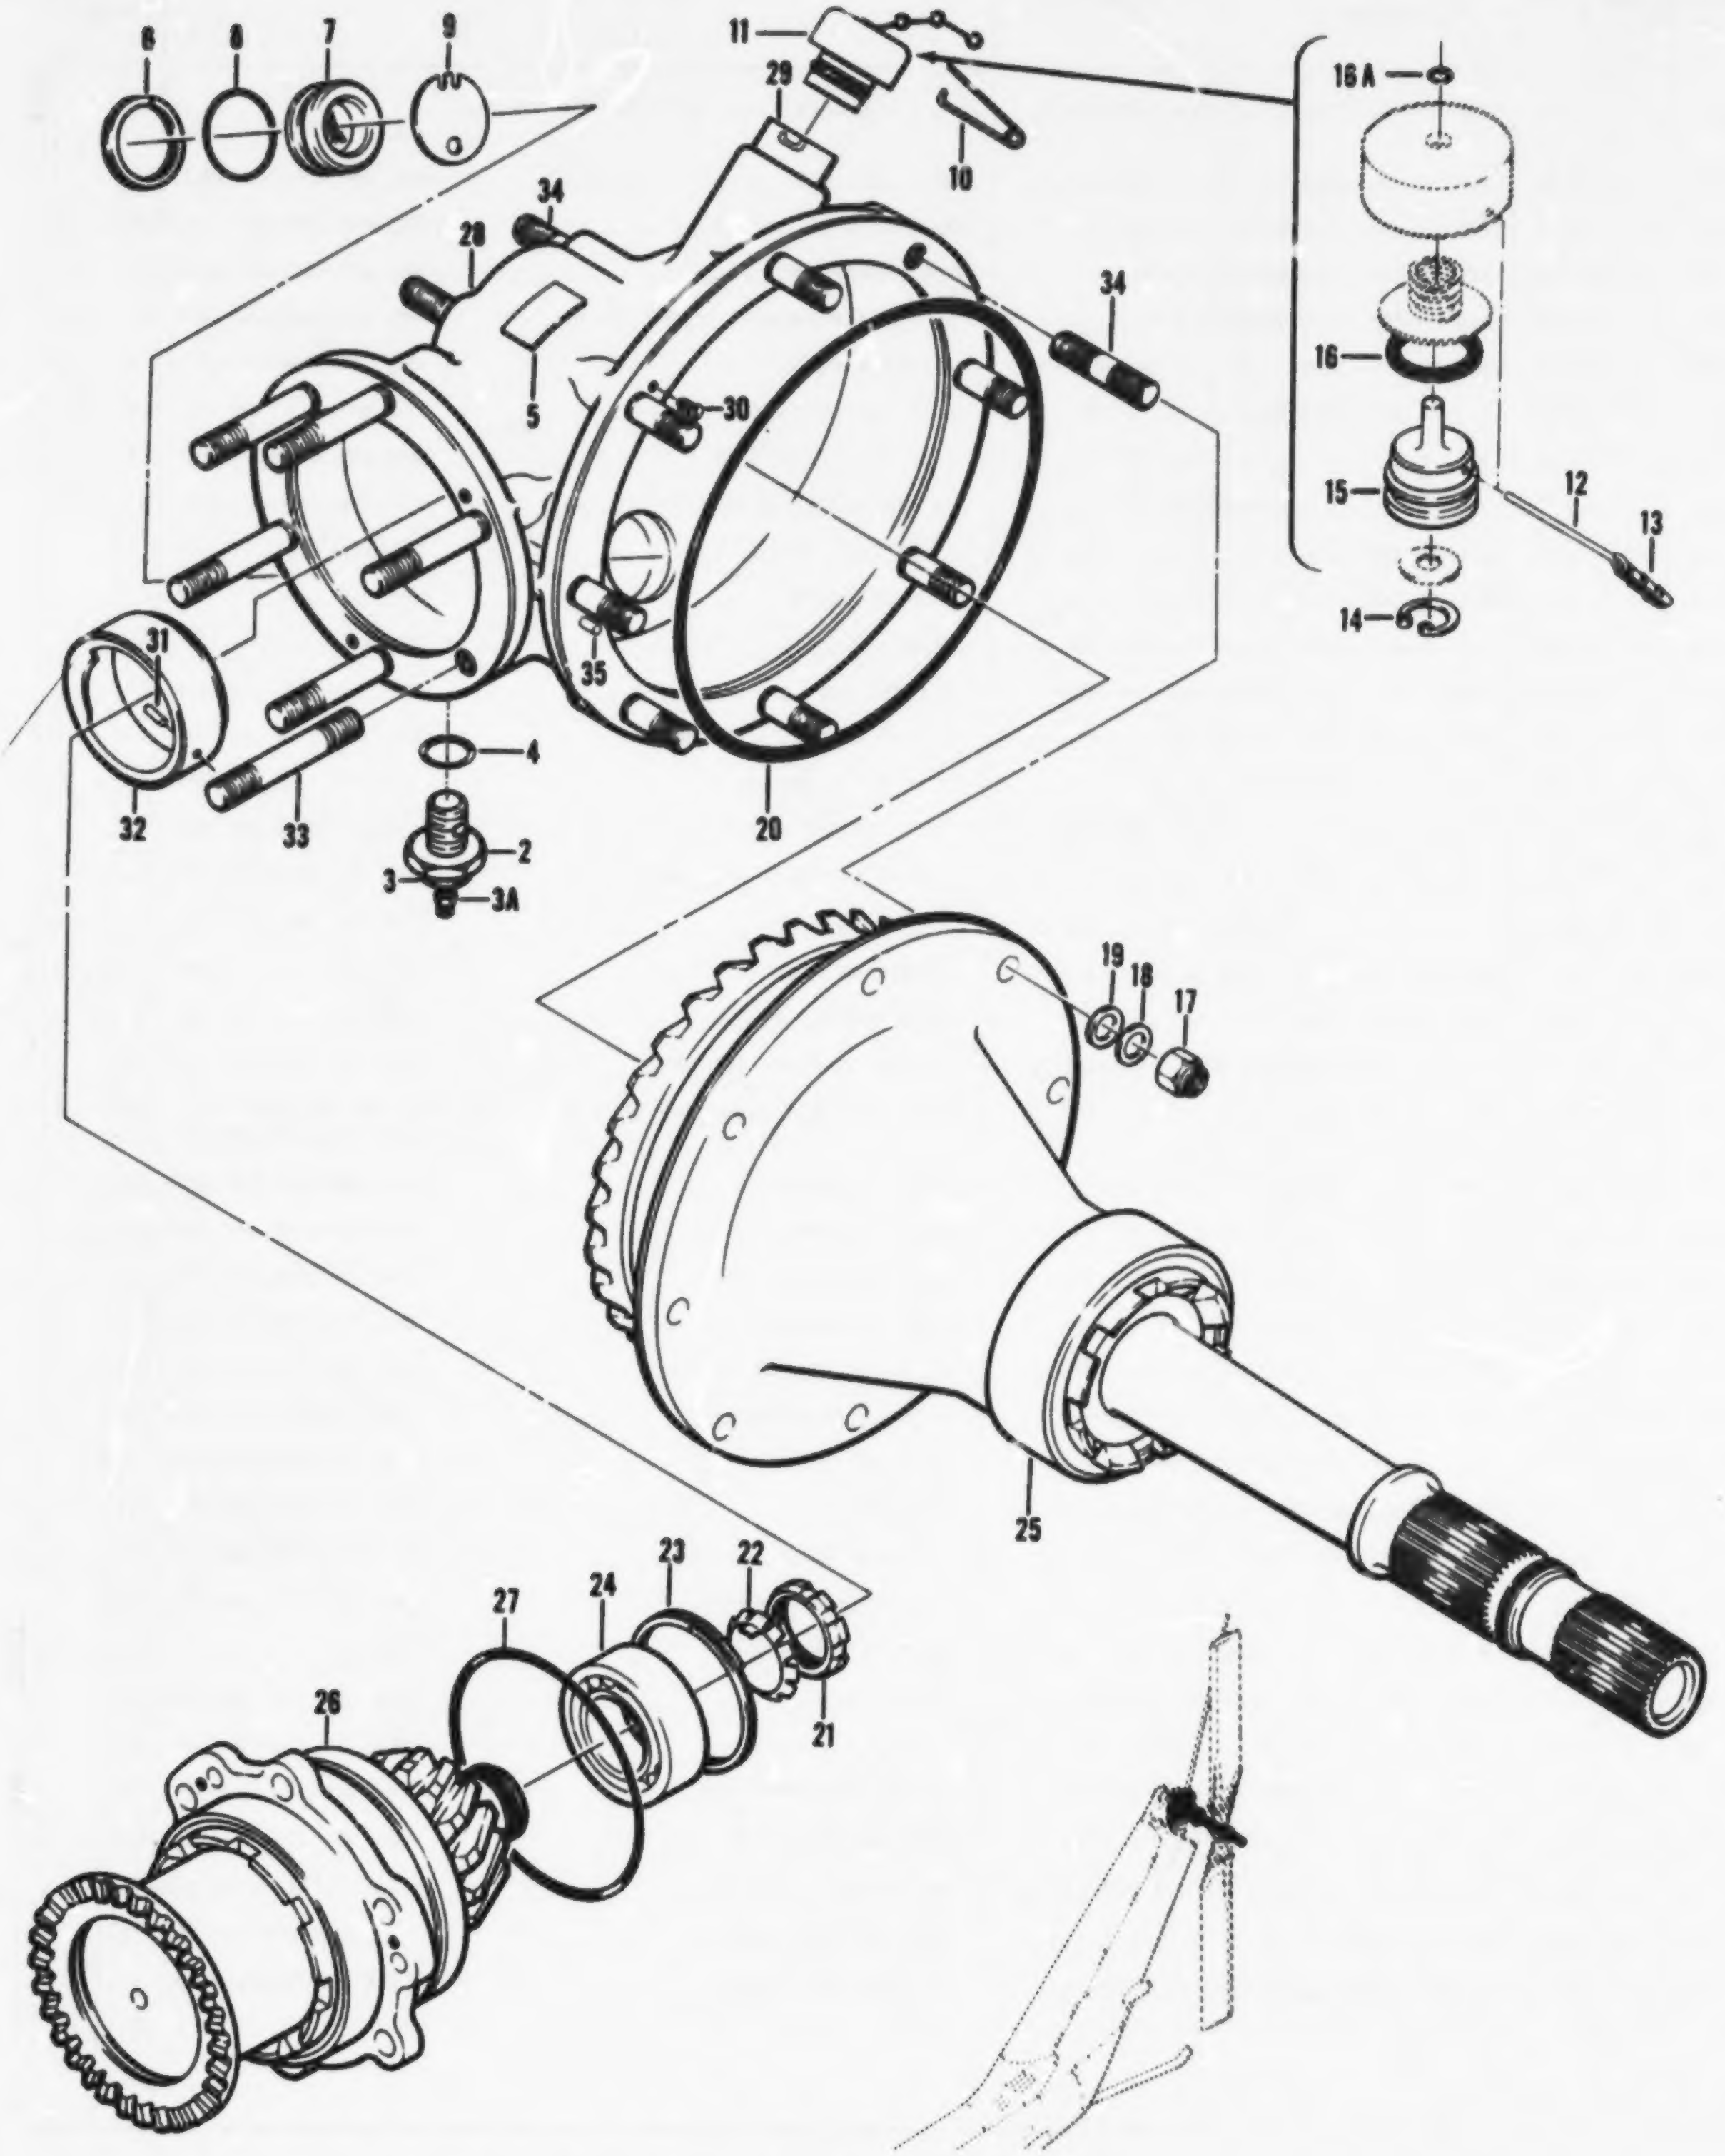
6
8
7
9
11
29
10
16 A
16
15
12
13
14
34
28
5
30
34
31
35
4
32
33
2
3
3A
20
19
18
17
25
27
24
23
22
21
26

Figure 184. Gearbox Assembly, 90 Degree

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
184		PAODD	1615-00-918-2677	97499	204-040-012-13	GEAR BOX ASSEMBLY,T 90 DEGREE.SEE FIG.178 & 179 FOR NHA. ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	2	PACOO	1615-00-918-1893	97484	B752G	.CHIP DETECTOR, MAGNETIC-ALTERNATE- ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	2	PAOOO	1615-00-918-1893	36540	VBC12	.CHIP DETECTOR,MAGNE MAGNETIC....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	3	PCOZZ	5330-00-882-6874	96906	MS9241-011	.PACKING,PREFORMED U/O B752G....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
184	3	PCOZZ	5330-00-882-6874	96906	MS9241-011	..PACKING,PREFORMED U/O PN VBC12 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	3A	PAOZZ	5130-00-275-1408	72962	2NTM50	.NUT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
184	3A	PAOZZ	5310-00-275-1408	72962	22NTM50	..NUT,SELF-LOCKING,HE U/O P/N VBC12 ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	3A	PAOZZ	5310-00-275-1408	72962	22NTM50	..NUT.SELF-LOCKING,HE U/O P/N B752G ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
184	4	PAOZZ	5330-00-815-9489	96906	MS35769-11	.GASKET..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	5	PAOZZ	9905-00-532-2497	96906	MS27253-1	.PLATE,IDENTIFICATIO..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	6	PAOZZ	5365-00-538-0814	80756	RRT150C	.RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	7	PAOZZ	6680-00-765-2855	97499	204-040-514-1	.GLASS,LIQUID SIGHT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	8	PCOZZ	5330-00-059-7503	96906	MS9241-218	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	9	PAOZZ	1615-00-975-7131	97499	204-040-508-9	.DISK,INDICATOR,OIL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	10	PBOZZ	5315-00-223-6112	88044	AN416-2	.PIN,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	11	PAOOO	1615-00-690-7280	97499	204-040-502-9	.CAP ASSEMBLY,TAIL..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	12	PAOZZ	5315-00-135-9769	97499	204-040-502-5	..PIN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	13	XDOZZ	4010-00-408-2329	80020	NAF1088-1A4	..CHAIN, WELDLESS..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	14	PAOZZ	5365-00-808-3957	96906	MS16625-1056	..RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	15	XAOZZ		97499	204-040-505-5	..PLUG..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	16	PCOZZ	5330-00-690-9594	96906	MS29561-210	..PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	16A	PAOZZ	5365-00-432-3584	96906	MS16624-5018-1	..RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	17	PAFZZ	5310-00-807-1475	96906	MS21042L4	.NUT,SELF-LOCKING,EX WASHER,HEXAGON ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
184	18	PAFZZ	5310-00-167-0835	88044	AN960-416L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
184	19	PAFZZ	5310-00-804-6801	80205	NAS1197-416L	.WASHER,FLAT..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	8
184	20	PAFZZ	5330-00-808-5796	96906	MS29561-259	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	21	PAFZZ	5310-00-515-7592	96906	MS172241	.NUT,PLAIN,ROUND..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	22	PAFZZ	5310-00-619-5446	96906	MS172206	.WASHER,KEY..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	23	PAFZZ	5365-00-550-5176	80756	RR204	.RING,RETAINING..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	24	PADDD	3110-00-690-8928	97499	204-040-406-1	.BEARING,ROLLER, CYLINDRICAL....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	25	PADDD	1615-00-974-7726	97499	204-040-012-9	.QUILL ASSEMBLY,TAIL SEE FIG 183 FOR BREAKDOWN ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	26	PADDD	1615-00-760-3315	97499	204-040-012-11	.QUILL ASSEMBLY,GEAR BOX. SEE FIG 183 FOR BREAKDOWN. ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	27	PCFZZ	5330-00-726-4153	96906	MS29561-237	.PACKING,PREFORMED..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	28	PADDD	1615-00-739-4574	97499	204-040-418-13	.CASE ASSEMBLY,GEAR BOX..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	29	PADZZ	1615-00-432-2493	97499	204-040-506-3	..ADAPTER,FILLER CAP,..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1
184	30	PADZZ	5305-00-957-7815	96906	MS24693S4	..SCREW,MACHINE..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
184	31	PADZZ	5315-00-062-4388	96906	MS24692-50P	..PIN,TAPERED,PLAIN..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	2
184	32	PADZZ	3130-00-797-6071	97499	204-040-417-1	..LINER,BEARING HOUSI..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

(1) ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG. NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
184	33	PAFZZ	5307-00-637-5217	88044	AN126420	..STUD,PLAIN -STANDARD..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	6
184	33	PAFZZ	5307-00-271-7060	88044	AN126421	..STUD,PLAIN -0.003 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
184	33	PAFZZ	5307-00-530-9125	88044	AN126422	..STUD,PLAIN -0.006 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
184	33	PAFZZ	5307-00-271-7062	88044	AN126423	..STUD,PLAIN -0.009 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
184	33	PAFZZ	5307-00-550-3631	88044	AN126424	..STUD,PLAIN -0.012 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
184	34	PAFZZ	5307-00-637-9970	88044	AN126018	..STUD,PLAIN -STANDARD..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	11
184	34	PAFZZ	5307-00-637-5233	88044	AN126019	..STUD,PLAIN -0.003 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
184	34	PAFZZ	5307-00-637-5212	88044	AN126020	..STUD,PLAIN -0.006 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
184	34	PAFZZ	5307-00-637-1642	88044	AN126021	..STUD,PLAIN -0.009 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
184	34	PAFZZ	5307-00-579-0458	88044	AN126022	..STUD,PLAIN -0.012 IN. OVERSIZE ....UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	V
184	35	PBDZZ	5315-00-241-2921	88044	AN122693	..PIN,STRAIGHT HEADLESS..........UHB,UHC,UHE,UHH,UHM,UHV,UHX	EA	1

Pages 808 and 809 deleted

By Order of the Secretary of the Army:

E. C. MEYER
General, United States Army
Chief of Staff

Official:

J. C. PENNINGTON
Major General, United States Army
The Adjutant General

DISTRIBUTION:
To be distributed in accordance with DA Form 12-31, Organizational Maintenance Requirements for UH-1B, UH-1C/M, UH-1D/H, and EH-1K aircraft.

☆ U.S. GOVERNMENT PRINTING OFFICE : 1990 O - 262-842 (25134)

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)
PFC John Doe
COA, 3d ENGINEER BN
FT. LEONARDWOOD MO 63108

DATE SENT

PUBLICATION NUMBER TM 55-1520-210-23P-1	PUBLICATION DATE 27 Feb 81	PUBLICATION TITLE Helicopter, Utility - Tactical Trans UH-1B/C/H/M & EH-1H (BELL)

BE EXACT. PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:
6	2-1 a			In line 6 of paragraph 2-1a the manual states the engine has 6 cylinders. The engine on my set only has 4 cylinders. Change the manual to show 4 cylinders.
81		4-3		Callout 16 on figure 4-3 is pointing at a bolt. In the key to fig. 4-3, item 16 is called a shim. Please correct one or the other.
125	line 20			I ordered a gasket, item 19 on figure B-16 by NSN 2910-00-762-3001. I got a gasket but it doesn't fit. Supply says I got what I ordered so the NSN is wrong. Please give me a good NSN.

SAMPLE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER JOHN DOE, PFC (268) 317-7111	SIGN HERE John Doe

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.
DRSTS-M Overprint 1, 1 Mar 80.

PS--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

REVERSE OF DA FORM 2028-2

TEAR ALONG PERF. LINE

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

____

____

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 55-1520-210-23P-1	27 Feb 81	Helicopter, Utility - Tactical Trans UH-1B/C/H/M & EH-1H (BELL)

BE EXACT. . PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER	SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

DRSTS-M Overprint 2, 1 Mar 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

REVERSE OF DA FORM 2028-2

TEAR ALONG PERFORATED LINE

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

____

____

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER TM 55-1520-210-23P-1	PUBLICATION DATE 27 Feb 81	PUBLICATION TITLE Helicopter, Utility - Tactical Trans UH-1B/C/H/M & EH-1H (BELL)

BE EXACT. . . PIN-POINT WHERE IT IS				IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:
PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

DRSTS-M Overprint 2, 1 Mar 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

REVERSE OF DA FORM 2028-2

TEAR ALONG PERFORATED LINE

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

____

____

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER TM 55-1520-210-23P-1	PUBLICATION DATE 27 Feb 81	PUBLICATION TITLE Helicopter, Utility - Tactical Trans UH-1B/C/H/M & EH-1H (BELL)

BE EXACT. . PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER	SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

DRSTS-M Overprint 2, 1 Mar 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

REVERSE OF DA FORM 2028-2

TEAR ALONG PERF[illegible]D LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

____

____

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 55-1520-210-23P-1	27 Feb 81	Helicopter, Utility - Tactical Trans UH-1B/C/H/M & EH-1H (BELL)

BE EXACT. . . PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

DRSTS-M Overprint 2, 1 Mar 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

REVERSE OF DA FORM 2028-2

TEAR ALONG PERFORATED LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

____

____

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 55-1520-210-23P-1	27 Feb 81	Helicopter, Utility - Tactical Trans UH-1B/C/H/M & EH-1H (BELL)

BE EXACT . . PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO	IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

DRSTS-M Overprint 2, 1 Mar 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

REVERSE OF DA FORM 2028-2

TEAR ALONG PE
ED LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commander
US Army Troop Support & Aviation Materiel Readiness Command
ATTN: DRSTS-MTT
4300 Goodfellow Boulevard
St. Louis, Missouri 63120